
42cm

29.7cm

DataTronix

Large Button Remote for AEP2 Set-Top Boxes and H26K Receivers User Manual

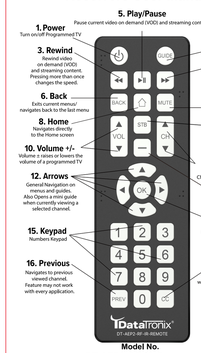

Model No.
DT-AEP2-RF-IR-Remote

Note: DT-AEP1-REMOTE remotes are not compatible with TCL Fire TVs. Using them may trigger unintended commands (e.g., volume buttons entering numbers). Use only the TCL Fire TV remote.

Step 1: Install Your Batteries

1. Remove the battery compartment cover located on the back of the remote control.
2. Insert two new AAA batteries, ensuring the polarity (+ and –) matches the diagram inside the compartment.
3. Replace the cover securely.

Note: If the remote does not respond after installation, try replacing the batteries or checking their orientation.

Battery Failure Indication: When the battery voltage is low and needs replacement, the red LED will flash three times.

Step 2: Program TV Instructions

1. Turn on your television.
2. Hold down MUTE + OK buttons on the remote until the POWER button LED remains lit red.
3. Type in the four-digit code from the attached list for the brand of TV use are trying to program, then press OK.

Note: When entering the four-digit code, the TV may turn itself off immediately after the fourth digit is entered, before you press OK. This means the code worked. You must still press OK for the remote to save the code.

4. Press the POWER button to turn TV off. If TV doesn't turn off, repeat STEPS 2 and 3 until you find a code that works.
5. Your remote is now programmed to control your TV. Write down or circle code on list for future reference.

Tip: If the TV turns off but the volume buttons don't work, try another code till all TV buttons work.

Step 3: Bluetooth Pairing

1. Hold Down GUIDE+REWIND then enter "75309" to open menu.
2. Select "Remote Control Setup" option then select "RF Remote Setup".
3. Press and hold FAST FORWARD+REWIND button until screen shows paired.
4. When asked if you want to setup the remote to control the TV, select "No"

NOTE: Do not use on-screen instructions for setting up remote to control TV. This is does not work with your Datatronix remote. Instead, go back to Step 2. Program TV Instructions.

Step 4: Factory Reset

1. Press and hold the HOME and 0 keys simultaneously for 4 seconds.
2. When the LED blinks five times, the remote control has been successfully reset to factory settings.

<1>

A MARK....1112 1143
ACCURIAN....1036
ACER....0746 0640
AD NOTAM....1672
ADL....0299
ADMIRAL....0204 0058 1072 1251 1333
ADVENT....1247 1388
ADVENTURA....1002
ADYSON....0219
AEG....0842 0759 0652 0643 0642 0572 0531
....0319 0286 0282 0263 0110 0109 0031
AFFINITY....1680
AG....0282
AGFAPHOTO....0579
AHB TVISIONS....0131
AKAI....0842 0638 0636 0548 0517 0287 0280 0279
....0275 0155 0124 0120 0106 0104 0103
....0096 0092 0074 0026 1116 1248 1404 1475 1323
....1387 1391 1615
AKITA....0085
AKURA..0624 0542 0541 0430 0429 0428 0174 0171
....0086 0074 0064
ALBA....0713 0307 0264 0202 0175 0172 0124 0074
....0069 0064 0060 0006
ALBATRON....1017
ALERON....1028
ALIEN....0264
ALLSTAR....0120 0074
ALTUS....0124
AMERICA ACTION....1043
AMPRO....1073
AMSTRAD....0286 0171 0110 0074 0025 1052
ANAM....0285 1043 1054 1056 1080 1112
ANDERSSON....0110
ANITECH....0277 0232 0219 0185 0120 0074
ANSONIC....0786 0732 0074
ANTECNO....0064
AOC....0568 0016 1116 1363 1112 1616
APEX....1572
APEX DIGITAL....1006 1724
AQUAVISION....1573 1574 1686
ARCELIK....0124 0086 0085
ARDEM....0124 0085
ARENA....0124 0006
ARGOS....0124
ARISTONA....0230 0109 0006
ASA....0234 0105 0102 0087
ASBERG....0232 0185
ASORA....0171
ASTAR....1477
ASTROSOUND....0074
ATLANTIC....0089
AUDIOSONIC....0269 0263 0232 0185 0171 0163
....0124 0110 0085 0074
AUDIOVOX....1076 1454 1388
AURORA....0219 0171 0170
AUTOVOX....0282 0163 0110
AVENTURA....1052
AVERA....1761
AVION....1441
AVTEX....0830
AWA....0074
AWATRON....0171
AXESS....1711
AXION....1039
AXXION....0726 0724 0698 0628 0546
BAIER....0751
BAIRD....0750 0733 0578 0524 0188 0014
BANG & OLUFSEN....0204
BASIC LINE....0277 0264 0170 0120 0074 0014
BAUR....0233 0217 0212 0211 0171 0131 0120
....0096 0092 0074 0040 0026
BEKO....0690 0510 0263 0255 0225 0195 0130 0124
....0110 0086 0085 0026
BELCOR....1116
BELL&HOWELL....1333 1072
BELSTAR....0110
BENQ....1600
BEST....0282
BESTAR....0086 0074
BLACK DIAMOND....0120 0074
BLACK PANTHER....0185
BLAUPUNKT....0528 0096 0092 0091 0006
BLUE SKY....0286 0282 0273 0264 0172 0124 0109
BLUESTAR....0074 0063
BLUSENS....0787 0654 0611

<2>

BOMANN....0282
BONDSTEC....0163
BRADFORD....1043
BRANDT....0270 0195 0193
BRIONVEGA....0204
BROCKWOOD....1116
BROKSONIC....0285
BRUNS....0204
BUSH....0836 0766 0725 0568 0501 0314 0303 0287
....0286 0283 0264 0232 0202 0124 0115 0110
....0074 0069 0063 0031
BYDESIGN....1031 1032
CAMPER....0085
CANDLE....1116 1002 1003 1363
CELEBRITY....1001
CELLO....0536 0434 0318 0315 0312 0311 0310 0301
CENTURION....1116
CENTURY....0204 0165
CETRONIC....1043
CGE....0260 0232 0165
CGM....0264 0086 0085 0074
CHANGHONG....0717 1247
CIE....0171 0170 0163 0074 0064 0025
CIELO....1714
CIIL....1732
CINERAL....0272
CINEX....0294 0031
CITIZEN....1116 1002 1003 1363 1043 1258 1143
....1043
CLARINOX....0258 0232
CLASSIC....1043
CLATRONIC...0742 0294 0286 0282 0260 0255 0232
....0185 0171 0165 0124 0110 0074 0064
CLP CLASSIC....1333
CMX....0770 0763 0591 0589
COBY....1640 1641 1671 1363
COLORTYME....1116
CONCERTO....1363
CONCIERGE....1073
CONDOR....0260 0255 0232 0229 0171 0109
CONIC....0219
CONRAC....0225
CONTEC....0277 0171 1043 1050 1051
CONTI....0263 0124
CONTINENTAL....0172
CONTINENTAL EDISON....0193 0172
CONTINU-US....1161 1746 1747
CORNEA....1116
CORONADO....1143
COSMOS....0074
CRAIG....1043 1054
CROSLEY....0232 0204 0165 1164
CROWN....0764 0286 0282 0274 0264 0263 0255
....0232 0185 0171 0124 0086 0085 0074 0063
....1043 1143
CS-ELECTRONICS....0163 0159 0064
CURTIS....0260 0074
CURTIS MATHES....1116 1258 1363 1143
CXC....1043
CYBERHOME....1015
DAEWOO....0720 0598 0540 0519 0431 0269 0170
....0120 0074 1363 1043 1076 1143
DANSAI....0219
DANTAX....0124 0074
DAYTEK....0194
DAYTRON....1363
DECCA....0189 0184 0128 0074 0069
....0066 0063
DELL....1320 1164 1363 1618
DELTON....0074
DENVER....0638 0625 0596 0527 0282 0171 0074
DESMET....0074
DGM....0543 0426
DIBOSS....0621
DIGIFUSION....0225
DIGINUM....0031
DIGITREX....0586
DIGIX....0187
DIMENSIA....1333
DISNEY....0062
DMTECH....0653 0529 0320 0308 0304 0286 0074
DOMUS....0074
DUAL....0286 0279 0233 0124 0113 0110 0006
DUKANE....1011
DUMONT....0234 0232 0204 0185 0110 0109 0105
....0102 0087 1116 1073

<3>

DURABRAND....0282 0074 1052
D-VISION....0074
DWIN....1257
DYNASTY....1043
DYNEX....1400
DYON....0628 0618 0610 0531
ECG....0751 0124 0110 0069
EDISON....0172
EDISON MINERVA....0172
EIKI....1187
ELBE....0273 0229 0209 0185 0120
....0074 0058
ELBIT....0110
ELCIT....0163
ELECTRIC....0109
ELECTRIC CO....0124
ELECTROBAND....1001
ELECTROGRAPH....1466
ELECTROHOME....1143 1024 1076
ELEKTA....0171 0159 0074
ELEKTRA....1072
ELEKTRONIKA....0274 0110 0086
ELEMENT....1363 1494 1526 1622 1690
ELEMIS....0294 0282 0074 0031
ELIN....0087 0074
ELITE....0467 0064
ELMAN....0185
ELTA....0171 0074
E-MAX....0194
EMERSON....0528 0204 0086 0074 1028 1048 1043
....1116 1363 1050 1051 1076 1143 1154 1052 1514
ENGEL....0818
ENVISION....1116
EPSON....1324 1590
ESA....1323
ESC....0074
EUROLINE....0286
EUROPHON....0185 0014
EUROSKY....0074
EVELUX....0110
EVERVUE....1755
EXPERT(I)....0089
EXQUISIT....0110
F&U....0555
FENNER....0171 0120 0074
FERGUSON....0593 0548 0544 0543 0507 0270
....0195 0162 0078 0014
FIDELIS....0074
FINLANDIA....0195 0189 0105 0104 0014
FINLUX....0290 0279 0276 0275 0234 0229 0225
....0189 0128 0120 0110 0107
....0105 0104 0103 0102 0087 0074 0069 0066 0031
FIRST-LINE....0294 0273 0264 0120 0074
FISHER....0233 0221 0086 0052 0014
....1007
FLINT....0273
FORCE....0286 0194 0110
FORMENTI....0229 0110 0109
FRABA....0110
FRONTECH....0220 0171 0163
FUJITSU....1246 1198
FUJITSU GENERAL....0554 0088
FUNAI....0629 0617 0286 0264 0113 1028 1043 1052
FUTURETECH....1043
GALAXIS....0260 0255 0185 0074
GALAXY....0255
GALERIA....0171
GATEWAY....1242 1268
GBC....0269 0232 0171
GE....1073 1116 1008 1009 1034 1056 1333 1363
GEC....0189
GELOSO....0171 0163 0064
GEM....1391
GENERAL....0171
GENERAL TECHNIC....0171
GERICOM....0300 0225 0187
GIBRALTER....1116 1073
GO VIDEO....1026
GOLDFUNK....0264 0074
GOLDHAND....0171
GOLDLINE....0273
GOLDSTAR....0288 0268 0263 0237 0219 0191 0171
....0163 0124 0110 0074 0038 1113 1116
....1102 1363 1112 1143
GOODING....0172
GOODMANS..0543 0528 0321 0316 0306 0305 0287

<4>

....0286 0285 0275 0270 0269 0268 0264 0225 0224
....0195 0194 0187 0176 0171 0170 0124 0120
....0115 0110 0109 0103 0074 0064 0063 0031 0008
GORENJE....0286 0274 0110 0086
GPM....0064
GPX....1674
GRADIENTE....0038
GRAETZ....0263 0172 0124 0074
GRAN PRIX....0791 0734 0696 0294 0031 0006
GRANADA....0270 0224 0208 0195 0189 0184 0167
....0128 0120 0109 0105 0104 0103
....0086 0085 0081 0078 0075 0054 0043 0029 0026
....0022 0014
GRANDIN....0273 0069
GREAT WALL....0074
GRUNDIG....0690 0552 0527 0510 0287 0232 0210
....0202 0194 0187 0172 0155 0130 0124 0110 0096
....0094 0092 0091 0073 0069 0063 0031
GRUNKEL....0785 0732 0543
GRUNPY....1028 1043
H&E....0282
HAIER....0733 0501 0313 1363 1501 1623 1749
HALL MARK....1363
HANNSPREE....0706 0602 1349 1381
HANSEATIC...0308 0277 0269 0229 0225 0220 0191
....0171 0124 0120 0110 0092 0085 0060
HARLEY DAVIDSON....1028
HARVARD....1043
HARWA....0076
HB....0282
HB INGELEN....0172
HCM....0277 0171 0074
HELLO KITTY....1076
HIMITSU....1043
HINARI....0224 0171 0074 0064
HISAWA....0273
HISENSE.... 0451 0828 0813 0798 0597 0551
....0302 1419 1442 1619 1630 1363 1752 0752
HITSU....0273
HL....0195 0120 0074
HOHER....0124 0110 0069
HOSHA....0264
HP....1421
HUMAX....0576 1518
HYPER....0171 0163
HYPSON....0264 0263 0162 0124 0118 0113 0074
....0069 0063
HYUNDAI....0317 0235 0180 0155 0152
ICE....0171 0074 0064
IDEAL....0264
I-JOY....0543
ILO....1472 1399
IMPERIAL....0260 0255 0232 0229 0165
....0110 0109
INFINITY....1164
INFOCUS....1333 1230 1547 1548 1470 1532 1595
....1733 1726
INGELEN....0279 0273
INGERSOLL....0171
INITIAL....1282
INNO HIT....0237 0189 0074 0006
INSIGNIA....1350 1400 1052 1164 1403 1454 1457
....1604 1617
INTE....0233
INTERCORD....0233
INTERFUNK....0265 0255 0165
....0120 0074 0067
INTERVISION....0191 0163 0086 0085 0074
IPOSTAR....0171
IRRADIO....0264 0237 0163 0074
IRT....0439 0437 0283
ISKRA....0085
ITL....0171
ITS....0171 0064
ITT....0576 0268 0124 0110
....0031 0014
JANEIL....1002
JAY-TECH....0761
JBL....1164
JCB....1001

<5>

JCPENNEY....1024 1116 1008 1009 1030 1065 1258
....1143 1333 1363
JETPOINT....0268
JMB....0063
JOCEL....0283 0282 0074 0069
JTC....0850 0807 0761
JVC....0604 0588 0575 0278 0169 0120 1038 1034
....1001 1210 1581 1639 1668
KAISUI....0280 0273 0074 0006
KAMACROWN....0064
KAPSCH....0089
KARCHER....0289 0282 0274 0273 0185 0124 0110
....0109 0074 0031
KATHREIN....0187
KAWASHO....1116 1001
KEC....1043
KENDO....0273 0270 0229 0124 0074
....0060 0006
KENMARK....0831 0803
KENNEX....0264 0074
KENWOOD....1116 1001
KEYMAT....0235 0207
KIOTO....0439 0436 0283 0228
KITON....0264 0113
KLEGG....1466
KLOSS....1002
KMC....1143
KNEISSEL....0273 0264 0229 0074 0058
KNOLL SYSTEMS....1230 1659
KOERTING....0274 0204 0086
KOGAN....0579
KONKA....1457
KREISEN....1530
KTV....1043 1116 1143 1154
KUBA ELECTRONIC....0233
KURAZAI....1072
LAZER....0074
LECSON....0110
LENCO....0689 0682 0628 0593 0579 0546 0170 0110
LENOIR....0264 0074
LENUSS....0837
LEVEL....0612 0425
LG....0501 0592 0511 0288 0286 0283 0263 0181
....0124 0110 0069 0038 0015 0014 0013 1363 1113
....1116 1102 1112 1143 1569 1284 1648 1741
LIESENKOETTER....0074
LIFETEC....0264 0171 0170 0118 0113 0074
....0064 0006
LITEON....1268
LODGENET....1072
LOEWE....060 0204 0142 0131 1164 1738
LOGIK....0800 0799 0680 0630 0606 0587 0531 0264
....0187 0070 1072
LUMA....0229 0074
LUMATRON....0229 0074
LUXMAN....1363
LUXOR....0279 0276 0275 0237 0232 0186
....0128 0120 0110 0105 0104 0103
....0074 0066 0014
LXI....1166 1007 1138 1052 1251 1333 1164
M ELECTRONIC....0276 0120 0105 0104 0103
M.D.C....0074
MACROLUX....0069
MAGNADYNE....0204 0185 0163 0161 0074
MAGNAFON....0185
MAGNASONIC....0074
MAGNAVOX....0120 1164 1116 1003 1363 1333
....1226 1390 1467 1431 1594
MAGNUM....0294 0263 0124 0074 0031
MAJESTIC....1333 1072
MANHATTAN....0264 0074
MANTA....0821
MARANTZ....0074 1116 1164 1281
MARSHAL....0064
MASCOM....0279 0074 0031
MASTERS....0074
MATSUSHITA....1080
MATSUI....0587 0202 0196 0172 0171 0124
0110 0096 0074 0070 0069 0063 0062 0060 0025 0014 1164
MATSUSHITA....1080
MAXELL....0074
MAXENT....1242
MAXIM....0031
MEDION....0779 0771 0745 0726 0722 0699 0683 0570
...0560 0287 0283 0279 0264 0225 0194 0187 0124 0120
....0113 0110 0074 0031

<6>

MEGAS....0273
MEGASAT....0726
MEGATRON....1116 1011
MEMOREX....1007 1072 1363
MEMORY....0286
METEOR....0185
METZ...0794 0793 0736 0265 0264 0254 0219 0096 0092
....0074
MGA....1116 1363 1024 1028
MICROMAXX....0282 0264 0124 0113 0074
MIDLAND....1333 1073
MIKOMI....0516 0286
MINERVA....0232 0172 0086 0092
MINUTZ....1008
MIRAI....0582
MISAKAI....1052
MITSAI....0110
MITSUBISHI....0224 0204 0120 0096 0077 0076 0075
....0074 0071 1109 1024 1028 1363 1348 1450 1658
MIVAR....0781 0259 0232 0233 0209
NMC2....0001
MONIVISION....1017
MONTGOMERY WARD....1333 1072
MORAVA....0152 0131 0109
MOSAIC....0264 0074
MOTOROLA....1081
MT LOGIC....0773 071 0543 0124
MTC....0131 0068 1116 1363 1258
MULTITEC....0264 0074
MULTITECH....0232 0185 0171 0085 0074
....0031 1043
MURPHY....0536 0232
MURYUANA....0120
NAD....1138
NAKIMURA....0170
NEC....1272 1197 1116 1024 1056 1019 1262 1236 1281
....1575 1717 1758
NECKERMANN....0274 0255 0233 0217 0212 0211 0204
....0169 0124 0120 0118 0096 0092
.... 0081 0074 0060 0059 0043 0026
NEI....0074 0064
NET TV....1242
NEUFUNK....0124 0109
NEX....0316
NEXIUS....0282
NEXUS....1620 1454
NIKE....0074
NIKEI....1043
NIKKAI....0219
NIKKEI....0264 0074
NIKKO....0074 1116
NIKO....1527
NISSAN....0268
NOBLIKO....0232 0185
NOKIA....0653 0645 0527 0279 0276 0275
....0120 0106 0105 0104 0103 0102 0074 0014
NORCENT....1390
NORDMENDE....0651 0518 0282 0270 0261 0195 0193
....0178 0124 0074 0069
NORM N....0074
NORTEK....0264 0074
NOVA....0087
NOVATRONIC....0074
NUVISION....1351 1567
OCEANIC....0276 0104 0103 0014
ODYS..0727 0697 0565 0647 0642 0628 0610 0543 0531
....0528 0525 0519
OKANO....0255 0074
OLEVIA....1432 1363 1333
ONKING....1043
ONWA....0280 0074 0064 1043
OPERA....0124
OPTOMA....1265 1249
OPTONICA....1019 1251
ORAVA....0074
ORBITER....0086
ORION....0760 0662 0515 0507 0236 0219 0205 0202
....0196 0194 0187 0185 0162 0124 0120 0118 0074
....0070 0064 0069 0063 0062 0060 0059 0025
ORION (H)....0228 0110 0074 0062
ORMOND....0074
OSAK....0074
OTAKE....0196 0060 0059
OTF....0282 0204 0074
OTTO-VERSAND..0277 0270 0269 0233 0230 0217 0212
....0211 0205 0202 0195 0193 0185 0171 0167 0163

<7>

....0152 0131 0124 0120 0118 0110 0096
....0092 0081 0074 0069 0063 0060 0059 0040 0026
OVP....0074
PACIFIC....0236 0124 0109 0063
PALLADIUM....0276 0260 0255 0229 0171 0165
....0124 0118 0113 0031 0006
PANASONIC....0595 0513 0851 0740 0639 0254 0167
....1080 1034 1065 1164 1208 1552 1524 1607 1664
PEAQ....0668
PEERLESS-AV....1723 1763
PHILCO....0260 0255 0232 0204 0165 0074
....1116 1003 1164 1363 1024 1056
PHILIPS....0230 0811 0810 0570 0802 0120 0110 0109
....0092 0069 0067 0021 0019 0014 0009 0008 1164 1038
....1116 1003 1363 1206 1431 1333 1161 1594 1727
PHOCUS....0225 0130 0124 0110
PHOENIX....0110
PILOT....1116
PIONEER....0193 0074 1234 1116 1393 1272 1520
....1660
PIONIER....0074
PLANAR....1728 1742
PLAYSONIC....0124 0074
POLAROID...0404 0402 0401 0314 1388 1323 1328 1353
....354 1355 1356 1494 1387 1391 1505 1506 1508 1526
PORTLAND....1363 1143
POWERPOINT....0172
PRANDONI....0069 0066
PREMIER....0069
PRIMA....0219
PRIME....0697 0074
PRIMUS....0120
PRINCETON....1004
PRISM....1034
PRO 2....0031
PROFEX....0232 0171
PROFILO....0294 0074 0031
PROFITRONIC....0185 0074
PROLINE....0803 0286 0285 0270 0269 0229 0205 0189
....0128 0120 0109
PROSCAN....1333 1722
PROSONIC....0637 0636 0625
PROTECH....0264 0219 0074
PROTON....1363 1112 1143 1528
PROTRON....1392 1398 1498 1499 1500
PROVIEW....1494
PROVISION....0282 0120 0109 0066
PROX....1572
PULSAR....1116 1073
PYE....0120 0109
PYLE HOME....1661 1662
QMEDIA....0728 0676 0579 0528
QUADRO....0286 0113 0110
QUASAR....1034 1056
QUELLE....0261 0257 0255 0237 0234 0232 0229 0221
....0219 0217 0212 0211 0205 0204 0195 0185 0171
....0169 0167 0165 0163 0142 0131
....0120 0118 0110 0105 0102 0096 0092 0088 0087
....0086 0074 0071 0060 0059 0043 0025 0026 0040
RADIO SHACK....1019 1363 1143 1043
RADIOLA....0120 0074 0067
RADIOMARELLI....0163 0074
RADIONETTE....0181
RADIOTONE....0294 0171 0085 0074
RANK....0232
RCA.... 1333 1065 1116 1363 1024 1056 1161 1588 1713
....1751
REALISTIC....1007 1019 1043
RECCO....0283
RECOR....0074
REDSTAR....0282
REFLEX....0264 0113
REFLEXION....0596 0543
REOC....0124
REVOLUTION HD....1466
REVOX....0131
REX....0163 0089 0088
RFT....0204 0110 0085 0064
RM 2000....0264 0074
ROADSTAR....0286 0280 0264 0263 0124 0120
....0110 0063 0069
ROBOTRON....0204
ROSITA....0171
ROWA....0283 0074
ROYAL....0277
ROYAL LUX....0282

<8>

RUNCO....1073 1395 1416 1072 1697
SABA....0270 0195 0193 0074
SAGEM....0273 0206
SAISHO....0205 0070 0060 0069 0025
SAIVOD....0786
SAKIO....0171
SALORA....0751 0730 0698 0579 0543 0535 0279 0276
....0275 0237 0128 0120 0110 0105
....0104 0103 0074 0066 0014
SAMBERS....0232 0185
SAMPO....1116 1363 1242
SAMSUNG..0505 0601 0506 0284 0268 0257 0237 0220
....0171 0086 0074 0026 0008 1258 1050 1363 1143
....1333 1228 1229 1655
SAMSUX....1116
SANKYO....0074
SANSEI....1076
SANSUI....0264 0074 1400 1615 1454 1762
SANY....0193
SANYO....0286 0221 0189 0110 0087 0086 0074
....0052 0014 1007 1166 1187 1657 1750
SCEPTRE....1276 1699
SCHAUB LORENZ.....0537 0531 0277 0275 0264 0171
....0124 0074
SCHNEIDER.....0702 0621 0324 0282 0269 0264 0233
....0163 0152 0124 0120 0110 0088 0074 0069
....0064 0063
SCHNEIDER (F)....0120 0067
SCOTCH....1116
SCOTT.....0638 0593 0548 1028 1043 1048 1143 1363
....1497
SEARS.....1030 1363 1007 1028 1143 1333 1166 1138
SEELVER....0069
SEG.....0756 0645 0579 0560 0559 0543 0517 0286
....0269 0264 0232 0219 0185 0171 0165 0115
....0113 0110 0064
SEIKI....1690
SEITECH....0282
SELECO....0229 0226 0195 0120
....0110 0109 0089 0088 1205 1011
SELECT....0264
SENCOR....0110
SENTRA....0064 0026
SERINO....0273
SET....0074
SEURA....1704
SHARP....0714 0556 0513 0568 0528 0507 0432 0224
0171 0081 0073 1251 1019 1028 1363 1143 1684 1692
....1735
SHENG CHIA....1081
SHERWOOD....1349
SHINTOM....0074
SHINTOSHI....0074
SHIVAKI....0264 0074
SHOGUN....1116
SIAREM....0204 0185
SIEMENS....0554 0294 0219 0096 0092 0074 0221
SIERA....0069
SIGNATURE....1072
SILO....1001
SILVA SCHNEIDER.....0597 0294 0286 0282 0110 0031
SILVER....0277 0224 0171 0074 0064
SILVERCREST....0779
SIM2....0226 1205
SIMPSON....1003
SINGER....0204 0185 0163 0120 0074 0069
SINUDYNE....0282 0212 0204 0196 0185 0162 0120
....0118 0074 0069 0063 0062 0025
SKY....0207 0194 0187
SKYVUE....1648
SLX....0264
SMARAGD....0172
SONIX....0194
SONOKO....0074
SONTEC....0074
SONY....0211 0217 0212 0071 1001 1651
SOUNDCOLOR....0264 0074
SOUNDESIGN....1028 1363 1003 1043
SOVA....1041
SOXO....0543
SOYO....1528
SPECTRA....0170
SPECTRICON....1112
SPECTRONIQ....1499 1500
SQUAREVIEW....1052
SSS....1363 1043

<9>

STANDARD....0074
STARLITE....0264 0171 0074 1043
STARLUX....0171
STARS....0120
STERN....0229 0089 0088
STRONG....0286 0115 0110
SUNBRITE....1633 1634 1635 1386
SUNGOO....0672
SUNKAI....0273
SUNSTAR....0171 0074
SUNSTECH....0546
SUPERIOR....0286
SUPERSCAN....1052 1081
SUPERTECH....0171 0074
SUPRA....1116
SUPRATECH....0670 0619
SUPRE MACY....1002
SUPREMA....0273
SUPREME....1001
SVA....1328
SWISSTEC....0704 0603 0574 0309 0207 0194 0187
SYLVANIA....1116 1003 1052 1164 1333 1514 1593
SYMPHONIC....1052
SYNTAX OLEVIA....1432 1363 1333
TADISTAR....0074
TANDBERG....0254
TANDY....1251
TASHIKO....0224
TATUNG....0286 0282 0189 0184 0128 0118
....0070 0069 0066 0063 1056
TAURAS....0751 0282
TCL....1705 1749
TCM....0006
TD DESIGN....0131
TEAC....0584
TEC....0264 0171 0170 0165 0074
TECHLINE....0264 0185 0113 0110
TECHNICA....0286 0282 0074
TECHNICS....1034 1080
TECHNIKA....0715 0584
TECHNISAT....0694 0571 0118 0110
TECHNOL ACE....1028
TECHVIEW....1045
TECHWOOD....0115 0110 1363
TECNIMAGEN....0120 0069
TECNISON....0171 0074
TECSONIC....0074
TEKNIKA....1002 1003 1363 1024 1028 1043 1072 1258
....1143
TEKON....0268 0171
TELEFUNKEN....0638 0530 0517 0270 0261 0225 0195
....0193 1615
TELEOPTA....0171
TELERENT....0233 0131 1072
TELESTAR....0294 0282 0227 0074 0031
TELETECH....0264 0171 0165 0074
TELETON....0159 0089 0088
TELEVIEW....0031
TELRA....0294 0074 0031
TENSON....0171
TENSAI....0264 0191 0171 0120 0110 0064
TESLA....0282 0273 0264 0263 0229 0204 0131
....0124 0110 0109 0074 0069 0006
TEVION....0771 0560 0531 0294 0287 0264 0225 0124
....0074 0006
THOMSON (TCL)..0668 0564 0562 0561 0270 0261 0195
....0193 0152
THOMSON IR2000....0006 0001
THOMSON REC 80....0011 0010 0008
THORN....0270 0232 0224 0212 0211
....0195 0189 0188 0170 0169 0167
.... 0128 0120 0110 0107 0106 0105
....0102 0096 0087 0078 0075 0071 0067 0052 0043
....0022 0026 0014
THORN-FERGUSON....0195 0188
TILEVISION....1663
TMK....1363
TNCI....1073
TOBO....0171
TOKYO....0268
TOPLINE....0264 0074
TOPVISION....0085
TOSHIBA....0520 0729 0513 0531 0769 0284 0268 0232
...0208 0203 0202 0124 0092 0074 0063 0043 0026 1138
.... 1030 1007 1258 1325 1230 1703
TOSUMI....0124

<10>

TOTEVISION....1143
TOWADA....0185
TRANS-CONTINENTS....0069
TRILUX....0292 0264 0120
TRISTAR....0064
TRIUMPH....0234 0219 0025
TVE....0074
TWF....0320
UHER....0233 0185 0131 0089
ULTRAVOX....0204 0185 0163 0074
UMC....0801 0715 0704 0606 0603 0584 0579 0528
UNIMOR....0086 0085
UNITED....0610 0596 0527 0286 0282 0263 0170 0124
....0074 0063
UNIVERSAL....1008 1009
UNIVERSUM....0286 0279 0276 0275 0274 0270 0264
....0260 0237 0234 0229 0227 0219 0171
....0113 0110 0109 0105 0104 0103 0102 0096 0087
....0086 0074 0025
UNIVOX....0204
UPSTAR....1708
VENTURER....1721
VESTEL....0513 0798 0836 0303 0286 0264 0115
....0113 0110
VESTL....0433
VICTOR....1038
VIDEOCON....0658 0651 0424
VIDEOSAT....0165
VIDEOSEVE....0194 0187
VIDEOTON....0193 0074
VIDIKRON....1174 1164 1188
VIDTECH....1363
VIEWPIA....0730 0641
VIEWSON....0450 0449 0447 0445 0432
VIEWSONIC....1242 1389 1720
VIKING....1002
VIORE....1472 1592 1258
VISCO....1526
VISION....0074
VISIONMAGIC....0187
VITO....1363
VIZIO....1386 1387 1624 1625 1675
VOG....0069
VOXSON....0204
W BOX TECHNOLOGIES....1731
WALKER....0286
WALTHAM....0171
WARDS....1363 1008 1009 1019 1028 1072 1143 1164
....1034
WATSON....0264 0194 0171 0149 0113 0074 0064 0006
WATT RADIO....0185
WEGAVOX....0282 0264 0074
WELLTECH....0124
WELTBLICK....0110
WESTINGHOUSE..1076 1276 1435 1001 1280 1690 1695
WHARFEDALE....0524 0313
WHITE WESTINGHOUSE....0260 0110
WIEWPIA....0427
WILSON....0569 0074
WINSON....0124
WORTEN....0273 0229 0120 0110
XENIUS....0076
XIRON....0836 0531 0303
YAMAHA....1116 1363
YAMO....0064
YOKO....0274 0171 0170 0163 0074 0064
YORK....1363
YUPITERU....1043
ZANELA....0224
ZENITH....1363 1073 1072
ZONDA....1112

<11>

FCC Caution:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

DataTronix

800.688.9282
nace.tv | sales@nace.tv

<12>