

Owner's Manual

Repair and Parts Department

Monday to Friday 8:30AM-5:30PM

Central Time

Repair: (800) 726-4556

Parts: (800) 776-4556

Fax: (972) 578-7059

E-mail: help@nikkoamerica.com

ATTENTION PARENTS

It is recommended that this toy and all accessories be periodically examined for potential hazards and that any potentially hazardous parts be repaired or replaced.

NIKKO
AMERICA, INC.
PRINTED IN CHINA

How to take the transmitter

- Please read carefully before starting to operate.
- Warning: use under the direct supervision of an adult.
- Keep the display box and the manual for future reference.
- Actual product may vary from illustration of this manual.




While holding the transmitter, hold the transmitter cover. Then hold the projections at both sides of the transmitter cover and remove it.

How to install transmitter antenna

- Place the transmitter antenna into the antenna holder and screw it in clockwise.
- Do not extend the antenna extended.
- If the antenna is not screwed in securely, the vehicle may not move at your control. Screw the antenna securely.

BATTERY INSTALLATION

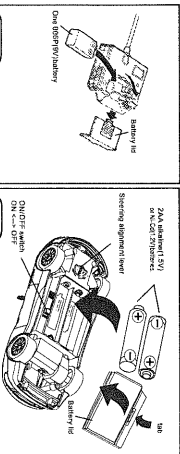

To remove the battery lid, press the point marked "OPEN" and pull the lid up. The lid can be opened easily by using the lid next to the support.

Open the battery lid. Push the battery lid support with your finger as shown, and pull up the lid. The lid can be opened easily by using the lid next to the support.

3 MAJOR CAUSES OF VEHICLE MALFUNCTION - INCORRECT BATTERY INSTALLATION - INTERFERENCE

- Check to see that the battery is installed in the correct position.
- 3 MAJOR CAUSES OF VEHICLE MALFUNCTION - INCORRECT BATTERY INSTALLATION - INTERFERENCE
- Do not use old and new batteries.
- Install batteries accurately in the battery compartment.
- Do not mix alkaline (standardization zinc) or rechargeable (nickel-cadmium) batteries.
- Install batteries making sure that the (+) and (-) poles of the batteries are positioned accurately.
- Actual combined use of charged Ni-Cd batteries and discharged Ni-Cd batteries.
- Remove your vehicle on-off switch is turned OFF when installing battery.
- Remove all the batteries from the vehicle and the transmitter after playing.
- Never try to charge non-rechargeable batteries.
- Never short-circuit the terminals.

HOW TO PLAY

1. Turn ON the vehicle.
2. Check OFF the transmitter.
3. Check OFF the vehicle after operating.
4. Remove all the batteries both from the vehicle and the transmitter.

Please follow the above sequence of operation.



ANTI-POWERLOSS TRANSMITTER

To prevent unnecessary power loss, the transmitter power is automatically turned ON when the speed control push button is going to the neutral position, the transmitter power is turned OFF. When the battery is returned to the neutral position, the transmitter power is turned OFF. When the transmitter power is turned OFF, the vehicle can be jammed by other transmitter radio waves and start to move abnormally.

- You can control the vehicle at a longer distance by holding the transmitter higher with the antenna straight up.
- When the vehicle slows down or starts moving erratically, replace all the vehicle's batteries with fresh ones.

OPERATING SAFETY RULES

Select a SAFE place to operate your vehicle. Do not drive in the street. Avoid driving on SAND or through puddles of WATER. These hazards can impair performance. Check the surface smoothness of your runways. Do not leave vehicle or Transmitter near sources of HEAT or under DIRECT SUNLIGHT for long periods of time.

Actual leaving vehicle is HARMFUL to INTERIOR MECHANISM. DO NOT try to take apart or remodel any of the parts.

Cleaning and maintenance:
The toy vehicle needs periodic maintenance and cleaning. Keep out of reach of small children under 36 months old as there is danger of getting hurt. DO NOT operate your vehicle on high-pile carpets. It can be dangerous since the carpet fiber may cause a start and cause a motor overheating.

THE RBRC® Steel on the nickel-cadmium battery pack.
Indicates a warning that the RBRC® Steel on the nickel-cadmium battery pack is an industry standard. RBRC® Steel is a trademark of the RBRC® Steel on the nickel-cadmium battery pack. The RBRC® Steel on the nickel-cadmium battery pack is a trademark of the RBRC® Steel on the nickel-cadmium battery pack.

THE FCC WANTS YOU KNOW
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received including interference that may cause undesired operation.

THE FCC WANTS YOU KNOW
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received including interference that may cause undesired operation.

CAUTION WHEN USING BATTERIES
● Do not use old and new batteries.
● Install batteries accurately in the battery compartment.
● Do not mix alkaline (standardization zinc) or rechargeable (nickel-cadmium) batteries.
● Install batteries making sure that the (+) and (-) poles of the batteries are positioned accurately.
● Actual combined use of charged Ni-Cd batteries and discharged Ni-Cd batteries.
● Remove your vehicle on-off switch is turned OFF when installing battery.
● Remove all the batteries from the vehicle and the transmitter after playing.
● Never try to charge non-rechargeable batteries.
● Never short-circuit the terminals.

Voiture radio commandée à échelle 1/32 À partir de 6 ans

Manuel de l'utilisateur

Département Réparation et pièces

Lundi au vendredi, de 8h30 à 17h30,

heure centrale

Réparations: (800) 726-4556

Pièces: (800) 776-4556

Fax: (972) 578-7059

E-mail: help@nikkoamerica.com

PARENTS ATTENTION

Il est recommandé de vérifier périodiquement la voiture et ses accessoires, et de réparer ou remplacer les pièces potentiellement dangereuses.

Comment prendre l'émetteur?
● L'émetteur est équipé d'un bouton de démarrage. Appuyez sur ce bouton pour allumer l'émetteur.
● L'émission de l'émetteur est contrôlée par un bouton de direction. Appuyez sur ce bouton pour diriger la voiture.

MISE EN PLACE DES PILES
● Ouvrez le couvercle des piles.
● Insérez les piles dans le compartiment des piles.
● Fermez le couvercle des piles.

Entretien et maintenance:
Ce jouet exige un entretien et une maintenance périodiques. Gardez le jouet hors de portée des enfants de moins de 36 mois; ils pourraient être blessés. N'opérez PAS le véhicule sur un tapis à piles longues. Cela peut être dangereux parce que les piles du tapis peuvent s'enrouler autour d'un axe et provoquer la surchauffe du moteur.


Les piles sont-elles correctement installées?
● Vérifiez que les piles sont correctement installées.
● Ne mélangez pas de piles neuves et anciennes.
● Ne mélangez pas de piles rechargeables et non rechargeables.
● Ne mélangez pas de piles alcalines et de piles au cadmium.
● Ne mélangez pas de piles rechargeables et de piles au cadmium.
● Ne mélangez pas de piles rechargeables et de piles au cadmium.

Précautions à prendre avec les piles
● Ne mélangez pas de piles neuves et anciennes.
● Ne mélangez pas de piles rechargeables et non rechargeables.
● Ne mélangez pas de piles alcalines et de piles au cadmium.
● Ne mélangez pas de piles rechargeables et de piles au cadmium.
● Ne mélangez pas de piles rechargeables et de piles au cadmium.

JEU

1. Mettre le véhicule sous tension (ON).
2. Vérifier que le véhicule est correctement installé.
3. Mettre le véhicule sous tension (OFF) après le fonctionnement.
4. Retirer toutes les batteries du véhicule et de l'émetteur.

Respecter la séquence de fonctionnement ci-dessus.



ÉMETTEUR, ANTIPERTE D'ÉNERGIE
L'alimentation de l'émetteur est automatiquement sur ON lorsque le bouton de contrôle de vitesse est enclenché, ce qui se fait à la position marche avant ou arrière. Lorsque le bouton est remis sur la position neutre, l'alimentation de l'émetteur est sur OFF. Quand l'émetteur est hors tension (OFF), le véhicule peut être bloqué par les ondes radio d'un autre émetteur, et commencer à bouger.

RÈGLES DE SÉCURITÉ
Choisir un lieu sûr pour jouer le véhicule. Ne pas le conduire dans la rue. Éviter le passage sur le sable et dans les flaques d'eau. Cela pourrait affecter les performances. Vérifier la surface avant de faire attention aux obstacles.

Entretien et maintenance:
Ce jouet exige un entretien et une maintenance périodiques. Gardez le jouet hors de portée des enfants de moins de 36 mois; ils pourraient être blessés. N'opérez PAS le véhicule sur un tapis à piles longues. Cela peut être dangereux parce que les piles du tapis peuvent s'enrouler autour d'un axe et provoquer la surchauffe du moteur.

CE QUE FCC VOUS SOUS-ÉCRIT
Ce jouet est conforme à la partie 15 des règles FCC. Le fonctionnement est soumis aux deux conditions suivantes:
(1) Ce jouet ne doit pas causer d'interférences nuisibles.
(2) Ce jouet doit accepter toute interférence reçue, y compris des interférences nuisibles.

DES CHANGEMENTS OU MODIFICATIONS NON EXPRESSÉMENT APPROUVÉS PAR LE FABRICANT PEUVENT ENDANGERER L'UTILISATEUR À OPÉRER CET APPAREIL.
Si l'interférence ne peut pas être éliminée, les règles FCC exigent que vous arrêtiez d'utiliser votre véhicule radio-contrôlé.

