jump4grou
20008 Champion Forest Dr.
Suite 1102
Spring, TX 77379
832.717.4331

Color Side 1: BLACK
Color Side 2: BLACK

Flat size: 8.5 x 22 in.
Finished size: 4.25 x 4.4 in.

Fold 1: 5-panel accordion
Fold 2: in Half

OMEN

by HP

RMN/型號/型号: HSA-P001MP

© Copyright 2019 HP Development Company, L.P.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: April 2019

Printed in China
Imprimé en Chine
Stampato in Cina
Impreso en China
Impresso na China
中国印刷
중국에서 인쇄

L53876-B21

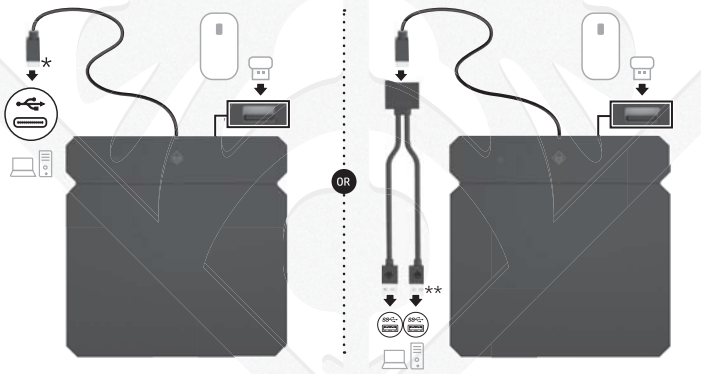

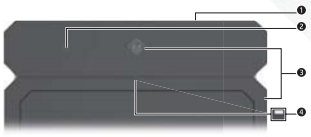

EN
❶ **USB port**
Supports output at 200 mA @ 5 V.
❷ **Qi wireless charging area**
Wirelessly charges Qi-enabled devices.
❸ **Activity lights**
Alternating colors: The mouse pad is on.
❹ **Qi charging light**
Solid amber: The device is charging.
Slow blinking amber: The alignment between the device being charged and the charging area needs to be adjusted.
Quick blinking amber: A metal or magnetic object on the wireless charging area needs to be removed.
*For full functionality, connect to a 15 W USB Type-C port.
**Connect both cables to USB SuperSpeed ports. If you are using the adapter, the logo is the only activity light supported.

BG
❶ **USB port**
Supports output at 200 mA @ 5 V.
❷ **Qi wireless charging area**
Wirelessly charges Qi-enabled devices.
❸ **Activity lights**
Alternating colors: The mouse pad is on.
❹ **Qi charging light**
Solid amber: The device is charging.
Slow blinking amber: The alignment between the device being charged and the charging area needs to be adjusted.
Quick blinking amber: A metal or magnetic object on the wireless charging area needs to be removed.
*For full functionality, connect to a 15 W USB Type-C port.
**Connect both cables to USB SuperSpeed ports. If you are using the adapter, the logo is the only activity light supported.

AR
❶ **USB port**
Supports output at 200 mA @ 5 V.
❷ **Qi wireless charging area**
Wirelessly charges Qi-enabled devices.
❸ **Activity lights**
Alternating colors: The mouse pad is on.
❹ **Qi charging light**
Solid amber: The device is charging.
Slow blinking amber: The alignment between the device being charged and the charging area needs to be adjusted.
Quick blinking amber: A metal or magnetic object on the wireless charging area needs to be removed.
*For full functionality, connect to a 15 W USB Type-C port.
**Connect both cables to USB SuperSpeed ports. If you are using the adapter, the logo is the only activity light supported.

CS
❶ **USB port**
Supports output at 200 mA @ 5 V.
❷ **Qi wireless charging area**
Wirelessly charges Qi-enabled devices.
❸ **Activity lights**
Alternating colors: The mouse pad is on.
❹ **Qi charging light**
Solid amber: The device is charging.
Slow blinking amber: The alignment between the device being charged and the charging area needs to be adjusted.
Quick blinking amber: A metal or magnetic object on the wireless charging area needs to be removed.
*For full functionality, connect to a 15 W USB Type-C port.
**Connect both cables to USB SuperSpeed ports. If you are using the adapter, the logo is the only activity light supported.

ID
❶ **USB port**
Supports output at 200 mA @ 5 V.
❷ **Qi wireless charging area**
Wirelessly charges Qi-enabled devices.
❸ **Activity lights**
Alternating colors: The mouse pad is on.
❹ **Qi charging light**
Solid amber: The device is charging.
Slow blinking amber: The alignment between the device being charged and the charging area needs to be adjusted.
Quick blinking amber: A metal or magnetic object on the wireless charging area needs to be removed.
*For full functionality, connect to a 15 W USB Type-C port.
**Connect both cables to USB SuperSpeed ports. If you are using the adapter, the logo is the only activity light supported.

DA
❶ **USB port**
Supports output at 200 mA @ 5 V.
❷ **Qi wireless charging area**
Wirelessly charges Qi-enabled devices.
❸ **Activity lights**
Alternating colors: The mouse pad is on.
❹ **Qi charging light**
Solid amber: The device is charging.
Slow blinking amber: The alignment between the device being charged and the charging area needs to be adjusted.
Quick blinking amber: A metal or magnetic object on the wireless charging area needs to be removed.
*For full functionality, connect to a 15 W USB Type-C port.
**Connect both cables to USB SuperSpeed ports. If you are using the adapter, the logo is the only activity light supported.

DE
❶ **USB port**
Supports output at 200 mA @ 5 V.
❷ **Qi wireless charging area**
Wirelessly charges Qi-enabled devices.
❸ **Activity lights**
Alternating colors: The mouse pad is on.
❹ **Qi charging light**
Solid amber: The device is charging.
Slow blinking amber: The alignment between the device being charged and the charging area needs to be adjusted.
Quick blinking amber: A metal or magnetic object on the wireless charging area needs to be removed.
*For full functionality, connect to a 15 W USB Type-C port.
**Connect both cables to USB SuperSpeed ports. If you are using the adapter, the logo is the only activity light supported.

ES
❶ **USB port**
Supports output at 200 mA @ 5 V.
❷ **Qi wireless charging area**
Wirelessly charges Qi-enabled devices.
❸ **Activity lights**
Alternating colors: The mouse pad is on.
❹ **Qi charging light**
Solid amber: The device is charging.
Slow blinking amber: The alignment between the device being charged and the charging area needs to be adjusted.
Quick blinking amber: A metal or magnetic object on the wireless charging area needs to be removed.
*For full functionality, connect to a 15 W USB Type-C port.
**Connect both cables to USB SuperSpeed ports. If you are using the adapter, the logo is the only activity light supported.

EL
❶ **USB port**
Supports output at 200 mA @ 5 V.
❷ **Qi wireless charging area**
Wirelessly charges Qi-enabled devices.
❸ **Activity lights**
Alternating colors: The mouse pad is on.
❹ **Qi charging light**
Solid amber: The device is charging.
Slow blinking amber: The alignment between the device being charged and the charging area needs to be adjusted.
Quick blinking amber: A metal or magnetic object on the wireless charging area needs to be removed.
*For full functionality, connect to a 15 W USB Type-C port.
**Connect both cables to USB SuperSpeed ports. If you are using the adapter, the logo is the only activity light supported.

FR
❶ **USB port**
Supports output at 200 mA @ 5 V.
❷ **Qi wireless charging area**
Wirelessly charges Qi-enabled devices.
❸ **Activity lights**
Alternating colors: The mouse pad is on.
❹ **Qi charging light**
Solid amber: The device is charging.
Slow blinking amber: The alignment between the device being charged and the charging area needs to be adjusted.
Quick blinking amber: A metal or magnetic object on the wireless charging area needs to be removed.
*For full functionality, connect to a 15 W USB Type-C port.
**Connect both cables to USB SuperSpeed ports. If you are using the adapter, the logo is the only activity light supported.

HR
❶ **USB port**
Supports output at 200 mA @ 5 V.
❷ **Qi wireless charging area**
Wirelessly charges Qi-enabled devices.
❸ **Activity lights**
Alternating colors: The mouse pad is on.
❹ **Qi charging light**
Solid amber: The device is charging.
Slow blinking amber: The alignment between the device being charged and the charging area needs to be adjusted.
Quick blinking amber: A metal or magnetic object on the wireless charging area needs to be removed.
*For full functionality, connect to a 15 W USB Type-C port.
**Connect both cables to USB SuperSpeed ports. If you are using the adapter, the logo is the only activity light supported.

IT
❶ **USB port**
Supports output at 200 mA @ 5 V.
❷ **Qi wireless charging area**
Wirelessly charges Qi-enabled devices.
❸ **Activity lights**
Alternating colors: The mouse pad is on.
❹ **Qi charging light**
Solid amber: The device is charging.
Slow blinking amber: The alignment between the device being charged and the charging area needs to be adjusted.
Quick blinking amber: A metal or magnetic object on the wireless charging area needs to be removed.
*For full functionality, connect to a 15 W USB Type-C port.
**Connect both cables to USB SuperSpeed ports. If you are using the adapter, the logo is the only activity light supported.

Federal Communications Commission notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio or television technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

For questions regarding this product, write to
HP Inc.
1501 Page Mill Road
Palo Alto, CA 94304
email to:regshelp@hp.com, or call HP at 650-857-1501.
To identify your product, refer to the part, series, or model number located on the product.

Modifications

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by HP may void the user's authority to operate the equipment.