OMEN

by hp

1

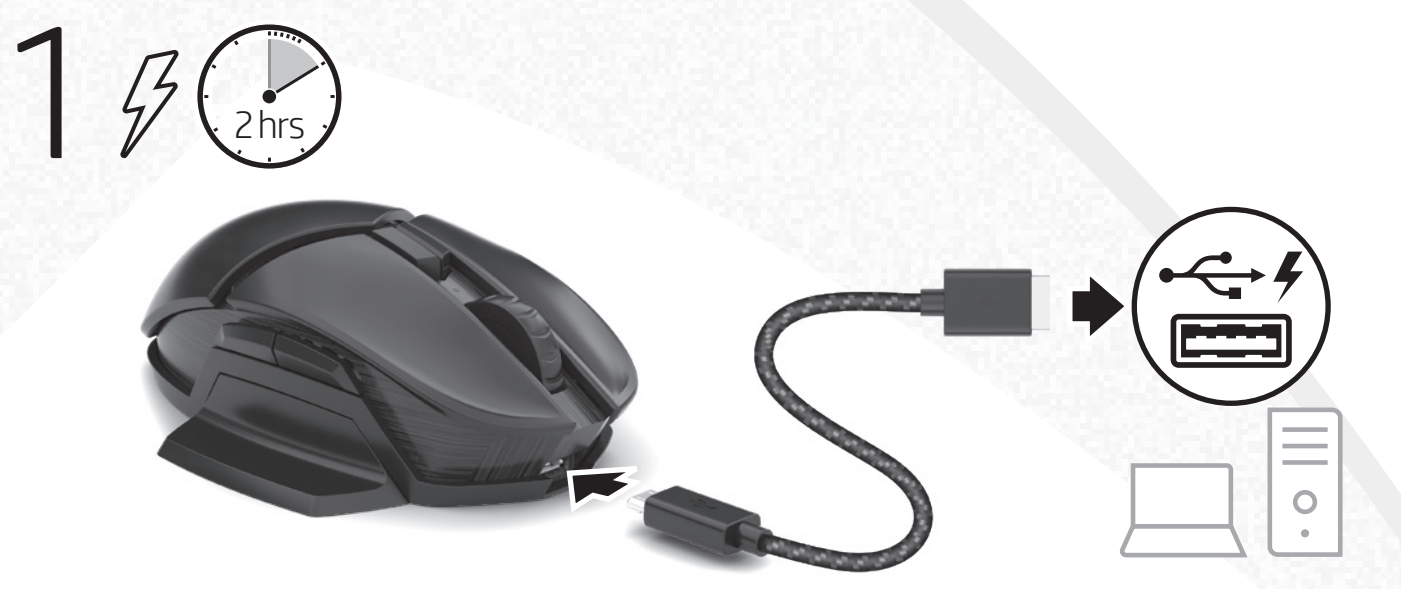

OR

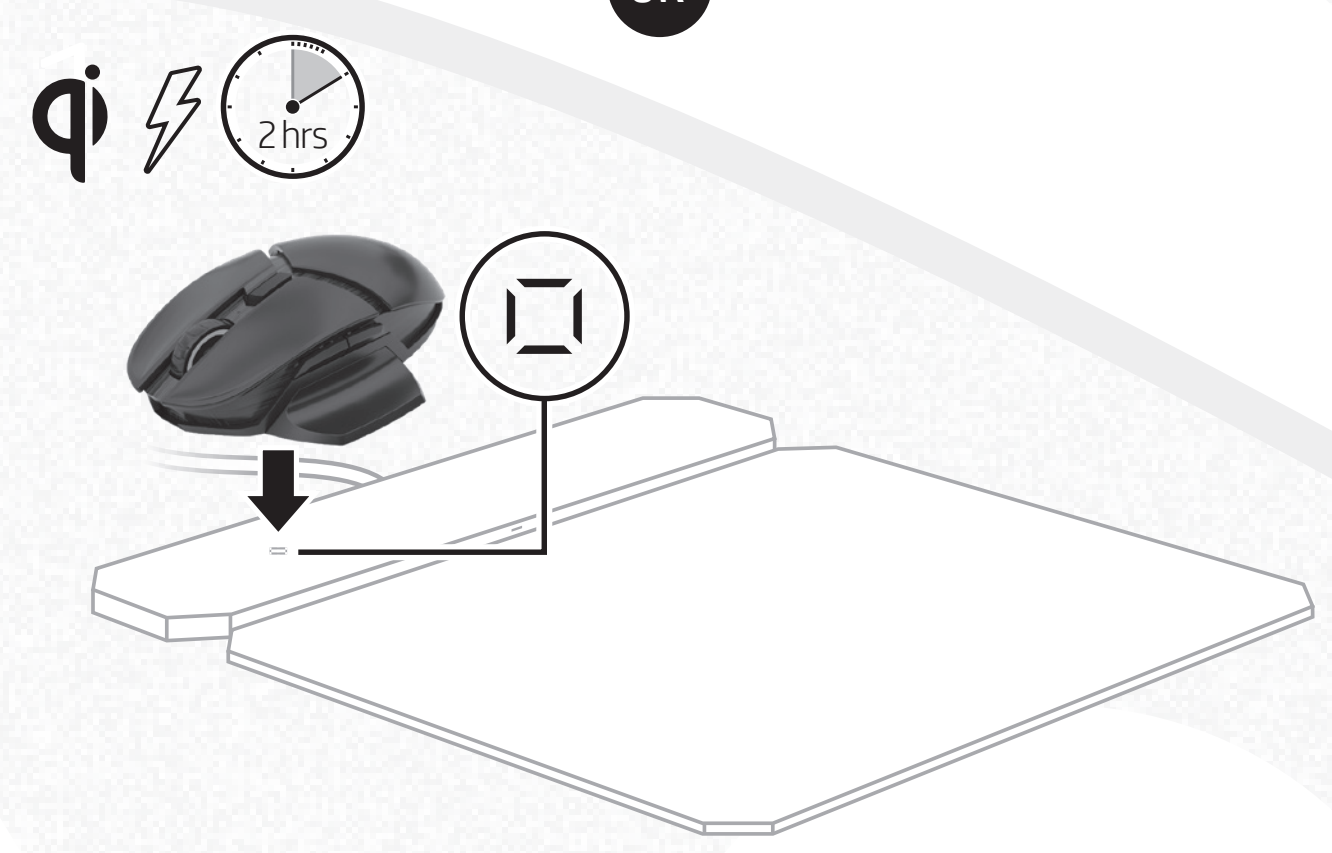

2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.

3

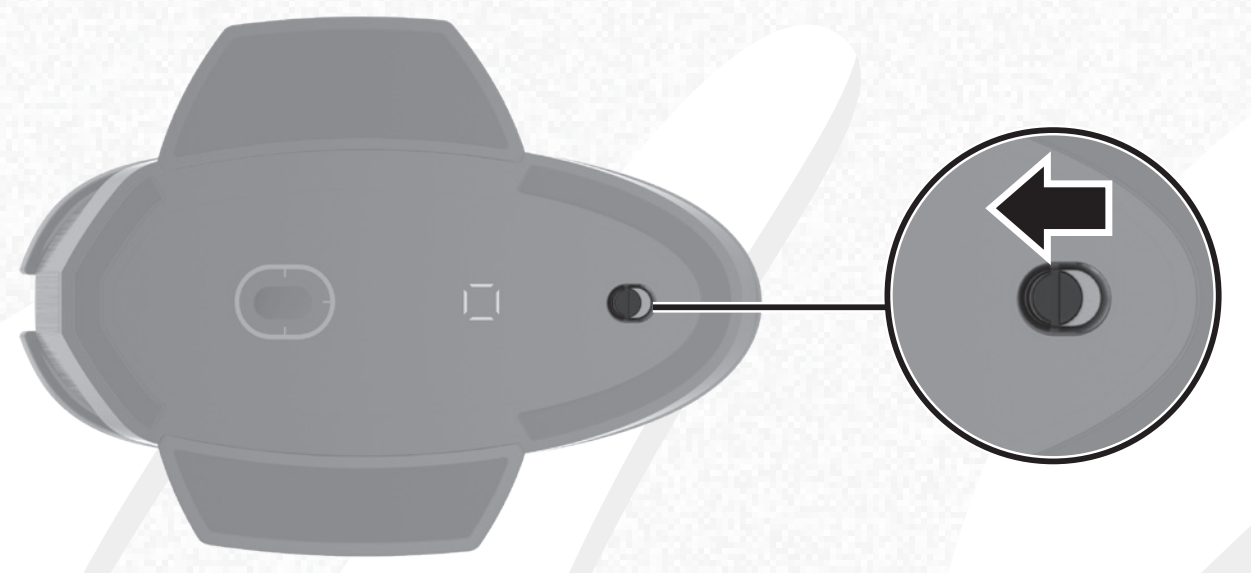

4

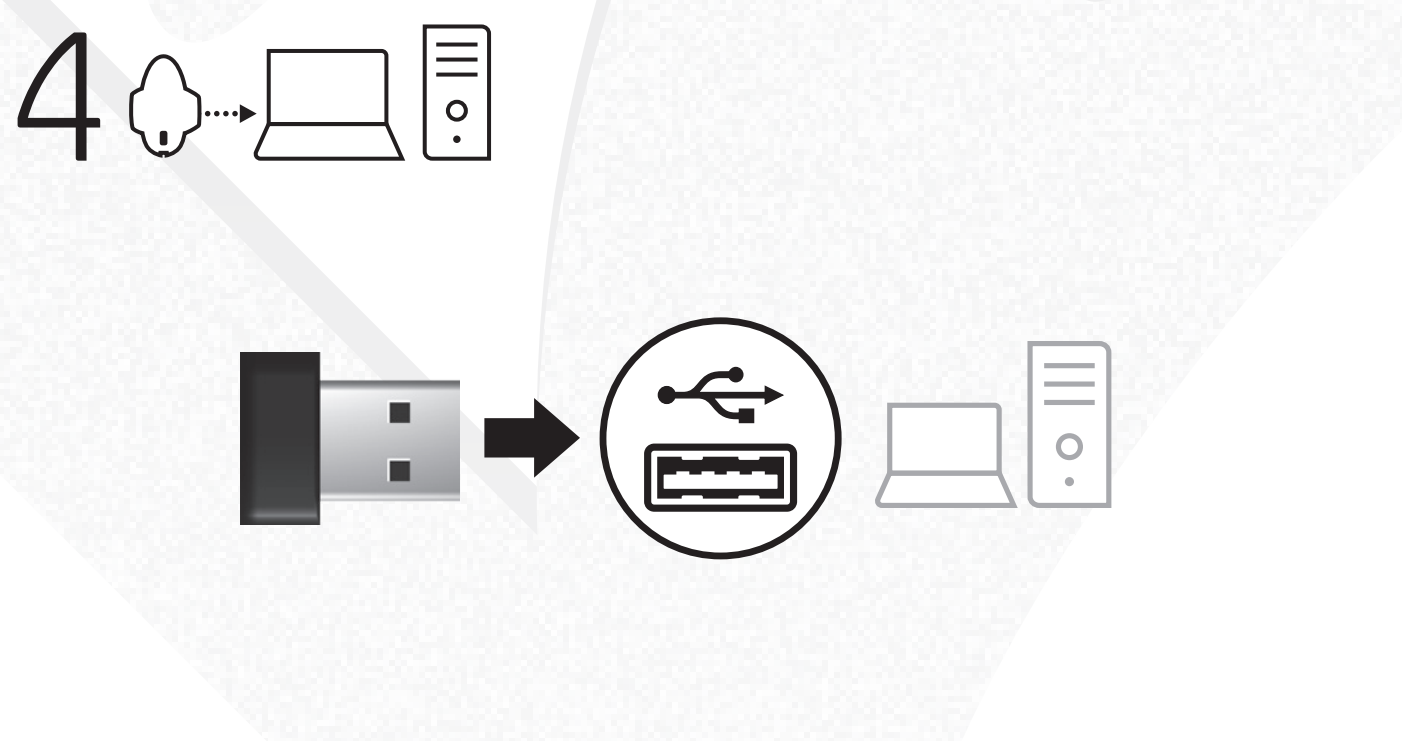

OR

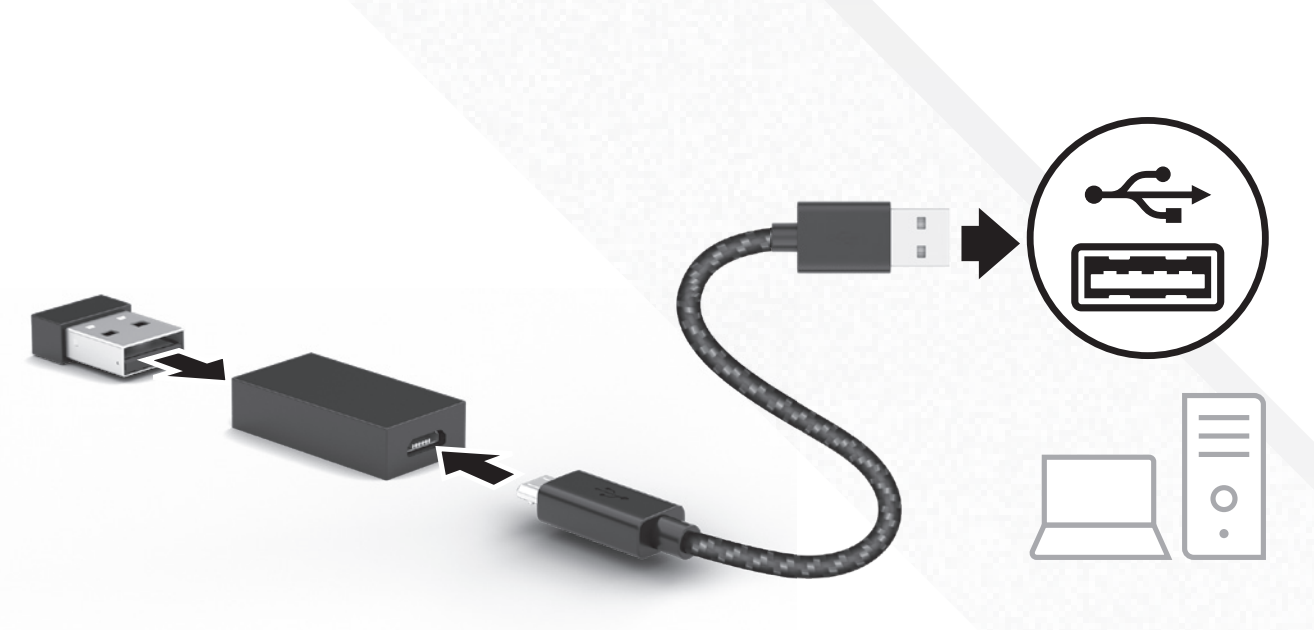

RMN/型號/型号: HSA-P006M + HSA-P006D

© Copyright 2019 HP Development Company, L.P.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: March 2019

PRINTER: Replace this box with Printed- In (PI) Statement(s) as per spec.

NOTE: This box is simply a placeholder. PI Statement(s) do not have to fit inside the box but should be placed in this area.

L53027-B21

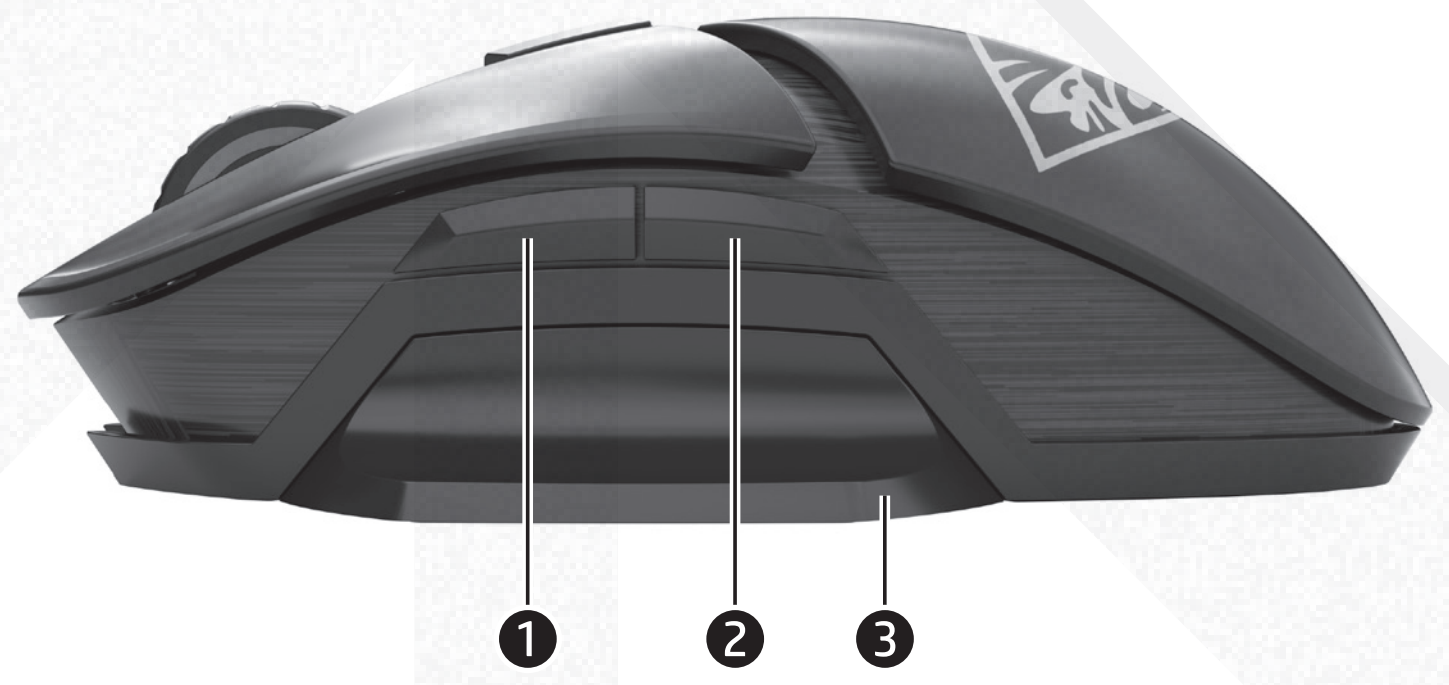

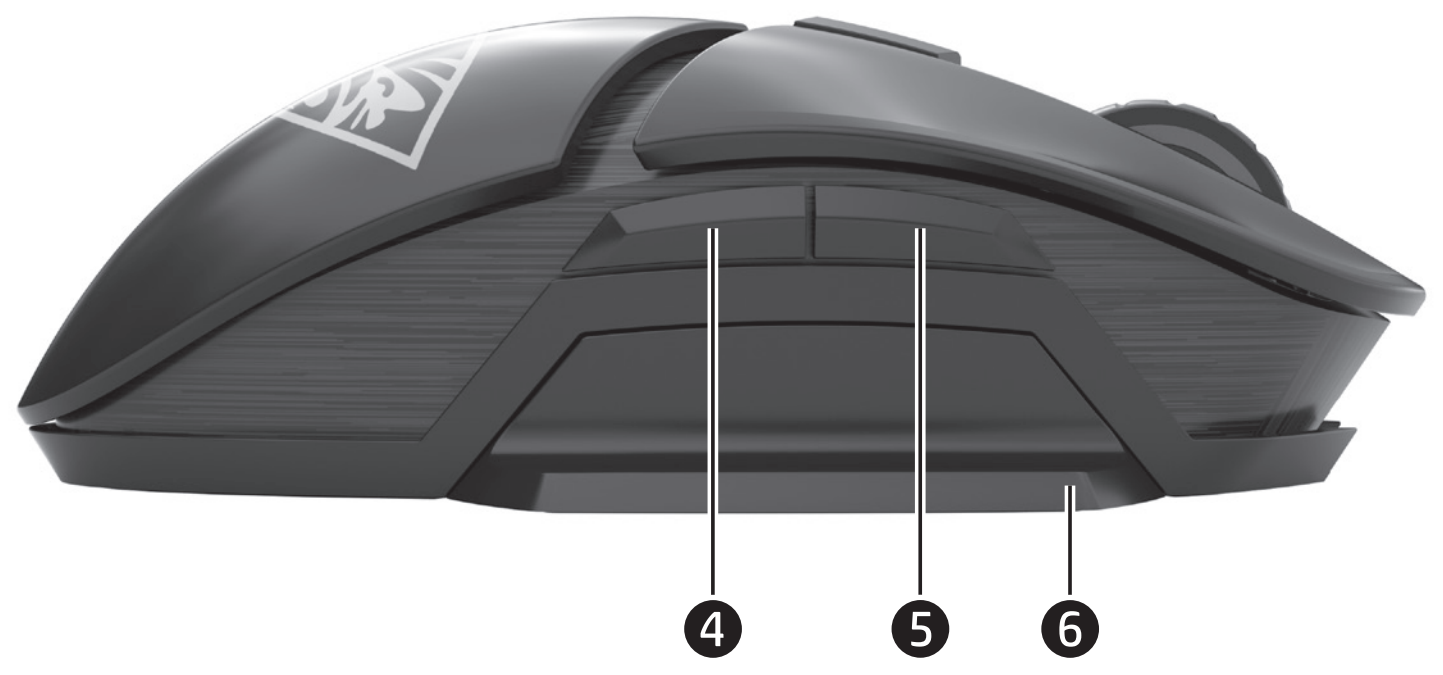

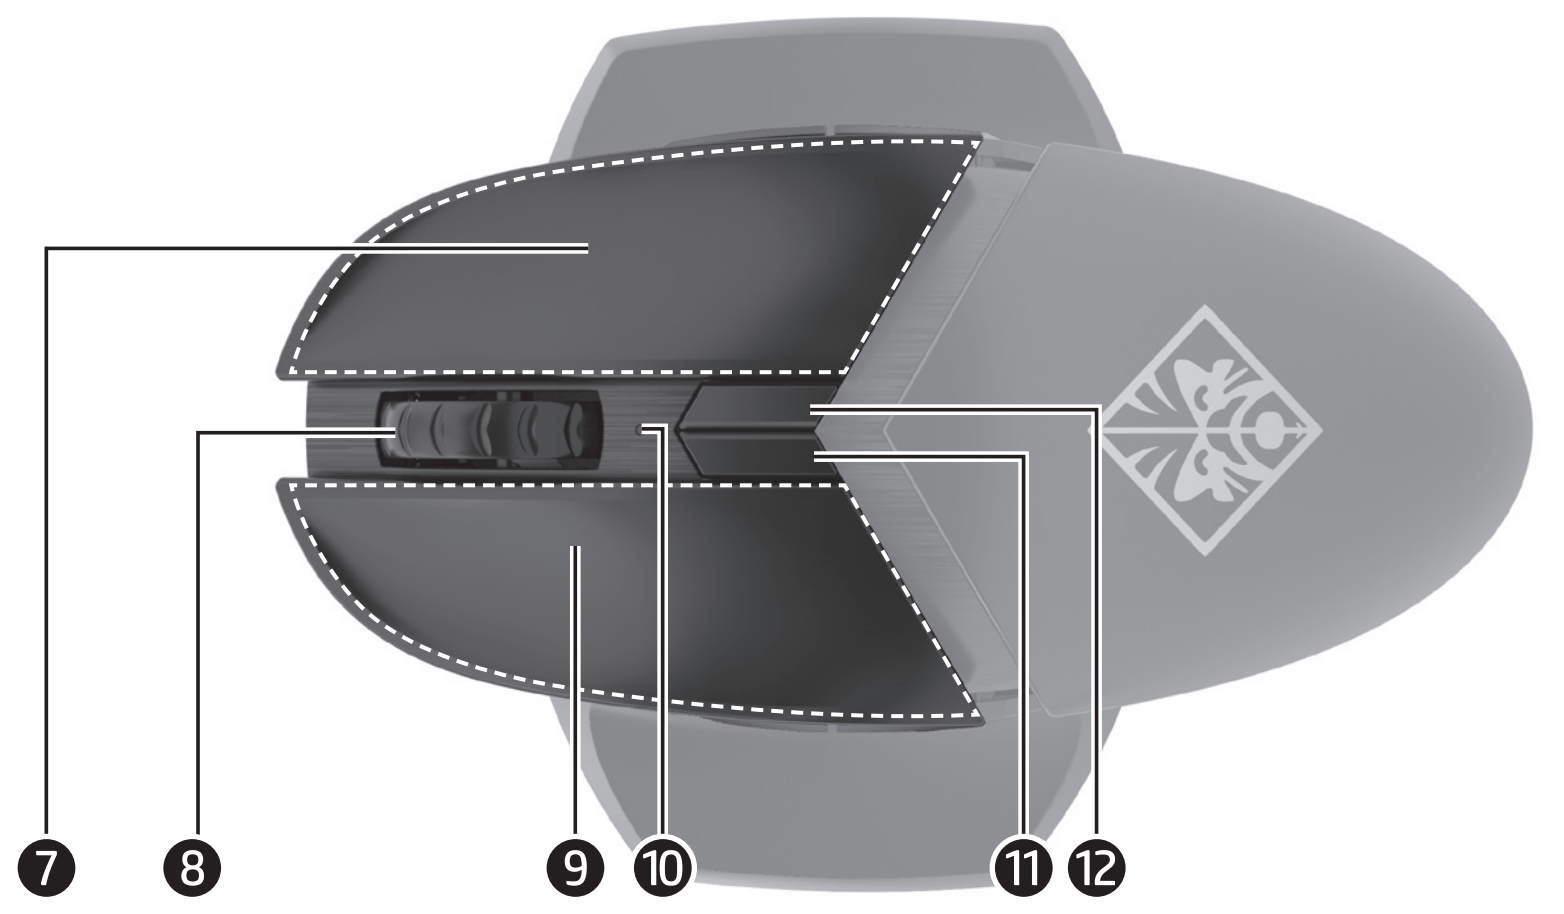

EN

❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❸ **Left thumb rest (removable)**
❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❻ **Right thumb rest (removable)**
❼ **Right-click programmable button**
❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app.
Alternating colors: The mouse is active.
❾ **Left-click programmable button**
❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.
⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

AR

2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.
❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❸ **Left thumb rest (removable)**
❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❻ **Right thumb rest (removable)**
❼ **Right-click programmable button**
❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app.
Alternating colors: The mouse is active.
❾ **Left-click programmable button**
❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.
⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

ID

2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.
❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❸ **Left thumb rest (removable)**
❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❻ **Right thumb rest (removable)**
❼ **Right-click programmable button**
❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app.
Alternating colors: The mouse is active.
❾ **Left-click programmable button**
❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.
⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

BG

2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.
❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❸ **Left thumb rest (removable)**
❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❻ **Right thumb rest (removable)**
❼ **Right-click programmable button**
❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app.
Alternating colors: The mouse is active.
❾ **Left-click programmable button**
❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.
⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

CS

2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.
❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❸ **Left thumb rest (removable)**
❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❻ **Right thumb rest (removable)**
❼ **Right-click programmable button**
❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app.
Alternating colors: The mouse is active.
❾ **Left-click programmable button**
❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.
⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

DA

2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.
❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❸ **Left thumb rest (removable)**
❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❻ **Right thumb rest (removable)**
❼ **Right-click programmable button**
❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app.
Alternating colors: The mouse is active.
❾ **Left-click programmable button**
❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.
⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

DE

2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.
❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❸ **Left thumb rest (removable)**
❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❻ **Right thumb rest (removable)**
❼ **Right-click programmable button**
❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app.
Alternating colors: The mouse is active.
❾ **Left-click programmable button**
❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.
⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

ES

2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.
❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❸ **Left thumb rest (removable)**
❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❻ **Right thumb rest (removable)**
❼ **Right-click programmable button**
❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app.
Alternating colors: The mouse is active.
❾ **Left-click programmable button**
❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.
⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

EL

2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.
❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❸ **Left thumb rest (removable)**
❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❻ **Right thumb rest (removable)**
❼ **Right-click programmable button**
❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app.
Alternating colors: The mouse is active.
❾ **Left-click programmable button**
❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.
⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

FR

2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.
❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❸ **Left thumb rest (removable)**
❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❻ **Right thumb rest (removable)**
❼ **Right-click programmable button**
❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app.
Alternating colors: The mouse is active.
❾ **Left-click programmable button**
❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.
⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

HR

2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.
❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❸ **Left thumb rest (removable)**
❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❻ **Right thumb rest (removable)**
❼ **Right-click programmable button**
❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app.
Alternating colors: The mouse is active.
❾ **Left-click programmable button**
❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.
⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

IT

2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.
❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❸ **Left thumb rest (removable)**
❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❻ **Right thumb rest (removable)**
❼ **Right-click programmable button**
❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app.
Alternating colors: The mouse is active.
❾ **Left-click programmable button**
❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.
⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

KK

2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.
❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❸ **Left thumb rest (removable)**
❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❻ **Right thumb rest (removable)**
❼ **Right-click programmable button**
❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app.
Alternating colors: The mouse is active.
❾ **Left-click programmable button**
❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.
⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

LV

2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.
❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❸ **Left thumb rest (removable)**
❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❻ **Right thumb rest (removable)**
❼ **Right-click programmable button**
❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app.
Alternating colors: The mouse is active.
❾ **Left-click programmable button**
❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.
⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

LT

2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.
❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❸ **Left thumb rest (removable)**
❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❻ **Right thumb rest (removable)**
❼ **Right-click programmable button**
❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app.
Alternating colors: The mouse is active.
❾ **Left-click programmable button**
❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.
⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

HU

2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.
❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❸ **Left thumb rest (removable)**
❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.
❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.
❻ **Right thumb rest (removable)**
❼ **Right-click programmable button**
❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app.
Alternating colors: The mouse is active.
❾ **Left-click programmable button**
❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.
⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

NL 2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.

❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❸ **Left thumb rest (removable)**

❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❻ **Right thumb rest (removable)**

❼ **Right-click programmable button**

❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active.

❾ **Left-click programmable button**

❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.

⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

NO 2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.

❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❸ **Left thumb rest (removable)**

❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❻ **Right thumb rest (removable)**

❼ **Right-click programmable button**

❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active.

❾ **Left-click programmable button**

❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.

⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

PL 2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.

❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❸ **Left thumb rest (removable)**

❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❻ **Right thumb rest (removable)**

❼ **Right-click programmable button**

❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active.

❾ **Left-click programmable button**

❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.

⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

PT 2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.

❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❸ **Left thumb rest (removable)**

❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❻ **Right thumb rest (removable)**

❼ **Right-click programmable button**

❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active.

❾ **Left-click programmable button**

❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.

⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

BR 2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.

❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❸ **Left thumb rest (removable)**

❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❻ **Right thumb rest (removable)**

❼ **Right-click programmable button**

❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active.

❾ **Left-click programmable button**

❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.

⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

RO 2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.

❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❸ **Left thumb rest (removable)**

❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❻ **Right thumb rest (removable)**

❼ **Right-click programmable button**

❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active.

❾ **Left-click programmable button**

❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.

⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

RU 2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.

❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❸ **Left thumb rest (removable)**

❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❻ **Right thumb rest (removable)**

❼ **Right-click programmable button**

❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active.

❾ **Left-click programmable button**

❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.

⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

SK 2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.

❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❸ **Left thumb rest (removable)**

❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❻ **Right thumb rest (removable)**

❼ **Right-click programmable button**

❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active.

❾ **Left-click programmable button**

❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.

⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

SL 2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.

❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❸ **Left thumb rest (removable)**

❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❻ **Right thumb rest (removable)**

❼ **Right-click programmable button**

❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active.

❾ **Left-click programmable button**

❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.

⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

FI 2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.

❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❸ **Left thumb rest (removable)**

❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❻ **Right thumb rest (removable)**

❼ **Right-click programmable button**

❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active.

❾ **Left-click programmable button**

❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.

⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

SR 2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.

❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❸ **Left thumb rest (removable)**

❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❻ **Right thumb rest (removable)**

❼ **Right-click programmable button**

❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active.

❾ **Left-click programmable button**

❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.

⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

SV 2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.

❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❸ **Left thumb rest (removable)**

❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❻ **Right thumb rest (removable)**

❼ **Right-click programmable button**

❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active.

❾ **Left-click programmable button**

❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.

⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

TH 2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.

❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❸ **Left thumb rest (removable)**

❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❻ **Right thumb rest (removable)**

❼ **Right-click programmable button**

❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active.

❾ **Left-click programmable button**

❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.

⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

TR 2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.

❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❸ **Left thumb rest (removable)**

❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❻ **Right thumb rest (removable)**

❼ **Right-click programmable button**

❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active.

❾ **Left-click programmable button**

❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.

⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

UK 2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.

❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❸ **Left thumb rest (removable)**

❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❻ **Right thumb rest (removable)**

❼ **Right-click programmable button**

❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active.

❾ **Left-click programmable button**

❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.

⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

JA 2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.

❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❸ **Left thumb rest (removable)**

❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❻ **Right thumb rest (removable)**

❼ **Right-click programmable button**

❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active.

❾ **Left-click programmable button**

❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.

⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

KO 2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.

❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❸ **Left thumb rest (removable)**

❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❻ **Right thumb rest (removable)**

❼ **Right-click programmable button**

❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active.

❾ **Left-click programmable button**

❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.

⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

CN 2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.

❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❸ **Left thumb rest (removable)**

❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❻ **Right thumb rest (removable)**

❼ **Right-click programmable button**

❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active.

❾ **Left-click programmable button**

❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.

⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

TW 2 To download the software, on your computer, select **Start** and then select **Microsoft Store**. Search for **OMEN Command Center**, and then download the app.

❶ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❷ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❸ **Left thumb rest (removable)**

❹ **Programmable back button (removable)**
By default, press to go to the last page visited in a Web browser.

❺ **Programmable forward button (removable)**
By default, press to return to the previous page visited in a Web browser.

❻ **Right thumb rest (removable)**

❼ **Right-click programmable button**

❽ **Scroll wheel/Activity light**
Press to use the programmed middle-click function. Tilt left or right to use functions programmed in the app. Alternating colors: The mouse is active.

❾ **Left-click programmable button**

❿ **Battery light**
When the mouse is turned on, the light displays the battery charge level for 3 to 5 s. If the light flashes red when the mouse is active, the battery needs to be charged.
- White: The mouse is more than 60% charged.
- Amber: The mouse is between 40% and 60% charged.
- Red: The battery level is less than 40% charged.

When the mouse is connected to power, the light displays the battery charge level after blinking white for 3 to 5 s to show that it has been successfully connected to power.
- White: Fully charged
- Amber: Charging
- Red: Low charge

⓫ **DPI down button**
Press to lower DPI setting.

⓬ **DPI up button**
Press to raise DPI setting.
- Blue-violet: 400 DPI
- Violet: 800 DPI
- Red-violet: 1200 DPI
- Red: 1600 DPI (default)
- Orange: 2400 DPI
- Yellow: 3600 DPI
- Green: 4800 DPI
- Blue: 16000 DPI

For more information about programming the mouse, go to http://www.hp.com/support and follow the instructions to find your product. Then select **User Guides**.

DRAFT