K72456_7_8 TB800 _IG
Folded size: 95 mm X 140 mm
Trim size:760 mm X 140 mm

①

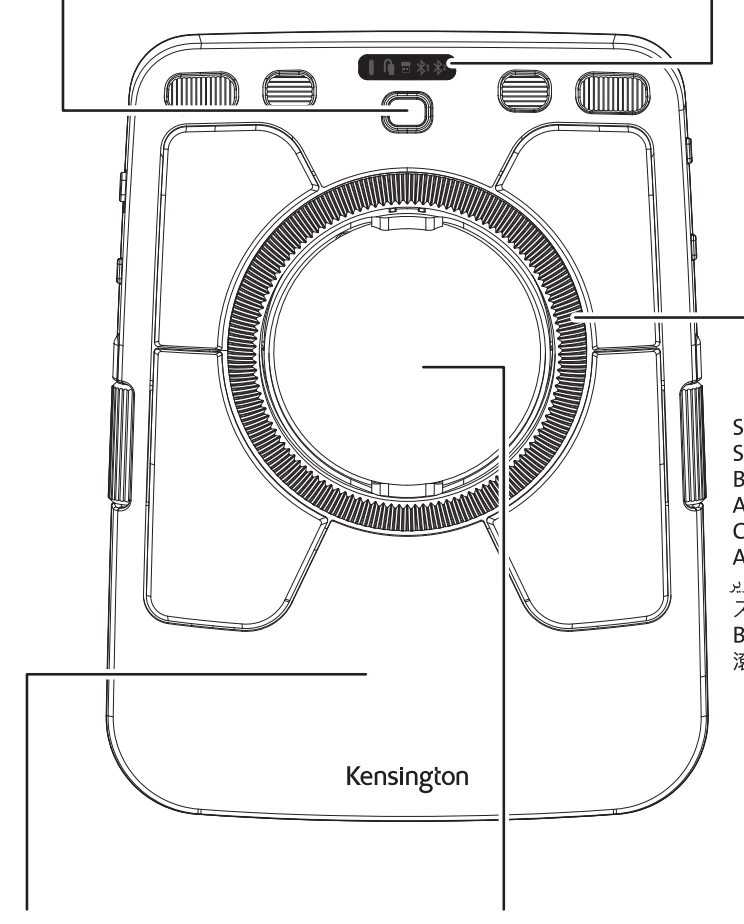

Scroll Ring Mode Switch | Scrollring-Modus-Umschalter | Bague de défilement Changement de mode | Interruptor del modo anillo de desplazamiento | Commutazione modalità cursore di scorrimento | Interruptor do Modo de Anel de Deslocamento | مفتاح وضع حلقة التمرير | 滚动环模式切换 | スクロールリングモードスイッチ | Bague de défilement Changement de mode | 滾動環模式切換 | 스크롤 링 모드 스위치

Channel Indicator/Power Status | Kanalanzeige/Betriebsstatus | Indicateur de canal/État d'alimentation | Estado del indicador de canal / alimentación | Indicatore canale/stato di alimentazione | Indicador de canal/estado de energia | مؤشر القناة/حالة الطاقة | 信号通道指示灯/电源状态 | 接続モード/電池残量表示 | Indicateur de canal/état de l'alimentation | 頻道指示燈/電源狀態 | 채널 표시등/전원 상태

Scroll Ring | Scrollring | Bague de défilement | Anillo de desplazamiento | Cursore di scorrimento | Anel de deslocamento | حلقة التمرير | 滚动环 | スクロールリング | Bague de défilement | 滾動環 | 스크롤 링

Palm/Wrist Rest | Handflächen-/Handgelenkauflage | Repose-poignet | Descanso de palma / muñeca | Poggia palmo/polsi | Apoio para a Palma da Mão/Pulso | مسند راحة اليد/المعصم | 掌托/腕托 | パームレスト/リストレスト | Repose-paume/poignet | 掌托/腕托 | 손바닥/손목 받침대

Cursor Control | Cursorsteuerung | Contrôle du curseur | Control de cursor | Controllo cursore | Controlo do cursor | التحكم في المؤشر | 光标控制 | カーソルコントロール | Contrôle du curseur | 游標控制 | 커서 제어

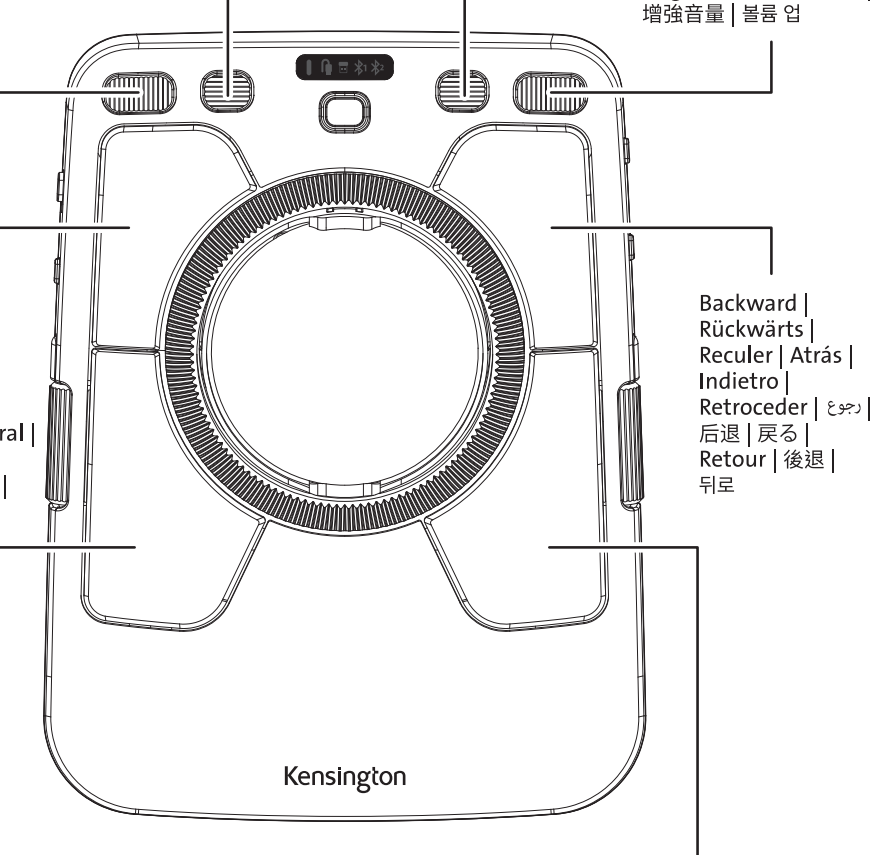

Volume Down | Lautstärke verringern | Volume moins | Bajar volumen | Aumento volume | Diminuir o Volume | خفض مستوى الصوت | 调低音量 | 音量を下げる | Baisser le volume | 降低音量 | 볼륨 다운

Play/ Pause | Wiedergabe/Pause | Lecture/Pause | Reproducción/Pausa | Riproduzione/Pausa | Reproduzir/Colocar em Pausa | تشغيل/إيقاف مؤقت | 播放/暂停 | 再生/一時停止 | Lecture/pause | 播放/暫停 | 재생/일시 중지

Forward | Vorwärts | Avancer | Adelante | Avanti | Avançar | التالي | 前进 | 進む | Avance | 前進 | 앞으로

Volume Up | Lautstärke erhöhen | Volume plus | Subir volumen | Riduzione volume | Aumentar o Volume | رفع مستوى الصوت | 调高音量 | 音量を上げる | Augmenter le volume | 增強音量 | 볼륨 업

Middle Click | Mittlerer Klick | Clic central | Clic central | Clic pulsante centrale | Clique com o Botão Central | نقر بزر الماوس الأوسط | 中间键单击 | 中央クリック | Clic central | 按滑鼠中間鍵 | 가운데 클릭

Backward | Rückwärts | Reculer | Atrás | Indietro | Retroceder | رجوع | 后退 | 戻る | Retour | 後退 | 뒤로

Left Click | Linksklick | Clic gauche | Clic izquierdo | Clic pulsante sinistro | Clique com o Botão Esquerdo | نقر بزر الماوس الأيسر | 左键单击 | 左クリック | Clic gauche | 按滑鼠左鍵 | 왼쪽 클릭

Right Click | Rechtsklick | Clic droit | Clic derecho | Clic pulsante destro | Clique com o Botão Direito | نقر بزر الماوس الأيمن | 右键单击 | 右クリック | Clic droit | 按滑鼠右鍵 | 오른쪽 클릭

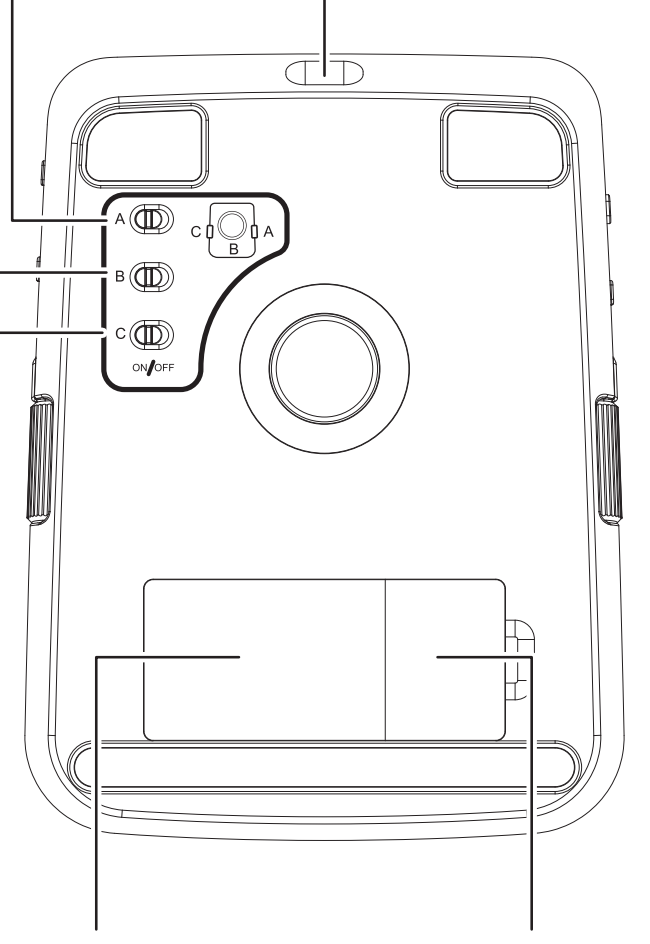

On/Off Right Roller | Rechte Rolle ein/aus | Molette droite Activée/Désactivée | Encendido / apagado de rodillo derecho | Attivazione/Disattivazione cursore destro | Ligar/desligar o rolo direito | بكرة التشغيل/إيقاف التشغيل اليمنى | 开启/关闭右侧滚轮 | 右ローラーのオン/オフ | Activation/désactivation de la molette droite | 開啟/關閉右滾輪 | 오른쪽 롤러 켜기/끄기

USB-C Charging/ Connection Port | USB-C-Lade-/Anschlussport | Port de charge/connexion USB-C | Puerto de conexión / carga USB-C | Porta di connessione/ricarica USB-C | Porta de ligação / carregamento USB-C | USB-C منفذ الشحن/التوصيل | USB-C 充电/连接接口 | USB-C充電/接続ポート | Port de charge/connexion USB-C | USB-C 充電/連接埠 | USB-C 충전/연결 포트

On/Off Scroll Ring | Scrollring ein/aus | Bague de défilement Activée/Désactivée | Encendido / apagado de anillo de desplazamiento | Attivazione/Disattivazione cursore di scorrimento | Ligar/desligar anel de deslocamento | حلقة التمرير للتشغيل/إيقاف التشغيل | 开启/关闭滚动环 | スクロールリングのオン/オフ | Activation/désactivation de la bague de défilement | 開啟/關閉滾動環 | 스크롤 링 켜기/끄기

On/Off Left Roller | Linke Rolle ein/aus | Molette gauche Activée/Désactivée | Encendido / apagado de rodillo izquierdo | Attivazione/Disattivazione cursore sinistro | Ligar/desligar o rolo esquerdo | بكرة التشغيل/إيقاف التشغيل اليسرى | 开启/关闭左侧滚轮 | 左ローラーのオン/オフ | Activation/désactivation de la molette gauche | 開啟/關閉左滾輪 | 왼쪽 롤러 켜기/끄기

Replaceable Battery | Austauschbarer Akku | Batterie remplaçable | Batería sustituible | Batteria sostituibile | Bateria substituível | البطارية القابلة للاستبدال | 可更换电池 | 電池収納部 | Batterie remplaçable | 可更換電池 | 교체가능 배터리

Dongle Storage | Dongle-Aufbewahrungsfach | Stockage de la Dongle | Almacenamiento de Dongle | Dongle chiavetta | Armazenamento Dongle | Dongle حجرة تخزين | Dongle 存儲 | レシーバーユニット収納部 | Dongle de stockage | Dongle 儲存 | Dongle 저장 장치

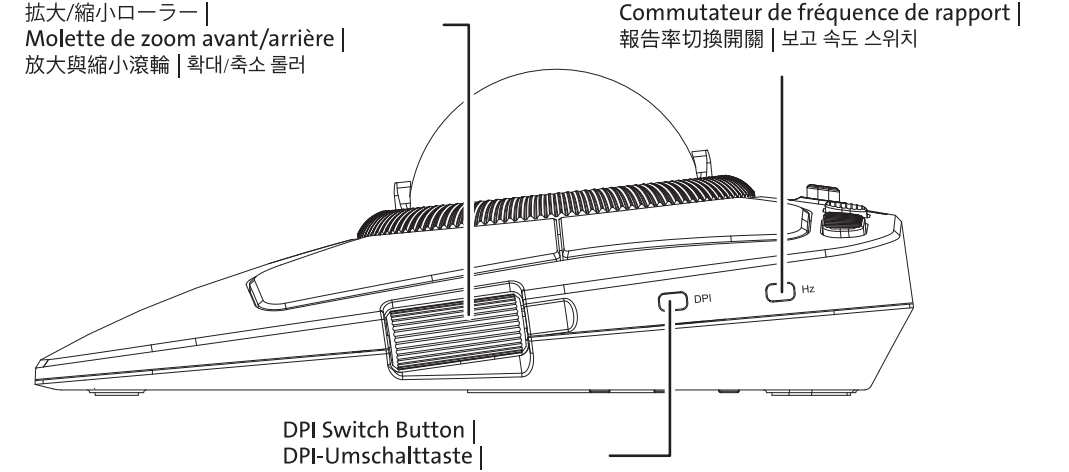

Zoom In & Zoom Out Roller | Vergrößern-/Verkleinern-Rolle | Molette de zoom avant et arrière | Rodillo de acercamiento y alejamiento | Cursore per ingrandimento e rimpicciolimento | Rolo de ampliação e redução de zoom | بكرة التكبير والتصغير | 放大与缩小滚轮 | 拡大/縮小ローラー | Molette de zoom avant/arrière | 放大與縮小滾輪 | 확대/축소 롤러

Reporting Rate Switch Button | Abtastrate-Umschalter | Interrupteur de commutation de taux de rapport | Interruptor de cambio de velocidad de informe | Commutatore frequenza di segnalazione | Relatório de taxa de comutação de interruptor | مفتاح تبديل معدل التقرير | 报高率切换按键 | レポートレート切替スイッチ | Commutateur de fréquence de rapport | 報告率切換開關 | 보고 속도 스위치

DPI Switch Button | DPI-Umschalttaste | DPI Bouton de commutation | DPI Botón del interruptor | Pulsante di commutazione DPI | Botão de Comutação DPI | مفتاح تغيير DPI | DPI 切换按钮 | DPI 切替ボタン | Bouton de sélection de DPI | DPI 切換按鈕 | DPI 스위치 버튼

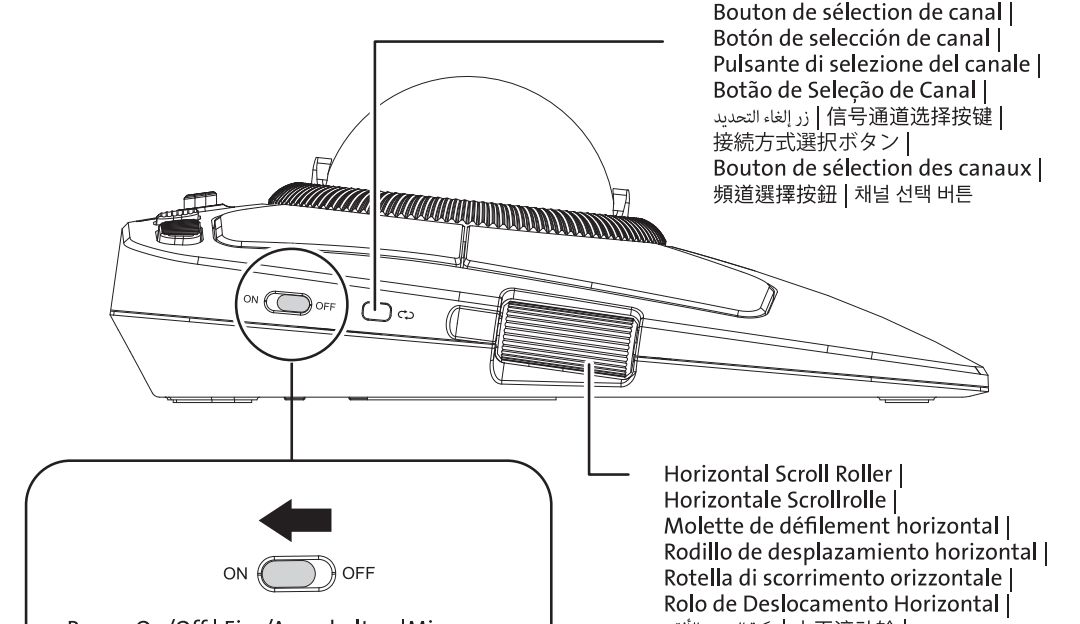

Channel Selection Button | Kanalauswahl-Taste | Bouton de sélection de canal | Botón de selección de canal | Pulsante di selezione del canale | Botão de Seleção de Canal | زر إلغاء التحديد | 信号通道选择按键 | 接続方式選択ボタン | Bouton de sélection des canaux | 頻道選擇按鈕 | 채널 선택 버튼

Horizontal Scroll Roller | Horizontale Scrollrolle | Molette de défilement horizontal | Rodillo de desplazamiento horizontal | Rotella di scorrimento orizzontale | Rolo de Deslocamento Horizontal | بكرة التمرير الأفقي | 水平滚动轮 | 水平スクロールローラー | Molette de défilement horizontal | 水平捲動滾輪 | 수평 스크롤 롤러

ON OFF

Power On/Off | Ein-/Ausschalten |Mise en Marche/Arrêt | Encendido/apagado | Accensione/Spegnimento | Ligar/Desligar | تشغيل/إيقاف التشغيل | 电源开启/关闭 | 電源オン/オフ | Mise sous/hors tension | 開啟/關閉電源 | 전원 켜기/끄기

②

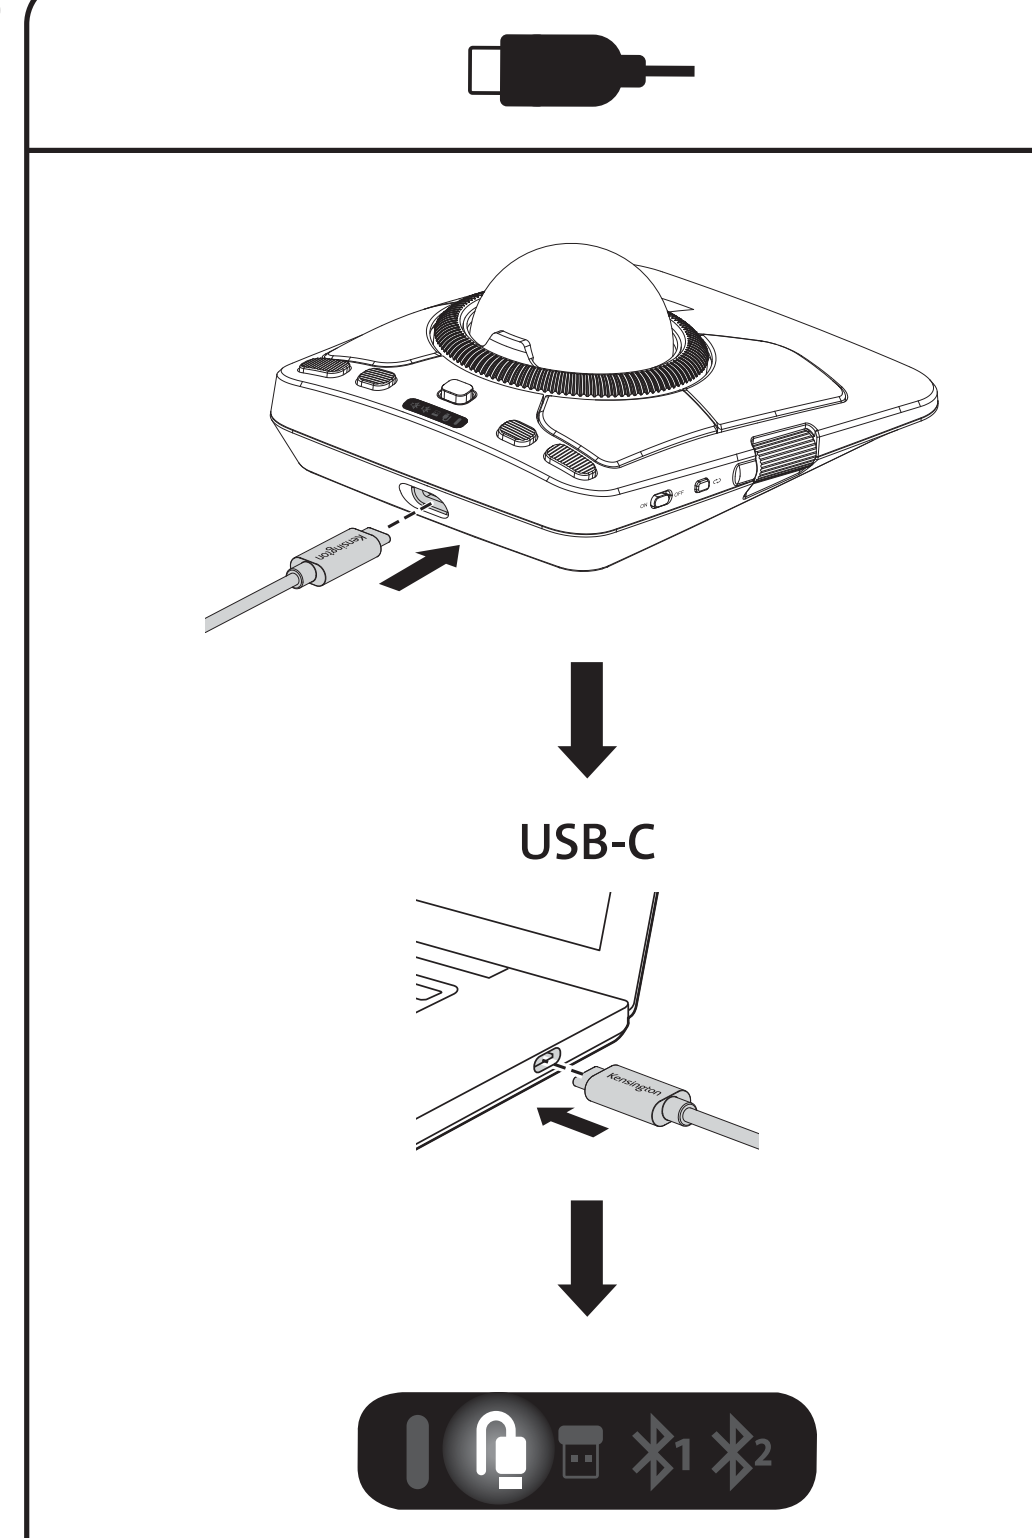

White | Weiß | Blanc | Blanco | Bianco | Branco
أبيض | 白色 | 白 | Blanc | 白 | 흰색

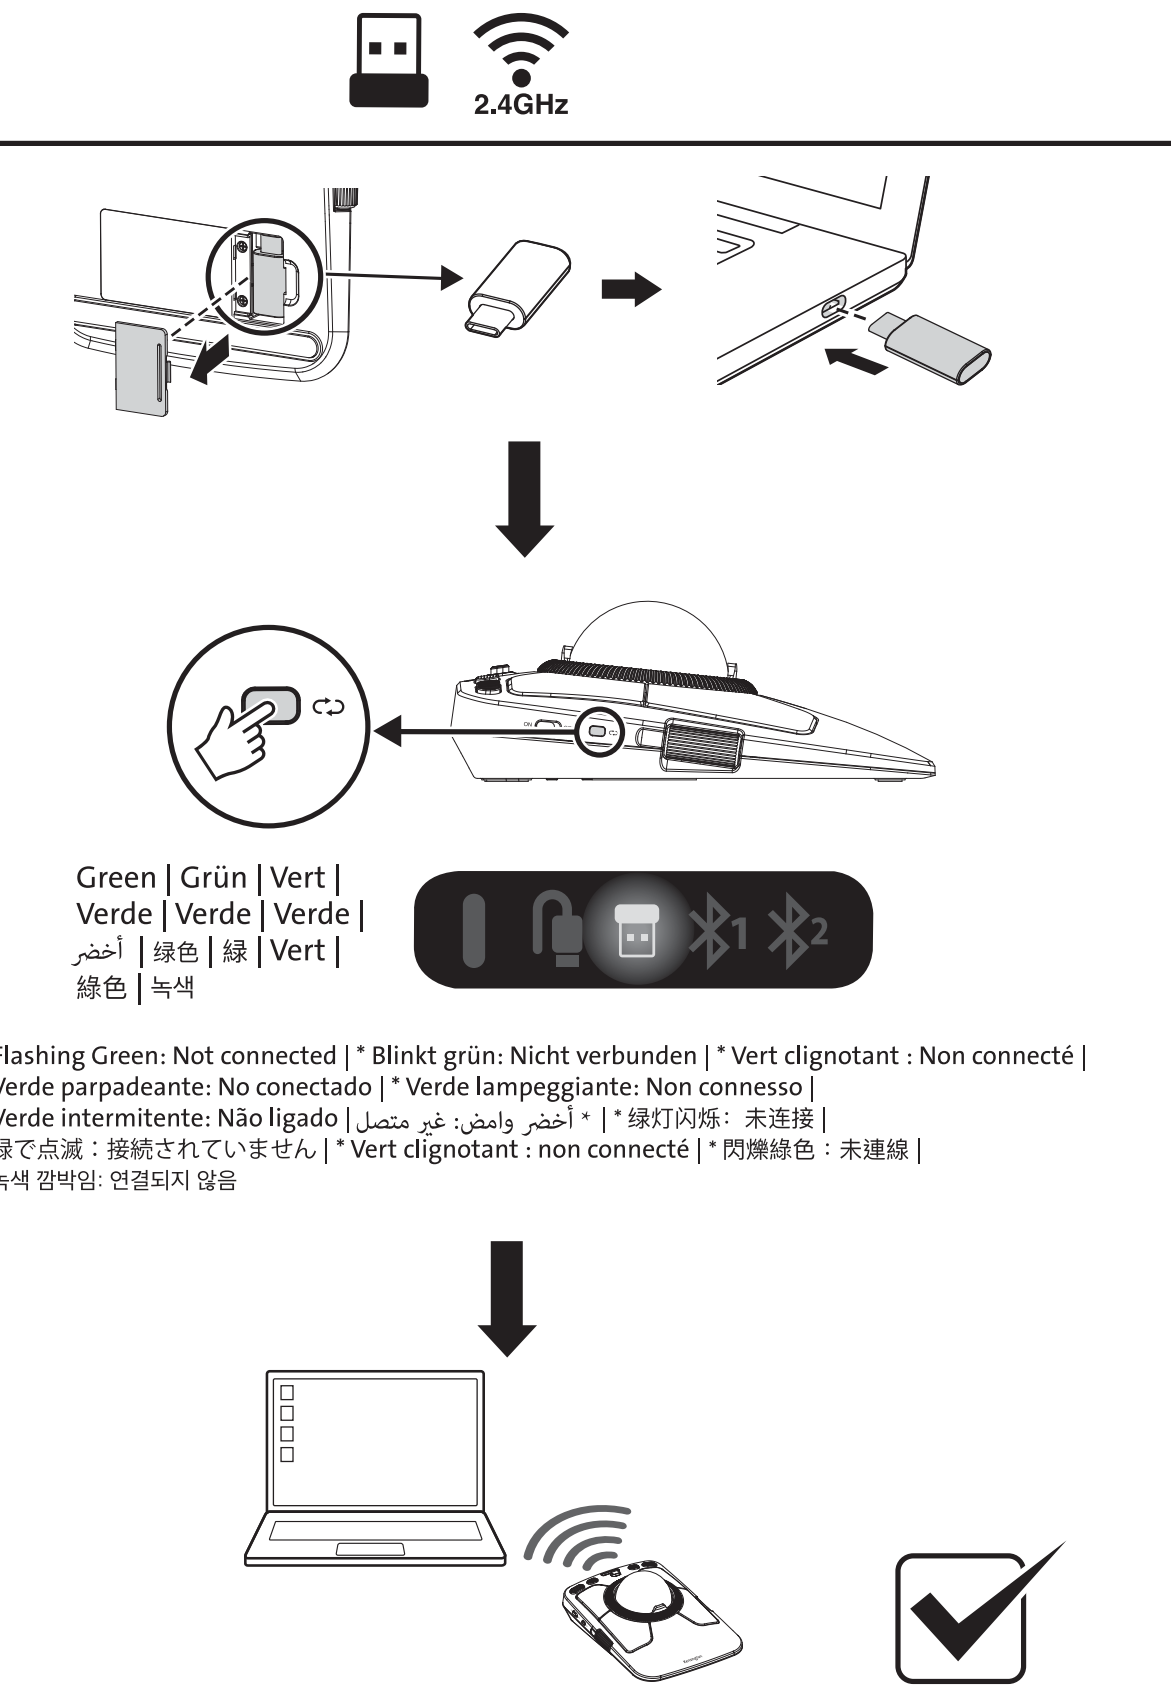

Green | Grün | Vert | Verde | Verde | Verde | أخضر | 绿色 | 緑 | Vert | 綠色 | 녹색

* Flashing Green: Not connected | * Blinkt grün: Nicht verbunden | * Vert clignotant : Non connecté | * Verde parpadeante: No conectado | * Verde lampeggiante: Non connesso | * Verde intermitente: Não ligado | أخضر وامض: غير متصل * | * 绿灯闪烁：未连接 | * 緑で点滅：接続されていません | * Vert clignotant : non connecté | * 閃爍綠色：未連線 | * 녹색 깜박임: 연결되지 않음

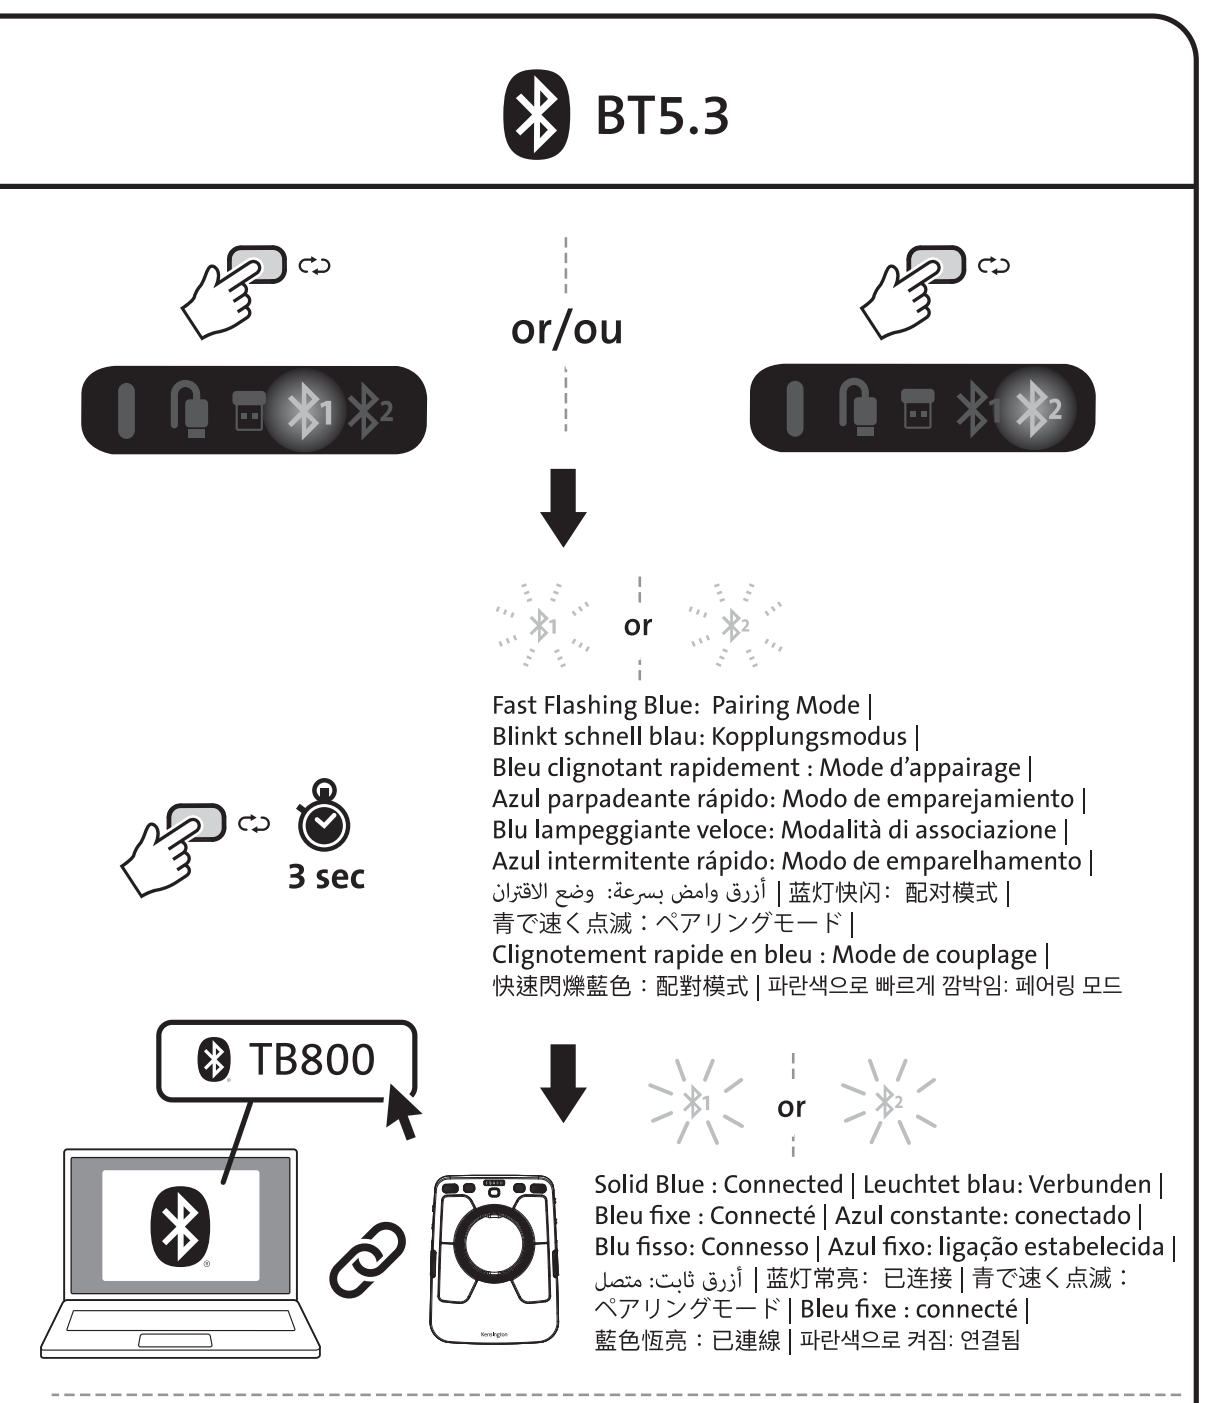

Fast Flashing Blue: Pairing Mode | Blinkt schnell blau: Kopplungsmodus | Bleu clignotant rapidement : Mode d'appairage | Azul parpadeante rápido: Modo de emparejamiento | Blu lampeggiante veloce: Modalità di associazione | Azul intermitente rápido: Modo de emparelhamento | أزرق وامض بسرعة: وضع الاقتران | 蓝灯快闪：配对模式 | 青で速く点滅：ペアリングモード | Clignotement rapide en bleu : Mode de couplage | 快速閃爍藍色：配對模式 | 파란색으로 빠르게 깜박임: 페어링 모드

Solid Blue : Connected | Leuchtet blau: Verbunden | Bleu fixe : Connecté | Azul constante: conectado | Blu fisso: Connesso | Azul fixo: ligação estabelecida | أزرق ثابت: متصل | 蓝灯常亮：已连接 | 青で速く点滅：ペアリングモード | Bleu fixe : connecté | 藍色恆亮：已連線 | 파란색으로 켜짐: 연결됨

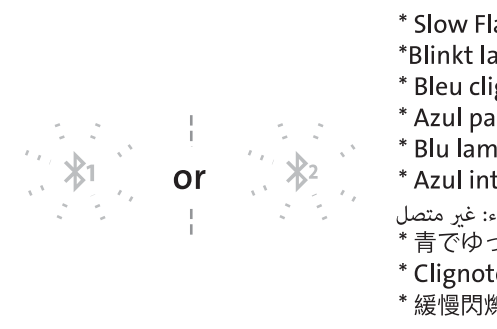

* Slow Flashing Blue: Not connected | *Blinkt langsam blau: Nicht verbunden | * Bleu clignotant lentement : Non connecté | * Azul parpadeante lento: No conectado | * Blu lampeggiante lento: Non connesso | * Azul intermitente lento: Não ligado | أزرق وامض ببطء: غير متصل * | * 蓝灯慢闪：未连接 | * 青でゆっくりと点滅：接続されていません | * Clignotement lent en bleu : non connecté | * 緩慢閃爍藍色：未連線 | * 파란색으로 느리게 깜빡임: 연결되지 않음

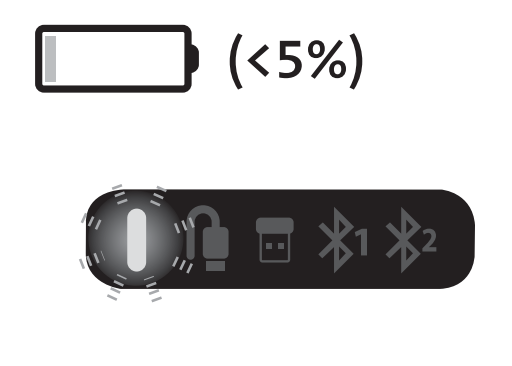

Flashing Red – Low battery | Blinkt rot – Akku schwach | Rouge clignotant – Batterie faible | Rojo parpadeante - Batería baja | Rosso lampeggiante - Batteria scarica | Vermelho intermitente – bateria baixa | أحمر وامض - البطارية منخفضة | 红灯闪烁 — 电量低 | 赤で点滅：バッテリー残量低下 | Rouge clignotant – Batterie faible | 閃爍紅色 — 電池電量低 | 빨간색 깜박임 - 배터리 부족

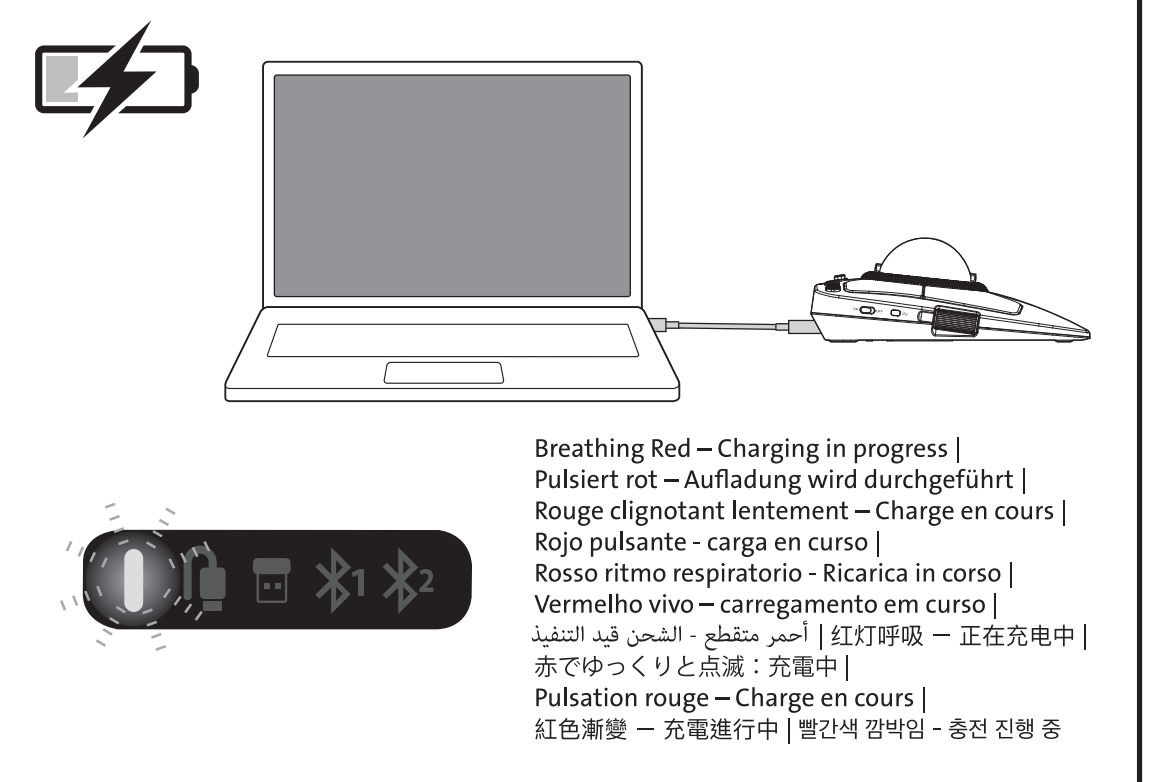

Breathing Red – Charging in progress | Pulsiert rot – Aufladung wird durchgeführt | Rouge clignotant lentement – Charge en cours | Rojo pulsante - carga en curso | Rosso ritmo respiratorio - Ricarica in corso | Vermelho vivo – carregamento em curso | أحمر متقطع - الشحن قيد التنفيذ | 红灯呼吸 — 正在充电中 | 赤でゆっくりと点滅：充電中 | Pulsation rouge – Charge en cours | 紅色漸變 — 充電進行中 | 빨간색 깜박임 - 충전 진행 중

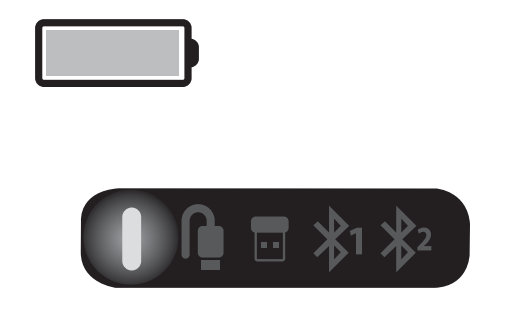

Solid Green – Fully charged | Leuchtet grün – vollständig aufgeladen | Vert fixe – Complètement chargé | Verde constante - Totalmente cargado | Verde fisso - Ricarica completa | Verde fixo – completamente carregado | أخضر ثابت - مشحون بالكامل | 绿灯常亮 — 已充满电 | 緑で点灯：満充電 | Vert fixe – Complètement chargé | 綠色恆亮 — 充滿電 | 녹색으로 켜짐: 충전 완료

③ www.Kensington.com/software/hub

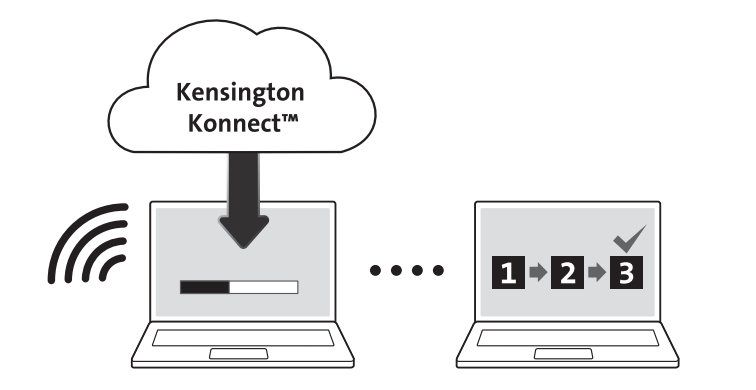

Compatibility | Kompatibilität | Compatibilité | Compatibilidad | Compatibilità | Compatibilidade | التوافق | 兼容性 | 互換性 | Compatibilité | 相容性 | 호환성 :

Windows, macOS

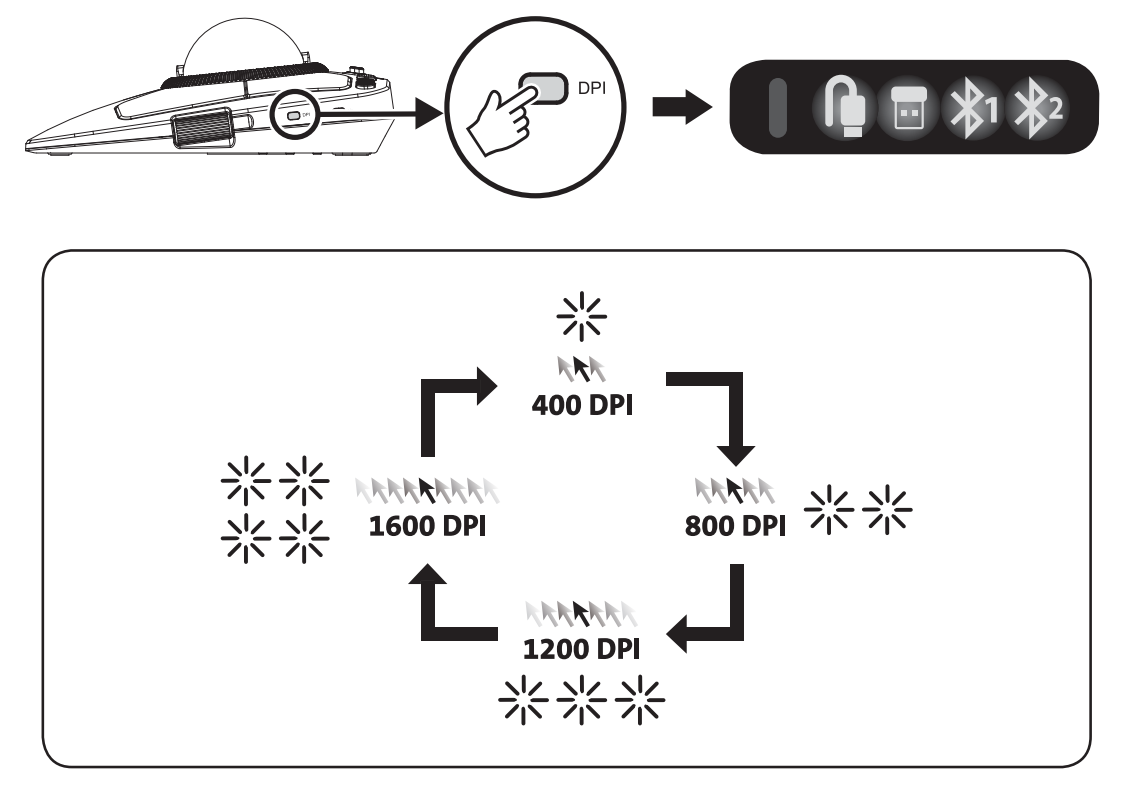

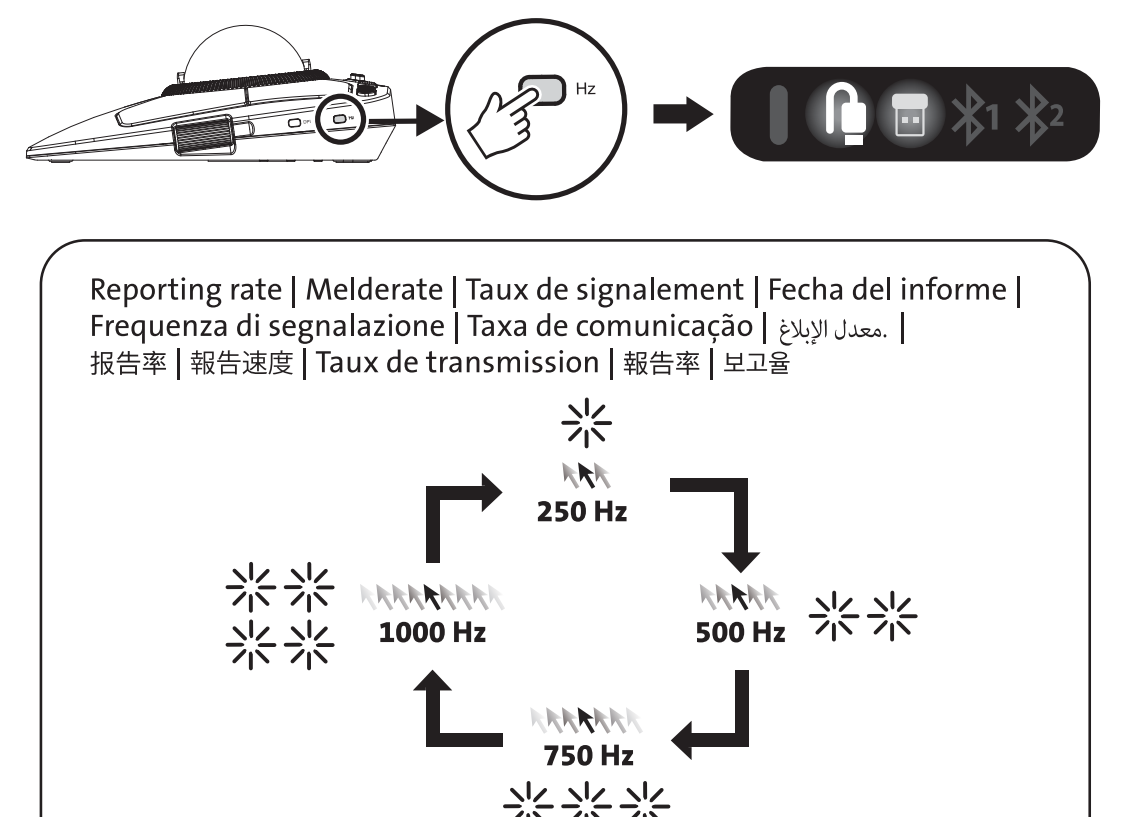

Reporting rate | Melderate | Taux de signalement | Fecha del informe | Frequenza di segnalazione | Taxa de comunicação | معدل الإبلاغ | 报告率 | 報告速度 | Taux de transmission | 報告率 | 보고율

2.4GHz/Wired Mode: Reporting rate can be cycled between 250Hz, 500Hz, 750Hz and 1000Hz. | 2,4-GHz-/Kabelmodus: Die Abfragerate kann zwischen 250Hz, 500Hz, 750Hz und 1000Hz umgeschaltet werden. |Mode Filaire/2,4GHz : La sélection du taux de transmission peut varier entre 250Hz, 500Hz, 750Hz et 1,000Hz. | 2.4GHz/Modo con cable: La velocidad de notificación puede cambiarse entre 250Hz, 500Hz, 750Hz y 1000Hz. | Modalità 2.4GHz/cablata: la frequenza di segnalazione può essere commutata tra 250Hz, 500Hz, 750Hz e 1000Hz. | 2,4GHz/Modo com fios: A taxa de comunicação pode ser alternada entre 250Hz, 500Hz, 750Hz e 1000Hz. | جيجاهرتز/الوضع السلكي: يمكن تبديل معدل الإبلاغ بين 250 هرتز و500 هرتز و750 هرتز و1000 هرتز 2.4 | 2.4GHz/有线模式：报告频率可在 250Hz、500Hz、750Hz 和1000Hz 之间切换。 | 2.4GHz/有線モード：レポート速度を、250Hz、500Hz、750Hz、1000Hz の間で順次切り替えることができます。 | 2,4GHz/Mode filaire : La fréquence des rapports peut varier entre 250Hz, 500Hz, 750Hz et 1,000Hz. | 2.4GHz/有線模式：報告率可以在 250Hz、500Hz、750Hz 和 1000Hz 之間循環。 |2.4GHz/유선 모드: 보고 속도는 250Hz, 500Hz, 750Hz, 1000Hz 사이에서 번갈아 전환할 수 있습니다.

Bluetooth mode has a fixed reporting rate of 133Hz. | Der Bluetooth-Modus hat eine feste Melderate von 133Hz. | Le mode Bluetooth a une fréquence de rapport fixe de 133Hz. | El modo Bluetooth ha fijado una velocidad de informe fija de 133Hz. | La modalità Bluetooth ha una frequenza di segnalazione fissa di 133Hz. | O modo Bluetooth tem uma taxa de transmissão fixa de 133Hz. | يوجد معدل إبلاغ ثابت لوضع البلوتوث يبلغ 133 هرتز. | 蓝牙模式的固定报告频率为 133Hz。 | Bluetooth モードのレポートレートは、133Hz に固定されています。 | Le mode Bluetooth a une fréquence de rapport fixe de 133Hz. | 藍牙模式具有 133Hz 固定報告率。 | 블루투스 모드의 고정 보고율은 133Hz 입니다.

Scroll Ring Mode Switch | Scrollring-Modus-Umschalter | Bague de défilement Changement de mode | Interruptor del modo anillo de desplazamiento | Commutazione modalità cursore di scorrimento | Interruptor do Modo de Anel de Deslocamento | مفتاح وضع حلقة التمرير | 滚动环模式切换 | スクロールリングモードスイッチ | Bague de défilement Changement de mode | 滾動環模式切換 | 스크롤 링 모드 스위치

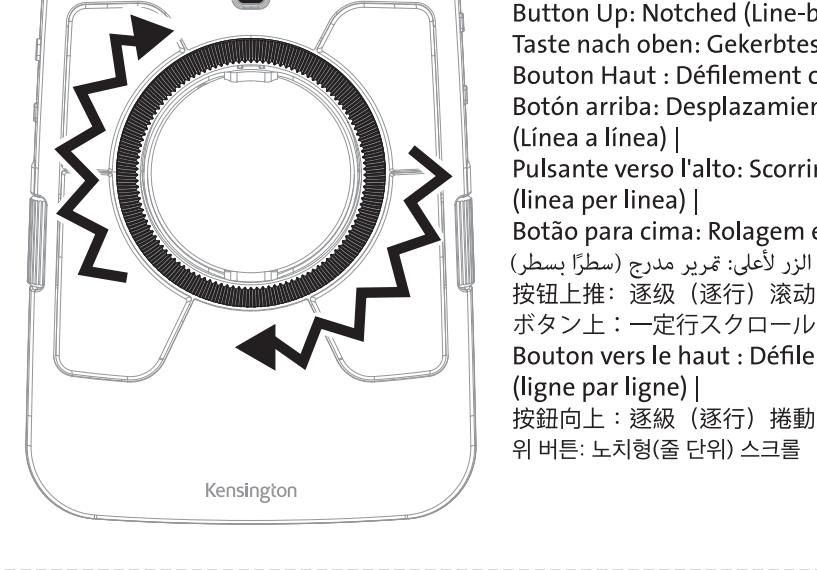

Button Up: Notched (Line-by-Line) Scroll | Taste nach oben: Gekerbtes (Linie für Linie) Scrollen | Bouton Haut : Défilement cranté (ligne par ligne) | Botón arriba: Desplazamiento por muescas (Línea a línea) | Pulsante verso l'alto: Scorrimento con tacche (linea per linea) | Botão para cima: Rolagem entalhada (linha a linha) | الزر لأعلى: تمرير مدرج (سطرًا بسطر) | 按钮上推：逐级（逐行）滚动（有声滚动环） | ボタン上：一定行スクロールモード | Bouton vers le haut : Défilement cranté (ligne par ligne) | 按鈕向上：逐級（逐行）捲動 | 위 버튼: 노치형(줄 단위) 스크롤

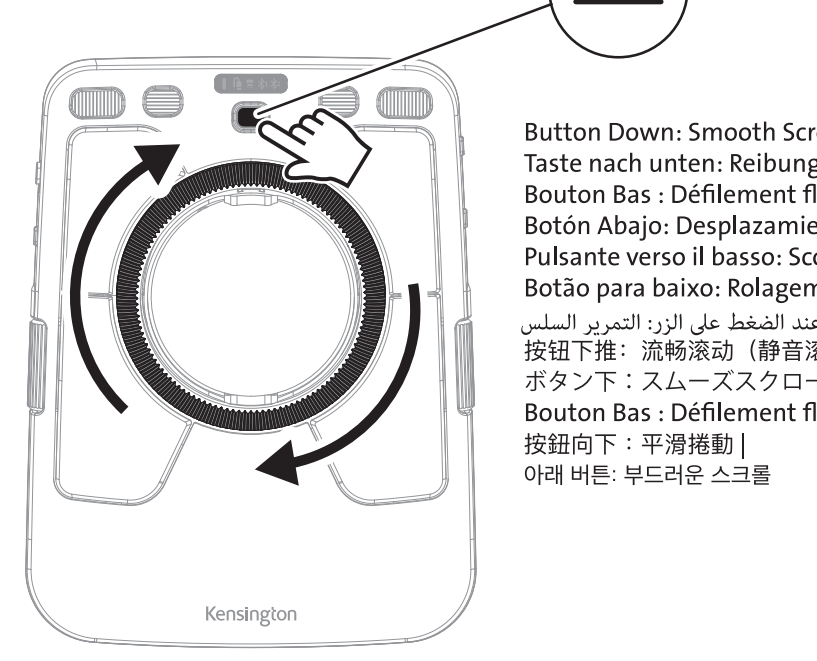

Button Down: Smooth Scroll | Taste nach unten: Reibungsloses Scrollen | Bouton Bas : Défilement fluide | Botón Abajo: Desplazamiento suave | Pulsante verso il basso: Scorrimento fluido | Botão para baixo: Rolagem suave | عند الضغط على الزر: التمرير السلس | 按钮下推：流畅滚动（静音滚动环） | ボタン下：スムーズスクロール | Bouton Bas : Défilement fluide | 按鈕向下：平滑捲動 | 아래 버튼: 부드러운 스크롤

Zoom In & Zoom Out Roller | Vergrößern-/Verkleinern-Rolle | Molette de zoom avant et arrière | Rodillo de acercamiento y alejamiento | Cursore per ingrandimento e rimpicciolimento | Rolo de ampliação e redução de zoom | بكرة التكبير والتصغير | 放大与缩小滚轮 | 拡大/縮小ローラー | Molette de zoom avant/arrière | 放大與縮小滾輪 | 확대/축소 롤러

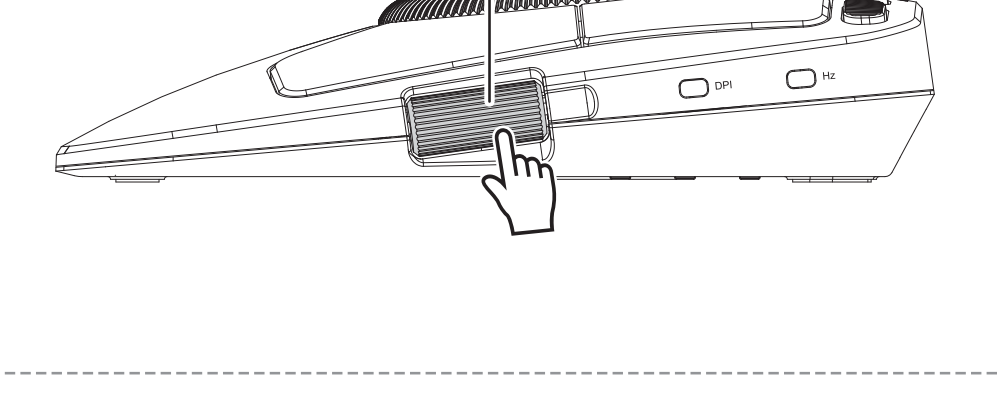

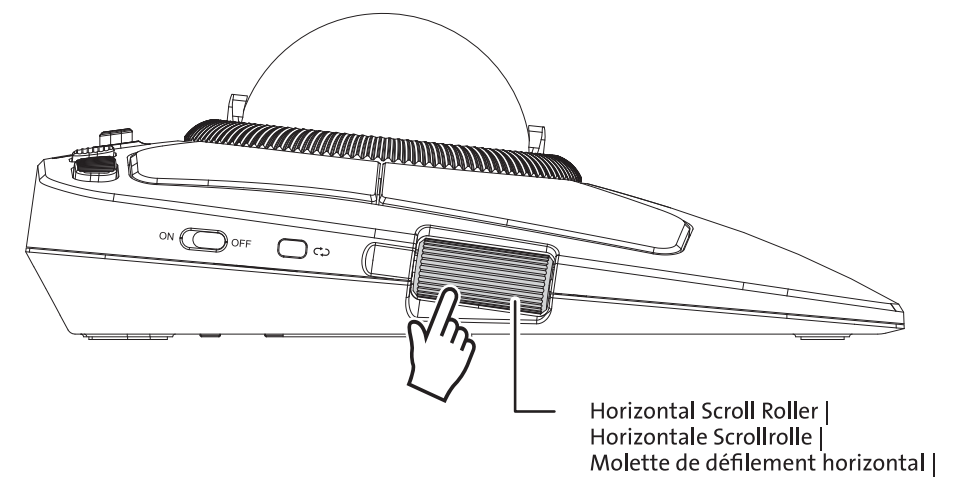

Horizontal Scroll Roller | Horizontale Scrollrolle | Molette de défilement horizontal | Rodillo de desplazamiento horizontal | Rotella di scorrimento orizzontale | Rolo de Deslocamento Horizontal | بكرة التمرير الأفقي | 水平滚动轮 | 水平スクロールローラー | Molette de défilement horizontal | 水平捲動滾輪 | 수평 스크롤 롤러

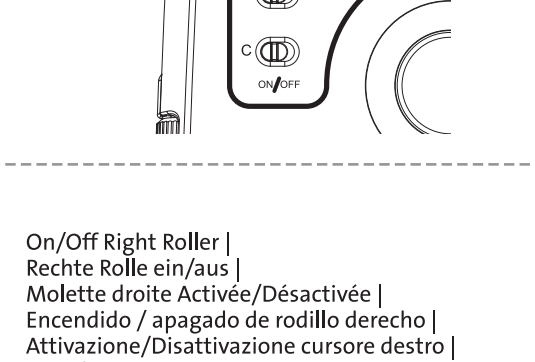

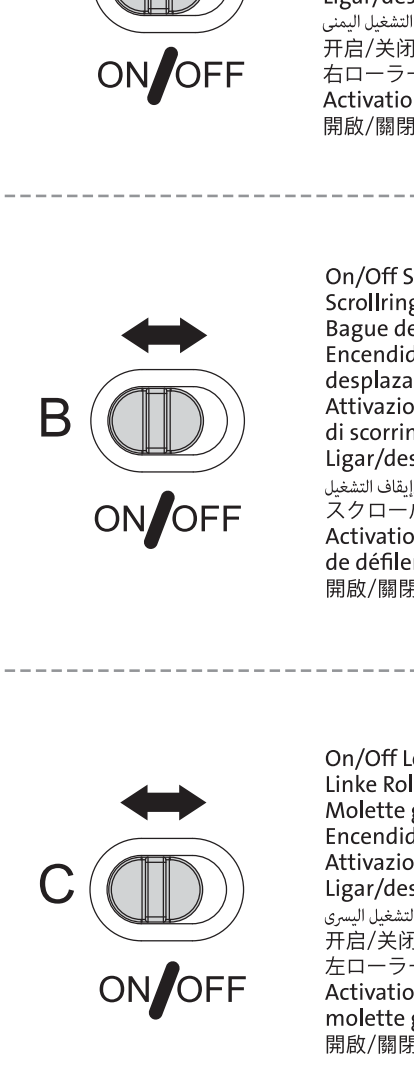

On/Off Right Roller | Rechte Rolle ein/aus | Molette droite Activée/Désactivée | Encendido / apagado de rodillo derecho | Attivazione/Disattivazione cursore destro | Ligar/desligar o rolo direito | بكرة التشغيل/إيقاف التشغيل اليمنى | 开启/关闭右侧滚轮 | 右ローラーのオン/オフ | Activation/désactivation de la molette droite | 開啟/關閉右滾輪 | 오른쪽 롤러 켜기/끄기

On/Off Scroll Ring | Scrollring ein/aus | Bague de défilement Activée/Désactivée | Encendido / apagado de anillo de desplazamiento | Attivazione/Disattivazione cursore di scorrimento | Ligar/desligar anel de deslocamento | حلقة التمرير للتشغيل/إيقاف التشغيل | 开启/关闭滚动环 | スクロールリングのオン/オフ | Activation/désactivation de la bague de défilement | 開啟/關閉滾動環 | 스크롤 링 켜기/끄기

On/Off Left Roller | Linke Rolle ein/aus | Molette gauche Activée/Désactivée | Encendido / apagado de rodillo izquierdo | Attivazione/Disattivazione cursore sinistro | Ligar/desligar o rolo esquerdo | بكرة التشغيل/إيقاف التشغيل اليسرى | 开启/关闭左侧滚轮 | 左ローラーのオン/オフ | Activation/désactivation de la molette gauche | 開啟/關閉左滾輪 | 왼쪽 롤러 켜기/끄기

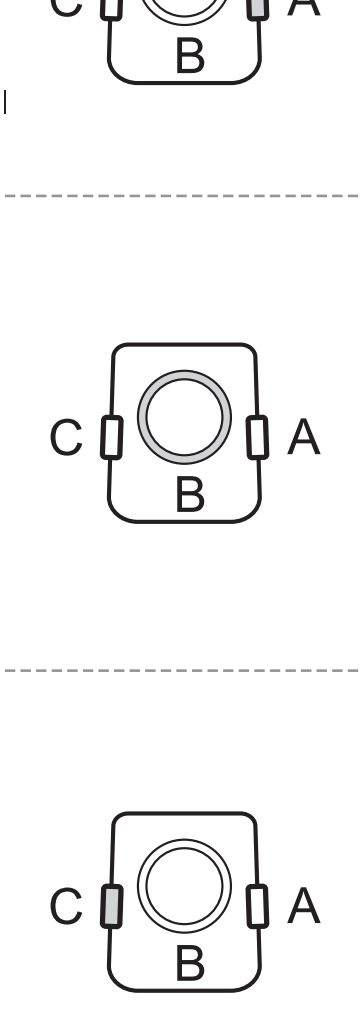



Status LED flashes yellow twice: Clean the ball, socket, or sensor lens | Status-LED blinkt zweimal gelb: Reinigen Sie Kugel, Sockel oder Sensorlinse. | Le voyant d'état clignote deux fois en jaune : Nettoyez la boule, le support ou la lentille du capteur. | El LED de estado parpadea dos veces en amarillo: Limpie la bola, el conector o la lente del sensor. | La spia LED di stato lampeggia due volte in giallo: Pulire la sfera, la porta o la lente del sensore. | O LED de estado pisca amarelo duas vezes: Limpe a esfera, a tomada ou a lente do sensor. | يومض مؤشر الحالة LED باللون الأصفر مرتين: نظّف الكرة، أو التجويف، أو عدسة المستشعر. | 黄色状态 LED 指示灯闪烁两次：请清洁轨迹球、球仓或传感器。 | 状態表示 LED が黄色で2回点滅：ボールまたはソケットまたはセンサーレンズを清掃してください。 | Le voyant d'état clignote deux fois en jaune : Nettoyer la bille, le logement ou la lentille du capteur. | 狀態 LED 閃爍黃色兩下：清潔球珠、球槽或感測器鏡頭。 | 상태 LED 에 노란색 불 두 번 점멸: 볼, 소켓 또는 센서 렌즈를 청소하십시오.

www.kensington.com/support

Kensington® and Expert Mouse ™ are trademarks of ACCO Brands. macOS is a trademark of Apple Inc. registered in the U.S. and other countries. Windows is a registered trademark of Microsoft Corporation in the U.S. and/or other countries. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. USB-C® is a trademark of USB Implementers Forum. All other registered and unregistered trademarks are the property of their respective owners.
© 2025 Kensington Computer Products Group, a division of ACCO Brands.
Patents: https://www.accobrands.com/patents/

Kensington® et Expert Mouse ™ sont des marques commerciales d'ACCO Brands. macOS est une marque déposée d'Apple Inc. aux États-Unis et dans d'autres pays. Windows est une marque déposée de Microsoft Corporation aux États-Unis et/ou dans d'autres pays. La marque verbale et les logos Bluetooth® sont des marques déposées appartenant à Bluetooth SIG, Inc. USB-C® est une marque déposée de l'USB Implementers Forum. Toutes les autres marques déposées et non déposées sont la propriété de leurs propriétaires respectifs.
© 2025 Kensington Computer Products Group, une division d'ACCO Brands.
Brevets : https://www.accobrands.com/patents/

Model number: M01754-T, M01754-D | Numéro de modèle : M01754-T, M01754-D

Energy Verified
Rendement
Énergétique Vérifié

R3D007
RoHS

Complies with
IMDA Standards
DB105685

상호명:ACCO Brands USA LLC
기자재명칭:Expert Mouse™ TB800 EQ Trackball
모델명:M01754-T, M01754-D
제조년월일:레퍼런스제품라벨
제조자및제조국가:ACCO Brands USA LLC/중국
인증번호:R-R-0AC-M01754-T, R-R-0AC-M01754-D

2.5 - 5
W

FSC
www.fsc.org
MIX
Paper | Supporting
responsible forestry
FSC™ C204418

K72456_7_8

901-8361-00

Kensington®

Expert Mouse™ TB800 EQ Trackball
Boule de commande Expert Mouse™ TB800 EQ

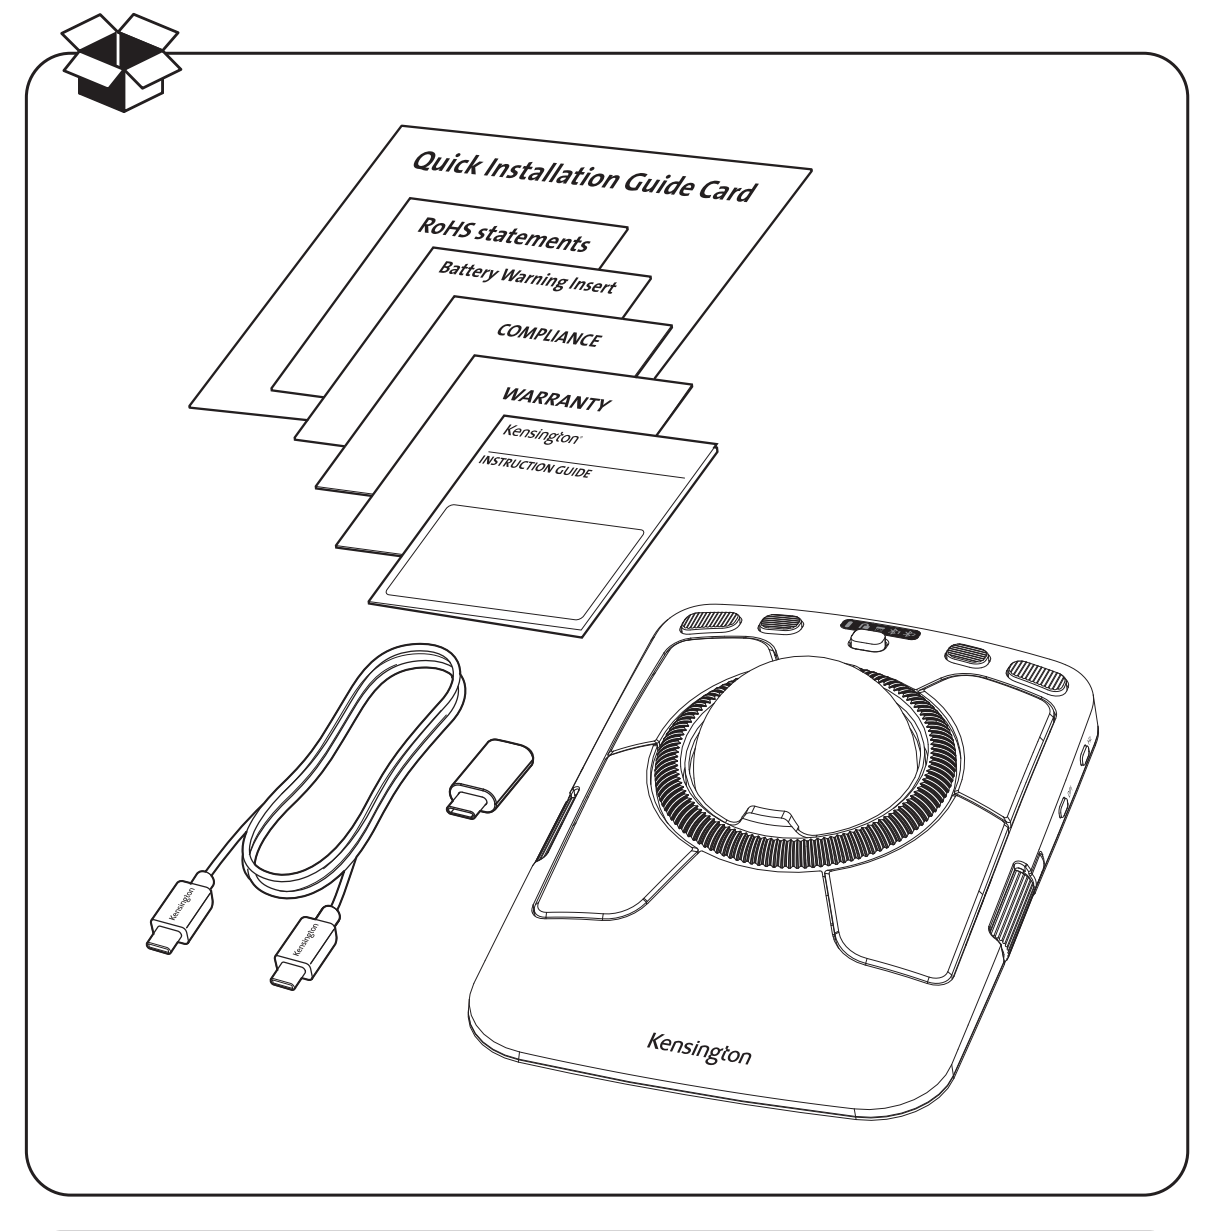

kensington.com/register