


USERMANUAL

Wacomone14

DTC141

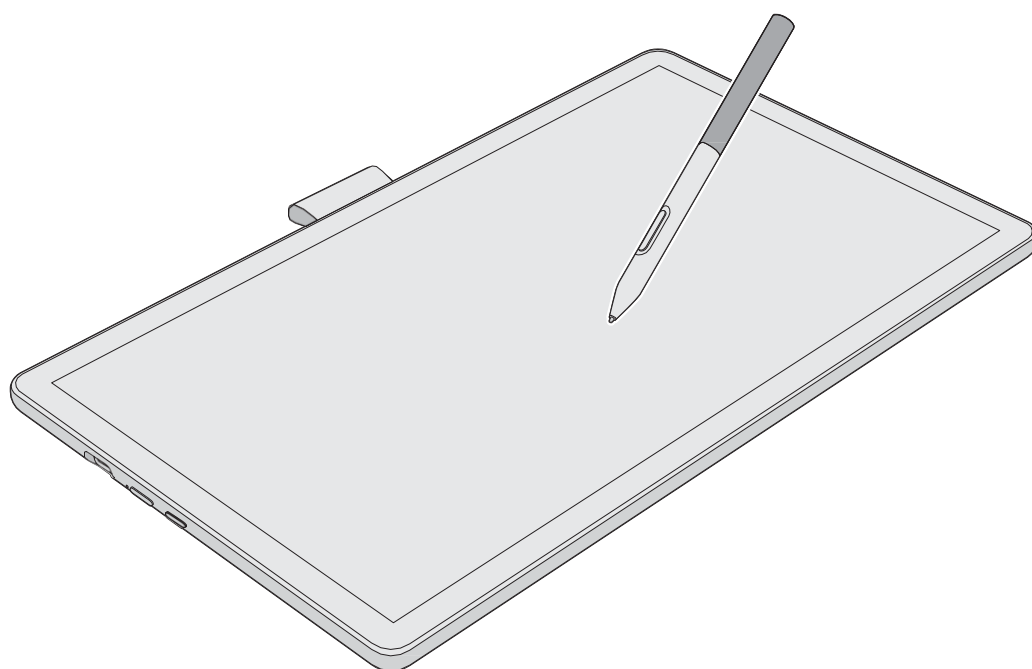

Introduction

About this document

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of Wacom.

The information in this document is subject to change without notice. Wacom makes no representations or warranties with respect to the contents herein, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. Wacom reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Wacom to notify any person of such revisions or changes. Other brand or product names are trademarks of their respective holders.

Conventions

The following subsections describe graphic conventions are used in this manual to denote certain actions or information for clarification purposes. Keep these points in mind to avoid problems with the display or injuries:

**TIP:**

A TIP highlights helpful shortcuts and guidelines for installation, use, maintenance.

**NOTE:**

A NOTE indicates supplementary information or important text for installation, use, maintenance.

**CAUTION:**

A CAUTION alerts that may cause injuries or malfunctions of the device.

**MISE EN GARDE:**

Une MISE EN GARDE avertit d'un risque de blessure ou de dysfonctionnement de l'appareil.

**WARNING:**

A WARNING appears when there are potential risks of serious physical harm or death.

**AVERTISSEMENT:**

Un AVERTISSEMENT apparaît lorsqu'il y a des risques potentiels de dommages graves ou de blessures mortelles.

Table of contents

Introduction	2
Table of contents.....	3
Important Product Information.....	4
Precaution.....	4
Précautions.....	9
Regulatory information	14
Regulatory compliance.....	14
Disposal Information.....	15
Renseignements relatifs à la conformité.....	16
Informations sur l'élimination	17
General information.....	19
Package content.....	19
Unpacking.....	19
Accessories.....	19
Product overview	20
Front view	20
Rear view	21
Setup and installation	22
Connecting the USB-C cable.....	22
Appendix	23
Specifications.....	23
Product appearance	24
Declaration of the Presence Condition of the Restricted Substances	
Marking	25

Important Product Information

Precaution

**WARNING:**

To ensure the safe operation of the product, be sure to follow all instructions, cautions, and warnings found within this document, Wacom support page, and quick start guide (if applicable). Failure to do so could also void your warranty and result in injury to persons or damage to the product.

Wacom will not be liable for and will have no responsibility to you or to any other user in connection with any damage of any kind, including repair or replacement, in the event the product is used or handled contrary to the specifications, conditions, and environmental scope stated in this document, Wacom support page, and quick start guide (if applicable).

If you suspect the product is not working properly, or that it has been damaged by a drop or other cause, be sure to turn off the power, disconnect all cables, and stop using the product immediately. Do not use the product if the display screen or housing breaks, as such use may cause injury.

For details, please see "support" on wacom.com.

For United States

**WARNING:**

Handling the cord on this product will expose you to lead, a chemical known to the State of California to cause cancer, and birth defects or other reproductive harm. Wash hands after handling. For more information go to: www.P65Warnings.ca.gov.

Excluding United States

**WARNING:**

The wires inside the cables contain lead, a chemical known to cause cancer, and birth defects or other reproductive harm. Wash hands after contact.

- Improper setup, use, or care for the product can increase the risk of an accident or injury to persons or property.
- Do not disassemble or modify the product, or attempt to open it or repair it and do not allow any third party other than a Wacom company or a Wacom authorized repairer to do the same. Wacom shall have no responsibility to repair or replace the product if it has been disassembled or modified. Having the product repaired by an unauthorized service provider may affect the safety and functionality of the product.
- Do not insert foreign material into the connector ports of cables or openings of the product. If a metal object or foreign material is inserted into a port or opening of the product, it may cause product malfunction, fire, or electrical shock.

- Do not use the product with any part of the product's ground contact area protruding from the desk or table. Using the product in this manner may cause the product to fall and cause serious injury and damage. Please make sure the product's ground contact area is completely inside the desk or table.
- Touching the product (Display area and other areas) or the power adapter with the same area of your body for extended periods of time may cause low temperature burns to your body. Avoid touching the product or the power adapter with the same part of your body for extended periods of time.
People with sensitive skin, poor blood flow (vascular disease, poor blood circulation, diabetes) or poor cutaneous sensations should use special care.
- Repetitive activities such as using the pen, swiping the screen, or using the touch pad may cause discomfort in your hands, arms, wrists, shoulders, neck or other areas. If you experience such discomfort, please stop using the product and consult your physician or medical provider.
- The product may contain magnets, in addition to components or radio devices that emit electromagnetic fields, which have the potential to interfere with medical devices. If you have reason to believe that the product is interfering or may interfere with your medical device, cease using the product and consult your physician and/or medical device manufacturer.
- Prevent children from playing with or having access to any packing materials or wrapping for the product or any small product accessories, as a choking or suffocation hazard may exist.
- Before cleaning the product, always switch off the power supply and disconnect all cables from the product.
- For thorough cleaning, do not use anything other than a neutral detergent or a designated organic solvent, which may damage the enclosure of this unit. Please note that such damage is not covered by the manufacturer's warranty.
To clean the housing of this unit, use a soft cloth and lightly moisten it with water or alcohol with a concentration of 70 to 75%. For more information, see "Support" on wacom.com.
- To clean the display screen, use an anti-static cloth, apply only a light amount of pressure to the display screen and do not cause the surface of the display screen to become wet.
- When you pick up the product, hold the product with both hands.
- Do not apply excessive pressure or stress to the sensitive parts of the product. Sensitive parts include, without limitation, the pen tip, buttons, and switches. This may cause those parts to become inoperable or malfunction or reduce the product life span.
- Avoid intensive shock or vibration to the product and accessories. Hitting or dropping the product may result in damage to the product.
- Do not place heavy objects on the product, or apply immoderate pressure or force. Doing so may cause damage or malfunction to the product's moving parts.
- Damage to the product due to negligence, misuse or accident (such as by dropping the product), will not be covered by the manufacturer's warranty.
- Do not expose the product to water or other liquids. Exposing the product to water or other liquids may result in malfunction or electric shock. In the event of liquid spilled

on the product, stop using it, switch off the power supply, and contact your distributor or the Wacom Customer Support Center.

- Do not use the product with non-compatible devices. Doing so may cause damage or injury.
- To ensure optimal performance of the product and to prevent damage, please only use the pens and nibs provided or recommended for use with the product.
Wacom will not be liable for and will have no responsibility to you or to any other user in connection with any damage or failures in performance caused by the use of pens or pen nibs not provided or recommended by Wacom.
- The paint on the product can wear off and can leave marks, depending on usage. Use care when brushing up against the product or placing the product on vulnerable surfaces.
- Be sure to dispose of the product properly and to manage the disposal in accordance with your local ordinances and laws. You are solely responsible for disposing of the product in a safe and lawful manner.
- Do not scratch the operating surface. Avoid placing sharp objects other than pens on the operating surface.
- Disconnect the power plug from the AC outlet and refrain from using the product during thunder or electrical storms. Using the product during thunder or electrical storms may cause product malfunction, fire, or electrical shock.
- Do not use the product or the power adapter in wet locations, such as near a shower, a bath, or a sink.
- Do not use the product near the humidifier or in direct contact with the air flow from the humidifier. Mineral contained in water vapor may cause white powder or marks to adhere to the surface or inside of the product.
- The product is solely for use in normal office environments, including use as a center console in a climate-controlled environment.
The product was not designed or tested for, and is not intended for use in, medical or military applications. Do not use the product in areas with a potentially explosive atmosphere (such as areas with flammable chemicals, vapors, or substances), or areas having high concentrations of industrial chemicals, as they may cause damage to the product or impair its functionality.
- Do not use the product in a facility control system that requires extremely high reliability. The product may cause other electronic equipment or devices to malfunction or degrade their performance.
- Switch off the power supply of the product in locations or environments where electronic devices are not allowed.
- Do not use the product in situations that may distract you or cause a dangerous condition or situation, including while driving a car or other motor vehicle, riding a bicycle, etc.
- When other tablets or devices are placed near the product, the operation of those tablets or devices may be affected and may cause the product to malfunction. In such a case, please move the other tablets or devices away from the product, or switch off the power supply for the product. Wacom will not be liable for and will have no responsibility to you or any other user for damages caused to the product or such other

devices in connection with any such interference.

- Do not place the product in unsteady or unstable places such as wobbly, slanted, or wet surfaces. Physical damage or personal injury may result if the product falls from an unsteady or unstable surface.
- Do not sit on, or hang from, the table or other surface where the product is placed. The product may fall and cause physical damage to the product or personal injury. Take extra care where children are present.
- Move the product periodically to another place on your work surface to avoid permanently discoloring or altering the appearance of the surface.
- Protect the health of your eyes when using the product:
 - Only use the product in a well-lit room and always view the display from a suitable distance.
 - Take regular breaks when using the product for extended periods of time.
- Do not place metallic objects on top of the device and do not use it on top of metallic tables, etc. Keep the device away from magnets and magnetic fields. Failure to comply with this restriction may result in interference, malfunction, or damage to the product.
- Do not use or store the product in the following environments:
 - Significant temperature-changing environments
 - Environments that exceed the specified temperature and humidity range (e.g. outdoors or in vehicles)
 - Dusty environment
 - Near fire.
- The following conditions are characteristics of display panel and do not indicate damage or malfunction to the product.
 - Screen unevenness: Depending on the displayed contents, brightness may appear uneven.
 - Pixel defect: A small number of pixels may appear constantly lit or unlit.
 - Striped patterns: When displaying objects with fine patterns, you may see flickering or striped patterns.
 - Residual image: After displaying the same still image for an extended period of time, a residual image may be produced.
 - Backlight: Change to the condition of the backlight over the period of using the display will gradually affect the condition of the display.
 - Viewing angle: Colors and hues may appear to change depending on the view angle of the product.
 - Image Sticking: Displaying the same pattern or an image that does not change in the same position on the screen for a long time may cause image sticking.
 - Light leakage/bleeding: Some screens may have an acceptable range of light leakage from the backlight to the edges or corners of the display screen in dark environment. It does not affect normal use.
- Do not push down forcibly with the pen on the display screen. Pushing down forcibly on the display screen may cause some patterns to temporarily appear on the display screen.
- For information on using optional nibs (felt nib, elastomernib, rubber nib and so on)

other than the bundled nibs, please see "Support" on Wacom.com.

- If the display screen has been damaged, **DONOT** touch any liquid that may be leaking from it. In case of contact with skin, eyes, or mouth, rinse immediately with running water for at least 15 minutes and consult a physician.
- The product serves as and can be used solely as a passive display and input device.
- This product is not waterproof nor is it explosion-proof.
- The writing and drawing experience on your device may vary depending on your applications.
- Do not connect an inappropriate computer or graphics card which does not satisfy the supported video signal interface, as it may damage the product.
- Only use the cable that are provided with the product or comply with the specified specifications and standards. If a different type of cable is used, the product will not work properly or may be damaged. Use of a different cable will void your warranty.
- Do not damage, forcibly bend, or bundle the cables for the product. Do not place heavy objects on the cable or expose them to excessive heat, as this may cause fire, electrical shock, or product failure. If a cable has been damaged, stop using it and please contact a nearby store or contact Wacom Support Center.
- When moving the product, ensure that all cables are **NOT** connected to anything. Tripping over loose cables can cause physical damage to the product or personal injury.
- Prevent children from swallowing the pen, pen nib, etc. Small parts may accidentally be pulled out if children are biting on them.
- Do not use a distorted or bent pen nib with the pen; a pen in this condition may cause the pen to operate improperly and scratch the drawing surface.
- Do not strike hard objects with the pen. Doing so may cause damage to the pen.
- When the pen tilts more than 45 degrees from vertical position, the pen may not be recognized properly.
- Pen nibs wear. Worn pen nibs or pen tips may cause damage by scratching the drawing surface. Please replace the pen nib regularly.
- Do not store the pen so that the pen tip or buttons are continually depressed.

Précautions



AVERTISSEMENT:

Pour garantir une utilisation sûre du produit, respectez l'ensemble des instructions, des précautions et des avertissements contenus dans ce document, la page d'assistance de Wacom et le guide de démarrage rapide (le cas échéant). Le non-respect de cette consigne peut également invalider votre garantie et provoquer des blessures corporelles ou des dommages sur le produit.

Wacom décline toute responsabilité vis-à-vis de vous ou de tout autre utilisateur, en relation avec tout dommage de quel type que ce soit, y compris lors de la réparation ou du remplacement, dans le cas où le produit est utilisé ou manipulé contrairement aux spécifications, aux conditions et aux caractéristiques environnementales indiquées dans ce document, sur la page d'assistance de Wacom et dans le guide de démarrage rapide (le cas échéant).

Si vous pensez que le produit ne fonctionne pas correctement, ou a été endommagé par une chute ou toute autre cause, coupez l'alimentation, débranchez tous les câbles et arrêtez de l'utiliser immédiatement. N'utilisez pas le produit si son écran ou son boîtier est fissuré, car cela peut entraîner des blessures.

Pour plus de détails, consultez la page «Support» sur le site wacom.com.

Pour les États-Unis



AVERTISSEMENT:

La manipulation du cordon de ce produit vous exposera au plomb, un produit chimique connu dans l'État de Californie comme cancérigène et tératogène, pouvant être nocif à la reproduction. Lavez-vous les mains après manipulation. Consultez le site www.P65Warnings.ca.gov pour plus d'informations.

Hors États-Unis



AVERTISSEMENT:

Les fils à l'intérieur des câbles contiennent du plomb, un produit chimique connu pour provoquer des cancers, des malformations congénitales ou d'autres troubles de la reproduction. Lavez-vous les mains après contact.

- Une installation, utilisation ou maintenance incorrecte de ce produit peut accroître le risque d'accident ou de dommages corporels ou matériels.
- Ne démontez pas et ne modifiez pas le produit, n'essayez pas de l'ouvrir ou de le réparer, et ne permettez pas à un tiers autre qu'une société de Wacom ou un réparateur agréé par Wacom de le faire. Wacom n'est en aucun cas tenu de réparer ou de remplacer le produit s'il a été démonté ou modifié. Si vous faites réparer le produit par un prestataire de services non autorisé, cela peut affecter la sécurité et les fonctions du produit.
- N'insérez pas de corps étranger dans les ports de connexion des câbles ou dans toute autre ouverture du produit. Si un objet métallique ou un corps étranger est inséré dans un port ou une autre ouverture du produit, il peut provoquer un dysfonctionnement du

produit, un incendie ou une décharge électrique.

- N'utilisez pas le produit avec une partie de la zone de contact au sol qui dépasse du bureau ou de la table. L'utilisation du produit de cette manière peut entraîner la chute du produit et causer des blessures et des dommages graves. Veillez à ce que la zone de contact au sol du produit soit complètement à l'intérieur du bureau ou de la table.
- Le fait de toucher le produit (zone d'affichage et autres zones) ou l'adaptateur secteur avec la même zone de votre corps pendant des périodes prolongées peut provoquer des brûlures à basse température sur votre corps. Évitez de toucher le produit ou l'adaptateur secteur avec la même partie de votre corps pendant une période prolongée. Les personnes ayant une peau sensible, une mauvaise circulation sanguine (maladie vasculaire, mauvaise circulation sanguine, diabète) ou une mauvaise sensation cutanée doivent faire preuve d'une attention particulière.
- Les activités répétitives telles que l'utilisation du stylet, le balayage de l'écran ou l'utilisation du pavé tactile peuvent provoquer une gêne dans vos mains, bras, poignets, épaules, cou ou autres zones. Si vous ressentez une telle gêne, veuillez cesser d'utiliser le produit et consulter votre médecin ou votre prestataire de soins.
- Le produit peut contenir des aimants, en plus de composants ou de dispositifs radio émettant des champs électromagnétiques, qui ont le potentiel d'interférer avec les dispositifs médicaux. Si vous avez des raisons de croire que le produit interfère ou peut interférer avec votre dispositif médical, cessez d'utiliser le produit et consultez votre médecin et/ou le fabricant du dispositif médical.
- Veillez à ce que les enfants ne jouent pas avec l'emballage ou avec les petits accessoires du produit, et n'y aient pas accès, à risque qu'il s'étouffent ou suffoquent.
- Avant l'entretien du produit, veillez à toujours débrancher l'alimentation et déconnecter tous les câbles du produit.
- Pour un nettoyage approfondi, n'utilisez pas de produit autre qu'un détergent neutre ou un solvant désigné bio, à risque d'abîmer le boîtier de cette unité. Veuillez noter que ce type de dommage n'est pas couvert par la garantie du fabricant.
Pour nettoyer le boîtier de cet appareil, utilisez un chiffon doux légèrement humidifié avec de l'eau ou de l'alcool de concentration 70 à 75 %. Pour plus d'informations, consultez la page « Support » sur le site wacom.com.
- Pour nettoyer l'écran, utilisez un chiffon antistatique, n'exercez qu'une pression légère sur l'écran et n'humidifiez pas la surface de l'écran.
- Lorsque vous soulevez le produit, tenez-le avec les deux mains.
- N'appliquez pas de pression ou de contrainte trop forte sur les parties sensibles du produit. Les parties sensibles comprennent, entre autres, la pointe du stylet, les boutons et les interrupteurs. Cela peut rendre ces pièces inopérantes, provoquer des dysfonctionnements ou réduire la durée de vie du produit.
- Évitez de soumettre le produit et ses accessoires à des chocs ou vibrations violents. Si vous heurtez ou laissez tomber le produit, vous risquez de l'endommager.
- Ne placez aucun objet lourd sur le produit et ne le soumettez pas à une pression ou une force importante. Cela pourrait provoquer des dommages ou un dysfonctionnement des pièces mobiles du produit.
- Les dommages causés au produit résultant d'une négligence, d'une utilisation incorrecte ou d'un accident (chute du produit par exemple) ne seront pas couverts par la garantie

du fabricant.

- Veuillez à ne pas exposer le produit à l'eau ou à tout autre liquide. L'exposition du produit à l'eau ou à tout autre liquide peut provoquer des dysfonctionnements ou des chocs électriques. En cas de déversement d'un liquide sur le produit, arrêtez de l'utiliser, débranchez l'alimentation et contactez votre distributeur ou le centre de relation clientèle Wacom.
- N'utilisez pas le produit avec des appareils non compatibles. Cela pourrait provoquer des dommages ou des blessures.
- Pour garantir des performances optimales du produit et éviter tout dommage, veuillez utiliser uniquement les styles et pointes fournis ou recommandés pour être utilisés avec le produit.
Wacom décline toute responsabilité et n'aura aucune responsabilité envers vous ou tout autre utilisateur en ce qui concerne tout dommage ou défaut de performance causé par l'utilisation de styles ou de pointes de stylet non fournis ou recommandés par Wacom.
- La peinture recouvrant le produit peut laisser des traces ou s'éteindre en fonction de l'utilisation qui en est faite. Soyez prudent en cas de contact avec le produit où il est placé sur une surface vulnérable.
- Veuillez à mettre ce produit au rebut conformément aux lois et réglementations locales. L'élimination du produit dans le respect de la sécurité et de la légalité relève de votre seule responsabilité.
- Ne rayez pas la surface de travail. Évitez de déplacer des objets pointus ou d'autres styles sur la surface de travail.
- Débranchez la prise de courant de la prise secteur et n'utilisez pas le produit pendant un orage. L'utilisation du produit lors d'un orage peut provoquer un dysfonctionnement du produit, un incendie ou une décharge électrique.
- N'utilisez pas le produit ou l'adaptateur secteur dans des endroits humides, comme près d'une douche, d'une baignoire ou d'un évier.
- N'utilisez pas le produit à proximité d'un humidificateur ou en contact direct avec l'air provenant d'un humidificateur. Les minéraux contenus dans la vapeur d'eau peuvent provoquer l'adhésion de poudre blanche ou de marques à la surface ou à l'intérieur du produit.
- Le produit a été conçu uniquement pour une utilisation dans un environnement de bureau normal, y compris l'utilisation en tant que console centrale dans un environnement climatisé.
Le produit n'a pas été conçu ou testé pour, et n'est pas destiné à être utilisé dans des applications médicales ou militaires. N'utilisez pas le produit dans des zones à l'atmosphère potentiellement explosive (telles que des zones contenant des produits chimiques, des vapeurs ou des substances inflammables), ou dans des zones à forte concentration de produits chimiques industriels, car cela pourrait endommager le produit ou nuire à son fonctionnement.
- N'utilisez pas ce produit à proximité d'un système de commande nécessitant une fiabilité extrêmement élevée. Le produit peut provoquer un dysfonctionnement ou une dégradation des performances d'autres équipements ou appareils électroniques.
- Débranchez l'alimentation du produit dans les endroits ou environnements où les périphériques électroniques ne sont pas autorisés.

- N'utilisez pas le produit dans des situations susceptibles de vous distraire ou de provoquer une condition ou une situation dangereuse, notamment lorsque vous conduisez une voiture ou un autre véhicule à moteur, lorsque vous faites du vélo, etc.
- Si d'autres tablettes à stylet ou appareils sont placés à proximité du produit, ils risquent de mal fonctionner ou d'entraîner un dysfonctionnement du produit. Dans ce cas, veuillez éloigner du produit les autres tablettes ou appareils. Vous pouvez également débrancher l'alimentation du produit. Wacom décline toute responsabilité, vis-à-vis de vous ou de tout autre utilisateur, pour les dommages causés au produit ou à d'autres appareils en rapport avec une telle interférence.
- Ne placez pas le produit sur une surface instable, inclinée, bancale ou humide. Des dommages physiques ou des blessures corporelles peuvent survenir si le produit tombe d'une surface instable.
- Ne vous asseyez pas sur la table ou sur la surface où le produit est installé et n'y prenez pas appui. Le produit risquerait de vous blesser ou de s'abîmer en tombant. En présence d'enfants, redoublez de vigilance.
- Déplacez régulièrement le produit à un autre endroit de votre surface de travail pour éviter de décolorer ou de modifier de façon permanente l'aspect de la surface.
- Protégez vos yeux lors de l'utilisation du produit:
 - N'utilisez le produit que dans une pièce bien éclairée et regardez toujours l'écran depuis une distance convenable.
 - Faites régulièrement des pauses lorsque vous utilisez le produit de manière prolongée.
- Ne posez pas d'objets métalliques sur l'appareil et n'utilisez pas sur une table à surface métallique, etc. Tenez l'appareil à l'écart des aimants et des champs magnétiques. Le non-respect de cette restriction peut entraîner des interférences, des dysfonctionnements ou des dommages au produit.
- N'utilisez pas ou n'entrez pas le produit dans les types d'environnements suivants:
 - Environnement à température fortement variable
 - Environnement dont la température et l'humidité dépasse les plages spécifiées (p.ex. en plein air ou dans un véhicule)
 - Environnement poussiéreux
 - À proximité d'un feu.
- Les phénomènes suivants sont caractéristiques du panneau d'affichage et n'indiquent pas de dommage ou de dysfonctionnement du produit.
 - Disparité de l'écran : En fonction du contenu affiché, la luminosité peut paraître inégale.
 - Défaut de pixel: Un petit nombre de pixels peuvent avoir l'air d'être constamment allumés ou éteints.
 - Motifs rayés: Lors de l'affichage d'objets à motifs délicats, vous pouvez apercevoir des scintillements ou des rayures.
 - Image résiduelle: Après affichage de la même image fixe pendant une période prolongée, une image résiduelle peut apparaître.
 - Rétroéclairage: Les modifications de l'état du rétroéclairage au cours de la période d'utilisation de l'écran affectent progressivement l'état de l'écran.

- Angle de vision: En fonction de l'angle d'observation du produit, les couleurs et les teintes peuvent apparaître changées.
- Collage d'image : L'affichage du même motif ou d'une image qui ne change pas dans la même position sur l'écran pendant une période prolongée peut entraîner un collage de l'image.
- Fuite de lumière/saignée: Certains écrans peuvent présenter des fuites de lumière acceptables du rétroéclairage vers les bords ou les coins de l'écran dans un environnement sombre. Il n'y a pas d'effet sur l'utilisation normale de l'appareil.
- N'appuyez pas fortement avec le stylet sur l'écran. Le fait d'exercer une forte pression sur l'écran peut provoquer l'apparition temporaire de motifs.
- Pour plus d'informations sur l'utilisation des pointes en option (pointe feutre, pointe élastomère, pointe caoutchouc, etc.) autres que les pointes fournies, consultez la page « Support » sur le site Wacom.com.
- Si l'écran a été endommagé, **NE TOUCHEZ PAS** le liquide qui pourrait s'en échapper. En cas de contact avec la peau, les yeux ou la bouche, rincez immédiatement avec de l'eau sous le robinet pendant au moins 15 minutes et consultez un médecin.
- Le produit s'utilise exclusivement en tant qu'écran passif et périphérique de saisie.
- Ce produit n'est ni étanche ni anti-déflagrant.
- L'expérience d'écriture et de dessin sur votre périphérique peut varier selon l'application.
- Pour ne pas endommager le produit, veuillez à toujours connecter un cartegraphique ou un ordinateur adaptés à l'interface de signal vidéo prise en charge.
- N'utilisez que les câbles fournis avec le produit ou conformes aux spécifications et aux normes. Si un autre type de câble est utilisé, le produit ne peut pas fonctionner correctement ou risquer d'être endommagé. Utiliser un autre câble vous fait perdre votre droit à la garantie.
- Veillez à ne pas endommager, plier ou grouper les câbles pour le produit. Veillez à ne pas placer d'objet lourd sur le câble ou l'exposer à une chaleur excessive, cela pourrait entraîner un incendie, une décharge électrique ou une défaillance du produit. Si un câble est endommagé, cessez de l'utiliser et contactez un magasin à proximité ou l'Assistance Wacom.
- Assurez-vous que tous les câbles sont débranchés avant de bouger le produit. Vous risquez de vous blesser ou d'endommager le produit en trébuchant sur des câbles mal rangés.
- Veillez à ce que les enfants n'avalent pas le stylet, la pointe de stylet, etc. Les petits éléments risquent de se détacher accidentellement si un enfant les mord.
- N'utilisez pas une pointe de stylet déformée ou tordue, car le stylet risquerait de ne pas fonctionner correctement et de rayer la surface de dessin.
- Ne cognez pas le stylet contre des objets rigides. Vous risqueriez d'endommager le stylet.
- Le stylet risquerait de ne pas être détecté correctement s'il est tenu à plus de 45 degrés de la verticale.
- Utilisez des pointes de stylet. Les pointes de stylet usées risquent de rayer la surface de dessin. Veillez à remplacer la pointe du stylet régulièrement.
- Ne stockez pas le stylet de façon à ce que la pointe ou le touché soient continuellement enfoncés.

Regulatory information

Regulatory compliance

For FCC (USA)

Notice to Users in the United States: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For IC (Canada)

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development

Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil contient des émetteurs/récepteurs exempts de licence qui sont conformes aux normes CNR exemptes de licence d'Innovation, Sciences et Développement économique Canada. Son fonctionnement est assujéti aux deux conditions suivantes :

- (1) Cet appareil ne doit pas causer d'interférences.
- (2) Cet appareil doit accepter toute interférence, y compris celles qui peuvent entraîner un fonctionnement indésirable de l'appareil.

ISED Radio Frequency Exposure Statement:

This equipment complies with ISED exposure limits set forth for an uncontrolled environment. This equipment can be used in portable exposure conditions.

ISED Déclaration d'exposition aux radiofréquences:

Cet équipement est conforme aux limites d'exposition ISDE établies pour un environnement non contrôlé. Cet équipement peut être utilisé dans des conditions d'exposition portables.

For CE (EU)

The device complies with the EMC Directive 2014/30/EU

For BSMI (Taiwan)

Class BCNS15936

For Ukrsepro (Ukraine)**For CCC (China)**

GB4943.1-2022, GB17625.1-2022, GB9254.1-2021

For EAC (Russia)

CUTR004-2011

For EAC (Kazakhstan) For**NOM (Mexico)**

NOM-019-SCFI-1998

For NRCS (South Africa)

SANS IEC 60950-1

For ISC (Cambodia)**For BIS (India)**

IS13252(Part-1):2010amd2

For VCCI Class B (Japan)

VCCI CISPR32:2016(Register by Wacom)

For KC Class B (Korea)

KSC9832:2023&KSC9835:2019

For KC (RF) (Korea)

KSX3124:2020+KSX3125:2020

KSX3123:2022

For RCM (AS/NZS)

AS/NZS CISPR32:2015+AMD1:2020

For UKCA (England)

Base on CE report to DoC

For SABS (South Africa)

SANS2332:2017 Class B/SANS2335:2018

SANS 61000-3-2:2009 SANS 61000-3-3:2009

Disposal Information

Waste Electrical and Electronic Equipment



This symbol on the product indicates that, under the European Directive 2012/19/EU governing waste from electrical and electronic equipment, this product must not be disposed of with other municipal waste. Please dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

For more information about recycling of this product, please contact your local city office or your municipal waste disposal service.

Renseignements relatifs à la conformité

Pour la FCC (États-Unis)

Cet appareil fait l'objet d'essais qui ont déterminé qu'il respectait les limites d'un appareil de classe B selon la partie 15 des règlements de la FCC. Ces limites ont été établies pour assurer une protection raisonnable contre les parasites nuisant à une installation résidentielle. Cet appareil génère, utilise et peut émettre des ondes radioélectriques, et lorsqu'il n'est pas installé et utilisé selon les instructions, peut causer des parasites nuisant aux communications radio. Il n'y a toutefois aucune garantie qu'il n'y aura pas de parasites dans une installation en particulier. Si cet appareil cause des parasites à la réception d'ondes radio ou de télévision, ce qui peut être déterminé en l'éteignant et en l'allumant, l'utilisateur est invité à essayer de corriger le problème des parasites par l'une ou l'autre des mesures suivantes:

- Réorienter ou déplacer l'antenne de réception.
- Augmenter la distance entre l'appareil et la réception.
- Brancher l'appareil dans une prise sur un autre circuit que celui où le récepteur est branché.
- Consulter le distributeur ou un technicien radio ou TV expérimenté pour des conseils.

L'appareil respecte la partie 15 des règlements de la FCC. Le fonctionnement doit respecter les deux conditions suivantes:

- (1) cet appareil ne doit pas causer de parasites et
- (2) cet appareil doit accepter tous les parasites reçus, notamment ceux pouvant causer un fonctionnement non voulu.

Pour l'Industrie Canada

Norme canadienne NMB-003(B)

Pour la CE (UE)

L'appareil respecte la directive 2014/30/UE

Pour BSMI (Taïwan)

Classe BCNS15936

Pour Ukrsepro (Ukraine) Pour

CCC (Chine)

GB 4943.1-2022, GB17625.1-2022, GB9254.1-2021

Pour EAC (Russie)

CUTR004-2011

Pour EAC (Kazakhstan)

Pour NOM (Mexique)

NOM-019-SCFI-1998

Pour NRCS (Afrique du Sud)

SANS IEC 60950-1

Pour ISC (Cambodge)**Pour BIS (Inde)**

IS 13252 (Partie-1):2010 amd 2

Pour VCCI Classe B (Japon)

VCCI C ISPR 32:2016 (Enregistré par Wacom)

Pour KC Classe B (Corée)

KSC 9832:2023 & KSC 9835:2019

Pour KC (RF) (Corée)

KSX 3124:2020 + KSX 3125:2020

KSX 3123:2022

Pour RCM (AS/NZS)

AS/NZS C ISPR 32:2015 + AMD 1:2020

Pour UKCA (Angleterre)

Basé sur le rapport CE au DoC

Pour SABS (Afrique du Sud)

SANS 2332:2017 Classe B / SANS 2335:2018

SANS 61000-3-2:2009 SANS 61000-3-3:2009

Informations sur l'élimination

Déchets d'équipements électriques et électroniques



Ce symbole sur le produit indique que, conformément à la directive européenne 2012/19/UE

régiissant les déchets d'équipements électriques et électroniques, ce produit ne doit pas être jeté avec les autres déchets municipaux. Veuillez éliminer vos déchets d'équipement en les remettant à un point de collecte désigné pour le recyclage des déchets d'équipements électriques et électroniques. Pour éviter d'éventuels dommages à l'environnement ou à la santé humaine dus à une élimination incontrôlée des déchets, veuillez séparer ces articles des autres types de déchets et les recycler de manière responsable afin de promouvoir la réutilisation durable des ressources matérielles. Pour plus d'informations sur le recyclage de ce produit, veuillez contacter votre mairie ou votre service municipal d'élimination des déchets.

General information

In this section, you will find information on the package content and the display's features.

Package content

Unpacking

- We recommend to keep the box and packaging in storage for use in the future if need to transport the display.
- Carefully unpack and check you have all the items shown in the "Accessories" section.

**TIP:**

If any of the accessories is missing or damaged, please contact your distributor for more information.

Accessories



Display




Pen



Nib remover



Nib




USB-C cable



QuickStart Guide


Product overview

Frontview

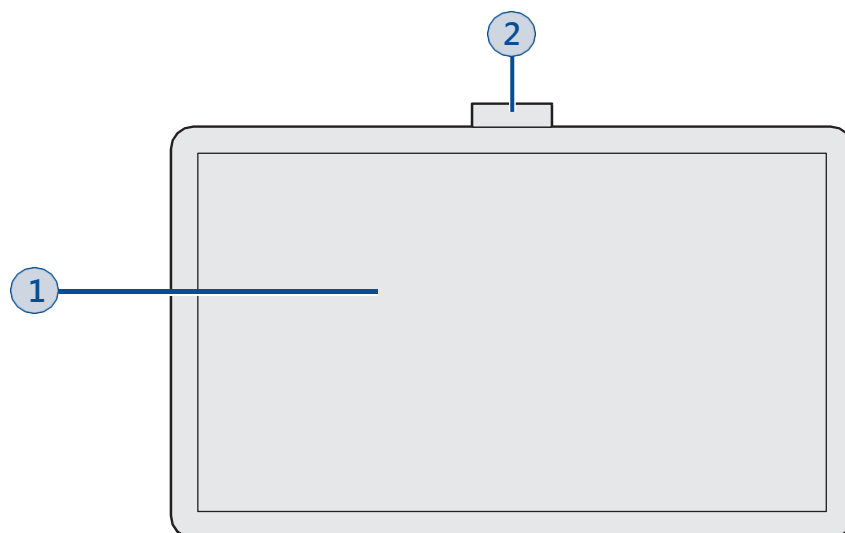

#	Function	Description
①	Display screen	This is the active area for pen input.
②	Penholder	When not in use, store the pen in the pen holder.

Rearview

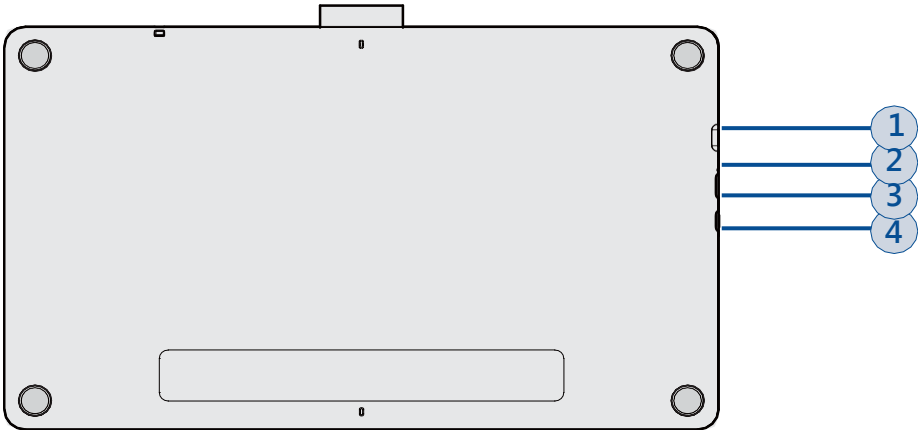

#	Function	Description
①	USB-Cport	ConnectyourdevicetoyourcomputerusingtheUSB-C cable included with your device.
②	StatusLED	TheLEDlightswhenthedeviceisonandbrightens when the pen is near the active area.
③	Powerbutton	Presstopoweron/offthedisplay.
④	OSDbutton	PresstheOSDbuttontocontrolbrightnessandother display options.

Setup and installation


In this section, you will find information on how to connect to the device.

Connecting the USB-C cable

Connect cable(s) based on your host device setup.

**NOTE:**

- As for Android™ device which support the product, please see [Wacom.com](https://www.wacom.com).

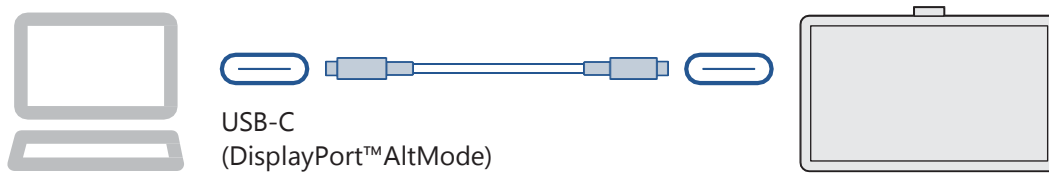


Appendix

In this section, you will find display specifications, product appearance, and more.

Specifications

Item	Description
Model	DTC141
Dimensions(LxWxH)	200.9 mm ± 0.5 mm / 336.3 mm ± 0.5 mm / 10.35 mm ± 0.3 mm
Weight	0.75 kg ± 0.1 kg (1.65 lb)
Operating temperature & humidity	5 to 40 degrees C, Humidity: 20% to 80% RH (non-condensing)
Storage temperature & humidity	-10 to 60 degree C, 30 to 90% RH (non-condensing)
Interface Cables	USB-C to C cable
Input voltage/current	USB Power Delivery + 5V 1.5A or 3A
USB Output power	NA
DC Power Consumption (By PC USB PD with Type C cable)	Power ON mode (MAX): less than 15 W Low Power mode (MAX): less than 7.5 W Power OFF mode: 0.3 W or lower Power standby mode: > 0.5 W or lower
Display:	
Screen Size	14 inch
Aspect ratio	16: 9
Number of pixels	1920 x 1080
Input Video Connector	USB Type-C
Viewing Angles @ CR > 10 (horizontal/vertical)	178° (89/89) H / 178° (89/89) V (Typ)
Display Colors	16.7M
Contrast Ratio	1000 (Typ) (TBD)
Luminance	250 cd/m ² (Typ)
Plug and Play	DDC/CI
LCD quality	Each LCD panel is produced under very stringent quality standards. Production techniques cannot guarantee an absolutely perfect TFT display. A small number of pixels are allowed to show a wrong color for some parts of the color spectrum. This does not mean the display is defective.
PEN Specification:	
Reading Technology	Electro-magnetic resonance technology
Active Area	309.31 × 173.99 mm
Resolution	0.01 mm / point
Pen Tilt Recognition / Range	Up to 60 degree
Pressure levels	4,096 levels

Product appearance

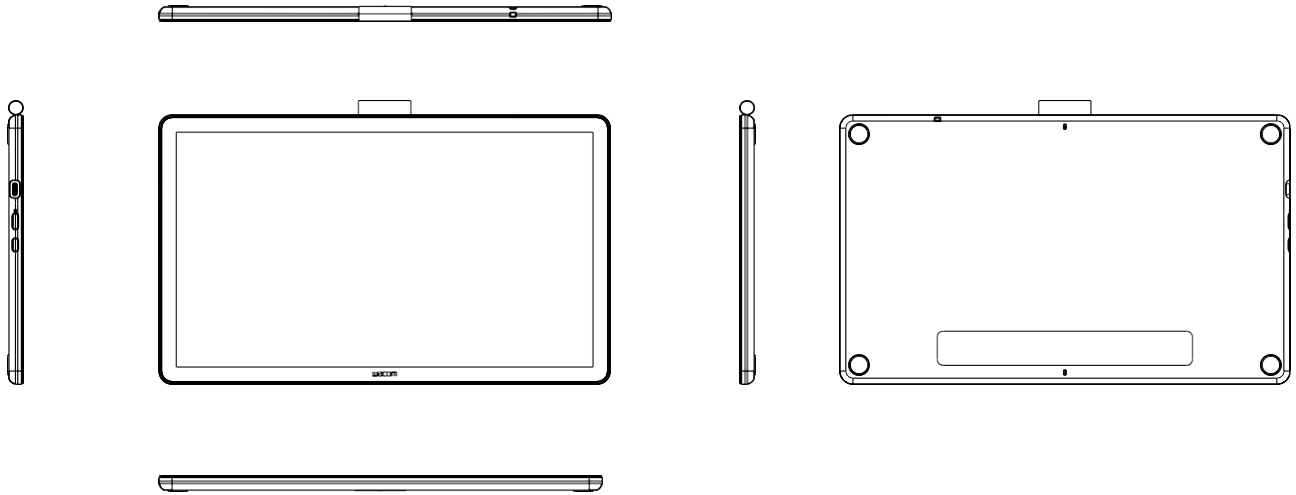

Declaration of the Presence Condition of the Restricted Substances Marking

Equipment name: PenDisplay						
Type designation (Type): DTC141						
Component	Restricted substances and their chemical symbols					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr+6)	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
Plastic Parts	○	○	○	○	○	○
Metal Parts	-	○	○	○	○	○
Power Cord	○	○	○	○	○	○
External connection cable	-	○	○	○	○	○
Internal connection cable	○	○	○	○	○	○
LCD Panel	-	○	○	○	○	○
Power Adapter	-	○	○	○	○	○
QuickStart Guide	○	○	○	○	○	○
PCBA	-	○	○	○	○	○
Pen	-	○	○	○	○	○


NOTE:

- "○" indicates that the percentage of the restricted substance does not exceed the permissible limit.
- "-" indicates that the restricted substance is exempt.