

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

ISED Caution:

Radio Standards Specification RSS-Gen, issue 5

- English:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

This device may not cause interference.

This device must accept any interference, including interference that may cause undesired operation of the device.

RF exposure statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

- French:


Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes:

Cet appareil ne doit pas causer d'interférences.


Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

Déclaration d'exposition RF: L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF. L'appareil peut être utilisé dans des conditions d'exposition portable sans restriction.

SCOSCHE FOUNDIT VOYAGER

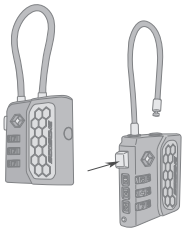

OVERVIEW APERÇU / DESCRIPTION GÉNÉRALE

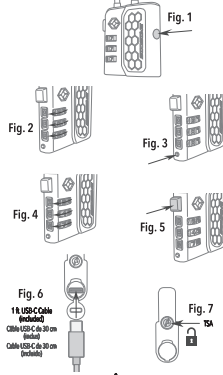

Apple Users

- To add FOUNDIT™ VOYAGER to your Find My® items:
- Ensure Bluetooth and Location Services are enabled.
 - To enable discovery, press the button on the Foundit Voyager (Fig. 1, page 2). A confirmation sound will play.
 - Open the Find My app on your Apple device.
 - Select "Items" at the bottom of the screen, then "+" to add other items.
 - Foundit Voyager should appear on your screen.
 - Select it and assign a name to your item (this can be changed anytime).
 - Select an icon, this will represent the Foundit Voyager on the map screen (the icon can be changed anytime).
 - Select finish.
 - The Foundit Voyager can now be located using the Find My app.
 - Select FOUNDIT™ VOYAGER in the Find My® App to:
 - See last known location on the map or current location if nearby.
 - Find by playing a sound once it is in range.
 - Check battery status.
 - Change the device name.
 - OR
 - Visit cloud.com/Find
- To add FOUNDIT™ VOYAGER to the Find Hub App:
- If Find Hub is not pre-installed on your device, download the app on Google Play.
 - Ensure Bluetooth and Location Services are enabled.
 - To enable discovery, press the button on the Foundit Voyager (Fig. 1, page 2). A confirmation sound will play.
 - The Foundit Voyager will automatically pop up on your device screen.
 - Follow the prompts to add to your Find Hub items list.
 - The Foundit Voyager can now be located using the Find Hub app.
 - Select FOUNDIT™ VOYAGER in the Find Hub app to:
 - See last known location on the map or current location if nearby.
 - Find by using the find button or playing a sound, if it is in range.
 - Check battery status.
 - Change the device name.
 - OR
 - Visit cloud.com/Find

Android™ Users

ALL USERS: IF FOUNDIT™ VOYAGER IS NOT DISCOVERABLE ON YOUR DEVICE DURING SETUP, TRY THE FOLLOWING:

1. Use the Reset procedure.
2. Restart your device.
- Turn off/disable or reset procedure
- To turn off/disable without resetting:
 - Press and hold for 15 seconds until a screen is shown (Fig. 1, Pg. 2). Once disabled it cannot be found until the button is pressed again to enable it.
 - To reset to original factory settings:
 - Short press the button once, then press and hold for 5 seconds until you hear 4 beeps.
 - Remove from your network using the Find My app (Apple device) or the Find Hub app (Android device).
 - The Foundit Voyager is now in its original state. It can no longer be found and can now be paired with any device.

- How to set your own combination
- The default is 000. Start by ensuring this combination is shown in the window under the cable release button (Fig. 2, Pg. 2).
 - Decide on a new combination and make a note of it.

- Using a ballpoint pen or similar tool, firmly depress the small silver reset button below the combination window until it clicks and stops (Fig. 3, Pg. 2).
- Adjust the dial until the desired combination is reached (Fig. 4, Pg. 2). Then press the cable release button to finalize the new combination (Fig. 5, Pg. 2).

- Charging the battery
- Lift the rubber cover on the bottom of the charger to expose the USB-C port. Connect to any USB power source using the included USB-C cable (Fig. 6, Pg. 2).
 - A red light indicates charging. The light will turn off once complete.

- What is a TSA approved lock?
- Transportation Security Administration baggage screens have access to a secure set of keys that can open locks that carry the Travel Sentry red diamond logo. This allows them to perform baggage inspection when necessary without damaging the lock (Fig. 7, Pg. 2).

Utilisateurs Apple

- Pour ajouter le chargeur FOUNDIT™ VOYAGER sur votre réseau Find My® :
- Vérifier que les services Bluetooth et Localisation Services sont activés.
 - Pour activer l' découverte, appuyez sur le bouton du Foundit Voyager (Fig. 1, page 2). Un son de confirmation va retentir.
 - Ouvrez l' application Find My sur votre appareil Apple.
 - Sélectionnez les "Items (Articles)" en bas de l' écran, puis "+" pour ajouter d' autres items à votre réseau.
 - Sélectionnez l' article, et le chargeur va apparaître sur votre écran.
 - Sélectionnez une icône, celle-ci représentera votre chargeur sur la page de la carte (vous pouvez modifier en tout temps).
 - Sélectionnez "Terminer".
 - Le Foundit Voyager peut maintenant être localisé en utilisant votre appli Find My.
 - Sélectionnez FOUNDIT™ VOYAGER dans l' appli Find My® pour :
 - Voir la dernière emplacement connu sur la carte, ou un emplacement actuel si il est disponible.
 - Faire retentir une sonnerie de confirmation pour indiquer qu' il est à portée.
 - Vérifier l' état de la pile.
 - Changer le nom de l' appareil.
 - OU visiter [l' adresse l' adresse cloud.com/Find](https://cloud.com/Find)

- Utilisateurs Android™
- Pour ajouter le chargeur FOUNDIT™ VOYAGER à l' appli Find Hub :
- Si Find Hub n' est pas préinstallé sur votre appareil, téléchargez l' appli sur Google Play.
 - Vérifier que les services Bluetooth et de Localisation sont activés.
 - Pour activer l' découverte, appuyez sur le bouton du Foundit Voyager (Fig. 1, page 2). Un son de confirmation va retentir.
 - Le Foundit Voyager apparaîtra automatiquement sur l' écran de votre appareil.
 - Suivez les indications pour ajouter le chargeur à votre liste d' items Find Hub.
 - Le chargeur Foundit Voyager peut maintenant être localisé en utilisant votre appli Find Hub.
 - Sélectionnez FOUNDIT™ VOYAGER dans l' appli Find Hub pour :
 - Voir la dernière emplacement connu sur la carte, ou un emplacement actuel si il est disponible.
 - Faire retentir une sonnerie de confirmation pour indiquer qu' il est à portée.
 - Vérifier l' état de la pile.
 - Changer le nom de l' appareil.
 - OU visiter [l' adresse l' adresse cloud.com/Find](https://cloud.com/Find)

POUR TOUS LES UTILISATEURS : SI LE CHARGEUR FOUNDIT™ VOYAGER DISPONIBLE SUR VOTRE APPAREIL LORS DE LA CONFIGURATION, ESSAYEZ CE QUI SUIT :

1. Réinitialiser le processus de réinitialisation.
2. Redémarrer votre appareil.

Procédure pour éteindre/désactiver ou pour la réinitialisation

- Pour éteindre/désactiver sans réinitialiser :
- Presser et maintenir le bouton pendant 15 secondes jusqu' à ce qu' une sonnerie sonore retentisse (Fig. 1, page 2). Une fois désactivé, il ne peut pas être retrouvé tant qu' on appuie pas le bouton de la sonnerie pour le réactiver.

- Pour réinitialiser les réglages d' usine :
- Presser à nouveau une seule fois rapidement sur le bouton, puis, presser et maintenir pendant 5 secondes jusqu' à ce que vous entendiez 4 bips sonores (Fig. 1, page 2).
 - Retirer le votre réseau en utilisant l' appli Find My (Apple) ou l' appli Find Hub (Android).
 - Le Foundit Voyager est réinitialisé à son état d' origine. Il ne peut plus être trouvé, et il peut maintenant être couplé avec un appareil.

Pour établir votre propre combinaison

- La combinaison par défaut est 000. Commencez en vous assurant que cette combinaison est affichée dans la fenêtre sous le bouton de déverrouillage du câble (Fig. 2, page 2).
- Décider d' une nouvelle combinaison, et la prendre en note.
- À l' aide d' un stylet fin ou d' un outil semblable, enfoncez solidement le petit bouton argenté de réinitialisation sous la fenêtre de combinaison, jusqu' à ce qu' il s' élève et qu' il reste en bas (Fig. 3, page 2).
- Ajuster les cadènes pour atteindre la combinaison voulue (Fig. 4, page 2), puis, presser sur le bouton de déverrouillage du câble pour finaliser la nouvelle combinaison (Fig. 5, page 2).

Recharge de la pile

- Lever le couvercle de protection au bas de l' appareil pour exposer le port USB-C. Connecter une source d' alimentation USB avec le câble USB-C inclus (Fig. 6, page 2).
- Un témoin lumineux rouge indique la charge. Le témoin lumineux s' éteint quand le recharge est terminé.

- Qu' est-ce qu' un cadenas homologué TSA?
- Les vérifications des bagages de l' Administration de la Sécurité dans le Transport (Transportation Security Administration) ont accès à un jeu de clés d' identité qui peut ouvrir les cadenas admettant le logo de démarrage rouge du Travel Sentry. Cela leur permet d' effectuer leurs inspections des bagages de démarrage sans endommager le cadenas (Fig. 7, page 2).

