Logitech

Installation

Logitech™

M-RBT105A

Laser Cordless Mouse



1




English Turn **ON** computer.

繁體中文 **開啟**電腦電源。

简体中文 **开启**电脑电源。

한국어 컴퓨터를 **켭니다**.

2

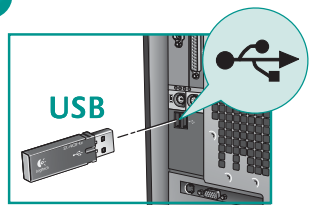

English Plug receiver into computer's USB port. Optional: A PS/2 adapter is provided for PS/2 connections.

繁體中文 將接收器插入電腦的 USB 連接埠。可選擇：使用 PS/2 轉接頭可連接 PS/2 滑鼠埠。

简体中文 将接收器插入电脑的 USB 端口。可选：PS/2 连接可使用提供的 PS/2 适配器。

한국어 리시버를 컴퓨터의 USB 포트에 연결합니다. 옵션: PS/2 어댑터가 PS/2 연결용으로 제공됩니다.

3



English Slide the battery door off. Install the two AA batteries.

繁體中文 將電池蓋滑出。安裝兩顆 AA 電池。

简体中文 将电池盖打开。装入两节 AA 电池。

한국어 배터리 덮개를 밀어서 엽니다. AA 배터리 2개를 장착합니다.

4



English To enjoy all the features of your mouse, install the software.

繁體中文 若要享受滑鼠的所有功能，請安裝軟體。

简体中文 要使用鼠标的所有功能，请安装软件。

한국어 마우스의 모든 기능을 활용하려면 소프트웨어를 설치하십시오.

i



English 1) Instant Message button. 2) Email button. For instant messages and email, install SetPoint software and create a "buddy" list. With instant message and email software running, buttons light up when new messages are received from someone on your buddy list. 3) Media buttons: Mute, Volume down, and Volume up. 4) Battery LED. LED glows green briefly when mouse is powered on. LED blinks red when battery level drops below 10%. To save battery power, mouse turns on or off or enters stand-by mode automatically based on your computer's operating state.

繁體中文 1) Instant Message（即時通訊）按鈕。2) 電子郵件按鈕。如需使用便捷即時通訊與電子郵件功能，請安裝 SetPoint 軟體並建立一份「好友」清單。在即時通訊與電子郵件軟體執行時，如果從好友清單中的某人收到新訊息，按鈕的燈會亮起。3) Media（媒體）按鈕：靜音、音量調高、音量調低。4) 電池 LED 指示燈。開啟滑鼠電源時 LED 指示燈會短暫的變綠。當電池的電量降至 10% 以下時，LED 會閃爍紅燈。為了節省電池電源，滑鼠會根據電腦的運作狀態自動開啟或關閉或是進入待命模式。

简体中文 1) 即时通信按钮。2) 电子邮件按钮。要使用即时通信和电子邮件功能，请安装 SetPoint 软件并创建一个“好友”清单。在即时通信和电子邮件软件运行时，如果收到清单上某位“好友”的新信息，按钮就会亮起。3) 多媒体按钮：静音，降低音量和增加音量。4) 电池 LED 指示灯。在鼠标电源开启后，LED 指示灯会短暂地亮起绿灯。当电池电量下降到 10% 以下时，LED 指示灯会呈红色闪烁。为节省电池能耗，鼠标会根据电脑的运行状态自动开启、关闭或进入待用模式。

한국어 1) 인스턴트 메시지 버튼. 2) 이메일 버튼. 인스턴트 메시지와 이메일 기능을 마우스에서 사용하려면 SetPoint 소프트웨어를 설치하고 '친구' 목록을 만드십시오. 인스턴트 메시지와 이메일 소프트웨어가 실행 중인 상태에서 친구 목록에 등록된 상대로부터 새로운 메시지를 받으면 버튼에 불이 들어옵니다. 3) 미디어 버튼: 음소거, 볼륨 줄임, 볼륨 높임. 4) 배터리 LED. 마우스가 켜지면 LED에 잠시 녹색 불이 들어옵니다. 배터리 잔량이 10% 미만이면 LED가 적색으로 깜빡입니다. 배터리 전원을 절약하기 위해 컴퓨터의 작동 상태에 따라 자동으로 마우스가 켜지거나 꺼지거나 대기 모드 상태가 됩니다.

i



English 1) Tilt wheel plus zoom. Push wheel to either side to scroll horizontally. Click and roll the wheel to zoom in and out. (Works only if software is installed.) 2) Universal forward and back buttons. 3) Left and right mouse buttons. Launch Logitech™ SetPoint™ to customize button and tilt wheel assignments.

繁體中文 1) 四向滾輪與縮放。將滾輪推向任一側以進行水平捲動。按一下並捲動滾輪可放大與縮小。（只有在已安裝軟體時才有作用。）2) 通用前進和後退按鈕。3) 左右滑鼠按鈕。啟動 Logitech™ SetPoint™ 可自訂按鈕與四向滾輪的工作。

简体中文 1) 水平倾斜滚轮加缩放键，将滚轮推向任一侧可进行水平滚动。点击并滚动滚轮可放大和缩小。（只有在软件安装后才有效。）2) 前进和后退按钮。3) 左、右鼠标按钮。启动 Logitech™ SetPoint™ 可自定义按钮和倾斜滚轮的动作。

한국어 1) 틸트 휠(줌 기능 지원). 휠을 한쪽 방향으로 눌러 좌우로 스크롤합니다. 확대/축소 기능을 사용하려면 휠을 클릭한 상태에서 돌리십시오. (소프트웨어가 설치되어 있는 경우에만 작동합니다.) 2) 범용 앞으로/뒤로 버튼. 3) 왼쪽/오른쪽 마우스 버튼. Logitech™ SetPoint™를 실행하면 버튼과 틸트 휠을 사용자가 임의 지정할 수 있습니다.

Logitech

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- • Reorient or relocate the receiving antenna.
- • Increase the separation between the equipment and receiver.
- • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- • Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

© 2005 Logitech. All rights reserved. Logitech, the Logitech logo, and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

623799-0311.A6