LOGIC
GC2
WIRELESS GAMING CONTROLLER


USER MANUAL

For Android / IOS 13.0+ / PC / Ps4 / Ps3 / Switch

INDEX

1. KEY FUNCTION INSTRUCTION....4
2. SLEEPING MODE & RECONNECT....4
3. POWER OFF....5
4. RGB LIGHTING CONTROL....5
5. ANDROID V3 MODE (KEY MAPPING MODE)....5
6. SWITCH KEY SET....5
7. EDIT KEY CONFIGURATION....6
8. ANDROID GAME CONTROLLER MODE....7
9. XBOX WIRELESS CONTROLLER MODE FOR ANDROID & IOS 13.0 ABOVE....8
10 MFI CONTROLLER MODE FOR IOS 13.0+....8
11. N-S CONTROLLER MODE....9
12.P4/P3 CONTROLLER MODE....10
13. UPDATE....10
14. PC WIRED CONTROLLER MODE....11
15. TURBO / AUTO FUNCTION....12
16. SPECIFICATIONS....12
17. RESET....12
18. FAQ....13
19. WARRANTY CERTIFICATE....14

KEY FUNCTION INSTRUCTION

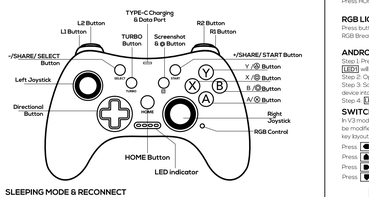

SLEEPING MODE & RECONNECT

Sleeping Mode: The controller will turn into sleeping mode automatically without any operation within 5 minutes.
Reconnection: Press HOME button to reconnect to the last mode which you connected before.

POWER OFF

Press HOME button long with 3-5 seconds, the controller will power off with all LED lights off.

RGB LIGHTING CONTROL

Press button to switch the light mode:
RGB Breathing Light Mode > Long Light Mode (stop switching color) > Light Off.

ANDROID V3 MODE (KEY MAPPING MODE)

Step 1: Press [A+HOME] button to power on the gamepad.
[LED] will be twinkling and wait for pairing.
Step 2: Open the interface of [Settings] on android device, open [Bluetooth].
Step 3: Scan the devices and get the name of [GC2], click the device into [Pairing and Connect] automatically.
Step 4: [LED] indicator will be long on after connected successfully.

SWITCH KEY SET

In V3 mode, after the gamepad is connected to the phone, the default button layout is "No.1". The button layout can be modified according to the virtual button of the game. According to the different game, there are four groups of key layout can be set, and the keys can be switched while playing different games.

Press 🏠 +HOME to switch to the [N°2] button layout [LED1,LED2] lights on.
Press 🏠 +HOME to switch to the [N°3] button layout [LED1,LED2,LED3] lights on.
Press 🏠 +HOME to switch to the [N°4] button layout [LED1,LED2,LED3, and LED4] are on.
Press 🏠 +HOME to switch to the [N°1] button layout [LED1] light long on.

N°. of Key Layout	Game Name	Switch Method	LED Indication
N°4	PUBG	🏠 +HOME	LED1,LED2,LED3,LED4
N°3	LOL Mobile	🏠 +HOME	LED1,LED2,LED3
N°2	Call of Duty	🏠 +HOME	LED1,LED2
N°1	Mobile legend	🏠 +HOME	LED1

EDIT KEY CONFIGURATION

There is built-in memo chip in the game controller, it allows player to save the key configuration with 4 different mobile games, the 4 key configuration can be switched freely while playing games.
There is official key configuration for some games, if there is not key configuration for your game, you can set or revise the key configuration before gaming.

Please follow the steps to edit or revise key layout:
1.Log in Google Play Store to download the app" Shooting Plus " and install it to you android mobile/tablet pc.

ANDROID APP ON Google play

2.Open the Floating Window for "ShootingPlus ".
3.Connect the controller to your android device. Open the App. ShootingPlus V3
4.Enter the game, press "START" Button on the controller to release the keymapping menu as below photo (take PUBG '810 for example)



5.Move the buttons to the position of the correspondence virtual buttons as your style.
6. Tap" Save "the settings and tap "Close" it to enjoy your games.
Reset the default key configuration. Open the app>Click the Setting>Advanced Settings>Reset Device

Note:
1. After reset the key configuration, you need to disconnect the controller then reconnect again.
2. In the game, press the SELECT button to view the key configuration. Press the START button to start the key config edition.
3. The edit key configuration is saved in the current key configuration number.Eg: you use the No.1 to edit, it will save in No.1 record.

ANDROID GAME CONTROLLER MODE



Step 1: Press [X+HOME] button to power on the gamepad.
[LED] will be twinkling and wait for pairing.
Step 2: Open the interface of [Settings] on android device, open [Bluetooth].
Step 3: Scan the devices and get the name of [GC2], click the device into [Pairing and Connect] automatically.
Step 4: [LED] indicator will be long on after connected successfully.

Reconnecting: Press HOME button shortly to power on the gamepad, it will connect automatically.

Note:
1. The Android Game Controller mode allow player to play the android games from google play market, which the games can support game controller.

XBOX WIRELESS CONTROLLER MODE FOR ANDROID & IOS 13.0 ABOVE



Step 1: Press [RT+ HOME] button to power on the gamepad.
[LED1,2,3] will be twinkling and wait for pairing.
Step 2: Open the interface of [Settings] on android/IOS device, open [Bluetooth].
Step 3: Scan the devices and get the name of [Xbox Wireless Controller], click the device into [Pairing and Connect] automatically.
Step 4: [LED1,2] indicator will be long on after connected successfully.

Reconnecting:
Step1: Press HOME (LOGIC) button shortly to power on the gamepad.
Step2: Click the Xbox Wireless Controller device in the Bluetooth interface to reconnect.

MFI CONTROLLER MODE FOR IOS 13.0+



Step 1: Press [B+HOME] button to power on the gamepad. [LED4] will be twinkling and wait for pairing.
Step 2: Open the interface of [Settings] on android device, open [Bluetooth].
Step 3: Scan the devices and get the name of [DUALSHOCK4 Wireless Controller], click the device into [Pairing and Connect] automatically.
Step 4: [LED4] indicator will be long on after connected successfully.

Reconnecting:
Press HOME button shortly to power on the gamepad, it will connect automatically.

Note:
Recommend the APP that collect the gamepad games already, you can need to download the app and installed.



N-S CONTROLLER MODE

(Power on your N-S Console, then follow the steps to pair and connect your controller.)
Step 1: Find [Controllers] Option.**-Image1**

Image 1

Image 2

Step 2: Click [Change Grip/Order] **-Image2**
Step 3: Press [L+HOME] button to power on gamepad, until the 4 led lights blink in turn,waiting or connection to complete.-**Image3** 5~7s later, the controller will connect to console automatically.

Image 3

Reconnect: Press **HOME Button**
When one of the following conditions occur, please reconnect referring to first time to pair and connect.
1. Upgrade
2. Reset
3. Change the console.

*Please make sure turn off the Airplane Mode when you connect controller to switch console.

P4/P3 CONTROLLER MODE

Step 1: Connect the Controller to P4 / P3 console with TYPE-C cable.
The LED 1, LED 2, LED 3 will long on after console recognized.
Step 2: Press the HOME button to start pairing to console, LED turn to LED 4 flashes.
Step 3: Few seconds later, LED4 turns to long on. The controller connected to P4, P3 console.
Step 4: Plug off the cable, it will wireless connection.

Reconnecting:
Press HOME button shortly to power on the gamepad, it will connect automatically.

UPDATE

If there is problem for the connection while the console update, we can offer the update method as follows:
You can download the "ShootingPlus V3" app from the google play or apple store, then install to your cellphone; follow the step to update your controller.


1.Connect android phone with ShootingPlus V3 Mode(A+HOME to power on);

2.Open the ShootingPlus V3 app,then follow the instruction to finish the update;





PC WIRED CONTROLLER MODE

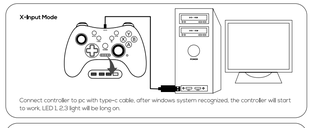

Connect controller to pc with type-c cable, after windows system recognized, the controller will start to work, LED 1,2,3 light will be long on.

Under the mode of X-Input, press the HOME button long to switch X-Input to D-Input Mode.

TURBO / AUTO FUNCTION

Buttons (which called short function buttons) can be set TURBO : A/B/X/Y/L/2L/R/2R button

Enable/Disable the TURBO speed function:
Step 1: Press the Turbo button and one the function button simultaneously, to enable the Turbo speed function.
Step 2: Repeat the Step1 to disable TURBO function.

Adjust TURBO speed:
Press the TURBO button simultaneously the directional button Up / Down.
Press TURBO+Direction UP button to adjust the TURBO to faster.
Press TURBO+Direction DOWN button to adjust the TURBO to slower.

Clear TURBO function:
Press the TURBO button with 5 second long, wait the LED 1, 2, 3, 4 light and turn to flashes together with 1 second's vibration. Then all TURBO function cleared.

SPECIFICATIONS

Product name: Multifunctional gamepad
Model number: GC2
Product size: 152x115x59mm
Product weight: 220g
Power supply: built-in 800mAh polymer battery
Charging interface: Type-c
Game time: 5-10h
Charging time: 2-2.5H
Packing: color box
Package Contents: gamepad, charging cable, instruction manual

RESET

You must reset the controller while the situation of crash after charging or while playing games. Use the Pin to click the RESET hole to rest the controller.



FAQ:

Problem 1: The LED4 do not flashes while the controller plug to Switch console basement.
Solve Method: The controller support wired switch controller function, If the pro controller wired communication function turn on while connect to N-S basement, the controller will turn to wired controller function after connected. The LED4 will not flashes! You need to turn off the pro controller wired communication, the LED4 will turn to normal.

Panel to Close the Pro Controller Wired Communication



Problem 2: The Joystick stuck after long playing.
Solve Method: Press down the joystick head strong if there is stuck problem, it will solve the problem.
Problem 3: Can not full charged the Controller.
Solve Method: Press the RGB Control button to close the RGB lightings. We strongly recommend use the 5V3A power to charge the controller.
Problem 4: Can not charge the controller.
Solve Method: The temperature lower than 2 degree, or higher than 45 degree, the controller will stop the charging.So, please check if the room temperature is during this scope.
Problem 5: After press HOME button, it can not power off the controller, the RGB lights still on.
Solve Method:
5.1 You can press the RESET button to try to power off the controller.
5.2 If you controller connect to phone (use the keylinker app to do the program function, it will happen this situation.) Close the BT function on cellphone system, it will solve the problem.

LOGIC
wireless control

Warranty Certificate
Terms and Conditions

LOGIC warrants that their Products will be free from defects in material and workmanship. The warranty period is one (1) year for the products and three (3) months for the accessories which are part of the original package including the battery. The warranty period begins the date of purchase by the End-User who shall present an invoice or a purchase receipt when requiring warranty service otherwise the warranty period will begin from the date of manufacture of the product. LOGIC will repair a product without cost to the customer if it presents a manufacturing defect or defect in workmanship during the warranty period and if the defect occurred under normal conditions of use in accordance with the instructions and specifications stated in the user's manual. F or additional information about the terms and conditions of LOGIC's Limited Warranty or to obtain warranty service information, please visit the support section at: logicmobility.com

logicmobility.com
Made in China
Copyright Swagtek, Inc. 2024

LOGIC
wireless control


MANUAL DEL USUARIO

Para Android / IOS 13.0+ / PC / Ps4 / Ps3 / Switch

ÍNDICE

1. BOTONES PRINCIPALES....18
2. MODO DE SUSPENSIÓN Y RECONEXIÓN....18
3. APAGAR....19
4. CONTROL DE LUZ RGB....19
5. MODO ANDROID V3 (MODO DE ASIGNACIÓN DE BOTONES)....19
6. CAMBIAR ASIGNACIÓN DE BOTONES....19
7. EDITAR CONFIGURACIÓN DE BOTONES....20
8. MODO DE CONTROL DE JUEGOS ANDROID....21
9. MODO DE CONTROL INALÁMBRICO XBOX PARA ANDROID Y IOS13.0 EN ADELANTE....22
10. MODO DE CONTROL MFI PARA IOS 13.0+....22
11. MODO DE CONTROL N-S....23
12.MODO DE CONTROL P4 / P3....24
13. ACTUALIZACIÓN....24
14. MODO DE CONTROL CON CABLE DE PC....25
15. FUNCIÓN TURBO / AUTOMÁTICA....26
16. ESPECIFICACIONES....26
17. REINICIAR....26
18. PREGUNTAS FRECUENTES....27
19. CERTIFICADO DE GARANTÍA....28

BOTONES PRINCIPALES

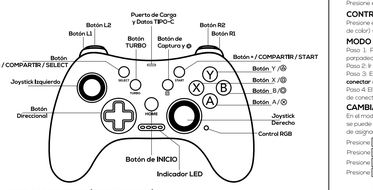

MODO DE SUSPENSIÓN Y RECONEXIÓN

Modo de Suspensión: El control pasará automáticamente al modo de suspensión luego de no presionar ningun botón en 5 minutos.
Reconexión: Presione el botón INICIO para volver a conectarse al último modo conectado.

APAGAR

Presione el botón INICIO durante 3~5 segundos, el control y las luces LED se apagarán.

CONTROL DE LUZ RGB

Presione el botón para cambiar el modo de luz: Modo de descanso RGB > Modo de luz prolongado (Deja de cambiar de color) > Luz apagada.

MODO ANDROID V3 (MODO DE ASIGNACIÓN DE BOTONES)

Paso 1: Presione **A + INICIO** para encender el control, el indicador **LED1** parpadeará y esperará a que se empareje.
Paso 2: Ir a **Configuración** en el dispositivo Android y seleccione **Bluetooth**.
Paso 3: Espere a encontrar el dispositivo **GC2**, seleccione para **emparejar y conectar** automáticamente.
Paso 4: El indicador **LED1** permanecerá encendido por mucho tiempo después de conectarse correctamente.

CAMBIAR ASIGNACIÓN DE BOTONES

En el modo V3, después de conectar el control al teléfono, la asignación de botones predeterminada es la "No. 1" y se puede modificar según el botón virtual del juego. De acuerdo al juego, se pueden configurar hasta cuatro grupos de asignación de botones y estos pueden cambiar mientras se juegan diferentes juegos.

Presione 🏠 +HOME para cambiar a la asignación [N°2] con los indicadores [LED1,LED2] encendidos.
Presione 🏠 +HOME para cambiar a la asignación [N°3] con los indicadores [LED1,LED2,LED3] encendidos.
Presione 🏠 +HOME para cambiar a la asignación [N°4] con los indicadores [LED1,LED2,LED3, and LED4] encendidos.
Presione 🏠 +HOME para cambiar a la asignación [N°1] con el indicador [LED1] encendido de manera prolongada.

N°. of KeyLayout	Nombre de Juego	Método de Cambio	Indicador LED
N°4	PUBG	🏠 +HOME	LED1,LED2,LED3,LED4
N°3	LOL Mobile	🏠 +HOME	LED1,LED2,LED3
N°2	Call of Duty	🏠 +HOME	LED1,LED2
N°1	Mobile legend	🏠 +HOME	LED1

EDITAR CONFIGURACIÓN DE BOTONES

Hay un chip de memoria incorporada en el control que permite al jugador guardar la configuración de botones con 4 juegos diferentes, esta configuración se puede cambiar mientras juega.
Existe una configuración de botones oficial para algunos juegos, recomendamos revisar la configuración de botones antes de jugar.

Siga estos pasos para editar o revisar la asignación de botones:
1. Inicie sesión en Google Play Store y descargue la aplicación "Shooting Plus" en su dispositivo móvil / Tableta Android.

ANDROID APP ON Google play

2. Conecte el control a su dispositivo.
3. Abra la aplicación "ShootingPlus".
4. Ingrese al juego, presione el botón "START" en el control para abrir el menú de asignación de botones como se muestra en la foto a continuación (tome PUBG 810, por ejemplo)



5. Mueva los botones a la posición que correspondencia según su estilo.
6. Seleccione "Guardar" y "Cerrar" para disfrutar de tus juegos.
Restablecer a la configuración predeterminada. Abra la aplicación, seleccione Configuración, Configuración avanzada, Restablecer dispositivo.

Nota:
1. Después de restablecer la configuración, debe desconectar el control y volver a conectarlo.
2. En el juego, presione el botón SELECT para ver la configuración. Presione el botón START para iniciar la edición de configuración de botones.
3. La edición de botones se guarda en el número de configuración actual. Por ejemplo. Si utiliza el número 1 para editar, se guardará en el registro número 1.

MODO DE CONTROL DE JUEGOS ANDROID



Paso 1: Presione **X +INICIO** para encender el control, el indicador **LED3** parpadeará y esperará a que se empareje.
Paso 2: Ir a **Configuración** en el dispositivo Android y seleccione **Bluetooth**.
Paso 3: Espere a encontrar el dispositivo **GC2**, seleccione para **emparejar y conectar** automáticamente.
Paso 4: El indicador **LED3** permanecerá encendido por mucho tiempo después de conectarse correctamente.

Volver a conectar: Presione el botón **INICIO** brevemente para encender el control, se conectará automáticamente.

Nota
1. El modo Control de Juegos de Android permite disfrutar juegos compatibles desde el Google Play Market.

MODO DE CONTROL INALÁMBRICO XBOX PARA ANDROID Y IOS 13.0 EN ADELANTE



Paso 1: Presione **RT + INICIO** para encender el control, los indicadores **LED1, 2 y 3** parpadearán y esperarán a que se empareje.
Paso 2: Ir a **Configuración** en el dispositivo Android / IOS y seleccione **Bluetooth.**
Paso 3: Espere a encontrar el dispositivo **Xbox Wireless Controller**, seleccione para **emparejar y conectar** automáticamente.
Paso 4: Los indicadores **LED 1, 2 y 3** permanecerán encendidos durante mucho tiempo después de conectarse correctamente.
Volver a conectar:
Paso 1: Presione brevemente el botón INICIO (LOGO) para encender el control.
Paso 2: Seleccione el dispositivo « Wireless Controller en la interfaz Bluetooth para volver a conectarse.

MODO DE CONTROL MFI PARA IOS 13.0+



Paso 1: Presione **B + INICIO** para encender el control, el indicador LED4 parpadeará y esperará a que se empareje.
Paso 2: Ir a Configuración en el dispositivo Android y seleccione Bluetooth.
Paso 3: Espere a encontrar el dispositivo DUALSHOCK4 Wireless Controller, seleccione para emparejar y conectar automáticamente.
Paso 4: El indicador **LED4** permanecerá encendido por mucho tiempo después de conectarse correctamente.
Volver a conectar:
Presione el botón INICIO brevemente para encender el control, se conectará automáticamente.

Nota
Aplicaciones recomendadas, es probable que deba descargarlas e instalarlas.



MODO DE CONTROL N-S

(Encienda su consola N-S, luego siga los pasos para emparejar y conectar su control).
Paso 1. Ir a la opción de **controles**. -**Imagen 1**

Imagen 1



Imagen 2



Step 2: Seleccione **Cambiar modo de sujeción u orden**. -**Imagen 2**
Step 3: Presione L1 + HOME para encender el control, hasta que las 4 indicadores LED parpadeen a su vez y espere que se complete la conexión. -**Imagen 3** 5~7 segundos después, el control se conectará a la consola automáticamente.

Imagen 3



Volver a conectar: presione el **botón INICIO**
Cuando ocurra una de las siguientes condiciones, vuelva a conectarse consultando el primer paso para emparejar y conectar.
1. Actualización
2. Reinicio
3. Cambio de consola

*Asegúrese de apagar el modo avión cuando conecte el control a la consola N-S.

MODO DE CONTROL P4 / P3

Paso 1: Conecte el control a la consola P4/P3 con un cable TYPE-C. Los indicadores LED 1, LED 2, LED 3 permanecerán encendidos después de que se reconozca la consola.
Paso 2: Presione el botón INICIO para comenzar a emparejar la consola, el indicador LED 4 empezará a parpadear.
Paso 3: Unos segundos después, el LED 4 se encenderá por mucho tiempo. Esto indica que el control está conectado a la consola P4/P3.
Paso 4: Desconecte el cable ya que será una conexión inalámbrica.

Volver a conectar:
Presione el botón INICIO brevemente para encender el control, se conectará automáticamente.

ACTUALIZACIÓN

Si hay problemas con la conexión mientras se realiza una actualización, recomendamos lo siguiente:
Descargar la aplicación "ShootingPlus V3" desde Google Play o Apple Store y luego instálarlo en su dispositivo, sigue los siguientes pasos para actualizar su control.

1. Conecte el dispositivo con el Modo ShootingPlus V3 (A + INICIO para encender).

2. Abra la aplicación ShootingPlus V3 y luego siga las instrucciones para finalizar la actualización.





MODO DE CONTROL CON CABLE DE PC



Conecte el control a la PC con un cable tipo C, después de que se reconozca el sistema Windows, el control comenzará a funcionar y los indicadores LED 1, 2 y 3 permanecerán encendidos durante mucho tiempo.

En el Modo de Entrada X, presione de manera prolongada el botón INICIO para cambiar la entrada X al Modo de Entrada D.

FUNCIÓN TURBO / AUTOMÁTICA

Los botones que se pueden configurar a TURBO son: A/B/X/Y/L/2L/R/2R
Activar/Desactivar la función de velocidad TURBO:
Paso 1. Presione el botón Turbo y una de los botones simultáneamente para habilitar la función de velocidad Turbo.
Paso 2: Repita el Paso 1 para desactivar la función TURBO.

Ajustar la velocidad TURBO:
Presione el botón TURBO y simultáneamente el botón direccional Arriba / Abajo.
Presione el botón TURBO + Direccional ARRIBA para ajustar el TURBO a mayor velocidad.
Presione el botón TURBO + Direccional ABAJO para ajustar el TURBO a menor velocidad.

Remover función TURBO:
Presione el botón TURBO durante 5 segundos, espere a que se enciendan y parpadeen los indicadores LED 1, 2, 3 y 4 junto con una vibración de 1 segundo.

ESPECIFICACIONES

Nombre: Multifuncional gamepad
Modelo: GC2
Tamaño: 152x115x59mm
Peso: 220g
Energía: Batería de polímero incorporada de 800 mAh
Interfaz de carga: Tipo-C
Tiempo de juego: 5-10h
Tiempo de carga: 2-2.5H
Empaque: Caja
El paquete contiene: Control, cable de carga y manual de instrucciones.

REINICIAR

Debe reiniciar el control en caso se produzca una situación de bloqueo después de cargarlo o mientras juega.
Para hacerlo, por favor presione el botón RESET.

PREGUNTAS FRECUENTES:

Problema 1: El indicador LED4 no parpadea mientras el control está conectado a la base de la consola N-S.
Solución: Debe desactivar la comunicación por cable del Pro Controller, el indicador LED4 volverá a la normalidad.

Panel para desactivar la comunicación por cable del Pro Controller



Problema 2: El joystick se atascó después de jugar mucho.
Solución: Presione con fuerza el cabezal del joystick si hay un problema de atascado.
Problema 3: No se puede cargar completamente el control.
Solución: Presione el botón Control RGB para desactivar las iluminaciones RGB. Recomendamos encarecidamente utilizar la alimentación 5V3A para cargar el controlador.
Problema 4: No se puede cargar el control.
Solución: Si la temperatura es inferior a 2 grados o superior a 45 grados, se detendrá la carga del control. Por lo tanto, verifique si la temperatura ambiente se encuentra dentro de este alcance.
Problema 5: Después de presionar el botón INICIO, no se puede apagar el control y las luces RGB siguen encendidas.
Solución:
5.1 Puede presionar el botón RESET para intentar apagar el control.
5.2 Si su control se encuentra conectado al teléfono, cierre la función BT en el sistema del teléfono.

LOGIC
wireless control

Certificado de Garantía
Términos y Condiciones

LOGIC garantiza que sus productos estarán libres de defectos de materia prima y ensamblaje. El periodo de garantía es de un (1) año para los productos y de tres (3) meses para los accesorios que forman parte del paquete original incluyendo la batería.El usuario final deberá presentar una factura o un recibo de compra cuando exija el servicio de garantía, de lo contrario el periodo de garantía comenzará a partir de la fecha de fabricación del producto. LOGIC reparará un producto, sin costo para el cliente si presenta un defecto de fabricación o un defecto de ensamblaje durante el periodo de garantía y si el defecto se produjo en condiciones normales de uso de acuerdo con las instrucciones y especificaciones indicadas en el manual del usuario. Para más detalles de la Garantía Limitada de LOGIC y para obtener información del servicio de garantía, por favor visite la sección de soporte en nuestro sitio web logicmobility.com

logicmobility.com
Made in China
Copyright Swagtek, Inc. 2024

FCC Statement
1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.
To comply with RF exposure requirements, a minimum separation distance of 20mm must be maintained between the user's body and the handset, including the antenna.