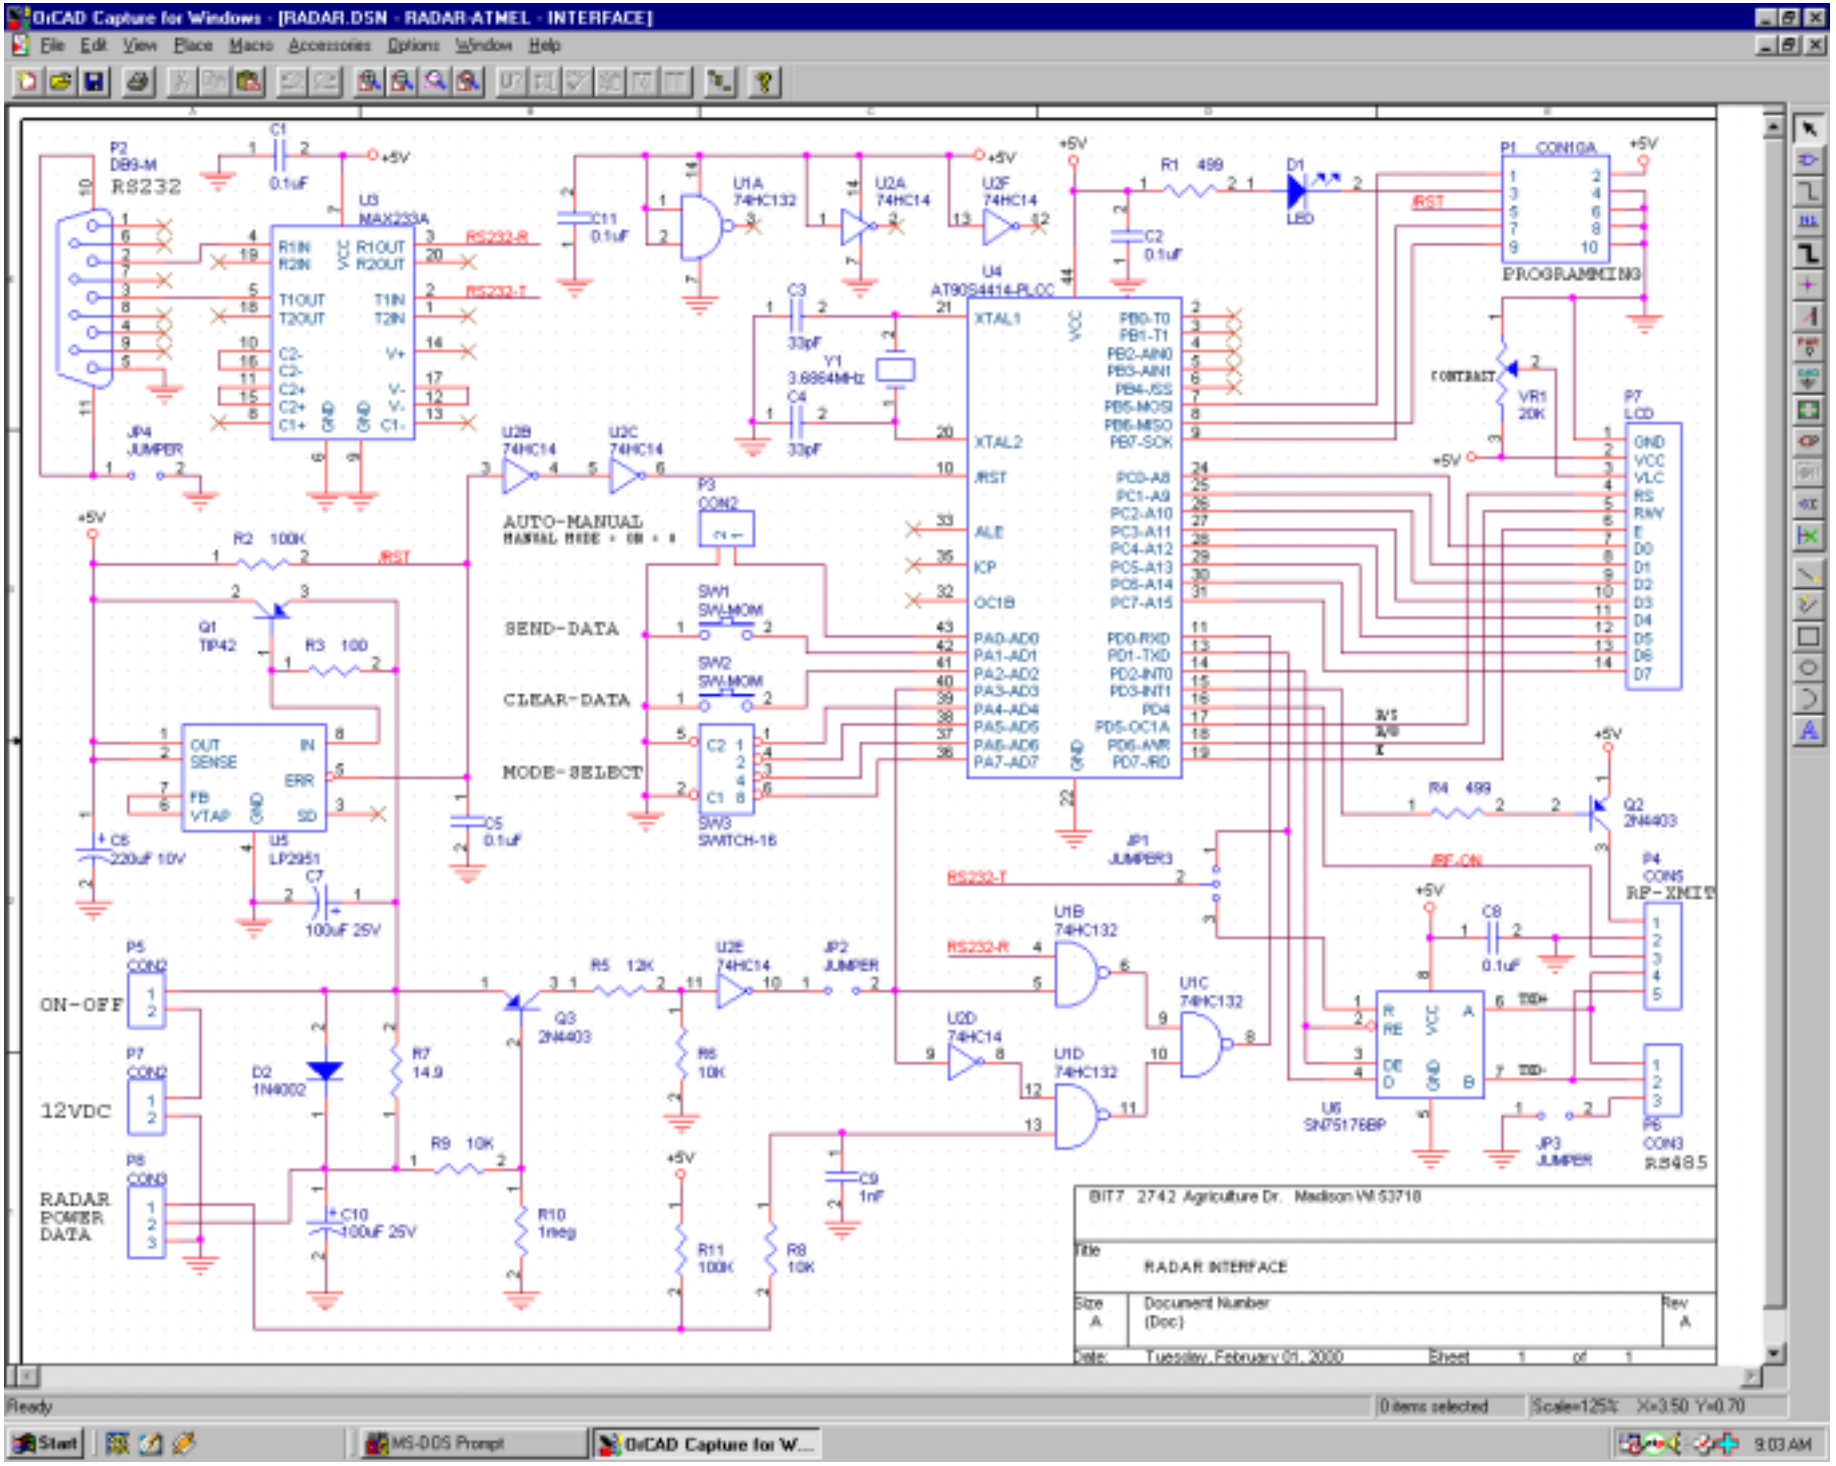

OrCAD Capture for Windows - [RADAR.DSN - RADAR-ATMEL - INTERFACE]
File Edit View Place Macro Accessories Options Window Help
P2 DB9-M RS232
U3 MAX233A
U1A 74HC132
U2A 74HC14
U2F 74HC14
U4 AT90S4414-PLCC
P1 CON10A
PROGRAMMING
P7 LCD
JP4 JUMPER
U2B 74HC14
U2C 74HC14
P3 CON2
AUTO-MANUAL
MANUAL MODE = ON
SEND-DATA
CLEAR-DATA
MODE-SELECT
SW1 SW-MOM
SW2 SW-MOM
SW3 SWITCH-16
Q1 TIP42
U5 LP2951
P5 CON2
ON-OFF
P7 CON2
12VDC
P8 CON3
RADAR POWER DATA
D2 1N4002
Q3 2N4403
U2E 74HC14
JP2 JUMPER
U1B 74HC132
U1C 74HC132
U2D 74HC14
U1D 74HC132
U6 SN75176BP
JP1 JUMPER3
JP3 JUMPER
Q2 2N4403
P4 CON5
RF-XMIT
P6 CON3
RS485
BIT7 2742 Agriculture Dr. Madison WI 53718
RADAR INTERFACE
Document Number (Doc)
Tuesday, February 01, 2000
Ready
Start
MS-DOS Prompt
OrCAD Capture for W...
9:03 AM