21A – English / French / German / Italian / Dutch / Spanish / Portuguese / Swedish / Finnish / Danish / Norwegian / Polish / Czech / Slovak / Hungarian / Russian / Greek / Turkish / Ukrainian / Romanian / Arabic

One separate information sheet required: EU DOC

INSTRUCTIONS • MODE D'EMPLOI • ANLEITUNG • ISTRUZIONI • GEBRUIKSAANWIJZING • INSTRUCCIONES • INSTRUÇÕES • ANVISNINGAR • OHJEET • VEJLEDNING • BRUKSANVISNING • INSTRUKCJA • POKYNY • NÁVOD • HASZNÁLATI UTASÍTÁS • ИНСТРУКЦИЯ • ΟΔΗΓΙΕΣ • KULLANIM KILAVUZU • ІНСТРУКЦІЯ • INSTRUCȚIUNI • التعليمات

6+



ORIGINAL EDITION • ÉDITION ORIGINALE • ORIGINALAUSGABE • EDIZIONE ORIGINALE • ORIGINELE EDITIE • EDICIÓN ORIGINAL • EDIÇÃO ORIGINAL • ORIGINALUTGÅVA • ALKUPERÄISVERSIO • ORIGINALUDGAVE • ORIGINAL UTGAVE • EDYCJA ORYGINALNA • ORIGINÁLNÍ EDICE • ORIGINÁLNA EDÍCIA • EREDETI KIADÁS • ОРИГИНАЛЬНОЕ ИЗДАНИЕ • ΑΥΘΕΝΤΙΚΗ ΕΚΔΟΣΗ • ORİJİNAL SÜRÜM • ОРИГІНАЛЬНА ВЕРСІЯ • EDIȚIE ORIGINALĂ • الطبعة الأصلية

THE BATMAN and all related characters and elements © & ™ DC and Warner Bros. Entertainment Inc. WB SHIELD: © & ™ WBEI. (s21)

HOTWHEELS.COM

©2021 Mattel. ™ and ® designate U.S. trademarks of Mattel, except as noted.

HCD19-MA70_21A

Operating Frequency: 2420-2465MHz

Transmitter Power: 0.92dBm (1.24mW) • -0.89dBm (0.81mW)

OUTDOOR USE RECOMMENDED.

Keep these instructions for future reference as they contain important information.

IMPORTANT: Please read all instructions before operating your vehicle.

⚠ ATTENTION : • ATENÇÃO

LES SURFACES PEUVENT DEVENIR CHAUDES ET CAUSER DES BRÛLURES SI LES COMPOSANTS ÉLECTRONIQUES SONT MOUILLÉS. POUR EMPÊCHER TOUT RISQUE D'ENCHEVÊTREMENT, VEILLEZ À TENIR LES CHEVEUX ÉLOIGNÉS DES ÉLÉMENTS MOBILES. • AS SUPERFÍCIES PODEM AQUECER E PROVOCAR QUEIMADURAS SE A COMPONENTE ELETRÓNICA SE MOLHAR. PARA EVITAR EMARANHAMENTO, MANTER O CABELO AFASTADO DAS PEÇAS MÓVEIS.

⚠ CAUTION: • VORSICHT: • AVVERTENZA: • WAARSCHUWING: • PRECAUCIÓN: • VIKTIGT: • HUOMAUTUS: • ADVARSEL: • FORSIKTIG: • OSTRZEŻENIE: • POZOR: • UPOZORNENIE: • VIGYÁZAT: • ВНИМАНИЕ: • ΠΡΟΣΟΧΗ: • DİKKAT: • ПОПЕРЕДЖЕННЯ! • ATENȚIE: • تحذير

Surfaces may become hot and cause burns if electronics get wet. To prevent entanglement, keep all hair away from moving parts.

Adult supervision is recommended when this vehicle is being operated.

The toy is only to be connected to Class II equipment bearing the symbol.

Colors and decorations may vary.


1: CONTENTS • CONTIENT • INHALT • CONTENUTO • INHOUD • CONTENIDO • CONTEÚDO • INNEHÅLL • SISÄLTÖ • INDHOLD • INNHOLD • ZAWARTOŚĆ • OBSAH • OBSAH • TARTALOM • СОДЕРЖИМОЕ • ΠΕΡΙΕΧΟΜΕΝΑ • İÇİNDEKİLER • ВМІСТ • CONȚINUT • المحتويات



1. BATMOBILE™
2. REMOTE CONTROLLER • TÉLÉCOMMANDE • FERNSTEUERUNG • TELECOMANDO • AFSTANDSBEDIENING • MANDO DE CONTROL REMOTO • COMANDO • FJÄRRKONTROLL • KAUKO-OHJAIN • FJERNBETJENING • FJERNKONTROLL • KONTROLER • DIAĽKOVÉ OVLÁDANIE • DÁLKOVÉ OVLÁDÁNÍ • TÁVIRÁNYÍTÓ • ПУЛЬТ ДИСТАНЦИОННОГО УПРАВЛЕНИЯ • ΤΗΛΕΧΕΙΡΙΣΤΗΡΙΟ • UZAKTAN KUMANDA • ПУЛЬТ ДИСТАНЦІЙНОГО КЕРУВАННЯ • TELECOMANDĂ • جهاز التحكم عن بعد
3. CHARGE CORD • CORDON DE CHARGE • LADEKABEL • CAVO DI RICARICA • OPLAADSNOER • CABLE DE CARGA • CABO DE CARREGAMENTO • LADDNINGSSLADD • LATAUSJOHTO • OPLADNINGSLEDNING • LADEKABEL • KABEL ŁADOWANIA • NABÍJECÍ KABEL • NABÍJACÍ KÁBEL • TÖLTŐKÁBEL • ЗАРЯДНЫЙ ШНУР • ΚΑΛΩΔΙΟ ΦΟΡΤΙΣΗΣ • ŞARJ KABLOSU • КАБЕЛЬ ЗАРЯДЖАННЯ • CABLU DE ÎNCĂRCARE • سلك الشحن

USB charger not included. • Chargeur USB non fourni. • USB-Ladegerät nicht enthalten. • Cavo USB non incluso.

2: FEATURES • CARACTÉRISTIQUES • FUNKTIONEN • CARATTERISTICHE • MET • CARACTERÍSTICAS • CARATERÍSTICAS • FUNKTIONER • TOIMINNOT • FUNKTIONER • FUNKSJONER • FUNKCJE • FUNKCE • FUNKCIE • JELLEMZŐI • ХАРАКТЕРИСТИКИ • ΧΑΡΑΚΤΗΡΙΣΤΙΚΑ • ÖZELLİKLER • ХАРАКТЕРИСТИКИ • CARACTERISTICI • الميزات

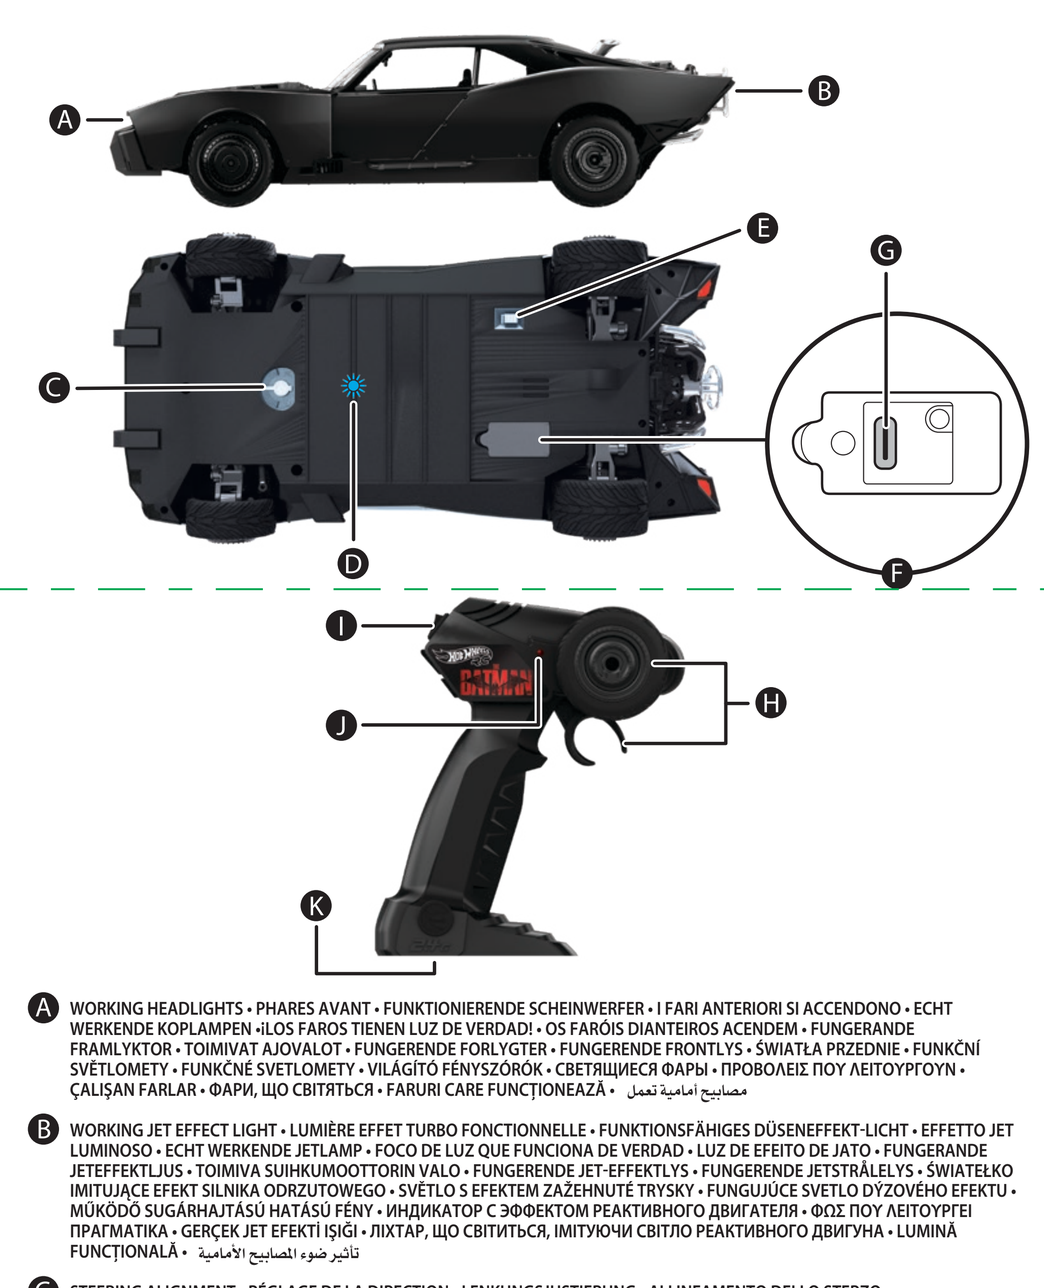


- A. WORKING HEADLIGHTS • PHARES AVANT • FUNKTIONIERENDE SCHEINWERFER • I FARI ANTERIORI SI ACCENDONO
- B. NEON JET EFFECT LIGHT • LUMIÈRE EFFET TURBO FONCTIONNELLE
- C. STEERING ALIGNMENT • RÉGLAGE DE LA DIRECTION • LENKUNGSJUSTIERUNG
- D. LED INDICATOR • INDICATEUR LED • LEUCHTANZEIGE
- E. ON/OFF SWITCH • INTERRUPTEUR MARCHE/ARRÊT • EIN-/AUSSCHALTER
- F. CHARGER CONNECTOR BOX • BOÎTIER DU CONNECTEUR DE CHARGEMENT
- G. CHARGE PORT • PORT DE CHARGE • LADEANSCHLUSS
- H. DRIVING CONTROLS • BOUTONS DE COMMANDE • ANTRIEBSREGLER
- I. ON/OFF SWITCH • INTERRUPTEUR MARCHE/ARRÊT • EIN-/AUSSCHALTER
- J. LED INDICATOR • INDICATEUR LED • LEUCHTANZEIGE
- K. BATTERY BOX • COMPARTIMENT À PILES • BATTERIEGEHÄUSE

3: SET UP • PRÉPARATION • VORBEREITUNG • PREPARAZIONE • VOORBEREIDINGEN • PREPARACIÓN • PREPARAÇÃO • FÖRBEREDELSER • VALMISTELU • OPSÆTNING • FORBEREDELSER • PRZYGOTOWANIE • PŘÍPRAVA • PRÍPRAVA • ELŐKÉSZÍTÉS • ПОДГОТОВКА • ΠΡΟΕΤΟΙΜΑΣΙΑ • KURULUM • ПІДГОТОВКА ДО ГРИ • PREGĂTIRE • الإعداد

A. REMOTE CONTROLLER BATTERY INSTALLATION • INSTALLATION DES PILES DANS LA TÉLÉCOMMANDE

1. Unscrew the battery cover with a Phillips head screwdriver (not included).
2. Install 2 AA (LR6) 1.5V alkaline batteries (not included) with polarity (+/–) as shown inside the battery compartment. For longer life, use alkaline batteries.
3. Replace battery cover and tighten screw.
4. Replace batteries in the remote controller if the vehicle does not respond well after a recharge or if you see a red light slowly flashing for approximately 10 seconds in the LED indicator during play.

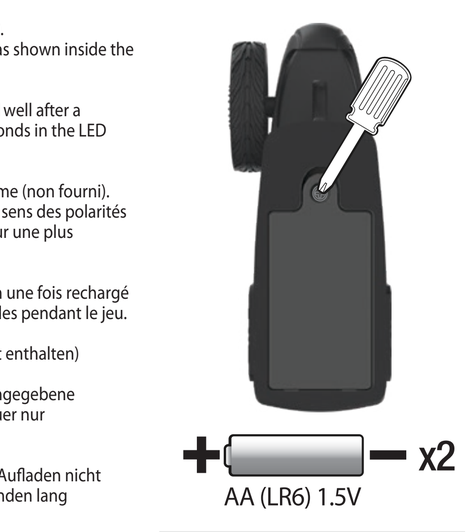

B. CHARGING THE VEHICLE • MISE EN CHARGE DU VÉHICULE • DAS FAHRZEUG AUFLADEN

The vehicle is powered by a permanently installed and non-replaceable Lithium-ion (Li-ion) battery, and it must be fully charged before first use.
1. Switch off the vehicle by sliding the power switch to OFF (O/⚡).
2. Unscrew the charger connector box cover with a Phillips head screwdriver (not included).
3. Connect one end of the charge cord to the vehicle's charge port and plug the other end in to a 5V/1000 mAH USB charger (not included). The blue LED by the charger connector box will light up when it is connected to a USB charger.
4. The blue LED will slowly flash as the vehicle is charging.
5. When the vehicle is fully charged, the blue LED will stop flashing and remain on. Unplug the cord when charging is complete. A full charge will take approximately 2-3 hours. Charging time may vary.
6. Replace the charger connector box cover and tighten screw.
7. Consider recharging the vehicle when the FORWARD/BACKWARD controls on the vehicle become disabled, as this means the battery level is running low. If the vehicle's headlights suddenly flash for approximately 10 seconds, this means the vehicle's battery is empty. The vehicle will shut off immediately and must be recharged.



BLUE LED BLINKING • VEHICLE IS CHARGING

BLUE LED ON • VEHICLE IS FULLY CHARGED


Low battery • Batterie faible • Batterie schwach • Batteria con carica ridotta

TIPS:
- The power switch must be in the OFF (O/⚡) position when charging the vehicle.
- The vehicle and remote controller will go into sleep mode if left idle for approximately 5 minutes to preserve battery life. To resume normal play, slide the vehicle's power switch to OFF then back to ON and move one of the remote controller's driving controls.
- Charging the battery for more than what is recommended will not give you a longer running time.
- The battery will be hot after play. Wait at least 10 to 15 minutes until the battery cools down before recharging the vehicle.
- It is recommended that you remove all the batteries from the remote controller and leave the vehicle's battery fully charged but switched OFF before storage.

C. PAIRING THE REMOTE CONTROLLER AND VEHICLE • SYNCHRONISATION DE LA TÉLÉCOMMANDE ET DU VÉHICULE

1. Slide the power switch to the ON (I) position on the vehicle.
2. Switch the remote controller on after switching on the vehicle.
3. Pairing is complete when the vehicle's headlights and the remote controller's LED stop flashing and remain on.


NOTE: If the LED indicator does not stop flashing in approximately 10 seconds, switch off the vehicle, turn it back on, and then switch the remote controller off and on to try pairing again.



Pairing • Synchronisation • Kopplung • Sincronizzazione

Pairing is complete • La synchronisation est terminée • Kopplung erfolgreich

D. STEERING ALIGNMENT • RÉGLAGE DE LA DIRECTION • LENKUNGSJUSTIERUNG • STUURAFSTELLING



1. Drive the vehicle forward to see if it is driving straight.
2. If the vehicle automatically steers toward the right/left, turn the steering alignment dial on the bottom of the vehicle to the opposite direction until the vehicle goes in a straight line.


4: HOW TO DRIVE • CONDUITE • SO GEHT'S • COME GUIDARE IL VEICOLO • RIJDEN • CÓMO CONDUCIR • COMO CONDUZIR • SÅ HÄR KÖR DU • KÄYTTÖOHJEET • SÅDAN KØRER MAN • SLIK KJØRER DU • JAZDA • ŘÍZENÍ • AKO JAZDIŤ • A JÁRMŰ VEZETÉSE • КАК ЕЗДИТЬ • ΠΩΣ ΝΑ ΟΔΗΓΗΣΕΤΕ • NASIL SÜRÜLÜR? • ЯК КЕРУВАТИ МАШИНКОЮ • CUM SE CONDUCE • طريقة القيادة

CHECKLIST • VÉRIFICATIONS • CHECKLISTE

- ☐ Is the vehicle's charger connector box cover closed properly?
- ☐ Is the vehicle's battery fully charged?
- ☐ Is the remote controller equipped with fresh batteries?
- ☐ Is the remote controller paired with the vehicle?
- ☐ Has the vehicle's steering been aligned?

- ☐ Le couvercle du boîtier du connecteur de chargement est-il correctement fermé ?
- ☐ La batterie du véhicule est-elle complètement chargée ?
- ☐ La télécommande est-elle équipée de piles neuves ?
- ☐ La télécommande est-elle synchronisée avec le véhicule ?
- ☐ La direction du véhicule est-elle correctement réglée ?

CONTROLS • COMMANDES • REGLER • COMANDI • BEDIENING • MANDOS • CONTROLOS • KONTROLLER



FORWARD/BACKWARD • MARCHE AVANT/MARCHE ARRIÈRE • VORWÄRTS/RÜCKWÄRTS • AVANTI/INDIETRO

LEFT/RIGHT STEERING • TOURNER À GAUCHE/À DROITE • LINKS/RECHTS-LENKUNG • STERZATA A SINISTRA/DESTRA

NOTE: Operating range of the remote controller is up to 25 m (82 ft).
REMARQUE : La portée de la télécommande est de 25 m.
HINWEIS: Die Reichweite der Fernsteuerung beträgt etwa 25 Meter.
NOTA: La portata massima del telecomando è di circa 25 m.

SKILL CHECK! • CONTRÔLE DES COMPÉTENCES • FAHRKÜNSTE TESTEN!

Remember, turning directions are flipped on the remote controller when you are driving backward!



5: CONSUMER INFORMATION • INFORMATIONS CONSOMMATEURS • VERBRAUCHERINFORMATION • INFORMAZIONI PER L'ACQUIRENTE • CONSUMENTENINFORMATIE • INFORMACIÓN PARA EL CONSUMIDOR • INFORMAÇÕES PARA O CONSUMIDOR • KONSUMENTINFORMATION • TIETOA KULUTTAJILLE • FORBRUGEROPLYSNINGER • FORBRUKERINFORMASJON • INFORMACJE DLA KLIENTA • INFORMACE PRO SPOTŘEBITELE • INFORMÁCIE PRE SPOTREBITEĽA • VÁSÁRLÓKNAK SZÓLÓ TÁJÉKOZTATÓ • ИНФОРМАЦИЯ ДЛЯ ПОТРЕБИТЕЛЕЙ • ΠΛΗΡΟΦΟΡΙΕΣ ΠΡΟΣ ΤΟΝ ΚΑΤΑΝΑΛΩΤΗ • TÜKETİCİ BİLGİLERİ • ІНФОРМАЦІЯ ДЛЯ СПОЖИВАЧА • INFORMAȚII PENTRU UTILIZATOR • معلومات للمستهلك

TIPS & HINTS – FOR ALL DRIVING ENVIRONMENTS



1. When your vehicle starts to lose power, it may lose functionality or performance. It's time for a recharge. For best performance, always start with a fully-charged battery. Your vehicle's running time may change depending on driving style and driving environment.
2. Radio interference can make your vehicle run badly. Interference can be caused by other RC vehicles running on the same frequency, electrical wires, large buildings, CB radios, or other wireless gear. Try to stay away from these!
3. Point your remote controller up, and not down toward your vehicle. If your vehicle gets too far away, it won't work properly.
4. Don't store your vehicle near heat or in direct sunlight. Always turn switches OFF and remove all batteries from remote controller before storage.
5. Don't drive your vehicle in sand or through water or snow. Do not immerse in water. If your vehicle does get wet, wipe it with a towel and allow to dry completely overnight. If your remote controller is accidentally dropped in water, remove battery(ies) and allow your remote controller to air dry. Replace with fresh battery(ies) before operation.
6. When exposed to an electrostatic source, the remote controller and/or the vehicle may malfunction. To resume normal operation of the remote controller, remove the batteries and reinstall them after 5 seconds. To resume normal operation of the vehicle, turn the power OFF for 5 seconds, then turn it ON again.
7. Play safely! Do not drive the vehicle in the street!

SAFETY TIPS • CONSEILS DE SÉCURITÉ • SICHERHEITSHINWEISE

Play safely! Do not drive the vehicle in the street! • DO NOT pick up the vehicle while in motion. • Keep fingers, hair, and loose clothing away from the wheels while the vehicle is switched ON. • Adult supervision is recommended when this vehicle is being operated. • To avoid accidental operation, remove all batteries from the remote controller when not in use and switch the vehicle OFF before storage.

RECHARGEABLE BATTERY SAFETY INFORMATION • MISES EN GARDE AU SUJET DES PILES RECHARGEABLES

Rechargeable batteries are only to be charged under adult supervision. • Do not recharge battery if it is hot. Allow it to cool before recharging. • Do not recharge a battery pack that shows leakage or corrosion. • Do not disassemble the battery pack. The battery pack is a sealed rechargeable Li-ion battery pack. • If the battery pack and/or charging port are wet, thoroughly dry before charging. • Do not recharge non-rechargeable batteries. • The Li-ion battery in the vehicle is not intended to be replaced or removed by consumers. Before disposal in the waste stream, the Li-ion battery must be removed by a qualified professional and disposed of separately according to local regulations on battery collection and recycling. • Do not dispose of the batteries in a fire.

BATTERY SAFETY INFORMATION • MISES EN GARDE AU SUJET DES PILES

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:
- Non-rechargeable batteries are not to be recharged. • Rechargeable batteries are only to be charged under adult supervision. • Do not mix old and new batteries. • Only batteries of the same or equivalent type as recommended are to be used. • Batteries are to be inserted with the correct polarity (+ and –). • Exhausted batteries are to be removed from the product. • The supply terminals are not to be short-circuited. • Dispose of battery(ies) safely. • Do not dispose of this product in a fire. The batteries inside may explode or leak.

ADVERTÊNCIA! NÃO RECARREGAR PILHAS NÃO RECARREGÁVEIS;

Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

FOR PRODUCT SOLD IN USA • POUR LES PRODUITS VENDUS AUX ÉTATS-UNIS

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

FOR PRODUCT SOLD IN CANADA • POUR LES PRODUITS VENDUS AU CANADA

This equipment complies with FCC & Canada radiation exposure limits set forth for uncontrolled environments.
This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:
(1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados.

Este produto está homologado pela ANATEL, de acordo com os procedimentos regulamentados pela Resolução n°. 242/2000 e atende aos requisitos técnicos aplicados.

Para maiores informações, consulte o site da ANATEL – www.anatel.gov.br