

Please keep this owner's instruction manual for future reference.
We reserve the right to improve the product specifications without notice.
Class 1 LRFD Product

Contents:


- RC Vehicle With Built-in Rechargeable Battery (non replaceable) x 1
- Controller x 1
- USB Cable x 1
- 1.5V "AAA" LR03/R03 non-rechargeable Battery (For Controller Use) x 2
- Owner's Instruction Manual x 1

Charging the built-in rechargeable battery for the RC vehicle (Refer to Diagram 1)

1. Open the charging port cover on the vehicle.
2. Make sure the switch is on the CHARGE position before charging.
3. Locate a USB certified port from any of the devices shown here.
4. Connect the USB charging plug with the USB certified port.
5. Once the charge LED indicator will start twinkle in green to show it is charging.
6. Once the charge LED indicator stay on green, the battery is fully charged.
7. Detach the USB plug from the USB certified port, then install the charging port cover on the vehicle.

Battery installation for the controller: (Refer to Diagram 2)


1. Switch the power OFF.
2. Use screwdriver to loosen the screw on the battery cover and to open the battery cover. (Screwdriver is not included)
3. Install 2 new 1.5V "AAA" LR03/R03 batteries with correct polarity (+/-) as shown inside the battery compartment.
4. Install the battery cover and then tighten the screw on the battery cover.

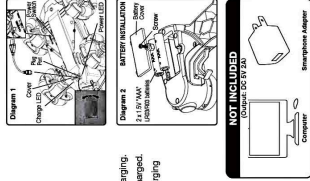

- How to play: (Refer to Diagram 3, 4 & 5)**
1. Set the "Power Switch" on the controller and vehicle to ON position, the "Power LED" on both the controller and vehicle will flash less than 3 seconds then stay on, meaning the automatic frequency matching between the controller and the vehicle is completed.
 2. The "Power LED" of the controller or the "Power LED" of the vehicle flash more than 3 seconds, it means the frequency matching failed, please turn off the power switch and restart.
 3. The top LED will light in blue when the power of the vehicle is turned on.
 4. Pull the trigger on the transmitter to drive the vehicle forward. Push the trigger on the transmitter to drive the vehicle backward.
 5. Pull or push the trigger on the transmitter and turn the steering wheel to control the vehicle turn to left or right.
 6. Push the trigger on the transmitter and turn the steering wheel to control the vehicle spin 360°.
 7. The different combinations of the trigger and steering wheel to perform different sideways drifting stunt actions.
 8. The "Power LED" on the vehicle will not flash nor stay on if the rechargeable battery has run out power.
 9. Turn the switch of the controller and vehicle to OFF position when not in play.

Performance Tips:

1. Do not drive the vehicle on grass.
2. Do not drive the vehicle in windy or rainy weather.
3. Do not drive the vehicle into any hard object.
4. Keep fingers, hair and loose clothing away from the vehicle.
5. The vehicle may be affected by a variety of factors:
 - a) Weak controller or vehicle batteries.
 - b) Interference from other items that emit radio frequency signals such as another RC item or the wireless security, cell phones, cordless tools, etc. with high voltage transmitter, etc.
 - c) Outdoor usage is recommended.
6. In order to get optimal control range, remove the package, take out all accessories and assemble the vehicle before giving it to children to play.

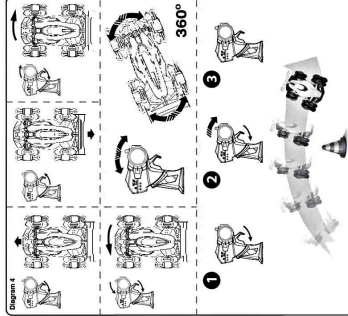

Disposal of batteries

Batteries should not be disposed of in the household waste. As the consumer you are legally obliged to return batteries containing harmful substances and all other used batteries. You can hand in your old batteries at public collection points in your area or wherever batteries are sold.

You will find these chemical abbreviations along with a crossed-out refuse bin on batteries containing harmful substances:

Pb = Battery contains lead
Cd = Battery contains cadmium
Hg = Battery contains mercury

RS2-210 Compliance Statement:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

1. This device may not cause interference;
2. This device must accept any interference, including interference that may cause undesired operation of the device.

FCC Label Compliance Statement:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions :

1. This device may not cause harmful interference, and
 2. This device must accept any interference received, including interference that may cause undesired operation.
- Note: This equipment has been tested and found to comply with the requirements under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Conservez ce mode d'emploi pour vous y reporter dans le futur.
Nous nous réservons le droit de modifier/améliorer les caractéristiques du produit sans avis préalable.
Produit de classe 1 LED

Contenu :


- Véhicule Radiocommandé Avec Batterie Incorporée (non remplaçable) x 1
- Contrôleur x 1
- Câble USB x 1
- 2 Piles 1.5V "AAA" LR03/R03 non-rechargeables (Pour l'émetteur)
- Mode d'emploi x 1

Recharge du pack batterie du véhicule RC: (Voir Diagramme 1)

1. Ouvrir le couvercle de la prise de charge du véhicule.
2. Veillez à ce que l'interrupteur soit sur la position CHARGE avant le rechargement.
3. Branchez le port USB d'un appareil quelconque (téléphone, ordinateur, etc.) au port USB du véhicule.
4. L'indicateur LED de charge clignotera en vert pour confirmer le rechargement en cours.
5. La batterie sera complètement rechargée lorsque la lumière verte de l'indicateur LED ne clignotera plus.
6. Débranchez la prise USB du port USB certifié, puis initialisez le capot du port de rechargement sur le véhicule.

Mise en place de la pile de la télécommande: (Voir Diagramme 2)


1. Coupez l'alimentation (OFF).
2. Dévissez le vis du couvercle des piles à l'aide d'un tournevis et retirez le couvercle. (Tournez non forcé)
3. Mettez en place 2 piles alcalines 1.5V "AAA" LR03/R03 neuves en respectant les polarités (+/-) indiquées dans le compartiment des piles.
4. Refermez le couvercle en place et serrez le vis.

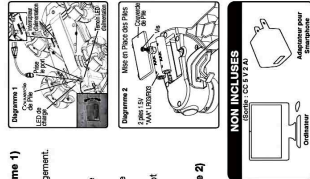

- Comment jouer: (Voir Diagrammes 3, 4 & 5)**
1. Mettre les interrupteurs d'alimentation de la télécommande et du véhicule en position ON (marche), les LEDs témoins d'alimentation du véhicule et de la télécommande s'allument pendant moins de 3 secondes puis restent fixes, indiquant que la bonne synchronisation automatique des fréquences entre la télécommande et le véhicule.
 2. Si les LEDs de la télécommande ou du véhicule clignotent pendant plus de 3 secondes, arrêtez le véhicule ainsi que la télécommande, puis réinitialisez.
 3. La LED du dessus s'allume en bleu lorsque le véhicule est allumé.
 4. Tirez sur le manche de la télécommande pour faire avancer le véhicule.
 5. Pousser sur le manche de la télécommande pour faire reculer le véhicule.
 6. Tournez le volant à gauche ou à droite pour contrôler la rotation du véhicule à 360°.
 7. Essayez différentes combinaisons avec la gâchette et le volant pour effectuer différents dérapages contrôlés.
 8. La LED d'alimentation du véhicule ne sera ni allumée ni clignotante si la télécommande est éteinte.
 9. Mettez l'interrupteur d'alimentation du véhicule sur OFF lorsque vous ne l'utilisez pas.

Conseils pour de meilleures performances:

1. Ne roulez pas sur l'herbe, le gravier ou sur tout autre terrain pavé.
2. Ne roulez pas par temps pluvieux ou venteux.
3. Ne faites pas retirer le véhicule dans un objet dur.
4. Gardez vos doigts, vos cheveux et vos vêtements loin du véhicule.
5. La portée utile peut être affectée par différents facteurs:
 - a) Piles faibles dans l'émetteur
 - b) Interférences en provenance d'appareils émettant des ondes radio (téléphone, ordinateur, etc.)
 - c) La fréquence du véhicule émetteur sur la même fréquence que celle d'un autre véhicule.
6. Il est recommandé de jouer à l'extérieur pour maximiser la portée utile.
7. Retirez l'emballage, sortez tous les accessoires et assemblez le produit avant de le donner à un enfant (pour qu'il joue avec).

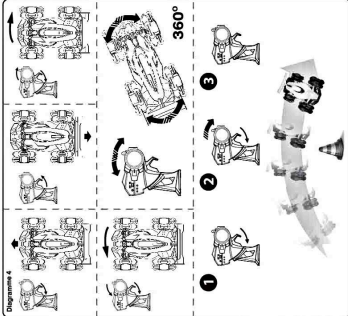

Mise au rebut des piles

Les piles ne doivent pas être jetées avec les ordures ménagères. En tant qu'utilisateur, vous êtes légalement tenu de retourner les piles contenant des substances dangereuses ainsi que toutes les autres piles usagées. Vous pouvez rapporter vos piles usagées à un point de collecte public local ou à tout point de vente de piles.

Vous trouverez des abréviations chimiques ainsi que le symbole d'une poubelle barrée sur les piles contenant des substances dangereuses:

Pb = Pile contenant du plomb
Cd = Pile contenant du cadmium
Hg = Pile contenant du mercure

Déclaration de conformité CNR-210:

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Science et Développement Canada sur les radio-appareils exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

1. L'appareil ne doit pas produire de brouillage.
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

