攤開尺寸: x 10.6 cm
單面尺寸: 9.6 x 10.6 cm
KM-9550 單色印刷
M行折法 20230531

封底

GIGASTONE
Taipei | Los Angeles | Shenzhen | Tokyo

Los Angeles
Address : 17520 Von Karman Ave, Irvine, CA 92614
Tel : +1-949-450-2900
E-mail : service@gigastone.com
Website: www.gigastone.com

Tokyo
製 造 元:Gigastone Corporation
輸 入 元:Gigastone Japan株式会社
サポート窓口:Gigastone Japan株式会社
営業時間 : 10:00～18:00, 土日祝日を除く
TEL: 03-5341-4207
E-mail:service@gigastone.com
Website: https://gigastone.jp

Taipei
進口商 / 委製商：立達國際電子股份有限公司
公司地址：114 台北市內湖區新湖二路166號4樓
客服電話：+886-3-925-5893
服務信箱：service@gigastone.com
台灣官網：tw.gigastone.com

©2023 Gigastone Corporation
All rights reserved. All registered logos and trademarks are the property of their respective owners.

台紙
内台紙
透明カバー
トレイ：PET
RoHS
CCAJ22LPXXXXXX
R37846
RoHS

California Residents
WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

製品特徴

1. 内蔵バッテリー5000mAh、連続使用時間7-8時間
2. 10Wスピーカー
3. 原曲キー調整対応
4. 様々なカラオケアプリに対応、 いつでもBluetoothでカラオケ可能
5. デュエッ トモード対応 (2台のカラオケマイク同時接続が可能)
6. 合格認証: NCC、BSMI、UL2056、CE、ROHS、FCC、PSE

ガイドライト

1. 充電時、液晶内のLEDランプが赤く点灯します
2. Bluetooth未接続時、電源ボタンのLEDランプは点滅します
3. Bluetooth接続成功時（デュエットモード含む）、電源ボタンのLEDランプは点灯します
4. 満充電の際、液晶内のLEDランプが緑に点灯します

使用方法

1. 電源オンオフ：電源ボタンを3秒長押しすることで電源がオンになります。電源ボタンのLEDライトが点滅します。
2. Bluetooth接続：スマホのBluetooth接続からKMH-9550を選び接続します。接続に成功すると音声による案内があります。 一度Bluetooth接続すると次回から自動接続可能です。
接続を解除したい場合は、スマホからBluetooth接続を解除してください。
3. 各ボタンの操作方法に関して、裏面の「各部名称」ページにご参照ください。
4. 充電時、液晶の電池マークが赤く点灯し、満充電になると緑色に点灯します。
充電残量が不足している場合は、液晶の電池マークが赤く点滅し、カラオケマイクから"電池残量が不足しています。充電してください"と音声が流れ自動的に電源オフになります。
5. 録音ケーブルと充電ケーブルに関しまして
USB A to USB Type Cの充電ケーブルにつきましては、内部のリチウムイオン電池の損傷を避ける為、30W以下のPSE認証を得ているACアダプターを使用し、充電してください。
USB Type C to USB Type C 録音用のケーブルにつきましては、録音用のケーブルのケーブルでございますので、充電に使用しないでください。

スマホの録音、音楽アプリに関して

1. 録音コードをマイク に対応したソケットに差し込みます ：3.5mmイヤホンジャックにスマホのイヤホンジャック(又はType-Cポート)に接続し、スマホで表示されれば接続は成功です(スマホのメーカーによりイヤホン接続成功の表示が異なります)。
2. カラオケアプリ：例、Youtube、ポケカラ、カラオケ@DAM、Karaparty、JOYSOUNDなどで、自分のお好きな曲を歌い、録音することも可能です。(アプリの機能やバージョンにより、録音できない場合がございます)。

MicroSDから音楽を再生

1. 本体のMicroSDカード差込口にMicroSDカードを挿入すると、MicroSDカード内の音楽ファイルを自動で再生します。（Bluetooth 接続中の場合は、MicroSDカードが優先して再生されます。）
2. MicroSDカードから音楽を流れている際、音量、エコー、キーなどを調整することも可能です。

特殊効果設定

1. デュエットモードに関して
まず、Bluetooth接続済みの機器とは接続しないようにしてください。
デュエットモードに使用するカラオケマイクを2台とも電源をオンにし、お好きな方のカラオケマイクの電源ボタンを2回押してください。
デュエットモードが成功した場合は、電源ボタンのLEDが点灯します。
（デュエットモードに失敗した場合は、電源ボタンのLEDが点滅します）
※デュエットできる端末に関して、同じ9550シリーズのカラオケマイクのみになります。
2. キー調整：カラオケ中に伴奏のキーを調節できます。
3. ボイスチェンジ：「男性声」、「女性声」、「オリジナル音声」の3種類があります、通常はオリジナル音声です。
4. ボーカルカット：メインボーカルの音声をカットできます。

商品規格

型番	KMH-9550
Bluetooth	Bluetooth5.0
スピーカ出力	10W
充電入力	5.0V 1.5A
バッテリー容量	5000mAh
使用時間	7-8時間
充電時間	4-5時間
操作温度	0-35度
バッテリー種類	リチウム電池
製品材質	アルミ合金＋ABS＋PC
製品寸法	237.1 x 77.7x 86.2mm
製品重量	499g±10g

使用上のお願い

- ・極端な高温・低温・高湿はお避けください。 周囲温度5℃～35℃、周囲湿度45%～85%の範囲内で保管、ご使用ください。
- ・ほこりや振動の多い場所では使用しないでください。
- ・汚れた場合は柔らかい布で乾拭きしてください。ベンジン・シンナー・アルコール・洗剤などは使用しないでください。
- ・磁気を帯びたものは近づけないでください。
- ・周囲に迷惑にならないよう音量を調整してご使用ください。

故障かな？と思ったら

現象	原因	対処方法
電源が光らない	充電残量が少ないまたは接触が悪い	充電ケーブルと接続先を確認し、正しく充電してください
マイクから音が出ない	・電源が入ってない ・マイクの音量が調節されていない	電源をオンにしてボリュームを調節してください
録音できない	ご利用のスマホの機種が対応していない	スマホの機種を変更してご利用ください
歌っている時にノイズが入る	・周囲のノイズを拾っている ・スマホからの信号にノイズが含まれている	静かな場所に移動し、スマホと十分な距離を取ってください
Bluetooth接続中に演奏が途切れる	・マイクとスマホの距離が遠すぎる ・間に障害物がある	・マイクとスマホを近づけ、障害物をなくしてください ・別のスマホとの接続を解除してください
Bluetoothが接続できない	・マイクとスマホの距離が遠く、その間に障害物がある ・別のスマホとBluetoothが接続されている	別のスマホとの接続を解除して、再度接続したい端末と接続する
音楽が聞こえない、または音が出ない	スマホの音量が低いか、音楽ファイルの音量が低い	・スマホやメディアツールの音量を調整する ・音質の良い音楽ファイルをダウンロードする ・ダウンロードした音楽ファイルを適切なフォルダに移動する
Bluetooth接続中に音が歪んで聴こえる	音量が大きすぎるまたは充電残量が少ない	・スマホやアプリの音量を調節する ・マイク本体を充電する
Bluetooth接続中に録音できない	スマホがBluetooth接続に対応していない	録音ケーブルを使うか、アプリを使用する
ボーカルカットが機能しない	音源ファイルの音質が悪い	音質の良い音源をダウンロードする
マイクから出る声が小さい	ボーカルカットしたままになっている	ボーカルカットをオフにする
Bluetooth接続中に伴奏音源の音が小さい、または音が出ない	スマホの音量が低い、または音源が低い	スマホの音量を調整する、またはスピーカー機能を調整する

安全上のご注意 （必ずお守りください）

人への危害、財産の損害を防止するため、必ずお守りいただくことを説明しています。

■ 誤った使い方をしたときに生じる危害や損害の程度を区分して、説明しています。

⚠危険	「死亡や重症を負うおそれが大きい内容」です。
⚠警告	「死亡や重症を負うおそれがある内容」です。
⚠注意	「軽症を負うことや財産の損害が発生するおそれがある内容」です。

■ お守りいただく内容を次の図記号で説明しています。

⊘	してはいけない内容です。
❗	実行しなければならない内容です。

⚠危険	
⊘	分解、改造しない。
⊘	発熱や異常を感じましたら、すぐさま使用をやめてください。 メーカーまで連絡してください。

⚠警告	
⊘	水やその他の液体にいれたり、ぬらしたりしない。 ぬれた手で扱わない。 毛布などをかぶせた状態で充電しない。 コンセントや配線器具の定格を超える使い方はしない。
❗	お子さまやペットに危険が無いよう十分注意する。 ACアダプタのほこりなどは定期的にとる。ACアダプタは根本まで確実に差し込む。

⚠注意	
⊘	5～35℃以外の場所では充電しない。直射日光のあたる場所や高温の場所で充電しない。 磁気カードや磁気記録メディア、精密機器などを近づけない。 ACアダプタが傷んだり、コンセントの差し込みがゆるいときは使用しない。
❗	湿気やほこりの少ない場所で使用・保管する。 使用時以外はACアダプタをコンセントから抜く。

保証規定

1. 本書の保証書にお買上げ日、販売店名が記載されているかお確かめください。記入漏れ、改ざんがある場合、保証書および保証規定は無効となります。
2. 保証期間内に、本書の注意書きに従った正しい使用状態で製品が故障した場合には、正常品と交換対応させていただきます。
3. 保証期間内でも以下の場合には交換対応出来ない場合があります。
① 本書に従った正しい使用がなされなかった場合
② 修理や改造による故障や損傷の場合
③ 使用および取扱い上の過失、事故による故障や損傷の場合
④ 落下、水没、水濡れ、湿気などの痕跡がある場合
⑤ 地震、風水害などの天災および火災、塩害、異常電圧などによる故障や損傷の場合
⑥ 本書の提示がない場合
4. 本書記載の機器が故障したことにより発生した損害・損失については責任を負いかねます。
5. 本製品を指定外の機器と接続して使用した場合、万一発生した事故については責任を負いかねます。
6. 出張による対応はお受け出来ません。
7. 本保証は日本国内においてのみ有効です。

保証書 Guarantee	
商品名 Product name	カラオケマイク KMH-9550シリーズ
保証期間 Warranty period	お買い上げ日より1年 One year from the date of purchase
購入日 Purchase date	
販売店 Purchase shop	店名 Shop name 電話番号 Telephone number
お客様(※2) Customer information	お名前 Name ご住所 Address 電話番号 Phone number

※１お買い上げ日欄、販売店欄はお買い上げの販売店様でご記入いただくか、ご購入が確認できる証明書（レシート、納品書など）を一緒にご提示ください。ご購入が確認できない場合や、記入漏れ、改ざんがある場合、保証書および保証規定は無効となります。

※2お客様欄のすべての項目に楷書で明確にご記入下さい。

封面

GIGASTONE

KMH-9550

Bluetooth Karaoke Microphone
Bluetoothカラオケマイク
藍牙無線麥克風

User Guide
説明書
使用手冊

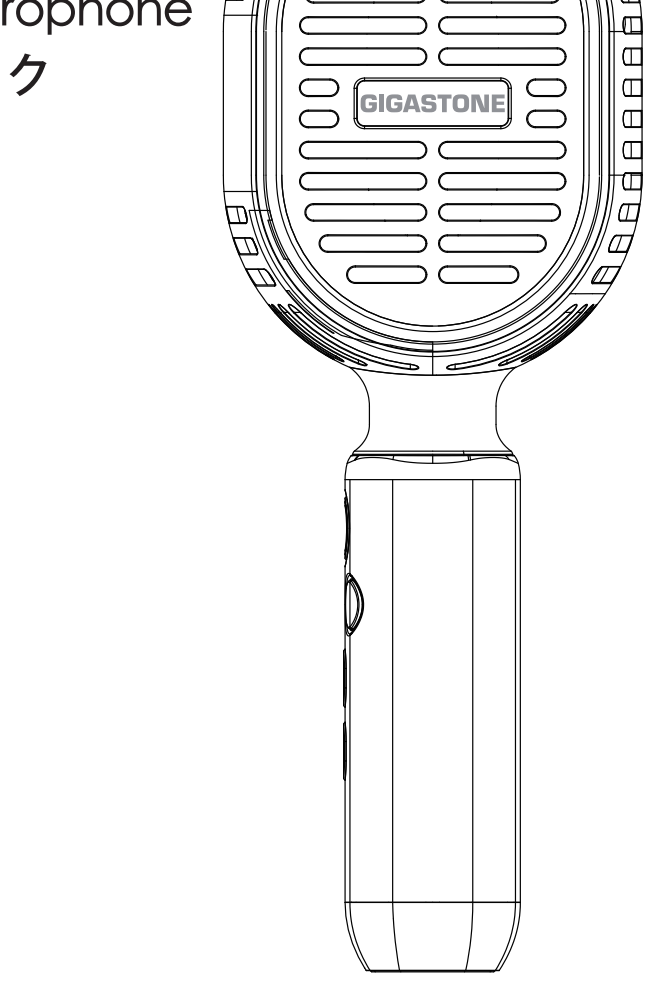

保証書付

內面

Product Introduction / 各部名称/ 產品功能介紹

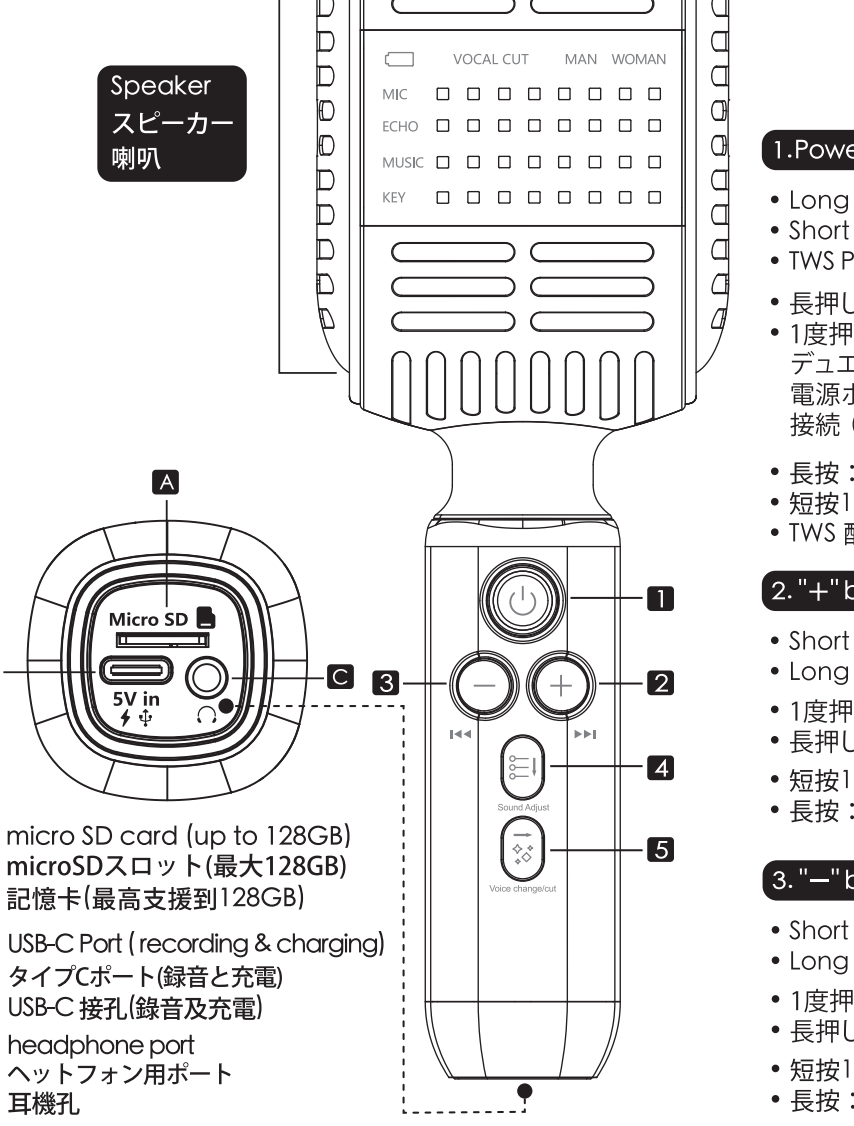

A micro SD card (up to 128GB)
microSDスロット(最大128GB)
記憶卡(最高支援到128GB)

B USB-C Port (recording & charging)
タイプCポート(録音と充電)
USB-C 接孔(錄音及充電)

C headphone port
ヘッドフォン用ポート
耳機孔

1.Power Button | 電源ボタン | 電源鍵

- Long press: Power on/off
- Short press once: Music start/off
- TWS Pairing Button
- 長押しで電源オン・オフ
- 1度押しで再生、一時停止、デュエットしたいマイクの内１台の電源ボタンを2回押しでデュエット接続（2つのマイクを同期可能）
- 長按：電源啟動/關閉
- 短按1下：音樂暫停/開始
- TWS 配對按鍵

2. "+" button | ＋ボタン | "+"鍵

- Short press once: Volume up
- Long press: Next song
- 1度押しで音量を上げ、
- 長押しで次の曲に移動します。
- 短按1下：音量上調一格
- 長按：下一首曲目

3. "–" button | ーボタン | "ー"鍵

- Short press once: Volume down
- Long press: Back to previous song
- 1度押しで音量を下げ、
- 長押しで前の曲に戻ります。
- 短按1下：音量下調一格
- 長按：倒回前曲

4. Function Switch | Sound adjustボタン | 機能切換鍵

- Short press to switch to microphone volume, music volume and key adjustment, then use +- button to adjust level
- Sound adjustボタンで「マイク」/「エコー」/「伴奏」/「キー」を選択後、＋ーボタンで調整可能。
- 短按後,可依序切換「麥克風音量」、「伴奏音量」、「Key的高低」,再用＋ー鍵來調整 。

5. Voice change/cut | Voice change/cutボタン | 變音及去人聲鍵

- Short press to switch to man or woman
- Long press to activate vocal cut
- 1度押しで男声/女声を切り替えます。
- 長押しすると「Voice cut」機能が開始されます。
- 短按:切換成男聲/女聲
- 長按:降低歌曲中歌手聲音

Package Contents/ パッケージ内容/ 包裝內容物

Karaoke Microphone | カラオケマイク | 麥克風 x1
Charging Cable | USB-C充電用ケーブル | USB-C充電線 x1
Audio Cable | 録音用ケーブル | 錄音線 x1
User Manual | 保証書付きユーザーマニュアル（本書）| 說明書 x1

Features

- Independently developed 8-stage music key adjustment function (original key, raise key +1~+4, lower key -1~-3)
- Stable connection and low-latency with Bluetooth 5.0
- TWS function, two microphones can be connected at the same time, support duet singing
- 2 voice change function (man and woman)
- Vocal cut function
- Equipped with one audio jack port and one type-c input port for charging
- Support micro SD card up to 128GB
- Eight levels adjustment for echo effect, singing volume and music volume
- Friendly LED display screen

Product Function Instruction

(1) Power On/Off: Press and hold the power button for three seconds. When powering on, the power button indicator will flash.
(2) Bluetooth Connection: Turn on Bluetooth on the phone and go to phone's Bluetooth menu and search for "KMH-9550" to pair with Bluetooth. Once connected successfully, you will hear a prompt sound, and the power button indicator will change from flashing to solid. After the Bluetooth microphone is successfully paired with the phone, it will automatically connect in future use. To disconnect the Bluetooth, please disconnect it from the Bluetooth menu on the phone.
(3) Start Singing: During singing, you can control the start/pause and next/previous track functions from your phone, or you can use the buttons on the microphone to execute these functions.
(4) TWS Pairing
Step 1: Power on both microphones that will be used for TWS pairing.
Step 2: Double-click the power button of one microphone to initiate TWS pairing. At the beginning of the pairing process, the power button light of the microphone will keep flashing.
Step 3: After the two microphones are successfully paired in TWS mode, you will hear a prompt sound, and the power button indicator will change from flashing to solid.
Step 4: After TWS pairing is successful, open the Bluetooth menu on your phone and search for the device name "KMH-9550" to complete the Bluetooth connection with the phone.
(5) Key Adjustment: During singing, you can adjust the key of the song with the up/down button.
(6) Echo Adjustment: During singing, you can adjust the echo of the voice with the up/down button.
(7) Voice Change Adjustment: Use the voice change button to change the voice between male, female & original voice. The product defaults to the original sound when powered on.
(8) Vocal Cut: The vocal cut function reduces the original vocal in the original video/audio file.
(9) Mobile Phone Recording:
Step 1: Use a "Type-C to Type-C" or "Type-C to Lightning" recording cable with data transfer capability. Connect one end of the cable to the Type-C interface of the microphone and the other end (Type-C or Lightning) to the corresponding port on your phone. When the headphone icon appears on your phone, the connection is successful.
Step 2: Open a recording app on your phone, such as "Sing! Karaoke" or any other recording app. Choose your favorite song and start recording.
Step 3: After recording, press the save button. You can then replay the recording to listen to what you recorded.
(10) Playing Music Using the Connection Cable:
Use a "Type-C to Type-C" or "Type-C to Lightning" cable with data transfer capability. Connect one end of the cable to the Type-C interface of the microphone and the other end (Type-C or Lightning) to the corresponding port on your phone. When the headphone icon appears on your phone, the connection is successful. You can then choose your favorite song to play. During use, you cannot control the volume, next/previous track, or play/pause functions through the microphone. You can only control them through the connected phone or other devices.
(11) Playing Music from a Memory Card:
In Bluetooth connection mode: Insert a memory card into the Micro SD slot. The microphone will prioritize playing MP3 music from the memory card. You can use the microphone's power button to switch between play, pause, skip next or previous song. If you exit the memory card mode, the microphone will return to the Bluetooth connection mode.
Please note, When a memory card is inserted, Bluetooth search and connection are not available.
(12) Charging using the Type-C Port: When charging, please use a USB-A to USB-C charging cable and a charger that complies with safety regulations (please use a charger below 20 watts) to avoid damaging the Bluetooth microphone.
(13) When using the Bluetooth microphone as a speaker to listen to music, you can first adjust the microphone volume to the minimum and then increase it according to your needs.

Trouble Shooting

Issues	Reason	Solutions
No sound from microphone	Microphone volume is small.	Please raise up the volume of microphone.
No echo effect	Echo effect is small	Please raise up the echo effect.
Failure with wired recording	1. Microphone didn't receive the sounds. 2. The cable used is without OTG function.(Please be noted that the apple original Lightning to Type C-cable is without OTG function.)	1. Please keep the microphone at correct site when singing. 2. Change a cable with OTG function.
Noise when singing	The Bluetooth signal is too weak.	Keep the microphone and mobile phone near within 5 meter so that the Bluetooth signal stronger.
Music interruption under the Bluetooth connection	The microphone is too far from the mobile phone.	Move the microphone closer to the mobile phone and avoid the obstacle.
Failure of Bluetooth connection	1.Bluetooth distance is too far between the microphone and a mobile phone. 2.Microphone is Bluetooth connected with other mobile phone. 3.Micro SD card is in the microphone already.	1. Move the microphone closer to the mobile phone and avoid the obstacle. 2. Disconnect the Bluetooth between microphone and other mobile phone. 3. Take off the SD card from microphone.
Music volume is too small	1.The volume of mobile phone is low 2.Music file has low sound volume 3.Microphone music is low.	1. Raise volume of mobile phone. 2. Dow nload music file with clear sound. 3. Raise volume of the microphone music.
High pitched squeals occur	The microphone is too close with magnetic material, such as microphone speaker.	Since the microphone itself or the mobile phone contain magnetic substances, when setting up TWS function, please keep the two microphones standing upright and the microphone should not be too close to the speaker.
Vocal in the music is weak	Vocal cut function is on.	Turn off the vocal cut function.

Specification

Product Name	Bluetooth Microphone
Model Name	KMH-9550
Bluetooth	V5.0
Speaker Output	10W
Battery	5000mAh
Microphone Using Time	3~4 hours
Music Play Time	6~7 hours
Charging Time	4.5 hours
Micro SD card support	up to 128GB
Size	236x76x86mm
Weight	499±10g
Warranty	1 Year

Warning

1. Read user manual carefully before using KMH-9550.
2. Please do not dispose the product in fire or liquid. And do not disassemble or modify KMH-9550.
3. Do not knock or crash the product. Keep KMH-9550 dry and away from damp and erosive goods.

Warranty Information

1. For any defect, in the judgement of our technician, caused under normal use, we are responsible for repairing for free of charges 12 months commencing from the date of purchase at the discretion of our company.
2. A valid warranty voucher or any original purchase invoice must be presented upon request for warranty service.
3. During warranty period, this warranty shall not apply to the product if (a) it has explicitly modified or repaired in any way by any person other than technicians of our company, or (b) it has been damaged through misuse, malicious acts, negligence, and flow in any liquid, accident or natural calamities.
4. All conditions refer to the English version.
5. If any damage causes to your product due to wrong usage, our company will not take any responsibilities.

Limited Warranty

Thank you for purchasing Gigastone KMH-9550.
Gigastone warrants that the product is free of defects in workmanship and material at the time of its original purchase. This original warranty card and original invoice must be presented at the time you require warranty service or such warranty will be voided.
This limited warranty is valid only if the products is used for the purpose for which it was designed. It does not apply to damage or loss caused by negligence, physical abuse,misuse, accident, exposure to moisture, dampness, extreme thermal, unauthorized, modifications, unauthorized opening or repair, forces of nature, or other actions beyond the reasonable control of Gigastone. In case of when the warranty does not apply, a repair of replacement charge will be incurred. The customer shall be responsible for sending the defective product to the service center and get back the repaired or replaced product from the service center.
Note: Gigastone reserves the right to interpret the terms and conditions contained herein, and the right for any charges without prior notice.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

產品特色

1. 獨立開發八階段音樂Key調整功能 (原音 、升Key四階 、降Key三階)
2. 藍牙5.0連接穩定低延遲
3. TWS功能,兩台麥克風可同時連接進行二重唱
4. 變音功能,您可以變音成男人或是女人
5. 人聲消除功能, 您可以消除原唱的聲音
6. 搭載一個耳機插孔、以及一個Type-C接孔用於充電及錄音
7. 支持micro SD記憶卡(最高支援到128GB)
8. 回音、麥克風音量以及音樂音量有八段可進行調整
9. 清晰易懂的LED螢幕

指示燈

1. 充電時,LED屏幕上的電池符號亮紅色,充滿電後改亮綠色 。
2. 未連接藍牙時,手柄上電源鍵LED燈為閃爍狀態,藍牙連接成功以及TWS配對成功,LED燈會變為恆亮 。

耳返功能

連接3.5mm的耳機,麥克風的音樂可即時回傳到耳機 。

各功能操作方法介紹

(一)開關機：長按電源鍵三秒 。開機時,電源鍵指示燈閃爍 。
(二)連接藍牙：開啟手機藍牙選單並搜尋KMH-9550進行藍牙配對,連接成功後會聽到提示音,此時電源鍵指示燈從閃爍變為恆亮 。藍牙麥克風與手機配對成功一次後,下次使用會自動連接 。如需斷開藍牙,請從手機藍牙選單上斷開連接 。
(三)開始唱歌：唱歌過程中可以從手機控制開始/暫停 、上下首,也可以使用麥克風上的按鍵做調整 。
(四)TWS配對
步驟一：將要進行TWS配對的兩支麥克風開機 。
步驟二：點擊其中一支麥克風的電源鍵兩下以進行TWS配對 。剛開始配對時,麥克風電源鍵的燈光會持續閃爍 。
步驟三：兩支麥克風TWS配對成功後,配對成功後會聽到提示音,同時電源鍵的燈光會變為恆亮不再閃爍 。
步驟四：TWS配對成功後,打開手機的藍牙選單,並尋找裝置名稱KMH-9550來完成與手機的藍牙連接 。
(五)KEY調整 ：唱歌過程中可以調整伴奏歌曲的Key 。
(六)回音調整：唱歌過程中可以調整唱歌者的回音強弱 。
(七)變音調整：透過變音鍵可以將聲音變成男生聲音或是女生聲音 。產品開機是默認原聲 。
(八)去除人聲：透過去人聲功能可以降低伴奏裡唱歌的人的聲音 。
(九)手機錄歌
步驟一：使用帶有OTG功能的手機錄音線 Type C to Type C, 一端Type C連接至麥克風的Type C接口,連接線另一端Type C則接入手機Type C接口內,如手機端不是Type C,則需要使用具有OTG功能的Type C轉換器,如蘋果手機,需有lightning轉Type C的OTG轉換器,手機音樂可通過麥克風播放即表示連接成功 。
步驟二：開啟手機APP應用程式,例如：全民K歌或其他的錄音APP 、選擇自己喜歡的歌曲,按上述唱歌方式,開始錄製歌曲 。
步驟三：錄製完請按保存 。重新播放錄音,即可聆聽您所錄下的歌曲 。
步驟二：開啟手機APP應用程式,例如：全民K歌或其他的錄音APP 、選擇自己喜歡的歌曲,按上述唱歌方式,開始錄製歌曲 。
步驟三：錄製完請按保存 。重新播放錄音,即可聆聽您所錄下的歌曲 。
(十)使用連接線播放音樂：
使用帶有OTG功能的手機錄音線 Type C to Type C, 一端Type C連接至麥克風的Type C接口,連接線另一端Type C則接入手機Type C接口內,如手機端不是Type C,則需要使用具有OTG功能的Type C轉換器,如蘋果手機,需有lightning轉Type C的OTG轉 換器,手機音樂可通過麥克風播放即表示連接成功 。連接成功後可選擇自己喜歡的歌曲進行播放 。使用過程中,無法透過麥克風控制音量 、上下曲及播放暫停功能,僅能透過連接的手機或其它設備來控制 。
(十一)使用記憶卡播放音樂：
藍牙連接狀態下：將記憶卡插入Micro SD插槽,麥克風會優先直接讀取記憶卡內MP3音樂自動播放,並可透過麥克風按鍵切換播放暫停,上下首歌曲 。退出記憶卡後,麥克風直接恢復藍牙連接模式 。
非藍牙連接狀態下：將記憶卡插入Micro SD插槽,麥克風會優先直接讀取卡內MP3音樂自動播放並可透過麥克風按鍵切換播放暫停,上下首歌曲 。在記憶卡插入Micro SD插槽時,無法進行藍牙搜索連接 。
(十二)使用Type C接孔充電：充電時請使用USB-A to USB-C充電線,並搭配具有安規認證的充電器(請使用20瓦以下充電器)以免傷害到藍牙麥克風 。
(十三)做為喇叭聽音樂時,可先將麥克風音量調到最小,再依需求調大音量 。

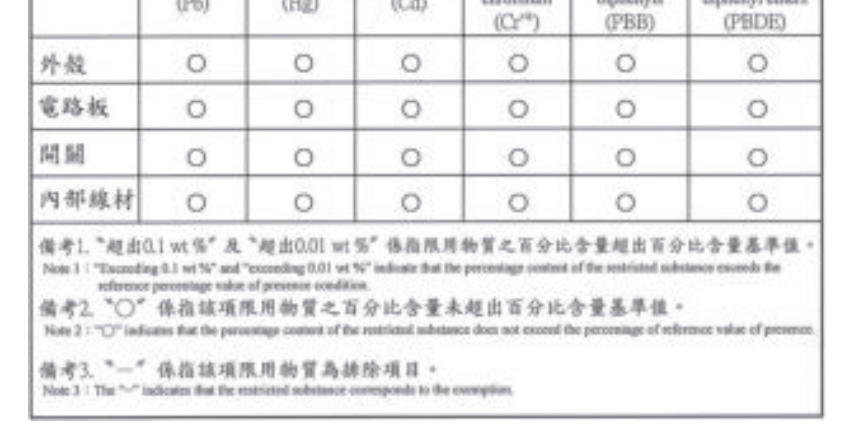

設備名稱：藍牙無線麥克風Bluetooth Microphone，型號（型式）：KMH-9550
Equipment name　Type designation (Type)

單元Unit	鉛Lead (Pb)	汞Mercury (Hg)	鎘Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr^{+6})	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
	限用物質及其化學符號 Restricted substances and its chemical symbols					
外殼	○	○	○	○	○	○
電路板	○	○	○	○	○	○
開關	○	○	○	○	○	○
內部線材	○	○	○	○	○	○

備考1. "超出0.1 wt %" 及 "超出0.01 wt %" 係指限用物質之百分比含量超出百分比含量基準值。
Note 1: "Exceeding 0.1 wt %" and "exceeding 0.01 wt %" indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.
備考2. "○" 係指該項限用物質之百分比含量未超出百分比含量基準值。
Note 2: "○" indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.
備考3. "－" 係指該項限用物質為排除項目。
Note 3: The "－" indicates that the restricted substance corresponds to the exemption.

故障排除

問題	原因	解決方案
麥克風沒有聲音	麥克風沒有調節音量	請檢查麥克風的音量是否調大
無回音效果	回音效果沒有調大	請調大回音效果
有線錄音失敗	1.沒有收錄到聲音 2.線本身無OTG功能(原裝的Lightning to Type C線無OTG功能)	1.唱歌請對準麥克風的收音位置再進行錄製 2.請使用帶OTG功能的錄音線
唱歌時有雜音	藍牙信號過弱	請保持手機與麥克風的距離在直線5米內,保證藍牙信號處於穩定狀態
藍牙播放音樂中斷	麥克風距離藍牙連接的裝置太遠	將麥克風靠近手機並避開障礙物
藍牙連接失敗	1. 麥克風與手機距離太遠 2. 麥克風與其它手機連線了 3. 麥克風插入了SD 卡	1. 請將麥克風移至手機附近,避開障礙物 2. 斷開麥克風與其它手機的藍牙連接 3. 請拔出SD卡
音樂音量太小	1. 手機音量太小 2. 音樂檔案音量小 3. 麥克風的伴奏音量小	1. 調高手機或音樂播放軟體音量 2. 下載音質清晰的音樂檔案 3. 調大麥克風的伴奏音量
麥克風出現高音頻雜音	麥克風附近有金屬物品(例如麥克風 、手機)	由於麥克風本身或是手機也都含有磁性物質,因此要連接TWS時,請保持2支麥克風豎起站立並且麥克風話筒不要太靠近喇叭
伴奏歌曲的人聲較弱	消除人聲功能被打開	關閉消除人聲功能

產品規格

品　名	藍牙無線麥克風
型　號	KMH-9550
藍牙版本	V5.0
喇　叭	10W
電池容量	5000mAh
使用時間	使用麥克風時約3~4小時 僅播放音樂時約6~7小時
充電時間	約4.5小時
micro SD	記憶卡支援最大128GB
尺　寸	236x76x86mm
重　量	499±10g
保　固	1年

警語

低功率射頻器材

取得審驗證明之低功率射頻器材,非經核准,公司、商號或使用者均不得擅自變更頻率 、加大功率或變更原設計之特性及功能 。低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時,應立即停用,並改善至無干擾時方得繼續使用 。前述合法通信,指依電信管理法規定作業之無線電通信 。低功率射頻器材須忍受合法通信或工業 、科學及醫療用電波輻射性電機設備之干擾 。