

양면인쇄 + 4단접이

K=90

1 제품사양


제품명 : 임영웅 공식응원봉
크기 : 107 X 76 X 253 (mm)
무게 : 약 262g
재질 : ABS, PC
구성품 : 응원봉, 스트랩, 사용자설명서
건전지 : 알카라인 AAA 건전지 3개
작동시간 : 약 4시간
KC인증 : R-R-REI-DREAMUS+HEROO1
FCC ID : QDM-HERO-OLS01
기획 및 판매 : ㈜드림어스컴퍼니
제조사 : ㈜드림어스컴퍼니
제조국가 : 대한민국

2 주의사항


- 강한 충격이나 물이 닿으면 고장의 원인이 됩니다.
- 임의로 분해 및 조립하지 마십시오.
- 정품 알카라인 AAA 건전지를 사용하십시오.
- 사용하지 않을 시에는 건전지를 제거해 주십시오.
- 건전지는 영/유아의 손이 닿지 않는 곳에 보관하십시오.
- 수명이 다 된 건전지는 지정된 폐기 장소에 폐기하십시오.
- 반드시 건전지의 +, - 극성을 잘 확인하여 올바른 극성 방향으로 장착하십시오.
잘못된 장착은 제품 고장의 원인이 되며 화재 및 화상의 위험이 있습니다.
- 본 제품은 무선 운용 중 혼선의 가능성이 있습니다.

3 사용 모드 설명

모드설정




- 전원 켜기/끄기 (버튼 길게 누르기)
버튼을 3초 정도 길게 누르면 전원이 켜지고 꺼지게 됩니다.
- 일반모드 (버튼 짧게 누르기)
전원이 켜진 상태에서 버튼을 짧게 한번씩 누르면 6가지 컬러 모드로 변경 됩니다.



- 애플리케이션 모드 (슬라이드 스위치 상/하 이동)
스위치를 위로 올리면 애플리케이션 모드로 전환되며(빨간불 깜빡) 다시 스위치를 내리면 일반 모드로 돌아옵니다.
(애플리케이션 모드 시 컬러 변경 작동이 되지 않으며 불량이 아닙니다)
애플리케이션을 사용하여 다양한 콘텐츠를 응원봉과 함께 즐길 수 있습니다.

4 건전지 삽입 및 교체

※ 건전지가 저전압일 경우 전원이 자동으로 차단되오니 새건전지로 교체 바랍니다.

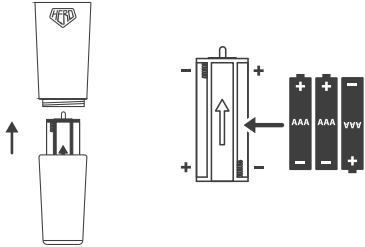

△ 건전지 주의사항

- (-) 극부터 (+) 극 순으로 바르게 넣으십시오.
역 삽입 시 발열로 인한 파열 및 누액의 위험이 있습니다.
- 건전지 부분이 갑자기 뜨거워졌을 때에는 바로 건전지 부분을 분리해 주세요.
(화상의 위험이 있으니 손으로 잡지 마세요.)
- 정품 알카라인 AAA 건전지를 사용해 주시기 바랍니다.
(정품이 아닐 경우 제품에 손상이 있을 수 있습니다. 꼭 정품 건전지를 사용해 주세요.)
- 충전, 분해, 단락, 가열하지 마십시오. 폭발 또는 누액으로 인해 상해를 입을 위험이 있습니다.
- 누액의 가능성이 있으니 사용이 끝난 건전지는 즉시 기기에서 꺼내십시오.
- 매회 공연 시 새로운 건전지를 사용해 주시기 바랍니다.
- 새 건전지와 사용한 건전지, 그리고 서로 다른 건전지와 혼용하지 마십시오.
- 전지의 표장을 벗긴 채로 주머니나 핸드백 등에 보관하지 마십시오.

5 A/S 처리 규정

- 제품 구매 후 확인되는 불량/교환은 판매처에 문의 바랍니다.
- 무상 보증 기간은 구입한 날로부터 3개월이며, 보증 기간 이내라도 고객 과실 및 파손에 의한 유상 A/S 대상으로 판단되는 경우 별도 수리비가 청구되오니 이점 반드시 숙지해 주시기 바랍니다.
- 제품 A/S 접수비(왕복 배송비)는 제조사 부담 후 유상 수리 대상일 시 고객 부담입니다.
- 메일로 신청 시, 구매 영수증(구매 날짜 포함) 및 제품 내부에 부착된 불량 증빙 내역을 포함하여 발송 바랍니다.
- 상담 및 접수 시 완료된 후에 택배 발송하여 주시기 바랍니다.
- 무상 보증 기간 : 무상 보증 기간(3개월) 이내에 아래의 현상이 발생할 시 제품 교환 서비스를 받을 수 있으나 제품 A/S 접수비(왕복 배송비)는 제조사 부담 후 유상 수리 대상일 시 고객 부담입니다.

- ※ 제품 교환 대상
 - LED 동작 불량
 - 전원 버튼 오작동에 따른 동작 불량
 - 동봉된 배터리의 소켓 불량
- 패키지 손상은 불량 및 교환 사유가 되지 않습니다.

- 유상 A/S : 유상 A/S 기간은 구입 후 최대 1년 이내 입니다. 무상 보증 내용에 해당하지 않는 제품 이상의 경우 유상으로 A/S를 받을 수 있으며, 제품 A/S 접수비(왕복 배송비)는 고객 부담입니다.

- ※ 유상 A/S 대상
 - 제품 구입한 날로부터 3개월이 경과한 경우
 - 사용 중 고객 과실에 의한 기구물 및 회로물의 파손
 - 임의 개조를 위한 제품 조립을 강제 파손하는 경우
 - 비인증 배터리 사용 등으로 인한 회로부의 파손
 - 전원을 넣은 상태에서 침수, 우천 시 사용 등에 따라 회로부의 파손 및 내부 침수

6 A/S 신청 접수처

제품 문의 및 고객센터
㈜드림어스컴퍼니
TEL : 1577 - 5557 WEB : www.iriver.co.kr / iriver@iriver.co.kr
품질보증기간 : 구매일로부터 3개월

A/S 접수방법
정상적으로 사용한 제품의 경우 전화/이메일을 통한 고객센터 후, 제품 수리 및 교환 절차를 안내드립니다.
고객 과실의 경우 고객 상담 시, 수리 비용과 택배 비용을 포함하여 안내드립니다.

1 Specification


PRODUCT : LIM YOUNG WOONG OFFICIAL LIGHT STICK
SIZE : 107 X 76 X 253 (mm)
WEIGHT : About 262g
MATERIALS : ABS, PC
COMPONENTS : Light stick, Strap, User manual
BATTERY : AAA BATTERY 3EA
OPERATING : About 4Hours
CERTIFICATION : R-R-REI-DREAMUS-HEROO1
FCC ID : QDM-HERO-OLS01
PLANNING : DREAMUS COMPANY
MANUFACTURE : DREAMUS COMPANY
COUNTRY OF MANUFACTURE : KOREA

2 Caution


- If a strong or exposure to water will cause damage.
- Do not disassemble or assemble on your own,
- Keep batteries in a safe place, out of children reach,
- Do segregate your product and used batteries from household waste for recycling, where possible, according to local laws,
- There's a possibility of radio frequency interference during wireless operation,

3 How to use

MODE SETTING



- POWER ON/OFF (LONG CLICK BUTTON)
Press and hold the button for about 3 seconds to turn the power on/off.
- NORMAL MODE (ONE CLICK BUTTON)
Once press the button briefly with power on, the mode will changes to the 6 color modes,




- APPLICATION MODE (SLIDE SWITCH)
Turn the switch up, it switches to application mode (blinking red light).
Lower the switch again, you will return to normal mode.

You can enjoy various contents with the light stick using the application.

4 Replacing Batteries

※ If the battery is low voltage, the power is automatically power off, so please replace it with a new battery.

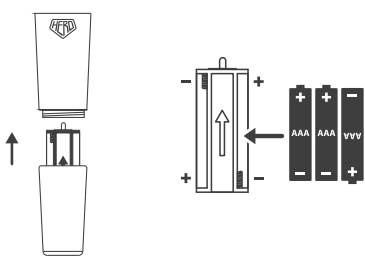

△ BATTERY CAUTION

- Add the correct order from (-) to (+) pole.
There is a risk of ruptures and leaks due to heat in reverse injection.
- Remove the battery part immediately when the battery part suddenly heats up.
(Don't hold it with your hands as there is a risk of burns.)
- Please use genuine alkaline AAA batteries.
(If not genuine, there may be damage to the product. Be sure to use a genuine battery.)
- Do not charge, disassemble, short circuit, heat, Risk of injury due to explosion or leakage.
- Remove the battery from the machine immediately after use as it may cause leakage.
- Please use a new battery for each performance.
- Do not mix new batteries with used batteries and other batteries.
- Do not store batteries in a pocket or bag with the battery unpackaged.

5 Warranty Period and Repair Service

- Any defect, replacement, or refund of the product, please contact your dealer.
- Free warranty period is three months from the date of purchase. Even within the free warranty period, if the defects of the product occurred by the customer's fault, repair cost will be charged.
- The product A/S application fee (round trip shipping fee) shall be paid by the customer if it is subject to paid repair after the manufacturer pays.
- Repair service is only provided after requesting the service through an email.
- Please send the product after application and consultation is completed.
- Replacement Service: If the following phenomenon occurs within the warranty period (3 months), the product exchange service can be provided, but the product A/S application fee (round trip shipping fee) will be paid by the manufacturer.
If it's subject to paid repair, it's a customer's burden.
- ※ Free A/S
 - Defects of operation of LED and Wireless.
 - Malfunction of the power button.
 - Bad battery socket.
- Package damage isn't eligible for a refund or replacement.
- Paid Repair Service: The paid warranty period is up to 1 year after purchase.
In case of products that are not covered by free warranty, you can get warranty at a cost, and the product A/S application fee (round trip shipping fee) is borne by the customer.
- ※ Paid A/S
 - After the free warranty, (three months after the date of purchase)
 - Damages on the product or the circuit caused by customer's fault.
 - Disassemble the product for any modification.
 - Damages on the circuit by using non-certified battery.
 - Damage to circuits and internal flooding due to inundation or rain,

6 Customer Service Center

PRODUCT INQUIRY AND CUSTOMER SERVICE
DREAMUS COMPANY
TEL : 1577 - 5557 WEB : www.iriver.co.kr / iriver@iriver.co.kr
Warranty : 3 months from date of Purchase

HOW TO GET CUSTOMER SERVICE
In case of proper use, we will inform how to repair or replace the product after customer consultation via phone call or email. In case of improper use due to customer's fault, we will inform repair cost including logistic cost for customer service.

7 FCC Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution
Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



MULGOG MUSIC ENT Co., Ltd. All Rights Reserved.