FROM THE CLASSIC 60'S BIG SCREEN ADVENTURE

DALEKS INVASION EARTH 2150 A.D.

STARRING PETER CUSHING AS DR. WHO

FULL RADIO COMMAND



With the success of DR WHO AND THE DALEKS in cinemas, it was not long before a sequel was planned.

In 1966 DR WHO: DALEK INVASION EARTH 2150AD hit the big screen. Bigger, Better and Badder than before!

In this encounter with the DALEKS, the Doctor discovers that his old adversaries have ravaged the Earth and are planning to turn it into a gigantic spaceship by mining its very core!

Peter Cushing and Roberta Tovey were joined this time round by Bernard Cribbins as hen-pecked policeman Tom Campbell and Jill Curzon as Louise along with Ray Brooks, Andrew Keir and Philip Madoc.

Product Enterprise Ltd is proud to present this authentic, scaled replica from the 1966 film DALEK INVASION EARTH 2150AD! As Dr Who's most enduring adversary, featuring full lights and sound - prepare to re-live the excitement of the DALEKS on the BIG SCREEN!



AVAILABLE IN 4 COLOURS

UNDER LICENCE CANAL+ IMAGE UK

© 1966 AP Films Limited

FOR MORE DIGITAL DRWHO COLLECTIBLES VISIT OUR ONLINE SHOP!

www.productenterprise.com


RCD:7

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, use and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed
- Consult the dealer or an experienced radio/TV technician for help


Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

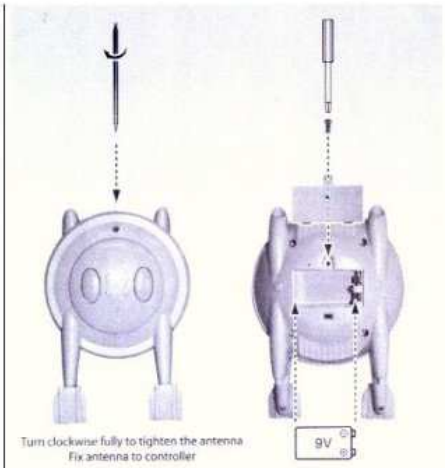

Turn clockwise fully to tighten the antenna
Fix antenna to controller

How to replace batteries:

1. Loose small locking screw and battery cover.
2. Remove used batteries.
3. Insert new batteries ensuring "+" positive pole of batteries are placed as markings shown.
4. Replace the battery cover and screw.

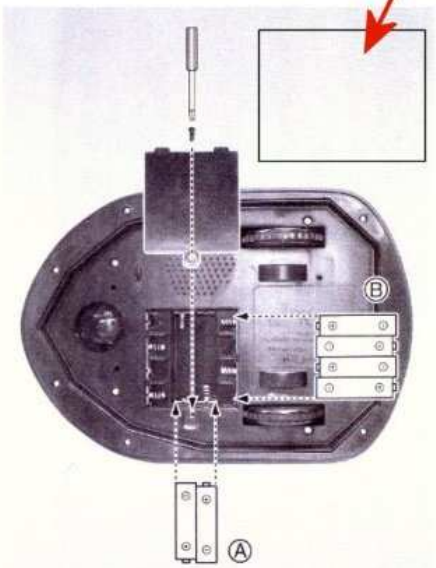

Insert "A" batteries before "B" batteries on main body.