
Tally

Installation of Interface RS 232 Interface RS 422

T2240/9
T2340/9
T2240/24
T2340/24

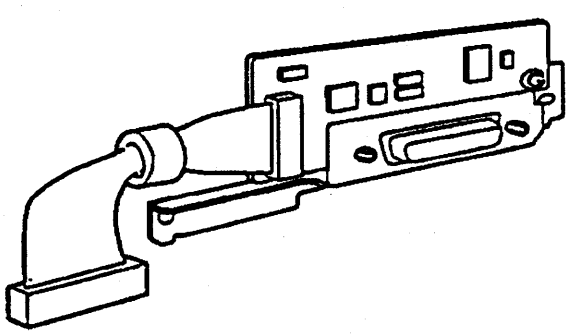



The interface box must include:

1 I/O Module
1 I/O Cover
2 Screws
1 Installation Guide

Installing the Serial Interface Module

- Switch printer power off („O“) .
- Lift up the paper tray of the printer .
- Remove the original interface cover, pull it out.

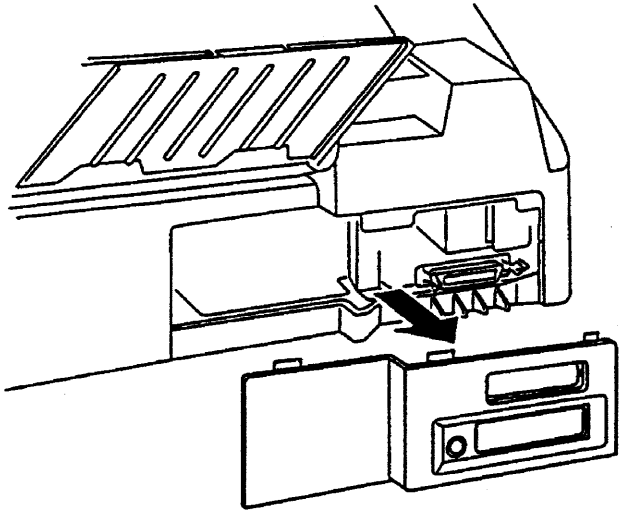

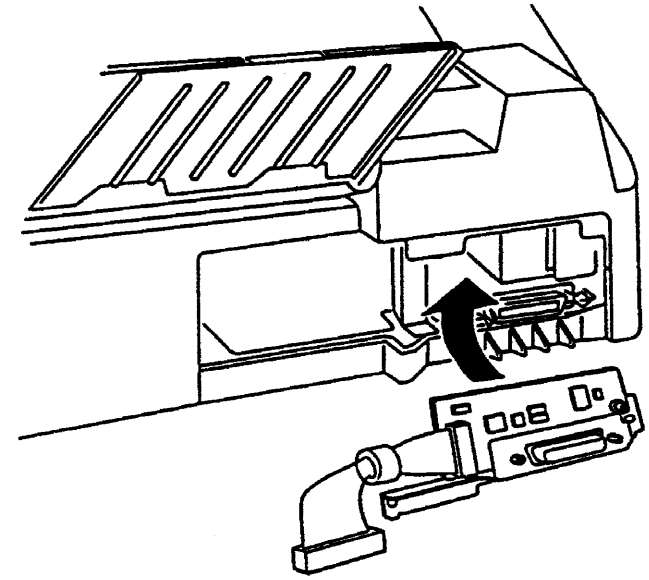

- Insert the Serial Interface Module as shown above.
- Fix the Serial Interface Module with 2 screws.
- Plug the connector of the Serial Interface Module into the connector of the logic board correctly, it is keyed.
- Insert the interface cover delivered with the module.
- Switch printer power on („I“).
- Select the serial I/O via the menu of the printer. See reference manual.