## RECHARGEABLE 2.4GHz - DX-2 STUNT DRONE

### Getting to Know Your Drone

14+

**PLEASE READ ALL WARNINGS AND INSTRUCTIONS PRIOR TO USE. KEEP THIS DOCUMENT AS IT CONTAINS IMPORTANT INFORMATION ABOUT YOUR DRONE.**

**1. PREPARE FOR FLIGHT**
- Drone must be charged before each use (Cable included)
- Indicator light will turn off once fully charged
- Install batteries in remote

**2. PAIR YOUR DRONE**
Before each flight pair the remote with the drone.
1. Turn your drone on and place on a flat, level surface
2. Turn on the remote on and move the left joystick down, then up, then down again
3. The beep will indicate successful pairing

**3. DIRECTIONAL LIGHTS**
1. Turn your drone on and place on a flat, level surface
2. Turn on the remote on and move the left joystick down, then up, then down again
3. The beep will indicate successful pairing

**4. REMOTE CONTROL OVERVIEW**
Practice flying your drone below 10 feet and at low speeds until comfortable with all controls to avoid unnecessary damage or injury
- Left joystick:
  - Forward/Backward controls elevation
  - Left/Right controls spin
- Right joystick: controls flight direction
- Direction Trim: use to eliminate drift

To cut power to drone, move left joystick to down position

**QUESTIONS OR CONCERNS?**
**PLEASE GIVE US A CALL ... WE'RE HERE TO HELP**

**CUSTOMER SERVICE**
**(800) 374-2744**
**Before calling please locate the 10-digit code printed on the back of your remote**

**ADULT ASSEMBLY, CHARGING, AND BATTERY INSTALLATION IS REQUIRED. ADULT SUPERVISION IS REQUIRED.**

**WARNING:**
DRONES RACING - Small fans - fast for close-range drones.

Product specifications and data are subject to change without notice. Distributed by Sharper Image, 350 Rhode Island St., San Francisco, CA 94103, USA. ©2020 Sharper Image.

For support, please visit www.sharperimage.com or call 1-800-374-2744.

The artwork and design of this manual are protected by US copyright law and may not be reproduced in whole or in part, by any means, for any purpose without prior written permission. It is not permitted to sell, rent, lease, or reproduce any trademarks or copyright notice from this manual.

Printed in China.

## RECHARGEABLE 2.4GHz - DX-2 STUNT DRONE

### INTRODUCTION

Congratulations on your purchase of the Rechargeable 2.4 GHz DX-2 Stunt Drone. Get ready to soar to new heights. Master the art of drone flying and stunting with remote control maneuverability. This lightweight stunting drone will provide hours of fun.

### SPECIFICATIONS

Drone Battery: 300 mAh Li-po

Remote Control Battery: 6 x 1.2V AA

Charging Time: Approximately 60 minutes

Maximum Recommended Altitude 115 ft.

### TABLE OF CONTENTS


| | |
|---|---|
| General Warnings | Page 1 |
| Contents, Remote Battery Installation, Battery Warnings | Page 2 |
| Charging LiPo Battery and Installing Blade Guards | Page 3 |
| Remote Overview | Page 4 |
| Operating Drone | Page 5 |
| Modes, Replacing Propellers, and Tips | Page 6 |




## RECHARGEABLE 2.4GHz - DX-2 STUNT DRONE

### READ ALL WARNINGS AND PRECAUTIONS BEFORE USE

- Not recommended for children under 14 years of age. As with all electrical products, precaution should be observed during handling and use to prevent electric shock or injury.
- Adult supervision is required at all times.
- Before each use, an adult should review the product and battery to determine that no damage or hazards exist.
- **DO NOT TOUCH SPINNING PROPELLERS**
- Do not allow anything to intentionally make contact in any way with spinning propellers.
- Keep your face, eyes, and body parts away from propellers and motors of the flying drone
- **Use caution and pay attention to your surroundings while operating drone.**
- **Do not fly drone into animals, people, or inanimate objects**
- Keep drone away from power lines, buildings, trees, public areas, and any other potentially hazardous areas.
- Do not operate in rain, heavy wind, and or any type of severe weather.
- Do not land drone on wet surfaces.
- Never touch or allow others to touch drone while it is flying.
- Do not fly drone near water or pools.
- Always fly drone in large open areas.
- Never fly drones above or near people, sudden changes in wind or other conditions could lead to unexpected crashes.
- Always use caution when flying drone vehicles, obey relevant laws, respect the privacy and property rights of others.
- The drone shall never be modified or used for anything except its intended purpose.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Flyaways are the responsibility of the individual pilot and will not be replaced by the manufacturer.**

This drone complies with the Safety Act of August 2016, the Federal Aviation Administration (FAA) and the Academy of Model Aeronautics National Model Aircraft Safety Code. Before flying, it is important that you familiarize yourself with the laws governing model aircraft flying and accept responsibility to always fly safely and respect the privacy of others.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

**Remote Controller**
When not in use for a month or so, the remote can draw its remote control batteries down to a point where they are not correct to be charged with the battery.

When the remote is switched on, the remote LED is flashing and remote is beeping.

Remove the batteries from the remote when not in use.

Store and remote around 5 cm, but the drone will not fly well.
1. Ensure all the cables charging the charging cable to connect the drone to power source.

When charging the drone, the drone light is on, remote is and control is.

1. Ensure no damage to the drone.
2. Ensure all the cables charging the charging cable to connect the drone to power source.

After charge, the drone is on/off.
1. Put the light remote control down to the left bottom and put the right remote control down to the right bottom at the same time which connected to the drone successfully.
2. Put your drone on a flat surface, move the drone and press the button to fly it.

Remote Control and Drone control range:
1. Close Power Remote Control, move it as distant as Drone, not exceed 3 meters.

Note: If there are 2 sets of Drones within 3 meters for Pairing, you must put the second set, before pairing the second one.



## RECHARGEABLE 2.4GHz - DX-2 STUNT DRONE

### CONTENTS

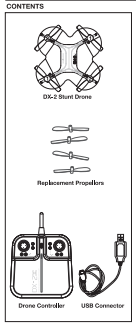




**REMOTE BATTERY INFORMATION**
- Slide open the remote's battery compartment.
- Install 6 x 1.2V AA batteries (not included) as shown above.
- Replace and close battery compartment.

**PLEASE RECYCLE OR DISPOSE OF ELECTRONICS PROPERLY. RECYCLING INFORMATION IS AVAILABLE AT WWW.ARCHIVESRECYCLE.COM**

**⚠ LITHIUM-POLYMER BATTERY WARNING**

There is a risk of fire and personal injury if LiPo battery is not properly handled. Follow these rules:
- Never expose battery to extreme temperatures or moisture.
- Do not subject battery to strong impacts.
- Only use manufacturer specified battery, charger, and/or adapters, if applicable, specified by the manufacturer.
- Always use, recharge, and recharge if replaceable batteries under adult supervision.
- Let battery cool to room temperature before charging.
- While charging, never leave battery unattended.
- Never mix batteries of battery according to brand, state and brand.
- The battery is not user serviceable.
- Do not charge damaged, punctured, disassembled, crushed, punctured, opened, or otherwise modified.
- Seek medical advice immediately if a cell or battery has been swallowed.
- In the event that the electrolyte comes into contact with the skin or eyes, immediately flush with fresh water for at least 15 minutes and seek medical advice.
- Keep cells or batteries clean and dry both during use and storage. Wipe metal terminals with a soft, dry cloth if they become dirty.
- Never charge cells or batteries before use.
- On first use, or after prolonged periods of storage, it may be necessary to charge and discharge the cells or battery two or three times before obtaining maximum performance.
- Only charge cells or batteries in a temperature range between 10°C and 35°C unless otherwise specified by the manufacturer.
- Battery cycle and product lifetime for future reference.

**BATTERY WARNING - ALKALINE (AA)**
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Insert batteries using the correct polarity. Do not short-circuit the supply terminal.
- Only use batteries of the specified batteries, charger(s), and/or adapters, if applicable, specified by the manufacturer.
- Always use, recharge, and recharge if replaceable batteries under adult supervision.

**KEEP THIS INSTRUCTION MANUAL FOR REFERENCE**



## RECHARGEABLE 2.4GHz - DX-2 STUNT DRONE

### CHARGING BATTERY

Note: The Battery Charger will light up when it is charging the battery and turn off when the battery is fully charged. Charge time is approximately 60 minutes.

1. Turn off the drone before charging.
2. Connect the Battery Charger Cable to the port found on the rear of the drone
3. Connect USB connector to the power source.




## RECHARGEABLE 2.4GHz - DX-2 STUNT DRONE

### REMOTE OVERVIEW

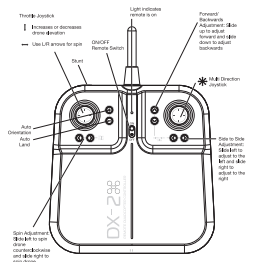






## RECHARGEABLE 2.4GHz - DX-2 STUNT DRONE

### OPERATING DRONE

**Step 1 – Pre-Flight Checklist**

1. Read all warnings and instructions
2. Install remote batteries, page 2
3. Make sure that drone and remote are powered off
4. Install Blade Guards Drone, page 3.
5. Charge batteries, page 3.

**Step 2 – Choosing a location**

- Drone is designed to be flown/driven indoors and outdoors
- Always make sure you have enough space to fly drone
- Always follow warnings, page 1.

**Step 3 – Driving Mode**

1. Making sure your remote is off, slide drone switch to ON. Drone lights will begin to flicker
2. Choose a flat even surface and follow the diagram
3. Turn remote on. Bring the Throttle all the way up then bring it all the way down. Remote will beep and drone lights will flicker rapidly then turn on permanently once paired.
4. Drone is ready for flight.




**Step 4 – Lift Off**

1. Slowly and carefully bring the throttle up. Propellers will begin to spin and drone will begin to elevate. You can compensate for some of the drones drifting by using the Multi Directional Button or by following step 5. You may need to practice this step several times before successfully getting drone into the air.

**Step 5 – Drone Begins to Drift**

Follow this step if your drone begins to drift while take off or during flight

- Drone drifts backwards: Slide the Forward/Backwards Adjustment up
- Drone drifts forwards: Slide the Forward/Backwards Adjustment down
- Drone drifts left: Slide the Side to Side Adjustment to the right.
- Drone drifts right: Slide the Side to Side Adjustment to the left.
- Drone spins clockwise (viewing drone from top): Slide the Spin Adjustment to the right.
- Drone spins counter-clockwise (viewing drone from top): Slide the Spin Adjustment to the right.

**Always turn off remote prior to retrieving or picking up drone. This will help you avoid accidently activating propellers.**

**Step 6 – Operating Drone in Flight**

The drones range is approximately 150 feet

- Read and be aware of all warnings found on page 1.
- Maintain your desired elevation by using the Throttle
- Use the Throttle joystick in a circle motion to spin the drone
- Use the Multi Directional Joystick to move forwards, backwards, and side to side
- Review step 3 if your drone begins to drift



## RECHARGEABLE 2.4GHz - DX-2 STUNT DRONE

### MODES

**Auto Landing Button**
- Make sure you have achieved level, balanced flight, where the drone is neither climbing nor descending. This mode allows you to safely and slowly land your drone without having to control the speed. It is done for you automatically.
- The land auto landing height is 25-30 ft.
- Press the Auto Landing Button. The Remote will beep continuously until drone lands
- Do NOT touch any joysticks until drone has fully landed. This will interrupt the landing sequence.
- To steer the drone during landing, use the right control until drone has reached the ground.
- Press the "+" button again to exit auto landing mode.

**NOTE: Please make sure the throttle joystick is on down position before exit auto landing mode**

**Auto Orientation Button**
- Auto Orientation default setting is off. To enter this mode press Auto Orientation "+" button. Remote will beep twice.
- After drone success paired, the 2 white LED lights toward orientation will be the original forward orientation, when drone is in auto orientation mode, whatever the drone spin, the forward orientation will be previous original forward orientation.
- The remote will beep every 4s to indicate the drone is in Auto Orientation mode.
- To exit mode, press the "-" button, Remote will sound 1 long beep indicating that it has exited Auto Orientation mode.

**Stunt Button**

Once you are comfortable flying the drone, use the Stunt Button to perform acrobatic stunts.
1. Hover the drone to at least above 10 feet.
2. Press the Stunt Button, You will hear beeping coming from the remote
3. Move the Multi Directional Button to the desired direction that you would like the drone to flip
4. Once you have entered the Stunt Mode, you can create multiple flips. Press the Stunt Button and then move the Multi Directional Button to the desired direction you would like the drone to flip, continue to hold the joystick in the desired direction of the stunt. The drone will continue to flips in the direction you hold the joystick, for a maximum of 3 stunts in a row.

**REPLACING PROPELLERS**

1. Follow diagram to the right.
2. Make sure you install the correct blade. Each blade has a number written on it. Match the blades with the corresponding number on the drone.
3. Carefully unscrew the propellers and replace with the new blade.

**NOTE: Blade 1 turns counter clockwise and Blade 2 turns clockwise.**

**TIPS**
- Do not crash drone into sand or dirt, Drone gears may become clogged
- When first learning to fly, practice lifting off and hovering
- Stay several feet from walls and buildings
- Always Press Throttle all the way down after crashing or when something gets stuck in propellers
- Never fly drones above or near people, sudden changes in wind or other conditions could lead to unexpected crashes.
- Always use caution when flying drone vehicles, obey relevant laws, respect the privacy and property rights of others.
- The drone shall never be modified or used for anything except its intended purpose.





咬口 360说明书 5.5寸 2020.05最新