


NOTICE D'UTILISATION

IMPORTANT : charger complètement le casque durant au moins 5 heures avant la première utilisation.

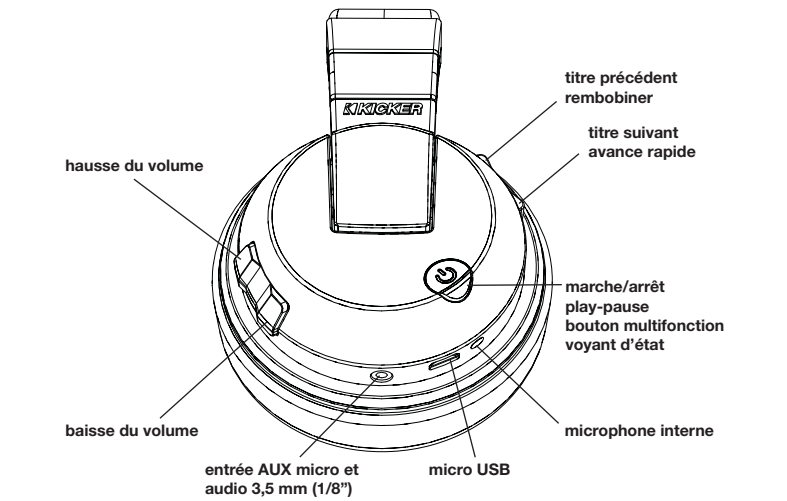

Voyant d'état en marche	Voyant d'état en mode recharge
Bleu uni : connecté	Bleu uni avec clignotement rouge : connecté et en charge
Clignotement bleu rapide : en mode d'appairage Bluetooth	Clignotement rouge rapide : batterie faible
Clignotement bleu lent : en mode d'attente de connexion	Rouge uni : éteint et en charge
Voyant LED éteint : casque éteint	Clignotement lent bleu et rouge : en attente de connexion et en charge

Félicitations pour votre achat d'un casque prestige **cushblu** de KICKER ! Ces casques tout équipés répondent aux besoins de tous les audiophiles. Utilisez les instructions suivantes pour découvrir comment profiter pleinement de votre nouveau casque.

Mettre en marche, recharger et redémarrer votre casque

Mise en marche : Pour allumer ou éteindre votre casque, appuyez sur le **bouton multifonction** et maintenez-le enfoncé pendant 2 secondes jusqu'à ce que le voyant d'état soit allumé ou éteint.

Recharge : Connectez le câble micro-USB à la prise micro-USB, puis le câble standard USB à la source d'alimentation. Votre casque commencera à charger. Vous pouvez continuer à écouter de la musique pendant la recharge.

Redémarrage : Si votre casque ne parvient pas à s'allumer/s'éteindre ou s'il ne répond aux autres commandes, connectez le câble micro-USB à la prise micro-USB, puis le câble standard USB à une source d'alimentation. Cette opération permettra de redémarrer le casque.

Écouter de la musique

Fonctionnement Bluetooth : Le jumelage avec Bluetooth se fera automatiquement lors du premier démarrage du casque **cushblu**. Pour activer le mode d'appairage Bluetooth à tout moment, appuyez sur le **bouton multi-fonction** et maintenez-le enfoncé pendant 5 secondes. En mode d'appairage, le voyant d'état clignote rapidement en bleu.

À partir du menu Bluetooth de votre appareil audio, assurez-vous que la fonction Bluetooth est activée et commence la détection des appareils en « mode découverte ». Sélectionnez **cushblu**. Si votre périphérique exige la saisie d'un code, entrez le code [0000]. Une fois les appareils jumelés, le voyant d'état sera bleu en continu et votre casque se connectera immédiatement à votre périphérique audio compatible Bluetooth, tant qu'il est à portée et allumé. Vous ne pouvez jumeler votre casque qu'à un seul appareil à la fois. Lorsque votre casque est jumelé et connecté à un téléphone, vous pouvez répondre à un appel ou raccrocher en appuyant et relâchant le **bouton multifonction**. Pour effacer la liste de jumelage et empêcher le casque de se reconnecter automatiquement, placez le casque en mode d'appairage.

Entrée AUX : Le casque **cushblu** prend en charge l'entrée stéréo analogue via la prise stéréo 3,5 mm. Si vous vous situez à un endroit où l'utilisation de Bluetooth n'est pas permise, comme un aéroport ou un hôpital, ou si vous désirez simplement économiser votre batterie, connectez le câble stéréo 3,5 mm. Cela désactivera les fonctionnalités prestige de votre casque sans utiliser de batterie.

Le **bouton microphone** peut-être utilisé avec l'**entrée AUX** en fonctionnement. Certains appareils et systèmes d'exploitation peuvent répondre différemment aux commandes des boutons. Veuillez utiliser le tableau ci-dessous à titre d'aperçu. Consultez le guide du fabricant de votre appareil pour vérifier les fonctionnalités prises en charge.



	iPod, iPhone, iPad	Android

Spécifications techniques cushblu	
DESCRIPTION :	Casque supra-auriculaire Bluetooth
RÉPONSE EN FRÉQUENCE :	20 Hz-20 kHz
SENSIBILITÉ :	101 dB/1 mW
IMPÉDANCE :	32 Ω
ÉLÉMENTS DE COMMANDE :	50 mm
SORTIE MAX :	118 dB
CONNEXIONS D'ENTRÉE :	3,5 mm stéréo ; Bluetooth A2DP, AVRCP, HFP
BATTERIE :	Lithium-ion 5 V/600 mAh ; durée de marche 10 heures ; temps de recharge 2,5 heures
ACCESSOIRES :	USB-A vers micro USB de 1,5 m ; câble stéréo 3,5 mm de 1,5 m ; câble stéréo 3,5 mm avec microphone de 1,5 m; Voyage sac de KICKER

Dépannage

Votre casque ne répond plus ou ne s'allume pas :

1. Assurez-vous que le câble d'entrée AUX 3,5 mm n'est pas branché au casque.
2. Connectez le câble micro USB au casque et le câble standard USB à une source d'alimentation fiable. Attendez que le casque charge pendant au moins 2 heures et demi, puis maintenez appuyé le **bouton multifonction** pendant 2 secondes.

Le casque refuse de se jumeler ou de se connecter :

1. Si vous avez déjà jumelé votre appareil avec ces écouteurs, alors s'il vous plaît "Dissocier" ou "Oubliez cet appareil" par les instructions de votre périphérique audio.
2. Appuyez et maintenez le **bouton multifonction** pendant 5 secondes pour entrer en mode d'appairage. Assurez-vous que votre périphérique audio est balayage ou en mode « découverte ».

Les appareils sont jumelés et connectés, mais le son est inaudible ou faible :

Assurez-vous que le volume de votre appareil audio est monté au moins de moitié, puis ajustez le volume sur votre casque.

AVERTISSEMENT !


Une exposition à des volumes sonores trop élevés peut causer des dommages auditifs permanents. Tenir hors de portée des enfants. Le contenu de cette boîte comprend des pièces et cordons de petite taille qui peuvent poser un risque de suffocation ou d'étranglement.

Garantie

Les produits KICKER sont garantis contre les défauts. La durée et les termes de la garantie dépendent des lois en vigueur dans le pays où l'achat a été effectué. Pour plus d'informations, veuillez contacter votre vendeur KICKER local ou vous rendre sur : www.kicker.com/warranty.

OWNER'S MANUAL

IMPORTANT: Fully charge the headphones for at least 5 hours prior to first use.

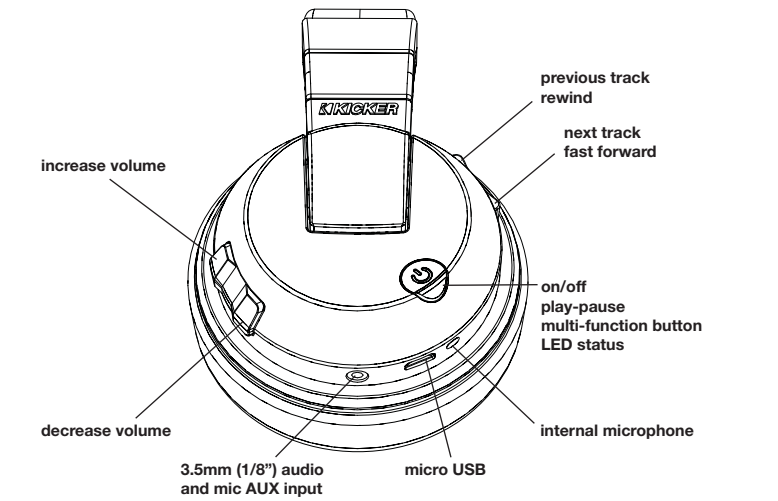

LED Status when Powered On	LED Status when Charging
Solid Blue - Connected	Solid Blue with red blink - Connected and charging
Rapid Blue Blink - Bluetooth pairing mode	Rapid Red Blink - Low Battery
Slow Blue Blink - Waiting for connection mode	Solid Red - Powered off and charging
No LED - Headphones powered off	Slow Blue & Red Blink - Waiting for connection and charging

Congratulations on your purchase of KICKER's **cushblu** Premium Headphones! These fully-featured cans meet the needs of any audio enthusiast. Use the following instructions to learn how to get the most from your new headphones.

Powering, Charging, and Resetting your Headphones

Power: To turn the headphones On/Off, press and hold the **multi-function button** for 2 seconds until the LED status is On/Off.

Charge: Connect the micro-USB cable to the micro-USB jack, then the standard USB cable to a power source. This will begin charging the headphones. You may continue listening to music while charging.

Reset: If the headphones ever fail to turn On/Off or respond to other commands, connect the micro-USB cable to the micro-USB jack, then the standard USB cable to a power source. This will reset the headphones.


Playing Music

Bluetooth Operation: The **cushblu** headphones will automatically enter Bluetooth pairing mode when turned on for the first time. To enter Bluetooth pairing mode at any time, press and hold the **multi-function button** for 5 seconds. When in pairing mode, the LED status will show a rapid blue blink.

From the Bluetooth menu of your audio device, make sure Bluetooth is enabled and begin scanning for devices, also known as 'discovery mode'. Select **cushblu**. If a code is required by your device, use [0000]. Once paired, the LED status will show solid blue, and your headphones will automatically connect to your Bluetooth audio device when in range and powered on. Only one device may be paired at a time. When your headphones are paired and connected with a phone, you can answer and hang-up calls by pressing and releasing the **multi-function button**. To prevent the headphones from automatically reconnecting, place the headphones in pairing mode.

AUX Input: The **cushblu** headphones support stereo analog input via the 3.5mm stereo jack. If you are in an area that does not allow Bluetooth, such as an airplane or hospital, or if you simply wish to conserve battery power, connect the 3.5mm stereo cable. This requires no battery power, but will deactivate the premium features of the headphones.

The **microphone button** may be used when operating with the **AUX Input**. Some devices and operating systems will respond differently to button commands. Please use the chart below as a rough guide. Consult your device manufacturer's documentation to find out what functions are supported.

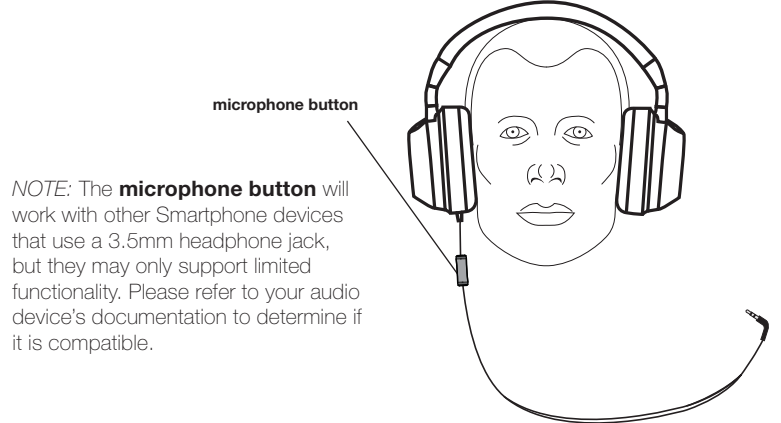

	iPod, iPhone, iPad	Android

cushblu Specifications	
DESIGN:	Over-the-Ear Bluetooth headphones
FREQUENCY RESPONSE:	20Hz-20kHz
SENSITIVITY:	101 dB/1mW
IMPEDANCE:	32 Ohms
DRIVE COMPONENTS:	50mm
MAX OUTPUT:	118 dB
INPUT CONNECTIONS:	3.5mm stereo; Bluetooth A2DP, AVRCP, HFP
BATTERY:	3.7V/600mAh Lithium-ion; 10 hours life; 2.5 hours charge time
ACCESSORIES:	5' USB-A to micro USB; 5' 3.5mm stereo cable; 5' 3.5mm stereo cable with microphone; KICKER travel bag

Troubleshooting

Headphones are unresponsive or will not power on:

1. Make sure the 3.5mm AUX Input cable is not plugged into the headphones.
2. Connect the micro USB cable to the headphones and the standard USB cable to a *known-good* power source. Allow the headphones to charge for at least 2.5 hours, then press and hold the **multi-function button** for 2 seconds.

Headphones will not pair or connect:

1. If you have previously paired your device with these headphones, then please 'Unpair' or 'Forget this Device' per the instructions for your audio device.
2. Press and hold the **multi-function button** for 5 seconds to enter pairing mode. Make sure your audio device is scanning or in 'discovery mode', then select cushblu.

Device paired and connected, but volume is low or inaudible:

Make sure the volume on your audio device is turned up at least halfway, then adjust the volume on the headphones.

WARNING!

Exposure to excessive sound levels can cause permanent hearing damage. Keep out of reach of children. The content of this package includes small parts and cords that can cause choking or strangulation.

Warranty

KICKER products are warranted against defects. Duration and terms of warranty depend on the laws in the country in which it was purchased. For details see your local KICKER Dealer or www.kicker.com/warranty.

Our goods come with guarantees that cannot be excluded under the **Australian Consumer Law**. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Garantie
Produkte von KICKER verfügen über eine Mängelhaftung. Die Gültigkeitsdauer und Bedingungen dieser Garantie hängen von den Gesetzen des Landes ab, in dem Sie das Produkt erworben haben. Weitere Informationen erhalten Sie bei Ihrem KICKER-Händler vor Ort oder auf www.kicker.com/warranty.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC Statement

- English:

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

- French:

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Caution: Use the Stillwater Designs And Audio Inc in the environment with the temperature between -10C and 25C. For the following equipment: Stillwater Designs And Audio Inc

CE2200

is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The equipment was passed. The test was performed according to the following European standards: ETSI EN 301 489-1 V1.9.2 (2011-09) ETSI EN 301 489-17 V2.2.1 (2012-09) ETSI EN 300 328 V1.7.1 (2006-10) EN 62479:2010 EN 60950-1:2006+A11:2009+A1:2010+A12:2011