dprofy

Golf Magnetic Smart Speaker

USER MANUAL




V3 PRO

PRECAUTIONS

- This product requires the use of the official app.
- The Golf page is displayed only when a round begins within the app, and is available exclusively in portrait mode.
- Please do not use this device in environments with strong water currents.
- If the device remains unused for an extended period, please charge it periodically.
- The screen remains illuminated after powering on; the speaker will automatically power off after 30 minutes of inactivity.

WHAT'S IN THE BOX?



V3 PRO




MANUAL | CARABINER | Apple Find My Operation Guide | USB CHARGE CABLE

V3 PRO


OVERVIEW

BACK SIDE



Type-C interface | Built-in Magnetic Strip

Status indicator lights



BUTTON

Power Button
Long Press to power on/off

Volume Down Button
Press or press and hold Volume down

Mode Button
Short press to disconnect
Long press to disconnect the current connection

Play/ Pause Button
Double-click next track
Triple-click previous track


HOME Button
Screen is on, press to show the time screen
Screen is off, press to wake up the screen
Long press for 3S to activate the Apple Find My feature.

Volume Up Button
Press or press and hold Volume up

FIRST-TIME USE

Upon the first boot, you will enter the guided setup.

1 Power ON
Press and hold the ⏻ for 2 seconds to turn on. Status indicator flashing.



2S

2 Connect Bluetooth
Connect to your phone: Setting > Bluetooth > Choose device: > V3 PRO
Once the connection is successful, the status indicator light will steady blue.
If " V3 PRO " is not listed, turn Bluetooth off and on to refresh.



3 Download the " dprofy " App
Use your phone camera to scan the QR code on the screen, or search for " **dprofy** " on the App Store or Google Play Download and install.

Note: After downloading the APP, please register and log in to your account first, then proceed to the next step: Bind Device.



Open your phone camera and scan to download the "dprofy" APP.


google | ios

Download on the App Store | GET IT ON Google Play

Scan the QR code to watch the tutorial video.

FIRST-TIME USE | START THE GAME

To ensure proper device operation, please enable Bluetooth and location permissions, and allow the use of Wi-Fi and mobile data.

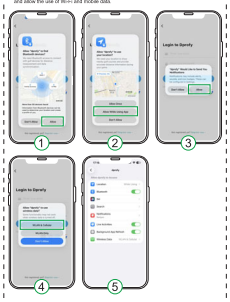

iOS


1. Please allow access to Bluetooth devices. Bluetooth will be used to search for and connect to your V3 PRO devices.
If you accidentally selected " Disallow ": The app cannot scan for Bluetooth devices.
Results: The V3 PRO device cannot be found, connection to the device is impossible, and related functions are essentially disabled.

2. Please allow access to location information. Location information is used to assist Bluetooth device search and to provide location-related functions, map functions, and green/ Hazards distance functions.
If you accidentally selected " Disallow ": The app cannot obtain location information.
Impact: Map/ location functions are unavailable; distances to greens/ Hazards cannot be calculated.

3. Please allow notifications, primarily for receiving device status, updates, and other important messages.

4. Please allow the use of Wi-Fi and mobile data, primarily for app login and data loading.
If you accidentally selected " Disallow ": The app will be completely unable to connect to the internet. Impact: Unable to log in, unable to load data.

5. If you accidentally clicked " Disallow ", you can re-enable all of the above permissions in Settings > Apps > dprofy. Or delete the app and reinstall it.

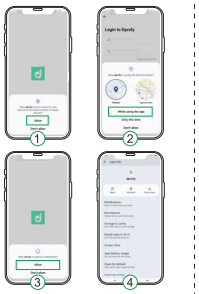

Android


1. Please allow dprofy to find, connect to,and determine the relative position of nearby devices.

2. Please allow access to location information. Location information is used to assist Bluetooth device search and to provide location-related functions, map functions, and green/ Hazards distance functions.

3. Please allow notifications, primarily for receiving device status, updates, and other important messages.

4. If you accidentally clicked " Disallow ", you can re-enable all of the above permissions in Settings > Apps > dprofy. Or delete the app and reinstall it.

4 Bind Device

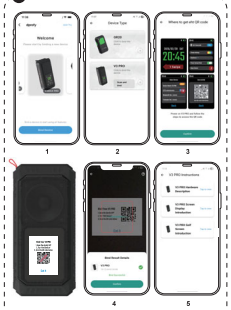

Method 1

1.After registration and login, enter the binding interface, tap " **Bind Device** ".
2.Choose V3 PRO, tap " **Scan and bind** ".
3.Tap " **Confirm** "
4.Scan the QR code on the V3PRO screen. After successful binding, tap Confirm.
5. After successful binding, you can view the brief operating instructions related to the product.



Method 2

1.After registration and login, enter the binding interface, tap " **Bind Device** ".
2.Choose V3 PRO, tap " **+** ".
3.Choose V3PRO and tap "Bind Device".
4.Tap Confirm.
5. After successful binding, you can view the brief operating instructions related to the product.

5 Complete
V3PRO Screen Display: **ENJOY GOLF & MUSIC** Enter the Time Home screen.



What should I do if I skipped the setup guide?
Please follow the steps below to complete the setup.

1. Download the Official App
Scan the QR code on the USER MANUAL to download the official golf app.
Alternatively, search for " **dprofy** " on the App Store or Google Play,
then download and install the app.

2. Power ON
Press and hold the Power button for 2 seconds to turn on the device.
A flashing blue light indicates that the device has entered Bluetooth pairing mode.

3. Connect via Bluetooth
- Enable Bluetooth on your mobile phone.
- Search for the device named " **V3 PRO** ".
- Tap to connect. Once successfully connected, the blue light will remain steadily lit.

Note: You must complete the Bluetooth connection before using the device for the first time.

4. Bind Device with in the App
Instructions (Scan-to-Bind Method):
- Open the golf app.
- On the Home screen, select **[Bind Device]**
- Select " V3 PRO " and choose the **Scan and Bind** option.
- Follow the on-screen prompts to display the QR code on your " V3 PRO " device.
- Scan the QR code to bind.
- A confirmation message will appear indicating that the binding was successful.

Once the binding is complete, start a round within the app; the speaker device will then begin receiving course data.

Note: The Bluetooth connection is used for music playback.
Device binding within the app is used for transmitting golf data.

HOW TO USE GOLF FEATURES

Power on the device. Once powered on, the device will automatically reconnect to your mobile phone via Bluetooth; a steady blue light indicates that a connection has been established.

Open the App. The device will automatically reconnect, and the connected device will be displayed on the App's homepage; tap on it to view your device status.

START A ROUND.


App Operation:
1. On the App home screen, tap the START button located at the bottom of the screen.
2. Select a golf course.
3. Select your preferred hole-switching method.
4. Start the round.
The speaker screen will automatically display:
The current hole number / Par information
Distance to the green / Other reference data
The data will update automatically as you advance through the holes.






SWIPE LEFT OR RIGHT

SCORE DISPLAY

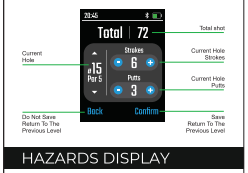

HAZARDS DISPLAY

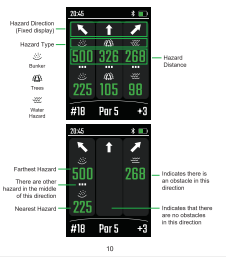

HOW TO PLAY MUSIC

1. After powering on the speaker, verify that the device is connected via Bluetooth. the connection status indicator light will glow a steady blue.
2. Open a music app on your mobile phone to begin playback.

Screen Switching
Swipe downward on the speaker's screen to switch to the music playback interface.
The interface displays: Song Title / Playback Status
You may also use the physical buttons to control playback.



SWIPE UP OR DOWN


SETTINGS

SWIPE LEFT OR RIGHT




CHARGING

Charging the device
Using a USB-C cable to connect to a computer or buy USB charger separately.
(The red light is always on when charging, and turns off when fully charged.)

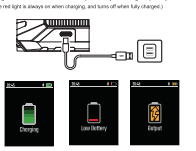

Charging | Low Voltage | External Discharge

For charging other devices.
USB-C output for emergency charge for your device.



Power Bank

Note: Please ensure that the charging port remains dry during use.

SPECIFICATIONS

Bluetooth version:	5.4
Working distance:	about 33 feet/ 10M
Driver spec:	66mm 20.00W
Size:	L202.7*W90.7*H87.0 mm
Net weight:	498.0g +/- 5g
Frequency response:	50HZ - 16KHZ
Sensitivity:	80dB
S/N ratio:	≥75dB
Distortion:	<0.1% @ 1W
Transmission Power:	Class2, ≤4dbm
Bluetooth profiles:	A2DP, AVRCP, HFP
Working current:	≤2200mA
Working voltage:	3.3 - 4.2V
Charging current:	≤1600mA
Output Quick Charge Protocol:	PD3.0/ PD2.0/ QC3.0/ QC2.0/ AFC/ FCP/ PE2.0/PE1.1/ SFCP
Enter the fast charging protocol:	PD3.0/ PD2.0/ AFC/ FCP
Output / Charge Power:	18W
Output/ Input voltage:	5V ⎓ 3A/ 9V ⎓ 2A/ 12V ⎓ 1.5A
Static standby current under shutdown status:	≤1mA
Static standby current under power on status:	≤100mA
Battery capacity:	10000mAh
Charging time:	about 4-5 hours
Playtime at 80% volume:	about 20 hours
Waterproof:	IPX6

IPX6 : No harm for 3-5 minutes water flushing, but don't soak!

FAQ

1. The screen is not displaying course data?
Please check:
Whether the device has been paired within the app
Whether a round has been started
Whether your phone's Bluetooth is enabled

2. The speaker is unable to play music?
Please check:
Whether the blue indicator light is steadily lit
Whether your phone is connected to the V3 PRO
Whether your phone's volume is turned up

3. The blue indicator light is continuously flashing?
This indicates that the device is not connected to a phone;
please reconnect to the V3 PRO via your phone's Bluetooth settings.

FCC WARNING

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1)this device may not cause harmful interference, and(2)this device must accept any interference received, including interference that may cause undesired operation.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However,there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
– Reorient or relocate the receiving antenna.
– Increase the separation between the equipment and receiver.
– Connect the equipment into an outlet on a circuit differentfrom that to which the receiver is connected.
– Consult the dealer or an experienced radio/TV technician for help.

The company reserves the right to the product modification for appearance and function,which is subject to change without prior notice.