


IMAGE IS FOR REFERENCE ONLY

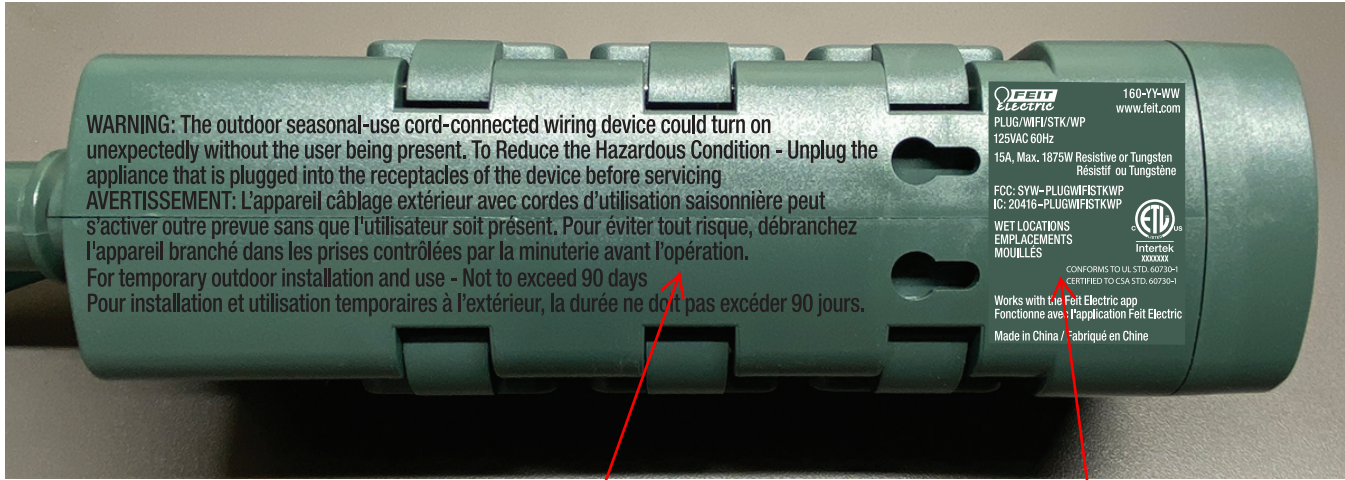

BELOW MARKING MUST BE MOLDED OR HOT STAMPED ON THE DEVICE BODY

2.4 mm (minimum)

WARNING: The outdoor seasonal-use cord-connected wiring device could turn on unexpectedly without the user being present. To Reduce the Hazardous Condition - Unplug the appliance that is plugged into the receptacles of the device before servicing
AVERTISSEMENT: L'appareil câblage extérieur avec cordes d'utilisation saisonnière peut s'activer outre prévue sans que l'utilisateur soit présent. Pour éviter tout risque, débranchez l'appareil branché dans les prises contrôlées par la minuterie avant l'opération.
For temporary outdoor installation and use - Not to exceed 90 days
Pour installation et utilisation temporaires à l'extérieur, la durée ne doit pas excéder 90 jours.

STICKER LABEL
WHITE INK ON A GREEN LABEL,
CLOSELY MATCHING THE PRODUCT COLOR

