# YK-003 Electricity diagram

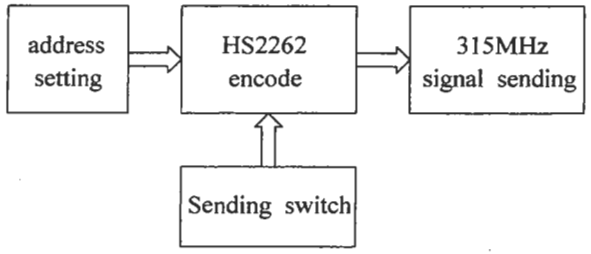


（1）Sender (AHS001/AHS003)

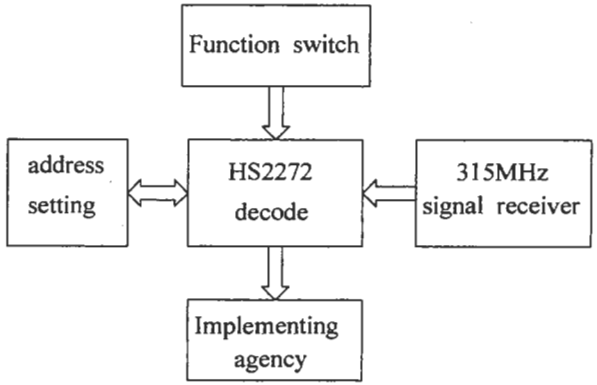


（2）Receiver (AHR003)