US

Dear user

Thank you for choosing REDRAGON product. To protect your rights and for better customer service, please read the following warranty rules carefully.

1. Within 18 months of purchase date, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot pads) and spare parts replacement are not included in our warranty.

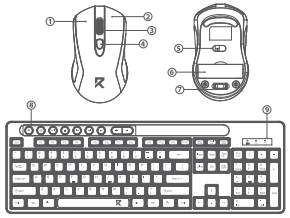

Function Overview

1.Left button.
2.Right button.
3.Scroll wheel& Middle button.
4.DPI button.
5.Optical sensor.
6.Battery slot.
7.USB receiver storage slot.
8.Shortcut keys.
9.Indicator LED.

O.S. Support: Win XP/ Win 7/ Win 8/ Win 10/ Win 11/ MAC O.S.

Connection

2.4GHz wireless connection, install 1*AA battery into mouse battery slot, install 1*AAA battery into keyboard battery slot, plug USB receiver into computer USB port, the computer will connect mouse and keyboard automatically.

Tips: If the computer didn't connect successfully, plug out USB receiver from computer USB port, take out batteries from mouse and keyboard, repeat above operation to connect the computer.

Product Features

Mouse

DPI switching: Press [DPI] button to cycling switch DPI in 800/1200/1600/2400/4000 DPI

Polling Rate: 250Hz.

Power save mode: The mouse will enter power save mode when it is out of operation over 1 minute, move or click any button to wake it up, when the mouse is out of operation over 10 minutes, the mouse will enter deep power save mode, click any button to wake it up.

Low battery warning: when mouse battery is low, the LED below the scroll wheel will twinkle, to remind change the battery.

Keyboard

Shortcut keys:

Internet browser homepage	E-mail
Play/Pause	Stop play
Previous track	Next track
Mute	Volume +
Volume -	

Low battery warning: when battery is low, the LED will twinkle, to remind change the battery.

FAQ

1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please unplug the keyboards USB cable from the computer immediately. Wipe off excess liquid and put the keyboard in a dry and ventilated place. Make sure the keyboard is dried naturally before the next use.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

– Reorient or relocate the receiving antenna.
– Increase the separation between the equipment and receiver.
– Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
– Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

BATTERY SAFETY GUIDELINES

DO NOT replace the battery with a different model.
DO NOT use this product if the battery shows signs of damage including, but not limited to tearing, deformation, leakage, or the smell of electrolytic material.
DO NOT touch the battery if material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes.
DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition.
DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations.
DO NOT impact, bend, alter, disemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful.

CAUTION:

Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock.

This device contains licence-exempt transmitter(s) receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas causer d'interférences. (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

PT

Prezado usuário

Obrigado por escolher os produtos REDRAGON. Para proteger seus direitos e oferecer um melhor atendimento, leia com atenção as regras da garantia, abaixo.

1. Dentro do período da garantia, os reparos são garantidos nos casos de falha devido a problemas no circuito elétrico. Danos causados pela desmontagem, por impactos violentos, imersão em água, ligação em correntes ou voltagens incorretas e danos causados por desastres naturais, como incêndios, inundações ou terremotos, não estão incluídos.
2. Peças que sofrem desgaste (como pés) e a substituição de peças avulsas não estão incluídas em nossa garantia.

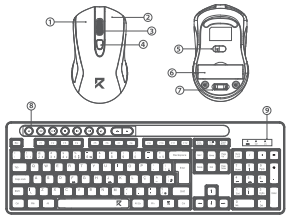

Visão geral das funções

1.Botão esquerdo.
2.Botão direito.
3.Botão de rolagem e botão do meio.
4.Botão DPI.
5.Sensor óptico.
6.Compartimento de bateria.
7.Compartimento de armazenamento do receptor USB.
8.Teclas de atalho.
9.Indicator LED.

O.S. Support: Win XP/ Win 7/ Win 8/ Win 10/ Win 11/ MAC O.S.

Conexão sem fio de

2,4 GHz instale 1 pilha AA no compartimento de pilhas do mouse, instale 1 pilha AAA no compartimento de pilhas do teclado, conecte o receptor USB na porta USB do computador e o computador conectará o mouse e o teclado automaticamente.

Dica: Se o computador não conectar, desconecte o receptor USB da porta USB do computador, retire as pilhas do mouse e repita a operação acima para corrector o computador.

Características do produto

Mouse

Troca de DPI: pressione o botão [DPI] para alternar entre as configurações de DPI em 800/1200/1600/2400/4000 DPI.

Velocidade de leitura: 250 Hz

Modo de economia de energia: o mouse entrará no modo de economia de energia se ficar inativo por mais de 1 minuto. Mova ou clique em qualquer botão para ativá-lo. Se o mouse ficar inativo por mais de 8 minutos entrará no modo de economia de energia profundo. Clique em qualquer botão para ativá-lo.

Aviso de bateria fraca: quando a bateria do mouse estiver baixa, o indicador LED piscará para lembrar de trocar a bateria.

Teclado

Teclas de atalho:

Página inicial na Internet	E-mail
Tocar/pausar	Interromper reprodução
Faixa anterior	Próxima faixa
Mudo	Volume +
Reduzir o volume -	

Aviso de bateria fraca: quando a bateria do mouse estiver baixa, o LED piscará para lembrar de trocar a bateria.

Dúvidas frequentes

1. Se o teclado não responder, verifique se o cabo USB do teclado está inserido corretamente na porta USB correspondente no computador, ou experimente outra porta USB no computador.
2. Se você derramar líquido no teclado, desconecte o cabo USB do teclado do computador imediatamente. Enxugue o excesso de líquido e coloque o teclado em local seco e ventilado. É importante que o teclado seque naturalmente antes de utilizá-lo.

封底

REDRAGON

REDRAGON

BK-7094

WIRELESS MOUSE AND KEYBOARD COMBO FOR OFFICE OR HOME USE

USER MANUAL

封面

型号	BS-7094(7094+4045)		备注：尺寸：100x100mm (折页) 材质：80g书写纸 印刷：单黑色双面印刷				
名称	说明书						
日期	2024-11-1(修改)						
页码	1 OF 1		文件编号				
绘图	邓子松	审核	香敏琪	核准		版本	A.1