封面

REDRAGON

WILDSLASH LCD PRO

3-MODE LCD SCREEN & KNOB CONTROL
MECHANICAL KEYBOARD


Please scan here to download user manual

Gaming Keyboard User Manual

封底

REDRAGON

CE FC EAC RoHS ANATEL 02981-24-16556

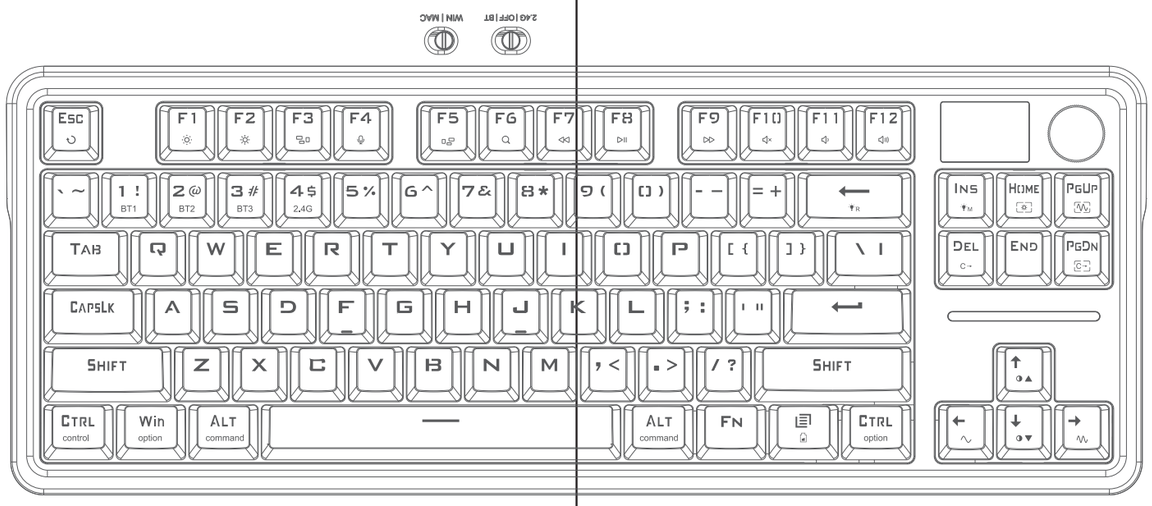

1

2

US UK

Dear user

Thank you for you choosing REDRAGON Brand, to protect your rights and for better customer service, we ask that you note our warranty rules.


1. Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Man-made damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot stick) and spare parts replacement are no included in our warranty.

3

O.S. Support

Windows XP/ Vista/ Win 7/ Win 8/ Win 10/ Win 11/ Mac O.S.

How to connect the keyboard with multiple devices

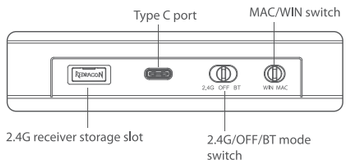

Wired Connection

[2.4G/OFF/BT] switch on "OFF", connect the keyboard to the computer with USB cable, the computer will recognize and configure the keyboard automatically. The battery will be charging when wired connection, the light bar will blink till fully charged.

2.4G Wireless Connection

[2.4G/OFF/BT] switch on "2.4G", the light bar flash in Yellow, plug the USB receiver into your computer USB port, the keyboard will connect with computer automatically. If auto-connection unsuccessfully, or you want to connect to new device, plug out the USB receiver, press and hold [FN]+[4] for 3 seconds, the light bar flash quickly in Yellow, plug the USB receiver into computer USB port, after paired the light bar will turn to current lighting mode.

4

BT Connection

1. [2.4G/OFF/BT] switch on "BT".
2. Press [FN]+[1/2/3] to choose relevant BT channel, the light bar flashes in Blue [1] or Green[2] or Cyan[3] quickly. Turn on BT function and searching for available devices, it will find "BT 5.0 KB" device name. Select the BT name to pair, after paired the light bar will turn to current lighting mode.
 To switch the Bluetooth connections between BT1/BT2/BT3, press [FN]+ [1/2/3].

Product Features

Backlight

1. The default 15 backlight patterns switch by press [FN] + [INS] to cyclic switch the light patterns.
2. Press [FN] + [←/→] to adjust light rotating speed, total 5 levels.
 Press [FN] + [↑/↓] to adjust backlight brightness, total 5 levels.
3. Backlight color switching (available on limited light patterns):Press [FN]+[DEL] to cyclic switch Red, Green, Blue, Yellow, Purple, Cyan, White, RGB.
4. Backlight DIY: Press [FN] + [Back space] to enter DIY mode, [A] [S] [W] [D] [ESC] [←] [↓] [↑] [↓] lights on by default, Press [FN] + [Back space] again to start recording, [FN] key will flash in Red till the recording completed, Continuously press the key to select the color you want to set （except [FN]）, once key light color setting are completed, press [FN] + [Back space] to save.
5. Light bar light mode adjustment:
 Press [FN]+[HOME] to cyclic switch 5 light modes.
 Press [FN]+[PGUP] to cyclic adjust lighting speed(available on limited mode).
 Press [FN]+[PGDN] to cyclic adjust lighting color(available on limited mode).

[WIN] lock

Press [FN] + [WIN] to lock [WIN] key, repeat to unlock (DO NOT lock the key when using on MAC O.S.).

5

Windows/MAC shortcut keys switching

Toggle the [MAC/WIN] switch.

Commands of key combinations with [FN] key

FN+[O]: Print Screen	FN+[P]: Scroll Lock
FN+[[{]: Pause	FN+[] }]: Insert
WINDOWS O.S.	**MAC O.S.**
FN+F1: Screen brightness -	F1: Screen brightness -/ FN+F1=F1
FN+F2: Screen brightness +	F2: Screen brightness +/ FN+F2=F2
FN+F3: Multiple windows	F3: Multiple task / FN+F3=F3
FN+F4: Speech recognition（O.S. win10 or later）	F4: Siri / FN+F4=F4
FN+F5: Show desktop	F5: Show desktop / FN+F5=F5
FN+F6: Search	F6: Search / FN+F6=F6
FN+F7: Pre track	F7: Pre track / FN+F7=F7
FN+F8: Play/Pause	F8: Play/Pause / FN+F8=F8
FN+F9: Next track	F9: Next track / FN+F9=F9
FN+F10: Mute	F10: Mute / FN+F10=F10
FN+F11: Volume -	F11: Volume down / FN+F11=F11
FN+F12: Volume +	F12：Volume up / FN+F12=F12

Knob & LCD screen

Turn the knob to adjust volume by default, press the knob button to enter LCD screen menu, turn the knob to select function options, press to enter relevant function option, when out of operating over 1min, the menu will automatic quit.
LCD screen menu options: Effect(Time/Gif), Colour(Backlight pattern), Colour(Backlight color), Brightness(Backlight brightness), Speed(Backlight speed), Language(CN/EN), Layout(WIN/MAC switch), Return(back).

6

Restore factory settings

Press and hold [FN] + [ESC] for 3 seconds.

Power saves mode & how to recharge

On wireless/BT connection mode, when keyboard without any operation for over 3 minutes, the keyboard backlight will turn off to save the battery, when keyboard without any operation for over 30 minutes, the keyboard will enter power save mode, press any key to wake up.

When the battery is low, the light bar will blink red slowly,
connect the keyboard with computer for charging, the light bar will blink when charging, after fully charged turn to current light mode.
Battery power indicator: Press and hold [FN] + [], backlight light on [1-0] to show the battery level, release to back to current backlight mode.

Warning: Charging Input: 5V⎓2A

FAQ

1. If the keyboard doesn't respond, please check if the keyboards USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please unplug the keyboards USB cable from the computer immediately. Wipe off excess liquid and put the keyboard in a dry and ventilated place. Make sure the keyboard is dried naturally before the next use.

7

BATTERY SAFETY GUIDELINES

DO NOT replace the battery with a different model.
DO NOT use this product if the battery shows signs of damage including, but not limited to tearing, deformation, leakage, or the smell of electrolytic material.
DO NOT touch the battery if material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes.
DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition.
DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations.
DO NOT impact, bend, alter, dissemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful.

CAUTION:
Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas causer d'interférences. (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

8

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
– Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

9

PL


Drogi Użytkowniku

Dziękujemy za wybór marki REDRAGON. Aby w pełni korzystać z praw gwarancyjnych, zapoznaj się z poniższymi zasadami:

1. Gwarancja obejmuje naprawę urządzenia w przypadku awarii wynikających z problemów z obwodami elektrycznymi.
 Gwarancja nie obejmuje uszkodzeń spowodowanych przez:
 - działania użytkownika (np. rozbieranie sprzętu, silne uderzenia, zalanie wodą, podłączenie do niewłaściwego zasilania),
 - klęski żywiołowe (np. pożar, powódź, trzęsienie ziemi).
2. Części eksploatacyjne (np. stopki) oraz części zamienne nie są objęte gwarancją.

10

Jak połączyć klawiaturę z wieloma urządzeniami



Połączenie przewodowe

Przełącznik [2.4G/OFF/BT] ustaw na „OFF", podłącz klawiaturę do komputera za pomocą kabla USB, komputer automatycznie rozpozna i skonfiguruje klawiaturę. Bateria będzie ładowana podczas połączenia przewodowego, pasek świetlny będzie migał do pełnego naładowania.

Połączenie bezprzewodowe 2.4G

Przełącznik [2.4G/OFF/BT] ustaw na „2.4G", pasek świetlny miga na żółto, podłącz odbiornik USB do portu USB komputera, klawiatura połączy się z komputerem automatycznie. Jeśli automatyczne połączenie nie powiedzie się, lub chcesz połączyć się z nowym urządzeniem, wyjmij odbiornik USB, naciśnij i przytrzymaj [FN]+[4] przez 3 sekundy, pasek świetlny zacznie szybko migać na żółto, podłącz odbiornik USB do portu USB komputera, po sparowaniu pasek świetlny zmieni się na aktualny tryb podświetlenia.

Połączenie BT:

1. Przełącznik 2.4G/OFF/BT ustawić na „BT".
2. Naciśnij [FN]+[1/2/3], aby wybrać odpowiedni kanał BT, pasek świetlny miga szybko na niebiesko [1] lub zielono [2] lub cyjan [3]. Włącz funkcję BT i wyszukaj dostępne urządzenia, zostanie znaleziona nazwa urządzenia „BT 5.0 KB". Wybierz nazwę BT do sparowania, po sparowaniu pasek świetlny zmieni się na aktualny tryb oświetlenia.
 Aby przełączyć połączenia BT między BT1/BT2/BT3, naciśnij [FN] + [1/2/3].

11

Podświetlenie

1. Domyślne 15 wzorów podświetlenia przełącza się cyklicznie przez naciśnięcie kombinacji klawiszy [FN] + [INS].
2. Naciśnij [FN] + [←/→], aby dostosować prędkość rotacji podświetlenia, łącznie 5 poziomów.
 Naciśnij [FN] + [↑/↓], aby regulować jasność podświetlenia, łącznie 5 poziomów.
3. Przełączanie koloru podświetlenia (dostępne dla ograniczonych wzorów świetlnych): Naciśnij [FN] + [DEL], aby cyklicznie przełączać czerwony, zielony, niebieski, żółty, purpurowy, cyjan, biały, RGB.
4. Samodzielne dostosowywanie podświetlenia: Naciśnij [FN] + [Back space], aby wejść w tryb samodzielnej konfiguracji, [A] [S] [W] [D] [ESC] [←] [→] [↑] [↓] świecą się domyślnie. Naciśnij [FN] + [Back space] ponownie, aby rozpocząć nagrywanie, klawisz [FN] będzie migać na czerwono, aż nagrywanie się zakończy. Nieprzerwanie naciskaj klawisz, aby wybrać kolor, który chcesz ustawić (oprócz [FN]). Po zakończeniu ustawiania koloru podświetlenia klawisza, naciśnij [FN] + [Back space], aby zapisać.
5. Regulacja trybu podświetlenia paska świetlnego:
 Naciskaj [FN]+[HOME], aby cyklicznie przełączać 5 trybów oświetlenia.
 Naciskaj [FN]+[PGUP], aby cyklicznie regulować prędkość podświetlenia (dostępne w ograniczonym trybie).
 Naciskaj [FN]+[PGDN], aby cyklicznie dostosowywać kolor oświetlenia (dostępne w ograniczonym trybie).

Blokada klawisza [WIN]

Naciśnij [FN] + [WIN], aby zablokować klawisz [WIN], naciśnij ponownie, aby go odblokować (NIE blokuj klawisza podczas używania w systemie MAC O.S.)

Przełączanie skrótów klawiszowych Windows/MAC

Przełącz przełącznik [MAC/WIN]

12

Skróty klawiszowe z użyciem [FN]

FN+[O]: Print Screen	FN+[P]: Blokada przewijania
FN+ [] }]: Pauza	FN+[[{]: INSERT
System operacyjny Windows	**System operacyjny MAC**
FN+F1: Jasność ekranu -	F1: Jasność ekranu -/ FN+F1=F1
FN+F2: Jasność ekranu +	F2: Jasność ekranu +/ FN+F2=F2
FN+F3: Wiele okien	F3: Wiele zadań / FN+F3=F3
FN+F4: Rozpoznawanie mowy (O.S. win10 lub nowszy)	F4: Siri / FN+F4 = F4
FN+F5: Pokaż pulpit	F5: Pokaż pulpit / FN+F5=F5
FN+F6: Wyszukiwanie	F6: Wyszukiwanie / FN+F6=F6
FN+F7: Poprzedni utwór	F7: Poprzedni utwór / FN+F7=F7
FN+F8: Odtwarzaj/pauza	F8: Odtwórz/Pauza / FN+F8=F8
FN+F9: Następny utwór	F9: Następny utwór / FN+F9=F9
FN+F10: Wycisz	F10: Wycisz / FN+F10=F10
FN+F11: Zmniejsz głośność	F11: Zmniejsz głośność / FN+F11=F11
FN+F12: Zwiększ głośność	F12: Zwiększ głośność / FN+F12=F12

Pokrętło i wyświetlacz LCD

Obróć pokrętło, aby domyślnie dostosować głośność. Naciśnij przycisk pokrętła, aby wejść do menu ekranu LCD. Obróć pokrętło, aby wybrać opcje funkcji, naciśnij, aby wejść do odpowiedniej opcji funkcji. Po upływie 1 minuty menu automatycznie zamknie się.
Opcje menu ekranu LCD: Efekt (Czas/Gif), Kolor (Wzór podświetlenia), Kolor (Kolor podświetlenia), Jasność (Jasność podświetlenia), Szybkość (Szybkość podświetlenia), Język (CN/EN), Układ (Przełącznik WIN/MAC), Powrót (wstecz).

13

Przywracanie ustawień fabrycznych

Naciśnij i przytrzymaj [FN] + [ESC] przez 3 sekundy.

W trybie bezprzewodowym/BT, gdy klawiatura nie jest używana przez ponad 3 minuty, podświetlenie automatycznie się wyłącza, aby oszczędzać baterię. Po upływie 30 minut bezczynności klawiatura przechodzi w tryb uśpienia – aby ją wybudzić, wystarczy nacisnąć dowolny klawisz.

Gdy bateria jest słaba, pasek świetlny zacznie powoli migać na czerwono. Podłącz klawiaturę do komputera, aby rozpocząć ładowanie – w trakcie ładowania pasek będzie migał, a po pełnym naładowaniu klawiatura automatycznie powróci do poprzedniego trybu podświetlenia. Aby sprawdzić poziom naładowania baterii, naciśnij i przytrzymaj [FN] + [] – podświetlenie klawiszy [1–0] wskaże aktualny poziom, a po zwolnieniu przycisków klawiatura wróci do bieżącego trybu.

Ostrzeżenie: Prąd ładowania: 5V⎓2A maks
Wbudowana bateria litowo-jonowa 1 sztuka

Często zadawane pytania

1. Jeśli klawiatura nie odpowiada, sprawdź, czy kabel USB klawiatury jest prawidłowo podłączony do odpowiedniego złącza USB w komputerze lub spróbuj użyć innego złącza USB w komputerze.
2. W przypadku rozlania płynu na klawiaturę należy natychmiast odłączyć kabel klawiatury USB od komputera. Wytrzyj nadmiar płynu i umieść klawiaturę w ciepłym i przewiewnym miejscu. Przed następnym użyciem upewnij się, że klawiatura naturalnie wyschła.

14

型号	HL-K746WB-RGB-PRO/7486		备注：尺寸：100x100mm(折页) 材质：80g书写纸 印刷：单黑色双面印刷				
名称	说明书						
日期	2025-7-29						
页码	1 OF 1		文件编号				
绘图	邓子松	审核	香敏琪	核准		版本	A.0

Eastern Times Tech