封面

封底

REDRAGON

SKULD PRO

3-MODE LIGHT-WEIGHT
GAMING HEADSET

3-mode light-weight gaming headset Operating Instructions

REDRAGON

SKULD PRO

3-MODE LIGHT-WEIGHT
GAMING HEADSET

3-mode light-weight gaming headset Operating Instructions

US UK

Dear user

Thank you for choosing our REDRAGON product. To protect your rights and for better customer service, we ask that you note our warranty rules.

1. Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot pad) and spare parts replacement are not included in our warranty.

OS Support

Windows XP/Vista/Win7/Win8/Win10/Win11

Packaging List:

A. Headset --1 unit
B. Pluggable microphone --1 unit
C. Transmitter --1 unit
D. TYPE-C charging cable --1 unit

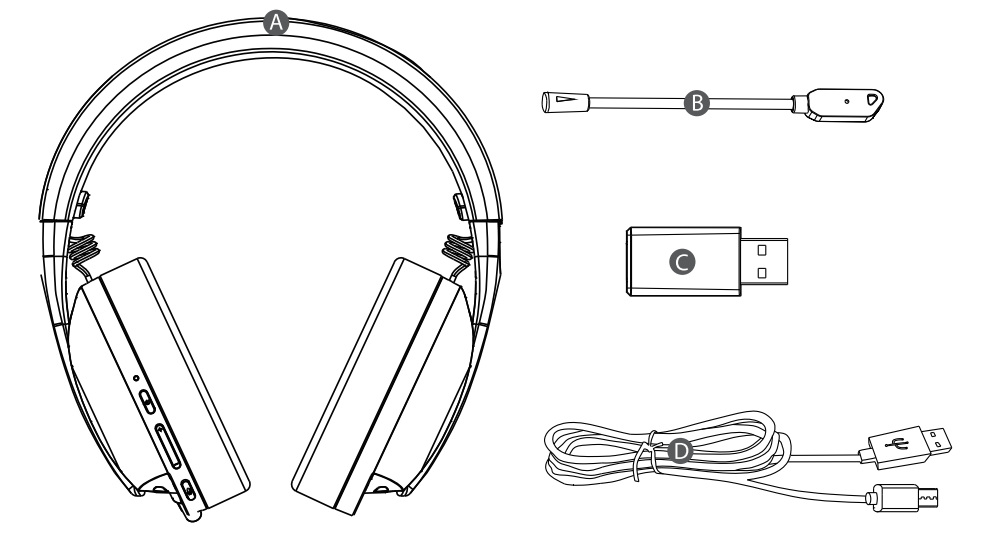

Headset and transmitter instructions:

Transmitter lighting description:
①Blue LED flashing: Disconnected
②Blue LED on: Connected, microphone ready
③Blue LED off: Connected, microphone muted

Headset button instructions:
①Work LED hole
②Power switch
③Volume +
④Volume -
⑤Microphone switch
⑥TYPE C charging port
⑦Luminous LED

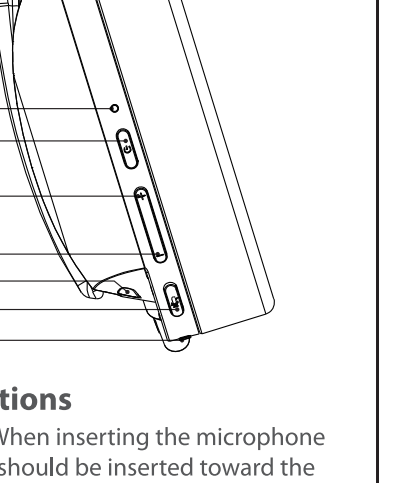

Microphone plugging/unplugging instructions

There is a groove at the microphone jack on the left shell. When inserting the microphone rod into the microphone hole, the convex point of the rod should be inserted toward the concave side of the hole. If it is inserted reversely or in the wrong position, it can't be inserted and the microphone function will be affected.

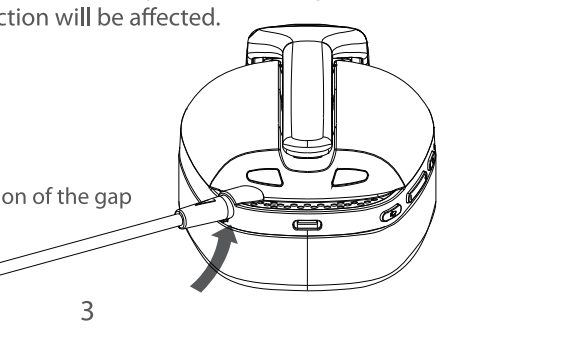

Insert in the direction of the gap

How to charge

1) Insert the TYPE C interface into the headset, and then plug the other USB port into the computer or DC 5V charging adapter. When charging, the red LED on the headset will be on, and the charging time is about 3 hours.
2) When charging in 2.4G mode, the red LED will be on. When fully charged, the red LED will go off.
3) When charging through the USB port on the PC in 2.4G mode, the headset will also switch to USB mode and the red LED is always on; when fully charged, the red LED will go off.
4) When charging in BT mode, the headset will be turned off and the red LED will be on. When fully charged, the red LED will go off.
5) When charging with the headset turned off, the red LED will be on. When fully charged, the red LED will go off

Equipment name description

1) USB dongle device name: H878 Wireless headset
2) BT mode headset name: H878
3) Wired mode headset name: H878 USB Gaming Headset

How to pair

1) Turn off the headset and remove the transmitter.
2) Press the power button to turn on the headset, the blue LED will turn on and flash slowly. Press the power button twice quickly to switch the headset to 2.4G mode; you will hear the Gaming Mode prompt;
3) Turn on the transmitter (plug the transmitter into PC, PS4 or smartphone), and the blue LED of the transmitter flashes.
4) Press and hold the headset microphone button for 3 seconds. After successful pairing, you can hear the Gaming Mode prompt, and the blue LED of the transmitter is always on (if the transmitter LED is off, it is because the microphone button is held when the devices are successfully paired).
5) The headset and transmitter are automatically paired, and the blue LED is always on (for products that have been paired).

Headset usage instructions

2.4G mode

1) Connect the transmitter to PC/PS4/smartphone (via TYPE C port), and the LED will light up and flash.
2) Turn on the headset and it will automatically pair to the transmitter. The blue LED on the headset and transmitter will be always on after successful pairing. The LED will flash when pairing fails.
3) Press Vol+/- to adjust the volume.
4) The microphone is turned on by default. To turn off the microphone, press the microphone button once (the dongle LED turns blue), then press it again (the dongle LED turns blue), and the microphone function is turned on.
5) The headset defaults to stereo. You can press the microphone button twice quickly to switch to Virtual 7.1 sound. The headset will beep twice. Press the microphone button twice again to switch back to stereo. The headset will beep once.
6) The luminous LED is on by default. You can press the microphone button three times to turn off the luminous LED. Press the microphone button three times again to turn on the luminous LED.
7) See the table below for the key function list.

Specifications in 2.4G mode				
	Buttons/functions /lights	Function description	Operation method /prompt sound	Prompt sound/ voice
Left shell	Power button	Power on/off	Power on: Press and hold for 1.5 seconds Power off: Press and hold for 3 seconds	2.4G mode prompt sound: Gaming Mode Power-off prompt sound: Power off
		2.4G mode and BT mode switching	Press power button twice	2.4G mode prompt sound: Gaming Mode BT mode prompt sound: BT mode
		Play / Pause	Press once	
	Vol+ button	Turn up volume	Press Press and hold	Maximum volume: beep once
		Next track	Press twice	
	Vol- button	Turn down volume	Press Press and hold	Minimum volume: beep once
		Previous track	Press twice	
	Microphone switch	Microphone on/mute	Press once	Ding-dong means off, ding means on, the default is on, the transmitter LED is always on
		2.0/7.1	Press twice	Default in 2.0 mode, press twice to beep twice and switch to 7.1 mode; beep once to 2.0 mode
		Luminous LED on/off	Press three times	Luminous LED default: On
		2.4G mode pairing	Press and hold for 3 seconds	After successful pairing: Gaming Mode prompt sound
	Charging LED	Red	Always on when charging, off when fully charged	
	Work LED	Blue	Flashes when powering on, stays on after connecting	

Wired USB mode

1) Remove the transmitter from PC/PS4/smartphone.
2) Turn on the headset, switch the headset to 2.4G mode, and you will hear the gaming mode prompt; the blue LED turns on and flashes; then plug the TYPE C USB cable into the headset, and connect the USB port to PC/PS4/smartphone (through TYPE C port), the red LED is always on.
3) After the connection is successful, the "H878 USB Gaming Headset" will be displayed in the computer speaker icon or audio device manager.
4) Press Vol+/- to adjust the volume.
5) The microphone is turned on by default. To turn off the microphone, press the microphone button once; press it again to turn the microphone function on.
6) The headset defaults to stereo. You can press the microphone button twice quickly to switch to Virtual 7.1 sound. The headset will beep twice. Press the microphone button twice again to switch back to stereo. The headset will beep once.
7) The luminous LED is on by default. You can press the microphone button three times to turn off the luminous LED, and press it three times again to turn on the luminous LED.
8) In wired mode, you cannot switch to BT or 2.4G mode. If you need to switch modes, unplug the wire and press the power button.
9) See the table below for detailed button operations in wired mode.

Specifications in USB mode				
	Buttons/functions	Function description	Operation method	Prompt sound/ voice
Left shell	Vol+ button	Turn up volume	Press Press and hold	Maximum volume: beep once
		Next track	Press twice	
	Vol- button	Turn down volume	Press Press and hold	Minimum volume: beep once
		Previous track	Press twice	
	Microphone switch	Microphone on/mute	Press once	Ding-dong means off, ding means on, the default is on
		2.0/7.1	Press twice	Default in 2.0 mode, press twice to beep twice and switch to 7.1 mode; beep once to 2.0 mode
		Luminous LED on/off	Press three times	Luminous LED default: On
	Power button	Power on/off	Power on: Press and hold for 1.5 seconds to enter USB mode and chargePower off: Press and hold for 3 seconds to power off and charge only	Power off prompt sound: Power off
	Charging LED	Red	Always on when charging, off when fully charged	
	Work LED	Blue	Flashes in blue when powering on, stays on in red after connecting USB cable	

BT mode

1) Turn on the headset and switch the headset mode to BT. You can hear the prompt: BT mode; Pairing. The headset will enter pairing mode.
2) This headset is compatible with most BT mobile phones and other devices that support the BT headset protocol.
3) In BT mode, press the microphone button for 3 seconds and the headset will enter pairing mode.
4) Start the pairing process of your BT mobile phone. Please refer to the mobile phone user manual for detailed steps. The usual steps are to enter the "Search" menu, select "Connect" or "BT" and then select "Search for BT devices".
5) Your phone will search for the "H878" headset and ask whether to pair with it, select the "Yes" or "Pair" option. (The specific name shall be subject to the actual product).
6) After successful pairing, the headset will prompt: connected.
7) In BT mode, the default is stereo, and there is no other sound effect switching.
8) In BT mode, see the table below for detailed button operation instructions.

Specifications in BT mode				
	Buttons/functions /lights	Function description	Operation method	Prompt sound/ voice
Button description	Vol+ button	Turn up volume	Press	Maximum volume: beep once
			Press and hold	
		Next track	Press twice	
	Vol- button	Turn down volume	Press	Maximum volume: beep once
			Press and hold	
		Previous track	Press twice	
	Microphone switch	Microphone on/mute	Press once	Default is on Ding-dong means off, ding means on
		Enter BT pairing mode	Press and hold for 3 seconds	There will be pairing prompt sound
		Luminous LED on/off	Press three times	Luminous LED default: On
	Power button	Power on/off	Power on: Press and hold for 1.5 seconds Power off: Press and hold for 3 seconds	BT mode: BT mode
		Play / Pause music	Press once	
		Answer/end the call	Press once	
		Reject the call	Press and hold for 1.5 seconds	
		2.4G mode and BT mode switching	Press twice	2.4G mode prompt sound: Gaming Mode,BT mode prompt sound: BT mode
	Charging LED	Red	Always on when charging, off when fully charged	
	Work LED	Blue	Flashes when powering on, stays on after connecting	

For H878 headset, the list of applicable hosts and connection methods are as follows:

List of H878 applicable hosts			
Applicable equipment	**BT mode**	**2.4G mode**	**Wired USB mode**
Android phone	Yes	Type-C adapter	Type-C adapter
Windows laptop	Yes	USB port	USB port
Windows computer host	No	USB port	USB port
Apple laptop	Yes	USB port (Type-C docking station USB)	USB port (Type-C docking station USB)
switch	Yes	Type-C adapter	Type-C adapter
PS/3	No	USB port	USB port
PS/4	No	USB port	USB port
PS/5	No	USB port	USB port
XBOX one	No	No	No

Low battery reminder

When the headset battery drops to 3.3V, the low-power LED turns red, the 3.3V prompt appears, the red LED of the headset flashes, and prompts Battery Low every minute; when the transmitter is working, the blue LED flashes; when the headset is lower than 3.25V, it shuts down.

Storage

Headset should be stored in a clean, dry and ventilated room with an ambient temperature of -5~35℃. Contact with corrosive substances should be avoided, and they should be kept away from fire and heat sources. The headset battery should be charged every six months during storage.

Remark

1. Do not put the headset in humid and wet place.
2. High volume for long period may damage your hearing.
3. Do not put self's strength to pull the cable.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
– Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

BATTERY SAFETY GUIDELINES

DO NOT replace the battery with a different model.

DO NOT use this product if the battery shows signs of damage including, but not limited to tearing, deformation, leakage, or the smell of electrolytic material.

DO NOT touch the battery fi material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes.

DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition.

DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations.

DO NOT impact, bend, alter, dissemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful.

⚠ CAUTION

Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock.

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas causer d'interférences. (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

ES

Estimado usuario

Gracias por elegir REDRAGON Lite. Para proteger sus derechos y obtener un mejor servicio al cliente, le pedimos que preste atención a las reglas de la garantía.

1. Dentro del período de garantía, la reparación está garantizada por fallas debido a problemas en el circuito eléctrico. Los daños causados por el hombre, como desmontaje, impactos fuertes, inmersión en agua, conexión a una corriente o a un voltaje incorrecto y los daños causados por desastres naturales como incendios, inundaciones o terremotos no están incluidos.
2. Las partes consumibles (tal como un bastón) y el reemplazo de repuestos no está incluido en nuestra garantía.

Soporte técnico

Windows XP/Vista/Win7/Win8/Win10/Win11

Lista del embalaje:

A. Auriculares --1 pieza
B. Micrófono enchufable --1 pieza
C. Transmisor --1 pieza
D. Cable de carga TIPO C --1 pieza

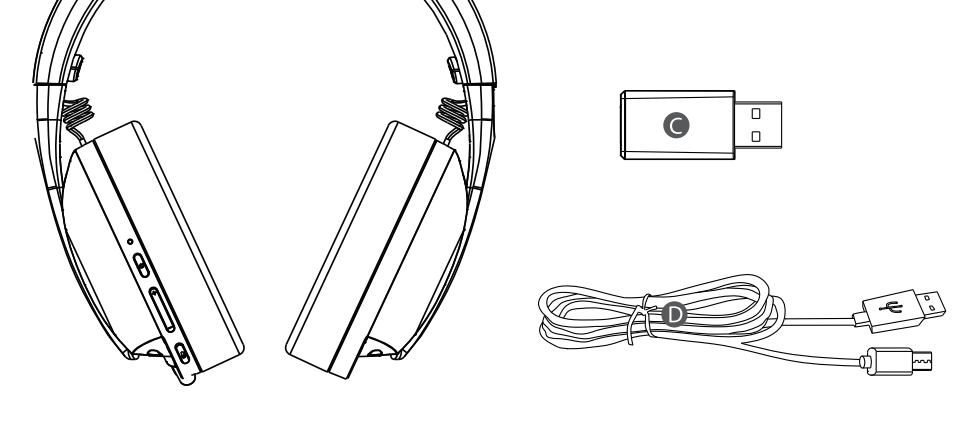

Instrucciones de los auriculares y del transmisor:

Descripción de la iluminación del transmisor:
①LED azul destellante: desconectado
②LED azul encendido: conectado, micrófono listo
③LED azul apagado: conectado, micrófono silenciado

Instrucciones de los botones de los auriculares:
①Orificio LED de trabajo
②Interruptor de alimentación
③Subir volumen
④Bajar volumen
⑤Interruptor del micrófono
⑥Puerto de carga TIPO C
⑦LED luminoso

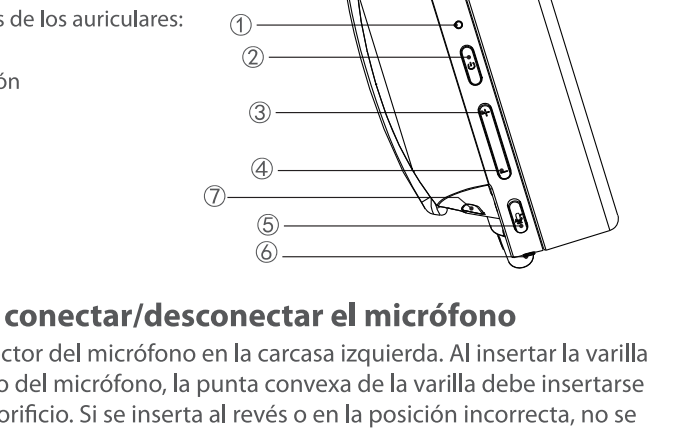

Instrucciones para conectar/desconectar el micrófono

Hay una ranura en el conector del micrófono en la carcasa izquierda. Al insertar la varilla del micrófono en el orificio del micrófono, la punta convexa de la varilla debe insertarse hacia el lado cóncavo del orificio. Si se inserta al revés o en la posición incorrecta, no se podrá insertar y la función del micrófono se verá afectada;

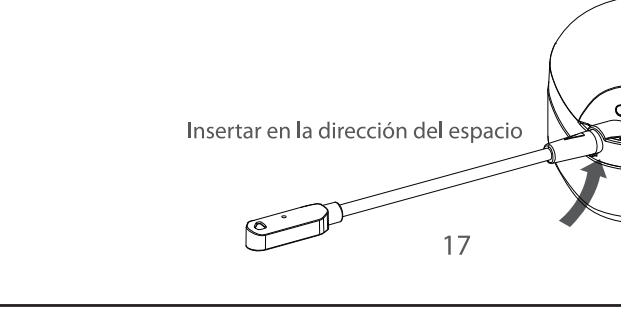

Insertar en la dirección del espacio

Cómo cargar

1) Inserte la interfaz TIPO C en los auriculares y luego conecte el otro puerto USB a la computadora o al adaptador de carga CC 5V. En la carga, el LED rojo de los auriculares se encenderá y el tiempo de carga será de unas 3 horas.
2) Al cargarse en modo 2,4G, el LED rojo quedará encendido. Al estar totalmente cargados, el LED rojo se apagará.
3) Al cargarse a través del puerto USB de la PC en modo 2,4G, los auriculares también cambiarán al modo USB y el LED rojo siempre estará encendido; al estar totalmente cargados, el LED rojo se apagará.
4) Al cargar en modo Bluetooth, los auriculares se apagarán y el LED rojo se encenderá. Al estar totalmente cargados, el LED rojo se apagará.
5) Cuando se carga con los auriculares apagados, el LED rojo estará encendido. Al estar totalmente cargados, el LED rojo se apagará

Descripción del nombre del equipo

1) Nombre del dispositivo dongle USB: Auriculares inalámbricos H878
2) Nombre de los auriculares en modo BT: H878
3) Nombre de los auriculares con modo con cable: Auriculares para juegos USB H878

Cómo sincronizar

1) Apague los auriculares y retire el transmisor.
2) Presione el botón de encendido para encender los auriculares, el LED azul se encenderá y destellará lentamente. Presione el botón de encendido dos veces rápidamente para cambiar los auriculares al modo 2,4G; escuchará el mensaje del Modo de juego;
3) Encienda el transmisor (conéctelo a la PC, PS4 o teléfono inteligente) y el LED azul del transmisor destellará.

4) Mantenga presionado el botón del micrófono de los auriculares durante 3 segundos. Después de una sincronización correcta, podrá escuchar el mensaje del Modo de juego y el LED azul del transmisor siempre estará encendido (si el LED del transmisor está apagado, es porque se mantiene presionado el botón del micrófono cuando los dispositivos se han sincronizado correctamente).
5) Los auriculares y el transmisor se sincronizan automáticamente y el LED azul siempre estará encendido (para productos que se han sincronizado).

Instrucciones de uso de los auriculares

Modo 2,4G

1) Conecte el transmisor a la PC/PS4/teléfono inteligente (por el puerto TIPO C) y el LED se iluminará y destellará.
2) Encienda los auriculares y se sincronizarán automáticamente con el transmisor. El LED azul de los auriculares y del transmisor estará siempre encendido después de una sincronización correcta. El LED destellará cuando falle la sincronización.
3) Presione los botones de subir y bajar el volumen para ajustar el volumen.
4) El micrófono está activado de forma predeterminada. Para apagar el micrófono, presione el botón del micrófono una vez (el LED del dongle se tornará azul), luego presiónelo nuevamente (el LED del dongle se tornará azul) y la función del micrófono se activará.
5) Los auriculares están predeterminados en modo estereofónico. Puede presionar el botón del micrófono dos veces rápidamente para cambiar al sonido Virtual 7.1. Los auriculares emitirán dos pitidos. Presione el botón del micrófono dos veces nuevamente para volver al modo estereofónico. Los auriculares emitirán un pitido.
6) El LED luminoso está encendido por defecto. Puede presionar el botón del micrófono tres veces para apagar el LED luminoso. Presione el botón del micrófono tres veces nuevamente para encender el LED luminoso.
7) Consulte la tabla siguiente para ver la lista de funciones claves.

Especificaciones en modo 2,4G				
	Botones/funciones /luces	Función descriptiva	Método de operación /sonido rápido	Sonido/voz de aviso
Carcasa izquierda	Botón de encendido	Encendido / Apagado	Encendido: manténgalo presionado por 1,5 segundosApagado: manténgalo presionado por 3 segundos	Sonido de aviso del modo 2,4G: modo de juego Sonido de aviso de apagado: Apagar
		Modo 2,4G y cambio de modo BT	Presione el botón de encendido dos veces	Sonido de aviso del modo 2,4G: modo de juego Sonido de aviso del modo BT: modo BT
		Reproducir o pausar	Presiónelo una vez	
	Botón de subir volumen	Subir el volumen	Manténgalo presionado	Volumen máximo: un pitido
		Pista siguiente	Presiónelo dos veces	
	Botón de bajar volumen	Bajar el volumen	Manténgalo presionado	Volumen mínimo: un pitido
		Pista anterior	Presiónelo dos veces	
	Interruptor del micrófono	Activar o silenciar el micrófono	Presiónelo una vez	Ding-dong significa apagado, ding significa encendido, el valor predeterminado es encendido, el LED del transmisor está siempre encendido
		2.0/7.1	Presiónelo dos veces	Por defecto está en el modo 2.0, presiónelo dos veces para emitir dos pitidos y cambiar al modo 7.1; un pitido al modo 2.0
		LED luminoso encendido/apagado	Presiónelo tres veces	LED luminoso predeterminado: encendido
		Sincronización en modo 2,4G	Manténgalo presionado durante 3 segundos	Después de una sincronización correcta: sonido de aviso del modo de juego
	LED de carga	Rojo	Siempre estará encendido durante la carga, apagado cuando estén totalmente cargados	
	LED de trabajo	Azul	Destellará cuando se enciende, permanecerá encendido después de conectarse	

Modo USB con cable

1) Retire el transmisor de la PC/PS4/teléfono inteligente.
2) Encienda los auriculares, cámbielos al modo 2,4G y escuchará el mensaje del modo de juego; el LED azul se encenderá y destellará; luego conecte el cable USB TIPO C a los auriculares y conecte el puerto USB a la PC/PS4/teléfono inteligente (a través del puerto TIPO C), el LED rojo siempre estará encendido.
3) Una vez que la conexión se haya realizado correctamente, se mostrarán los "Auriculares para juegos USB H878" en el ícono del altavoz de la computadora o en el administrador de dispositivos de audio.
4) Presione los botones de subir y bajar el volumen para ajustar el volumen.
5) El micrófono está activado de forma predeterminada. Para desactivar el micrófono, presione el botón del micrófono una vez; presiónelo nuevamente para activar la función del micrófono.
6) Los auriculares están predeterminados en modo estereofónico. Puede presionar el botón del micrófono dos veces rápidamente para cambiar al sonido Virtual 7.1. Los auriculares emitirán dos pitidos. Presione el botón del micrófono dos veces nuevamente para volver al modo estereofónico. Los auriculares emitirán un pitido.
7) El LED luminoso está encendido por defecto. Puede presionar el botón del micrófono tres veces para apagar el LED luminoso y presionarlo tres veces nuevamente para encender el LED luminoso.
8) En el modo con cable, no puede cambiar al modo BT o 2,4G. Si necesita cambiar de modo, desconecte el cable y presione el botón de encendido.
9) Consulte la tabla siguiente para conocer las operaciones detalladas de los botones en modo con cable.

Especificaciones en modo USB				
	Botones/funciones /luces	Función descriptiva	Método de operación	Sonido/voz de aviso
Carcasa izquierda	Botón de subir volumen	Subir el volumen	Presione Manténgalo presionado	Volumen máximo: un pitido
		Pista siguiente	Presiónelo dos veces	
	Botón de bajar volumen	Bajar el volumen	Presione Manténgalo presionado	Volumen mínimo: un pitido
		Pista anterior	Presiónelo dos veces	
	Interruptor del micrófono	Activar o silenciar el micrófono	Presiónelo una vez	Ding-dong significa apagado, ding significa encendido, el valor predeterminado es encendido
		2.0/7.1	Presiónelo dos veces	Por defecto está en el modo 2.0, presiónelo dos veces para emitir dos pitidos y cambiar al modo 7.1; un pitido al modo 2.0
		LED luminoso encendido/apagado	Presiónelo tres veces	LED luminoso predeterminado: encendido
	Botón de encendido	Encendido / Apagado	Encendido: manténgalo presionado por 1,5 segundos para ingresar al modo USB y cargar Apagado: manténgalo presionado por 3 segundos para apagar y solo cargar	Sonido de aviso de apagado: Apagar
	LED de carga	Rojo	Siempre estará encendido durante la carga, apagado cuando estén totalmente cargados	
	LED de trabajo	Azul	Destellará cuando se enciendan, permanecerá encendido después de conectarse con el cable USB	

Modo BT

1) Encienda los auriculares y cambie el modo de auriculares a BT. Podrá escuchar el mensaje: "BT mode" (modo BT); "Pairing" (Sincronización). Los auriculares entrarán en modo de sincronización.
2) Estos auriculares son compatibles con la mayoría de los teléfonos móviles con BT y otros dispositivos que admiten el protocolo de auriculares BT.
3) En modo BT, presione el botón del micrófono durante 3 segundos y los auriculares ingresarán al modo de sincronización.
4) Inicie el proceso de sincronización de su teléfono móvil con BT. Consulte el manual del usuario del teléfono móvil para conocer los pasos detallados. Los pasos habituales son: ingresar al menú "Buscar", seleccionar "Conectar" o "BT" y luego seleccionar "Buscar dispositivos BT".
5) Su teléfono buscará los auriculares "H878" y le preguntará si desea sincronizarlo, seleccione la opción "Sí" o "Sincronizar". (El nombre específico estará sujeto al producto real).
6) Después de una sincronización correcta, los auriculares indicarán que se ha conectado.
7) En el modo BT, el valor predeterminado es estereofónico y no hay ningún otro cambio de efecto de sonido.
8) En el modo BT, consulte la tabla siguiente para obtener instrucciones detalladas sobre el funcionamiento de los botones.

Especificaciones en modo BT				
	Botones/funciones /luces	Función descriptiva	Método de operación	Sonido/voz de aviso
Descripción del botón	Botón de subir volumen	Subir el volumen	Presione	Volumen máximo: un pitido
			Manténgalo presionado	
		Pista siguiente	Presiónelo dos veces	
	Botón de bajar volumen	Bajar el volumen	Presione	Volumen mínimo: un pitido
			Manténgalo presionado	
		Pista anterior	Presiónelo dos veces	
	Interruptor del micrófono	Activar o silenciar el micrófono	Presiónelo una vez	El valor predeterminado está activado Ding-dong significa apagado , ding significa encendido
		Ingresa al modo de sincronización de BT	Manténgalo presionado durante 3 segundos	Habrá un sonido de aviso de sincronización
		LED luminoso encendido/apagado	Presiónelo tres veces	LED luminoso predeterminado: encendido
	Botón de encendido	Encendido / Apagado	Encendido: manténgalo presionado por 1,5 segundos Apagado: manténgalo presionado por 3 segundos	Modo BT: modo BT
		Reproducir o Pausar música	Presiónelo una vez	
		Responder o finalizar la llamada	Presiónelo una vez	
		Rechazar la llamada	Manténgalo presionado durante 1,5 segundos	
		Modo 2,4G y cambio del modo BT	Presiónelo dos veces	Modo 2,4G sonido rápido: modo de juego,Sonido de aviso del modo BT: modo BT
	LED de carga	Rojo	Siempre estará encendido durante la carga, apagado cuando estén totalmente cargados	
	LED de trabajo	Azul	Destellará cuando se enciendan, permanecerá encendido después de conectarse	

Para los auriculares H878, la lista de hosts y métodos de conexión aplicables es la siguiente:

Lista de hosts aplicables a H878			
Equipo aplicable	**Modo BT**	**Modo 2,4G**	**Modo USB con cable**
Teléfono Android	Sí	Adaptador tipo C	Adaptador tipo C
Computadora portátil con Windows	Sí	Puerto USB	Puerto USB
Host de la computadora con Windows	No	Puerto USB	Puerto USB
Computadora portátil con Apple	Sí	Puerto USB (estación de acoplamiento USB tipo C)	Puerto USB (estación de acoplamiento USB tipo C)
switch	Sí	Adaptador tipo C	Adaptador tipo C
PS/3	No	Puerto USB	Puerto USB
PS/4	No	Puerto USB	Puerto USB
PS/5	No	Puerto USB	Puerto USB
XBOX one	No	No	No

Recordatorio de batería baja

Cuando la batería de los auriculares descienda a 3,3 V, el LED de consumo bajo se tornará rojo, aparecerá el mensaje de 3,3 V, el LED rojo de los auriculares destellará y mostrará Batería baja cada minuto; cuando el transmisor esté funcionando, el LED azul destellará; cuando los auriculares tengan menos de 3,25 V, se apagarán.

Almacenamiento

Los auriculares deben guardarse en una habitación limpia, seca y ventilada con una temperatura ambiente de -5 a 35 °C. Se debe evitar el contacto con sustancias corrosivas y deben mantenerse alejados del fuego y fuentes de calor. La batería de los auriculares debe cargarse cada seis meses durante el almacenamiento.

Notas

1) No utilice los auriculares en lugares húmedos y lluviosos.
2) Escuchar a alto volumen durante largos periodos puede dañar su audición.
3) No use mucha fuerza para tirar del cable.

型号	H878WB		备注： 尺寸：100*100MM（装订） 材质：80g书写纸 印刷：单黑双面印刷				Easterntimes Tech
名称	英+西班牙说明书						
日期	2024-7-02						
页码	1 OF 1		文件编号				
绘图	杨园园	审核		核准		版本	A.0