
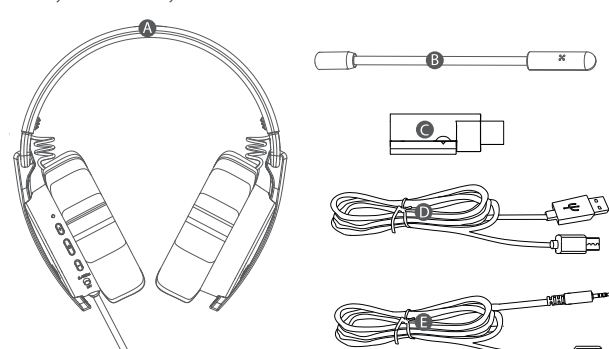
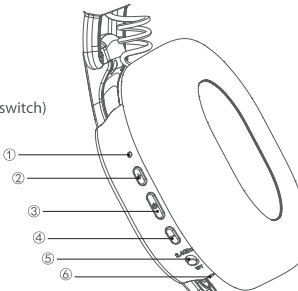
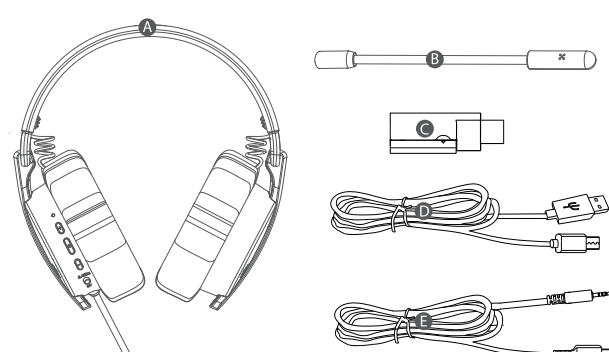


封面

封底

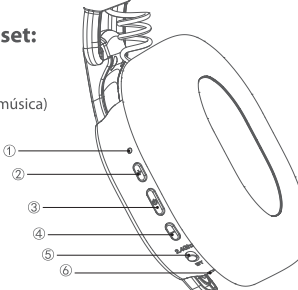

US UK Dear user Thank you for choosing our REDRAGON product. To protect your rights and for better customer service, we ask that you note our warranty rules. 1. Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included. 2. Consumable parts (such as foot pad) and spare parts replacement are not included in our warranty.	OS Support Windows XP/Vista/Win7/Win8/Win10/Win11 Packaging List: A. Headset 1 unit B. Detachable microphone 1 unit C. 2.4GHz USB/TYPE-C receiver 1 unit D. TYPE-C to USB charging cable 1 unit E. TYPE-C to 3.5mm cable 1 unit F. Battery : Lithium battery inside 1 unit 	Headset button instructions: ①LED indicator ②Volume + ③Power switch (Gaming mode/ Music mode switch) ④Volume - ⑤2.4G/ BT switch ⑥MIC mute  Quick start 2.4GHz wireless connection [2.4G/ BT switch] on "2.4G" side, press & hold Power Button for 3 seconds, headset notification sound: "adapter mode", plug the USB/TYPE-C receiver to PC USB port or laptop TYPE-C port, the headset will connect to PC/ laptop automatically. BT connection [2.4G/ BT switch] on "BT" side, press & hold Power Button for 3 seconds, headset notification sound: "BT mode", turn on your device BT function and searching for device "H888", select the device name, when connection accomplished the headset notification sound: "connected". Wired connection Use the TYPE-C to 3.5mm cable connect headset to PC/laptop/mobile, the headset will turn to wired mode.	Power save mode & How to charge Power save mode When the headset is un-connected over 5 minutes, the headset will turn off automatically. When the headset is stop play over 10 minutes, the headset will turn off automatically. How to charge When the battery is low, the headset notification sound: "battery low", and the LED indicator will flashing RED per minute. Use TYPE-C to USB cable to connect headset to PC USB port or DC 5V charger. When charging, the LED indicator steady on RED. Equipment name description 1) USB receiver device name: H888 wireless headset 2) BT mode device name: H888	<table><tr><th colspan="4">2.4GHz mode</th></tr><tr><th>Buttons/functions/ Lights</th><th>Function description</th><th>Operation</th><th>Notification sound</th></tr><tr><td rowspan="2">2.4G/ BT switch</td><td>Switch 2.4G/ BT connection</td><td>switching</td><td>2.4G mode: Adapter mode BT mode: BT mode</td></tr><tr><td>Power on/off</td><td>Power on/off: Press and hold for 3 seconds</td><td>Power on/off seconds</td></tr><tr><td rowspan="2">Power button</td><td>Gaming mode and music mode switching</td><td>Press power button twice</td><td>Gaming mode/ music mode</td></tr><tr><td>Play / Pause</td><td>Press once</td><td></td></tr><tr><td rowspan="2">Vol+ button</td><td>Turn up volume</td><td>Press/Press & hold</td><td>Max volume: max volume</td></tr><tr><td>Next track</td><td>Press twice</td><td></td></tr><tr><td rowspan="2">Vol- button</td><td>Turn down volume</td><td>Press/Press & hold</td><td></td></tr><tr><td>Previous track</td><td>Press twice</td><td></td></tr><tr><td rowspan="2">MIC button</td><td>Microphone on/mute</td><td>Press once</td><td>Mic on/ Mic mute</td></tr><tr><td>2.4GHz mode disconnect/pairing</td><td>Press twice</td><td>Disconnect/ Pairing</td></tr><tr><td>LED indicator</td><td>White</td><td>Flashing in Red/Blue when pairing. White steady on after connected</td><td></td></tr></table>	2.4GHz mode				Buttons/functions/ Lights	Function description	Operation	Notification sound	2.4G/ BT switch	Switch 2.4G/ BT connection	switching	2.4G mode: Adapter mode BT mode: BT mode	Power on/off	Power on/off: Press and hold for 3 seconds	Power on/off seconds	Power button	Gaming mode and music mode switching	Press power button twice	Gaming mode/ music mode	Play / Pause	Press once		Vol+ button	Turn up volume	Press/Press & hold	Max volume: max volume	Next track	Press twice		Vol- button	Turn down volume	Press/Press & hold		Previous track	Press twice		MIC button	Microphone on/mute	Press once	Mic on/ Mic mute	2.4GHz mode disconnect/pairing	Press twice	Disconnect/ Pairing	LED indicator	White	Flashing in Red/Blue when pairing. White steady on after connected		<table><tr><th colspan="4">BT mode</th></tr><tr><th>Buttons/functions/ Lights</th><th>Function description</th><th>Operation</th><th>Notification sound</th></tr><tr><td rowspan="2">2.4G/ BT switch</td><td>Switch 2.4G/ BT connection</td><td>switching</td><td>2.4G mode: Adapter mode BT mode: BT mode</td></tr><tr><td>Turn up volume</td><td>Press Press and hold</td><td>Max volume: max volume</td></tr><tr><td rowspan="2">Vol+ button</td><td>Next track</td><td>Press twice</td><td></td></tr><tr><td>Turn down volume</td><td>Press Press and hold</td><td></td></tr><tr><td rowspan="2">Vol- button</td><td>Previous track</td><td>Press twice</td><td></td></tr><tr><td>Microphone on/ mute</td><td>Press once</td><td>MIC on/ MIC mute</td></tr><tr><td rowspan="2">MIC button</td><td>BT mode disconnect / repairing</td><td>Press twice</td><td>Disconnect/ pairing</td></tr><tr><td>Power on/off</td><td>Power on/off: Press & hold for 3 seconds</td><td>Power on/ off</td></tr><tr><td rowspan="2">Power button</td><td>Play / Pause music</td><td>Press once</td><td></td></tr><tr><td>Answer/end the call</td><td>Press once</td><td></td></tr><tr><td>LED indicator</td><td>Flashing in Red/Blue when pairing. Blue steady on after connected</td><td></td><td></td></tr></table>	BT mode				Buttons/functions/ Lights	Function description	Operation	Notification sound	2.4G/ BT switch	Switch 2.4G/ BT connection	switching	2.4G mode: Adapter mode BT mode: BT mode	Turn up volume	Press Press and hold	Max volume: max volume	Vol+ button	Next track	Press twice		Turn down volume	Press Press and hold		Vol- button	Previous track	Press twice		Microphone on/ mute	Press once	MIC on/ MIC mute	MIC button	BT mode disconnect / repairing	Press twice	Disconnect/ pairing	Power on/off	Power on/off: Press & hold for 3 seconds	Power on/ off	Power button	Play / Pause music	Press once		Answer/end the call	Press once		LED indicator	Flashing in Red/Blue when pairing. Blue steady on after connected			List of applicable devices and connection methods are as follows: List of H888 applicable hosts <table><tr><th>Applicable device</th><th>BT mode</th><th>2.4GHz mode</th><th>Wired mode</th></tr><tr><td>Android phone</td><td>Y</td><td>Y</td><td>3.5mm port</td></tr><tr><td>Windows laptop</td><td>Y</td><td>Y</td><td>3.5mm port</td></tr><tr><td>Windows desktop</td><td>Y</td><td>Y</td><td>3.5mm port</td></tr><tr><td>Apple laptop</td><td>Y</td><td>Y</td><td>3.5mm port</td></tr><tr><td>Switch</td><td>Y</td><td>Y, TYPE-C support audio output</td><td>3.5mm port</td></tr><tr><td>PS/3</td><td>NA</td><td>Y</td><td>3.5mm port</td></tr><tr><td>PS/4</td><td>NA</td><td>Y</td><td>3.5mm port</td></tr><tr><td>PS/5</td><td>NA</td><td>Y</td><td>3.5mm port</td></tr><tr><td>XBOX one</td><td>NA</td><td>NA</td><td>3.5mm port</td></tr></table> Storage Headset should be stored in a dean, dry and ventilated room with an ambient temperature of -5~35°C. Contact with corrosive substances should be avoided, and they should be kept away from fire and heat sources. The headset battery should be charged every six months during storage.	Applicable device	BT mode	2.4GHz mode	Wired mode	Android phone	Y	Y	3.5mm port	Windows laptop	Y	Y	3.5mm port	Windows desktop	Y	Y	3.5mm port	Apple laptop	Y	Y	3.5mm port	Switch	Y	Y, TYPE-C support audio output	3.5mm port	PS/3	NA	Y	3.5mm port	PS/4	NA	Y	3.5mm port	PS/5	NA	Y	3.5mm port	XBOX one	NA	NA	3.5mm port	Remark 1. Do not put the headset in humid and wet place. 2. High volume for long period may damage your hearing. 3. Do not put self's strength to pull the cable.	FCC Statement Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or communications, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSSI. Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device. 	BATTERY SAFETY GUIDELINES DO NOT replace the battery with a different model. DO NOT use this product if the battery shows signs of damage including, but not limited to: hearing, deformation, leakage, or the smell of electrolytic material. DO NOT touch the battery if material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes. DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition. DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations. DO NOT impact, bend, alter, disassemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful. CAUTION Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock. Cet appareil contient des émetteurs / récepteurs exempts de licence conformes aux RSSI (RSSI) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes: (1) Cet appareil ne doit pas cause d'interférences. (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.
2.4GHz mode																																																																																																																																															
Buttons/functions/ Lights	Function description	Operation	Notification sound																																																																																																																																												
2.4G/ BT switch	Switch 2.4G/ BT connection	switching	2.4G mode: Adapter mode BT mode: BT mode																																																																																																																																												
	Power on/off	Power on/off: Press and hold for 3 seconds	Power on/off seconds																																																																																																																																												
Power button	Gaming mode and music mode switching	Press power button twice	Gaming mode/ music mode																																																																																																																																												
	Play / Pause	Press once																																																																																																																																													
Vol+ button	Turn up volume	Press/Press & hold	Max volume: max volume																																																																																																																																												
	Next track	Press twice																																																																																																																																													
Vol- button	Turn down volume	Press/Press & hold																																																																																																																																													
	Previous track	Press twice																																																																																																																																													
MIC button	Microphone on/mute	Press once	Mic on/ Mic mute																																																																																																																																												
	2.4GHz mode disconnect/pairing	Press twice	Disconnect/ Pairing																																																																																																																																												
LED indicator	White	Flashing in Red/Blue when pairing. White steady on after connected																																																																																																																																													
BT mode																																																																																																																																															
Buttons/functions/ Lights	Function description	Operation	Notification sound																																																																																																																																												
2.4G/ BT switch	Switch 2.4G/ BT connection	switching	2.4G mode: Adapter mode BT mode: BT mode																																																																																																																																												
	Turn up volume	Press Press and hold	Max volume: max volume																																																																																																																																												
Vol+ button	Next track	Press twice																																																																																																																																													
	Turn down volume	Press Press and hold																																																																																																																																													
Vol- button	Previous track	Press twice																																																																																																																																													
	Microphone on/ mute	Press once	MIC on/ MIC mute																																																																																																																																												
MIC button	BT mode disconnect / repairing	Press twice	Disconnect/ pairing																																																																																																																																												
	Power on/off	Power on/off: Press & hold for 3 seconds	Power on/ off																																																																																																																																												
Power button	Play / Pause music	Press once																																																																																																																																													
	Answer/end the call	Press once																																																																																																																																													
LED indicator	Flashing in Red/Blue when pairing. Blue steady on after connected																																																																																																																																														
Applicable device	BT mode	2.4GHz mode	Wired mode																																																																																																																																												
Android phone	Y	Y	3.5mm port																																																																																																																																												
Windows laptop	Y	Y	3.5mm port																																																																																																																																												
Windows desktop	Y	Y	3.5mm port																																																																																																																																												
Apple laptop	Y	Y	3.5mm port																																																																																																																																												
Switch	Y	Y, TYPE-C support audio output	3.5mm port																																																																																																																																												
PS/3	NA	Y	3.5mm port																																																																																																																																												
PS/4	NA	Y	3.5mm port																																																																																																																																												
PS/5	NA	Y	3.5mm port																																																																																																																																												
XBOX one	NA	NA	3.5mm port																																																																																																																																												
PT Prezado usuário, Obrigado por escolher a marca REDRAGON. Para proteger seus direitos e oferecer um melhor atendimento ao cliente, pedimos que você observe as regras da nossa garantia. 1. Dentro do período da garantia, o reparo são garantidos nos casos de falha devido a problemas no circuito eletrônico. Danos causados pela desmontagem, por impactos violentos, imersão em água, ligação em correntes ou voltagens incorretas e danos causados por desastres naturais, como incêndios, inundações ou terremotos, não estão incluídos. 2. Peças que sofrem desgaste (como pé) e a substituição de peças avulsas não estão incluídas em nossa garantia.	Compatibilidade com OS Windows XP/Vista/Win7/Win8/Win10/Win11 Conteúdo da embalagem: A. Headset 1 B. Microfone destacável 1 C. Receptor de 2.4GHz USB/TIPO-C 1 D. Cabo de carregamento USB 1 E. Cabo TIPO-C para 3,5 mm 1 F. Bateria: bateria interna de lítio 1 	Instruções dos botões do headset: ①Indicador por LED ②Aumentar o volume ③Botão de energia (Chave de modo de jogo/música) ④Reduzir o volume ⑤Chave 2.4G/ BT ⑥MIC mudo  Início rápido Conexão sem fio de 2,4 GHz (Chave 2.4G/ BT) no lado "2.4G": Pressione e segure o botão de energia por 3 segundos. Som de notificação do fone de ouvido: "BT mode" (modo BT). Ative a função BT do seu dispositivo e procure pelo dispositivo "H888", selecione o nome do dispositivo. Quando a conexão for concluída, o som de notificação do fone de ouvido será: "connected" (conectado). Conexão com BT (Chave 2.4G/ BT) no lado "BT": pressione e segure o botão de energia por 3 segundos. Som de notificação do fone de ouvido: "BT mode" (modo BT). Ative a função BT do seu dispositivo e procure pelo dispositivo "H888", selecione o nome do dispositivo. Quando a conexão for concluída, o som de notificação do fone de ouvido será: "connected" (conectado). Conexão com fio Utilize o cabo TIPO-C para 3,5 mm para conectar o headset ao PC/laptop/celular e o headset passará para o modo com fio.	Modo de economia de energia e como carregar Modo de economia de energia Se o fone de ouvido ficar desconectado por mais de 5 minutos, vai se desligar automaticamente. Se o fone de ouvido ficar sem uso por mais de 10 minutos, vai se desligar automaticamente. Como carregar Se a bateria estiver fraca, o som de notificação do fone de ouvido será: "battery low" (bateria fraca) e LED indicador piscará em VERMELHO a cada minuto. Use o cabo TIPO-C, para USB para conectar o headset à porta USB do PC ou ao carregador 5V CC. Durante o carregamento, o LED indicador permanecerá aceso em VERMELHO. Descrição e nome do equipamento 1) Nome do dispositivo receptor USB: Headset sem fio H888 2) Nome do dispositivo no modo BT: H888	<table><tr><th colspan="4">Modo 2.4GHz</th></tr><tr><th>Botões/funções/ luzes</th><th>Descrição das funções</th><th>Operação</th><th>Som de notificação</th></tr><tr><td rowspan="2">Chave 2.4G/ BT</td><td>Chave de conexão 2.4G/ BT</td><td>comutando</td><td>Modo 2.4G Modo adaptador Modo BT BT mode</td></tr><tr><td>Ligar/desligar</td><td>Ligar/desligar: Pressione e segure por 3 segundos</td><td>Ligar/desligar</td></tr><tr><td rowspan="2">Botão de energia</td><td>Alternância entre modo de jogo e modo de música</td><td>Pressione o botão de energia duas vezes</td><td>Modo de jogo/ modo de música</td></tr><tr><td>Tocar/Pausa</td><td>Pressione uma vez</td><td></td></tr><tr><td rowspan="2">Botão Vol+</td><td>Aumenta o volume</td><td>Pressione/Pressione e segure</td><td>Volume máximo: volume máximo</td></tr><tr><td>Próxima faixa</td><td>Pressione duas vezes</td><td></td></tr><tr><td rowspan="2">Botão Vol-</td><td>Diminui o volume</td><td>Pressione/Pressione e segure</td><td></td></tr><tr><td>Faixa anterior</td><td>Pressione duas vezes</td><td></td></tr><tr><td rowspan="2">Botão MIC</td><td>Microfone ligad/ mudo</td><td>Pressione uma vez</td><td>Mic ligad/ Mic Mudo</td></tr><tr><td>Modo BT desconectado/ reparando</td><td>Pressione duas vezes</td><td>Desconectar/pareando</td></tr><tr><td>Indicador por LED</td><td>Branco</td><td>Piscando em vermelho e branco durante o pareamento, branco fixo uma vez conectado</td><td></td></tr></table>	Modo 2.4GHz				Botões/funções/ luzes	Descrição das funções	Operação	Som de notificação	Chave 2.4G/ BT	Chave de conexão 2.4G/ BT	comutando	Modo 2.4G Modo adaptador Modo BT BT mode	Ligar/desligar	Ligar/desligar: Pressione e segure por 3 segundos	Ligar/desligar	Botão de energia	Alternância entre modo de jogo e modo de música	Pressione o botão de energia duas vezes	Modo de jogo/ modo de música	Tocar/Pausa	Pressione uma vez		Botão Vol+	Aumenta o volume	Pressione/Pressione e segure	Volume máximo: volume máximo	Próxima faixa	Pressione duas vezes		Botão Vol-	Diminui o volume	Pressione/Pressione e segure		Faixa anterior	Pressione duas vezes		Botão MIC	Microfone ligad/ mudo	Pressione uma vez	Mic ligad/ Mic Mudo	Modo BT desconectado/ reparando	Pressione duas vezes	Desconectar/pareando	Indicador por LED	Branco	Piscando em vermelho e branco durante o pareamento, branco fixo uma vez conectado		<table><tr><th colspan="4">Modo BT</th></tr><tr><th>Botões/funções/ luzes</th><th>Descrição das funções</th><th>Operação</th><th>Som de notificação</th></tr><tr><td rowspan="2">Chave 2.4G/ BT</td><td>Chave de conexão 2.4G/ BT</td><td>comutando</td><td>Modo 2.4G Modo adaptador Modo BT BT mode</td></tr><tr><td>Aumenta o volume</td><td>Pressione Pressione e segure</td><td>Volume máximo: volume máximo</td></tr><tr><td rowspan="2">Botão Vol+</td><td>Próxima faixa</td><td>Pressione duas vezes</td><td></td></tr><tr><td>Diminui o volume</td><td>Pressione Pressione e segure</td><td></td></tr><tr><td>Botão Vol-</td><td>Faixa anterior</td><td>Pressione duas vezes</td><td></td></tr><tr><td rowspan="2">Botão MIC</td><td>Microfone ligad/ mudo</td><td>Pressione uma vez</td><td>Mic ligad/ Mic Mudo</td></tr><tr><td>Modo BT desconectado/ reparando</td><td>Pressione duas vezes</td><td>Desconectar/pareando</td></tr><tr><td rowspan="2">Botão de energia</td><td>Ligar/desligar</td><td>Ligar/desligar: Pressione e segure por 3 segundos</td><td>Ligar/desligar</td></tr><tr><td>Tocar/pausar música</td><td>Pressione uma vez</td><td></td></tr><tr><td>Indicador por LED</td><td>Flashing in Red/Blue when pairing. Blue steady on after connected</td><td></td><td></td></tr></table>	Modo BT				Botões/funções/ luzes	Descrição das funções	Operação	Som de notificação	Chave 2.4G/ BT	Chave de conexão 2.4G/ BT	comutando	Modo 2.4G Modo adaptador Modo BT BT mode	Aumenta o volume	Pressione Pressione e segure	Volume máximo: volume máximo	Botão Vol+	Próxima faixa	Pressione duas vezes		Diminui o volume	Pressione Pressione e segure		Botão Vol-	Faixa anterior	Pressione duas vezes		Botão MIC	Microfone ligad/ mudo	Pressione uma vez	Mic ligad/ Mic Mudo	Modo BT desconectado/ reparando	Pressione duas vezes	Desconectar/pareando	Botão de energia	Ligar/desligar	Ligar/desligar: Pressione e segure por 3 segundos	Ligar/desligar	Tocar/pausar música	Pressione uma vez		Indicador por LED	Flashing in Red/Blue when pairing. Blue steady on after connected			Lista de dispositivos compatíveis e métodos de conexão a seguir: Lista de dispositivos compatíveis com o H888 <table><tr><th>Dispositivo aplicável</th><th>BT mode</th><th>Modo 2.4GHz</th><th>Modo com fio</th></tr><tr><td>Celular Android</td><td>Y</td><td>Y</td><td>Entrada de 3,5 mm</td></tr><tr><td>Notebook com Windows</td><td>Y</td><td>Y</td><td>Entrada de 3,5 mm</td></tr><tr><td>Computador Windows</td><td>Y</td><td>Y</td><td>Entrada de 3,5 mm</td></tr><tr><td>Notebook Apple</td><td>Y</td><td>Y</td><td>Entrada de 3,5 mm</td></tr><tr><td>Chave:</td><td>Y</td><td>Sim, o TIPO-C é compatível com saída de áudio</td><td>Entrada de 3,5 mm</td></tr><tr><td>PS/3</td><td>NA</td><td>Y</td><td>Entrada de 3,5 mm</td></tr><tr><td>PS/4</td><td>NA</td><td>Y</td><td>Entrada de 3,5 mm</td></tr><tr><td>PS/5</td><td>NA</td><td>Y</td><td>Entrada de 3,5 mm</td></tr><tr><td>Xbox one</td><td>NA</td><td>NA</td><td>Entrada de 3,5 mm</td></tr></table> Armazenamento O headset deve ser armazenado em ambiente limpo, seco e ventilado, com temperatura ambiente de -5 a 35 °C. Evite-se entrar o contato com substâncias corrosivas e mantê-lo longe de fontes de fogo e calor. A bateria do headset deve ser carregada uma vez a cada seis meses durante o armazenamento.	Dispositivo aplicável	BT mode	Modo 2.4GHz	Modo com fio	Celular Android	Y	Y	Entrada de 3,5 mm	Notebook com Windows	Y	Y	Entrada de 3,5 mm	Computador Windows	Y	Y	Entrada de 3,5 mm	Notebook Apple	Y	Y	Entrada de 3,5 mm	Chave:	Y	Sim, o TIPO-C é compatível com saída de áudio	Entrada de 3,5 mm	PS/3	NA	Y	Entrada de 3,5 mm	PS/4	NA	Y	Entrada de 3,5 mm	PS/5	NA	Y	Entrada de 3,5 mm	Xbox one	NA	NA	Entrada de 3,5 mm	Aviso 1) Não deixe o headset em local molhado ou úmido. 2) Som em alto volume por períodos prolongados pode afetar sua audição. 3) Não force ao puxar o cabo.					
Modo 2.4GHz																																																																																																																																															
Botões/funções/ luzes	Descrição das funções	Operação	Som de notificação																																																																																																																																												
Chave 2.4G/ BT	Chave de conexão 2.4G/ BT	comutando	Modo 2.4G Modo adaptador Modo BT BT mode																																																																																																																																												
	Ligar/desligar	Ligar/desligar: Pressione e segure por 3 segundos	Ligar/desligar																																																																																																																																												
Botão de energia	Alternância entre modo de jogo e modo de música	Pressione o botão de energia duas vezes	Modo de jogo/ modo de música																																																																																																																																												
	Tocar/Pausa	Pressione uma vez																																																																																																																																													
Botão Vol+	Aumenta o volume	Pressione/Pressione e segure	Volume máximo: volume máximo																																																																																																																																												
	Próxima faixa	Pressione duas vezes																																																																																																																																													
Botão Vol-	Diminui o volume	Pressione/Pressione e segure																																																																																																																																													
	Faixa anterior	Pressione duas vezes																																																																																																																																													
Botão MIC	Microfone ligad/ mudo	Pressione uma vez	Mic ligad/ Mic Mudo																																																																																																																																												
	Modo BT desconectado/ reparando	Pressione duas vezes	Desconectar/pareando																																																																																																																																												
Indicador por LED	Branco	Piscando em vermelho e branco durante o pareamento, branco fixo uma vez conectado																																																																																																																																													
Modo BT																																																																																																																																															
Botões/funções/ luzes	Descrição das funções	Operação	Som de notificação																																																																																																																																												
Chave 2.4G/ BT	Chave de conexão 2.4G/ BT	comutando	Modo 2.4G Modo adaptador Modo BT BT mode																																																																																																																																												
	Aumenta o volume	Pressione Pressione e segure	Volume máximo: volume máximo																																																																																																																																												
Botão Vol+	Próxima faixa	Pressione duas vezes																																																																																																																																													
	Diminui o volume	Pressione Pressione e segure																																																																																																																																													
Botão Vol-	Faixa anterior	Pressione duas vezes																																																																																																																																													
Botão MIC	Microfone ligad/ mudo	Pressione uma vez	Mic ligad/ Mic Mudo																																																																																																																																												
	Modo BT desconectado/ reparando	Pressione duas vezes	Desconectar/pareando																																																																																																																																												
Botão de energia	Ligar/desligar	Ligar/desligar: Pressione e segure por 3 segundos	Ligar/desligar																																																																																																																																												
	Tocar/pausar música	Pressione uma vez																																																																																																																																													
Indicador por LED	Flashing in Red/Blue when pairing. Blue steady on after connected																																																																																																																																														
Dispositivo aplicável	BT mode	Modo 2.4GHz	Modo com fio																																																																																																																																												
Celular Android	Y	Y	Entrada de 3,5 mm																																																																																																																																												
Notebook com Windows	Y	Y	Entrada de 3,5 mm																																																																																																																																												
Computador Windows	Y	Y	Entrada de 3,5 mm																																																																																																																																												
Notebook Apple	Y	Y	Entrada de 3,5 mm																																																																																																																																												
Chave:	Y	Sim, o TIPO-C é compatível com saída de áudio	Entrada de 3,5 mm																																																																																																																																												
PS/3	NA	Y	Entrada de 3,5 mm																																																																																																																																												
PS/4	NA	Y	Entrada de 3,5 mm																																																																																																																																												
PS/5	NA	Y	Entrada de 3,5 mm																																																																																																																																												
Xbox one	NA	NA	Entrada de 3,5 mm																																																																																																																																												

型号	ET-G915-H888		备注： 尺寸： 100*100MM（装订） 材质： 80g书写纸 印刷： 单黑双面印刷				Eastertimes Tech 
名称	英+巴西说明书						
日期	2024-8 -09						
页码	1 OF 1		文件编号				
绘图	杨园园	审核		核准		版本	