



REDRAGON

VIBECORE

700NC ANC

BT/ WIRED CONNECTIONS

ANC HEADSET



Please scan here to download user manual



BT/ Wired connections ANC headset Operating Instructions



US UK

Dear user

Thank you for choosing our REDRAGON product. To protect your rights and for better customer service, we ask that you note our warranty rules.

1. Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.

2. Consumable parts (such as foot pad) and spare parts replacement are not included in our warranty.

OS Support

Windows/Switch/Android/iOS

Packaging List:

A. H620 Headset


B. TYPE-C charging cable

C. 3.5mm wired connection cable

1

1

1

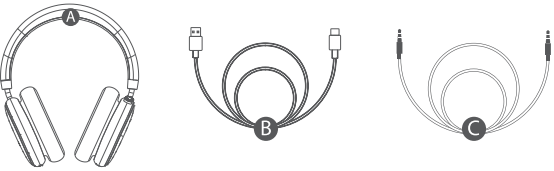

1

Headset and transmitted instructions:

Headset button instructions

① Power ON/OFF and volume knob


② 3.5mm audio port

③ Charging indicator

④ TYPE C charging port

⑤ ANC button

⑥ Working status indicator

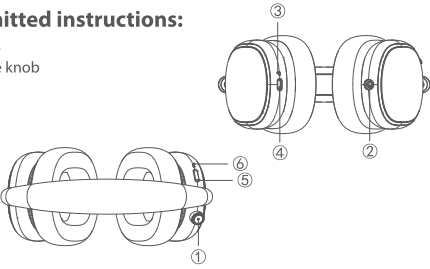

Quick start:

BT connection

Press & hold Power Button for 3 seconds, headset notification sound: "Power on, pairing", t urn on your device Bluetooth function and searching for device "H620", select the device name, when connection accomplished the headset notification sound: "connected".

Wired connection

Connect the headset and audio device with a 3.5mm audio cable.

Power save mode & How to charge:


Power save mode

When the headset is un-connected for over 10 minutes, the headset will turn off automatically. When the headset is connected, over 10 minutes no audio play or no operating, the headset will turn off automatically. (If ANC is activated, the headset will keep working even if there is no audio play)

How to charge

When the battery is low, the headset notification sound: "low battery", and the LED indicator will flash in RED.

Use TYPE C -USB cable to charge the headset by connecting to PC USB port or DC 5V charger. When charging, the LED indicator is steady on RED.

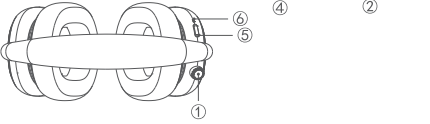

2

Button function instruction

BT mode

Buttons/functions / lights	Function description	Operation	Notification sound
Power& volume knob	Power ON/ OFF	Press& hold 3s	Power on, Power off
	Play/ Pause	Press once	/
	Answer/ end phone call	Press once	/
	Reject phone call	Press& hold 2s	/
	Turn up volume	Turn the knob	Max volume: Du
	Next track	Triple press the button	/
	Turn down volume	Turn the knob	Min volume: Du dong
Previous track	Double press the button	/	
ANC button	ANC mode switch	Press& hold 1s	Transparency mode ANC on / ANC off

3

List of applicable hosts and connection methods are as follows:

List of H620 applicable hosts

Applicable equipment	BT mode	Wired 3.5mm mode
Android phone	Y	Y
Apple iPhone	Y	With converter
Windows laptop	Y	Y
Windows desktop	N	Y
Apple laptop	Y	With USB HUB/ converter
Switch	Y	N
PS/3	N	Y
PS/4	N	Y
PS/5	N	Y
XBOX one	N	Y

Storage

Headsets should be stored in a clean, dry and ventilated room with an ambient temperature of -5~-35°C. Contact with corrosive substances should be avoided, and they should be kept away from fire and heat sources. The headset battery should be charged every six months during storage.

4

Remark

1. Do not put the headset in humid and wet place.

2. High volume for long period may damage your hearing.

3. Do not put self's strength to pull the cable.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

5

BATTERY SAFETY GUIDELINES

DO NOT replace the battery with a different model.

DO NOT use this product if the battery shows signs of damage including, but not limited to tearing, deformation, leakage, or the smell of electrolytic material.

DO NOT touch the battery fi material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes.

DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition.

DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations.

DO NOT impact, bend, alter, dissemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful.

CAUTION

Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock.

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas causer d'interférences, (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device

PL

Drogi Użytkowniku

Dziękujemy za wybranie marki REDRAGON . Aby chronić swoje prawa i korzystać z lepszej obsługi klienta, zwróć uwagę na nasze warunki gwarancji.

1. Wokresie gwarancji naprawa jest objęta gwarancją w przypadku awarii spowodowanej problemami z obwodami elektrycznymi. Nie uwzględnia się szkód spowodowanych przez człowieka, takich jak demontaż, silne uderzenia, zanurzenie w wodzie, podłączanie do niewłaściwego prądu lub napięcia ani szkód spowodowanych przez klęski żywiołowe, takie jak pożar, powódź lub trzęsienie ziemi.

2. Części eksploatacyjne (np. stopka) oraz części zamienne nie są objęte naszą gwarancją.

Obsługiwane systemy operac

Windows/Switch/Android/iOS

Zawartość opakowania:

A. Słuchawki VibeCore 700NC ANC


B. Kabel do ładowania USB typu C

C. Kabel audio 3,5 mm

1 szt

1 szt

1 szt

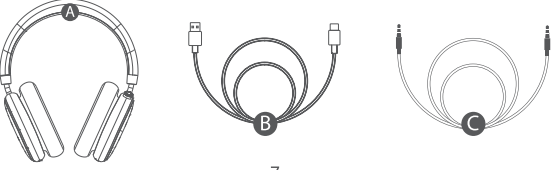

7

Opis słuchawek i elementów sterujących:

Przyciski i porty na słuchawkach

① Pokrętko zasilania i głośności


② Port audio 3,5 mm

③ Wskaźnik ładowania

④ Port ładowania USB-C

⑤ Przycisk ANC

⑥ Wskaźnik stanu pracy

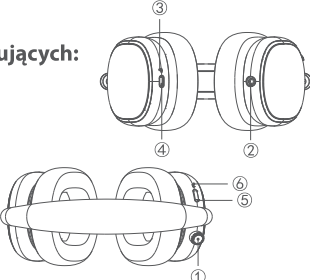

Szybki start:

Połączenie BT

Przytrzymaj przycisk zasilania przez 3 sekundy. Usłyszysz komunikat: „Power on, pairing” (Włączanie, parowanie). Włącz BT w swoim urządzeniu i wyszukaj urządzenie o nazwie „H620”. Po połączeniu usłyszysz komunikat: „Connected” (Połączono).

Połączenie przewodowe

Podłącz słuchawki do urządzenia audio za pomocą kabla audio 3,5 mm.

Tryb oszczędzania energii i ładowanie:

Tryb oszczędzania energii

• Słuchawki wyłączają się automatycznie gdy nie są połączone przez ponad 10 minut.

• Słuchawki wyłączą się również gdy są połączone, ale nie odtwarzają dźwięku ani nie są używane przez ponad 10 minut.


• Uwaga: jeśli ANC jest aktywne, słuchawki będą nadal działać mimo braku dźwięku.

Ładowanie

Gdy poziom baterii jest niski, słychać komunikat: „Low battery” (Niski poziom baterii), a dioda LED miga na czerwono.

• Podłącz słuchawki kablem USB typu C do portu USB komputera lub ładowarki 5V DC.

• Podczas ładowania dioda LED świeci się na czerwono.



8

Funkcje przycisków (w trybie BT)

BT

Przycisk / Funkcja	Opis funkcji	Operacja	Komunikat głosowy
Pokrętko zasilania i głośności	Włączanie / wyłączanie	Przytrzymaj 3 sekundy	Power on / Power off
	Odtwarzaj / Pauza	Jedno naciśnięcie	/
	Odbierz / zakończ połączenie	Jedno naciśnięcie	/
	Odrzuć połączenie	Przytrzymaj 2 sekundy	/
	Zwiększ głośność	Przekręć pokrętko	Maksymalna głośność: sygnał dźwiękowy
	Następny utwór	Trzykrotne naciśnięcie	/
	Zmniejsz głośność	Przekręć pokrętko	Minimalna głośność: sygnał dźwiękowy
Poprzedni utwór	Dwukrotne naciśnięcie	/	
Przycisk ANC	Przełącz tryb ANC	Przytrzymaj 1 sekundę	"Transparency mode/ ANC on / ANC off"

9

Lista kompatybilnych urządzeń i metod połączenia:

Lista kompatybilnych urządzeń i metod połączenia

Urządzenie	Tryb BT	Tryb przewodowy 3,5 mm
Telefon z Androidem	Tak	Tak
iPhone	Tak	Z konwerterem
Laptop z Windows	Tak	Tak
Komputer stacjonarny z Windows	Nie	Tak
Laptop Apple	Tak	Z hubem USB / konwerterem
Nintendo Switch	Tak	Nie
PlayStation 3	Nie	Tak
PlayStation 4	Nie	Tak
PlayStation 5	Nie	Tak
Xbox one	Nie	Tak

10

Przechowywanie

Słuchawki należy przechowywać w czystym, suchym i wentylowanym pomieszczeniu, w temperaturze otoczenia od -5 do 35°C. Należy unikać kontaktu z substancjami żrącymi oraz trzymać je z dala od ognia i źródeł ciepła. Baterię słuchawek należy ładować co sześć miesięcy podczas dłuższego przechowywania.

Uwaga

1. Nie należy umieszczać zestawu słuchawkowego w wilgotnym i mokrym miejscu.

2. Wysoka głośność przez dłuższy czas może spowodować uszkodzenie słuchu.

3. Nie wyciągać kabla przez szarpnięcie.

11

型号HL-9204-H620

备注：尺寸：100*100MM（折页）

名称英文说明书

材质：80g书写纸

日期2025-6-12

印刷：单黑双面印刷

页码1 OF 1

文件编号

绘图杨园园

审核

香敏琪

核准

版本

A.0

Eastertimes Tech