

Preheating and cooking

NOTICE

- The maximum preheating time is 30 minutes. The preheating time is not adjustable.
- If the door (A) is not opened within 30 minutes, the appliance enters standby mode.

1. Open the door (A) using the handle (O).
2. Press the **CONV.** button (U). The default cooking temperature 350°F appears on the display (P).
3. Press any button once from 1 to 9 on the number pad (AC) to set the desired cooking temperature. The corresponding temperature appears on the display (P).
4. Press the **START/+30 SEC.** button (AG) to start the preheating process. The light (E) lights up. The cooking temperature flashes on the display (P).
5. When the set temperature is reached, the appliance emits a beep noise.
6. Open the door (A) using the handle (O) or press the **STOP/CANCEL** button (AH).
7. If desired, place the baking tray (I) inside the appliance.
8. Place food inside the appliance.
9. Close the door (A).
10. Press any buttons from 0 to 9 on the number pad (AC) to set the desired cooking time. The corresponding time appears on the display (P).
11. Press the **START/+30 SEC.** button (AG) to start the cooking process. The light (E) lights up.
12. To add extra time during the cooking process, press the **START/+30 SEC.** button (AG) as needed.
13. The cooking process automatically ends when the timer reaches $99:59$. The appliance emits a beep noise. E_{nd} appears on the display (P).

8.7.4 Microwave/convection combination mode

NOTICE

- During the cooking process, press the **MICRO.+CONV.** button (V) to check the cooking temperature.
- The programmable cooking temperatures are $350^{\circ}\text{F} \rightarrow 325^{\circ}\text{F} \rightarrow 400^{\circ}\text{F} \rightarrow 375^{\circ}\text{F}$.

1. Open the door (A) using the handle (O).
2. Place food inside the appliance.
3. Close the door (A).
4. Press the **MICRO.+CONV.** button (V). The default cooking temperature 350°F appears on the display (P). Press repeatedly until the desired cooking temperature appears on the display (P).
5. Press any buttons from 0 to 9 on the number pad (AC) to set the desired cooking time. The corresponding time appears on the display (P).
6. Press the **START/+30 SEC.** button (AG) to start the cooking process. The light (E) lights up.
7. To add extra time during the cooking process, press the **START/+30 SEC.** button (AG) as needed.
8. The cooking process automatically ends when the timer reaches $99:59$. The appliance emits a beep noise. E_{nd} appears on the display (P).

8.7.5 Bake mode

Manual baking

1. Press the **BAKE** button (Q). The default cooking temperature 350°F appears on the display (P).
2. Press any button once from 5 to 9 on the number pad (AC) to set the desired cooking temperature. The corresponding temperature appears on the display (P).
3. Press any buttons from 0 to 9 on the number pad (AC) to set the desired cooking time. The corresponding time appears on the display (P).
4. Press the **START/+30 SEC.** button (AG) to start preheating. The light (E) lights up.
5. When preheating is done, the appliance emits a beep noise.
6. Open the door (A) using the handle (O).
7. Place the baking tray (I) inside the appliance.
8. Place food inside the appliance.
9. Close the door (A).

10. Press the **START/+30 SEC.** button (AG) to start the cooking process. The light (E) lights up. The cooking time appears on the display (P).
11. To add extra time during the cooking process, press the **START/+30 SEC.** button (AG) as needed.
12. The cooking process automatically ends when the timer reaches 0:00. The appliance emits a beep noise. End appears on the display (P).

Preset baking

1. Press the **BAKE** button (Q) twice. The default preset $\overline{B} - 1$ appears on the display (P). Press repeatedly until the desired preset appears on the display (P).
2. Press the **START/+30 SEC.** button (AG) to start preheating. The light (E) lights up.
3. When preheating is done, the appliance emits a beep noise.
4. Open the door (A) using the handle (O).
5. Place the baking tray (I) inside the appliance.
6. Place food inside the appliance.
7. Close the door (A).
8. Press the **START/+30 SEC.** button (AG) to start the cooking process. The light (E) lights up. The cooking time appears on the display (P).
9. To add extra time during the cooking process, press the **START/+30 SEC.** button (AG) as needed.
10. The cooking process automatically ends when the timer reaches 0:00. The appliance emits a beep noise. End appears on the display (P).

Menu selection	Food	Quantity/weight	Time	Temperature
Ab-1	Cookies	7 pcs	13 min	350°F
Ab-3	Cake	9in round pan	20 min	350°F

8.7.6 Air fry mode

Manual air frying

1. Open the door (A) using the handle (O).
2. Place the air fry tray (J) inside the appliance.
3. Place food inside the appliance.
4. Close the door (A).
5. Press the **AIR FRY** button (R). The default cooking temperature 400°F appears on the display (P).
6. Press any button once from 7 to 9 on the number pad (AC) to set the desired cooking temperature. The corresponding temperature appears on the display (P).
7. Press the **START/+30 SEC.** button (AG), then press any buttons from 0 to 9 on the number pad (AC) to set the desired cooking time. The corresponding time appears on the display (P).
8. Press the **START/+30 SEC.** button (AG) to start the cooking process. The light (E) lights up.
9. To add extra time during the cooking process, press the **START/+30 SEC.** button (AG) as needed.
10. The cooking process automatically ends when the timer reaches 0:00. The appliance emits a beep noise. End appears on the display (P).

Preset air frying

1. Open the door (A) using the handle (O).
2. Place the air fry tray (J) inside the appliance.
3. Place food inside the appliance.
4. Close the door (A).
5. Press the **AIR FRY** button (R) twice. The default preset $\overline{AF} - 1$ appears on the display (P). Press repeatedly until the desired preset appears on the display (P).
6. Press the **START/+30 SEC.** button (AG), then press the **AIR FRY** button (R) repeatedly to select the preset food weight.
7. Press the **START/+30 SEC.** button (AG) to start the cooking process. The light (E) lights up. The corresponding cooking time appears on the display (P).
8. To add extra time during the cooking process, press the **START/+30 SEC.** button (AG) as needed.

9. The cooking process automatically ends when the timer reaches $\square:\square\square$. The appliance emits a beep noise. $E \text{ nd}$ appears on the display (P).

Menu selection	Food	Weight	Time	Temperature
AF-1	Onion rings	8oz, 12oz	18 min, 21 min	400°F
AF-2	Chicken drumsticks	8oz, 16oz, 24oz, 32oz, 40oz	27 min, 30 min, 33 min, 36 min, 40 min	400°F
AF-3	Chicken wings	8oz, 16oz, 24oz, 32oz	27 min, 30 min, 33 min, 36 min	400°F
AF-4	Chicken nuggets	8oz, 10oz, 12oz, 16oz, 20oz	17 min, 18 min, 19 min, 21 min, 23 min	400°F
AF-5	Popcorn chicken	8oz, 10oz, 12oz, 16oz, 20oz	18 min, 19 min, 20 min, 22 min, 25 min	400°F
AF-6	Mozzarella sticks	8oz, 10oz, 12oz, 14oz, 16oz, 18oz	9 min, 10 min, 11 min, 12 min, 13 min, 15 min	400°F
AF-7	French fries	8oz, 10oz, 12oz, 14oz	22 min, 24 min, 26 min, 28 min	400°F

8.7.7 Roast mode

Manual roasting

1. Open the door (A) using the handle (O).
2. Place the baking tray (I) inside the appliance.
3. Place food inside the appliance.
4. Close the door (A).
5. Press the **ROAST** button (S). The default cooking temperature 350°F appears on the display (P).
6. Press any button once from 5 to 9 on the number pad (AC) to set the desired cooking temperature. The corresponding temperature appears on the display (P).
7. Press the **START/+30 SEC.** button (AG), then press any buttons from 0 to 9 on the number pad (AC) to set the desired cooking time. The corresponding time appears on the display (P).
8. Press the **START/+30 SEC.** button (AG) to start the cooking process. The light (E) lights up.
9. To add extra time during the cooking process, press the **START/+30 SEC.** button (AG) as needed.
10. The cooking process automatically ends when the timer reaches $\square:\square\square$. The appliance emits a beep noise. $E \text{ nd}$ appears on the display (P).

Preset roasting

1. Open the door (A) using the handle (O).
2. Place the baking tray (I) inside the appliance.
3. Place food inside the appliance.
4. Close the door (A).
5. Press the **ROAST** button (S) twice. The default preset $\overline{\text{AF}} - 1$ appears on the display (P). Press repeatedly until the desired preset appears on the display (P).
6. Press the **START/+30 SEC.** button (AG), then press the **ROAST** button (S) repeatedly to select the preset food weight.
7. Press the **START/+30 SEC.** button (AG) to start the cooking process. The light (E) lights up. The corresponding cooking time appears on the display (P).
8. To add extra time during the cooking process, press the **START/+30 SEC.** button (AG) as needed.
9. The cooking process automatically ends when the timer reaches $\square:\square\square$. The appliance emits a beep noise. $E \text{ nd}$ appears on the display (P).

Menu selection	Food	Weight	Time	Temperature
Ar-1	Salmon filet	4oz, 8oz, 12oz, 16oz, 20oz	21 min, 24 min, 27 min, 30 min, 33 min	400°F
Ar-2	Pork loin	32oz, 48oz	35 min, 45 min	400°F (Microwave and convection)
Ar-3	Pork tenderloin	16oz, 32oz	25 min, 35 min	400°F (Microwave and convection)
Ar-4	Roasted potatoes	4oz, 6oz, 8oz, 10oz, 12oz, 16oz	26 min, 28 min, 30 min, 32 min, 34 min, 38 min	400°F

8.7.8 Time defrost function

NOTICE The appliance pauses halfway and emits 3 beep noises to prompt the user to rearrange the position of the food. Press the **START/+30 SEC.** button (AG) to resume the defrosting process.

1. Open the door (A) using the handle (O).
2. Place food inside the appliance.
3. Close the door (A).
4. Press the **DEFROST TIME/WEIGHT** button (AB) once. appears on the display (P).
5. Press any buttons from 0 to 9 on the number pad (AC) to set the desired defrosting time. The corresponding time appears on the display (P).
6. Press the **START/+30 SEC.** button (AG) to start the defrosting process. The light (E) lights up.
7. To add extra time during the defrosting process, press the **START/+30 SEC.** button (AG) as needed.
8. The defrosting process automatically ends when the timer reaches . The appliance emits a beep noise. *End* appears on the display (P).

8.7.9 Weight defrost function

NOTICE

- The appliance automatically sets the defrosting time and power level depending on the preset.
- The appliance pauses halfway and emits 3 beep noises to prompt the user to rearrange the position of the food. Press the **START/+30 SEC.** button (AG) to resume the defrosting process.

1. Open the door (A) using the handle (O).
2. Place food inside the appliance.
3. Close the door (A).
4. Press the **DEFROST TIME/WEIGHT** button (AB) twice. The default preset appears on the display (P).
5. Press any button from 1 to 3 on the number pad (AC) to select another preset.
6. Press the **START/+30 SEC.** button (AG) to confirm the menu selection.
7. Press any buttons from 0 to 9 on the number pad (AC) to set the food weight in ounces.
8. Press the **START/+30 SEC.** button (AG) to start the defrosting process. The light (E) lights up. The corresponding time appears on the display (P).
9. The defrosting process automatically ends when the timer reaches . The appliance emits 3 beep noises. *End* appears on the display (P).

Menu selection	Food	Max. weight
dEF 1	Meat	80oz
dEF 2	Poultry	80oz
dEF 3	Seafood	32oz

8.7.10 Cooking presets

1. Open the door (A) using the handle (O).
2. Place food inside the appliance.
3. Close the door (A).
4. Press the corresponding button once or repeatedly to select the desired quantity or weight. The selection appears on the display (P).
5. Press the **START/+30 SEC.** button (AG) to start the cooking process. The light (E) lights up. The corresponding time appears on the display (P).
6. The cooking process automatically ends when the timer reaches $\square:\square\square$. The appliance emits a beep noise. *End* appears on the display (P).

Preset button guide

Button	Quantity/weight selection
POPCORN button (W)	3.5oz
POTATO button (X)	1 pc, 2 pcs
BEVERAGE button (Y)	1 cup, 2 cups, 3 cups
REHEAT button (Z)	7oz, 11oz, 14oz, 18oz, 21oz, 25oz, 28oz
FROZEN DINNER button (AA)	9oz, 18oz

8.8 Interrupting or ending a cooking process

- ▶ To interrupt the cooking process, press the **STOP/CANCEL** button (AH) once.
- ▶ To resume cooking, close the door (A), then press the **START/+30 SEC.** button (AG).
- ▶ To manually end the cooking process, press the **STOP/CANCEL** button (AH) once, then press the **STOP/CANCEL** button (AH) again to cancel the program or setting.

8.9 Using the child lock function

NOTICE When the child lock function is activated, the control panel (H) is disabled. When any button is pressed, the appliance emits a beep noise.

1. To activate the child lock function, press the **STOP/CANCEL** button (AH) for 3 seconds. The appliance emits a beep noise. --- appears on the display (P) for 5 seconds.
2. To deactivate the child lock function, press the **STOP/CANCEL** button (AH) for 3 seconds. The appliance emits a beep noise.

8.10 Control panel timeout function

- ▶ The control panel timeout disables the appliance if any button is pressed for over 60 seconds in standby mode or during operation. *FR!* appears on the display and the appliance emits a beep noise. The control panel (H) is disabled.
- ▶ If a button continues to be pressed, the appliance emits a beep noise every minute.
- ▶ To return to standby mode, press the **STOP/CANCEL** button (AH).

9. Cleaning, Storage and Maintenance

WARNING Risk of electric shock!

- ▶ To prevent electric shock, unplug the appliance before cleaning.
- ▶ During cleaning do not immerse the electrical parts of the appliance in water or other liquids. Never hold the appliance under running water.

9.1 Cleaning

9.1.1 General cleaning

- ▶ Clean the appliance after each use.
- ▶ To clean the exterior of the appliance, wipe with a soft, slightly damp cloth. Make sure that no water enters the appliance.
- ▶ Wipe away any dust from the vents on the exterior of the appliance.
- ▶ Wipe the appliance dry after cleaning.
- ▶ Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the appliance.

9.1.2 Cleaning the interior

- ▶ The appliance should be cleaned regularly to remove any food deposits. Failure to keep the appliance clean could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- ▶ If the door sealing no longer closes reliably due to accumulated food residue, microwave radiation may leak and damage one's health.
- ▶ Clean the appliance after each use to prevent mold, vermin, and food morsels that may block the door (A) and safety interlock system (N) from closing completely. This may cause microwave radiation to leak.
- ▶ Do not use steam or high-pressure cleaners to clean the appliance. The steam is pressurized and can condense on the electrical components inside the appliance and cause short-circuits.
- ▶ Do not use any abrasive cleaning agents or metal scrapers to clean the door (A). They may scratch the surface and cause the viewing window (B) to shatter at a high temperature during operation.
- ▶ Use a damp cloth to regularly and carefully clean the door sealing, compartment, and any adjacent components. Use a damp cloth to wipe off any food residues or splashes.
- ▶ Clean the control panel (H) with a soft, damp cloth. Leave the door (A) open when cleaning to prevent accidental operation.
- ▶ If steam condenses or forms drops inside the appliance or on the exterior, use a soft cloth to remove it. Condensation can occur if moist air meets a cold surface. At very high temperatures, oil and grease can also evaporate and deposit as a greasy film after cooling off.

9.1.3 Cleaning the waveguide cover

CAUTION

- ▶ Do not remove or damage the waveguide cover (D). It protects the inner components of the appliance and regulates the amount of microwave exposure during cooking.
- ▶ Take care when cleaning the waveguide cover (D). It is fragile and may break or crack under pressure.

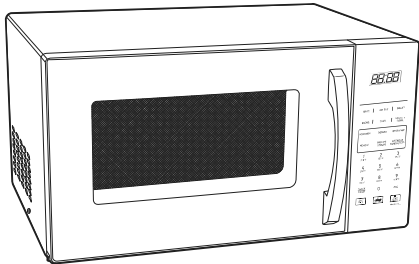
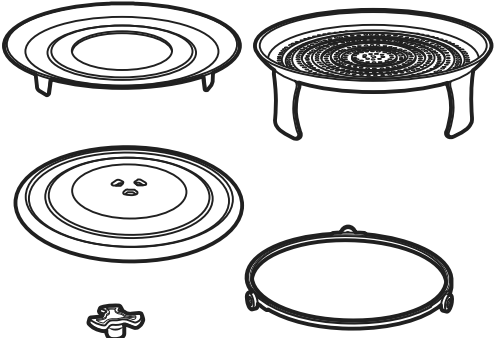
NOTICE

The waveguide cover (D) is made of mica, which may spark and burn if not cleaned regularly. Food or oil spatter absorb radiated energy and heat up the waveguide cover (D) during cooking.

- ▶ Gently wipe the waveguide cover (D) with a soft, slightly damp cloth.
- ▶ Clean the waveguide cover (D) periodically or if there is visible food spatter.

9.1.4 Cleaning the turntable assembly

1. Wash the turntable shaft (M), turntable ring (L), glass tray (K) and baking tray (I) under warm water and mild dish soap or using a dishwasher.
2. Dry the parts thoroughly before reinstalling them back into the appliance. Do not use the appliance without the turntable assembly.

			
	✗	✗	✓
	✓	✓	✓

9.1.5 Removing odors

Odors in the cooking compartment can be neutralized by the following methods:

- Fill a microwave safe cup with water and lemon juice. Boil the mixture for 5 minutes inside the appliance. Wipe the cooking compartment dry afterwards using a soft cloth.
- Boil a cup of black tea in the appliance for 2-3 minutes. Wipe the cooking compartment dry afterwards using a soft cloth.

9.2 Storage

Store the appliance in a dry area. Keep away from children and pets.

9.3 Maintenance

Any other servicing than mentioned in this manual should be performed by a professional repair center.

10. Frequently Asked Questions

Problem	Solution
The appliance does not switch on.	► Check if the power plug (G) is connected to the socket outlet. Use a voltage tester to verify if the socket outlet is powered. ► A fuse may be blown. Contact a professional repair center.
The appliance does not heat.	Make sure the door (A) is closed properly.
Appliance interferes with AV or wireless reception.	The appliance may cause interference with AV, wireless or radio reception during operation. It is similar to the interference of small electrical appliances like mixers, vacuum cleaners, and electric fans. This is a normal occurrence.

Problem	Solution
Steam accumulates on the door (A) and hot air comes out of the vents.	During cooking, food will release steam. Most steam escapes from the vents. However, some may accumulate on cooler surfaces like the door (A). This is a normal occurrence.
Appliance started accidentally without food inside.	Press the STOP/CANCEL button (AH) twice. Do not start the appliance without any food inside.
Sparkling occurs during cooking in microwave mode or combination modes.	- Do not use metal containers, large amounts of aluminum foil or containers with gold/silver patterns. - Gently wipe the waveguide cover (D) with a soft, slightly damp cloth to remove any food or oil spatter.
The glass tray (K) does not rotate.	- Make sure to fit the turntable ring (L) and glass tray (K) correctly. - Make sure the grooves of the glass tray (K) fit onto the turntable shaft (M).
Food is not warm enough.	- Excess condensation slows the absorption of heat. Wipe away any condensation from the exterior of the container of food. - Add extra time for frozen pre-cooked food. Make sure to monitor the food to prevent undercooking or overcooking.
Frozen food defrosts unevenly.	- Do not defrost any frozen food at room temperature before using the defrost function. - Set the appropriate defrosting time or the correct weight of the frozen food. See chapters 8.7.8 Time defrost function or 8.7.9 Weight defrost function.
The appliance constantly emits a beep noise and FH! appears on the display. The control panel (H) does not function.	The control panel (H) has timed out. See chapter 8.10 Control panel timeout function .

11. Error Codes

E03 appears on the display (P) and the appliance emits a beep noise.	The appliance has overheated. Press the STOP/CANCEL button (AH) to enter standby mode. Microwave mode is disabled. Open the door (A) to let the appliance cool down.
E04 appears on the display (P) and the appliance emits a beep noise.	The appliance is not heating properly. Press the STOP/CANCEL button (AH) to enter standby mode. Microwave mode is disabled.
E05 or E06 appears on the display (P) and the appliance emits a beep noise.	The sensor has opencircuited or shortcircuited. Press the STOP/CANCEL button (AH) to enter standby mode. Microwave mode is disabled.

If any operational issues persist after the appliance has cooled down and entered standby mode, contact a professional repair center.

12. FCC – Supplier's Declaration of Conformity

Unique Identifier	Amazon Basics 4-in-1 Countertop Microwave Oven With Air Fryer, Broiler & Convection 1.0 Cu Ft Black - B0DCNN54VZ
Responsible Party	Amazon.com Services LLC.
U.S. Contact Information	410 Terry Ave N. Seattle, WA 98109 USA
Telephone Number	(206) 266-1000

12.1 FCC Compliance Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) this device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

12.2 FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ Reorient or relocate the receiving antenna.
- ▶ Increase the separation between the equipment and receiver.
- ▶ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ Consult the dealer or an experienced radio / TV technician for help.

13. Specifications

Model number	D100N30ASLRIII-XR(L2)
Rated voltage	120VAC, 60Hz
Rated power input	Microwave: 1500W Convection: 1500W
Output (cooking) power	max. 1000W
Capacity	1 cubic ft
Microwave operating frequency	2450 MHz
Power in standby mode	≤0.6W
Protection class	Class I
Turntable diameter Ø	Ø12.4in

14. Feedback and Help

We would love to hear your feedback. Please consider leaving a rating and review through your purchase orders. If you need help with your product, log in to your account and navigate to the customer service / contact us page.

Table des Matières

1. Consignes de sécurité importantes	26
1.1 Consignes de sécurité supplémentaires	27
1.2 Précautions pour éviter une exposition excessive aux micro-ondes	27
1.3 Instructions de mise à la terre	28
1.4 Interférence radio	29
2. Utilisation prévue	29
3. Avant la première utilisation	29
4. Description de l'appareil	30
5. Description du panneau de commande	31
6. Placement de l'appareil	32
7. Conseils	32
7.1 Comment fonctionne la cuisson au micro-ondes	32
7.2 Conseils de cuisson	32
7.3 Vaisselle et ustensiles de cuisine appropriés	33
7.4 Matériaux pouvant être utilisés dans le mode micro-ondes	34
7.5 Matériaux à éviter dans le mode micro-ondes	35
7.6 Matériaux pour le mode cuisson, le mode friture à air chaud, le mode rôtir et le mode combiné	35
8. Fonctionnement	35
8.1 Installation du plateau tournant	35
8.2 Connexion à l'alimentation	36
8.3 Activation de la fonction de verrouillage de sécurité	36
8.4 Réglage de l'horloge	37
8.5 Réglage de la minuterie	37
8.6 Utilisation du mode ECO	37
8.7 Cuisson et chauffage des aliments	37
8.8 Interrompre ou mettre fin à un processus de cuisson	44
8.9 Utilisation de la fonction verrouillage enfant	44
8.10 Fonction de temporisation du panneau de commande	44
9. Nettoyage, entreposage et entretien	44
9.1 Nettoyage	44
9.2 Entreposage	46
9.3 Entretien	46
10. Questions fréquentes	46
11. Codes d'erreur	47
12. Spécifications	47
13. Commentaires et aide	47

1. CONSIGNES DE SÉCURITÉ IMPORTANTES



Lisez attentivement ces instructions et conservez-les pour une utilisation ultérieure. Si cet appareil est transmis à un tiers, ces instructions doivent être incluses.

Lorsque vous utilisez des appareils électriques, assurez-vous de toujours suivre les règles de sécurité de base, notamment les suivantes :

ATTENTION : pour réduire les risques de brûlures, de choc électrique, d'incendie, de blessures ou d'exposition excessive aux micro-ondes :

- ▶ Lisez toutes les instructions avant d'utiliser l'appareil.
- ▶ Lisez et suivez les « PRÉCAUTIONS POUR ÉVITER UNE EXPOSITION EXCESSIVE AUX MICRO-ONDES » indiquées à la page 27.
- ▶ Cet appareil doit être mis à la terre. Branchez uniquement sur une prise correctement mise à la terre. Voir « INSTRUCTIONS DE MISE À LA TERRE » à la page 28.
- ▶ Installez ou placez cet appareil uniquement conformément aux instructions d'installation fournies.
- ▶ Certains produits, comme les œufs entiers et les contenants scellés, par exemple les bocaux en verre fermés, peuvent exploser et ne doivent pas être chauffés dans cet appareil.
- ▶ Utilisez cet appareil uniquement pour l'usage prévu tel que décrit dans le manuel. N'utilisez pas de produits chimiques ou de vapeurs nocives dans cet appareil. Ce type d'appareil est conçu spécialement pour chauffer, cuire ou sécher les aliments. Il n'est pas conçu pour un usage industriel ou en laboratoire.
- ▶ LE CONTENU CHAUD PEUT CAUSER DE GRAVES BRÛLURES. NE LAISSEZ PAS LES ENFANTS UTILISER L'APPAREIL. Faites attention en retirant des éléments chauds.
- ▶ N'utilisez pas cet appareil si le cordon ou la fiche est endommagé, s'il ne fonctionne pas correctement, ou s'il a été endommagé ou laissé tomber.
- ▶ L'entretien de cet appareil doit être assuré uniquement par du personnel qualifié. Contactez le centre de service autorisé le plus proche pour inspection, réparation ou réglage.
- ▶ Ne couvrez ni ne bloquez aucune ouverture sur l'appareil.
- ▶ Ne rangez pas cet appareil à l'extérieur. N'utilisez pas cet appareil à proximité de l'eau, par exemple près d'un évier de cuisine, dans un sous-sol humide, près d'une piscine ou dans des endroits similaires.
- ▶ N'immergez pas le cordon et ne le branchez pas dans l'eau.
- ▶ Gardez le cordon à l'écart des surfaces chauffées.
- ▶ Ne laissez pas le cordon pendre du bord de la table ou du comptoir.
- ▶ Pour nettoyer les surfaces de la porte et de l'appareil qui se touchent lors de la fermeture de la porte, utilisez uniquement des savons doux et non abrasifs, ou des détergents appliqués avec une éponge ou un chiffon doux.
- ▶ Pour réduire le risque d'incendie dans la cavité de l'appareil :
 - Ne faites pas trop cuire les aliments. Surveillez attentivement l'appareil lorsque du papier, du plastique ou d'autres matériaux combustibles sont placés à l'intérieur pour faciliter la cuisson.
 - Retirez les attaches métalliques des sacs en papier ou en plastique avant de mettre le sac dans l'appareil.
 - Si des matériaux à l'intérieur de l'appareil s'enflamment, gardez la porte de l'appareil fermée, éteignez l'appareil et débranchez le cordon d'alimentation, ou coupez l'alimentation au fusible ou au panneau du disjoncteur.
 - N'utilisez pas la cavité du four à des fins de rangement. Ne laissez pas de produits en papier, d'ustensiles de cuisine ou d'aliments dans la cavité lorsque le four n'est pas utilisé.

- ▶ Les liquides, comme l'eau, le café ou le thé, peuvent être portés à une température supérieure au point d'ébullition sans sembler bouillir. Des bulles visibles ou de l'ébullition ne sont pas toujours présentes lorsque le contenant est retiré de l'appareil. CECI POURRAIT PROVOQUER UN DÉBORDEMENT SOUDAIN DE LIQUIDES TRÈS CHAUDS LORSQUE LE CONTENANT EST DÉPLACÉ OU QU'UN USTENSILE EST PLONGÉ DANS LE LIQUIDE.
- ▶ Les aliments ou les ustensiles métalliques surdimensionnés ne doivent pas être insérés dans un four à micro-ondes, car ils peuvent provoquer un incendie ou représenter un risque d'électrocution.
- ▶ Ne nettoyez pas l'appareil avec des tampons à récurer métalliques. Les pièces peuvent heurter le tampon et toucher des pièces électriques présentant un risque de choc électrique.
- ▶ Ne couvrez pas les supports ou toute autre partie de l'appareil avec du papier d'aluminium. Cela entraînerait une surchauffe de l'appareil.
- ▶ L'entretien de l'appareil non décrit explicitement dans le manuel doit être effectué uniquement par du personnel de service qualifié.
- ▶ Un cordon d'alimentation court est fourni pour réduire les risques d'emmêlement ou de trébuchement liés à un cordon plus long.
- ▶ Si un cordon long ou une rallonge est utilisé :
 - La puissance électrique indiquée sur le cordon ou la rallonge doit être au moins égale à celle de l'appareil.
 - La rallonge doit être un cordon à 3 fils avec mise à la terre.
 - Le cordon long doit être disposé de façon à ne pas pendre du comptoir ou de la table, afin d'éviter qu'un enfant puisse le tirer ou qu'une personne trébuche accidentellement.

CONSERVEZ CES INSTRUCTIONS

1.1 Consignes de sécurité supplémentaires

- ▶ Pour les performances de cuisson/friture, le temps de cuisson réel dépend :
 - de la taille et de la fraîcheur des aliments
 - du niveau de remplissage
 - du réglage de la température
 - des préférences personnelles
- ▶ Modifiez de temps en temps la position des aliments à cuire. Attention aux surfaces chaudes et aux aliments chauds.
- ▶ Vérifiez régulièrement la progression de la cuisson pour obtenir les résultats souhaités. Le temps de cuisson requis peut être plus court ou plus long que celui indiqué dans une recette donnée.
- ▶ Utilisez toujours des gants résistants à la chaleur ou des gants de cuisinier pour retirer des contenants ou des aliments chauds de l'appareil.

1.2 PRÉCAUTIONS POUR ÉVITER UNE EXPOSITION EXCESSIVE AUX MICRO-ONDES



⚠ MISE EN GARDE Risque d'exposition aux micro-ondes!

N'utilisez pas l'appareil avec la porte ouverte ou si la porte est endommagée. L'exposition aux micro-ondes peut causer des brûlures ou endommager les tissus.

- ▶ N'essayez pas de faire fonctionner cet appareil avec la porte ouverte, car cela pourrait entraîner une exposition dangereuse aux micro-ondes. Il est important de ne pas défaire ou altérer les dispositifs de verrouillage de sécurité.
- ▶ Ne placez aucun objet entre la face avant de l'appareil et la porte et ne laissez aucun résidu de saleté ou de nettoyant s'accumuler sur les surfaces d'étanchéité.

- ▶ N'utilisez pas l'appareil s'il est endommagé. Il est particulièrement important que la porte de l'appareil se ferme correctement et qu'il n'y ait aucun dommage aux éléments suivants : (1) porte (pliée), (2) charnières et loquets (cassés ou desserrés), (3) joints de porte et surfaces d'étanchéité.
- ▶ L'appareil ne doit être réglé ou réparé que par du personnel de service qualifié.

1.3 INSTRUCTIONS DE MISE À LA TERRE

⚠ DANGER Risque d'électrocution!

- ▶ Toucher certains composants internes peut entraîner des blessures graves ou même la mort. Ne démontez pas l'appareil.
 - ▶ Une mauvaise utilisation de la mise à la terre peut entraîner un choc électrique. Ne branchez pas l'appareil avant qu'il soit correctement installé et mis à la terre.
- ▶ Cet appareil doit être mis à la terre. En cas de court-circuit électrique, la mise à la terre réduit le risque de choc électrique en offrant un fil de décharge pour le courant électrique. Cet appareil est équipé d'un cordon comportant un fil de mise à la terre et une fiche de mise à la terre. La fiche doit être branchée dans une prise correctement installée et mise à la terre.
- ▶ Consultez un électricien ou un technicien qualifié si vous ne comprenez pas parfaitement les instructions de mise à la terre, ou si vous avez un doute quant à la bonne mise à la terre de l'appareil.
- ▶ S'il est nécessaire d'utiliser une rallonge, utilisez uniquement une rallonge à 3 fils munie d'une fiche à 3 broches avec mise à la terre, ainsi que d'une prise à 3 trous compatible avec la fiche de l'appareil. La puissance électrique indiquée sur la rallonge doit être égale ou supérieure à la puissance électrique de l'appareil.
- ▶ Cet appareil doit être mis à la terre pendant son utilisation pour protéger l'opérateur contre les chocs électriques. L'appareil est équipé d'un cordon à 3 conducteurs et d'une fiche de mise à la terre à 3 broches, conçue pour s'adapter à une prise de courant avec mise à la terre appropriée. L'appareil possède une fiche ressemblant au croquis A dans la figure ci-dessous. Un adaptateur, le croquis B, devrait être utilisé pour raccorder les bouchons du croquis A à des prises à deux broches. La patte de mise à la terre qui sort de l'adaptateur doit être reliée à une prise de terre permanente, telle qu'une boîte de sortie correctement mise à la terre, comme indiqué dans le croquis C, à l'aide d'une vis métallique.

