Tenda

Quick Installation Guide

5 km Outdoor Point to Point CPE
Model: O3

Package Contents

- 05 *1
- PoE Injector * 2
- Power Adapter * 2
- Ethernet Cable * 2
- Quick Installation Guide * 1
- Grounding Screw * 1
- Pole Mounting Strap * 2
- Screw * 2 (Used to be the PoE injector.)
- Expansion Anchor * 2 (Used to be the PoE injector.)

Please read this quick installation guide before you start. You can visit our website at http://www.tendacn.com for more information about the device.

Get to Know the Devices

▸ LED Indicators

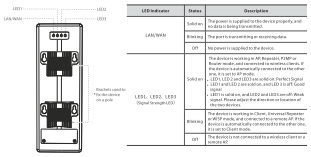

LED Indicator	Status	Description
LAN/WAN	Solid on	The power is supplied to the device properly, and no data is being transmitted.
	Blinking	The port is transmitting or receiving data.
	Off	No power is supplied to the device.
LED1、LED2、LED3 (Signal Strength LED)	Solid on	The device is working in AP, Repeater, P2MP or Router mode, and connected to a wireless client. If the device is automatically connected to the other one, it is set to AP mode. • LED1, LED2 and LED3 are solid on: Perfect Signal • LED1 and LED2 are solid on, and LED3 is off: Good signal • LED1 is solid on, and LED2 and LED3 are off: Weak signal. You can adjust the direction or location of the two devices.
	Blinking	The device is working in Client, Universal Repeater or WISP mode, and connected to a remote AP. If the device is automatically connected to the other one, it is set to Client mode.
	Off	The device is not connected to a wireless client or a remote AP.

▸ Ports & Button

ID	Port/Button	Description
①	GND	Grounding jack Connect to a metal grounding screw and cable to connect the device's grounding offer to a grounding terminal of building to avoid ESD and lightning damage to the device.
②	RST	Reset Button Press the button to reset or hold for 1 minute, hold down this button for about 8 seconds. When all the LED indicators on the device light up, the device restores to the factory settings.
③	LAN	10/100 Mbps adaptive, supports Auto MDI port. Used to connect to a switch, computer, or other wired devices.
④	PoE LAN/WAN	PoE power input and data transmission port. If the device works in Router mode, it is a WAN port. Otherwise, it is a LAN port. Use the included PoE injector to supply power to the device.
⑤	/	Ethernet cable index.

Application Scenario 1: CCTV Surveillance or Point to Point Data Transmission

1. Set up the Devices(AP + Station Mode)

Tips: At least two devices are required for bridging.

Method 1: Automatic Bridging (Recommended)

① Place the two devices next to each other, see the following figure.



② Uncover the housing of each device, and use the included PoE injectors to power up the two devices. Wait until the **LAN/WAN** LED indicators of the devices light up.



③ Wait for the two devices to negotiate and connect to each other automatically. The following LED indicator status indicates successful connection of the two devices.



Note:
- Automatic Bridge is only applicable when the devices are in factory settings, and the bridging process lasts less than 1 minute after the devices are powered on. If the bridging fails, you can power off the devices and then power them on to try again. If the bridging fails in the same way by automatic bridge fails, try if you want to perform pair-to-multi pair bridging, please refer to **Method 2: Set up the Devices Using Web UI**.
- If the bridging succeeds, the DHCP servers of the two devices are disabled, and the IP address of the device working in Client mode changes to 192.168.2.2.

Method 2: Set up the Devices Using Web UI

Step 1: Place the two devices next to each other.



Step 2: Connect the computer to CPE 1.

① Uncover the housing of CPE 1.
② Use an Ethernet cable to connect the **PoE LAN/WAN** port of CPE1 to the **PoE** port of the PoE injector.
③ Use the included power adapter to connect the PoE injector to a power socket. The **LAN/WAN** LED indicator of the CPE1 lights up.
④ Use an Ethernet cable to connect your computer to the **LAN** port of the PoE injector.



Step 3: Set CPE 1 to AP Mode.

① Start a web browser on the computer, and visit **192.168.2.1**. Enter your user name and password (default: **admin**), and click **Login**.

Tips:
If this page does not appear, please refer to **Q1** in **FAQ**.

② Select **AP**, and click **Next**.

③ Set an SSID, which is **Tenda_123456** in this example, security mode (WPA2-PSK is recommended), and **Key**, and click **Next**.

④ Click **Save**, and wait until the device reboots automatically to activate the settings.

Step 4: Set CPE 2 to Client Mode.

① Perform the procedure in **Step 2 to connect the computer to CPE 1** to connect the computer to CPE 2.
② Start a web browser on the computer, and visit **192.168.2.1**. Enter the login user name and password (both are **admin** by default), and click **Login.**

Tips:
If this page doesn't appear, please refer to **Q1** in **FAQ**.

③ Select **Client**, and click **Next**.

④ Select the SSID of CPE 1 you set, which is Tenda_123456 in this example, and click **Next**.

⑤ Enter the WiFi password you set on CPE 1 in the **Key** text box, and click **Next**.

⑥ Set the IP address to an unused IP address belonging to the same network segment as that of CPE 1.
For example, if the IP address of CPE 1 is 192.168.2.1, you can set this device's IP address to 192.168.2.X (X ranges from 2 to 254). Then click **Next**.

⑦ Click **Save**, and wait until the device reboots to activate the settings.
When LED1, LED2, and LED3 of CPE 1 are solid on, and LED1, LED2, and LED3 of CPE 2 flash, the bridge succeeds.

2. Install the Devices

- The device (transmitter in AP mode) with LED1, LED2 and LED3 solid on should be connected to the switch connecting to a network video recorder (NVR). See **Figure 1**.
- The device (receiver in Client mode) with LED1, LED2 and LED3 blinking should be connected to the switch connecting to a monitoring IP camera. See **Figure 2**.

Detailed procedures are as follows:

① Place the transmitter in the open air at the point where the NVR is located. Place the receiver in the open air at the point where the IP camera is located.
② Uncover the housings of the two devices, and connect the **PoE/LAN/WAN** ports of the devices to PoE injectors respectively. The **LAN/WAN** LED indicators light up.
③ Adjust the two devices' direction or location until the LED1, LED2 and LED3 of the two devices light up.
④ Use the pole mounting straps to attach the two devices to the poles respectively.

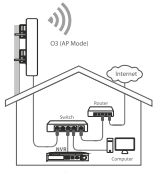

Figure 1

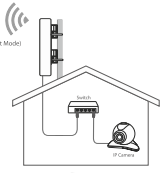

Figure 2

Application Scenario 2: Wireless ISP Hotspot Access

1. Set up the Device

Step 1: Connect the computer to the device.

① Uncover the housing of the device.
② Use an Ethernet cable to connect the **PoE LAN/WAN** port of the device to the **PoE** port of the PoE injector.
③ Use the included power adapter to connect the PoE injector to a power socket. The **LAN/WAN** LED indicator of the device lights up.
④ Use an Ethernet cable to connect your computer to the **LAN** port of the PoE injector.



Step 2: Set the device to WISP Mode.

① Start a web browser on your computer, and visit **192.168.2.1**. Enter your user name and password (default: **admin**), and click **Login**.

Tips:
If this page does not appear, please refer to **Q1** in **FAQ**.

② Select **WISP**, and click **Next**.

② Select the SSID of your ISP (Internet Service Provider) hotspot, which is **Tenda_123456** in this example, and click **Next**.

④ Enter the WiFi password of your ISP (Internet Service Provider) hotspot in the **Key** text box, and click **Next**.

③ Select the Internet Connection Type of your ISP hotspot. We take PPPoE as an example here. Enter the PPPoE user name and password provided by your ISP, and click **Next**.

⑥ Customize the SSID and Key, and click **Next**.

⑦ Set an IP address belonging to different network segment as that of your ISP hotspot. For example, if the IP address of your ISP hotspot is 192.168.2.1, you can set this device's IP address to 192.168.X.1 (X ranges from 0 to 254 except 2). Then click **Next**.

⑧ Click **Save**, and wait until the device reboots to activate the settings.
When LED1, LED2, and LED3 of the device blink, the device is connected to your ISP hotspot successfully.

2. Install the Devices

① Place the device at an open air.
② Uncover the housings of the device, and connect the PoE/LAN/WAN port of the device to the WAN port of your wireless router.
The LAN/WAN LED indicator lights up.
③ Adjust the device's direction or location on the selected pole until the LED1, LED2 and LED3 of the device light up.
④ Use the pole mounting straps to attach the device to the pole.

ISP Hotspot

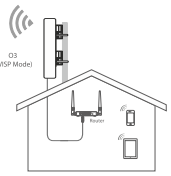

FAQ

Q1: I cannot log in to the web UI of the device by entering 192.168.2.1. What should I do?

- Try the following methods and try again:
- Ensure that the device has been connected to the power supply and the computer properly.
- Ensure that the IP address of the login computer is 192.168.2.X (X ranges from 2 to 254).
- Reset the device to factory settings.

Q2: How to reset the device to factory settings?

- **Note: Resetting the device will clear all settings, and you need to configure it again.**
- **Method One**: 1 minute after the device is powered on, uncover the housing of the device, and hold down the **Reset** button for about 8 seconds. When all LED indicators light up, the device is restored to factory settings.
- **Method Two**: Log in to the web UI of the device, choose **Tools** > **Maintenance**, and click **Reset** button.

Q3: How to determine whether the bridging signal is optimal when the devices are used for CCTV surveillance?

Method One: Observe the LED indicators of the two devices. The bridging signal is optimum when all of the LED1, LED2 and LED3 indicators are solid on or flashing.
Method Two: Log in to the web UI of one device (default login address: 192.168.2.1), choose Status, and check the wireless status on the following page:

Stronger signal strength (-90 is better than -100) and less background noise (-100 is better than -90) lead to better bridging signal.

Q4: After the installation succeeds, the monitors connected to the NVR cannot display the surveillance videos. What should I do?

Try the following solutions:
- Ensure that all devices are working normally, and connected properly.
- Refer to the following figure to find the problem. Ensure that the IP addresses of computer, NVR, and IP cameras are in the same network segment.

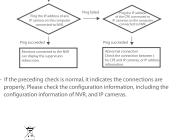

- If the preceding check is normal, it indicates the connections are properly. Please check the configuration information, including the configuration information of NVR, and IP cameras.

CE Mark Warning
This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.
WARNING: The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
NOTE: (1) The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. (2) To avoid unnecessary radiation interference, it is recommended to use a shielded RJ45 cable.
Declaration of Conformity
Hereby, SHENZHEN TENDA TECHNOLOGY CO., LTD. declares that the radio equipment type O3 is in compliance with Directive 2014/53/EU.
The full text of the EU declaration of conformity is available at the following internet address:
http://www.tendacn.com/cn/service/download-cata-1011.html
Operate Frequency: EU:2400-2483.5MHz (CH1-CH13)
EIRP Power (Max.): 19.8dBm
Software Version:
Caution:
Adapter Model: BN036-A12012E, BN036-A12012B, BN036-A12012U
Manufacturer: SHENZHEN HEWEISHUN NETWORK TECHNOLOGY CO., LTD.
Input: 100 ~ 240 V AC, 50/60 Hz 0.4 A
Output: 12 V DC, 1 A
DC: DC Voltage

FC Radiation Exposure Statement:
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.
This transmitter must not be co_located or operating in conjunction with any other antenna or transmitter.
This equipment should be installed and operated with minimum distance 20cm between the radiator &you body.
So the stand_alone SAR evaluation is not necessary.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
— Reorient or relocate the receiving antenna.
— Increase the separation between the equipment and receiver.
— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
— Consult the dealer or an experienced radio/TV technician for help.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired **operation**.

RECYCLING
This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.

Operating Temperature: -30 °C - 60 °C
Operating Humidity: (10 - 90 %)RH, non-condensing

Technical Support
Shenzhen Tenda Technology Co., Ltd.
6-8 Floor, Tenda Building, No.1001, Zhonghaixiyuan Road, Nanshan District, Shenzhen, China, 518052
USA hotline: 1-800-570-5892 Canada hotline: 1-866-998-8066
Hongkong Hotline: (VIP)(+852)51119968 Website: http://www.tendacn.com
E-mail: support@tenda.com.cn

Copyright
© 2019 Shenzhen Tenda Technology Co., Ltd. All rights reserved.
Tenda is a registered trademark legally held by Shenzhen Tenda Technology Co., Ltd. Other brand and product names mentioned herein are trademarks or registered trademarks of their respective holders.
Specifications are subject to change without notice.