
dtp_VFJ7510_WS-X3A_X2A_X1A_qsg_G_12multi_A0.fm 1 ページ ２０２２年９月２０日 火曜日 午前１０時５６分

YAMAHA

Wireless Speaker
Enceinte connectée
Bocina Inalámbrica
Caixa acústica sem-fio
Беспроводная колонка
无线音箱
無線揚聲器


TRUE X SPEAKER 3A WS-X3A
TRUE X SPEAKER 2A WS-X2A
TRUE X SPEAKER 1A WS-X1A

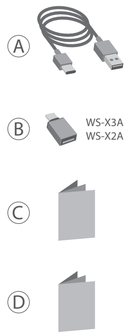



© 2022 Yamaha Corporation
Published 11/2022
2022年11月 発行
KSOD-A0

VFJ7510

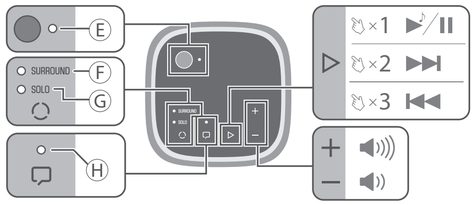

JA スタートアップガイド

ご使用の前に付属の「安全上のご注意」を必ずお読みください。お読みになったあとは、いつでも見られるところに大切に保管してください。

- 本書では、本製品をスマートフォンなどのBluetooth® 機器と Bluetooth 接続して音楽ファイルを再生するまでを案内しています。より詳しい内容はユーザーガイドで説明しています。ユーザーガイドをご覧になるには下記URLへアクセスしてください。
 https://XXXXXXXXXXXXXXXXXX
- 本書のイラストはWS-X1Aを例にして説明しています。

付属品

Ⓐ USB ケーブル（充電用）
Ⓑ 変換プラグ（WS-X3A、WS-X2A に付属）
本製品のファームウェアをアップデートするときに使用します（ユーザーガイド参照）。
Ⓒ スタートアップガイド（本書）
Ⓓ 安全上のご注意

操作ボタン

○ 電源ボタン

⟲ モードボタン

押すたびに本製品のモードが切り替わり、SURROUND ランプ（Ⓕ）、SOLO ランプ（Ⓖ）で表示します。
- SURROUND：本製品をヤマハサウンドバーと組み合わせて使うときに選択します（下記 ***3-B*** 参照）。
- SOLO：本製品を単体で使うときに選択します。

💬 クリアボイスボタン

オンにするとクリアボイスランプ（Ⓗ）が点灯し、セリフなど人の声が聞き取りやすくなります。

▷ 再生 / 一時停止ボタン

再生中にすばやく 2 回押すと次の曲に、3 回押すと再生中または前の曲の先頭にスキップします。

+/− 音量ボタン

1 充電する

ご使用になる前に充電してください。
充電には DC 5 V、2 A 以上を出力できる市販の USB 電源アダプターをお使いください。
別売の充電クレードル（ヤマハ CC-T1A）を使って充電することもできます。

1 USB ケーブルのType-C コネクター側を本製品の USB 端子に接続する
2 USB ケーブルのType-A コネクター側を USB 電源アダプターに接続する
3 USB 電源アダプターを電源コンセントに接続する
電源ランプ（Ⓔ）がオレンジ色に点灯し、充電が開始されます。充電が完了すると電源ランプが消灯します。

2 電源を入れる

電源ボタンを長押ししてください。電源ランプ（Ⓔ）が点滅して充電池の残量をお知らせします。

白色の点滅：残量が半分以上
オレンジ色の点滅：残量が半分未満

お知らせ後に電源が入ります。電源を切るときは、もう一度電源ボタンを長押ししてください。

3-A Bluetooth® 機器を接続する

Bluetooth 機器と接続する場合は、SOLO ランプ（Ⓖ）が青色で点滅しているときに下記の手順で接続してください。

1 Bluetooth 機器を操作して、Bluetooth をオンにする
2 Bluetooth 機器の接続リストから本製品（Yamaha WS-*）を選ぶ**
*** にはお使いの機種（X3A、X2A または X1A）が表示されます。接続すると SOLO ランプが青色に点灯します。
3 Bluetooth 機器を操作して音楽を再生する

3-B サウンドバーと接続する

本製品をヤマハサウンドバーのサラウンドスピーカーとして使用する場合は、下記ウェブサイトをご覧ください。

https://XXXXXXXXXXXXXXXXXX

EN Quick Start Guide

Be sure to read the included Safety Brochure before use. Keep it readily available for future reference.

- This document guides you through connecting this product to a Bluetooth® device such as a smartphone via Bluetooth and playing music files. More details are explained in the User Guide. Access the following URL to see the User Guide
 https://XXXXXXXXXXXXXXXXXX
- In this document, illustrations of the WS-X1A wireless speaker are used as examples.

Included accessories

Ⓐ USB cable (for charging the unit)
Ⓑ Convertor attachment (included with the WS-X3A and WS-X2A)
Use when updating the unit's firmware (See the User Guide).
Ⓒ Quick Start Guide (this document)
Ⓓ Safety Brochure

Control buttons

○ Power button

⟲ Mode button

The unit's mode changes each time this button is pressed, and the SURROUND lamp (Ⓕ) or SOLO lamp (Ⓖ) shows the selected mode.
- SURROUND: This mode is used when using the unit in combination with a Yamaha sound bar (See ***3-B*** below).
- SOLO: This mode is used when using this unit alone.

💬 Clear Voice button

When the Clear Voice function is enabled, the Clear Voice lamp (Ⓗ) glows, and human voices such as dialogs can be heard more easily.

▷ Play/Pause button

During playback, press the button twice quickly to skip to the next song, or three times to skip backward to the beginning of the current song or previous song.

+/− Volume buttons

1 Charging the unit

Charge the unit before using it.
Use a commercially available USB power adapter that can output DC 5 V/2 A or more) when charging the unit.
A charging cradle (Yamaha CC-T1A; sold separately) can also be used to charge the unit.

1 Connect the Type-C connector of the USB cable to the USB port on this unit.
2 Connect the Type-A connector of the USB cable to the USB power adapter.
3 Plug in the USB power adapter to an AC wall outlet.
The power lamp (Ⓔ) glows orange and charging will start. When charging is completed, the power lamp turns off.

2 Turning on the unit

Press and hold the power button. The power lamp (Ⓔ) flashes to inform you of the remaining battery level.

Flashing white: Remaining battery level is more than half.
Flashing orange: Remaining battery level is less than half.

After showing the status, the unit turns on. To turn off the unit, press and hold the power button again.

3-A Connecting a Bluetooth® device

Follow the procedure below when the SOLO lamp (Ⓖ) is flashing in blue to connect a Bluetooth device.

1 On the Bluetooth device, enable the Bluetooth function.
2 On the Bluetooth device, select this unit (Yamaha WS-*) from the list of available devices to connect to.**
The model name of your product (X3A, X2A or X1A) is displayed in place of ***. When the connection is established, the SOLO lamp glows blue.
3 Start playback of audio on the Bluetooth device.

3-B Connecting to the sound bar

When using this unit as a surround speaker for Yamaha sound bars, see the following website:

https://XXXXXXXXXXXXXXXXXX