

From our first PA system in 1930s to our game-changing instruments and amplifiers, our heritage is built on creating innovative musical technology. We know crystal-clear, powerful sound—it's what we did first, and what we do best. Now, Fender brings our stage-ready style, performance and sound to your home or office.


Experience pure, clear sound from the company that knows music start to finish: Fender.

Please take a moment to register your Indio speaker at start.fender.com

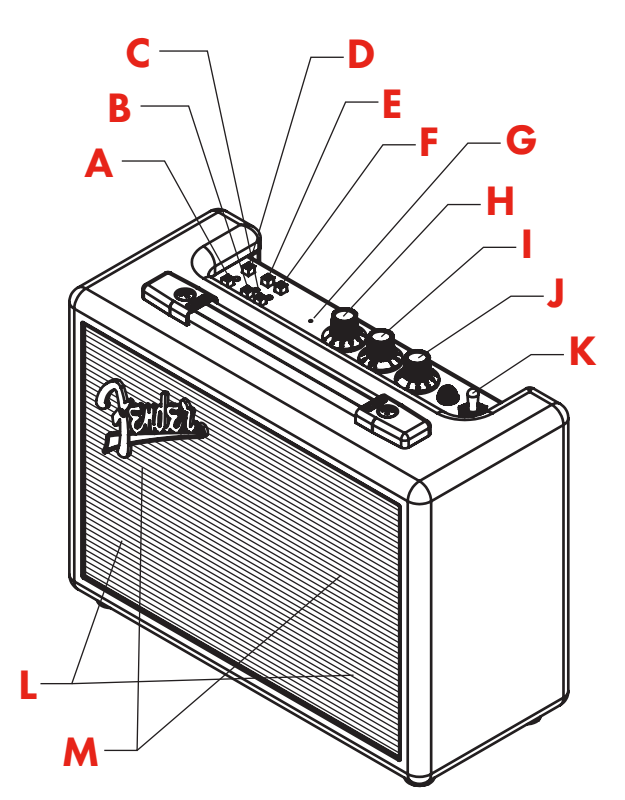


- A. PAIR button
- B. VOICE button
- C. DUO button
- D. PLAY/PAUSE button
- E. PREVIOUS button
- F. NEXT button
- G. Microphone
- H. VOLUME control
- I. TREBLE control
- J. BASS control
- K. Power switch
- L. Tweeters
- M. Woofers
- N. Battery indicator
- O. DC power inlet
- P. USB port
- Q. Aux in

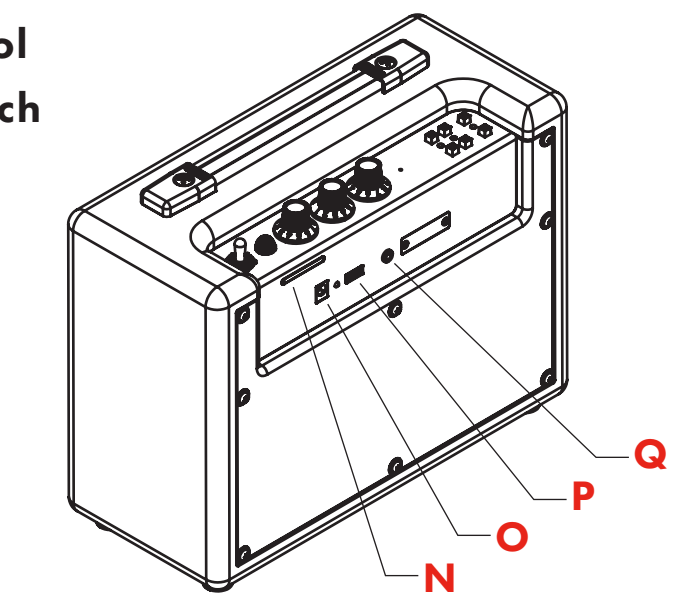





PAIRING BLUETOOTH

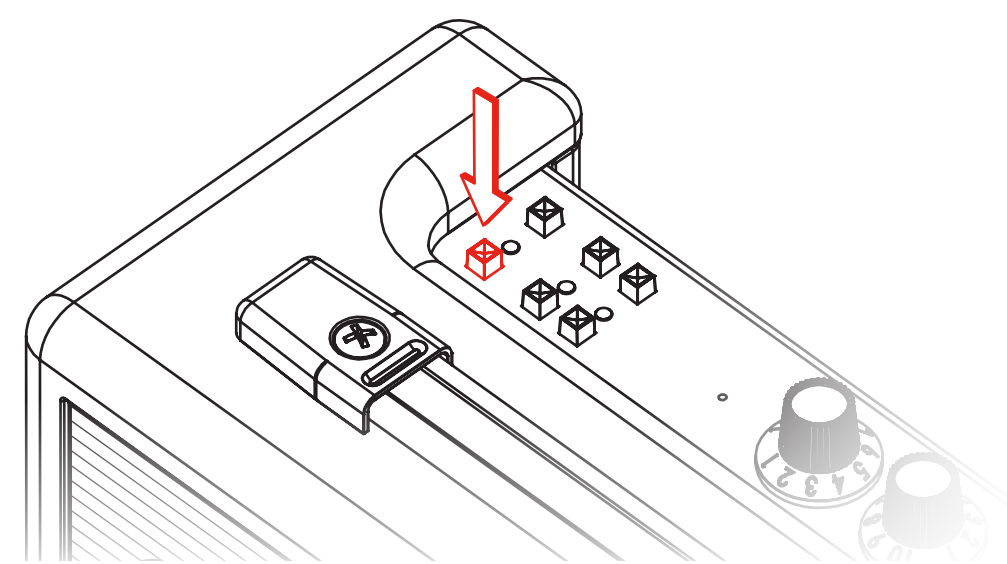

Press the PAIR button to enter pairing mode.

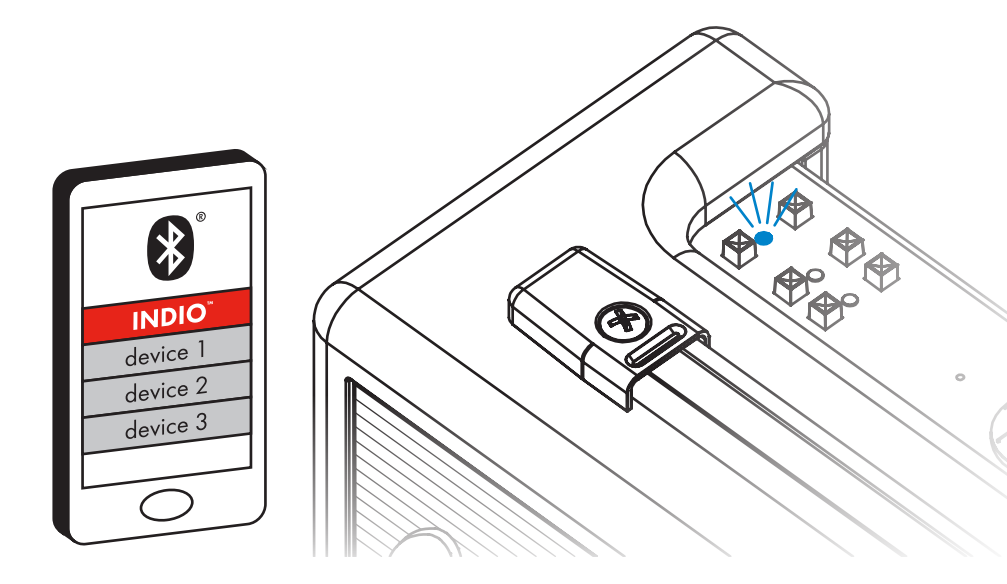


Connect to "Fender Indio" on your device.

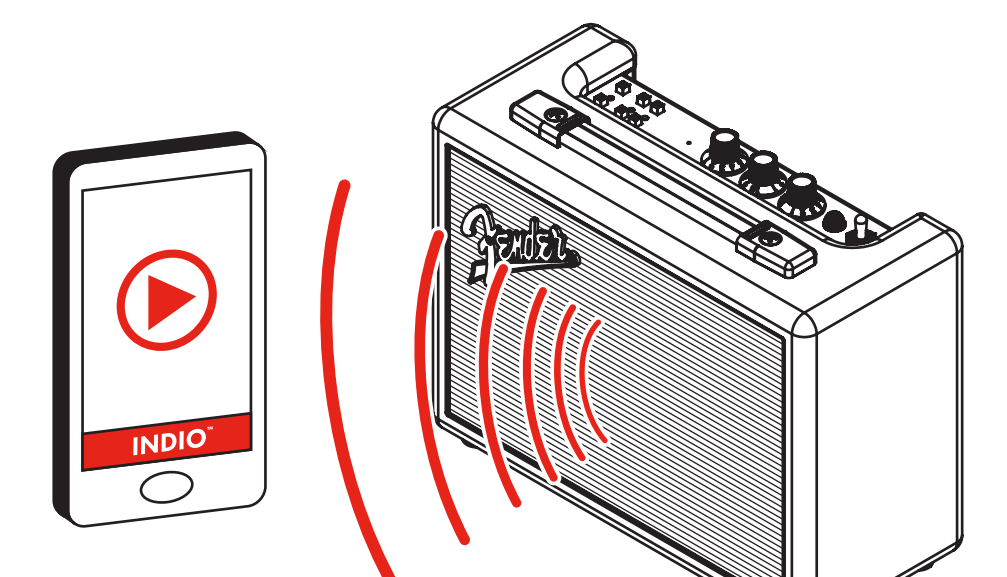


Play music.


USING THE VOICE BUTTON/FEATURE



The VOICE LED lights blue for incoming call.




Press VOICE button to answer, or press and hold the VOICE button to reject the call. Press the VOICE button again to end the call.




When not on a call, press the VOICE button to activate the voice assistant on your device.


PARTY/STEREO FUNCTIONALITY



With both speakers on, pair to one of the speakers. This will be the master speaker.




Press the DUO button on both speakers to pair to each other. The default mode is 'party', in which both speakers play left and right channel content.




In the 'party' mode, The DUO LED will flash alternately blue (left) and red (right).


PARTY/STEREO FUNCTIONALITY



To switch between 'party' and 'stereo' modes, press and hold the DUO button on the left speaker until the LED glows solid blue.




In 'stereo' mode, the left speaker will play the left content only (blue LED) and the right speaker will play the right channel content (red LED).




Tap the DUO button on either speaker to exit the DUO functionality mode.


PLAYBACK CONTROLS



The PLAY/PAUSE button pauses and starts the audio playback.




Press the PREVIOUS button to play the previous track on the playlist. Press and hold to rewind the current track.





Press the NEXT button for the next track, or press and hold to fast-forward current track.

CHARGING YOUR SPEAKER




The battery indicator on the rear panel shows the power level of the battery.





Use the provided adapter to charge your speaker. Steady red indicates its charged.

CHARGING YOUR AUDIO DEVICE



You can also use the speaker to charge your device using the USB port.

INSIDE

For more information, please refer to following website;

https://shop.fender.com/en/intl/start

Fender®

INDIO™

BLUETOOTH® SPEAKER



A PRODUCT OF:
FENDER MUSICAL INSTRUMENTS
17600 North Perimeter Drive, Suite 100
SCOTTSDALE, AZ. 85255 USA

AMPLIFICADOR DE AUDIO
IMPORTADO POR: Fender Ventas de México, S. de R.L. de C.V. Calle Huerta # 279, Int. A. Col. El Naranjo. C.P. 22785, Ensenada, Baja California, México.
RFC: FVM-140508-CI0 Servicio al Cliente: 01800 7887395, 01800 7887396, 01800 7889433

MADE IN CHINA

Fender®

INDIO™

BLUETOOTH® SPEAKER



QUICK START GUIDE

OUTSIDE