
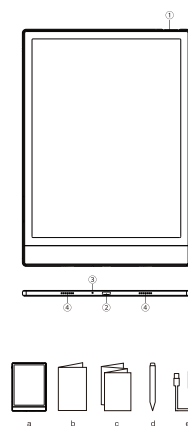


**BOOX** Note5+  
Quick Start Guide  
快速说明书

For further instructions, please learn from the pre-loaded User Manual or official website technical support.  
[www.boss.com](http://www.boss.com)

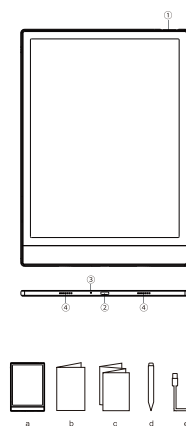

① Power      ② USB-C Port  
③ Mic      ④ Dual Speakers

a. BOOK Device      b. Warranty Card      c. Quick Start Guide  
d. Stylus Pen      e. USB-C Cable

**Turn on the device:** Hold down the power button for 2-3 second.

**Charging:** When the battery is low or the device can not be turned on, please connect your GOICK with a PC or an Adaptor to charge it. When the device is charging, the indicator shows red. When the battery is full charged, the indicator turns blue.

日本語

- ① 電源ボタン      ② USB-Cスロット  
③ デュアルマイク      ④ デュアルスピーカー
- a. BOX 本体      b. 保証書カード      c. クイックスタートガイド  
d. スタイラス      e. USB-C ケーブル

本体の電源を入れます。電源ボタンを2~3秒長押ししてください。

**充電：**電池の残量が少なく、充電が入らない場合に、BOXXデバイスにPCまたはアダプターに接続して充電してください。充電が完了すると、インジケータが赤くなって、充電中であることを表示します。十分に充電されると、バッテリー残量が100%になると、インジケータが青に変わります。

**ファームウェアアップデート：**アップデートインストールバックアップを本体トップメニューの「アップデート」にダウンロードするか、デバイスでOTAアップデートを行ってください。

詳細なセットアップを行うには、電源ボタンを秒程度長押しして下さい。

ユーザーマニュアルのフルバージョンは BOXX ウェブサイトで入手することができます。  
<https://www.boxx.com/download/>

### FCC Statement

This document was prepared by the FCC and the FCC staff. It is intended to provide information to the public and to the Commission. It is not intended to provide legal advice or to be used as a basis for legal action. The FCC staff is not responsible for the accuracy or completeness of the information contained in this document. The FCC staff is not responsible for the accuracy or completeness of the information contained in this document. The FCC staff is not responsible for the accuracy or completeness of the information contained in this document.

