Cover

正

反



AMIGO 7N

Quick Reference Guide

Please read the user manual before operating the TV box


Safety Instructions

WARNING!

- Presence of live parts inside the device! Do not open. Risk of electric shock!
- No parts should be repaired by users.
- Place the device on a flat, firm and stable surface. Do not put it on a carpet or rug.
- Place the device in a well-ventilated location to prevent the accumulation of internal heat.
- Protect the device from high temperatures, humidity, water and dust.
- Do not place any objects near your device that may damage it (e.g. liquid-filled objects or candles).
- Do not mix old and new batteries and Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cd, ni-mh, etc.) batteries.
- Operating Temperature: 0°C~40°C.

Accessory List

Please open the package and check the following accessories:

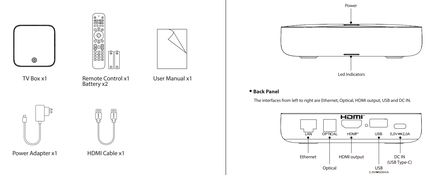

Hardware Structure


• Front Panel

There is a power button at the top and a Led indicator at the bottom.

• Back Panel

The interfaces from left to right are Ethernet, Optical, HDMI output, USB and DC IN.

Remote Control

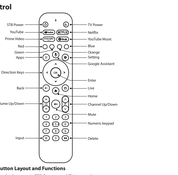

Remote Control Button Layout and Functions

• Row 1 (2 small circular buttons): STB Power and TV power button
Left: STB Power button – Used to turn the device on or off (also can wake the device from standby).
Right: TV power button – Infrared learning button, used to learn the power switch of the TV.

• Row 2 (4 horizontal pill-shaped buttons): YouTube, Netflix, Prime Video and YouTube Music button
Left: YouTube and Prime Video shortcut – Launches the YouTube app and Prime Video directly.
Right: Netflix and music shortcut – Launches the Netflix app and YouTube Music app directly.

• Row 3 (4 smallest circular buttons): 4 color button
From left to right: Red / Green / Orange / Blue button

• Row 4 (11 buttons): Directional buttons and 6 other buttons
Directional Ring – Up / Down / Left / Right navigation for menus and UI.
Middle: OK / Enter button – Confirms a selection or activates the focused item.
Top-left: App button – Used to open App list
Top-middle: Google Assistant button – Opens and use voice to search more.
Top-right: Setting button –Opens TV setting to set your TV
Bottom-left: Back button – Returns to the previous screen.
Bottom-middle: Home button – Returns to the home screen.
Bottom-right: Live to guide button – Returns to the TV screen

• Row 5 (3 buttons): Volume control, Channel control, and Mute button
Left: Volume control – Top is Volume Up, bottom is Volume Down. Both have tactile bumps for identification.
Right: Channel control – Top is Channel Up, bottom is Channel Down. Both have tactile bumps for identification.
Center circular button: Mute – Mutes or unmutes the audio output.

• Row 6 to 9 (12 buttons): Numeric keypad, Input and Delete button
9 numeric buttons (0–9) for channel or numeric entry. There is a raised blind spot on each side of the number 5.
Bottom-left: Input button –Infrared learning button, switches input source (HDMI, AV, etc.).
Bottom-right: Delete button –Used to delete the content entered.

Remote Control Usage Instructions

- Indicator Light: Press any keys and indicator light flashes and the indicator will flash quickly when the voltage is low.
- Volume Control Ring: Press the "OK + Volume ^ keys together on your Remote Control for 10 seconds.
- Google Assistant: Press the Google Assistant button and use your voice to search what's on now, change channels, control your TV, open apps, and more.


110mm

110mm

System Connection

Please refer to below instructions to connect TV, Power, Network and other devices.

Note: Please turn off all equipment before connecting.

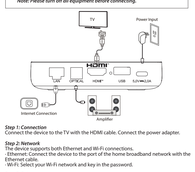

Step 1: Connection
Connect the device to the TV with the HDMI cable. Connect the power adapter.

Step 2: Network
The device supports both Ethernet and Wi-Fi connections.
- Ethernet: Connect the device to the port of the home broadband network with the Ethernet cable.
- Wi-Fi: Select your Wi-Fi network and key in the password.

Step 3: Setup
Follow the on screen instructions to set up your device.

Troubleshooting

• No display after power on?
Confirm your device connected to the TV well and set the correct HDMI Input from your TV configuration.
• TV connected but no sound?
Make sure your TV is not on mute and at low volume.
• Fail to connect to network?
Make sure the Ethernet cable is properly connected. Make sure Wi-Fi is functional and your box has a strong enough signal from your router.
• Remote Control Failure?
-Replace the battery of the remote control with a new one, and make sure it is placed in the right direction.
-Make sure the remote control is within the range of the TV box.
-Go to the Setting menu to unpair and re-pair the remote control.
• Please use our accessories to avoid any risk.

Accessibility

Make Android TV™ more accessible. You can use a screen reader, closed captions, Switch Access, and more to make your Android TV device more accessible.

Use a screen reader
- From the Android TV home screen, select Settings > Device Preferences > Accessibility.
- Select Talkback > Enable > OK.

Note: Privacy Notice for Talkback
When Talkback is enabled, private information such as passwords may be spoken aloud. Listening through the TV speakers may expose sensitive information to others nearby. To protect your privacy, we recommend using a Bluetooth listening device.
If you want to Connect Bluetooth devices to Android TV. Try this: From the Android TV home screen, select Settings > select Remote & accessories > select Pair remote or accessory. Make sure your device is in pairing mode, and then select Pair on the Bluetooth pairing request screen.

Change screen reader settings
- From the Android TV home screen, select Settings > Device Preferences > Accessibility.
- Select Talkback > Configuration.
- Change settings for speech volume, verbosity (such as keyboard echo and usage hints), and spoken passwords.

Tip: To find more options and settings for TalkBack, such as speech rate and intonation, in the Accessibility menu, select Text to speech.

Turn on closed captions
- From the Android TV home screen, select select Settings > Device Preferences > Accessibility > Captions.
- To show captions, turn on Display.
- Choose your options.

Turn on high contrast text
- From the Android TV home screen, select select Settings > Device Preferences > Accessibility.
- Turn on High contrast text.

Use accessibility shortcuts
Accessibility shortcuts are a quick way to turn on accessibility features. To use accessibility shortcuts, you first need to turn them on.
- From the Android TV home screen, select select Settings > Device Preferences > Accessibility.
- Select Enable accessibility shortcut. (By default, the shortcut turns on Talkback.)
- To change what's included in the shortcut, select Shortcut service.
- Choose an option and Select OK.

Tip: To use the shortcut, on your remote, press and hold the back arrow and down buttons at the same time for 3 seconds.

Control your Android TV with Switch Access
Switch Access lets you interact with your Android TV device using one or more switches. It can be helpful if you can't interact directly with your Android TV device. It can scan the items on your screen, highlighting each item in turn, until you make a selection.

- Connect an external switch device or keyboard to your Android TV device via USB or Bluetooth.
  a. USB: Connect the switch or keyboard to your Android TV device with a compatible USB cable.
  b. Bluetooth: From the Android TV home screen, select Settings > Remotes & accessories > Pair accessory. For more instructions, check the documentation for your switch or keyboard.
- Turn on Switch Access:
  a. From the Android TV home screen, select Settings > Device Preferences > Accessibility.
  b. Select Switch Access > Enable > OK.

Compliance

Google, Android TV, and YouTube are trademarks of Google LLC.

Dolby VISION ATMOS

Manufactured under license from Dolby Laboratories. Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation.

HDMI

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Netflix is a trademark of Netflix, Inc.

All brands contained herein are trademarks of their respective owners.

Product Details

Product Name: AMIGO 7N
Model Name: AMIGO 7N
Rating: 5.0V DC / 2.0A
Manufacturer / Importer: Amino Communications Ltd,1010 Cambourne Business Park, Cambourne, Cambridge, CB23 6DP, United Kingdom.
E-mail: info@amino.tv

Caution!

Risks of explosion if the battery is replaced by an incorrect type:
- Replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types)
- A battery from being left in a fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- Risk of Explosion if Battery is replaced by an Incorrect Type. Dispose of Used Batteries According to the Instructions.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.
Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

For AMIGO 7N:
The equipment complies with FCC Radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

For Bluetooth Control:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Caution!
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ISED Statement

English: This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
(1) This device may not cause interference.
(2) This device must accept any interference, including interference that may cause undesired operation of the device.
The digital apparatus complies with CAN ICES(B)/NMB(B).

French: L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :
(1) L'appareil ne doit pas produire de brouillage;
2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

3150MHz-5250MHz product for indoor use only.
Produit de 5150 MHz à 5250 MHz réservé à une utilisation en intérieur seulement.

For AMIGO 7N:
English: The device has been evaluated to meet general RF exposure requirement. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

French: L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF. Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps.


For Bluetooth Control:
English: The device has been evaluated to meet general RF exposure requirement. This equipment should be installed and operated with minimum distance 0cm between the radiator & your body.

French: L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF. Cet équipement doit être installé et utilisé à une distance minimale de 0 cm entre le radiateur et votre corps.

Customer Support

Use our electronic user manual easily and conveniently. In the electronic manual, you can activate read mode and quickly search for keywords. You will also find further information on how to use this product. You can access it directly by scanning the QR code below, or via the following website link:
Website: https://www.amino.tv/resources/datasheets-user-guides/Amigo7N-NA-UserGuide.pdf

折页方式

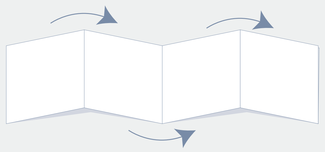

折叠方式示意图

技术要求：
1）尺寸公差±1mm
2）颜色△E<2
3）满足最新版欧盟包材指令要求(RoHS包材要求+Reach）
4）印刷后封面机器图勿出现白点
5）使用纯植物油墨，符合法国油墨标准与法国环保法规+TPCH要求

孙景 首发	2025-12-31
DESCRIPTION 备注说明	DATE 日期
历史修订版本记录	
华曦达科技股份有限公司	
资料名称：DV9651-Manual	单位:mm
物料编号：460900788	**工艺描述汇总：** 说明书,110x110mm,80g书写纸,折页
设计：	
校对：	
审核：	
会签：	
批准：	

Size	Scale	Rev
A0	1:1	