



FORTNITE

SPECIAL EDITION WIRELESS CONTROLLER

ÉDITION SPÉCIALE
MANETTE
SANS FIL

USER MANUAL | MANUEL DE L'UTILISATEUR |
MANUAL DE USUARIO | BEDIENUNGSANLEITUNG | MANUALE PER L'USO | MANUAL DO USUÁRIO



**ENGLISH**

- Controller Button Map... **3**
- Connecting **4**
- Charging **6**
- Advanced Gaming Buttons **7**
- Profiles **9**
- Troubleshooting **10**

**DEUTSCH**

- Controller-Tastenbelegung **3**
- Aufladen **4**
- Koppeln **4**
- Tasten für erweiterte Spielfunktionen **5**
- Lumectra-Beleuchtung .. **6**
- Support **7**

**FRANÇAIS**

- Carte des boutons de la manette **13**
- Connexion **14**
- Chargement **16**
- Boutons de jeu programmables **17**
- Profils **19**
- Dépannage **20**

**ITALIANO**

- Mappa pulsanti del controller..... **3**
- Ricarica **4**
- Associazione **4**
- Pulsanti di gioco avanzati **5**
- Illuminazione Lumectra .. **6**
- Assistenza **7**

**ESPAÑOL**

- Sincronización..... **3**
- Carga **4**
- Sincronización..... **4**
- Botones de control avanzado de juego **5**
- Iluminación Lumectra **6**
- Ayuda **7**

**PORTUGUÊS**

- Mapa de botões do comando **3**
- Carregamento **4**
- Emparelhamento **4**
- Botões de jogo avançados **5**
- Iluminação Lumectra **6**
- Apoio..... **7**

CONTROLLER BUTTON MAP



BOX CONTENTS

- Controller
- 2.4 GHz USB Wireless Adapter
- 10 ft. / 3 m USB-C® to USB-A Cable
- User Manual

CONNECTING VIA WIRED USB MODE

1. Connect the included USB-C Cable to the USB-C port at the top of the controller and connect the other end to an available USB port on the Xbox Series X|S console or Windows 10/11 PC.
2. If controller is off, press the Xbox button to turn on (LED will illuminate WHITE).
3. For player and controller assignment, refer to the Xbox user manual.



CONNECTING VIA WIRELESS MODE: 2.4 GHZ

1. Insert the wireless USB adapter into an available USB port on the Xbox Series X|S console or Windows 10/11 PC.
2. If controller is off, press the Xbox button (icon) to turn on (LED will flash WHITE).
3. 2.4 GHz should be paired to the Xbox Wireless Controller by default. If it is not paired, please follow the instructions below to sync the controller to the adapter:
 - a. Press and hold the SYNC button on top of the controller for 3 seconds to enter pairing mode (LED will flash WHITE rapidly).
 - b. Repeat this step using the SYNC button on the top of the 2.4 GHz adapter.
 - c. Both controller and adapter will flash several times and then pair. Once successfully paired both LEDs on controller and adapter will be solid WHITE.




CHARGING CONTROLLER VIA USB

For best results, fully charge controller prior to first use.

1. Connect the included USB-C cable to the USB-C port at the top of the controller and connect the other end to an available USB port on the Xbox Series X|S console or Windows 10/11 PC.
2. When charging, the Battery Status LED on the top housing will flash AMBER.
3. When fully charged the LED will be solid WHITE.
4. LED will flash RED when battery is low.


TRIGGER LOCK ADJUSTMENT

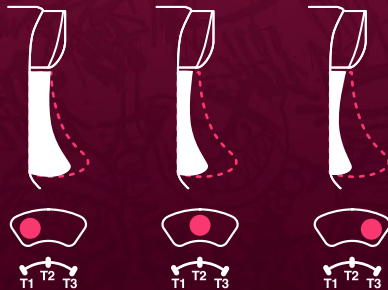

PROGRAMMING THE ADVANCED GAMING BUTTONS

- Press the MAP AGB Button on the back of the controller for 3 seconds.
- The Xbox Button LED ring will flash, signaling the controller is in assign mode.
- Press the button (A/B/X/Y/LT/RT/LB/RB/Left Stick Press/Right Stick Press/D-pad) you wish to assign to an Advanced Gaming Button.
- Then press the Advanced Gaming Button (AGR1/AGR2 or AGL1/AGL2) that you wish to perform that function. The Xbox Button LED ring will turn solid WHITE, signaling the Advanced Gaming Button has been set. Repeat for the remaining Advanced Gaming Buttons.

NOTE: Advanced Gaming Button assignments will remain in memory even after disconnected.

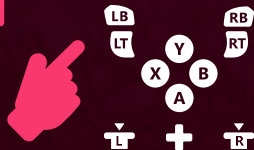A**B****C****D**

RESETTING THE ADVANCED GAMING BUTTONS

- Hold the MAP AGB Button down for 2-3 seconds. The Xbox button LED will slowly flash, signaling the controller is in assign mode.
- Press the previously assigned Advanced Gaming Button for 5 seconds, and the function will be cleared.

PROFILE SETTINGS

A. Quick-tap the MAP AGB button to cycle through profile settings for T1/T2/T3 trigger locks. The Xbox Fortnite Wireless Controller can store up to 3 profiles at a time locally.

The first 3 profiles set by default adjust the deadzone settings for the triggers.

- Profile 1 is 99% deadzone and is the quickest maximum value setting (use for T1 trigger lock).
- Profile 2 is 50% deadzone (use for T2 trigger lock).
- Profile 3 is no deadzone / full-throw trigger pull (use for T3 trigger lock).

Each press of the PRO/MAP button will change to the next profile and then repeat the cycle: **3 → 2 → 1 → 3**

B. The Xbox button LED ring will quickly flash 3 times in the corresponding profile color to signal a profile has been changed and then return to the current LED mode and color settings.

C. To clear the profiles or change the settings, please use the PowerA Gamer HQ app. The above 3 default settings will be saved as legacy settings (Profile 1 / Profile 2 / Profile 3) in the PowerA Gamer HQ app. The app can store hundreds of custom profile settings that can be pushed to the controller, but the controller can only store 3 at any given time chosen from the app.



EN TROUBLESHOOTING

PROBLEM: My controller will not power on.

SOLUTION: Confirm the controller is fully charged. Plug in to recharge as needed.

PROBLEM: My controller is not connecting to my 2.4 GHz wireless adapter.

SOLUTION: Press and hold the SYNC button on top of controller for 3 seconds to enter pairing mode (LED ring will flash rapidly). Ensure the 2.4GHz wireless adapter is plugged into your console or PC USB port. Press and hold the SYNC button on the top of the wireless adapter. The LEDs on controller and adapter should each flash several times and then when successfully paired stay solid WHITE.

PROBLEM: My wireless controller is not pairing.

SOLUTION 1: Confirm the battery is charged by following the charging instructions listed above.

SOLUTION 2: Confirm you are following the Wireless pairing process.

SOLUTION 3: Insert paper clip into the Reset Hole as marked above to reset controller to factory settings. After resetting, follow the pairing to wireless adapter instructions listed above.

For latest FAQs, visit www.powera.com/support

TWO-YEAR LIMITED WARRANTY

For warranty details or support with your authentic PowerA accessories, please visit www.powera.com/support

WARRANTY AGAINST DEFECTS, AUSTRALIA & NEW ZEALAND CUSTOMERS

This product is provided with a 2-year warranty against defects in manufacturing or materials from the date of purchase. ACCO Brands will either repair or replace a faulty or defective product subject to the conditions of this warranty. Claims under this warranty must be made to the place of purchase within the warranty period with proof of purchase by the original purchaser only. Expenses associated with a warranty claim are the responsibility of the consumer. Conditions of this warranty are on our website: PowerA.com/warranty-ANZ

This warranty is provided in addition to other rights or remedies available to you under the law. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

DISTRIBUTOR CONTACT DETAILS

AUSTRALIAN CUSTOMERS:
ACCO Brands Australia Pty Ltd
Locked Bag 50, Blacktown BC, NSW 2148
Phone: 1300 278 546
Email: consumer.support@powera.com

NEW ZEALAND CUSTOMERS:
ACCO Brands New Zealand Limited
PO Box 11-677, Ellerslie, Auckland 1542
Phone: 0800 800 526
Email: consumer.support@powera.com

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-003(B)/NMB-003(B)

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment.

RF EXPOSURE STATEMENT

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

REGIONAL COMPLIANCE SYMBOLS

More information available via web-search of each symbol name.



Waste Electrical and Electronic Equipment (WEEE): Electrical and electronic devices and batteries contain materials and substances that can have damaging effects on human health and the environment. This symbol indicates that this device and the battery must not be treated as household waste and must be collected separately. Dispose of the device via a collection point for the recycling of waste electrical and electronic equipment within the EU, UK and in other European countries that operate separate collection systems for waste electrical and electronic equipment and batteries. By disposing of the device and the battery in the proper manner, you help to avoid possible hazards for the environment and public health that could otherwise be caused by improper treatment of waste equipment. The recycling of materials contributes to the conservation of natural resources.



Conformit Europene aka European Conformity (CE): A declaration from the manufacturer that the product meets applicable European Directives and Regulations for health, safety, and environmental protection.



UK Conformity Assessment (UKCA): A declaration from the manufacturer that the product meets applicable UK Regulations for health, safety, and environmental protection.



The **RCM** (Regulatory Compliance Mark) indicates that the product complies with the relevant Australian and New Zealand electrical safety, electromagnetic compatibility (EMC) and related requirements.

EU/UK DECLARATION OF CONFORMITY

Hereby, ACCO Brands USA LLC declares the wireless controller is in compliance with Directive 2014/53/EU and UK Radio Equipment Regulation 2017, as well as other essential requirements and relevant provisions of EU directives and UK legislation. The full text of the declaration of conformity is available at the following internet address: **[PowerA.com/compliance](https://www.powera.com/compliance)**

WARNING: READ BEFORE PLAYING

A very small percentage of individuals may experience epileptic seizures when exposed to certain light patterns or flashing lights. Exposure to certain patterns or while playing video games, may induce an epileptic seizure in these individuals. Certain conditions may induce previously undetected epileptic symptoms even in persons who have no history for prior seizures of epilepsy. If you, or anyone in your family, have an epileptic condition, consult your physician prior to playing. If you experience any of the following symptoms while playing a video game – dizziness, altered vision, eye or muscle twitches, loss of awareness, disorientation, any involuntary movement, or convulsions – **IMMEDIATELY** discontinue use and consult with your physician before resuming play.

MOTION WARNING

Playing video games may cause muscle, joint, skin, or eye discomfort. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, skin irritation or eyestrain:

- Avoid excessive play. Take a 10- to 15-minute break every hour, even if you don't think you need it. Parents should monitor their children for appropriate play.

- If your hands, wrists, arms, or eyes become tired or sore while playing, or if you feel symptoms such as tingling, numbness, burning, or stiffness, stop and rest for several hours before playing again.
- If you continue to have any of the above symptoms or other discomfort during or after play, stop playing and see a doctor.

BATTERY WARNING

- Do not attempt to repair the Li-ion battery yourself—you may damage the battery, which could cause overheating, fire, and injury.
- The Li-ion battery in your device should be serviced or recycled by PowerA or an authorized provider and must be recycled or disposed of separately from household waste.
- Dispose of batteries according to your local environmental laws and guidelines.
- Do not use or leave the product containing rechargeable batteries exposed to very high or very low temperature (e.g. at strong direct sunlight or in a vehicle in extremely hot or extremely cold weather), or in an environment with extremely low air pressure can result in an explosion, fire, or the leakage of flammable liquid or gas.
- Do not use a device containing rechargeable batteries in an environment with high levels of static electricity. Excessive static electricity can impair the batteries' internal safety measures, increasing the risk of overheating or fire.
- If liquid leaking from a battery pack comes into contact with your eyes, DO NOT RUB EYES! Immediately flush eyes thoroughly with clean running water and seek medical attention to prevent injury to eyes.
- If the battery gives off an odor, generates heat, or in any way appears abnormal during use, recharging or storage, immediately remove it from any charging device and place it in a sealed fire-proof container such as a metal

box, or in a safe location away from people and flammable items.

- Discarded batteries may cause fire. Do not heat the controller or battery, or place either in or near fire.

MANUFACTURED FOR

ACCO Brands USA LLC, 4 Corporate Drive, Lake Zurich, IL 60047

ACCOBRANDS.COM | POWERA.COM | MADE IN CHINA

ADDITIONAL LEGAL

© 2024 ACCO Brands. All Rights Reserved. PowerA and PowerA Logo are trademarks of ACCO Brands.

Microsoft, Xbox, Xbox "Sphere" Design, Xbox Series X|S, Xbox One, and Windows 10/11 are trademarks of the Microsoft group of companies. All other trademarks are the property of their respective owners.

USB-C* is a registered trademark of USB Implementers Forum.

PATENTS

<https://www.accobrand.com/PATENTS/>

WIRELESS SPECIFICATIONS FOR EU & UK COMPLIANCE

Frequency Range: 2.4 – 2.4835 GHz

Max E.I.R.P.: <10 dBm



CARTE DES BOUTONS DE LA MANETTE



CONTENU DE LA BOÎTE

- Manette
- Câble USB-C® vers USB-A de 3 m
- Adaptateur sans fil USB 2,4 GHz
- Manuel de l'utilisateur

CONNEXION VIA MODE USB FILAIRE

1. Connectez le câble USB-C inclus au port USB-C situé sur le haut de la manette et reliez l'autre connecteur à un port USB disponible sur la console Xbox Series X|S ou le PC Windows 10/11.
2. Si la manette est éteinte, appuyez sur la touche Xbox pour l'allumer (la LED s'allumera en BLANC).
3. Pour affecter une manette à un joueur, reportez-vous au manuel d'utilisation de Xbox.



CONNEXION VIA MODE SANS FIL : 2,4 GHZ

1. Insérez l'adaptateur USB sans fil dans un port USB disponible sur la console Xbox Series X|S ou le PC Windows 10/11.
2. Si la manette est éteinte, appuyez sur la touche Xbox (icône) pour l'allumer (la LED clignotera en BLANC).
3. 2,4 GHz doivent être synchronisés à la manette sans fil Xbox par défaut. En l'absence de synchronisation, veuillez suivre les instructions ci-dessous afin de synchroniser la manette et l'adaptateur :
 - a. Appuyez sur le bouton SYNC sur le haut de la manette durant 3 secondes pour activer le mode synchronisation (la LED clignotera en BLANC rapidement).
 - b. Répétez cette étape en utilisant le bouton SYNC en haut de l'adaptateur 2,4 GHz.
 - c. La manette et l'adaptateur clignoteront plusieurs fois avant de se synchroniser. Une fois la synchronisation réussie, les LED de la manette et de l'adaptateur sont en BLANC.




CHARGE DE LA MANETTE VIA USB

Pour obtenir de meilleurs résultats, chargez entièrement la manette avant la première utilisation..

1. Connectez le câble USB-C inclus au port USB-C situé sur le haut de la manette et reliez l'autre connecteur à un port USB disponible sur la console Xbox Series X|S ou le PC Windows 10/11.
2. Lors de la charge, la LED d'état de la batterie située sur le logement supérieur clignote en ORANGE.
3. Lorsque la charge est complète, la LED est en BLANC.
4. La LED clignote en ROUGE lorsque le niveau de batterie est faible.

RÉGLAGE DU VERROUILLAGE DE LA GÂCHETTE

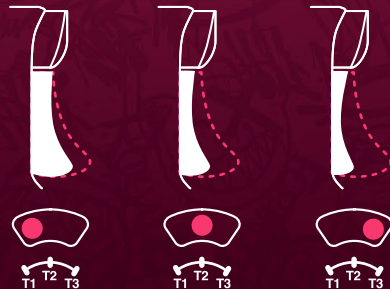

PROGRAMMATION DES BOUTONS DE JEU PROGRAMMABLES

- Appuyez sur le bouton MAP AGB situé à l'arrière de la manette pendant 3 secondes.
- L'anneau LED de la touche Xbox clignote, indiquant que la manette est en mode d'affectation.
- Appuyez sur le bouton (A/B/X/Y/LT/RT/LB/RB/pression sur le bouton gauche/pression sur le bouton droit/croix directionnelle) pour le paramétrer comme bouton de jeu programmable.
- Appuyez ensuite sur le bouton de jeu programmable (AGR1/AGR2 ou AGL1/AGL2) auquel vous voulez affecter la fonction. L'anneau LED de la touche Xbox sera en BLANC, indiquant que le bouton de jeu programmable a été configuré. Recommencez pour les boutons de jeu programmables restants.

REMARQUE : les affectations des boutons de jeu programmables restent en mémoire même lorsque le dispositif est déconnecté.


A



B



C

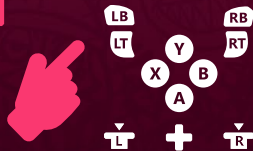

D



RÉINITIALISATION DES BOUTONS DE JEU PROGRAMMABLES

- Maintenez le bouton MAP AGB enfoncé pendant 2 à 3 secondes. La LED de la touche Xbox clignote lentement, indiquant que la manette est en mode d'affectation.
- Maintenez appuyé le bouton de jeu programmable préalablement affecté pendant 5 secondes et la fonction est supprimée.

PARAMÈTRES DU PROFIL

A. Appuyez rapidement sur le bouton MAP AGB pour faire défiler les paramètres du profil pour les verrouillages de gâchette T1/T2/T3. La manette sans fil Xbox Fortnite peut localement stocker jusqu'à 3 profils à la fois.

Les 3 premiers profils définis par défaut ajustent les paramètres de la zone inerte des gâchettes.

- Le Profil 1 correspond à une zone inerte à 99 % et à la valeur maximale la plus rapide (à utiliser pour le verrouillage de la gâchette T1).
- Le Profil 2 correspond à une zone inerte à 50 % (à utiliser pour le verrouillage de la gâchette T2).
- Le Profil 3 correspond à une absence de zone inerte / distance d'activation complète de la gâchette (à utiliser pour le verrouillage de la gâchette T3).

Chaque appui sur le bouton PRO/MAP permettra d'accéder au profil suivant, puis de revenir au début : **3 → 2 → 1 → 3**

B. L'anneau LED de la touche Xbox clignotera rapidement 3 fois dans la couleur correspondant au profil afin de signaler qu'un profil a été modifié, avant de revenir aux paramètres de mode et couleur LED actuels.

C. Pour effacer les profils ou modifier les paramètres, veuillez utiliser l'application Gamer HQ de PowerA. Les 3 paramètres par défaut ci-dessus seront sauvegardés en tant que paramètres hérités (Profil 1 / Profil 2 / Profil 3) dans l'application Gamer HQ de PowerA. L'application peut stocker des centaines de paramètres de profils personnalisés qui peuvent être transmis à la manette, mais cette dernière ne peut en stocker que 3 à la fois, choisis dans l'application.



DÉPANNAGE

PROBLÈME : Ma manette ne s'allume pas.

SOLUTION : Vérifiez que la manette est entièrement chargée. Si besoin, branchez-la pour la recharger.

PROBLÈME : Ma manette ne se connecte pas à mon adaptateur sans fil 2,4 GHz.

SOLUTION : Appuyez sur le bouton SYNC en haut de la manette durant 3 secondes pour activer le mode synchronisation (l'anneau LED clignotera rapidement). Assurez-vous que l'adaptateur sans fil 2,4 GHz est branché sur le port USB de votre console ou de votre PC. Maintenez appuyé le bouton SYNC situé en haut de l'adaptateur sans fil. Les LED de la manette et de l'adaptateur doivent chacune clignoter plusieurs fois puis, une fois la synchronisation réussie, rester en BLANC.

PROBLÈME : Ma manette sans fil ne parvient pas à effectuer la synchronisation.

SOLUTION 1 : Vérifiez que la batterie est chargée en suivant les instructions de charge listées ci-dessus.

SOLUTION 2 : Vérifiez que vous suivez bien le processus de synchronisation sans fil..

SOLUTION 3 : Insérez un trombone dans le trou de réinitialisation comme indiqué ci-dessus pour réinitialiser la manette aux paramètres d'usine. Après la réinitialisation, suivez les instructions de synchronisation avec l'adaptateur sans fil indiquées ci-dessus.

Pour consulter les dernières Questions fréquentes, rendez-vous sur **www.powera.com/support**

GARANTIE DE DEUX ANS

Pour plus de détails sur la garantie ou pour obtenir une assistance pour vos accessoires PowerA d'origine, veuillez consulter le site **www.powera.com/support**

MISE EN GARDE AU SUJET DES MOUVEMENTS

Les jeux vidéo peuvent provoquer des douleurs des muscles, des articulations, de la peau ou des yeux. Respectez les consignes suivantes pour éviter les problèmes tels que tendinite, syndrome du canal carpien, irritation cutanée ou fatigue oculaire:

- Evitez de jouer trop longtemps. Faites une pause de 10 à 15 minutes après chaque heure de jeu, même si vous n'en ressentez pas la nécessité. Les parents doivent s'assurer que leurs enfants jouent de manière appropriée.
- Si vous ressentez de la fatigue ou une douleur dans vos mains, poignets, bras ou yeux pendant le jeu, ou des symptômes tels que picotements, engourdissement, brûlure ou raideur, arrêtez de jouer et reposez-vous pendant plusieurs heures avant de reprendre le jeu.
- Si l'un des symptômes cités persiste ou si vous ressentez une gêne prolongée pendant ou après le jeu, arrêtez de jouer et consultez un médecin.

SERVICE CLIENTÈLE

Pour obtenir une assistance pour vos accessoires PowerA d'origine, veuillez consulter la rubrique **PowerA.com/Support**.

CAN ICES-003(B)/NMB-003(B)

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

SYMBOLES DE CONFORMITÉ RÉGIONALE

De plus amples informations sont disponibles en recherchant chaque nom de symbole.



Déchets d'équipements électriques et électroniques (**DEEE**) : Les appareils électriques et électroniques contiennent des matériaux et des substances qui peuvent avoir des effets néfastes sur la santé humaine et l'environnement. Ce symbole indique que cet appareil ne doit pas être traité comme un déchet municipal non trié, mais doit être collecté séparément. Éliminez l'appareil via un point de collecte pour le recyclage des déchets d'équipements électriques et électroniques dans l'UE, au Royaume-Uni et dans d'autres pays européens qui exploitent des systèmes de collecte séparés pour les déchets d'équipements électriques et

électroniques. En éliminant l'appareil de manière appropriée, vous contribuez à éviter les risques potentiels pour l'environnement et la santé publique qui pourraient autrement être causés par un traitement inapproprié des déchets d'équipement. Le recyclage des matériaux contribue à la conservation des ressources naturelles.



Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !



Conformité Européenne aka European Conformity (**CE**) : A declaration from the manufacturer that the product meets applicable European Directives and Regulations for health, safety, and environmental protection.

UE/UK DÉCLARATION DE CONFORMITÉ

Par la présente, ACCO Brands USA LLC déclare que la manette sans fil est conforme à la Directive 2014/53/UE et au Règlement sur les équipements radio de 2017 au Royaume-Uni, ainsi qu'à d'autres exigences essentielles et dispositions pertinentes des directives de l'UE et de la législation du Royaume-Uni. Le texte complet de la déclaration de conformité est disponible à l'adresse Internet suivante : PowerA.com/compliance

AVERTISSEMENT : À LIRE AVANT DE JOUER

Une très faible proportion d'individus est susceptible d'être victime de crises d'épilepsie si elle se trouve exposée à certains types de stimuli lumineux ou de lumières clignotantes. L'exposition à ces stimuli au cours d'un jeu vidéo peut provoquer des crises d'épilepsie chez ces individus. Sous certaines conditions, même des personnes ne présentant aucun antécédent d'épilepsie peuvent être sujettes à des crises ou à des symptômes épileptiques. Si vous-même ou une personne de votre famille possédez des antécédents d'épilepsie, veuillez consulter un médecin avant de jouer. Si, au cours de votre session de jeu, vous ressentez des vertiges, des troubles de la vision, des spasmes musculaires ou oculaires, une perte de conscience, de la confusion ou des mouvements involontaires, arrêtez IMMÉDIATEMENT de jouer et consultez un médecin avant toute utilisation ultérieure.

AVERTISSEMENT À PROPOS DE LA BATTERIE

- N'essayez pas de réparer vous-même la batterie Li-ion ; vous pourriez l'endommager et provoquer une surchauffe, entraînant ainsi un risque d'incendie et de blessures.

- La batterie Li-ion de votre appareil doit être entretenue ou recyclée par PowerA ou un fournisseur agréé, et doit être recyclée ou éliminée séparément des ordures ménagères. Jetez les piles conformément aux lois et directives environnementales locales.
- N'utilisez pas ou ne laissez pas un appareil contenant des batteries Li-ion dans un environnement où la température est élevée (par exemple, en plein soleil ou dans un véhicule par temps chaud). Des températures élevées peuvent provoquer une surchauffe ou un incendie des batteries, affectant ainsi négativement leurs performances et leur longévité.
- N'utilisez pas un appareil contenant des batteries Li-ion dans un environnement à haut niveau d'électricité statique. Un excès d'électricité statique peut altérer les dispositifs internes de sécurité des batteries, augmentant ainsi les risques de surchauffe ou d'incendie.
- Si la batterie dégage une odeur, génère de la chaleur ou semble anormale de quelque manière que ce soit pendant l'utilisation, la recharge ou le stockage, retirez-la immédiatement de tout dispositif de charge et placez-la dans un récipient hermétique ignifuge tel qu'une boîte en métal ou dans un endroit sûr, loin des personnes et des objets inflammables.
- Les piles jetées peuvent provoquer un incendie. Ne chauffez pas la manette ou la batterie, et ne les placez pas dans ou à proximité d'un feu.

FABRIQUÉ POUR

ACCO Brands USA LLC, 4 Corporate Drive, Lake Zurich, IL 60047

ACCOBRANDS.com | POWERA.com | FABRIQUÉ EN CHINE

MENTION JURIDIQUE SUPPLÉMENTAIRE

© ACCO Brands, 2024. Tous droits réservés. PowerA ainsi que le logo de PowerA sont des marques de commerce de ACCO Brands.

Microsoft, Xbox, Xbox «Sphere» Design, Xbox Series X|S, Xbox One et Windows sont des marques commerciales du groupe de sociétés Microsoft. Toutes les autres marques sont la propriété de leurs propriétaires respectifs.

USB-C® est une marque déposée d'USB Implementers Forum.

PATENTS

<https://www.accobrand.com/PATENTS/>

CARACTÉRISTIQUES SANS FIL FOR EU & UK COMPLIANCE

Gamme de fréquences : 2,4 – 2,4835 GHz

PIRE maximum : < 10 dBm



FORTNITE



ACCO Brands, 4 Corporate Drive, Lake Zurich, IL 60047

accobrand.com | powera.com | Made in China

MODEL: XBGPSWLI