

User's Manual

Congratulations on your new purchase of a Headrest Entertainment system
Please take a moment to fully review this owner's manual throughly prior to the initial operation, which will provide you with the best understanding to preperly operate your new Headrest Entertainment system

Description of Buttons




ASPECT	Adjust screen aspect ratio as 16:9 and 4:3
EXIT	Exit from the NENU or return to previous folder
EJECT	Eject the Disc from the unit
PREV	Previous chapter or move up on USB/SD mode
NEXT	Next chapter or move down on USB/SD mode
DIMMER	Dimmer ON and OFF
V.SEL	Select Video mode from DVD, USB, SD, AV and AV 2
POWER	Power ON and OFF
PLAY	Play or pause the file on the disc or USB/SD
STOP	Stop playing the file on the disc or USB/SD



How to change VIDEO Sources

This unit has 5 different video modes..DVD, USB, SD, AV, AV2



1. DVD
1) Put DVD or CD on the slot located on Right side panel
2) Press V.SEL button on the unit or Remote to move cursor to DVD on the screen
3) Select desired features using Play button the on unit or Enter button on the Remote
4) Press "PLAY" button on the unit or remote to play & pause the file
5) Press "STOP" button on the unit or remote to stop paying the file
6) Press "PREV", "NEXT" button on the unit or remote to go to PREV file or NEXT file
7) Press " REW" or "FF" button on the unit or remote to rewind or fast forward
8) Press "Eject" button on the unit or remote to take the DISC out from the unit

2. USB
1) Put USB memory on the port located on left side panel
2) Press V.SEL button on the unit or Remote to move cursor to USB on the screen
3) Select desired features using Play button the on unit or Enter button on the Remote
4) Press "PLAY" button on the unit or remote to play & pause the file
5) Press "STOP" button on the unit or remote to stop paying the file
6) Press "PREV", "NEXT" button on the unit or remote to go to PREV file or NEXT file
7) Press "EXIT" button on the unit or remote to move to previous folder or screen

3. SD
1) Put SD memory on the slot located on left side panel
2) Press V.SEL button on the unit or Remote to move cursor to SD on the screen
3) Select desired features using Play button the on unit or Enter button on the Remote
4) Press "PLAY" button on the unit or remote to play & pause the file
5) Press "STOP" button on the unit or remote to stop paying the file
6) Press "PREV", "NEXT" button on the unit or remote to go to PREV file or NEXT file
7) Press "EXIT" button on the unit or remote to move to previous folder or screen

4. AV
1) AV input locate on the left side panel of the unit
2) You can simply connect Portable or Handheld devices to this AV input

5. AV 2
1) AV2 input locate on the top left side of the unit (Connector to RCA cable)
2) This Input designed for slove external devices such as TV tuner or Game

* Audio Out
1) Audio output located on RCA cable on the top of the unit
2) This output designed for extra screen on the car

Description of Remote Control



1	POWER	Power On/Off
2	MENU	Menu display On/Off
3	ASPECT	4:3, 16:9 changes
4	V.SEL	Video Mode selection
5	DIMMER	Dimmer On/Off
6	CH.LIST	DTV use only
7	SEARCH	Search Target Position on the DVD or Media File
8	EPG	DTV Use Only
9	MUTE	Mute On/Off
10	▲	Cursor Up
11	◀	Cursor Left
12	▶	Cursor Right
13	▼	Cursor Down
14	EXIT	EXIT from Folder or MENU
15	ENTER	Function select
16	⏯	Play & Pause
17	■	Stop
18	SET-UP	DVD Menu Set-up
19	INFO	Information of current Playing File or Disc
20	REPEAT	Repeat playing of currently selected File
21	⏪	Fast Forward
22	⏩	Rewind
23	⏮	Previous Chapter
24	⏭	Next Chapter
25	1~0 Keys	Number keys
26	ZOOM	X2,X3,X4 times ZOOM up, 1/2, 1/3, 1/4 times ZOOM Down
27	ANGLE	Angle adust of Picture (Only selected file or Disc)
28	DVD TITLE	Move to DVD TITLE Menu
29	DVD ROOT	Move to DVD ROOT Menu
30	SUB-TITLE	Sub-Title selection
31	AUDIO	Audio Mode For Mono, Mono Left, Mono Rihgt and Stereo

Menu

Color

Color		
Brightness		50
Contrast		50
Hue		50
Saturation		50
Sharpness		0
Enter:Enter^v Select-->AdjustExit: Exit		

Adjust screen brightness from 0 ~ 100 (Default setting is 50)
Adjust screen brightness from 0 ~ 100 (Default setting is 50)
Adjust screen Hue from 0 ~ 100 (Default setting is 50)
Adjust Saturation from 0 ~ 100 (Default setting is 50)
Adjust sharpness from 0 ~ 10 (Default setting is 0)

OSD

Language	English	
H Position		50
V position		50
OSDTimeout	Off	
Transparent	Off	
Enter:Enter^v Select-->AdjustExit: Exit		

Choose language from English, Chinese, French, Spanish, Korean, Russian
Adjust MENU box position up and down
Adjust MENU box position left and right
Adjust timeout of OSD from 5, 10, 15, 20, 25, 30, 35, 40, 45, 50, 55, 60, Off (Default is 10)
Adjust Transparent of MENU box from1,2,3,4,5,6,7,Off (Default is Off)

Function

Display Ratio	16:9
Reset	

Adjust aspect ratio as 16:9, 4:3, Auto (Default is 16:9)
Reset the MENU level as factory setting

Sound

FMTX	Off
IR	On

Adjust FM TX from 88.1MHz~107.9MHz and Off. (Default is Off)
On or Off the IR function for wireless headphone (Default is On)

Set-up

SET-UP page is consist with 4 different settings. It's General Set up page, Audio Set up page, Video Set up page and Preference page
* Preference page only able to OPEN when DVD is completely "STOP" or "No Disc" position When DVD is playing or only temporary stop, "Preference page" will not able to reach.
Please press "STOP" 2 times tomake Disc completely stop or OPEN Monitor flip to reach "Preference page"

1. General Set up Page
Please use ◀,▶ ,▼ ,▲ buttons and ENTER button to go inside of detail MENU and exit from detail menu

MENU	DetailSelection	Default Setting
TV Display	Select Normal/PS,Normal LB or Wide	Normal/LB/Wide
Angle Mark	Select On or Off	ON
OSD Language	Select one Language.&Languages are available English, Chinese,French,German,Italian,Spanish,Portuguese and Russian.	English
Caption	Select On or Off	ON
Screen Saver	Select On or Off	ON
Last Memory	Select On or Off	ON

2. Audio Set up Page

MENU	Detail Selection	Default Setting
Speaker Set up	Select LT/RT or Stereo	Stereo

3. Video Set up Page

MENU	Detail Selection	Default Setting
Brightness	-16~+16	00
Contrast	-16~+16	00
Hue	-9~+9	00
Saturation	-9~+9	00


4. Preference Set up Page

MENU	DetailSelection	Default Setting
TV Dype	Select PAL TV,Multi, NT SCTV	Multi
Audio	Select Audio Langage from English,French,Spanish,Romania or Others	English
Subtitle	Select Audio Langage from English French,Spanish,Romania or OFF	English
Disc MENU	Select Audio Language from English French,Spanish,Romania or Others	ADULT
Parental	Select one from KID SAF/G/PG/PG13/PGR/R/Nc17/	ON
Pass Word	Password ON/OFF SelectionS Password Change	Default is 8888
Default	RESET	Press ENTER to RESET

Important Safety Instructions

CAUTION PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS IN THIS OWNER'S MANUAL AND THOSE MARKED ON THE UNIT. RETAIN THIS BOOKLET FOR FUTURE REFERENCE.
This set has been designed and manufactured to assure personal safety.
Improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for Installation, use and servicing. This unit is fully transistorized and does not contain any parts that can be repaired by the user.

WARNING


DO NOT attempt to operate if picture fails or no sound is heard. Stop using the unit and turn it off immediately if there is any smoke or burning smell. If unit is damaged, it could cause fire or electrical shock.



This product is designed for DC 12V. It is recommended to check with a trained "Authorized Dealer" for using this unit in a RV, truck or bus application.


DO NOT Install unit where it may obstruct driver's sight or cause possible injury to passengers.
DO NOT allow installation to interfere with normal vehicle operations. Wiring and installation should not interfere with the brake pedal, steering wheel or transmission shift lever.


DO NOT remove any screws or hardware from vehicle to install products.

WARNING


Inspect any vehicle areas before drilling any holes for mounting or wiring of unit. Make sure to check behind installation area to prevent damaging any existing vehicle wiring or other connections. Failure to do so could result in vehicle malfunction or impaired vehicle operation.



All wiring must be routed safely and should not distract the driver's attention during normal operating conditions. DO NOT allow wiring to interfere with operation of the vehicle's brake pedal, shift lever or steering wheel.


DO NOT cut or modify any DIN cables with fuse built-in. This could render such protective circuit inactive and potentially result in permanent damage to the unit or vehicle.
Make sure both DIN cable and other wiring is not run where it may be cut or damaged.



The slots and openings in the unit is provided for necessary ventilation. These must not be blocked to ensure reliable operation.

Wiring Diagram

①	DVD Slot
②	AV 2 Audio Right In
③	AV 2 Audio Left In
④	AV 2 Video In
⑤	Audio Left Out
⑥	Audio Right Out
⑦	Video OUT
⑧	AV 1 Video In
⑨	AV 1 Audio Left In
⑩	AV 1 Audio Right In
⑪	USB Port
⑫	SD slot

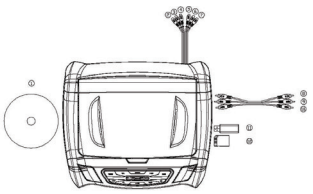

Materials On The Box

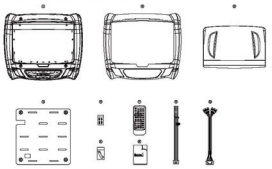

①	Main Unit
②	Inter changeable ceiling base cover
③	Inter changeable LCD Rear cover
④	Metal plate
⑤	SCREW(ISM4.0*8)X4
⑥	Plastic Cover Remover
⑦	Remote control
⑧	User's Manual
⑨	Power Cable
⑩	AV Cable

CAUTION


For the best results, follow wiring diagram for products as shown in the manual.
Do not place unit on uneven or unstable surfaces, avoid dusty areas and unsealed doors, or openings where water may be splashed.


DO NOT watch the unit while driving. Distracting the driver from proper operation of the vehicle can result in possible accident or injury.
Proper installation allow the driver to only watch TV when the vehicle is stopped and the parking brake is applied.


DO NOT disassemble or modify the product as it may cause accident, fire or electrical shock.


Set the volume to a moderate level, which will not prevent your hearing outside noises such as emergency vehicles.

CAUTION


Use provided parts. Over-sized hardware may cause an electrical short or result in product not being mounted securely.


Use correct voltage batteries only. Make sure to insert batteries observing correct polarity. Using old and new batteries is not recommended. Keep small objects such as batteries out of the reach of children.
Swallowing them may result in serious injury.


Keep the remote control in safe place when not in use to insure that the remote control does not interfere with the vehicle operation if it is dropped or shifts while driving.


DO NOT install antennas where they could cause unexpected accident or injury to pedestrians.

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
--Reorient or relocate the receiving antenna.
--Increase the separation between the equipment and receiver.
--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
--Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device is measured RF output power is less than the SAR exclusion threshold value for human head and body. Therefore, SAR test is not necessary.

General Specifications

No	Functions	10.1" Wide Overhead DVD
1	Power	DC 12V (11V ~ 16V)
2	LCD Size	10.1" Wide
3	Resolution	1024 X R.G.B X 600
4	Aspect Ratio of LCD	16 : 9
5	AV inputs	2 AV inputs (One on the side panel)
6	Video input level	1Vpp, 75Ohm (Composite)
7	IR Frequency	2.3MHz / 2.8MHz
8	IR Transmitter range	1m +/- 30 degree 3m +/- 15 degree
9	DVD Player	Fully integrated with slot loading DVD player
10	Media input	Via USB and SD slot (Video, Audio and photo viewer)
11	FM Transmitter	Adjust FM TX from 88.1MHz ~ 107.90MHz
12	Remote Control	Full function remote control included
13	Wireless headphone support	Yes (Via IR Transmitter, Wireless headphone not included)
14	Color Choices	Interchangeable 3 different color covers are included (Black, Beige, Gray)