TROUBLE SHOOTING

Problems	Reasons	Solutions
Running Problems	The battery inside the radio controller is too weak.	Replace with new alkaline batteries.
	There is a weak or low reception to the radio controls.	
	The batteries inside the vehicle are too weak.	Replace with new batteries inside the vehicle.
Operating Problems	A small object obstructs movement of the tire of axle.	Use tweezers to remove obstruction.
	The ATV was driven on the carpet and has fabric threads caught in the axle.	Playing on the carpet is not recommended.
Other	The vehicle does not respond to the radio control.	Try playing at another location.
	The radio control's frequency is disrupted by something around the environment.	Some other equipment using the same radio wave could disrupt the radio control. Either play in another location or turn off the other equipment.

FCC NOTE:
The antenna provided is a unique antenna. By installation of unauthorized antenna to this equipment, such unauthorized installation could void the user's authority to operate the equipment.

PLEASE NOTE:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

⚠ WARNING:
CHOKING HAZARD-
Small parts not for children under 3 years.

MADE IN CHINA

ITEM NO. B1641

POLARIS® LICENSED MERCHANDISE

POLARIS AND ITS VEHICLE BODY DESIGNS AND NAMES ARE REGISTERED TRADEMARKS OF POLARIS INDUSTRIES INC. USED UNDER LICENSE.

POLARIS DESIGNS, ENGINEERS, MANUFACTURES AND MARKETS SNOWMOBILES, ALL-TERRAIN VEHICLES (ATVs), VICTORY MOTORCYCLES AND THE POLARIS RANGER® FOR RECREATIONAL AND UTILITY USE. INFORMATION ABOUT THE COMPLETE LINE OF POLARIS PRODUCTS, INCLUDING ACCESSORIES AND APPAREL, IS AVAILABLE FROM AUTHORIZED POLARIS DEALERS OR ANYTIME FROM THE POLARIS HOMEPAGE AT WWW.POLARIS.COM.

5+

BEAR RIVER IGNITE-RC.COM
Manufactured & Distributed by
© 2015 Bear River Holdings, LLC
5000 Eldorado Parkway, Suite 150
Frisco Texas 75033
All Rights Reserved
MADE IN CHINA

SCRAMBLER XP 1000

INSTRUCTION MANUAL

FULL FUNCTION RADIO CONTROL ALL TERRAIN VEHICLE

***IMPORTANT:** **IF ATV DOES NOT RESPOND PROPERLY, PLEASE REPLACE THE BATTERIES IN ATV (5 AA NOT INCLUDED) AND BATTERY IN CONTROLLER (1 9V NOT INCLUDED).**

**** NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**

WARNING:
Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

PLEASE DO NOT RETURN TO STORE
For more information please contact Customer Services:
help@bearriver.net
(580)-272-0022

⚠ WARNING:
CHOKING HAZARD-Small parts. Not for children under 3 years.

DO NOT MIX ALKALINE, STANDARD (CARBON ZINC) OR RECHARGEABLE (NICKEL CADMIUM) BATTERIES.

DO NOT MIX OLD AND NEW BATTERIES.

DO NOT DISPOSE OF BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK.

REQUIRES 5 AA BATTERIES IN ATV AND 1 9V BATTERY IN CONTROLLER.

COLORS AND DECORATIONS MAY VARY. KEEP CONTENT DETAILS FOR FUTURE REFERENCE.

CONTENT LIST

To prevent damage, the contents of the package that are listed have been packed in the tray and may be out of plain sight. Please remove all contents from the tray.

⚠ CAUTION:
DO NOT MODIFY TOY IN ANY WAY. ADULT SUPERVISION IS ADVISED!

GETTING TO KNOW YOUR OUTLAW

Diagram 1

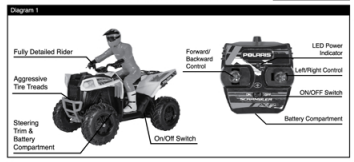

BATTERY INSTALLATION

Diagram 2

1) Using a crosshead screwdriver, unscrew and remove the battery cover.
2) Insert the 9V battery (not included) into the controller. Replace battery cover and tighten the screw.
(Use Alkaline Batteries for the longest battery life, and best performance).

PLEASE NOTE:
A) Make sure the batteries have been inserted correctly (+ or -) into the controller.
B) If the Vehicle does not respond properly, please replace the alkaline batteries in the controller or recharge battery.

Diagram 3

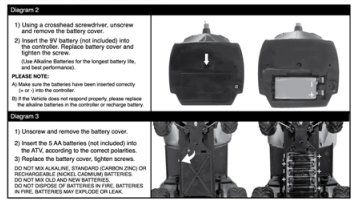

1) Unscrew and remove the battery cover.
2) Insert the 5 AA batteries (not included) into the ATV, according to the correct polarities.
3) Replace the battery cover, tighten screws.
DO NOT MIX ALKALINE, STANDARD (CARBON ZINC) OR RECHARGEABLE (NICKEL CADMIUM) BATTERIES.
DO NOT MIX OLD AND NEW BATTERIES.
DO NOT DISPOSE OF BATTERIES IN FIRE, BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK.

USING YOUR ATV

Diagram 4

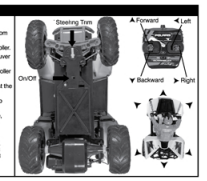

To use your ATV:
1) Flip the On/Off switch to the "ON" position on the bottom of the ATV.
2) Flip the On/Off switch to the "ON" position on the controller.
3) Place on the ground and use the controller to maneuver the ATV.
4) If the ATV does not respond, switch the ATV and controller to "OFF" and repeat above steps 1 and 2.
5) If vehicle pulls to one side or the other, simply adjust the steering trim located on the bottom of the ATV.
6) After operating, return both the ATV and controller to "OFF" position.
7) When not being used for an extended amount of time, remove the batteries from the controller and ATV.

DANGER!
NEVER TOUCH THE WHEELS WHEN THEY ARE TURNING. NEVER INSERT ANY SHARP OBJECTS, PINS OR SCREWS INTO THE VEHICLE AS THIS MAY PUNCTURE THE MOTOR OR THE BATTERY.

Cautions

1. **Make sure you always use new or fully charged batteries in the controller.**
2. **Do not mix the ATV if it becomes damaged in any way.**
3. **Check that the infrared signal from the controller is making a connection with the ATV before operating.**
4. **Try not to crash the ATV as this may cause damage.**
5. **Check that the area is clear of all obstacles before you operate.**
6. **Adult supervision is always recommended.**
7. **Never operate near animals. Keep ATV a way from your fingers, hair, eyes and other body parts. Stay away from obstacles and electrical hazards.**

Warning

1. **Non-rechargeable batteries are not to be recharged.**
2. **Rechargeable batteries are only to be charged under adult supervision.**
3. **Rechargeable batteries are to be removed from the toy before being charged.**
4. **Different types of batteries or new and used batteries are not to be mixed.**
5. **Batteries are to be inserted with the correct polarity.**
6. **Exhausted batteries are to be removed from the toy.**
7. **The supply terminals are not to be short-circuited.**

NOTE:
Operating multiple RC's with the same frequency in close proximity will cause interference and poor performance. Two frequency bands are available to play two at the same time.
Works best away from electrical hazards and large obstacles.
For optimum performance play on smooth surfaces.
Do not drive on grass, dirt, sand, dust, carpet or through water.
Do not drive in windy or rainy weather.
Do not put objects or fingers near the front or rear of the wheels while it is turning.
Vehicle can run on various terrain, be sure objects do not get obstructed in the wheels.
Avoid hard crashes.
Never give the vehicle or controller to any child under the age of 3, as is contains small parts.
Switch OFF the power when not in use to prevent damage to the Vehicle due to leakage age of electrolyte from batteries.
When not in use, remove batteries from compartments (vehicle and controller).
Normal working distance is about 50 feet (15 meters).
Don't cover the antenna of the transmitter. No signal will be released while the lens is covered.

TROUBLE SHOOTING

Problems	Reasons	Solutions
Running Problems	The battery inside the radio controller is too weak.	Replace with new alkaline batteries.
	There is a weak or low reception to the radio controls.	
	The batteries inside the vehicle are too weak.	Replace with new batteries inside the vehicle.
Operating Problems	A small object obstructs movement of the tire of axle.	Use tweezers to remove obstruction.
	The ATV was driven on the carpet and has fabric threads caught in the axle.	Playing on the carpet is not recommended.
Other	The vehicle does not respond to the radio control.	Try playing at another location.
	The radio control's frequency is disrupted by something around the environment.	Some other equipment using the same radio wave could disrupt the radio control. Either play in another location or turn off the other equipment.

FCC NOTE:
The antenna provided is a unique antenna. By installation of unauthorized antenna to this equipment, such unauthorized installation could void the user's authority to operate the equipment.

PLEASE NOTE:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

⚠ WARNING:
CHOKING HAZARD-
Small parts not for children under 3 years.

MADE IN CHINA

ITEM NO. B1641

POLARIS® LICENSED MERCHANDISE

POLARIS AND ITS VEHICLE BODY DESIGNS AND NAMES ARE REGISTERED TRADEMARKS OF POLARIS INDUSTRIES INC. USED UNDER LICENSE.

POLARIS DESIGNS, ENGINEERS, MANUFACTURES AND MARKETS SNOWMOBILES, ALL-TERRAIN VEHICLES (ATVs), VICTORY MOTORCYCLES AND THE POLARIS RANGER® FOR RECREATIONAL AND UTILITY USE. INFORMATION ABOUT THE COMPLETE LINE OF POLARIS PRODUCTS, INCLUDING ACCESSORIES AND APPAREL, IS AVAILABLE FROM AUTHORIZED POLARIS DEALERS OR ANYTIME FROM THE POLARIS HOMEPAGE AT WWW.POLARIS.COM.

5+

BEAR RIVER IGNITE-RC.COM
Manufactured & Distributed by
© 2015 Bear River Holdings, LLC
5000 Eldorado Parkway, Suite 150
Frisco Texas 75033
All Rights Reserved
MADE IN CHINA

SCRAMBLER XP 1000

INSTRUCTION MANUAL

FULL FUNCTION RADIO CONTROL ALL TERRAIN VEHICLE

***IMPORTANT:** **IF ATV DOES NOT RESPOND PROPERLY, PLEASE REPLACE THE BATTERIES IN ATV (5 AA NOT INCLUDED) AND BATTERY IN CONTROLLER (1 9V NOT INCLUDED).**

**** NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**

WARNING:
Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

PLEASE DO NOT RETURN TO STORE
For more information please contact Customer Services:
help@bearriver.net
(580)-272-0022

⚠ WARNING:
CHOKING HAZARD-Small parts. Not for children under 3 years.

DO NOT MIX ALKALINE, STANDARD (CARBON ZINC) OR RECHARGEABLE (NICKEL CADMIUM) BATTERIES.

DO NOT MIX OLD AND NEW BATTERIES.

DO NOT DISPOSE OF BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK.

REQUIRES 5 AA BATTERIES IN ATV AND 1 9V BATTERY IN CONTROLLER.

COLORS AND DECORATIONS MAY VARY. KEEP CONTENT DETAILS FOR FUTURE REFERENCE.

CONTENT LIST

To prevent damage, the contents of the package that are listed have been packed in the tray and may be out of plain sight. Please remove all contents from the tray.

⚠ CAUTION:
DO NOT MODIFY TOY IN ANY WAY. ADULT SUPERVISION IS ADVISED!

GETTING TO KNOW YOUR OUTLAW

Diagram 1

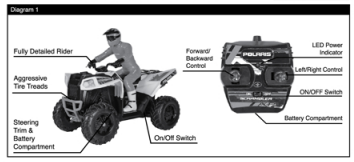

BATTERY INSTALLATION

Diagram 2

1) Using a crosshead screwdriver, unscrew and remove the battery cover.
2) Insert the 9V battery (not included) into the controller. Replace battery cover and tighten the screw.
(Use Alkaline Batteries for the longest battery life, and best performance).

PLEASE NOTE:
A) Make sure the batteries have been inserted correctly (+ or -) into the controller.
B) If the Vehicle does not respond properly, please replace the alkaline batteries in the controller or recharge battery.

Diagram 3

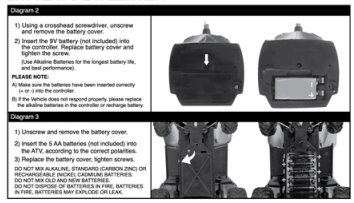

1) Unscrew and remove the battery cover.
2) Insert the 5 AA batteries (not included) into the ATV, according to the correct polarities.
3) Replace the battery cover, tighten screws.
DO NOT MIX ALKALINE, STANDARD (CARBON ZINC) OR RECHARGEABLE (NICKEL CADMIUM) BATTERIES.
DO NOT MIX OLD AND NEW BATTERIES.
DO NOT DISPOSE OF BATTERIES IN FIRE, BATTERIES IN FIRE, BATTERIES MAY EXPLODE OR LEAK.

USING YOUR ATV

Diagram 4

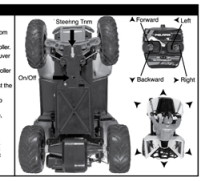

To use your ATV:
1) Flip the On/Off switch to the "ON" position on the bottom of the ATV.
2) Flip the On/Off switch to the "ON" position on the controller.
3) Place on the ground and use the controller to maneuver the ATV.
4) If the ATV does not respond, switch the ATV and controller to "OFF" and repeat above steps 1 and 2.
5) If vehicle pulls to one side or the other, simply adjust the steering trim located on the bottom of the ATV.
6) After operating, return both the ATV and controller to "OFF" position.
7) When not being used for an extended amount of time, remove the batteries from the controller and ATV.

DANGER!
NEVER TOUCH THE WHEELS WHEN THEY ARE TURNING. NEVER INSERT ANY SHARP OBJECTS, PINS OR SCREWS INTO THE VEHICLE AS THIS MAY PUNCTURE THE MOTOR OR THE BATTERY.

Cautions

1. **Make sure you always use new or fully charged batteries in the controller.**
2. **Do not mix the ATV if it becomes damaged in any way.**
3. **Check that the infrared signal from the controller is making a connection with the ATV before operating.**
4. **Try to crash the ATV as this may cause damage.**
5. **Check that the area is clear of all obstacles before you operate.**
6. **Adult supervision is always recommended.**
7. **Never operate near animals. Keep ATV a way from your fingers, hair, eyes and other body parts. Stay away from obstacles and electrical hazards.**

Warning

1. **Non-rechargeable batteries are not to be recharged.**
2. **Rechargeable batteries are only to be charged under adult supervision.**
3. **Rechargeable batteries are to be removed from the toy before being charged.**
4. **Different types of batteries or new and used batteries are not to be mixed.**
5. **Batteries are to be inserted with the correct polarity.**
6. **Exhausted batteries are to be removed from the toy.**
7. **The supply terminals are not to be short-circuited.**

NOTE:
Operating multiple RC's with the same frequency in close proximity will cause interference and poor performance. Two frequency bands are available to play two at the same time.
Works best away from electrical hazards and large obstacles.
For optimum performance play on smooth surfaces.
Do not drive on grass, dirt, sand, dust, carpet or through water.
Do not drive in windy or rainy weather.
Do not put objects or fingers near the front or rear of the wheels while it is turning.
Vehicle can run on various terrain, be sure objects do not get obstructed in the wheels.
Avoid hard crashes.
Never give the vehicle or controller to any child under the age of 3, as is contains small parts.
Switch OFF the power when not in use to prevent damage to the Vehicle due to leakage age of electrolyte from batteries.
When not in use, remove batteries from compartments (vehicle and controller).
Normal working distance is about 50 feet (15 meters).
Don't cover the antenna of the transmitter. No signal will be released while the lens is covered.

DÉPANNAGE

Problèmes	Causes	Solutions
Problèmes De Conduite	Les piles de la télécommande sont trop faibles.	Remplacez-les par de nouvelles piles alcalines dans la télécommande. Ou rechargez le bloc-piles.
	La réception est faible ou insuffisante pour la commande radio.	
	Les piles du véhicule sont trop faibles.	
Problèmes De Fonctio -nement	Un petit objet obstrue le mouvement du pneu ou de l'essieu.	Utilisez de petites pinces pour retirer l'obstruction.
	Le véhicule a été utilisé sur le tapis et des fils sont coincés dans l'essieu.	Il n'est pas recommandé de jouer sur le tapis.
Autre	Le véhicule ne répond pas à la commande radio/Le véhicule ne répond pas à la commande radio	Essayez de jouer dans un autre endroit.
	La fréquence de la commande du véhicule est perturbée par un objet dans les environs.	Il est possible qu'un autre équipement utilisant la même onde radio perturbe la commande radio. Jouez dans un endroit différent ou mettez l'autre équipement hors tension.

AVIS DE LA FCC :
L'antenne Fournie Est Conçue Spécialement Pour Ce Produit. L'Installation D'une Antenne Non Autorisée Sur Cet Équipement Peut Entraîner L'annulation De L'autorisation Accordée À L'utilisateur De Se Servir De L'équipement.

VEUILLEZ NOTER :
Cet équipement a été testé et déclaré conforme aux limites établies pour un appareil numérique de Classe B, conformément à la partie 15 des réglementations FCC. Ces limites sont élaborées pour vous protéger contre toute interférence nuisible dans une installation résidentielle. Cet équipement génère, utilise et peut émettre des fréquences radio. Par conséquent, s'il n'est pas installé et utilisé en suivant les instructions, il peut causer des interférences nuisibles aux communications radio. Cependant, aucune garantie n'est donnée concernant la possibilité d'interférence avec une installation spécifique. Si cet équipement devait causer des interférences nuisibles aux réceptions radio ou télévisuelles, ce qui peut être déterminé en allumant et éteignant l'appareil, nous recommandons à l'utilisateur de tenter de corriger le problème par une ou plusieurs des mesures suivantes :
- Réorientez ou déplacez l'antenne de réception.
- Éloignez l'équipement du récepteur.
- Branchez l'équipement à une prise de courant sur un circuit différent de celui utilisé par le récepteur.
- En cas de problème, contactez le détaillant ou un technicien spécialisé en réception radio/TV.

⚠ AVERTISSEMENT:
RISQUE D'ÉTOUFFEMENT-
Petites pièces.Ne convient pas aux enfants de moins de 3 ans.

FABRIQUÉ EN CHINE

ARTICLE N° B1641

POLARIS® MARCHANDISES AUTORISÉS

L'ÉTOILE POLARIS ET SES CONCEPTIONS ET NOMS DE CORPS DE VÉHICULE SONT DES MARQUES DÉPOSÉES D'POLARIS INDUSTRIES INC. UTILISÉ SOUS LE PERMIS.

L'ÉTOILE POLARIS CONÇOIT, MACHINE, FABRIQUE ET LANCE DES SNOWMOBILES, DES VÉHICULES TOUT-TERRAIN (VTTs), DES MOTOS DE VICTOIRE ET LE POLARIS RANGER® POUR L'USAGE RÉCRÉATIONNEL ET DE SERVICE. LES INFORMATIONS SUR LA LIGNE COMPLÈTE DES PRODUITS D'ÉTOILE POLARIS , DE L'HABILLEMENT ET DES ACCESSOIRES DE VÉHICULE SONT FOURNIES DES MARCHANDS AUTORISÉS D'ÉTOILE POLARIS OU N'IMPORTE QUAND PAR LA PAGE D'ACCUEIL D'ÉTOILE POLARIS À WWW.POLARIS.COM.

5+

BEAR RIVER IGNITE-RC.COM
Manufactured & Distributed by
© 2015 Bear River Holdings, LLC
5000 Eldorado Parkway, Suite 150
Frisco Texas 75033
All Rights Reserved
MADE IN CHINA

SCRAMBLER XP 1000

MODE D'EMPLOI

VÉHICULE RADIOCOMMANDÉ À FONCTION COMPLÈTE

***IMPORTANT:** **SI LE VÉHICULE NE RÉPOND PAS CORRECTEMENT, VEUILLEZ REMPLACER LES PILES DU VTT (5 PILES « AA » NON COMPRISES) ET CELLES DE LA TÉLÉCOMMANDE (1 PILE 9 V NON COMPRISE).**

Merci de lire attentivement le manuel avant de mettre en service le produit. Gardez ce manuel pour une consultation ultérieure.
****REMARQUE : LE FABRICANT NE PEUT ÊTRE TENU RESPONSABLE POUR TOUTE INTERFÉRENCE RADIOÉLECTRIQUE OU TÉLÉVISUELLE CAUSÉE PAR DES MODIFICATIONS NON AUTORISÉES APPORTÉES À CET ÉQUIPEMENT. DE TELLES MODIFICATIONS PEUVENT ENTRAÎNER L'ANNULATION DE L'AUTORISATION ACCORDÉE À L'UTILISATEUR DE SE SERVIR DE CET ÉQUIPEMENT.**
AVERTISSEMENT :
Les modifications ou changements qui ne sont pas expressément approuvés par la partie responsable de la conformité peuvent entraîner l'annulation de l'autorisation accordée à l'utilisateur de se servir de cet appareil.

Cet appareil répond aux exigences de la partie 15 des réglementations de la FCC. Son utilisation est soumise aux deux conditions suivantes :
1. Cet appareil ne doit pas causer d'interférence nuisible, et
2. Cet appareil doit recevoir toutes les interférences reçues, incluant celles qui pourraient affecter son fonctionnement.

MERCI DE NE PAS RENVOYER AU MAGASIN
Pour plus d'informations veuillez envoyer un courriel aux services de consommation :
help@bearriver.net
(580)-272-0022

⚠ AVERTISSEMENT:
RISQUE D'ÉTOUFFEMENT—Petites pièces. Ne convient pas aux enfants de moins de 3 ans.

NE MÉLANGEZ PAS LES BATTERIES ALCALINES, STANDARD (CARBONE-ZINC) OU RECHARGEABLES (NICKEL-CADMIUM).

NE MÉLANGEZ PAS LES BATTERIES NEUVES ET ANCIENNES.

NE JETEZ PAS LES BATTERIES AU FEU; ELLES PEUVENT EXPLOSER OU FUIR.

NÉCESSITE 5 PILES AA DANS LE VÉHICULE ET 1 PILE 9V DANS LE CONTRÔLEUR.

LA COULEUR ET LES DÉCORATIONS PEUVENT VARIER. GARDEZ LES DÉTAILS DU CONTENU POUR RÉFÉRENCE FUTURE.

LISTE DE CONTENU

Pour éviter des dommages, les contenus de l'emballage qui sont énumérés ont été emballés dans le plateau et peuvent être hors de vue.
Veuillez retirer tous les contenus du plateau.

⚠ CAUTION:
NE MODIFIEZ LE JOUET D'AUCUNE MANIÈRE. LA SURVEILLANCE D'UN ADULTE EST CONSEILLÉE!

APPRENEZ CONNA TRE VOTRE VÉHICULE

Schéma 1

INSTALLATION DES PILES

Schéma 2

1) Dévissez et retirez les couvercles de piles de la télécommande et du télécommandé
2) Insérez la batterie de 9 V (non comprise) dans la télécommande. Replacez le couvercle de la batterie.
(Utilisez des batteries alcalines pour une longévité maximale de la batterie, et de meilleures performances).

VEUILLEZ NOTER :
A) Assurez-vous d'insérer les piles correctement (+ ou -) dans la télécommande du Véhicule.
B) Si le véhicule ne répond pas correctement, veuillez remplacer les piles alcalines du Véhicule et/ou la pile de la télécommande.

Schéma 3

1) Faites glisser le couvercle des batteries et retirez-les.
2) Insérez les 5 piles AA (non incluses) dans le véhicule, selon la bonne polarité.
3) Remettez le couvercle de la batterie, serrez les vis.
NE MÉLANGEZ PAS LES BATTERIES ALCALINES, STANDARD (CARBONE ZINC) OU RECHARGEABLES (NICKEL CADMIUM).
NE MÉLANGEZ PAS LES BATTERIES NEUVES ET ANCIENNES.
NE JETEZ PAS LES BATTERIES AU FEU; ELLES PEUVENT EXPLOSER OU FUIR.

PRÉCAUTIONS

1. **Assurez-vous de toujours utiliser des batteries neuves ou entièrement chargées dans la télécommande.**
2. **Ne faites pas fonctionner le véhicule s'il est endommagé de quelque façon que ce soit.**
3. **Avant toute utilisation, vérifiez que le signal RC de la télécommande a établi une connexion avec le véhicule.**
4. **Évitez toute collision du véhicule car cela peut entraîner des dommages.**
5. **Assurez-vous que la zone est dégagée de tout obstacle avant de le faire fonctionner.**
6. **La supervision d'un adulte est toujours recommandée.**
7. **Ne le faites jamais fonctionner à proximité des animaux. Gardez le véhicule loin de vos doigts, de vos cheveux, de vos yeux et autres parties de votre corps. Éloignez-vous des obstacles et de tout risque électrique.**

AVERTISSEMENT

1. **Les batteries non rechargeables ne doivent pas être rechargées.**
2. **Les batteries rechargeables doivent être rechargées sous la supervision d'un adulte.**
3. **Les batteries rechargeables doivent être retirées du jouet avant de les recharger.**
4. **Différents types de batteries ou des batteries neuves et usées ne doivent pas être mélangées.**
5. **Assurez-vous que la polarité des batteries est correctement insérée.**
6. **Les batteries usées doivent être retirées du jouet.**
7. **Les bornes d'alimentation ne doivent pas être court-circuitées.**

UTILISATION DU VÉHICULE

Schéma 4

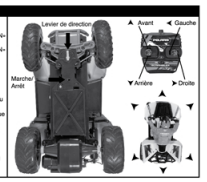

Pour utiliser votre véhicule :
1) Mettez l'interrupteur de marche/arrêt en position «ON» (marche) au fond du véhicule.
2) Mettez l'interrupteur de marche/arrêt en position «ON» (marche) sur le contrôleur.
3) Placez sur le sol et utilisez le contrôleur pour manœuvrer le véhicule.
4) Si le véhicule ne fonctionne pas, mettez le deux véhicule et contrôleur et répéter les étapes 1 et 2.
5) Si le véhicule tire d'un côté ou de l'autre ajustez simplement la garniture de direction située au fond du scooter de sables.
6) Après utilisation, remettez aussi bien le véhicule que le contrôleur en position «OFF» (arrêt).
7) En cas de non utilisation pendant une longue durée, retirez les piles du contrôleur et du véhicule.

DANGER !
NE TOUCHEZ JAMAIS LES ROUES LORSQU'ELLES SONT EN ROTATION. N'INSÉREZ JAMAIS NI OBJETS ACÉRÉS, NI BROCHES, NI VIS DANS LE VÉHICULE CAR CELA PEUT PERFORER LE MOTEUR OU LA BATTERIE !

REMARQUE :
Faire fonctionner plusieurs RC ayant la même fréquence à proximité causerait des interférences et de mauvaises performances. Deux bandes de fréquences sont disponibles pour jouer à deux chars en même temps.
Fonctionne mieux loin des risques électriques et des obstacles de taille.
Pour des performances optimales, jouez sur des surfaces lisses.
Ne pilotez pas sur l'herbe, la terre, le sable, les terrains poussiéreux, les tapis ou à travers l'eau.
Ne pilotez pas par temps venteux ou pluvieux.
Ne placez pas d'objets ni de doigts près de l'avant ou l'arrière de la chenille lorsqu'elle tourne.
Le char d'assaut peut fonctionner sur différents terrains; assurez-vous qu'aucun objet n'obstrue la chenille du char.
Évitez les collisions importantes.
Ne donnez jamais le Badger ou la télécommande à un enfant de moins de 3 ans, à cause des petites pièces qu'ils contiennent.
Coupez l'alimentation lorsque vous n'utilisez pas le véhicule afin d'éviter de l'endommager à cause d'une fuite d'électrolyte des batteries.
Lorsqu'elles ne sont pas utilisées, retirez les batteries des compartiments (Véhicule et télécommande).
La distance d'utilisation normale est de 50 pieds (15 mètres).
Ne couvrez pas l'antenne de l'émetteur. Aucun signal ne sera émis si la lentille est couverte.

DÉPANNAGE

Problèmes	Causes	Solutions
Problèmes De Conduite	Les piles de la télécommande sont trop faibles.	Remplacez-les par de nouvelles piles alcalines dans la télécommande. Ou rechargez le bloc-piles.
	La réception est faible ou insuffisante pour la commande radio.	
	Les piles du véhicule sont trop faibles.	
Problèmes De Fonctio -nement	Un petit objet obstrue le mouvement du pneu ou de l'essieu.	Utilisez de petites pinces pour retirer l'obstruction.
	Le véhicule a été utilisé sur le tapis et des fils sont coincés dans l'essieu.	Il n'est pas recommandé de jouer sur le tapis.
Autre	Le véhicule ne répond pas à la commande radio/Le véhicule ne répond pas à la commande radio	Essayez de jouer dans un autre endroit.
	La fréquence de la commande du véhicule est perturbée par un objet dans les environs.	Il est possible qu'un autre équipement utilisant la même onde radio perturbe la commande radio. Jouez dans un endroit différent ou mettez l'autre équipement hors tension.

AVIS DE LA FCC :
L'antenne Fournie Est Conçue Spécialement Pour Ce Produit. L'Installation D'une Antenne Non Autorisée Sur Cet Équipement Peut Entraîner L'annulation De L'autorisation Accordée À L'utilisateur De Se Servir De L'équipement.

VEUILLEZ NOTER :
Cet équipement a été testé et déclaré conforme aux limites établies pour un appareil numérique de Classe B, conformément à la partie 15 des réglementations FCC. Ces limites sont élaborées pour vous protéger contre toute interférence nuisible dans une installation résidentielle. Cet équipement génère, utilise et peut émettre des fréquences radio. Par conséquent, s'il n'est pas installé et utilisé en suivant les instructions, il peut causer des interférences nuisibles aux communications radio. Cependant, aucune garantie n'est donnée concernant la possibilité d'interférence avec une installation spécifique. Si cet équipement devait causer des interférences nuisibles aux réceptions radio ou télévisuelles, ce qui peut être déterminé en allumant et éteignant l'appareil, nous recommandons à l'utilisateur de tenter de corriger le problème par une ou plusieurs des mesures suivantes :
- Réorientez ou déplacez l'antenne de réception.
- Éloignez l'équipement du récepteur.
- Branchez l'équipement à une prise de courant sur un circuit différent de celui utilisé par le récepteur.
- En cas de problème, contactez le détaillant ou un technicien spécialisé en réception radio/TV.

⚠ AVERTISSEMENT:
RISQUE D'ÉTOUFFEMENT-
Petites pièces.Ne convient pas aux enfants de moins de 3 ans.

FABRIQUÉ EN CHINE

ARTICLE N° B1641

POLARIS® MARCHANDISES AUTORISÉS

L'ÉTOILE POLARIS ET SES CONCEPTIONS ET NOMS DE CORPS DE VÉHICULE SONT DES MARQUES DÉPOSÉES D'POLARIS INDUSTRIES INC. UTILISÉ SOUS LE PERMIS.

L'ÉTOILE POLARIS CONÇOIT, MACHINE, FABRIQUE ET LANCE DES SNOWMOBILES, DES VÉHICULES TOUT-TERRAIN (VTTs), DES MOTOS DE VICTOIRE ET LE POLARIS RANGER® POUR L'USAGE RÉCRÉATIONNEL ET DE SERVICE. LES INFORMATIONS SUR LA LIGNE COMPLÈTE DES PRODUITS D'ÉTOILE POLARIS , DE L'HABILLEMENT ET DES ACCESSOIRES DE VÉHICULE SONT FOURNIES DES MARCHANDS AUTORISÉS D'ÉTOILE POLARIS OU N'IMPORTE QUAND PAR LA PAGE D'ACCUEIL D'ÉTOILE POLARIS À WWW.POLARIS.COM.

5+

BEAR RIVER IGNITE-RC.COM
Manufactured & Distributed by
© 2015 Bear River Holdings, LLC
5000 Eldorado Parkway, Suite 150
Frisco Texas 75033
All Rights Reserved
MADE IN CHINA

SCRAMBLER XP 1000

MODE D'EMPLOI

VÉHICULE RADIOCOMMANDÉ À FONCTION COMPLÈTE

***IMPORTANT:** **SI LE VÉHICULE NE RÉPOND PAS CORRECTEMENT, VEUILLEZ REMPLACER LES PILES DU VTT (5 PILES « AA » NON COMPRISES) ET CELLES DE LA TÉLÉCOMMANDE (1 PILE 9 V NON COMPRISE).**

Merci de lire attentivement le manuel avant de mettre en service le produit. Gardez ce manuel pour une consultation ultérieure.
****REMARQUE : LE FABRICANT NE PEUT ÊTRE TENU RESPONSABLE POUR TOUTE INTERFÉRENCE RADIOÉLECTRIQUE OU TÉLÉVISUELLE CAUSÉE PAR DES MODIFICATIONS NON AUTORISÉES APPORTÉES À CET ÉQUIPEMENT. DE TELLES MODIFICATIONS PEUVENT ENTRAÎNER L'ANNULATION DE L'AUTORISATION ACCORDÉE À L'UTILISATEUR DE SE SERVIR DE CET ÉQUIPEMENT.**
AVERTISSEMENT :
Les modifications ou changements qui ne sont pas expressément approuvés par la partie responsable de la conformité peuvent entraîner l'annulation de l'autorisation accordée à l'utilisateur de se servir de cet appareil.

Cet appareil répond aux exigences de la partie 15 des réglementations de la FCC. Son utilisation est soumise aux deux conditions suivantes :
1. Cet appareil ne doit pas causer d'interférence nuisible, et
2. Cet appareil doit recevoir toutes les interférences reçues, incluant celles qui pourraient affecter son fonctionnement.

MERCI DE NE PAS RENVOYER AU MAGASIN
Pour plus d'informations veuillez envoyer un courriel aux services de consommation :
help@bearriver.net
**(580)-