onn.™

30" 2.0-Channel Soundbar



Model:100019624

User Manual

Ver.04 Rev. 04/06/2020

Safety Warnings

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.

Damage

- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way – switch off, remove the mains plug and consult your dealer.

Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

Moisture

- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, must not be placed on the unit.
- If you spill any liquid into the unit, it can cause damage. Switch off, take it off the mains immediately. Withdraw the mains plug and consult your dealer.

Safety

- Always disconnect the unit from the mains supply before undertaking: disconnecting any other device or before the unit.

Batteries

- Batteries used in the remote control for this unit are easily swallowed by young children and this is dangerous.
- Please dispose of batteries correctly by following the instructions in this manual.

Supervision

- Children should be supervised to ensure that they do not play with the unit and the remote control.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.

CAUTION

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

Service

- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user-serviceable parts. Please have all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose danger-ous voltages.

Maintenance

- Ensure the unit is fully unplugged from the power supply before cleaning.
- Do not use any type of abrasive pad or abrasive cleaning powder as these will scratch the unit's surface.
- Do not use liquids to clean the unit.
- No naked flame sources,such as lighted candles, should be placed on the apparatus.
- Aurance source de flamme nue, telle que des bougies allumées, ne doivent pas être sur l'appareil.

Important Safety Instructions:

1) Read these instructions.
2) Keep these instructions.
3) Heed all warnings.
4) Follow all instructions.
5) Do not use this apparatus near water.
6) Clean only with dry cloth.
7) Do not block any ventilation openings.Install in accordance with the manufacturer's instructions.
8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11) Only use attachments/accessories specified by the manufacturer.
12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13) Unplug this apparatus during lightning storms or when unused for long periods of time.
14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.



The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Walmart Inc. is under license. Other trademarks and trade names are those of their respective owners.

Keep at least 1 inch of ventilation space between the apparatus and all other surfaces.
Please use this product in moderate climate.

SOME DOS AND DONTS ON THE SAFE USE OF EQUIPMENT

This equipment has been designed and manufactured to meet international safety standards but like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

DO read the operating instructions before you attempt to use the equipment.
DO ensure that all electrical connections (including the mains plug, extension leads and inter-connections between the pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug before making or changing connections.
DO consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.
DO be careful with glass panels or doors on the equipment.
DO route the mains lead so that it is not likely to be walked on, crushed, chafed, or subjected to excessive wear and tear or heat.

DON'T remove any fixed cover as this may expose dangerous voltages.
DON'T obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the equipment.
DON'T allow electrical equipment to be exposed to dripping or splashing, or objects filled with liquids, such as vases.
DON'T place hot objects or naked flame sources such as lighted candles or nightlights on, or close, to equipment. High temperatures can melt plastic and lead to fires.
DON'T use makeshift stands and NEVER fix legs with wooden screws.To ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided and according to the instructions.
use equipment such as personal stereos or radios that will distract you from the requirements of traffic safety.
DON'T listen to headphones at high volume, as such use can permanently damage your hearing.
DON'T leave equipment switched on when it is unattended unless it is specifically stated that is designed for unattended operation or has a stand-by mode. Switch off using the ON/OFF switch on the equipment or at the mains socket, and make sure that your family knows how to do this. Special arrangements may need to be made for infirm or handicapped people.
DON'T continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way – switch off, remove the mains plug from the mains socket and consult your dealer.

ABOVE ALL...

- NEVER let anyone especially children push anything into holes, slots or any other opening in the equipment - this could result in a fatal electric shock.
- NEVER guess or take chances with electrical equipment of any kind. It is better to be safe than sorry!

Service

How to get service:

- Call 1-800-925-6278. contact:Walmartinc.Walmart.com,Bentonville,AR72716
- Please have your original purchase receipt or proof of purchase (bill of sale or receipted invoice), the units date of purchase, place of purchase and model/serial number ready. The model/serial number information can be found on the back of your unit.
- A representative will troubleshoot your problem over the telephone. If it is determined that your unit requires service, the service location will be at the sole discretion of Walmart, Inc. based upon the Walmart, Inc. Limited Warranty Statement.
- At the sole discretion of Walmart, Inc., item will either be repaired at an Authorized Service Centre or directly exchanged for a new or refurbished/remanufactured unit. If repaired at an Authorized Service Center, a pre-paid shipping label will be provided and Walmart, Inc. will pay for return shipping.
- Proof of purchase in the form of a bill of sale or receipted invoice from an Authorized Dealer which is evidence that the product is within the warranty period must be presented to obtain warranty service.
- PRE-AUTHORIZATION MUST BE OBTAINED BEFORE SENDING ANY PRODUCT TO AN AUTHORIZED SERVICE CENTER.
- 30" 2.0- Channel Soundbar that has been modified or incorporated into other products.
- A unit purchased or serviced outside the USA.
- A unit sold in "As-Is", "Factory Reconditioned", "Factory Re-Certified", or "Refurbished" condition or with faults.
- Acts of nature or God, such as but not limited to earthquake or lightning damage.
- Special, incidental or consequential damages.

Bluetooth

CONFORMS TO UL STD. 60065
CERTIFIED TO CSA STD. C22.2 NO. 60065

Intertek
3144480

FCC Statement:

• This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)this device may not cause harmful interference, and (2)this device must accept any interference received, including interference that may cause undesired operation.

• This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measure.

--Reorient or relocate the receiving antenna.

--Increase the separation between the equipment and receiver.

--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

--Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement Caution:To maintain compliance with the FCC's RF exposure guidelines,place the product at least 20cm from nearby persons, working ambient 0℃ ~ 35℃ , voltage input range 100V~240V.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

CAUTION: Risk of explosion if the battery is replaced by an incorrect type;

CAUTION: replacement of a battery with an incorrect type that can defeat a safeguard;

CAUTION: disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;

CAUTION: leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;

CAUTION: a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas;

Where a plug on the power supply cord is used as the disconnect device, the installation instructions shall state that for pluggable equipment the socket-outlet shall be easily accessible. For pluggable equipment intended for installation by an ordinary person, the installation instructions shall be made available to the ordinary person.


Check the package contents

Remove all items from the packing. Retain the packaging. If you dispose of it, please do so according to local regulations.

The following items are included:

1. Soundbar
2. Remote control
3. Power Cord
4. Line in cable
5. Batteries
6. 3.5 mm AUX cable
7. Optical cable
8. Quick Start Guides
9. User manual
10. Wall Mount Template

Product description

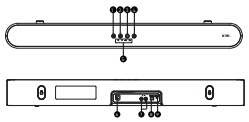


1. ⏻ button: Switch between Power or Standby mode.
   -Press and hold 1 second for Power ON.
2. ⏻ button: Select the input source.
   -LINE IN, AUX IN,OPTICAL
3. — button, Volume down.
4. + button, Volume up.
5. LED indicator


State	Indicator
Bluetooth	Blue
Line in	Green
Optical	Red
Aux	White

6. AC power jack.
7. LINE IN jack (L/White, R/Red)
8. Optical jack.
9. Aux-in 3.5mm stereo jack.
   -Use to connect Aux out/Headphone on an external device.

Remote control



1. ⏻ Press the unit between ON and Standby.
2. ᛒ Bluetooth input button.
   -Press and hold Bluetooth button until Blue LED flashing at the main unit for Pairing to another Bluetooth device.
3. ✲ Press to mute the sound, press again resume.
4. "+" "-" Press to turn Volume up or Down.
5. ⏯ Play /pause/resume playback in Bluetooth mode.
6. ⏮ ⏭ Skip backwards to the beginning of the track or to the previous track in Bluetooth mode.
7. EQ mode :
   Sound modes button : Music/Movie/Talk.
   Standard sound button : Standard sound effect mode;
   -Press the button to select a desired sound effect.
8. Input Button: LINE IN / AUX IN / OPTICAL.

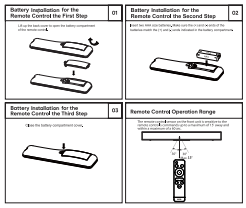

Product installation

Wall Mounting

Precautions :

⚠ Installation must be carried out by qualified personnel only. Incorrect assembly can result in severe personal injury and property damage.

If you are going to install this soundbar yourself, you must have studied installations, such as electrical wiring and plumbing that may be buried inside the wall.

It is installer's responsibility to verify that the wall safely support the total load of the Soundbar.

⚠ Additional tools (excluded) are required for the installation.

⚠ Do not overtighten screws.

⚠ Keep this user manual for future reference.

⚠ Use an electric stud finder to check the wall type before drilling and mounting.

1.Align the Sound bar in the chosen location.
Use the template provided for the drilling position.


2.Drill 2 parallel holes (according to wall type) in the wall. as marked in Step 1.



3.Firmly fix dowel (excluded) into each in the wall if necessary.




4. Insert a screw (excluded) into each dowel. Make sure to leave a 5mm gap between the wall and the screw's head. Lift the Bar over the heads of the screws

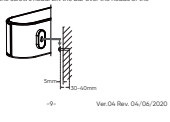


Connections for TV set

Using the Optical Connection

- You will need: An audio source with an optical audio output and a digital Optical cable (included)
- Connect the Digital Optical Audio cable to the optical output on the audio source and to the Optical Input on the speaker bar.
- Press the Input/Source button on Sound bar or on the remote control to the OPTICAL button on the remote control to switch to Optical input mode.
- Using the native controls on your connected device, make sure the audio settings are set to PCM or Optical Audio and are turned on.
- Audio from the connected audio source will now be played through the Soundbar.




For those TVs without optical out port, please use the Line-in cable (included) to connect the TV's stereo RCA jack and the soundbar via Line in jack.
Press the LINE IN button on the remote control or press the Input button on the sound bar to choose the Line in function.




Connection for other audio equipment

-Use the 3.5mm audio cable (included) to connect the MP3 player, smartphone or other audio equipment
-Then press the Aux button on the remote control or press the Input button on the sound bar to choose the Aux function.
-Then press the Aux button on the remote control or press the Input button on the sound bar to choose the Aux function.



Using the Bluetooth wireless connection

- Enable your Bluetooth device and keep at least 1 meter away from Sound bar.
- Press and hold the Bluetooth button on the remote control or press the Input button on the sound bar until the indicator light is flashing blue.
- Select the Bluetooth search function on your device. Your device should discover the Sound bar called "onn. 30" Soundbar"
- Select "onn. 30" Soundbar". Your device is paired with the Sound bar when the blue indicator light stops flashing and becomes solid blue.
- If the connected device goes out of range, the Sound bar will attempt to connect for 3 minutes. When the device comes into range, the Sound bar will reconnect again automatically.
- To remove a paired device using only the Sound bar, Press and hold the Bluetooth button on the remote or Input button at Bluetooth mode. The Bluetooth indicator will begin the indicator ligth is flashing blue.



Connecting to the Mains Supply


Ensure that the power supply voltage is in the voltage of 100V~240V.

Attaching the power cable: Slot the end of the power cable into the power socket on the back of the Soundbar.

Plugging the Sound Bar in: Slot the plug on the end of the power cable into a wall socket and turn the power on if required.

Note: Ensure the power supply voltage corresponds to the voltage stated on the back or underside of the Sound Bar.

Before plugging the Sound Bar in, ensure that all other connections have been completed.



Factory Default Resetting

• Holding vol-&vol+ at the same time for 10s to reset the soundbar, and Go to Restart the unit.

⚠

Handling the Battery

- Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause fire, personal injury or damage to property.
- Only use the battery type indicated in this manual.
- Do not install new batteries with used ones and do not mix different types of batteries.
- Do not dispose of used batteries as domestic waste. Dispose of them in accordance with local regulations.

Handling the Remote Control

- Do not drop the remote control.
- Do not allow anything to impact the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and / or property damage, and / or fire.
- When the battery is exhausted, the remote control will not function.

Specifications

30" 2.0-Channel Soundbar(General)		
Soundbar	Power supply	Internal power supply input 100-240V AC 50/60HZ US standard
	Peak Power	120W
	Power Consumption	36W
	Speaker Output Power	2 x 15W (RMS)
	Net Weight	2.2 kg
	Dimension	762 x 87 x 67mm

Features and specifications are subject to change without prior notice.

Hints and Tips

If a problem occurs, it may often be due to something very minor.

The following table contains various tips:

Problem	Solution
No power.	-Ensure the AC cord is connected securely at both ends. -Make sure that the ON mode is selected.
The remote control is not functioning.	-Use the remote control near the unit. -Point the remote control at the remote sensor on the unit. -Replace the battery in the remote control with a new one. -Remove any obstacles between the remote control and the unit.
Loud hum or noise is heard.	* the plugs and sockets are dirty. Wipe them with a cloth slightly moistened with an appropriate non -abrasive cleaning solution.
Cannot find "onn. 30" Soundbar" on my Bluetooth - device.	-Ensure the Bluetooth function is activated on your Bluetooth device. -Ensure you have paired your unit with the Bluetooth device.
Sound is not produced.	-Adjust the volume. -When you are using a connection with a external device (set top box, Bluetooth device etc.), adjust volume level of the device. -Press mute button or adjust the volume level to cancel the mute function. -Check the input source and select the correct input source.

Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.

Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The above mark is in compliance with the Waste Electrical and Electronic Equipment Directive 2012/19/EU (WEEE).

The mark indicates the requirement NOT to dispose the equipment including any spent or discarded batteries as unsorted municipal waste, but use the return and collection systems available. If the batteries or accumulators included with this equipment display the chemical symbol Hg, Cd or Pb, then it means that the battery has a heavy metal content of more than 0.0005% Mercury, or more than 0.002% Cadmium or more than, 0.004% Lead.

In the unlikely event of a problem developing, please contact the store where you purchased your equipment.

We continually strive to improve our products; specifications may change without prior notice. For advice on where to purchase accessories, please contact the store where you purchased your equipment.

All trademarks are the property of their respective owners and all rights are acknowledged.

Warranty

Walmart, Inc. Limited Warranty

LIMITATION OF WARRANTY

• THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. NO VERBAL OR WRITTEN INFORMATION GIVEN BY WAL-MART STORES, INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A GUARANTEE OR IN ANY WAY INCREASE OR MODIFY THE SCOPE OF THIS WARRANTY.

• REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. WAL-MART STORES, INC. SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF ARKANSAS. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY AND WARRANTY PERIOD SET FORTH ABOVE. THIS WARRANTY IS SUBJECT TO CHANGE WITHOUT NOTICE.

How State Law relates to this warranty:

• Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

• This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your unit outside the United States or seek warranty coverage outside the United States: This warranty does not apply. Contact your store for warranty information.

Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.

480x400mm folding to 120x200mm