



NTNV-11N20SISO-Ant1-5320-30~1000-PASS



NTNV-11N20SISO-Ant1-5320-1000~26000-PASS

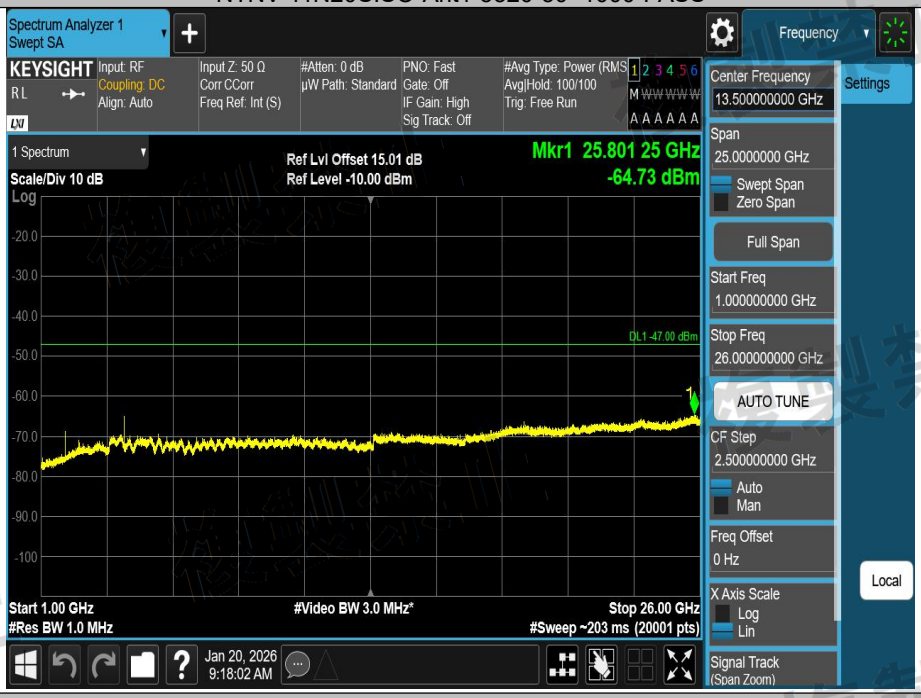


NTNV-11N20SISO-Ant1-5500-30~1000-PASS

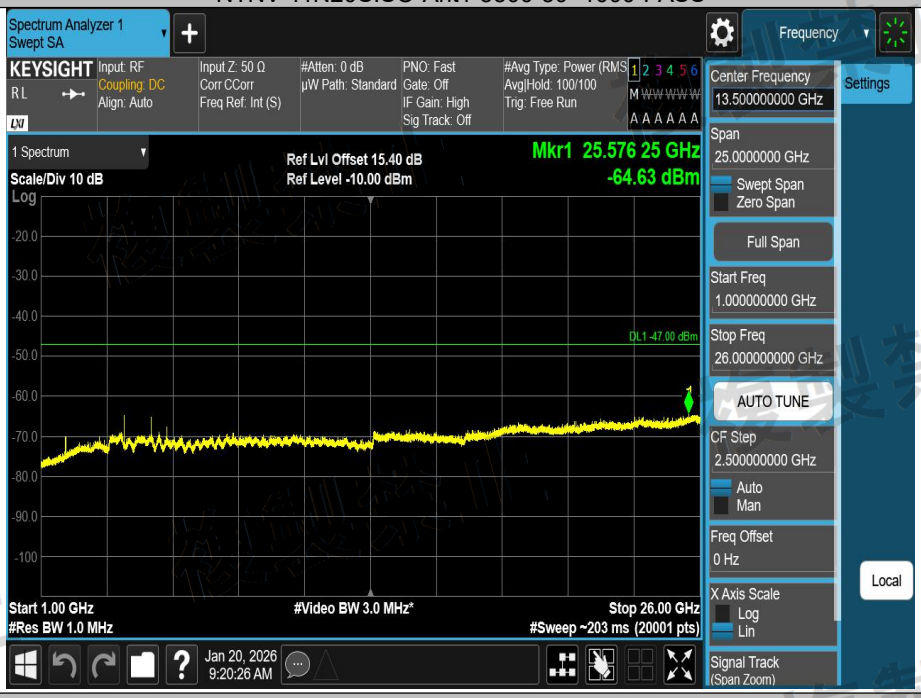

NTNV-11N20SISO-Ant1-5500-1000~26000-PASS




NTNV-11N20SISO-Ant1-5580-30~1000-PASS

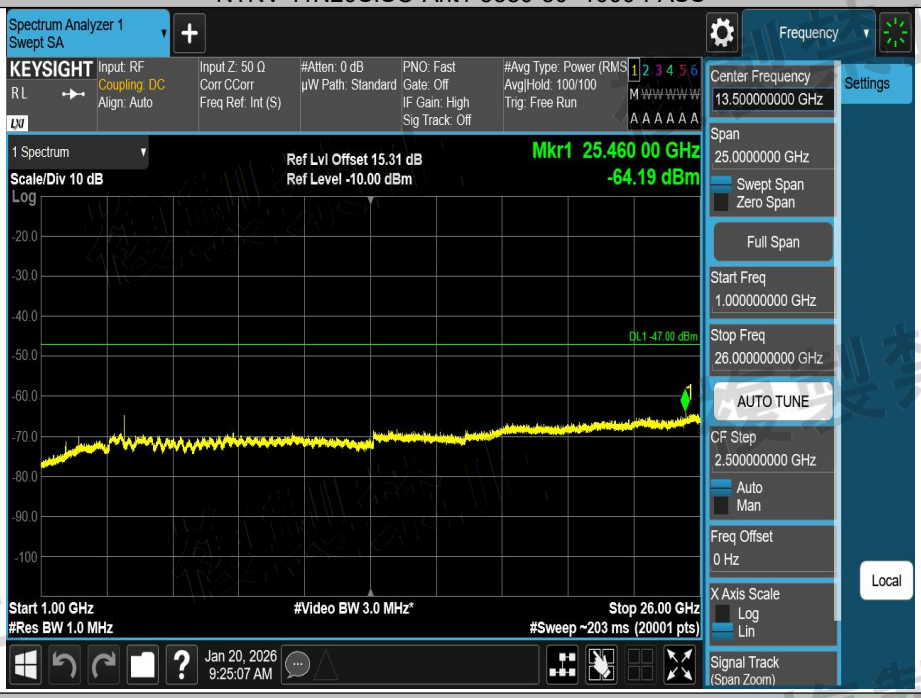

NTNV-11N20SISO-Ant1-5580-1000~26000-PASS




NTNV-11N20SISO-Ant1-5600-30~1000-PASS

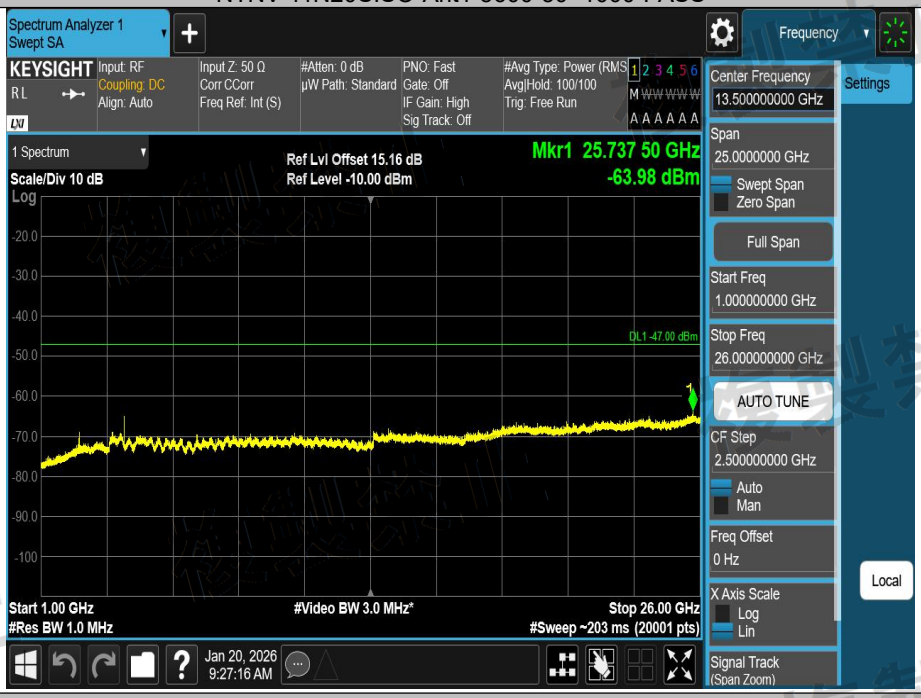


NTNV-11N20SISO-Ant1-5600-1000~26000-PASS




NTNV-11N20SISO-Ant1-5700-30~1000-PASS

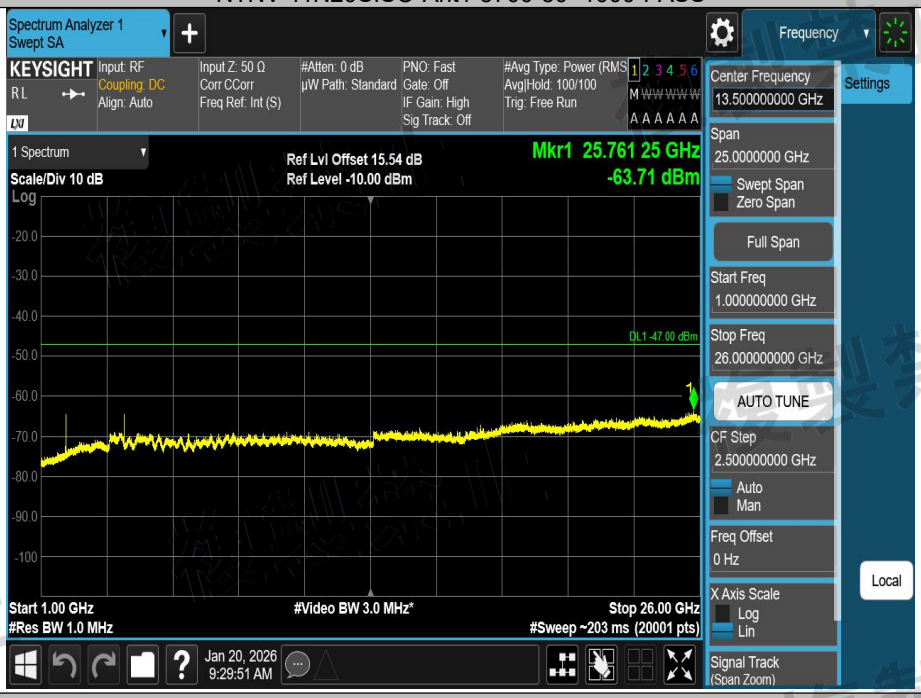

NTNV-11N20SISO-Ant1-5700-1000~26000-PASS

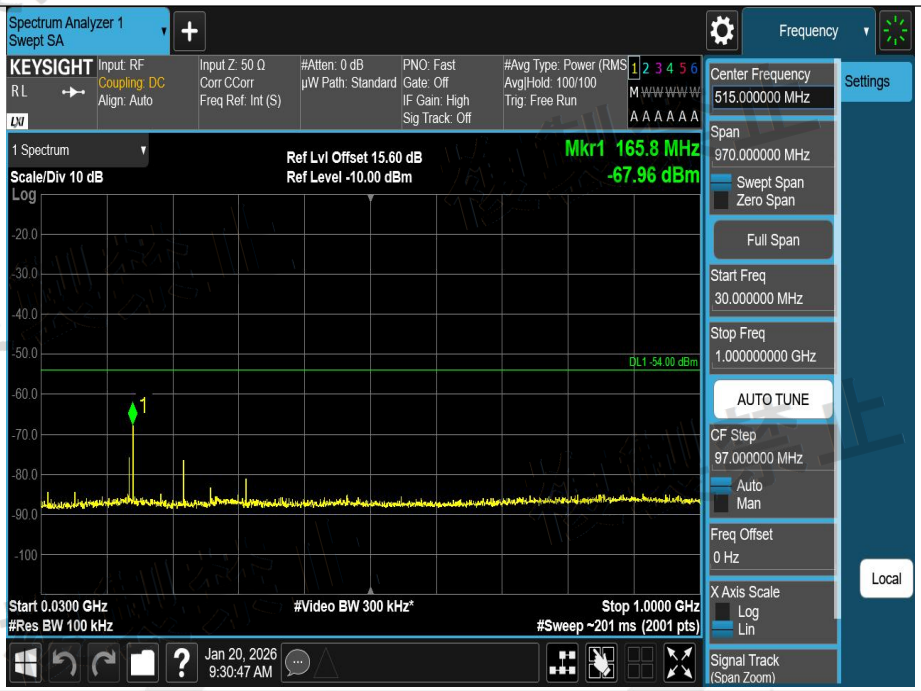


NTNV-11N20SISO-Ant1-5720-30~1000-PASS

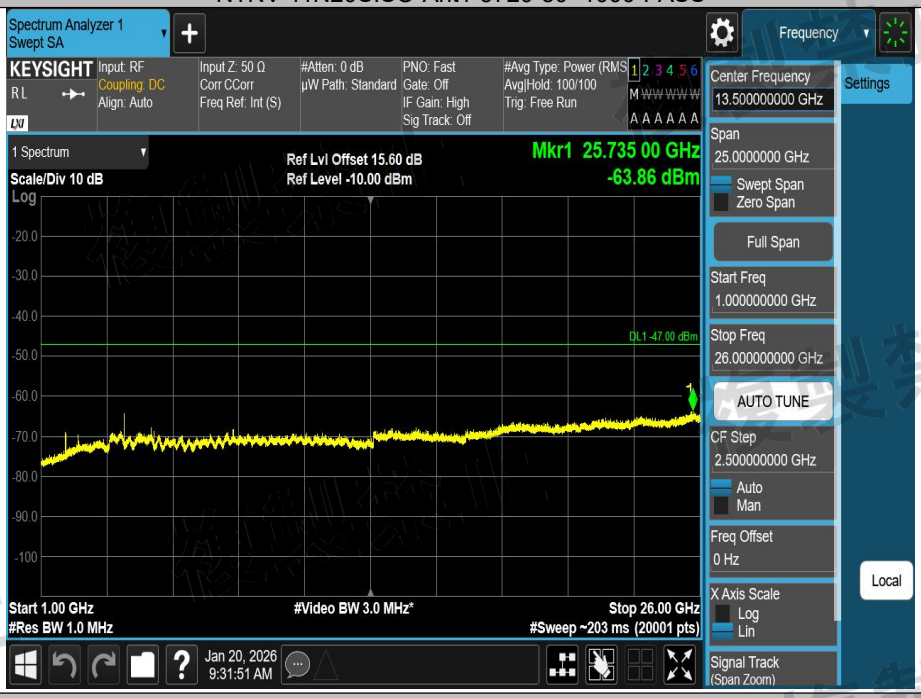

NTNV-11N20SISO-Ant1-5720-1000~26000-PASS




NTNV-11N40SISO-Ant1-5190-30~1000-PASS

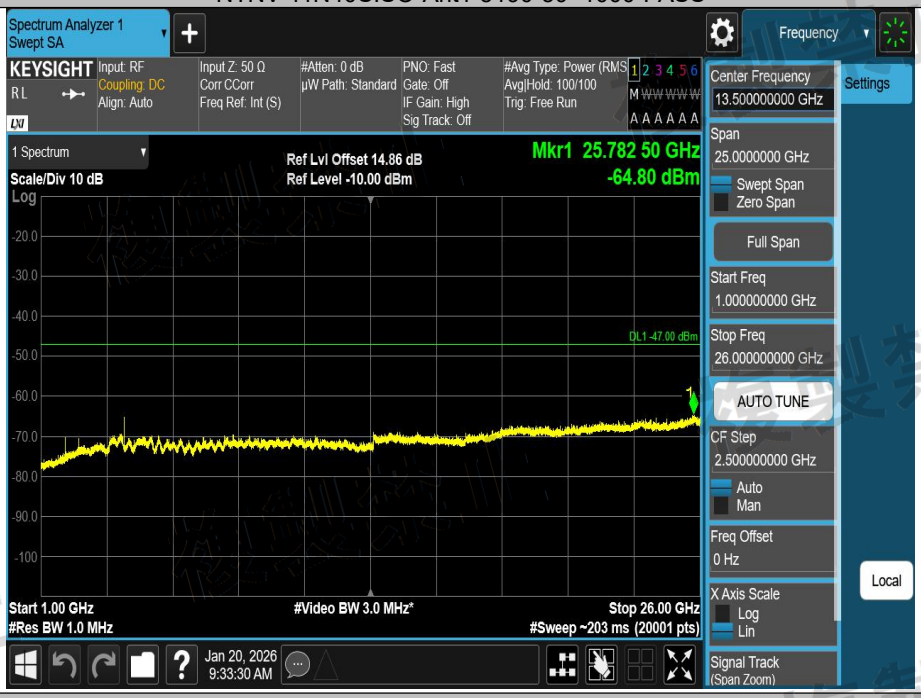


NTNV-11N40SISO-Ant1-5190-1000~26000-PASS




NTNV-11N40SISO-Ant1-5230-30~1000-PASS

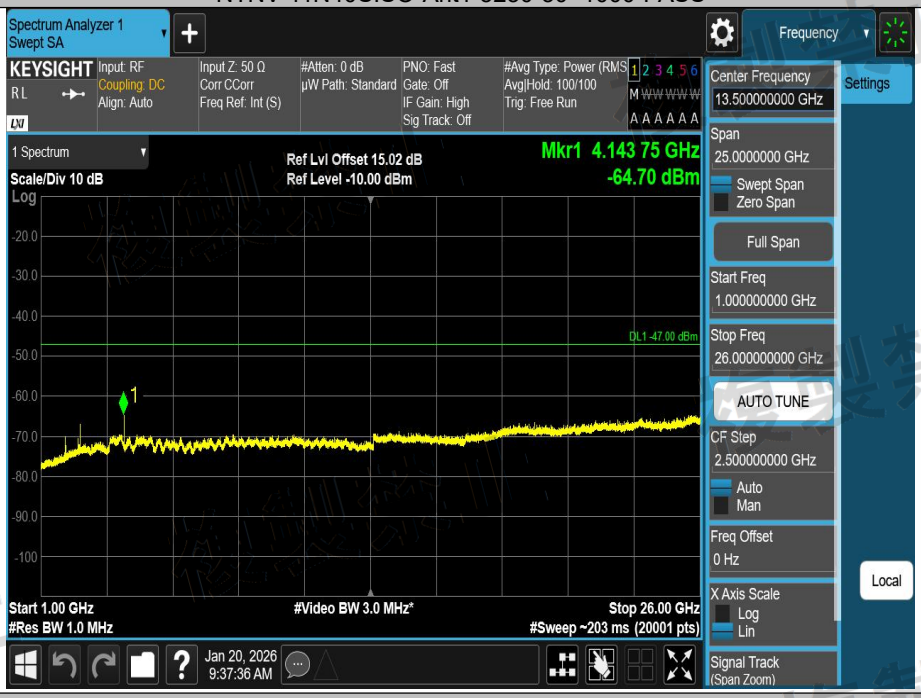

NTNV-11N40SISO-Ant1-5230-1000~26000-PASS

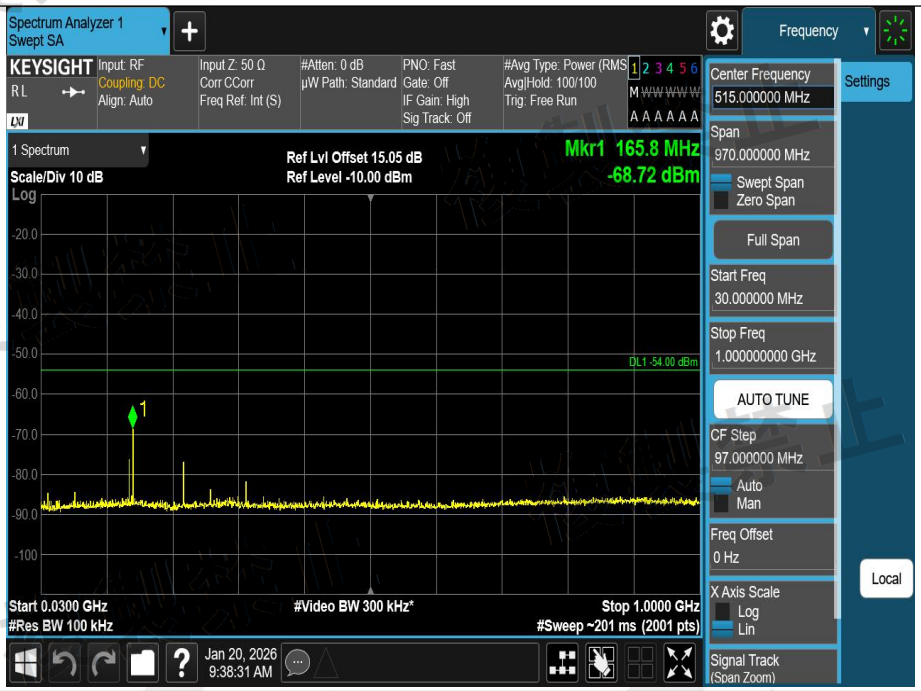


NTNV-11N40SISO-Ant1-5270-30~1000-PASS

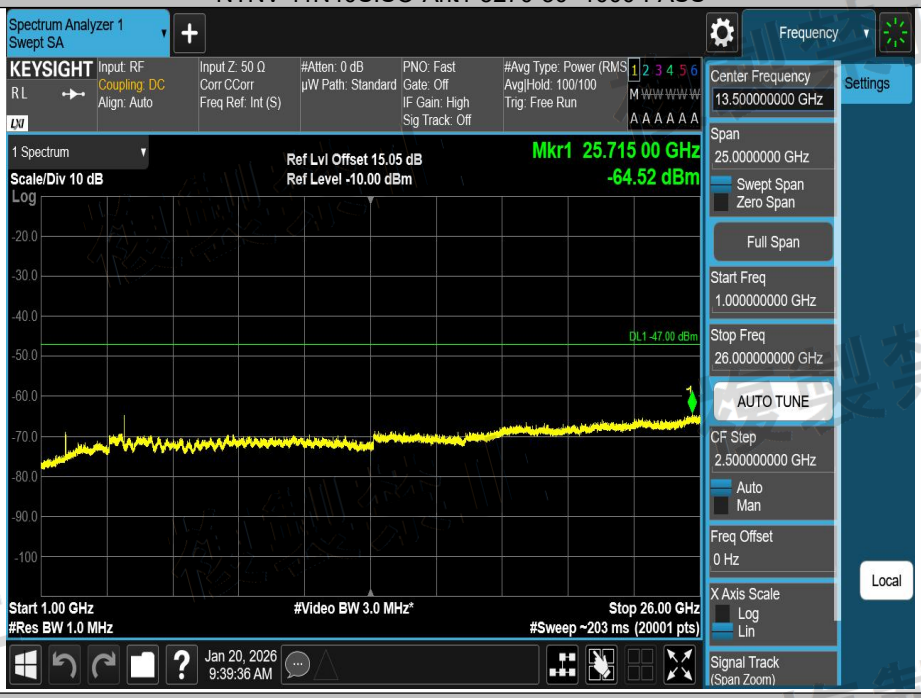

NTNV-11N40SISO-Ant1-5270-1000~26000-PASS




NTNV-11N40SISO-Ant1-5310-30~1000-PASS

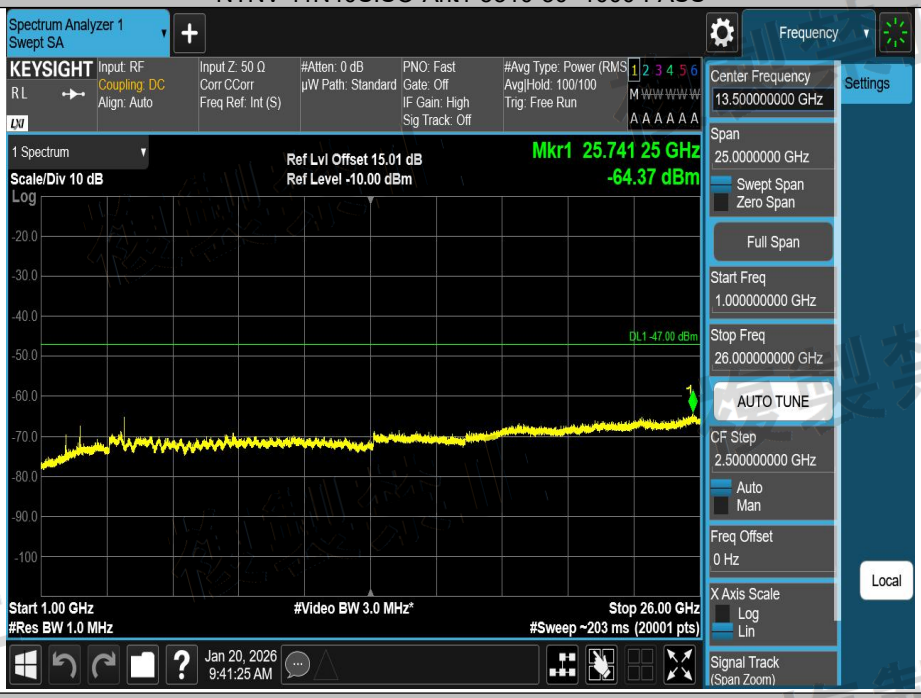

NTNV-11N40SISO-Ant1-5310-1000~26000-PASS




NTNV-11N40SISO-Ant1-5510-30~1000-PASS

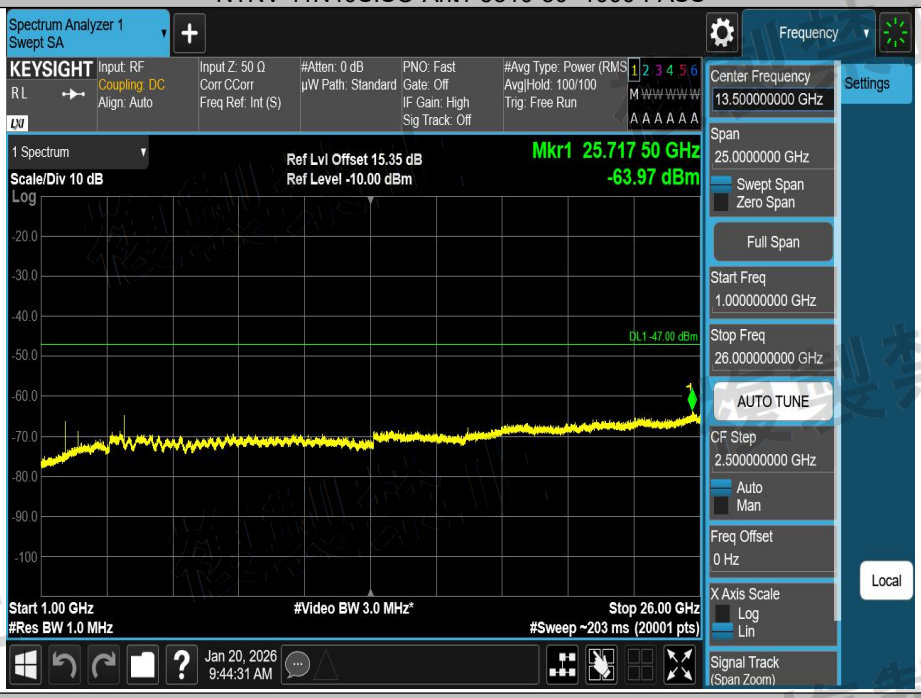

NTNV-11N40SISO-Ant1-5510-1000~26000-PASS




NTNV-11N40SISO-Ant1-5550-30~1000-PASS

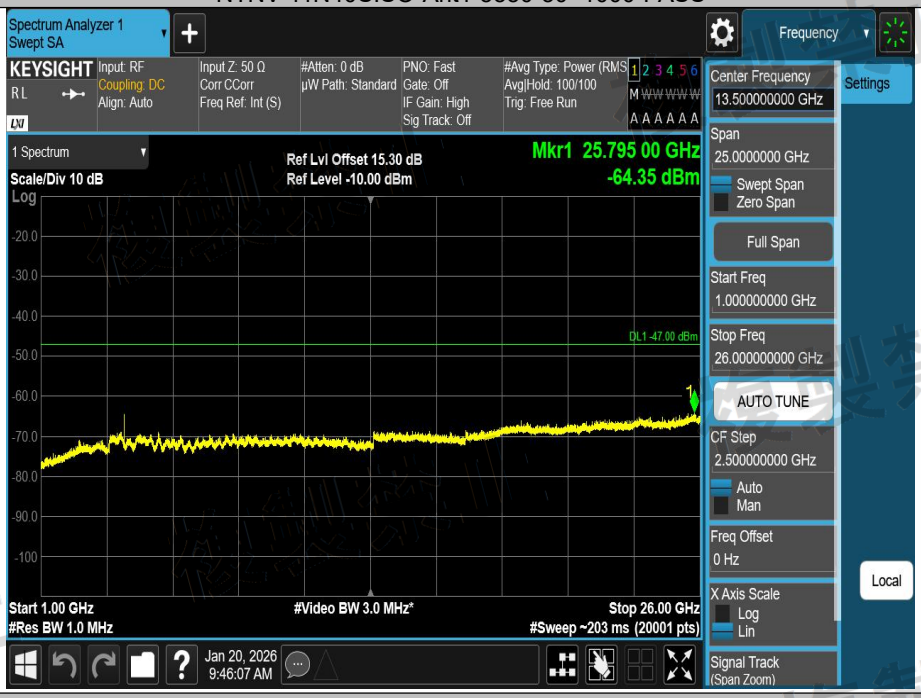

NTNV-11N40SISO-Ant1-5550-1000~26000-PASS




NTNV-11N40SISO-Ant1-5670-30~1000-PASS

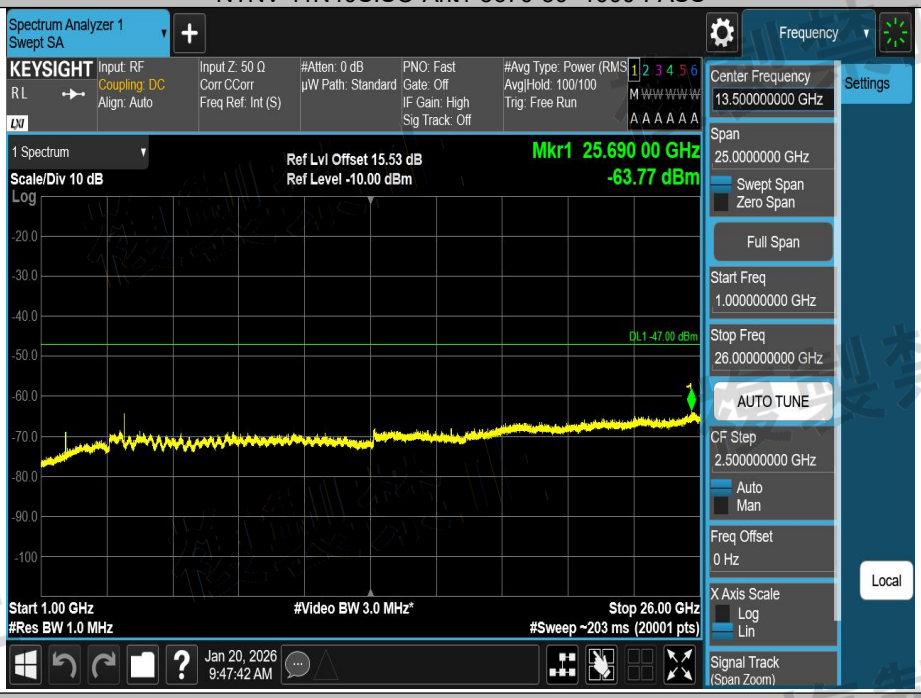

NTNV-11N40SISO-Ant1-5670-1000~26000-PASS




NTNV-11N40SISO-Ant1-5710-30~1000-PASS

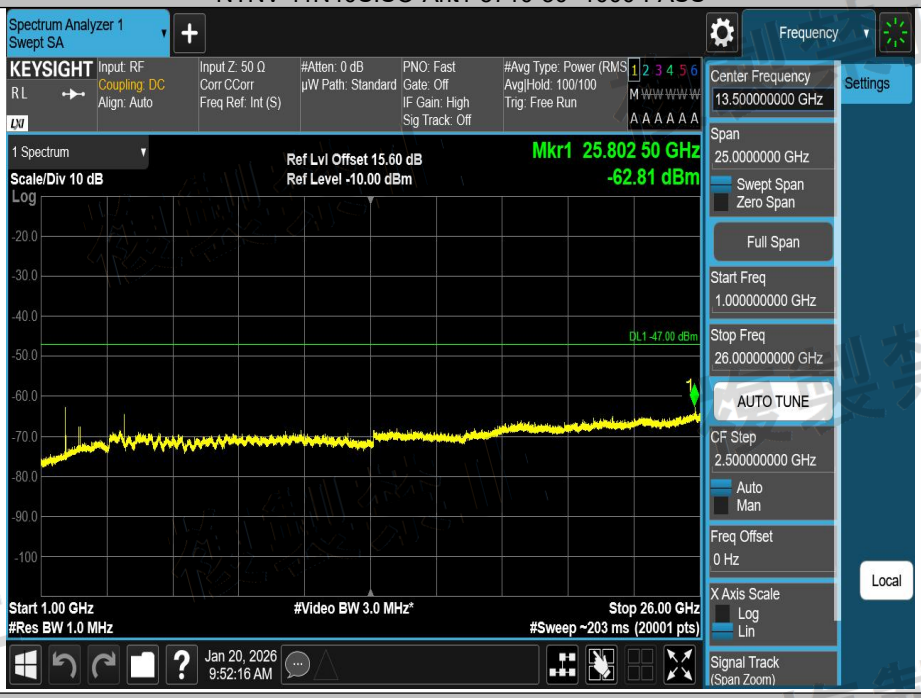

NTNV-11N40SISO-Ant1-5710-1000~26000-PASS




NTNV-11AC20SISO-Ant1-5180-30~1000-PASS

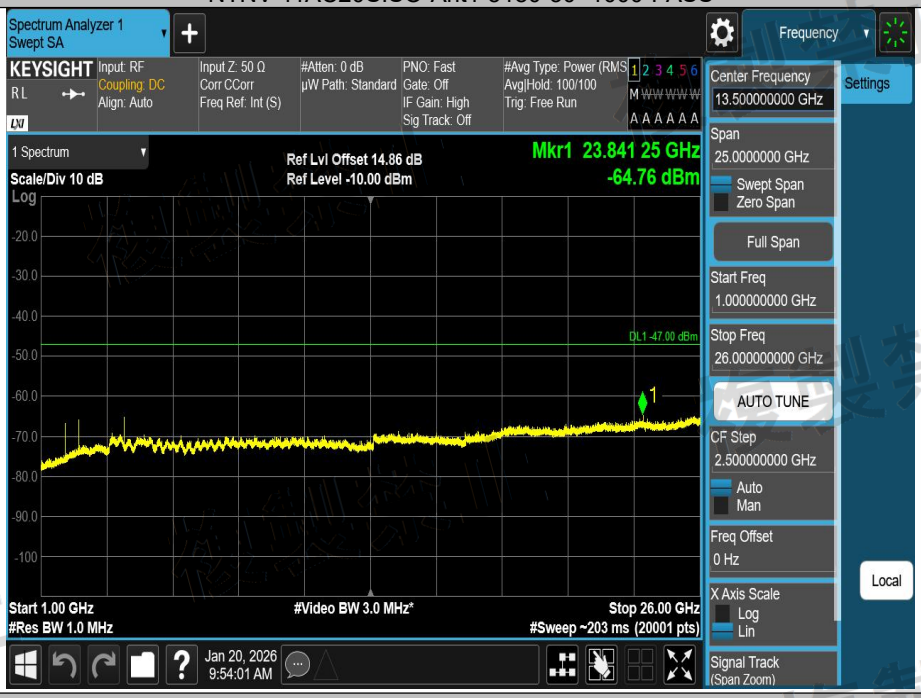

NTNV-11AC20SISO-Ant1-5180-1000~26000-PASS




NTNV-11AC20SISO-Ant1-5200-30~1000-PASS

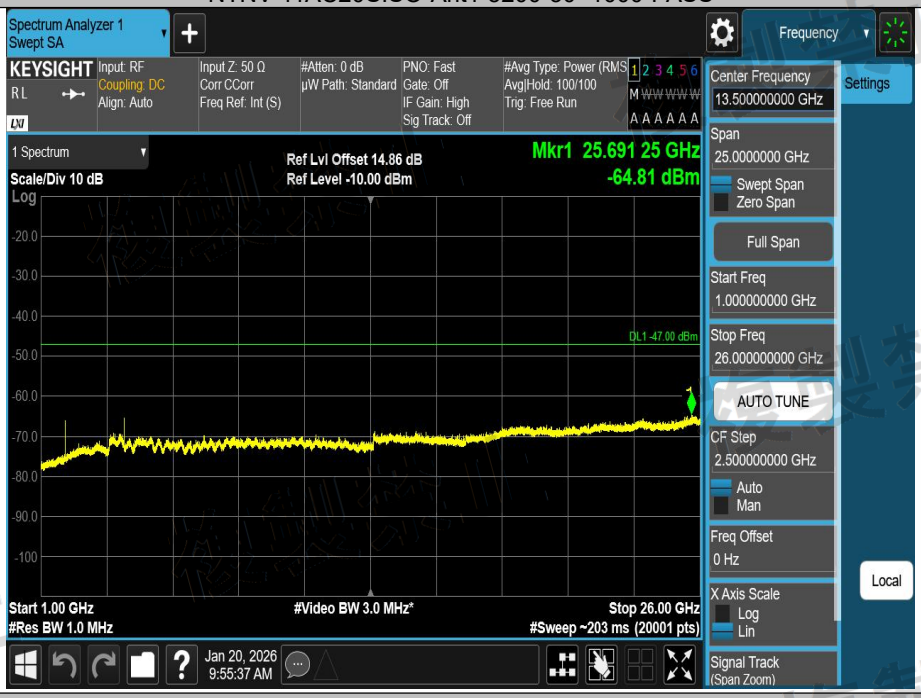

NTNV-11AC20SISO-Ant1-5200-1000~26000-PASS




NTNV-11AC20SISO-Ant1-5220-30~1000-PASS

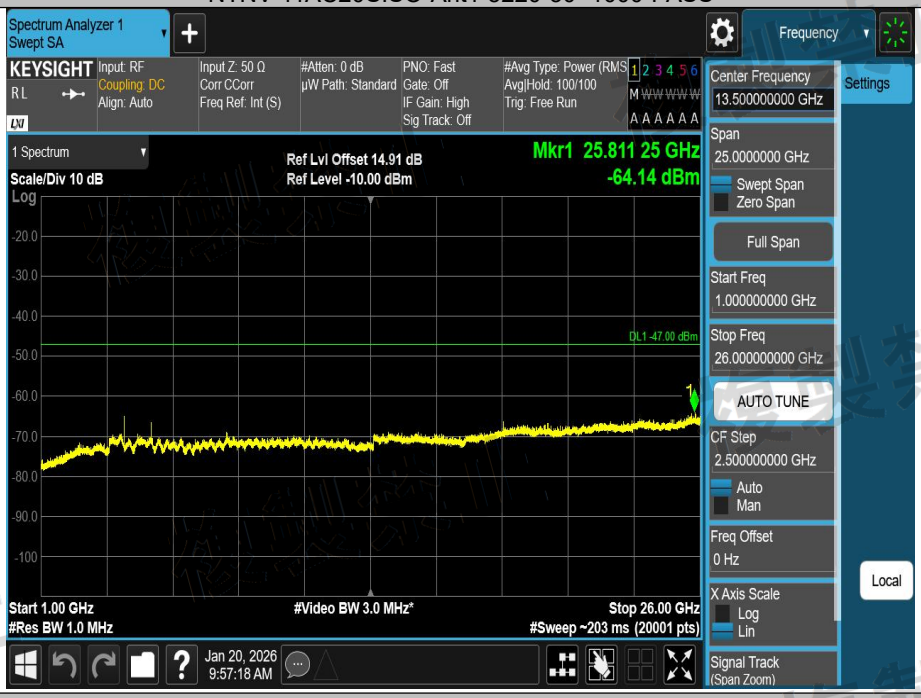

NTNV-11AC20SISO-Ant1-5220-1000~26000-PASS




NTNV-11AC20SISO-Ant1-5240-30~1000-PASS

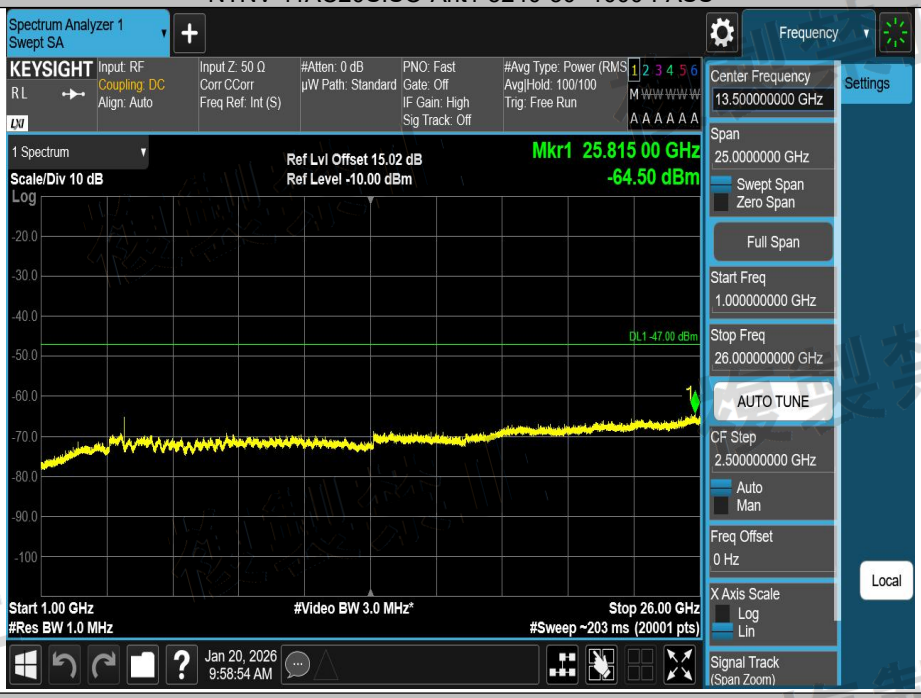

NTNV-11AC20SISO-Ant1-5240-1000~26000-PASS




NTNV-11AC20SISO-Ant1-5260-30~1000-PASS

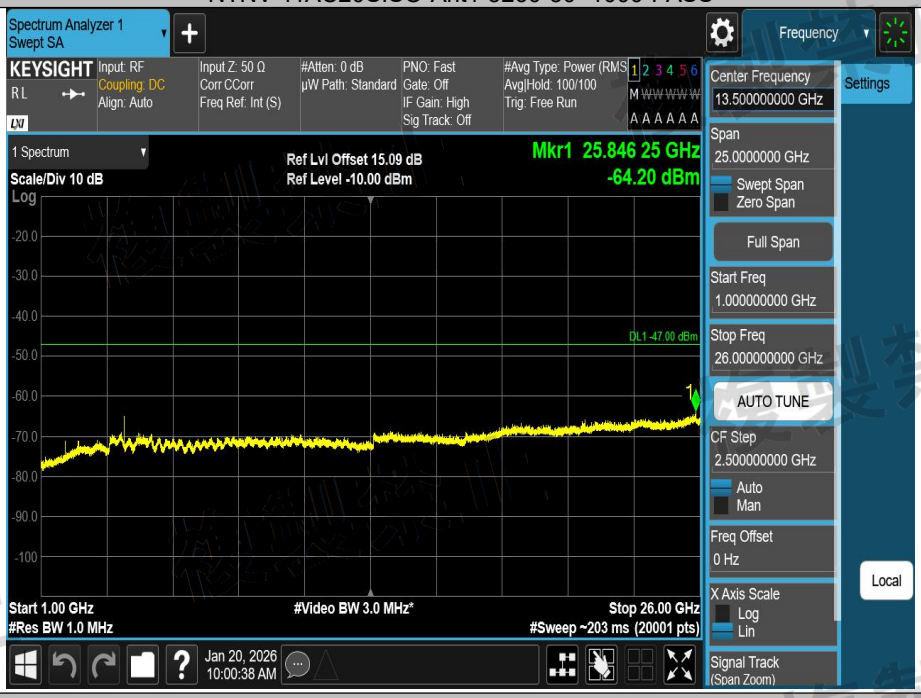

NTNV-11AC20SISO-Ant1-5260-1000~26000-PASS




NTNV-11AC20SISO-Ant1-5280-30~1000-PASS

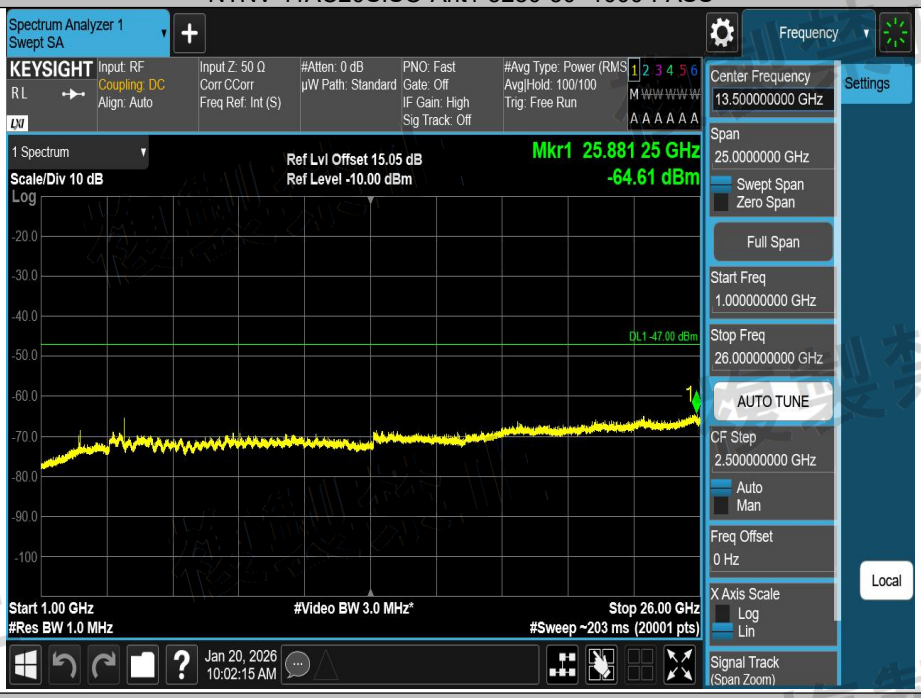

NTNV-11AC20SISO-Ant1-5280-1000~26000-PASS




NTNV-11AC20SISO-Ant1-5300-30~1000-PASS

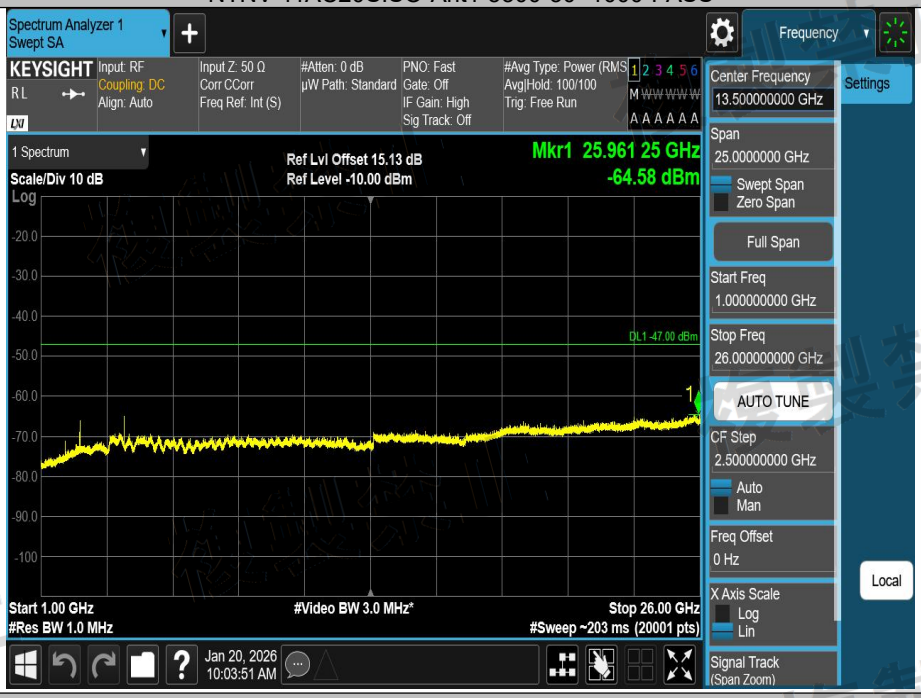

NTNV-11AC20SISO-Ant1-5300-1000~26000-PASS




NTNV-11AC20SISO-Ant1-5320-30~1000-PASS

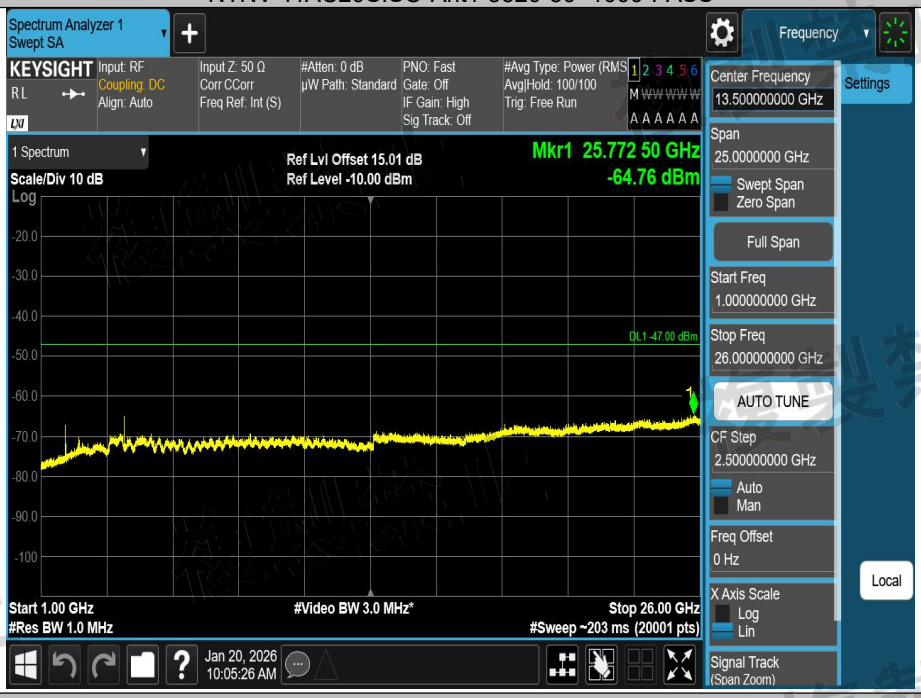

NTNV-11AC20SISO-Ant1-5320-1000~26000-PASS




NTNV-11AC20SISO-Ant1-5500-30~1000-PASS

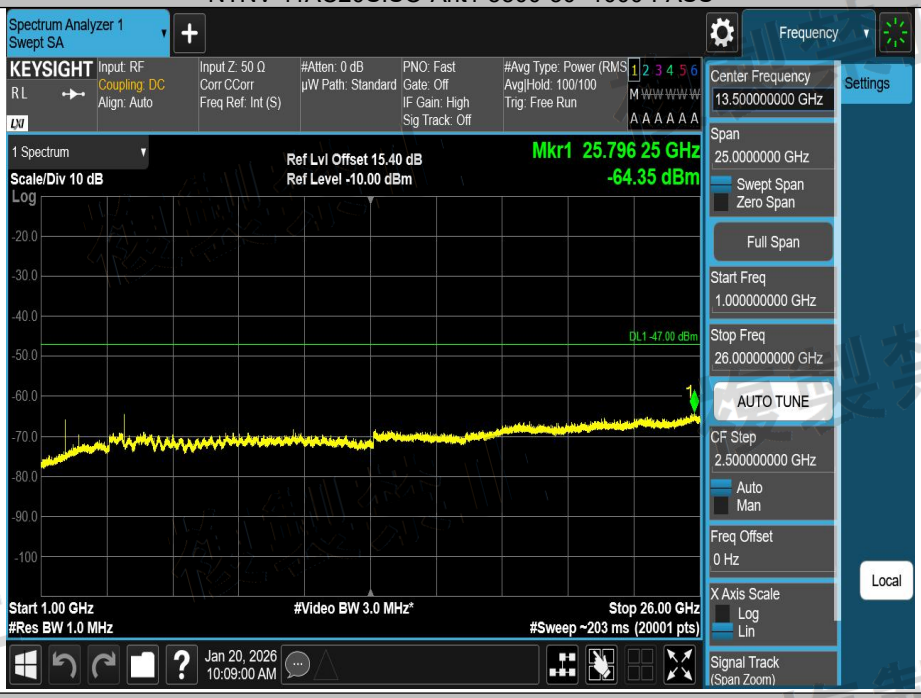

NTNV-11AC20SISO-Ant1-5500-1000~26000-PASS




NTNV-11AC20SISO-Ant1-5580-30~1000-PASS

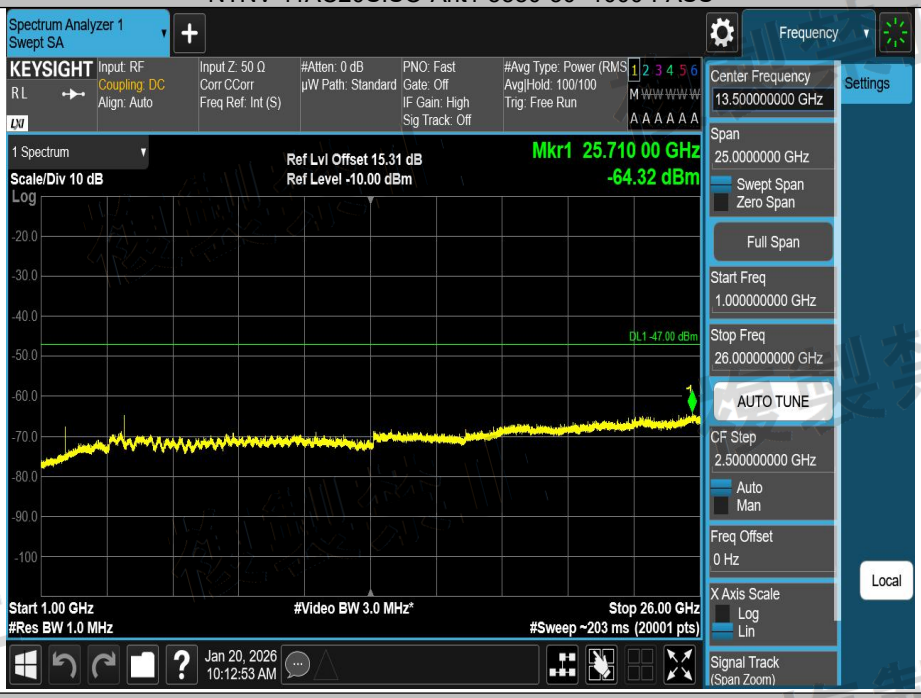

NTNV-11AC20SISO-Ant1-5580-1000~26000-PASS




NTNV-11AC20SISO-Ant1-5600-30~1000-PASS

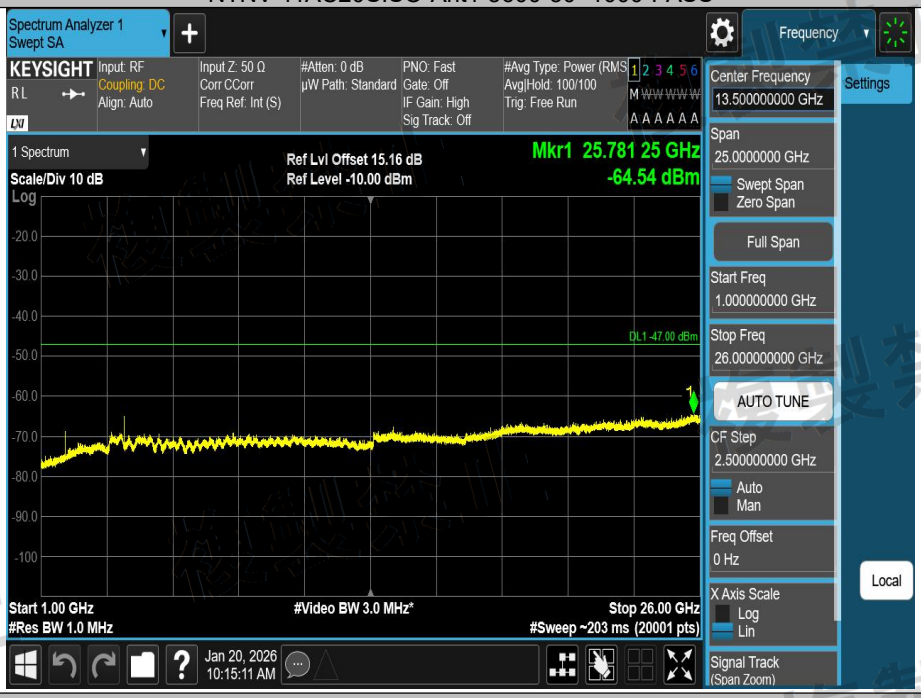

NTNV-11AC20SISO-Ant1-5600-1000~26000-PASS




NTNV-11AC20SISO-Ant1-5700-30~1000-PASS

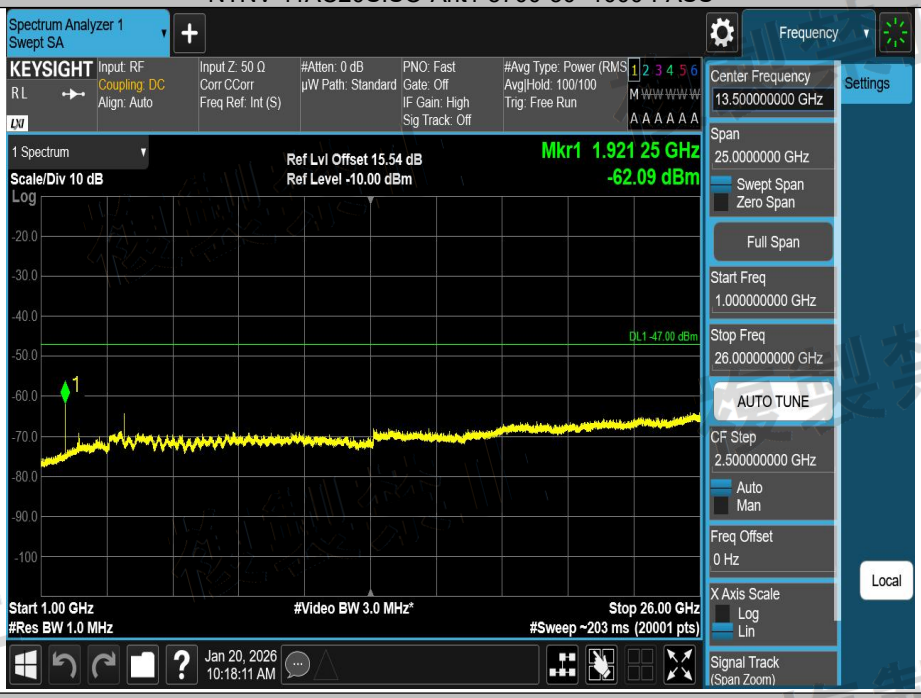


NTNV-11AC20SISO-Ant1-5700-1000~26000-PASS




NTNV-11AC20SISO-Ant1-5720-30~1000-PASS

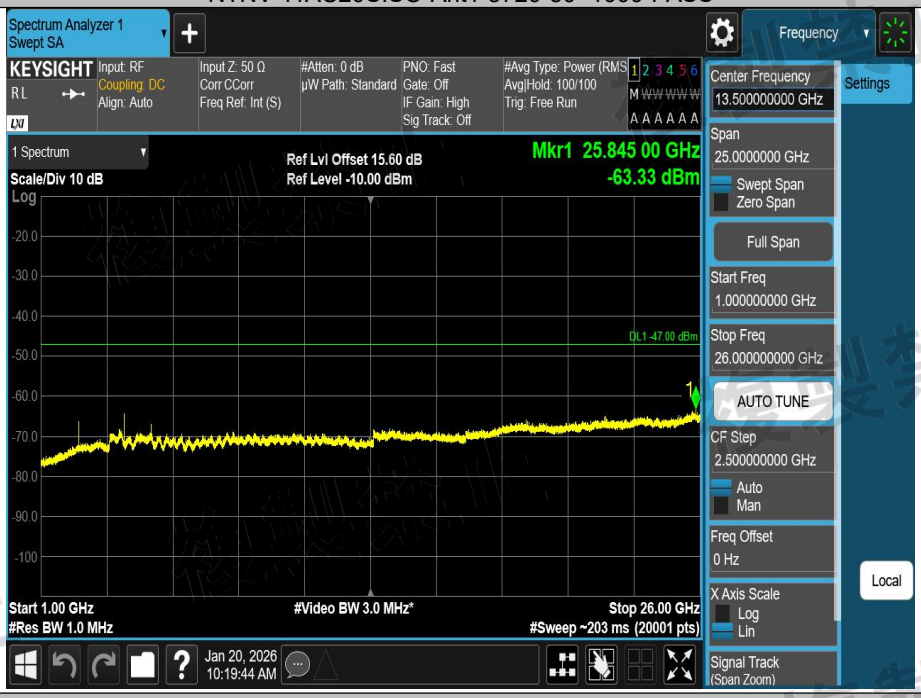

NTNV-11AC20SISO-Ant1-5720-1000~26000-PASS

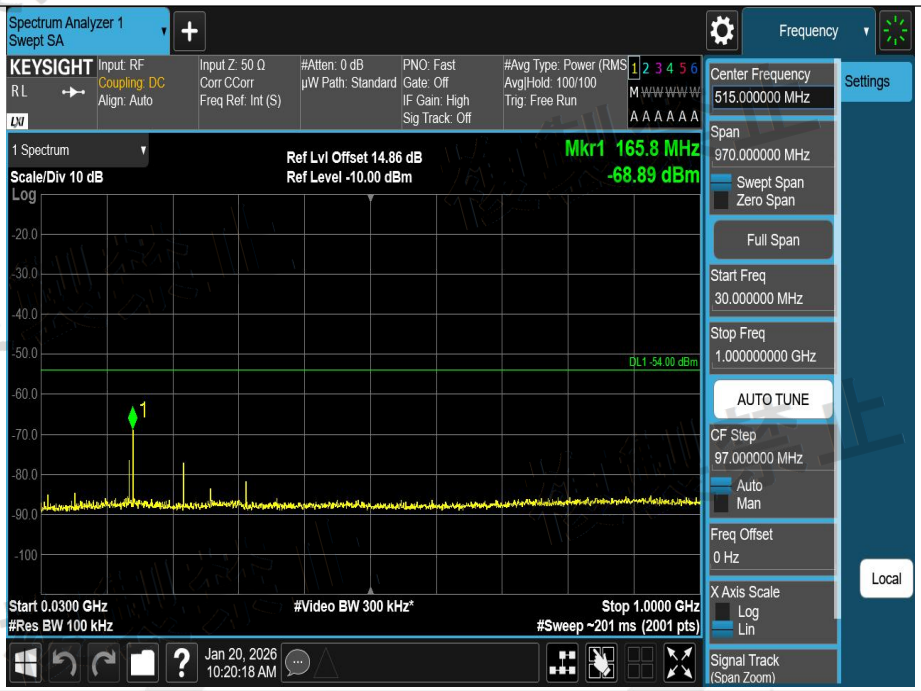


NTNV-11AC40SISO-Ant1-5190-30~1000-PASS

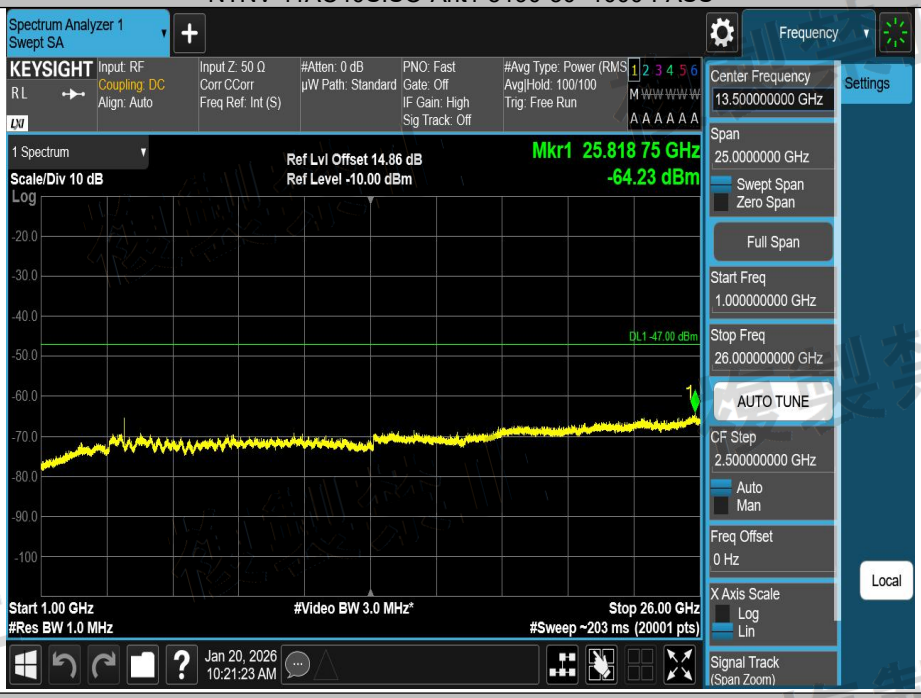

NTNV-11AC40SISO-Ant1-5190-1000~26000-PASS




NTNV-11AC40SISO-Ant1-5230-30~1000-PASS

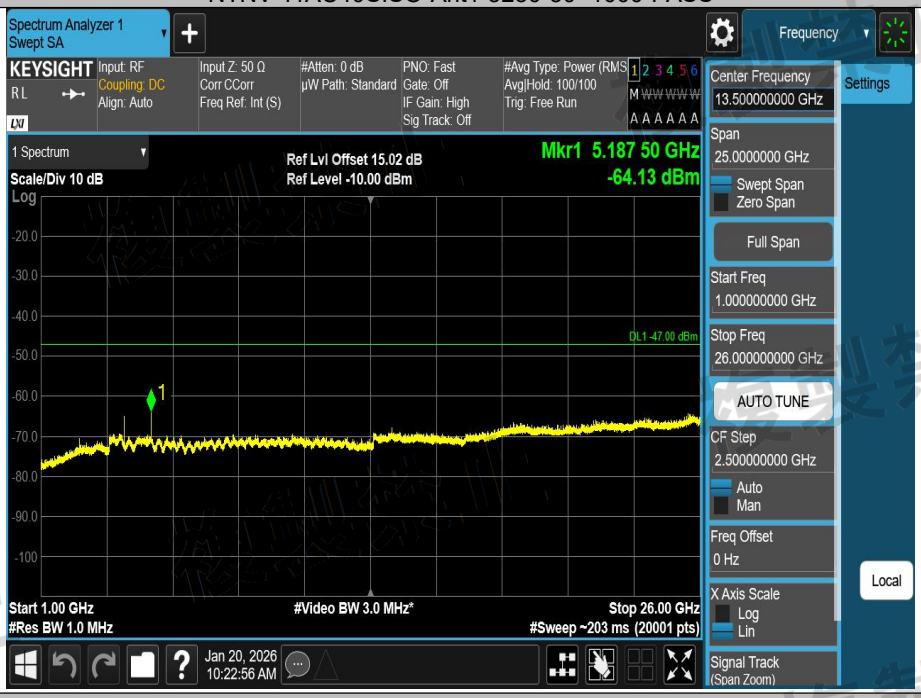

NTNV-11AC40SISO-Ant1-5230-1000~26000-PASS




NTNV-11AC40SISO-Ant1-5270-30~1000-PASS

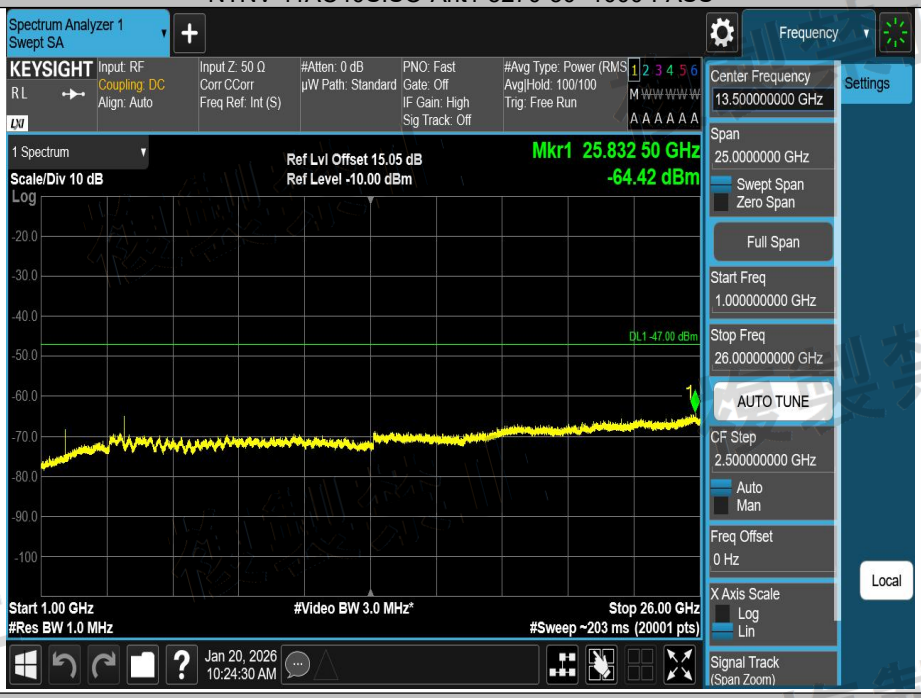

NTNV-11AC40SISO-Ant1-5270-1000~26000-PASS




NTNV-11AC40SISO-Ant1-5310-30~1000-PASS

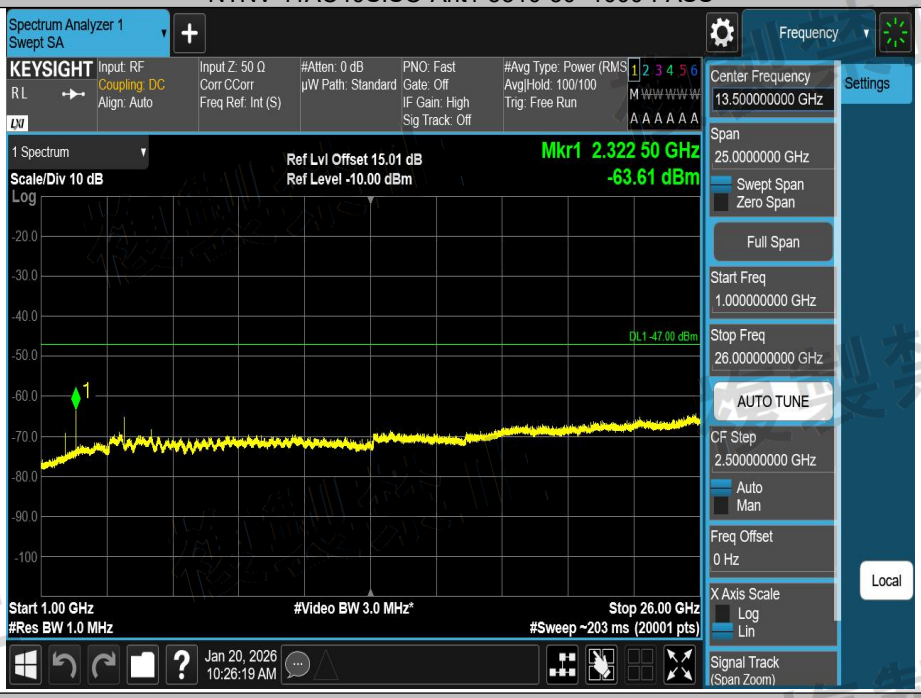

NTNV-11AC40SISO-Ant1-5310-1000~26000-PASS




NTNV-11AC40SISO-Ant1-5510-30~1000-PASS

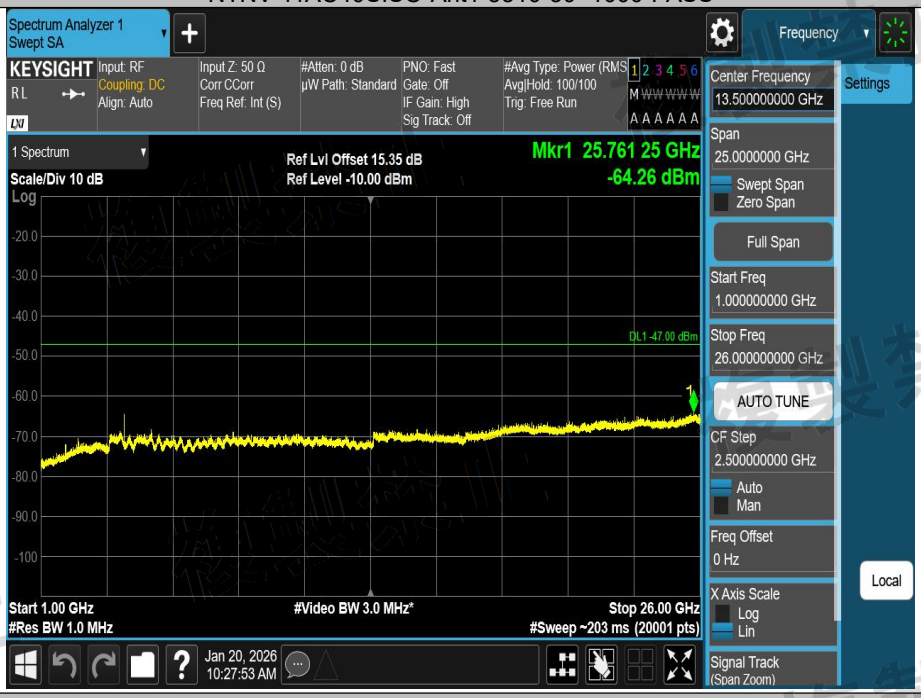

NTNV-11AC40SISO-Ant1-5510-1000~26000-PASS




NTNV-11AC40SISO-Ant1-5550-30~1000-PASS

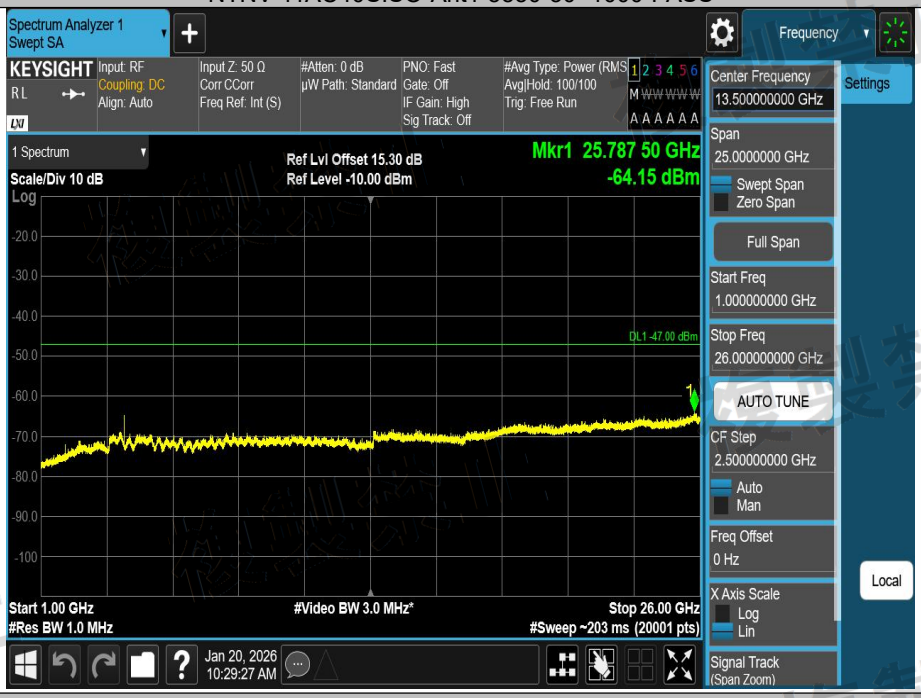

NTNV-11AC40SISO-Ant1-5550-1000~26000-PASS




NTNV-11AC40SISO-Ant1-5670-30~1000-PASS

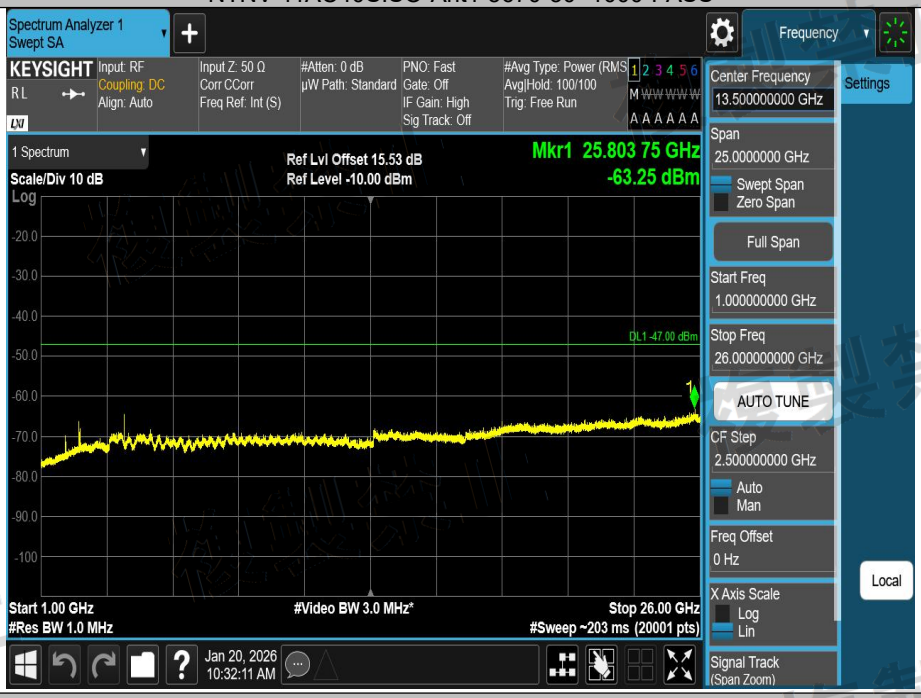

NTNV-11AC40SISO-Ant1-5670-1000~26000-PASS




NTNV-11AC40SISO-Ant1-5710-30~1000-PASS

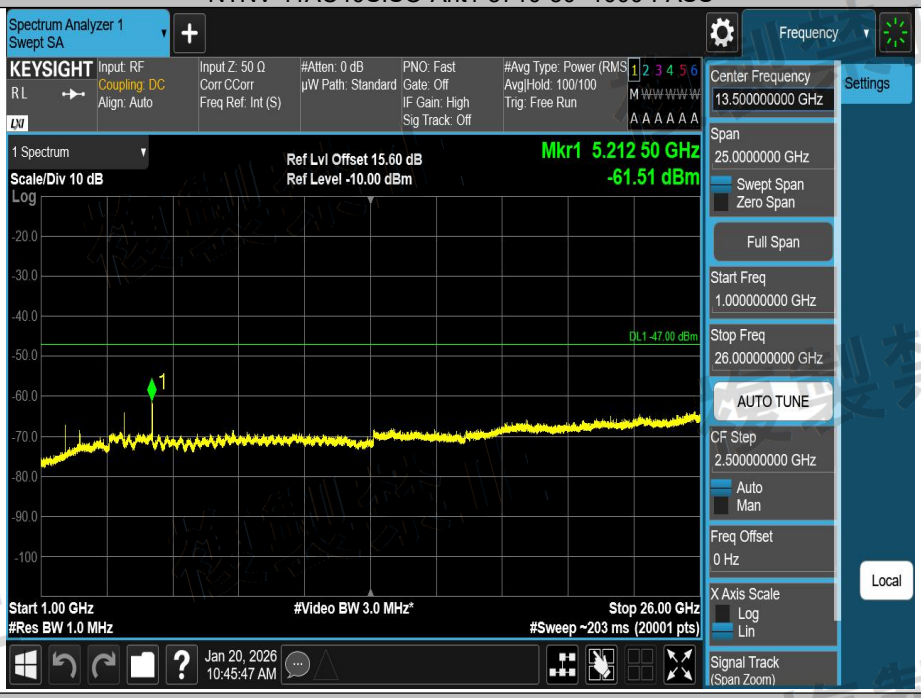


NTNV-11AC40SISO-Ant1-5710-1000~26000-PASS




NTNV-11AX20SISO-Ant1-5180-30~1000-PASS

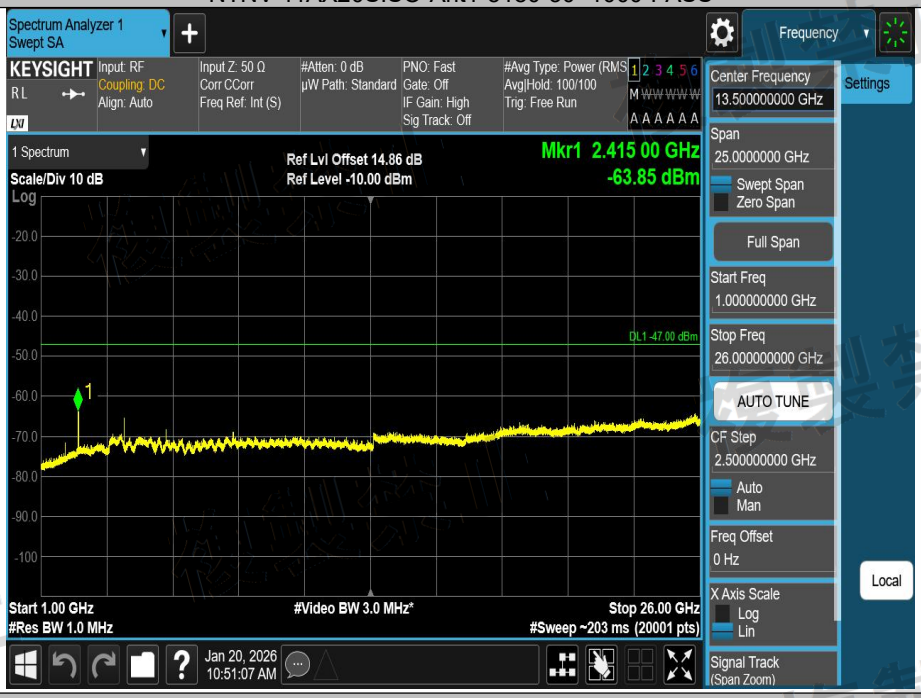

NTNV-11AX20SISO-Ant1-5180-1000~26000-PASS

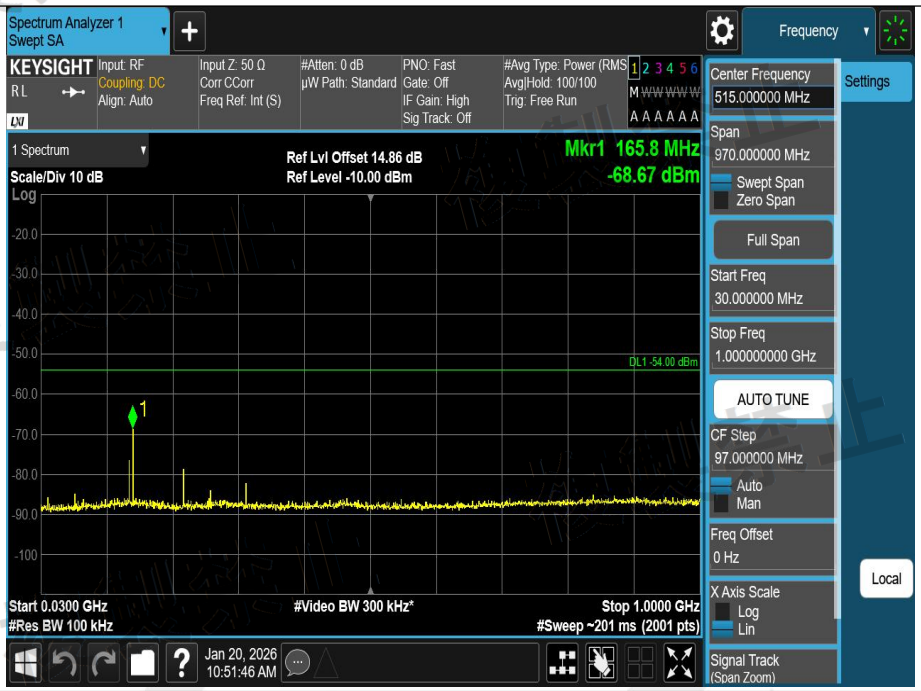


NTNV-11AX20SISO-Ant1-5200-30~1000-PASS

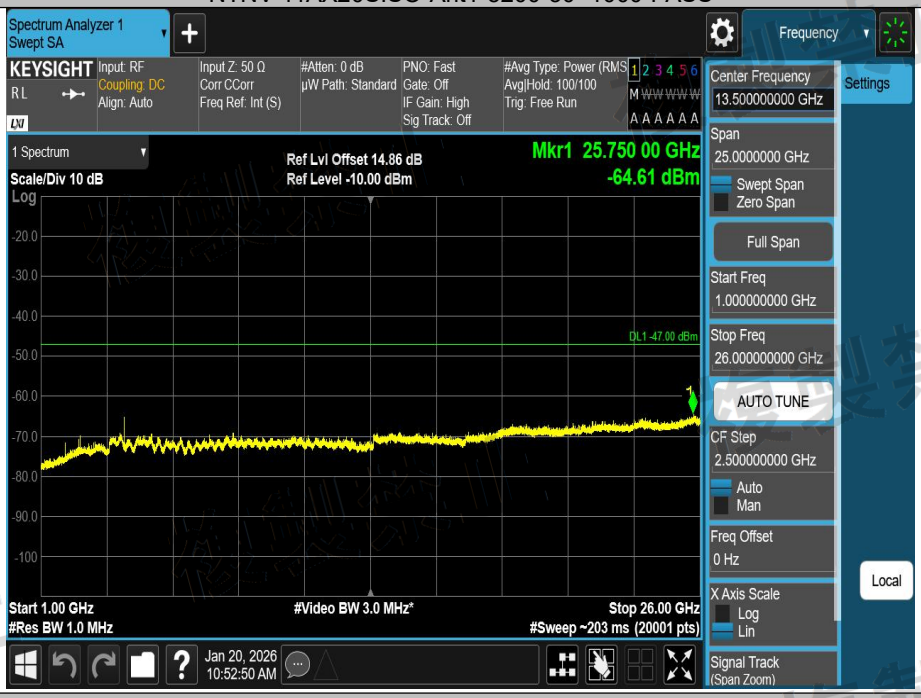

NTNV-11AX20SISO-Ant1-5200-1000~26000-PASS




NTNV-11AX20SISO-Ant1-5220-30~1000-PASS

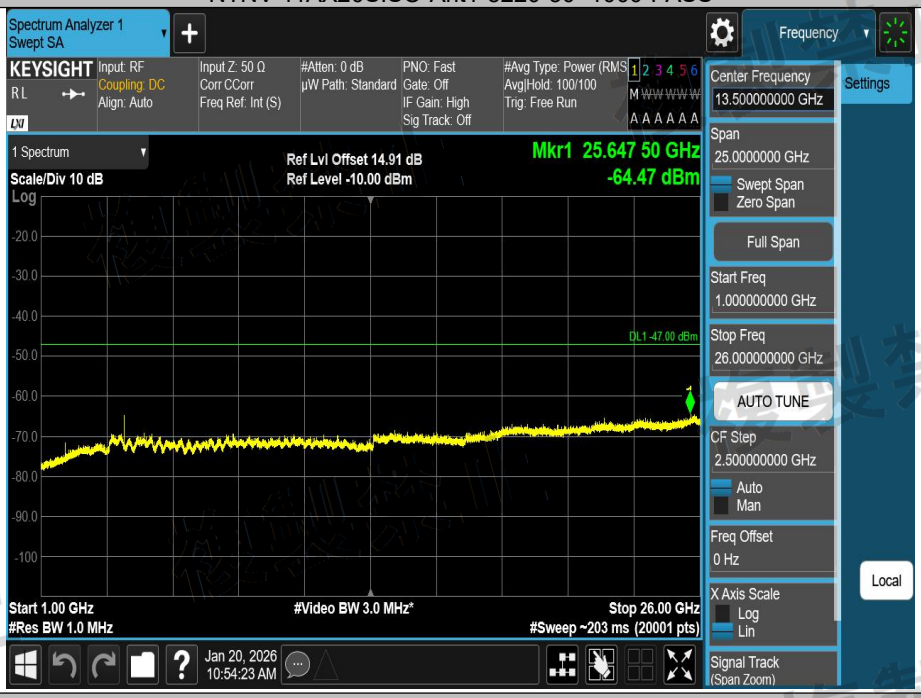

NTNV-11AX20SISO-Ant1-5220-1000~26000-PASS




NTNV-11AX20SISO-Ant1-5240-30~1000-PASS

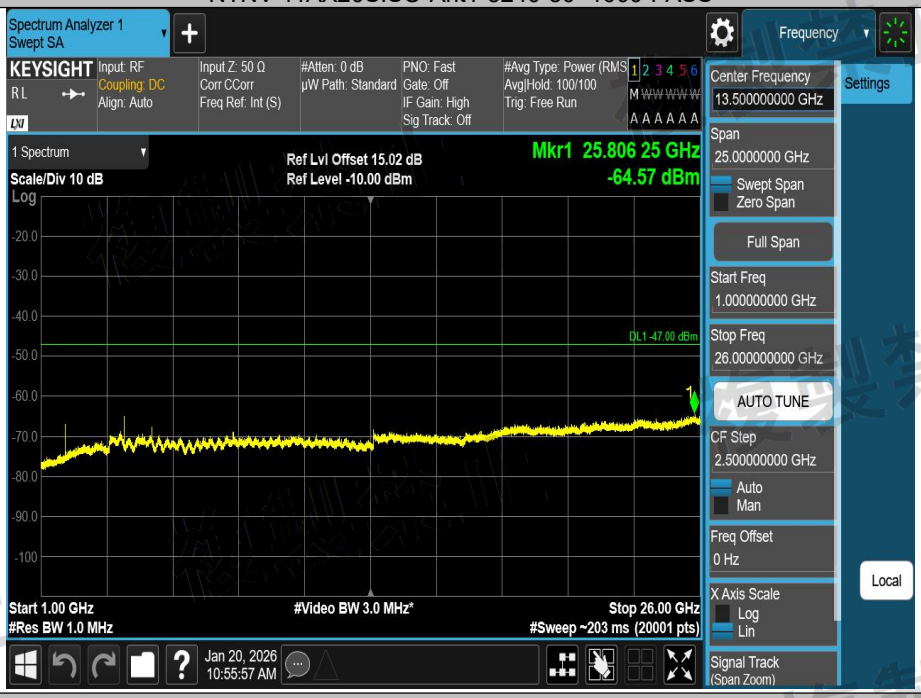

NTNV-11AX20SISO-Ant1-5240-1000~26000-PASS




NTNV-11AX20SISO-Ant1-5260-30~1000-PASS

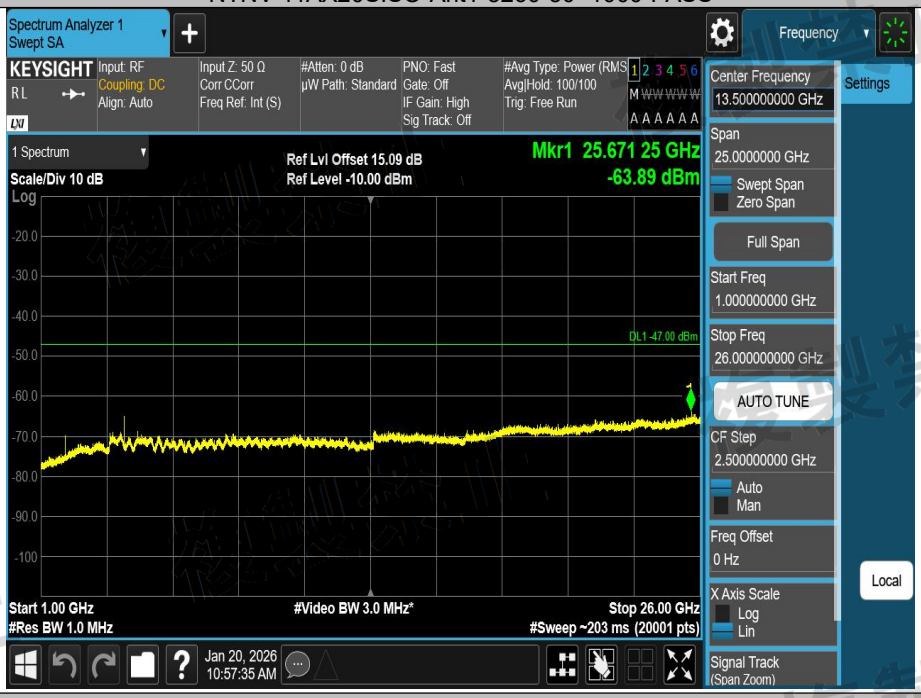

NTNV-11AX20SISO-Ant1-5260-1000~26000-PASS




NTNV-11AX20SISO-Ant1-5280-30~1000-PASS

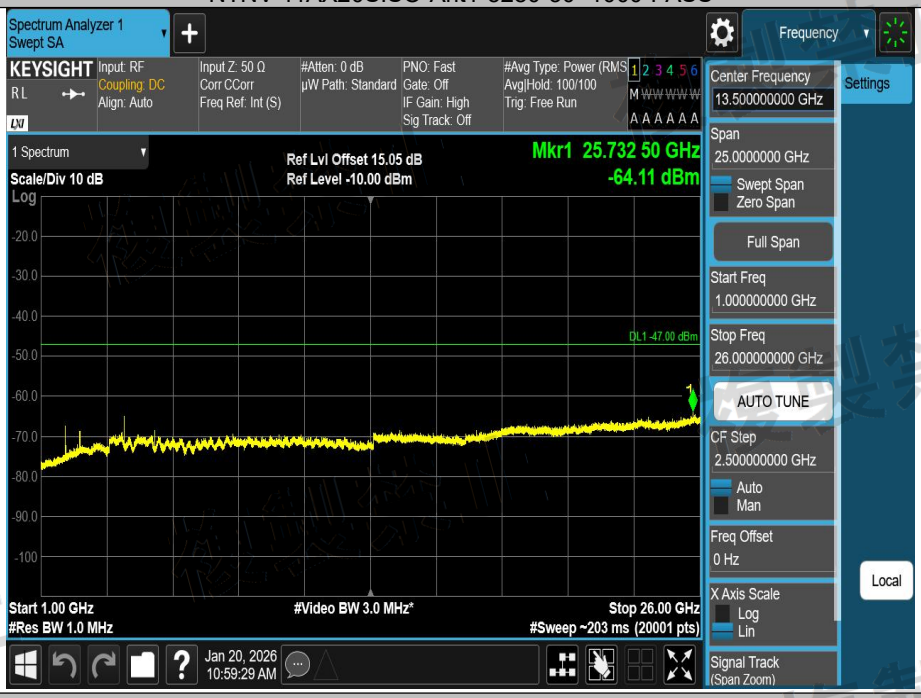

NTNV-11AX20SISO-Ant1-5280-1000~26000-PASS




NTNV-11AX20SISO-Ant1-5300-30~1000-PASS

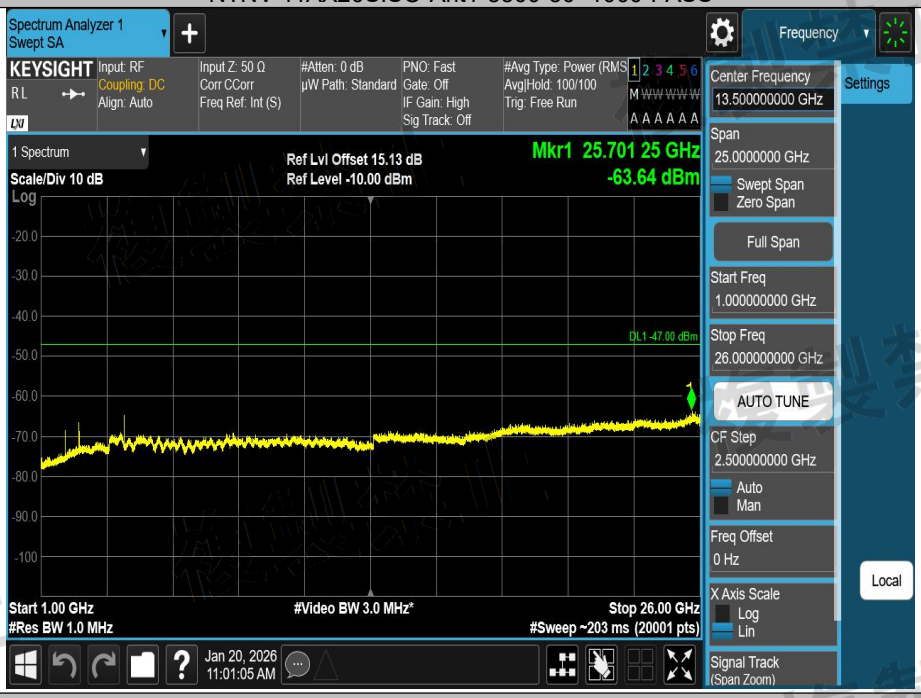


NTNV-11AX20SISO-Ant1-5300-1000~26000-PASS




NTNV-11AX20SISO-Ant1-5320-30~1000-PASS

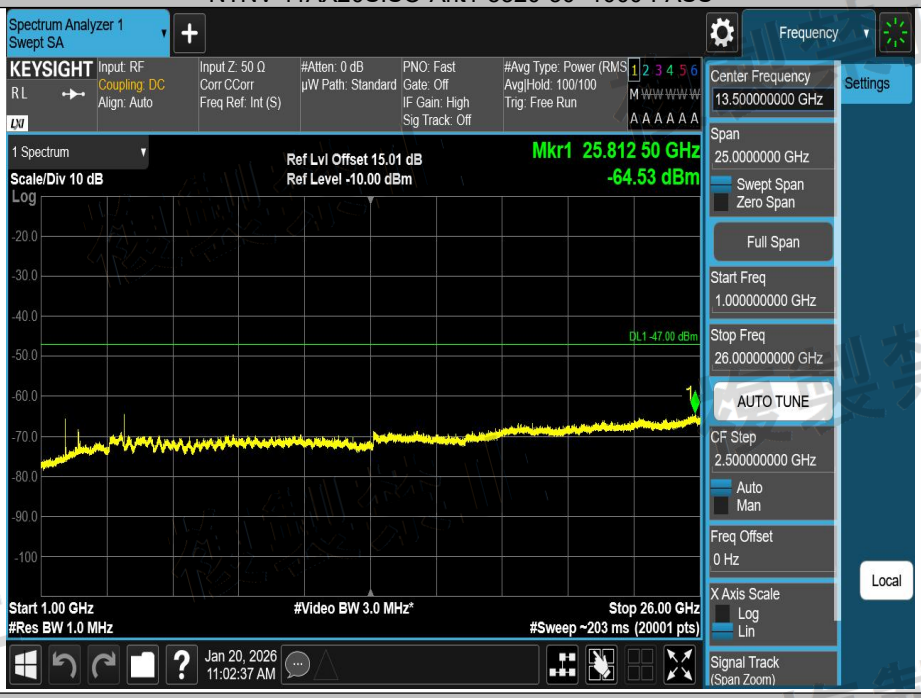

NTNV-11AX20SISO-Ant1-5320-1000~26000-PASS

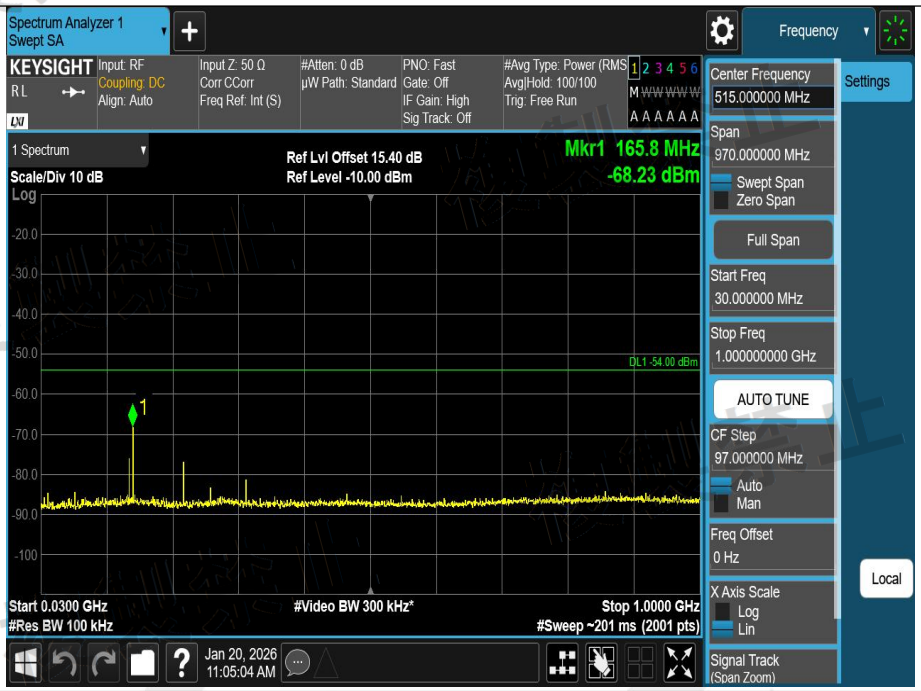


NTNV-11AX20SISO-Ant1-5500-30~1000-PASS

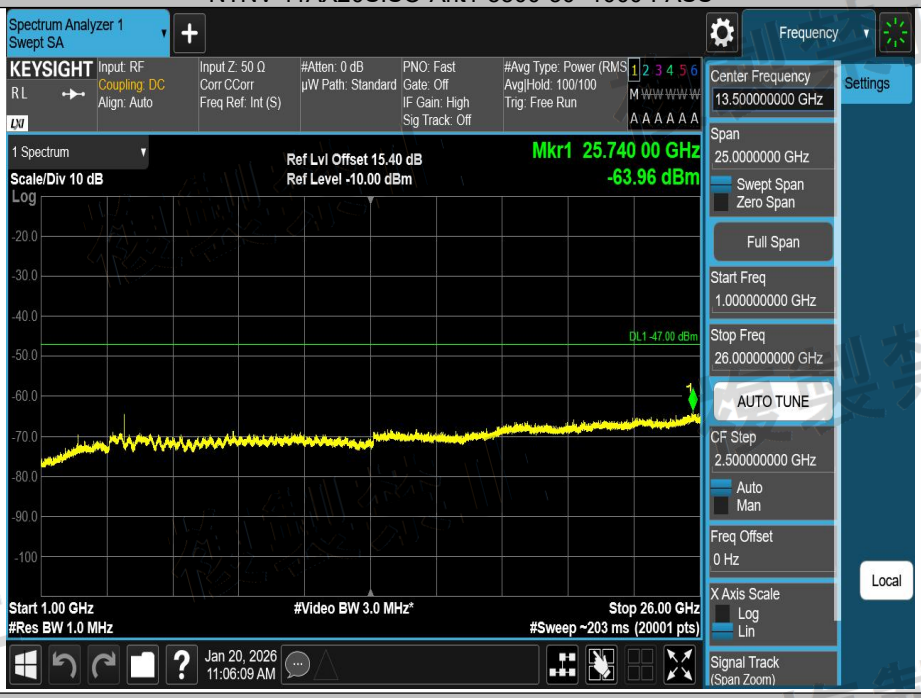

NTNV-11AX20SISO-Ant1-5500-1000~26000-PASS




NTNV-11AX20SISO-Ant1-5580-30~1000-PASS

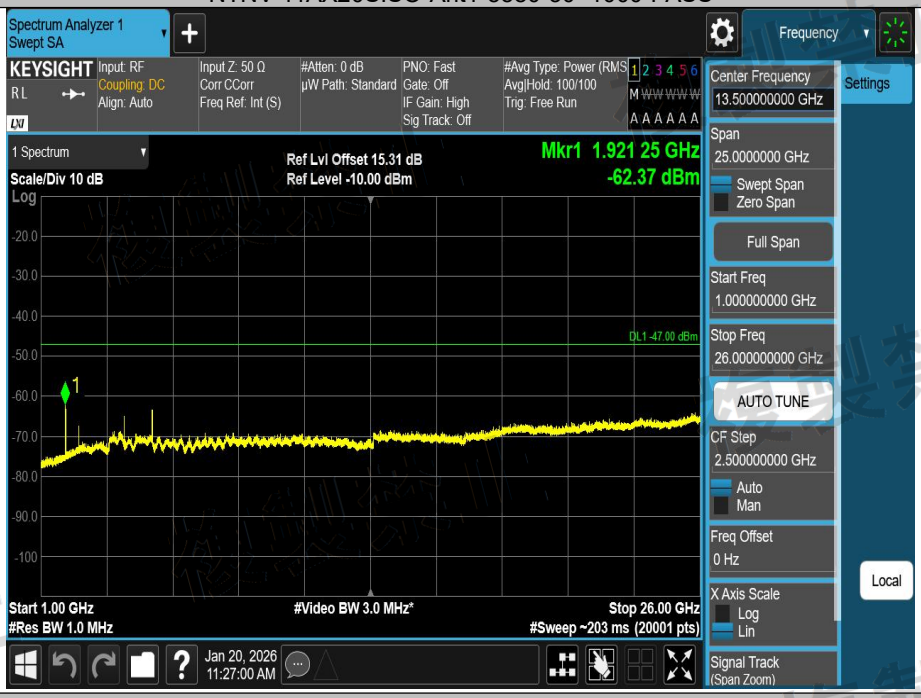


NTNV-11AX20SISO-Ant1-5580-1000~26000-PASS




NTNV-11AX20SISO-Ant1-5600-30~1000-PASS

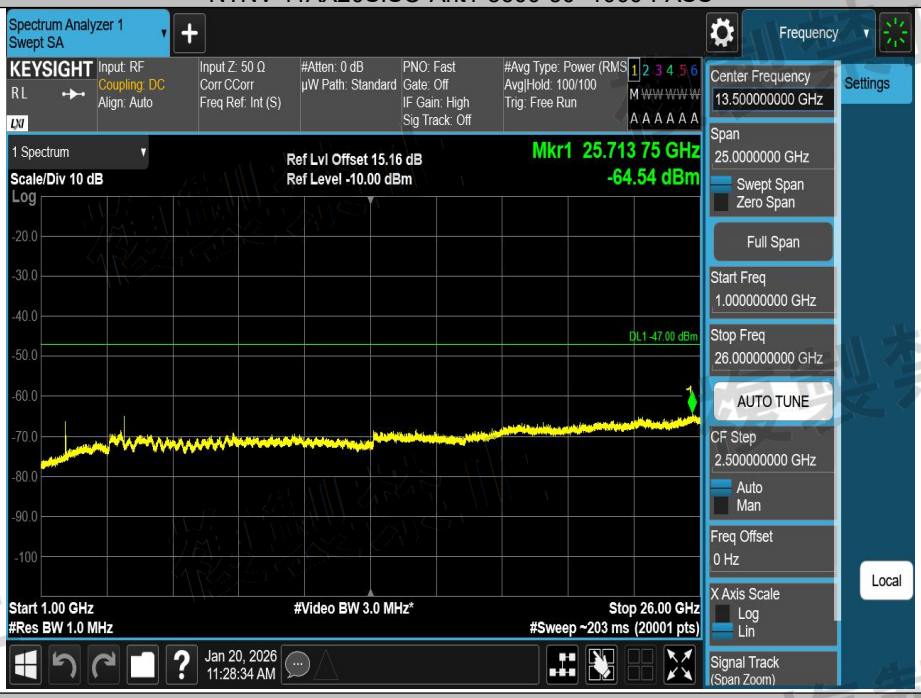

NTNV-11AX20SISO-Ant1-5600-1000~26000-PASS

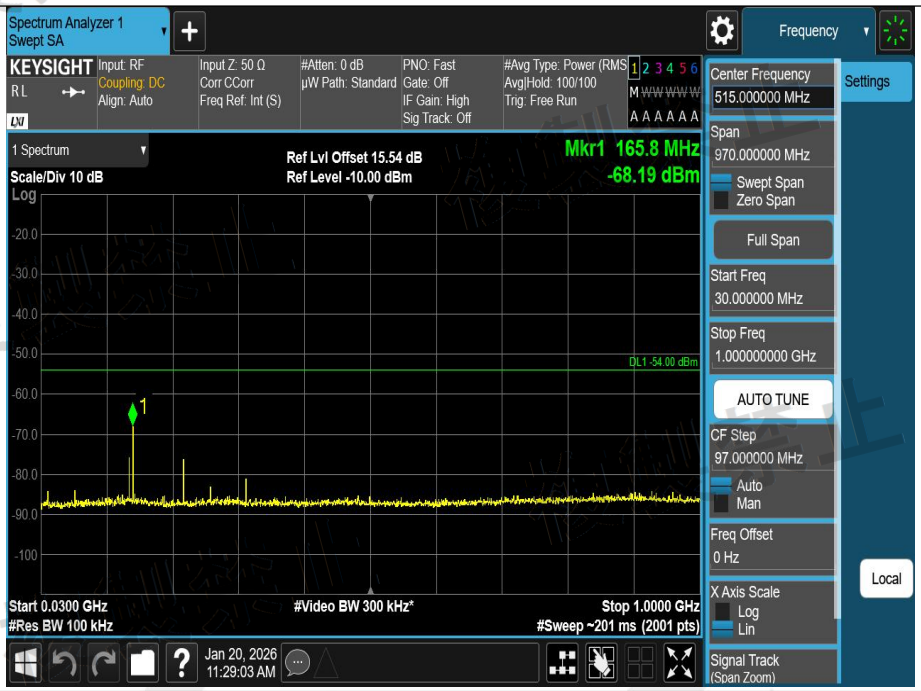


NTNV-11AX20SISO-Ant1-5700-30~1000-PASS

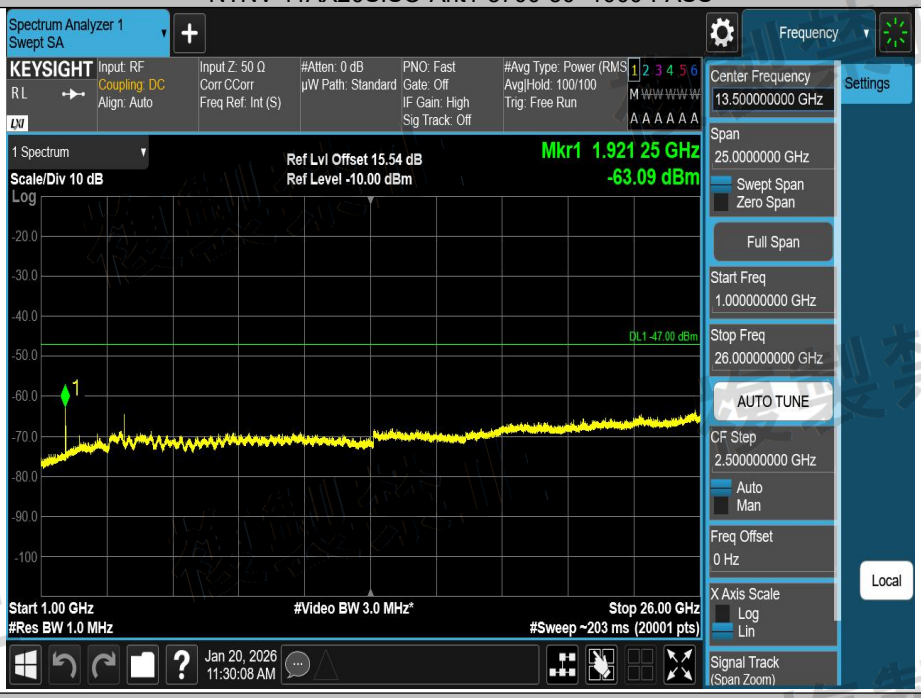

NTNV-11AX20SISO-Ant1-5700-1000~26000-PASS




NTNV-11AX20SISO-Ant1-5720-30~1000-PASS

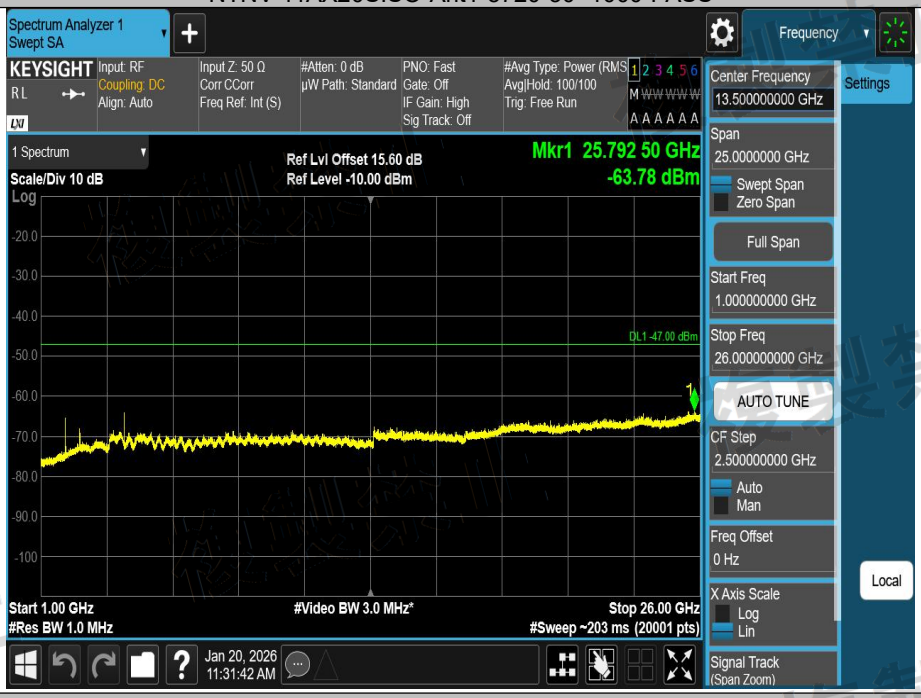

NTNV-11AX20SISO-Ant1-5720-1000~26000-PASS




NTNV-11AX40SISO-Ant1-5190-30~1000-PASS

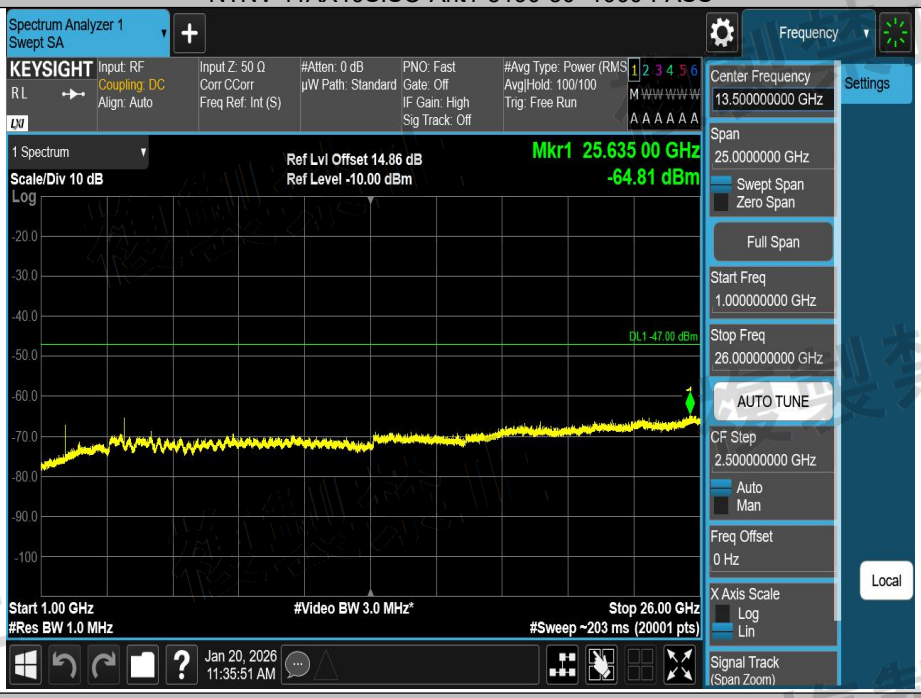

NTNV-11AX40SISO-Ant1-5190-1000~26000-PASS




NTNV-11AX40SISO-Ant1-5230-30~1000-PASS

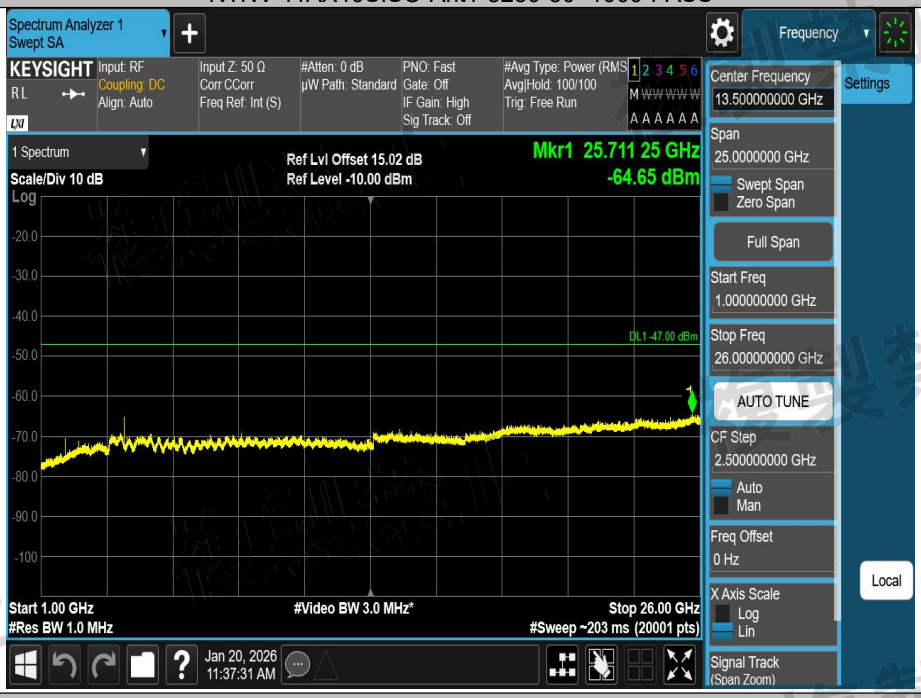

NTNV-11AX40SISO-Ant1-5230-1000~26000-PASS




NTNV-11AX40SISO-Ant1-5270-30~1000-PASS

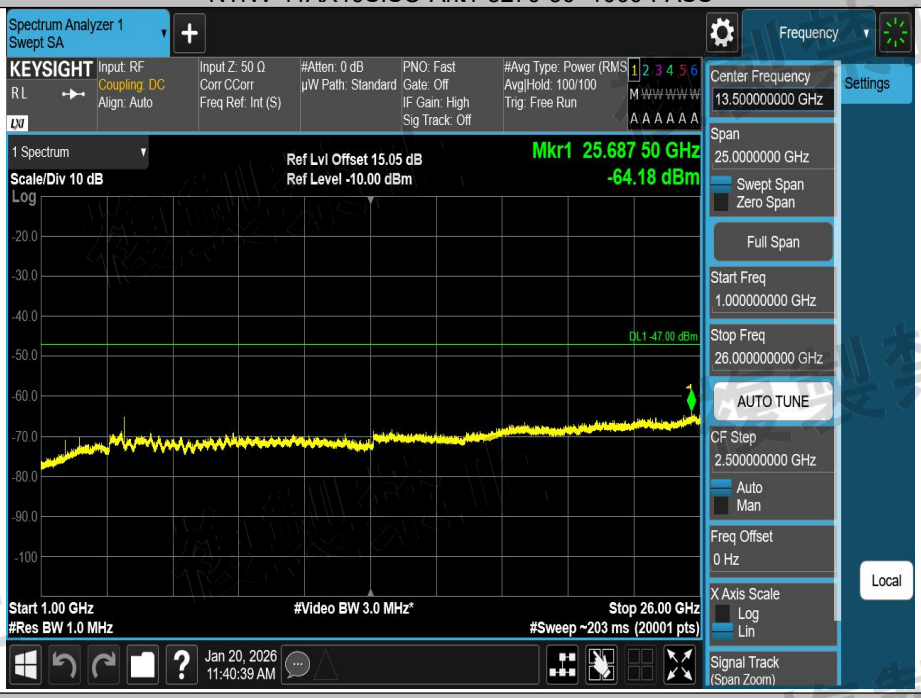


NTNV-11AX40SISO-Ant1-5270-1000~26000-PASS




NTNV-11AX40SISO-Ant1-5310-30~1000-PASS

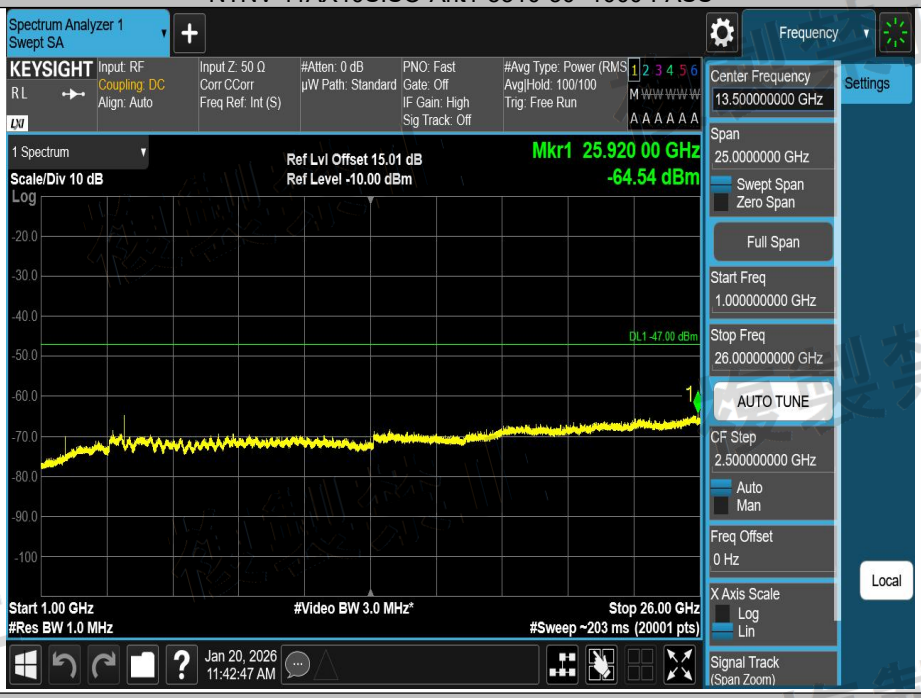

NTNV-11AX40SISO-Ant1-5310-1000~26000-PASS

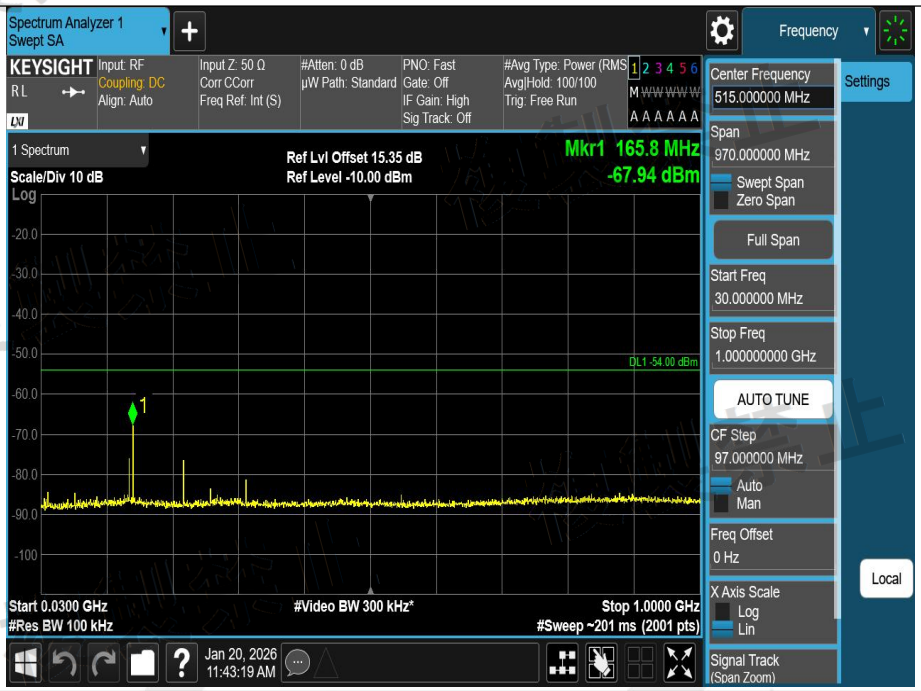


NTNV-11AX40SISO-Ant1-5510-30~1000-PASS

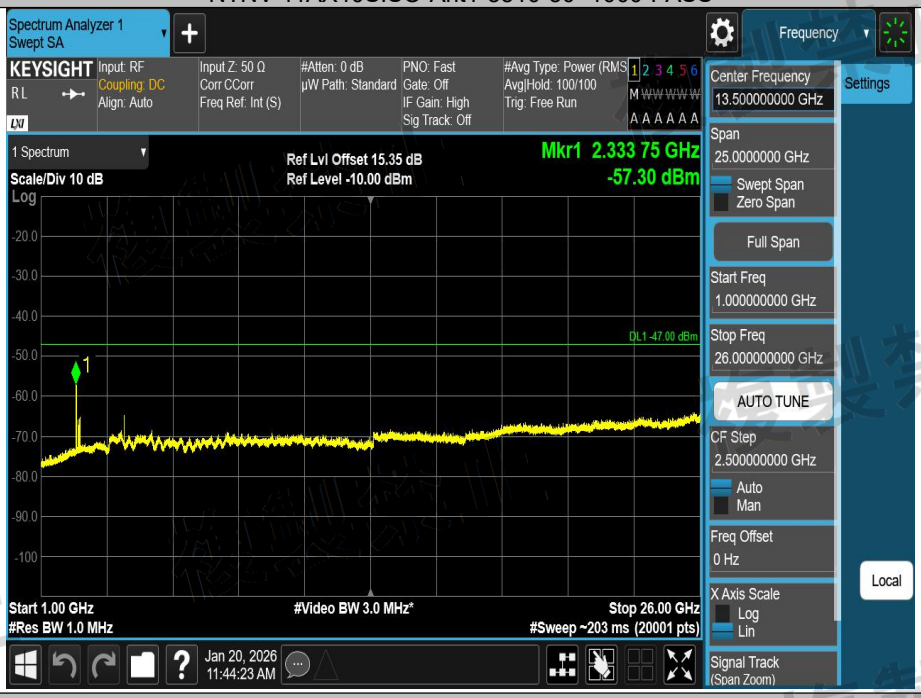

NTNV-11AX40SISO-Ant1-5510-1000~26000-PASS




NTNV-11AX40SISO-Ant1-5550-30~1000-PASS

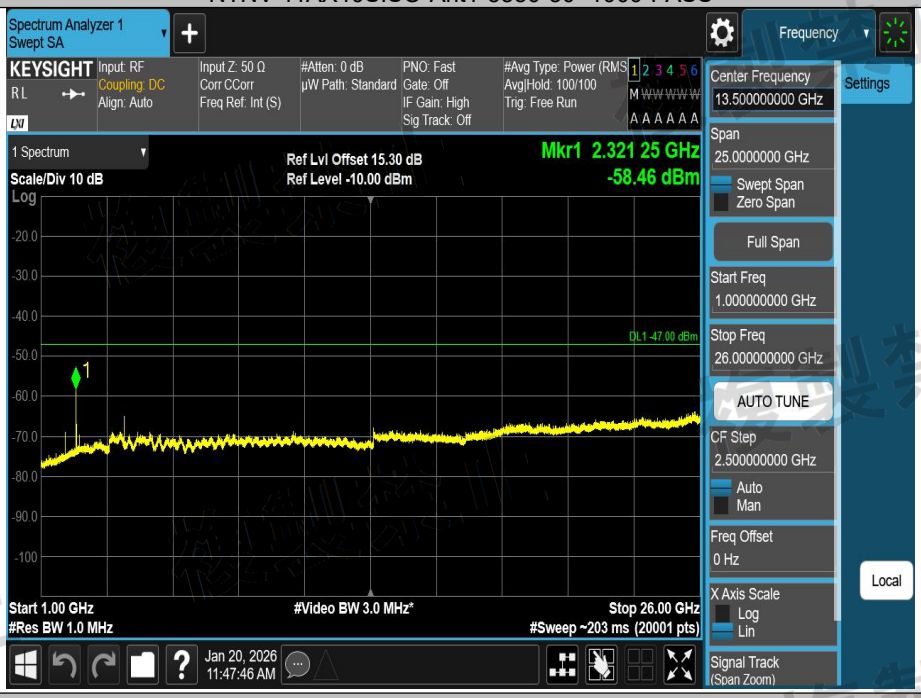

NTNV-11AX40SISO-Ant1-5550-1000~26000-PASS




NTNV-11AX40SISO-Ant1-5670-30~1000-PASS

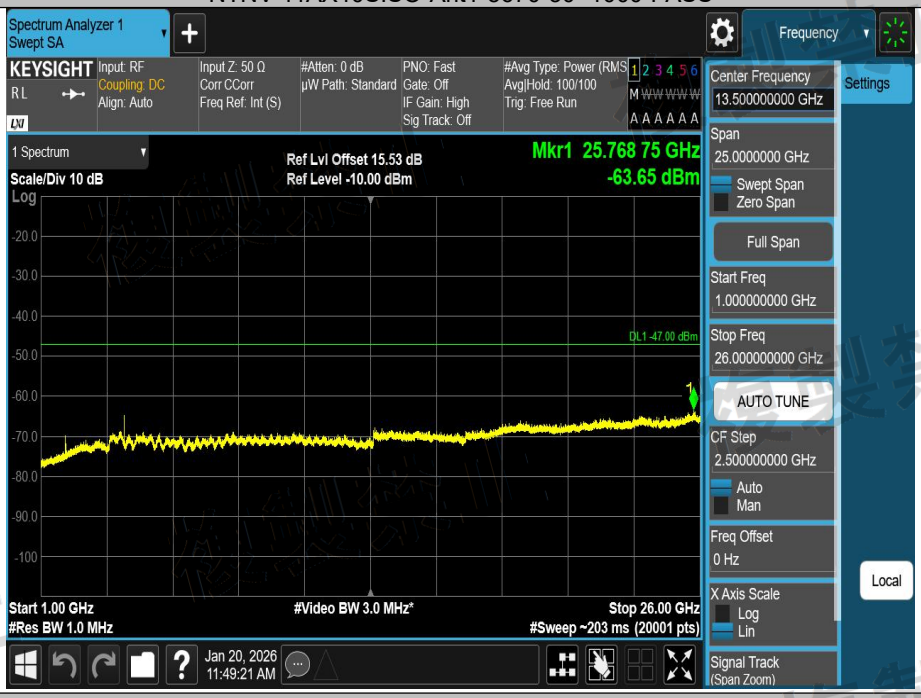

NTNV-11AX40SISO-Ant1-5670-1000~26000-PASS



NTNV-11AX40SISO-Ant1-5710-30~1000-PASS

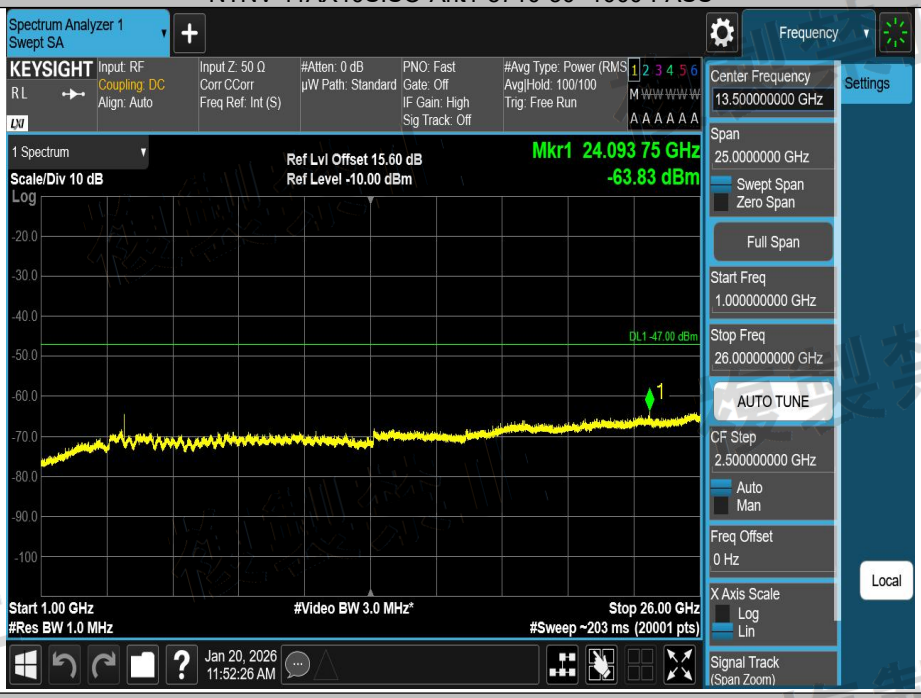

NTNV-11AX40SISO-Ant1-5710-1000~26000-PASS

7.7 TRANSMISSION BURST LENGTH

7.7.1 Applicable Standard

Item 19-3 of Article 2 Paragraph 1

7.7.2 Conformance Limit

Frequencies (GHz)	Limit
Transmitter Operating	≦ 8 ms

7.7.3 Test Setup Block Diagram



7.7.4 Test Procedure

Connected the EUT's antenna port to the Spectrum Analyzer by suitable attenuator, set the Spectrum Analyzer as below:
Centre Frequency: The centre frequency of the channel under test.
Resolution BW: 10 MHz
Video BW: 10 MHz
Span: 0Hz.
Detector: Peak.
Trace Mode: Max Hold.
Note: The cable loss and attenuator loss have been put into spectrum analyzer as amplitude offset.

7.7.5 Environmental Conditions

Temperature:	25°C
Relative Humidity:	60%
ATM Pressure:	1011 mbar

7.7.6 Test Results

TestCondition	TestMode	Antenna	Frequency[MHz]	Result [ms]	Limit [ms]	Verdict
NTNV	11A	Ant1	5180	1.39	≤8	PASS
NTNV	11A	Ant1	5200	1.39	≤8	PASS
NTNV	11A	Ant1	5220	1.39	≤8	PASS
NTNV	11A	Ant1	5240	1.39	≤8	PASS
NTNV	11A	Ant1	5260	1.39	≤8	PASS
NTNV	11A	Ant1	5280	1.39	≤8	PASS
NTNV	11A	Ant1	5300	1.39	≤8	PASS
NTNV	11A	Ant1	5320	1.39	≤8	PASS
NTNV	11A	Ant1	5500	1.39	≤8	PASS
NTNV	11A	Ant1	5580	1.39	≤8	PASS
NTNV	11A	Ant1	5600	1.39	≤8	PASS
NTNV	11A	Ant1	5700	1.39	≤8	PASS
NTNV	11A	Ant1	5720	1.39	≤8	PASS
NTNV	11N20SISO	Ant1	5180	5.08	≤8	PASS
NTNV	11N20SISO	Ant1	5200	5.08	≤8	PASS
NTNV	11N20SISO	Ant1	5220	5.08	≤8	PASS
NTNV	11N20SISO	Ant1	5240	5.08	≤8	PASS
NTNV	11N20SISO	Ant1	5260	5.08	≤8	PASS
NTNV	11N20SISO	Ant1	5280	5.08	≤8	PASS
NTNV	11N20SISO	Ant1	5300	5.08	≤8	PASS
NTNV	11N20SISO	Ant1	5320	5.08	≤8	PASS
NTNV	11N20SISO	Ant1	5500	5.08	≤8	PASS
NTNV	11N20SISO	Ant1	5580	5.08	≤8	PASS
NTNV	11N20SISO	Ant1	5600	5.08	≤8	PASS
NTNV	11N20SISO	Ant1	5700	5.08	≤8	PASS
NTNV	11N20SISO	Ant1	5720	5.08	≤8	PASS
NTNV	11N40SISO	Ant1	5190	4.84	≤8	PASS
NTNV	11N40SISO	Ant1	5230	4.84	≤8	PASS
NTNV	11N40SISO	Ant1	5270	4.84	≤8	PASS
NTNV	11N40SISO	Ant1	5310	4.84	≤8	PASS
NTNV	11N40SISO	Ant1	5510	4.81	≤8	PASS
NTNV	11N40SISO	Ant1	5550	4.84	≤8	PASS
NTNV	11N40SISO	Ant1	5670	4.84	≤8	PASS
NTNV	11N40SISO	Ant1	5710	4.84	≤8	PASS
NTNV	11AC20SISO	Ant1	5180	5.09	≤8	PASS
NTNV	11AC20SISO	Ant1	5200	5.09	≤8	PASS
NTNV	11AC20S	Ant1	5220	5.09	≤8	PASS

	ISO					
NTNV	11AC20S ISO	Ant1	5240	5.09	≤8	PASS
NTNV	11AC20S ISO	Ant1	5260	5.09	≤8	PASS
NTNV	11AC20S ISO	Ant1	5280	5.09	≤8	PASS
NTNV	11AC20S ISO	Ant1	5300	5.09	≤8	PASS
NTNV	11AC20S ISO	Ant1	5320	5.09	≤8	PASS
NTNV	11AC20S ISO	Ant1	5500	5.09	≤8	PASS
NTNV	11AC20S ISO	Ant1	5580	5.09	≤8	PASS
NTNV	11AC20S ISO	Ant1	5600	5.09	≤8	PASS
NTNV	11AC20S ISO	Ant1	5700	5.09	≤8	PASS
NTNV	11AC20S ISO	Ant1	5720	5.09	≤8	PASS
NTNV	11AC40S ISO	Ant1	5190	4.84	≤8	PASS
NTNV	11AC40S ISO	Ant1	5230	4.84	≤8	PASS
NTNV	11AC40S ISO	Ant1	5270	4.87	≤8	PASS
NTNV	11AC40S ISO	Ant1	5310	4.84	≤8	PASS
NTNV	11AC40S ISO	Ant1	5510	4.84	≤8	PASS
NTNV	11AC40S ISO	Ant1	5550	4.84	≤8	PASS
NTNV	11AC40S ISO	Ant1	5670	4.84	≤8	PASS
NTNV	11AC40S ISO	Ant1	5710	4.84	≤8	PASS
NTNV	11AX20S ISO	Ant1	5180	3.86	≤8	PASS
NTNV	11AX20S ISO	Ant1	5200	3.87	≤8	PASS
NTNV	11AX20S ISO	Ant1	5220	3.87	≤8	PASS
NTNV	11AX20S ISO	Ant1	5240	3.86	≤8	PASS
NTNV	11AX20S ISO	Ant1	5260	3.87	≤8	PASS
NTNV	11AX20S ISO	Ant1	5280	3.87	≤8	PASS
NTNV	11AX20S ISO	Ant1	5300	3.87	≤8	PASS
NTNV	11AX20S ISO	Ant1	5320	3.87	≤8	PASS
NTNV	11AX20S ISO	Ant1	5500	3.87	≤8	PASS
NTNV	11AX20S ISO	Ant1	5580	3.86	≤8	PASS
NTNV	11AX20S ISO	Ant1	5600	3.87	≤8	PASS
NTNV	11AX20S ISO	Ant1	5700	3.86	≤8	PASS
NTNV	11AX20S	Ant1	5720	3.86	≤8	PASS

	ISO					
NTNV	11AX40S ISO	Ant1	5190	3.79	≤8	PASS
NTNV	11AX40S ISO	Ant1	5230	3.79	≤8	PASS
NTNV	11AX40S ISO	Ant1	5270	3.79	≤8	PASS
NTNV	11AX40S ISO	Ant1	5310	3.82	≤8	PASS
NTNV	11AX40S ISO	Ant1	5510	3.82	≤8	PASS
NTNV	11AX40S ISO	Ant1	5550	3.82	≤8	PASS
NTNV	11AX40S ISO	Ant1	5670	3.82	≤8	PASS
NTNV	11AX40S ISO	Ant1	5710	3.79	≤8	PASS

複製禁止



NTNV-11A-Ant1-5180-PASS



NTNV-11A-Ant1-5200-PASS



NTNV-11A-Ant1-5220-PASS



NTNV-11A-Ant1-5240-PASS



NTNV-11A-Ant1-5260-PASS



NTNV-11A-Ant1-5280-PASS



NTNV-11A-Ant1-5300-PASS



NTNV-11A-Ant1-5320-PASS



NTNV-11A-Ant1-5500-PASS



NTNV-11A-Ant1-5580-PASS



NTNV-11A-Ant1-5600-PASS



NTNV-11A-Ant1-5700-PASS



NTNV-11A-Ant1-5720-PASS



NTNV-11N20SISO-Ant1-5180-PASS



NTNV-11N20SISO-Ant1-5200-PASS



NTNV-11N20SISO-Ant1-5220-PASS



NTNV-11N20SISO-Ant1-5240-PASS



NTNV-11N20SISO-Ant1-5260-PASS



NTNV-11N20SISO-Ant1-5280-PASS



NTNV-11N20SISO-Ant1-5300-PASS