Watchguard™

Contact ID to SMS Communicator

PSTN Contact ID Protocol to SMS Alert & SIA IP Converter



User Manual

Ver 1.0

Model: WGSMSB

Date Issued: 2017-07-24

Table of Contents

1. The Introduction. 3

2. The Specifications. 3

3. The Features. 3

3. The Standard Package. 4

4. The Overview of Main Panel. 4

5. The Indicator Lights. 5

6. The Installations. 5

6.1. Insert the SIM Card. 6

6.2. Install the USB Driver on PC. 6

6.3. Settings in PC Configurator. 6

6.3.1 The Menu Bar of the PC configurator. 7
6.3.2 GPRS Data Parameter Setting. 7
6.3.3 The Phone Numbers for Events Notification. 7
6.3.4 Set the Password and PIN Code Verification. 8
6.3.5 Set the OC Outputs Names 8
6.3.5 Set the CMS Server IP address and Server Port. 8
6.3.5 Set the SMS Notification Contents 9
6.3.5 Engineer Debug for GPRS Data Transmission. 9

7. The SMS Commands. 10

8.Warranty 12

This handbook has been designed as a guide to the installation and operation of GSM Communicator.

Statements contained in the handbook are general guidelines only and in no way are designed to supersede the instructions contained with other products. We recommend that the advice of a registered electrician be sought before any Installation work commences.

Watchguard and its distributors accept no liability for any loss or damage including consequential damage due to reliance on any material contained in this handbook.

Watchguard and its distributors accept no liability for GSM Network upgrading or SIM Card upgrading due to the technology specifications contained in this handbook.



Safe Startup

Do not use GSM unit when using GSM equipment is prohibited or might bring disturbance or danger.



Interference

All wireless equipment might interfere network signals of GSM unit and influence its performance.

1. The Introduction.

The *GSM Communicator WGSMSB* is specially designed for your existing alarm systems. It's compatible with the majority of Watchguard Control Panels.

The *GSM Communicator WGSMSB* can transfer the Alert Message from your PSTN Contact ID Control panel into SMS alert and SIA IP over GPRS network. It can change alert notifications from traditional PSTN alert to wireless alert (SIA standard DC-09 requirements).

*（**Notice:** The following contents below will use 'WGSMSB instead of '**GSM Communicator WGSMSB**'）*

2. The Specifications.

GSM Frequency	850 / 900 / 1800 / 1900 MHz
GSM Communication Ways	TCP/IP via GPRS
Message Transmission Protocols	SIA DC-09-2007 or SIA DC-09-2012
Outputs	OUT1, OUT2 ,OC type, commutates voltage of up to 30 V and direct current of up to 1 A
Configuration	via USB port or SMS commands
Power Supply	DC 9V ---24 V
Used Current	20 ---30 mA (on standby), up to 200 mA (while sending data)
Workplace	Temperature from -20C to +50C, Relative humidity up to 80 % when +20□C
Backup battery	900mAH

3. The Features.


- Easy programmed by PC configurator, compatible with most Control Panels,
- Supports transferring data by PSTN or GPRS, SMS (*no phone call*),
- Supports 2 different CMS centers (IP addresses or DNS server).
- SMS notification when the connection with the CMS center is failed (*3 trial times*),
- When the PSTN network is failed, it will send the alert message to the center by GPRS network,
- When the PSTN network is good, then it will not use GPRS network for transferring alert message,
- 5 users to receive SMS notification on Alarm, Supervision, Trouble, By pass, Test, GPRS fail, DC loss,
- Password protection for the PC configurator;
- SMS commands to check the device version, IMEI code, GSM signal,

- 2 OC outputs which could be controlled by SMS commands,
- Support firmware upgrading via USB with unique IMEI code independently,
- Supports PIN code verification in PC configurator,
- Remote configuration, handled from CMS or SMS commands,
- Backup rechargeable battery, with power failure SMS alert.

4. The Standard Package.

Main Panel	x 1 piece
AC/DC Power Adapter	x 1 piece
CD (User Manual & PC Configurator)	x 1 piece
USB Connection Cable	x 1 piece

5. The Overview of Main Panel.

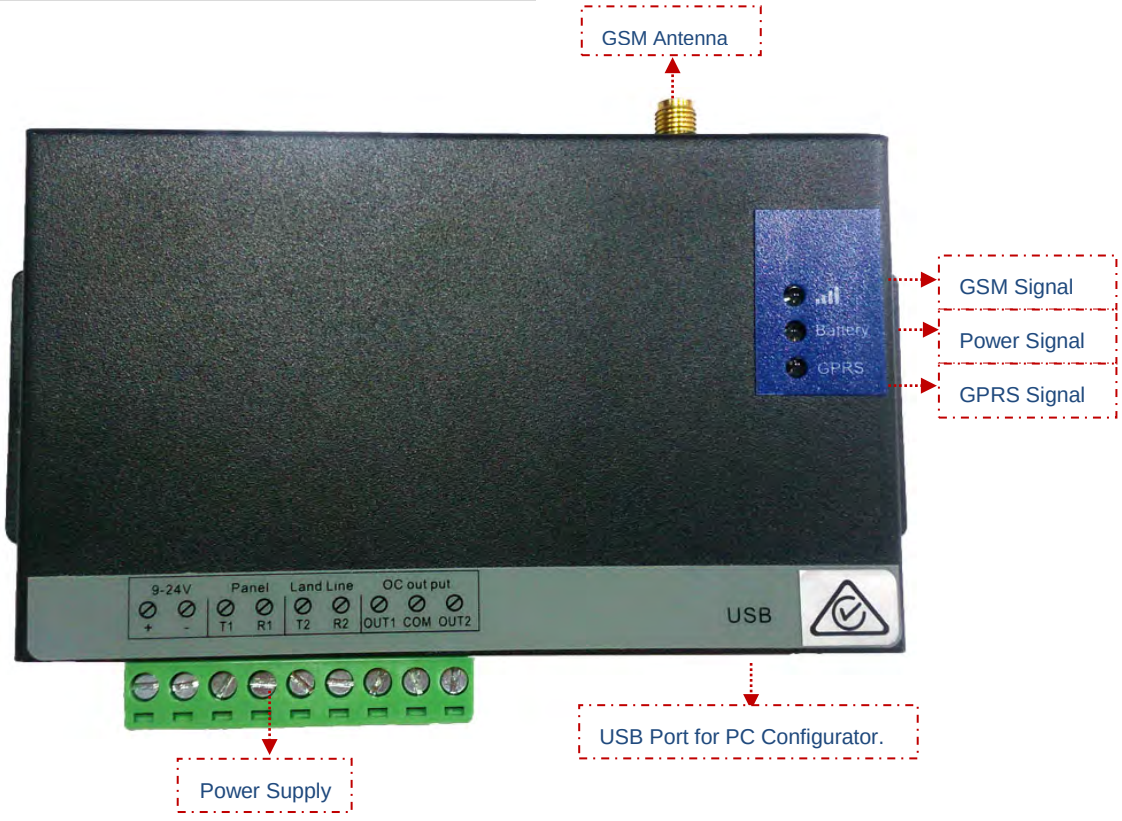


Panel T1 R1	**T1:** Connect with the ***'TLP'*** in PSTN control panel **R1:** Connect with the ***'RING'*** in PSTN control panel
Land Line T2 R2	**T2:** Connect with the Land Line **R2:** Connect with the Land Line *(Notice: No connection means the control panel will transmit the message only via GPRS.)*
OC out put OUT1 COM OUT2	**OUT1:** 1st Outputs, OC type. **COM:** General terminal. **OUT2:** 2nd Outputs, OC type.

6. The Indicator Lights.

	[RED]: GMS indicator, blinking every 0.3s means registering the network, when the GSM signal is normal, it will keep blinking every 1s.
	[RED]: External power supply indicator, ON means Connection, OFF means Disconnection.
	[RED]: GPRS Network Indicator, blinking every 0.3s means GPRS connection failures, and it will keep blinking every 1s when the GPRS connection is successful.

7. The Connection.

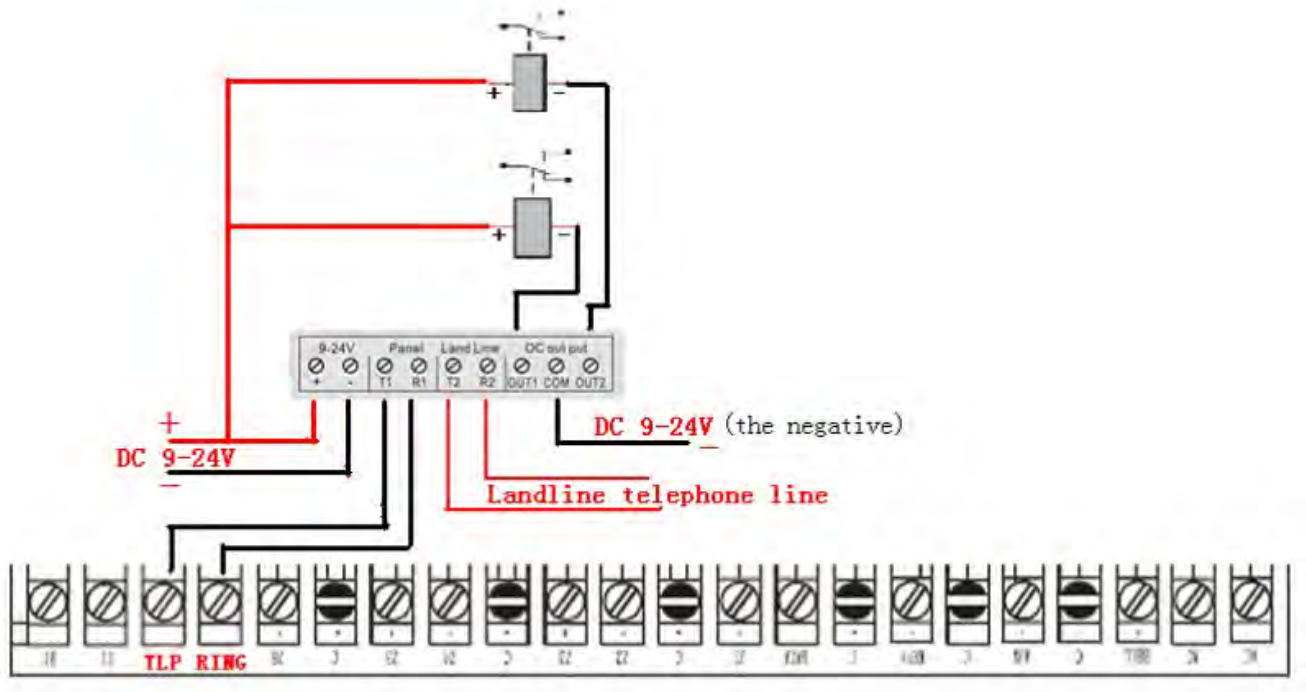


.

8. The Installations

Notice: *There are 2 ways for settings: PC configuration & SMS commands. Please install the USB Driver before using the PC confirgurator.*

8.1 Install the USB Driver on PC.


1) Screw the GSM antenna,
2) Open the cover on the back the ***WGSMSB*** to find the SIM card holder, and insert the SIM card as below:

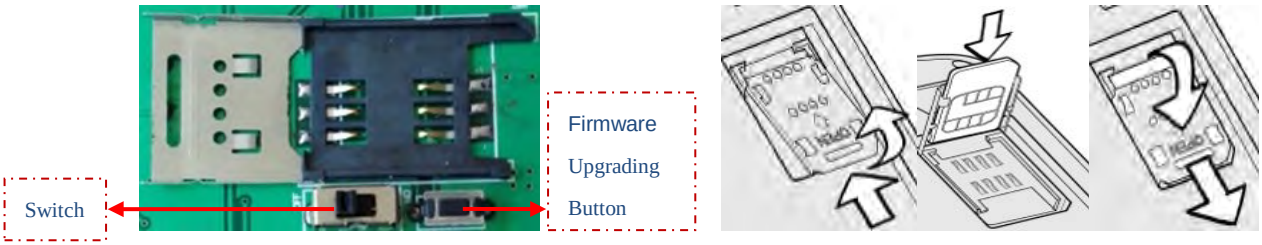

3) Turn on the power supply and switch WGSMSB on, and check the GSM Signal Indicator light to confirm the SIM card in WGSMSB is working well. please check the indicator lights details in 【5. The Indicator Lights】.


8.2. Install the USB Driver on PC.

1) Download and install the latest ***USB Driver*** according to your PC operation system.
2) Connect the ***WGSMSB*** to the Computer via USB cable,
3) Find the ***USB Serial Port*** as picture below. (*This COM port number will be used in PC configurator*).

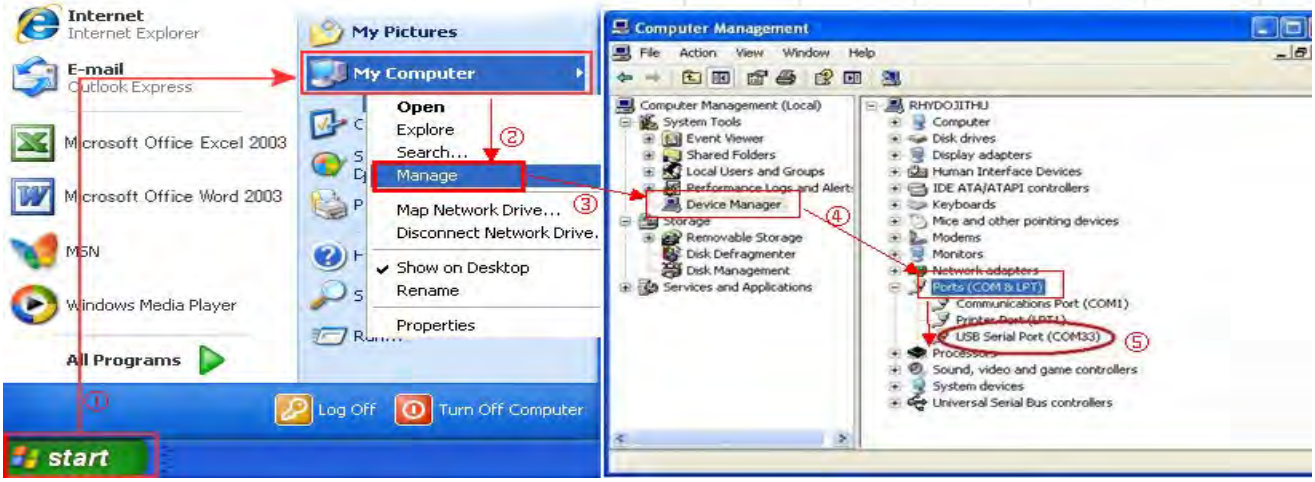

8.3. Settings in PC Configurator.

Choose the ***USB Serial Port*** according to 【*6.2. Install the USB Driver on PC.*】, and click open Com, it will come to the *Basic Information* window as below:

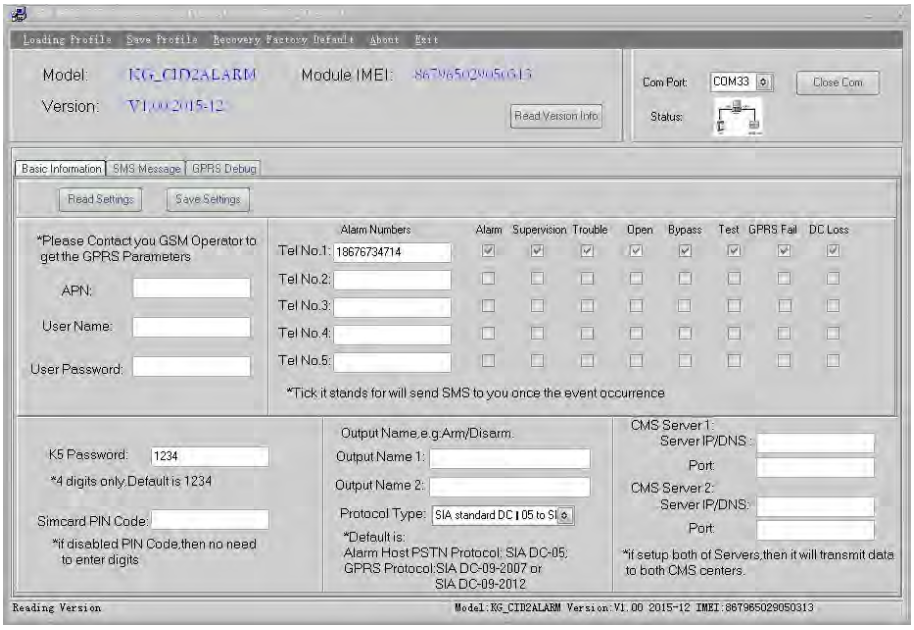


8.3.1 The Menu Bar of the PC configurator.



Loading Profile	[Alt + L]: Load the setting profile that you have saved before
Save the Profile	[Alt + S]: Save the settings to the local
Recovery Factory Default	[Alt + R]: Reset the WGSMSB device back to the factory
About	[Alt + A]: The information about the WGSMSB
Exit	[Alt + E]: Exit the PC configurator.

8.3.2 GPRS data Parameter Setting.

Below is the EXAMPLE:

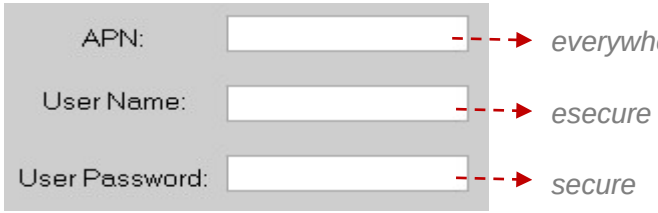

Notice: *The example provided by Orange UK above is only for reference, please contact your local GSM operator for the settings accordingly. If the local GSM Operator does not use APN anymore, please ignore the settings in this part.*

8.3.3 The Phone Numbers for Events Notification.




Tel No. 1 – No. 5	The phone numbers for the SMS notification.
Alarm	The Contact ID alarm notification from PSTN Control Panel
Supervision	
Trouble	
Open	
ByPass	
Test	
GPRS Fail	The GPRS message transmission failure notification from WGSMSB .
DC Loss	The external DC Power Loss notification from WGSMSB


Notice:

Tick it stands for the phone numbers in the list will receive the SMS notification when the event occurred.

8.3.4 Set the Password and PIN Code Verification.

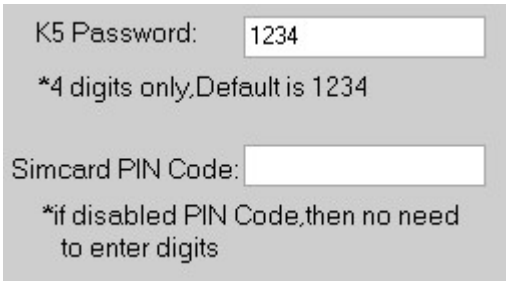


8.3.5 Set the OC Outputs Names

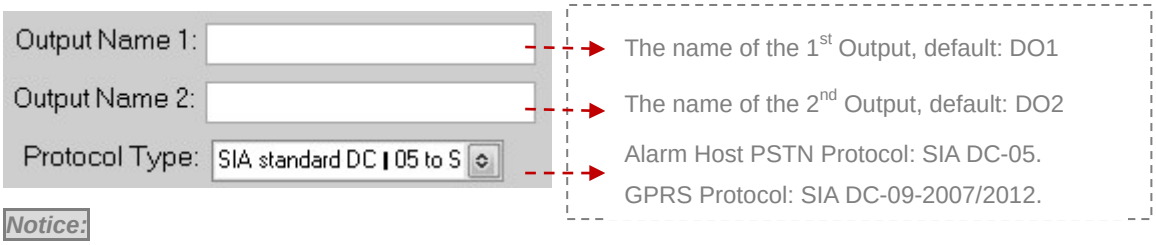

Notice:

The max characters for the Output Name is 40, these names will be displayed in the SMS notifications.


8.3.6 Set the CMS Server IP address and Server Port.

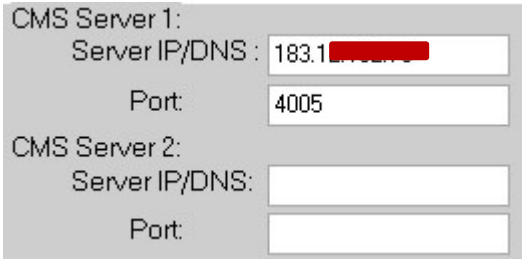

Notice:


The alert messages will be transmitted to both of these 2 CMS severs if both of them are set.

8.3.7 Set the SMS Notification Contents.

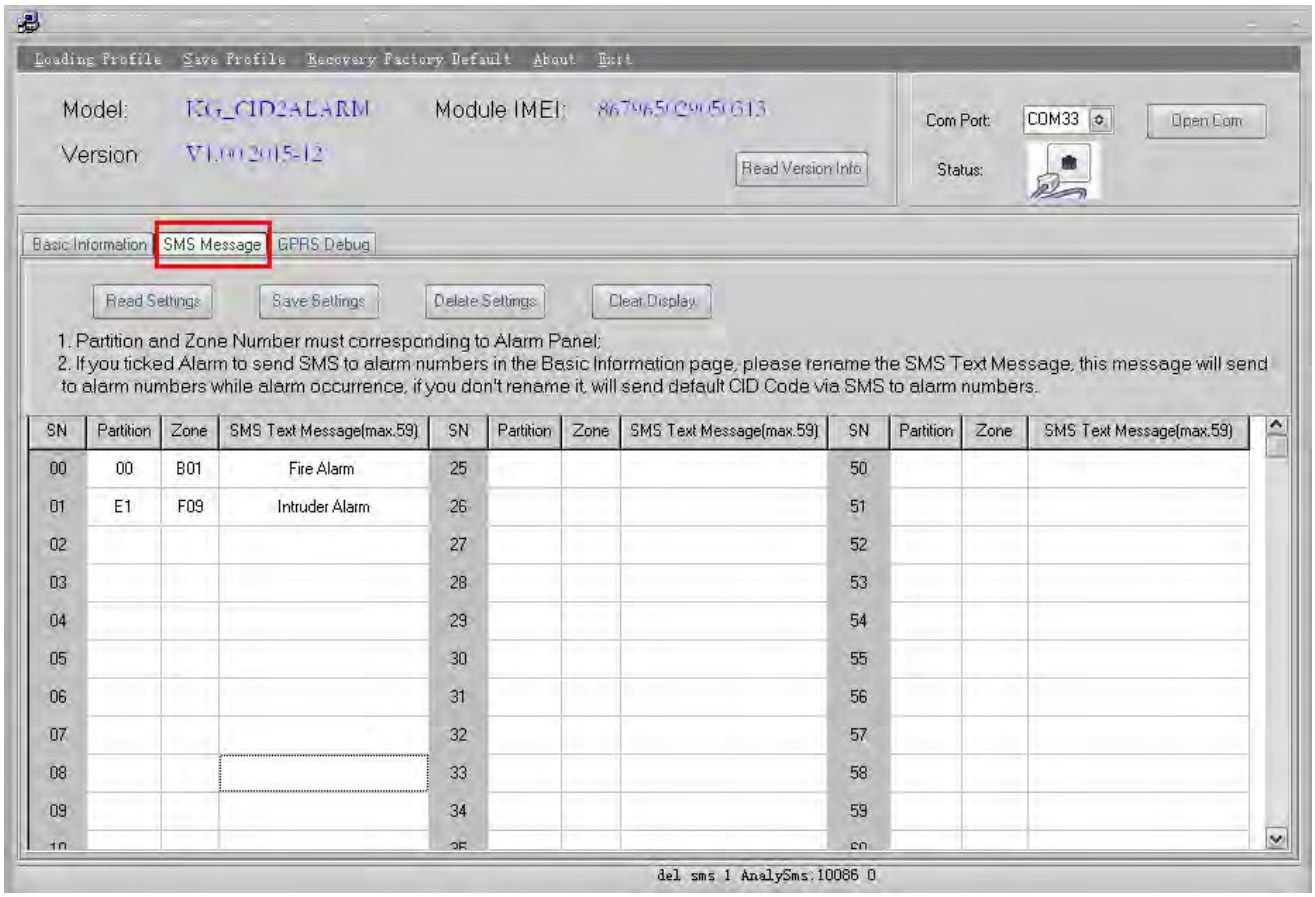

Partition	Please set it according to your PSTN control panel. (2 digits, from 0 - 9, B – F)
Zone	Max 63 Zones. Please set it according to your PSTN control panel. (3 digits, from 0 - 9, B – F)
SMS Text Message	The SMS alert message content, the max is 59 digits. Notice: if this part is not set, the SMS Alert Message will be in SIA DC-09 code, not understandable.

8.3.9 Engineer Debug for GPRS Data Transmission.

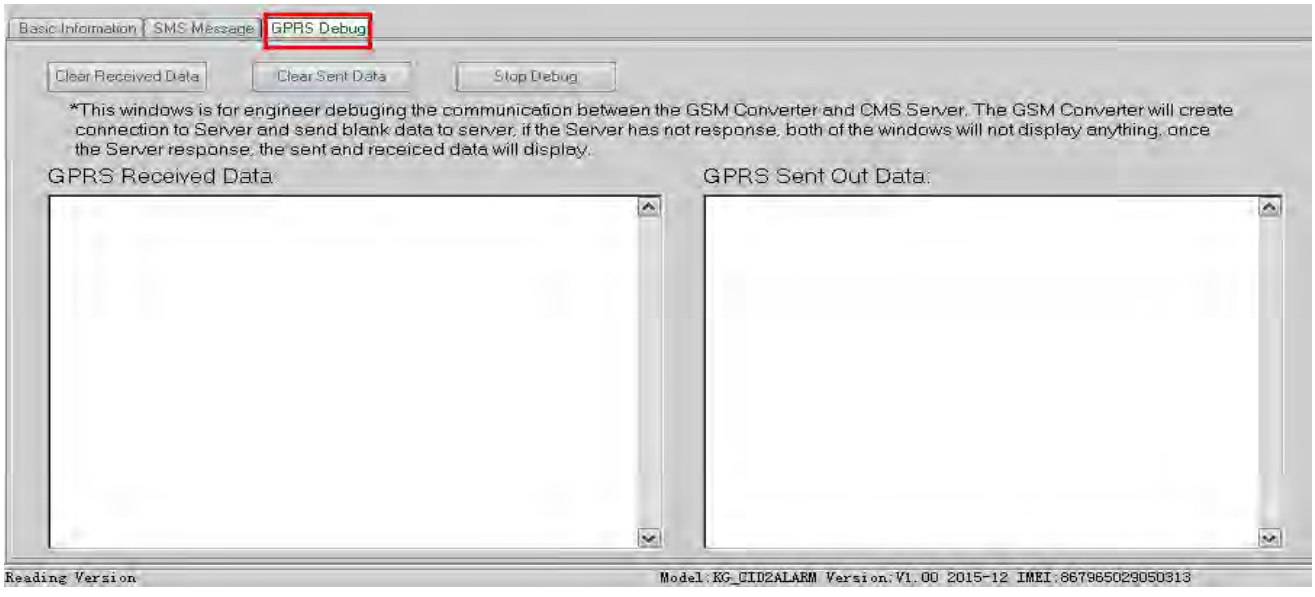

9. The SMS Commands.

Notice:

1) All the letters in SMS commands and PC Configurator must be CAPITALIZED under the English format.

2) It makes no difference for adding country code or not in front of the mobile phone numbers.

3) The Examples in the charts below are only for reference, please send the SMS commands according to your actual situations.

1）when the wrong SMS commands was send:

SMS Commands	Return SMS Message
	SMS Format Error, Please check Caps Lock in Command!

Notice: Any SMS commands with wrong format was send, you will receive a SMS notification.

2）When the external DC Power loss/Recovery

	Return SMS Message
DC Loss	External DC Power Goes OFF
DC Recovery	External DC Power Goes ON

3）Change the password (The default password is 1234, with 4 digits):

SMS Commands	Return SMS Message
Old Password＋**P**＋New Password	【*New Password*】,This is the New Password, please remember it carefully.
For Examples: 1234P4321	*【4321】,This is the New Password, please remember it carefully.*

Notice: When the password was forgot, please reset the device from the PC configurator.

4）Inquiry the device information remotely

SMS Commands	Return SMS Message
Password+**EE**	Model: Version: IMEI: GSM Signal Value:
For Examples: 1234P4321	Model: K5T Version: *V 1.00 2015-12* IMEI: *867965029050313* GSM Signal Value: *30*

Notice:

1) Every WGSMSB has a unique IMEI code for firmware upgrading.

2) The GSM Signal Value range: 1~31, Signal weak value: >14.

5) Program the 5 mobile phone numbers (the max is 23 digits) for SMS notification.

Actions	SMS Commands	Return SMS Message
Set Mobile Phone Numbers	Password+**A**+Serial Number +**T**+ Phone Number **For Example: 1234A3T13570810254**	Tel1: --- Tel2: --- Tel**3**: 13570810254 Tel4: --- Tel5: ---

Inquiry the whole numbers list	Password +A **For Example: 1234A**	*The list of the exiting numbers*
Delete the phone number in the existing numbers list	Password＋A＋Serial Number **For Example: 1234A3**	*The list of the exiting numbers*

Notice:

1) The Serial Number: 1 – 5.

2) These mobile phone numbers are only used for the SMS notification, no voice notification.

6）Program the OC Outputs

Actions	SMS Comands	Return SMS Message
Set the name of the OC outputs	Password+DO+Serial Number+T+the name **For example: 1234DO1TOutput 1 for Arm.**	DO1: rename: xxxx DO1: rename: Output 1 for Arm.
Inquiry the name of the OC outputs	Password+DO+Serial Number **For example: 1234DO1**	同上.
Delete the name of the OC outputs	Password+DO+Serial Number+DEL **For example:1234DO1DEL**	同上（即值为空）
Switch the relay on	Password+DOC+Serial Number **For example:1234DOC1**	DO1: ON DO2:ON
Switch the relay off	Password+DOO+Serial Number **For example:1234DOO1**	DO1: OFF DO2:OFF
Inquiry the current status	Password+DOE+Serial Number **For example:1234DOE1**	DO1: ON/OFF DO1:ON/OFF
Inquiry all the current status	Password+DOE **For example:1234DOE**	DO1: ON/OFF DO2:ON/OFF ---

Notice:

The Serial Number: 1 – 2. The name of the outputs is 40 digits (Max.)

7）Program the GPRS IP Sever and the Port:

Actions	SMS Commands	Return SMS Message
Settings	Password+IP+ IP address +P+Port Number **For example:1234IP183.12.162.70P4005**	Server: Port:
Inquiry the settings	Password +IP **For example:1234IP**	
Delete the exiting setting	Password+IP+DEL **For example:1234IPDEL**	

8）Program the GPRS settings（APN/USER NAME/PASSWORD）

Actions	SMS Commands	Return SMS Message
Settings	Password+AP+APN;User Name;Password# **For example:1234APeverywhere;esecure;secure#**	APN: User Name: Password:
Inquiry the settings	Password+AP **For example:1234AP**	
Delete the exiting setting	Password+APDEL **For example:1234APDEL**	

10. Warranty.

1) This system is warranted to be free of defects in material and workmanship for one year.
2) This warranty does not extend to any defect, malfunction or failure caused by abuse or misuse by the Operating Instructions. In no event shall the manufacturer be liable for any alarm system altered by purchasers.