

FortiOS - Cookbook

Version 6.2.6

FORTINET DOCUMENT LIBRARY
https://docs.fortinet.com

FORTINET VIDEO GUIDE
https://video.fortinet.com

FORTINET BLOG
https://blog.fortinet.com

CUSTOMER SERVICE & SUPPORT
https://support.fortinet.com

FORTINET TRAINING & CERTIFICATION PROGRAM
https://www.fortinet.com/training-certification

NSE INSTITUTE
https://training.fortinet.com

FORTIGUARD CENTER
https://www.fortiguard.com

END USER LICENSE AGREEMENT
https://www.fortinet.com/doc/legal/EULA.pdf

FEEDBACK
Email: techdoc@fortinet.com



March 03, 2021
FortiOS 6.2.6 Cookbook
01-626-538742-20210303

TABLE OF CONTENTS

Change Log **15**
Getting started **16**
Differences between models 16
Using the GUI 16
Connecting using a web browser 16
Menus 17
Tables 18
Entering values 20
Using the CLI 21
Connecting to the CLI 22
CLI basics 24
Command syntax 30
Subcommands 33
Permissions 35
FortiExplorer for iOS 35
Getting started with FortiExplorer 36
Connecting FortiExplorer to a FortiGate via WiFi 39
Running a security rating 40
Upgrading to FortiExplorer Pro 41
Basic administration 41
Registration 42
FortiCare and FortiGate Cloud login 45
FortiGate Cloud 48
Troubleshooting your installation 50
Zero touch provisioning 52
Zero touch provisioning with FortiDeploy 52
Zero touch provisioning with FortiManager 55
Dashboard **57**
Dashboard CLI 60
Configuration backups 61
Fortinet Security Fabric **66**
Security Fabric settings and usage 66
Components 67
Configuring the root FortiGate and downstream FortiGates 69
Configuring FortiAnalyzer 74
Configuring other Security Fabric devices 75
Using the Security Fabric 91
Deploying the Security Fabric 104
Security Fabric over IPsec VPN 112
Leveraging LLDP to simplify Security Fabric negotiation 118
Configuring the Security Fabric with SAML 121
Configuring single-sign-on in the Security Fabric 121
CLI commands for SAML SSO 126
SAML SSO with pre-authorized FortiGates 127

Navigating between Security Fabric members with SSO 127
Advanced option - FortiGate SP changes 130
Advanced option - unique SAML attribute types 130
Security rating 134
Security Fabric score 136
Comprehensive report extensions 136
Verifying FortiAnalyzer configurations 139
Fabric connectors 140
SDN connectors 141
Kubernetes (K8s) SDN connectors 183
SSO/Identity connectors 198
Threat feeds 219
Automation stitches 234
Creating automation stitches 235
Triggers 238
Actions 243
Execute a CLI script based on CPU and memory thresholds 265
Troubleshooting 270
Viewing a summary of all connected FortiGates in a Security Fabric 270
Diagnosing automation stitches 273
FortiView 277
FortiView interface 277
Time display 278
FortiView filters 278
Drill down to details 278
View selection 279
FortiView from disk 280
FortiView from FortiAnalyzer 283
Cloud application view 285
Viewing cloud applications 285
Configuring the Cloud Applications widget 290
Cloud application view examples 294
FortiView Sources usability 299
FortiView from FortiGate Cloud 300
Supported views for different log sources 303
FortiGate Cloud-based IOC 304
FortiView — subnet filters 305
FortiView dashboards and widgets 306
FortiView object names 311
Network 316
Interfaces 316
Interface settings 316
Aggregation and redundancy 321
VLANs 323
Enhanced MAC VLANs 329
Inter-VDOM routing 332
Software switch 337

Hardware switch 339
Zone 340
Virtual Wire Pair 342
Virtual switch support for FortiGate 300E series 344
Failure detection for aggregate and redundant interfaces 346
VLAN inside VXLAN 346
Virtual Wire Pair with VXLAN 349
Interface MTU packet size 350
DNS 353
Important DNS CLI commands 353
DNS domain list 354
FortiGate DNS server 356
DDNS 358
DNS latency information 361
DNS over TLS 363
DNS troubleshooting 363
Explicit and transparent proxies 364
Explicit web proxy 365
FTP proxy 367
Transparent proxy 369
Proxy policy addresses 372
Proxy policy security profiles 380
Explicit proxy authentication 386
Transparent web proxy forwarding 392
Multiple dynamic header count 393
Restricted SaaS access (Office 365, G Suite, Dropbox) 396
Explicit proxy and FortiSandbox Cloud 398
DHCP server 401
IP address assignment with relay agent information option 403
Static routing 406
Routing concepts 406
Policy routes 416
Equal cost multi-path 418
Dual internet connections 422
Multicast 428
Multicast routing and PIM support 428
Configuring multicast forwarding 429
Direct IP support for LTE/4G 432
LLDP reception 435
NetFlow 437
Verification and troubleshooting 439
NetFlow templates 439
SD-WAN 452
SD-WAN quick start 452
Configuring the SD-WAN interface 453
Adding a static route 455
Selecting the implicit SD-WAN algorithm 455
Configuring security policies for SD-WAN 456

Link monitoring and failover ... 456
Results ... 458
Configuring SD-WAN in the CLI ... 462
WAN path control ... 464
Performance SLA - link monitoring ... 464
Performance SLA - SLA targets ... 466
Factory default health checks ... 467
Implicit rule ... 470
SD-WAN rules - best quality ... 473
SD-WAN rules - lowest cost (SLA) ... 476
SD-WAN rules - maximize bandwidth (SLA) ... 478
Application steering using SD-WAN rules ... 481
SD-WAN traffic shaping and QoS ... 493
Per-link controls for policies and SLA checks ... 497
DSCP tag-based traffic steering in SD-WAN ... 499
Advanced configuration ... 510
Self-originating traffic ... 510
SDN dynamic connector addresses in SD-WAN rules ... 513
Forward error correction on VPN overlay networks ... 516
Using BGP tags with SD-WAN rules ... 519
BGP multiple path support ... 522
Controlling traffic with BGP route mapping and service rules ... 524
Applying BGP route-map to multiple BGP neighbors ... 531
ADVPN and shortcut paths ... 537
DSCP matching (shaping) ... 550
Dual VPN tunnel wizard ... 553
SD-WAN with FGCP HA ... 556
Enable dynamic connector addresses in SD-WAN policies ... 562
SD-WAN cloud on-ramp ... 563
Configuring the VPN overlay between the HQ FortiGate and cloud FortiGate-VM ... 563
Configuring the VPN overlay between the HQ FortiGate and AWS native VPN gateway ... 568
Configuring the VIP to access the remote servers ... 572
Configuring the SD-WAN to steer traffic between the overlays ... 574
Verifying the traffic ... 578
Hub and spoke SD-WAN deployment example ... 585
Datacenter configuration ... 586
Branch configuration ... 591
Validation ... 596
Dynamic definition of SD-WAN routes ... 597
Adding another datacenter ... 598
Configuring SD-WAN in an HA cluster using internal hardware switches ... 599
Troubleshooting SD-WAN ... 603
Tracking SD-WAN sessions ... 603
Understanding SD-WAN related logs ... 603
SD-WAN related diagnose commands ... 606
SLA logging ... 611
SLA monitoring using the REST API ... 612

SD-WAN bandwidth monitoring service 614
System 618
Basic system settings 618
Advanced system settings 618
Operating modes 619
Administrators 620
Administrator profiles 620
Add a local administrator 622
Remote authentication for administrators 622
Password policy 624
Associating a FortiToken to an administrator account 625
Firmware 626
Downloading a firmware image 627
Testing a firmware version 627
Upgrading the firmware 629
Downgrading to a previous firmware version 630
Installing firmware from system reboot 630
Restoring from a USB drive 632
Controlled upgrade 633
Settings 633
Default administrator password 633
Changing the host name 634
Setting the system time 634
Configuring ports 638
Setting the idle timeout time 639
Setting the password policy 639
Changing the view settings 639
Setting the administrator password retries and lockout time 640
TLS configuration 641
Controlling return path with auxiliary session 641
Email alerts 645
Trusted platform module support 649
Virtual Domains 651
Split-task VDOM mode 652
Multi VDOM mode 655
Configure VDOM-A 658
Configure VDOM-B 660
Configure the VDOM link 663
Configure VDOM-A 668
Configure VDOM-B 670
High Availability 671
Introduction to the FGCP cluster 672
Failover protection 673
FGSP (session synchronization) peer setup 674
Synchronizing sessions between FGCP clusters 675
Using standalone configuration synchronization 677
Troubleshoot an HA formation 679
Check HA sync status 679

Disabling stateful SCTP inspection ... 681
Upgrading FortiGates in an HA cluster ... 682
HA cluster setup examples ... 683
SNMP ... 692
Interface access ... 692
MIB files ... 692
SNMP agent ... 693
SNMP v1/v2c communities ... 694
SNMP v3 users ... 695
Important SNMP traps ... 696
Replacement messages ... 698
Replacement message images ... 698
Modifying replacement messages ... 700
Replacement message groups ... 701
Example ... 702
FortiGuard ... 704
IPv6 FortiGuard connections ... 705
Configuring antivirus and IPS options ... 706
Manual updates ... 706
Automatic updates ... 707
Sending malware statistics to FortiGuard ... 709
Update server location ... 709
Filtering ... 710
Override FortiGuard servers ... 711
Online security tools ... 711
FortiGuard third party SSL validation and anycast support ... 712
Configuration scripts ... 714
Workspace mode ... 714
Feature visibility ... 716
Security feature presets ... 716
Certificates ... 717
Microsoft CA deep packet inspection ... 717
Purchase and import a signed SSL certificate ... 722
Policy and Objects ... 726
Policies ... 726
Firewall policy parameters ... 727
Profile-based NGFW vs policy-based NGFW ... 727
NGFW policy mode application default service ... 732
Policy views and policy lookup ... 734
Policy with source NAT ... 735
Policy with destination NAT ... 745
Policy with Internet Service ... 758
NAT64 policy and DNS64 (DNS proxy) ... 773
NAT46 policy ... 777
Local-in policies ... 780
DoS protection ... 781
IPv4/IPv6 access control lists ... 789
Mirroring SSL traffic in policies ... 790

Inspection mode per policy ... 790
Combined IPv4 and IPv6 policy ... 793
FortiGuard DNS filter for IPv6 policies ... 794
OSPFv3 neighbor authentication ... 796
Firewall anti-replay option per policy ... 798
Enabling advanced policy options in the GUI ... 798
Recognize anycast addresses in geo-IP blocking ... 799
Authentication policy extensions ... 800
NTLM extensions ... 801
HTTP to HTTPS redirect for load balancing ... 804
GTPv2 in policies ... 806
Use active directory objects directly in policies ... 807
FortiGate Cloud / FDN communication through an explicit proxy ... 811
Objects ... 812
Address group exclusions ... 813
MAC addressed-based policies ... 814
Dynamic policy — fabric devices ... 816
FSSO dynamic address subtype ... 818
ClearPass integration for dynamic address objects ... 822
Using wildcard FQDN addresses in firewall policies ... 827
Traffic shaping ... 830
Determining your QoS requirements ... 831
Packet rates ... 832
Interface bandwidth limit ... 834
Changing traffic shaper bandwidth unit of measurement ... 835
Shared traffic shaper ... 835
Per-IP traffic shaper ... 839
Type of Service-based prioritization and policy-based traffic shaping ... 842
Interface-based traffic shaping profile ... 845
Classifying traffic by source interface ... 854
Configuring traffic class IDs ... 855
Traffic shaping schedules ... 857
QoS assignment and rate limiting for quarantined VLANs ... 859
Weighted random early detection queuing ... 860
Security Profiles ... 867
Antivirus ... 867
Content disarm and reconstruction for antivirus ... 868
FortiGuard outbreak prevention for antivirus ... 870
External malware block list for antivirus ... 873
Checking flow antivirus statistics ... 876
CIFS support ... 878
Databases ... 885
Using FortiSandbox appliance with antivirus ... 885
Using FortiSandbox Cloud with antivirus ... 896
Web filter ... 907
URL filter ... 908
FortiGuard filter ... 914
Usage quota ... 921

Web content filter ... 923
File filter ... 927
Advanced filters 1 ... 933
Advanced filters 2 ... 937
External resources for web filter ... 942
Reliable web filter statistics ... 948
Flow-based web filtering ... 951
URL certificate blocklist ... 953
DNS filter ... 958
How to configure and apply a DNS filter profile ... 959
FortiGuard category-based DNS domain filtering ... 961
Botnet C&C domain blocking ... 965
DNS safe search ... 968
Local domain filter ... 970
DNS translation ... 973
Using a FortiGate as a DNS server ... 976
Troubleshooting for DNS filter ... 977
Application control ... 980
Basic category filters and overrides ... 981
Port enforcement check ... 984
Protocol enforcement ... 985
Intrusion prevention ... 987
Botnet C&C IP blocking ... 988
Email filter ... 991
Local-based filters ... 991
FortiGuard-based filters ... 996
File type-based filters ... 997
Protocols and actions ... 1003
Configuring webmail filtering ... 1004
Data leak prevention ... 1004
Basic DLP filter types ... 1005
DLP fingerprinting ... 1008
DLP watermarking ... 1012
VoIP solutions ... 1015
General use cases ... 1015
SIP message inspection and filtering ... 1019
SIP pinholes ... 1021
SIP over TLS ... 1022
Custom SIP RTP port range support ... 1023
Voice VLAN auto-assignment ... 1024
ICAP ... 1026
ICAP configuration example ... 1027
Web application firewall ... 1029
Protecting a server running web applications ... 1030
Inspection modes ... 1033
About inspection modes ... 1033
SSL Inspection ... 1040
SSH traffic file scanning ... 1047

Overrides ... 1050
Web rating override ... 1051
Web profile override ... 1056
Custom signatures ... 1060
Application groups in policies ... 1060
VPN ... 1063
IPsec VPNs ... 1063
General IPsec VPN configuration ... 1063
Site-to-site VPN ... 1088
Remote access ... 1146
Aggregate and redundant VPN ... 1183
Overlay Controller VPN (OCVPN) ... 1220
ADVPN ... 1248
Other VPN topics ... 1278
VPN IPsec troubleshooting ... 1300
SSL VPN ... 1308
SSL VPN best practices ... 1308
SSL VPN quick start ... 1311
SSL VPN tunnel mode ... 1317
SSL VPN web mode for remote user ... 1324
SSL VPN authentication ... 1328
SSL VPN to IPsec VPN ... 1407
SSL VPN protocols ... 1417
SSL VPN troubleshooting ... 1418
User & Device ... 1422
Endpoint control and compliance ... 1422
Per-policy disclaimer messages ... 1422
Compliance ... 1424
FortiGuard distribution of updated Apple certificates ... 1431
User Definition ... 1432
User types ... 1432
Removing a user ... 1432
User Groups ... 1433
Configuring POP3 authentication ... 1433
Dynamic policies - FortiClient EMS ... 1434
Guest Management ... 1440
Configuring guest access ... 1440
Retail environment guest access ... 1442
Device Inventory ... 1444
Device summary and filtering ... 1444
Adding MAC-based addresses to devices ... 1446
LDAP Servers ... 1448
FSSO polling connector agent installation ... 1448
Enabling Active Directory recursive search ... 1454
Configuring LDAP dial-in using a member attribute ... 1455
Configuring wildcard admin accounts ... 1456
Configuring least privileges for LDAP admin account authentication in Active Directory ... 1458

RADIUS Servers 1458
Configuring RADIUS SSO authentication 1458
RSA ACE (SecurID) servers 1464
TACACS+ Servers 1469
Authentication Settings 1470
FortiTokens 1472
FortiToken Mobile Quick Start Guide 1473
FortiToken Cloud 1484
Registering hard tokens 1485
Managing FortiTokens 1487
FortiToken Mobile Push 1489
Troubleshooting and diagnosis 1491
Configuring the maximum log in attempts and lockout period 1494
Creating a PKI/peer user 1495
Configuring firewall authentication 1495
Creating a locally authenticated user account 1496
Creating a RADIUS-authenticated user account 1496
Creating an FSSO user group 1497
Creating a firewall user group 1500
Defining policy addresses 1500
Creating security policies 1501
Wireless configuration 1503
Switch Controller 1504
FortiLink setup 1504
FortiLink auto network configuration policy 1505
FortiLink network sniffer extension 1506
FortiLink MCLAG configuration 1508
Standalone FortiGate as switch controller 1510
Standalone FortiGate as switch controller 1510
Multiple FortiSwitches managed via hardware/software switch 1513
Multiple FortiSwitches in tiers via aggregate interface with redundant link enabled 1517
Multiple FortiSwitches in tiers via aggregate interface with MCLAG enabled only on distribution 1520
HA (A-P) mode FortiGate pairs as switch controller 1524
Multiple FortiSwitches managed via hardware/software switch 1524
Multiple FortiSwitches in tiers via aggregate interface with redundant link enabled 1528
Multiple FortiSwitches in tiers via aggregate interface with MCLAG enabled only on distribution 1532
Multiple FortiSwitches in tiers via aggregate interface with MCLAG enabled on all tiers 1536
Authentication and security 1540
MAC-based 802.1X authentication 1540
Port-based 802.1X authentication 1543
MAC layer control - Sticky MAC and MAC Learning-limit 1546
Quarantine 1548
Flow and Device Detection 1549
Data statistic 1549

Security Fabric showing ... 1550
FortiSwitch multi-tenant support ... 1551
Persistent MAC learning ... 1554
Split port mode (for QSFP / QSFP28) ... 1555
Dynamic VLAN name assignment from RADIUS attribute ... 1556
MSTI support ... 1557
Netflow and IPFIX support ... 1558
Log and Report ... 1560
Viewing event logs ... 1560
Sample logs by log type ... 1561
Checking the email filter log ... 1581
Supported log types to FortiAnalyzer, syslog, and FortiAnalyzer Cloud ... 1582
Configuring multiple FortiAnalyzers on a multi-VDOM FortiGate ... 1583
Checking FortiAnalyzer connectivity ... 1584
Configuring multiple FortiAnalyzers (or syslog servers) per VDOM ... 1585
Source and destination UUID logging ... 1587
Troubleshooting ... 1589
Log-related diagnose commands ... 1589
Backing up log files or dumping log messages ... 1594
SNMP OID for logs that failed to send ... 1596
Monitor ... 1600
Policy and route checks ... 1600
WiFi client monitor ... 1602
WiFi health monitor ... 1603
Running processes ... 1604
Aggregate processes information ... 1606
VM ... 1609
Amazon Web Services ... 1609
Microsoft Azure ... 1609
Google Cloud Platform ... 1609
Oracle OCI ... 1609
AliCloud ... 1609
Private cloud ... 1609
FortiGate multiple connector support ... 1609
Adding VDOMs with FortiGate v-series ... 1612
Terraform: FortiOS as a provider ... 1615
Troubleshooting ... 1619
PF SR-IOV driver support ... 1620
Troubleshooting ... 1622
Troubleshooting methodologies ... 1622
Verify user permissions ... 1623
Establish a baseline ... 1623
Create a troubleshooting plan ... 1625
Troubleshooting scenarios ... 1626

Checking the system date and time 1627
Checking the hardware connections 1628
Checking FortiOS network settings 1629
Troubleshooting CPU and network resources 1632
Troubleshooting high CPU usage 1633
Checking the modem status 1637
Running ping and traceroute 1638
Checking the logs 1642
Verifying routing table contents in NAT mode 1642
Verifying the correct route is being used 1643
Verifying the correct firewall policy is being used 1643
Checking the bridging information in transparent mode 1644
Checking the number of sessions that UTM proxy uses 1645
Checking wireless information 1650
Performing a sniffer trace (CLI and packet capture) 1650
Debugging the packet flow 1653
Testing a proxy operation 1656
Displaying detail Hardware NIC information 1657
Performing a traffic trace 1659
Using a session table 1660
Finding object dependencies 1663
Diagnosing NPU-based interfaces 1664
Running the TAC report 1665
Other commands 1665
FortiGuard troubleshooting 1668
Additional resources 1672
Technical documentation 1672
Fortinet video library 1672
Release notes 1672
Knowledge base 1672
Fortinet technical discussion forums 1672
Fortinet training services online campus 1672
Fortinet Support 1672

Change Log

Date	Change Description
2020-11-12	Initial release.
2020-11-13	Updated Threat feeds on page 219.
2020-11-27	Added DoS protection on page 781.
2020-12-02	Updated Private Cloud K8s SDN connector on page 183.
2020-12-10	Updated NetFlow on page 437.
2020-12-14	Updated IPsec VPNs on page 1063 chapter.
2021-02-18	Updated Inspection mode differences for antivirus on page 1037.
2021-03-03	Updated Web rating override on page 1051.

Getting started

This section explains how to get started with a FortiGate.

Differences between models

Not all FortiGates have the same features, particularly entry-level models (models 30 to 90). A number of features on these models are only available in the CLI.



Consult your model's QuickStart Guide, hardware manual, or the Feature / Platform Matrix for further information about features that vary by model.

FortiGate models differ principally by the names used and the features available:

- Naming conventions may vary between FortiGate models. For example, on some models the hardware switch interface used for the local area network is called *lan*, while on other units it is called *internal*.
- Certain features are not available on all models. Additionally, a particular feature may be available only through the CLI on some models, while that same feature may be viewed in the GUI on other models.
  If you believe your FortiGate model supports a feature that does not appear in the GUI, go to *System* > *Feature Visibility* and confirm that the feature is enabled. For more information, see Feature visibility on page 716.

Using the GUI

This section presents an introduction to the graphical user interface (GUI) on your FortiGate.

The following topics are included in this section:

- Connecting using a web browser
- Menus
- Tables
- Entering values

For information about using the dashboards, see Dashboard on page 57.

Connecting using a web browser

In order to connect to the GUI using a web browser, an interface must be configured to allow administrative access over HTTPS or over both HTTPS and HTTP. By default, an interface has already been set up that allows HTTPS access with the IP address 192.168.1.99.

Browse to https://192.168.1.99 and enter your username and password. If you have not changed the admin account's password, use the default user name, `admin`, and leave the password field blank.

The GUI will now be displayed in your browser.

To use a different interface to access the GUI:

1. Go to *Network* > *Interfaces* and edit the interface you wish to use for access. Take note of its assigned IP address.
2. Beside *Administrative Access*, select *HTTPS*, and any other protocol you require. You can also select *HTTP*, although this is not recommended as the connection will be less secure.
3. Click *OK*.
4. Browse to the IP address using your chosen protocol.
   The GUI will now be displayed in your browser.

Menus



If you believe your FortiGate model supports a menu that does not appear in the GUI, go to *System* > *Feature Visibility* and ensure the feature is enabled. For more information, see Feature visibility on page 716.

The GUI contains the following main menus, which provide access to configuration options for most FortiOS features:

Dashboard	The dashboard displays various widgets that display important system information and allow you to configure some system options. For more information, see Dashboard on page 57.
Security Fabric	Access the physical topology, logical topology, automation, and settings of the Fortinet Security Fabric. For more information, see Fortinet Security Fabric on page 66.
FortiView	A collection of dashboards and logs that give insight into network traffic, showing which users are creating the most traffic, what sort of traffic it is, when the traffic occurs, and what kind of threat the traffic may pose to the network. For more information, seeFortiView on page 277.
Network	Options for networking, including configuring system interfaces and routing options. For more information, see Network on page 316.
System	Configure system settings, such as administrators, FortiGuard, and certificates. For more information, see System on page 618.
Policy & Objects	Configure firewall policies, protocol options, and supporting content for policies, including schedules, firewall addresses, and traffic shapers. For more information, see Policy and Objects on page 726.
Security Profiles	Configure your FortiGate's security features, including Antivirus, Web Filter, and Application Control. For more information, see Security Profiles on page 867.
VPN	Configure options for IPsec and SSL virtual private networks (VPNs).

	For more information, see IPsec VPNs on page 1063 and SSL VPN on page 1308.
User & Device	Configure user accounts, groups, and authentication methods, including external authentication and single sign-on (SSO).
WiFi & Switch Controller	Configure the unit to act as a wireless network controller, managing the wireless Access Point (AP) functionality of FortiWiFi and FortiAP units. On certain FortiGate models, this menu has additional features allowing for FortiSwitch units to be managed by the FortiGate. For more information, see Wireless configuration on page 1503 and Switch Controller on page 1504.
Log & Report	Configure logging and alert email as well as reports. For more information, see Log and Report on page 1560.
Monitor	View a variety of monitors, including the Routing Monitor, VPN monitors for both IPsec and SSL, monitors relating to wireless networking, and more.

Tables

Many GUI pages contain tables of information that can be filtered and customized to display specific information in a specific way. Some tables allow content to be edited directly on that table, or rows to be copied and pasted.

Navigation

Some tables contain information and lists that span multiple pages. Navigation controls will be available at the bottom of the page.

Filters

Filters are used to locate a specific set of information or content in a table. They can be particularly useful for locating specific log entries. The filtering options vary, depending on the type of information in the log.

Depending on the table content, filters can be applied using the filter bar, using a column filter, or based on a cell's content. Some tables allow filtering based on regular expressions.

Administrators with read and write access can define filters. Multiple filters can be applied at one time.

To manually create a filter:

1. Click *Add Filter* at the top of the table. A list of the fields available for filtering is shown.
2. Select the field to filter by.
3. Enter the value to filter by, adding modifiers as needed.
4. Press *Enter* to apply the filter.

To create a column filter:

1. Click the filter icon on the right side of the column header
2. Choose a filter type from the available options.
3. Enter the filter text, or select from the available values.
4. Click *Apply*.

To create a filter based on a cell's content:

1. Right click on a cell in the table.
2. Select a filtering option from the menu.

Column settings

Columns can be rearranged, resized, and added or removed from tables.

To add or remove columns:

1. Right a column header, or click the gear icon on the left side of the header row that appears when hovering the cursor over the headers.
2. Select columns to add or remove.
3. Click *Apply*.

To rearrange the columns in a table:

1. Click and drag the column header.

To resize a column:

1. Click and drag the right border of the column header.

To resize a column to fit its contents:

1. Click the dots or filter icon on the right side of the column header and select *Resize to Contents*.

To resize all of the columns in a table to fit their content:

1. Right a column header, or click the gear icon on the left side of the header row that appears when hovering the cursor over the headers.
2. Click *Best Fit All Columns*.

To reset a table to its default view:

1. Right a column header, or click the gear icon on the left side of the header row that appears when hovering the cursor over the headers.
2. Click *Reset Table*.
   Resetting a table does not remove filters.

Editing objects

In some tables, parts of a configuration can be edited directly in the table. For example, security profiles can be added to an existing firewall policy by clicking the edit icon in a cell in the *Security Profiles* column.

Copying rows

In some tables, rows can be copied and pasted using the right-click menu. For example, a policy can be duplicated by copying and pasting it.

Entering values

Numerous fields in the GUI and CLI require text strings or numbers to be entered when configuring the FortiGate. When entering values in the GUI, you will be prevented from entering invalid characters, and a warning message will be shown explaining what values are not allowed. If invalid values are entered in a CLI command, the setting will be rejected when you apply it.

- Text strings on page 20
- Numbers on page 21

Text strings

Text strings are used to name entities in the FortiGate configuration. For example, the name of a firewall address, administrator, or interface are all text strings.

The following characters cannot be used in text strings, as they present cross-site scripting (XSS) vulnerabilities:

- " - double quotes
- ' - single quote
- > - greater than
- < - less than

Most GUI text fields prevent XSS vulnerable characters from being added.



VDOM names and hostnames can only use numbers (0-9), letters (a-z and A-Z), dashes, and underscores.

The `tree` CLI command can be used to view the number of characters allowed in a name field. For example, entering the following commands show that a firewall address name can contain up to 80 characters, while its FQDN can contain 256 characters:

```
config fire address
(address) # tree
    -- [address] --*name     (80)
              |- uuid
              |- subnet
              |- type
              |- start-mac
              |- end-mac
```

```
|- start-ip
|- end-ip
|- fqdn    (256)
|- country    (3)
|- wildcard-fqdn    (256)
|- cache-ttl    (0,86400)
|- wildcard
|- sdn    (36)
|- interface    (36)
|- tenant    (36)
|- organization    (36)
|- epg-name    (256)
|- subnet-name    (256)
|- sdn-tag    (16)
|- policy-group    (16)
|- comment
|- visibility
|- associated-interface    (36)
|- color    (0,32)
|- filter
|- sdn-addr-type
|- obj-id
|- [list] --*ip    (36)
          |- obj-id    (128)
          +- net-id    (128)
|- [tagging] --*name    (64)
             |- category    (64)
             +- [tags] --*name    (80)
+- allow-routing
```

Numbers

Numbers are used to set sizes, rated, addresses, port numbers, priorities, and other such numeric values. They can be entered as a series of digits (without commas or spaces), in a dotted decimal format (such as IP addresses), or separated by colons (such as MAC addresses). Most numeric values use base 10 numbers, while some use hexadecimal values.

Most GUI and CLI fields prevent invalid numbers from being entered. The CLI help text includes information about the range of values allowed for applicable settings.

Using the CLI

The Command Line Interface (CLI) can be used in lieu of the GUI to configure the FortiGate. Some settings are not available in the GUI, and can only be accessed using the CLI.

This section briefly explains basic CLI usage. For more information about the CLI, see the FortiOS CLI Reference.

- Connecting to the CLI on page 22
- CLI basics on page 24
- Command syntax on page 30
- Subcommands on page 33
- Permissions on page 35

Connecting to the CLI

You can connect to the CLI using a direct console connection, SSH, the CLI console in the GUI, or the FortiExplorer app on your iOS device.

You can access the CLI outside of the GUI in three ways:

- Console connection: Connect your computer directly to the console port of your FortiGate.
- SSH access: Connect your computer through any network interface attached to one of the network ports on your FortiGate.
- FortiExplorer: Connect your device to the FortiExplorer app on your iOS device to configure, manage, and monitor your FortiGate. See FortiExplorer for iOS on page 35 for details.

Console connection

A direct console connections to the CLI is created by directly connecting your management computer or console to the FortiGate unit, using its DB-9 or RJ-45 console port.

Direct console access to the FortiGate may be required if:

- You are installing the FortiGate for the first time and it is not configured to connect to your network.
- You are restoring the firmware using a boot interrupt. Network access to the CLI will not be available until after the boot process has completed, making direct console access the only option.

To connect to the FortiGate console, you need:

- A console cable to connect the console port on the FortiGate to a communications port on the computer. Depending on your device, this is one of:
  - null modem cable (DB-9 to DB-9)
  - DB-9 to RJ-45 cable (a DB-9-to-USB adapter can be used)
  - USB to RJ-45 cable
- A computer with an available communications port
- Terminal emulation software

To connect to the CLI using a direct console connection:

1. Using the console cable, connect the FortiGate unit's console port to the serial communications (COM) port on your management computer.
2. Start a terminal emulation program on the management computer, select the COM port, and use the following settings:

Bits per second	9600
Data bits	8
Parity	None
Stop bits	1
Flow control	None

3. Press Enter on the keyboard to connect to the CLI.
4. Log in to the CLI using your username and password (default: *admin* and no password).
   You can now enter CLI commands, including configuring access to the CLI through SSH.

SSH access

SSH access to the CLI is accomplished by connecting your computer to the FortiGate unit using one of its network ports. You can either connect directly, using a peer connection between the two, or through any intermediary network.



If you do not want to use an SSH client and you have access to the GUI, you can access the CLI through the network using the CLI console in the GUI.

The CLI console can be accessed from the upper-right hand corner of the screen and appears as a slide-out window. For policies and objects, the CLI can be also be accessed by right clicking on the element and selecting *Edit in CLI*.

SSH must be enabled on the network interface that is associated with the physical network port that is used.

If your computer is not connected either directly or through a switch to the FortiGate, you must also configure the FortiGate with a static route to a router that can forward packets from the FortiGate to the computer. This can be done using a local console connection, or in the GUI.

To connect to the FortiGate CLI using SSH, you need:

- A computer with an available serial communications (COM) port and RJ-45 port
- The console cable
- Terminal emulation software
- A network cable
- Prior configuration of the operating mode, network interface, and static route.

To enable SSH access to the CLI using a local console connection:

1. Using the network cable, connect the FortiGate unit's port either directly to your computer's network port, or to a network through which your computer can reach the FortiGate unit.
2. Note the number of the physical network port.
3. Using direct console connection, connect and log into the CLI.
4. Enter the following command:

```
config system interface
    edit <interface_str>
        append allowaccess ssh
    next
end
```

   Where `<interface_str>` is the name of the network interface associated with the physical network port, such as `port1`.
5. Confirm the configuration using the following command to show the interface's settings:

```
show system interface <interface_str>
```

   For example:

```
show system interface port1
    config system interface
        edit "port1"
            set vdom "root"
            set ip 192.168.1.99 255.255.255.0
            set allowaccess ping https ssh
            set type hard-switch
```

```
            set stp enable
            set role lan
            set snmp-index 6
        next
    end
```

Connecting using SSH

Once the FortiGate unit is configured to accept SSH connections, use an SSH client on your management computer to connect to the CLI.

The following instructions use PuTTy. The steps may vary in other terminal emulators.

To connect to the CLI using SSH:

1. On your management computer, start PuTTy.
2. In the *Host Name (or IP address)* field, enter the IP address of the network interface that you are connected to and that has SSH access enabled.
3. Set the port number to 22, if it is not set automatically.
4. Select *SSH* for the *Connection type*.
5. Click *Open*. The SSH client connect to the FortiGate.
   The SSH client may display a warning if this is the first time that you are connecting to the FortiGate and its SSH key is not yet recognized by the SSH client, or if you previously connected to the FortiGate using a different IP address or SSH key. This is normal if the management computer is connected directly to the FortiGate with no network hosts in between.
6. Click *Yes* to accept the FortiGate unit's SSH key.
   The CLI displays the log in prompt.
7. Enter a valid administrator account name, such as `admin`, then press *Enter*.
8. Enter the administrator account password, then press *Enter*.
   The CLI console shows the command prompt (FortiGate hostname followed by a `#`). You can now enter CLI commands.



If three incorrect log in or password attempts occur in a row, you will be disconnected. If this occurs, wait for one minute, then reconnect and attempt to log in again.

CLI basics

Basic features and characteristics of the CLI environment provide support and ease of use for many CLI tasks.

Help

Press the question mark (?) key to display command help and complete commands.

- Press the question mark (?) key at the command prompt to display a list of the commands available and a description of each command.
- Enter a command followed by a space and press the question mark (?) key to display a list of the options available for that command and a description of each option.

- Enter a command followed by an option and press the question mark (?) key to display a list of additional options available for that command option combination and a description of each option.
- Enter a question mark after entering a portion of a command to see a list of valid complete commands and their descriptions. If there is only one valid command, it will be automatically filled in.

Shortcuts and key commands

Shortcut key	Action
?	List valid complete or subsequent commands. If multiple commands can complete the command, they are listed with their descriptions.
Tab	Complete the word with the next available match. Press multiple times to cycle through available matches.
Up arrow or Ctrl + P	Recall the previous command. Command memory is limited to the current session.
Down arrow, or Ctrl + N	Recall the next command.
Left or Right arrow	Move the cursor left or right within the command line.
Ctrl + A	Move the cursor to the beginning of the command line.
Ctrl + E	Move the cursor to the end of the command line.
Ctrl + B	Move the cursor backwards one word.
Ctrl + F	Move the cursor forwards one word.
Ctrl + D	Delete the current character.
Ctrl + C	Abort current interactive commands, such as when entering multiple lines. If you are not currently within an interactive command such as `config` or `edit`, this closes the CLI connection.
\ then Enter	Continue typing a command on the next line for a multiline command. For each line that you want to continue, terminate it with a backslash (`\`). To complete the command, enter a space instead of a backslash, and then press *Enter*.

Command tree

Enter `tree` to display the CLI command tree. To capture the full output, connect to your device using a terminal emulation program and capture the output to a log file. For some commands, use the `tree` command to view all available variables and subcommands.

Command abbreviation

You can abbreviate words in the command line to their smallest number of non-ambiguous characters.

For example, the command `get system status` could be abbreviated to `g sy stat`.

Adding and removing options from lists

When configuring a list, the `set` command will remove the previous configuration.

For example, if a user group currently includes members A, B, and C, the command `set member D` will remove members A, B, and C. To avoid removing the existing members from the group, the command `set members A B C D` must be used.

To avoid this issue, the following commands are available:

append	Add an option to an existing list. For example, `append member D` adds user D to the user group without removing any of the existing members.
select	Clear all of the options except for those specified. For example, `select member B` removes all member from the group except for member B.
unselect	Remove an option from an existing list. For example, `unselect member C` removes only member C from the group, without affecting the other members.

Environment variables

The following environment variables are support by the CLI. Variable names are case-sensitive.

$USERFROM	The management access type (`ssh`, `jsconsole`, and so on) and the IPv4 address of the administrator that configured the item.
$USERNAME	The account name of the administrator that configured the item.
$SerialNum	The serial number of the FortiGate unit.

For example, to set a FortiGate device's host name to its serial number, use the following CLI command:

```
config system global
   set hostname $SerialNum
end
```

Special characters

The following characters cannot be used in most CLI commands: `<`, `>`, `(`, `)`, `#`, `'`, and `"`

If one of those characters, or a space, needs to be entered as part of a string, it can be entered by using a special command, enclosing the entire string in quotes, or preceding it with an escape character (backslash, \).

To enter a question mark (`?`) or a tab, Ctrl + V must be entered first.



Question marks and tabs cannot be typed or copied into the CLI Console or some SSH clients.

Character	Keys
?	Ctrl + V then ?
Tab	Ctrl + V then Tab
Space (as part of a string value, not to end the string)	Enclose the string in single or double quotation marks: "`Security Administrator`". or '`Security Administrator`'. Precede the space with a backslash: `Security\ Administrator`.
' (as part of a string value, not to begin or end the string)	\'
" (as part of a string value, not to begin or end the string)	\"
\	\\

Using grep to filter command output

The `get`, `show`, and `diagnose` commands can produce large amounts of output. The `grep` command can be used to filter the output so that it only shows the required information.

The grep command is based on the standard UNIX grep, used for searching text output based on regular expressions.

For example, the following command displays the MAC address of the internal interface:

```
get hardware nic internal | grep Current_HWaddr
    Current_HWaddr        00:09:0f:cb:c2:75
```

The following command will display all TCP sessions that are in the session list, including the session list line number in the output:

```
get system session list | grep -n tcp
```

The following command will display all of the lines in the HTTP replacement message that contain `URL` or `url`:

```
show system replacemsg http | grep -i url
```

The following options can also be used:

```
-A <num> After
-B <num> Before
-C <num> Context
```

The `-f` option is available to support contextual output, in order to show the complete configuration. The following example shows the difference in the output when `-f` is used versus when it is not used:

Without `-f`:

```
show | grep ldap-group1
    edit "ldap-group1"
        set groups "ldap-group1"
```

With `-f`:

```
show | grep -f ldap-group1
    config user group
        edit "ldap-group1"
            set member "pc40-LDAP"
        next
```

```
end
config firewall policy
    edit 2
        set srcintf "port31"
        set dstintf "port32"
        set srcaddr "all"
        set action accept
        set identity-based enable
        set nat enable
        config identity-based-policy
            edit 1
                set schedule "always"
                set groups "ldap-group1"
                set dstaddr "all"
                set service "ALL"
            next
        end
    next
end
```

Language support and regular expressions

Characters such as ñ and é, symbols, and ideographs are sometimes acceptable input. Support varies depending on the type of item that is being configured. CLI commands, objects, field names, and options must use their exact ASCII characters, but some items with arbitrary names or values can be input using your language of choice. To use other languages in those cases, the correct encoding must be used.

Input is stored using Unicode UTF-8 encoding, but is not normalized from other encodings into UTF-8 before it is stored. If your input method encodes some characters differently than in UTF-8, configured items may not display or operate as expected.

Regular expressions are especially impacted. Matching uses the UTF-8 character values. If you enter a regular expression using a different encoding, or if an HTTP client sends a request in a different encoding, matches may not be what is expected.

For example, with Shift-JIS, backslashes could be inadvertently interpreted as the symbol for the Japanese yen (¥), and vice versa. A regular expression intended to match HTTP requests containing monetary values with a yen symbol may not work it if the symbol is entered using the wrong encoding.

For best results:

- use UTF-8 encoding, or
- use only characters whose numerically encoded values are the same in UTF-8, such as the US-ASCII characters that are encoded using the same values in ISO 8859-1, Windows code page 1252, Shift-JIS, and other encoding methods, or
- for regular expressions that must match HTTP requests, use the same encoding as your HTTP clients.



HTTP clients may send requests in encodings other than UTF-8. Encodings usually vary based on the client's operating system or input language. If the client's encoding method cannot be predicted, you might only be able to match the parts of the request that are in English, as the values for English characters tend to be encoded identically, regardless of the encoding method.

If the FortiGate is configured to use an encoding method other than UTF-8, the management computer's language may need to be changed, including the web browse and terminal emulator. If the FortiGate is configured using non-ASCII characters, all the systems that interact with the FortiGate must also support the same encoding method. If possible, the same encoding method should be used throughout the configuration to avoid needing to change the language settings on the management computer.

The GUI and CLI client normally interpret output as encoded using UTF-8. If they do not, configured items may not display correctly. Exceptions include items such as regular expression that may be configured using other encodings to match the encoding of HTTP requests that the FortiGate receives.

To enter non-ASCII characters in a terminal emulator:

1. On the management computer, start the terminal client.
2. Configure the client to send and receive characters using UTF-8 encoding.
   Support for sending and receiving international characters varies by terminal client.
3. Log in to the FortiGate unit.
4. At the command prompt, type your command and press *Enter*.
   Words that use encoded characters may need to be enclosed in single quotes (').
   Depending on your terminal client's language support, you may need to interpret the characters into character codes before pressing *Enter*. For example, you might need to enter: `edit '\743\601\613\743\601\652'`
5. The CLI displays the command and its output.

Screen paging

By default, the CLI will pause after displaying each page worth of text when a command has multiple pages of output. this can be useful when viewing lengthy outputs that might exceed the buffer of terminal emulator.

When the display pauses and shows `--More--`, you can:

- Press *Enter* to show the next line,
- Press *Q* to stop showing results and return to the command prompt,
- Press an arrow key, *Insert*, *Home*, *Delete*, *End*, *Page Up*, or *Page Down* to show the next few pages,
- Press any other key to show the next page, or
- Wait for about 30 seconds for the console to truncate the output and return to the command prompt.

When pausing the screen is disable, press *Ctrl + C* to stop the output and log out of the FortiGate.

To disable pausing the CLI output:

```
config system console
   set output standard
end
```

To enable pausing the CLI output:

```
config system console
   set output more
end
```

Changing the baud rate

The baud rate of the local console connection can be changed from its default value of 9600.

To change the baud rate:

```
config system console
   set baudrate {9600 | 19200 | 38400 | 57600 | 115200}
end
```

Editing the configuration file

The FortiGate configuration file can be edited on an external host by backing up the configuration, editing the configuration file, and then restoring the configuration to the FortiGate.

Editing the configuration file can save time is many changes need to be made, particularly if the plain text editor that you are using provides features such as batch changes.

To edit the configuration file:

1. Backup the configuration. See Configuration backups on page 61 for details.
2. Open the configuration file in a plain text editor that supports UNIX-style line endings.
3. Edit the file as needed.



Do not edit the first line of the configuration file.

This line contains information about the firmware version and FortiGate model. If you change the model number, the FortiGate unit will reject the configuration when you attempt to restore it.

4. Restore the modified configuration to the FortiGate. See Configuration backups on page 61 for details.
The FortiGate downloads the configuration file and checks that the model information is correct. If it is correct, the configuration file is loaded and each line is checked for errors. If a command is invalid, that command is ignored. If the configuration file is valid, the FortiGate restarts and loads the downloaded configuration.

Command syntax

When entering a command, the CLI console requires that you use valid syntax and conform to expected input constraints. It rejects invalid commands. Indentation is used to indicate the levels of nested commands.

Each command line consists of a command word, usually followed by configuration data or a specific item that the command uses or affects.

Notation

Brackets, vertical bars, and spaces are used to denote valid syntax. Constraint notations, such as `<address_ipv4>`, indicate which data types or string patterns are acceptable value input.

All syntax uses the following conventions:

Angle brackets < >	Indicate a variable of the specified data type.
Curly brackets { }	Indicate that a variable or variables are mandatory.
Square brackets [ ]	Indicate that the variable or variables are optional. For example: `show system interface [<name_str>]` To show the settings for all interfaces, you can enter `show system interface` To show the settings for the Port1 interface, you can enter `show system interface port1`.
Vertical bar |	A vertical bar separates alternative, mutually exclusive options. For example: `set protocol {ftp | sftp}` You can enter either `set protocol ftp` or `set protocol sftp`.

Space	A space separates non-mutually exclusive options.
	For example:
	`set allowaccess {ping https ssh snmp http fgfm radius-acct probe-response capwap ftm}`
	You can enter any of the following:
	`set allowaccess ping`
	`set allowaccess https ping ssh`
	`set allowaccess http https snmp ssh ping`
	In most cases, to make changes to lists that contain options separated by spaces, you need to retype the entire list, including all the options that you want to apply and excluding all the options that you want to remove.

Optional values and ranges

Any field that is optional will use square-brackets. The overall config command will still be valid whether or not the option is configured.

Square-brackets can be used is to show that multiple options can be set, even intermixed with ranges. The following example shows a field that can be set to either a specific value or range, or multiple instances:


```
config firewall service custom
   set iprange <range1> [<range2> <range3> ...]
end
```

next

The `next` command is used to maintain a hierarchy and flow to CLI commands. It is at the same indentation level as the preceding `edit` command, to mark where a table entry finishes.

The following example shows the next command used in the subcommand `entries`:

```
config dlp filepattern
    edit <1>
        set name <name>
        set comment [comment]
        config entries
            edit <2>
                set filter-type {pattern | type}
            next
```



After configuring table entry <2> then entering `next`, the <2> table entry is saved and the console returns to the `entries` prompt:

```
FGT60E1Q23456789 (entries) #
```


You can now create more table entries as needed, or enter `end` to save the table and return to the `filepattern` table element prompt.

end

The `end` command is used to maintain a hierarchy and flow to CLI commands.

The following example shows the same command and subcommand as the `next` command example, except `end` has been entered instead of `next` after the subcommand:

```
config dlp filepattern
    edit <1>
        set name <name>
        set comment [comment]
        config entries
            edit <2>
                set filter-type {pattern | type}
    end
```



Entering `end` will save the <2> table entry and the table, and exit the `entries` subcommand entirely. The console returns to the filepattern table element prompt:

```
FGT60E1Q23456789 (1) #
```

Subcommands

Subcommands are available from within the scope of some commands. When you enter a subcommand level, the command prompt changes to indicate the name of the current command scope. For example, after entering:

```
config system admin
```

the command prompt becomes:

```
(admin)#
```

Applicable subcommands are available until you exit the command, or descend an additional level into another subcommand. Subcommand scope is indicated by indentation.

For example, the `edit` subcommand is only available in commands that affects tables, and the `next` subcommand is available only in the `edit` subcommand:

```
config system interface
   edit port1
      set status up
   next
end
```

The available subcommands vary by command. From a command prompt under the `config` command, subcommands that affect tables and fields could be available.

Table subcommands

edit <table_row>	Create or edit a table value.
	In objects such as security policies, `<table_row>` is a sequence number. To create a new table entry without accidentally editing an existing entry, enter `edit 0`. The CLI will confirm that creation of entry 0, but will assign the next unused number when the entry is saved after entering `end` or `next`.
	For example, to create a new firewall policy, enter the following commands:
	`config firewall policy`
	`edit 0`
	`....`
	`next`
	`end`
	To edit an existing policy, enter the following commands:
	`config firewall policy`
	`edit 27`
	`....`
	`next`
	`end`
	The `edit` subcommand changes the command prompt to the name of the table value that is being edited.

delete <table_row>	Delete a table value.
	For example, to delete firewall policy 30, enter the following commands:
	`config firewall policy`
	`delete 30`
	`end`

purge	Clear all table values. The `purge` command cannot be undone. To restore purged table values, the configuration must be restored from a backup.

move	Move an ordered table value.
	In the firewall policy table, this equivalent to dragging a policy into a new position. It does not change the policy's ID number.
	For example, to move policy 27 to policy 30, enter the following commands:
	`config firewall policy`
	`move 27 to 30`
	`end`
	The `move` subcommand is only available in tables where the order of the table entries matters.

clone <table_row> to <table_row>	Make a clone of a table entry.
	For example, to create firewall policy 30 as a clone of policy 27, enter the following commands:
	`config firewall policy`
	`clone 27 to 30`
	`end`
	The `clone` subcommand may not be available for all tables.

rename <table_row> to <table_row>	Rename a table entry.
	For example to rename an administrator from Flank to Frank, enter the following commands:
	`config system admin`
	`rename Flank to Frank`
	`end`
	The `rename` subcommand is only available in tables where the entries can be renamed.

get	List the current table entries.
	For example, to view the existing firewall policy table entries, enter the following commands:
	`config firewall policy`
	`get`

show	Show the configuration. Only table entries that are not set to default values are shown.
end	Save the configuration and exit the current `config` command.



Purging the `system interface` or `system admin` tables does not reset default table values. This can result in being unable to connect to or log in to the FortiGate, requiring the FortiGate to be formatted and restored.

Field subcommands

set <field> <value>	Modify the value of a field.

	For example, the command `set fsso enable` sets the `fsso` field to the value `enable`.
unset	Set the field to its default value.
select	Clear all of the options except for those specified. For example, if a group contains members A, B, C, and D, to remove all members except for B, use the command `select member B`.
unselect	Remove an option from an existing list. For example, if a group contains members A, B, C, and D, to remove only member B, use the command `unselect member B`.
append	Add an option to an existing multi-option table value.
clear	Clear all the options from a multi-option table value.
get	List the configuration of the current table entry, including default and customized values.
show	Show the configuration. Only values that are not set to default values are shown.
next	Save changes to the table entry and exit the `edit` command so that you can configure the next table entry.
abort	Exit the command without saving.
end	Save the configuration and exit the current `config` command.

Permissions

Administrator, or access, profiles control what CLI commands an administrator can access by assigning read, write, or no access to each are of FortiOS. For information, see Administrator profiles on page 620.


Read access is required to view configurations. Write access is required to make configuration changes. Depending on your account's profile, you may not have access to all CLI commands. To have access to all CLI commands, an administrator account with the *super_admin* profile must be used, such as the *admin* account.

Accounts assigned the *super_admin* profile are similar to the root administrator account. They have full permission to view and change all FortiGate configuration options, including viewing and changing other administrator accounts.

To increase account security, set strong passwords for all administrator accounts, and change the passwords regularly.

FortiExplorer for iOS

FortiExplorer for iOS is a user-friendly application that helps you to rapidly provision, deploy, and monitor Security Fabric components from your iOS device.

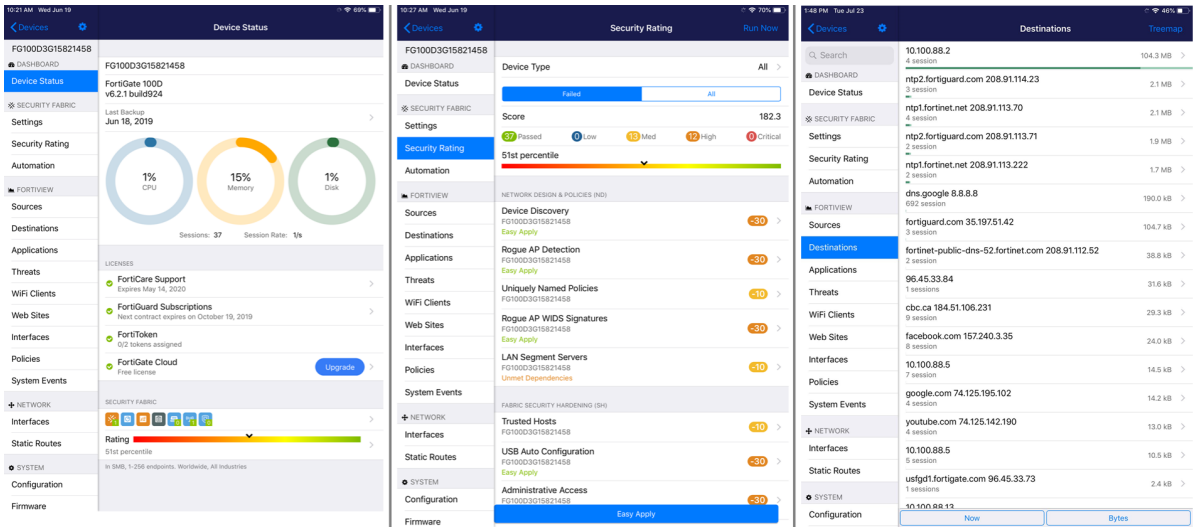

FortiExplorer for iOS requires iOS 10.0 or later and is compatible with iPhone, iPad, and Apple TV. It is supported by FortiOS 5.6 and later, and is only available on the App Store for iOS devices.

Advanced features are available with the purchase of FortiExplorer Pro. Paid features include the ability to add more than two devices and the ability to download firmware images from FortiCare.


Up to six members can use this app with 'Family Sharing' enabled in the App Store.

Getting started with FortiExplorer


If your FortiGate is accessible on a wireless network, you can connect to it using FortiExplorer provided that your iOS device is on the same network (see Connecting FortiExplorer to a FortiGate via WiFi). Otherwise, you will need to physically connect your iOS device to the FortiGate using a USB cable.

To connect and configure a FortiGate with FortiExplorer using a USB connection:


1. Connect your iOS device to your FortiGate USB A port. If prompted on your iOS device, *Trust* this computer.
2. Open FortiExplorer and select your FortiGate from the *FortiGate Devices* list . A blue USB icon will indicate that you are connected over a USB connection.

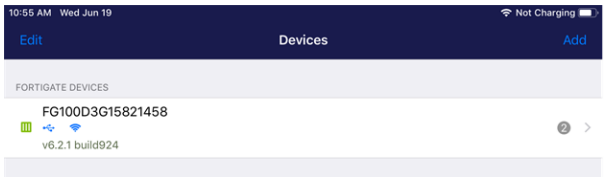


3. On the *Login* screen, select *USB*.
4. Enter the default *Username* (`admin`) and leave the *Password* field blank.
5. Optionally, select *Remember Password*.
6. Tap *Done* when you are ready.
   FortiExplorer opens the FortiGate management interface to the *Device Status* page:

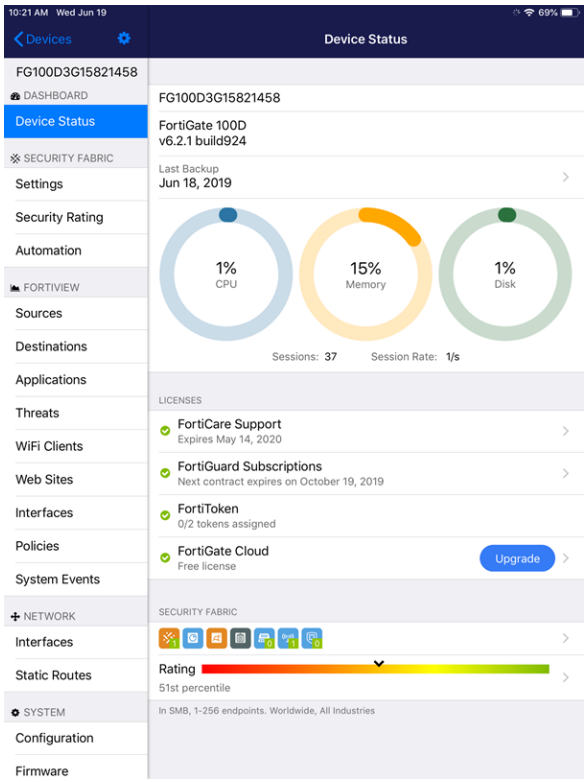


7. Go to *Network* > *Interfaces* and configure the WAN interface or interfaces.
8. The *wan1* interface *Address* mode is set to *DHCP* by default. Set it to *Manual* and enter its *Address*, *Netmask*, and *Default Gateway*, and then *Apply* your changes.

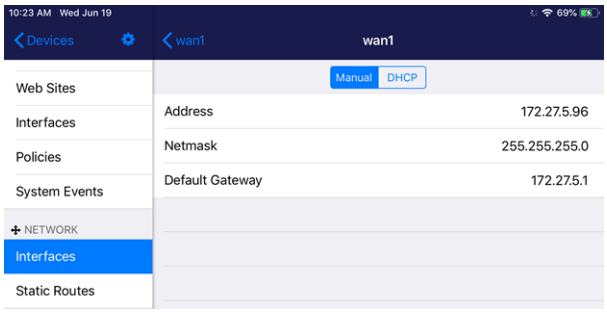


9. Optionally, configure *Administrative Access* to allow *HTTPS* access. This will allow administrators to access the FortiGate GUI using a web browser.

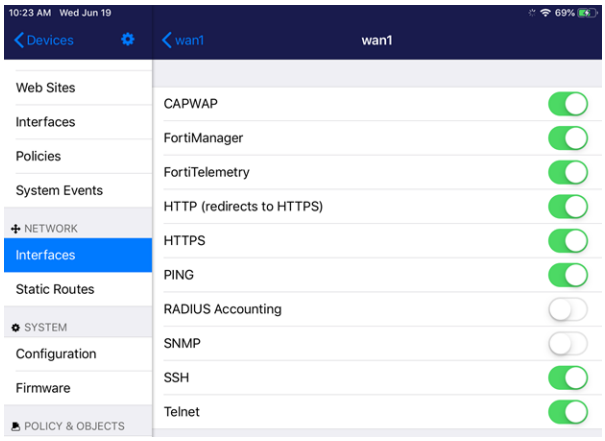


10. Go to *Network* > *Interfaces* and configure the local network (internal) interface.
11. Set the *Address* mode as before and configure *Administrative Access* if required.
12. Configure a *DHCP Server* for the internal network subnet.

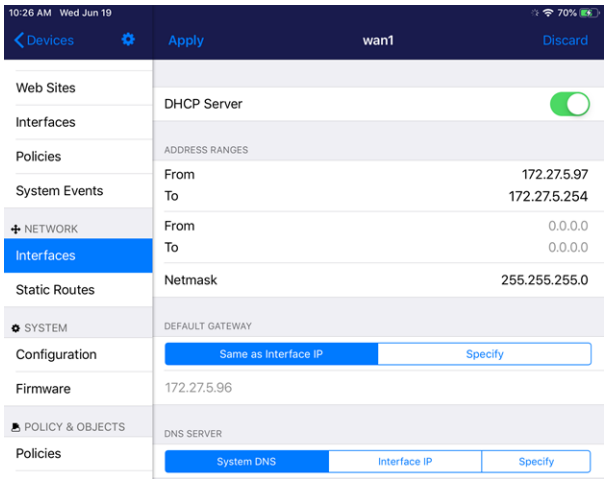

13. Return to the internal interface using the < button at the top of the screen.
14. Go to *Network* > *Static Routes* and configure the static route to the gateway.

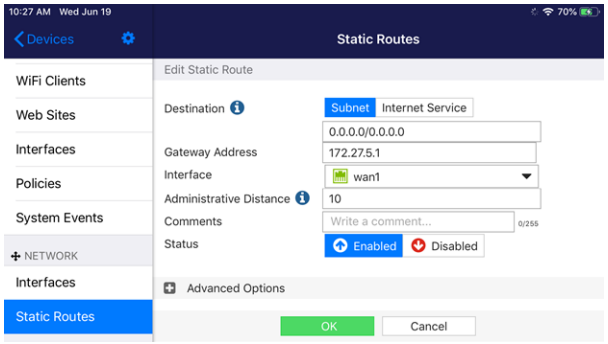

15. Go to *Policy & Objects* > *IPv4 Policy* and edit the Internet access policy. Enter a *Name* for the policy, enable the required *Security Profiles*, configure *Logging Options*, then tap *OK*.

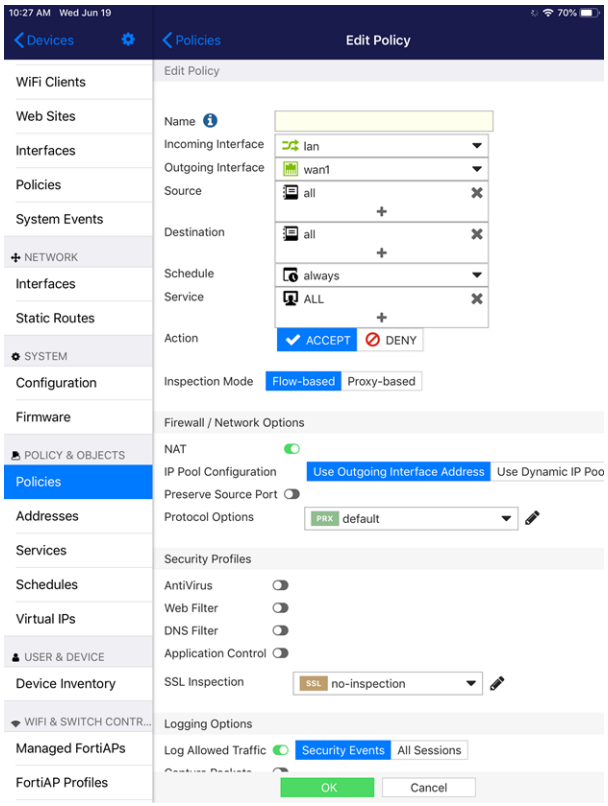


Connecting FortiExplorer to a FortiGate via WiFi


You can wirelessly connect to the FortiGate if your iOS device and the FortiGate are both connected to the same wireless network.

To connect and configure a FortiGate with FortiExplorer wirelessly:

1. Open the FortiExplorer app and tap *Add* on the *Devices* page.
2. On the *Add Device By* page, tap *HTTPS*.

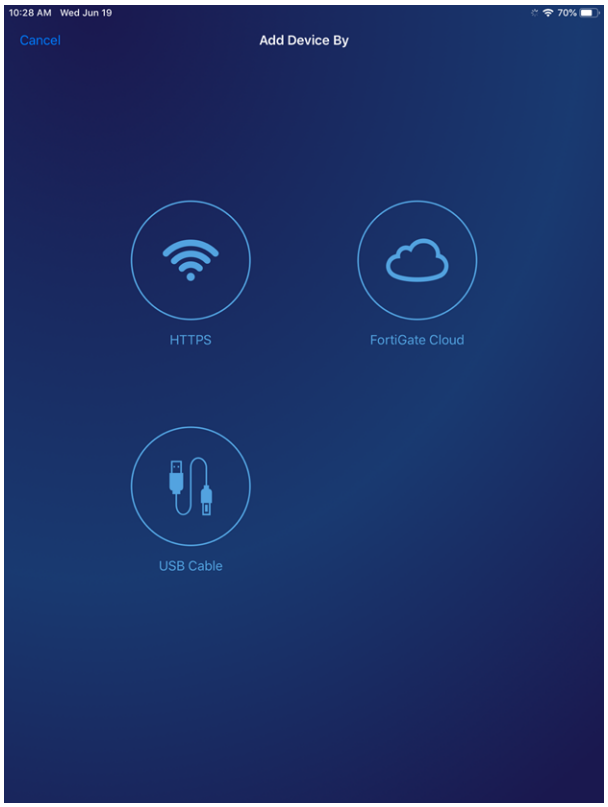

3. Enter the *Host* information, *Username*, and *Password*.
4. If required, change the default *Port* number, and optionally enable *Remember Password*.

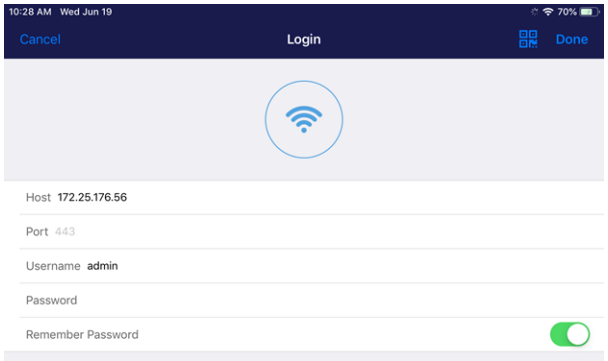


5. Tap *Done*.
6. If the FortiGate device identity cannot be verified, tap *Connect* at the prompt.
   FortiExplorer opens the FortiGate management interface to the *Device Status* page.

Running a security rating

After configuring your network, run a security rating check to identify vulnerabilities and highlight best practices that could improve your network's security and performance.

Go to *Security Fabric* > *Security Rating* and follow the steps to determine the score. See Security rating on page 134 for more information.

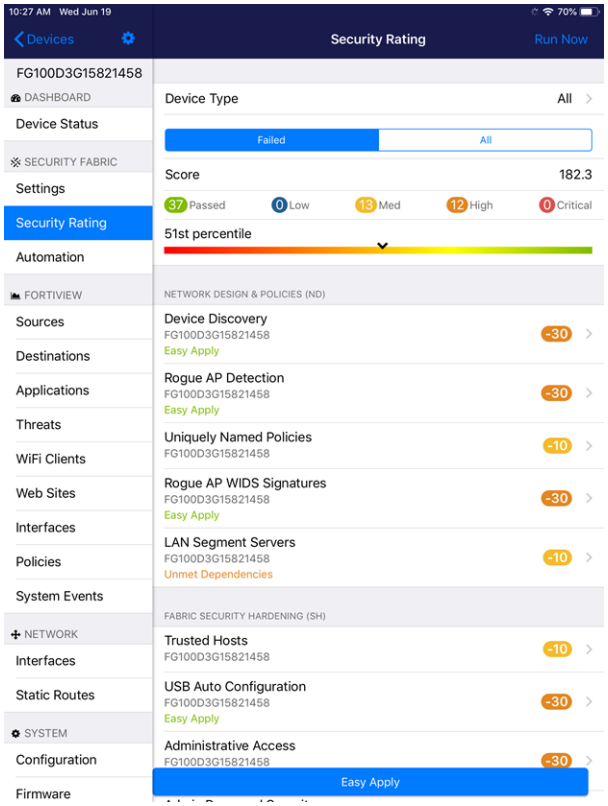

Upgrading to FortiExplorer Pro

FortiExplorer Pro includes the option to add more than two devices and download firmware images from FortiCare.

To upgrade to FortiExplorer Pro:

1. In FortiExplorer, go to *Settings*.
2. Tap *Upgrade to FortiExplorer Pro*.
3. Follow the on-screen prompts.

Basic administration

This section contains information about basic FortiGate administration that you can do after you installing the unit in your network.

- Registration on page 42
- FortiCare and FortiGate Cloud login on page 45

Registration


The FortiGate, and then its service contract, must be registered to have full access to Fortinet Customer Service and Support, and FortiGuard services. The FortiGate can be registered in either the FortiGate GUI or the FortiCloud support portal. The service contract can be registered from the FortiCloud support portal.




The service contract number is needed to complete registrations on the FortiCloud support portal. You can find this 12-digit number in the email that contains your service registration document (sent from do-not-reply-contract@fortinet.com) in the service entitlement summary.

To register your FortiGate:


1. Connect to the FortiGate GUI. A message is shown stating that FortiCare registration is required.

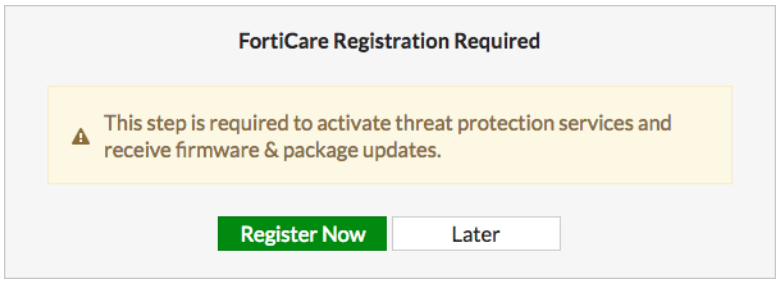

2. Click *Register Now*.
3. If you already have a support account, set *Action* to *Login*, and enter the required information.

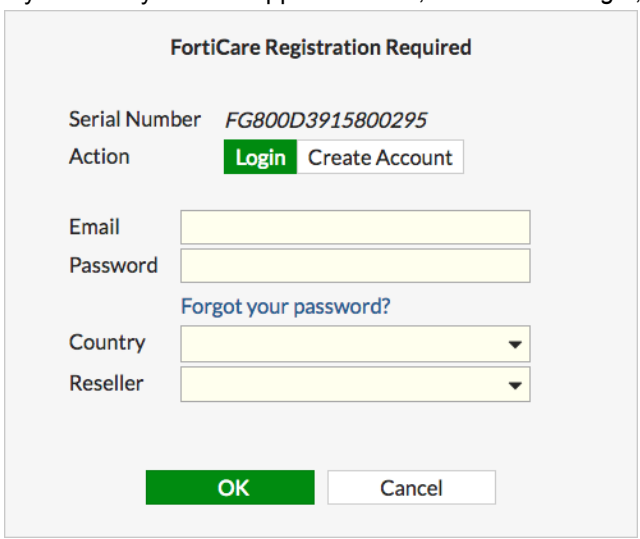

If you need to create an account, set *Action* to *Create Account*, and enter the required information.

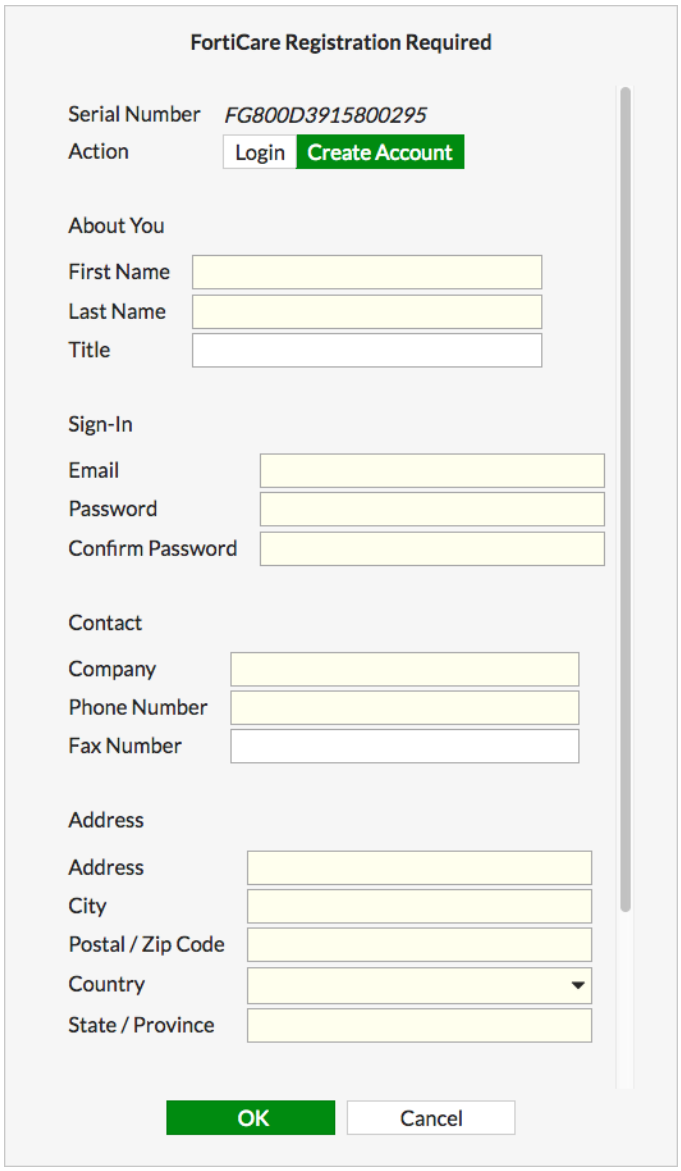


4. Click *OK*.
5. Go to *System* > *FortiGuard*.
6. In the *License Information* table, the *FortiCare Support* status is *Registered*. There may be a delay before the status is updated on your FortiGate.

To register the FortiGate on the FortiCloud support portal:

1. Go to support.fortinet.com and log in using your FortiCloud account credentials. If you do not have an account, click *Register* to create one.
2. Click *Asset* > *Register/Activate*.


3. Enter your product serial number or license certificate number for a VM, select an end user type, then click *Next*.

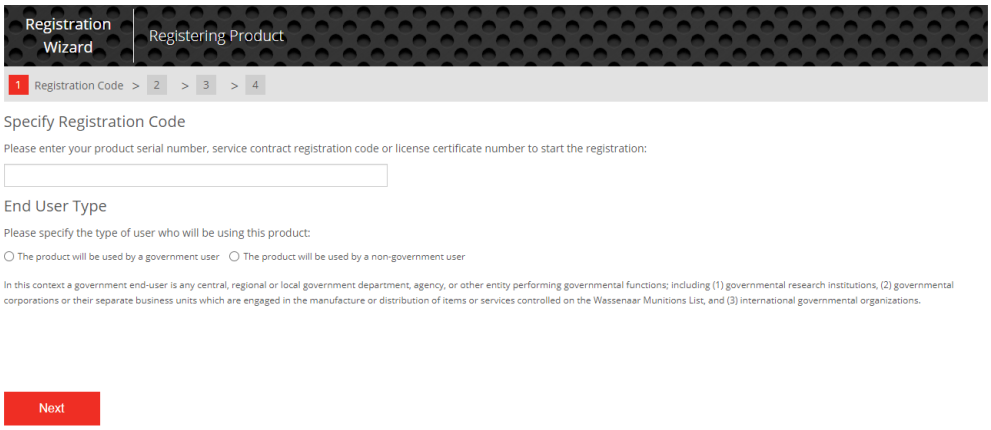

4. Enter your support contract number and product description, select a Fortinet partner, then click *Next*.
5. Read through the service terms and conditions, select the checkbox to accept, then click *Next*.
6. Verify the product entitlement preview, read through the terms and select the checkbox to accept, then click *Confirm*.
7. The *Registration Completed* page appears where page you can download the license file. Click *Register More* to register another FortiGate, or click *Finish* to complete the registration process.

To register the service contract on the FortiCloud support portal:

1. Go to support.fortinet.com and log in using your FortiCloud account credentials.
2. Click *Asset* > *Register/Activate*.
3. Enter your 12-digit contract registration code (service contract number), then click *Next*.
4. Enter the device serial number or select it from the list, then click *Next*.
5. Read through the service terms and conditions, select the checkbox to accept, then click *Next*.
6. Verify the product entitlement preview and associated services, read through the terms and select the checkbox to accept, then click *Confirm*.
7. Click *Asset* > *Manage/View Products*.
8. Select the device, then click *Entitlement* in the left menu to view the service entitlement.

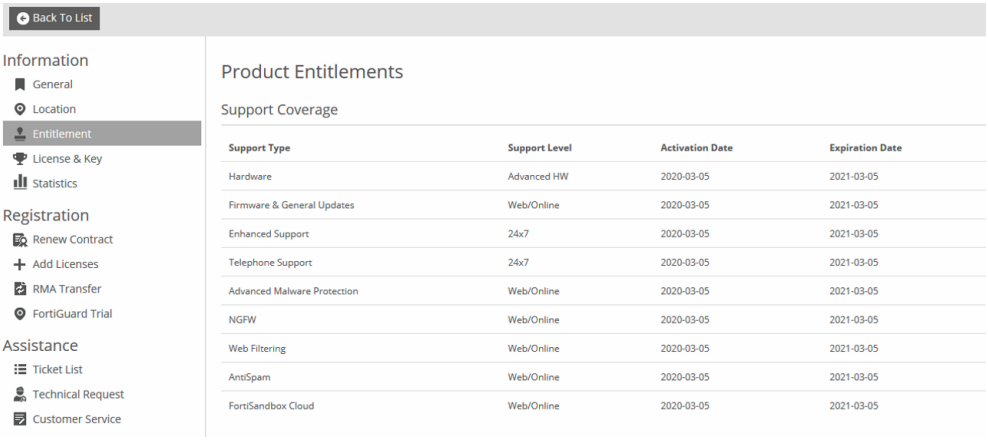

FortiCare and FortiGate Cloud login


With FortiCloud, FortiGate supports a unified login to FortiCare and FortiGate Cloud. The FortiGate Cloud setup is a subset of the FortiCare setup.

- If the FortiGate is not registered, activating FortiGate Cloud will force you to register with FortiCare.
- If a FortiGate is registered in FortiCare using a FortiCloud account, then only that FortiCloud account can be used to activate FortiGate Cloud.
- If a different FortiCloud account was already used to activate FortiGate Cloud, then a notification asking you to migrate to FortiCloud is shown in the GUI after upgrading FortiOS.

The CLI can be used to activate FortiGate Cloud without registration, or with a different FortiCloud account.

To activate FortiGate Cloud and register with FortiCare at the same time:


1. Go to *Dashboard* > *Status*.
2. In the FortiGate Cloud widget, click *Not Activated* > *Activate*.
   You must register with FortiCare before activating FortiGate Cloud.

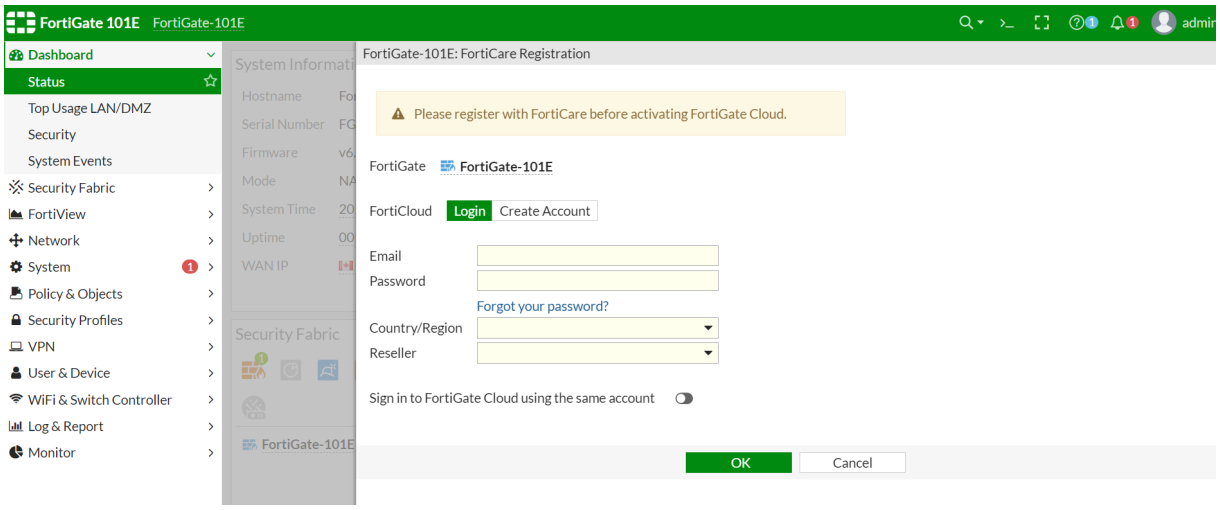


3. Enter your FortiCare *Email* address and *Password*.
4. Select your *Country/Region* and *Reseller*.
5. Enable *Sign in to FortiGate Cloud using the same account*.
6. Click *OK*.

To activate FortiGate Cloud on an already registered FortiGate:


1. Go to *Dashboard* > *Status*.
2. In the FortiGate Cloud widget, click *Not Activated* > *Activate*.

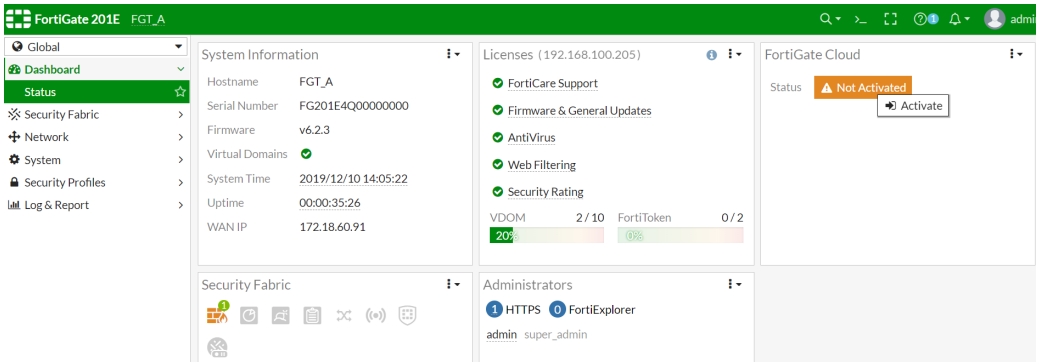

3. Enter the password for the account that was used to register the FortiGate.

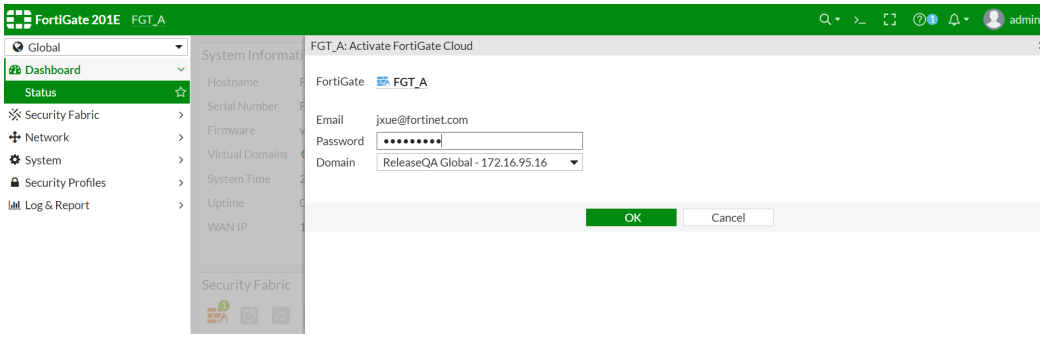


4. Click *OK*.
   The FortiGate Cloud widget now shows the FortiCloud account.

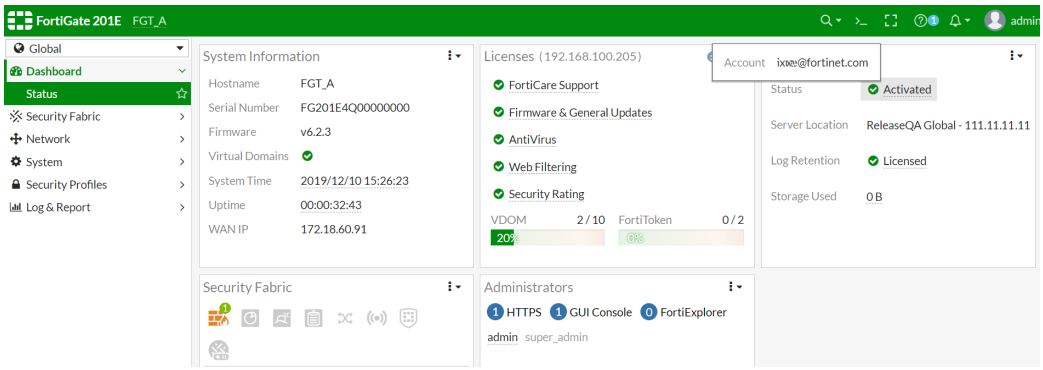


To migrate from the activated FortiGate Cloud account to the registered FortiCloud account:


1. Go to *Dashboard* > *Status*.

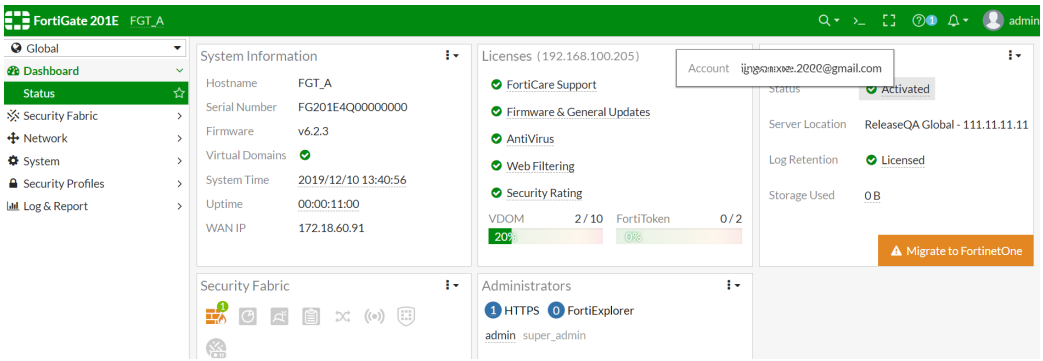

2. In the FortiGate Cloud widget, click *Migrate to FortiCloud*.

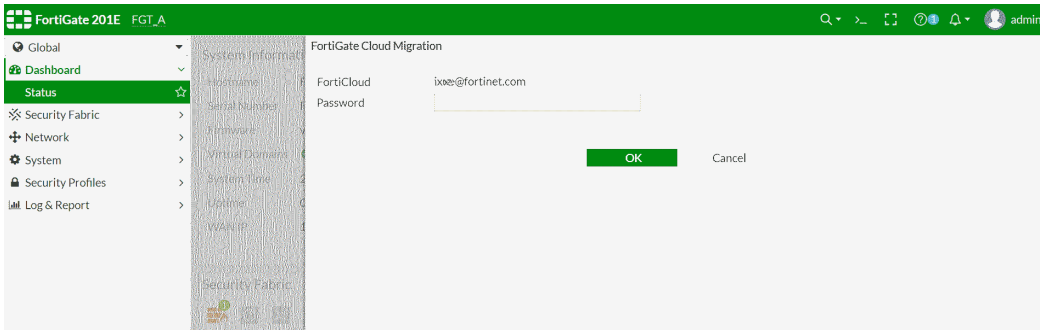

3. Enter the password for the account that was used to register the FortiGate, then click *OK*.
The FortiGate Cloud widget now shows the FortiCloud account.

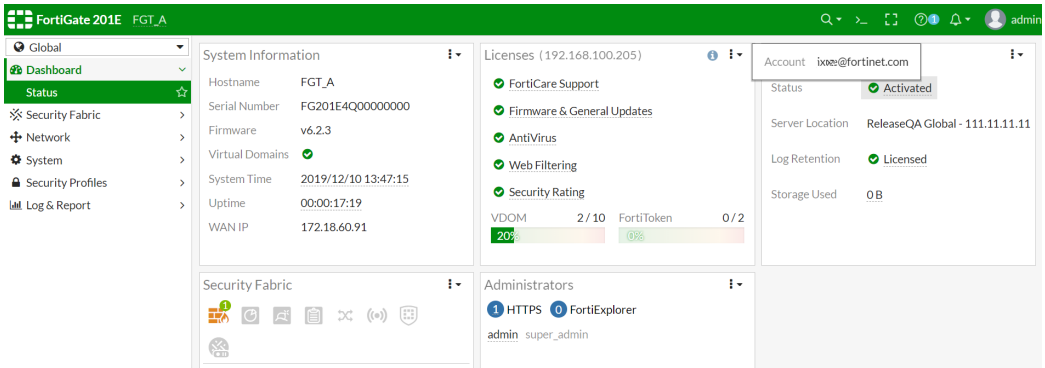

To activate FortiGate Cloud using an account that is not used for registration:

1. In the CLI, enter the following command:

```
execute fortiguard-log login <account_id> <password>
```

Where the <account_id> and <password> are the credentials for the account that you are using to activate FortiGate Cloud.

2. Check the account type with following command:

```
# diagnose fdsm contract-controller-update
Protocol=2.0|Response=202|Firmware=FAZ-4K-FW-2.50-
```

```
100|SerialNumber=FAMS000000000000|Persistent=false|ResponseItem=HomeServer:172.16.95.151
:443*AlterServer:172.16.95.151:443*Contract:20200408*NextRequest:86400*UploadConfig:Fals
e*ManagementMode:Local*ManagementID:737941253*AccountType:multitenancy

Result=Success
```



A FortiCloud account that is not used for the support portal account cannot be used to register FortiGate. Attempting to activate FortiGate Cloud with this type of account will fail.

FortiGate Cloud

FortiGate Cloud is a hosted security management and log retention service for FortiGate devices. It provides centralized reporting, traffic analysis, configuration management, and log retention without the need for additional hardware or software.

FortiGate Cloud offers a wide range of features:

- **Simplified central management**
  FortiGate Cloud provides a central GUI to manage individual or aggregated FortiGate and FortiWiFi devices. Adding a device to the FortiGate Cloud management subscription is straightforward. FortiGate Cloud has detailed traffic and application visibility across the whole network.
- **Hosted log retention with large default storage allocated**
  Log retention is an integral part of any security and compliance program, but administering a separate storage system is onerous. FortiGate Cloud takes care of this automatically and stores the valuable log information in the cloud. Different types of logs can be stored, including Traffic, System Events, Web, Applications, and Security Events.
- **Monitoring and alerting in real time**
  Network availability is critical to a good end-user experience. FortiGate Cloud enables you to monitor your FortiGate network in real time with different alerting mechanisms to pinpoint potential issues. Alerting mechanisms can be delivered via email.
- **Customized or pre-configured reporting and analysis tools**
  Reporting and analysis are your eyes and ears into your network's health and security. Pre-configured reports are available, as well as custom reports that can be tailored to your specific reporting and compliance requirements. The reports can be emailed as PDFs, and can cover different time periods.
- **Maintain important configuration information uniformly**
  The correct configuration of the devices within your network is essential for maintaining optimum performance and security posture. In addition, maintaining the correct firmware (operating system) level allows you to take advantage of the latest features.
- **Service security**
  All communication (including log information) between the devices and the cloud is encrypted. Redundant data centers are always used to give the service high availability. Operational security measures have been put in place to make sure your data is secure — only you can view or retrieve it.

Registration and activation



Before you can activate a FortiGate Cloud account, you must first register your device.

FortiGate Cloud accounts can be registered manually through the FortiGate Cloud website, https://www.forticloud.com, or you can easily register and activate your account directly from your FortiGate.

To activate your FortiGate Cloud account:

1. On your device, go to *Dashboard* > *Status*.
2. In the *FortiGate Cloud* widget, click the *Not Activated* > *Activate* button in the *Status* field.
3. A pane will open asking you to register your FortiGate Cloud account. Click *Create Account*, enter your information, view and accept the terms and conditions, and then click *OK*.
4. A second dialogue window open , asking you to enter your information to confirm your account. This sends a confirmation email to your registered email. The dashboard widget then updates to show that confirmation is required.
5. Open your email, and follow the confirmation link it contains.
   A FortiGate Cloud page will open, stating that your account has been confirmed. The *Activation Pending* message on the dashboard will change to state the type of account you have, and will provide a link to the FortiGate Cloud portal.

Enabling logging to FortiGate Cloud

To enable logging to FortiGate Cloud:

1. Go to *Security Fabric* > *Settings* or *Log & Report* > *Log Settings*.
2. Enable *Cloud Logging*.
3. Select an upload option: *Realtime*, *Every Minute*, or *Every 5 Minutes* (default).
4. Click *Apply*.

Logging into the FortiGate Cloud portal

Once logging has been configured and you have registered your account, you can log into the FortiGate Cloud portal and begin viewing your logging results. There are two methods to reach the FortiGate Cloud portal:

- If you have direct network access to the FortiGate:
  a. Go to *Dashboard* > *Status*.
  b. In the *FortiGate Cloud* widget, in the *Status* field, click *Activated* > *Launch Portal*, or, in the *Licenses* widget, click *FortiCare Support* > *Launch Portal*.
- If you do not have access to the FortiGate's interface, visit the FortiGate Cloud website (https://www.forticloud.com) and log in remotely, using your email and password. It will ask you to confirm the FortiGate Cloud account you are connecting to and then you will be granted access.

Cloud sandboxing

FortiGate Cloud can be used for automated sample tracking, or sandboxing, for files from a FortiGate. This allows suspicious files to be sent to be inspected without risking network security. If the file exhibits risky behavior, or is found to contain a virus, a new virus signature is created and added to the FortiGuard antivirus signature database.

To configure cloud sandboxing:

1. Go to *Security Fabric* > *Settings*.
2. Enable *Sandbox Inspection*.
3. Set the *FortiSandbox type* to *FortiSandbox Cloud*.



By default, the *FortiSandbox Cloud* option is not visible. See Feature visibility on page 716 for instructions on making it visible.

4. Select the *FortiSandbox cloud region*.
5. Click *Apply*.
   Sandboxing results are shown on the *Sandbox* tab in the FortiGate Cloud portal.

For more information about FortiGate Cloud, see the FortiGate Cloud documentation.

Troubleshooting your installation

If your FortiGate does not function as desired after installation, try the following troubleshooting tips:

1. **Check for equipment issues**
   Verify that all network equipment is powered on and operating as expected. Refer to the QuickStart Guide for information about connecting your FortiGate to the network.
2. **Check the physical network connections**
   Check the cables used for all physical connections to ensure that they are fully connected and do not appear damaged, and make sure that each cable connects to the correct device and the correct Ethernet port on that device.
3. **Verify that you can connect to the internal IP address of the FortiGate**
   Connect to the GUI from the FortiGate's internal interface by browsing to its IP address. From the PC, try to ping the internal interface IP address; for example, `ping 192.168.1.99`. If you cannot connect to the internal interface, verify the IP configuration of the PC. If you can ping the interface but can't connect to the GUI, check the settings for administrative access on that interface. Alternatively, use SSH to connect to the CLI, and then confirm that HTTPS has been enabled for Administrative Access on the interface.
4. **Check the FortiGate interface configurations**
   Check the configuration of the FortiGate interface connected to the internal network (under *Network* > *Interfaces*) and check that *Addressing mode* is set to the correct mode.
5. **Verify the security policy configuration**
   Go to *Policy & Objects* > *IPv4 Policy* and verify that the internal interface to Internet-facing interface security policy has been added and is located near the top of the policy list. Check the *Active Sessions* column to ensure that traffic has been processed (if this column does not appear, right-click on the table header and select *Active Sessions*). If

you are using NAT mode, check the configuration of the policy to make sure that *NAT* is enabled and that *Use Outgoing Interface Address* is selected.

6. **Verify the static routing configuration**
   Go to *Network* > *Static Routes* and verify that the default route is correct. Go to *Monitor* > *Routing Monitor* and verify that the default route appears in the list as a static route. Along with the default route, you should see two routes shown as *Connected*, one for each connected FortiGate interface.
7. **Verify that you can connect to the Internet-facing interface's IP address**
   Ping the IP address of the Internet-facing interface of your FortiGate. If you cannot connect to the interface, the FortiGate is not allowing sessions from the internal interface to Internet-facing interface. Verify that PING has been enabled for *Administrative Access* on the interface.
8. **Verify that you can connect to the gateway provided by your ISP**
   Ping the default gateway IP address from a PC on the internal network. If you cannot reach the gateway, contact your ISP to verify that you are using the correct gateway.
9. **Verify that you can communicate from the FortiGate to the Internet**
   Access the FortiGate CLI and use the command `execute ping 8.8.8.8`. You can also use the `execute traceroute 8.8.8.8` command to troubleshoot connectivity to the Internet.
10. **Verify the DNS configurations of the FortiGate and the PCs**
    Check for DNS errors by pinging or using traceroute to connect to a domain name; for example: `ping www.fortinet.com`.
    If the name cannot be resolved, the FortiGate or PC cannot connect to a DNS server and you should confirm that the DNS server IP addresses are present and correct.
11. **Confirm that the FortiGate can connect to the FortiGuard network**
    Once the FortiGate is on your network, you should confirm that it can reach the FortiGuard network. First, check the *License Information* widget to make sure that the status of all FortiGuard services matches the services that you have purchased. Go to *System* > *FortiGuard*. Scroll down to *Filtering Services Availability* and select *Check Again*. After a minute, the GUI should indicate a successful connection.Verify that your FortiGate can resolve and reach FortiGuard at `service.fortiguard.net` by pinging the domain name. If you can reach this service, you can then verify the connection to FortiGuard servers by running the command `diagnose debug rating`. This displays a list of FortiGuard IP gateways you can connect to, as well as the following information:
    - `Weight`: Based on the difference in time zone between the FortiGate and this server
    - `RTT`: Return trip time
    - `Flags`: D (IP returned from DNS), I (Contract server contacted), T (being timed), F (failed)
    - `TZ`: Server time zone
    - `Curr Lost`: Current number of consecutive lost packets
    - `Total Lost`: Total number of lost packets
12. **Consider changing the MAC address of your external interface**
    Some ISPs do not want the MAC address of the device connecting to their network cable to change. If you have added a FortiGate to your network, you may have to change the MAC address of the Internet-facing interface using the following CLI command:

```
config system interface
   edit <interface>
      set macaddr <xx:xx:xx:xx:xx:xx>
   end
end
```

13. **Check the FortiGate bridge table (transparent mode)**
    When a FortiGate is in transparent mode, the unit acts like a bridge sending all incoming traffic out on the other interfaces. The bridge is between interfaces on the FortiGate unit. Each bridge listed is a link between interfaces. Where traffic is flowing between interfaces, you expect to find bridges listed. If you are having connectivity issues

and there are no bridges listed, that is a likely cause. Check for the MAC address of the interface or device in question.To list the existing bridge instances on the FortiGate, use the following CLI command:

```
diagnose netlink brctl name host root.b
show bridge control interface root.b host.
fdb: size=2048, used=25, num=25, depth=1
Bridge root.b host table
port no device devname mac addr ttl attributes
3 4 wan1 00:09:0f:cb:c2:77 88
3 4 wan1 00:26:2d:24:b7:d3 0
3 4 wan1 00:13:72:38:72:21 98
4 3 internal 00:1a:a0:2f:bc:c6 6
1 6 dmz 00:09:0f:dc:90:69 0 Local Static
3 4 wan1 c4:2c:03:0d:3a:38 81
3 4 wan1 00:09:0f:15:05:46 89
3 4 wan1 c4:2c:03:1d:1b:10 0
2 5 wan2 00:09:0f:dc:90:68 0 Local Static
```

14. **Use FortiExplorer if you can't connect to the FortiGate over Ethernet**
    If you can't connect to the FortiGate GUI or CLI, you may be able to connect using FortiExplorer. Refer to the QuickStart Guide or see the section on FortiExplorer for more details.
15. **Either reset the FortiGate to factory defaults or contact Fortinet Support for assistance**
    To reset the FortiGate to factory defaults, use the CLI command `execute factoryreset`. When prompted, type `y` to confirm the reset.

If you require further assistance, visit the Fortinet Support website.

Zero touch provisioning


This section contains instructions for configuring zero touch provisioning:

- Zero touch provisioning with FortiDeploy on page 52
- Zero touch provisioning with FortiManager on page 55

Zero touch provisioning with FortiDeploy


You can use this feature only when the FortiGate boots up from factory reset.

Topology

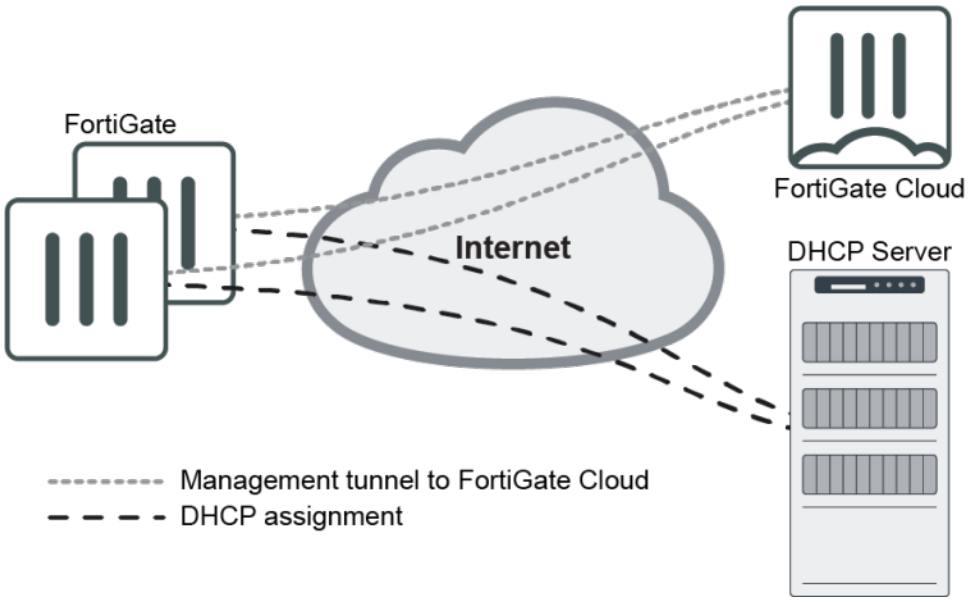


FortiGate zero touch provisioning workflow

1. Add the FortiGate Cloud product key to the FortiGate Cloud portal so that the FortiGate serial number appears in the portal.

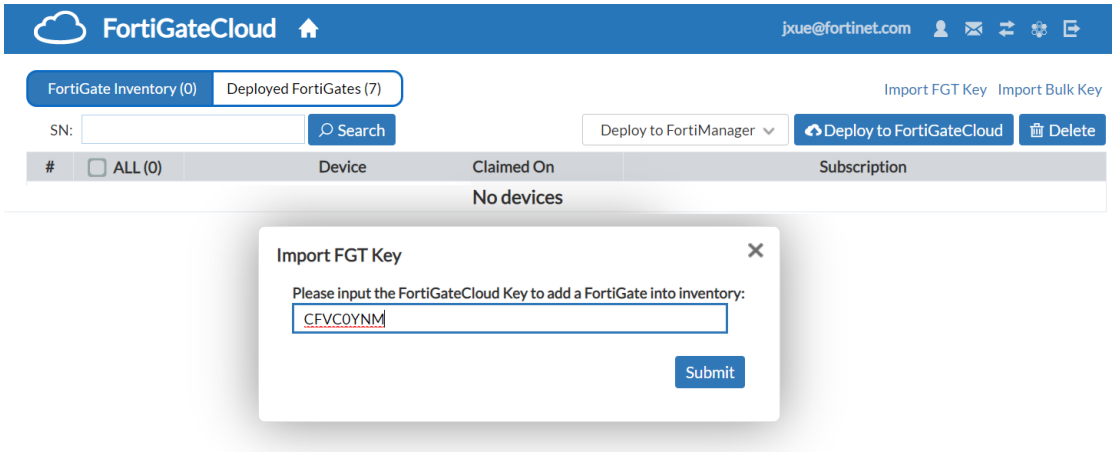

2. Set up a configuration template with the basic configuration in the FortiGate Cloud portal.
3. Deploy the FortiGate to FortiGate Cloud with that template.

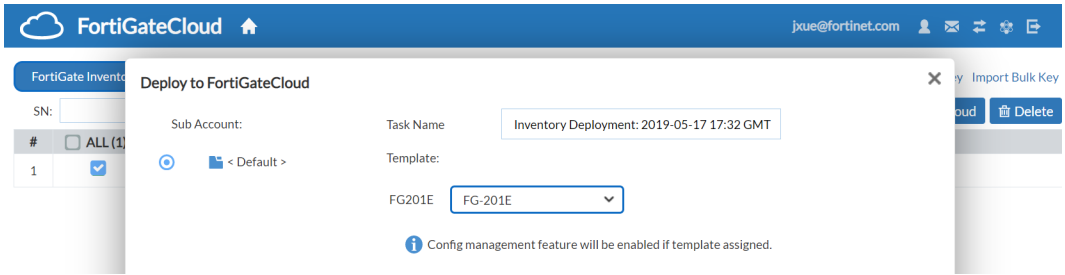

4. Ensure the FortiGate has an interface in default DHCP client mode and is connected to the ISP outlet.

5. Boot the FortiGate in factory reset. The FortiGate gets the DHCP lease so that it can access FortiGate Cloud in the Internet and join FortiGate Cloud.

```
Initializing firewall...
System is starting...

FortiGate-201E login: admin
Password:
Welcome !
FortiGate-201E #

FortiGate-201E # diagnose debug cli 7
Debug messages will be on for 30 minutes.
FortiGate-201E # 0: config system fortiguard
0: set service-account-id "jxue@fortinet.com"
0: end
0: config log fortiguard setting
0: set status enable
0: end
FortiGate-201E # diagnose test application forticldd 1
System=FGT Platform=FG201E
Management vdom: root, id=0,  ha=master.
acct_id=jxue@fortinet.com
acct_st=OK
FortiGuard log: status=enabled, full=overwrite, ssl_opt=1, source-ip=0.0.0.0
Centra Management: type=FGD, flags=000000bf.
active-tasks=0
```


   The FortiGate Cloud server checks that the FortiGate key is valid and then deploys the FortiGate to FortiGate Cloud.

   To prevent spoofing, FortiGate Cloud invalidates that key after a successful join.

6. Complete zero touch provisioning by obtaining configuration from platform template in the Cloud.

```
0:     set admintimeout 50
0: end
0: config system interface
0:     edit "wan1"
0:         set allowaccess ping ssh fgfm
0:     next
0:     edit "port1"
0:         set allowaccess ping
0:         set ip 1.1.1.1 255.255.255.0
0:     next
0:     edit "port2"
0:         set allowaccess ping
0:         set ip 2.2.2.2 255.255.255.0
0:     next
0: end
```

7. The FortiGate Cloud admin can change the template for different configuration requirements and then deploy the updated template to the FortiGate.
   For example, you can add a secondary DNS to the template and deploy it to FortiGate.

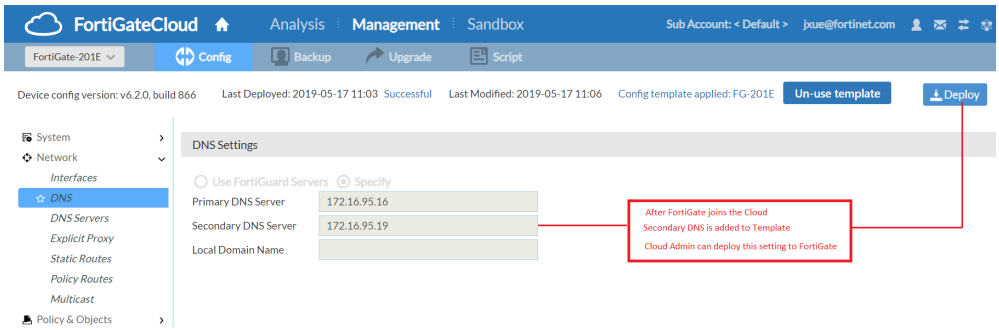

Zero touch provisioning with FortiManager

You can use this feature only when the FortiGate boots up from factory reset. This feature is for FortiGate devices that cannot access the Internet.

A DHCP server includes option 240 and 241 which records FortiManager IP and domain name. FortiGate has an interface with the default DHCP client mode that is connected to the DHCP server in the intranet.

The FortiManager admin can authorize the FortiGate the specific ADOMs and install specific configurations on the FortiGate.

In the whole operation, you do not need to do any manual configuration on the FortiGate except connect to the DHCP server. This is called zero touch deployment.

To prevent spoofing, if a different FortiManager IP comes from the DHCP server later, FortiGate does not change the central management configuration.

Example of configuring DHCP server with option 240

```
config system dhcp server
    edit 2
        set dns-service default
        set default-gateway 172.16.200.254
        set netmask 255.255.255.0
        set interface "wan1"
        config ip-range
            edit 2
                set start-ip 172.16.200.201
                set end-ip 172.16.200.209
            next
        end
        set timezone-option default
        config options
            edit 1
                set code 240
                set type ip
                set ip "172.18.60.115"
            next
        end
    next
end
```

FortiGate zero touch provisioning workflow

1. Boot the FortiGate in factory reset.

```
G201E4Q17901047 # diagnose fdsm fmg-auto-discovery-status
dhcp: fmg-ip=0.0.0.0, fmg-domain-name='', config-touched=0
```

`config-touched=0` means no configuration change from the default.

2. When FortiGate boots in factory reset, it gets the DHCP lease including IP, gateway, DNS, and the FortiManager IP/URL. Central management is automatically configured by using FortiManager IP in option 240.

```
FG201E4Q17901047 # show system central-management
config system central-management
    set type fortimanager
    set fmg "172.18.60.115"
end
```

3. If FortiGate changes from factory reset, you can see it in central management in `config-touched=1`.

```
FG201E4Q17901047 # diagnose fdsm fmg-auto-discovery-status
dhcp: fmg-ip=172.18.60.115, fmg-domain-name='', config-touched=1(/bin/dhcpcd)
```

Example of a spoofing DHCP server with a fake FortiManager IP

```
config options
    edit 1
        set code 240
        set type ip
        set ip "172.18.60.117"
    end
```

After FortiGate reboots and gets DHCP renew, central management will not use the fake FortiManager IP because `config-touched=1` shows that the FortiGate is not in factory reset.

```
FG201E4Q17901047 # diagnose fdsm fmg-auto-discovery-status
dhcp: fmg-ip=0.0.0.0, fmg-domain-name='', config-touched=1(/bin/dhcpcd)

FG201E4Q17901047 # show system central-management
config system central-management
    set type fortimanager
    set fmg "172.18.60.115"
end
```

Dashboard

FortiOS dashboards can have a Network Operations Center (NOC) or responsive layout.

- On a responsive dashboard, the number of columns is determined by the size of the screen. Widgets can only be resized horizontally, but the dashboard will fit on all screen sizes.
- On a NOC dashboard, the number of columns is explicitly set. Widgets can be resized both vertically and horizontally, but the dashboard will look best on the screen size that it is configured for.

Multiple dashboards of both types can be created, for both individual VDOMs and globally. Widgets are interactive; clicking or hovering over most widgets shows additional information or links to relevant pages. Widgets can be reorganized by clicking and dragging them around the screen.

Four dashboards are available by default: *Status*, *Top Usage LAN/DMZ*, *Security*, and *System Events*.

The *Status* dashboard includes the following widgets by default:

Widget	Description
System Information	The System Information widget lists information relevant to the FortiGate system, including hostname, serial number, and firmware. Clicking in the widget provides links to configure system settings and update the device firmware.
Licenses	The Licenses widget lists the status of various licenses, such as FortiCare Support and IPS. The number of used and available FortiTokens is also shown. Clicking in the widget provides a link to the FortiGuard settings page.
Virtual Machine	The VM widget (shown by default in the dashboard of a FortiOS VM device) includes: • License status and type • vCPU allocation and usage • RAM allocation and usage • VMX license information (if the VM supports VMX) Clicking on an item in the widget provides a link to the *FortiGate VM License* page, where license files can be uploaded.
FortiGate Cloud	This widget displays the FortiGate Cloud and FortiSandbox Cloud status. See FortiGate Cloud on page 94 for more information.
Security Fabric	The Security Fabric widget displays a visual summary of the devices in the Fortinet Security Fabric. Clicking on a product icon provides a link to a page relevancy to that product. For example, clicking the FortiAnalyzer shows a link to log settings. See Security Fabric status on page 92 for more information.
Security Rating	The Security Rating widget shows the security rating for your Security Fabric. It can show the current rating percentile, or historical security rating score or percentile charts. See Security Rating on page 92 for more information.

Widget	Description
Administrators	This widget allows you to see logged in administrators, connected administrators, and the protocols used by each. Clicking in the widget provides links to view active administrator sessions, and to open the FortiExplorer page on the App Store.
CPU	This widget shows real-time CPU usage over the selected time frame. Hovering over any point on the graph displays the percentage of CPU power used at that specific time. It can be expanded to occupy the entire dashboard.
Memory	This widget shows real-time memory usage over the selected time frame. Hovering over any point on the graph displays the percentage of the memory used at that specific time. It can be expanded to occupy the entire dashboard.
Sessions	This widget shows the current number of sessions over the selected time frame. Hovering over any point on the graph displays the number of sessions at that specific time. It can be expanded to occupy the entire dashboard.

The *Top Usage LAN/DMZ* dashboard includes the following widgets by default:

Widget	Description
Top Sources by Bytes	This widget lists the top sources by the number of bytes used.
Top Destinations by Sessions	This widget lists the top destinations by the number of sessions.
Top Applications by Bytes	This widget lists the top applications by the number of bytes used.
Top Web Site by Sessions	This widget lists the top websites by the number of sessions.

The *Security* dashboard includes the following widgets by default:

Widget	Description
Top Compromised Hosts by Verdict	This widget lists the compromised hosts by verdict. A FortiAnalyzer is required. It can be expanded to occupy the entire dashboard.
Top Threats by Threat Level	This widget lists the top threats by threat level from FortiView. It can be expanded to occupy the entire dashboard.
FortiClient Detected Vulnerabilities	This widget shows the number of vulnerabilities detected by FortiClient. FortiClient must be enabled. Clicking in the widget provides a link to view the information in FortiView.
Host Scan Summary	This widget lists the total number of hosts. Clicking in the widget provides links to view vulnerable device in FortiView, FortiClient monitor, and the device inventory.

Widget	Description
Top Vulnerable Endpoint Devices by Detected Vulnerabilities	This widget lists the top vulnerable endpoints by the detected vulnerabilities, from FortiView. It can be expanded to occupy the entire dashboard.

The *System Events* dashboard includes the following widgets by default:

Widget	Description
Top System Events by Events	This widgets lists the top system events, sorted by the number of events. It can be expanded to occupy the entire dashboard. Double click on an event to view the specific event log.
Top System Events by Level	This widget lists the top system events, sorted by the events' levels. It can be expanded to occupy the entire dashboard. Double click on an event to view the specific event log.

The following optional widgets can also be added to a dashboard:

Widget	Description
FortiView Top N	This widget shows the top items from the selected FortiView category. The widget's title, time period, visualization (table or bubble chart), and what the data is sorted by can all be customized.
Botnet Activity	This widget shows information about botnet activity. Clicking in the widget provides links to check botnet activity, view FortiGuard package information, view IPS logs, and view DNS query logs.
HA Status	This widget shows the HA mode of the device. Clicking in the widget provides a link to HA settings.
Disk Usage	This widget shows real-time disk usage over the selected time frame. Hovering over any point on the graph displays the percentage of the disk used at that specific time. It can be expanded to occupy the entire dashboard.
Log Rate	This widget shows the real-time log rate over the selected time frame. Hovering over any point on the graph displays the log rate at that specific time. Clicking in the widget provides a link to log settings. It can be expanded to occupy the entire dashboard.
Session Rate	This widget shows the real-time session rate over the selected time frame. Hovering over any point on the graph displays the session rate at that specific time. It can be expanded to occupy the entire dashboard.
Fabric Device	This widget shows statistics and system information about the selected fabric device. See Fabric Device on page 93 for more information.
Advanced Threat Protection Statistics	This widget shows threat protection statistics, including the number of scanned files and how many scanned files there are for each threat level.

Widget	Description
Interface Bandwidth	This widget shows the real-time incoming and outgoing traffic bandwidth of the selected interface over the selected time frame. Hovering over any point on the graph displays the bandwidth at that specific time. Clicking and dragging over a porting of the graph provides a link to view the data from the highlighted time frame in FortiView.

Dashboard CLI

Dashboards and widgets can be managed using the CLI. The options available when creating a widget will vary depending on the widget type.

To create a dashboard:

```
config system admin
   edit <admin name>
      config gui-dashboard
         edit <dashboard number>
            set name <name>
            set vdom <vdom>
            set layout-type {responsive | fixed}
            set permanent {enable | disable}
         next
      end
   next
end
```

To add a widget to a dashboard:

```
config system admin
   edit <admin name>
      config gui-dashboard
         edit <dashboard number>
            config widget
               edit <widget number>
                  set type <widget type>
                  set x-pos <0 - 1000>
                  set y-pos <0 - 1000>
                  set width <1 - 50>
                  set height <1 - 50>
                  ...
               next
            end
         next
      end
   next
end
```

The widget type can be one of the following:

CLI type	GUI name
sysinfo	System Information
licinfo	License Information
vminfo	Virtual machine information
forticloud	FortiGate Cloud Licenses
cpu-usage	CPU Usage
memory-usage	Memory Usage
disk-usage	Disk Usage
log-rate	Session Rate
sessions	Sessions
session-rate	Session Rate
tr-history	Traffic History
analytics	FortiGuard Analytics
usb-modem	USB Modem
admins	Administrators
security-fabric	Security Fabric
security-fabric-ranking	Security Fabric Ranking
ha-status	HA Status
vulnerability-summary	Vulnerability Summary
host-scan-summary	Host Scan Summary
fortiview	FortiView
botnet-activity	Botnet Activity
fabric-device	Fabric Device

Configuration backups

Once you successfully configure the FortiGate, it is extremely important that you backup the configuration. In some cases, you may need to reset the FortiGate to factory defaults or perform a TFTP upload of the firmware, which will erase the existing configuration. In these instances, the configuration on the device will have to be recreated, unless a backup can be used to restore it. You should also backup the local certificates, as the unique SSL inspection CA and server certificates that are generated by your FortiGate by default are not saved in a system backup.

We also recommend that you backup the configuration after *any* changes are made, to ensure you have the most current configuration available. Also, backup the configuration before any upgrades of the FortiGate's firmware. Should anything happen to the configuration during the upgrade, you can easily restore the saved configuration.

Always backup the configuration and store it on the management computer or off-site. You have the option to save the configuration file to various locations including the local PC, USB key, FTP, and TFTP server. The last two are configurable through the CLI only.

If you have VDOMs, you can back up the configuration of the entire FortiGate or only a specific VDOM. Note that if you are using FortiManager or FortiGate Cloud, full backups are performed and the option to backup individual VDOMs will not appear.



You can also backup and restore your configuration using Secure File Copy (SCP). See How to download/upload a FortiGate configuration file using secure file copy (SCP).

You enable SCP support using the following command:

```
config system global
   set admin-scp enable
end
```

For more information about this command and about SCP support, see config system global.

Backing up the configuration

To backup the configuration using the GUI:

1. Click on the user name in the upper right-hand corner of the screen and select *Configuration* > *Backup*.
2. Direct the backup to your *Local PC* or to a *USB Disk*.
   The *USB Disk* option will not be available if no USB drive is inserted in the USB port. You can also backup to the FortiManager using the CLI.
3. If VDOMs are enabled, indicate whether the scope of the backup is the entire FortiGate configuration (*Global*) or only a specific VDOM configuration (*VDOM*).
   If backing up a VDOM configuration, select the VDOM name from the list.
4. Enable *Encryption*. Encryption must be enabled on the backup file to back up VPN certificates.
5. Enter a password, and enter it again to confirm it. This password will be required to restore the configuration.
6. Click *OK*.
7. When prompted, select a location on the PC or USB disk to save the configuration file. The configuration file will have a .conf extension.

To backup the configuration using the CLI:

Use one of the following commands:

```
execute backup config management-station <comment>
```

or:

```
execute backup config usb <backup_filename> [<backup_password>]
```

or for FTP, note that port number, username are optional depending on the FTP site:

```
execute backup config ftp <backup_filename> <ftp_server> [<port>] [<user_name>]
     [<password>]
```

or for TFTP:

```
execute backup config tftp <backup_filename> <tftp_servers> <password>
```

Use the same commands to backup a VDOM configuration by first entering the commands:

```
config vdom
```

```
edit <vdom_name>
```

Restoring a configuration

To restore the FortiGate configuration using the GUI:

1. Click on the user name in the upper right-hand corner of the screen and select *Configuration* > *Restore*.
2. Identify the source of the configuration file to be restored: your *Local PC* or a *USB Disk*.
   The *USB Disk* option will not be available if no USB drive is inserted in the USB port. You can restore from the FortiManager using the CLI.
3. Click Upload, locate the configuration file, and click *Open*.
4. Enter the password if required.
5. Click *OK*.

To restore the FortiGate configuration using the CLI:

```
execute restore config management-station normal 0
```

or:

```
execute restore config usb <filename> [<password>]
```

or for FTP, note that port number, username are optional depending on the FTP site:

```
execute restore config ftp <backup_filename> <ftp_server> [<port>] [<user_name>]
     [<password>]
```

or for TFTP:

```
execute restore config tftp <backup_filename> <tftp_server> <password>
```

The FortiGate will load the configuration file and restart. Once the restart has completed, verify that the configuration has been restored.

Troubleshooting

When restoring a configuration, errors may occur, but the solutions are usually straightforward.

Error message	Reason and Solution
Configuration file error	This error occurs when attempting to upload a configuration file that is incompatible with the device. This may be due to the configuration file being for a different model or being saved from a different version of firmware. **Solution**: Upload a configuration file that is for the correct model of FortiGate device and the correct version of the firmware.
Invalid password	When the configuration file is saved, it can be protected by a password. The password entered during the upload process is not matching the one associated with the configuration file. **Solution**: Use the correct password if the file is password protected.

Configuration revision

You can manage multiple versions of configuration files on models that have a 512MB flash memory and higher. Revision control requires either a configured central management server or the local hard drive, if your FortiGate has this feature. Typically, configuration backup to local drive is not available on lower-end models.

The central management server can either be a FortiManager unit or FortiGate Cloud.

If central management is not configured on your FortiGate unit, a message appears instructing you to either

- Enable central management, or
- Obtain a valid license.

When revision control is enabled on your FortiGate unit, and configuration backups have been made, a list of saved revisions of those backed-up configurations appears.

Configuration revisions are viewed by clicking on the user name in the upper right-hand corner of the screen and selecting *Configuration* > *Revisions*.

Backup and restore the local certificates

This procedure exports a server (local) certificate and private key together as a password protected PKCS12 file. The export file is created through a customer-supplied TFTP server. Ensure that your TFTP server is running and accessible to the FortiGate before you enter the command.

To back up the local certificates:

Connect to the CLI and use the following command:

```
execute vpn certificate local export tftp <cert_name> <filename> <tftp_ip>
```

where:

- `<cert_name>` is the name of the server certificate.
- `<filename>` is a name for the output file.
- `<tftp_ip>` is the IP address assigned to the TFTP server host interface.

To restore the local certificates using the GUI:

1. Move the output file from the TFTP server location to the management computer.
2. Go to *System* > *Certificates* and click *Import* > *Local*.
3. Select the certificate type, then click *Upload* in the *Certificate file* field.
4. On the management computer, browse to the file location, select it, and click *Open*.
5. If the *Type* is *Certificate*, upload the *Key file* as well.
6. If required, enter the *Password* that is required to upload the file or files.
7. Click *OK*.

To restore the local certificates using the CLI:

Connect to the CLI and use the following command:

```
execute vpn certificate local import tftp <filename> <tftp_ip>
```

Restore factory defaults

There may be a need to reset the FortiGate to its original defaults; for example, to begin with a fresh configuration. There are two options when restoring factory defaults. The first resets the entire device to the original out-of-the-box configuration.

You can reset the device with the following CLI command:

```
execute factoryreset
```

When prompted, type `y` to confirm the reset.

Alternatively, in the CLI you can reset the factory defaults but retain the interface and VDOM configuration with the following command:

```
execute factoryreset2
```

Fortinet Security Fabric

The Fortinet Security Fabric provides an intelligent architecture that interconnects discrete security solutions into an integrated whole to detect, monitor, block, and remediate attacks across the entire attack surface. It delivers broad protection and visibility into every network segment and device, be they hardware, virtual, or cloud based.

- The physical topology view shows all connected devices, including access layer devices. The logical topology view shows information about the interfaces that each device is connected to.
- Security rating checks analyze the Security Fabric deployment to identify potential vulnerabilities and highlight best practices to improve the network configuration, deploy new hardware and software, and increase visibility and control of the network.
- Fabric connectors provide integration with multiple SDN, cloud, and partner technology platforms to automate the process of managing dynamic security updates without manual intervention.
- Automation pairs an event trigger with one or more actions to monitor the network and take the designated actions automatically when the Security Fabric detects a threat.

Security Fabric settings and usage

This section contains information about the Fortinet Security Fabric settings and usage:

- Components on page 67
- Configuring the root FortiGate and downstream FortiGates on page 69
- Configuring FortiAnalyzer on page 74
- Configuring other Security Fabric devices on page 75
- Using the Security Fabric on page 91
- Deploying the Security Fabric on page 104
- Security Fabric over IPsec VPN on page 112
- Leveraging LLDP to simplify Security Fabric negotiation on page 118

System requirements

To set up the Security Fabric, the devices that you want to include must meet the Product Integration and Support requirements in the FortiOS Release Notes.

Some features of the Security Fabric are only available in certain firmware versions and models. Not all FortiGate models can run the FortiGuard Security Rating Service if they are the root FortiGate in a Security Fabric. For more information, see the Special Notices in the FortiOS Release Notes.

Prerequisites

- If devices are not already installed in your network, complete basic installation and configuration tasks by following the instructions in the device documentation.

- FortiGate devices must either have VDOMs disabled or be running in split-task VDOM mode in order to be added to the Security Fabric. See Virtual Domains on page 651.
- FortiGate devices must be operating in NAT mode.

Components

The Fortinet Security Fabric consists of different components that work together to secure you network.

The following devices are required to create a Security Fabric:

Device	Description
FortiGate	FortiGate devices are the core of the Security Fabric and can have one of the following roles: • **Root**: The root FortiGate is the main component in the Security Fabric. It is typically located on the edge of the network and connects the internal devices and networks to the Internet through your ISP. From the root FortiGate, you can see information about the entire Security Fabric on the Physical and Logical Topology pages in the GUI. • **Downstream**: After a root FortiGate is installed, all other FortiGate devices in the Security Fabric act as Internal Segmentation Firewalls (ISFWs), located at strategic points in your internal network, rather than on the network edge. This allows extra security measures to be taken around key network components, such as servers that contain valuable intellectual property. ISFW FortiGate devices create network visibility by sending traffic and information about the devices that are connected to them to the root FortiGate. See Configuring the root FortiGate and downstream FortiGates on page 69 for more information about adding FortiGate devices in the Security Fabric. FortiGate documentation: https://docs.fortinet.com/product/fortigate
FortiAnalyzer	FortiAnalyzer gives you increased visibility into your network, centralized monitoring, and awareness of threats, events, and network activity by collecting and correlating logs from all Security Fabric devices. This gives you a deeper and more comprehensive view across the entire Security Fabric. See Configuring FortiAnalyzer on page 74 for more information about adding FortiAnalyzer devices in the Security Fabric. FortiAnalyzer documentation: https://docs.fortinet.com/product/fortianalyzer

The following devices are recommended:

Device	Description
FortiADC	FortiADC devices optimize the availability, user experience, and scalability of enterprise application delivery. They enable fast, secure, and intelligent acceleration and distribution of even the most demanding enterprise applications. See Additional devices on page 89 for more information about adding FortiADC devices in the Security Fabric. FortiADC documentation: https://docs.fortinet.com/product/fortiadc

Device	Description
FortiAP	Add FortiAP devices to extend the Security Fabric to your wireless devices. Devices connected to a FortiAP appear in the Physical and Logical Topology pages in the Security Fabric menu. See FortiAP and FortiSwitch on page 89 for more information about adding FortiAP devices in the Security Fabric. FortiAP documentation: https://docs.fortinet.com/product/fortiap
FortiClient	FortiClient adds endpoint control to devices that are located in the Security Fabric, allowing only traffic from compliant devices to flow through the FortiGate. FortiClient compliance profiles are applied by the first FortiGate that a device's traffic flows through. Device registration and on-net status information for a device that is running FortiClient appears only on the FortiGate that applies the FortiClient profile to that device. FortiClient documentation: https://docs.fortinet.com/product/forticlient
FortiClient EMS	FortiClient EMS is used in the Security Fabric to provide visibility across your network, securely share information, and assign security profiles to endpoints. See FortiClient EMS on page 86 for more information about adding FortiClient EMS devices in the Security Fabric. FortiClient EMS documentation: https://docs.fortinet.com/product/forticlient
FortiDDoS	FortiDDoS is a Network Behavior Anomaly (NBA) prevention system that detects and blocks attacks that intend to disrupt network service by overutilizing server resources. See Additional devices on page 89 for more information about adding FortiDDoS devices in the Security Fabric. FortiDDoS documentation: https://docs.fortinet.com/product/fortiddos
FortiMail	FortiMail antispam processing helps offload from other devices in the Security Fabric that would typically carry out this process. See Additional devices on page 89 for more information about adding FortiMail devices in the Security Fabric. FortiMail documentation: https://docs.fortinet.com/product/fortimail
FortiManager	Add FortiManager to simplify the network management of devices in the Security Fabric by centralizing management access in a single device. This allows you to easily control the deployment of security policies, FortiGuard content security updates, firmware revisions, and individual configurations for devices in the Security Fabric. See FortiManager on page 80 for more information about adding FortiManager devices in the Security Fabric. FortiManager documentation: https://docs.fortinet.com/product/fortimanager
FortiSandbox	Add FortiSandbox to your Security Fabric to improve security with sandbox inspection. Sandbox integration allows FortiGate devices in the Security Fabric to automatically receive signature updates from FortiSandbox and add the originating URL of any malicious file to a blocked URL list. See FortiSandbox on page 84 for more information about adding FortiSandbox devices in the Security Fabric. FortiSandbox documentation: https://docs.fortinet.com/product/fortisandbox

Device	Description
FortiSwitch	A FortiSwitch can be added to the Security Fabric when it is managed by a FortiGate that is in the Security Fabric with the FortiLink protocol, and connected to an interface with *Security Fabric Connection* enabled. FortiSwitch ports to become logical extensions of the FortiGate. Devices connected to the FortiSwitch appear in the Physical and Logical Topology pages in the Security Fabric menu, and security features, such as FortiClient compliance profiles, are applied to them. See FortiAP and FortiSwitch on page 89 for more information about adding FortiSwitch devices in the Security Fabric. FortiSwitch documentation: https://docs.fortinet.com/product/fortiswitch
FortiWeb	Add FortiWeb to defend the application attack surface from attacks that target application exploits. You can also configure FortiWeb to apply web application firewall features, virus scanning, and web filtering to HTTP traffic to help offload from other devices in the Security Fabric that would typically carry out these processes. See Additional devices on page 89 for more information about adding FortiWeb devices in the Security Fabric. FortiWeb documentation: https://docs.fortinet.com/product/fortiweb
FortiWLC	FortiWLC delivers seamless mobility and superior reliability with optimized client distribution and channel utilization. Both single and multi channel deployment options are supported, maximizing efficiency to make the most of available wireless spectrum. See Additional devices on page 89 for more information about adding FortiWLC devices in the Security Fabric. FortiWLC documentation: https://docs.fortinet.com/product/wireless-controller

The following devices are optional:

Device	Description
Other Fortinet products	Many other Fortinet products can be added to the Security Fabric, including FortiAuthenticator, FortiToken, FortiCache, and FortiSIEM. Documentation: https://docs.fortinet.com/
Third-party products	Third-party products that belong to the Fortinet Fabric-Ready Partner Program can be added to the Security Fabric.

Configuring the root FortiGate and downstream FortiGates

The following procedures include configuration steps for a typical Security Fabric implementation, where the edge FortiGate is the root FortiGate, and the downstream FortiGate devices are all devices that are downstream from the root FortiGate.

Prerequisites


- FortiGate devices must either have VDOMs disabled or be running in split-task VDOM mode in order to be added to the Security Fabric. See Virtual Domains on page 651.
- FortiGate devices must be operating in NAT mode.

Configure the root FortiGate

The edge FortiGate is typically configured as the root FortiGate, as this allows you to view the full topology of the Security Fabric from the top down.

To configure the root FortiGate:

1. Connect to the root FortiGate and go to *Security Fabric* > *Settings*.
2. Enable *FortiGate Telemetry*.
   FortiAnalyzer Logging is automatically enabled.

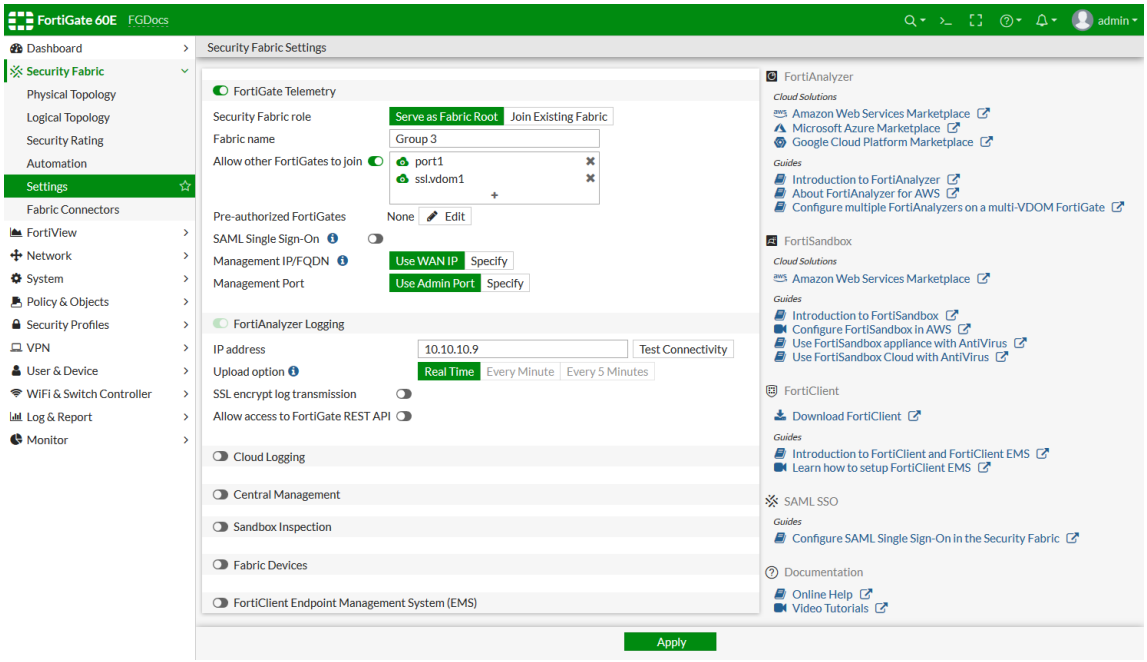

3. Enter the *Fabric name*.
4. Enable *Allow other FortiGates to join*, and select interfaces.
5. In the *FortiAnalyzer Logging* section, in the *IP address* field, enter the IP address of the FortiAnalyzer.
   If you select *Test Connectivity* and this is the first time that you are connecting the FortiGate to the FortiAnalyzer, you will receive a warning message because the FortiGate has not yet been authorized on the FortiAnalyzer. You can configure this authorization when you configure the FortiAnalyzer. See Configuring FortiAnalyzer on page 74.
6. If you need log transmissions to be encrypted, enable *SSL encrypt log transmission*.
7. If required, enable *Allow access to FortiGate REST API* and, optionally, *Trust FortiAnalyzer by serial number*.
   The REST API accesses the FortiGate topology and shares data and results. The FortiGate will verify the FortiAnalyzer by retrieving its serial number and checking it against the FortiAnalyzer certificate. When verified, the FortiAnalyzer serial number is stored in the FortiGate configuration. When authorizing the FortiGate on the FortiAnalyzer, the FortiGate admin credentials do not need to be entered.
8. Click *Apply*.

Add downstream devices

Downstream FortiGate devices can be securely added to the Security Fabric without sharing the password of the root FortiGate. Downstream device serial numbers can be authorized from the root FortiGate, or allowed to join by request.


New authorization requests include the device serial number, IP address, and HA members. HA members can include up to four serial numbers and is used to ensure that, in the event of a fail over, the secondary FortiGate is still authorized.

Pre-authorizing the downstream FortiGate

When a downstream Fortinet device's serial number is added to the trusted list on the root FortiGate, the device can join the Security Fabric as soon as it connects. After the new device is authorized, connected FortiAP and FortiSwitch devices are automatically included in the topology, where they can be authorized with one click.


To pre-authorize a FortiGate:

1. On the root FortiGate, go to *Security Fabric* > *Settings*.
2. Ensure that the interface that connects to the downstream FortiGate has *Security Fabric Connection* enabled.
3. In the *Pre-authorized FortiGates*, select *Edit*. Add a new FortiGate to the list using the downstream device's serial number.

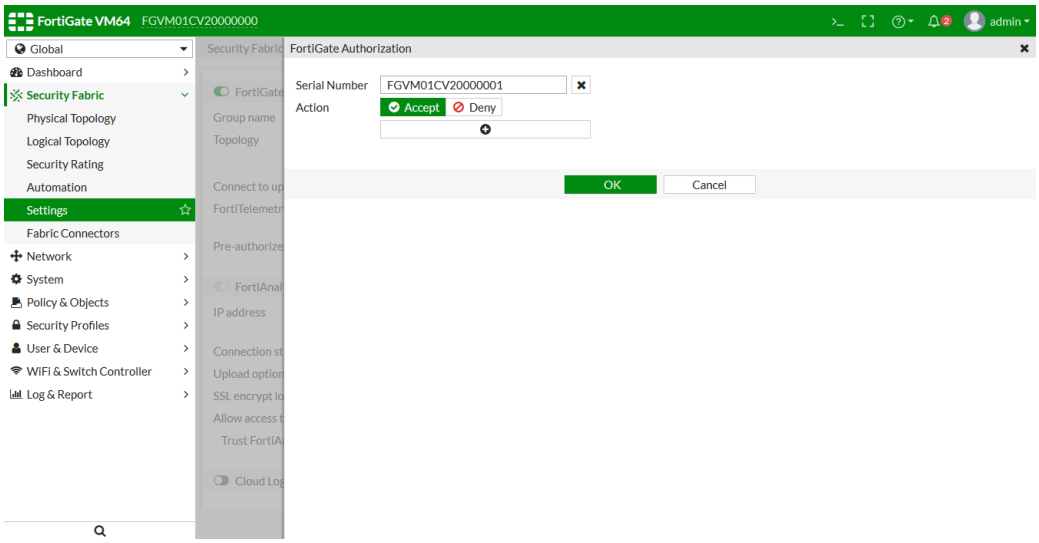

4. On the downstream FortiGate, go to *Security Fabric* > *Settings*.
5. Enable *FortiGate Telemetry*.
6. Set *Security Fabric role* to *Join Existing Fabric*.
7. Enter the IP address of the upstream or root FortiGate in the *Upstream FortiGate IP* field.
8. Click *Apply*.
9. On the root FortiGate, go to *Security Fabric* > *Settings* and verify that the downstream FortiGate that you added

appears in the Security Fabric topology.

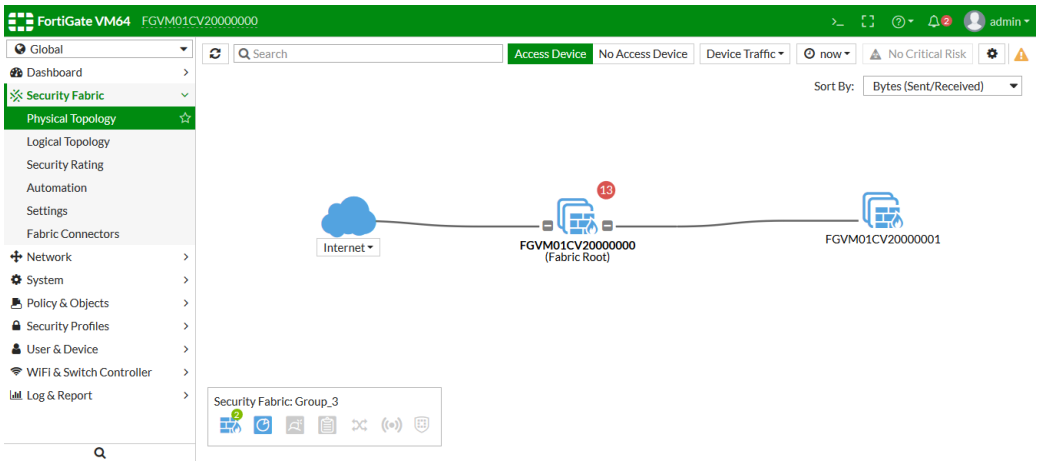

Using LLDP

You can automatically prompt downstream FortiGate devices to join the Security Fabric using Link Layer Discovery Protocol (LLDP) and interface role assignments.

1. On the root FortiGate, assign the LAN role to all interfaces that may connect to downstream FortiGate devices. When the LAN role is assigned to an interface, LLDP transmission is enabled by default.
2. When a downstream FortiGate is installed, assign the WAN role to the interface that connects to the upstream FortiGate.
   When the WAN role is assigned, LLDP reception is enabled by default. The newly installed FortiGate uses LLDP to discover the upstream FortiGate, and the administrator is prompted to configure the FortiGate to join the Security Fabric.
3. On the root FortiGate, the new FortiGate must be authorized before it can join the Security Fabric.



If the network contains switches or routers, LLDP may not function as expected because some devices do not pass LLDP packets.

Device request

A device can request to join the Security Fabric from another FortiGate, but it must have the IP address of the root FortiGate. The administrator of the root FortiGate must also authorize the device before it can join the Security Fabric.

The root FortiGate must have FortiTelemetry enabled on the interface that the device connects to.

To enable FortiTelemetry on an interface:

1. Go to *Network* > *Interfaces*.
2. Edit the interface that the device that you authorizing to join the Security Fabric is connected to.
3. Under *Administrative Access*, enable *Security Fabric Connection*.
4. Under *Network*, turn on *Device Detection*.

To join the Security Fabric by device request:

1. Connect to the unauthorized FortiGate or FortiWiFi device, and go to *Security Fabric* > *Settings*.
2. Enable *FortiGate Telemetry*.
3. To connect, set *Security Fabric role* to *Join Existing Fabric*.
4. Set *Upstream FortiGate IP* to the IP address of the upstream FortiGate.
5. Connect to the root FortiGate and go to *Security Fabric* > *Settings*. The new FortiGate appears in the *Topology* as unauthorized.
6. Click on the unauthorized device and select *Authorize* to authorize the device.

CLI commands

Use the following commands to view, accept, and deny authorization requests, to view upstream and downstream devices, and to list or test fabric devices:

Command	Description
diagnose sys csf authorization pending-list	View pending authorization requests on the root FortiGate.
diagnose sys csf authorization accept <serial-number-value>	Authorize a device to join the Security Fabric.
diagnose sys csf authorization deny <serial-number-value>	Deny a device from joining the Security Fabric.
diagnose sys csf downstream	Show connected downstream devices.
diagnose sys csf upstream	Show connected upstream devices.
diagnose sys csf fabric-device list	List all known fabric devices.
diagnose sys csf fabric-device test	Test connections to locally configured fabric devices.

Desynchronizing settings

By default, the settings for FortiAnalyzer logging, central management, sandbox inspection, and FortiClient EMS are synchronized between all FortiGate devices in the Security Fabric. To disable the automatic synchronization of these settings, use the following CLI command:

```
config system csf
   set configuration-sync local
end
```

Deauthorizing a device

A device can be deauthorized to remove it from the Security Fabric.

To deauthorize a device:

1. On the root FortiGate, go to *Security Fabric* > *Settings*
2. In the Topology field, click on the device and select *Deauthorize*.
3. Click on the device.

After devices are deauthorized, the devices' serial numbers are saved in a trusted list that can be viewed in the CLI using the `show system csf` command. For example, this result shows a deauthorized FortiSwitch:

```
show system csf
   config system csf
      set status enable
      set group-name "Office-Security-Fabric"
      set group-password ENC 1Z2X345V678
      config trusted-list
         edit "FGT6HD391806070"
         next
         edit "S248DF3X17000482"
            set action deny
         next
      end
   end
end
```


Configuring FortiAnalyzer

FortiAnalyzer is a required component for the Security Fabric. It allows the Security Fabric to show historical data for the Security Fabric topology and logs for the entire Security Fabric.

For more information about using FortiAnalyzer, see the FortiAnalyzer Administration Guide.


To connect a FortiAnalyzer to the Security Fabric:

1. Enable *FortiAnalyzer Logging* on the root FortiGate. See Configure the root FortiGate on page 70.
2. On the FortiAnalyzer, go to *System Settings* > *Network* and click *All Interfaces*.
3. Edit the port that connects to the root FortiGate.
4. Set the *IP Address/Netmask* to the IP address that is used for the Security Fabric on the root FortiGate.

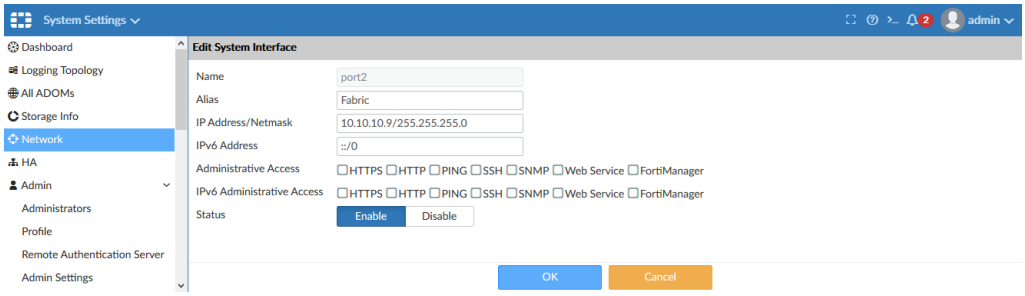


5. Click *OK*.
   If the FortiGates have already been configured, it will now be listed as an unauthorized device.


6. Go to *Device Manager* > *Devices Unauthorized*. The unauthorized FortiGate devices are listed.

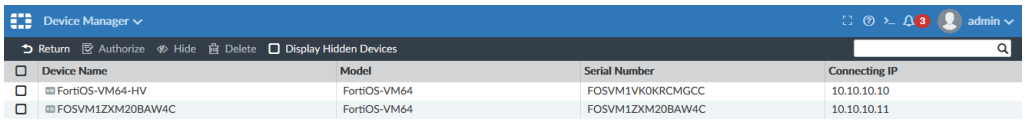

7. Select the root FortiGate and downstream FortiGate devices in the list, then click *Authorize*. The *Authorize Device* page opens.
8. Click *OK* to authorize the selected devices.

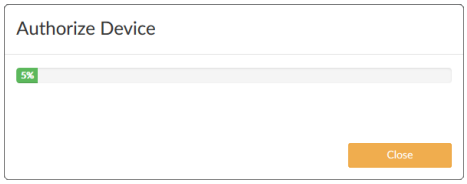

On the FortiGate devices, the *FortiAnalyzer Logging* section on the *Security Fabric* > *Settings* page will now show the ADOM on the FortiAnalyzer that the FortiGate is in, and the storage, analytics, and archive usage.

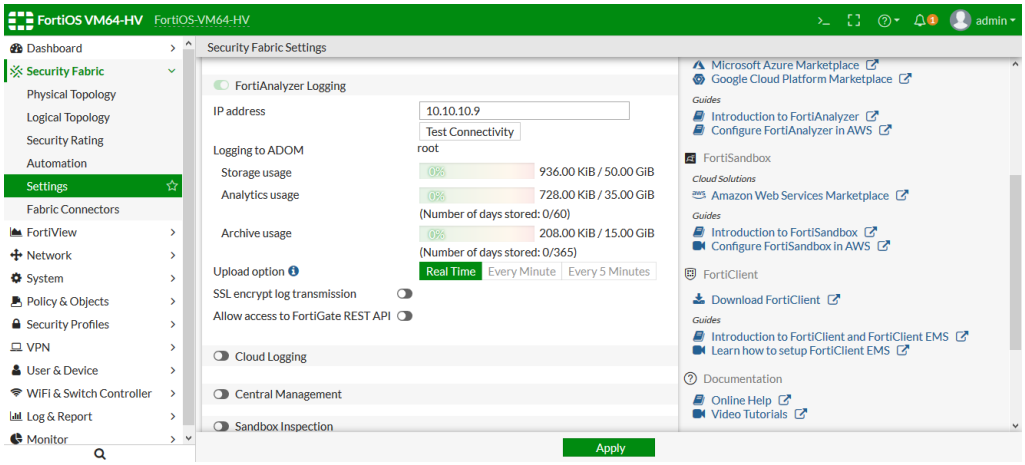

Configuring other Security Fabric devices

This section contains information about configuring the following devices as part of the Fortinet Security Fabric:

- FortiAnalyzer Cloud service on page 76
- FortiManager on page 80
- FortiManager Cloud service on page 80
- FortiSandbox on page 84
- FortiClient EMS on page 86
- FortiAP and FortiSwitch on page 89
- Additional devices on page 89

Prerequisites

- FortiGate devices must either have VDOMs disabled or be running in split-task VDOM mode in order to be added to the Security Fabric. See Virtual Domains on page 651.
- FortiGate devices must be operating in NAT mode.

FortiAnalyzer Cloud service

FortiGate supports the FortiAnalyzer Cloud service for event logging.

Traffic and security logs are not supported in the initial version of FortiAnalyzer Cloud.


When FortiAnalyzer Cloud is licensed and enabled (see Deploying FortiAnalyzer Cloud for more information), all event logs are sent to FortiAnalyzer Cloud by default. All traffic logs, security logs, and archive files are not sent to FortiAnalyzer Cloud.

FortiAnalyzer Cloud differs from FortiAnalyzer in the following ways:


- You cannot enable FortiAnalyzer Cloud in `vdom override-setting` when global FortiAnalyzer Cloud is disabled.
- You must use the CLI to retrieve and display logs sent to FortiAnalyzer Cloud. The FortiOS GUI is not supported.
- You cannot enable FortiAnalyzer Cloud and FortiGate Cloud at the same time.

Sample settings panes


In the FortiOS *Security Fabric* > *Settings* pane under *Cloud Logging*, *FortiAnalyzer Cloud* is grayed out when you do not have a FortiAnalyzer Cloud entitlement.

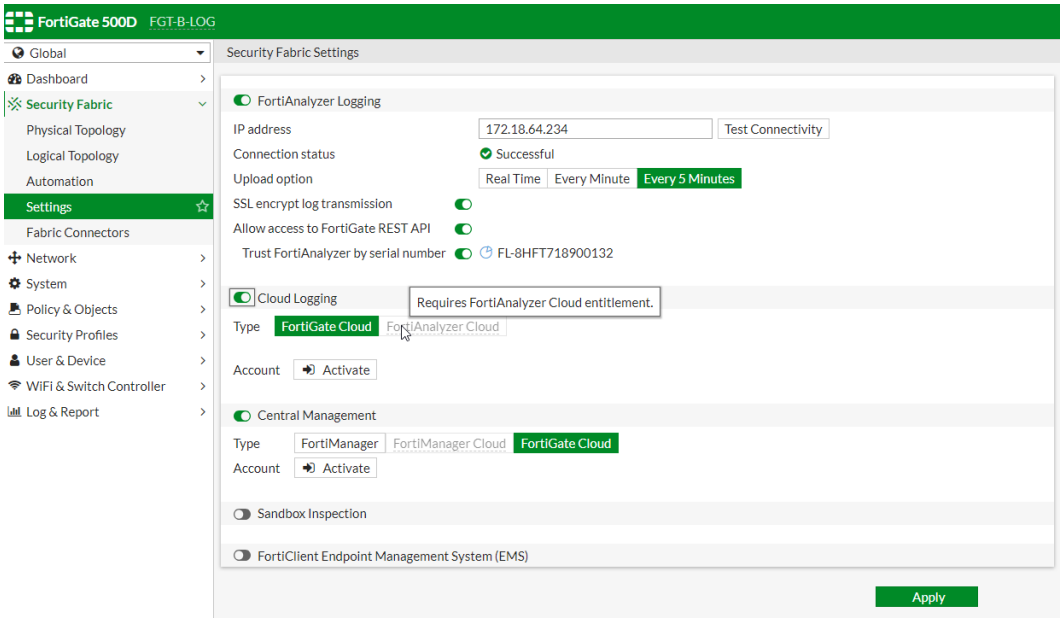


When you have a FortiAnalyzer Cloud entitlement, *FortiAnalyzer Cloud* is available.

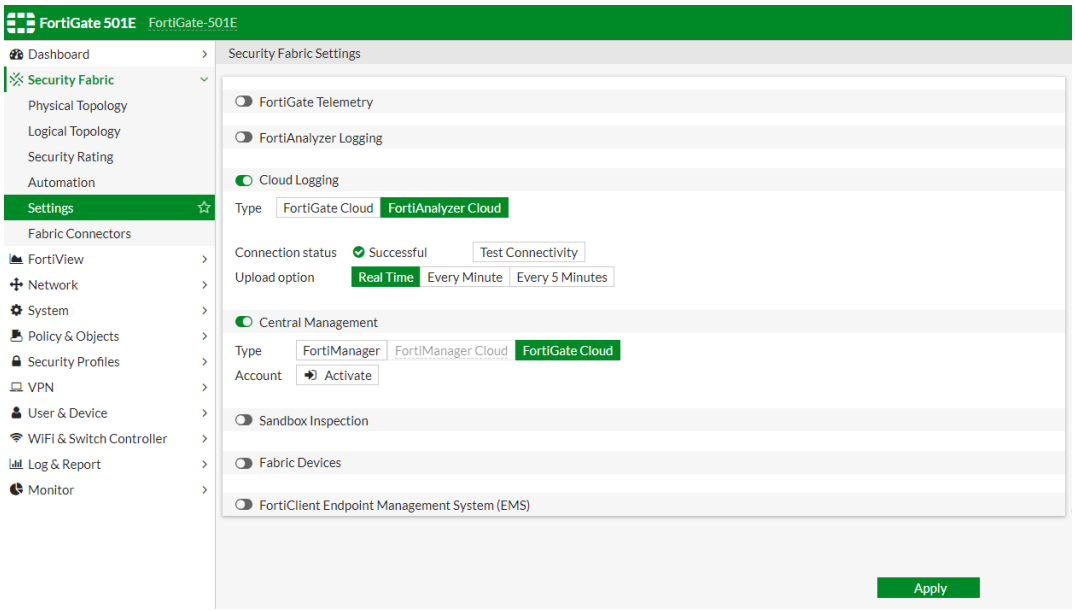

You can also view the FortiAnalyzer Cloud settings in the *Log & Report* > *Log Settings* pane.

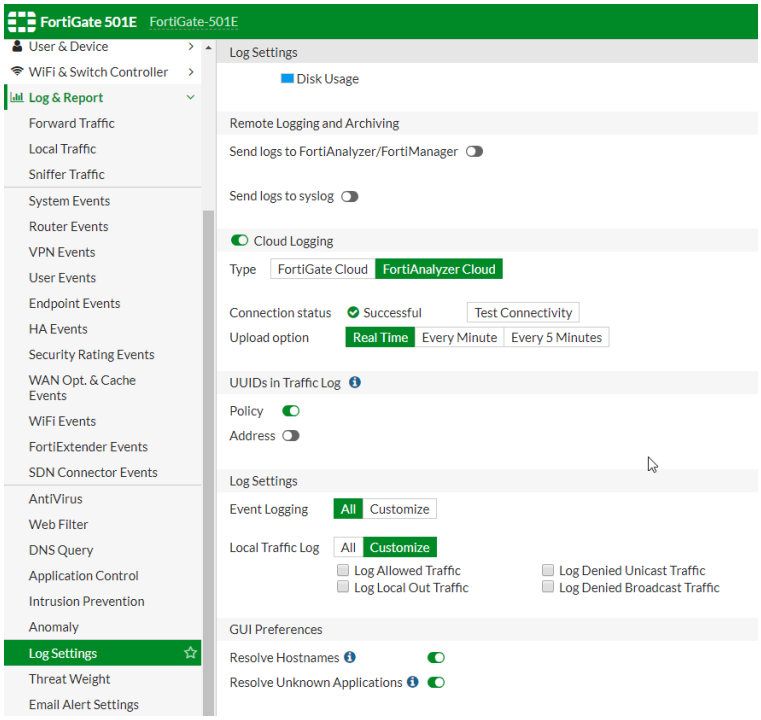

In FortiAnalyzer Cloud, you can view logs from *FortiOS* in the *Event* > *All Types* pane.

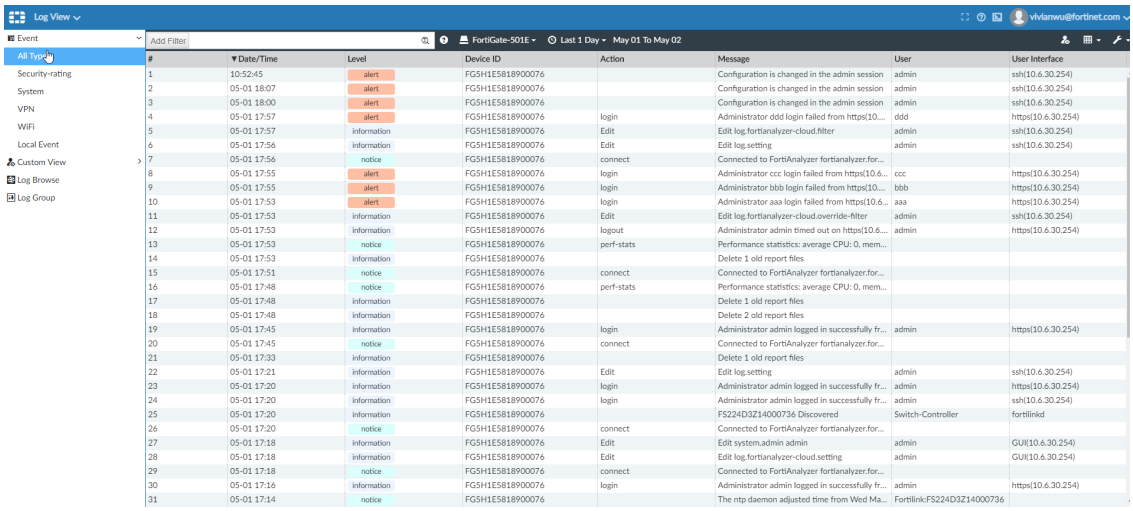

To enable fortianalyzer-cloud using the CLI:

```
config log fortianalyzer-cloud setting
   set status enable
   set ips-archive disable
   set access-config enable
   set enc-algorithm high
   set ssl-min-proto-version default
   set conn-timeout 10
   set monitor-keepalive-period 5
   set monitor-failure-retry-period 5
   set certificate ''
   set source-ip ''
   set upload-option realtime
end
config log fortianalyzer-cloud filter
   set severity information
   set forward-traffic disable
   set local-traffic disable
   set multicast-traffic disable
   set sniffer-traffic disable
   set anomaly disable
   set voip disable
   set dlp-archive disable
   set dns disable
   set ssh disable
   set ssl disable
   set cifs disable
   set filter ''
   set filter-type include
end
```

To disable fortianalyzer-cloud for a specific VDOM using the CLI:

```
config log setting
   set faz-override enable
end
config log fortianalyzer-cloud override-setting
   set status disable
```

```
end
```

To set fortianalyzer-cloud filter for a specific vdom using the CLI:

```
config log setting
   set faz-override enable
end
config log fortianalyzer-cloud override-setting
   set status enable
end
config log fortianalyzer-cloud override-filter
   set severity information
   set forward-traffic disable
   set local-traffic disable
   set multicast-traffic disable
   set sniffer-traffic disable
   set anomaly disable
   set voip disable
   set dlp-archive disable
   set dns disable
   set ssh disable
   set ssl disable
   set cifs disable
   set filter ''
   set filter-type include
end
```

To display fortianalyzer-cloud log using the CLI:

```
execute log filter device fortianalyzer-cloud
execute log filter category event
execute log display
```

Sample log

```
date=2019-05-01 time=17:57:45 idseq=60796052214644736 bid=100926 dvid=1027 itime="2019-05-01
     17:57:48" euid=3 epid=3 dsteuid=0 dstepid=3 logver=602000890 logid=0100032002
     type="event" subtype="system" level="alert" srcip=10.6.30.254 dstip=10.6.30.9
     action="login" msg="Administrator ddd login failed from https(10.6.30.254) because of
     invalid user name" logdesc="Admin login failed" sn="0" user="ddd" ui="https
     (10.6.30.254)" status="failed" reason="name_invalid" method="https"
     eventtime=1556758666274548325 devid="FG5H1E5818900076" vd="root" dtime="2019-05-01
     17:57:45" itime_t=1556758668 devname="FortiGate-501E"
date=2019-05-01 time=17:57:21 idseq=60796052214644736 bid=100926 dvid=1027 itime="2019-05-01
     17:57:23" euid=3 epid=3 dsteuid=0 dstepid=3 logver=602000890 logid=0100044546
     type="event" subtype="system" level="information" action="Edit" msg="Edit
     log.fortianalyzer-cloud.filter " logdesc="Attribute configured" user="admin" ui="ssh
     (10.6.30.254)" cfgtid=164757536 cfgpath="log.fortianalyzer-cloud.filter"
     cfgattr="severity[information->critical]" eventtime=1556758642413367644
     devid="FG5H1E5818900076" vd="root" dtime="2019-05-01 17:57:21" itime_t=1556758643
     devname="FortiGate-501E"
```

FortiManager

When a FortiManager device is added to the Security Fabric, it automatically synchronizes with any connected downstream devices.

To add a FortiManager to the Security Fabric, configure central management on the root FortiGate. The root FortiGate then pushes this configuration to downstream FortiGate devices. The FortiManager provides remote management of FortiGate devices over TCP port 541. The FortiManager must have internet access for it to join the Security Fabric.


Once configured, the FortiGate can receive antivirus and IPS updates, and allow remote management through FortiManager or the FortiGate Cloud service. The FortiGate management option must be enabled so that the FortiGate can accept management updates to its firmware and FortiGuard services.

To add a FortiManager to the Security Fabric using the CLI:

```
config system central-management
   set type fortimanager
   set fmg {<IP_address> | <FQDN_address>}
end
```

To add a FortiManager to the Security Fabric using the GUI:

1. On the root FortiGate, go to *Security Fabric* > *Settings*.
2. Enable *Central Management*.
3. Set the *Type* to *FortiManager*.

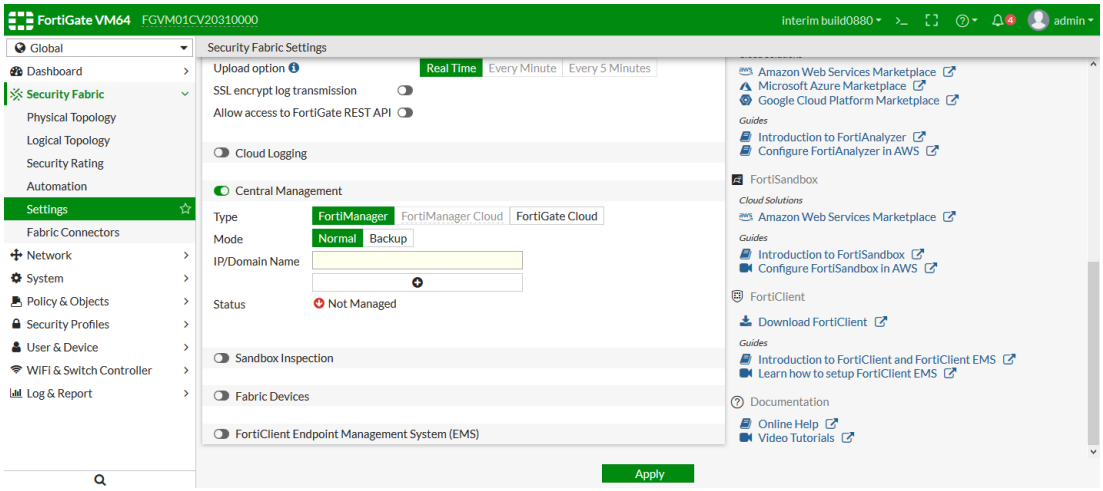

4. Enter the *IP/Domain Name* of the FortiManager.
5. Click *Apply*.
6. On the FortiManager, go to *Device Manager* and find the FortiGate in the *Unauthorized Devices* list.
7. Select the FortiGate device or devices, and click *Authorize* in the toolbar.
8. In the *Authorize Device* pop-up, adjust the device names as needed, then click *OK*.
   For more information about using FortiManager, see the FortiManager Administration Guide.

FortiManager Cloud service

This cloud-based SaaS management service is available through FortiManager.


Once the FortiGate has acquired a contract named *FortiManager Cloud*, FortiCloud creates a cloud-based FortiManager instance under the user account. You can launch the portal for the cloud-based FortiManager from FortiCloud, and its URL starts with the User ID.

You can use a FortiGate with a contract for *FortiManager Cloud* to configure central management by using the FQDN of *fortimanager.forticloud.com*. A FortiGate-FortiManager tunnel is established between FortiGate and the FortiManager instance.

After the tunnel is established, you can execute FortiManager functions from the cloud-based FortiManager portal.


To manage FortiGate with FortiManager Cloud:

1. In the FortiCare portal, ensure you have a product entitlement for *FortiManager Cloud*.
   a. Go to *Asset* > *Information* > *Entitlement*.
   b. Take note of your user ID number in the top-right corner.

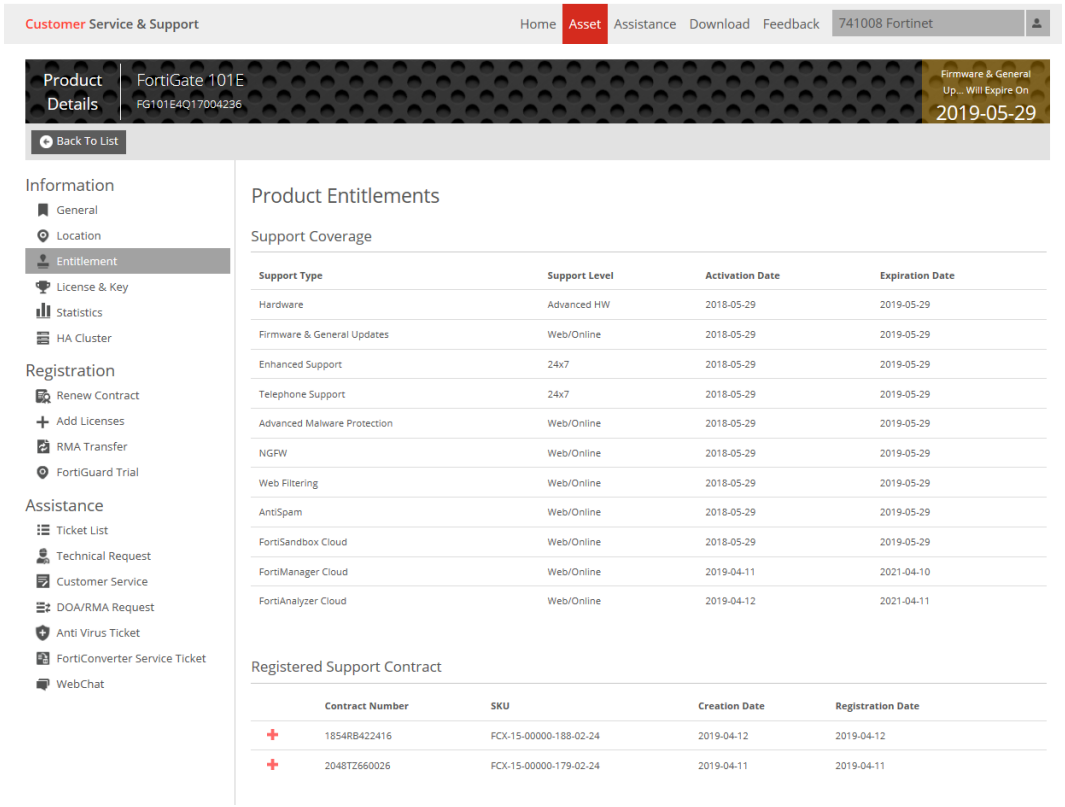


2. Click the *FortiCloud* icon in the upper-right corner.

3. Under *CLOUD MANAGEMENT*, select *FortiManager*.

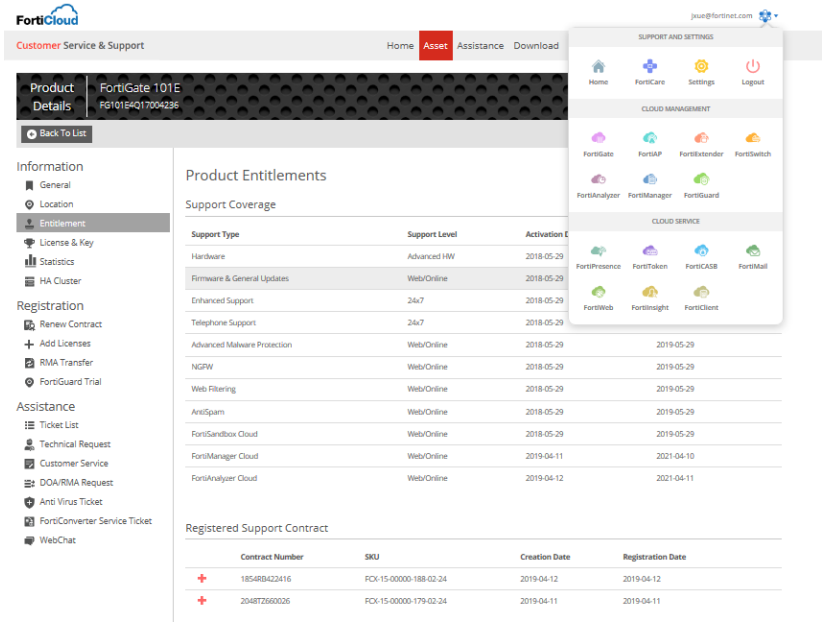

The FortiManager portal opens. The URL incorporates the user ID for the dedicated instance.




4. In FortiOS, enable FortiManager Cloud.
   a. Go to *Security Fabric* > *Settings*.
   b. Enable *Central Management*.
   c. Click *FortiManager Cloud*.

d. Click *Apply*.




The *FortiManager Cloud* button can only be selected if you have a FortiManager Cloud product entitlement.

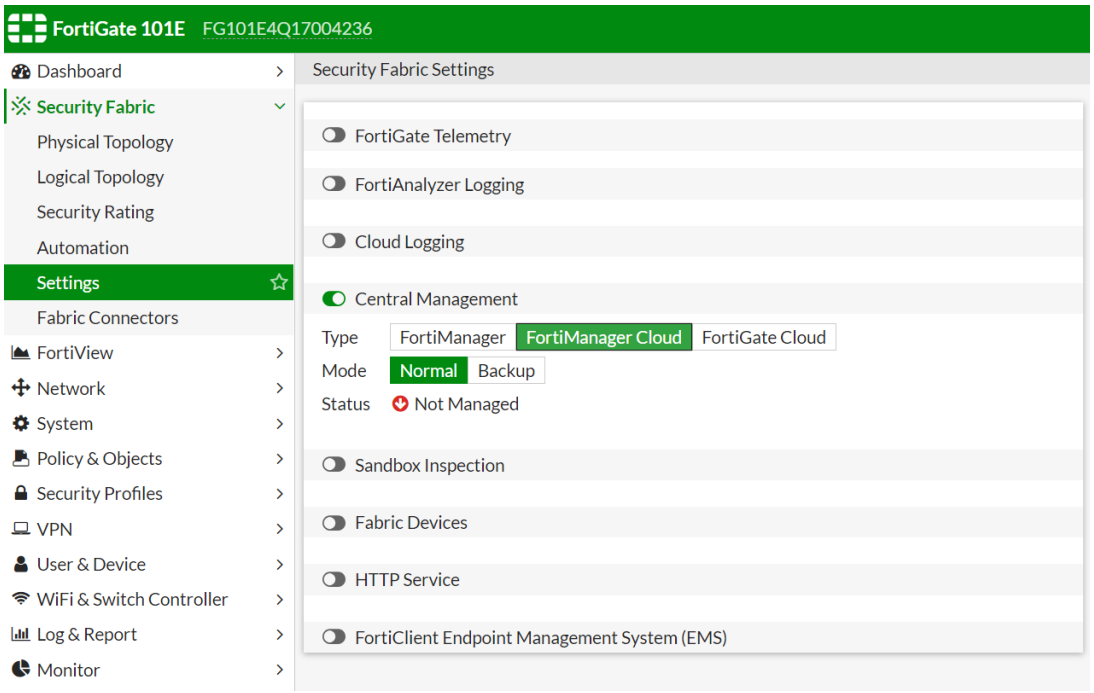


5. In the FortiManager Cloud instance, go to *Device Manager* and authorize the FortiGate. See Authorizing devices for more information.
When using FortiGate to enable FortiManager Cloud, the FortiGate appears as an unauthorized device.



After authorizing the FortiGate, it becomes a managed device.

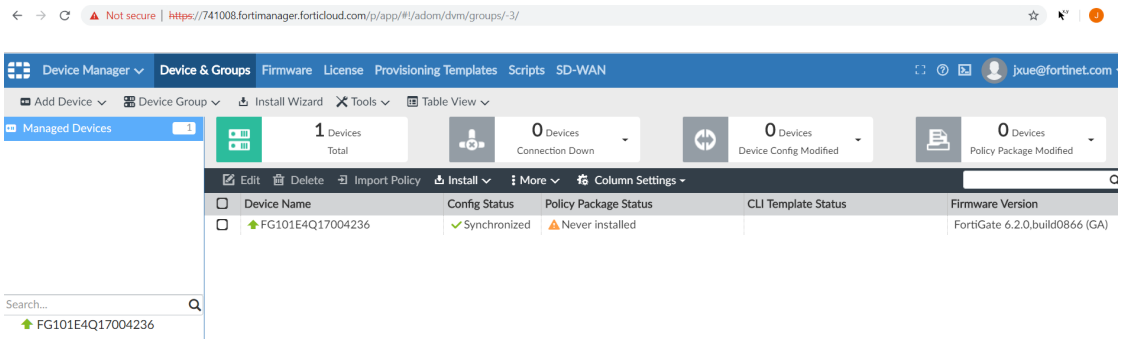

In FortiOS, the *Central Management Status* now displays as *Registered on FortiManager*.

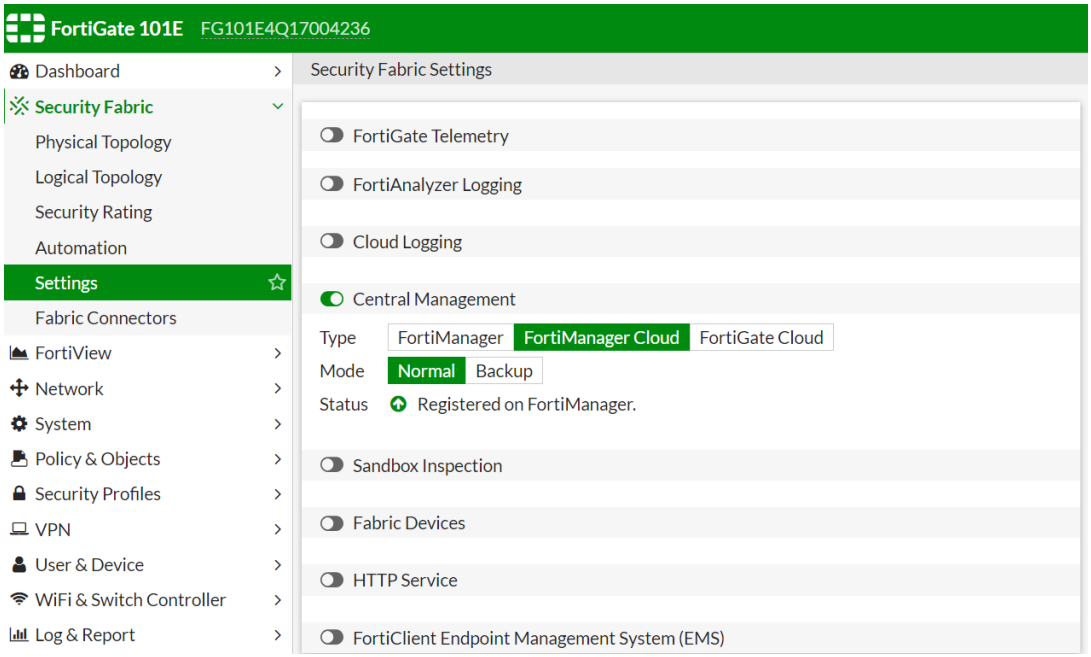

FortiSandbox

The Security Fabric supports FortiSandbox appliances and FortiSandbox Cloud. A FortiGate Cloud account is not required.


To use FortiSandbox in a Security Fabric, connect the FortiSandbox to the Security Fabric, then configure an antivirus profile to send files to the FortiSandbox. Sandbox inspection can also be used in Web Filter profiles.

FortiSandbox settings are configured on the root FortiGate of the Security Fabric. After configuration, the root FortiGate pushes the settings to other FortiGate devices in the Security Fabric.

To add a FortiSandbox appliance to the Security Fabric:

1. On the root FortiGate, go to *Security Fabric* > *Settings*.
2. Enable *Sandbox Inspection* and set the *FortiSandbox Type* to *FortiSandbox Appliance*.

3. In the *Server* field, enter the FortiSandbox device's IP address.

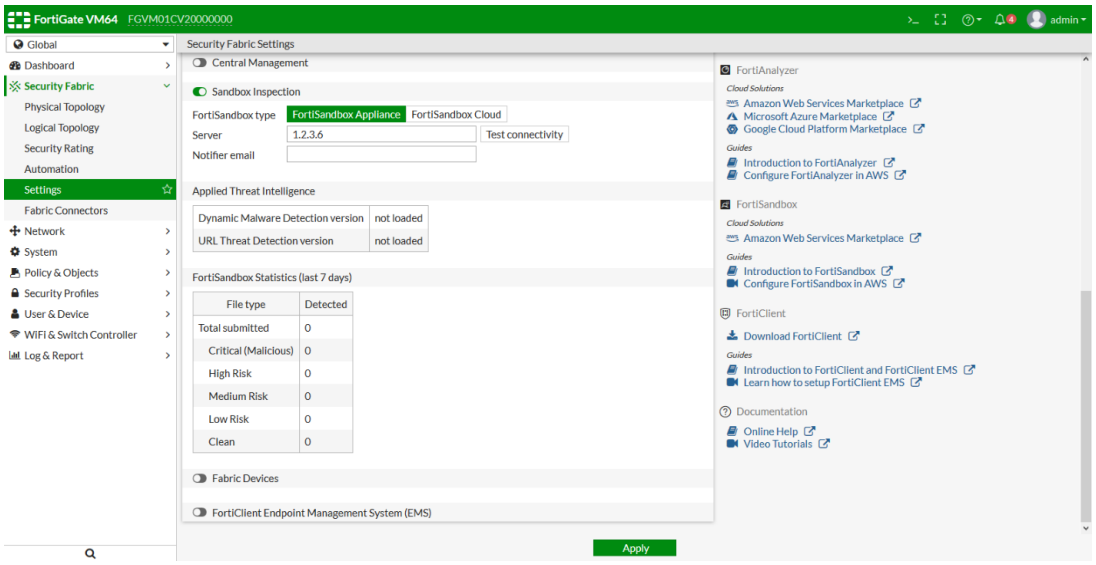

4. Optionally, enter a *Notifier email*.
5. Click *Apply*.
6. On the FortiSandbox appliance, go to *Scan Input* > *Device*.
7. Edit the root FortiGate.
8. Under *Permissions*, check the *Authorized* box.
9. Click *OK*.
10. Authorize the rest of the FortiGate devices that are in the Security Fabric.

To add a FortiSandbox Cloud instance to the Security Fabric:

1. On the root FortiGate, go to *Security Fabric* > *Settings*.
2. Enable *Sandbox Inspection* and set the *FortiSandbox Type* to *FortiSandbox Cloud*.
3. Select the *FortiSandbox cloud region* from the drop-down list. Data from your network will only be sent to servers in the selected region.
4. Click *Apply*.


If *FortiSandbox Cloud* is not visible in the GUI, run the `execute forticloud-sandbox region` and `execute forticloud-sandbox update` commands.

Antivirus profiles

An antivirus profile must be configured to send files to the FortiSandbox.

To configure an antivirus profile:

1. On the FortiGate, go to *Security Profile* > *AntiVirus*.
2. Create, edit, or clone an antivirus profile.

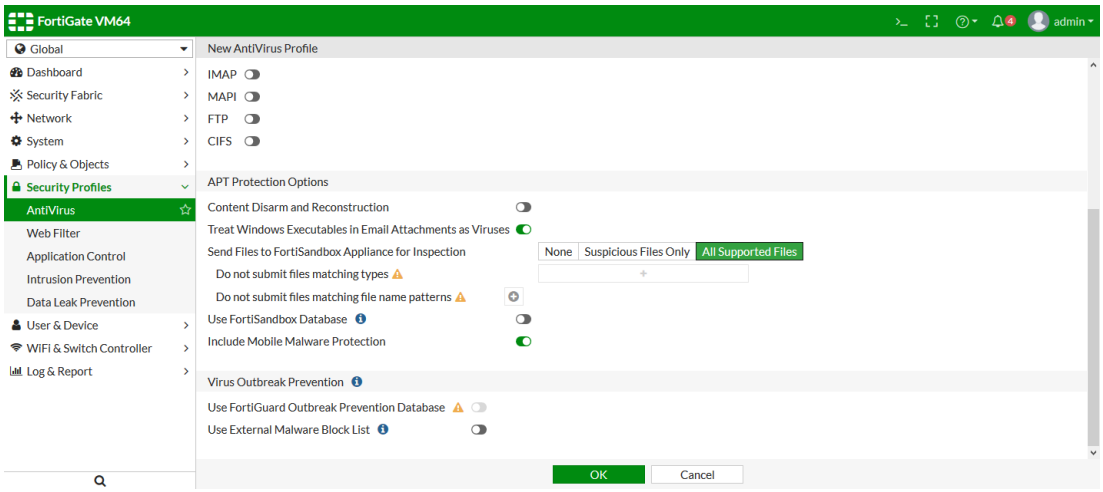

3. Under *APT Protection Options*, set *Send Files to FortiSandbox Appliance for Inspection* to *All Supported Files*.
4. Optionally, configure file exceptions.
5. Enable *Use FortiSandbox Database*.
6. Click *OK*.

Web Filter profiles

Sandbox inspection can be used in Web Filter profiles.

To configure a Web Filter profile:

1. On the FortiGate, go to *Security Profiles* > *Web Filter*.
2. Create, edit, or clone a profile.
3. Under *Static URL Filter*, enable *Block malicious URLs discovered by FortiSandbox*.
4. Click *OK*.

FortiClient EMS

The FortiGate Security Fabric root device can link to FortiClient Endpoint Management System (EMS) and FortiClient EMS Cloud (a cloud-based EMS solution) for endpoint connectors and automation. Up to three EMS servers can be added on the global Security Fabric settings page, including on FortiClient EMS Cloud server. EMS settings are synchronized between all fabric members.

To enable cloud-based EMS services, FortiGate must be registered to FortiCloud with an appropriate user account.



If you disable *FortiClient Endpoint Management System (EMS)* on the *Security Fabric* > *Settings* page, all previously configured EMS server entries will be deleted.

To add a FortiClient EMS server to the Security Fabric in the CLI:

```
config endpoint-control fctems
    edit <ems_name>
        set server <ip_address>
        set serial-number <string>
        set admin-username <string>
        set admin-password <string>
        set https-port <integer>
        set source-ip <ip_address>
    next
end
```

The `https-port` is the EMS HTTPS access port number, and the `source-ip` is the REST API call source IP address.

To add a FortiClient EMS Cloud server to the Security Fabric in the CLI:

1. Enable authentication of FortiClient EMS Cloud through a FortiCloud account:

```
config endpoint-control fctems
    edit <name>
        set fortinetone-cloud-authentication enable
    next
end
```


2. Create a FortiClient EMS Cloud server connection:

```
config user fsso
    edit "cloud_ems_fsso_connector"
        set type fortiems-cloud
        set password ******
        set source-ip <class_ip>
    next
end
```


To add both a cloud-based and an on-premise FortiClient EMS server to the Security Fabric in the GUI:

1. To enable endpoint control, on the root FortiGate, go to *System* > *Feature Visibility* and enable *Endpoint Control*.
2. Go to *Security Fabric* > *Settings*.
3. Enable *FortiClient Endpoint Management System (EMS)*.
4. Add an EMS server.
5. Set *EMS Type* to *EMS Cloud*.


6. Enter a name, such as *cloud_ems*.

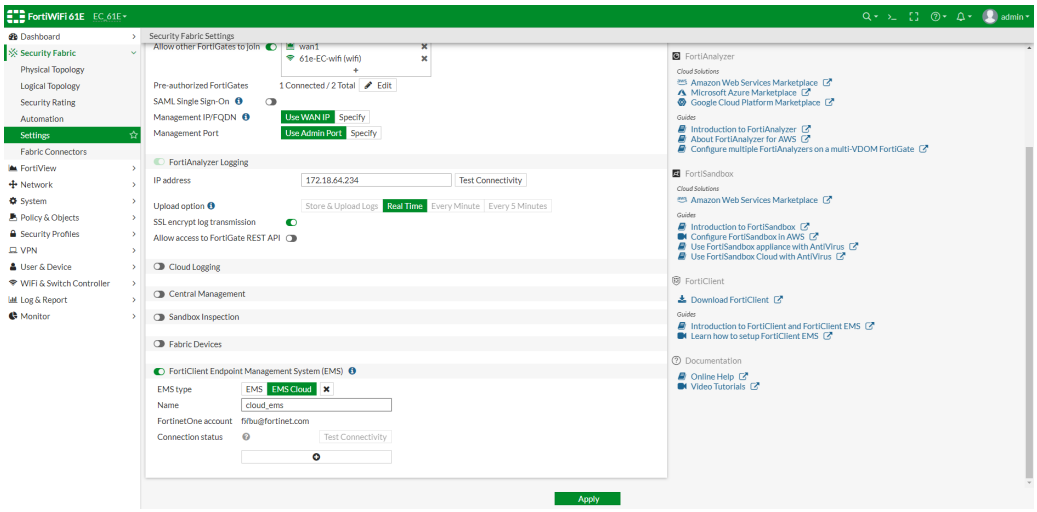

7. Add another EMS server.
8. Set *EMS Type* to *EMS*.
9. Enter a name, such as *ems136*.
10. Enter server's IP address, admin user name, and admin password. Optionally, you can also change the HTTPS port.

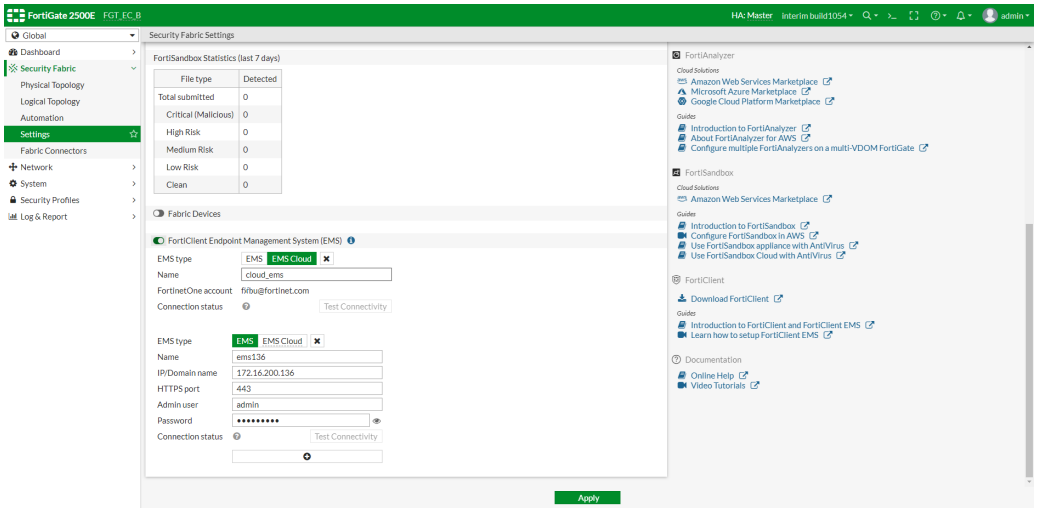


11. Click *Apply*.
    FortiClient EMS fabric connectors are automatically created for the EMS servers.

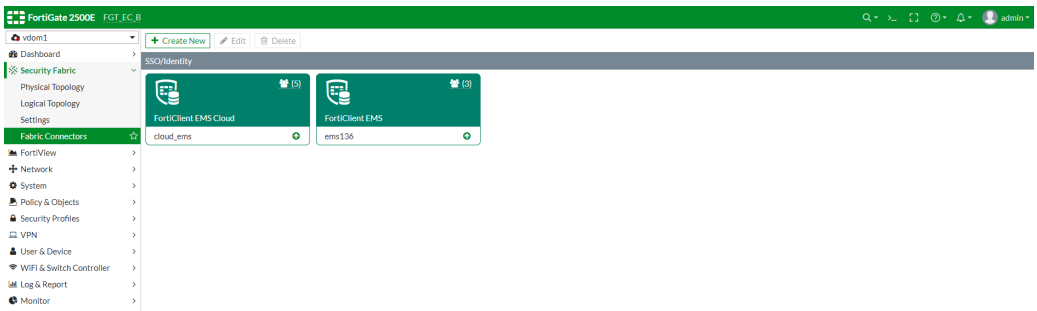

To test connectivity with the EMS server:

1. Go to *Security Fabric* > *Settings* and go to the *FortiClient Endpoint Management System (EMS)* section.
2. In the *Connection status* field, click *Test Connectivity*.

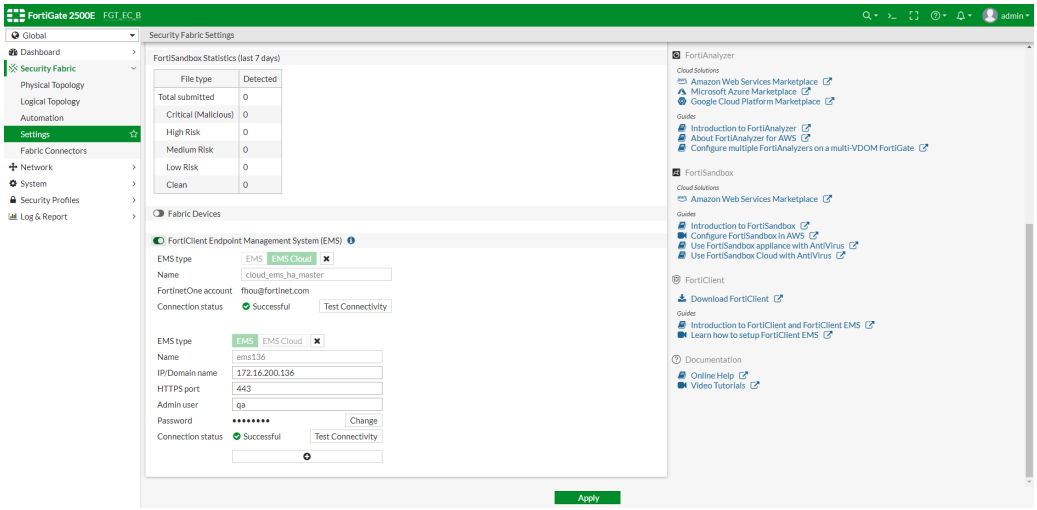

FortiAP and FortiSwitch

FortiAP and FortiSwitch devices can be authorized in the Security Fabric with one click. After connecting a FortiAP or FortiSwitch device to an authorized FortiGate, it will automatically be listed in the topology tree.

If the default `auto-auth-extension-device` settings on the FortiAP or FortiSwitch have been modified, manual authorization in the Security Fabric may not be required.

For more information about configuring FortiAPs, see Configuring the FortiGate interface to manage FortiAP units and Discovering, authorizing, and deauthorizing FortiAP units.

For more information about configuring FortiSwitches, see Using the FortiGate GUI.

To authorize FortiAP and FortiSwitch devices:

1. Connect the FortiAP or FortiSwitch device to a FortiGate.
2. On the root FortiGate, go to *Security Fabric* > *Settings*. The new device will be shown in the *Topology*.
3. Click on the device and select *Authorize*.

Additional devices

The following Fortinet devices are supported by the Security Fabric:

- FortiADC
- FortiDDoS
- FortiSandbox
- FortiMail


- FortiWeb
- FortiWLC

Security Fabric supports standalone FortiSandbox devices, FortiSandbox HA-Cluster primary, and FortiSandbox cluster IP.

In FortiOS, the device details can be shown in *Security Fabric* and *Fabric Device* dashboard widgets, as well as in the Security Fabric settings, and physical and logical topologies.


To add one or more of the devices to the Security Fabric in the GUI:

1. On the root FortiGate, go to *Security Fabric* > *Settings*.
2. Enable *Fabric Devices*.
3. Enter the *Name*, *IP*, *HTTPS port* for the device.
4. Click Generate to generate an access token. The *Generate Access Token* pane opens.
   a. Enter the device's username and password.
   b. Click *OK*.
5. Add more devices as required.

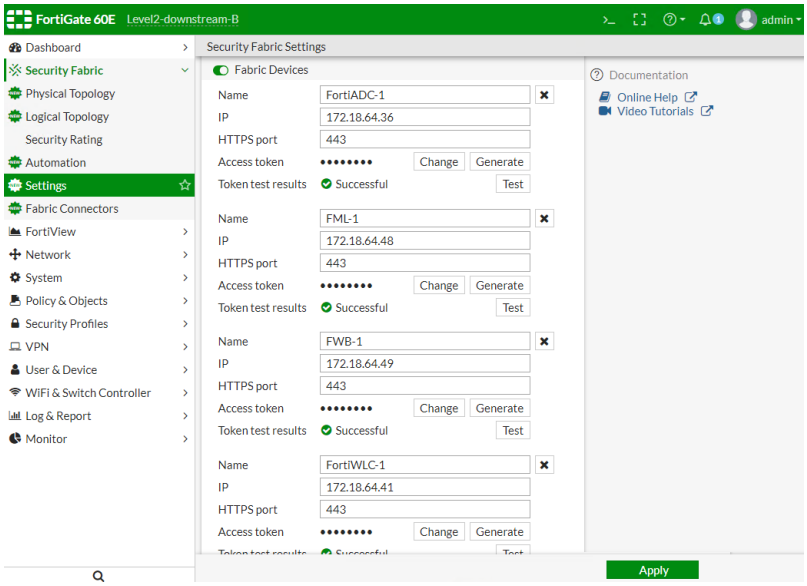

FortiSandbox only supports HTTPS port 443.

6. Click *Apply*.
   The added devices are shown in the *FortiGate Telemetry* section *Topology* list.

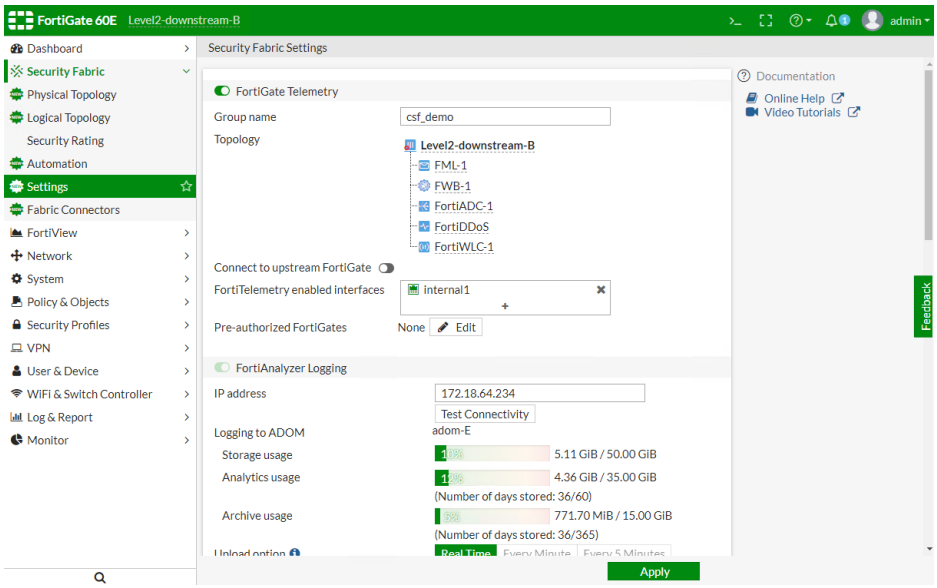

To add one or more of the devices to the Security Fabric in the CLI:

```
config system csf
    ...
    config fabric-device
        edit "FortiADC-1"
            set device-ip 172.18.64.36
            set access-token xxxxxx
        next
        edit "FML-1"
            set device-ip 172.18.64.48
            set access-token xxxxxx
        next
        edit "FWB-1"
            set device-ip 172.18.64.49
            set access-token xxxxxx
        next
    end
end
```

Using the Security Fabric


Dashboard widgets

Security Fabric widgets can be added to FortiGate dashboards, including:

- Security Fabric status on page 92
- Security Rating on page 92
- Fabric Device on page 93
- FortiGate Cloud on page 94

Security Fabric status

The Security Fabric status widget shows a summary of the devices in the Security Fabric.

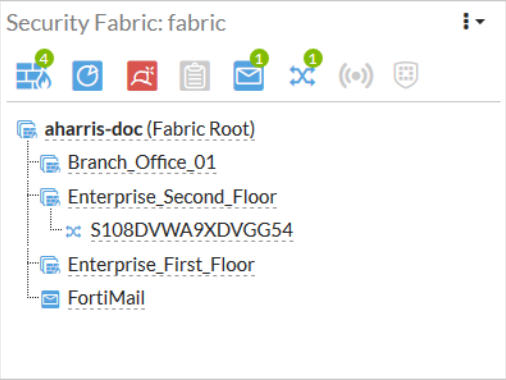

Hover the cursor over the top icons to view pop-ups showing the statuses of the devices in the fabric.

The device tree shows devices that are connected, or could be connected, to you Security Fabric, according to the following color scheme:

- Blue: connected to the network
- Gray: not configured or not detected
- Red: no longer connected or not authorized


Hover over a device in the tree to view details about the device, such as it's serial number, operation mode, IP address, CPU and memory usage, and others, depending on the device type.

Unauthorized FortiAP and FortiSwitch devices are highlighted in the list, and can be authorized by clicking on the device name.


Security Rating

The Security Rating widget shows the security rating for your Security Fabric. It can show the current rating percentile, or historical security rating score or percentile charts.


The widget can be configured to show how your organization's security rating compares to the ratings of either all organizations, or only organizations that are in the same industry and/or geographic region as you (determined from your FortiCare account settings).

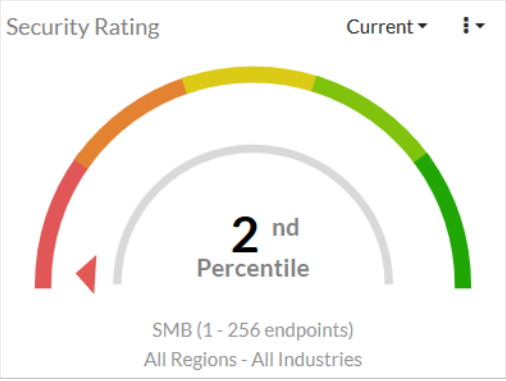

To switch to the historical security rating score view, select *Historical Score* from the view dropdown menu. Making the widget wider makes the graph easier to read.

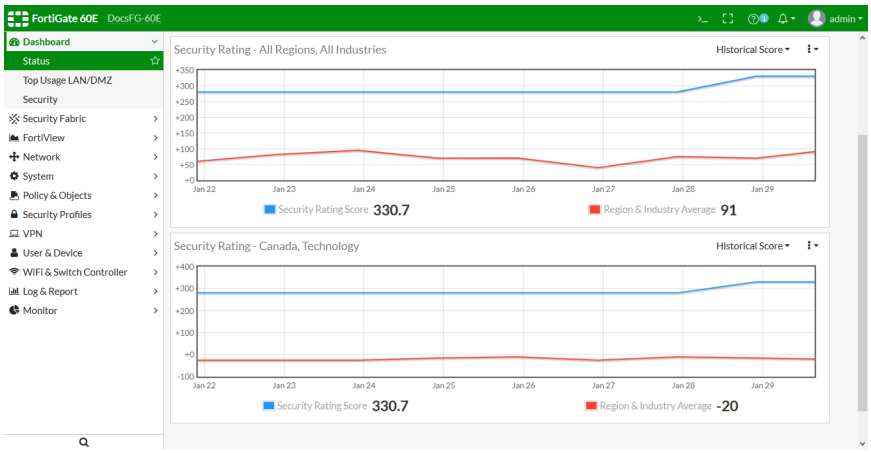

To switch to the historical percentile view, select *Historical Percentile* from the view dropdown menu. Making the widget wider makes the graph easier to read.

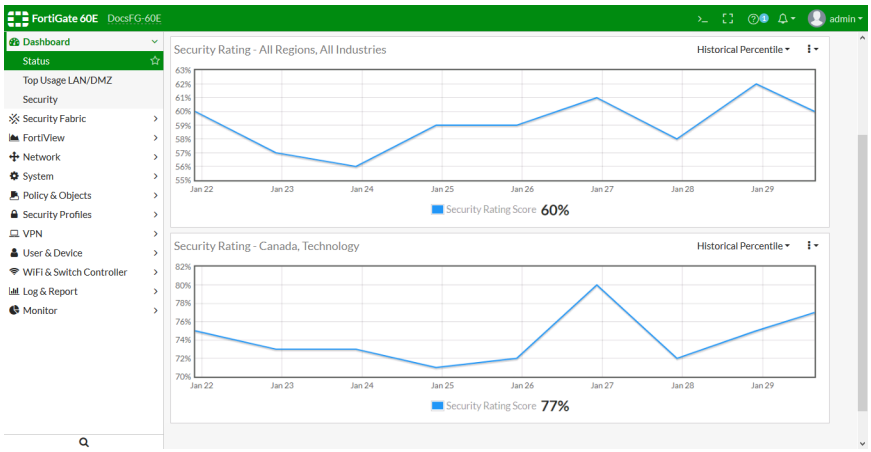



To receive a security rating score, all FortiGate devices that are in the Security Fabric must have a valid Security Rating License.


Fabric Device

The Fabric Device widget show statistics and system information about the selected fabric device.

For a FortiMail device, the widget can show:


- Mail Statistics: a chart of the total messages and total spam messages over time.
- Statistics Summary: a pie chart summarizes mail statistics.
- System Information: The FortiMail System Information widget
- System Usage: System usage information, such as CPU, memory, and disk usage, as well as the number of active

sessions.

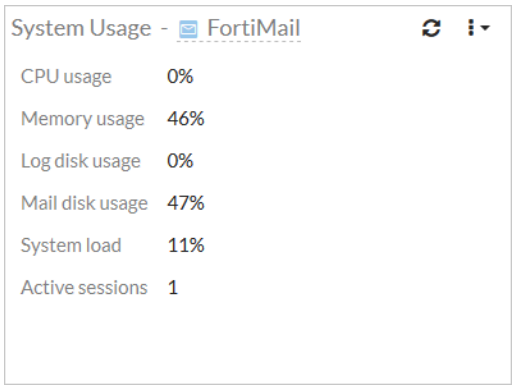


FortiGate Cloud

The FortiGate Cloud widget shows the FortiGate Cloud status and information. If your account is not activated, you can activate it from the widget.

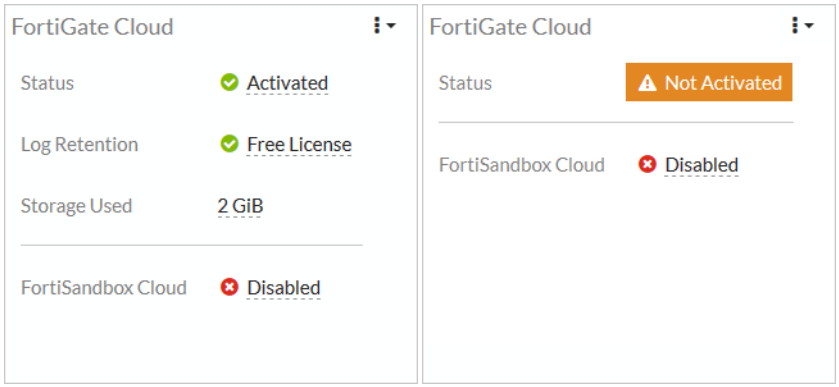

To activate your FortiGate Cloud account:

1. Click on the *Not Activated* button and select *Activate*. The *FortiCare Registration* pane opens.

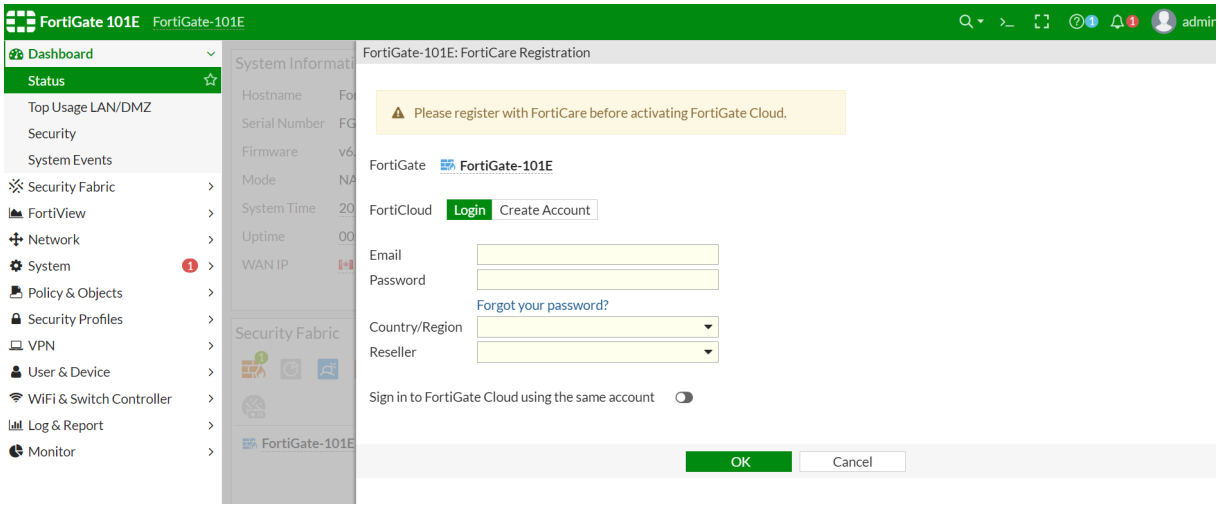

2. If you already have a FortiCloud account:
   a. Fill in your email address, password, country or region, and reseller.
   b. Click *OK*.
3. If you are creating a FortiCloud account:
   a. In the *FortiCloud* field select *Create Account*.
   b. Fill in all of the required information.
   c. Click *OK*.


Topology

The full Security Fabric topology can be viewed on the root FortiGate. Downstream FortiGate devices' topology views do not include upstream devices.

The Physical Topology shows the physical structure of your network, including all connected devices and the connections between them. The Logical Topology shows information about the interfaces that connect devices to the Security Fabric. The size of the bubbles in the topology vary based on traffic volume. Only Fortinet devices are shown in the topologies.

In both views, filtering and sorting options allow you to control the information that is shown. Hover the cursor over a device icon, port number, or endpoint to open a tooltip that shows information about that specific device, port, or endpoint. Right-click on a device to log in to it or to deauthorize it. Right-click on an endpoint to perform various tasks, including drilling down for more details on sources or compromised hosts, quarantining the host, and banning the IP address.

The small number that might be shown on the top right corner of a device icon is the number of security ratings recommendations or warnings for that device. The color of the circle shows the severity of the highest security rating check that failed. Clicking on it will open the Security Rating page. See Security rating on page 134 for more information.

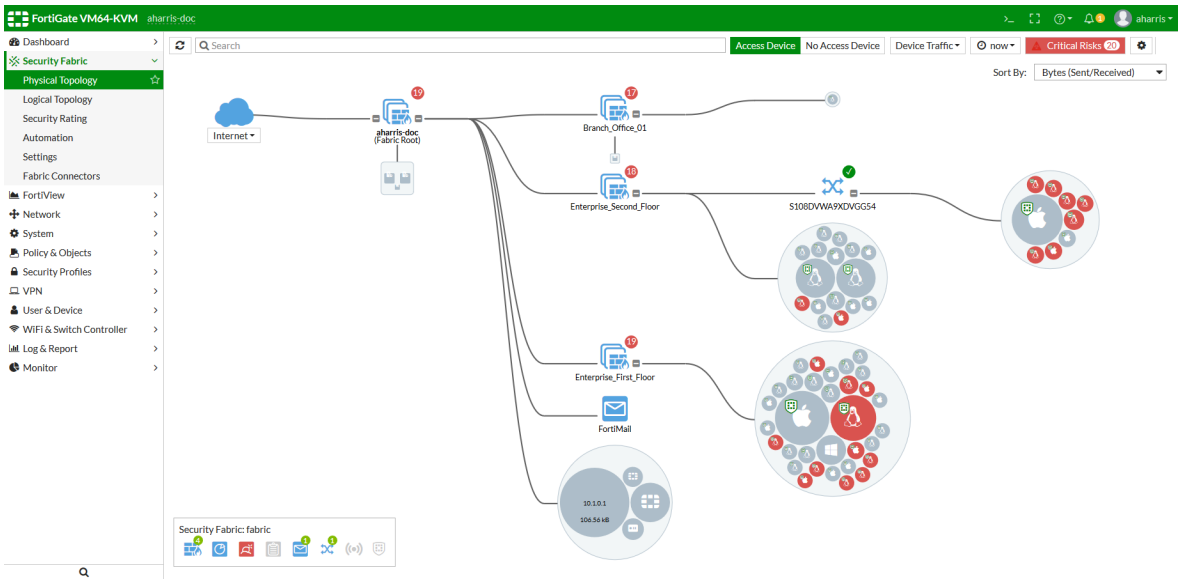


Servers and server clusters are represented by squares with rounded corners, and are grouped separately from circular endpoints. Devices are grouped by device type, and colored based on their risk level.

AWS assets are grouped by AWS security groups or subnets, and information about detected Common Vulnerabilities and Exposures (CVEs), as well as the instance details and ID, are shown.

WAN cloud

The WAN cloud icon includes a drop-down menu for selecting where the destination data comes from. The available options are: *Internet*, *Owner*, *IP Address*, and *Country/Region*. These options are only available when the filtering based on *Device Traffic*.

When *Owner* is selected, the destination hosts are shown as donut charts that show the percentage of internal (with private IP addresses) and Internet hosts. Hover over either color in the chart to see additional information. To see more details, right-click on the chart and select *Destination Owner Details* to go to the *FortiView* > *Destinations* page.

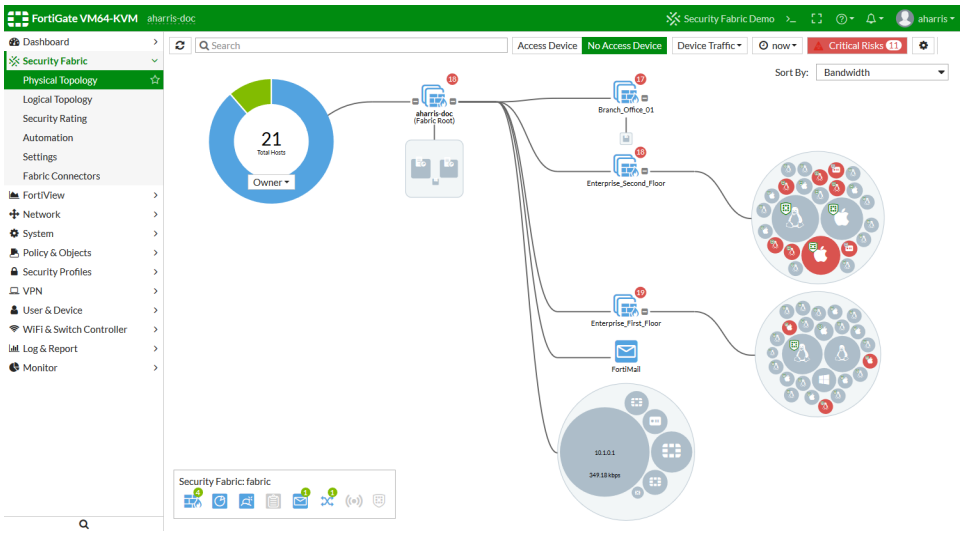

FortiAP and FortiSwitch devices

Newly discovered FortiAP and FortiSwitch devices are initial shown in the topologies with gray icons to indicate that they have not been authorized. To authorize a device, click on the device icon or name and select *Authorize*. Once authorized, the device icon will turn blue.

Right-click on an authorized FortiAP device to *Deauthorize* or *Restart* the device. Right-click on a FortiSwitch device to *Deauthorize*, *Restart*, or *Upgrade* the device, or to *Connect to the CLI*.

FortiAP and FortiSwitch links are enhanced to show Link Aggregation Groups for the Inter-switch Link (ISL-LAG). To differentiate them from physical links, ISL-LAG links are shown with a thicker line. The endpoint circles can also be used as a reference to identify ISL-LAG groups that have more than two links.

Views


The topology views can be focused using filters and by sorting in different ways to help you locate the information that you need.

Select one of *Access Device* or *No Access Device* to only show access or no access devices in the physical topology.

From the *Bubble Option* drop-down list, select one of the following views:

- *Device Traffic*: Organize devices by traffic.
- *Device Count*: Organize devices by the number of devices connected to it.

- *Device Type*: Organize devices by the device type.

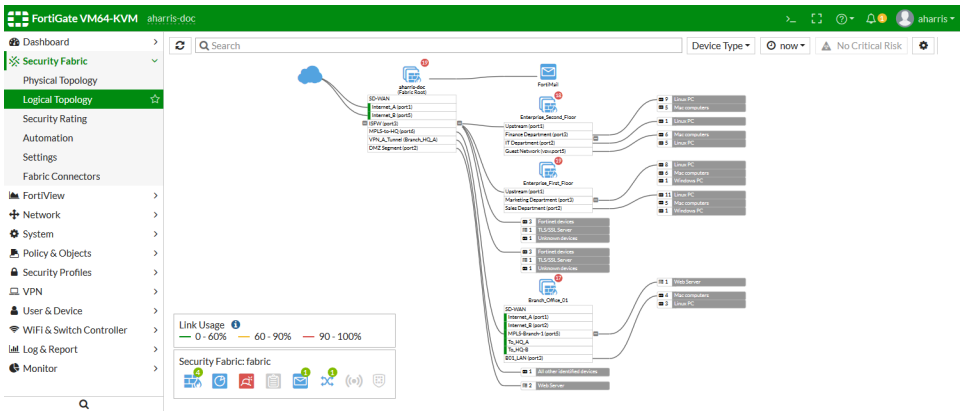


- *Risk*: Only include devices that have endpoints with medium, high, or critical risk values of the specified type: *All*, *Compromised Host*, *Vulnerability*, *Threat Score*.
- *No Devices*: Don't show endpoints.

The time period drop-down list filters the view by time. Options include: *now* (real time), *5 minutes*, *1 hour*, *24 hours*, *7 days*.

Critical risks


Click the *Critical Risks* button to see a list of endpoints that are deemed critical risks, organized by threat severity. These are the red endpoints in the current topology view.

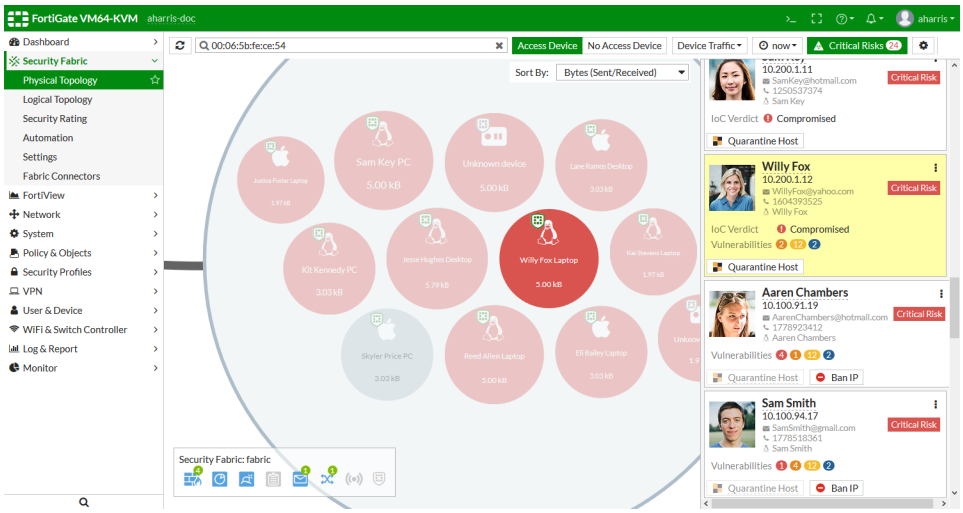


For each endpoint, the user's photo, name, IP address, email address, and phone number are shown. The number of vulnerabilities of each severity is shown, and if the IOC verdict is that the endpoint is compromised.

If applicable, the endpoint's host can be quarantined or their IP address banned, by clicking the *Quarantine Host* on *Ban IP* button.

The drop-down menu also provides options to drill down to more information on compromised hosts or endpoint vulnerabilities.

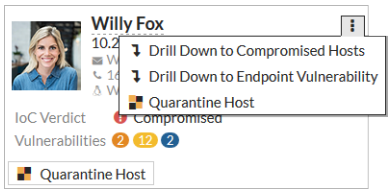


Clicking *Drill Down to Compromised Hosts* will open the *FortiView* > *Compromised Hosts* page showing a summary for the selected endpoint.

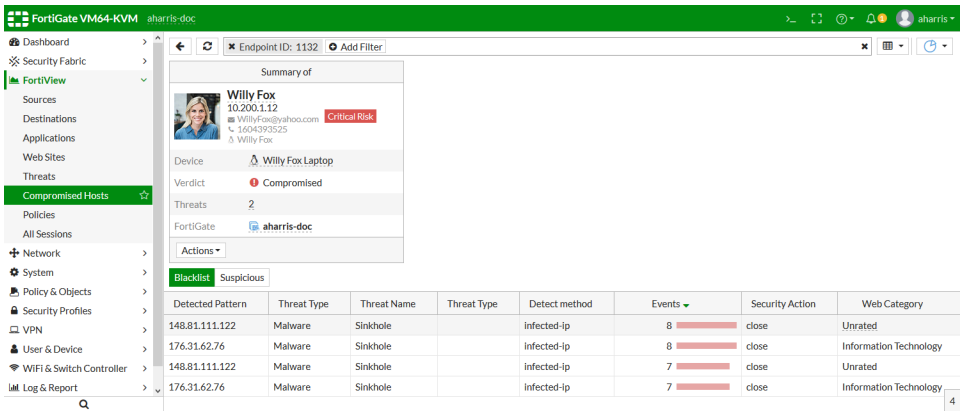

Compromised host information can also be viewed on the FortiAnalyzer in *SOC* > *FortiView* > *Threats* > *Compromised Hosts*.


The FortiAnalyzer must have a FortiGuard Indicators of Compromise service license in order to see compromised hosts.

Clicking *Drill Down to Endpoint Vulnerability* will open the vulnerabilities page showing a summary of the vulnerabilities on the selected endpoint.

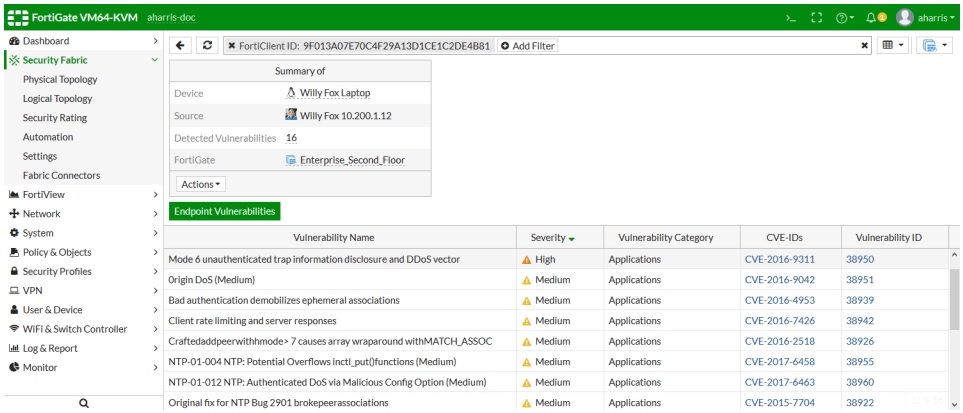


FortiAnalyzer

The Security Fabric topology can also be seen on the FortiAnalyzer device. In the *Device Manager*, FortiGate devices are shown as part of a Security Fabric group, with an asterisk next to the name of the root FortiGate.

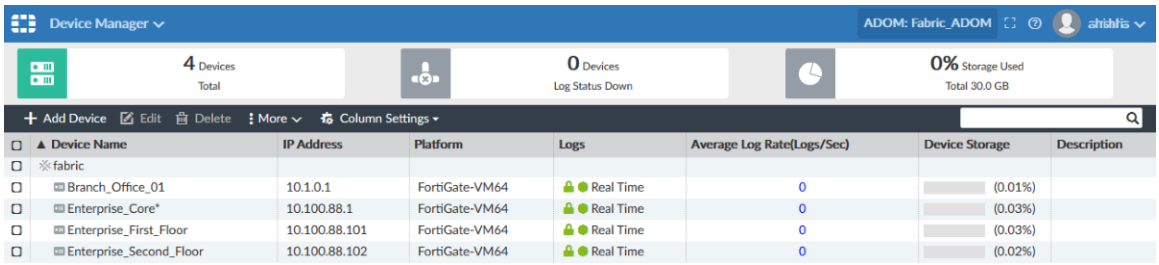

To view the Security Fabric topology, right-click on the fabric group and select *Fabric Topology*. Only Fortinet devices are shown in the Security Fabric topology views.

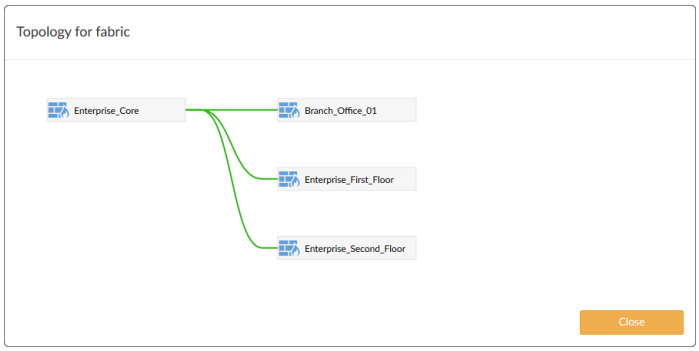


Topology view — consolidated risk

The topology view shows endpoints based on their highest severity event.

In the default topology view, you can view hosts with critical vulnerabilities and compromised hosts identified as critical risks.


The consolidated *Risk* view mode displays different risks within the Security Fabric topology. You can use the *Risk* view mode to filter threats by *Compromised Hosts*, *Vulnerability*, and *Threat Score*.

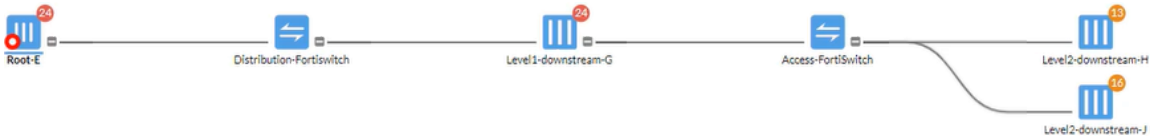


To access the default topology view:

1. Go to *Security Fabric* > *Physical Topology*.
   The default topology view highlights hosts with critical vulnerabilities and compromised hosts as critical risks (three critical risks in the example).

a. Hover over the tooltips for more details.

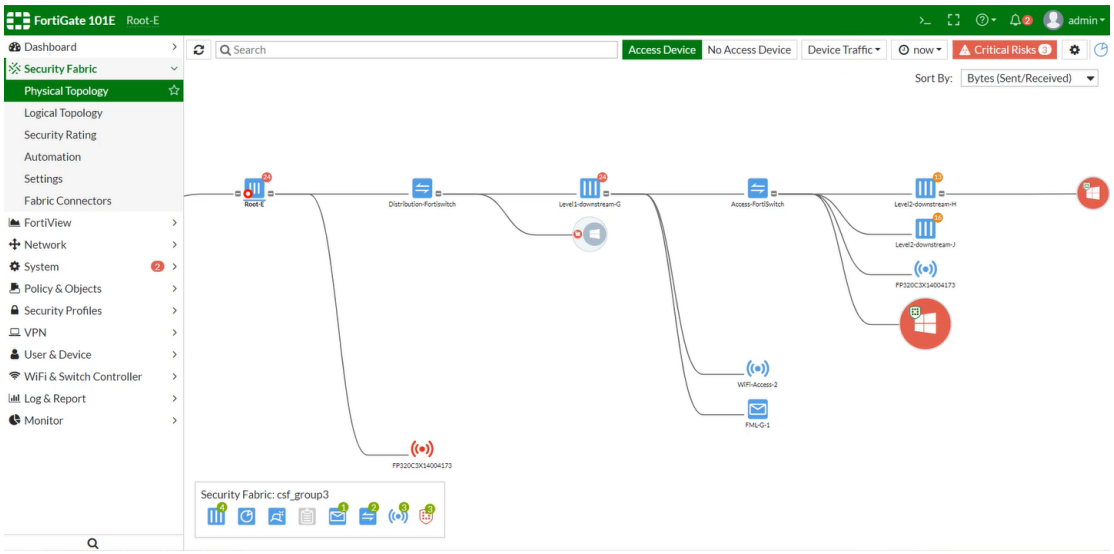


2. To view the critical risk summary, click *Critical Risks*.
The *Critical Risks* pane displays on the right-side of the screen.

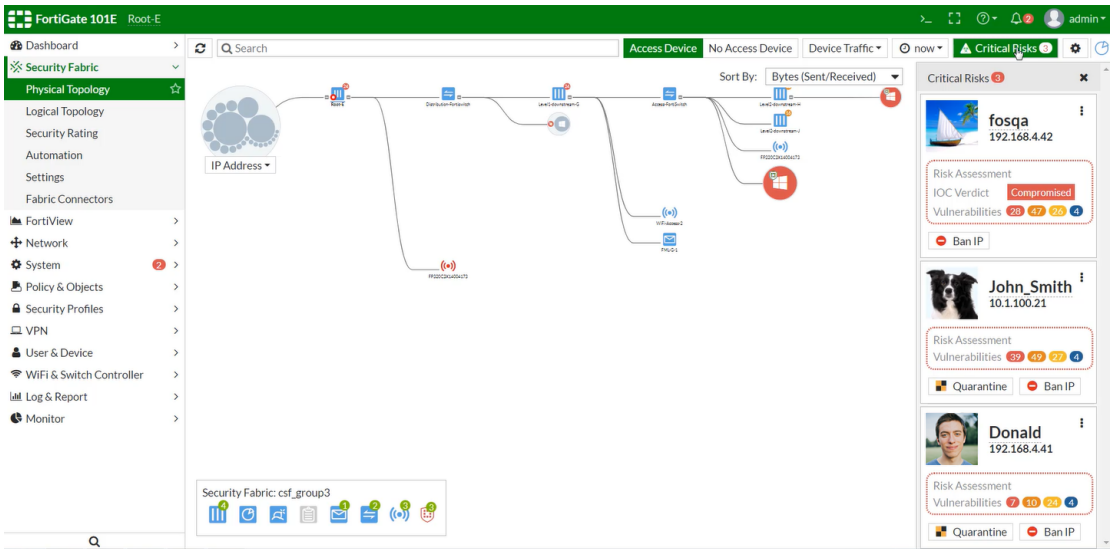


To access the consolidated Risk view mode:


1. In the view option dropdown button, select *Risk*.




2. Select one of the following options from the *Risk Type* dropdown menu:
   - *All*

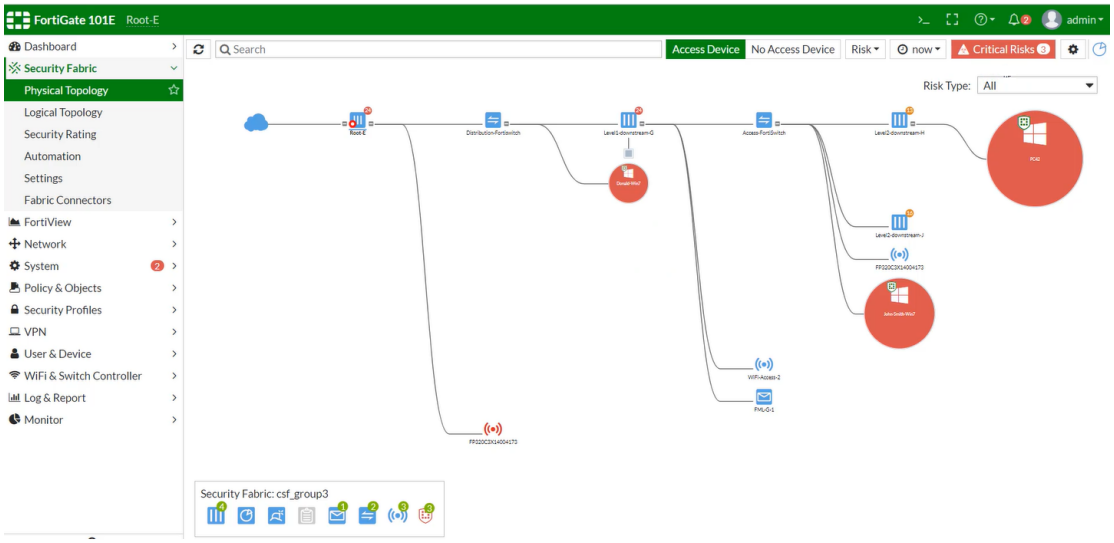


   - *Compromised Hosts*

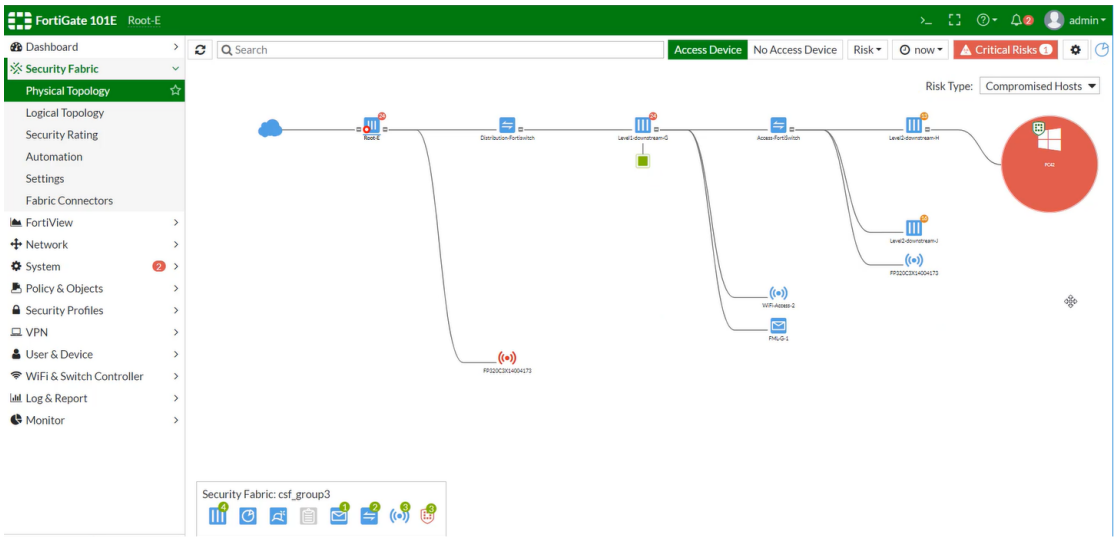

- *Vulnerability*

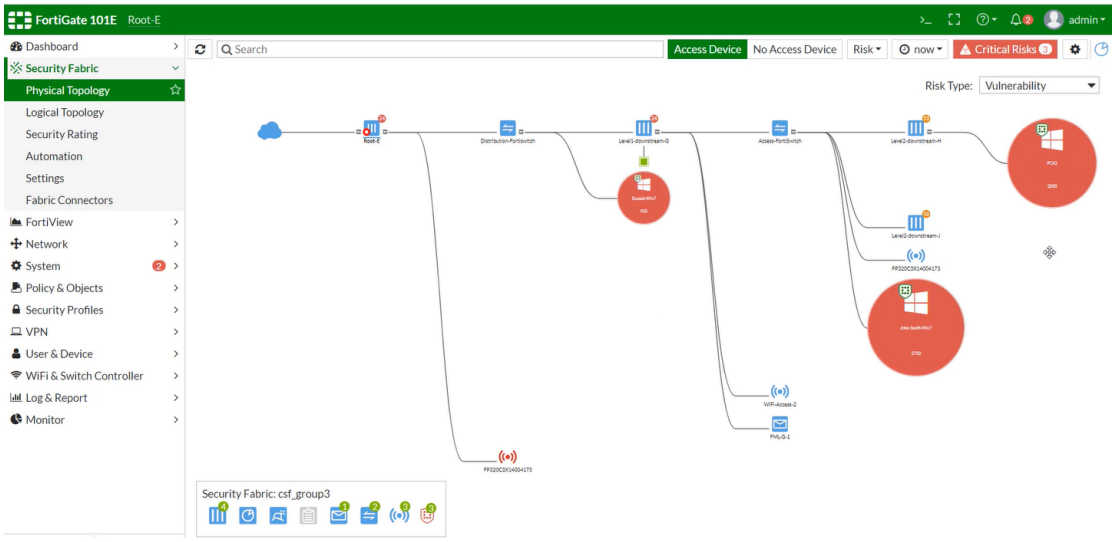


- *Threat Score*

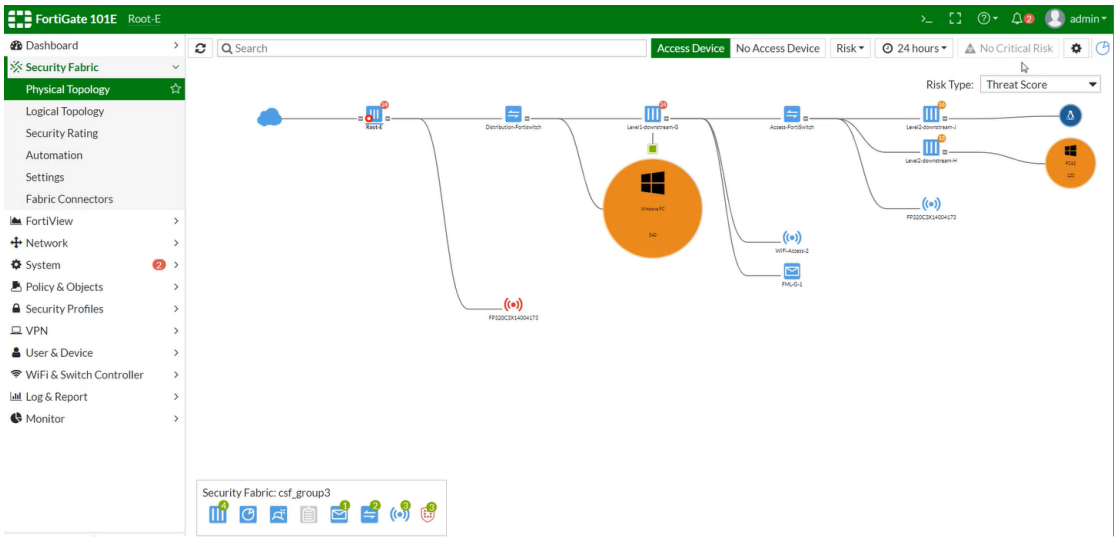

Viewing and controlling network risks via topology view

This example shows how to view and control compromised hosts via the *Security Fabric* > *Physical Topology* or *Security Fabric* > *Logical Topology* view.

In the following topology, the downstream FortiGate (Marketing) is connected to the root FortiGate (Edge) through a FortiSwitch (Distribution). The Endpoint Host is connected to the downstream FortiGate (Marketing) through another FortiSwitch (Access).

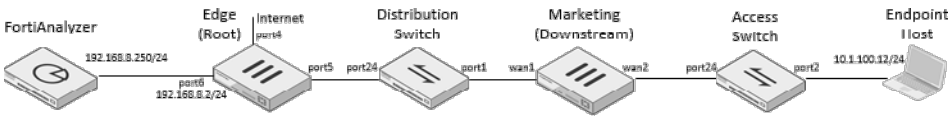


This example consists of the following steps:


1. View the compromised endpoint host.
2. Quarantine the compromised endpoint host.
3. Run `diagnose` commands.

To view the compromised endpoint host:

1. Test that FortiGate detects a compromised endpoint host by opening a browser on the endpoint host and entering a malicious website URL. The browser displays a *Web Page Blocked!* warning and does not allow access to the website.
2. In FortiOS on the root FortiGate, go to *Security Fabric* > *Physical Topology*. The endpoint host, connected to the Access FortiSwitch, is highlighted in red. Mouse over the endpoint host to view a tooltip that shows the IOC verdict. The endpoint host is compromised.

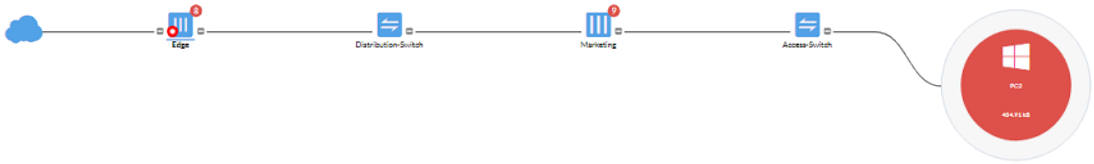

3. Go to *Security Fabric* > *Logical Topology*. The endpoint host, connected to the downstream FortiGate, is highlighted in red. Mouse over the endpoint host to view a tooltip that shows the IOC verdict. The endpoint host is compromised.

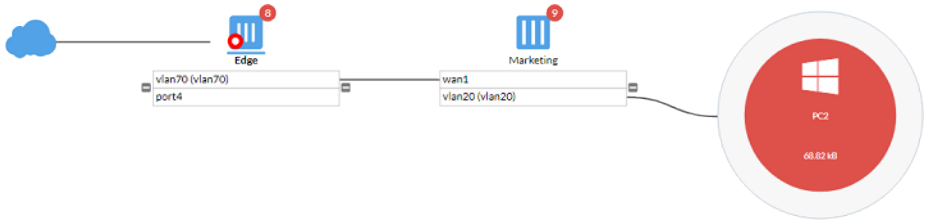

To quarantine the compromised endpoint host:

1. In FortiOS on the root FortiGate, go to *Security Fabric* > *Physical Topology*.
2. Right-click the endpoint host and select *Quarantine Host*. Click *OK* to confirm the confirmation dialog.
3. Go to *Monitor* > *Quarantine Monitor*. From the dropdown list at the top right corner, select *All FortiGates*. The quarantined endpoint host displays in the content pane.
4. On the endpoint host, open a browser and visit a website such as https://www.fortinet.com/. If the website cannot be accessed, this confirms that the endpoint host is quarantined.

To run diagnose commands:

1. To show the downstream FortiGate after it joins the Security Fabric, run the `diagnose sys csf downstream` command in the root FortiGate (Edge) CLI. The output should resemble the following:

```
Edge # diagnose sys csf downstream
1: FG101ETK18000000 (192.168.7.3) Management-IP: 0.0.0.0 Management-port:0 parent:
     FG201ETK18900000
path:FG201ETK18900000:FG101ETK18000000
data received: Y downstream intf:wan1 upstream intf:vlan70 admin-port:443
authorizer:FG201ETK18900000
```

2. To show the upstream FortiGate after the downstream FortiGate joins the Security Fabric, run the `diagnose sys csf upstream` command in the downstream FortiGate (Marketing) CLI. The output should resemble the following:

```
Marketing # diagnose sys csf upstream
```

```
Upstream Information:
Serial Number:FG201ETK18900000
IP:192.168.7.2
Connecting interface:wan1
Connection status:Authorized
```


3. To show the quarantined endpoint host in the connected FortiGate, run the following commands in the downstream FortiGate (Marketing) CLI:

```
Marketing # show user quarantine
config user quarantine
   config targets
      edit "PC2"
         set description "Manually quarantined"
         config macs
            edit 00:0c:29:3d:89:39
               set description "manual-qtn Hostname: PC2"
            next
         end
      next
   end
end
```

Deploying the Security Fabric

This topic provides an example of deploying Security Fabric with three downstream FortiGates connecting to one root FortiGate. To deploy Security Fabric, you need a FortiAnalyzer running firmware version 6.2 or later.

The following shows a sample network topology with three downstream FortiGates (Accounting, Marketing, and Sales) connected to the root FortiGate (Edge).

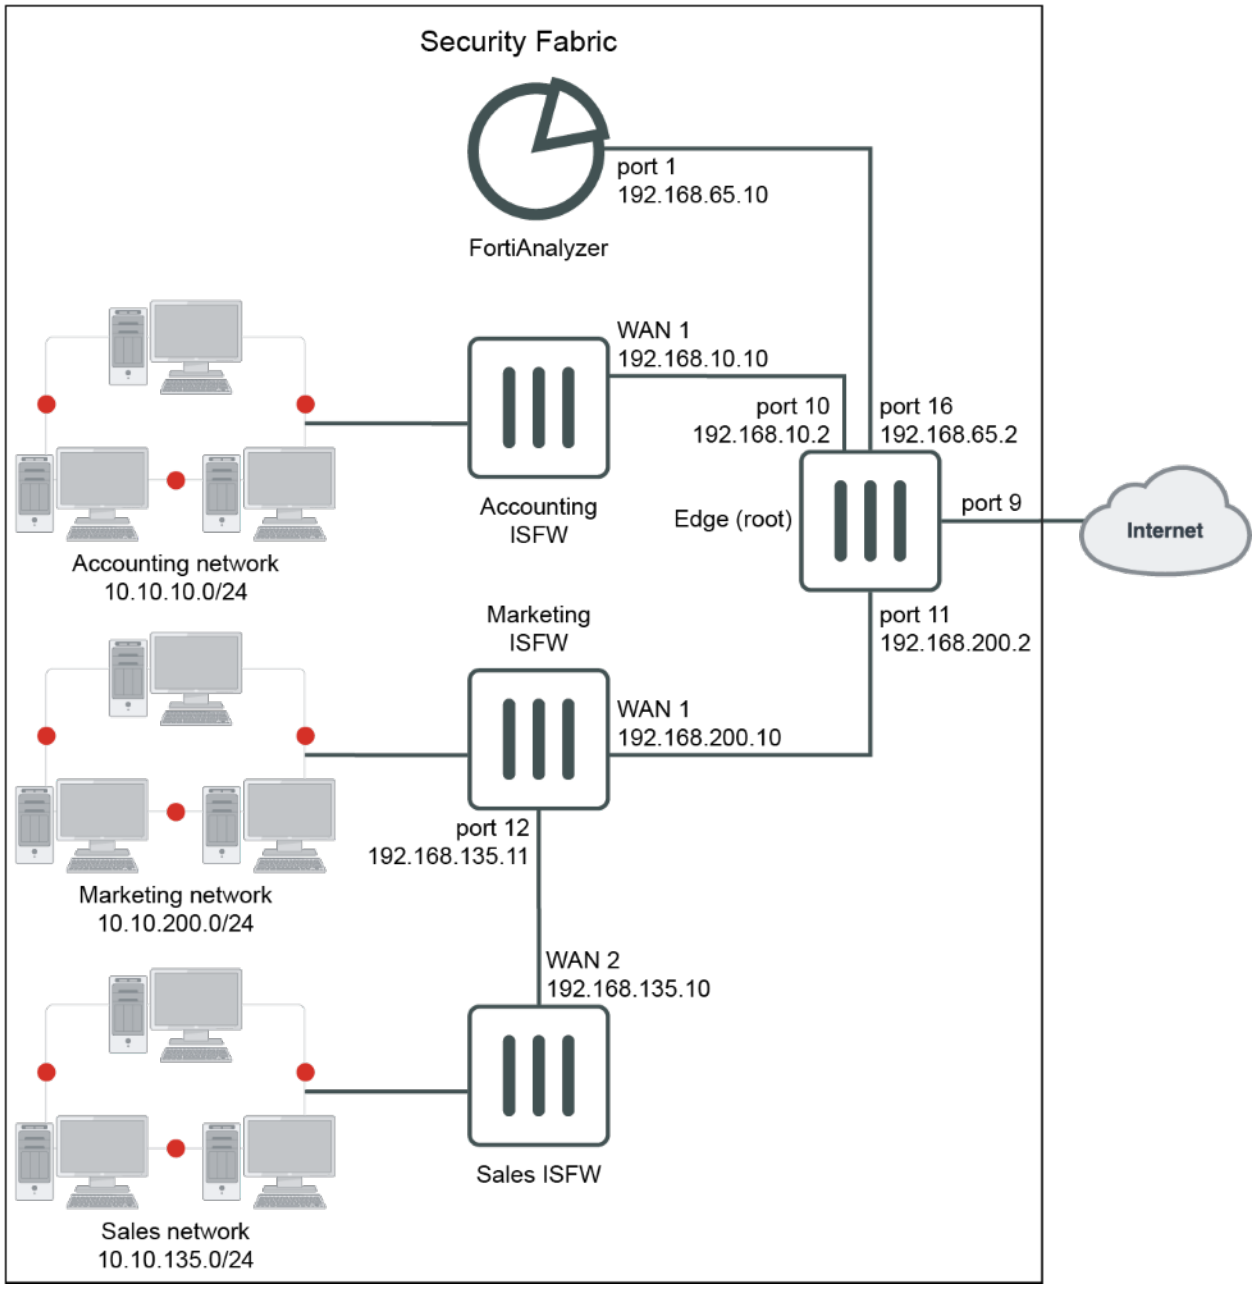

To configure the root FortiGate (Edge):

1. Configure interfaces:
   a. In the root FortiGate (Edge), go to *Network* > *Interfaces*.
   b. Edit *port16*:
      - Set *Role* to *DMZ*.
      - For the interface connected to FortiAnalyzer, set the *IP/Network Mask* to *192.168.65.2/255.255.255.0*

c. Edit *port10*:
- Set *Role* to *LAN*.
- For the interface connected to the downstream FortiGate (Accounting), set the *IP/Network Mask* to *192.168.10.2/255.255.255.0*

d. Edit *port11*:
- Set *Role* to *LAN*.
- For the interface connected to the downstream FortiGate (Marketing), set the *IP/Network Mask* to *192.168.200.2/255.255.255.0*

2. Configure Security Fabric:
a. In the root FortiGate (Edge), go to *Security Fabric* > *Settings*.
b. Enable *FortiGate Telemetry*.
After *FortiGate Telemetry* is enabled, FortiAnalyzer automatically enables *Logging* and *Upload Option* is set to *Real Time*.
c. Set a *Fabric name*, such as *Office-Security-Fabric*.
d. Enable *Allow other FortiGates to join* and add *port10* and *port11*.
e. Under *FortiAnalyzer Logging*, set *IP address* to the FortiAnalyzer IP *192.168.65.10*.
f. Click *Test Connectivity*.
A warning message indicates that the FortiGate is not authorized on the FortiAnalyzer. The authorization is configured in a later step on the FortiAnalyzer.
g. Click *Apply*.
3. Create a policy to allow the downstream FortiGate (Accounting) to access the FortiAnalyzer:
a. In the root FortiGate (Edge), go to *Policy & Objects* > *Addresses*.
b. Click *Create New*.
- Set *Name* to *FAZ-addr*.
- Set *Type* to *Subnet*.
- Set *Subnet/IP Range* to *192.168.65.10/32*.
- Set *Interface* to *any*.

c. Click *OK*.
d. Click *Create New*.
- Set *Name* to *Accounting*.
- Set *Type* to *Subnet*.
- Set *Subnet/IP Range* to *192.168.10.10/32*.
- Set *Interface* to *any*.

e. Click *OK*.
f. In the root FortiGate (Edge), go to *Policy & Objects* > *IPv4 Policy* and click *Create New*.
- Set *Name* to *Accounting-to-FAZ*.
- Set *srcintf* to *port10*.
- Set *dstintf* to *port16*.
- Set *srcaddr* to *Accounting-addr*.
- Set *dstaddr* to *FAZ-addr*.
- Set *Action* to *Accept*.
- Set *Schedule* to *Always*.
- Set *Service* to *All*.
- Enable *NAT*.
- Set *IP Pool Configuration* to *Use Outgoing Interface Address*.

g. Click *OK*.

4. Create a policy to allow the two downstream FortiGates (Marketing and Sales) to access the FortiAnalyzer:
   a. In the root FortiGate (Edge), go to *Policy & Objects* > *Addresses* and click *Create New*.
      - Set *Name* to *Marketing-addr*.
      - Set *Type* to *Subnet*.
      - Set *Subnet/IP Range* to *192.168.200.10/32*.
      - Set *Interface* to *any*.
   b. Click *OK*.
   c. In the root FortiGate (Edge), go to *Policy & Objects* > *IPv4 Policy* and click *Create New*.
      - Set *Name* to *Marketing-to-FAZ*.
      - Set *srcintf* to *port11*.
      - Set *dstintf* to *port16*.
      - Set *srcaddr* to *Marketing-addr*.
      - Set *dstaddr* to *FAZ-addr*.
      - Set *Action* to *Accept*.
      - Set *Schedule* to *Always*.
      - Set *Service* to *All*.
      - Enable *NAT*.
      - Set *IP Pool Configuration* to *Use Outgoing Interface Address*.
   d. Click *OK*.

To configure the downstream FortiGate (Accounting):

1. Configure interface:
   a. In the downstream FortiGate (Accounting), go to *Network* > *Interfaces*.
   b. Edit interface *wan1*:
      - Set *Role* to *WAN*.
      - For the interface connected to root, set the *IP/Network Mask* to *192.168.10.10/255.255.255.0*
2. Configure the default static route to connect to the root FortiGate (Edge):
   a. In the downstream FortiGate (Accounting), go to *Network* > *Static Routes* and click *Create New* or *Create New* > *IPv4 Static Route*.
      - Set *Destination* to *0.0.0.0/0.0.0.0*.
      - Set *Interface* to *wan1*.
      - Set *Gateway Address* to *192.168.10.2*.
   b. Click *OK*.
3. Configure Security Fabric:
   a. In the downstream FortiGate (Accounting), go to *Security Fabric* > *Settings*.
   b. Enable *FortiGate Telemetry*.
      After *FortiGate Telemetry* is enabled, FortiAnalyzer automatically enables *Logging*. Settings for the FortiAnalyzer are retrieved from the root FortiGate (Edge) when FortiGate (Accounting) connects to the root FortiGate (Edge).
   c. Set *Security Fabric role* to *Join Existing Fabric*.
   d. *Upstream FortiGate IP* is filled in automatically with the default static route *Gateway Address* of *192.168.10.2* set in the previous step.
   e. Leave *Allow other FortiGates to join* disabled, because there is no downstream FortiGate connecting to it.
   f. Click *Apply*.

To configure the downstream FortiGate (Marketing):

1. Configure interface:
   a. In the downstream FortiGate (Marketing), go to *Network* > *Interfaces*.
   b. Edit *port12*:
      - Set *Role* to *LAN*.
      - For the interface connected to the downstream FortiGate (Sales), set the *IP/Network Mask* to *192.168.135.11/255.255.255.0*.
   c. Edit *wan1*:
      - Set *Role* to *WAN*.
      - For the interface connected to the root FortiGate (Edge), set the *IP/Network Mask* to *192.168.200.10/255.255.255.0*.
2. Configure the default static route to connect to the root FortiGate (Edge):
   a. In the downstream FortiGate (Marketing), go to *Network* > *Static Routes* and click *Create New* or *Create New* > *IPv4 Static Route*.
      - Set *Destination* to *0.0.0.0/0.0.0.0*.
      - Set *Interface* to *wan1*.
      - Set *Gateway Address* to *192.168.200.2*.
   b. Click *OK*.
3. Configure Security Fabric:
   a. In the downstream FortiGate (Marketing), go to *Security Fabric* > *Settings*.
   b. Enable *FortiGate Telemetry*.
   After *FortiGate Telemetry* is enabled, FortiAnalyzer automatically enables *Logging*. Settings for the FortiAnalyzer are retrieved from the root FortiGate (Edge) when FortiGate (Marketing) connects to the root FortiGate (Edge).
   c. Set *Security Fabric role* to *Join Existing Fabric*.
   d. *Upstream FortiGate IP* is filled in automatically with the default static route *Gateway Address* of *192.168.200.2* set in the previous step.
   e. Enable *Allow other FortiGates to join* and add *port12*.
   f. Click *Apply*.
4. Create a policy to allow another downstream FortiGate (Sales) going through FortiGate (Marketing) to access the FortiAnalyzer:
   a. In the downstream FortiGate (Marketing), go to *Policy & Objects* > *Addresses* and click *Create New*.
      - Set *Name* to *FAZ-addr*.
      - Set *Type* to *Subnet*.
      - Set *Subnet/IP Range* to *192.168.65.10/32*.
      - Set *Interface* to *any*.
   b. Click *OK*.
   c. Click *Create New*.
      - Set *Name* to *Sales-addr*.
      - Set *Type* to *Subnet*.
      - Set *Subnet/IP Range* to *192.168.135.10/32*.
      - Set *Interface* to *any*.
   d. Click *OK*.

e. In the downstream FortiGate (Marketing), go to *Policy & Objects* > *IPv4 Policy* and click *Create New*.
- Set *Name* to *Sales-to-FAZ*.
- Set *srcintf* to *port12*.
- Set *dstintf* to *wan1*.
- Set *srcaddr* to *Sales-addr*.
- Set *dstaddr* to *FAZ-addr*.
- Set *Action* to *Accept*.
- Set *Schedule* to *Always*.
- Set *Service* to *All*.
- Enable *NAT*.
- Set *IP Pool Configuration* to *Use Outgoing Interface Address*.

f. Click *OK*.

To configure the downstream FortiGate (Accounting):

1. Configure interface:
   a. In the downstream FortiGate (Accounting), go to *Network* > *Interfaces*.
   b. Edit interface *wan1*:
      - Set *Role* to *WAN*.
      - For the interface connected to root, set the *IP/Network Mask* to *192.168.10.10/255.255.255.0*
2. Configure the default static route to connect to the root FortiGate (Edge):
   a. In the downstream FortiGate (Accounting), go to *Network* > *Static Routes* and click *Create New* or *Create New* > *IPv4 Static Route*.
      - Set *Destination* to *0.0.0.0/0.0.0.0*.
      - Set *Interface* to *wan1*.
      - Set *Gateway Address* to *192.168.10.2*.
   b. Click *OK*.
3. Configure Security Fabric:
   a. In the downstream FortiGate (Accounting), go to *Security Fabric* > *Settings*.
   b. Enable *FortiGate Telemetry*.
   After *FortiGate Telemetry* is enabled, FortiAnalyzer automatically enables *Logging*. Settings for the FortiAnalyzer are retrieved from the root FortiGate (Edge) when FortiGate (Accounting) connects to the root FortiGate (Edge).
   c. Set *Security Fabric role* to *Join Existing Fabric*.
   d. *Upstream FortiGate IP* is filled in automatically with the default static route *Gateway Address* of *192.168.10.2* set in the previous step.
   e. Leave *Allow other FortiGates to join* disabled, because there is no downstream FortiGate connecting to it.
   f. Click *Apply*.

To configure the downstream FortiGate (Sales):

1. Configure interface:
   a. In the downstream FortiGate (Sales), go to *Network* > *Interfaces*.
   b. Edit *wan2*:
      - Set *Role* to *WAN*.
      - For the interface connected to the upstream FortiGate (Marketing), set the *IP/Network Mask* to *192.168.135.10/255.255.255.0*.

2. Configure the default static route to connect to the upstream FortiGate (Marketing):
   a. In the downstream FortiGate (Sales), go to *Network* > *Static Routes* and click *Create New* or *Create New* > *IPv4 Static Route*.
      - Set *Destination* to *0.0.0.0/0.0.0.0*.
      - Set *Interface* to *wan2*.
      - Set *Gateway Address* to *192.168.135.11*.
   b. Click *OK*.
3. Configure Security Fabric:
   a. In the downstream FortiGate (Sales), go to *Security Fabric* > *Settings*.
   b. Enable *FortiGate Telemetry*.
   After *FortiGate Telemetry* is enabled, FortiAnalyzer automatically enables *Logging*. Settings for the FortiAnalyzer are retrieved from the root FortiGate (Edge) when FortiGate (Sales) connects to the root FortiGate (Edge).
   c. Set *Security Fabric role* to *Join Existing Fabric*.
   d. *Upstream FortiGate IP* is filled in automatically with the default static route *Gateway Address* of *192.168.135.11* set in the previous step.
   e. Leave *Allow other FortiGates to join* disabled, because there is no downstream FortiGate connecting to it.
   f. Click *Apply*.

To authorize downstream FortiGates (Accounting, Marketing, and Sales) on the root FortiGate (Edge):


1. In the root FortiGate (Edge), go to *Security Fabric* > *Settings*.
   The *Topology* field highlights two connected FortiGates with their serial numbers and asks you to authorize the highlighted devices.
2. Select the highlighted FortiGates and select *Authorize*.
   After they are authorized, the two downstream FortiGates (Accounting and Marketing) appear in the *Topology* field in *Security Fabric* > *Settings*. This means that the two downstream FortiGates (Accounting and Marketing) have successfully joined the Security Fabric.
3. The *Topology* field now highlights the FortiGate with the serial number that is connected to the downstream FortiGate (Marketing) and asks you to authorize the highlighted device.
4. Select the highlighted FortiGates and select *Authorize*.
   After it is authorized, the downstream FortiGate (Sales) appears in the *Topology* field in *Security Fabric* > *Settings*. This means that the downstream FortiGates (Sales) has successfully joined the Security Fabric.

To use FortiAnalyzer to authorize all the Security Fabric FortiGates:


1. Authorize all the Security Fabric FortiGates on the FortiAnalyzer side:
   a. On the FortiAnalyzer, go to *System Settings* > *Network* > *All Interfaces*.
   b. Edit *port1* and set *IP Address/Netmask* to *192.168.65.10/255.255.255.0*.
   c. Go to *Device Manager* > *Unauthorized*. All of the FortiGates are listed as unauthorized.
      i. Select all the FortiGates and select *Authorize*. The FortiGates are now listed as authorized.
      After a moment, a warning icon appears beside the root FortiGate (Edge) because the FortiAnalyzer needs administrative access to the root FortiGate (Edge) in the Security Fabric.
      ii. Click the warning icon and enter the admin username and password of the root FortiGate (Edge).
2. Check FortiAnalyzer status on all the Security Fabric FortiGates:
   a. On each FortiGates, go to *Security Fabric* > *Settings* and check that *FortiAnalyzer Logging* shows *Storage usage* information.

To check Security Fabric deployment result:


1. On FortiGate (Edge), go to *Dashboard* > *Status*.
   The *Security Fabric* widget displays all the FortiGates in the Security Fabric.

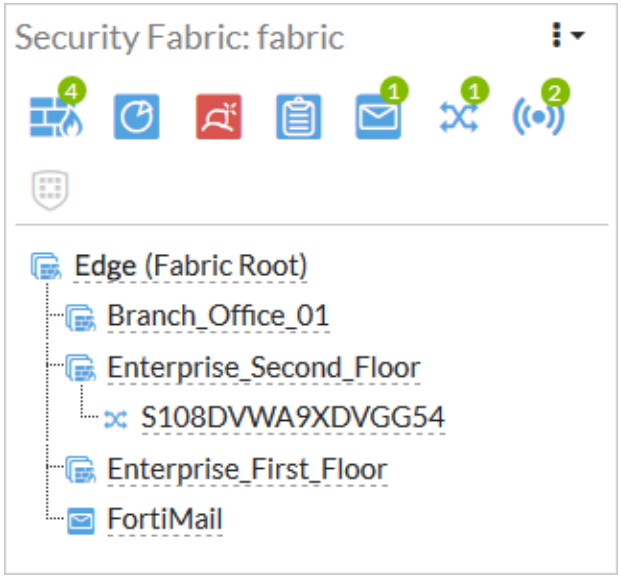

2. On FortiGate (Edge), go to *Security Fabric* > *Physical Topology*.
   This page shows a visualization of access layer devices in the Security Fabric.

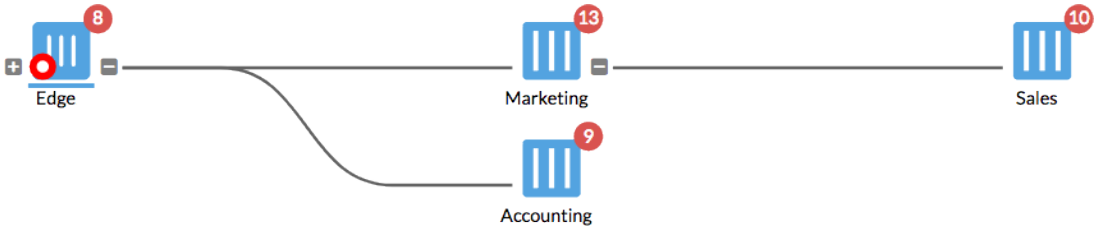

3. On FortiGate (Edge), go to *Security Fabric* > *Physical Topology*.
   This dashboard shows information about the interfaces of each device in the Security Fabric.

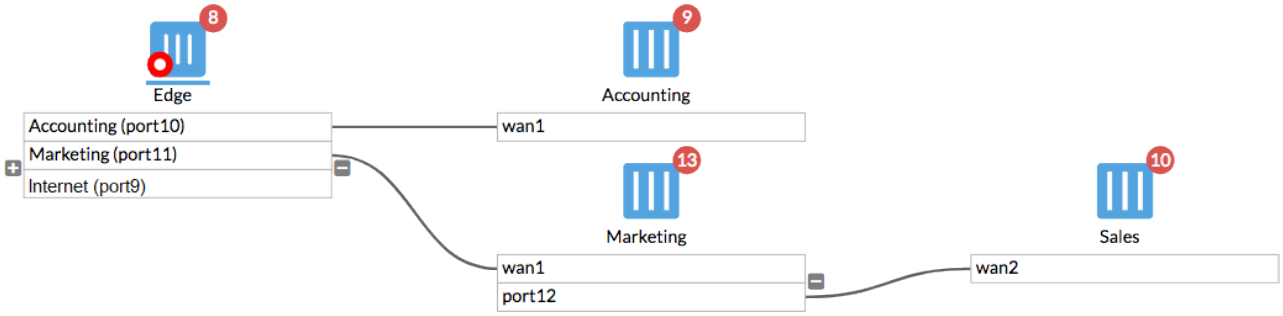

To run diagnose commands:

1. Run the `diagnose sys csf authorization pending-list` command in the root FortiGate to show the downstream FortiGate pending for root FortiGate authorization:

```
Edge # diagnose sys csf authorization pending-list
Serial                  IP Address      HA-Members    Path
```

```
--------------------------------------------------------------------------------
FG201ETK18902514        0.0.0.0                         FG3H1E5818900718:FG201ETK18902514
```

2. Run the `diagnose sys csf downstream` command in the root or middle FortiGate to show the downstream FortiGates after they join Security Fabric:

```
Edge # diagnose sys csf downstream
1:     FG201ETK18902514 (192.168.200.10) Management-IP: 0.0.0.0 Management-port:0
parent: FG3H1E5818900718
        path:FG3H1E5818900718:FG201ETK18902514
        data received: Y downstream intf:wan1 upstream intf:port11 admin-port:443
        authorizer:FG3H1E5818900718
2:     FGT81ETK18002246 (192.168.10.10) Management-IP: 0.0.0.0 Management-port:0 parent:
FG3H1E5818900718
        path:FG3H1E5818900718:FGT81ETK18002246
        data received: Y downstream intf:wan1 upstream intf:port10 admin-port:443
        authorizer:FG3H1E5818900718
3:     FG101ETK18002187 (192.168.135.10) Management-IP: 0.0.0.0 Management-port:0
parent: FG201ETK18902514
        path:FG3H1E5818900718:FG201ETK18902514:FG101ETK18002187
        data received: Y downstream intf:wan2 upstream intf:port12 admin-port:443
        authorizer:FG3H1E5818900718
```

3. Run the `diagnose sys csf upstream` command in any downstream FortiGate to show the upstream FortiGate after downstream FortiGate joins Security Fabric:


```
Marketing # diagnose sys csf upstream
Upstream Information:
Serial Number:FG3H1E5818900718
IP:192.168.200.2
Connecting interface:wan1
Connection status:Authorized
```

Security Fabric over IPsec VPN

This is an example of configuring Security Fabric over IPsec VPN.

Sample topology

This sample topology shows a downstream FortiGate (HQ2) connected to the root FortiGate (HQ1) over IPsec VPN to join Security Fabric.

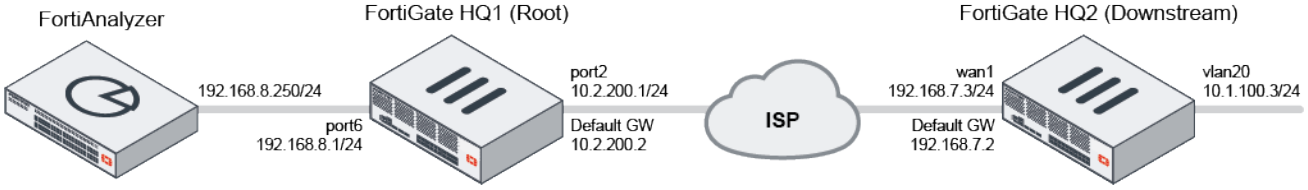

Sample configuration

To configure the root FortiGate (HQ1):

1. Configure interface:
   a. In the root FortiGate (HQ1), go to *Network* > *Interfaces*.
   b. Edit *port2*:
      - Set *Role* to *WAN*.
      - For the interface connected to the Internet, set the *IP/Network Mask* to *10.2.200.1/255.255.255.0*
   c. Edit *port6*:
      - Set *Role* to *DMZ*.
      - For the interface connected to FortiAnalyzer, set the *IP/Network Mask* to *192.168.8.250/255.255.255.0*
2. Configure the static route to connect to the Internet:
   a. Go to *Network* > *Static Routes* and click *Create New* or *Create New* > *IPv4 Static Route*.
      - Set *Destination* to *0.0.0.0/0.0.0.0*.
      - Set *Interface* to *port2*.
      - Set *Gateway Address* to *10.2.200.2*.
   b. Click *OK*.
3. Configure IPsec VPN:
   a. Go to *VPN* > *IPsec Wizard*.
      - Set *Name* to *To-HQ2*.
      - Set *Template Type* to *Custom*.
      - Click *Next*.
      - Set *Authentication* to *Method*.
      - Set *Pre-shared Key* to *123456*.
   b. Leave all other fields in their default values and click *OK*.
4. Configure the IPsec VPN interface IP address which will be used to form Security Fabric:
   a. Go to *Network* > *Interfaces*.
   b. Edit *To-HQ2*:
      - Set *Role* to *LAN*.
      - Set the *IP/Network Mask* to *10.10.10.1/255.255.255.255*.
      - Set *Remote IP/Network Mask* to *10.10.10.3/255.255.255.0*.
5. Configure IPsec VPN local and remote subnet:
   a. Go to *Policy & Objects* > *Addresses*.
   b. Click *Create New*
      - Set *Name* to *To-HQ2_remote_subnet_2*.
      - Set *Type* to *Subnet*.
      - Set *IP/Network Mask* to *10.10.10.3/32*.
   c. Click *OK*.
   d. Click *Create New*
      - Set *Name* to *To-HQ2_local_subnet_1*.
      - Set *Type* to *Subnet*.
      - Set *IP/Network Mask* to *192.168.8.0/24*.
   e. Click *OK*.

f. Click *Create New*
- Set *Name* to *To-HQ2_remote_subnet_1*.
- Set *Type* to *Subnet*.
- Set *IP/Network Mask* to *10.1.100.0/24*.

g. Click *OK*.

6. Configure IPsec VPN static routes:
   a. Go to *Network* > *Static Routes*
   b. Click *Create New* or *Create New* > *IPv4 Static Route*.
      - For *Named Address*, select *Type* and select *To-HQ2_remote_subnet_1*.
      - Set *Interface* to *To-HQ2*.

      Click *OK*.
   c. Click *Create New* or *Create New* > *IPv4 Static Route*.
      - For *Named Address*, select *Type* and select *To-HQ2_remote_subnet_1*.
      - Set *Interface* to *Blackhole*.
      - Set *Administrative Distance* to *254*.

   d. Click *OK*.
7. Configure IPsec VPN policies:
   a. Go to *Policy & Objects* > *IPv4 Policy*
   b. Click *Create New*.
      - Set *Name* to *vpn_To-HQ2_local*.
      - Set *Incoming Interface* to *port6*.
      - Set *Outgoing Interface* to *To-HQ2*.
      - Set *Source* to *To-HQ2_local_subnet_1*.
      - Set *Destination* to *To-HQ2_remote_subnet_1*.
      - Set *Schedule* to *Always*.
      - Set *Service* to *All*.
      - Disable *NAT*.

   c. Click *OK*.
   d. Click *Create New*.
      - Set *Name* to *vpn_To-HQ2_remote*.
      - Set *Incoming Interface* to *To-HQ2*.
      - Set *Outgoing Interface* to *port6*.
      - Set *Source* to *To-HQ2_remote_subnet_1, To-HQ2_remote_subnet_2*.
      - Set *Destination* to *To-HQ2_local_subnet_1*.
      - Set *Schedule* to *Always*.
      - Set *Service* to *All*.
      - Enable *NAT*.
      - Set *IP Pool Configuration* to *Use Outgoing Interface Address*.

   e. Click *OK*.
8. Configure Security Fabric:
   a. Go to *Security Fabric* > *Settings*.
   b. Enable *FortiGate Telemetry*.
      After *FortiGate Telemetry* is enabled, FortiAnalyzer automatically enables *Logging* and *Upload* is set to *Real Time*.
   c. Set *Fabric name* to *Office-Security-Fabric*.

d. Enable *Allow other FortiGates to join* and add VPN interface *To-HQ2*.
e. Under *FortiAnalyzer Logging*, set *IP address* to the FortiAnalyzer IP of *192.168.8.250*.
f. Click *Apply*.

To configure the downstream FortiGate (HQ2):

1. Configure interface:
   a. Go to *Network* > *Interfaces*.
   b. Edit interface *wan1*:
      - Set *Role* to *WAN*.
      - For the interface connected to the Internet, set the *IP/Network Mask* to *192.168.7.3/255.255.255.0*.
   c. Edit interface *vlan20*:
      - Set *Role* to *LAN*.
      - For the interface connected to local endpoint clients, set the *IP/Network Mask* to *10.1.100.3/255.255.255.0*.
2. Configure the static route to connect to the Internet:
   a. Go to *Network* > *Static Routes* and click *Create New* or *Create New* > *IPv4 Static Route*.
      - Set *Destination* to *0.0.0.0/0.0.0.0*.
      - Set *Interface* to *wan1*.
      - Set *Gateway Address* to *192.168.7.2*.
   b. Click *OK*.
3. Configure IPsec VPN:
   a. Go to *VPN* > *IPsec Wizard*.
      - Set *VPN Name* to *To-HQ1*.
      - Set *Template Type* to *Custom*.
      - Click *Next*.
      - In the *Network IP Address*, enter *10.2.200.1*.
      - Set *Interface* to *wan1*.
      - Set *Authentication* to *Method*.
      - Set *Pre-shared Key* to *123456*.
   b. Leave all other fields in their default values and click *OK*.
4. Configure the IPsec VPN interface IP address which will be used to form Security Fabric:
   a. Go to *Network* > *Interfaces*.
   b. Edit *To-HQ1*:
      - Set *Role* to *WAN*.
      - Set the *IP/Network Mask* to *10.10.10.3/255.255.255.255*.
      - Set *Remote IP/Network Mask* to *10.10.10.1/255.255.255.0.0*.
5. Configure IPsec VPN local and remote subnet:
   a. Go to *Policy & Objects* > *Addresses*.
   b. Click *Create New*
      - Set *Name* to *To-HQ1_local_subnet_1*.
      - Set *Type* to *Subnet*.
      - Set *IP/Network Mask* to *10.1.100.0/24*.
   c. Click *OK*.


   d. Click *Create New*
      - Set *Name* to *To-HQ1_remote_subnet_1*.
      - Set *Type* to *Subnet*.
      - Set *IP/Network Mask* to *192.168.8.0/24*.
   e. Click *OK*.
6. Configure IPsec VPN static routes:
   a. Go to *Network* > *Static Routes* and click *Create New* or *Create New* > *IPv4 Static Route*.
      - For *Named Address*, select *Type* and select *To-HQ1_remote_subnet_1*.
      - Set *Interface* to *To-HQ1*.
   b. Click *OK*.
   c. Click *Create New* or *Create New* > *IPv4 Static Route*.
      - For *Named Address*, select *Type* and select *To-HQ1_remote_subnet_1*.
      - Set *Interface* to *Blackhole*.
      - Set *Administrative Distance* to *254*.
   d. Click *OK*.
7. Configure IPsec VPN policies:
   a. Go to *Policy & Objects* > *IPv4 Policy* and click *Create New*.
      - Set *Name* to *vpn_To-HQ1_local*.
      - Set *Incoming Interface* to *vlan20*.
      - Set *Outgoing Interface* to *To-HQ1*.
      - Set *Source* to *To-HQ1_local_subnet_1*.
      - Set *Destination* to *To-HQ1_remote_subnet_1*.
      - Set *Schedule* to *Always*.
      - Set *Service* to *All*.
      - Disable *NAT*.
   b. Click *OK*.
   c. Click *Create New*.
      - Set *Name* to *vpn_To-HQ1_remote*.
      - Set *Incoming Interface* to *To-HQ1*.
      - Set *Outgoing Interface* to *vlan20*.
      - Set *Source* to *To-HQ1_remote_subnet_1*.
      - Set *Destination* to *-HQ1_local_subnet_1*.
      - Set *Schedule* to *Always*.
      - Set *Service* to *All*.
      - Disable *NAT*.
   d. Click *OK*.
8. Configure Security Fabric:
   a. Go to *Security Fabric* > *Settings*.
   b. Enable *FortiGate Telemetry*.
      After *FortiGate Telemetry* is enabled, FortiAnalyzer automatically enables *Logging*. FortiAnalyzer settings will be retrieved when the downstream FortiGate connects to the root FortiGate.
   c. Set *Security Fabric role* to *Join Existing Fabric*.
   d. Set *Upstream FortiGate IP* to *10.10.10.1*.
   e. Click *Apply*.

To authorize the downstream FortiGate (HQ2) on the root FortiGate (HQ1):


1. In the root FortiGate (HQ1), go to *Security Fabric* > *Settings*.
   The *Topology* field highlights the connected FortiGate (HQ2) with the serial number and asks you to authorize the highlighted device.
2. Select the highlighted FortiGate and select *Authorize*.
   After authorization, the downstream FortiGate (HQ2) appears in the *Topology* field in *Security Fabric* > *Settings*. This means the downstream FortiGate (HQ2) has successfully joined the Security Fabric.

To check Security Fabric over IPsec VPN:

1. On the root FortiGate (HQ1), go to *Security Fabric* > *Physical Topology*.
   The root FortiGate (HQ1) is connected by the downstream FortiGate (HQ2) with VPN icon in the middle.

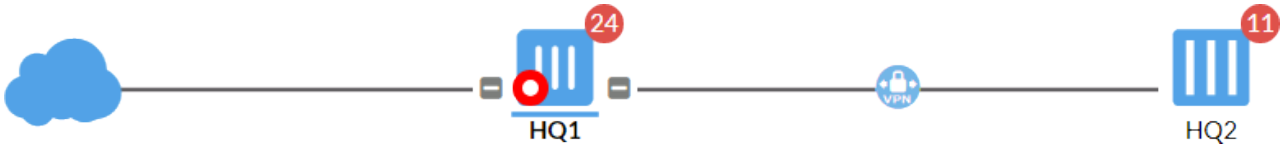

2. On the root FortiGate (HQ1), go to *Security Fabric* > *Logical Topology*.
   The root FortiGate (HQ1) VPN interface *To-HQ2* is connected by downstream FortiGate (HQ2) VPN interface *To-HQ1* with VPN icon in the middle.

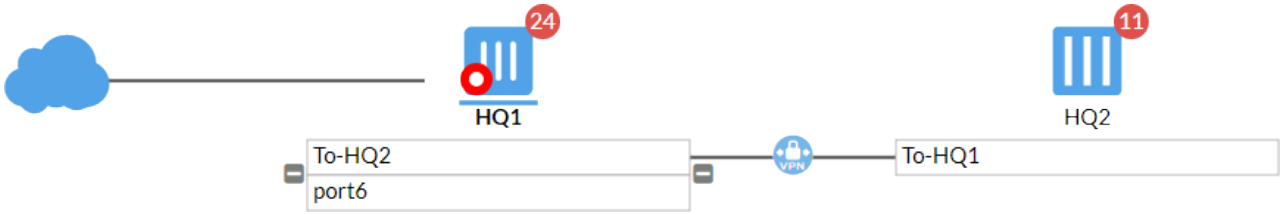

To run diagnose commands:

1. Run the `diagnose sys csf authorization pending-list` command in the root FortiGate (HQ1) to show the downstream FortiGate pending for root FortiGate authorization:

```
HQ1 # diagnose sys csf authorization pending-list
Serial                  IP Address      HA-Members
Path
--------------------------------------------------------------------------------
FG101ETK18002187        0.0.0.0
FG3H1E5818900718:FG101ETK18002187
```

2. Run the `diagnose sys csf downstream` command in the root FortiGate (HQ1) to show the downstream FortiGate (HQ2) after it joins Security Fabric:

```
HQ1 # diagnose sys csf downstream
 1:     FG101ETK18002187 (10.10.10.3) Management-IP: 0.0.0.0 Management-port:0 parent:
FG3H1E5818900718
        path:FG3H1E5818900718:FG101ETK18002187
        data received: Y downstream intf:To-HQ1 upstream intf:To-HQ2 admin-port:443
        authorizer:FG3H1E5818900718
```


3. Run the `diagnose sys csf upstream` command in the downstream FortiGate (HQ2) to show the root FortiGate (HQ1) after the downstream FortiGate joins Security Fabric:

```
HQ2 # diagnose sys csf upstream
Upstream Information:
Serial Number:FG3H1E5818900718
IP:10.10.10.1
Connecting interface:To-HQ1
Connection status:Authorized
```

Leveraging LLDP to simplify Security Fabric negotiation

This feature enables LLDP reception on WAN interfaces, and prompts FortiGates that are joining the Security Fabric if the upstream FortiGate asks.


- If an interface's role is undefined, LLDP reception and transmission inherit settings from the VDOM.
- If an interface's role is WAN, LLDP reception is enabled.
- If an interface's role is LAN, LLDP transmission is enabled.

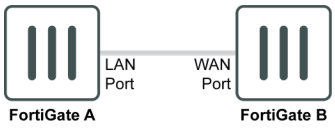

When FortiGate B's WAN interface detects that FortiGate A's LAN interface is immediately upstream (through the default gateway), and FortiGate A has Security Fabric enabled, FortiGate B will show a notification on the GUI asking to join the Security Fabric.

To configure LLDP reception and join a Security Fabric:

1. Go To *Network* > *Interfaces*.
2. Configure an interface:
   - If the interface's role is undefined, under *Administrative Access*, set *Receive LLDP* and *Transmit LLDP* to *Use VDOM Setting*.

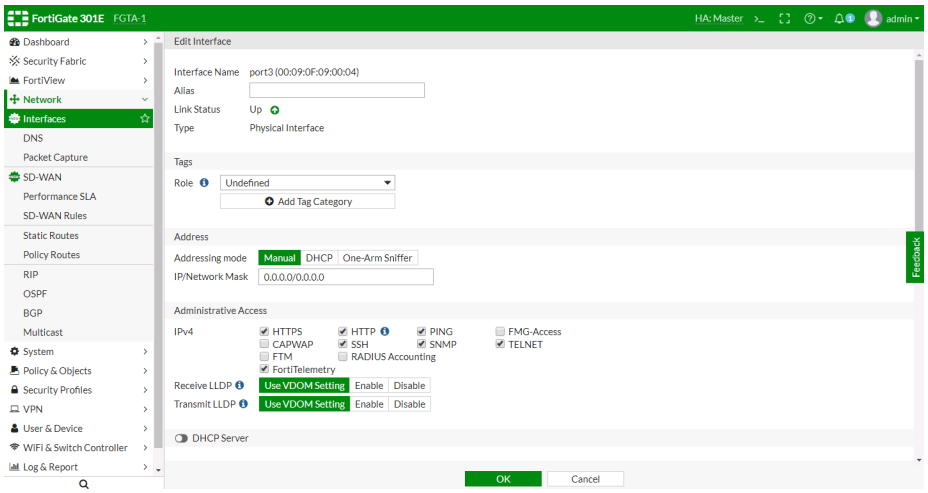


Using the CLI:

```
config system interface
    edit "port3"
        set lldp-reception vdom
        set lldp-transmission vdom
```

```
            set role undefined
            ...
        next
    end
```


- If the interface's role is WAN, under *Administrative Access*, set *Receive LLDP* to *Enable* and *Transmit LLDP* to *Use VDOM Setting*.

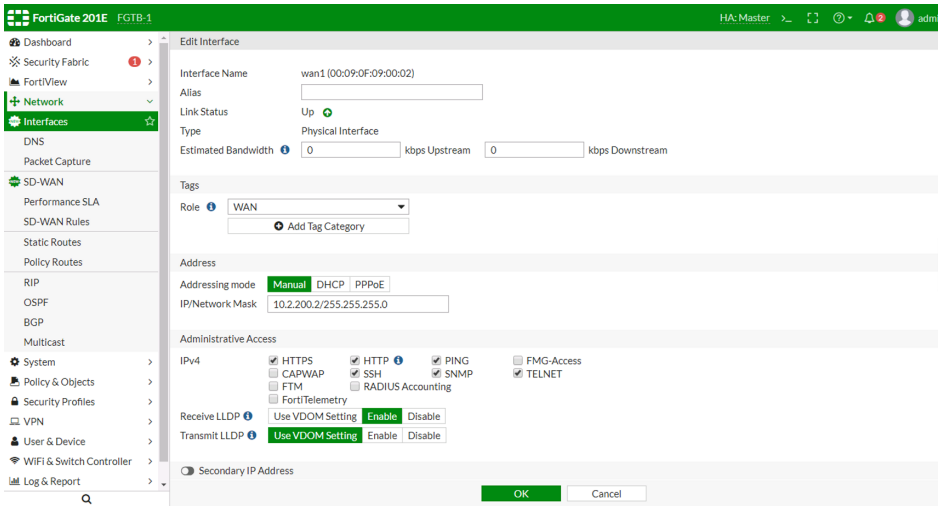

Using the CLI:

```
config system interface
    edit "wan1"
        set lldp-reception enable
        set lldp-transmission vdom
        set role wan
        ...
    next
end
```


- If the interface's role is LAN, under *Administrative Access*, set *Receive LLDP* to *Use VDOM Setting* and *Transmit LLDP* to *Enable*.

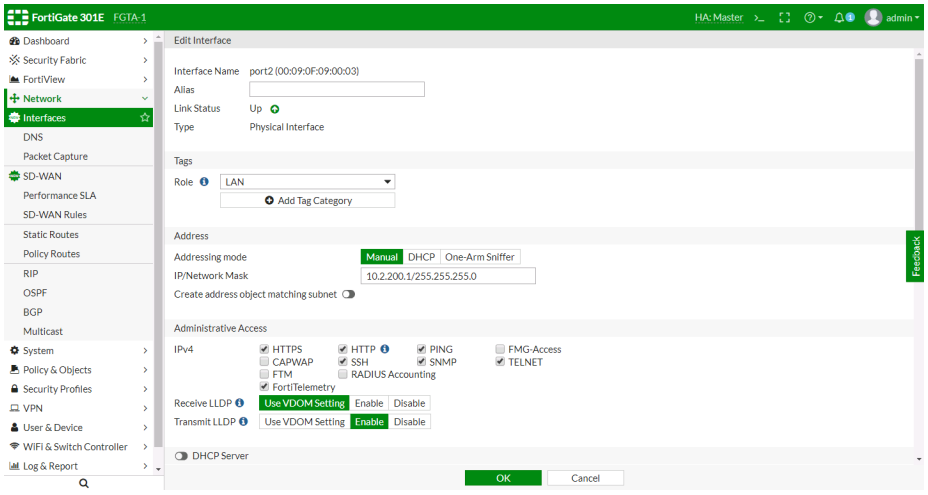


Using the CLI:

```
config system interface
    edit "port2"
        set lldp-reception vdom
        set lldp-transmission enable
        set role lan
        ...
    next
end
```

A notification will be shown on FortiGate B.

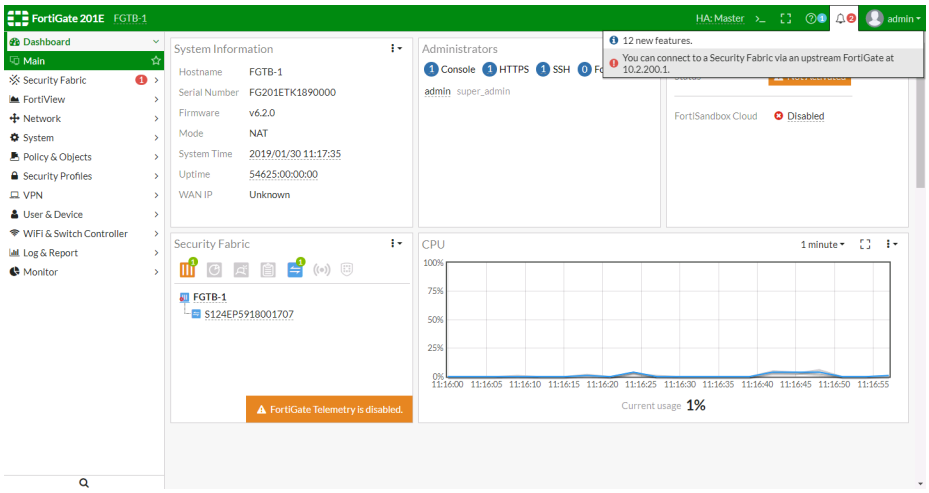

3. Click the notification. The *Security Fabric Settings* page opens with all the required settings automatically configured.

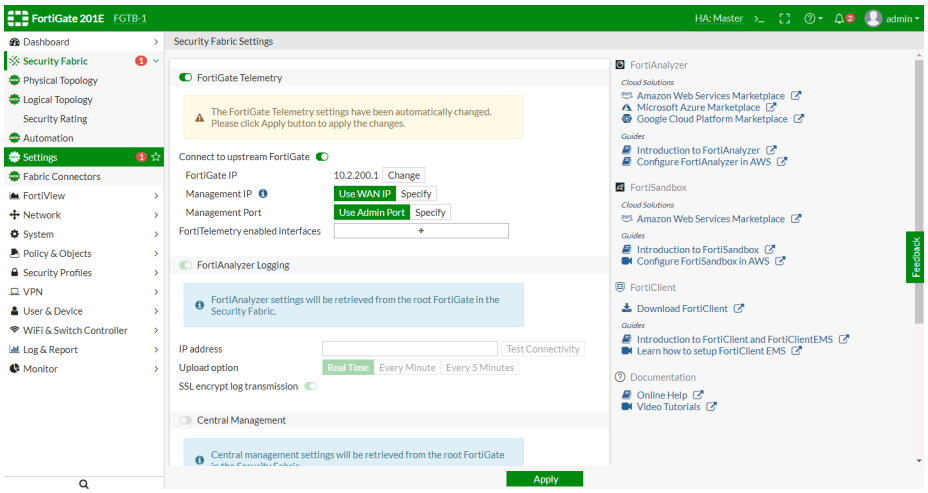

4. Click *Apply* to apply the settings, or use the following CLI commands:

```
config system csf
    set status enable
    set upstream-ip 10.2.200.1
end
```

Configuring the Security Fabric with SAML

Security Assertion Markup Language (SAML) is an open standard for exchanging authentication and authorization data between one Identity Provider (IdP) and one or more Service Providers (SP). Both parties exchange messages using the XML protocol as transport. FortiGate firewall devices can be configured as IdPs or SPs.

When the Security Fabric is enabled, you can configure the root FortiGate as the IdP. You can also configure downstream FortiGates to be automatically configured as SPs, with all links required for SAML communication, when added to the Security Fabric. Administrators must still be authorized on each device. Credentials are verified by the root FortiGate, and login credentials are shared between devices. Once authorized, an administrator can move between fabric devices without logging in again.

Optionally, the downstream FortiGate can also be manually configured as an SP, and then linked to the root FortiGate.

The authentication service is provided by the root FortiGate using local system admin accounts for authentication. Any of the administrator account types can be used for SAML log in. After successful authentication, the administrator logs in to the first downstream FortiGate SP, and can then connect to other downstream FortiGates that have the SSO account properly configured, without needing to provide credentials again, as long as admins use the same browser session. In summary, the root FortiGate IdP performs SAML SSO authentication, and individual device administrators define authorization on FortiGate SPs by using security profiles.

Configuring single-sign-on in the Security Fabric

SAML SSO enables a single FortiGate device to act as the identify provider (IdP), while other FortiGate devices act as service providers (SP) and redirect logins to the IdP.



Only the root FortiGate can be the identity provider (IdP). The downstream FortiGates can be configured as service providers (SP).

The process is as follows:

1. Configuring the root FortiGate as the IdP on page 121
2. Configuring a downstream FortiGate as an SP on page 122
3. Configuring certificates for SAML SSO on page 124
4. Verifying the single-sign-on configuration on page 125


You can also use the CLI. See CLI commands for SAML SSO on page 126.

Configuring the root FortiGate as the IdP

To configure the root FortiGate as the IdP:

1. Log in to the root FortiGate.
2. Go to *Security Fabric* > *Settings*.
3. In the *FortiGate Telemetry* section, enable *SAML Single Sign-On*. The *Mode* field is automatically populated as *Identity Provider (IdP)*.
4. Enter an IP address in the *Management IP/FQDN* box.

5. Enter a management port in the *Management Port* box.
   The *Management IP/FQDN* will be used by the SPs to redirect the login request. The *Management IP/FQDN* and *Management Port* must be reachable from the user's device.
6. Select the *IdP certificate*.
7. Click *Apply*.

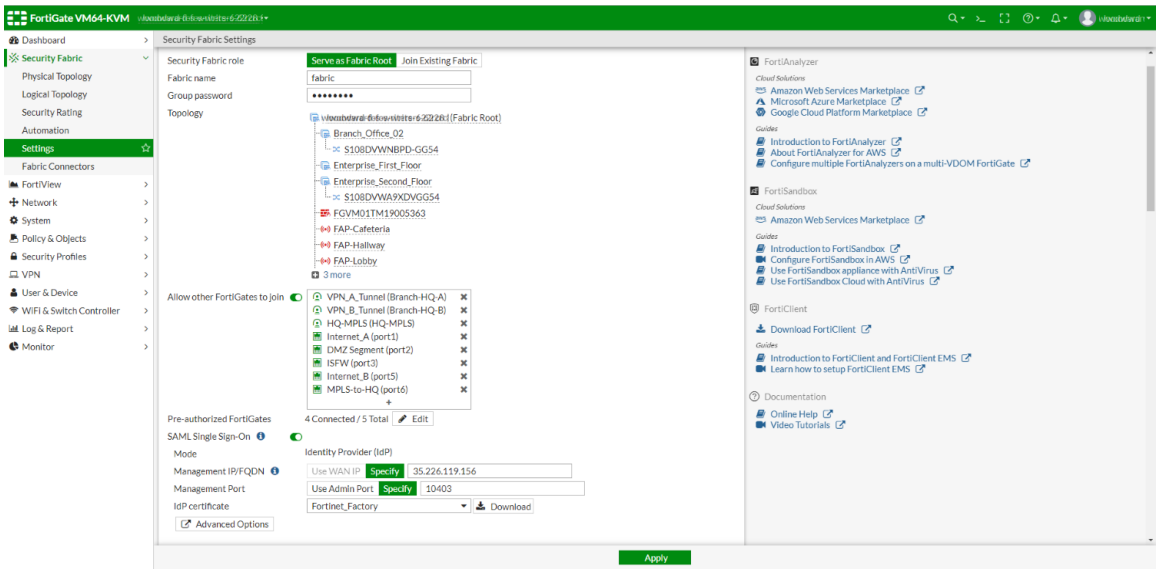

Configuring a downstream FortiGate as an SP

There are two ways to configure the downstream FortiGate:

- From the root FortiGate
- From within the downstream device




An SP must be a member of the Security Fabric before you configure it.

To configure the downstream FortiGate from the root FortiGate:


1. Log in to the root FortiGate.
2. Go to *Security Fabric* > *Settings* and locate the *Topology* section.

3. Hover over a FortiGate and click *Configure*.

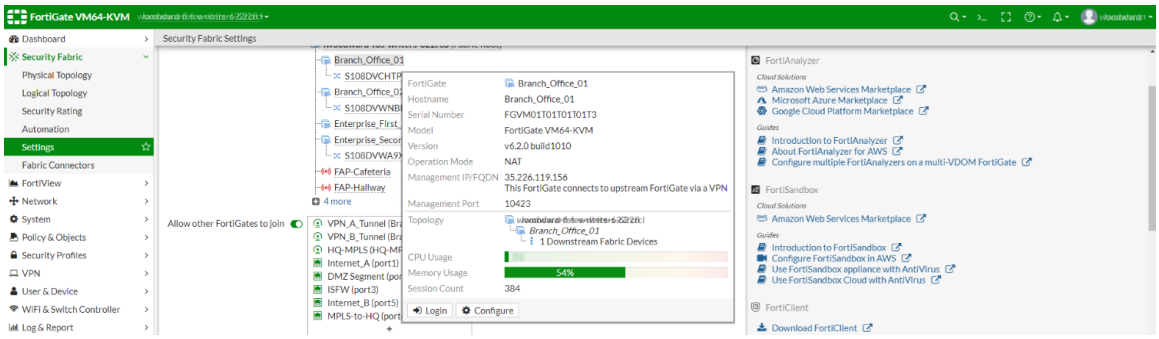

The *Configure* pane opens.

4. Enable *SAML Single Sign-On*. The *Mode* field is automatically populated as *Service Provider (SP)*.
5. Enter an IP address in the *Management IP/FQDN* box.
6. Enter a management port in the *Management Port* box.
   The *Management IP/FQDN* will be used by the IdP and so other SPs can redirect to each other. The *Management Port* must be reachable from the user's device.
7. Select a *Default login page* option.
8. Select one of the following *Default admin profile* types: *prof_admin*, *super_admin*, or *super_admin_readonly*. The *no_access_admin profile* is set as the default.
9. Click *OK*.

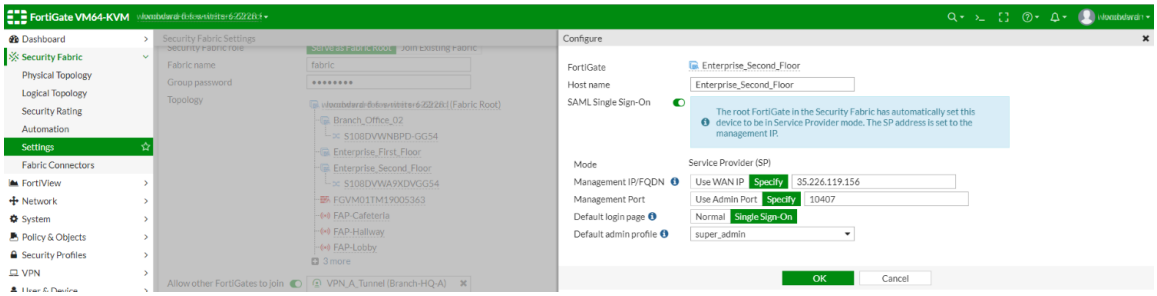


To configure the downstream FortiGate within the device:

1. Log in to the downstream FortiGate.
2. Go to *Security Fabric* > *Settings*.
3. In the *FortiGate Telemetry* section, enable *SAML Single Sign-On*. The *Mode* field is automatically populated as *Service Provider (SP)*.
4. Enter an IP address in the *Management IP/FQDN* box.
5. Enter a management port in the *Management Port* box.
   The *Management IP/FQDN* will be used by the IdP and so other SPs can redirect to each other. The *Management Port* must be reachable from the user's device.
6. Select a *Default login page* option.
7. Select one of the following *Default admin profile* types: *prof_admin*, *super_admin*, or *super_admin_readonly*. The *no_access_admin profile* is set as the default.
8. Click *OK*.

Configuring certificates for SAML SSO

Because communication between the root FortiGate IdP and FortiGate SPs is secured, you must select a local server certificate in the *IdP certificate* option on the root FortiGate. When downstream SPs join the IdP (root FortiGate), the SP automatically obtains the certificate.


In the following SP example, the *IdP certificate* displays *REMOTE_Cert_1*, which is the root server certificate for the IdP:

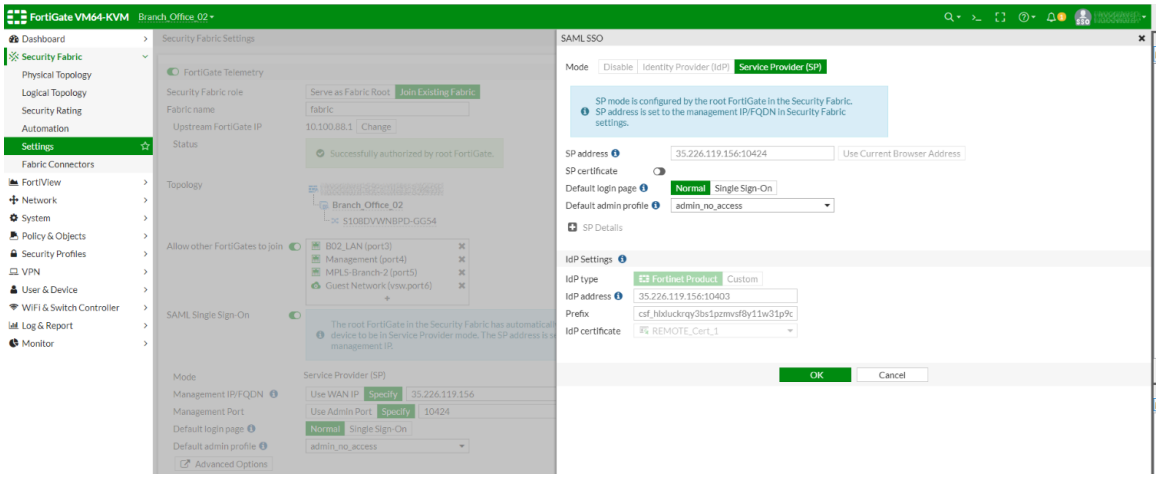

It is possible to manually import a certificate from an SP to the IdP so it can be used for authentication.


To manually import an SP certificate to an IdP:

1. Add the certificate:
   a. On the SP, go to *Security Fabric* > *Settings*.
   b. In the *FortiGate Telemetry* section, click *Advanced Options*. The *SAML SSO* pane opens.
   c. Enable *SP certificate* and select a certificate from the dropdown box.
   d. Click *Download*. The certificate is downloaded on the local file system.
   e. Click *OK*.

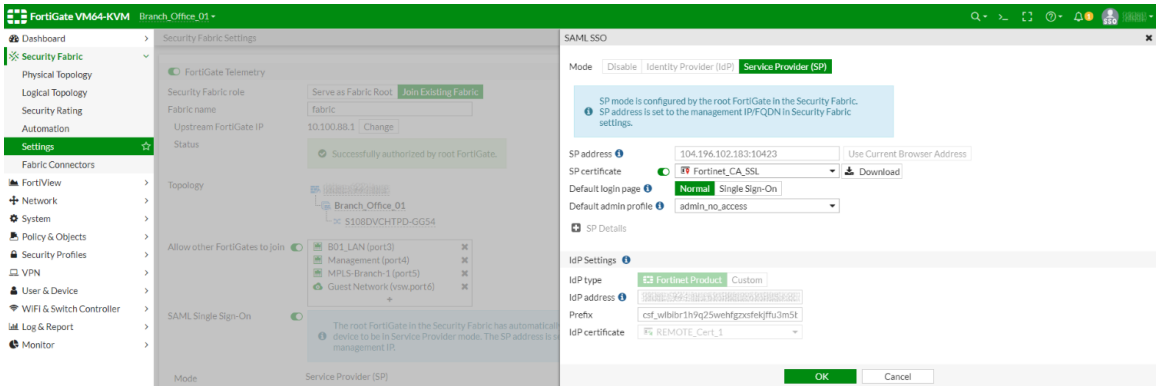

2. Import the certificate:
   a. On the IdP, go to *Security Fabric* > *Settings*.
   b. In the *FortiGate Telemetry* section, click *Advanced Options*. The *SAML SSO* pane opens.
   c. In the *Service Providers* table, select the SP from step 1 and click *Edit*.

d. Enable *SP certificate* and in the dropdown box, click *Import*.

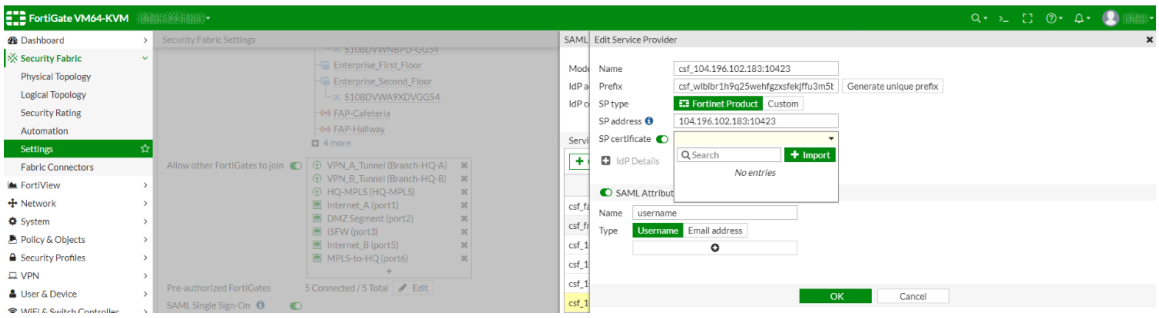

The *Upload Remote Certificate* window opens.

e. Click *Upload* and select the certificate downloaded in step 1.

f. Click *OK*. The certificate is imported.

g. Click *OK*.

h. In the *IdP certificate* list, select the certificate that you imported.


i. Click *OK*.

Verifying the single-sign-on configuration


After you have logged in to a Security Fabric member using SSO, you can navigate between any Security Fabric member with SSO configured.

To navigate between Security Fabric members:

1. Log in to a Security Fabric member that is using SSO.
2. In the top banner, click the name of the device you are logged in to. A list of Security Fabric members displays.

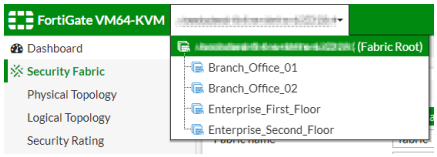


3. Click a Security Fabric member. The login page appears.
4. Select the option to log in *via Single-Sign-On*.

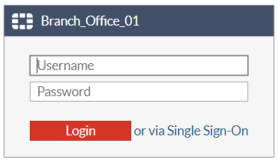

You are now logged in to the Security Fabric member with SSO. The letters "SSO" also display beside the user name in the top banner.

5. Go to *System* > *Administrators* > *Single-Sign-On Administrator* to view the list of SSO admins created.

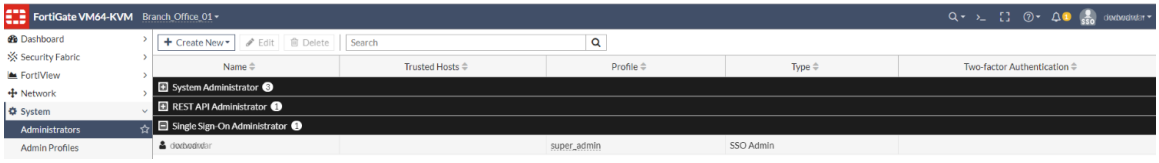

CLI commands for SAML SSO

To enter a question mark (?) or a tab, Ctrl + V must be entered first. Question marks and tabs cannot be typed or copied into the CLI Console or some SSH clients.

To configure the IdP:

```
config system saml
    set status enable
    set role identity-provider
    set cert "Fortinet_Factory"
    set server-address "172.16.106.74"
    config service-providers
        edit "csf_172.16.106.74:12443"
            set prefix "csf_ngczjwqxujfsbhgr9ivhehwu37fml20"
            set sp-entity-id "http://172.16.106.74/metadata/"
            set sp-single-sign-on-url "https://172.16.106.74/saml/?acs"
            set sp-single-logout-url "https://172.16.106.74/saml/?sls"
            set sp-portal-url "https://172.16.106.74/saml/login/"
            config assertion-attributes
                edit "username"
                next
                edit "tdoc@fortinet.com"
                    set type email
                next
            end
        next
    end
end
```

To configure an SP:

```
config system saml
    set status enable
    set cert "Fortinet_Factory"
    set idp-entity-id "http://172.16.106.74/saml-idp/csf_
ngczjwqxujfsbhgr9ivhehwu37fml20/metadata/"
    set idp-single-sign-on-url "https://172.16.106.74/csf_
ngczjwqxujfsbhgr9ivhehwu37fml20/login/"
    set idp-single-logout-url "https://172.16.106.74/saml-idp/csf_
ngczjwqxujfsbhgr9ivhehwu37fml20/logout/"
    set idp-cert "REMOTE_Cert_1"
    set server-address "172.16.106.74:12443"
end
```

To configure an SSO administrator:

```
config system sso-admin
    edit "SSO-admin-name"
        set accprofile <SSO admin user access profile>
        set vdom <Virtual domain(s) that the administrator can access>
    next
end
```


SAML SSO with pre-authorized FortiGates

You can set up SAML SSO authentication in a Security Fabric environment by starting with a root FortiGate that has one or more pre-authorized FortiGates.

After the initial configuration, you can add more downstream FortiGates to the Security Fabric, and they are automatically configured with default values for a service provider.

To set up basic SAML SSO for the Security Fabric:

1. Log in to the root FortiGate of the Security Fabric.
2. Go to *Security Fabric* > *Settings*, and join two pre-authorized FortiGates to the root FortiGate.

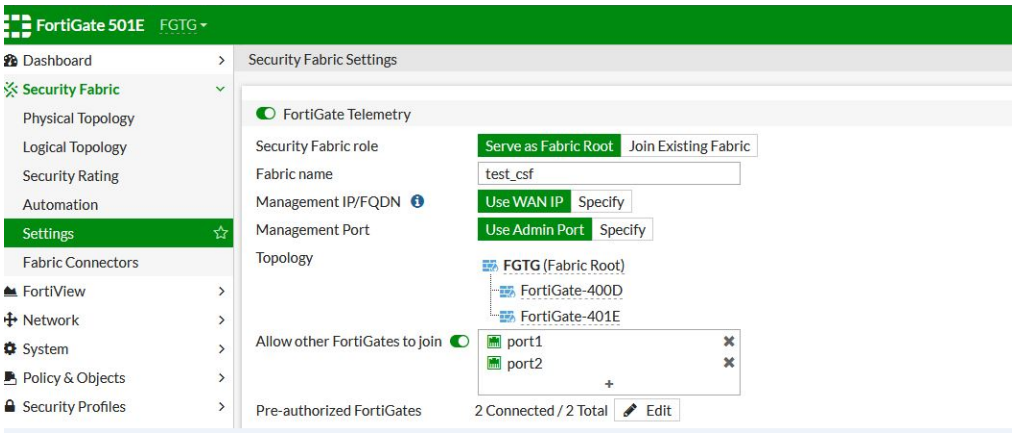

3. Configure the IdP (see Configuring the root FortiGate as the IdP on page 121).
4. Configure the SPs (see Configuring a downstream FortiGate as an SP on page 122).

Navigating between Security Fabric members with SSO


After you have logged in to a Security Fabric member by using SSO, you can navigate between any Security Fabric member with SSO configured. This can be done using the Security Fabric members dropdown menu or by logging in to a FortiGate SP from the root FortiGate IdP.

Security Fabric members dropdown

The Security Fabric members dropdown menu allows you to easily switch between all FortiGate devices that are connected to the Security Fabric. You can also use this menu to customize a FortiGate in the Security Fabric.

To navigate between Security Fabric members:


1. Log in to a Security Fabric member by using SSO.
2. In the top banner, click the name of the device you are logged into with SSO.
   A list of Security Fabric members is displayed.

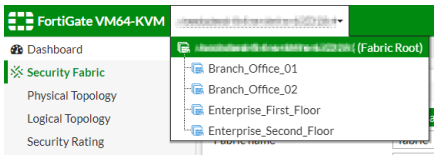

3. Click the Security Fabric member.
   You are logged in to the Security Fabric member without further authentication.

To customize a FortiGate in the Security Fabric:

1. In the Security Fabric members dropdown menu, hover the cursor over a FortiGate so the tooltip is shown.
2. Click *Configure*. The *Configure* pane opens.

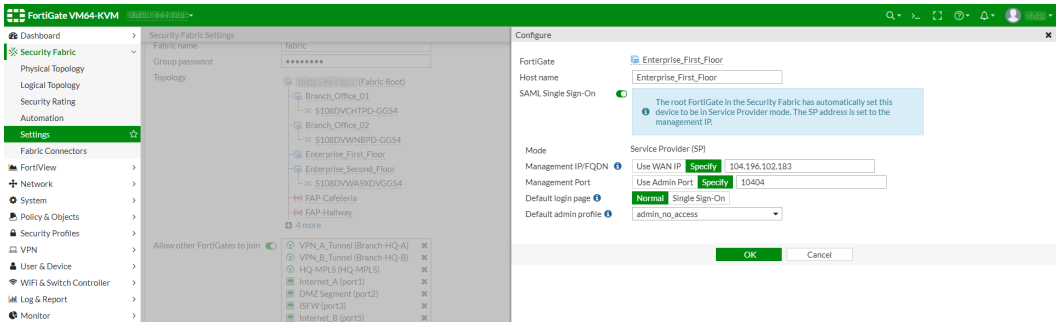


3. Edit the settings as required.
4. Click *OK*.

Logging in to an SP from the root IdP

The following example describes how to log in to a root FortiGate IdP, and navigate to other FortiGate SPs in the Security Fabric without further authentication. The local administrator account is named *test3*. The local administrator account must also be available as an SSO administrator account on all downstream FortiGate SPs. Different tabs of the same browser are used to log in to the various FortiGates.


To log in to a FortiGate SP from a root FortiGate IdP:

1. Log in to the root FortiGate IdP by using the local administrator account.
   In this example, the local administrator account is named *test3*.
2. Go to *Security Fabric* > *Settings*.
3. In the *Topology* area, click one of the downstream FortiGate SPs, and select *Login to <name of FortiGate>*.

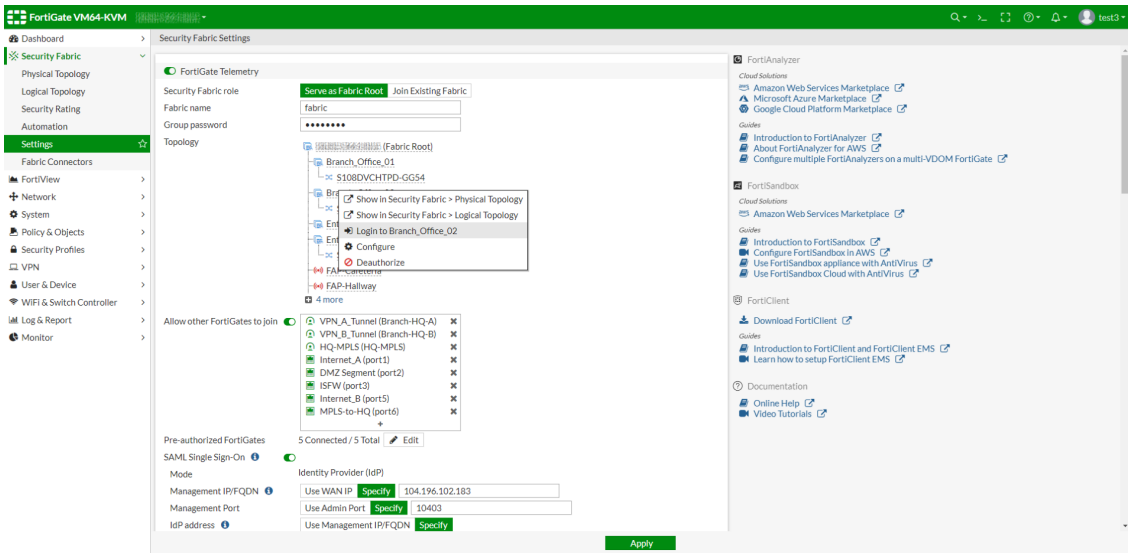



The login screen is displayed.

4. In the login screen, select *Single Sign-On*.
   By using cookies in your local browser for the already-authenticated SSO administrator, FortiGate logs you in to the downstream FortiGate SP as the SSO administrator. In this example, the SSO administrator name is *test3*.

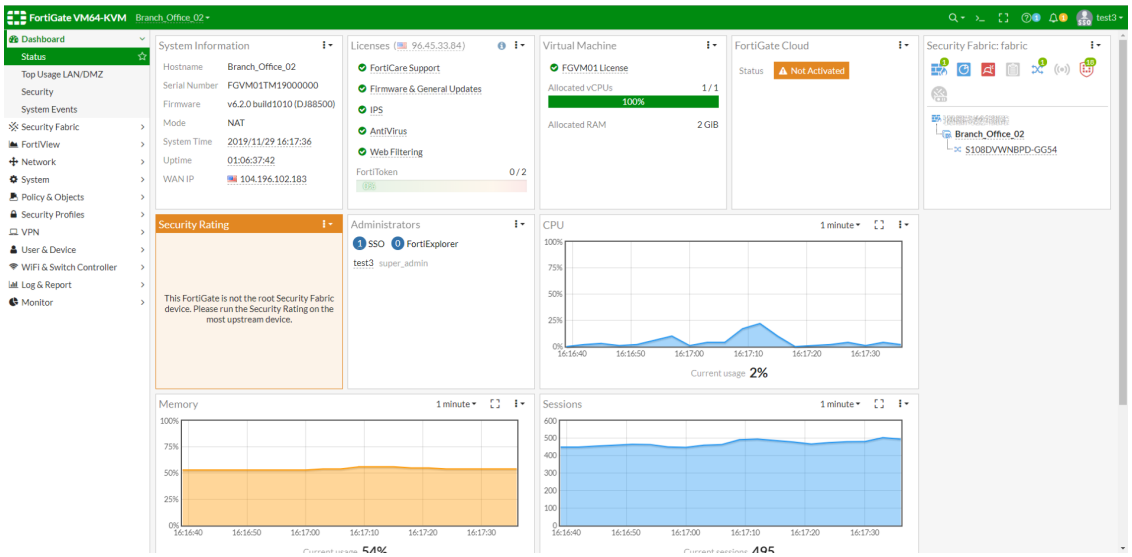

5. While still logged into the root FortiGate IdP in your browser, go to the browser tab for the root FortiGate IdP, and log in to another FortiGate SP that is displayed on the *Security Fabric* pane in the GUI.

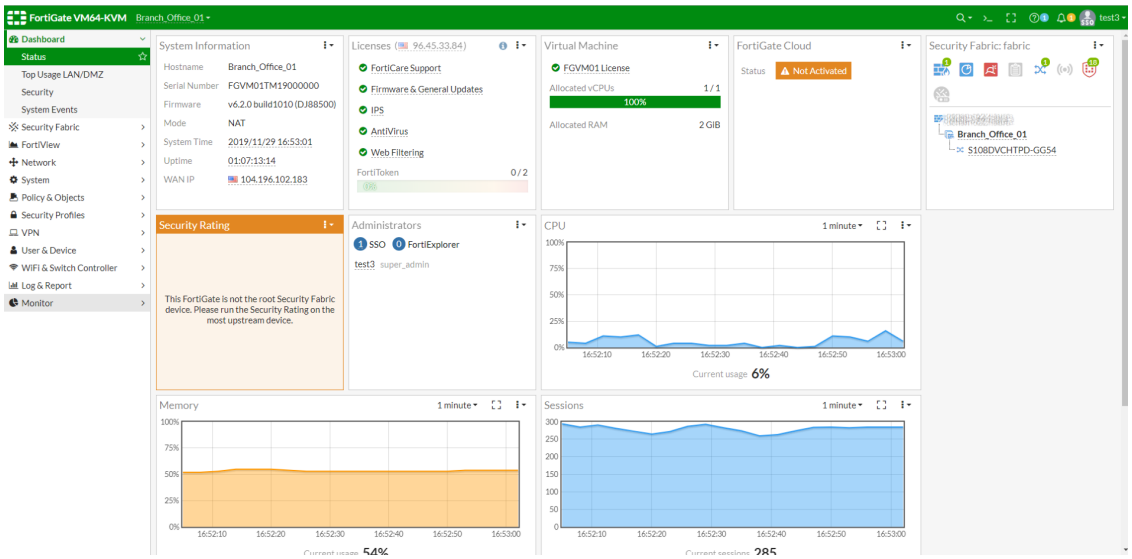

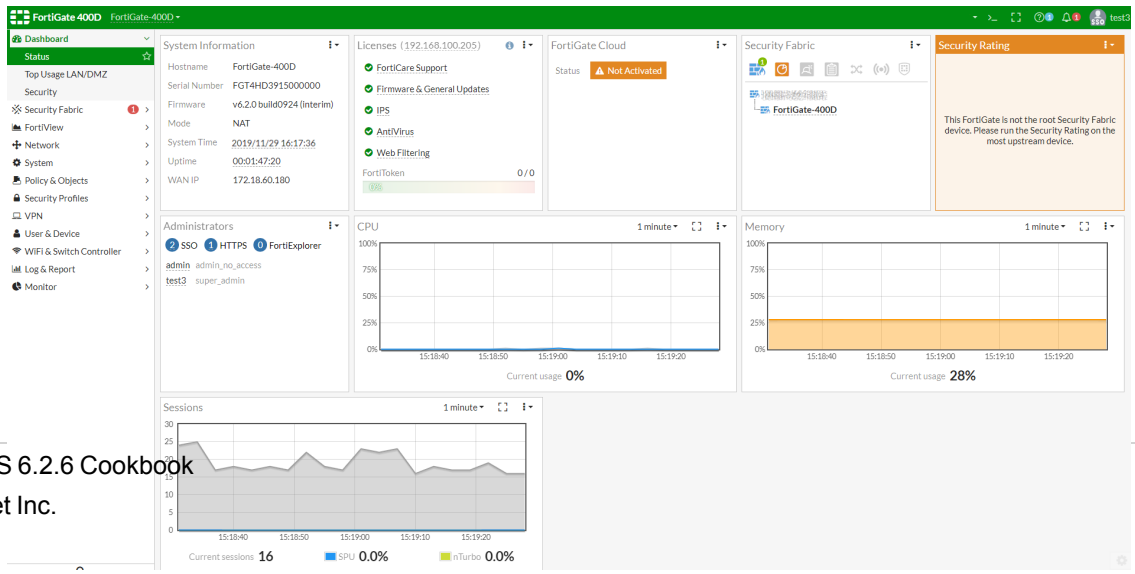

SAML SSO login uses *SAML_IDP* session cookies of already authenticated admin users in your local browser cache to send to the root FortiGate IdP for authentication. If your browser cache is manually cleared, or you close your browser, you must authenticate again.



It is possible to log in to one downstream FortiGate SP in a Security Fabric, and then open another tab in your browser to connect to another FortiGate SP that is not a member of the Security Fabric.


This is useful in cases where the SSO administrator and the local system administrator on the FortiGate SP both have the same login name, but are two different entities.

Advanced option - FortiGate SP changes

From a root FortiGate IdP, you can edit each of the FortiGate SPs. For example, you can edit a FortiGate SP to generate a new prefix, or you can add or modify SAML attributes. When you generate a new prefix value, it is propagated to the respective downstream FortiGates.

To edit an SP from the root FortiGate (IdP):

1. Go to *Security Fabric* > *Settings*.
2. In the *FortiGate Telemetry* section, click *Advanced Options*. The *SAML SSO* pane opens.
3. In the *Service Providers* table, select a device, and click *Edit*. The *Edit Service Provider* pane opens.
4. Edit the settings as needed.
5. Click *OK*.

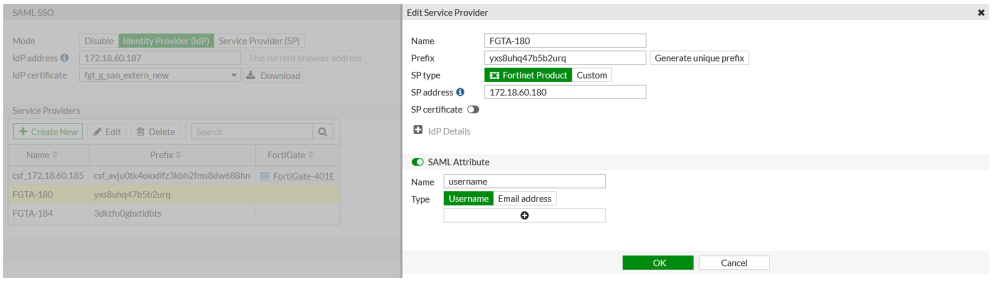


Advanced option - unique SAML attribute types

The default SAML attribute type is *username*. When the attribute type is set to *username*, SSO administrator accounts created on FortiGate SPs use the login username that is provided by the user for authentication on the root FortiGate IdP.


Because user names might not be unique, cases can occur where the user name is the same for the SSO administrator and the local administrator on the FortiGate SP. As a result, you might be unable to distinguish between actions taken by the local administrator and the SSO administrator on the FortiGate SP when looking at the system log. By using a unique SAML attribute type, such as an email address, you can create unique user names to better track what actions were taken by each administrator.

To configure a unique SAML attribute using the GUI:

1. On the root FortiGate (IdP), assign a unique email address to local administrator.
   In this example, the local administrator name is *test3*.
   a. Go to *System* > *Administrators*, and expand the list of local users.
   b. Select the local user, and click *Edit*.
   c. In the *Type* field, select *Match a user on a remote server group*.
   d. In the *Remote User Group* field, select a group.
   e. In the *Email Address* field, enter the email address.
   f. Click *OK*.

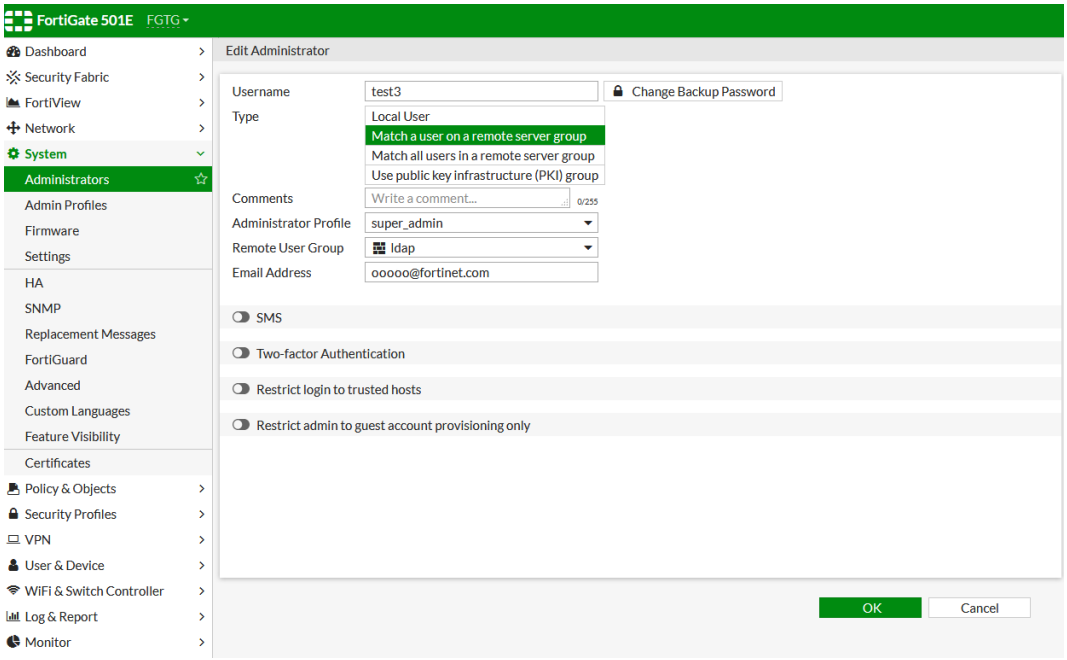


2. On the root FortiGate (IdP), update the SAML configuration:
   a. Go to *Security Fabric* > *Settings*.
   b. In the *FortiGate Telemetry* section, click *Advanced Options*. The *SAML SSO* pane opens.
   c. In the *Service Providers* table, select the FortiGate, and click *Edit*. The *Edit Service Provider* pane opens.
   d. For *SP type*, select *Custom*.
   e. In the *SAML Attribute* section for *Type*, select *Email address*.
   f. Beside *Type*, select *Email address*.
   g. Click *OK*.

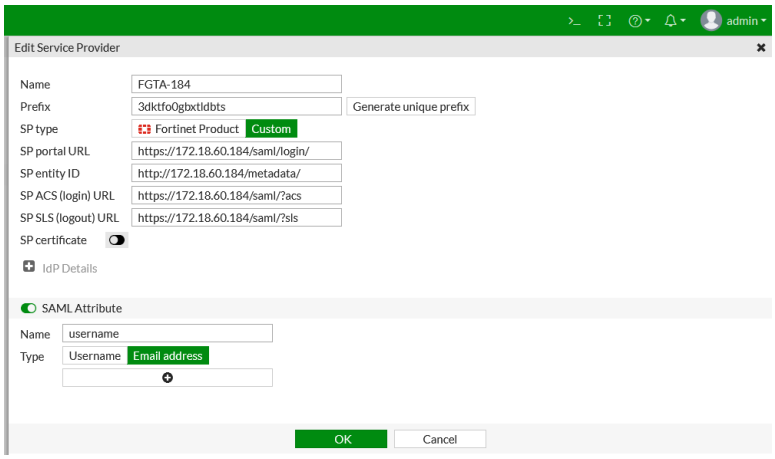

After the administrator (test3) logs in to the FortiGate SP for the first time, SAML authentication occurs on FortiGate SP. A new SSO administrator account is created, and the account name is now the email address instead of the login name (test3).

To view the new SSO administrator account:


1. In the SP, go to *System* > *Administrators*, and expand the list of SSO administrators.
   The email address (*ooooo@fortinet.com*) is listed as the account name:

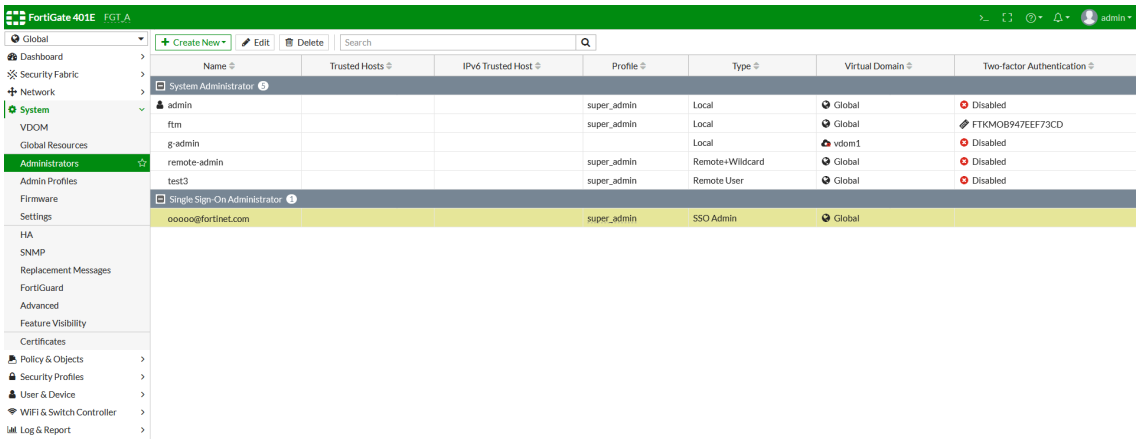

   If the SAML attribute had been set to the default setting of *username*, the user name for the SSO administrator account would have been (*test3*).

To view the SSO administrator activity in the log files:

1. In the SP, go to *Log & Report* > *Events*.
   Because the SAML attribute is set to *Custom*, the SSO administrator account *ooooo@fortinet.com* is used as the user name on the FortiGate SP, and it appears in the log files:

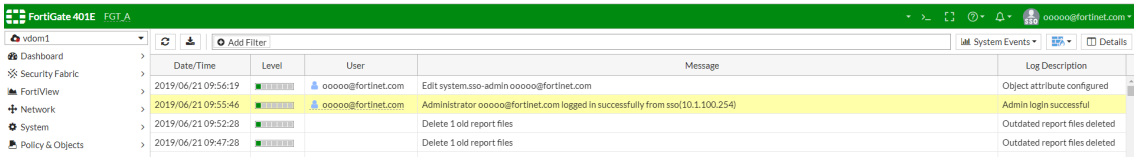

To configure a unique SAML attribute using the CLI:

```
config system saml
   set status enable
   set role identity-provider
   set cert "fgt_g_san_extern_new"
   set server-address "172.18.60.187"
   config service-providers
      edit "csf_172.18.60.185"
         set prefix "csf_avju0tk4oiodifz3kbh2fms8dw688hn"
         set sp-entity-id "http://172.18.60.185/metadata/"
         set sp-single-sign-on-url "https://172.18.60.185/saml/?acs"
         set sp-single-logout-url "https://172.18.60.185/saml/?sls"
         set sp-portal-url "https://172.18.60.185/saml/login/"
         config assertion-attributes
            edit "username"
            next
         end
      next
      edit "FGTA-180"
         set prefix "yxs8uhq47b5b2urq"
         set sp-entity-id "http://172.18.60.180/metadata/"
         set sp-single-sign-on-url "https://172.18.60.180/saml/?acs"
         set sp-single-logout-url "https://172.18.60.180/saml/?sls"
         set sp-portal-url "https://172.18.60.180/saml/login/"
         config assertion-attributes
            edit "username"
            next
         end
      next
      edit "FGTA-184"
         set prefix "3dktfo0gbxtldbts"
         set sp-entity-id "http://172.18.60.184/metadata/"
         set sp-single-sign-on-url "https://172.18.60.184/saml/?acs"
         set sp-single-logout-url "https://172.18.60.184/saml/?sls"
         set sp-portal-url "https://172.18.60.184/saml/login/"
         config assertion-attributes
            edit "username"
               set type email
            next
         end
      next
   end
end
```


The `csf_172.18.60.185` service provider was automatically added when the FortiGate SP 172.18.60.185 joined the root FortiGate IdP in the Security Fabric.

All `sp-*` options, such as `sp-portal-url`, are set with default values when a service provider is created, but can be modified using the CLI or GUI.

Security rating

The security rating analyzes your Security Fabric deployment, identifies potential vulnerabilities, highlights best practices that can be used to improve the security and performance of your network, and calculates Security Fabric scores.

To view the security rating and run a security rating check, go to *Security Fabric* > *Security Rating* on the root FortiGate. Click *Run Now* to run a security rating check. Checks can also be run automatically every four hours.

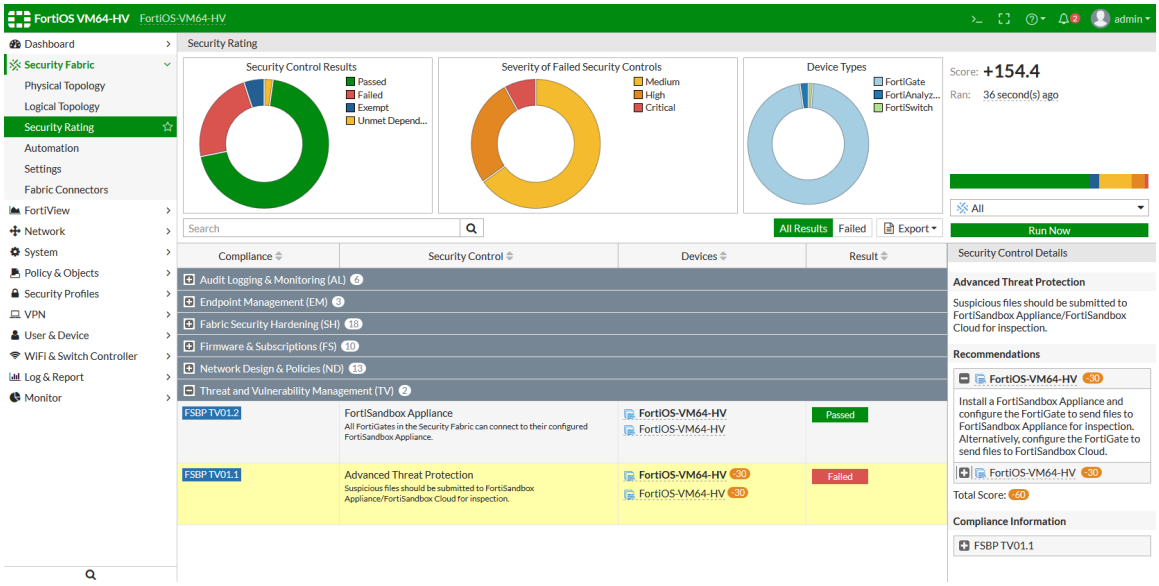

The security rating check uses real-time monitoring to analyze the network based on the current network configuration. When the check is complete, the results table shows a list of the checks that where performed, including:

- The name and a description of the check.
- The device or devices that the check was performed on.
- The impact of the check on the overall security score.
- The check results—whether it passed or failed.

The list can be searched, filtered to show all results or only failed checks, and exported to a CSV or JSON file. Clicking a color or legend name in the donut charts will also filter the results.

Hovering the cursor over a check result score will show the breakdown of how that score was calculated.

Selecting a specific check from the list shows details about that check in the *Security Control Details* pane, including recommendations and compliance information. For failed checks, this includes a description of what remediation actions could be taken. For recommendations that support *Easy Apply*, the device will have an *EZ* symbol next to its name, and the remediation action can be taken automatically by clicking *Apply* under the recommendations. See Comprehensive report extensions on page 136 for more information about security rating reports.

For more information about security ratings, including details about each check that is performed, go to Security Best Practices & Security Rating Feature.

Security rating licenses are required to run security rating checks across all the devices in the Security Fabric. It also allows ratings scores to be submitted to and received from FortiGuard for ranking networks by percentile.

See https://www.fortinet.com/support/support-services/fortiguard-security-subscriptions/security-rating.html for information.

Automatic security rating checks

Security rating checks can be scheduled to run automatically every four hours.

To enable automatic security checks using the CLI:

```
config system global
    security-rating-run-on-schedule {enable | disable}
end
```

Opt out of ranking


Security rating scores can be submitted to FortiGuard for comparison with other organizations' scores, allowing a percentile score to be calculated. If you opt out of submitting your score, only an absolute score will be available.

To opt out of submitting the score using the CLI:

```
config system global
    set security-rating-result-submission {enable | disable}
end
```

Logging the security rating

The results of past security checks are available in *Log & Report > Events* and selecting *Security Rating Events* from the event type dropdown list.

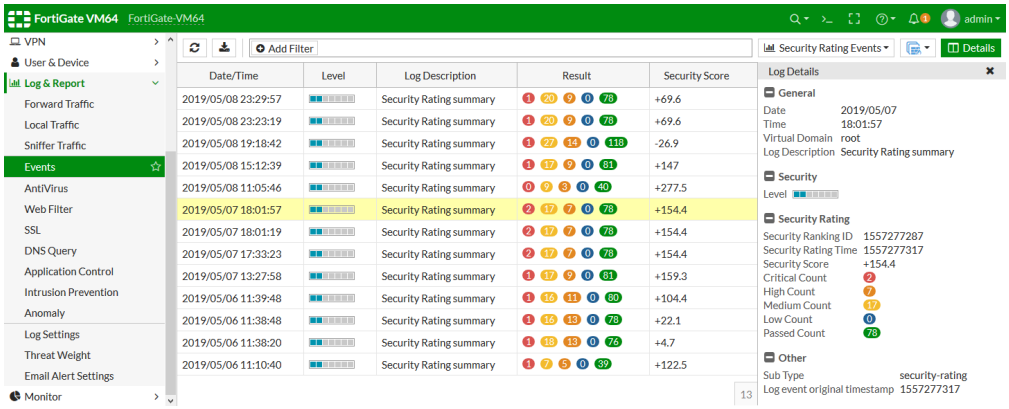

An event filter subtype can be created for the Security Fabric rating so that event logs are created on the root FortiGate that summarize the results of a check, and show detailed information for the individual tests.

To configure security rating logging using the CLI:

```
config log eventfilter
    set security-rating enable
end
```

Security Fabric score

The Security Fabric score is calculated when a security rating check is run, based on the severity level of the checks that are passed or failed. A higher scores represents a more secure network. Points are added for passed checks and removed for failed checks.

Severity level	Weight (points)
Critical	50
High	25
Medium	10
Low	5

To calculate the number of points awarded to a device for a passed check, the following equation is used:

$$\text{score} = \frac{\text{<severity level weight>}}{\text{<\# of FortiGates>}} \times \text{<secure FortiGate multiplier>}$$

The secure FortiGate multiplier is determined using logarithms and the number of FortiGate devices in the Security Fabric.

For example, if there are four FortiGate devices in the Security Fabric that all pass the compatible firmware check, the score for each FortiGate device is calculated with the following equation:

$$\frac{50}{4} \times 1.292 = 16.15 \text{ points}$$

All of the FortiGate devices in the Security Fabric must pass the check in order to receive the points. If any one of the FortiGate devices fails a check, the devices that passed are not awarded any points. For the device that failed the check, the following equation is used to calculated the number of points that are lost:

$$\text{score} = \text{<severity level weight>} \times \text{<secure FortiGate multiplier>}$$

For example, if the check finds two critical FortiClient vulnerabilities, the score is calculated with the following equation:

$$-50 \times 2 = -100 \text{ points}$$

Scores are not affected by checks that do not apply to your network. For example, if there are no FortiAP devices in the Security Fabric, no points will be added or subtracted for the FortiAP firmware version check.


Comprehensive report extensions

Security rating reports include the following:


- Summary charts along the top. You can click a chart for easy filtering.
- Grouping common rating checks across multiple devices in a single entry.
- The right frame summarizes all information for the single check.
- You can apply recommendations from within the right frame (*Easy Apply*).
- You can choose to show full results or subsets, such as failed only.

Sample report views


The default view for the *Security Rating* report:

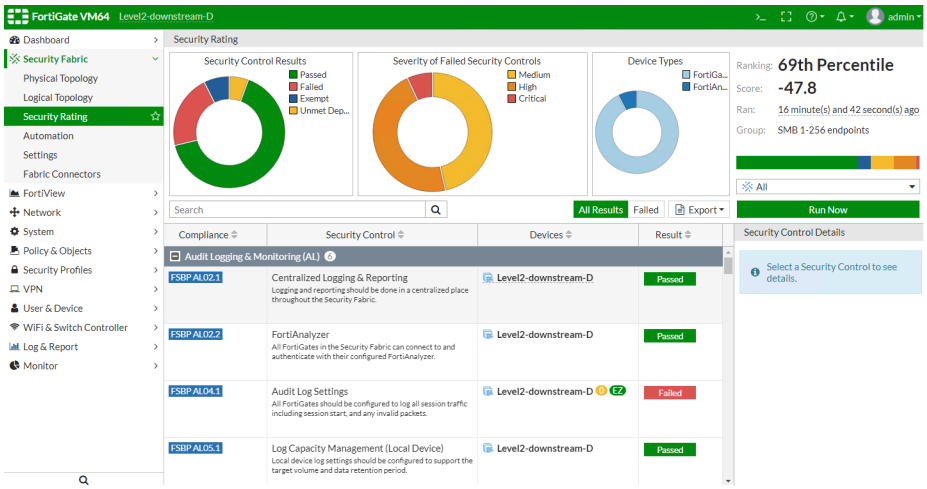


Security Rating report with a specific test selected:

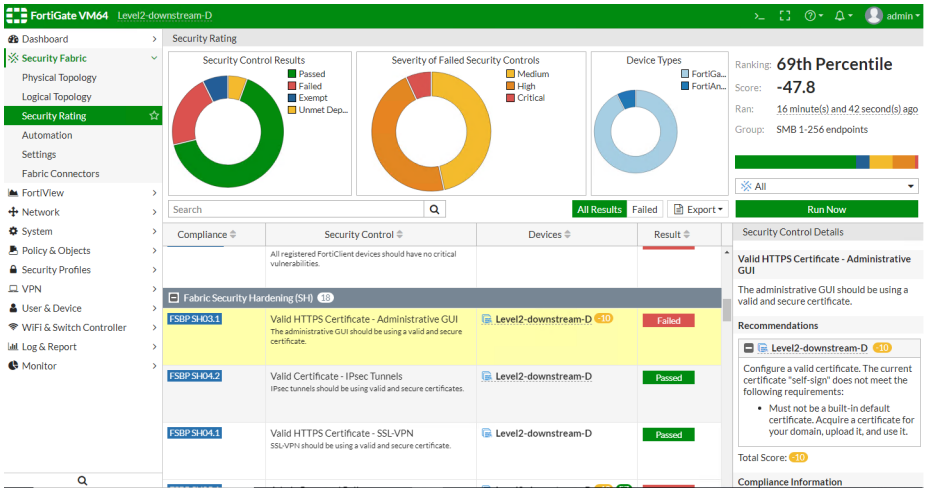


Additional details for each compliance test:

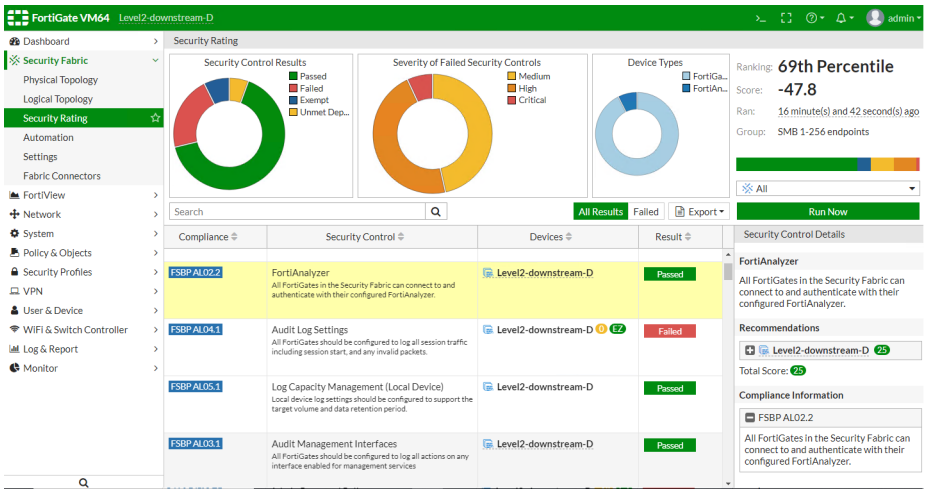


You can select *Easy Apply* (*EZ*) for individual recommendations:

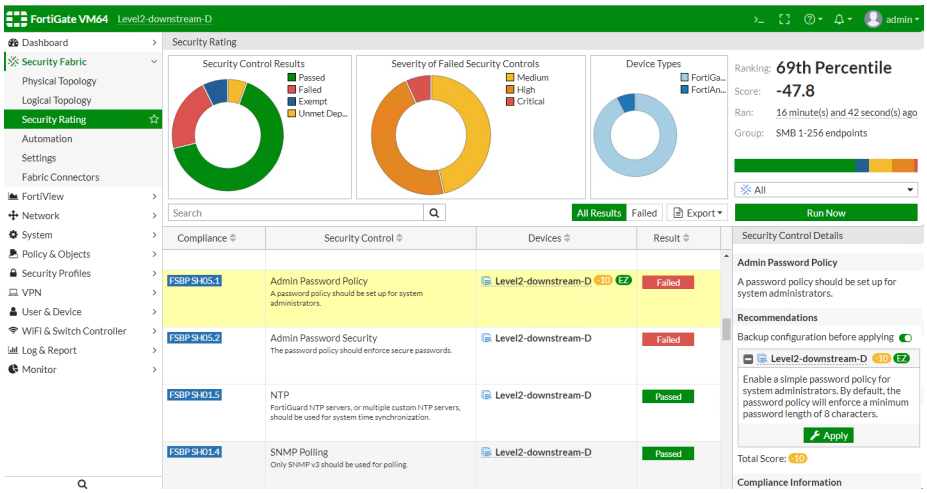

Security Rating report summary:

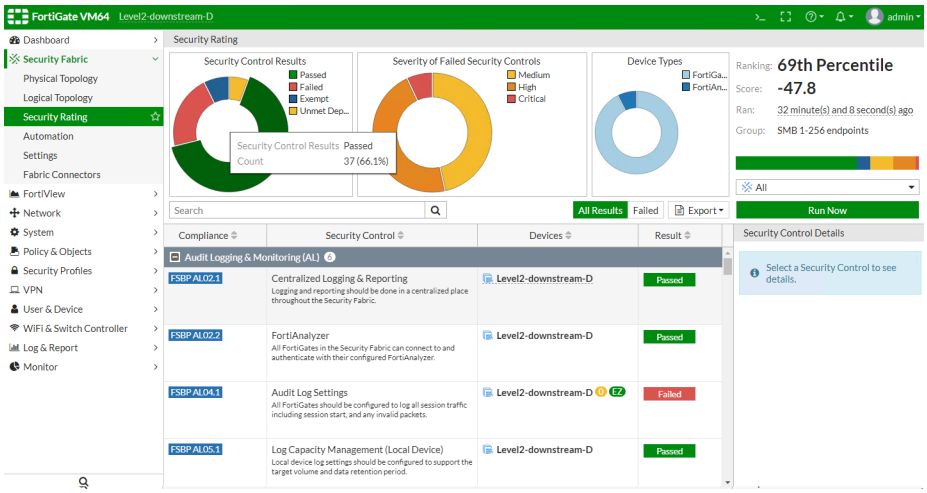

Security Rating report with full results, including passed and failed tests:

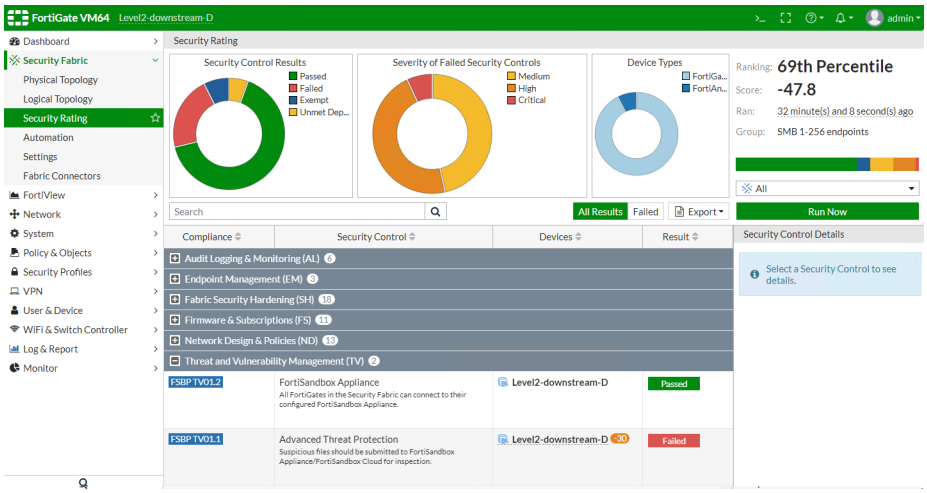


Verifying FortiAnalyzer configurations


The *Security Rating* report can verify FortiAnalyzer configurations and displays the results in the *Compatible Firmware* and *Admin Idle Timeout* tests.

To view FortiAnalyzer information and tests:


1. Go to *Security Fabric* > *Security Rating*.
2. The *Security Rating* results page displays the FortiAnalyzer icon in the topology field, and FortiAnalyzer information is available through the tooltip.

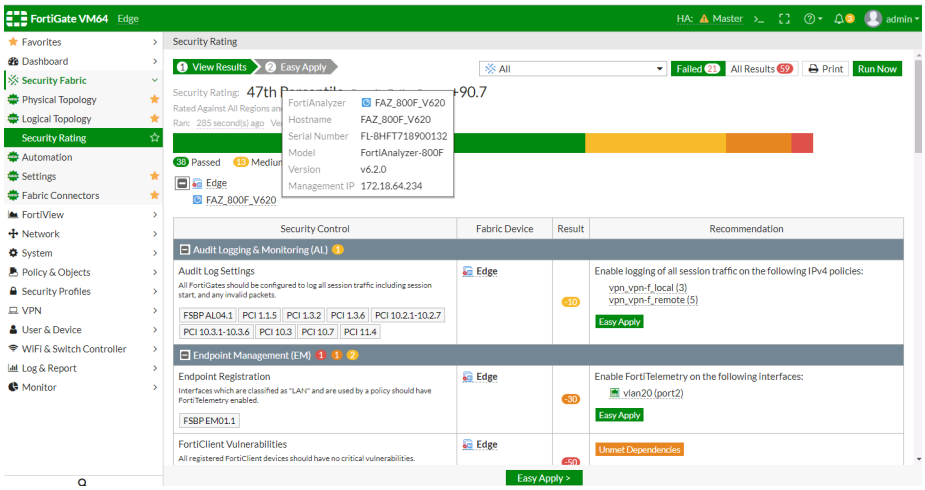

3. The *Compatible Firmware* and *Admin Idle Timeout* tests for FortiAnalyzer are now available.
   - *Compatible Firmware*:

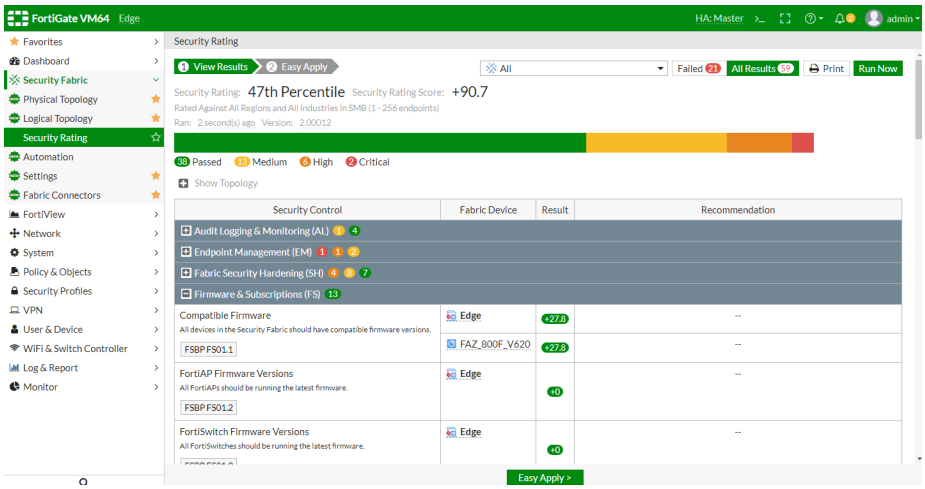


   - *Admin Idle Timeout*:

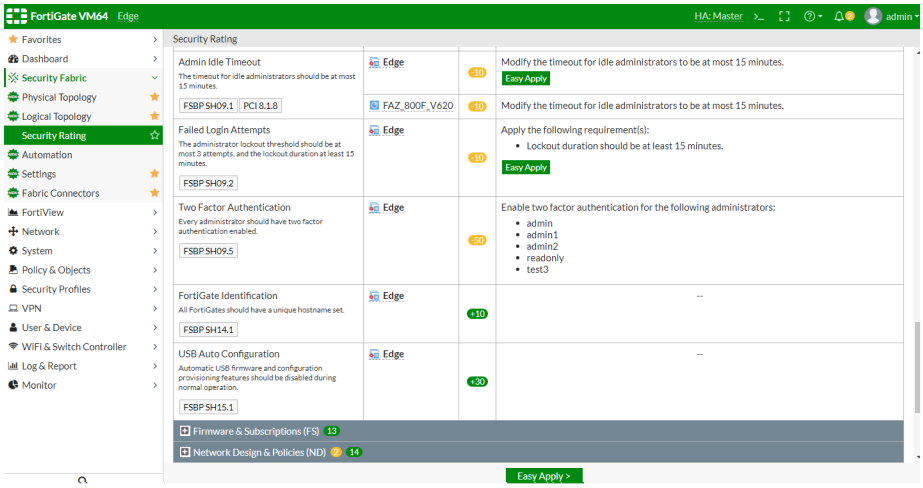

Fabric connectors

Fabric connectors allow you to connect your network to external services. Following are the categories of connectors: Public SDN, Private SDN, SSO/Identity, and Threat Feeds.

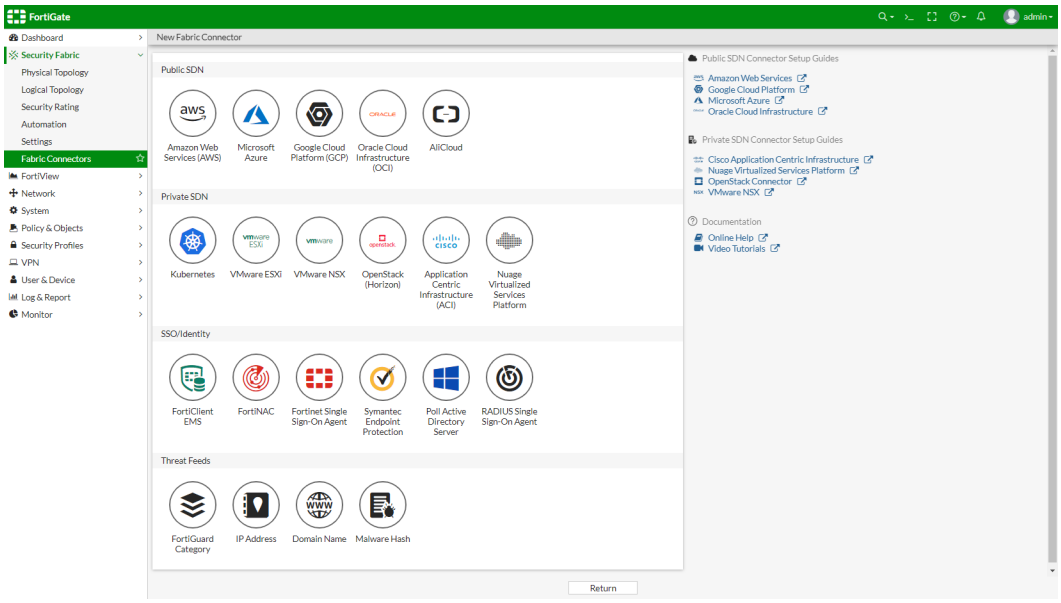

If VDOMs are enabled, SDN and Threat Feeds connectors are in the global settings, and SSO/Identity connectors are per VDOM.

SDN connectors

Fabric connectors to SDNs provide integration and orchestration of Fortinet products with SDN solutions. Fabric Connectors ensure that any changes in the SDN environment are automatically updated in your network.

There are four steps to creating and using an SDN connector:

1. Gather the required information
2. Create the fabric connector on page 141
3. Create a fabric connector address on page 142
4. Add the address to a firewall policy on page 143

An example of creating a Microsoft Azure SDN connector is available at https://docs.fortinet.com/vm/azure/fortigate/6.2/azure-cookbook/6.2.0/502895.

Create the fabric connector

To create an SDN Fabric connector in the GUI:

1. Go to *Security Fabric* > *Fabric Connectors*.
2. Click *Create New*.
3. Click on the service that you are using.
4. Enter the *Name*, *Status*, and *Update Interval* for the connector.
5. Enter the previously collected information for the specific connector that you are creating.
6. Click *OK*.

To create an SDN Fabric connector in the CLI:

```
config system sdn-connector
    edit <name>
        set status {enable | disable}
        set type {connector type}
        ...
        set update-interval <integer>
    next
end
```



The available CLI commands will vary depending on the selected SDN connector type.

Create a fabric connector address

A fabric connector address can be used in the following ways:

- As the source or destination address for firewall policies.
- To automatically update changes to addresses in the environment of the service that you are using, based on specified filtering conditions.
- To automatically apply changes to firewall policies that use the address, based on specified filtering conditions.

To create a fabric connector address in the GUI:

1. Go to *Policy & Objects* > *Addresses*.
2. Click *Create New* > *Address*.
3. Enter a name for the address.
4. Set the *Type* to *Fabric Connector Address*.
5. Select an *SDN Connector* from the drop-down list, or click *Create New* to make a new one.
6. Set the *SDN address type*. Only addresses of the selected type will be collected.
7. Configure the connector specific settings.
8. Select an *Interface* for the address, or leave it as *any*, enable or disable *Show in Address List*, and optionally add *Comments*.
9. Add tags.
10. Click *OK*.

To create a fabric connector address in the CLI:

```
config firewall address
    edit <name>
        set type dynamic
        set sdn <sdn_connector>
        set visibility enable
        set associated-interface <interface_name>
        set color <integer>
        ...
        set comment <comment>
        config tagging
```

```
            edit <name>
                set category <string>
                set tags <strings>
            next
        end
    next
end
```



The available CLI commands will vary depending on the selected SDN connector type.

Add the address to a firewall policy

A fabric connector address can be used as either the source or destination address.

To add the address to a firewall policy in the GUI:

1. Go to *Policy & Objects* > *IPv4 Policy*.
2. Click *Create New*.
3. Enter a name for the policy.
4. Set the incoming and outgoing interfaces.
5. Use the fabric connector address as the source or destination address.
6. Configure the remaining settings as needed.
7. Click *OK*.

To add the address to a firewall policy in the CLI:

```
config firewall policy
    edit 0
        set name <name>
        set srcintf <port_name>
        set dstintf <port_name>
        set srcaddr <firewall_address>
        set dstaddr <firewall_address>
        set action accept
        set schedule <schedule>
        set service <service>
    next
end
```

AliCloud SDN connector


FortiOS automatically updates dynamic addresses for AliCloud using an AliCloud SDN connector, including mapping the following attributes from AliCloud instances to dynamic address groups in FortiOS:

- ImageId
- InstanceId
- SecurityGroupId
- VpcId


- VSwitchId
- TagKey
- TagValue

To configure AliCloud SDN connector using the GUI:


1. Configure the AliCloud SDN connector:
   a. Go to *Security Fabric* > *Fabric Connectors*.
   b. Click *Create New*, and select *Alibaba Cloud*.
   c. Configure as shown, substituting the access key, secret, and region ID for your deployment. The update interval is in seconds.

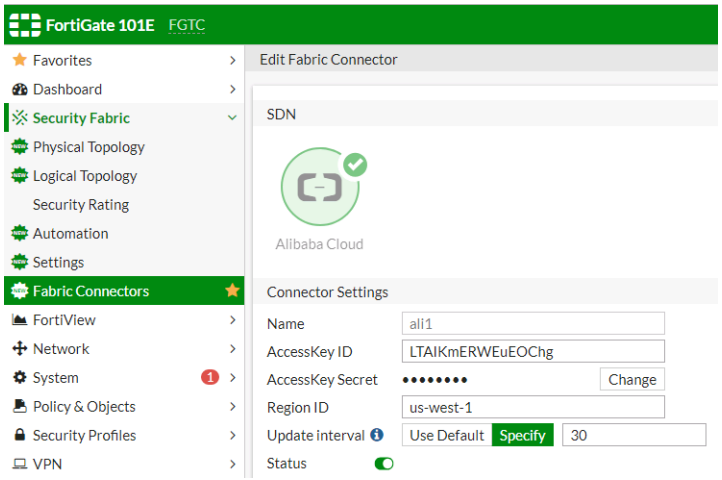

2. Create a dynamic firewall address for the configured AliCloud SDN connector:
   a. Go to *Policy & Objects* > *Addresses*.
   b. Click *Create New*, then select *Address*.
   c. Configure the address as shown, selecting the desired filter in the *Filter* dropdown list. In this example, the AliCloud SDN connector will automatically populate and update IP addresses only for instances that belong to the specified security group:

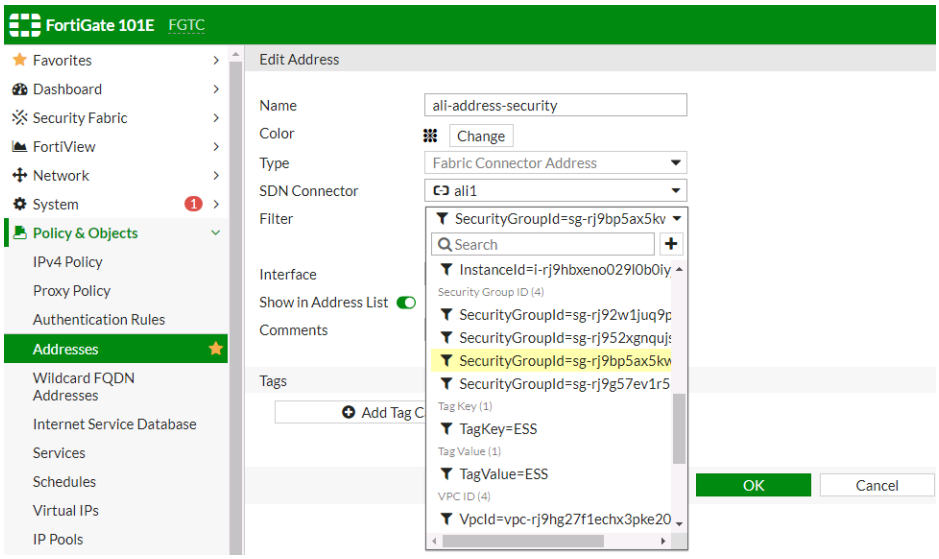

3. Ensure that the AliCloud SDN connector resolves dynamic firewall IP addresses:
   a. Go to *Policy & Objects* > *Addresses*.
   b. Hover over the address created in step 2 to see a list of IP addresses for instances that belong to the security group configured in step 2:

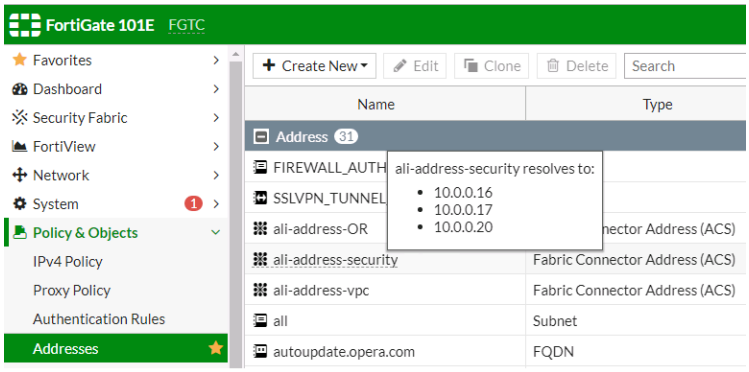

To configure AliCloud SDN connector using CLI commands:

1. Configure the AliCloud SDN connector:

```
config system sdn-connector
   edit "ali1"
      set type acs
      set access-key "LTAIKmERWEuEOChg"
      set secret-key xxxxx
      set region "us-west-1"
      set update-interval 30
   next
end
```

2. Create a dynamic firewall address for the configured AliCloud SDN connector with the supported AliCloud filter. In this example, the AliCloud SDN Connector will automatically populate and update IP addresses only for instances that belong to the specified security group:

```
config firewall address
   edit "ali-address-security"
      set type dynamic
      set sdn "ali1"
      set filter "SecurityGroupId=sg-rj9bp5ax5kwy3gqdizqb"
   next
end
```

3. Confirm that the AliCloud SDN connector resolves dynamic firewall IP addresses using the configured filter:

```
config firewall address
   edit "ali-address-security"
      set uuid 62a76df2-18f6-51e9-b555-360b18359ebe
      set type dynamic
      set sdn "ali1"
      set filter "SecurityGroupId=sg-rj9bp5ax5kwy3gqdizqb"
      config list
         edit "10.0.0.16"
         next
         edit "10.0.0.17"
         next
         edit "10.0.0.20"
         next
      end
```

```
    next
end
```


AWS SDN connector with IAM credentials

For instances running in AWS (on demand or BYOL), you can set up the AWS SDN connector using AWS Identify and Access Management (IAM) credentials.


IAM authentication is available only for FGT-AWS and FGT-AWSONDEMAND platforms.

To configure AWS SDN connector using the GUI:


1. Configure the AWS SDN connector:
   a. Go to *Security Fabric* > *Fabric Connectors*.
   b. Click *Create New*, and select *Amazon Web Services (AWS)*.
   c. Configure as shown:

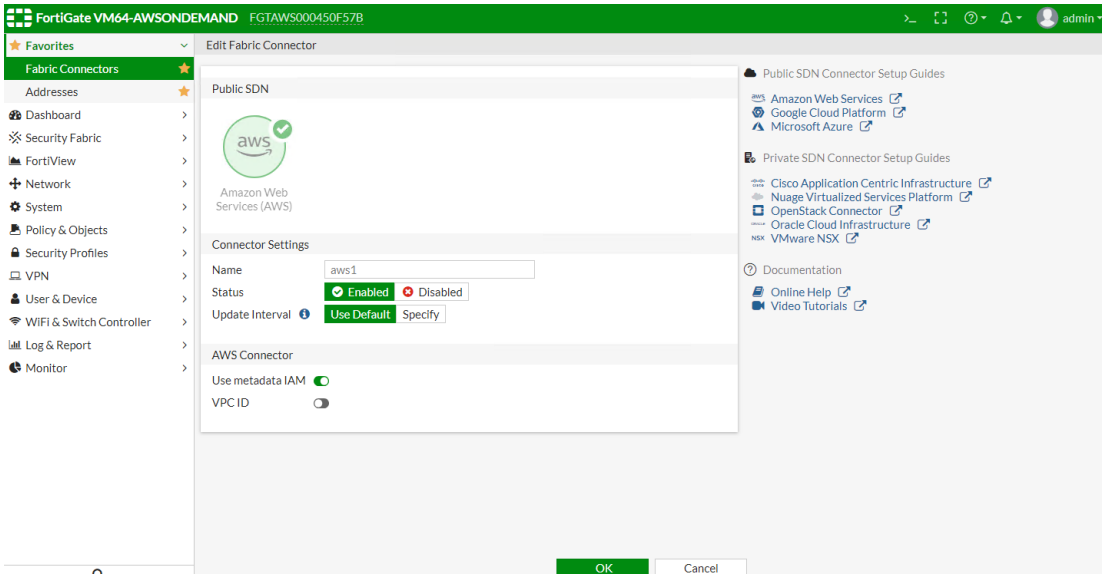


2. Create a dynamic firewall address for the configured AWS SDN connector:
   a. Go to *Policy & Objects* > *Addresses*.
   b. Click *Create New*, then select *Address*.
   c. Configure the address as shown, selecting the desired filter in the *Filter* dropdown list. Following is an example for a public SDN address type:

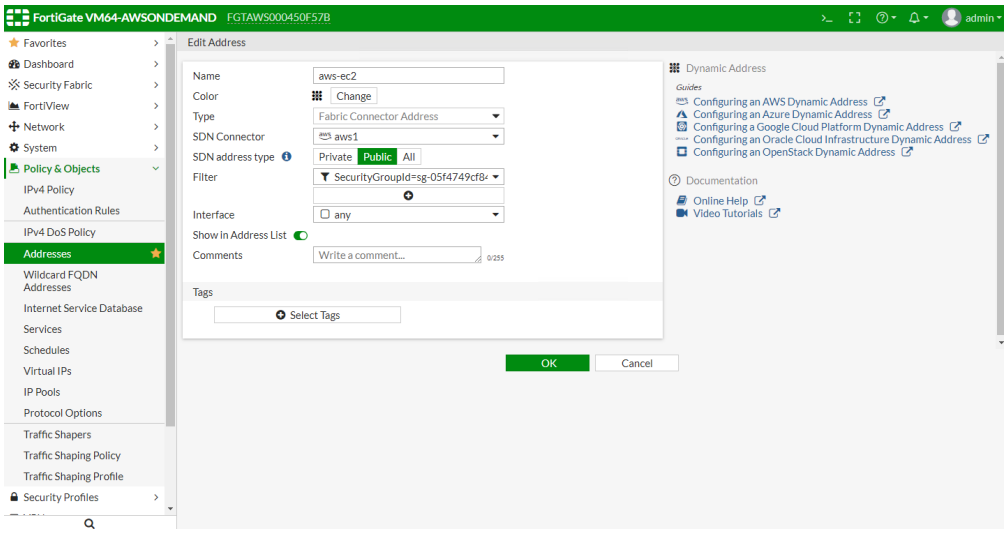


Following is an example for a private SDN address type:

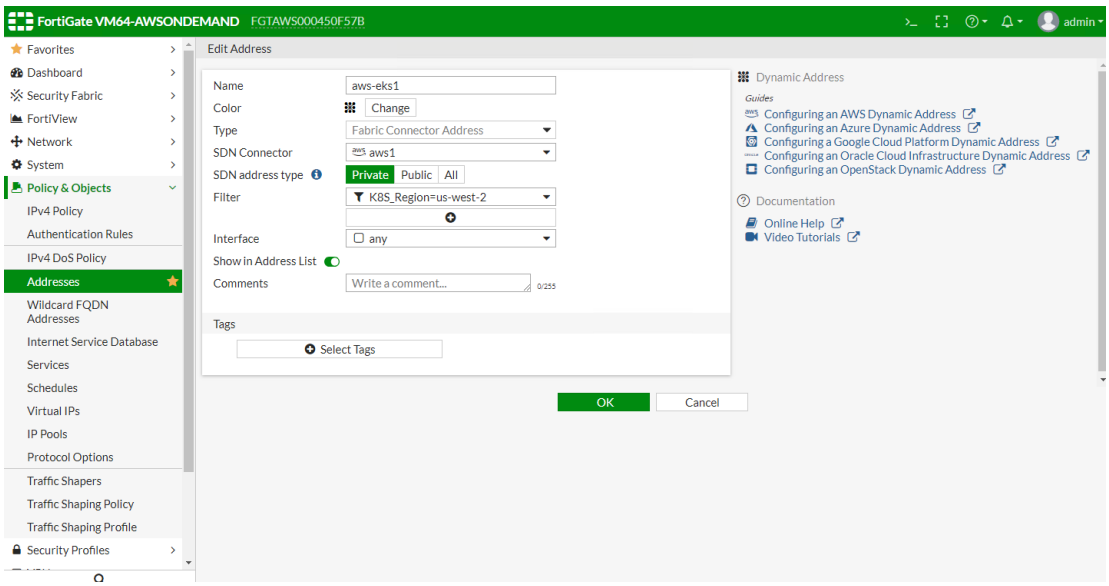

3. Ensure that the AWS SDN connector resolves dynamic firewall IP addresses:
   a. Go to *Policy & Objects* > *Addresses*.
   b. Hover over the address created in step 2 to see a list of IP addresses for instances that belong to the security group configured in step 2.
   Following is an example for a public SDN address type:

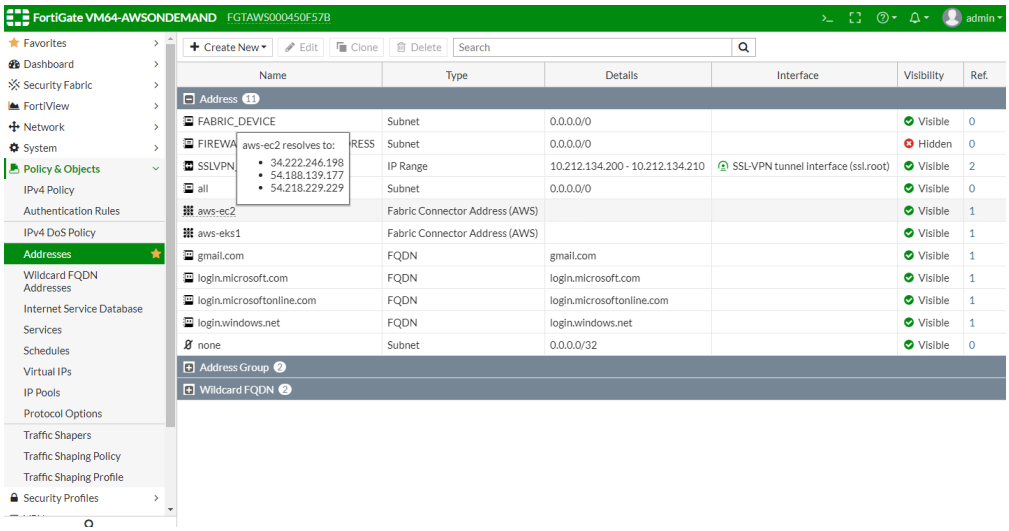

Following is an example for a private SDN address type:

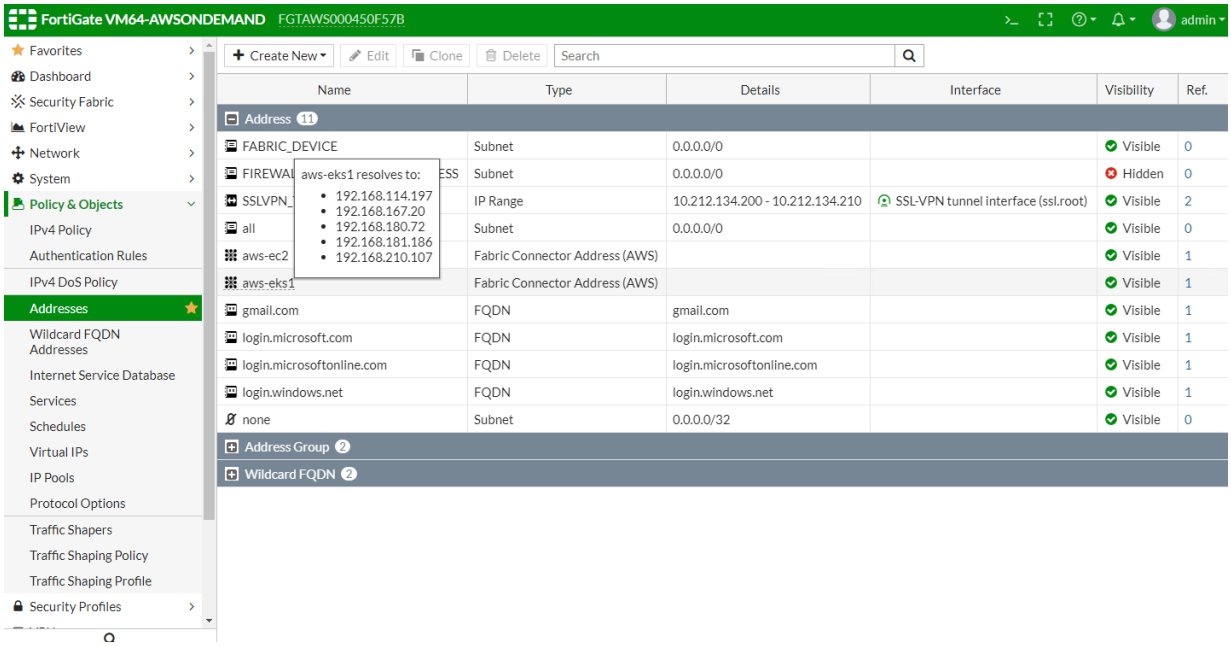

To configure AWS SDN connector using CLI commands:

1. Configure the AWS connector:

```
config system sdn-connector
   edit "aws1"
      set status enable
      set type aws
      set use-metadata-iam enable
      set update-interval 60
   next
end
```

2. Create a dynamic firewall address for the configured AWS SDN connector with the supported filter: Dynamic firewall address IPs are resolved by the SDN connector.

```
config firewall address
```

```
    edit "aws-ec2"
       set type dynamic
       set sdn "aws1"
       set filter "SecurityGroupId=sg-05f4749cf84267548"
       set sdn-addr-type public
    next
    edit "aws-eks1"
       set type dynamic
       set sdn "aws1"
       set filter "K8S_Region=us-west-2"
    next
end
```

3. Confirm that the AWS SDN connector resolves dynamic firewall IP addresses using the configured filter:

```
config firewall address
    edit "aws-ec2"
       set uuid e756e786-3a2e-51e9-9d40-9492098de42d
       set type dynamic
       set sdn "aws1"
       set filter "SecurityGroupId=sg-05f4749cf84267548"
       set sdn-addr-type public
       config list
          edit "34.222.246.198"
          next
          edit "54.188.139.177"
          next
          edit "54.218.229.229"
          next
       end
    next
    edit "aws-eks1"
       set uuid d84589aa-3a10-51e9-b1ac-08145abce4d6
       set type dynamic
       set sdn "aws1"
       set filter "K8S_Region=us-west-2"
       config list
          edit "192.168.114.197"
          next
          edit "192.168.167.20"
          next
          edit "192.168.180.72"
          next
          edit "192.168.181.186"
          next
          edit "192.168.210.107"
          next
       end
    next
end
```


Azure Stack SDN connector

FortiOS automatically updates dynamic addresses for Azure Stack on-premise environments using an Azure Stack SDN connector, including mapping the following attributes from Azure Stack instances to dynamic address groups in FortiOS:

- vm
- tag
- size
- securitygroup
- vnet
- subnet
- resourcegroup
- vmss


To configure Azure Stack SDN connector using the GUI:

1. Configure the Azure Stack SDN connector:
   a. Go to *Security Fabric* > *Fabric Connectors*.
   b. Click *Create New*, and select *Microsoft Azure*.
   c. Configure as shown, substituting the Azure Stack settings for your deployment. The update interval is in seconds.

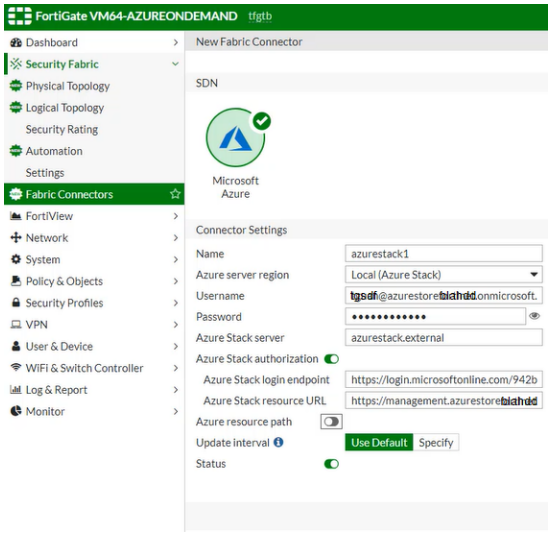


2. Create a dynamic firewall address for the configured Azure Stack SDN connector:
   a. Go to *Policy & Objects* > *Addresses*.
   b. Click *Create New*, then select *Address*.
   c. Configure the address as shown, selecting the desired filter in the *Filter* dropdown list. In this example, the Azure Stack SDN connector will automatically populate and update IP addresses only for instances that are

named tfgta:

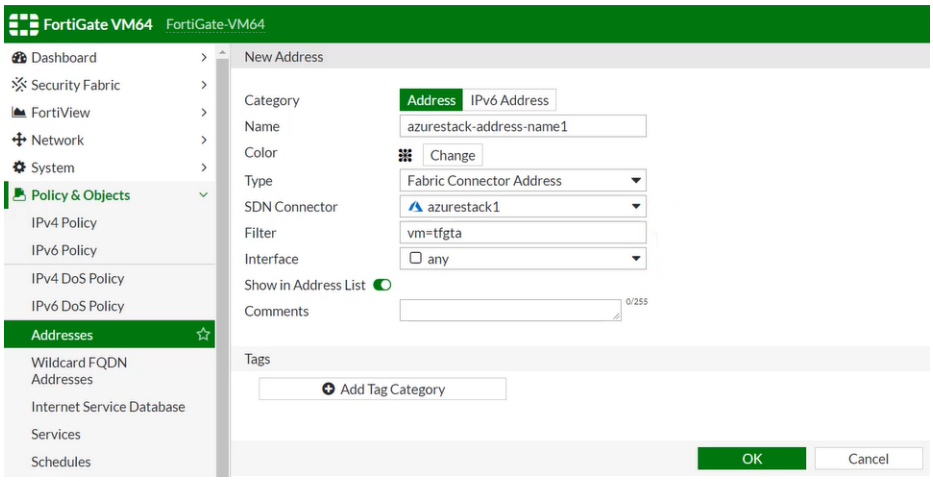

3. Ensure that the Azure Stack SDN connector resolves dynamic firewall IP addresses:
   a. Go to *Policy & Objects* > *Addresses*.
   b. Hover over the address created in step 2 to see a list of IP addresses for instances that are named tftgta as configured in step 2:

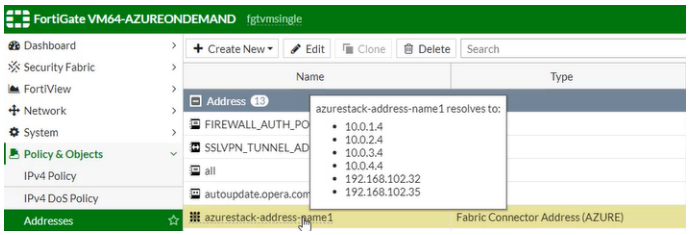

To configure Azure Stack SDN connector using CLI commands:

1. Configure the Azure Stack SDN connector:

```
config system sdn-connector
   edit "azurestack1"
      set type azure
      set azure-region local
      set server "azurestack.external"
      set username "username@azurestoreexamplecompany.onmicrosoft.com"
      set password xxxxx
      set log-in endpoint "https://login.microsoftonline.com/942b80cd-1b14-42a1-8dcf-
          4b21dece61ba"
      set resource-url
          "https://management.azurestoreexamplecompany.onmicrosoft.com/12b6fedd-9364-
          4cf0-822b-080d70298323"
      set update-interval 30
   next
end
```

2. Create a dynamic firewall address for the configured Azure Stack SDN connector with the supported Azure Stack filter. In this example, the Azure Stack SDN Connector will automatically populate and update IP addresses only for instances that are named tfgta:

```
config firewall address
   edit "azurestack-address-name1"
      set type dynamic
      set sdn "azurestack1"
```

```
      set filter "vm=tfgta"
   next
end
```

3. Confirm that the Azure Stack fabric connector resolves dynamic firewall IP addresses using the configured filter:

```
config firewall address
   edit "azurestack-address-name1"
      set type dynamic
      set sdn "azurestack1"
      set filter "vm=tfgta"
      config list
         edit "10.0.1.4"
         next
         edit "10.0.2.4"
         next
         edit "10.0.3.4"
         next
         edit "10.0.4.4"
         next
         edit "192.168.102.32"
         next
         edit "192.168.102.35"
         next
      end
   next
end
```

Azure SDN connector for non-VM resources

IP address resolving functionality is available for the following Azure resources:

- VM network interfaces (including VMSS)
- Internet-facing load balancers
- Internal load balancers
- Application gateways




VPN gateways are currently not supported.

The following example demonstrates configuring an internet-facing load balancer.


To configure an internet-facing load balancer address in the GUI:

1. Configure the Azure SDN connector:
   a. Go to *Security Fabric* > *Fabric Connectors*.
   b. Click *Create New*, and select *Microsoft Azure*.

c. Enter the settings based on your deployment, and click *OK*. The update interval is in seconds.

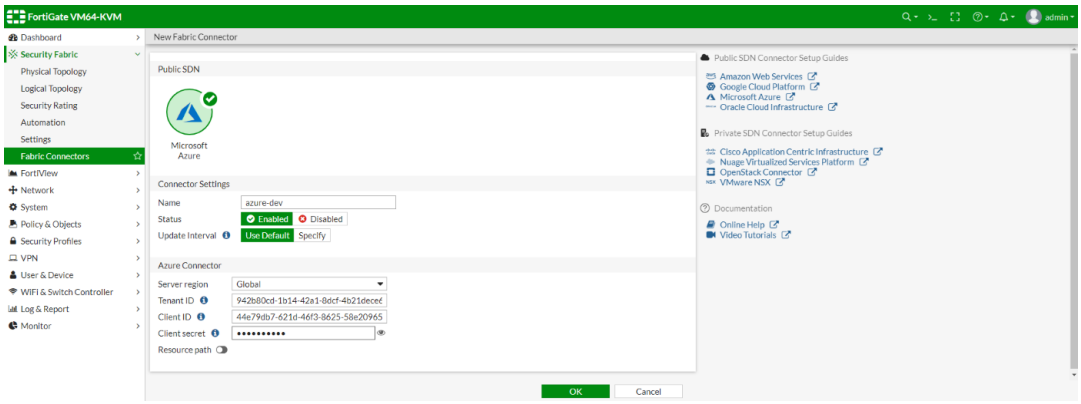

2. Create the dynamic firewall address:
   a. Go to *Policy & Objects* > *Addresses*.
   b. Click *Create New* > *Address* and enter a name.
   c. Configure the following settings:
      i. For *Type*, select *Dynamic*.
      ii. For *Sub Type*, select *Fabric Connector Address*.
      iii. For *SDN Connector*, select *azure-dev*.
      iv. For *SDN address type*, select *All*.
      v. For *Filter*, enter `Tag.devlb=lbkeyvalue`.
   d. Click *OK*.

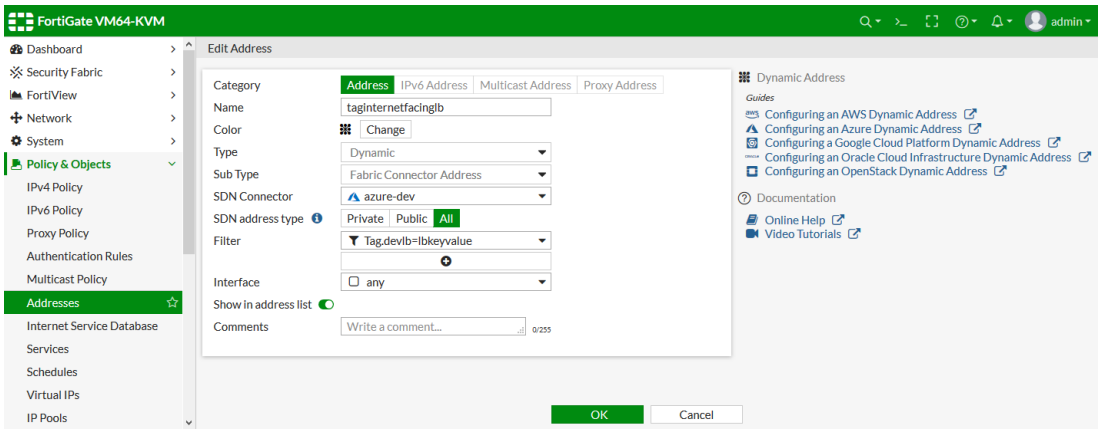

The corresponding IP addresses are dynamically updated and resolved after applying the tag filter.

3. Ensure that the connector resolves the dynamic firewall IP address:
   a. Go to *Policy & Objects* > *Addresses*.
   b. In the address table, hover over the address created in step 2 to view what IP it resolves to:



   c. In Azure, verify to confirm the IP address matches:



To configure an internet-facing load balancer in the CLI:

1. Configure the Azure SDN connector:

```
config system sdn-connector
    edit "azure-dev"
        set status enable
        set type azure
        set azure-region global
        set tenant-id "942b80cd-1b14-42a1-8dcf-4b21dece61ba"
        set client-id "44e79db7-621d-46f3-8625-58e209654e58"
        set client-secret xxxxxxxxxx
        set update-interval 60
    next
end
```

2. Create the dynamic firewall address:

```
config firewall address
    edit "taginternetfacinglb"
        set type dynamic
        set sdn "azure-dev"
        set filter "Tag.devlb=lbkeyvalue"
        set sdn-addr-type all
    next
end
```

   The corresponding IP addresses are dynamically updated and resolved after applying the tag filter.

3. Confirm that the connector resolves the dynamic firewall IP address:

```
config firewall address
    edit "taginternetfacinglb"
        show
            config firewall address
                edit "taginternetfacinglb"
                    set uuid df391760-3bb6-51ea-f775-421df18f368d
                    set type dynamic
                    set sdn "azure-dev"
                    set filter "Tag.devlb=lbkeyvalue"
                    set sdn-addr-type all
                    config list
                        edit "52.230.230.83"
                        next
                    end
                next
            end
       next
end
```

VMware ESXi SDN connector


Dynamic addresses for VMware ESXi and vCenter servers can be automatically updated by using a VMware ESXi SDN connector, including mapping the following attributes from VMware ESXi and vCenter objects to dynamic address groups in FortiOS:

- vmid
- host

- name
- uuid
- vmuuid
- vmnetwork
- guestid
- guestname
- annotation


To configure VMware ESXi SDN connector using the GUI:

1. Configure the VMware ESXi SDN connector:
   a. Go to *Security Fabric* > *Fabric Connectors*.
   b. Click *Create New*, and select *VMware ESXi*.
   c. Configure as shown, substituting the server IP address, username, and password for your deployment. The update interval is in seconds.

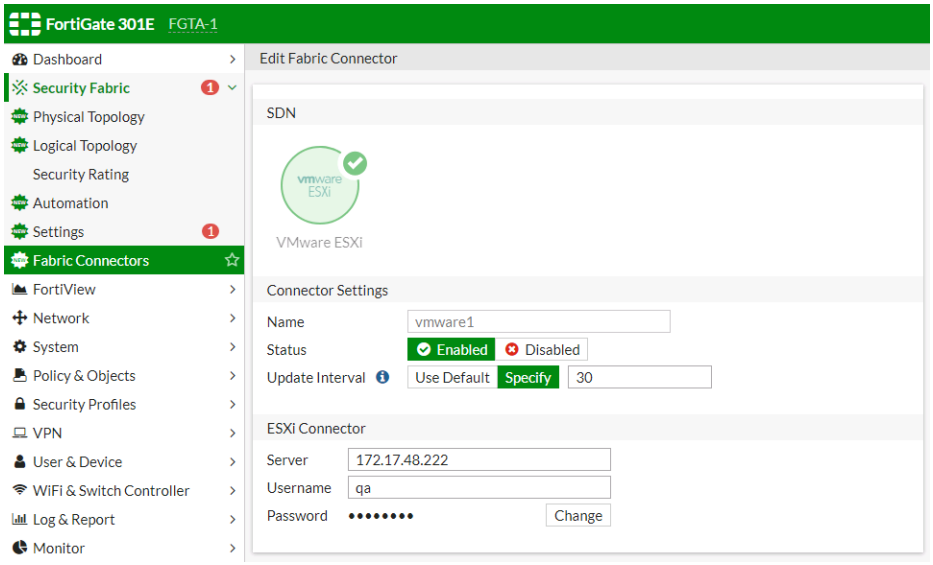


2. Create a dynamic firewall address for the configured VMware ESXi SDN connector:
   a. Go to *Policy & Objects* > *Addresses*.
   b. Click *Create New*, then select *Address*.
   c. Configure the address as shown, selecting the desired filter in the *Filter* dropdown list. In this example, the VMware ESXi fabric connector will automatically populate and update IP addresses only for instances that

belong to VLAN80:

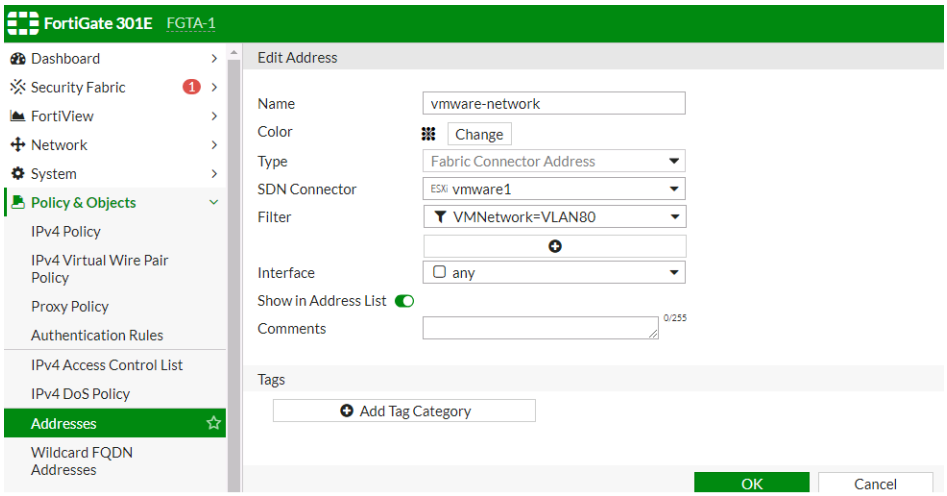

3. Ensure that the VMware ESXi SDN connector resolves dynamic firewall IP addresses:
   a. Go to *Policy & Objects* > *Addresses*.
   b. Hover over the address created in step 2 to see a list of IP addresses for instances that belong to VLAN80 as configured in step 2:

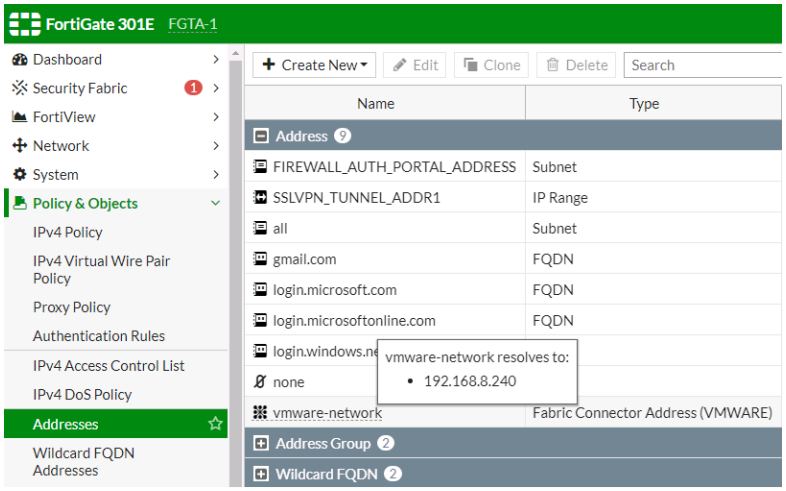

To configure VMware ESXi SDN connector using CLI commands:

1. Configure the VMware ESXi SDN connector:

```
config system sdn-connector
   edit "vmware1"
      set type vmware
      set server "172.17.48.222"
      set username "example_username"
      set password xxxxx
      set update-interval 30
   next
end
```

2. Create a dynamic firewall address for the configured VMware ESXi SDN connector with the supported VMware ESXi filter. In this example, the VMware ESXi SDN connector will automatically populate and update IP addresses only for instances that belong to the specified VLAN:

```
config firewall address
```

```
    edit "vmware-network"
       set type dynamic
       set sdn "vmware1"
       set filter "vmnetwork=VLAN80"
    next
end
```

3. Confirm that the VMware ESXi SDN connector resolves dynamic firewall IP addresses using the configured filter:

```
config firewall address
    edit "vmware-network"
       set uuid abfa1748-1b80-51e9-d0fd-ea322b3bba2d
       set type dynamic
       set sdn "vmware1"
       set filter "vmnetwork=VLAN80"
       config list
          edit "192.168.8.240"
          next
       end
    next
end
```


VMware NSX-T manager SDN connector

This feature provides SDN connector configuration for VMware NSX-T manager. You can import specific groups, or all groups from the NSX-T manager.

To configure SDN connector for NSX-T manager in the GUI:

1. Go to *Security Fabric* > *Fabric Connectors* and click *Create New*.
2. In the *Private SDN* section, click *VMware NSX*.

3. Enter the settings and click *OK*.

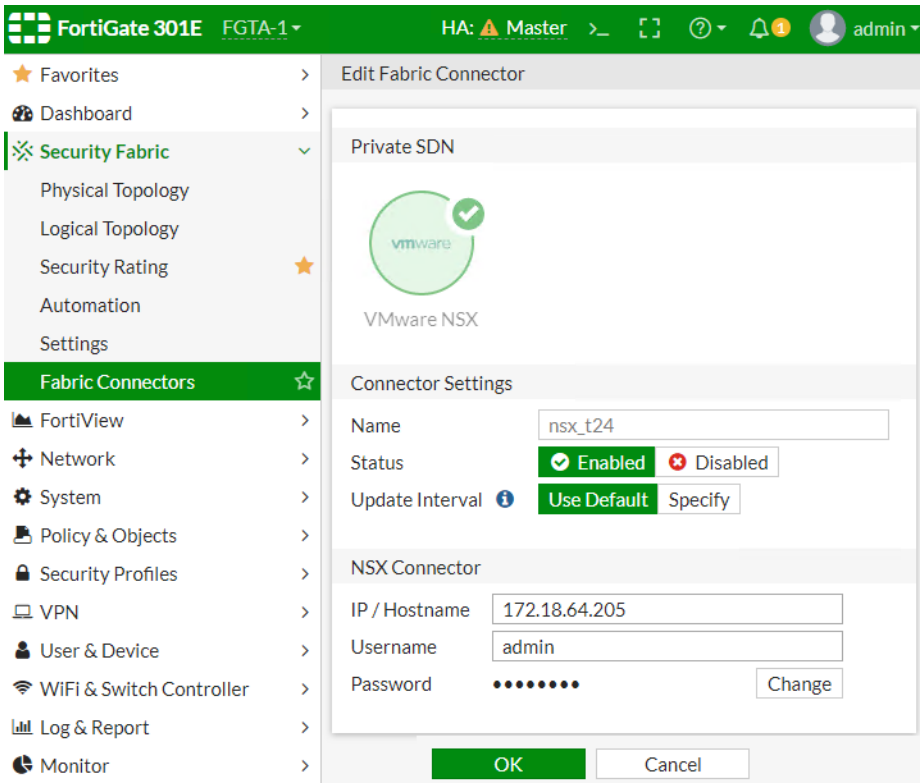

To configure SDN connector for NSX-T manager in the CLI:

```
config system sdn-connector
    edit "nsx_t24"
        set type nsx
        set server "172.18.64.205"
        set username "admin"
        set password xxxxxx
    next
end
```

To import a specific group from the NSX-T manager:


```
# execute nsx group import nsx_t24 root csf_ns_group
[1] 336914ba-0660-4840-b0f1-9320f5c5ca5e csf_ns_group:
  Name:csf_ns_group
  Address:1.1.1.0
  Address:1.1.1.1
  Address:172.16.10.104
  Address:172.16.20.104
  Address:172.16.30.104
  Address:2.2.2.0
  Address:2.2.2.2
  Address:4.4.4.0
  Address:5.5.5.0
  Address:6.6.6.6
  Address:7.7.7.7
```

To import all groups from NSX-T manager:

```
# execute nsx group import nsx_t24 root
[1] 663a7686-b9a3-4659-b06f-b45c908349a0 ServiceInsertion_NSGroup:
  Name:ServiceInsertion_NSGroup
  Address:10.0.0.2
[2] 336914ba-0660-4840-b0f1-9320f5c5ca5e csf_ns_group:
  Name:csf_ns_group
  Address:1.1.1.0
  Address:1.1.1.1
  Address:172.16.10.104
  Address:172.16.20.104
  Address:172.16.30.104
  Address:2.2.2.0
  Address:2.2.2.2
  Address:4.4.4.0
  Address:5.5.5.0
  Address:6.6.6.6
  Address:7.7.7.7
[3] c462ec4d-d526-4ceb-aeb5-3f168cecd89d charlie_test:
  Name:charlie_test
  Address:1.1.1.1
  Address:2.2.2.2
  Address:6.6.6.6
  Address:7.7.7.7
[4] ff4dcb08-53cf-46bd-bef4-f7aeda9c0ad9 fgt:
  Name:fgt
  Address:172.16.10.101
  Address:172.16.10.102
  Address:172.16.20.102
  Address:172.16.30.103
[5] 3dd7df0d-2baa-44e0-b88f-bd21a92eb2e5 yongyu_test:
  Name:yongyu_test
  Address:1.1.1.0
  Address:2.2.2.0
  Address:4.4.4.0
  Address:5.5.5.0
```

To view the dynamic firewall IP addresses that are resolved by the SDN connector in the GUI:

1. Go to *Policy & Objects* > *Addresses* to view the IP addresses resolved by an SDN connector.

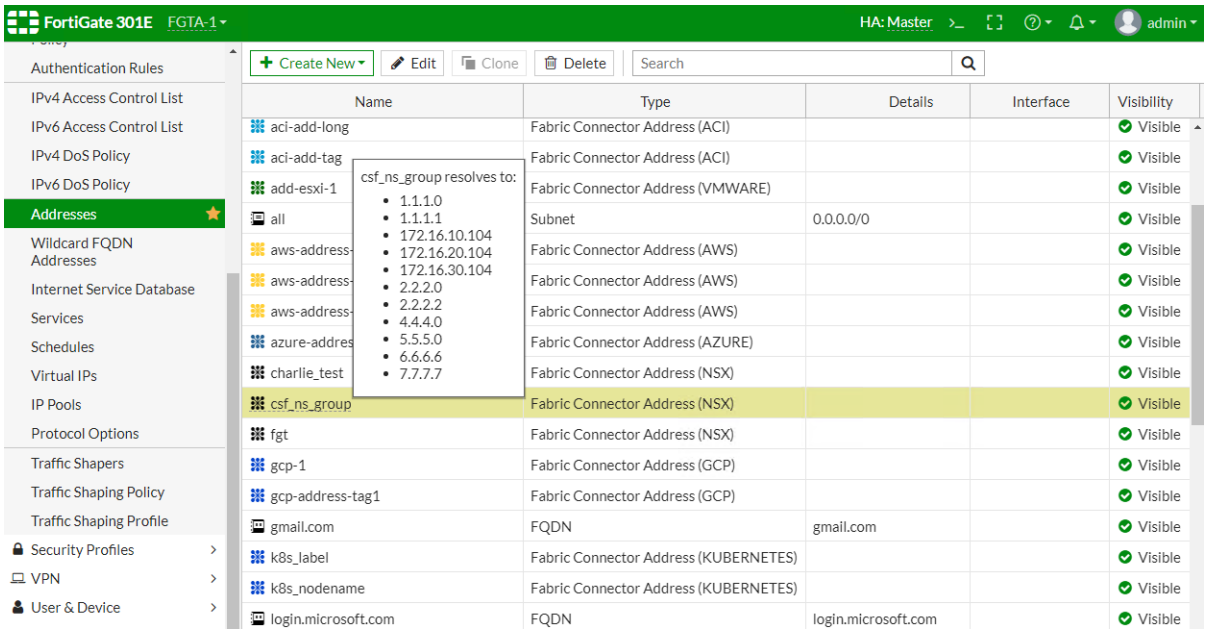

To view the dynamic firewall IP addresses that are resolved by the SDN connector in the CLI:

```
# show firewall address csf_ns_group
config firewall address
    edit "csf_ns_group"
        set uuid ee4a2696-bacd-51e9-f828-59457565b880
        set type dynamic
        set sdn "nsx_t24"
        set obj-id "336914ba-0660-4840-b0f1-9320f5c5ca5e"
        config list
            edit "1.1.1.0"
            next
            edit "1.1.1.1"
            next
            edit "172.16.10.104"
            next
            edit "172.16.20.104"
            next
            edit "172.16.30.104"
            next
            edit "2.2.2.0"
            next
            edit "2.2.2.2"
            next
            edit "4.4.4.0"
            next
            edit "5.5.5.0"
            next
            edit "6.6.6.6"
            next
            edit "7.7.7.7"
```


```
            next
        end
    next
end
```

OpenStack (Horizon) SDN connector with domain filter

You can select a domain attribute when configuring an OpenStack SDN connector in FortiOS. When a domain is configured for the OpenStack SDN connector, FortiOS resolves OpenStack dynamic firewall addresses from the specified OpenStack domain. If a domain is not specified, FortiOS resolves the dynamic firewall addresses using the default OpenStack domain.


To configure OpenStack SDN connector with a domain filter using the GUI:

1. Configure the OpenStack SDN connector:
   a. Go to *Security Fabric* > *Fabric Connectors*.
   b. Click *Create New*, and select *Openstack (Horizon)*.
   c. In the *Domain* field, enter the desired domain name from OpenStack. The fabric connector will only resolve IP addresses for instances that belong to the specified domain.
   d. Configure as shown, substituting the server IP address, username, and password for your deployment. The update interval is in seconds.

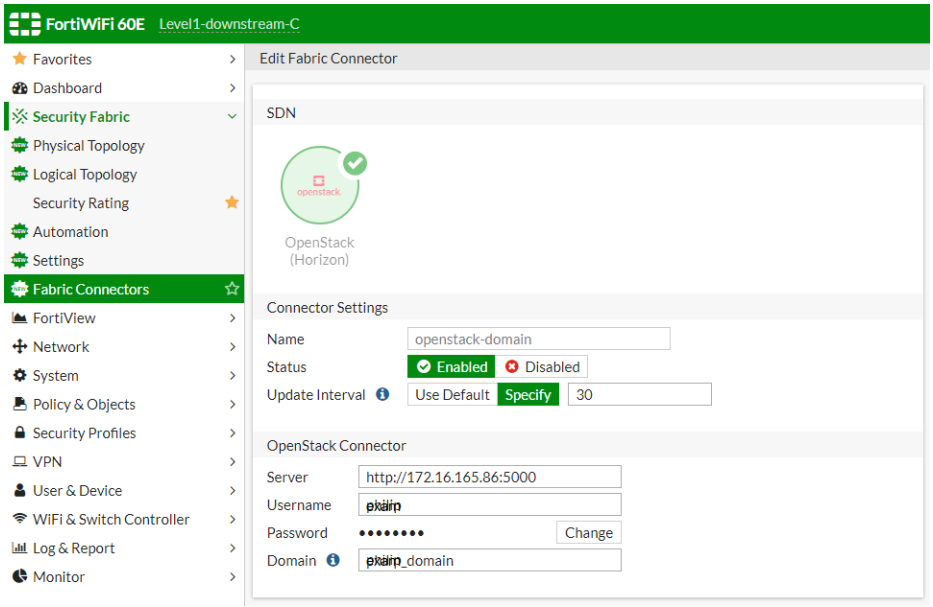


2. Create a dynamic firewall address for the configured OpenStack SDN connector:
   a. Go to *Policy & Objects* > *Addresses*.
   b. Click *Create New*, then select *Address*.
   c. Configure the address as shown, selecting the desired filter in the *Filter* dropdown list. The OpenStack SDN connector will automatically populate and update IP addresses only for instances that belong to the

specified domain and network:

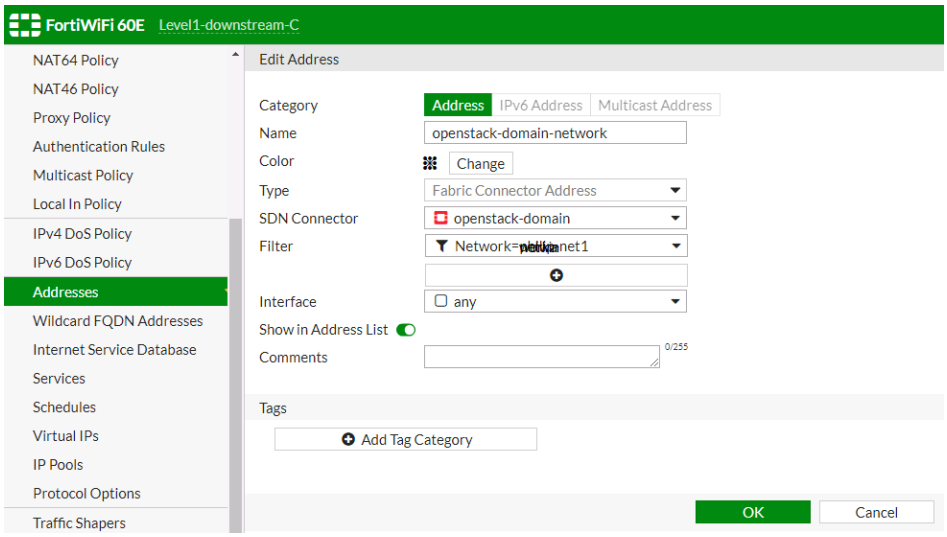

3. Ensure that the OpenStack SDN connector resolves dynamic firewall IP addresses:
   a. Go to *Policy & Objects* > *Addresses*.
   b. Hover over the address created in step 2 to see a list of IP addresses for instances that belong to the specified domain and specified network as configured in steps 1 and 2:

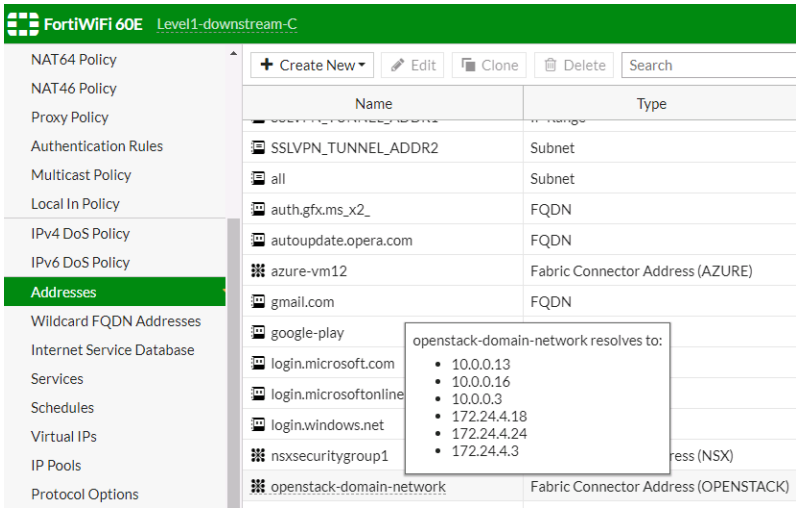

To configure OpenStack SDN connector with a domain filter using CLI commands:

1. Configure the OpenStack SDN connector. The SDN connector will only resolve IP addresses for instances that belong to the specified domain:

```
config system sdn-connector
   edit "openstack-domain"
      set type openstack
      set server "http://172.16.165.86:5000"
      set username "example_username"
      set password xxxxx
      set domain "example_domain"
      set update-interval 30
   next
end
```

2. Create a dynamic firewall address for the configured OpenStack SDN connector with the supported OpenStack filter. The OpenStack SDN connector will automatically populate and update IP addresses only for instances that belong to the specified domain and the specified network:

```
config firewall address
   edit "openstack-domain-network"
      set type dynamic
      set sdn "openstack-domain"
      set filter "Network=example-net1"
   next
end
```

3. Confirm that the OpenStack SDN connector resolves dynamic firewall IP addresses using the configured domain and filter:

```
config firewall address
   edit "openstack-domain-network"
      set uuid 02837298-234d-51e9-efda-559c6001438a
      set type dynamic
      set sdn "openstack-domain"
      set filter "Network=example-net1"
      config list
         edit "10.0.0.13"
         next
         edit "10.0.0.16"
         next
         edit "10.0.0.3"
         next
         edit "172.24.4.18"
         next
         edit "172.24.4.24"
         next
         edit "172.24.4.3"
         next
      end
   next
end
```

OCI SDN connector

You can configure Security Fabric connector integration with Oracle Cloud Infrastructure (OCI).

To configure an OCI SDN connector in the CLI:

1. Configure an SDN connector:

```
config system sdn-connector
    edit "oci1"
        set status enable
        set type oci
        set tenant-id
"ocid1.tenancy.oc1..aaaaaaaaaaa3aaaaaaaaaaaaaaaaa77xxxxxx54bbbbbb4xxxx35xx55xxxx"
        set user-id
"ocid1.user.oc1..aaaaaaaaa2laaaaa3aaaaaaaaaabbbbbbbbbbcccc3ccccccccccxxxxxxxx"
        set compartment-id
"ocid1.compartment.oc1..aaaaaaaaaaaaaaaaaa7bbbbbbbbbbccccccccc6xxx53xxxx7xxxxxxxxxx"
        set oci-region "us-ashburn-1"
```


```
        set oci-region-type commercial
        set oci-cert "cert-sha2"
        set update-interval 30
    next
end
```

2. Create a dynamic firewall address for the SDN connector with a supported filter:

```
config firewall address
    edit "oci-address-1"
        set uuid 0b4a496e-8974-51e9-e223-fee75c935fb7
        set type dynamic
        set sdn "oci1"
        set filter "CompartmentName=DevelopmentEngineering"
    next
end
```


To configure an OCI SDN connector in the GUI:

1. Go to *Security Fabric* > *Fabric Connectors* and click *Create New*.
2. In the *Public SDN* section, select *Oracle Cloud Infrastructure (OCI)*.
3. Configuration the connector as needed.

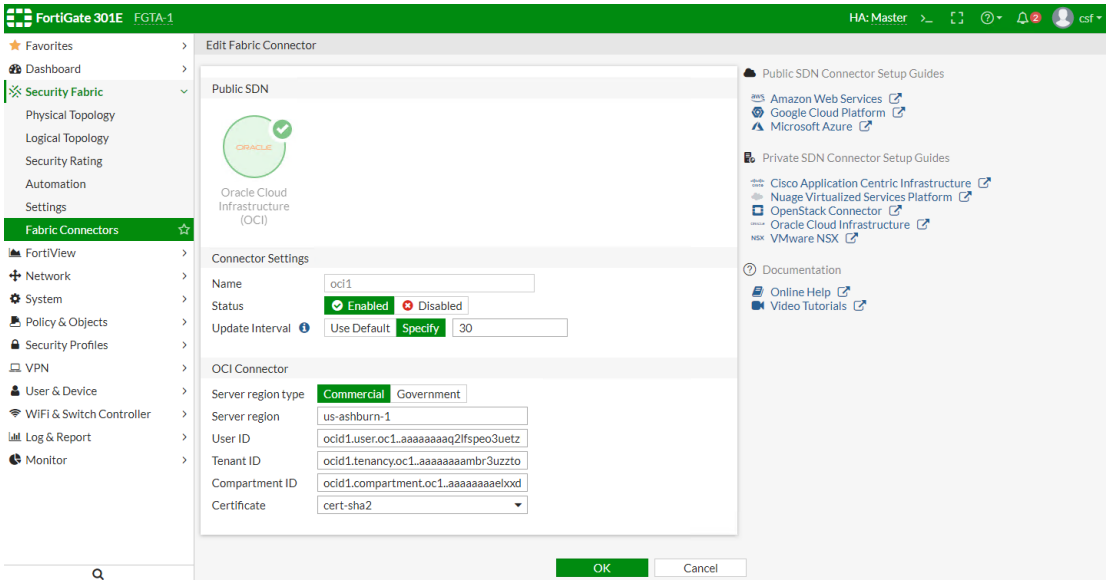

4. Click *OK*.
5. Go to *Policy & Objects* > *Addresses* and click *Create New* > *Address*.

6. Configure the address as needed, selecting the OCI connector in the *SDN Connector* field.

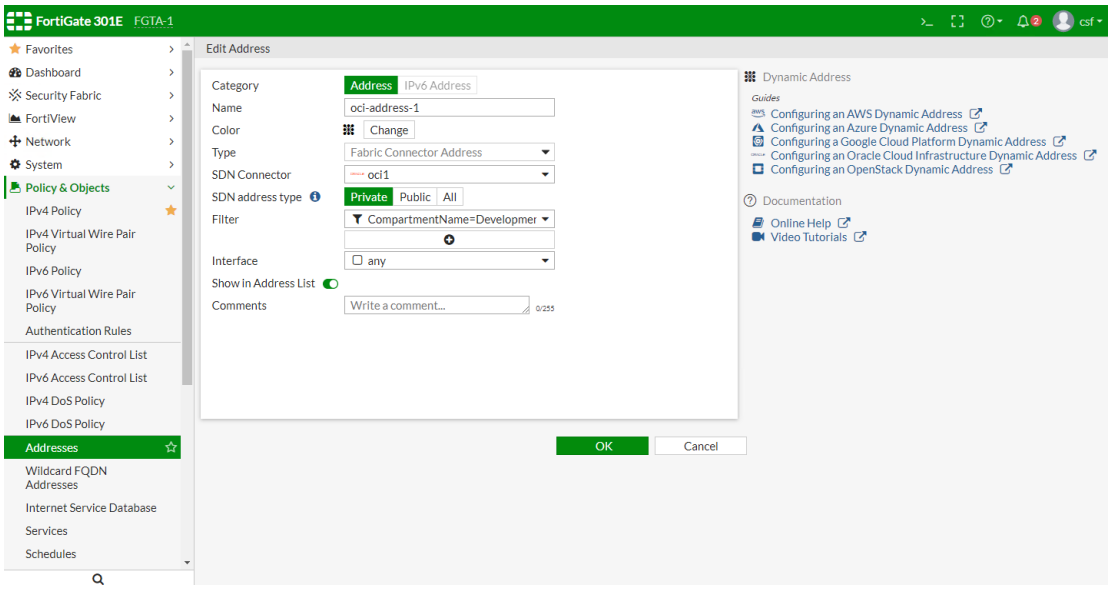


7. Click *OK*.

To confirm that dynamic firewall addresses are resolved by the SDN connector:

1. In the CLI, check that the addresses are listed:

```
config firewall address
    edit "oci-address-1"
        set uuid 0b4a496e-8974-51e9-e223-fee75c935fb7
        set type dynamic
        set sdn "oci1"
        set filter "CompartmentName=DevelopmentEngineering"
        config list
            edit "10.0.0.11"
            next
            edit "10.0.0.118"
            next
            ...
            next
        end
    next
end
```

2. In the GUI, go to *Policy & Objects* > *Addresses* and hover the cursor over the address name.

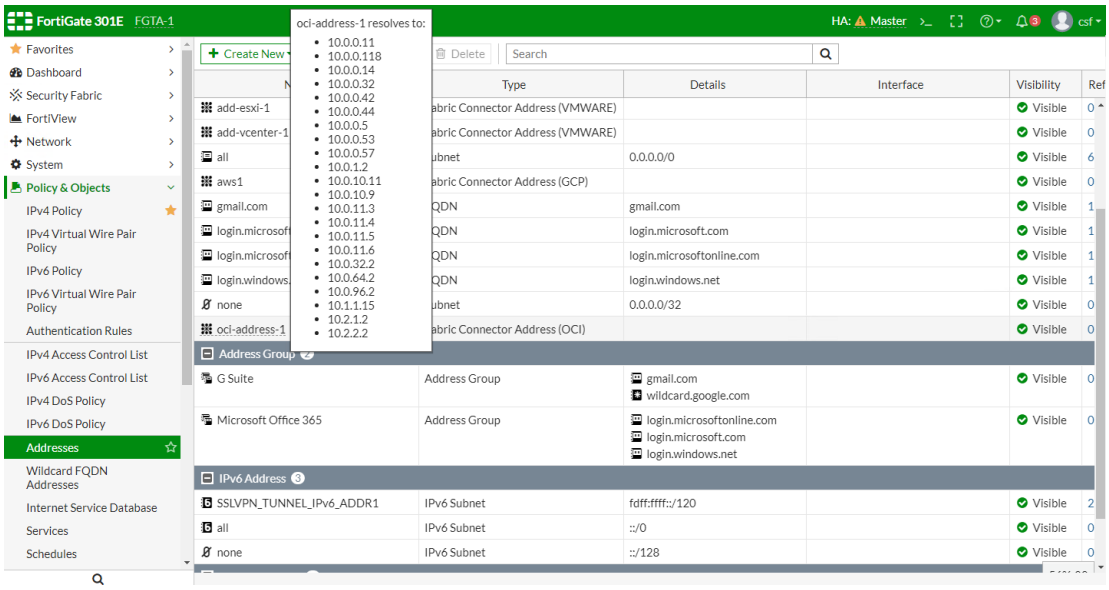


ClearPass endpoint connector via FortiManager

ClearPass Policy Manager (CPPM) is a network access system that can send information about authenticated users to third party systems, such as a FortiGate or FortiManager.

In this example, communications are established between CPPM and FortiManager, and then the FortiManager forwards information to a managed FortiGate. On the FortiGate, the user information can be used in firewall policies and added to FSSO dynamic addresses.

Configure the FortiManager

Establish communications between FortiManager and CPPM so that FortiManager can synchronize CPPM user groups. See Creating a ClearPass connector in the FortiManager Administration Guide.

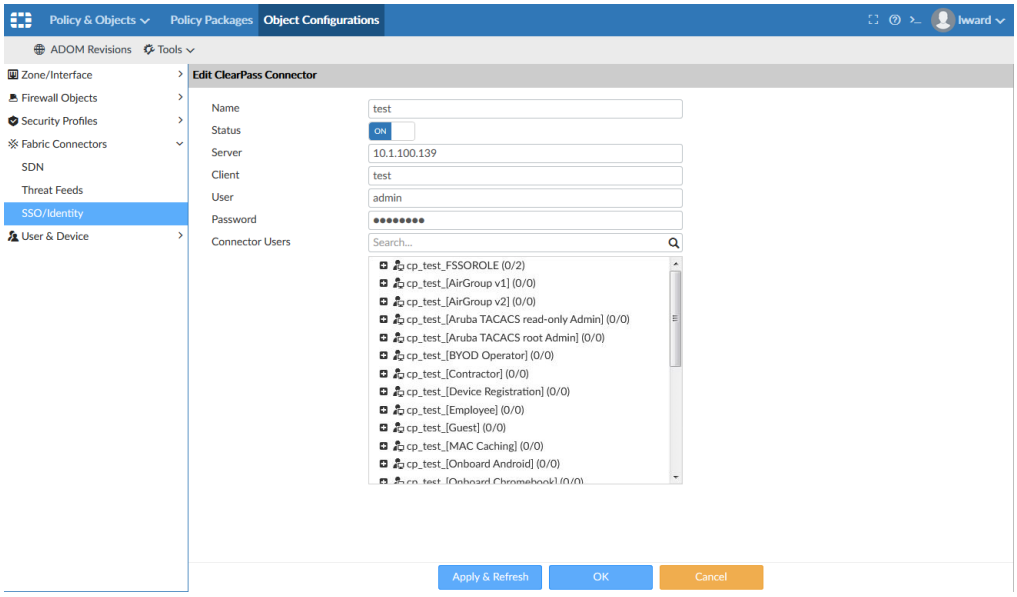


FortiManager forwards the group information to managed FortiGates.

Add CPPM FSSO user groups to a local user group

To add CPPM user groups to a local user group in the GUI:

1. On the FortiGate, go to *User & Device* > *User Groups*.
2. Click *Create New*.
3. Enter a name for the group and set *Type* to *Fortinet Single Sign-On (FSSO)*.
4. Click the *Members* field, and add one or more FSSO groups.
   FSSO groups can come from multiple sources; CPPM FSSO groups are prefixed with *cp_* and are listed under the *FortiManager* heading.

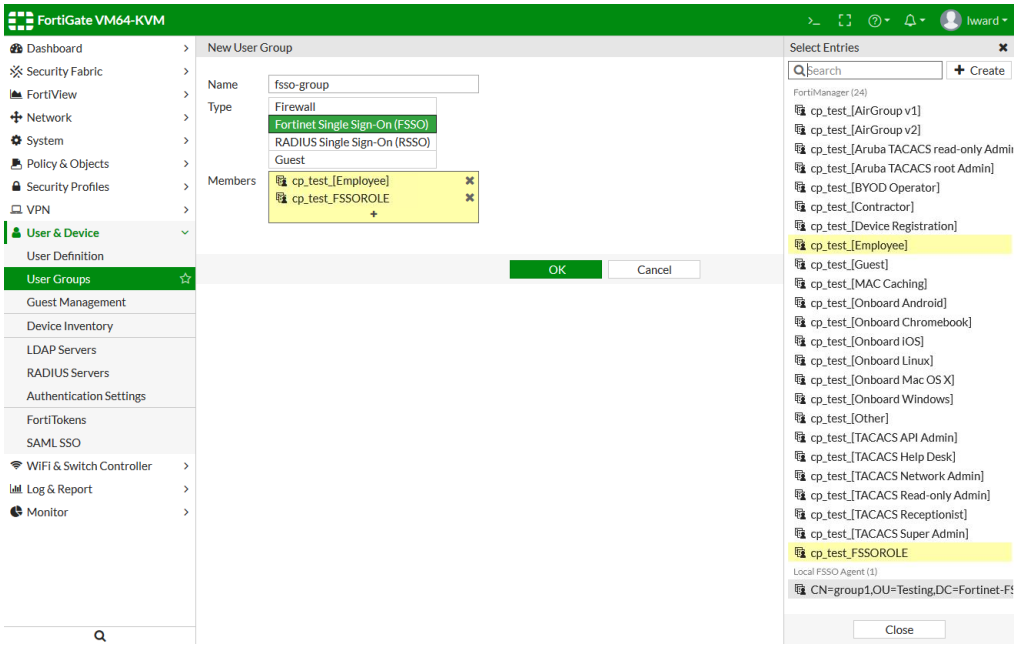

5. Click *OK*.

To add CPPM user groups to a local user group in the CLI:


```
config user group
    edit fsso-group
        set group-type fsso-service
        set member "cp_test_[Employee]" "cp_test_FSSOROLE"
    next
end
```

Use the local FSSO user group in a firewall policy

To add the local FSSO user group to a firewall policy in the GUI:

1. Go to *Policy & Objects* > *IPv4 Policy*.
2. Create a new policy, or edit an existing one.

3. Click in the *Source* field and add the *fsso-group* user group.

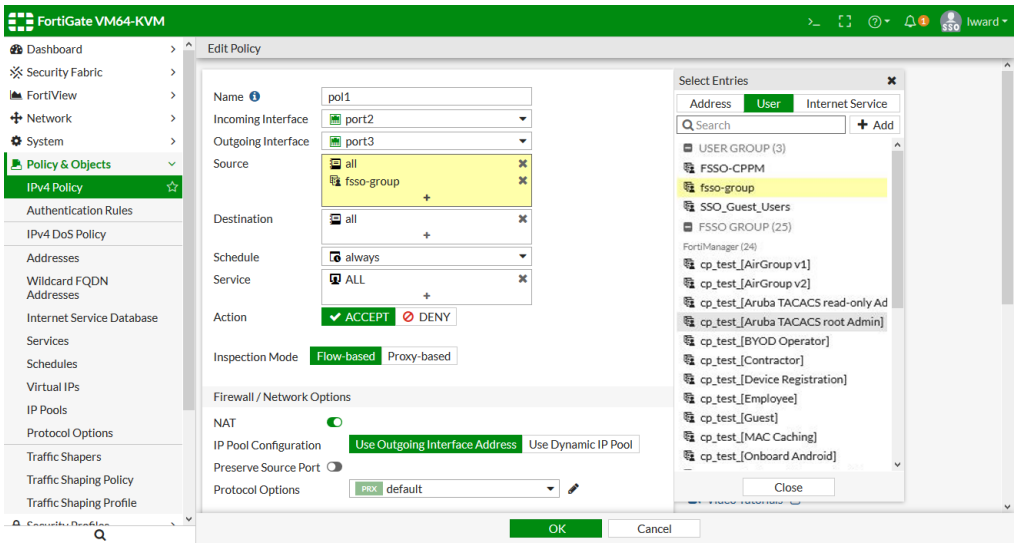

CPPM user groups can also be added directly to the policy.

4. Click *OK*.

To add the local FSSO user group to a firewall policy in the CLI:


```
config firewall policy
    edit 1
        set name "pol1"
        set uuid 2b88ed8a-c906-51e9-fb25-8cb12172acd8
        set srcintf "port2"
        set dstintf "port3"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set logtraffic all
        set groups "fsso-group"
        set nat enable
    next
end
```

Verification

To verify that a user was added to the FSSO list on the FortiGate:

1. Log on to the client and authenticate with CPPM.
   After successful authentication, the user is added to the FSSO list on the FortiGate.

2. On the FortiGate, go to *Monitor* > *Firewall User Monitor* to verify that the user was added.

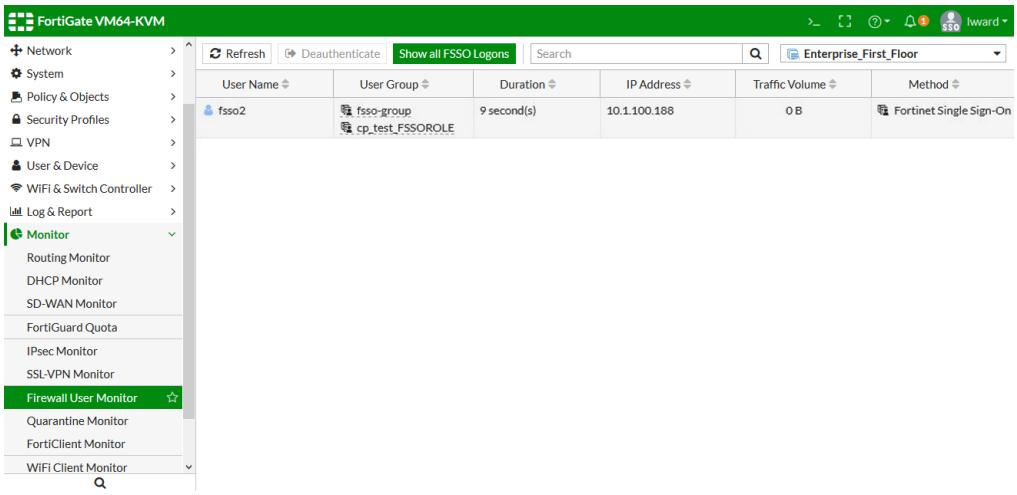

The user group *cp_test_FSSOROLE* is listed separately because the user is a member of that group on the CPPM.

To verify that traffic can pass the firewall:

1. Log on to the client and browse to an external website.
2. On the FortiGate, go to *FortiView* > *Sources*.
3. Double-click on the user and select the *Destinations* tab to verify that traffic is being passed by the firewall.

To verify the user address groups:

```
show user adgrp
    config user adgrp
        edit "cp_test_FSSOROLE"
            set server-name "FortiManager"
        next
        edit "cp_test_[AirGroup v1]"
            set server-name "FortiManager"
        next
        edit "cp_test_[AirGroup v2]"
            set server-name "FortiManager"
        next
        edit "cp_test_[Aruba TACACS read-only Admin]"
            set server-name "FortiManager"
        next
        edit "cp_test_[Aruba TACACS root Admin]"
            set server-name "FortiManager"
        next
        edit "cp_test_[BYOD Operator]"
            set server-name "FortiManager"
        next
        edit "cp_test_[Contractor]"
            set server-name "FortiManager"
        next
        edit "cp_test_[Device Registration]"
            set server-name "FortiManager"
        next
        ...
```


```
    edit "CN=group1,OU=Testing,DC=Fortinet-FSSO,DC=COM"
        set server-name "Local FSSO Agent"   <----- !!!
    next
end
```

Cisco pxGrid fabric connector


You can create an endpoint connector to Cisco pxGrid by using FortiManager. FortiManager dynamically collects updates from pxGrid and forwards them to FortiGate by using the Fortinet Single Sign On (FSSO) protocol.

To create a Cisco pxGrid fabric connector:


1. On FortiManager, create an SSO Connector to Cisco ISE.
   Communication between FortiManager and Cisco ISE is secured by using TLS. FortiManager requires a client certificate issued by Cisco ISE. FortiManager uses the certificate to authenticate to Cisco ISE.

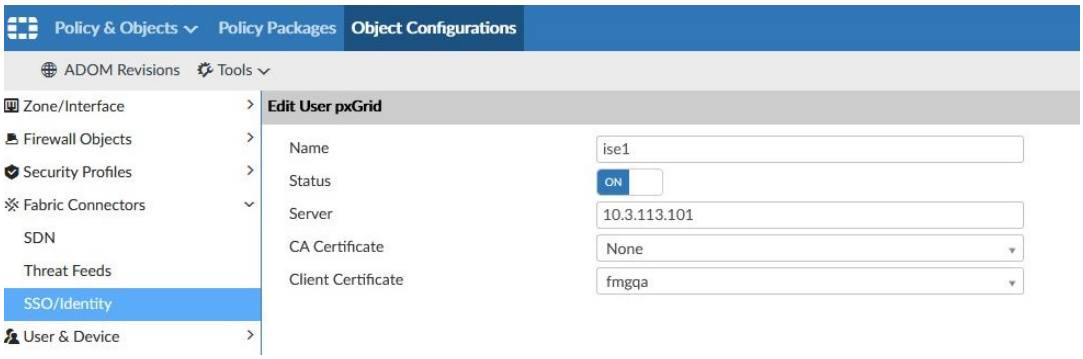


2. On FortiManager, map Cisco ISE groups to a Fortinet FSSO group.
   Once a secured communication channel is established, Cisco sends all user groups to FortiManager. The FortiManager administrator can select specific groups and map them to Fortinet FSSO groups.

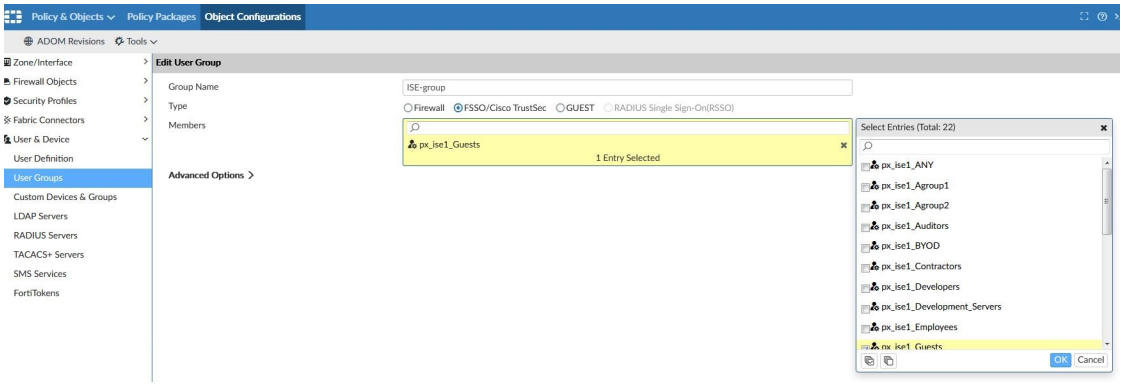

3. On FortiManager, add Fortinet FSSO group to a firewall policy in a policy package.

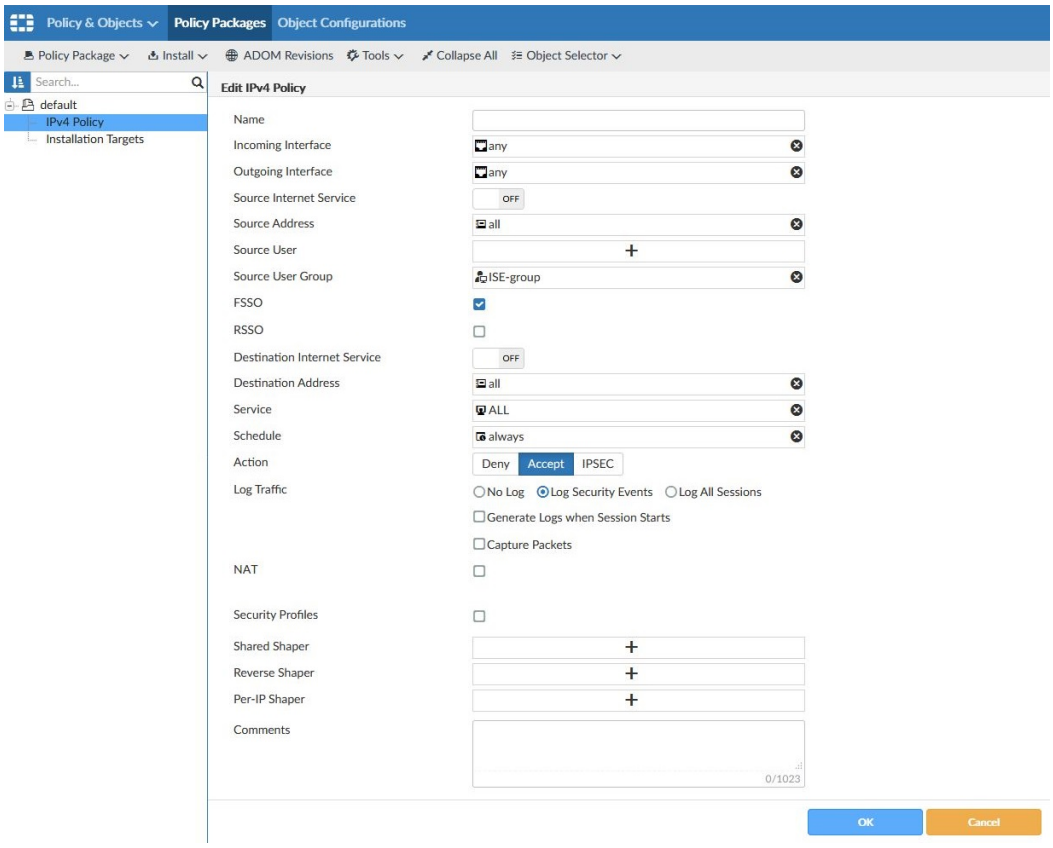

4. On FortiManager, synchronize the policy package to the firewall for the managed FortiGate.

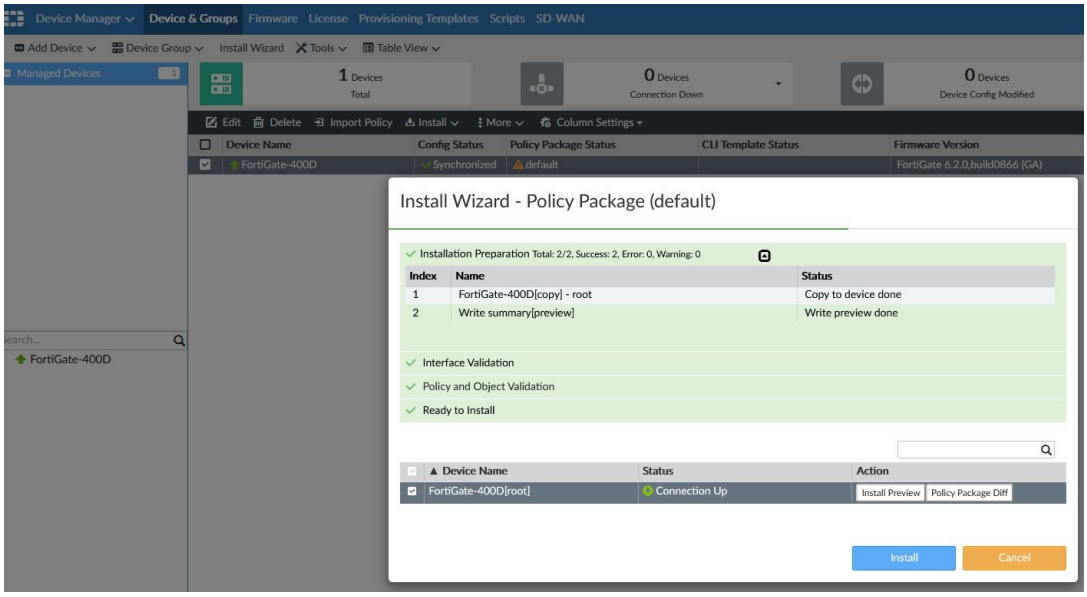


5. On FortiGate, verify that the synced firewall policy contains the correct FSSO group and that all FSSO-related information in `user adgrp` is correct.

```
config firewall policy
    edit 1
        set uuid b803052e-562a-51e9-0561-82525c8bcaa9
        set srcintf "any"
        set dstintf "any"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set groups "ISE-group"
    next
end

FortiGate-400D # show user adgrp
config user adgrp
    edit "px_ise1_ANY"
        set server-name "FortiManager"
    next
    edit "px_ise1_Agroup1"
        set server-name "FortiManager"
    next
    edit "px_ise1_Agroup2"
        set server-name "FortiManager"
    next
    edit "px_ise1_Auditors"
        set server-name "FortiManager"
    next
    edit "px_ise1_BYOD"
        set server-name "FortiManager"
    next
    edit "px_ise1_Contractors"
        set server-name "FortiManager"
    next
    edit "px_ise1_Developers"
        set server-name "FortiManager"
    next
    edit "px_ise1_Development_Servers"
        set server-name "FortiManager"
    next
    edit "px_ise1_Employees"
        set server-name "FortiManager"
    next
    edit "px_ise1_Guests"
        set server-name "FortiManager"
    next
    edit "px_ise1_HR"
        set server-name "FortiManager"
    next
    edit "px_ise1_Network_Services"
        set server-name "FortiManager"
```

6. After successful user authentication on Cisco ISE, verify that information is forwarded to FortiManager. On FortiManager, the icon next to the authenticated user in *pxGrid Monitor* should be green.

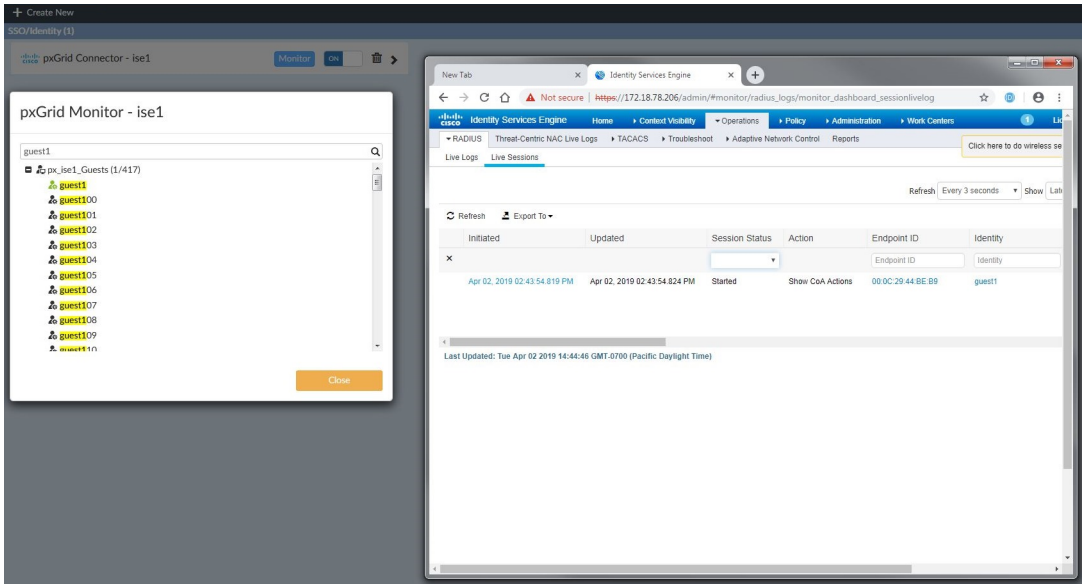

FortiGate should have two entries: one in the firewall-authenticated user list and one in the FSSO logged-on user list.

In the FSSO logged-on user list, you can view both groups. You view the group that the user belongs to on Cisco ISE and the Fortinet FSSO group.

```
FortiGate-400D #
FortiGate-400D # dia deb authd fsso l
----FSSO logons----
IP: 10.1.100.188  User: guest1  Groups: px_ise1_Guests  Workstation:  MemberOf: ISE-group
Total number of logons listed: 1, filtered: 0
----end of FSSO logons----

FortiGate-400D # dia firewall auth l

10.1.100.188, guest1
       type: fsso, id: 0, duration: 59694, idled: 59694
       server: FortiManager
       packets: in 0 out 0, bytes: in 0 out 0
       group_id: 2
       group_name: ISE-group

----- 1 listed, 0 filtered ------
```


Cisco ACI SDN connector

You can use Cisco ACI (Application Centric Infrastructure) SDN connectors in dynamic firewall addresses.

The Fortinet SDN Connector for Cisco ACI and Nuage Networks is a standalone connector that connects to SDN controllers within Cisco ACI and Nuage Networks. You must configure a connection to the Fortinet SDN connector in FortiOS to query the dynamic addresses.


To configure a Cisco ACI connector in the GUI:

1. Create the Cisco ACI SDN connector:
   a. Go to *Security Fabric* > *Fabric Connectors* and click *Create New*.
   b. In the *Private SDN* section, click *Application Centric Infrastructure (ACI)*.
   c. Configure the settings as needed.
   d. Click *OK*.

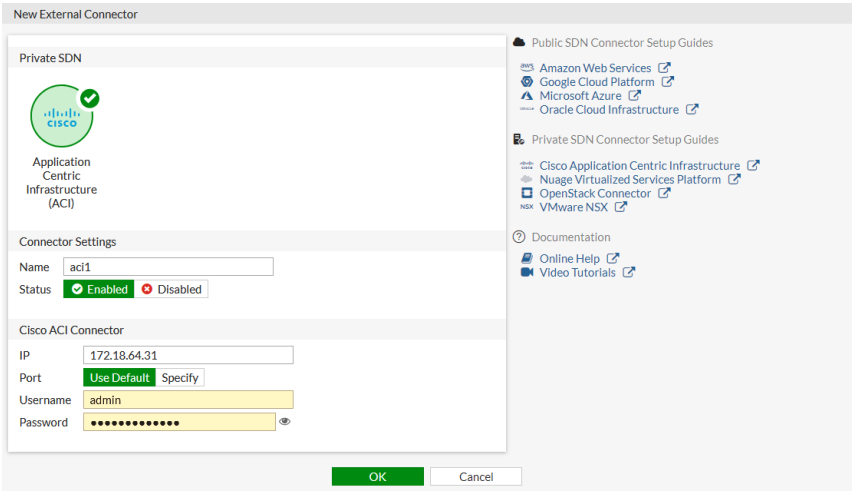

2. Create the dynamic firewall address for the connector:
   a. Go to *Policy & Objects* > *Addresses* and click *Create New* > *Address*.
   b. Configure the following settings:
      i. For *Type*, select *Dynamic*.
      ii. For *Sub Type*, select *Fabric Connector Address*.
      iii. For *SDN Connector*, select the first ACI connector.
      iv. Configure the remaining settings as needed.

c. Click *OK*.

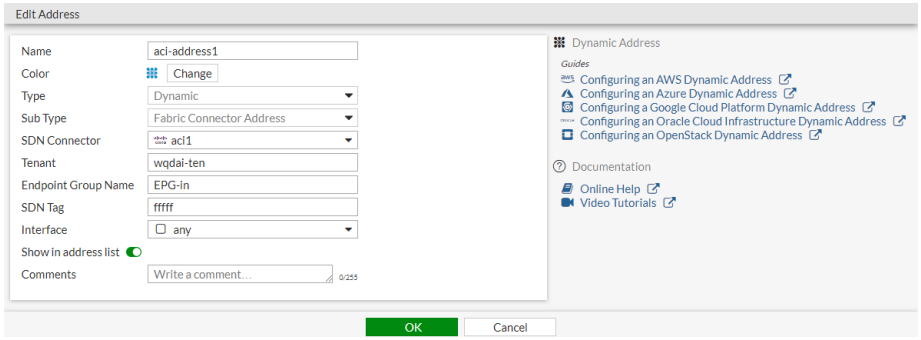

To verify the dynamic firewall IPs are resolved by the SDN connector in the GUI:

1. Go to *Policy & Objects* > *Addresses*.
2. In the address table, hover over the address to view which IPs it resolves to.

To configure a Cisco ACI connector in the CLI:

1. Create the SDN connector:

```
config system sdn-connector
    edit "aci1"
        set type aci
        set server "172.18.64.31"
        set username "admin"
        set password xxxxxxx
    next
end
```

2. Create the dynamic firewall address for the connector:

```
config firewall address
    edit "aci-address1"
        set type dynamic
        set sdn "aci1"
        set color 17
        set tenant "wqdai-ten"
        set epg-name "EPG-in"
        set sdn-tag "fffff"
    next
end
```

To verify the dynamic firewall IPs are resolved by the SDN connector in the CLI:

```
# diagnose firewall dynamic list

List all dynamic addresses:
aci1.aci.wqdai-ten.EPG-in.fffff: ID(171)
        ADDR(192.168.100.20)
```


Nuage SDN connector

Nuage SDN connectors can be used in dynamic firewall addresses.


The Fortinet SDN Connector for Cisco ACI and Nuage Networks is a standalone connector that connects to SDN controllers within Cisco ACI and Nuage Networks. You must configure a connection to the Fortinet SDN connector in FortiOS to query the dynamic addresses.

To configure a Nuage connector in the GUI:

1. Create the Nuage SDN connector:
   a. Go to *Security Fabric* > *Fabric Connectors* and click *Create New*.
   b. In the *Private SDN* section, click *Nuage Virtualized Services Platform*.
   c. Configure the settings as needed.
   d. Click *OK*.

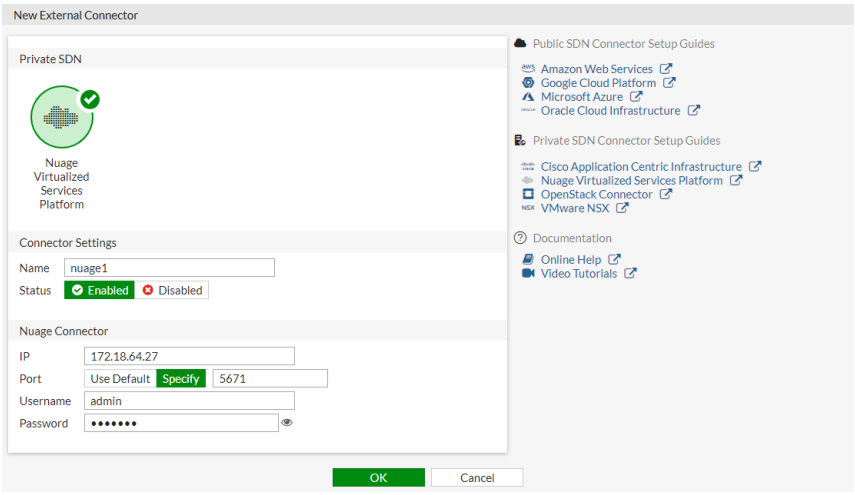

2. Create the dynamic firewall address for the connector:
   a. Go to *Policy & Objects* > *Addresses* and click *Create New* > *Address*.
   b. Configure the following settings:
      i. For *Type*, select *Dynamic*.
      ii. For *Sub Type*, select *Fabric Connector Address*.
      iii. For *SDN Connector*, select the first the first Nuage connector.
      iv. Configure the remaining settings as needed.
   c. Click *OK*.

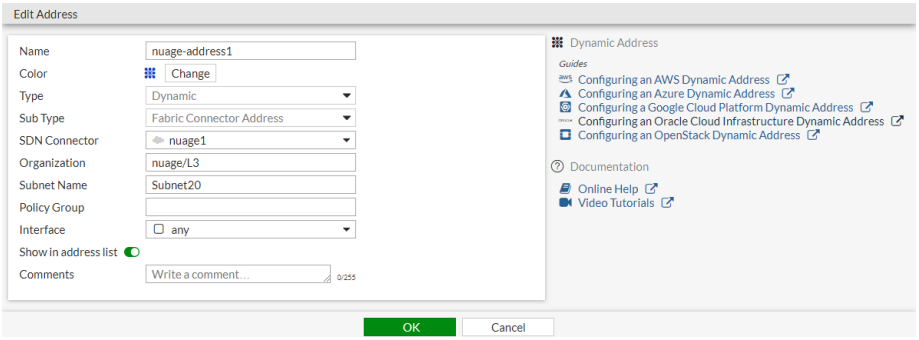

To verify the SDN connector resolves the dynamic firewall IP addresses in the GUI:

1. Go to *Policy & Objects* > *Addresses*.
2. In the address table, hover over an address to view which IP addresses it resolves to.

To configure a Nuage connector in the CLI:

1. Create the SDN connector:

```
config system sdn-connector
    edit "nuage1"
        set type nuage
        set server "172.18.64.27"
        set server-port 5671
        set username "admin"
        set password xxxxxxx
    next
end
```

2. Create the dynamic firewall address for the connector:

```
config firewall address
    edit "nuage-address1"
        set type dynamic
        set sdn "nuage1"
        set color 19
        set organization "nuage/L3"
        set subnet-name "Subnet20"
    next
end
```

To verify the SDN connector resolves the dynamic firewall IP addresses in the CLI:

```
# diagnose firewall dynamic list

List all dynamic addresses:
nuage1.nuage.nuage/L3.Subnet20.*: ID(196)
        ADDR(192.168.20.92)
        ADDR(192.168.20.240)
```

Multiple concurrent SDN connectors

You can configure multiple instances for every SDN connector. The specific connector instance must be specified when creating a dynamic firewall address.

This topic provides examples of how to create two Microsoft Azure SDN connectors and use them in new dynamic firewall addresses.



Multiple concurrent SDN/Cloud connectors are not supported yet for Cisco ACI or Nuage.

To create and use two new SDN connectors with the CLI:

1. Create two new SDN connectors:

```
config system sdn-connector
    edit "azure1"
        set type azure
```


```
        set tenant-id "942b80cd-bbbb-42a1-8888-4b21dece61ba"
        set subscription-id "2f96c44c-cccc-4621-bbbb-65ba45185e0c"
        set client-id "14dbd5cc-3333-4ea4-8888-68738141feb1"
        set client-secret xxxxx
        set update-interval 30
    next
    edit "azure2"
        set type azure
        set tenant-id "942b80cd-bbbb-42a1-8888-4b21dece61ba"
        set client-id "3baa0acc-ffff-4444-b292-0777a2c36be6"
        set client-secret xxxxx
        set update-interval 30
    next
end
```

2. Create new dynamic firewall addresses that use the new connectors:


```
config firewall address
    edit "azure-address-location1"
        set type dynamic
        set color 2
        set sdn azure1
        set filter "location=WestUs"
    next
    edit "azure-address-location2"
        set type dynamic
        set color 2
        set sdn azure2
        set filter "location=NorthEurope"
    next
end
```

To create and use two new SDN connectors with the GUI:


1. Create two new SDN connectors:
   a. Go to *Security Fabric* > *Fabric Connectors*, and click *Create New* in the toolbar.
   b. Click on *Microsoft Azure*.
   c. Fill in the required information, then click *OK*.

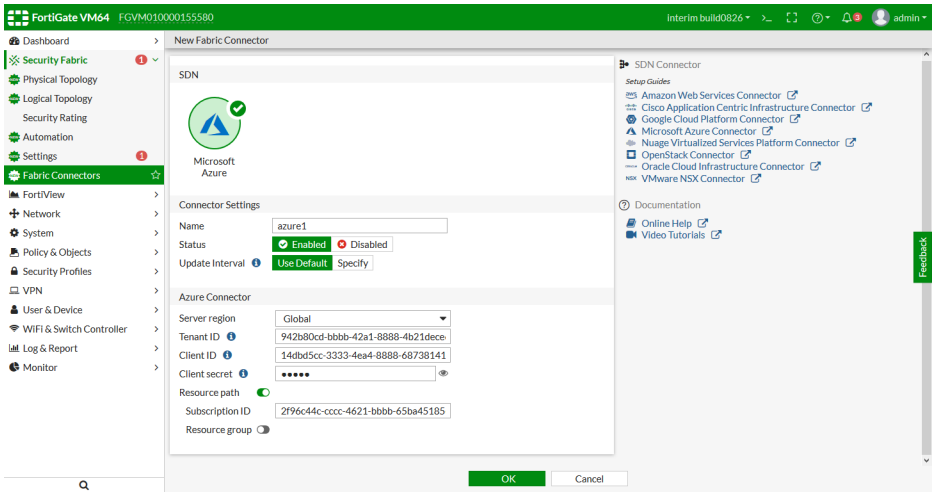

d. Repeat the above steps for the second connector.

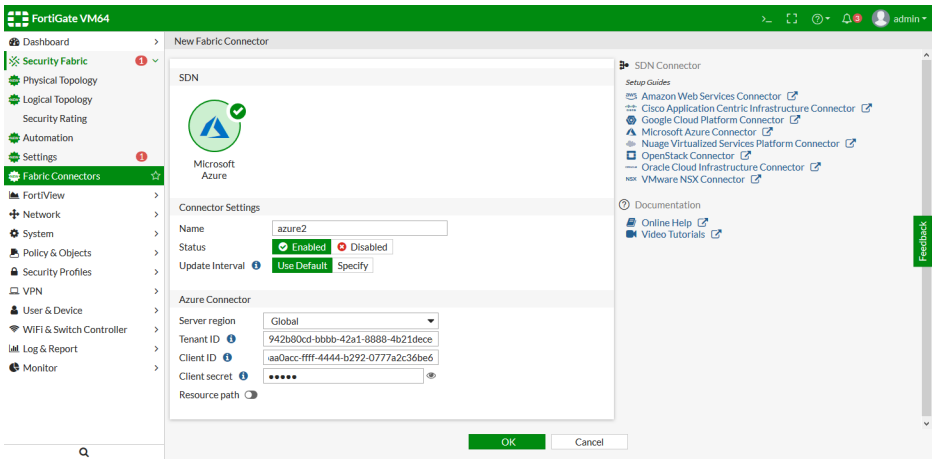

Two Microsoft Azure connectors will now be created.

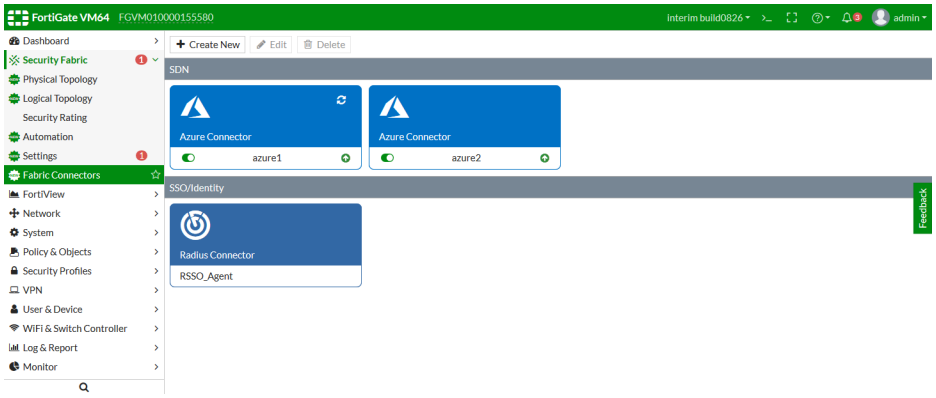


2. Create new dynamic firewall addresses that use the new connectors:

a. Go to *Policy and Objects* > *Addresses* and click *Create New* > *Address* in the toolbar.

b. Enter a name for the address, and select *Fabric Connector Address* for the *Type*.

c. Select one of the previously created SDN connectors from the *SDN Connector* drop down list.

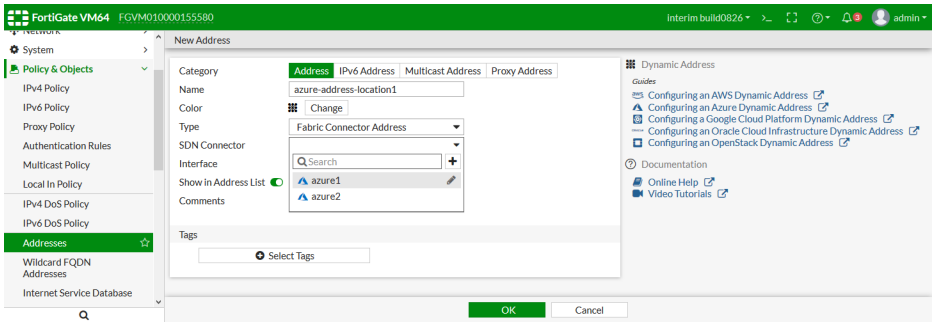

d. Configure the rest of the required information, then click *OK* to create the address.


e. Repeat the above steps to create the second address, selecting the other Microsoft Azure SDN connector.

Filter lookup in SDN connectors


When configuring dynamic address mappings for filters in SDN connectors for Azure, GCP, OpenStack, Kubernetes, and AliCloud, FortiGate can query the filters automatically.

To use the filter lookup:


1. Navigate to *Policy & Objects* > *Addresses*.
2. Create or edit an SDN connector type dynamic IP address.
   Supported SDN connector types include: AWS, Azure, GCP, OpenStack, Kubernetes, and AliCloud. The example below is for an Azure SDN connector.
3. In the address *Filter* field, you can perform the following actions:
   - List all available filters.

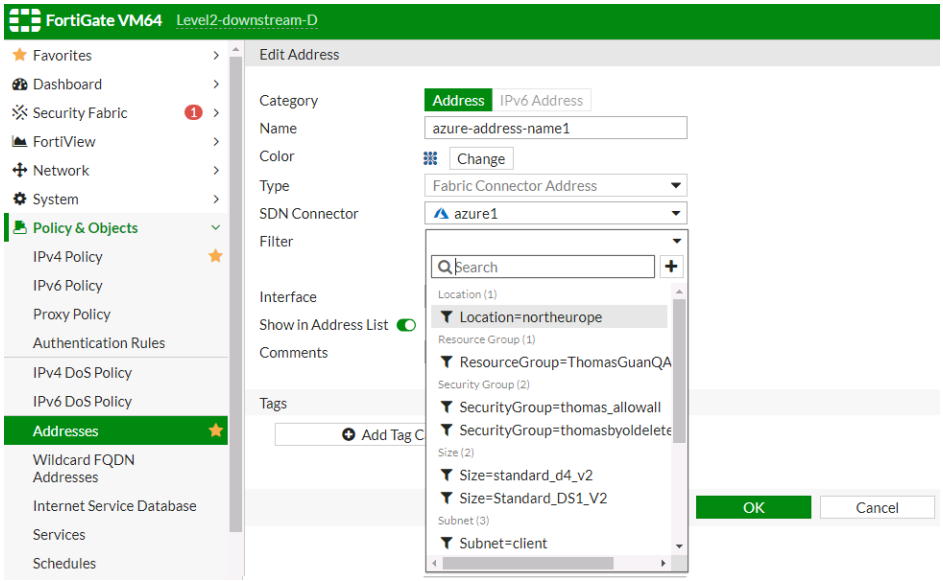


   - Search the available filters.

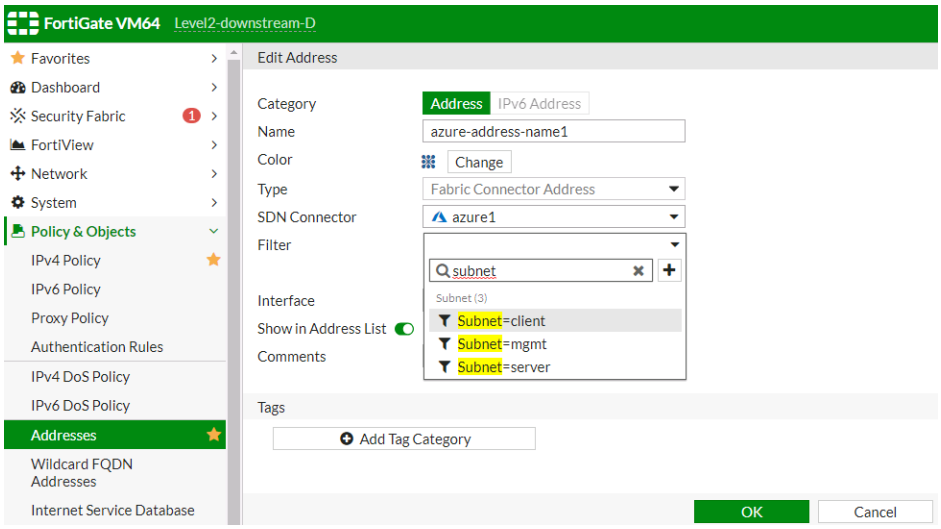

- Create custom filters.

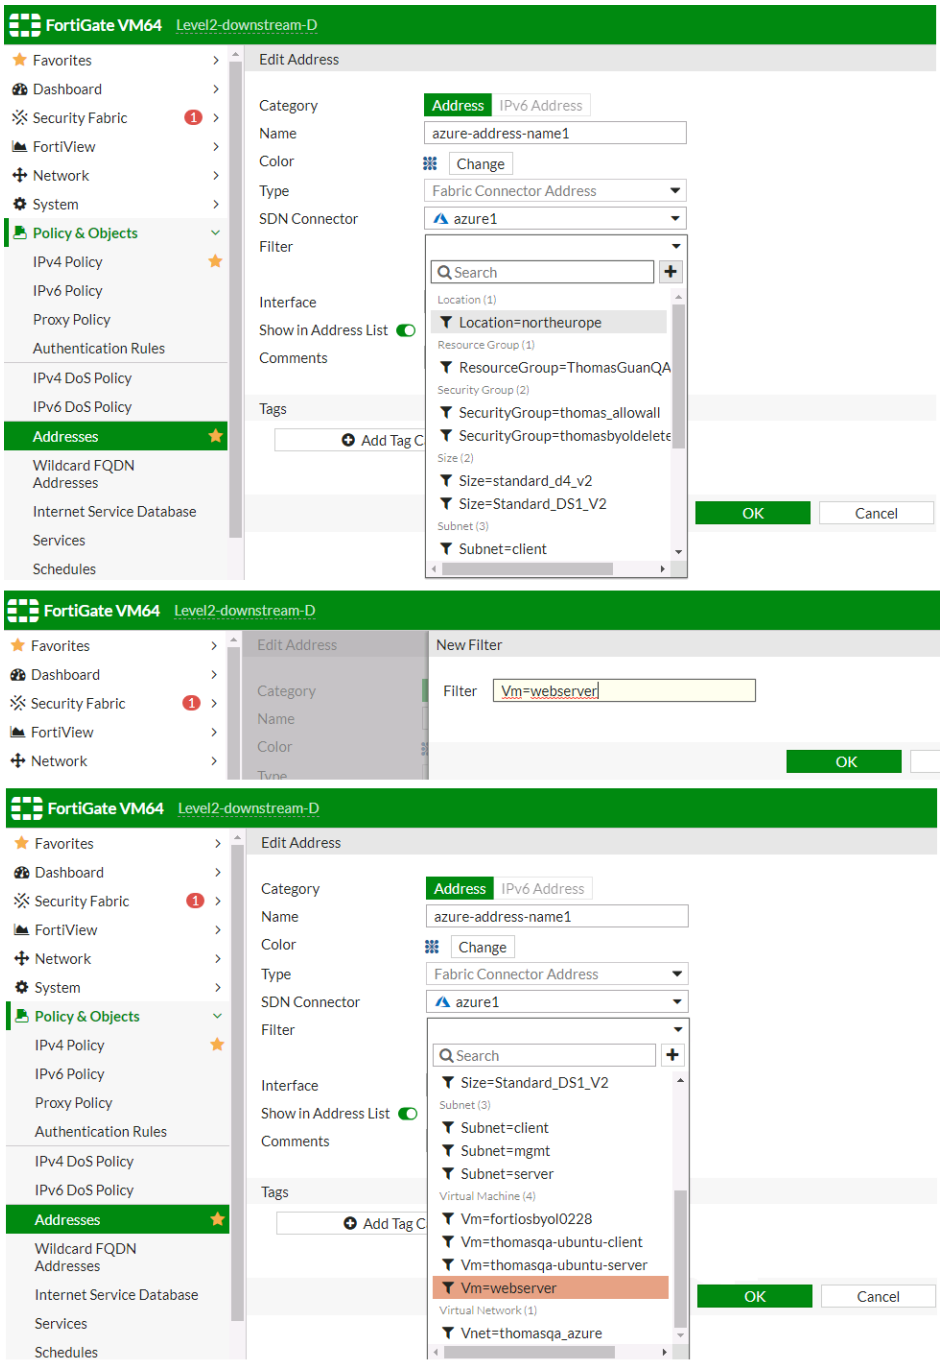

- Set filter logic [and|or].

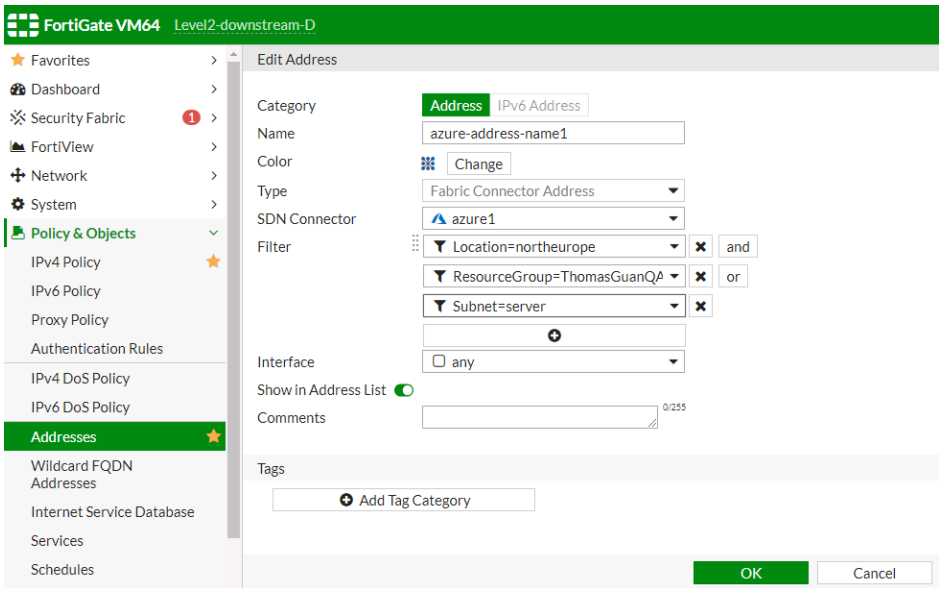

Support for wildcard SDN connectors in filter configurations

Wildcards are supported for SDN connectors when configuring dynamic address filters.


The following SDN connector types are currently supported:

- AWS
- Azure
- Google Cloud Platform
- Kubernetes
- OpenStack
- Oracle Cloud Infrastructure
- VMware ESXi

To configure a dynamic address filter for AWS in the GUI:


1. Create the SDN connector:
   a. Go to *Security Fabric* > *Fabric Connectors*.
   b. Click *Create New*.
   c. In the *Public SDN* section, click *Amazon Web Services (AWS)*.
   d. Configure the settings as needed.
   e. Click *OK*.
2. Create the dynamic firewall address:
   a. Go to *Policy & Objects* > *Addresses*.
   b. Click *Create New* > *Address*
   c. Enter a name for the address, then configure the following settings:
      - Set *Type* to *Dynamic*.
      - Set *Sub Type* to *Fabric Connector Address*.
      - Set *SDN Connector* to *aws1*.

- Set *SDN address type* to *Private*.
- For *Filter*, click *Create*, enter `Tag.Name=aws*`, the click *OK*.

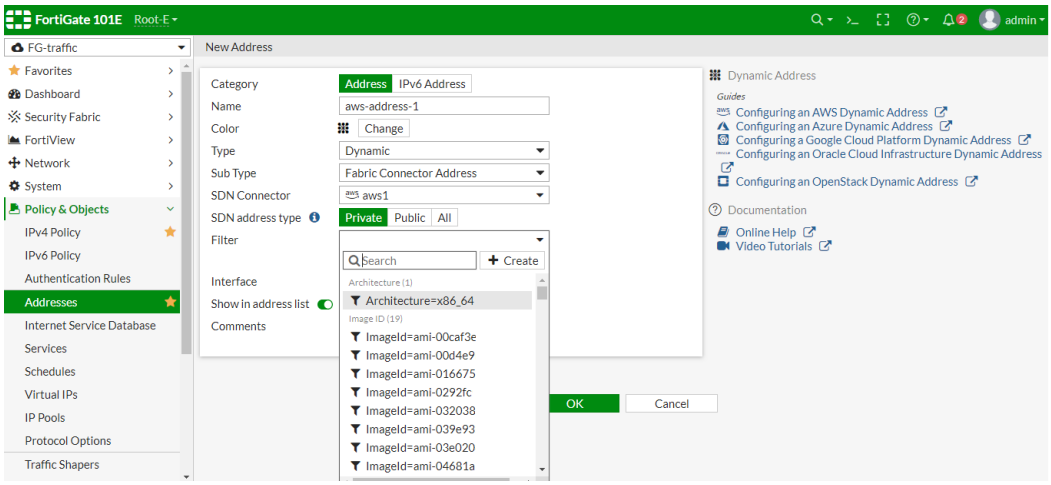


d. Click *OK*.

3. In the address table, hover over the address to view what IPs it resolves to.

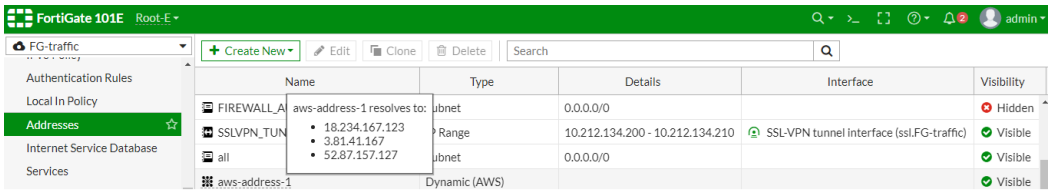

4. In AWS, verify to confirm the IP addresses match.

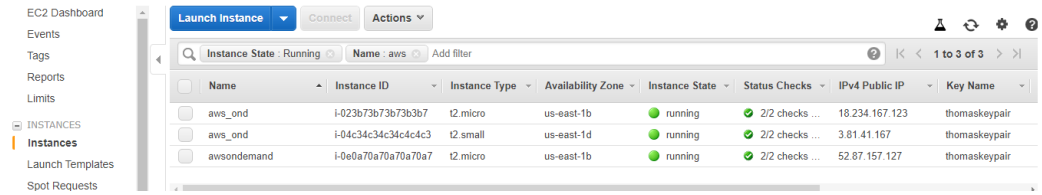

To configure a dynamic address filter for AWS in the CLI:

1. Configure the SDN connector:

```
config firewall address
    edit "aws-address-1"
        set type dynamic
        set sdn "aws1"
        set filter "Tag.Name=aws*"
        set sdn-addr-type public
    next
end
```

2. Create the dynamic firewall address and verify where the IP addresses resolve to:

```
config firewall address
    edit "aws-address-1"
        set type dynamic
        set sdn "aws1"
```

```
            set filter "Tag.Name=aws*"
            set sdn-addr-type public
            config list
                edit "18.234.167.123"
                next
                edit "3.81.41.167"
                next
                edit "52.87.157.127"
                next
            end
        next
    end
```

3. In AWS, verify that the IP addresses match.

Kubernetes (K8s) SDN connectors

The following topics provide information about configuring Kubernetes SDN connectors:

- Private Cloud K8s SDN connector on page 183
- AWS Kubernetes (EKS) SDN connector on page 187
- Azure Kubernetes (AKS) SDN connector on page 192
- GCP Kubernetes (GKE) SDN connector on page 189
- Oracle Kubernetes (OKE) SDN connector on page 195

Private Cloud K8s SDN connector

FortiOS automatically updates dynamic and cluster IP addresses for Kubernetes (K8s) by using a K8s SDN connector, enabling FortiOS to manage K8s pods as global address objects, as with other connectors. This includes mapping the following attributes from K8s instances to dynamic address groups in FortiOS:

Filter	Description
Namespace	Filter service IP addresses in a given namespace.
ServiceName	Filter service IP addresses by the given service name.
NodeName	Filter node IP addresses by the given node name.
PodName	Filter IP addresses by the pod name.
Label.XXX	Filter service or node IP addresses with the given label XXX. For example: `K8S_Label.app=nginx`.

FortiOS 6.2.3 and later collects cluster IP addresses in addition to external IP addresses for exposed K8s services.



There is no maximum limit for the number of IP addresses populated with the filters.

To obtain the IP address, port, and secret token in K8s:

1. When configuring the K8s SDN connector in FortiOS, you must provide the IP address and port that the K8s deployment is running on. Run `kubectl cluster-info` to obtain the IP address and port. Note down the IP address and port. The following shows the IP address and port for a local cluster:

```
[root@k8smaster ~]# kubectl cluster-info
Kubernetes master is running at https://172.17.215.10:6443
KubeDNS is running at https://172.17.215.10:6443/api/v1/namespaces/kube-system/services/kube-dns:dns/proxy
```

   The following shows the IP address and port for customer-managed K8s on Google Cloud Platform:

```
@cloudshell:~ (dev-project-001-166400)$ kubectl cluster-info
Kubernetes master is running at https://35.227.148.44
GLBCDefaultBackend is running at https://35.227.148.44/api/v1/namespaces/kube-system/services/default-http-backend:http/proxy
```

2. Generate the authentication token:
   a. Create a service account to store the authentication token:
      i. Run the `kubectl create serviceaccount <Service_account_name>` command. For example, if the service account name is fortigateconnector, the command is `kubectl create serviceaccount fortigateconnector`.
      ii. Run the `kubectl get serviceaccounts` command to verify that you created the service account. The account should show up in the service account list.
   b. Create a cluster role. K8s 1.6 and later versions allow you to configure role-based access control (RBAC). RBAC is an authorization mechanism to manage resource permissions on K8s. You must create a cluster role to grant the FortiGate permission to perform operations and retrieve objects:
      i. Create the yaml file by running the `vi <filename>.yaml` command. For example, if the yaml file name is fgtclusterrole, the command is `vi fgtclusterrole.yaml`. Paste the following:

```
apiVersion: rbac.authorization.k8s.io/v1
kind: ClusterRole
metadata:
# "namespace" omitted since ClusterRoles are not namespaced
 name: fgt-connector


rules:
- apiGroups: [""]

  resources: ["pods", "namespaces", "nodes" , "services"]
  verbs: ["get", "watch", "list"]
```

      The resources list specifies the objects that FortiOS can retrieve. The verbs list specifies the operations that FortiOS can perform.
      ii. Run the `Kubectl apply -f <filename>.yaml` command to apply the yaml file to create the cluster role. In this example, the command is `Kubectl apply -f fgtclusterrole.yaml`.
      iii. Run the `kubectl create clusterrolebinding fgt-connector --clusterrole=<cluster_rolename> --serviceaccount=default:<service_account_name>` to attach the cluster role to the service account. In this example, the command is `kubectl create clusterrolebinding fgt-connector --clusterrole=fgt-connector --serviceaccount=default:fortigateconnector`.
   c. Run the `kubectl get secrets -o jsonpath="{.items[?(@.metadata.annotations['kubernetes\.io/service-account\.name']=='fortigateconnector')].data.token}"| base64 --decode` command to obtain the secret token. As the token is Base64 encoded, the command includes `base64 --decode` to extract the decoded keystring. Note down the token.


To configure K8s SDN connector using the GUI:

1. Configure the K8s SDN connector:
   a. Go to *Security Fabric* > *External Connectors* > *Create New Connector*.
   b. Select *Kubernetes*.
   c. In the *IP* field, enter the IP address that you obtained in To obtain the IP address, port, and secret token in K8s: on page 184.
   d. In the *Port* field, select *Specify*, then enter the port that you obtained in To obtain the IP address, port, and secret token in K8s: on page 184.
   e. In the *Secret token* field, enter the token that you obtained in To obtain the IP address, port, and secret token in K8s: on page 184.
   f. Configure the other fields as desired.
2. Create a dynamic firewall address for the configured K8S SDN connector:
   a. Go to *Policy & Objects* > *Addresses*.
   b. Click *Create New*, then select *Address*.
   c. Configure the address as shown, selecting the desired filter in the *Filter* dropdown list. In this example, the K8s SDN connector will automatically populate and update IP addresses only for node instances that match the specified node name:

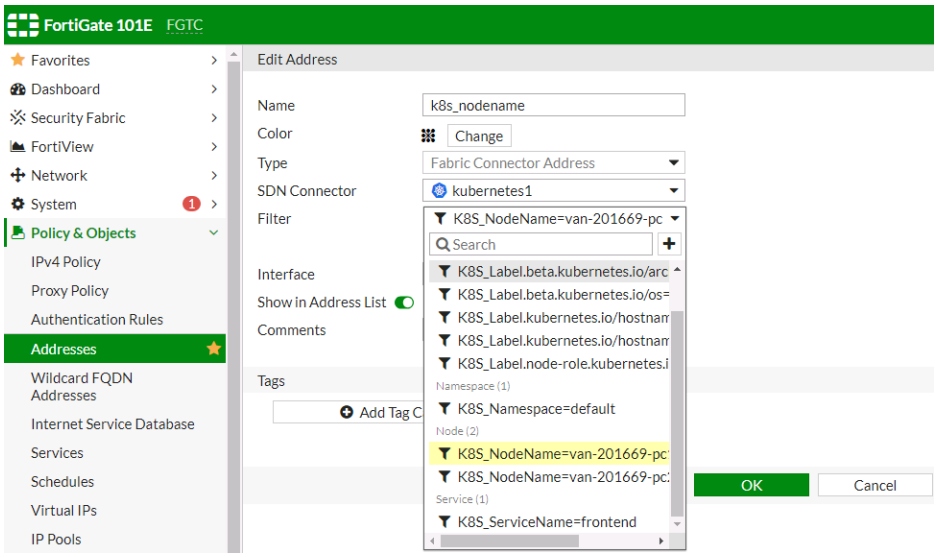

3. Ensure that the K8s SDN connector resolves dynamic firewall IP addresses:
   a. Go to *Policy & Objects* > *Addresses*.
   b. Hover over the address created in step 2 to see a list of IP addresses for node instances that match the node

name configured in step 2:

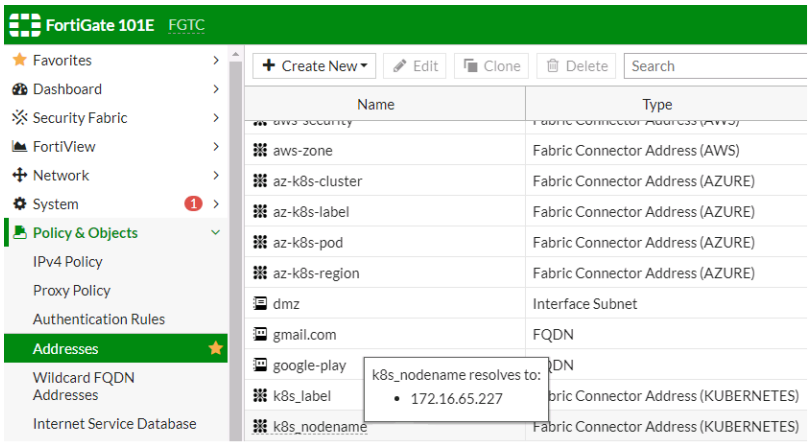

To configure K8s SDN connector using CLI commands:

1. Configure the K8s SDN connector:

```
config system sdn-connector
   edit "kubernetes1"
      set type kubernetes
      set server "<IP address obtained in To obtain the IP address, port, and secret
          token in K8s: on page 184>"
      set server-port <Port obtained in To obtain the IP address, port, and secret
          token in K8s: on page 184>
      set secret-token <Secret token obtained in To obtain the IP address, port, and
          secret token in K8s: on page 184>
      set update-interval 30
   next
end
```

2. Create a dynamic firewall address for the configured K8s SDN connector with the supported K8s filter. In this example, the K8s SDN connector will automatically populate and update IP addresses only for node instances that match the specified node name:

```
config firewall address
   edit "k8s_nodename"
      set type dynamic
      set sdn "kubernetes1"
      set filter "K8S_NodeName=van-201669-pc1"
   next
end
```

3. Confirm that the K8s SDN connector resolves dynamic firewall IP addresses using the configured filter:

```
config firewall address
   edit "k8s_nodename"
      set type dynamic
      set sdn "kubernetes1"
      set filter "K8S_NodeName=van-201669-pc1"
      config list
         edit "172.16.65.227"
         next
      end
   next
end
```

To troubleshoot the connection:

1. In FortiOS, run the following commands:
```
diagnose deb application kubed -1
diagnose debug enable
```
2. Reset the connection on the web UI to generate logs and troubleshoot the issue. The following shows the output in the case of a failure:

```
fortigate # diagnose deb application kubed -1
Debug messages will be on for 30 minutes.

fortigate # diagnose debug enable

fortigate # k8s: update sdn connector kubernetes1 status to enabled
k8s: update sdn connector kubernetes2 status to disabled
kubed sdn connector kubernetes1 prepare to update
getting token
kubed sdn connector kubernetes1 start updating
kube url: https://172.17.215.10:6443/api/v1/services
kube host: 172.17.215.10:6443:172.17.215.10
{"kind":"Status","apiVersion":"v1","metadata":{},"status":"Failure","message":"s
ervices is forbidden: User \"system:serviceaccount:default:fortigateconnector\"
cannot list resource \"services\" in API group \"\" at the cluster scope","reaso
n":"Forbidden","details":{"kind":"services"},"code":403}

kubed failed to list kubernetes services.
kubed failed to get IPs from kubedrnetes services.
kubed failed to get ip addr list
kubed reap child pid: 1226
```

The following shows the output in the case of a success:

```
 kube-system
k8s pod ip: 10.180.1.2, podname: metrics-server-v0.3.6-64655c969-djt8s, namespac
e: kube-system
k8s pod ip: 10.138.0.6, podname: netd-4qvvn, namespace: kube-system
k8s pod ip: 10.138.0.5, podname: netd-756ch, namespace: kube-system
k8s pod ip: 10.138.0.4, podname: netd-hr75d, namespace: kube-system
k8s pod ip: 10.138.0.6, podname: prometheus-to-sd-59trp, namespace: kube-system
k8s pod ip: 10.138.0.4, podname: prometheus-to-sd-q6qv5, namespace: kube-system
k8s pod ip: 10.138.0.5, podname: prometheus-to-sd-rq2zm, namespace: kube-system
k8s pod ip: 10.180.1.3, podname: stackdriver-metadata-agent-cluster-level-6c4f64
f8cc-zgnp5, namespace: kube-system
k8s pod ip: 10.180.0.3, podname: nginx-deployment-c68885cbb-sf6f5, namespace: ng
inx
k8s pod ip: 10.180.1.4, podname: nginx-deployment-c68885cbb-w5w2b, namespace: ng
inx
kubed get IP address list from Kubernetes:
kubed sdn connector kubernetes2 start updating IP addresses
kubed checking firewall address object gcp-address, vd 0
 address num change 0/3, new ip list:
  10.180.0.3
  10.180.1.4
  10.184.0.1
kubed sdn connector kubernetes2 finish updating IP addresses
kubed reap child pid: 1252
```

AWS Kubernetes (EKS) SDN connector


AWS SDN connectors support dynamic address groups based on AWS Kubernetes (EKS) filters.

To filter out the Kubernetes IP addresses, the following address filters have been introduced:


k8s_cluster	Name of Kubernetes cluster.
k8s_namespace	Namespace of a Kubernetes service or pod.
k8s_svcname	Name of a Kubernetes service.
k8s_nodename	Name of a Kubernetes node.
k8s_zone	Zone of a Kubernetes node.
k8s_region	Region of a Kubernetes node.
k8s_podname	Name of a Kubernetes pod.
k8s_label.xxx	Name of label of a Kubernetes resource (cluster/service/node/Pod).

To enable an AWS SDN connector to fetch IP addresses from AWS Kubernetes:


1. In *Fabric Connectors*, configure an SDN connector for AWS Kubernetes.

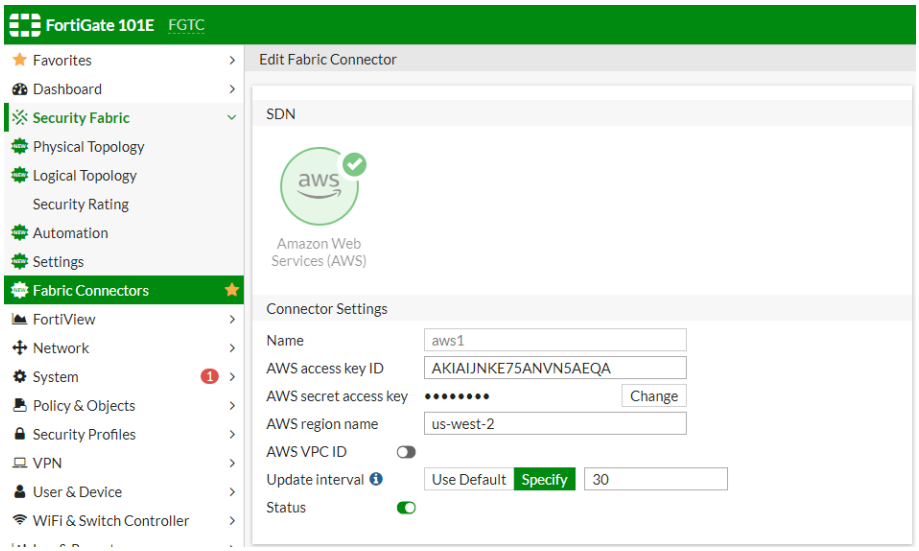

2. Go to *Policies & Objects* > *Addresses* and create a dynamic firewall address for the configured SDN connector using the supported Kubernetes filter.
3. To filter out the Kubernetes IP addresses, select the address filter or filters.

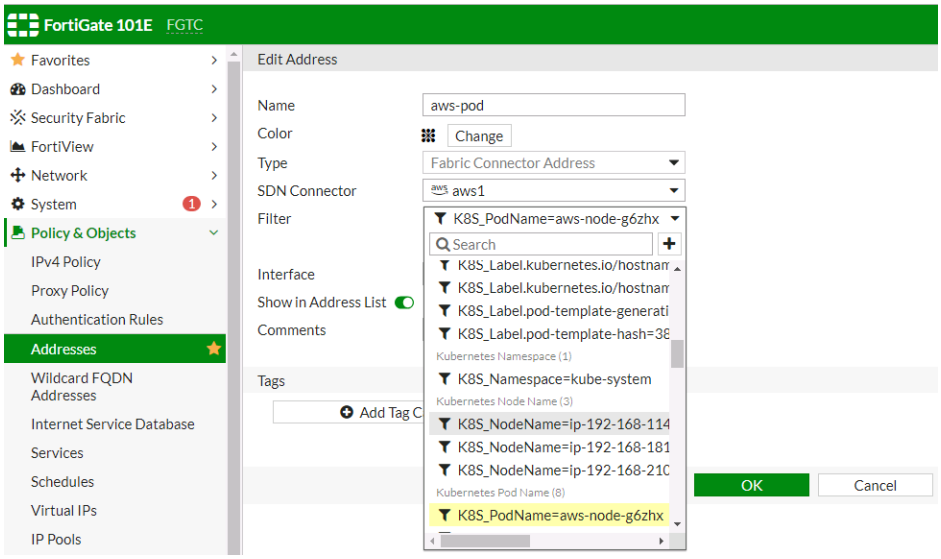

4. Configure the rest of the settings, then click *OK*.
   The dynamic firewall address IP is resolved by the SDN connector.

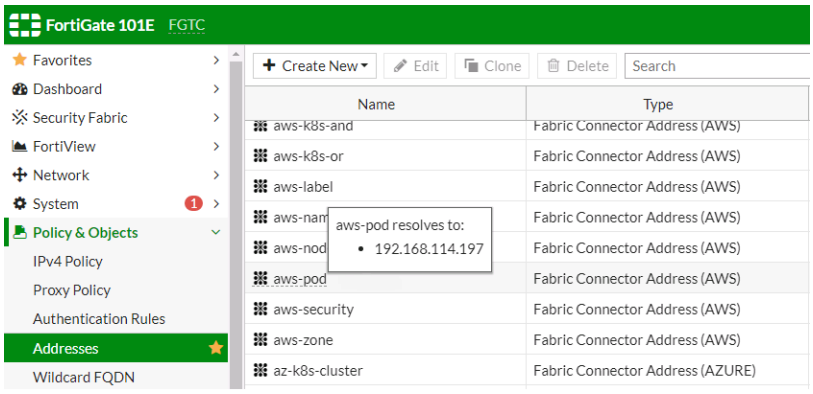

To configure an AWS Kubernetes SDN connector through the CLI:

1. Configure an SDN connector for Kubernetes:

```
config system sdn-connector
   edit "aws1"
      set type aws
      set access-key "AKIAIJNKE75ANVN5AEQA"
      set secret-key xxxxx
      set region "us-west-2"
      set update-interval 30
   next
end
```

2. Create a dynamic firewall address for the SDN connector with a supported Kubernetes filter:

```
config firewall address
   edit "aws-pod"
      set type dynamic
      set sdn "aws1"
      set filter "K8S_PodName=aws-node-g6zhx"
   next
end
```

The dynamic firewall address IP is resolved by the SDN connector:

```
config firewall address
   edit "aws-pod"
      set uuid a7a37298-19e6-51e9-851a-2c551ffc174d
      set type dynamic
      set sdn "aws1"
      set filter "K8S_PodName=aws-node-g6zhx"
      config list
         edit "192.168.114.197"
         next
      end
   next
end
```

GCP Kubernetes (GKE) SDN connector


Google Cloud Platform (GCP) SDN connectors support dynamic address groups based on GCP Kubernetes Engine (GKE) filters.

To filter out the Kubernetes IP addresses, the following address filters have been introduced:


k8s_cluster	Name of Kubernetes cluster.
k8s_nodepool	Name of node pool for a Kubernetes cluster.
k8s_namespace	Namespace of a Kubernetes service or pod.
k8s_servicename	Name of a Kubernetes service.
k8s_nodename	Name of a Kubernetes node.
k8s_zone	Zone of a Kubernetes node.
k8s_region	Region of a Kubernetes node.
k8s_podname	Name of a Kubernetes pod.
k8s_label.xxx	Name of label of a Kubernetes resource (cluster/service/node/Pod).

To enable a GCP SDN connector to fetch IP addresses from GKE:


1. In *Fabric Connectors*, configure an SDN connector for GCP.

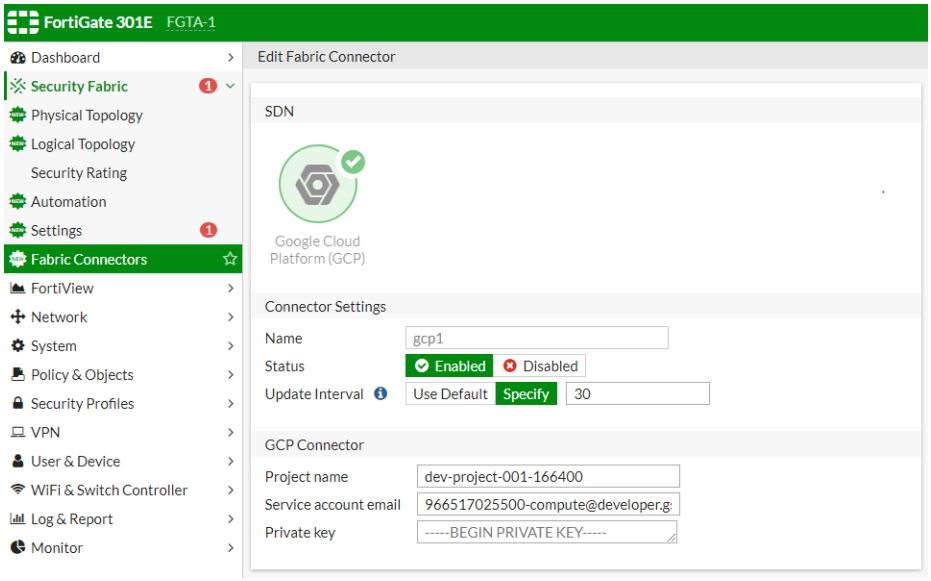

2. Go to *Policies & Objects* > *Addresses* and create a dynamic firewall address for the configured SDN connector using the supported Kubernetes filter.
3. To filter out the Kubernetes IP addresses, select the address filter or filters. In this example, the GCP SDN connector will automatically populate and update IP addresses only for instances that belong to the zhm-kc3 cluster:

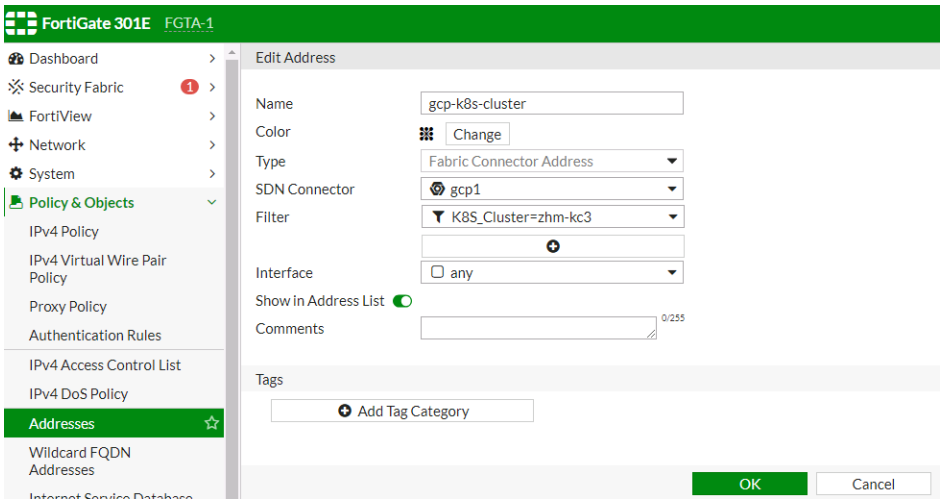

4. Configure the rest of the settings, then click *OK*.
   The dynamic firewall address IP is resolved by the SDN connector.

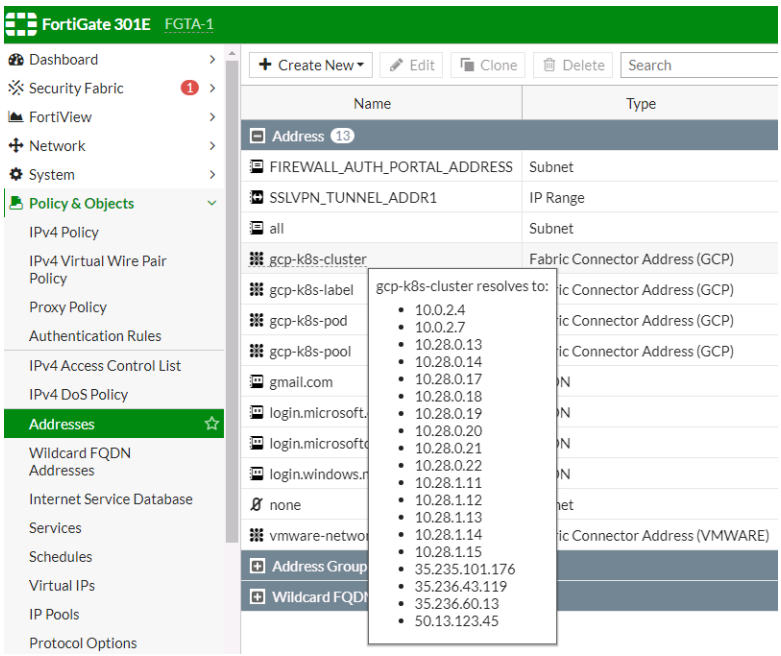

To configure a GCP Kubernetes SDN connector through the CLI:

1. Configure an SDN connector for Kubernetes:

```
config system sdn-connector
   edit "gcp1"
      set type gcp
      set gcp-project "dev-project-001-166400"
      set service-account "966517025500-compute@developer.gserviceaccount.com"
      set update-interval 30
   next
end
```

2. Create a dynamic firewall address for the SDN connector with a supported Kubernetes filter:

```
config firewall address
   edit "gcp-k8s-cluster"
```

```
        set type dynamic
        set sdn "gcp1"
        set filter "K8S_Cluster=zhm-kc3"
      next
    end
```

The dynamic firewall address IP is resolved by the SDN connector:

```
config firewall address
   edit "gcp-k8s-cluster"
      set uuid e4a1aa3c-25be-51e9-e9af-78ab2eebe6ee
      set type dynamic
      set sdn "gcp1"
      set filter "K8S_Cluster=zhm-kc3"
      config list
         edit "10.0.2.4"
         next
         edit "10.0.2.7"
         next
         edit "10.28.0.13"
         next
      end
   next
end
```

Azure Kubernetes (AKS) SDN connector

Azure SDN connectors support dynamic address groups based on Azure Kubernetes (AKS) filters.


To filter out the Kubernetes IP addresses, the following address filters have been introduced:

k8s_cluster	Kubernetes cluster name.
k8s_namespace	Namespace of a Kubernetes service or pod.
k8s_svcname	Kubernetes service name.
k8s_nodename	Kubernetes node name.
k8s_region	Kubernetes node region.
k8s_podname	Kubernetes pod name.
k8s_label.xxx	Name of label of a Kubernetes resource (cluster/service/node/Pod).


To enable an Azure SDN connector to fetch IP addresses from Azure Kubernetes:

1. Configure the Azure SDN connector:
   a. Go to *Security Fabric* > *Fabric Connectors*.
   b. Click *Create New*, and select *Azure*.
   c. Configure as shown substituting the region, tenant and client IDs, and client secret for your deployment. The

update interval is in seconds.

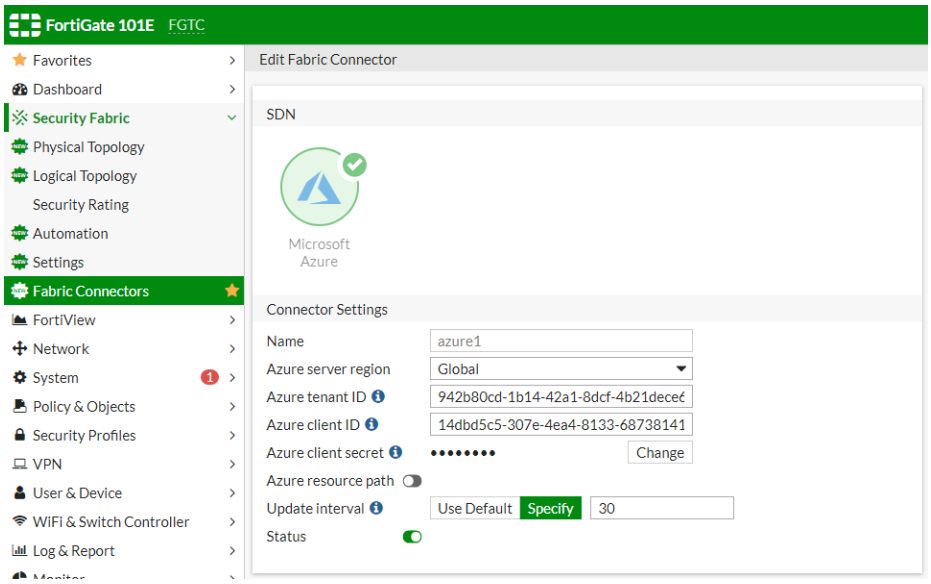


2. Create a dynamic firewall address for the configured K8S SDN connector:
   a. Go to *Policy & Objects* > *Addresses*.
   b. Click *Create New*, then select *Address*.
   c. Configure the address as shown, selecting the desired filter in the *Filter* dropdown list. In this example, the Azure SDN connector will automatically populate and update IP addresses only for instances that belong to the zhmKC cluster:

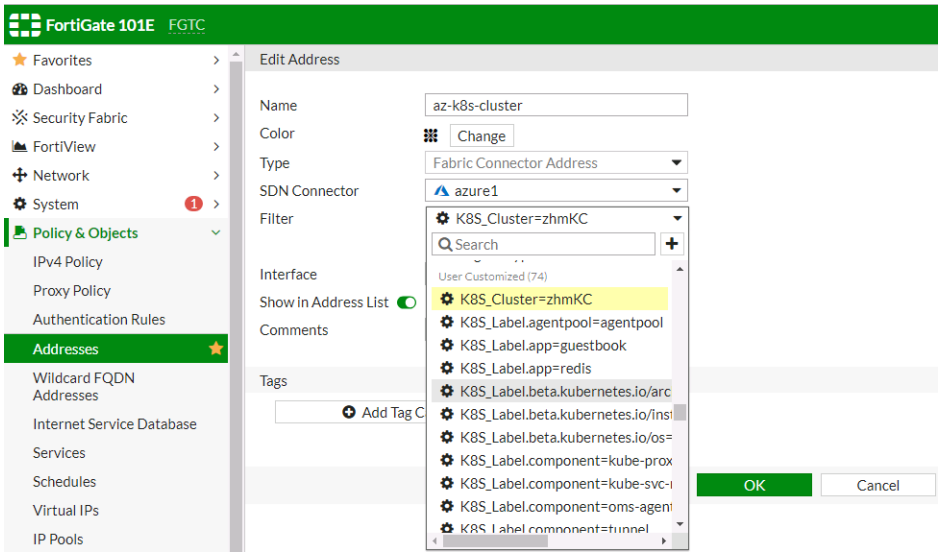

3. Ensure that the K8S SDN connector resolves dynamic firewall IP addresses:
   a. Go to *Policy & Objects* > *Addresses*.
   b. Hover over the address created in step 2 to see a list of IP addresses for instances that belong to the

zhmKC cluster as configured in step 2:

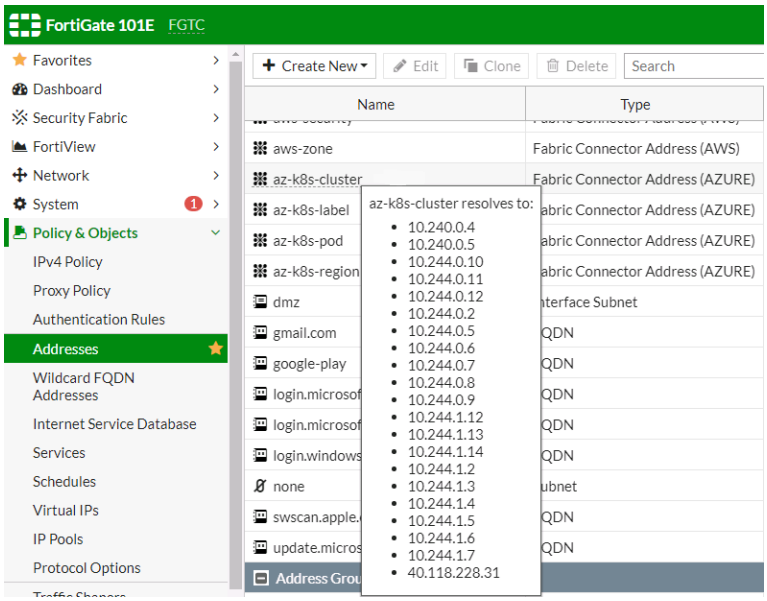

To configure an Azure Kubernetes SDN connector through the CLI:

1. Configure an SDN connector for Kubernetes:

```
config system sdn-connector
   edit "azure1"
      set type azure
      set tenant-id "942b80cd-1b14-42a1-8dcf-4b21dece61ba"
      set client-id "14dbd5c5-307e-4ea4-8133-68738141feb1"
      set client-secret xxxxx
      set update-interval 30
   next
end
```

2. Create a dynamic firewall address for the SDN connector with a supported Kubernetes filter. In this example, the Azure SDN connector will automatically populate and update IP addresses only for instances that belong to the zhmKC cluster:

```
config firewall address
   edit "az-k8s-cluster"
      set type dynamic
      set sdn "azure1"
      set filter "K8S_Cluster=zhmKC"
   next
end
```

3. Confirm that the Azure SDN connector resolves dynamic firewall IP addresses using the configured filter: :

```
config firewall address
   edit "az-k8s-cluster"
      set uuid c3859270-1919-51e9-4a99-47d8caf97a01
      set type dynamic
      set sdn "azure1"
      set filter "K8S_Cluster=zhmKC"
      config list
         edit "10.240.0.4"
         next
         edit "10.240.0.5"
```

```
            next
            edit "10.244.0.10"
            next
        end
    next
end
```

Oracle Kubernetes (OKE) SDN connector

OCI SDN connectors support dynamic address groups based on Oracle Kubernetes (OKE) filters.


To filter out the Kubernetes IP addresses, the following address filters have been introduced:

k8s_compartment	Name of compartment that the Kubernetes cluster created in.
k8s_cluster	Name of Kubernetes cluster.
k8s_namespace	Namespace of a Kubernetes service or pod.
k8s_servicename	Name of a Kubernetes service.
k8s_nodename	Name of a Kubernetes node.
k8s_region	Region of a Kubernetes node.
k8s_zone	Zone of a Kubernetes node.
k8s_podname	name of a Kubernetes pod.
k8s_label.xxx	Name of label of a Kubernetes resource (cluster/service/node/Pod)


To enable an OCI SDN connector to fetch IP addresses from Oracle Kubernetes:

1. Configure the OCI SDN connector:
   a. Go to *Security Fabric* > *Fabric Connectors*.
   b. Click *Create New*, and select *Oracle Cloud Infrastructure (OCI)*.
   c. Configure as shown substituting the region, tenant and client IDs, and client secret for your deployment. The


update interval is in seconds.

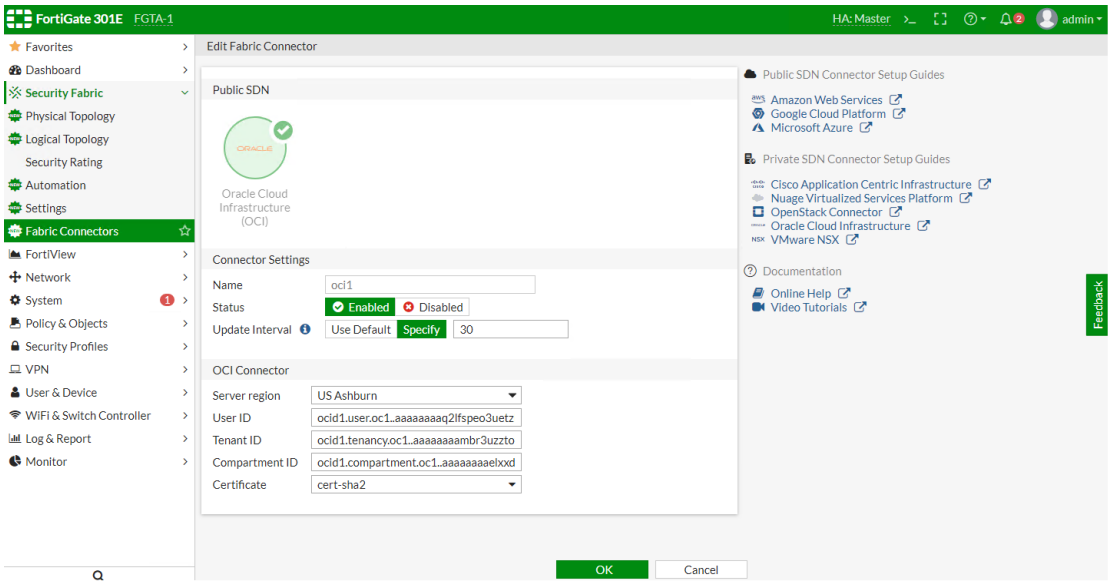

2. Create dynamic firewall addresses for the configured SDN connector with supported Kubernetes filter:
   a. Go to *Policy & Objects* > *Addresses*.
   b. Click *Create New*, then select *Address*.
   c. Configure the addresses.

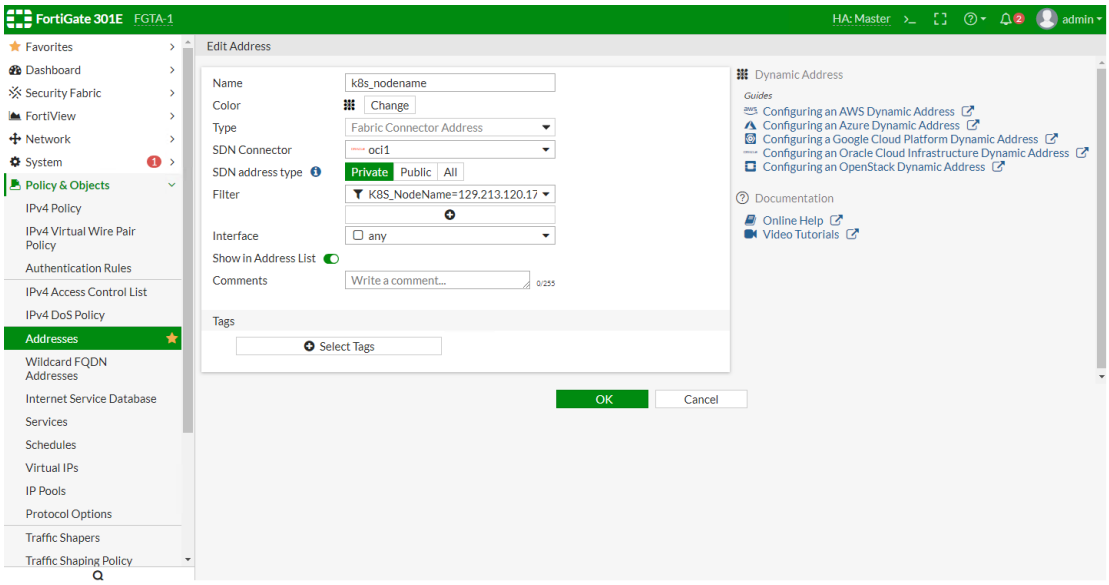

3. Confirm that the SDN connector resolves dynamic firewall IP addresses:
   a. Go to *Policy & Objects* > *Addresses*.
   b. Hover over the address created in step 2 to see a list of IP addresses for instances:

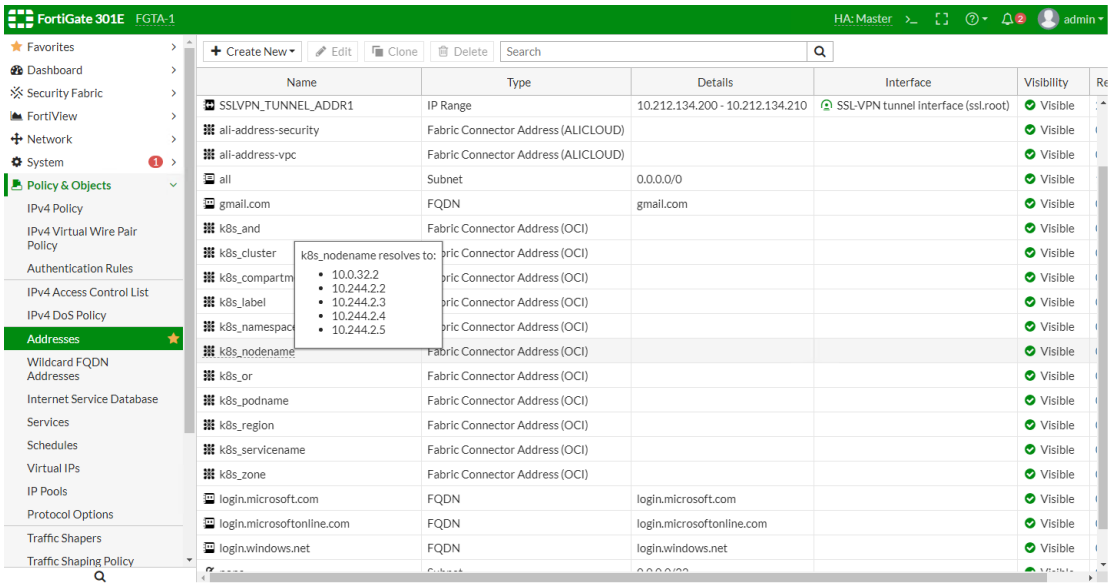

To configure an SDN connector through the CLI:

1. Configure the OCI SDN connector:

```
config system sdn-connector
   edit "oci1"
      set type oci
      set tenant-id
           "ocid1.tenancy.oc1..aaaaaaaambr3uzztoyhweohbzqqdo775h7d3t54zpmzkp4b2cf35vs5
           5cxxx"
      set user-id
           "ocid1.user.oc1..aaaaaaaaq2lfspeo3uetzbzpiv2pqvzzevozccnys347stwssvizqlatfx
           xx"
      set compartment-id
           "ocid1.compartment.oc1..aaaaaaaaelxxdjazqo7nzczpgypyiqcgkmytjry6nfq5345vw7e
           avpwnmxxx"
      set oci-region ashburn
      set oci-cert "cert-sha2"
      set update-interval 30
   next
end
```

2. Create dynamic firewall addresses for the configured SDN connector with supported Kubernetes filter:

```
config firewall address
   edit "k8s_nodename"
      set type dynamic
      set sdn "oci1"
      set filter "K8S_NodeName=129.213.120.172"
   next
end
```

3. Confirm that the SDN connector resolves dynamic firewall IP addresses:

```
config firewall address
   edit "k8s_nodename"
      set uuid 052f1420-3ab8-51e9-0cf8-6db6bc3395c0
```

```
        set type dynamic
        set sdn "oci1"
        set filter "K8S_NodeName=129.213.120.172"
        config list
           edit "10.0.32.2"
           next
           edit "10.244.2.2"
           next
           edit "10.244.2.3"
           next
           edit "10.244.2.4"
           next
           edit "10.244.2.5"
           next
        end
     next
  end
```

SSO/Identity connectors

SSO fabric connectors integrate SSO authentication into the network. This allows users to enter their credentials only once, and have those credentials reused when accessing other network resources through the FortiGate.

The following fabric connectors are available:


- Fortinet single sign-on agent on page 198
- Poll Active Directory server on page 199
- FortiClient EMS connector on page 200
- FortiNAC endpoint connector on page 202
- Symantec endpoint connector on page 208
- RADIUS single sign-on (RSSO) agent on page 215

Fortinet single sign-on agent

To create an FSSO agent connector in the GUI:

1. Go to *Security Fabric* > *Fabric Connectors*.
2. Click *Create New*.

3. In the *SSO/Identity* section, click *Fortinet Single Sign-On Agent*.

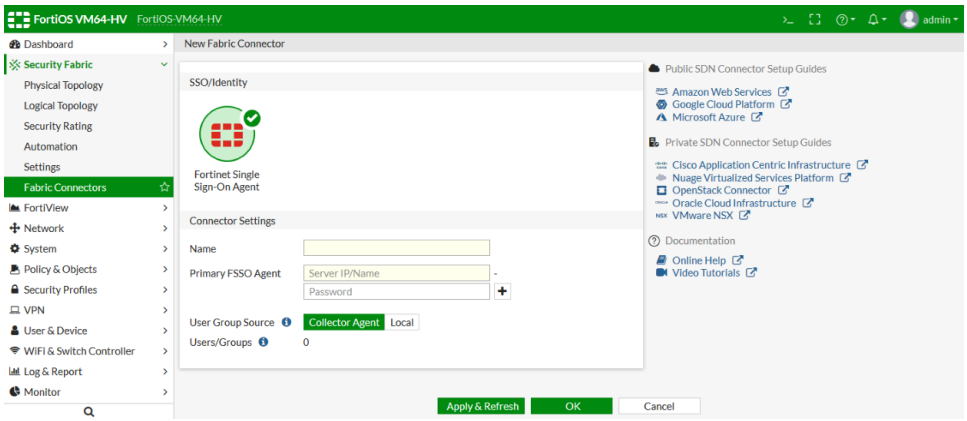


4. Fill in the *Name*, and *Primary FSSO Agent* server IP address or name and *Password*.
5. Optionally, add more FSSO agents by clicking the plus icon.
6. Select the *User Group Source*:
   - Collector Agent: User groups will be pushed to the FortiGate from the collector agent. Click *Apply & Refresh* to fetch group filters from the collector agent.
   - Local: User groups will be specified in the FortiGate unit's configuration. Select the LDAP server from the drop-down list, then select the *Users*, *Groups*, and *Organizational Units*. Enable or disable *Recursive* as required.
7. Click *OK*.

Poll Active Directory server

The FortiGate unit can authenticate users and allow them network access based on groups membership in Windows Active Directory (AD).

To create an AD server connector in the GUI:

1. Go to *Security Fabric* > *Fabric Connectors*.
2. Click *Create New*.
3. In the *SSO/Identity* section, click *Poll Active Directory Server*.

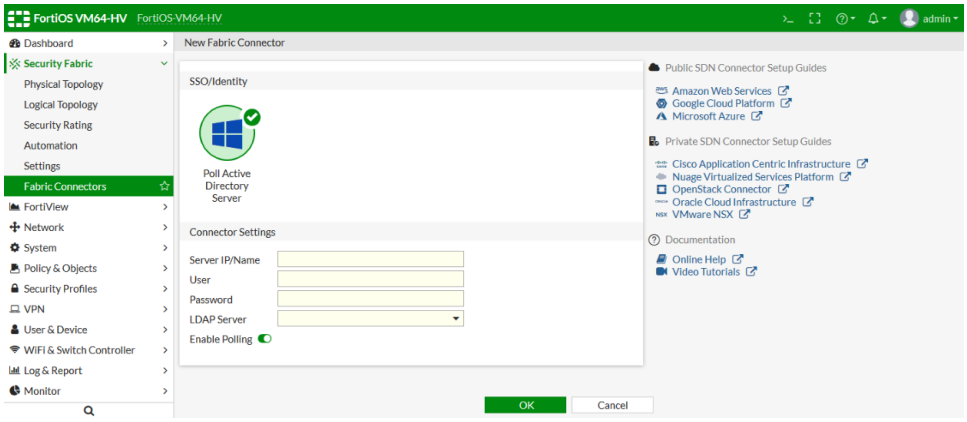

4. Fill in the *Server IP/Name*, *User*, and *Password* for the AD server.
5. Select the LDAP server from the list.


6. If necessary, disable *Enable Polling*. This can be used to temporarily stop the FortiGate from polling security event logs on the Windows logon server, for troubleshooting purposes.
7. Click *OK*.

FortiClient EMS connector


This example describes how to create a FortiClient EMS connector and a user group for the connector.

To create an FortiClient EMS connector in the GUI:

1. Go to *Security Fabric* > *Fabric Connectors*.
2. Click *Create New*.
3. In the *SSO/Identity* section, click *FortiClient EMS*.

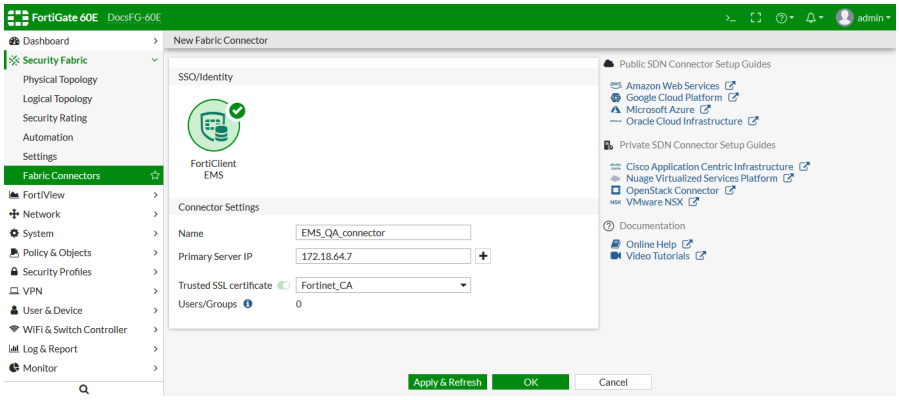


4. Fill in the *Name*, and *Primary Server IP*, and select a *Trusted SSL certificate*.
5. Click *OK*.
   The connector is shown on the *Fabric Connectors* page.

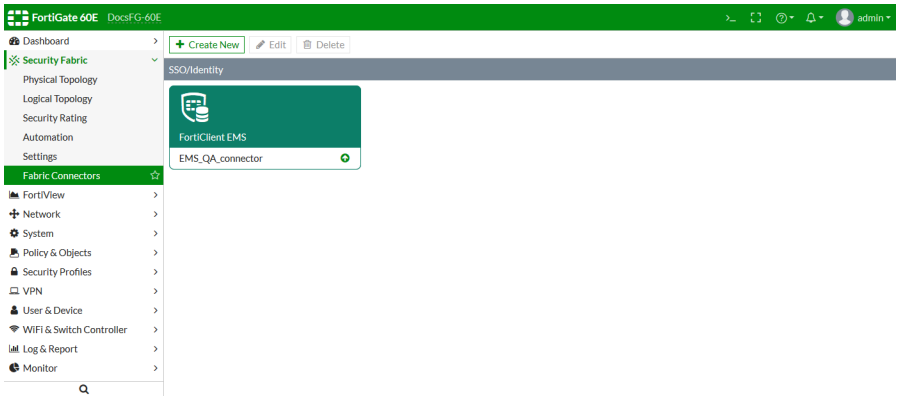


To create a user group for the EMS fabric connector using the GUI:

1. Go to *User & Device* > *User Definition*.
2. Click *Create New*.


3. Select *FortiClient EMS User*, then click *Next*.

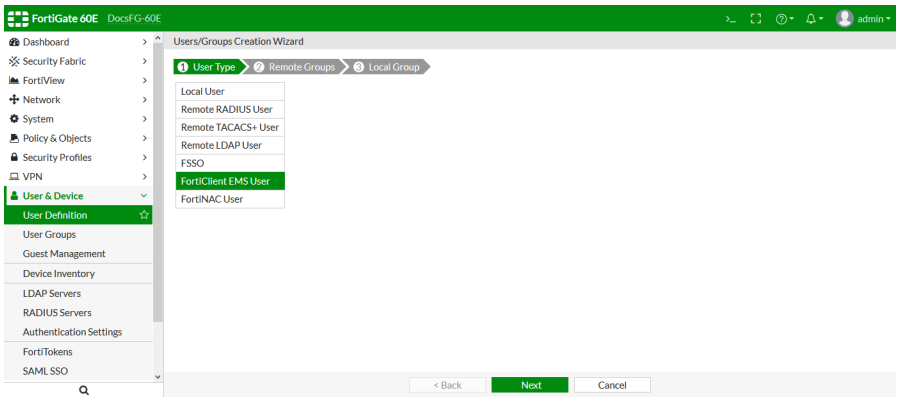


4. In the *Fabric Device* list select the EMS fabric connector that you created.
5. Select tags and then click *Next*.

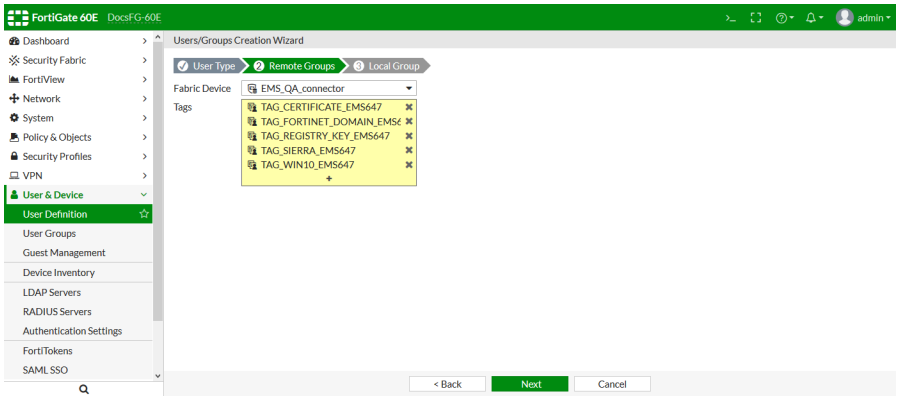

6. In the *Add to FSSO Group* field, click *Create New*.
7. Enter a name for the group.

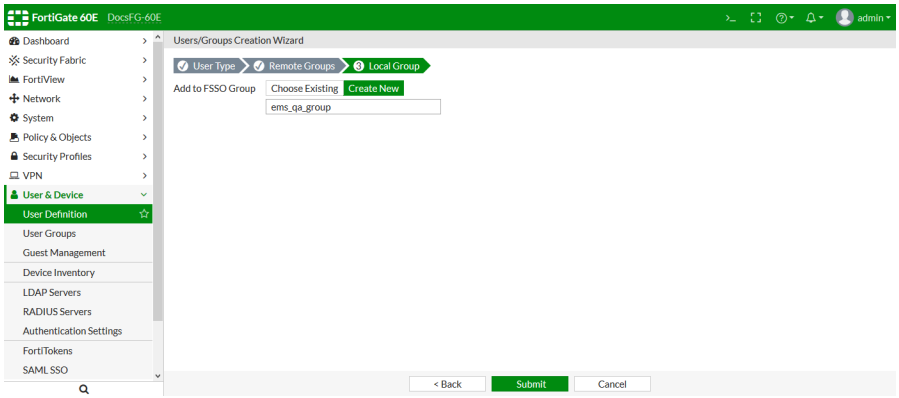

8. Click *Submit*.
   The configured group is shown at *User & Device* > *User Groups*.

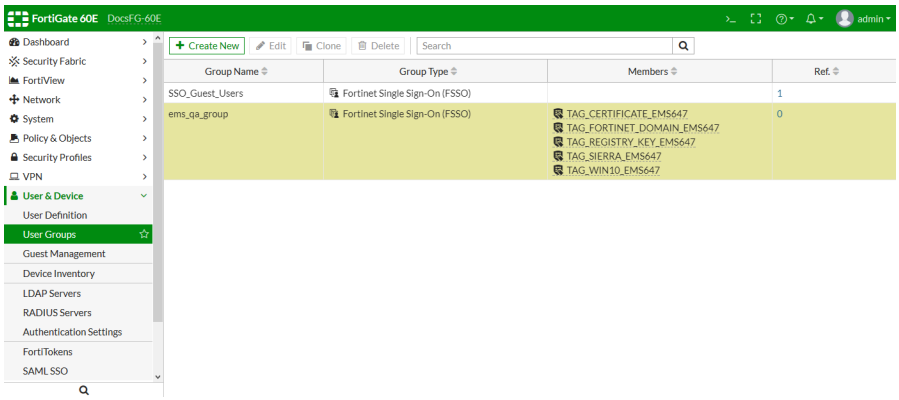


FortiNAC endpoint connector

Dynamic address definitions originating from FortiNAC can be imported to FortiGate as FSSO objects and used in firewall policies. Changes on the FortiNAC are dynamically reflected on the FortiGate.


This example assumes that the FortiGate and FortiNAC are in the same network segment. If layer 3 routers or firewalls are in between them, ensure that traffic on port 8000 is not blocked.

Configuring the FortiNAC


On FortiNAC, local groups and users can be created, and they can be imported from remote servers, such as AD LDAP and RADIUS servers. Local firewall tags, used in FortiNAC policies, are also supported.

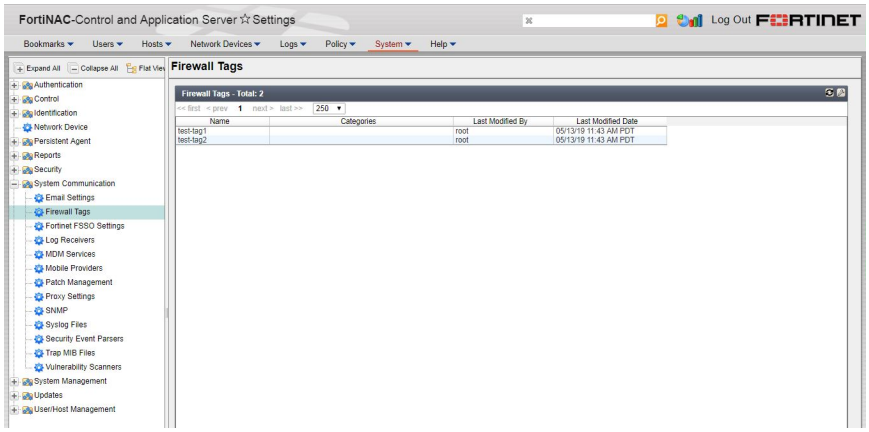

Before creating the FortiNAC connector on the FortiGate, FSSO must be enabled:

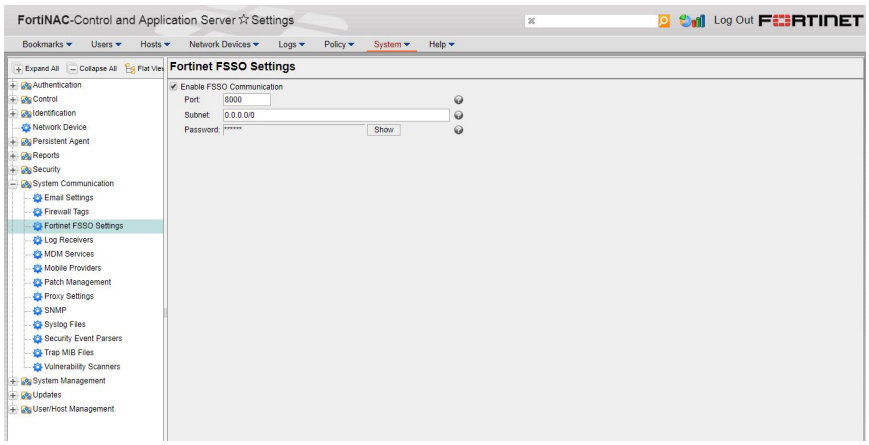


Groups and firewall tags that will be monitored and accessed by the FortiGate must be added to a network access policy on the FortiNAC:

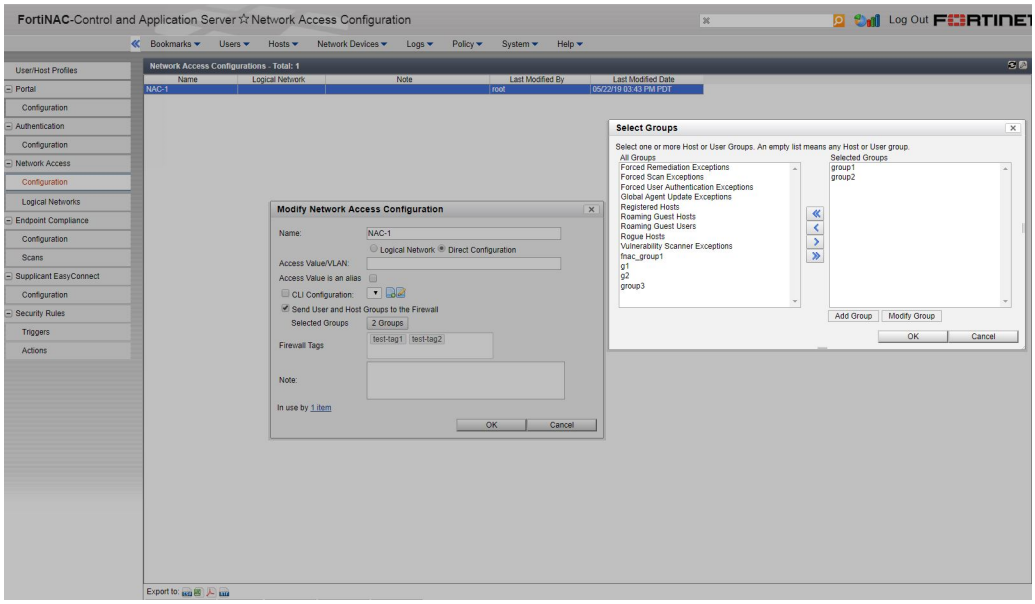


Configuring the FortiGate

To configure the FortiNAC connector in the GUI:

1. Go to *Security Fabric* > *Fabric Connectors* and click *Create New*.
2. In the *SSO/Identity* section, click *FortiNAC*.

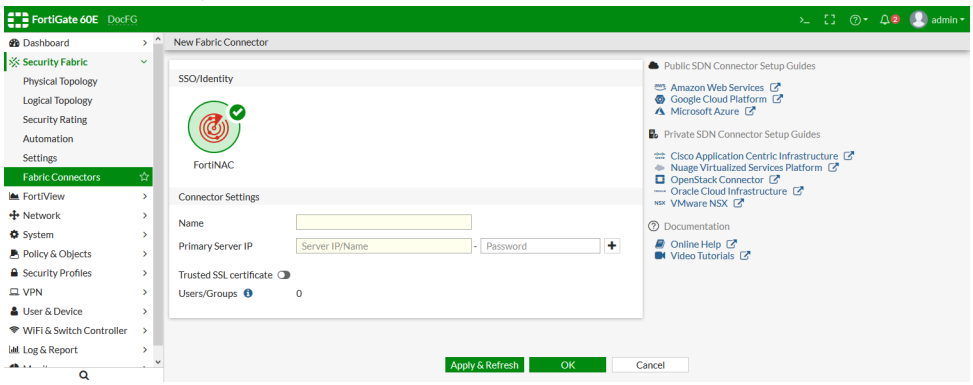

3. Enter a name for the connector in the *Name* field, such as *Fortinac-connector-1*.
4. Enter the FortiNAC device's IP address and password in the *Primary Server IP* fields.
5. Click *Apply & Refresh*.
   All host groups, firewall tags, and some default system groups will be pushed to the FortiGate from the FortiNAC.
6. Click *View*.
   The *Collector Agent Group Filters* pane opens, showing the information pushed from FortiNAC. These objects can be used to create FSSO user groups.

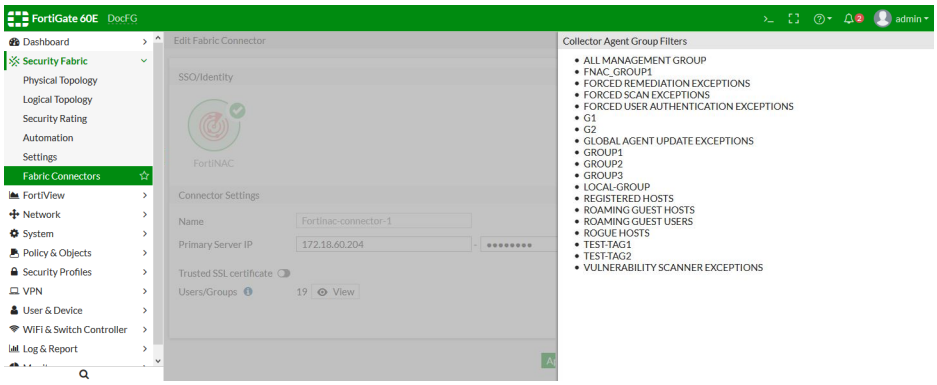


7. Click *OK*.

To configure the FortiNAC connector in the CLI:

```
config user fsso
    edit "Fortinac-connector-1"
        set server "172.18.60.204"
        set password XXXXXXXXXXXXXXXX
        set type fortinac
    next
end
```

To create an FSSO user group using imported FortiNAC groups and tags as members in the GUI:

1. Go to *User & Device* > *User Groups*.
2. Click *Create New*.
3. In the *Name* field, enter a name for the group, such as *Fortinac-fsso-group*.
4. For *Type*, select *Fortinet Single Sign-On (FSSO)*.
5. In the *Members* field, click +. The *Select Entries* pane appears. The groups and tags pulled from the FortiNAC are shown.
6. Select the desired groups.

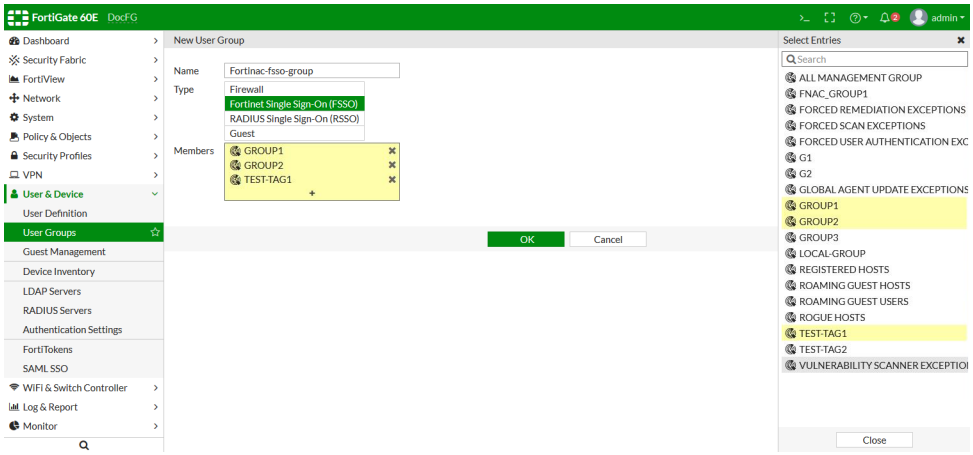


7. Click *OK*.
   The group can now be used in identity based firewall policies.

To create an FSSO user group using imported FortiNAC groups and tags as members in the CLI:


```
config user group
    edit "Fortinac-fsso-group"
        set group-type fsso-service
        set authtimeout 0
        set http-digest-realm ''
        set member "GROUP1" "GROUP2" "TEST-TAG1"
    next
end
```

To use the user/group creation wizard to create a new SSO group with the FortiNAC groups and firewall tags:

1. Go to *User & Device* > *User Definition* and click *Create New*.

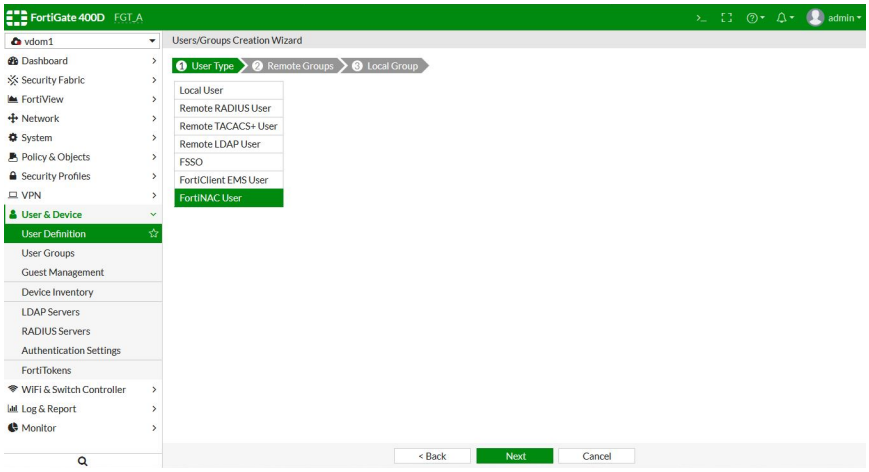


2. For the *User Type*, select *FortiNAC User*, then click *Next*.
3. For the *Fabric Device*, select the FortiNAC connector , then select the *Tags*.

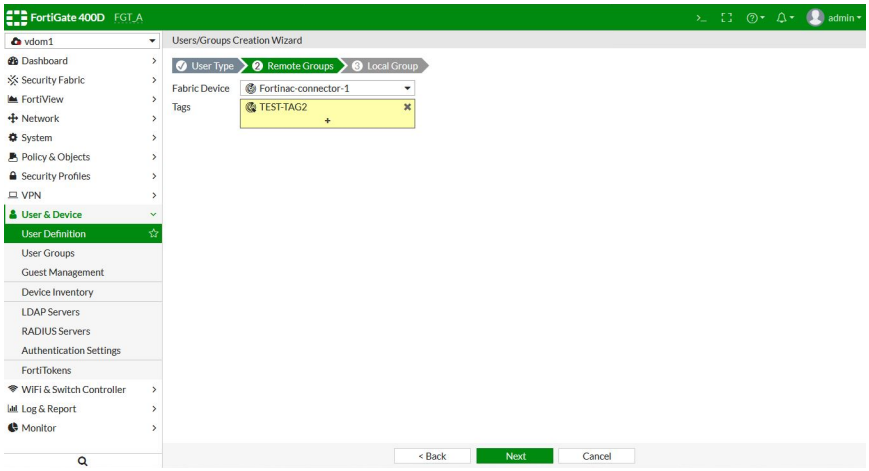


4. Click *Next*.


5. Either add the selected groups/tags to an existing SSO group, or create a new group:
   - To add to an existing SSO group, click *Choose Existing*, and then select a group.

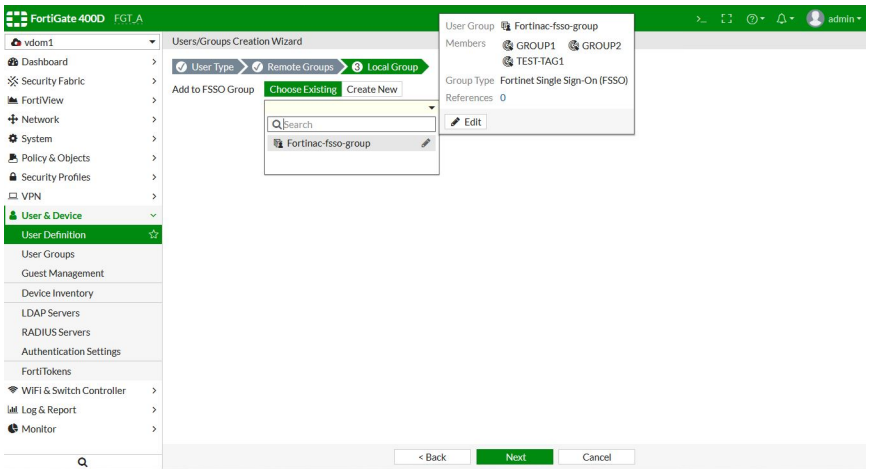

   - To create a new group, click *Create New*, and then enter a name for the group.

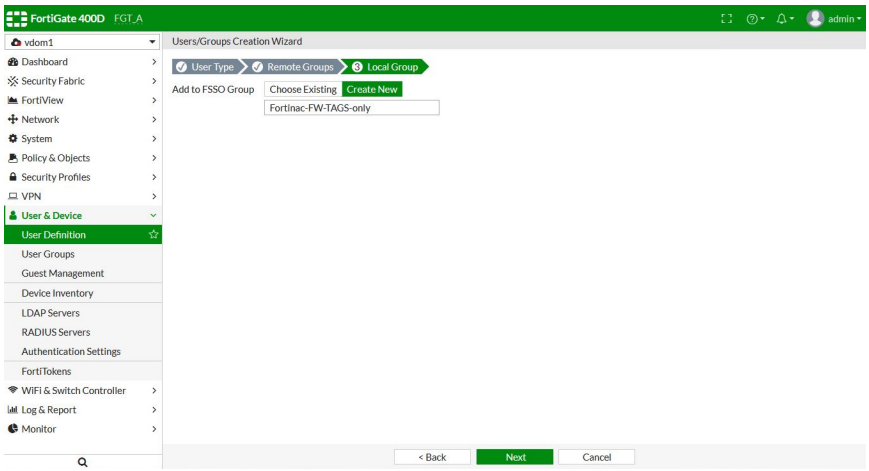

6. Click *Next*.
7. Go to *User & Device* > *User Groups* and verify that the created groups are listed with the correct members.

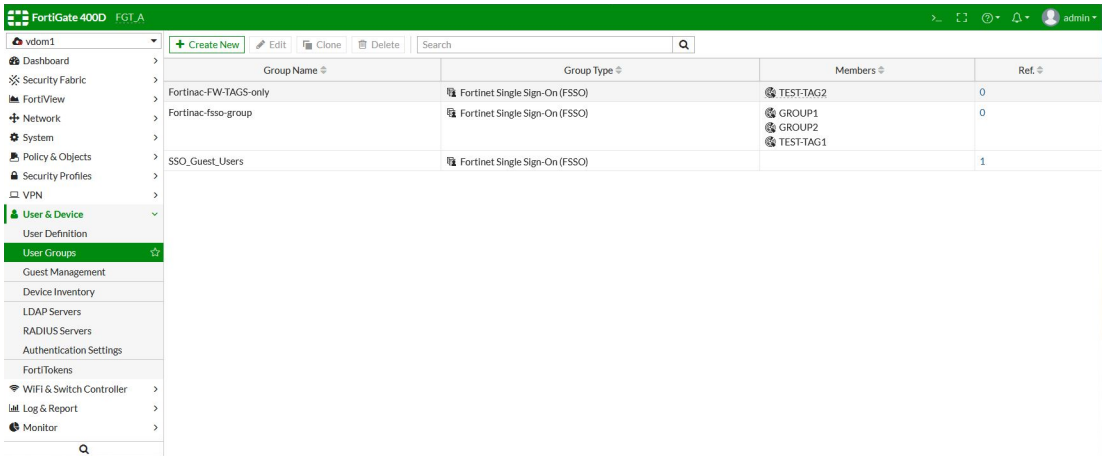

Symantec endpoint connector

With the Fabric connector for Symantec Endpoint Protection Manager (SEPM), you can use the client IP information from SEPM to assign to dynamic IP addresses on FortiOS.


When communication between FortiGate and SEPM is established, FortiGate polls every minute for updates via TLS over port 8446. You can use the CLI to change the default one minute polling interval.

For example, you can create a dynamic Fabric Connector IP address subtype and use it in firewall policies as the source address. The dynamic IP address contains all IP addresses sent by SEPM.


This example shows a dynamic IP address with SEPM and one client PC managed by SEPM using FortiGate as the default gateway.

To configure SEPM on a managed client PC:

1. In SEPM, create client packages for client hosts and group them into SEPM groups.
   You can install packages locally on clients or download them directly from SEPM.

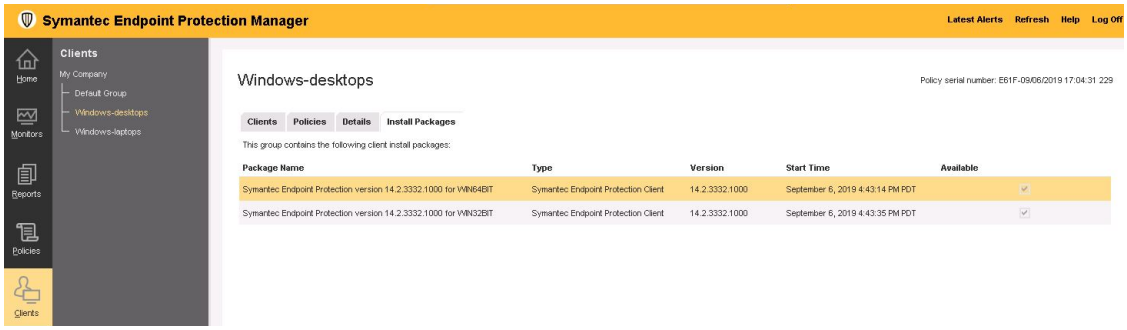


2. When a package is installed on the client host, the host is considered managed by SEPM.
   Even if the host has multiple interfaces, only one IP per host is displayed.

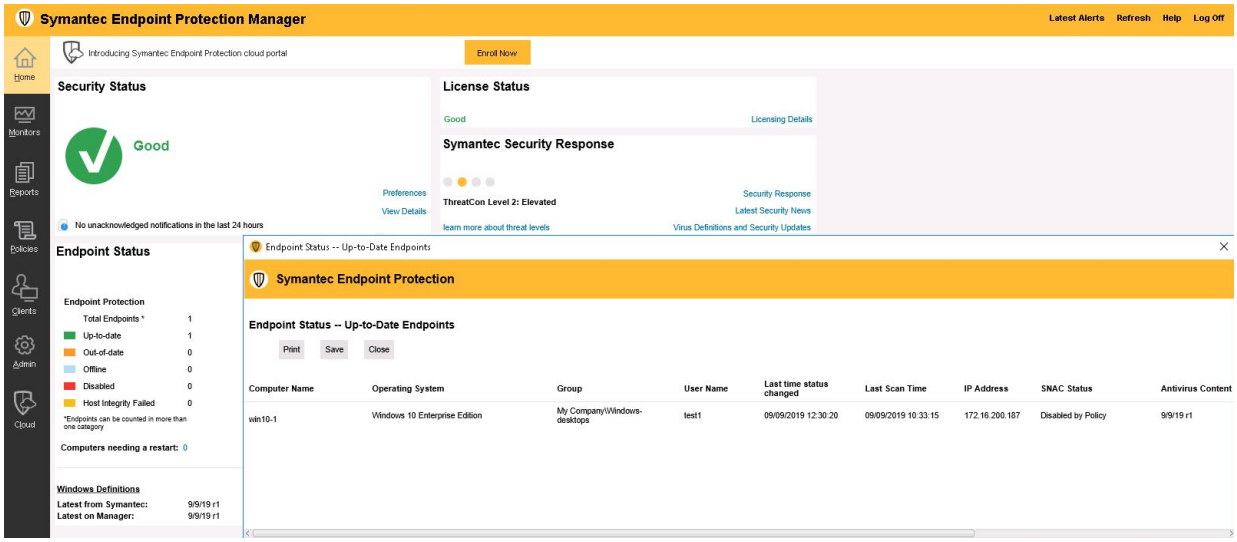


To configure Symantec endpoint connector on FortiGate in the GUI:


1. Go to *Security Fabric* > *Fabric Connectors*.
2. Click *Create New*.

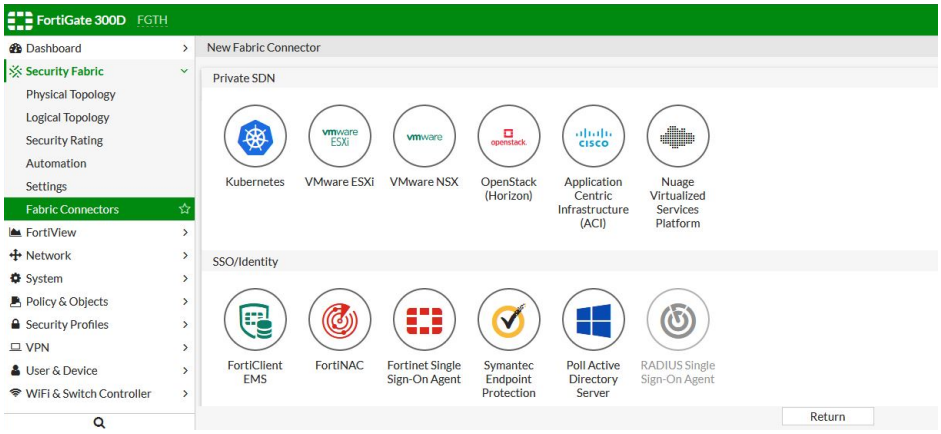


3. Click *Symantec Endpoint Protection*.
   - In the *Connector Settings* section, if options are left empty, then all SEPM domains and groups are monitored.
   - In the *Symantec Connector* section:
     - In the *Server* field, enter the SEPM IP address.
     - Enter the *Username* and *Password*.
     - If you want to limit the domains or groups that are monitored, enter the information in *Domain* and *Group name*.

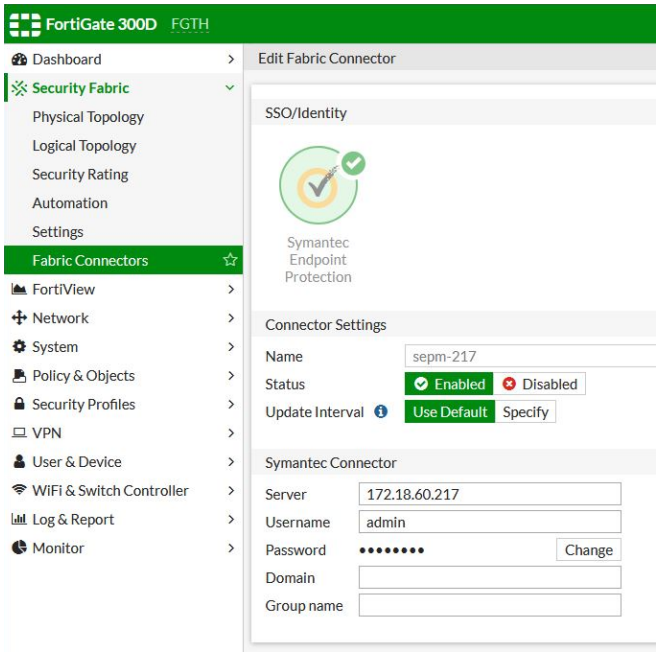


4. Click *OK*.
   When the connection is established, you can see a green up arrow in the bottom right of the tile. You might need to refresh your browser to see the established connection.

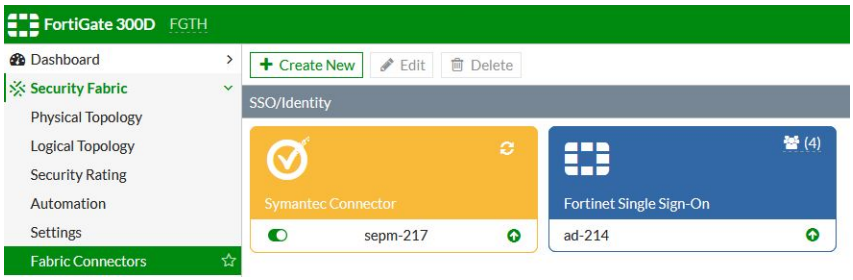

5. Go to *Policy & Objects* > *Addresses*.
6. Click *Create New* > *Address*.
   - Set *Type* to *Dynamic*.
   - Set *Sub Type* to *Fabric Connector Address*.
   - Set *SDN Connector* to the Fabric Connector that you just created.

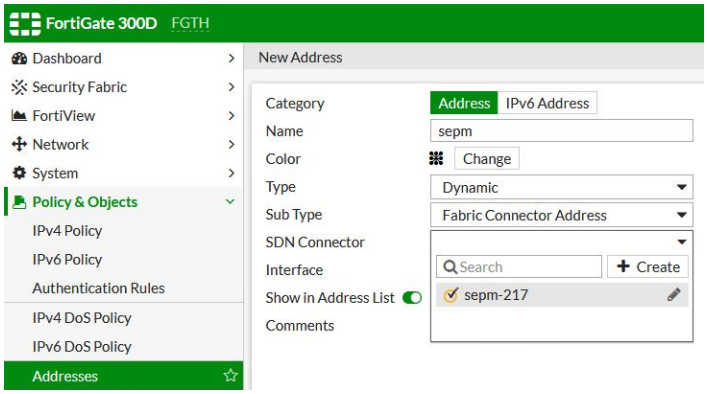

7. Click *OK*.
8. Edit the address to see the configuration.
   - *Filter* shows the hostnames of the client PCs managed by SEPM. The GUI shows the *ComputerName* by default. You can change this using the CLI; see Specify filters for details.

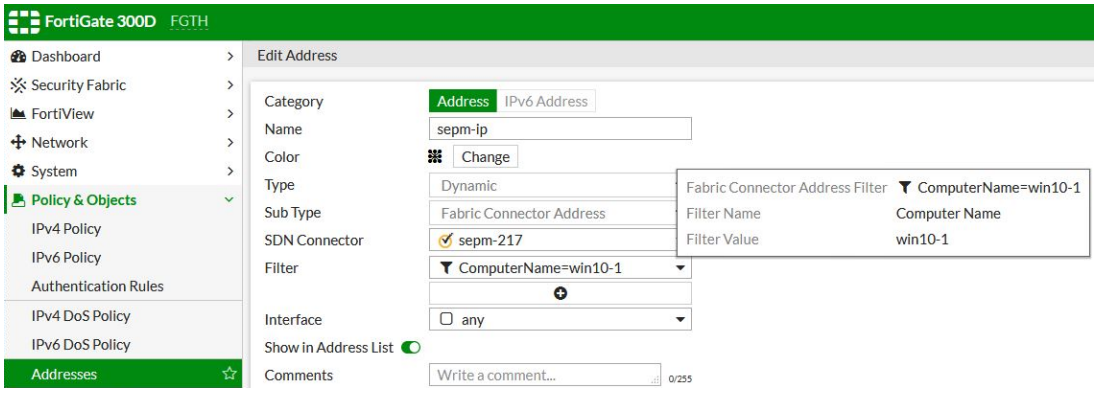





Filter options are only available for active computers that are configured and registered in SEPM. Free-form filters can be created manually by clicking *Create* and entering the filter, in the format: `filter_type=value`.

Possible manual filter types are: `GroupName`, `GroupID`, `ComputerName`, `ComputerUUID`, and `OSName`. For example: `GroupName=MyGroup`.

9. In *Policy & Objects* > *Addresses*, you can see all the IP addresses of the host.

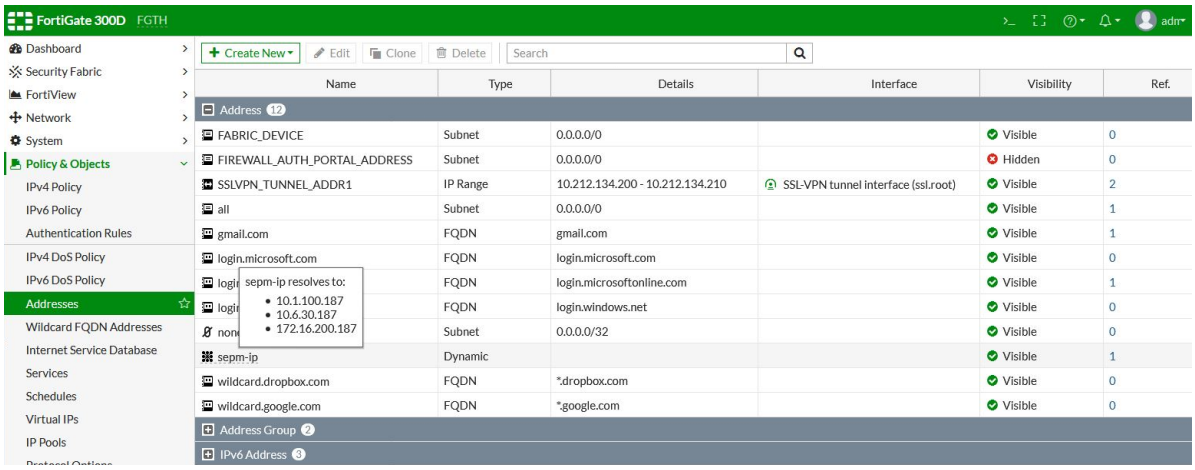


10. Go to *Policy & Objects* > *IPv4 Policy*, click *Create New* and add the dynamic IP address to the firewall policy.

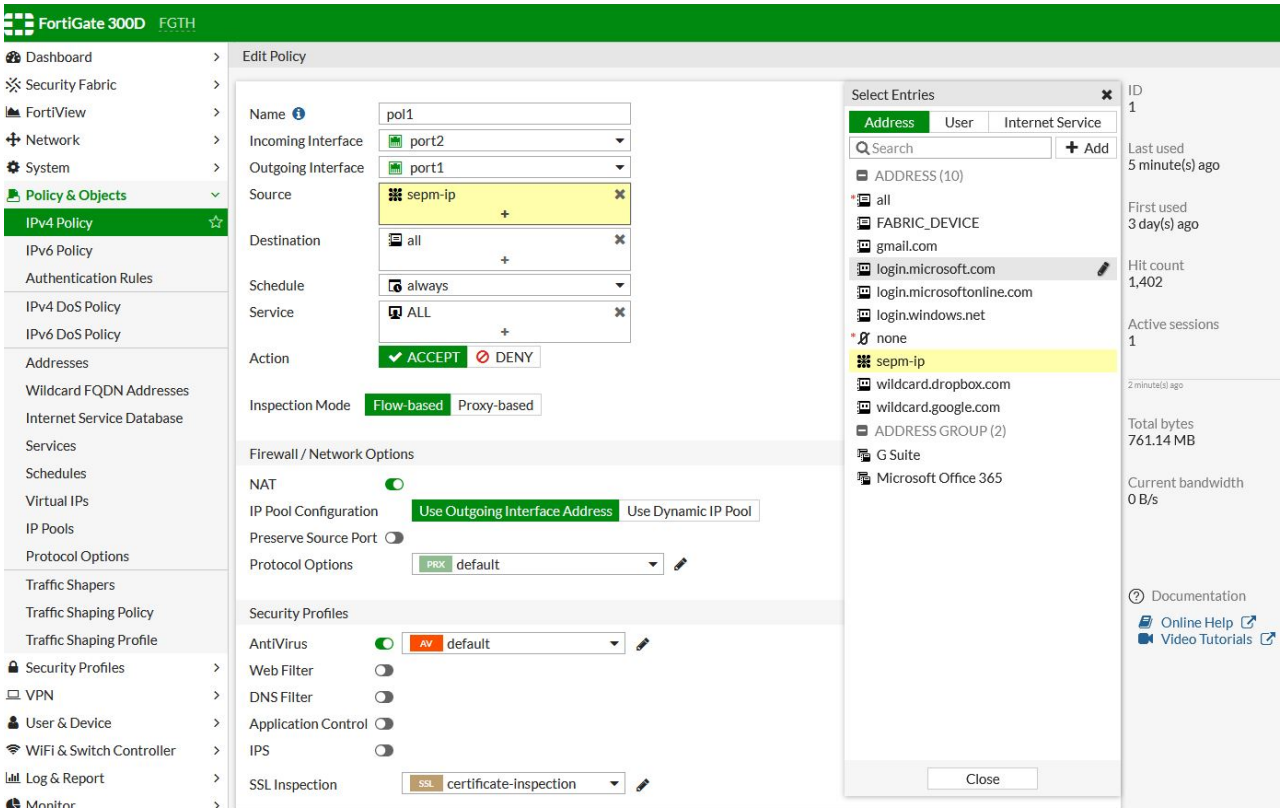


To verify the configuration:


1. On the client PC, check that it is managed by SEPM to access the Internet.

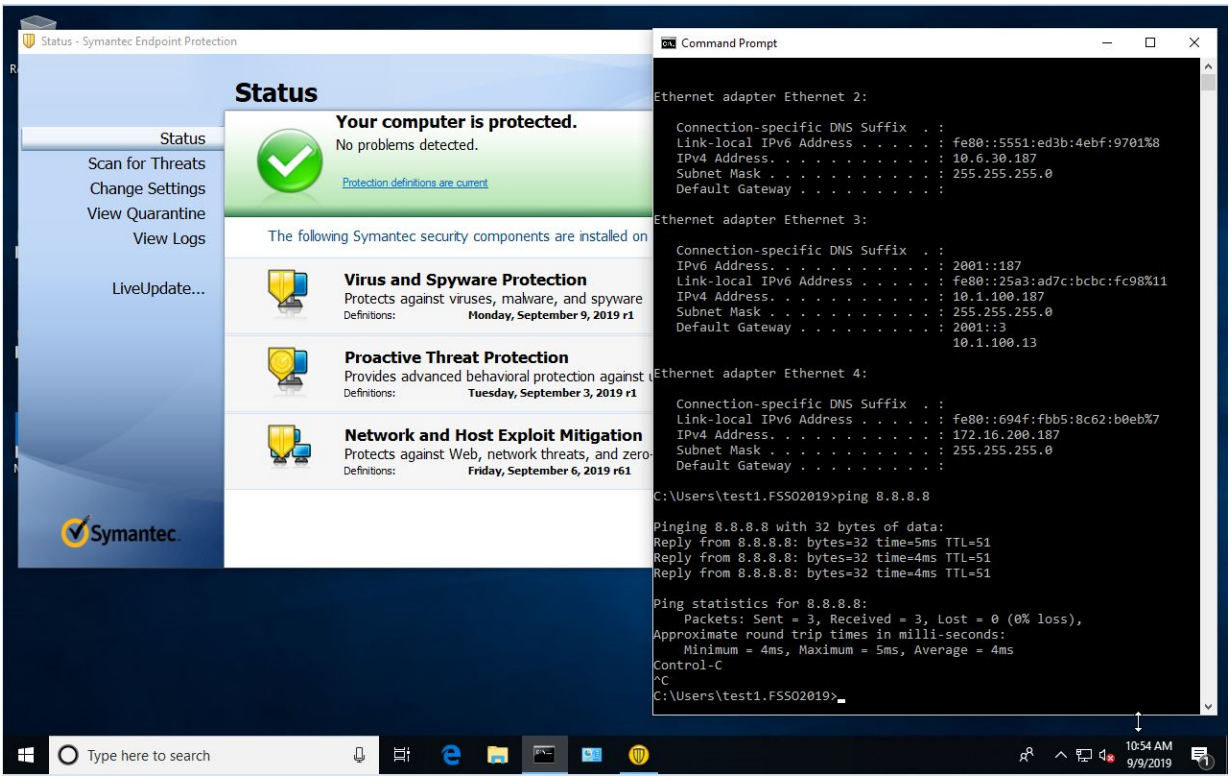

2. In FortiGate, you can check in *FortiView* > *Sources*.

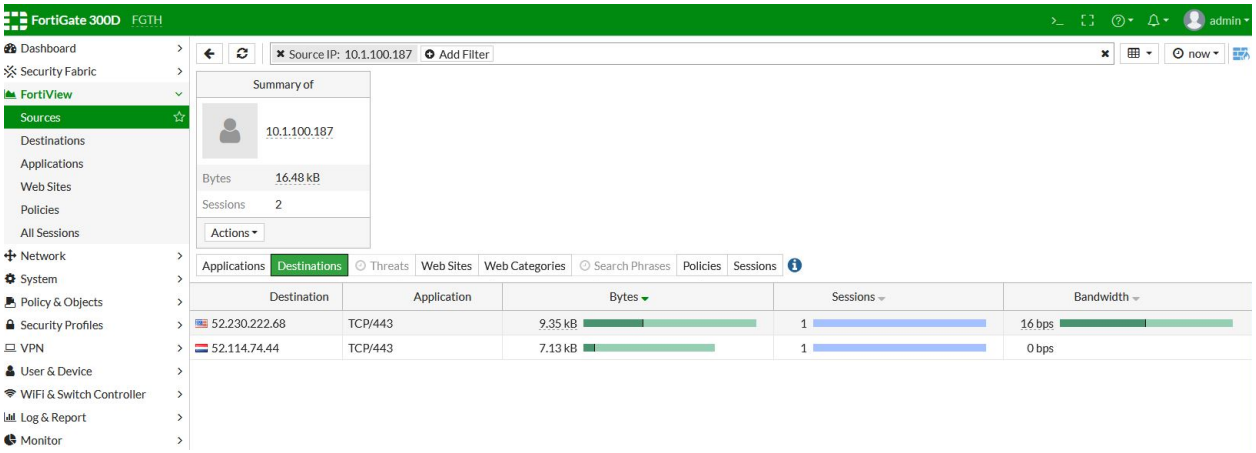

3. In FortiGate, you can also check in *Log & Report* > *Forward Traffic*.

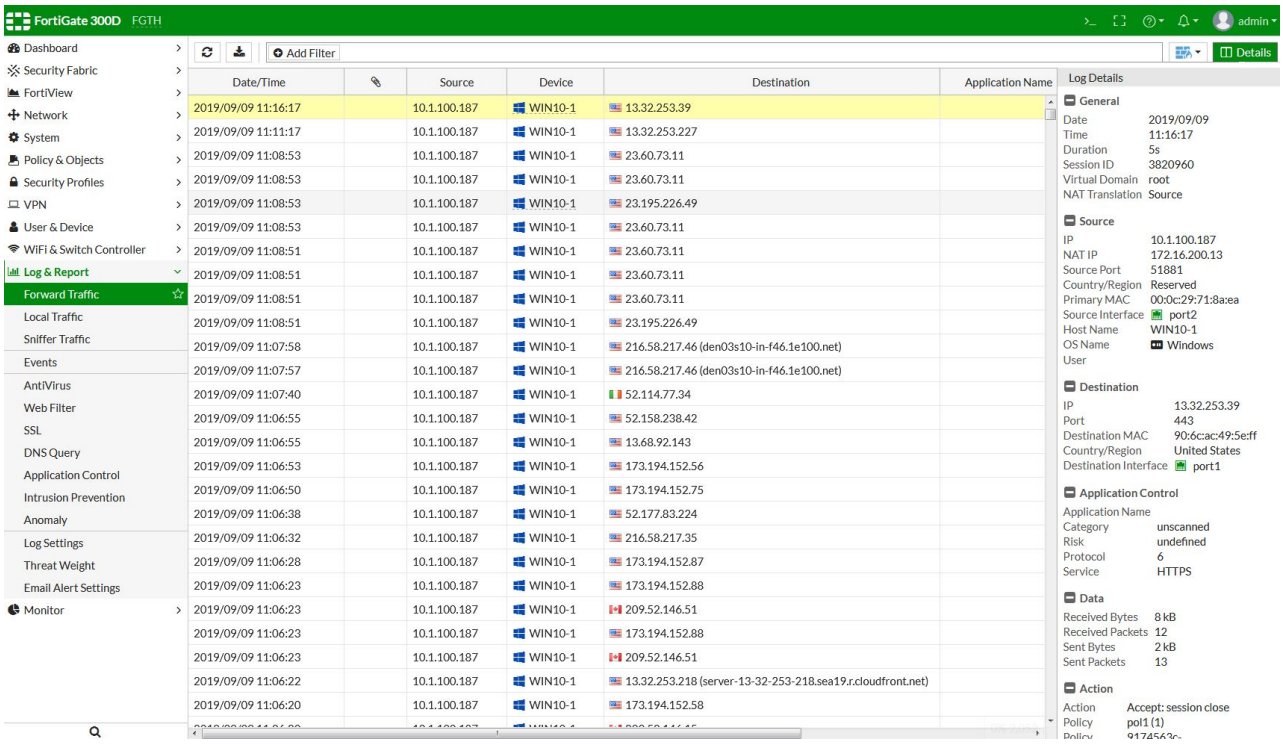



Since this traffic is not authenticated traffic but is based on source IP address only, this traffic is not shown in the GUI firewall monitor or in the CLI `diagnose firewall auth list` command.

To configure Symantec endpoint connector on FortiGate in the CLI:

1. Create the fabric connector:

```
config system sdn-connector
    edit "sepm-217"
        set type sepm
        set server "172.18.60.217"
        set username "admin"
        set password **********
        set status enable
    next
end
```

2. Create the dynamic IP address:

```
config firewall address
    edit "sepm-ip"
        set uuid 645552a0-d0c9-51e9-282d-c7ed6d7ee7de
        set type dynamic
        set sdn "sepm-217"
        set filter "ComputerName=win10-1"
        config list
            edit "10.1.100.187"
```

```
            next
            edit "10.6.30.187"
            next
            edit "172.16.200.187"
            next
        end
    next
end
```

You can specify other filters and combine them with | and &, for example:

```
FGTH (sepm-ip) # set filter
<key1=value1>    [& <key2=value2>] [| <key3=value3>]
Available filter keys are:
        <ComputerName><ComputerUuid><GroupId><GroupName> <DomainId><DomainName><OsName>
```

3. Add the dynamic IP address to the firewall policy:

```
config firewall policy
    edit 1
        set name "pol1"
        set uuid 9174563c-d0c9-51e9-1a32-4e14385239e9
        set srcintf "port2"
        set dstintf "port1"
        set srcaddr "sepm-ip"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set ssl-ssh-profile "certificate-inspection"
        set av-profile "default"
        set logtraffic all
        set fsso disable
        set nat enable
    next
end
```

To troubleshoot Symantec SD connector in the CLI:

```
# diagnose debug application sepmd -1

Output is sent every minute (default). All IPv4 learned from SEPM. IPv6 also sent but not
yet supported.

2019-09-09 12:01:09 sepmd sdn connector sepm-217 start updating IP addresses
2019-09-09 12:01:09 sepmd checking firewall address object sepm-ip, vd 0
2019-09-09 12:01:09 sepmd sdn connector sepm-217 finish updating IP addresses
2019-09-09 12:01:09 sepmd reap child pid: 18079
2019-09-09 12:02:09 sepmd sdn connector sepm-217 prepare to update
2019-09-09 12:02:09 sepmd sdn connector sepm-217 start updating
2019-09-09 12:02:09 sepm-217 sdn connector will retrieve token after 9526 secs
2019-09-09 12:02:09 sym_new_ip_addr ComputerName win10-1
    ComputerUuid AC894D56-BD86-A786-7DDB-7FD98B718AE0, OsName Windows 10
    IP 172.16.200.187
    GroupName My Company\Windows-desktops, GroupId E61FDEA2AC10C80E46D0B31BB58D7CB3
    DomainName Default, DomainId 6C507580AC10C80E5F3CAED5B1711A8E
2019-09-09 12:02:09 sym_new_ip_addr ComputerName win10-1
```

```
    ComputerUuid AC894D56-BD86-A786-7DDB-7FD98B718AE0, OsName Windows 10
    IP 10.6.30.187
    GroupName My Company\Windows-desktops, GroupId E61FDEA2AC10C80E46D0B31BB58D7CB3
    DomainName Default, DomainId 6C507580AC10C80E5F3CAED5B1711A8E
2019-09-09 12:02:09 sym_new_ip_addr ComputerName win10-1
    ComputerUuid AC894D56-BD86-A786-7DDB-7FD98B718AE0, OsName Windows 10
    IP 10.1.100.187
    GroupName My Company\Windows-desktops, GroupId E61FDEA2AC10C80E46D0B31BB58D7CB3
    DomainName Default, DomainId 6C507580AC10C80E5F3CAED5B1711A8E
2019-09-09 12:02:09 2001:0000:0000:0000:0000:0000:0000:0187 is not in IPv4 presentation
format


2019-09-09 12:02:09 sepmd sdn connector sepm-217 start updating IP addresses
2019-09-09 12:02:09 sepmd checking firewall address object sepm-ip, vd 0
2019-09-09 12:02:09 sepmd sdn connector sepm-217 finish updating IP addresses
2019-09-09 12:02:09 sepmd reap child pid: 18089
2019-09-09 12:03:09 sepmd sdn connector sepm-217 prepare to update
2019-09-09 12:03:09 sepmd sdn connector sepm-217 start updating
2019-09-09 12:03:09 sepm-217 sdn connector will retrieve token after 9466 secs
2019-09-09 12:03:09 sym_new_ip_addr ComputerName win10-1
    ComputerUuid AC894D56-BD86-A786-7DDB-7FD98B718AE0, OsName Windows 10
    IP 172.16.200.187
    GroupName My Company\Windows-desktops, GroupId E61FDEA2AC10C80E46D0B31BB58D7CB3
    DomainName Default, DomainId 6C507580AC10C80E5F3CAED5B1711A8E
2019-09-09 12:03:09 sym_new_ip_addr ComputerName win10-1
    ComputerUuid AC894D56-BD86-A786-7DDB-7FD98B718AE0, OsName Windows 10
    IP 10.6.30.187
    GroupName My Company\Windows-desktops, GroupId E61FDEA2AC10C80E46D0B31BB58D7CB3
    DomainName Default, DomainId 6C507580AC10C80E5F3CAED5B1711A8E
2019-09-09 12:03:09 sym_new_ip_addr ComputerName win10-1
    ComputerUuid AC894D56-BD86-A786-7DDB-7FD98B718AE0, OsName Windows 10
    IP 10.1.100.187
    GroupName My Company\Windows-desktops, GroupId E61FDEA2AC10C80E46D0B31BB58D7CB3
    DomainName Default, DomainId 6C507580AC10C80E5F3CAED5B1711A8E
2019-09-09 12:03:09 2001:0000:0000:0000:0000:0000:0000:0187 is not in IPv4 presentation
format
```

To list the SEPM daemon SDN connectors:

```
diagnose test application sepmd 1
sepm SDN connector list:
  name: sepm-217, status: enabled, updater_interval: 60
```

To list the SEPM daemon SDN filters:

```
diagnose test application sepmd 2
sepm SDN connector sepm-217 filter list:
  name: sepm-ip, vd 0, filter 'ComputerName=win10-1'
```

RADIUS single sign-on (RSSO) agent

With RSSO, a FortiGate can authenticate users who have authenticated on a remote RADIUS server. Based on which user group the user belongs to, the security policy applies the appropriate UTM profiles.

The FortiGate does not interact with the remote RADIUS server; it only monitors RADIUS accounting records that the server forwards (originating from the RADIUS client). These records include the user IP address and user group. The remote RADIUS server sends the following accounting messages to the FortiGate:

Message	Action
Start	If the information in the start message matches the RSSO configuration on the FortiGate, the user is added to the local list of authenticated firewall users.
Stop	The user is removed from the local list of authenticated firewall users because the user session no longer exists on the RADIUS server.

You can configure an RSSO agent connector using the FortiOSGUI; however, in most cases, you will need to use the CLI. There are some default options you may need to modify, which can only be done in the CLI.

To configure an RSSO agent connector:

1. Create the new connector:
   a. Go to *Security Fabric* > *Fabric Connectors*.
   b. Click *Create New*.
   c. In the *SSO/Identity* section, click *RADIUS Single Sign-On Agent*. The *New Fabric Connector* pane opens.
   d. Enter the connector name.
   e. Enable *Use RADIUS Shared Secret*.




The value entered in *Use RADIUS Shared Secret* must be identical to what the remote RADIUS server uses to authenticate when it sends RADIUS accounting messages to the FortiGate.

   f. Enable *Send RADIUS Responses*.




You should enable *Send RADIUS Responses* because some RADIUS servers continue to send the same RADIUS accounting message several times if there is no response.

g. Click *OK*.

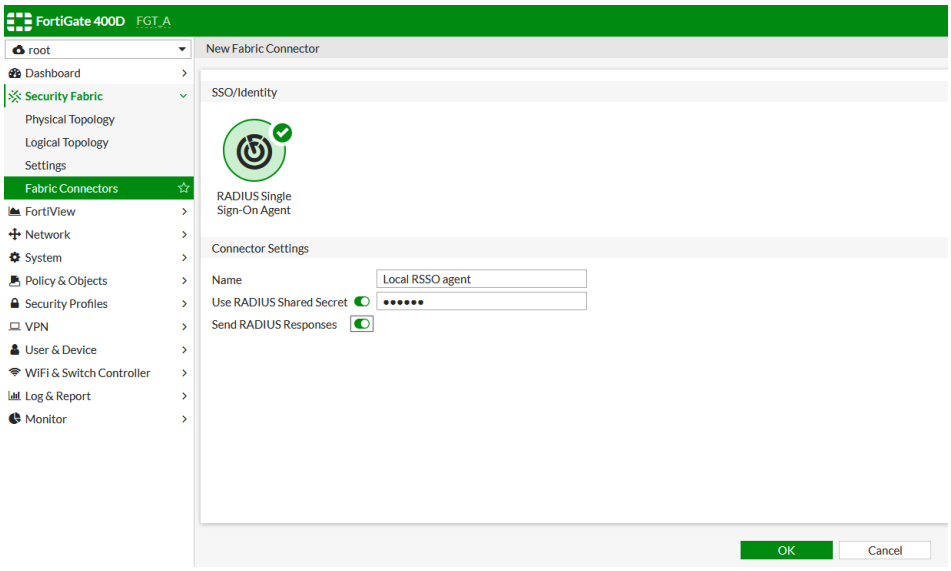

2. Edit the network interface:
   a. Go to *Network* > *Interfaces*.
   b. Double-click the interface that will receive the RADIUS accounting messages. The *Edit Interface* pane opens.
   c. In the *Administrative Access* section, select the *RADIUS Accounting* checkbox. This will open listening for port 1813 on this interface. The FortiGate will then be ready to receive RADIUS accounting messages.
   d. Click *OK*.

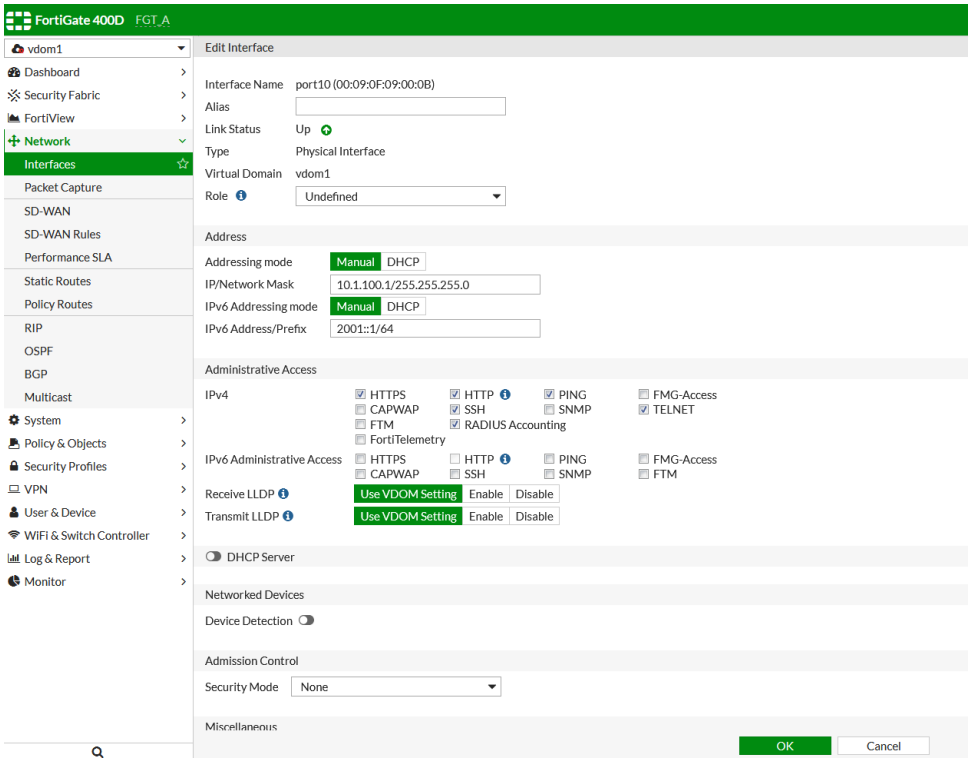


3. Create a local RSSO user group:
   a. Go to *User & Device* > *User Groups*.
   b. Click *Create New*.

c. Enter the group name.
d. For the *Type* field, click *RADIUS Single-Sign-ON (RSSO)*.
e. Enter a value for *RADIUS Attribute Value*.
This value by default is the class attribute. The FortiGate uses the content of this attribute in RADIUS accounting start messages to map a user to a FortiGate group, which then can be used in firewall policies.
In this example configuration, the FortiGate will only add a remote RADIUS user to the local firewall user list if the class attribute in the RADIUS accounting START message contains the value group1.

If your users are in multiple groups, you will need to add another local RSSO user group.

If the RADIUS attribute value used to map users to a local RSSO group is different than the RADIUS attribute in the RADIUS accounting messages forwarded by the server, you must change it in the CLI.

f. Click *OK*.

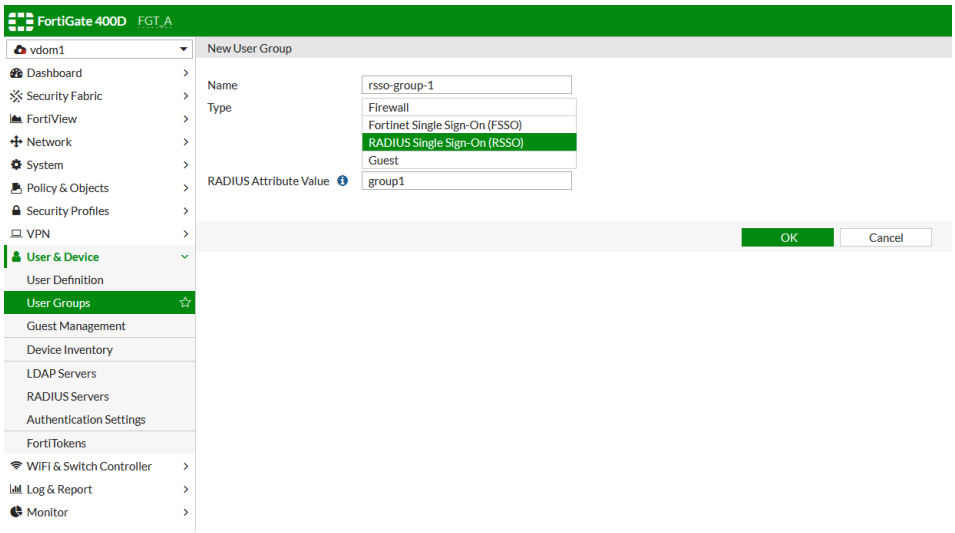

4. Edit the local RSSO agent to modify default options using the CLI.
For example, the default value for `rsso-endpoint-attribute` might work in common remote access scenarios where users are identified by their unique `Calling-Station-Id`, but in other scenarios the user name might be in a different attribute.

```
config user radius
    edit "Local RSSO Agent"
        set rsso-endpoint-attribute <attribute>
        set sso-attribute <attribute>
    next
end
```

5. Add the local RSSO user group to a firewall policy.

Verifying the RSSO configuration

Verification requires a working remote RADIUS server configured for RADIUS accounting forwarding and wireless or wired clients that use RADIUS for user authentication.

For a quick test, you can use one of the publicly available RADIUS test tools to send RADIUS accounting start and stop messages to the FortiGate. You can also use radclient.

To verify the RSSO configuration:

1. In radclient, enter the RADIUS attributes. These attributes are then executed with the FortiGate IP parameters (sends accounting messages to port 1813) and shared password you configured. `-x` is used for verbose output:

```
root@ControlPC:~# echo "Acct-Status-Type =Start,Framed-Ip-Address=10.1.100.185,User-
Name=test2,Acct-Session-Id=0211a4ef,Class=group1,Calling-Station-Id=00-0c-29-44-BE-B8" |
 radclient -x 10.1.100.1 acct 123456
Sending Accounting-Request of id 180 to 10.1.100.1 port 1813
        Acct-Status-Type = Start
        Framed-IP-Address = 10.1.100.185
        User-Name = "test2"
        Acct-Session-Id = "0211a4ef"
        Class = 0x67726f757031
        Calling-Station-Id = "00-0c-29-44-BE-B8"
rad_recv: Accounting-Response packet from host 10.1.100.1 port 1813, id=180, length=20
root@ControlPC:~#
```

2. Verify that the user is in the local firewall user list with the correct type (`rsso`) and local firewall group (`rsso-group1`):

```
# diagnose firewall auth l

10.1.100.185, test2
        type: rsso, id: 0, duration: 5, idled: 5
        flag(10): radius
        server: vdom1
        packets: in 0 out 0, bytes: in 0 out 0
        group_id: 3
        group_name: rsso-group-1

----- 1 listed, 0 filtered ------
```

Threat feeds

Threat feeds dynamically import an external block lists from an HTTP server in the form of a plain text file. Block lists can be used to enforce special security requirements, such as long term policies to always block access to certain websites, or short term requirements to block access to known compromised locations. The lists are dynamically imported, so that any changes are immediately imported by FortiOS.

There are four types of threat feeds:

FortiGuard Category	The file contains one URL per line. It is available as a *Remote Category* in Web Filter profiles and SSL inspection exemptions. Example:

	`http://example/com.url`
	`https://example.com/url`
	`http://example.com:8080/url`

IP Address	The file contains one IP/IP range/subnet per line. It is available as an *External IP Block List* in DNS Filter profiles, and as a *Source/Destination* in IPv4, IPv6, and proxy policies.
	Example:
	`192.168.2.100`
	`172.200.1.4/16`
	`172.16.1.2/24`
	`172.16.8.1-172.16.8.100`
	`2001:0db8::eade:27ff:fe04:9a01/120`
	`2001:0db8::eade:27ff:fe04:aa01-2001:0db8::eade:27ff:fe04:ab01`

Domain Name	The file contains one domain per line. Simple wildcards are supported. It is available as a *Remote Category* in DNS Filter profiles. See External resources for DNS filter on page 229.
	Example:
	`mail.*.example.com`
	`*-special.example.com`
	`www.*example.com`
	`example.com`

Malware Hash	The file contains one hash per line in the format `<hex hash> [optional hash description]`. Each line supports MD5, SHA1, and SHA256 hex hashes. It is automatically used for virus outbreak prevention on antivirus profiles with `external-blocklist` enabled.
	Note: For optimal performance, do not mix different hashes in the list. Only use one of MD5, SHA1, or SHA26.
	Example:
	`292b2e6bb027cd4ff4d24e338f5c48de`
	`dda37961870ce079defbf185eeeef905 Trojan-Ransom.Win32.Locky.abfl`
	`3fa86717650a17d075d856a41b3874265f8e9eab Trojan-Ransom.Win32.Locky.abfl`
	`c35f705df9e475305c0984b05991d444450809c35dd1d96106bb8e7128b9082f Trojan-Ransom.Win32.Locky.abfl`
	See External malware block list for antivirus on page 873 for an example.

External resources file format

File format requirements for an external resources file:

- The file is in plain text format with each URL list, IP address, and domain name occupying one line.
- The file is limited to 10 MB or 128 × 1024 (131072) entries, whichever limit is hit first.
- The entry limit also follows the table size limitation defined by CMDB per model.
- The external resources update period can be set to 1 minute, hourly, daily, weekly, or monthly (43200 min, 30 days).
- The external resources type as category (URL list) and domain (domain name list) share the category number range 192 to 221 (total of 30 categories).
- There is no duplicated entry validation for the external resources file (entry inside each file or inside different files).
- If the number of entries exceed the limit, a warning is displayed. Additional entries beyond the threshold will not be loaded.

For domain name list (type = domain):

- Simple wildcards are allowed in the domain name list, for example: *.test.com.
- IDN (international domain name) is supported.

For IP address list (type = address):

- The IP address can be a single IP address, subnet address, or address range. For example, 192.168.1.1, 192.168.10.0/24, or 192.168.100.1-192.168.100.254.
- The address can be an IPv4 or IPv6 address. An IPv6 address does not need to be in [ ] format.

To determine the external resource table size limit for your device:

```
# print tablesize
...
system.external-resource: 0 256 512
...
```

For this device, a FortiGate 60E, the global limit is 512 and the limit per VDOM is 256.

Create a threat feed

To create a threat feed in the GUI:

1. Go to *Security Fabric* > *Fabric Connectors*.
2. Click *Create New*.
3. In the *Thread Feeds* section, click on the required feed type.
4. Configure the connector settings:

Name	Enter a name for the threat feed connector.
URI of external resource	Enter the link to the external resource file. The file should be a plain text file with one entry on each line.
HTTP basic authentication	Enable/disable basic HTTP authentication. When enabled, enter the username and password in the requisite fields.
Refresh Rate	The time interval to refresh the external resource, in minutes (1 - 43200, default = 5).
Comments	Optionally, enter a description of the connector.
Status	Enable/disable the connector.

5. Click *OK*.

To create a threat feed in the CLI:

```
config system external-resource
    edit <name>
        set status {enable | disable}
        set type {category | address | domain | malware}
        set category <integer>
        set username <string>
        set password <string>
        set comments [comments]
        *set resource <resource-uri>
```


```
        *set refresh-rate <integer>
        set source-ip <string>
    next
end
```

Parameters marked with a * are mandatory and must be filled in. Other parameters either have default values or are optional.

Update history

To review the update history of a threat feed, go to *Security Fabric* > *Fabric Connectors*, select a feed, and click *Edit*. The *Last Update* field shows the date and time that the feed was last updated.

Click *View Entries* to view the current entries in the list.

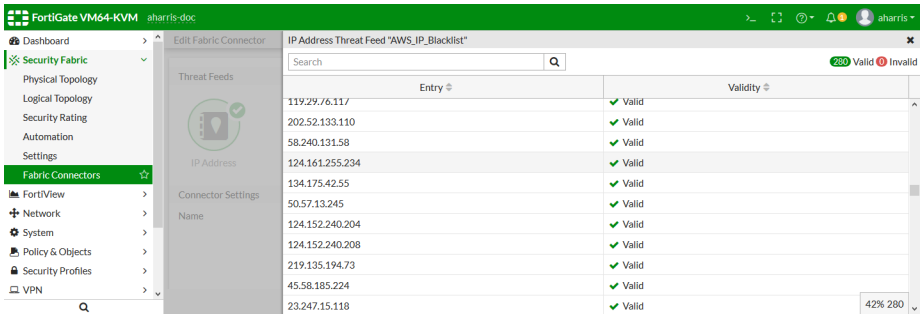


External Block List (Threat Feed) – Policy


You can use the External Block List (Threat Feed) for web filtering and DNS. You can also use External Block List (Threat Feed) in firewall policies.

Sample configuration

In *Security Fabric* > *Fabric Connectors* > *Threat Feeds* > *IP Address*, create or edit an external IP list object.

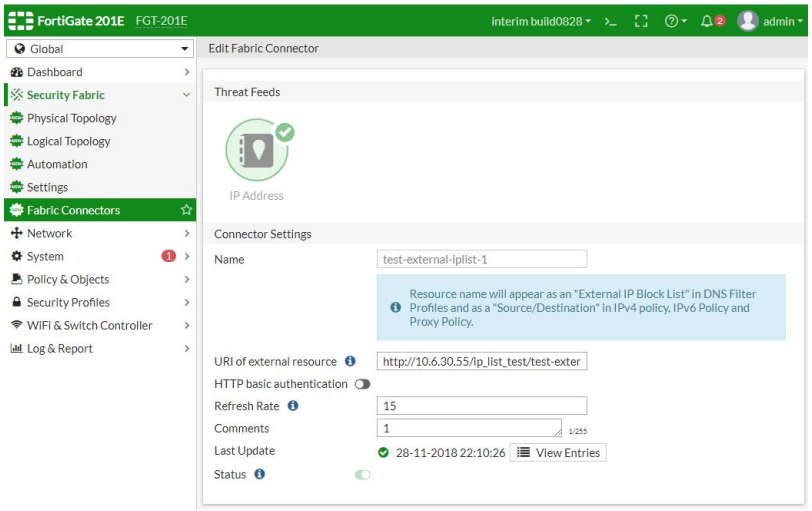

Click *View Entries* to see the external IP list.

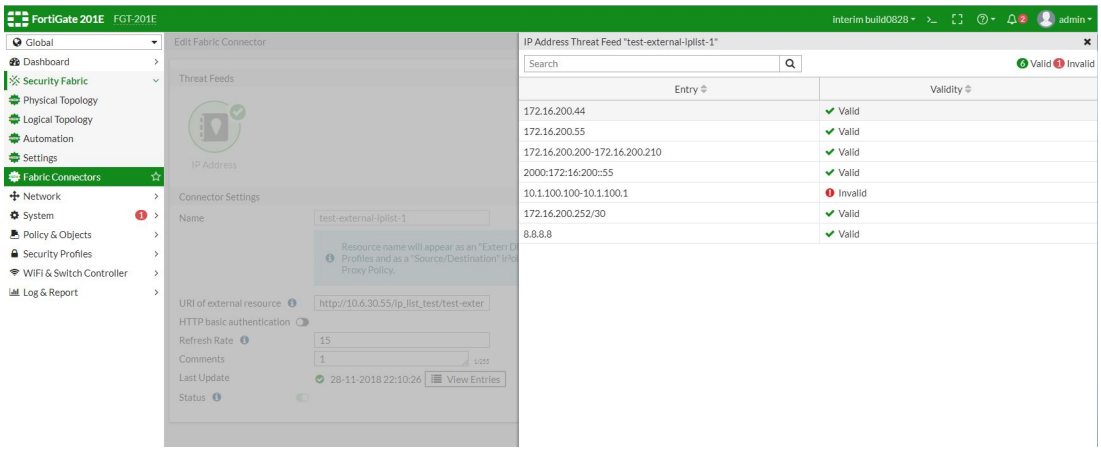

To create an external iplist object using the CLI:

```
config system external-resource
   edit "test-external-iplist-1"
      set status enable
      set type address
      set username ''
      set password ENC
      set comments ''
      set resource "http://10.6.30.55/ip_list_test/test-external-iplist-2.txt"
      set refresh-rate 15
   next
end
```

To apply an external iplist object to the firewall policy using the CLI:


```
config firewall policy
   edit 1
      set name "policyid-1"
      set srcintf "wan2"
      set dstintf "wan1"
      set srcaddr "all"
      set dstaddr "test-external-iplist-1"
      set action accept
      set schedule "always"
      set service "ALL"
      set logtraffic all
      set auto-asic-offload disable
      set nat enable
   next
end
```

External Block List (Threat Feed) - Authentication

The external *Threat Feed* connector (block list retrieved by HTTPS) supports username and password authentication.

To enable username and password authentication:

1. Navigate to *Security Fabric* > *Fabric Connectors*.
2. Edit an existing *Threat Feed* or create a new one by selecting *Create New*.
3. In *Connector Settings*, select the *HTTP basic authentication* toggle to enable the feature.
4. Enter a username and password.

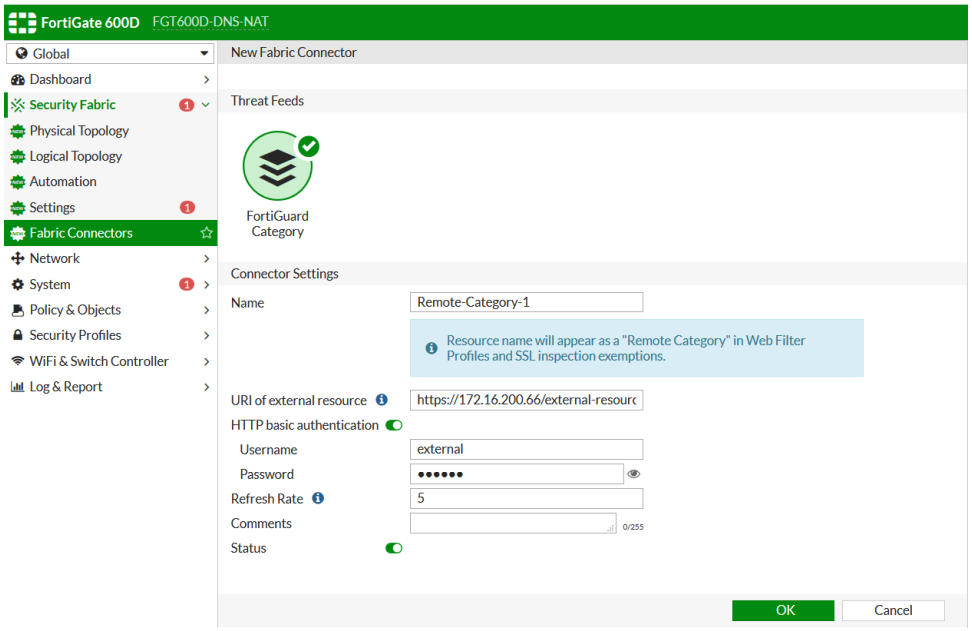


5. Select *OK* to save your changes.

External Block List (Threat Feed) - File Hashes


The Malware Hash type of *Threat Feed* connector supports a list of file hashes that can be used as part of virus outbreak prevention.

To configure Malware Hash:


1. Navigate to *Security Fabric* > *Fabric Connectors* and click *Create New*.
2. In the *Threat Feeds* section, click *Malware Hash*.

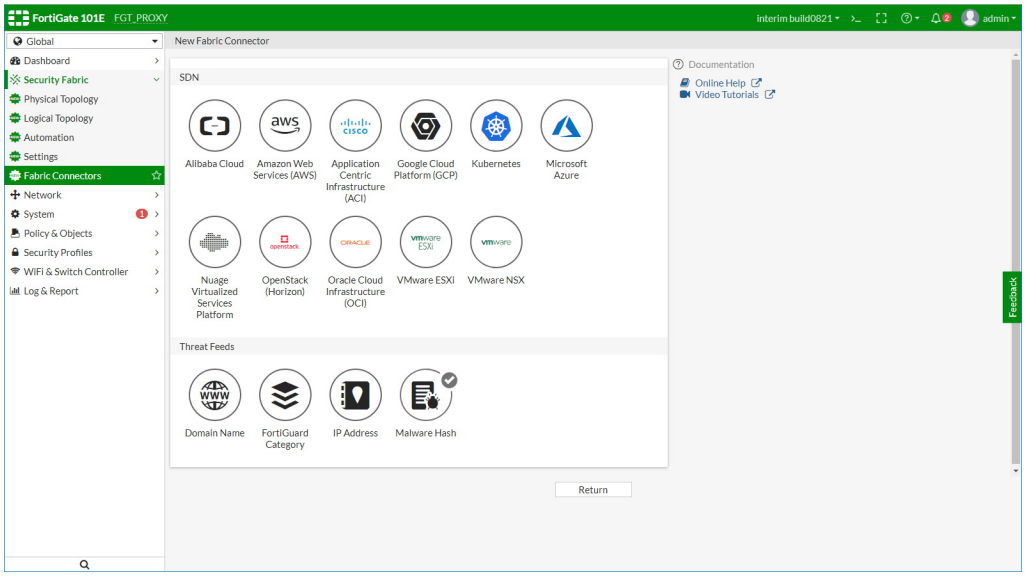


The *Malware Hash* source objects are displayed.

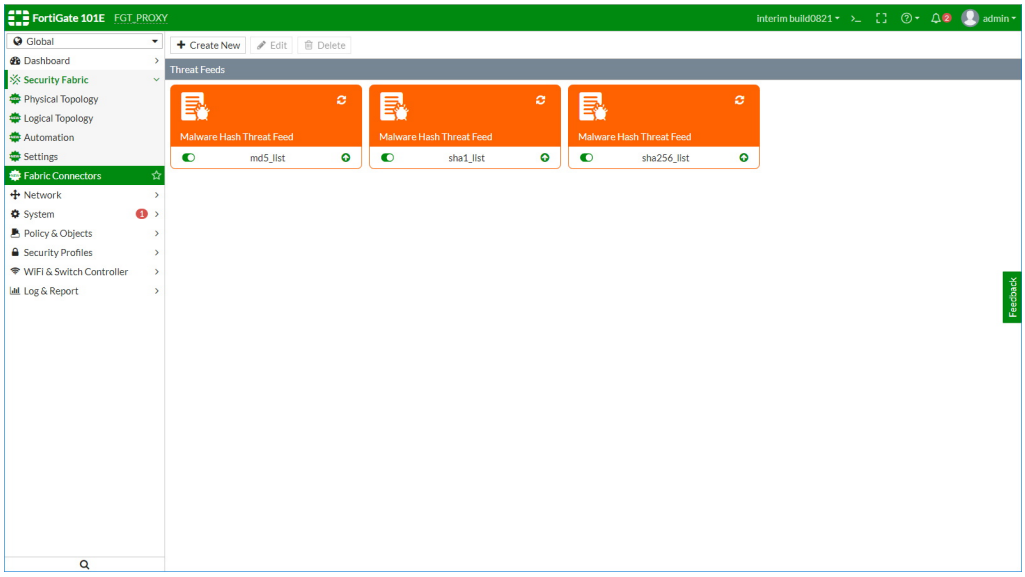

3. To configure *Malware Hash*, fill in the *Connector Settings* section.

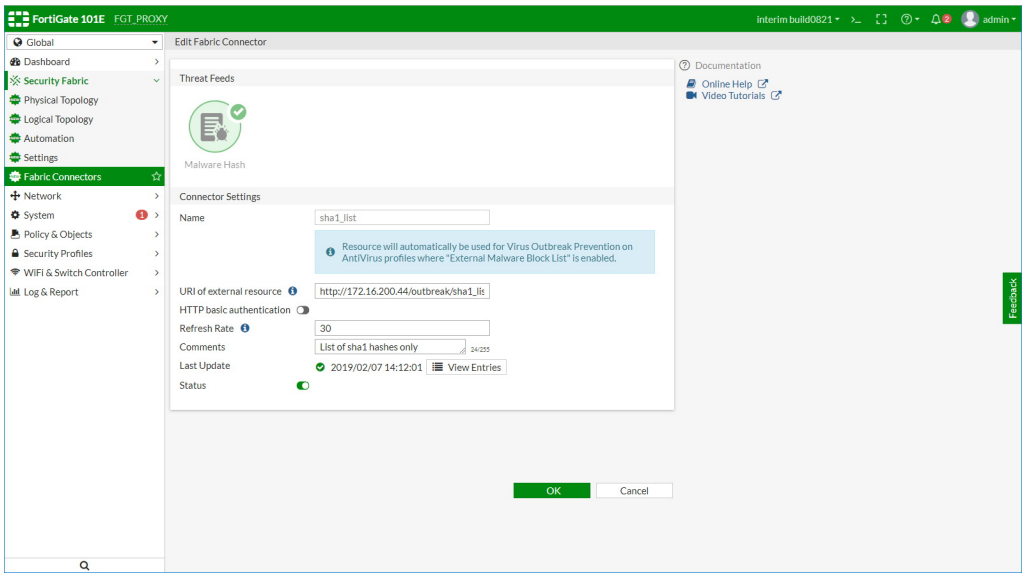

4. Beside the *Last Update* field, click *View Entries* to display the external Malware Hash list contents.

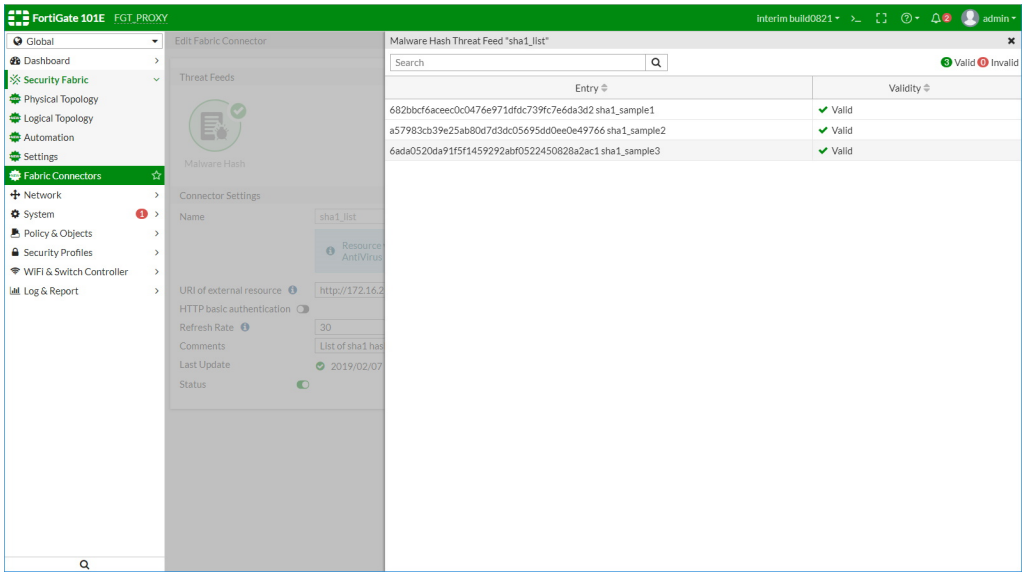

New Malware value for external-resource parameter in CLI

```
FGT_PROXY (external-resource) # edit sha1_list
new entry 'sha1_list' added

FGT_PROXY (sha1_list) # set type ?
category    FortiGuard category.
address     Firewall IP address.
domain      Domain Name.
malware     Malware hash.
```

To configure external Malware Hash list sources in CLI:


```
config global
    config system external-resource
        edit "md5_list"
            set type malware
            set comments "List of md5 hashes only"
            set resource "http://172.16.200.44/outbreak/md5_list"
            set refresh-rate 30
        next
        edit "sha1_list"
            set type malware
            set comments "List of sha1 hashes only"
            set resource "http://172.16.200.44/outbreak/sha1_list"
            set refresh-rate 30
        next
        edit "sha256_list"
            set type malware
            set comments "List of sha256 hashes only"
            set resource "http://172.16.200.44/outbreak/sha256_list"
            set refresh-rate 30
        next
    end

end
```

Update to antivirus profile

In *Security Profiles* > *AntiVirus*, the *Virus Outbreak Prevention* section allows you to enable the following options:

- Use Fortinet outbreak Prevention Database.
- Use External Malware Block List.

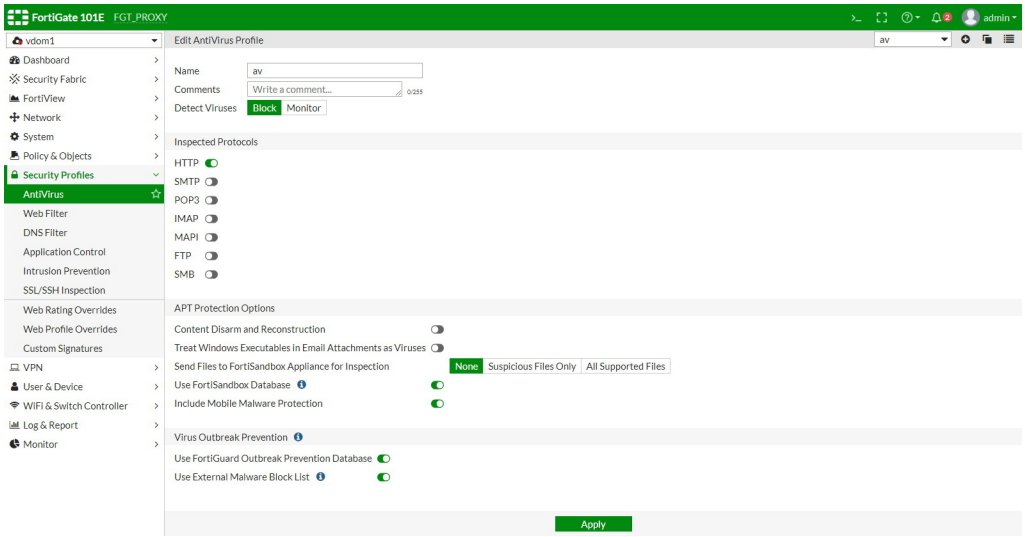

To configure virus outbreak prevention options in CLI:

You must first enable `outbreak-prevention` in the protocol and then enable `external-blocklist` under `outbreak-prevention`.

```
config antivirus profile
    edit "av"
        set analytics-db enable
        config http
            set options scan
            set outbreak-prevention full-archive
        end
        config ftp
            set options scan
            set outbreak-prevention files
        end
        config imap
            set options scan
            set outbreak-prevention full-archive
        end
        config pop3
            set options scan
            set outbreak-prevention full-archive
        end
        config smtp
            set options scan
            set outbreak-prevention files
        end
        config mapi
            set options scan
            set outbreak-prevention full-archive
        end
        config nntp
            set options scan
            set outbreak-prevention full-archive
        end
        config smb
            set options scan
            set outbreak-prevention full-archive
        end
        config outbreak-prevention
            set ftgd-service enable
            set external-blocklist enable
        end
    next
end
```

Update to utm-virus category logs

This feature adds the fields `filehash` and `filehashsrc` to outbreak prevention detection events.

Example of the utm-virus log generated when a file is detected by FortiGuard queried outbreak prevention:

```
2: date=2018-07-30 time=13:57:59 logid="0204008202" type="utm" subtype="virus"
eventtype="outbreak-prevention" level="warning" vd="root" evnttime=1532984279 msg="Blocked
by Virus Outbreak Prevention service." action="blocked" service="HTTP" sessionid=174777
srcip=192.168.101.20 dstip=172.16.67.148 srcport=37044 dstport=80 srcintf="lan"
srcintfrole="lan" dstintf="wan1" dstintfrole="wan" policyid=1 proto=6 direction="incoming"
filename="zhvo_test.com" checksum="583369a5" quarskip="No-skip"
virus="503e99fe40ee120c45bc9a30835e7256fff3e46a" dtype="File Hash"
filehash="503e99fe40ee120c45bc9a30835e7256fff3e46a"    filehashsrc="fortiguard"
```

```
url="http://172.16.67.148/zhvo_test.com" profile="mhash_test" agent="Firefox/43.0"
analyticssubmit="false" crscore=30 crlevel="high&#8220;
```

Example of the utm-virus log generated when a file is detected by External Malware Hash List outbreak prevention:

```
1: date=2018-07-30 time=13:59:41 logid="0207008212" type="utm" subtype="virus"
eventtype="malware-list" level="warning" vd="root" eventtime=1532984381 msg="Blocked by
local malware list." action="blocked" service="HTTP" sessionid=174963 srcip=192.168.101.20
dstip=172.16.67.148 srcport=37045 dstport=80 srcintf="lan" srcintfrole="lan" dstintf="wan1"
dstintfrole="wan" policyid=1 proto=6 direction="incoming" filename="mhash_block.com"
checksum="90f0cb57" quarskip="No-skip" virus="mhash_block.com" dtype="File Hash"
filehash="93bdd30bd381b018b9d1b89e8e6d8753"    filehashsrc="test_list"
url="http://172.16.67.148/mhash_block.com" profile="mhash_test" agent="Firefox/43.0"
analyticssubmit="false"
```

External resources for DNS filter

External resources provides the ability to dynamically import an external block list into an HTTP server. This feature enables the FortiGate to retrieve a dynamic URL, domain name, IP address, or malware hash list from an external HTTP server periodically. The FortiGate uses these external resources as the web filter's remote categories, DNS filter's remote categories, policy address objects, or antivirus profile's malware definitions. If external resources are updated, FortiGate objects are also updated dynamically.

External resource is divided into four types:

- URL list (type = category)
- Domain name list (type = domain)
- IP address list (type = address)
- Malware hash list (type = malware)

Remote categories and external IP block list

The DNS filter profile can use two types of external resources: *domain type* (domain name list) and *address type* (IP address list).

When a *domain type* external resource is configured, it is treated as a remote category in the DNS filter profile. If the domain name in DNS query matches the entry in this external resource file, it is treated as the remote category and follows the action configured for this category in DNS filter profile.

When an *address type* external resource is configured, it can be enabled as *external-ip-blocklist* in DNS filter profile. If a DNS resolved IP address in DNS response matches the entry in the *external-ip-blocklist*, this DNS query is blocked by the DNS filter.

For external resources file format and limits, see External resources file format on page 220.

Configuring external resources in the CLI

In the CLI, you can configure external resources files in an external HTTP server. Under global, configure the external resources file location and specify the resource type.

To configure external resources:

```
config system external-resource
   edit "Ext-Resource-Type-as-Domain-1"
```

```
      set type domain
      set category 194
      set resource "http://172.16.200.66/external-resources/Ext-Resource-Type-as-Domain-
1.txt"
      set refresh-rate 1
   next
   edit "Ext-Resource-Type-as-Address-1"
      set status enable
      set type address
      set username ''
      set password
      set comments ''
      set resource "http://172.16.200.66/external-resources/Ext-Resource-Type-as-Address-
1.txt"
      set refresh-rate 1
   next
end
```

In each VDOM, the domain type external resource can be used in the DNS filter as remote category. In this example, the domain name list in the Ext-Resource-Type-as-Domain-1.txt file is treated as a remote category (category ID 194). The IP address list in the Ext-Resource-Type-as-Address-1.txt file can be applied in the DNS filter as an `external-ip-blocklist`. If the DNS resolved IP address matches any entry in the list in that file, the DNS query is blocked.

To configure the external IP block list and apply it to a policy:

```
config dnsfilter profile
   edit "default"
      set comment "Default dns filtering."
      config ftgd-dns
         config filters
            edit 1
               set category 194
               set action block
            next
            edit 2
               set category 12
            next
            edit 3
            next
         end
      end
      set block-botnet enable
      set external-ip-blocklist "Ext-Resource-Type-as-Address-1"
   next
end


config firewall policy
   edit 1
      set name "DNSFilter"
      set srcintf "port10"
      set dstintf "port9"
      set srcaddr "all"
      set dstaddr "all"
      set action accept
      set schedule "always"
      set service "ALL"
```

```
        set utm-status enable
        set logtraffic all
        set dnsfilter-profile "default"
        set profile-protocol-options "protocol"
        set ssl-ssh-profile "protocols"
        set nat enable
    next
end
```

Configuring external resources in the GUI


To configure, edit, or view the entries for external resources from GUI:

1. Go to *Global* > *Security Fabric* > *Fabric Connectors*.
2. Click *Create New*.
3. In the *Threat Feeds* section, select *Domain Name* or *IP Address*.

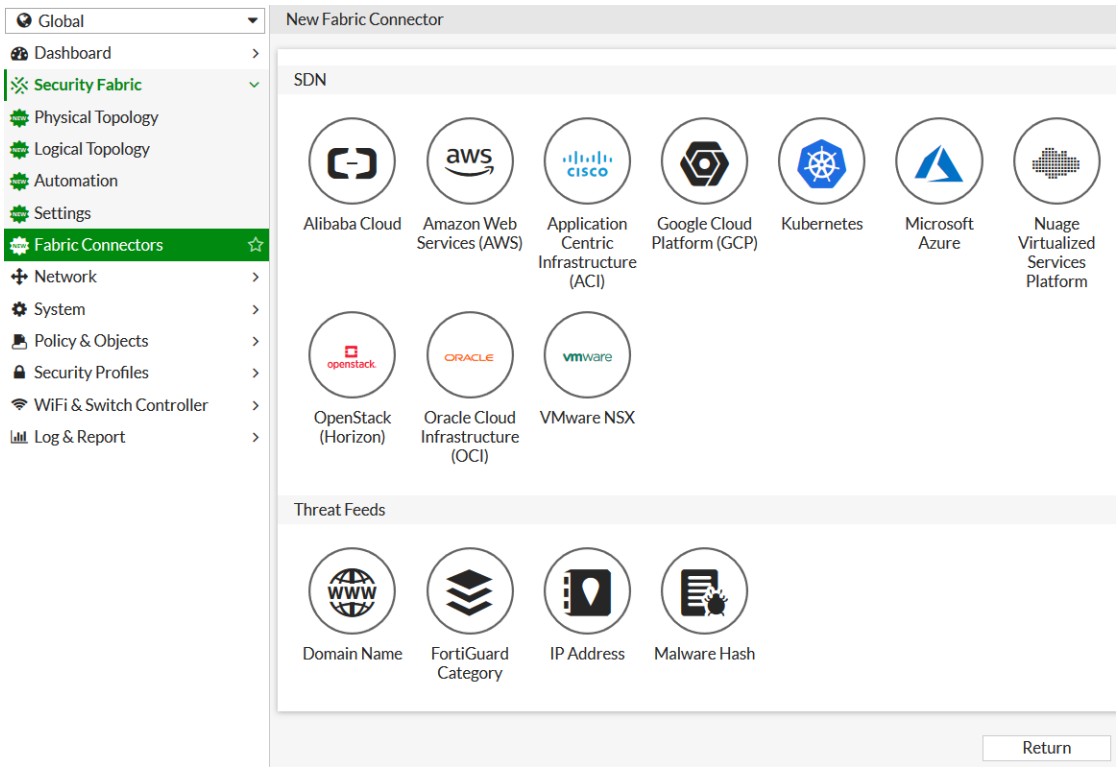


4. Enter the Resource *Name*, URL, location of the resource file, resource authentication credentials, and *Refresh Rate*.


5. Click *OK*.

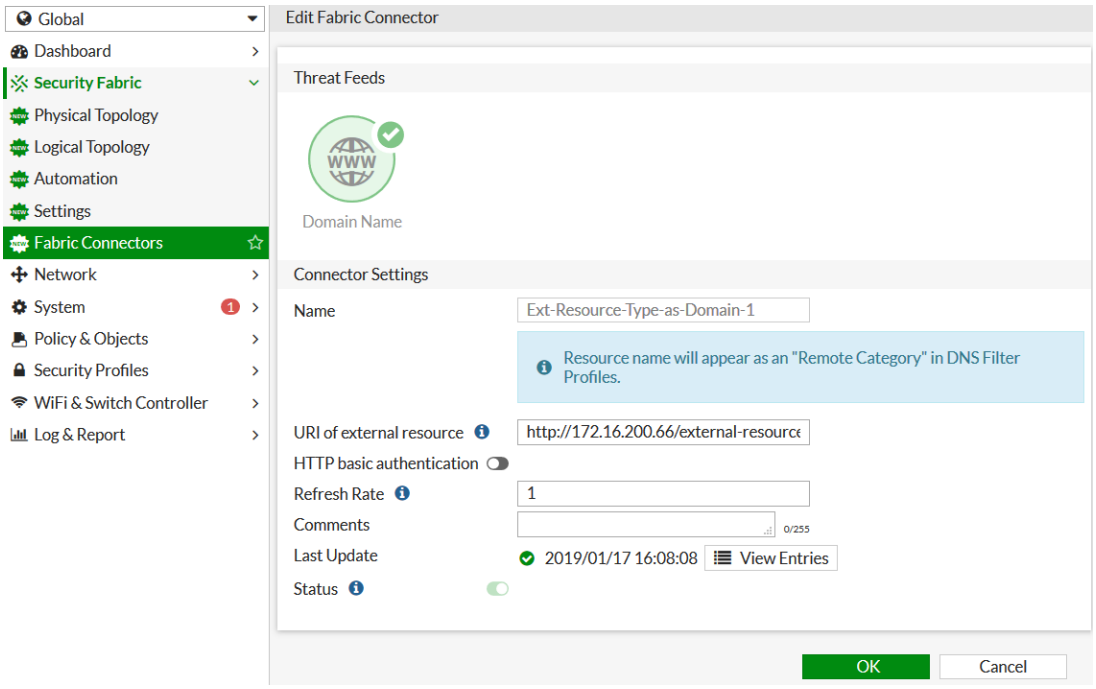

6. Double-click the *Threat Feeds Object* you just configured to open the *Edit* page.
7. Click *View Entries* to view the entry list in the external resources file.

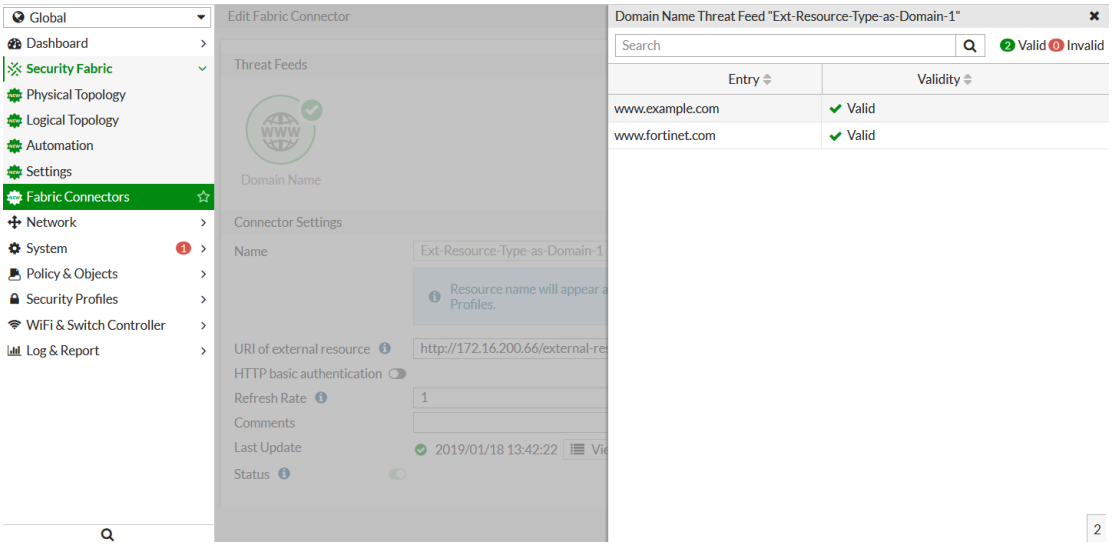


8. Go to *VDOM* > *Security Profiles* > *DNS Filter* and open a DNS filter profile. The configured external resources displays, and you can apply it in each DNS filter profile (remote category or external IP block lists).

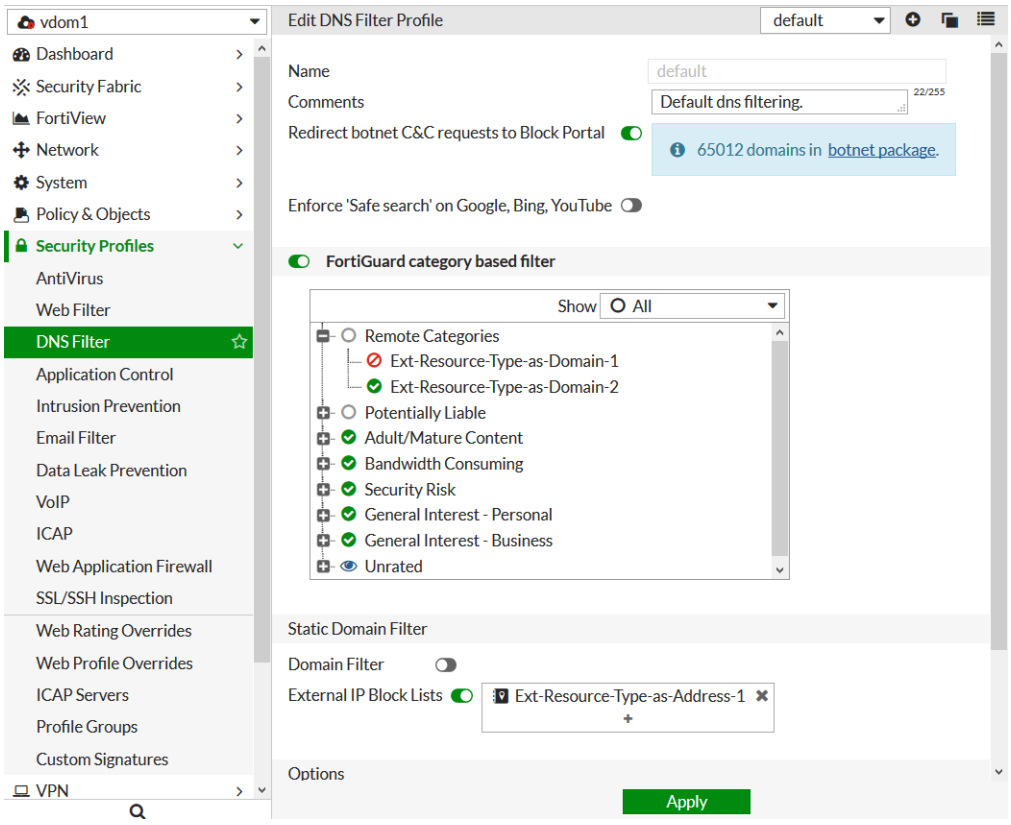

Log sample

Remote categories

Go to *VDOM > Log & Report > DNS Query*. Some domains that match the remote category list are rated as remote category, overriding their original domain rating.

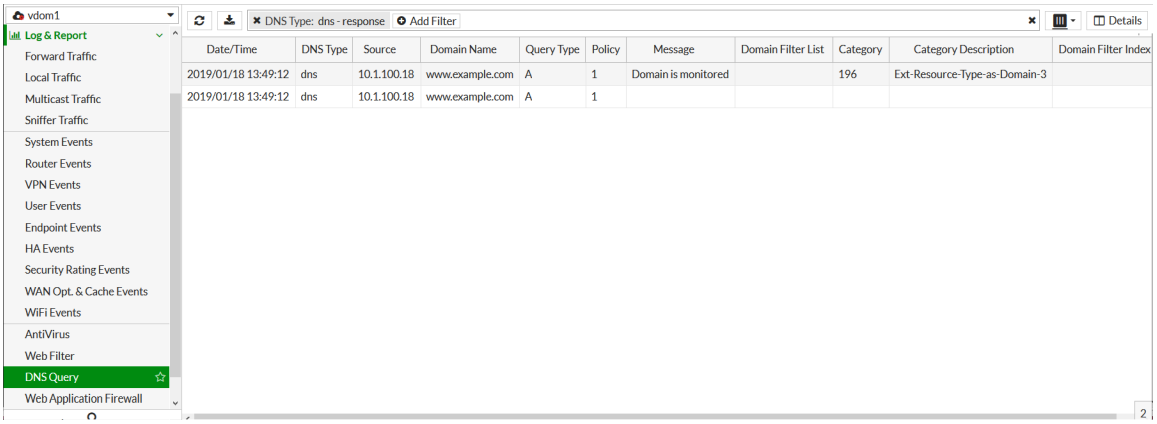

Log example:


```
1: date=2019-01-18 time=13:49:12 logid="1501054802" type="utm" subtype="dns" eventtype="dns-
response" level="notice" vd="vdom1" eventtime=1547848151 policyid=1 sessionid=82998
srcip=10.1.100.18 srcport=42985 srcintf="port10" srcintfrole="undefined" dstip=172.16.95.16
```

```
dstport=53 dstintf="port9" dstintfrole="undefined" proto=17 profile="default" xid=38234
qname="www.example.com" qtype="A" qtypeval=1 qclass="IN" ipaddr="93.184.216.34" msg="Domain
is monitored" action="pass" cat=196 catdesc="Ext-Resource-Type-as-Domain-3"

2: date=2019-01-18 time=13:49:12 logid="1500054000" type="utm" subtype="dns" eventtype="dns-
query" level="information" vd="vdom1" eventtime=1547848151 policyid=1 sessionid=82998
srcip=10.1.100.18 srcport=42985 srcintf="port10" srcintfrole="undefined" dstip=172.16.95.16
dstport=53 dstintf="port9" dstintfrole="undefined" proto=17 profile="default" xid=38234
qname="www.example.com" qtype="A" qtypeval=1 qclass="IN"
```

External IP block lists

Go to *VDOM* > *Log & Report* > *DNS Query*. If the DNS query resolved IP address matches the entry in the `external-ip-blocklist`, the DNS query is blocked.

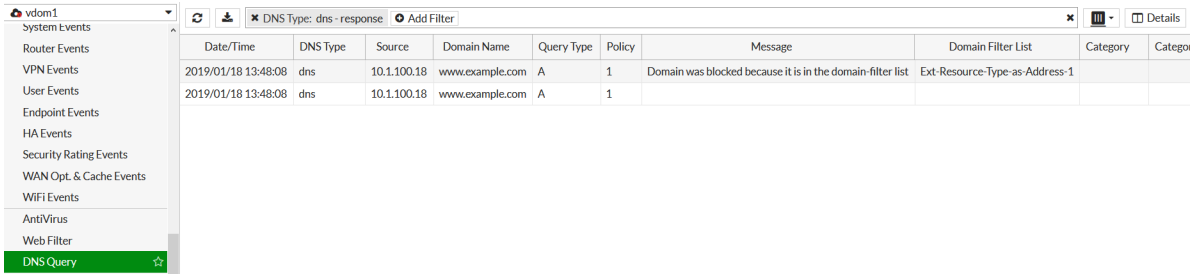

Log example:

```
1: date=2019-01-18 time=13:50:53 logid="1501054400" type="utm" subtype="dns" eventtype="dns-
response" level="warning" vd="vdom1" eventtime=1547848253 policyid=1 sessionid=83206
srcip=10.1.100.18 srcport=47281 srcintf="port10" srcintfrole="undefined" dstip=172.16.95.16
dstport=53 dstintf="port9" dstintfrole="undefined" proto=17 profile="default" xid=7501
qname="www.example.com" qtype="A" qtypeval=1 qclass="IN" msg="Domain was blocked because it
is in the domain-filter list" action="redirect" domainfilteridx=0 domainfilterlist="Ext-
Resource-Type-as-Address-1"

2: date=2019-01-18 time=13:50:53 logid="1500054000" type="utm" subtype="dns" eventtype="dns-
query" level="information" vd="vdom1" eventtime=1547848253 policyid=1 sessionid=83206
srcip=10.1.100.18 srcport=47281 srcintf="port10" srcintfrole="undefined" dstip=172.16.95.16
dstport=53 dstintf="port9" dstintfrole="undefined" proto=17 profile="default" xid=7501
qname="www.example.com" qtype="A" qtypeval=1 qclass="IN"
```

Automation stitches

Automation stitches automate the activities between the different components in the Security Fabric, decreasing the response times to security events. Events from any source in the Security Fabric can be monitored, and action responses can be set up to any destination.



Automation stitches can also be used on FortiGate devices that are not part of a Security Fabric.

Automation stitches that use cloud-based actions, such as AWS Lambda and Azure Function, have the option to delay an action after the previous action is completed.

An automation stitch consists of two parts, the trigger and the actions. The trigger is the condition or event on the FortiGate that activates the action, for example, a specific log, or a failed log in attempt. The action is what the FortiGate does in response to the trigger.

Diagnose commands are available in the CLI to test, log, and display the history and settings of stitches.


Automation stitches can only be created on the root FortiGate in a Security Fabric.

Creating automation stitches

To create an automation stitch, a trigger event and a response action or actions are selected. Automation stitches can also be tested after they are created.

To create an automation stitch in the GUI:

1. On the root FortiGate, go to *Security Fabric* > *Automation*.
2. Click *Create New*. The *New Automation Stitch* page opens.

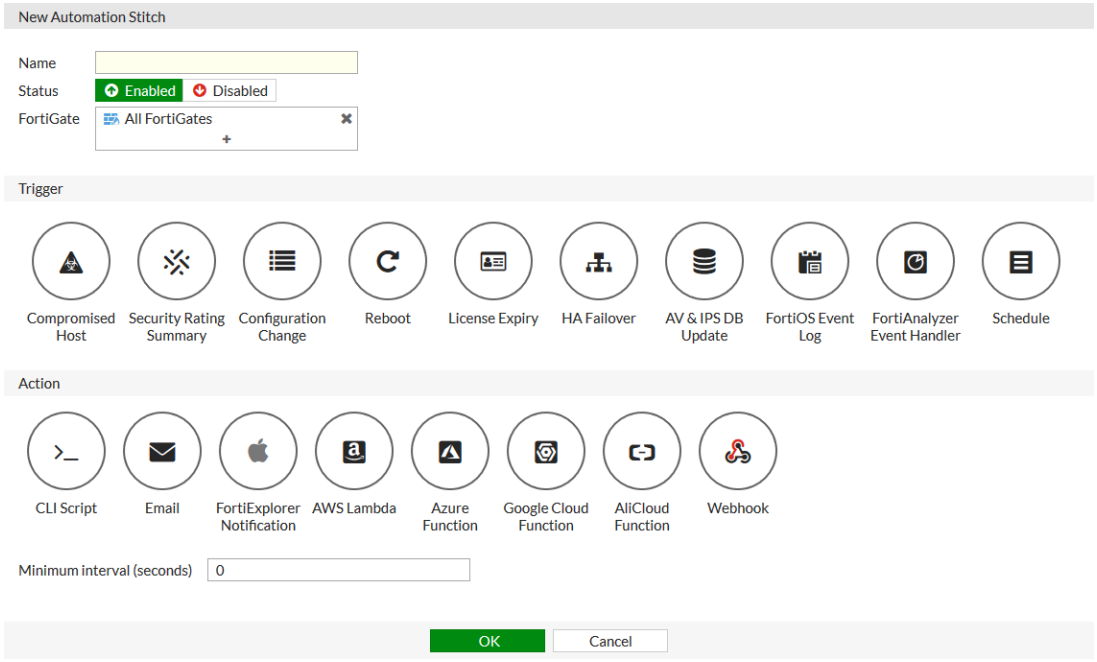

3. Enter the following information:

Name	Enter a name for the automation stitch.
Status	Enable/disable the stitch.
FortiGate	Select the FortiGate device to apply the automation stitch to, or select *All FortiGates* to apply it to all of them.
Trigger	Select a trigger.
Action	Select and configure one or more actions.
Minimum interval (seconds)	Enter a minimum time interval during which notifications for the same trigger event will not be sent. After the time interval elapses, an alert is sent that includes the last event since the time interval elapsed.

4. Click *OK*.

To create an automation stitch in the CLI:

1. Create an automation trigger:

```
config system automation-trigger
    edit <automation-trigger-name>
        set trigger-type {event-based | scheduled}
        set event-type <option>
        set license-type <option>
        set ioc-level {medium | high}
        set logid <integer>
        set trigger-frequency {hourly | daily | weekly | monthly}
        set trigger-weekday <option>
        set trigger-day <integer>
        set trigger-hour <integer>
        set trigger-minute <integer>
        set faz-event-severity <string>
        set faz-event-tags <string>
    next
end
```

The available options will vary depending on the selected event type.

2. Create an automation action:

```
config system automation-action
    edit <name>
        set action-type <option>
        set email-to <names>
        set email-from <string>
        set email-subject <string>
        set email-body <string>
        set minimum-interval <integer>
        set delay <integer>
        set required {enable | disable}
        set aws-api-id <string>
        set aws-region <string>
        set aws-domain <string>
```

```
            set aws-api-stage <string>
            set aws-api-path <string>
            set aws-api-key <string>
            set azure-app <string>
            set azure-function <string>
            set azure-domain <string>
            set azure-function-authorization {anonymous | function | admin}
            set azure-api-key <string>
            set gcp-function-region <string>
            set gcp-project <string>
            set gcp-function-domain <string>
            set gcp-function <string>
            set alicloud-account-id <string>
            set alicloud-region <string>
            set alicloud-function-domain <string>
            set alicloud-version <string>
            set alicloud-service <string>
            set alicloud-function <string>
            set alicloud-function-authorization {anonymous | function}
            set alicloud-access-key-id <string>
            set alicloud-access-key-secret <string>
            set protocol {http | https}
            set method {post | put | get | patch | delete}
            set uri <string>
            set http-body <string>
            set port <integer>
            set headers <header>
            set script <string>
            set security-tag <string>
            set sdn-connector <connector_name>
        next
    end
```

3. Create an automation destination:

```
config system automation-destination
    edit <name>
        set type {fortigate | ha-cluster}
        set destination <serial numbers>
        set ha-group-id <integer>
    next
end
```

4. Create the automation stitch:

```
config system automation-stitch
    edit <automation-stitch-name>
        set status {enable | disable}
        set trigger <trigger-name>
        set action <action-name>
        set destination <serial-number>
    next
end
```

To test an automation stitch:

In the GUI, go to *Security Fabric* > *Automation*, right-click on the automation stitch and select *Test Automation Stitch*.

In the CLI, enter the following command:

```
diagnose automation test <stitch-name> <log>
```

Chaining and delaying actions

Automation stitches that use cloud-based or webhook actions have the option to delay an action after the previous action is completed. The execution of the actions can be delayed by up to 3600 seconds (one hour).

To configure this option in the GUI, select a cloud-based action, then enter the required value, in seconds, in the action configuration's *Delay* field.

To configure a delay in the CLI, use the following command:

```
config system automation-action
    edit <name>
        set action-type {aws-lambda | azure-function | google-cloud-function | alicloud-
function | webhook}
        set required {enable | disable}
        set delay <seconds>
    next
end
```

Triggers

The following table outlines the available automation stitch triggers:

Trigger	Description
Compromised Host	An Indicator of Compromise (IOC) is detected on a host endpoint. The threat level must be selected and can be *Medium* or *High*. If *Medium* is selected, both medium and high level threats are included. **Note:** Additional actions are available only for *Compromised Host* triggers: • Access Layer Quarantine • Quarantine FortiClient via EMS • Assign VMware NSX Security Tag • IP Ban
Security Rating Summary	A summary is available for a recently run Security Rating.
Configuration Change	A FortiGate configuration change has occurred.
Reboot	A FortiGate is rebooting.
Low memory	This option is only available in the CLI. Conserve mode due to low memory. See Execute a CLI script based on CPU and memory thresholds on page 265 for an example.
High CPU	This option is only available in the CLI. High CPU usage. See Execute a CLI script based on CPU and memory thresholds on page 265 for an example.
License Expiry	A FortiGuard license is expiring. The license type must be selected. Options include:

Trigger	Description
	• FortiCare Support • FortiGuard Web Filter • FortiGuard AntiSpam • FortiGuard AntiVirus • FortiGuard IPS • FortiGuard Management Service • FortiGate Cloud
HA Failover	An HA failover is occurring.
AV & IPS DB Update	The antivirus and IPS database is updating.
FortiOS Event Log	The specified FortiOS log has occurred. The event must be selected from the event list.
FortiAnalyzer Event Handler	The specified FortiAnalyzer event handler has occurred. See FortiAnalyzer event handler trigger on page 239 for details.
Schedule	A scheduled monthly, weekly, daily, or hourly trigger. Set to occur on a specific minute of an specific hour on a specific day.
FortiGate Cloud-Based IOC	IOC detection from the FortiGate Cloud IOC service. This option requires an IOC license, a web filter license, and FortiCloud logging must be enabled. See FortiGate Cloud-based IOC on page 304 for details.

FortiAnalyzer event handler trigger

You can trigger automation stitches based on FortiAnalyzer event handlers. This allows you to define rules based on complex correlations across devices, log types, frequencies, and other criteria.

To set up a FortiAnalyzer event handler trigger:


1. Configure a FortiGate event handler on the FortiAnalyzer
2. Configure FortiAnalyzer logging on the FortiGate on page 240
3. Configure an automation stitch that is triggered by a FortiAnalyzer event handler on page 241

Configure a FortiGate event handler on the FortiAnalyzer

On the FortiAnalyzer, configure an event handler for the automation stitch. In this example, the event handler is triggered when an administrator logs in to the FortiGate.

To configure an event handler on the FortiAnalyzer:

1. Go to *Incidents & Events* > *Handlers* > *FortiGate Event Handlers*.
2. Configure an event handler for the automation stitch.

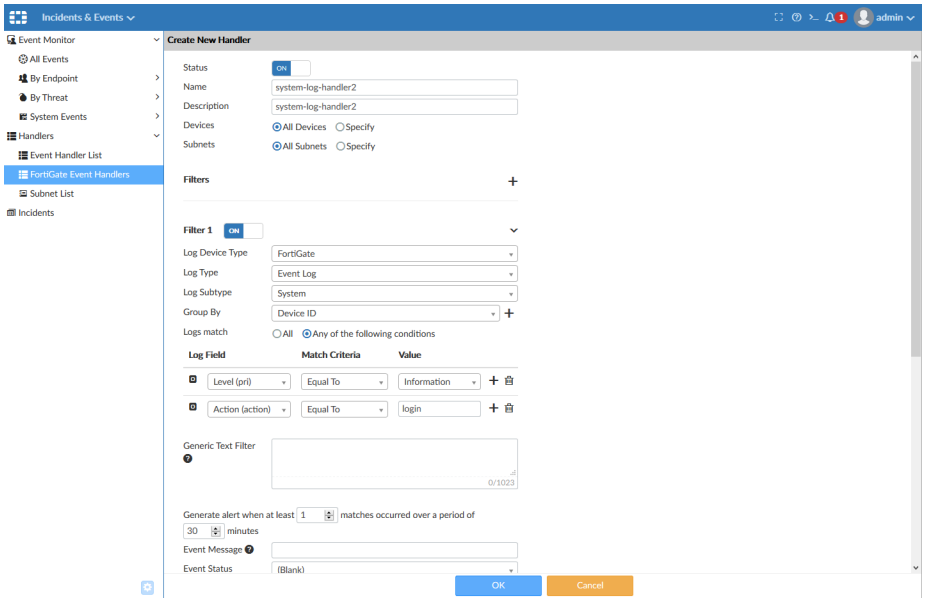


3. Click *OK*.

Configure FortiAnalyzer logging on the FortiGate

See Configuring FortiAnalyzer on page 74 for more information.

To configure FortiAnalyzer logging in the GUI:

1. Go to *Security Fabric* > *Settings*.
2. Enable and configure *FortiAnalyzer Logging*.

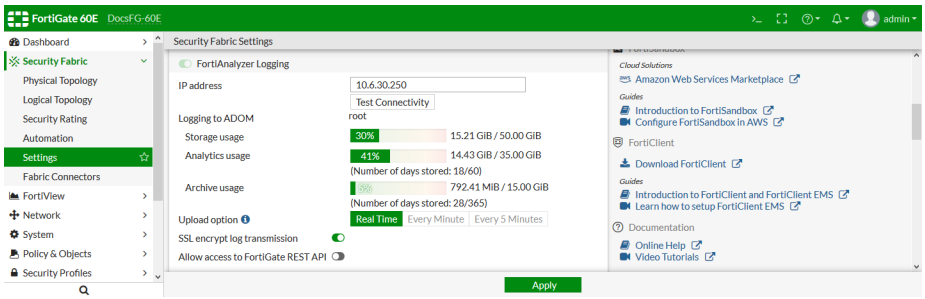

3. Click *Apply*.

To configure FortiAnalyzer logging in the CLI:

```
config log fortianalyzer setting
    set status enable
    set server "10.6.30.250"
    set serial "FL-4HET318900407"
    set upload-option realtime
```


```
    set reliable enable
end
```

Configure an automation stitch that is triggered by a FortiAnalyzer event handler

When a FortiAnalyzer event handler is triggered, it sends a notification to the FortiGate automation framework, which generates a log and triggers the automation stitch.

To configure an automation stitch that is triggered by a FortiAnalyzer event handler in the GUI:

1. Go to *Security Fabric* > *Automation*.
2. Click *Create New*.
3. In the *Trigger* section, select *FortiAnalyzer Event Handler*.
4. Set *Event handler name* to the event that was created on the FortiAnalyzer.
5. Set the *Event severity*, and select or create an *Event tag*.

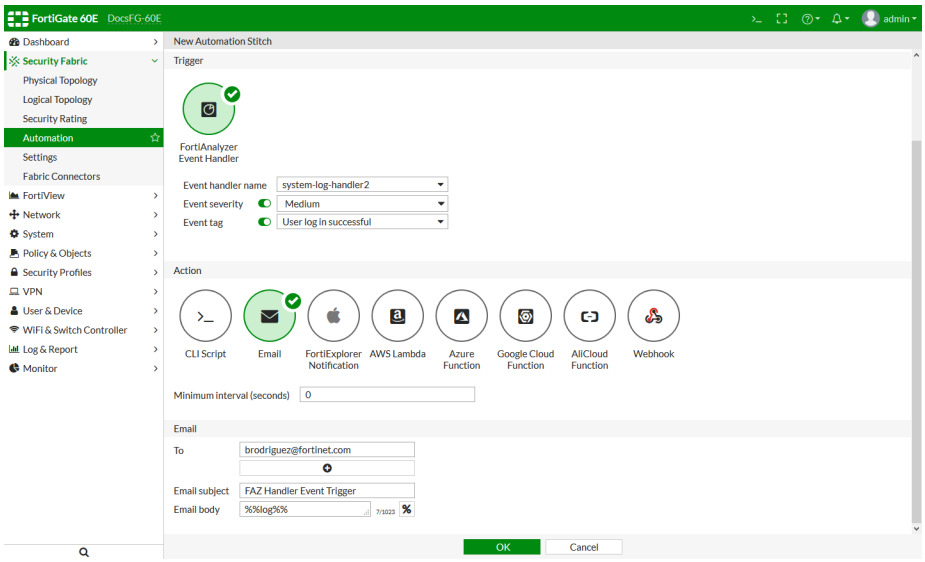

6. In the *Action* section, select *Email* and configure the email recipient and message.
7. Click *OK*.

To configure an automation stitch that is triggered by a FortiAnalyzer event handler in the CLI:

1. Create an automation action:

```
config system automation-action
    edit "auto-faz-1_email"
        set action-type email
        set email-to "jnjssll@fortinet.com"
        set email-subject "CSF stitch alert"
        set email-body "User login FortiGate successfully."
    next
end
```

2. Create an automation trigger:

```
config system automation-trigger
    edit "auto-faz-1"
```

```
        set event-type faz-event
        set faz-event-name "system-log-handler2"
        set faz-event-severity "medium"
        set faz-event-tags "User login successfully"
    next
end
```


3. Create the automation stitch:

```
config system automation-stitch
    edit "auto-faz-1"
        set trigger "auto-faz-1"
        set action "auto-faz-1_email"
    next
end
```

View the trigger event log

To see the trigger event log in the GUI:

1. Log in to the FortiGate.
   The FortiAnalyzer sends notification to the FortiGate automation framework, generates an event log on the FortiGate, and triggers the automation stitch.
2. Go to *Log & Report* > *Events* and select *System Events*.

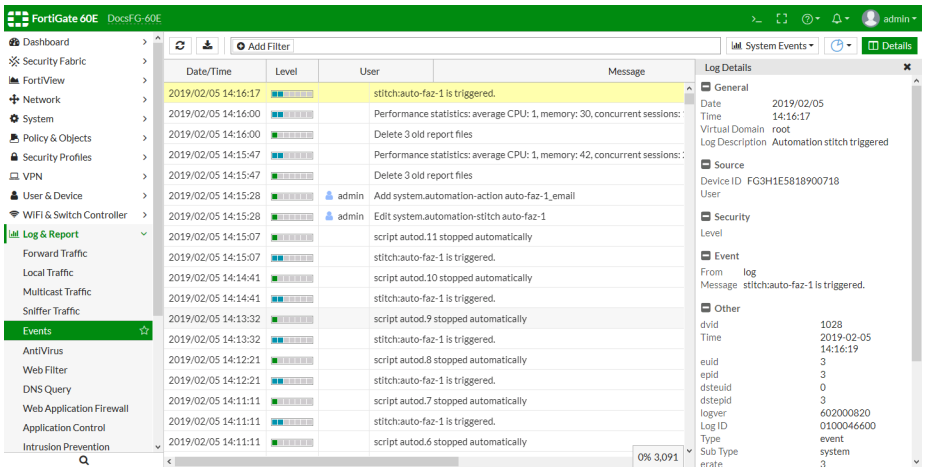


To see event logs in the CLI:

```
execute log display
    ...
    date=2019-02-05 time=14:16:17 logid="0100046600" type="event" subtype="system"
level="notice" vd="root" eventtime=1549404977 logdesc="Automation stitch triggered"
stitch="auto-faz-1" trigger="auto-faz-1" from="log" msg="stitch:auto-faz-1 is triggered."
    ...
```

Sample email

The email sent by the action will look similar to the following:

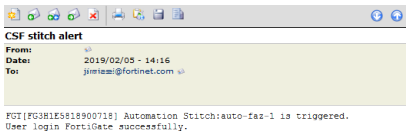

Actions

The following table outlines the available automation stitch actions. Multiple actions can be added and reorganized as needed by dragging and dropping.

Action	Description
Alert	Generate a FortiOS dashboard alert. This option is only available in the CLI.
CLI Script	Run one or more CLI scripts. See CLI script action on page 244 for details. See Execute a CLI script based on CPU and memory thresholds on page 265 for an example.
Disable SSID	Disable the SSID interface. This option is only available in the CLI.
Email	Send a custom email message to the selected recipients. At least one recipient and an email subject must be specified. The email body can use parameters from logs or previous action results. Wrapping the parameter with %% will replace the expression with the JSON value for the parameter, for example: *%%results.source%%* is the source property from the previous action.
FortiExplorer Notification	Send push notifications to FortiExplorer. The FortiGate must be registered to FortiCare on the iOS App that will receive the notification.
Access Layer Quarantine	This option is only available for Compromised Host triggers. Impose a dynamic quarantine on multiple endpoints based on the access layer.
Quarantine FortiClient via EMS	This option is only available for Compromised Host triggers. Use FortiClient EMS to block all traffic from the source addresses that are flagged as compromised hosts. Quarantined devices are flagged on the Security Fabric topology views. Go to *Monitor* > *Quarantine Monitor* to view and manage quarantined IP addresses.
Assign VMware NSX Security Tag	This option is only available for Compromised Host triggers. If an endpoint instance in a VMware NSX environment is compromised, the configured security tag is assigned to the compromised endpoint. See NSX Quarantine action on page 246 for details.
IP Ban	This option is only available for Compromised Host triggers. Block all traffic from the source addresses flagged by the IOC. Go to *Monitor* > *Quarantine Monitor* to view and manage banned IP addresses.

Action	Description
AWS Lambda	Send log data to an integrated AWS service. See AWS Lambda action on page 249 for details.
Azure Function	Send log data to an Azure function. See Azure Function action on page 251 for details.
Google Cloud Function	Send log data to a Google Cloud function. See Google Cloud Function action on page 253 for details.
AliCloud Function	Send log data to an AliCloud function. See AliCloud Function action on page 255 for details.
Webhook	Send an HTTP request using a REST callback. See Webhook action on page 258 for details, and Slack integration webhook on page 264 for an example.


CLI script action

CLI scripts can be run when an automation stitch is triggered. The scripts can be manually entered, uploaded as a file, or recorded in the CLI console. The output of the script can be sent as an email action.

In this example, the script sets the idle timeout value to 479 minutes, and sends an email with the script output.


To configure a CLI script automation stitch in the GUI:

1. Go to *Security Fabric* > *Automation*.
2. Click *Create New*.
3. Enter a name for the stitch, and select the FortiGate devices that it will be applied to.
4. Select a trigger, such as *Security Rating Summary*.
5. Select *CLI Script* and *Email* actions.
6. Configure the CLI script:
   - To manually enter the script, type it into the *Script* field.

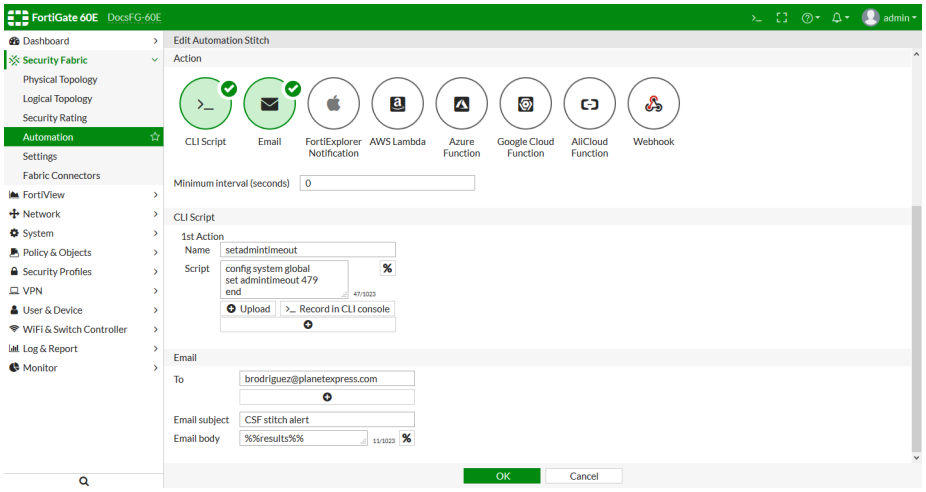

   - To upload a script file, click *Upload* and locate the file on your management computer.

- To record the script in the CLI console, click >_Record in CLI console, then enter the CLI commands.

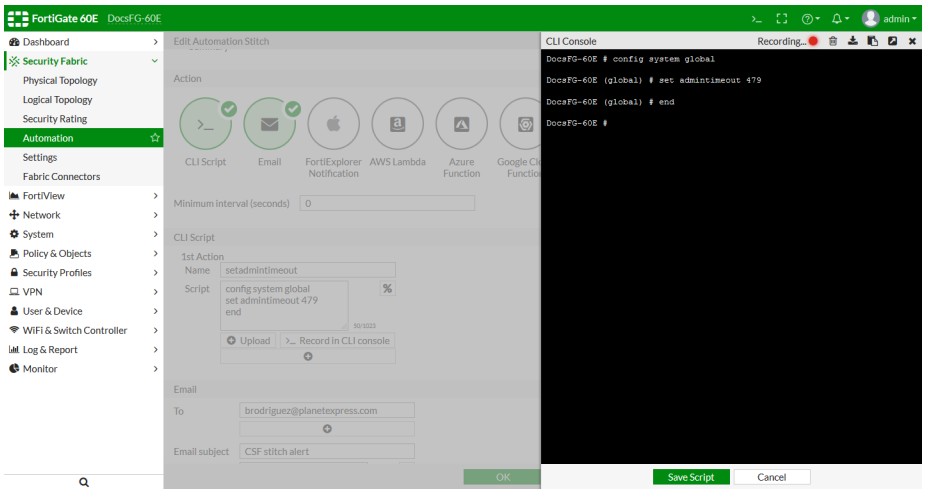

7. Configure the email action.
8. Click *OK*.

To configure a CLI script automation stitch in the CLI:

1. Create an automation action:

```
config system automation-action
    edit "set admintimeout479"
        set action-type cli-script
        set minimum-interval 0
        set delay 0
        set required enable
        set script "config system global
            set admintimeout 480
            end"
    next
    edit "auto-cli-1_email"
        set action-type email
        set email-to "jnkssll@fortinet.com"
        set email-subject "CSF stitch alert"
        set email-body "%%results%%"
        set minimum-interval 0
    next
end
```

2. Create an automation trigger:

```
config system automation-trigger
    edit "auto-cli-1"
        set trigger-type event-based
        set event-type security-rating-summary
    next
end
```


3. Create the automation stitch:

```
config system automation-stitch
    edit "auto-cli-1"
        set status enable
```

```
        set trigger "auto-cli-1"
        set action "set admintimeout479
end
```

Email sample

The email sent by the action will look similar to the following:

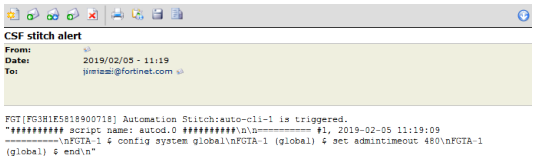

NSX Quarantine action

If an endpoint instance in a VMware NSX environment is compromised, this action will assign the configured security tag is to the compromised endpoint.

This action is only available when the automation trigger is set to compromised host.

To set up the NSX quarantine action, you need to:


1. Configure a VMware NSX SDN connector
2. Configure an NSX security tag automation stitch
3. Configure FortiAnalyzer logging on the FortiGate

Configure a VMware NSX SDN connector

The FortiGate retrieves security tags from the VMware NSX server through the connector.

To configure a VMware NSX SDN connector in the GUI:

1. Go to *Security Fabric* > *Fabric Connectors*
2. Click *Create New*.
3. Select *VMware NSX*
4. Configure the settings.

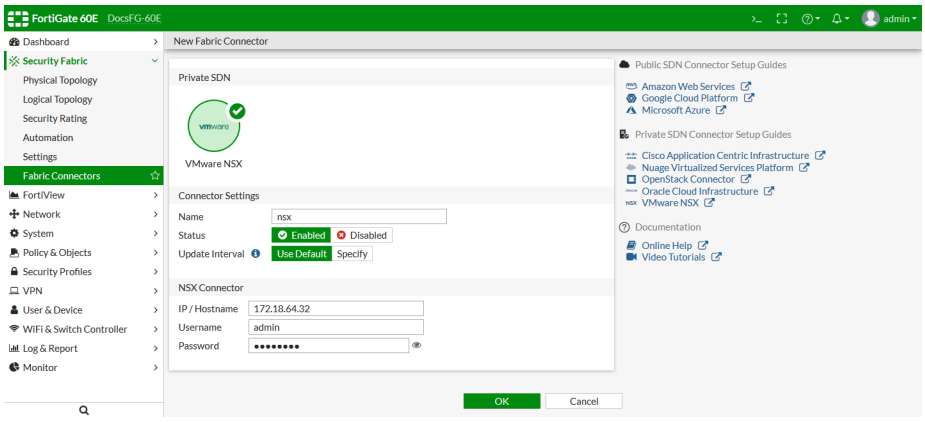

5. Click *OK*.

To configure a VMware NSX SDN connector in the CLI:


```
config system sdn-connector
    edit "nsx"
        set type nsx
        set server "172.18.64.32"
        set username "admin"
        set password xxxxxx
    next
end
```

Configure an NSX security tag automation stitch

Security tags are retrieved from the VMware NSX server through the NSX SDN connector.

To configure an NSX security tag automation stitch in the GUI:

1. Go to *Security Fabric* > *Automation*.
2. Click *Create New*.
3. In the *Trigger* section, select *Compromised Host*.
4. In the *Action* section, select *Assign VMware NSX Security Tag*.
5. Configure the settings.

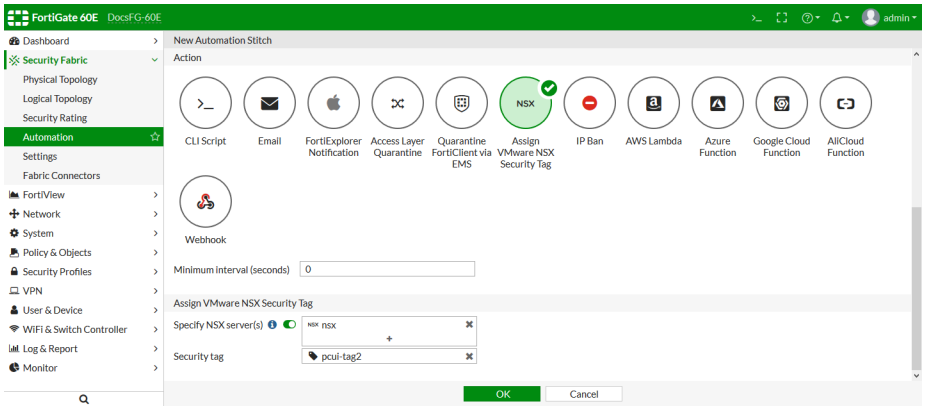

6. Click *OK*.

To configure an NSX security tag automation stitch in the CLI:

1. Create an automation action:

```
config system automation-action
    edit "pcui-test_quarantine-nsx"
        set action-type quarantine-nsx
        set security-tag "pcui-tag2"
        set sdn-connector "nsx"
    next
end
```

2. Create an automation trigger:

```
config system automation-trigger
    edit "pcui-test"
        set ioc-level high
```

```
    next
end
```

3. Create the automation stitch:

```
config system automation-stitch
    edit "pcui-test"
        set trigger "pcui-test"
        set action "pcui-test_quarantine-nsx"
    next
end
```


Configure FortiAnalyzer logging on the FortiGate

The FortiAnalyzer is used to send endpoint compromise notification to the FortiGate.

See Configuring FortiAnalyzer on page 74 for more information.

To configure FortiAnalyzer logging in the GUI:

1. Go to *Security Fabric* > *Settings*.
2. Enable and configure *FortiAnalyzer Logging*.

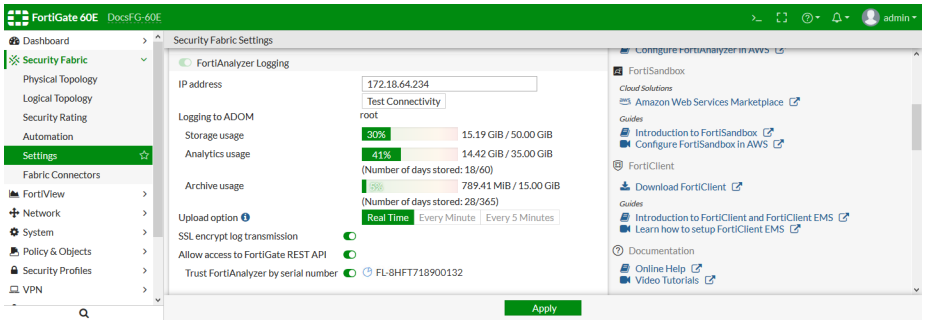


3. Click *Apply*.

To configure FortiAnalyzer logging in the CLI:

```
config log fortianalyzer setting
    set status enable
    set server "172.18.64.234"
    set serial "FL-8HFT718900132"
    set upload-option realtime
    set reliable enable
end
```

When an endpoint instance is compromised

When an endpoint instance, such as *pcui-ubuntu2*, in the VMware NSX environment is compromised, the automation stitch is triggered. The FortiGate then assigns the configured security tag, *pcui-tag2* in this example, to the compromised NSX endpoint instance.

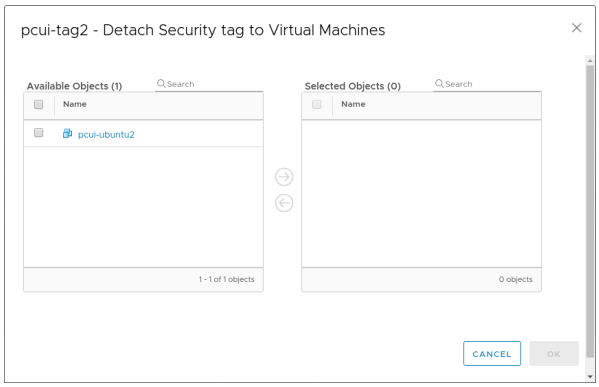


AWS Lambda action

AWS Lambda functions can be called when an automation stitch is triggered.

To configure an AWS Lambda function automation stitch in the GUI:

1. Go to *Security Fabric* > *Automation*.
2. Click *Create New*.
3. Enter a name for the stitch, and select the FortiGate devices that it will be applied to.
4. Select a trigger, such as *Security Rating Summary*.
5. Select *AWS Lambda Function* and configure its settings.

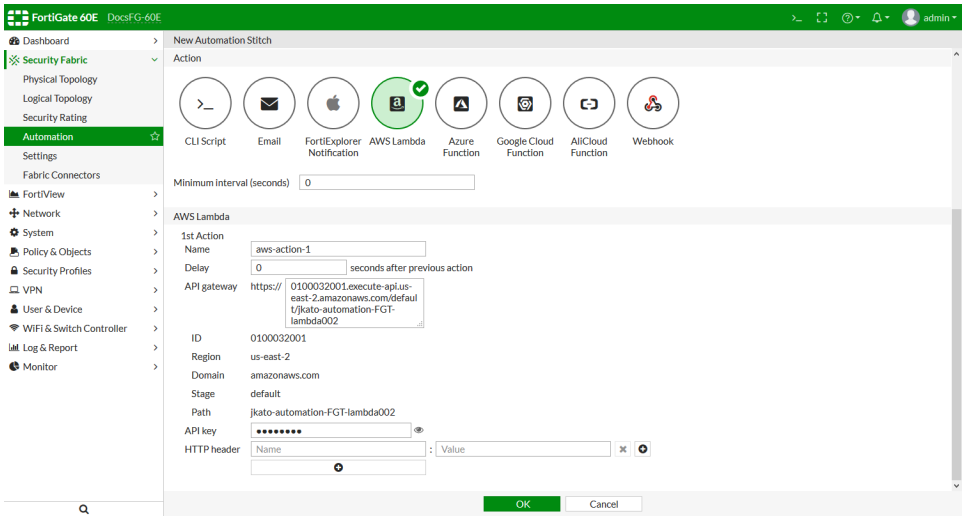

Name	The action name.
Delay	The amount of time after the previous action before this action executes, in seconds (0 - 3600, default = 0).
API gateway	The API gateway URL, in the format: `{restapi-id}.execute-api.{region}.{domain}/{stage}/{path}` The CLI must be used to manually enter the individual parameters.

API key	The API key configured in your API gateway.
HTTP header	The HTTP request header name and value. Multiple headers can be added.
+	Click to add another action. Actions can be reorganized as needed by dragging and dropping.
Name	The action name.
Delay	The amount of time after the previous action before this action executes, in seconds (0 - 3600, default = 0).

6. Click *OK*.

To configure an AWS Lambda function automation stitch in the CLI:

1. Create an automation action:

```
config system automation-action
    edit "aws-action-1"
        set action-type aws-lambda
        set aws-api-id "0100032001"
        set aws-region "us-east-2"
        set aws-api-stage "default"
        set aws-api-path "jkato-automation-FGT-lambda002"
        set aws-api-key ENC
nx8q83OxafVTdmAKv77GIdLYthROoRXmtYsrpF4wtuvfIMlSHvHxE9EYo8W/jquj0p5GRsZOMDrgG1zB0oUq7bvo
guLUa/Jx4IV0DgwzOWRUruoWEIIHQBHJWSnnrswbw1O0Px+p3uz4azh4XkR+Vi+U8/ngGoLKLtwWHn53Oa4YbK7w
+mKz1BJVV+DlbCfDkPmPkA==
    next
end
```


2. Create an automation trigger:

```
config system automation-trigger
    edit "auto-aws"
        set event-type security-rating-summary
    next
end
```

3. Create the automation stitch:

```
config system automation-stitch
    edit "auto-aws"
        set trigger "auto-aws"
        set action "aws-action-1"
    next
end
```

When the automation stitch is triggered, the FortiGate shows the stitch trigger time:

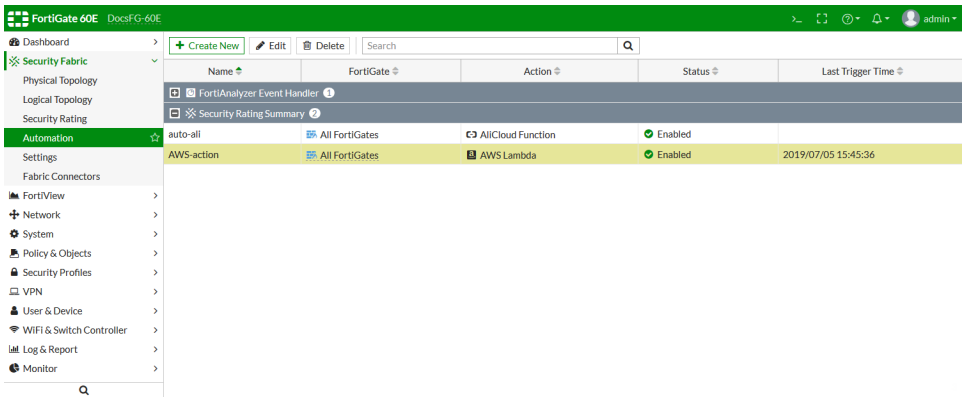


In AWS, the log shows that the function was called, executed, and finished.

Azure Function action

Azure functions can be called when an automation stitch is triggered.

To configure an Azure function automation stitch in the GUI:

1. Go to *Security Fabric* > *Automation*.
2. Click *Create New*.
3. Enter a name for the stitch, and select the FortiGate devices that it will be applied to.
4. Select a trigger, such as *Security Rating Summary*.
5. Select *Azure Function* and configure its settings.

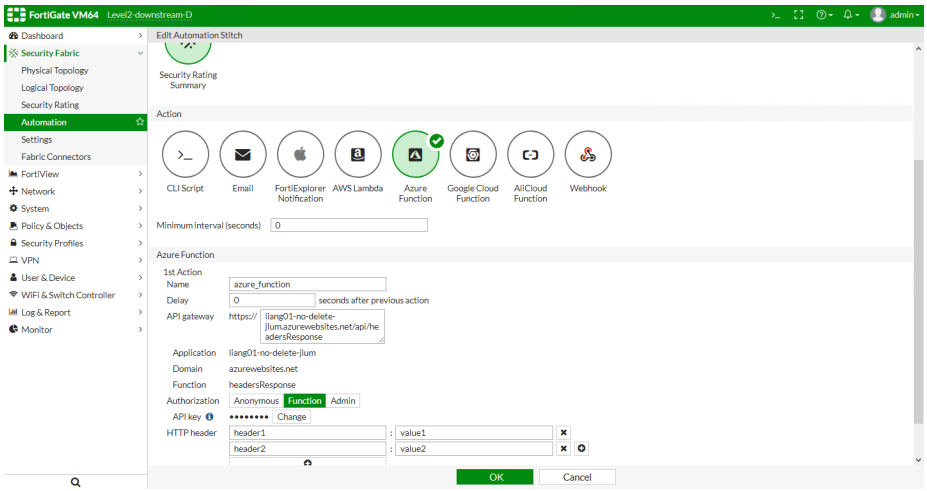

Name	The action name.
Delay	The amount of time after the previous action before this action executes, in seconds (0 - 3600, default = 0).
API gateway	The API gateway URL, in the format: `{application}.{domain}/api/{function}` The CLI must be used to manually enter the individual parameters.

Authorization	The authorization level: *Anonymous*, *Function*, or *Admin*.
API key	The API key configured in your API gateway. This options is only available when *Authorization* is not *Anonymous*.
HTTP header	The HTTP request header name and value. Multiple headers can be added.
+	Click to add another action. Actions can be reorganized as needed by dragging and dropping.

6. Click *OK*.

To configure an Azure function automation stitch in the CLI:

1. Create an automation action:

```
config system automation-action
    edit "azure_function"
        set action-type azure-function
        set azure-app "liang01-no-delete-jlum"
        set azure-function "headersResponse"
        set azure-function-authorization function
        set azure-api-key xxxxxx
        set headers "header1:value1" "header2:value2"
    next
end
```


2. Create an automation trigger:

```
config system automation-trigger
    edit "auto-azure"
        set event-type security-rating-summary
    next
end
```


3. Create the automation stitch:

```
config system automation-stitch
    edit "auto-azure"
        set trigger "auto-azure"
        set action "azure_function"
    next
end
```

When the automation stitch is triggered, the FortiGate shows the stitch trigger time:

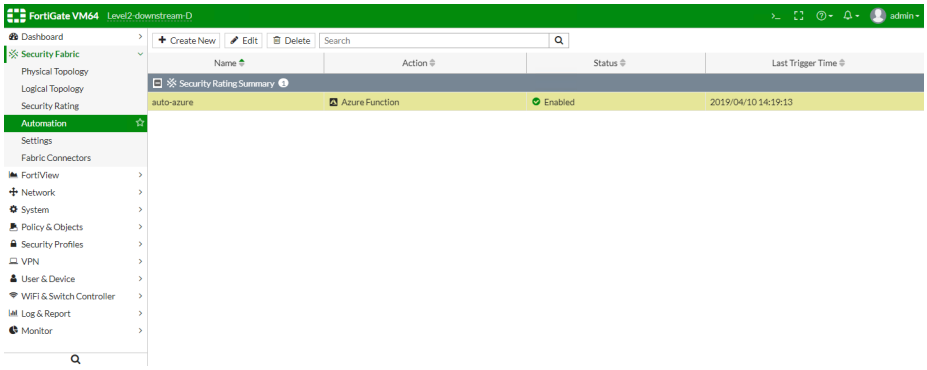

In Azure, the function log shows that the function was called, executed, and finished:

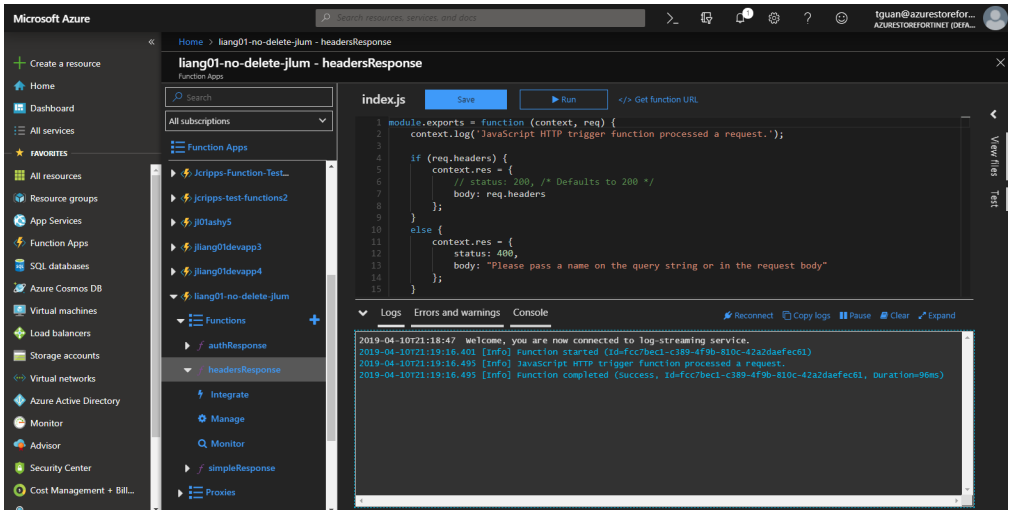


Google Cloud Function action

Google Cloud functions can be called when an automation stitch is triggered.

To configure a Google Cloud function automation stitch in the GUI:

1. Go to *Security Fabric* > *Automation*.
2. Click *Create New*.
3. Enter a name for the stitch, and select the FortiGate devices that it will be applied to.
4. Select a trigger, such as *Security Rating Summary*.
5. Select *Google Cloud Function* and configure its settings.

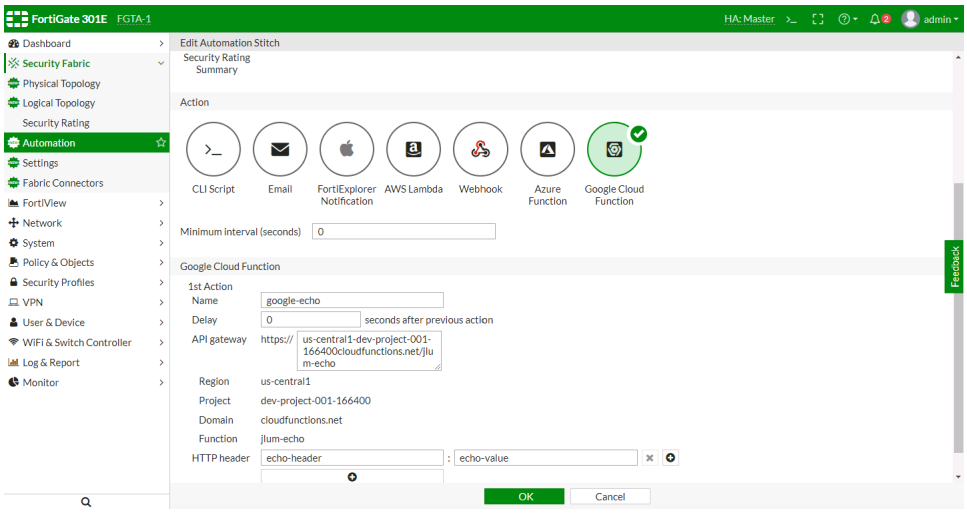

Name	The action name.

Delay	The amount of time after the previous action before this action executes, in seconds (0 - 3600, default = 0).
API gateway	The API gateway URL, in the format: `{region}-{project}{domain}/{function}` The CLI must be used to manually enter the individual parameters.
HTTP header	The HTTP request header name and value. Multiple headers can be added.
+	Click to add another action. Actions can be reorganized as needed by dragging and dropping.

6. Click *OK*.

To configure a Google Cloud function automation stitch in the CLI:

1. Create an automation action:

```
config system automation-action
    edit "google-echo"
        set action-type google-cloud-function
        set gcp-function-region "us-central1"
        set gcp-project "dev-project-001-166400"
        set gcp-function-domain "cloudfunctions.net"
        set gcp-function "jlum-echo"
        set headers "echo-header:echo-value"
    next
end
```


2. Create an automation trigger:

```
config system automation-trigger
    edit "auto-google1"
        set event-type security-rating-summary
    next
end
```


3. Create the automation stitch:

```
config system automation-stitch
    edit "auto-google1"
        set trigger "auto-google1"
        set action "google-echo"
    next
end
```

When the automation stitch is triggered, the FortiGate shows the stitch trigger time:

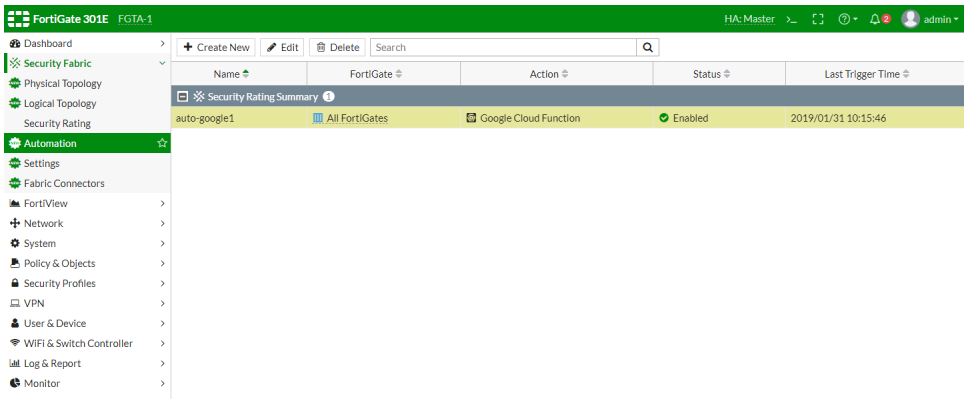

In Google Cloud, go to *Logs* to see the function log showing that the configured function was called, executed, and finished:

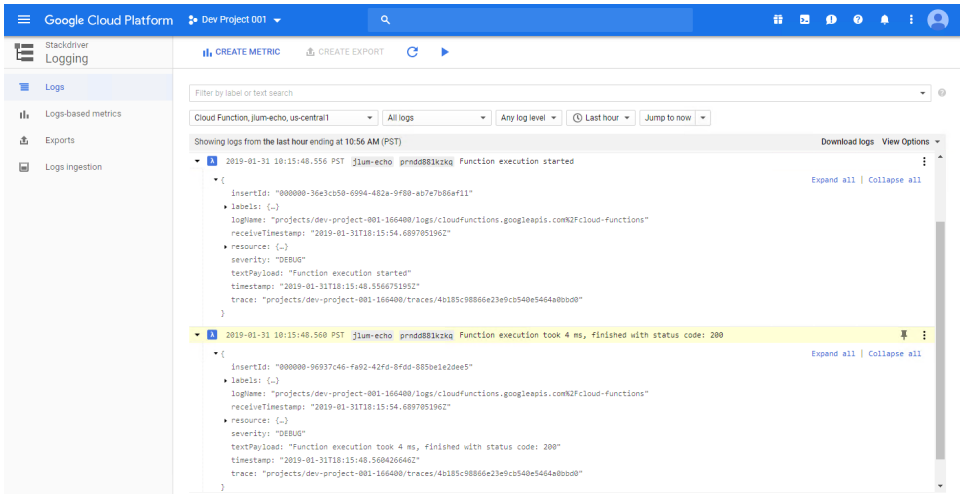


AliCloud Function action

AliCloud functions can be called when an automation stitch is triggered.

To configure an AliCloud function automation stitch in the GUI:

1. Go to *Security Fabric* > *Automation*.
2. Click *Create New*.
3. Enter a name for the stitch, and select the FortiGate devices that it will be applied to.
4. Select a trigger, such as *Security Rating Summary*.

5. Select *AliCloud Function* and configure its settings.

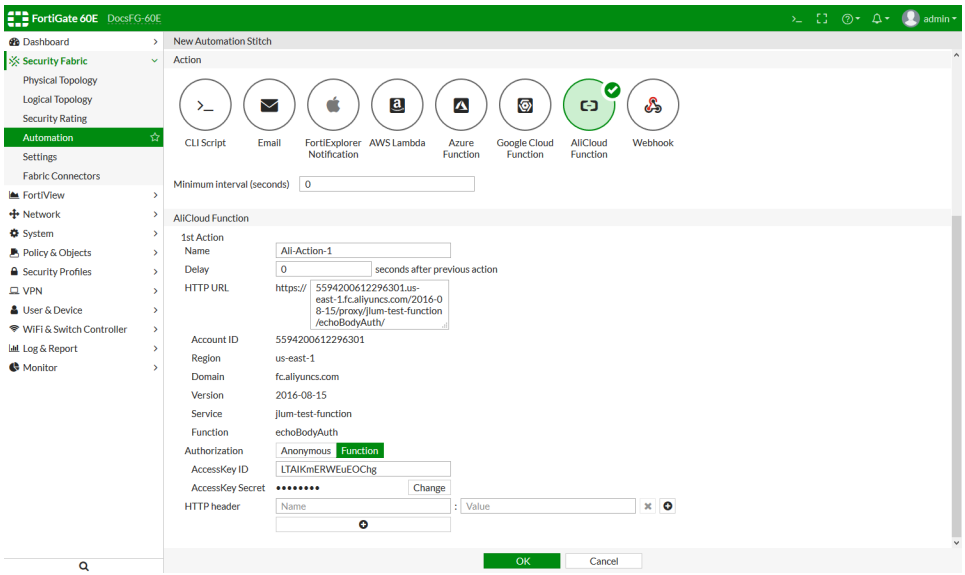

Name	The action name.
Delay	The amount of time after the previous action before this action executes, in seconds (0 - 3600, default = 0).
HTTP URL	The HTTP URL, in the format: `{account id}.{region}.{domain}/{version}/proxy/{service}/{function}` The CLI must be used to manually enter the individual parameters.
Authorization	The authorization level: *Anonymous*, or *Function*.
AccessKey ID	The access key ID This options is only available when *Authorization* is *Function*.
AccessKey Secret	The access key secret. This options is only available when *Authorization* is *Function*.
HTTP header	The HTTP request header name and value. Multiple headers can be added.
+	Click to add another action. Actions can be reorganized as needed by dragging and dropping.

6. Click *OK*.

To configure an AliCloud function automation stitch in the CLI:

1. Create an automation action:

```
config system automation-action
    edit "Ali-Action-1"
        set action-type alicloud-function
        set alicloud-account-id "5594200612296301"
        set alicloud-region "us-east-1"
        set alicloud-version "2016-08-15"
```

```
        set alicloud-service "jlum-test-function"
        set alicloud-function "echoBodyAuth"
        set alicloud-function-authorization function
        set alicloud-access-key-id "LTAIKmERWEuEOChg"
        set alicloud-access-key-secret xxxxxx
    next
end
```


2. Create an automation trigger:

```
config system automation-trigger
    edit "auto-ali"
        set event-type security-rating-summary
    next
end
```


3. Create the automation stitch:

```
config system automation-stitch
    edit "auto-ali"
        set trigger "auto-ali"
        set action "Ali-Action-1"
    next
end
```

When the automation stitch is triggered, the FortiGate shows the stitch trigger time:

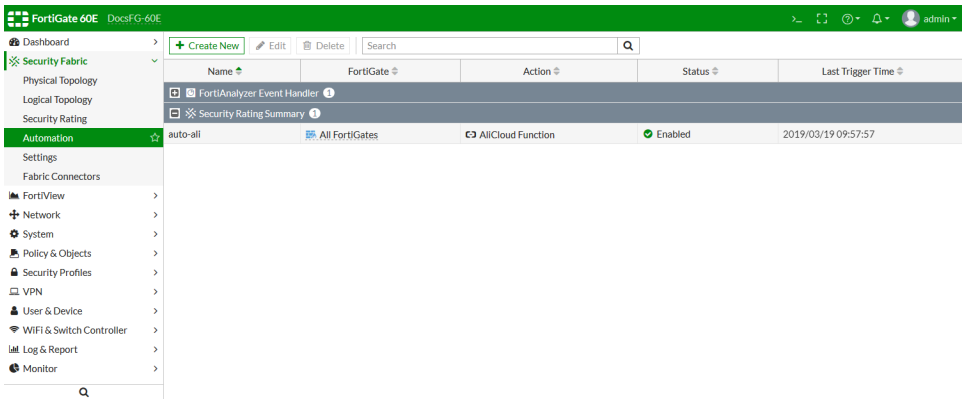

In AliCloud, the function log shows that the function was called, executed, and finished:

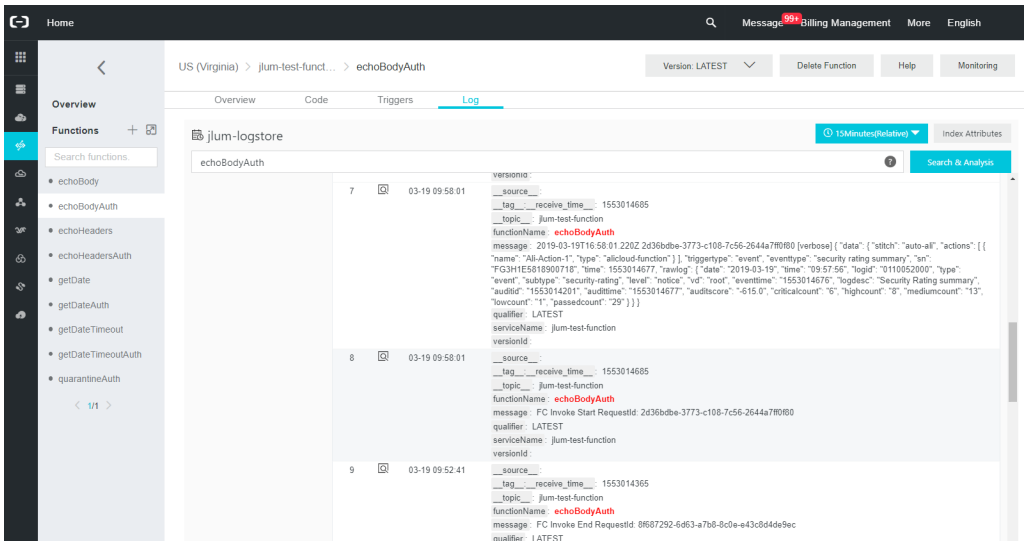

Webhook action

The webhook automation stitch action makes HTTP and HTTPS requests to a specified server, with custom headers, bodies, ports, and methods. It can be used to leverage the ubiquity of HTML requests and APIs to integrate with many other tools.




The URI and HTTP body can use parameters from logs or previous action results. Wrapping the parameter with %% will replace the expression with the JSON value for the parameter, for example: *%%results.source%%* is the source property from the previous action.

In this example, a specific log message (failed administrator log in attempt) triggers the FortiGate to send the contents of the log to a server. The server responds with a generic reply. This example assumes that the server is already configured and able to communicate with the FortiGate.

To configure the webhook automation stitch in the GUI:

1. Go to *Security Fabric* > *Automation*.
2. Click *Create New*.
3. Enter a name for the stitch, and select the FortiGate devices that it will be applied to.
4. Select the trigger *FortiOS Event Log*.
5. Set *Event* to *Admin login failed*.

6. Select *Webhook* and configure the settings:

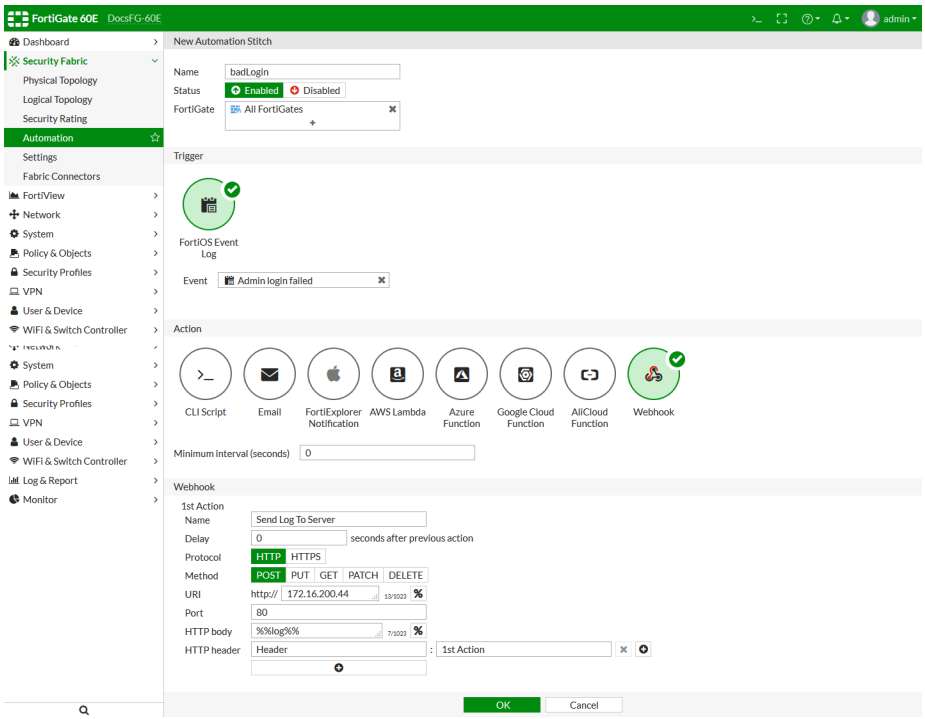

Name	The action name.
Delay	The amount of time after the previous action before this action executes, in seconds (0 - 3600, default = 0).
Protocol	The request protocol to use: *HTTP* or *HTTPS*.
Method	The request method: *POST*, *PUT*, *GET*, *PATCH*, or *DELETE*.
URI	The request API URI.
Port	The protocol port.
HTTP body	The request body, if required, as a serialized JSON string. Use the parameter *%%log%%* to send the contents of the log from the trigger.
HTTP header	The HTTP request header name and value.
+	Click to add another action. Actions can be reorganized as needed by dragging and dropping.

7. Click *OK*.

To configure the webhook automation stitch in the CLI:

1. Create the automation action:

```
config system automation-action
    edit "Send Log To Server"
        set action-type webhook
        set uri "172.16.200.44"
```

```
        set http-body "%%log%%"
        set port 80
        set headers "Header:1st Action"
    next
end
```

2. Create an automation trigger:


```
config system automation-trigger
    edit "badLogin"
        set event-type event-log
        set logid 32002
    next
end
```

3. Create the automation stitch:

```
config system automation-stitch
    edit "badLogin"
        set trigger "badLogin"
        set action "Send Log To Server"
    next
end
```


To test the automation stitch:

1. Attempt to log in to the FortiGate with an incorrect username or password.
2. On the server, check the log to see that its contents have been sent by the FortiGate.

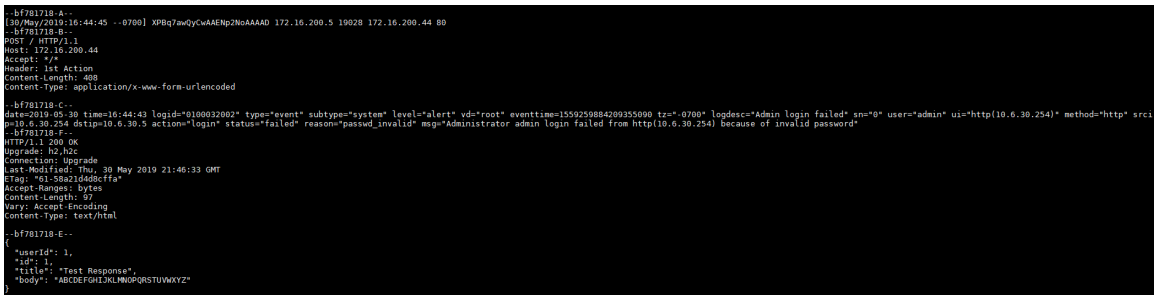


The body content is replaced with the log of the trigger.

3. On the FortiGate, go to *Log & Report* > *Events* and select *System Events* to confirm that the stitch was activated.

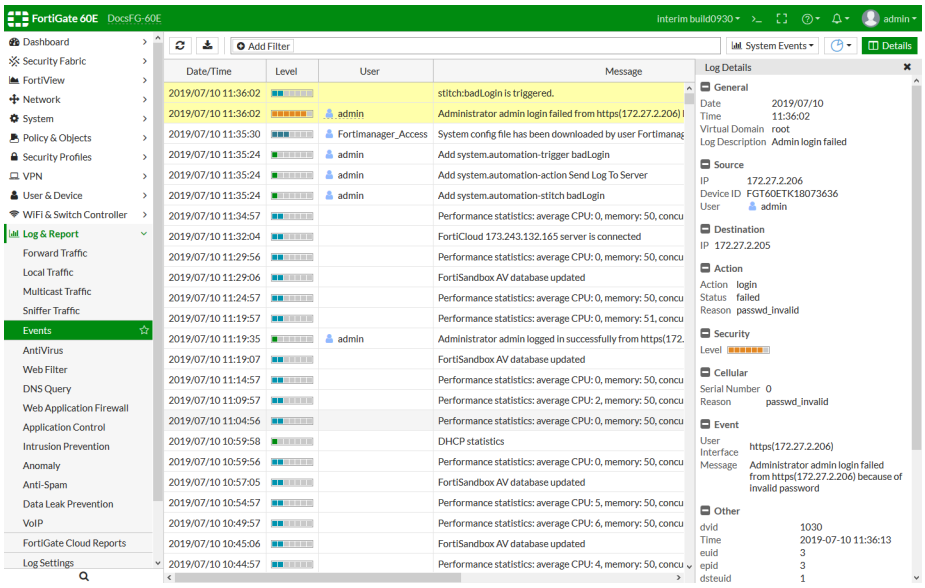

4. Go to *Security Fabric* > *Automation* to see the last time that the stitch was triggered.

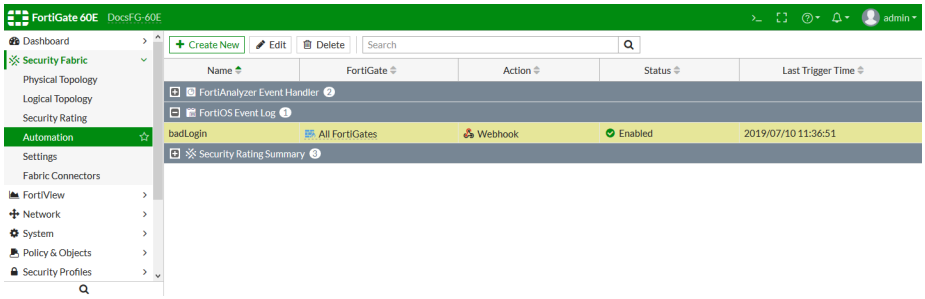

Diagnose commands

- Enable log dumping:

```
# diagnose test application autod 1

autod dumped total:1 logs, num of logids:1
autod log dumping is enabled

vdom:root(0) logid:32002 len:408 log:
date=2019-05-30 time=17:41:03 logid="0100032002" type="event" subtype="system"
level="alert" vd="root" eventtime=1559263263858888451 tz="-0700" logdesc="Admin login
failed" sn="0" user="admin" ui="http(10.6.30.254)" method="http" srcip=10.6.30.254
dstip=10.6.30.5 action="login" status="failed" reason="passwd_invalid"
msg="Administrator admin login failed from http(10.6.30.254) because of invalid
password"
autod log dumping is disabled

autod logs dumping summary:
        logid:32002 count:1

autod dumped total:1 logs, num of logids:1
```

- Show automation settings:

```
# diagnose test application autod 2
csf: enabled   root:yes
total stitches activated: 2

stitch: badLogin
       destinations: all
       trigger: badLogin

       local hit: 6 relayed to: 6 relayed from: 6
       actions:
               Send Log To Server type:webhook interval:0
                       delay:0 required:no
                       proto:0 method:0 port:80
                       uri: 172.16.200.44
                       http body: %%log%%
                       headers:
                       0. Header:1st Action
```

- Show automation statistics:

```
# diagnose test application autod 3

stitch: badLogin

       local hit: 1 relayed to: 1 relayed from: 1
       last trigger:Wed Jul 10 12:14:14 2019
       last relay:Wed Jul 10 12:14:14 2019

       actions:
               Send Log To Server:
                       done: 1 relayed to: 1 relayed from: 1
                       last trigger:Wed Jul 10 12:14:14 2019
                       last relay:Wed Jul 10 12:14:14 2019

logid2stitch mapping:
id:32002  local hit: 3 relayed to: 3 relayed from: 3
       badLogin

action run cfg&stats:
total:55 cur:0 done:55 drop:0
       email:
               flags:10
               stats: total:4 cur:0 done:4 drop:0
       ios-notification:
               flags:1
               stats: total:0 cur:0 done:0 drop:0
       alert:
               flags:0
               stats: total:0 cur:0 done:0 drop:0
       disable-ssid:
               flags:7
               stats: total:0 cur:0 done:0 drop:0
       quarantine:
               flags:7
               stats: total:0 cur:0 done:0 drop:0
```

```
        quarantine-forticlient:
                flags:4
                stats: total:0 cur:0 done:0 drop:0
        quarantine-nsx:
                flags:4
                stats: total:0 cur:0 done:0 drop:0
        ban-ip:
                flags:7
                stats: total:0 cur:0 done:0 drop:0
        aws-lambda:
                flags:11
                stats: total:21 cur:0 done:21 drop:0
        webhook:
                flags:11
                stats: total:6 cur:0 done:6 drop:0
        cli-script:
                flags:10
                stats: total:4 cur:0 done:4 drop:0
        azure-function:
                flags:11
                stats: total:0 cur:0 done:0 drop:0
        google-cloud-function:
                flags:11
                stats: total:0 cur:0 done:0 drop:0
        alicloud-function:
                flags:11
                stats: total:20 cur:0 done:20 drop:0
```

- Enable debug output and turn on automation debug messages for about 30 minutes:

```
# diagnose debug enable
# diagnose debug application autod -1
```

```
__auto_generate_generic_curl_request()-358: Generating generic automation CURL request
for action (Send Log To Server).
__auto_generate_generic_curl_request()-406: Generic automation CURL request POST data
for action (Send Log To Server):
date=2019-05-30 time=16:44:43 logid="0100032002" type="event" subtype="system"
level="alert" vd="root" eventtime=1559259884209355090 tz="-0700" logdesc="Admin login
failed" sn="0" user="admin" ui="http(10.6.30.254)" method="http" srcip=10.6.30.254
dstip=10.6.30.5 action="login" status="failed" reason="passwd_invalid"
msg="Administrator admin login failed from http(10.6.30.254) because of invalid
password"

__auto_generic_curl_request_close()-512: Generic CURL request response body from
http://172.16.200.44:
{
  "userId": 1,
  "id": 1,
  "title": "Test Response",
  "body": "ABCDEFGHIJKLMNOPQRSTUVWXYZ"
}
```


Slack integration webhook

A webhook can be created to post messages and notifications to Slack. For information about using incoming webhooks in Slack, see https://api.slack.com/incoming-webhooks.

In this example, a configuration change triggers the FortiGate to post a message to Slack.

To create a webhook automation stitch for Slack integration in the GUI:

1. Go to *Security Fabric* > *Automation*.
2. Click *Create New*.
3. Enter a name for the stitch.
4. Select the trigger *Configuration Change*.
5. Select *Webhook* and configure the settings:

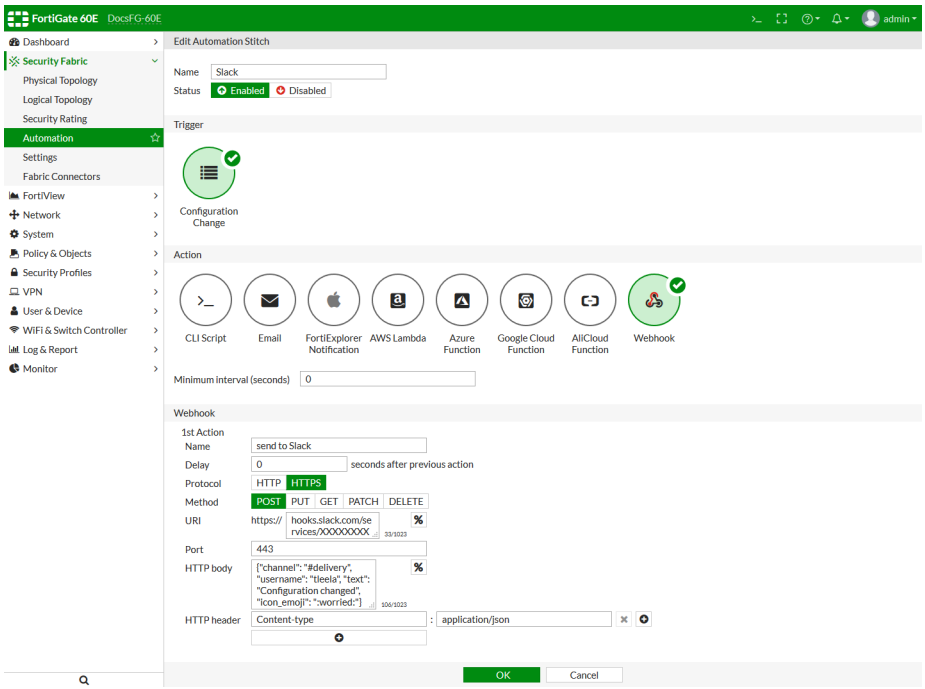

6. Click *OK*.

To create a webhook automation stitch for Slack integration in the CLI:

1. Create the automation action:

```
config system automation-action
    edit "send to Slack"
        set action-type webhook
        set protocol https
        set uri "hooks.slack.com/services/XXXXXXXX"
        set http-body "{\"channel\": \"#delivery\", \"username\": \"tleela\", \"text\":
\"Configuration changed\", \"icon_emoji\": \":worried:\"}"
        set port 443
        set headers "Content-type:application/json"
    next
end
```

2. Create the automation trigger:

```
config system automation-trigger
    edit "config change"
        set event-type config-change
    next
end
```

3. Create the automation stitch:

```
config system automation-stitch
    edit "Slack"
        set trigger "config change"
        set action "send to Slack"
    next
end
```

Execute a CLI script based on CPU and memory thresholds

Automation stitches can be created to run a CLI script and send an email message when CPU or memory usage exceeds specified thresholds.

In this example, two automation stitches are created that run a CLI script to collect debug information, and then email the results of the script to a specified email address when CPU usage threshold is exceeded or memory usage causes the FortiGate to enter conserve mode.



Automation stitches that use *High CPU* and *Conserve Mode* triggers can only be created in the CLI. Once create, they can be edited in the GUI.

To define CPU and memory usage thresholds:

```
config system global
    set cpu-use-threshold <percent>
    set memory-use-threshold-extreme <percent>
    set memory-use-threshold-green <percent>
    set memory-use-threshold-red <percent>
end
```

Where:

cpu-use-threshold	Threshold at which CPU usage is reported, in percent of total possible CPU utilization (default = 90).
memory-use-threshold-extreme	Threshold at which memory usage is considered extreme, and new sessions are dropped, in percent of total RAM (default = 95).
memory-use-threshold-green	Threshold at which memory usage forces the FortiGate to exit conserve mode, in percent of total RAM (default = 82).
memory-use-threshold-red	Threshold at which memory usage forces the FortiGate to enter conserve mode, in percent of total RAM (default = 88).

Configure the automation stitches

High CPU usage stitch

To create an automation stitch for high CPU usage:

1. Create an automation action to run a CLI script:

```
config system automation-action
    edit "high_cpu_debug"
        set action-type cli-script
        set required enable
        set script "diagnose debug cli 8
diagnose debug console timestamp enable
diagnose debug enable
diagnose debug crashlog read
get system performance status
get system session status
diagnose sys session full-stat
diagnose firewall iprope state
diagnose sys flash list
diagnose hardware sysinfo memory
diagnose hardware sysinfo slab
diagnose hardware sysinfo shm
diagnose hardware deviceinfo disk
get system arp
diagnose ip arp list
diagnose ip address list
get router info routing-table all
get router info kernel
diagnose ip rtcache list
diagnose sys top-summary
diagnose sys top 9 99"
    next
end
```

2. Create an automation action to send an email:

```
config system automation-action
    edit "auto_high_cpu_email"
        set action-type email
        set email-to "person@fortinet.com"
        set email-subject "CSF stitch alert: high_cpu"
        set email-body "%%results%%"
    next
end
```

3. Create an automation trigger:


```
config system automation-trigger
    edit "auto_high_cpu"
        set event-type high-cpu
    next
end
```

4. Create an automation stitch:

```
config system automation-stitch
    edit "auto_high_cpu"
        set trigger "auto_high_cpu"
        set action "high_cpu_debug" "auto_high_cpu_email"
    next
end
```

To edit the automation stitch in the GUI:

1. Go to *Security Fabric* > *Automation*.
2. Double click on the *auto_high_cpu* stitch.

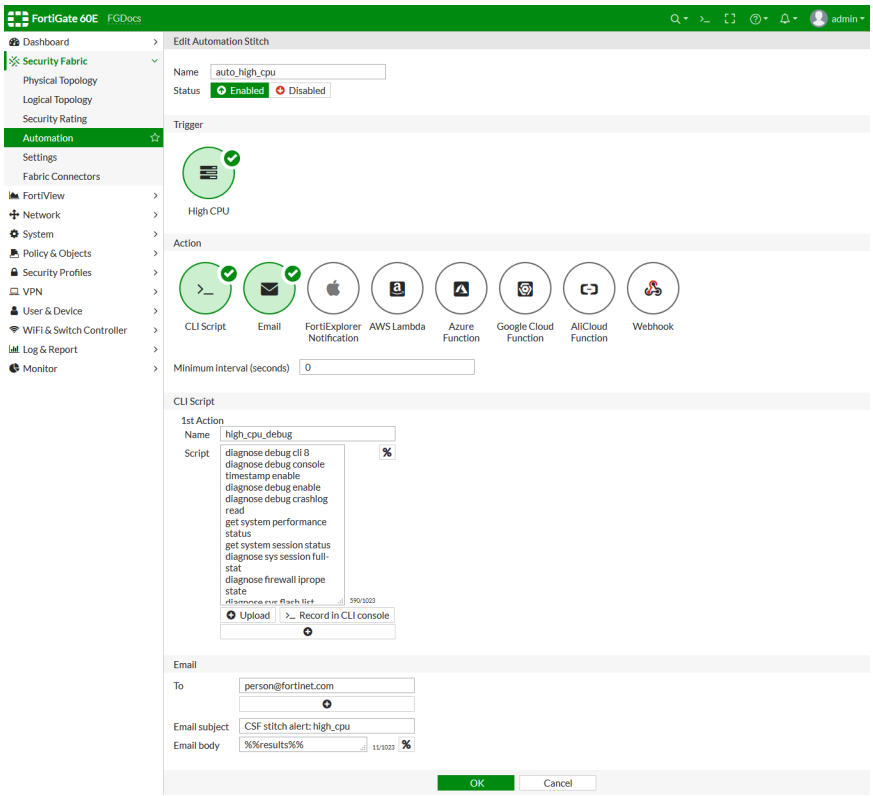

3. Edit the stitch as required, then click *OK*.

High memory usage stitch

To create an automation stitch for high memory usage:

1. Create an automation action to run a CLI script:

```
config system automation-action
    edit "high_memory_debug"
        set action-type cli-script
        set required enable
        set script "diagnose debug cli 8
diagnose debug console timestamp enable
diagnose debug enable
```

```
diagnose debug crashlog read
get system performance status
get system session status
diagnose sys session full-stat
diagnose firewall iprope state
diagnose sys flash list
diagnose hardware sysinfo memory
diagnose hardware sysinfo slab
diagnose hardware sysinfo shm
diagnose hardware deviceinfo disk
get system arp
diagnose ip arp list
diagnose ip address list
get router info routing-table all
get router info kernel
diagnose ip rtcache list
diagnose sys top-summary
diagnose sys top 9 99"
    next
end
```

2. Create an automation action to send an email:

```
config system automation-action
    edit "auto_high_memory_email"
        set action-type email
        set email-to "person@fortinet.com"
        set email-subject "CSF stitch alert: high_memory"
        set email-body "%%results%%"
    next
end
```

3. Create an automation trigger:


```
config system automation-trigger
    edit "auto_high_memory"
        set event-type low-memory
    next
end
```

4. Create an automation stitch:

```
config system automation-stitch
    edit "auto_high_memory"
        set trigger "auto_high_memory"
        set action "high_memory_debug" "auto_high_memory_email"
    next
end
```

To edit the automation stitch in the GUI:


1. Go to *Security Fabric* > *Automation*.
2. Double click on the *auto_high_memory* stitch.

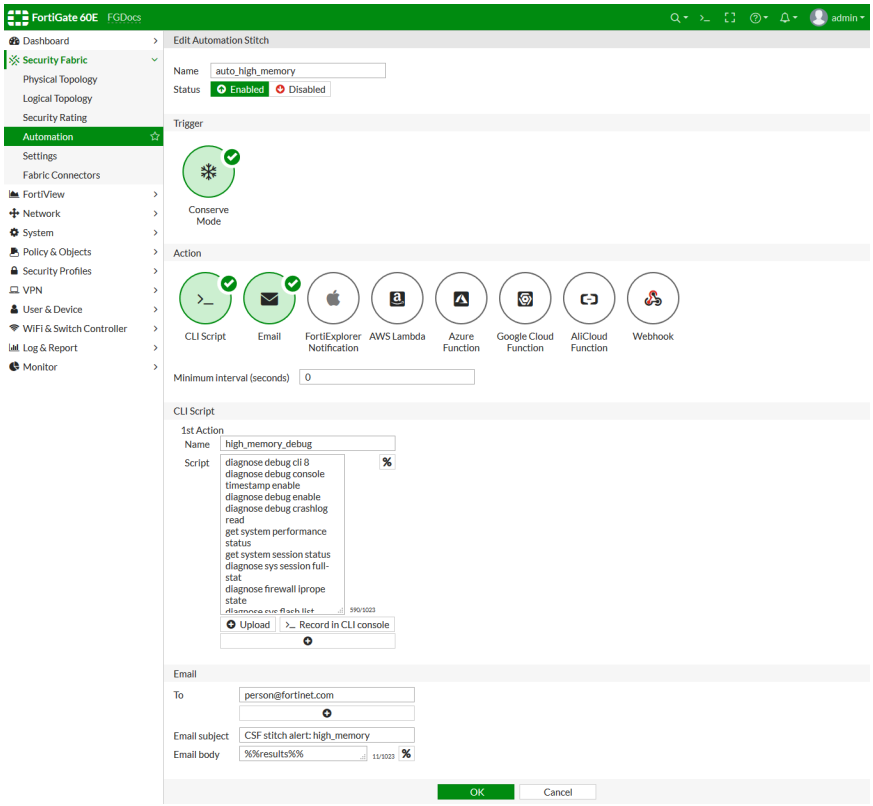

3. Edit the stitch as required, then click *OK*.

Results

When FortiGate enters conserve mode due to the `memory-use-threshold-red` being exceeded, the GUI displays a notice, and the *auto_high_memory* automation stitch is triggered, causing the CLI script to run and the results of the script to be emailed to the specified address.

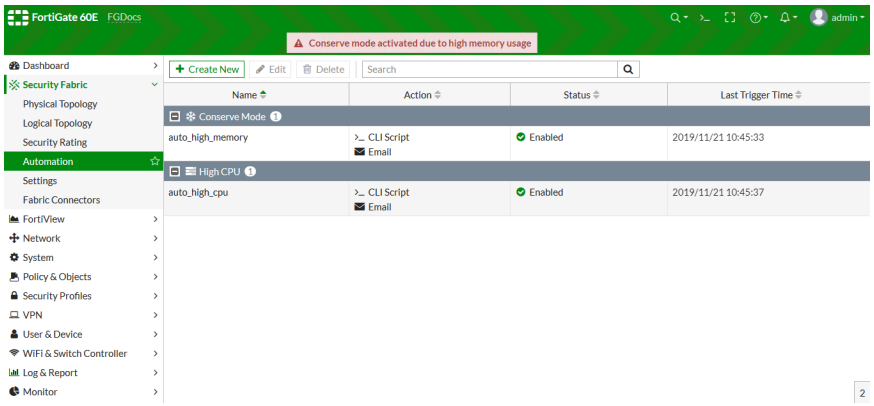

Here is an example of the email message:

```
CSF stitch alert: high_memory
noreply@notification.fortinet.net
Thu 11/21/2019 11:06 AM
James Li
FGT[FGVM16TM19000026] Automation Stitch:auto_high_memory is triggered.
########## script name: autod.47 ##########
========== #1, 2019-11-21 11:07:24 ==========
FGVM16TM19000026 $  diag deb cli 8
Debug messages will be on for 25 minutes.
FGVM16TM19000026 $  diag deb console timestamp enable
FGVM16TM19000026 $  diag deb enable
FGVM16TM19000026 $  diag deb crashlog read
1: 2019-08-08 11:35:25 the killed daemon is /bin/dhcpcd: status=0x0
2: 2019-08-08 17:52:47 the killed daemon is /bin/pyfcgid: status=0x0
3: 2019-08-23 11:32:31 from=license status=INVALID
4: 2019-08-23 11:32:32 from=license status=INVALID
5: 2019-11-21 09:53:31 from=license status=VALID
...
```

Troubleshooting

The following topics provide troubleshooting information for the Fortinet Security Fabric:

- Viewing a summary of all connected FortiGates in a Security Fabric on page 270
- Diagnosing automation stitches on page 273

Viewing a summary of all connected FortiGates in a Security Fabric

In downstream FortiGates, the `diagnose sys csf global` command shows a summary of all of the connected FortiGates in the Security Fabric.

To view a Security Fabric summary on a downstream FortiGate:

```
# diagnose sys csf global
Current vision:
[
  {
    "path":"FGVM01TM19000001",
    "mgmt_ip_str":"104.196.102.183",
    "mgmt_port":10403,
    "sync_mode":1,
    "saml_role":"identity-provider",
    "admin_port":443,
    "serial":"FGVM01TM19000001",
    "host_name":"admin-root",
    "firmware_version_major":6,
    "firmware_version_minor":2,
    "firmware_version_patch":0,
    "firmware_version_build":1010,
    "subtree_members":[
      {
```

```
        "serial":"FGVM01TM19000002"
      },
      {
        "serial":"FGVM01TM19000003"
      },
      {
        "serial":"FGVM01TM19000004"
      },
      {
        "serial":"FGVM01TM19000005"
      }
    ]
  },
  {
    "path":"FGVM01TM19000001:FGVM01TM19000002",
    "mgmt_ip_str":"104.196.102.183",
    "mgmt_port":10423,
    "sync_mode":1,
    "saml_role":"service-provider",
    "admin_port":443,
    "serial":"FGVM01TM19000002",
    "host_name":"Branch_Office_01",
    "firmware_version_major":6,
    "firmware_version_minor":2,
    "firmware_version_patch":0,
    "firmware_version_build":1010,
    "upstream_intf":"Branch-HQ-A",
    "upstream_serial":"FGVM01TM19000001",
    "parent_serial":"FGVM01TM19000001",
    "parent_hostname":"admin-root",
    "upstream_status":"Authorized",
    "upstream_ip":22569994,
    "upstream_ip_str":"10.100.88.1",
    "subtree_members":[
    ],
    "is_discovered":true,
    "ip_str":"10.0.10.2",
    "downstream_intf":"To-HQ-A",
    "idx":1
  },
  {
    "path":"FGVM01TM19000001:FGVM01TM19000003",
    "mgmt_ip_str":"104.196.102.183",
    "mgmt_port":10407,
    "sync_mode":1,
    "saml_role":"service-provider",
    "admin_port":443,
    "serial":"FGVM01TM19000003",
    "host_name":"Enterprise_Second_Floor",
    "firmware_version_major":6,
    "firmware_version_minor":2,
    "firmware_version_patch":0,
    "firmware_version_build":1010,
    "upstream_intf":"port3",
    "upstream_serial":"FGVM01TM19000001",
    "parent_serial":"FGVM01TM19000001",
```

```
    "parent_hostname":"admin-root",
    "upstream_status":"Authorized",
    "upstream_ip":22569994,
    "upstream_ip_str":"10.100.88.1",
    "subtree_members":[
    ],
    "is_discovered":true,
    "ip_str":"10.100.88.102",
    "downstream_intf":"port1",
    "idx":2
  },
  {
    "path":"FGVM01TM19000001:FGVM01TM19000004",
    "mgmt_ip_str":"104.196.102.183",
    "mgmt_port":10424,
    "sync_mode":1,
    "saml_role":"service-provider",
    "admin_port":443,
    "serial":"FGVM01TM19000004",
    "host_name":"Branch_Office_02",
    "firmware_version_major":6,
    "firmware_version_minor":2,
    "firmware_version_patch":0,
    "firmware_version_build":1010,
    "upstream_intf":"HQ-MPLS",
    "upstream_serial":"FGVM01TM19000001",
    "parent_serial":"FGVM01TM19000001",
    "parent_hostname":"admin-root",
    "upstream_status":"Authorized",
    "upstream_ip":22569994,
    "upstream_ip_str":"10.100.88.1",
    "subtree_members":[
    ],
    "is_discovered":true,
    "ip_str":"10.0.12.3",
    "downstream_intf":"To-HQ-MPLS",
    "idx":3
  },
  {
    "path":"FGVM01TM19000001:FGVM01TM19000005",
    "mgmt_ip_str":"104.196.102.183",
    "mgmt_port":10404,
    "sync_mode":1,
    "saml_role":"service-provider",
    "admin_port":443,
    "serial":"FGVM01TM19000005",
    "host_name":"Enterprise_First_Floor",
    "firmware_version_major":6,
    "firmware_version_minor":2,
    "firmware_version_patch":0,
    "firmware_version_build":1010,
    "upstream_intf":"port3",
    "upstream_serial":"FGVM01TM19000001",
    "parent_serial":"FGVM01TM19000001",
    "parent_hostname":"admin-root",
    "upstream_status":"Authorized",
```

```
    "upstream_ip":22569994,
    "upstream_ip_str":"10.100.88.1",
    "subtree_members":[
    ],
    "is_discovered":true,
    "ip_str":"10.100.88.101",
    "downstream_intf":"port1",
    "idx":4
  }
]
```

Diagnosing automation stitches

Diagnose commands are available to:

- Test an automation stitch
- Enable or disable log dumping for automation stitches
- Display the settings of every automation stitch
- Display statistics on every automation stitch

To test an automation stitch:

```
diagnose automation test <automation-stitch-name>
```

Example:

```
# diagnose automation test HA-failover
automation test is done. stitch:HA-failover
```

To toggle log dumping:

```
diagnose test application autod 1
```

Examples:

```
# diagnose test application autod 1
autod log dumping is enabled
```

```
# diagnose test application autod 1
autod log dumping is disabled

autod logs dumping summary:
autod dumped total:7 logs, num of logids:4
```

To display the settings for all of the automation stitches:

```
diagnose test application autod 2
```

Example:

```
# diagnose test application autod 2
csf: enabled root:yes
total stitches activated: 3

stitch: Compromised-IP-Banned
        destinations: all
```

```
         trigger: Compromised-IP-Banned

        local hit: 0 relayed to: 0 relayed from: 0
         actions:
                Compromised-IP-Banned_ban-ip type:ban-ip interval:0

stitch: HA-failover
         destinations: HA-failover_ha-cluster_25;
         trigger: HA-failover

        local hit: 0 relayed to: 0 relayed from: 0
         actions:
                HA-failover_email type:email interval:0
                subject: HA Failover
                mailto:admin@example.com;

stitch: rebooot
        destinations: all
        trigger: reboot

        local hit: 0 relayed to: 0 relayed from: 0
        actions:
                action1 type:alicloud-function interval:0
                        delay:1 required:yes
                        Account ID: id
                        Region: region
                        Function domain: fc.aliyuncs.com
                        Version: versoin
                        Service name: serv
                        Function name: funcy
                        headers:
```

To display statistic on all of the automation stitches:

```
diagnose test application autod 3
```

Example:

```
# diagnose test application autod 3
        stitch: Compromised-IP-Banned
        local hit: 0 relayed to: 0 relayed from: 0
        last trigger:Wed Dec 31 20:00:00 1969
        last relay:Wed Dec 31 20:00:00 1969
        actions:
                Compromised-IP-Banned_ban-ip:
                        done: 1 relayed to: 0 relayed from: 0
                        last trigger:Wed Dec 31 20:00:00 1969
                        last relay:

stitch: HA-failover
        local hit: 0 relayed to: 0 relayed from: 0
        last trigger:Thu May 24 11:35:22 2018
        last relay:Thu May 24 11:35:22 2018
        actions:
                HA-failover_email:
                        done: 1 relayed to: 1 relayed from: 1
                        last trigger:Thu May 24 11:35:22 2018
```

```
                        last relay:Thu May 24 11:35:22 2018

stitch: rebooot
       local hit: 2 relayed to: 1 relayed from: 1
       last trigger:Fri May  3 13:30:56 2019
       last relay:Fri May  3 13:30:23 2019
       actions:
               action1
                       done: 1 relayed to: 0 relayed from: 0
                       last trigger:Fri May  3 13:30:56 2019
                       last relay:

logid2stitch mapping:
id:20103  local hit: 0 relayed to: 0 relayed from: 0
       License Expiry
       lambada

id:32138  local hit: 2 relayed to: 1 relayed from: 1
       Compromised-IP-Banned
       HA-failover
       rebooot

action run cfg&stats:
total:2 cur:0 done:1 drop:1
       email:
               flags:10
               stats: total:1 cur:0 done:1 drop:0
       ios-notification:
               flags:1
               stats: total:0 cur:0 done:0 drop:0
       alert:
               flags:0
               stats: total:0 cur:0 done:0 drop:0
       disable-ssid:
               flags:7
               stats: total:0 cur:0 done:0 drop:0
       quarantine:
               flags:7
               stats: total:0 cur:0 done:0 drop:0
       quarantine-forticlient:
               flags:4
               stats: total:0 cur:0 done:0 drop:0
       quarantine-nsx:
               flags:4
               stats: total:0 cur:0 done:0 drop:0
       ban-ip:
               flags:7
               stats: total:0 cur:0 done:0 drop:0
       aws-lambda:
               flags:11
               stats: total:0 cur:0 done:0 drop:0
       webhook:
               flags:11
               stats: total:0 cur:0 done:0 drop:0
       cli-script:
               flags:10
```

```
        stats: total:0 cur:0 done:0 drop:0
azure-function:
        flags:11
        stats: total:1 cur:0 done:0 drop:1
google-cloud-function:
        flags:11
        stats: total:0 cur:0 done:0 drop:0
alicloud-function:
        flags:11
        stats: total:0 cur:0 done:0 drop:0
```

FortiView

FortiView is the FortiOS log view tool which is a comprehensive monitoring system for your network. FortiView integrates real-time and historical data into a single view on your FortiGate. It can log and monitor network threats, filter data on multiple levels, keep track of administration activities, and more.

You can use multiple filters in the consoles to narrow your view to a specific time range, by user ID or local IP address, by application, and many more.

Use FortiView to investigate traffic activity such as user uploads/downloads or videos watched on YouTube. You view the traffic on the whole network, by user group, or by individual. FortiView displays the information in both text and visual format, giving you an overall picture of your network traffic activity so that you can quickly decide on actionable items.

Logging range and depth depends on the FortiGate model.

The following are just some of the FortiView categories:

- Sources
- Destinations
- Applications
- Cloud Application
- Country
- Web Sites
- Threats
- All Sessions
- Failed Authentication Attempt
- System Events
- Admin Login
- VPN Login
- FortiSandbox
- Policy
- Interface
- WiFi Clients
- Threat Map
- Traffic Shaping
- Endpoint Vulnerability

FortiOS has widgets that you can use to further customize these categories. You can place widgets where you want on dashboards. You can also customize widgets to show information that is most important to you, such as the time range, source logging device, and other information.

FortiView is integrated with many UTM functions and each release adds more features. For example, you can quarantine an IP address directly in FortiView or create custom devices and addresses from a FortiView entry.

FortiView interface

FortiView dashboards allow you to access information about traffic activity on your FortiGate, visually and textually. Core FortiView dashboards, including *Sources*, *Destinations*, *Applications* and more are available within the FortiView tree menu, and include a top menu bar with the following features:

- A *refresh* button which updates the displayed data.
- A *time display* dropdown for switching between current and historical data.
- An *Add Filter* button for applying filters to the displayed data.
- A *view selection* dropdown for changing what information shown on the dashboard.



Additional FortiView information is available as widgets to be placed within default or custom dashboards in the *Dashboard* menu. See FortiView dashboards and widgets on page 306.

Time display

Using the *time display* dropdown, you can select the time period to be displayed on the current dashboard. Time display options vary depending on the dashboard and can include current information (*now*) and historical information (*1 hour*, *24 hours*, and *7 days*).


In order to view historical information, disk logging must be enabled.

FortiView filters

You can filter FortiView dashboards by using the *Add Filter* box in the toolbar and selecting a context-sensitive filter. Available filters vary depending on the FortiView dashboard.


To filter results on a FortiView dashboard:

1. Select a dashboard in FortiView.
2. Click *Add Filter* in the dashboard toolbar.
3. Select a filter from the available list.
   Available filters are presented for quick selection. Additional filters can be added by clicking the *Add Filter* button in the toolbar again.

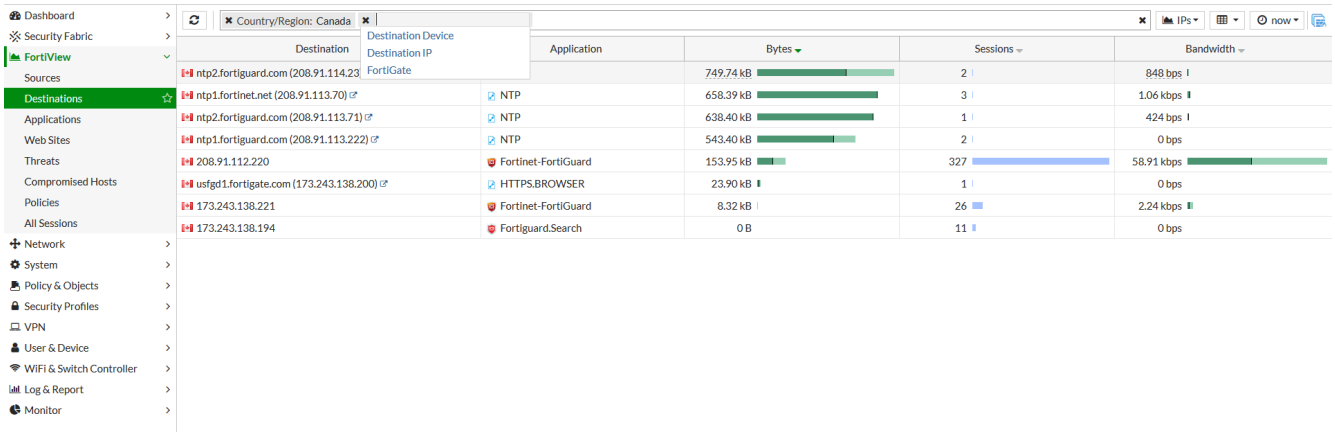

Drill down to details


Double-click or right-click on an entry in a FortiView dashboard and select *Drill Down to Details* to view additional details about the selected traffic activity. Click the *back* icon in the toolbar to return to the previous view. *Drill down to details* is not available on the *All Sessions* dashboard.

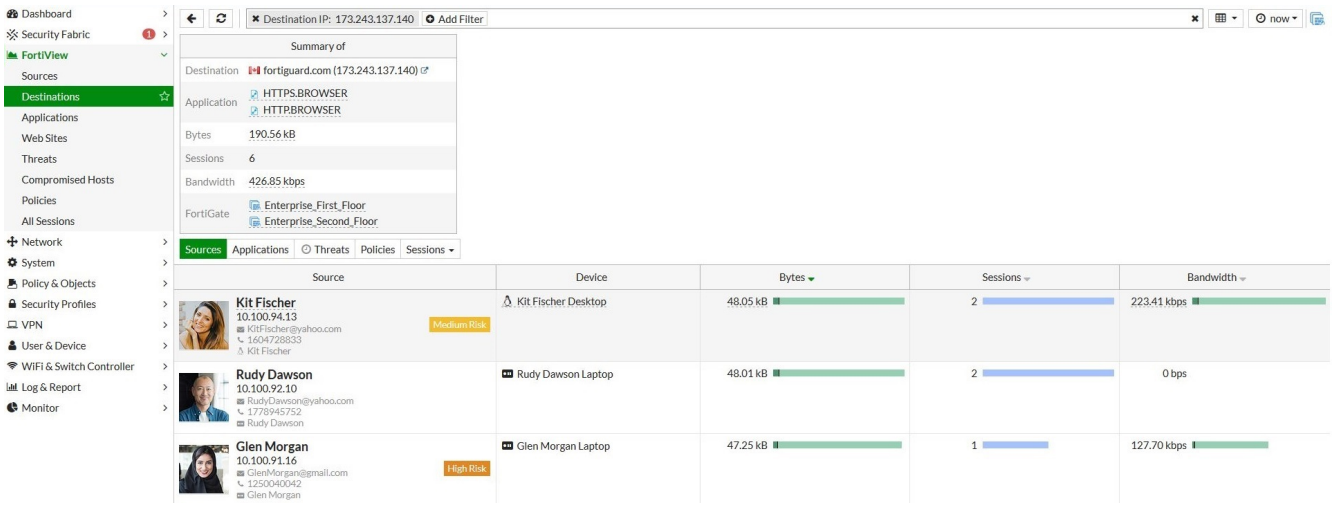

View selection

Selecting which information is shown:

Most FortiView pages include multiple views for displaying different types of information. You can switch between views by clicking the dropdown in the top menu bar and choosing a view.

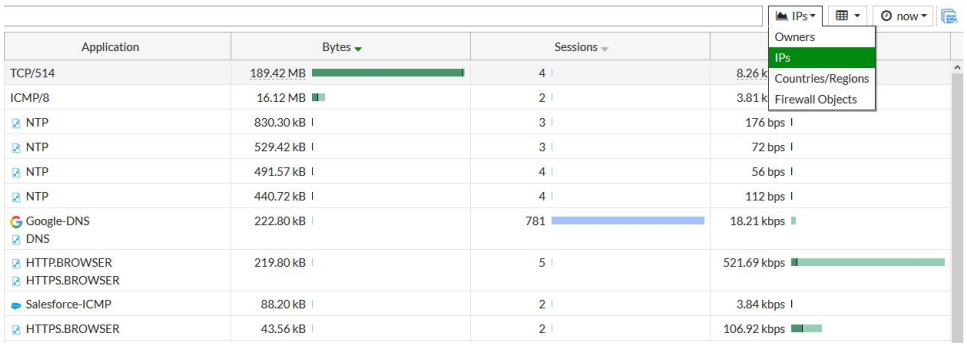

Selecting a display type:

Display types include table view, bubble charts, and country maps. Not all display types are supported by all dashboards in FortiView. On pages that support multiple displays, select the icon in the top-right corner of the dashboard to choose a display.

- In the default table view, you can customize the columns that are displayed by hovering your mouse over the first column header and clicking the *configure table* icon.
- When using a bubble chart, it is possible to sort information using the *Compare By* dropdown menu. The size of each bubble represents the related amount of data. You can place your cursor over a bubble to display a tool-tip with detailed information on that item, and click on a bubble to drilldown into greater (filtered) detail.

FortiView from disk

Prerequisites

All FortiGates with an SSD disk.

Restrictions

- Desktop models (for example: under 100D) with SSD only supports five minutes and one hour view.
- Medium models (for example: 200D, 500D) with SSD supports up to 24 hours view.
- Large models (for example: 1500D and above) with SSD supports up to seven days view.
  - To enable seven days view:


```
config log setting
   set fortiview-weekly-data enable
end
```

Configuration

A firewall policy needs to be in place with traffic logging enabled. For best operation with FortiView, internal interface roles should be clearly defined as LAN; DMZ and internet facing or external interface roles should be defined as WAN.

To enable FortiView from Disk:

1. Enable disk logging from the FortiGate GUI.
   a. Go to *Log & Report* > *Log Settings* > *Local Log*.
   b. Select the checkbox next to *Disk*.
2. Enable historical FortiView from the FortiGate GUI.
   a. Go to *Log & Report* > *Log Settings* > *Local Log*.
   b. Select the checkbox next to *Enable Historical FortiView*.

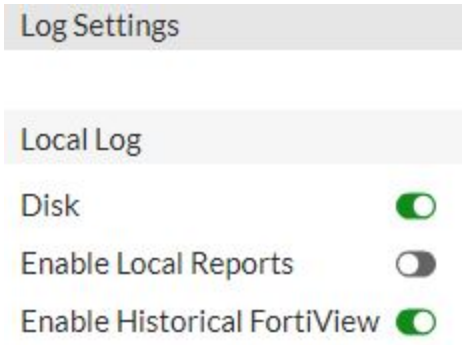

3. Click *Apply*.

To include sniffer traffic and local-deny traffic when FortiView from Disk:

This feature is only supported through the CLI.


```
config report setting
   set report-source forward-traffic sniffer-traffic local-deny-traffic
```

```
end
```

Source View

Top Level


Sample entry:

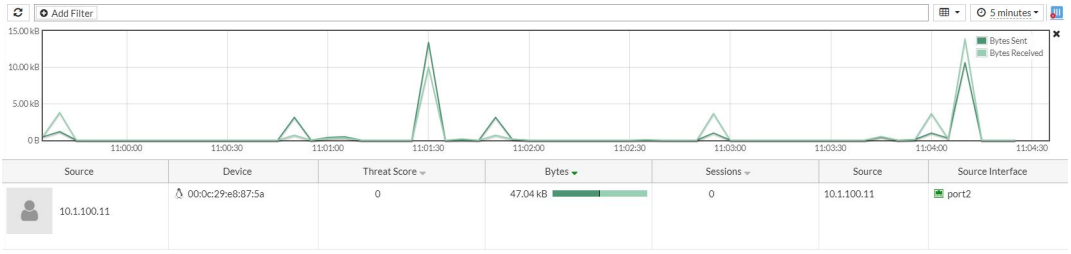

Time	• Realtime or *Now* entries are determined by the FortiGate's system session list. • Historical or *5 minutes and later* entries are determined by traffic logs, with additional information coming from UTM logs.
Graph	• The graph shows the bytes sent/received in the time frame. Realtime does not include a chart. • Users can customize the time frame by selecting a time period within the graph.
Bubble Chart	• Bubble chart shows the same information as the table, but in a different graphical manner.
Columns	• *Source* shows the IP address (and user as well as user avatar if configured) of the source device. • *Device* shows the device information as listed in *User & Device* > *Device Inventory*. Device detection should be enabled on the applicable interfaces for best function. • *Threat Score* is the threat score of the source based on UTM features such as Web Filter and antivirus. It shows threat scores allowed and threat scores blocked. • *Bytes* is the accumulated bytes sent/received. In realtime, this is calculated from the session list, and in historical it is from logs. • *Sessions* is the total sessions blocked/allowed. In realtime, this is calculated from the session list, and in historical it is from logs. • *Source* is a simplified version of the first column, including only the IP address without extra information. • *Source Interface* is the interface from which the traffic originates. In realtime, this is calculated from the session list, and in historical it is from the logs. • More information can be shown in a tooltip while hovering over these entries. • For realtime, two more columns are available, *Bandwidth* and *Packets*, both of which come from the session list.

Drilldown Level

Sample entry:

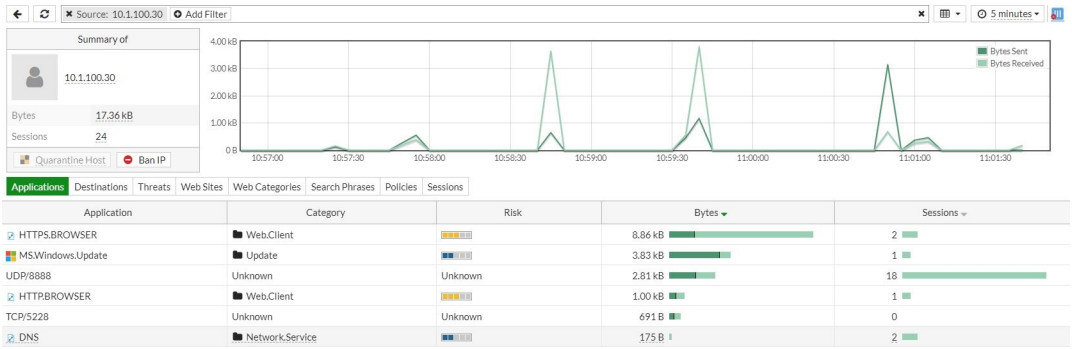

Graph	• The graph shows the bytes sent/received in the time frame. Realtime does not include a chart. • Users can customize the time frame by selecting a time period within the graph.
Summary Information	• Shows information such as the user/avatar, avatar/source IP, bytes, and sessions total for the time period. • Can quarantine host (access layer quarantine) if they are behind a FortiSwitch or FortiAP. • Can ban IP addresses, adds the source IP address into the quarantine list.

Tabs	• Drilling down entries in any of these tabs (except sessions tab) will take you to the underlying traffic log in the sessions tab.
	• *Applications* shows a list of the applications attributed to the source IP. This can include scanned applications (using Application Control in a firewall policy or unscanned applications.
	`config log gui-display`
	`set fortiview-unscanned-apps enable`
	`end`
	• *Destinations* shows destinations grouped by IP address/FQDN.
	• *Threats* lists the threats caught by UTM profiles. This can be from antivirus, IPS, Web Filter, Application Control, etc.
	• *Web Sites* contains the websites which were detected either with webfilter, or through FQDN in traffic logs.
	• *Web Categories* groups entries into their categories as dictated by the Web Filter Database.
	• *Search Phrases* shows entries of search phrases on search engines captured by a Web Filter UTM profile, with deep inspection enabled in firewall policy.
	• *Policies* groups the entries into which polices they passed through or were blocked by.
	• *Sessions* shows the underlying logs (historical) or sessions (realtime). Drilldowns from other tabs end up showing the underlying log located in this tab.
	• More information can be shown in a tooltip while hovering over these entries.

Troubleshooting

- Use `diagnose debug application httpsd -1` to check which filters were passed through httpsd. For example:

```
[httpsd 3163 - 1546543360 info] api_store_parameter[227] -- add API parameter
     'filter': '{ "source": "10.1.100.30", "application": "TCP\/5228", "srcintfrole":
     [ "lan", "dmz", "undefined" ] }' (type=object)
```

- Use `diagnose debug application miglogd 0x70000` to check what the SQL command is that is passed to the underlying SQL database.
  For example:

```
fortiview_request_data()-898: total:31 start:1546559580 end:1546563179
      _dump_sql()-799: dataset=fv.general.chart, sql:select a.timestamp1,ses_al,ses_
      bk,r,s,ifnull(sc_l,0),ifnull(sc_m,0),ifnull(sc_h,0),ifnull(sc_c,0) from (select
      timestamp-(timestamp%60) timestamp1 ,sum(case when passthrough<>'block' then
      sessioncount else 0 end) ses_al,sum(case when passthrough='block' then
      sessioncount else 0 end) ses_bk,sum(rcvdbyte) r,sum(sentbyte) s from grp_
      traffic_all_src where timestamp BETWEEN 1546559580 and 1546563179 and 1=1 AND
      srcip in ('10.1.100.11') AND srcintfrole in ('lan','dmz','undefined') group by
      timestamp1 ) a left join (select timestamp-(timestamp%60) timestamp1 ,sum(case
      when threat_level=1 then crscore else 0 end) sc_l,sum(case when threat_level=2
      then crscore else 0 end) sc_m,sum(case when threat_level=3 then crscore else 0
      end) sc_h,sum(case when threat_level=4 then crscore else 0 end) sc_c from grp_
      threat where timestamp BETWEEN 1546559580 and 1546563179 and 1=1 AND srcip in
      ('10.1.100.11') AND srcintfrole in ('lan','dmz','undefined') group by timestamp1
      ) b on a.timestamp1 = b.timestamp1;
      takes 40(ms), agggr:0(ms)
```

- Use `execute report flush-cache` and `execute report recreate-db` to clear up any irregularities that may be caused by upgrading or cache issues.

FortiView from FortiAnalyzer


Attaching a FortiAnalyzer to the FortiGate increases the functionality of *FortiView*. For example, it adds the *Compromised Hosts* view.

The following devices are required:

- A FortiGate or FortiOS
- A compatible FortiAnalyzer (see https://docs.fortinet.com/document/fortianalyzer/6.2.0/compatibility-with-fortios)


To enable FortiView from FortiAnalyzer:

1. On the FortiGate, go to *Security Fabric* > *Settings*.
2. Turn on *FortiAnalyzer Logging* and enter the IP address of the FortiAnalyzer device.
3. Click *Test Connectivity*. A message will be shown stating that the FortiGate is not authorized on the FortiAnalyzer.

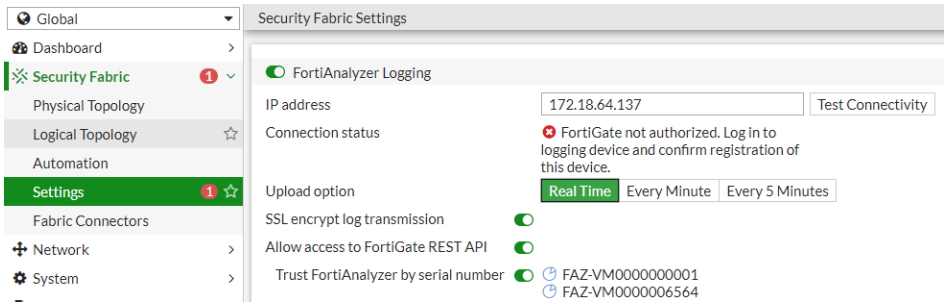


4. On the FortiAnalyzer, go to *Device Manager*.


5. In the device list, right click the just added FortiGate, then click *Authorize*.

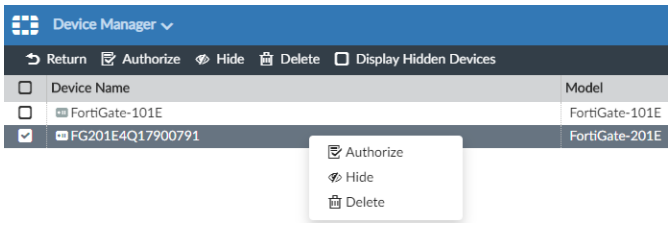


6. On the FortiGate, go to *Security Fabric* > *Settings* and click Test Connectivity to confirm that the device is now authorized.

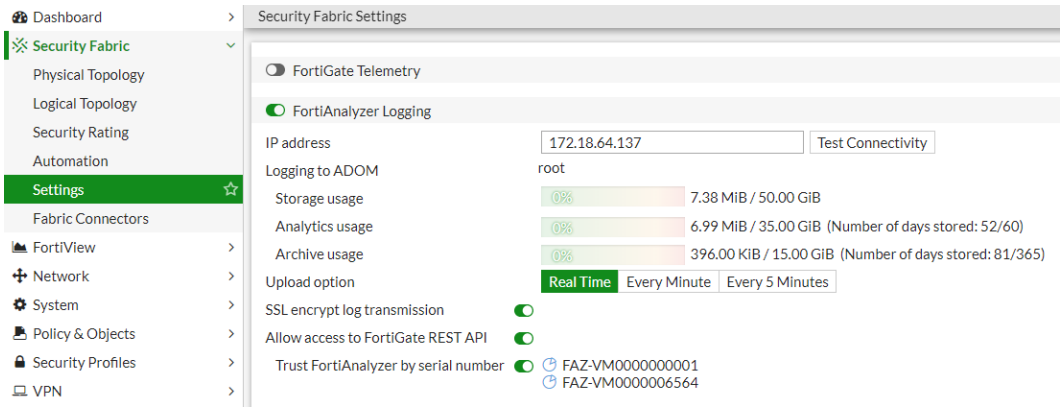

7. Go to *FortiView* > *Sources*.
8. Select a time range other than *now* from the drop-down list to view historical data.
9. From the source drop-down list, select *FortiAnalyzer*.

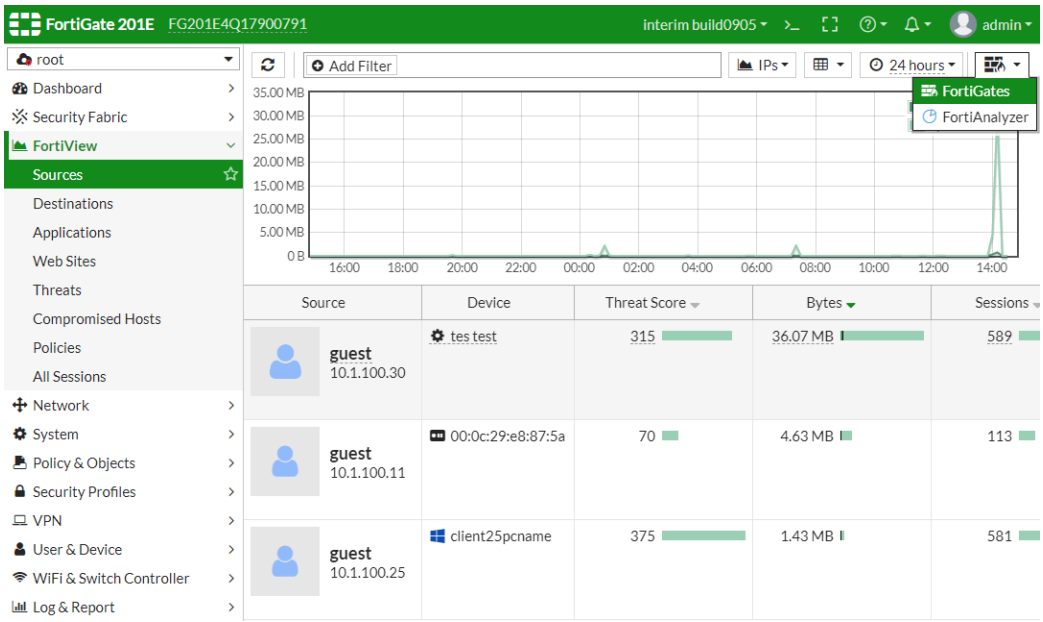

All the historical information now comes from the FortiAnalyzer.

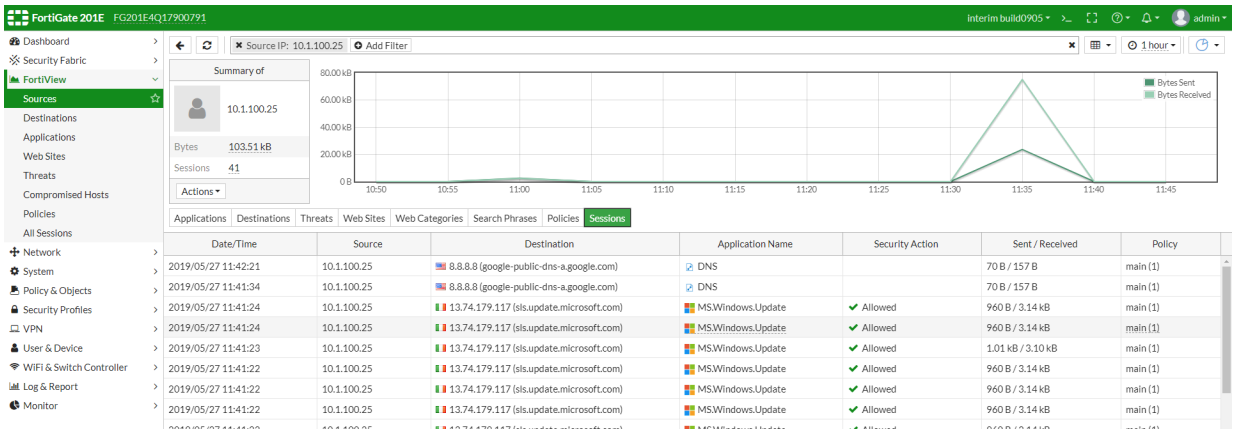

Cloud application view

To see different cloud application views, set up the following:

- A FortiGate having a relative firewall policy with the Application Control security profile.
- A FortiGate with log data from the local disk or FortiAnalyzer.
- Optional but highly recommended: *SSL Inspection* set to *deep-inspection* on relative firewall policies.

Viewing cloud applications


Cloud applications

All cloud applications require *SSL Inspection* set to *deep-inspection* on the firewall policy. For example, `Facebook_File.Download` can monitor Facebook download behavior which requires *SSL deep-inspection* to parse the deep information in the network packets.

To view cloud applications:


1. Go to *Security Profiles* > *Application Control*.
2. Edit a profile that is used by the firewall policy.

3. On the *Edit Application Sensor* page, click *View Application Signatures*.

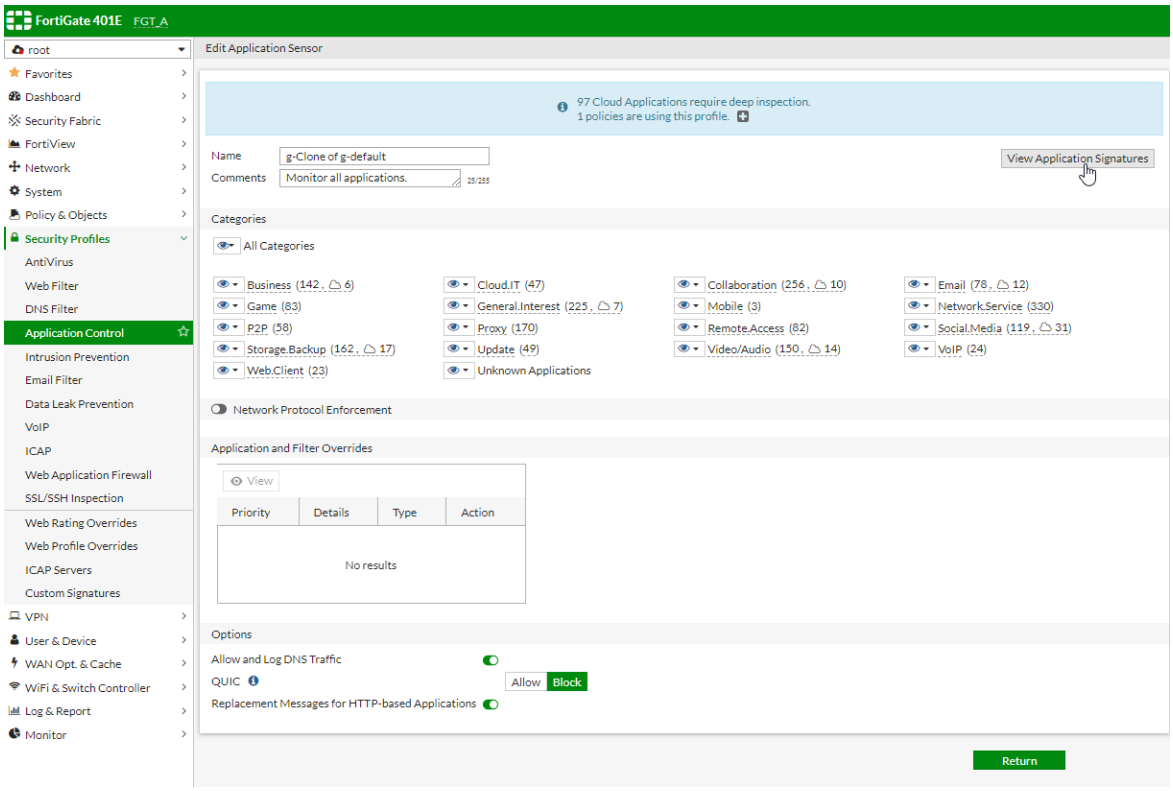


4. On the top right of the *Application Signature* page, click *Cloud* to display all cloud signature based applications. Cloud applications have a cloud icon beside them.

   The lock icon indicates that that application requires SSL deep inspection.

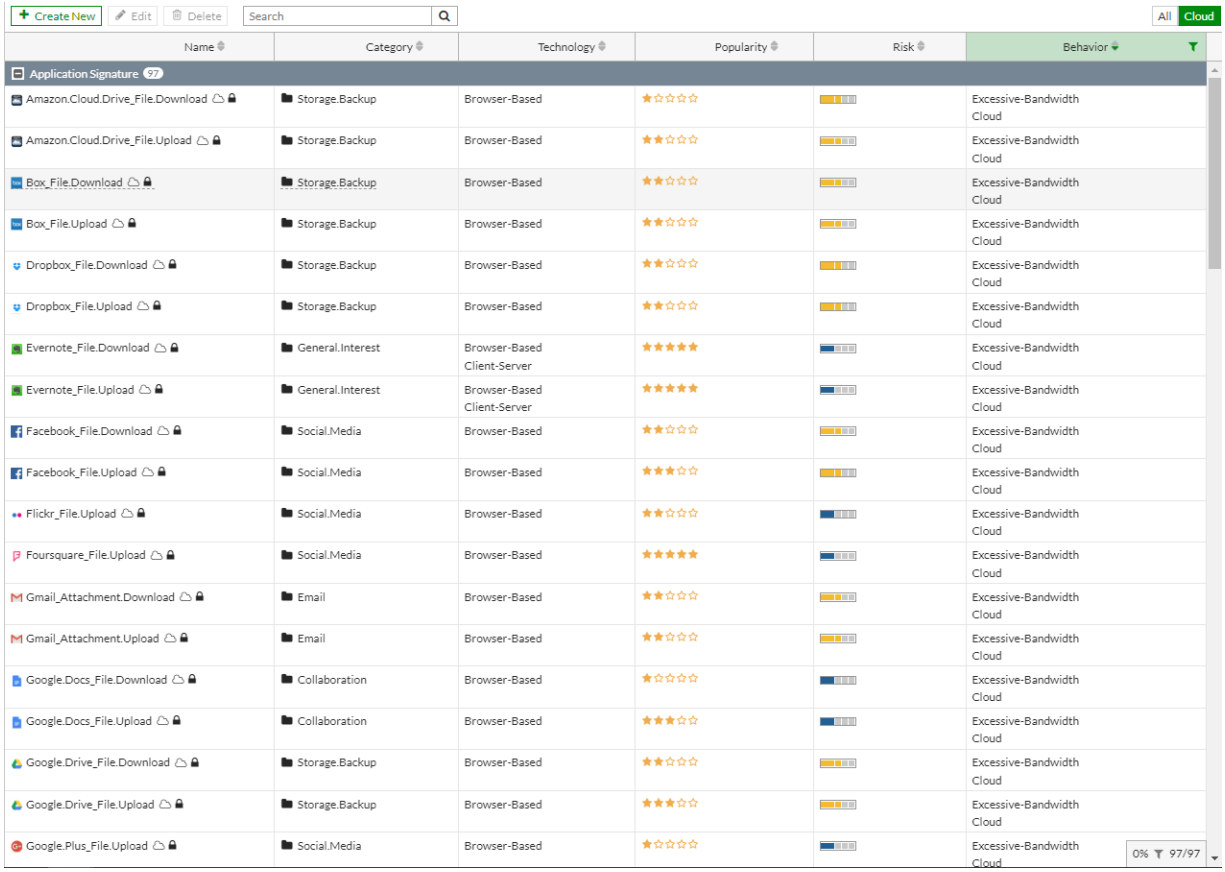

5. Hover over an item to see its details.

   This example shows the Gmail_Attachment.Download, a cloud application signature based sensor which requires SSL deep inspection. If any local network user behind the firewall logs into Gmail and downloads a Gmail attachment, that activity is logged.

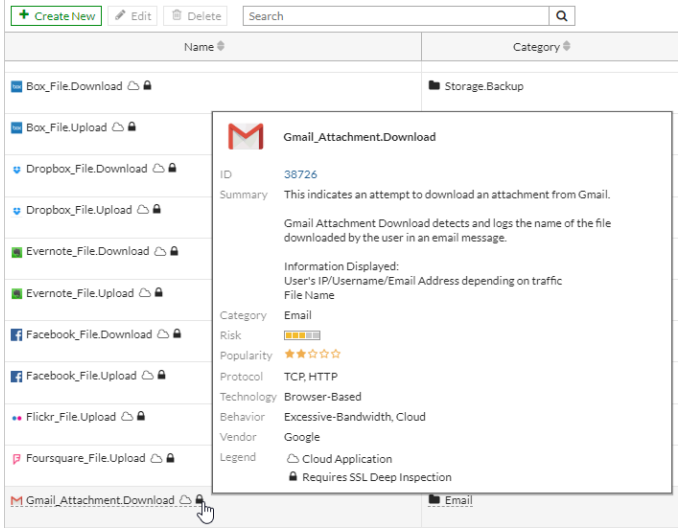

Applications with cloud behavior


Applications with cloud behavior is a superset of cloud applications.

Some applications do not require SSL deep inspection, such as Facebook, Gmail, YouTube, and so on. This means that if any traffic trigger application sensors for these applications, there is a FortiView cloud application view for that traffic.


Other applications require SSL deep inspection, such as Gmail attachment, Facebook_Workplace, and so on.

To view applications with cloud behavior:


1. On the *Application Signature* page, add the *Behavior* column if it is not already visible:
   a. Hover over the left of the table column headings to display the *Configure Table* icon.
   b. Click *Configure Table* and select *Behavior*.
   c. Click *Apply*.
2. Click the Filter icon in the *Behavior* column and enter *Cloud* to filter by Cloud, then click *Apply*.

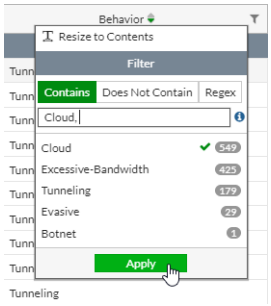


3. The *Application Signature* page displays all applications with cloud behavior.

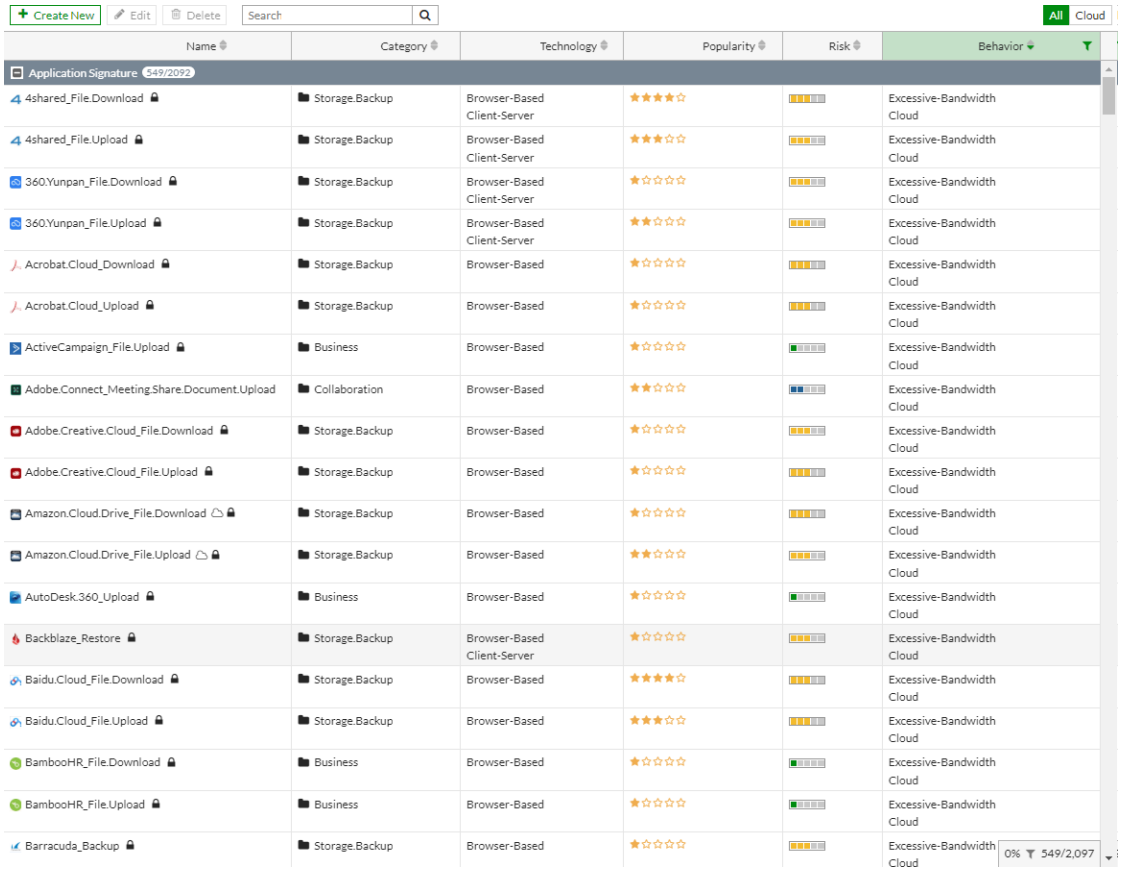

4. Use the Search box to search for applications. For example, you can search for *youtube*.

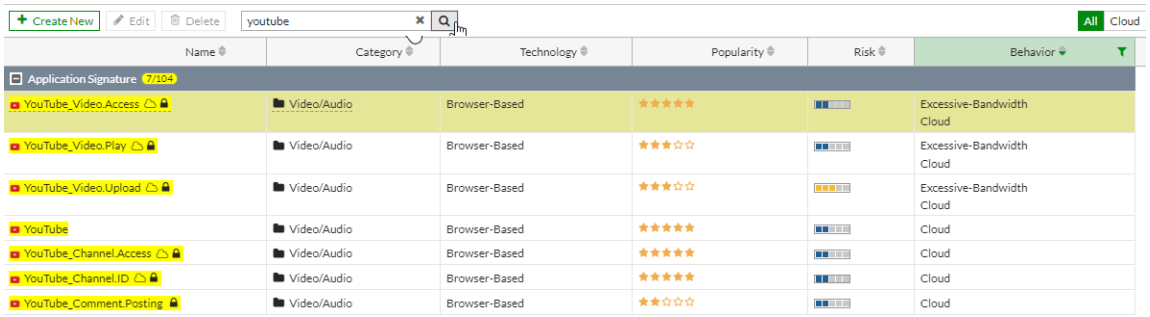


5. Hover over an item to see its details.
   This example shows an application sensor with no lock icon which means that this application sensor does not require SSL deep inspection. If any local network user behind the firewall tries to navigates the YouTube website, that activity is logged.

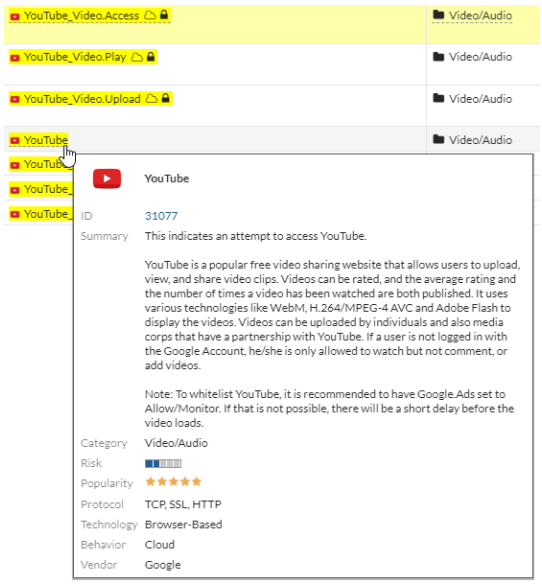

Configuring the Cloud Applications widget


On the *Edit Application Sensor* page in the *Categories* section, the icon besides a category means that category is monitored and logged.

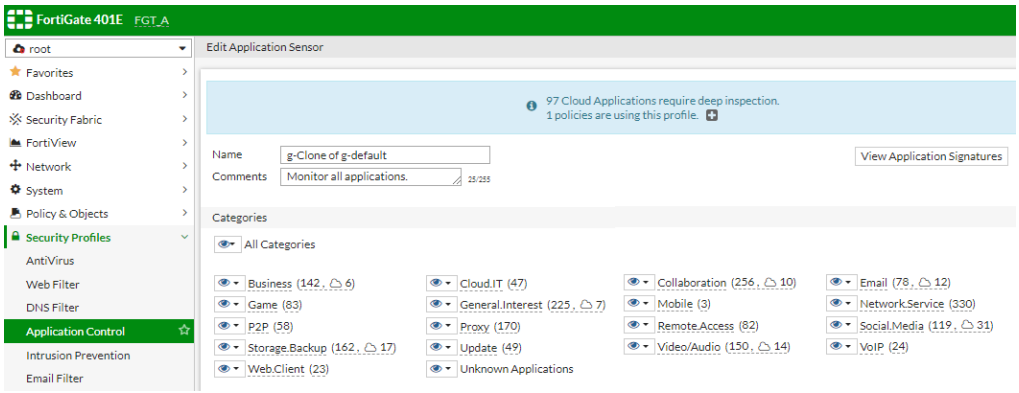


To add the Cloud Applications widget:

1. Go to *Dashboard* > *Top Usage LAN/DMZ*.
2. Move the cursor to the bottom right, click the widget control icon and select *Add Widget*.
3. Select *FortiView Top N*.


4. In the *FortiView* dropdown list, select the *LAN/DMZ* tab and then select *Cloud Applications*.

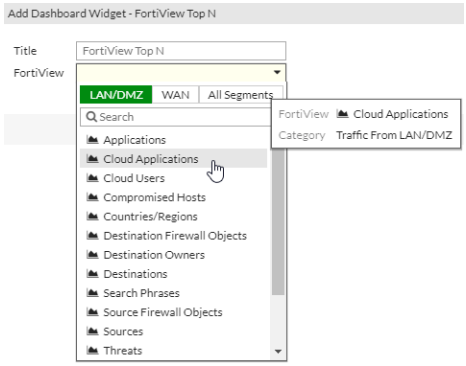

5. Click *Add Widget*.

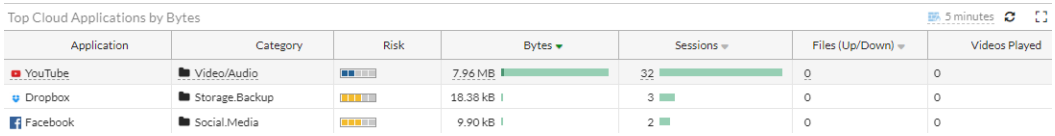


6. If SSL deep inspection is enabled on the relative firewall, then the widget shows the additional details that are logged, such as *Files (Up/Down)* and *Videos Played*.
   For YouTube, the *Videos Played* column is triggered by the *YouTube_Video.Play* cloud application sensor. This shows the number of local network users who logged into YouTube and played YouTube videos.
   For Dropbox, the *Files (Up/Down)* column is triggered by *Dropbox_File.Download* and *Dropbox_File.Upload* cloud application sensors. This shows the number of local network users who logged into Dropbox and uploaded or downloaded files.

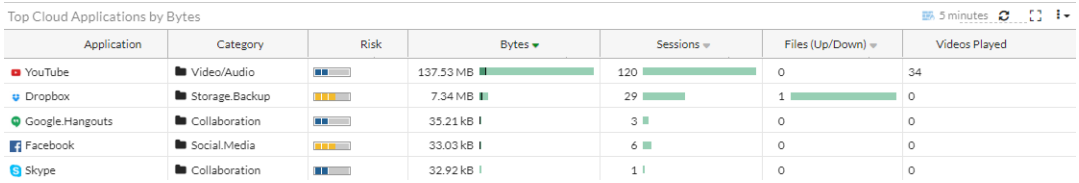


Using the Cloud Applications widget

To see additional information in the Cloud Applications widget:


1. In the top right of the widget, click the *Expand to full screen* icon to see additional information.

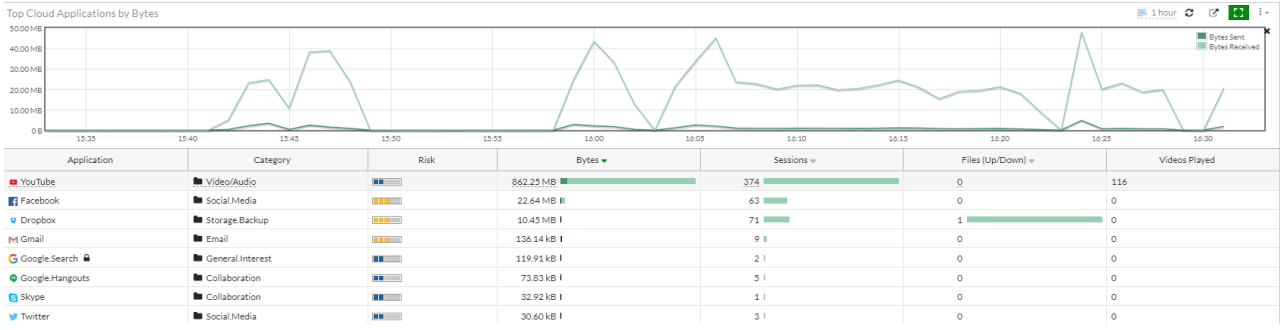


2. For details about a specific entry, double-click the entry or right-click the entry and select *Drill Down to Details*.

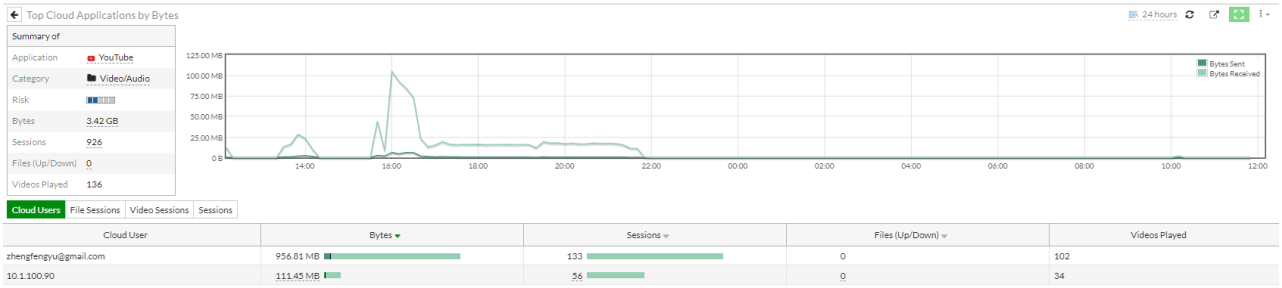


3. To see all the sessions for an application, click *Sessions*.
In this example, the *Application Name* column shows all applications related to YouTube.

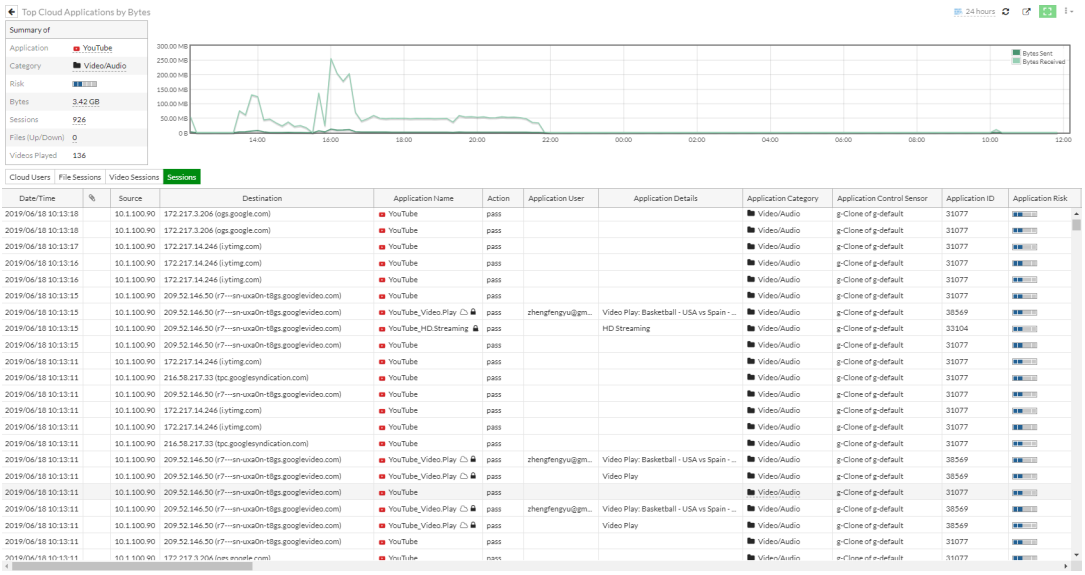


4. To view log details, double-click a session to display the *Log Details* pane.
   Sessions monitored by SSL deep inspection (in this example, Youtube_Video.Play) captured deep information such as *Application User*, *Application Details*, and so on. The *Log Details* pane also shows additional deep information such as application *ID*, *Message*, and so on.
   Sessions not monitored by SSL deep inspection (YouTube) did not capture the deep information.

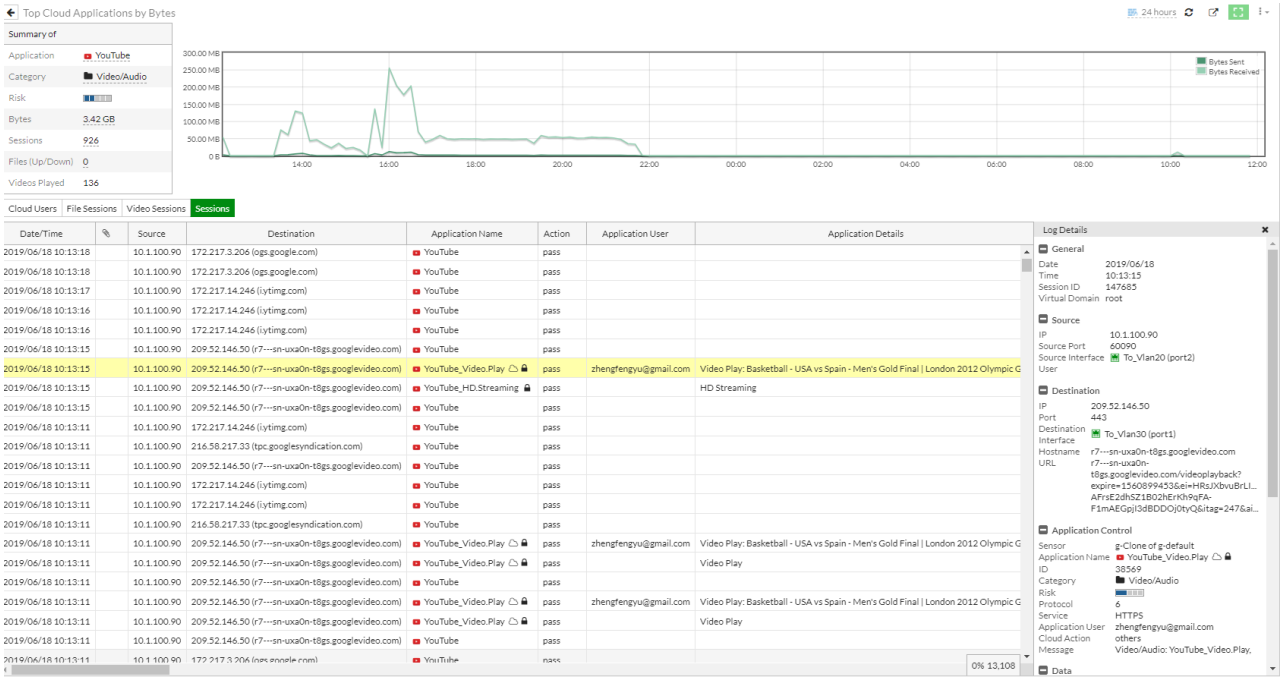

5. In the top right, click the *Standalone FortiView page* icon to see the page in standalone view.

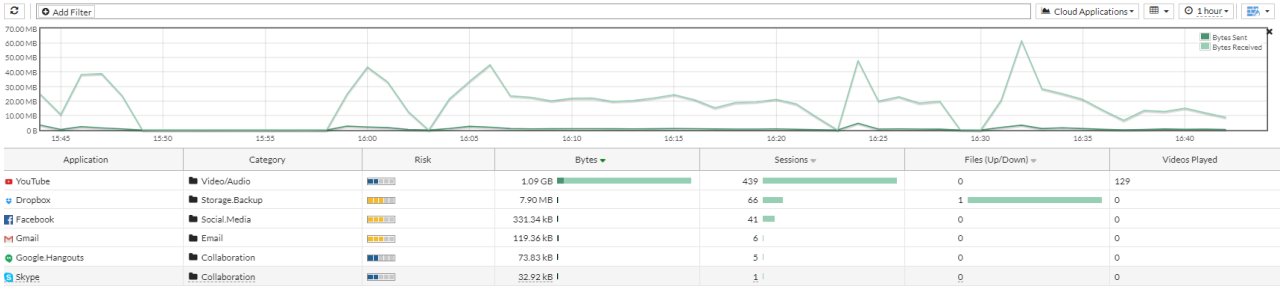

6. To display a specific time period, select and drag in the timeline graph to display only the data for that time period.

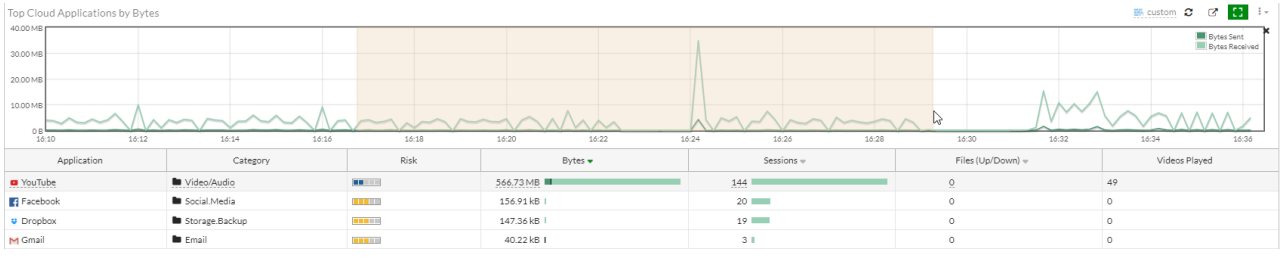


Cloud application view examples

Example of monitoring network traffic with SSL deep inspection

This is an example of monitoring network traffic for YouTube via FortiView cloud application view with SSL deep inspection.


To monitor network traffic with SSL deep inspection:

1. Use a firewall policy with the following settings. If necessary, create a policy with these settings.
   - *Application Control* is enabled.
   - *SSL Inspection* is set to *deep-inspection*.
   - *Log Allowed Traffic* is set to *All Sessions*.

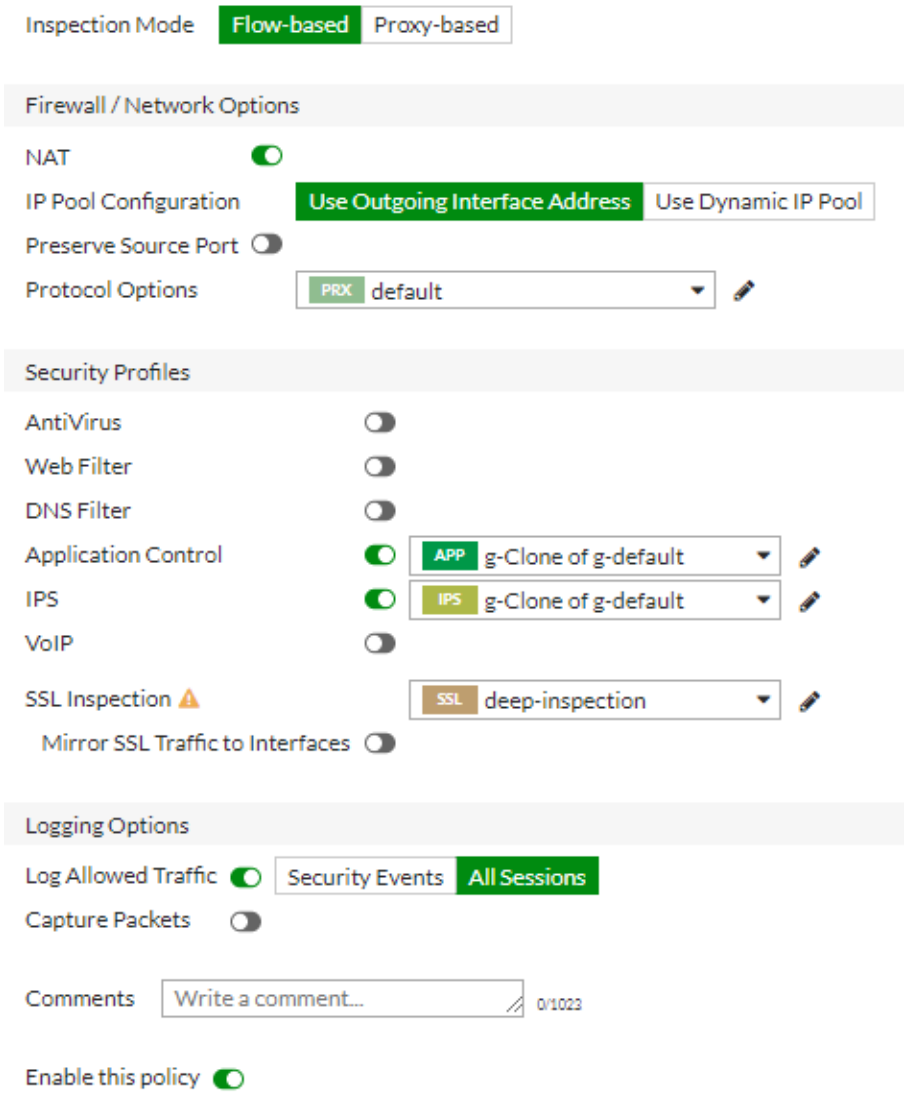

2. Go to *Security Profiles* > *Application Control*.
3. Select a relative Application Control profile used by the firewall policy and click *View*.


4. Because YouTube cloud applications are categorized into *Video/Audio*, ensure the *Video/Audio* category is monitored.

5. Click *View Application Signatures* and hover over YouTube cloud applications to view detailed information about YouTube application sensors.


Application Signature	Description	Application ID
YouTube_Video.Access	An attempt to access a video on YouTube.	16420
YouTube_Video.Play	An attempt to download and play a video from YouTube.	38569
YouTube_Video.Upload	An attempt to upload a video to YouTube.	22564
YouTube	An attempt to access YouTube. This application sensor does not depend on SSL deep inspection so it does not have a cloud or lock icon.	31077
YouTube_Channel.Access	An attempt to access a video on a specific channel on YouTube.	41598
YouTube_Channel.ID	An attempt to access a video on a specific channel on YouTube.	44956
YouTube_Comment.Posting	An attempt to post comments on YouTube.	31076

6. On the test PC, log into YouTube and play some videos.
7. On the FortiGate, go to *Log & Report* > *Application Control* and look for log entries for browsing and playing YouTube videos.
   In this example, note the *Application User* and *Application Details*. Also note that the *Application Control ID* is *38569* showing that this entry was triggered by the application sensor *YouTube_Video.Play*.

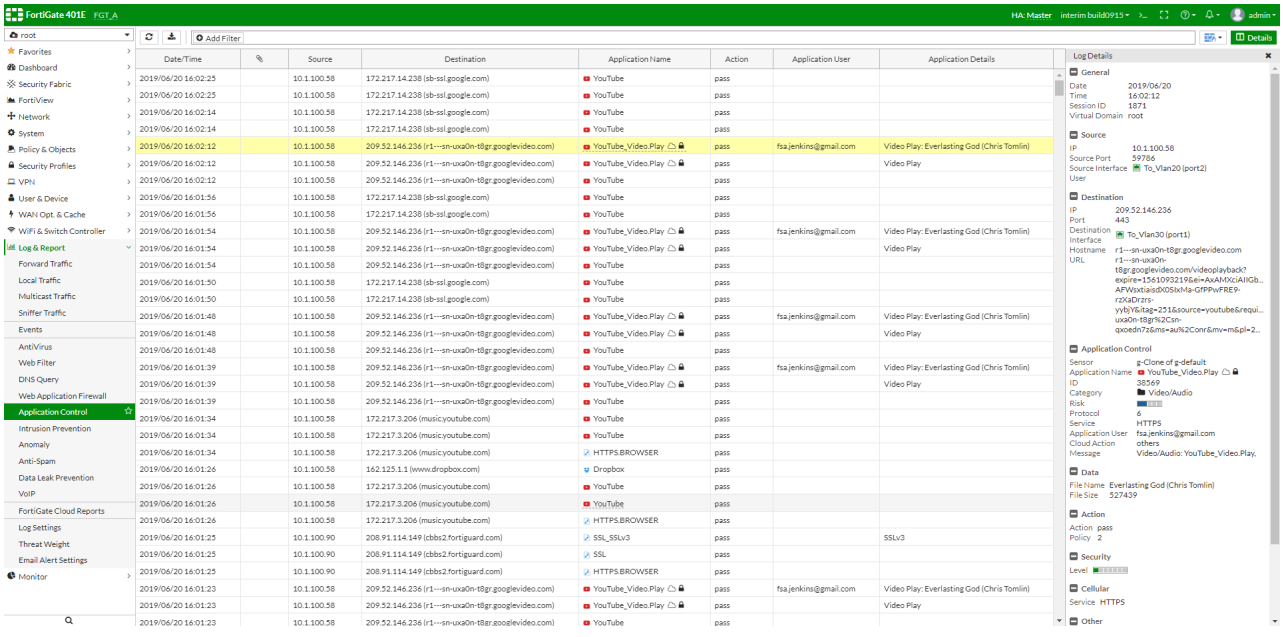

8. Go to *Dashboard* > *Top Usage LAN/DMZ*.
9. In the *Top Cloud Application by Bytes* widget, double-click *YouTube* to drill down to view details.

10. Select the *Sessions* tab to see all the entries for the videos played. Check the sessions for *YouTube_Video.Play* with the ID *38569*.

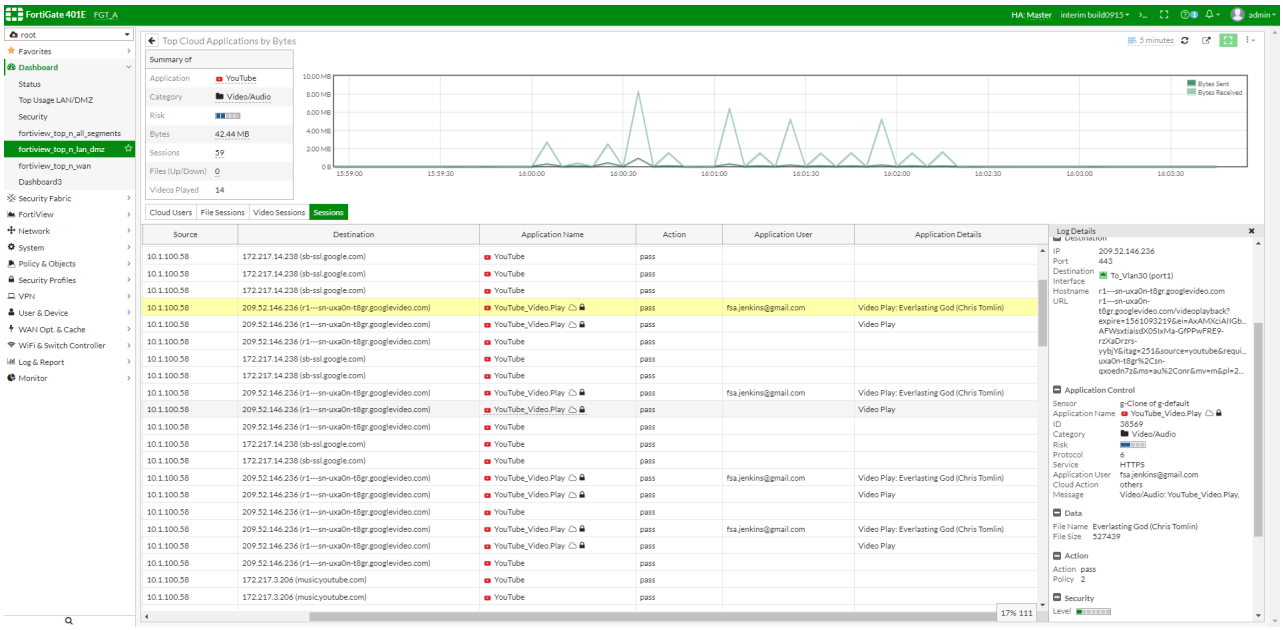


Example of monitoring network traffic without SSL deep inspection

This is an example of monitoring network traffic for YouTube via FortiView cloud application view without SSL deep inspection.

To monitor network traffic without SSL deep inspection:


1. Use a firewall policy with the following settings. If necessary, create a policy with these settings.
   - *Application Control* is enabled.
   - *SSL Inspection* is set to *certificate-inspection*.

- *Log Allowed Traffic* is set to *All Sessions*.

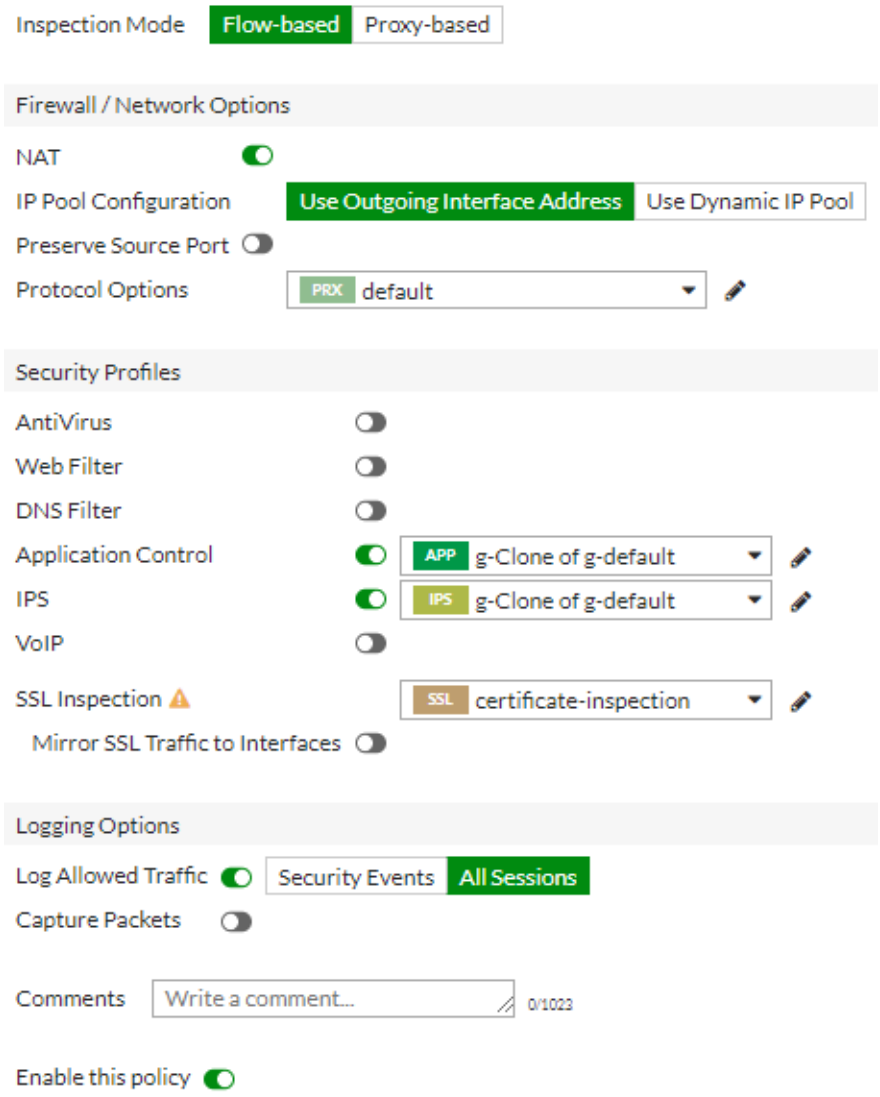


2. On the test PC, log into YouTube and play some videos.
3. On the FortiGate, go to *Log & Report* > *Application Control* and look for log entries for browsing and playing YouTube videos.

In this example, the log shows only applications with the name YouTube. The log cannot show YouTube application sensors which rely on SSL deep inspection.

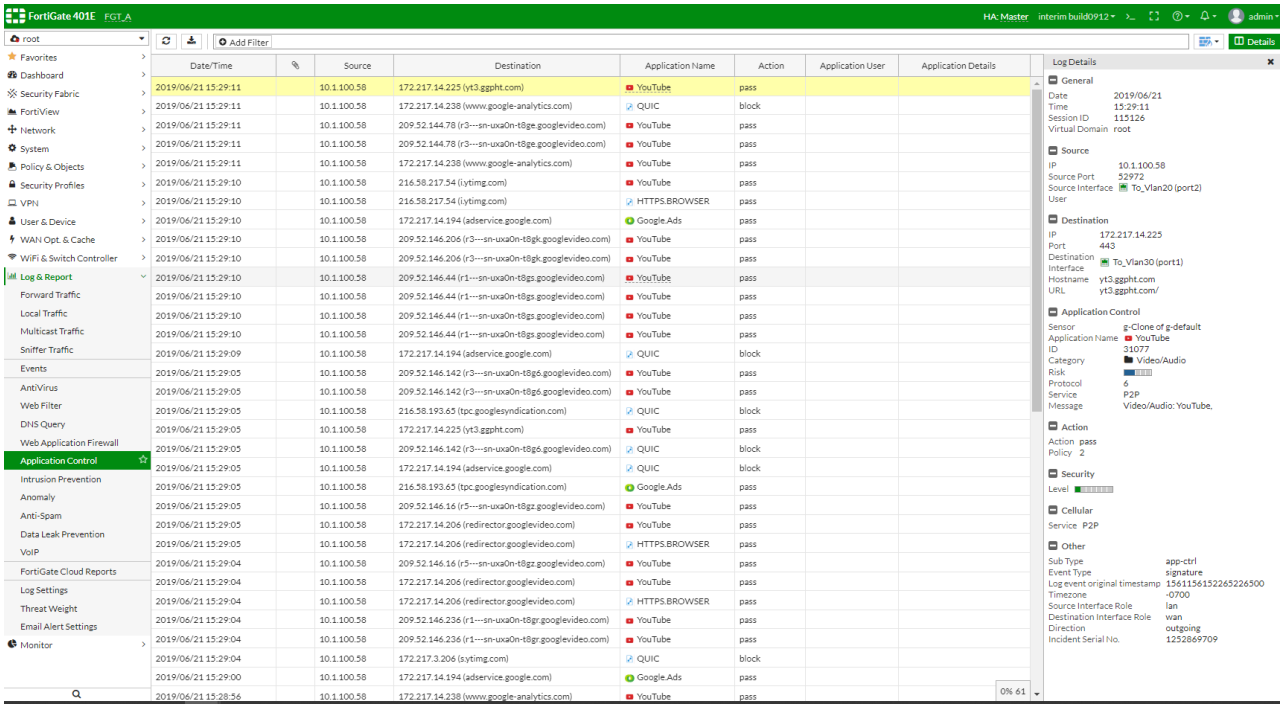

4. Go to *Dashboard* > *Top Usage LAN/DMZ* and check the *Top Cloud Application by Bytes* widget.
   The *Top Cloud Application by Bytes* widget shows the YouTube cloud application without the video played information that requires SSL deep inspection.
5. Double-click *YouTube* and select the *Sessions* tab.
   These sessions were triggered by the application sensor *YouTube* with the ID *31077*. This is the application sensor with cloud behavior which does not rely on SSL deep inspection.

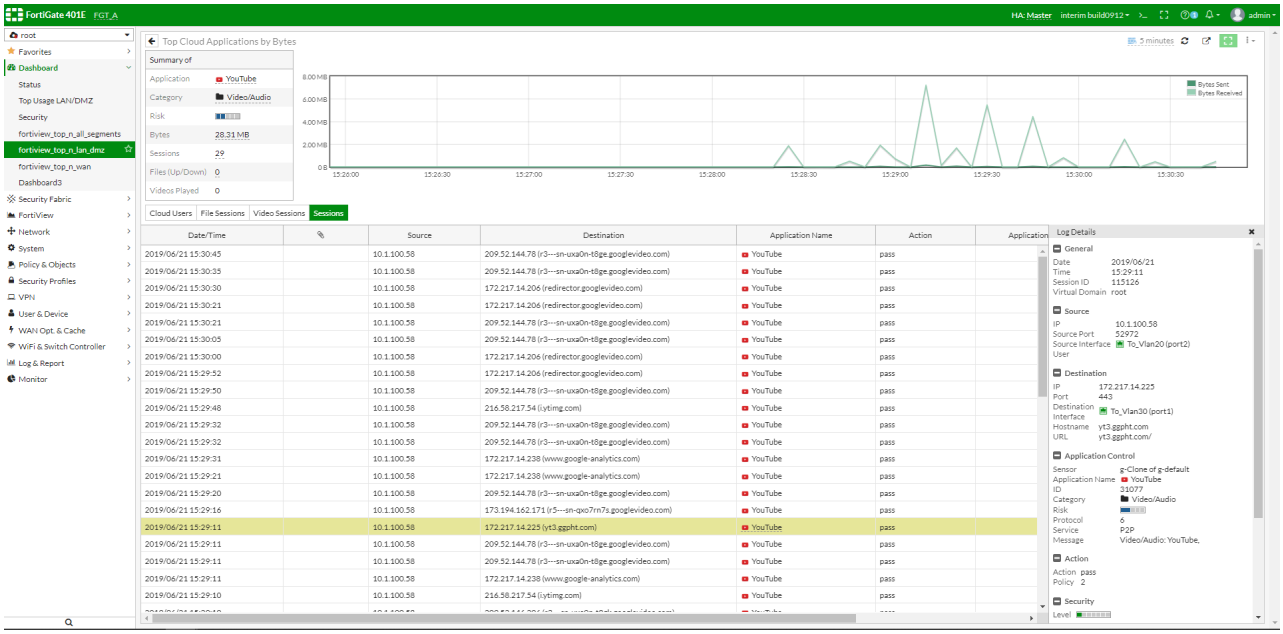


FortiView Sources usability


The *Sources* view displays avatar and device information (for real-time and historical views). You can also create or edit device or address definitions.

To view avatar and device information:

1. Go to *FortiView* > *Sources*. A list of sources displays.

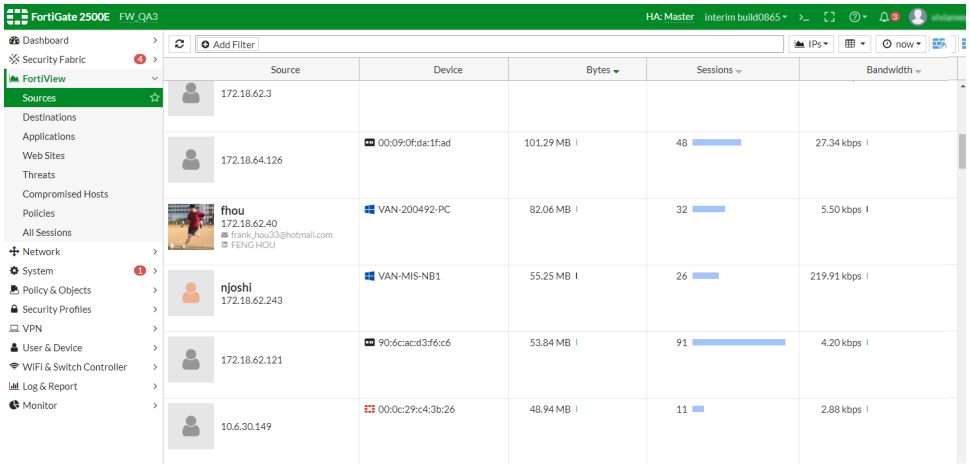


2. Right-click on a source and select *Drill Down to Details*. The *Summary of* box displays the avatar and device details.

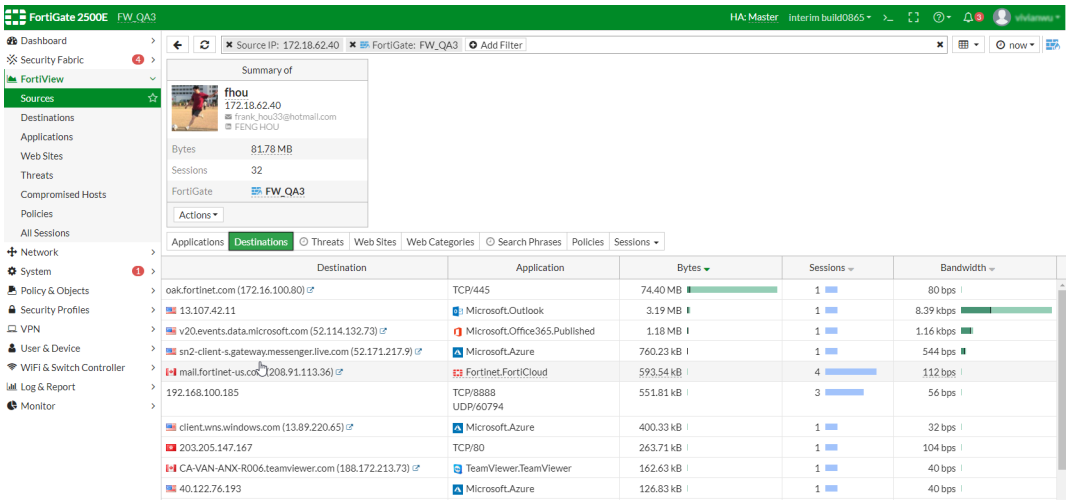

To create or edit definitions in the top level view:


1. Go to *FortiView* > *Sources*.
2. Right-click on a source.

3. Select an option. In this example, *Create Custom Device* is selected.

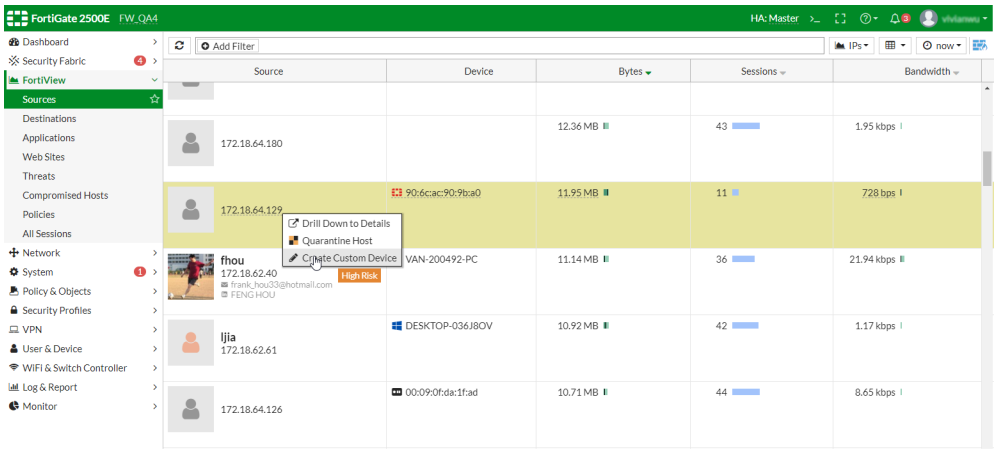

To create or edit definitions in the drill down view:

1. In the *Summary of* box, click the *Actions* button.
2. Select an option. In this example, *Edit Custom Device* is selected.

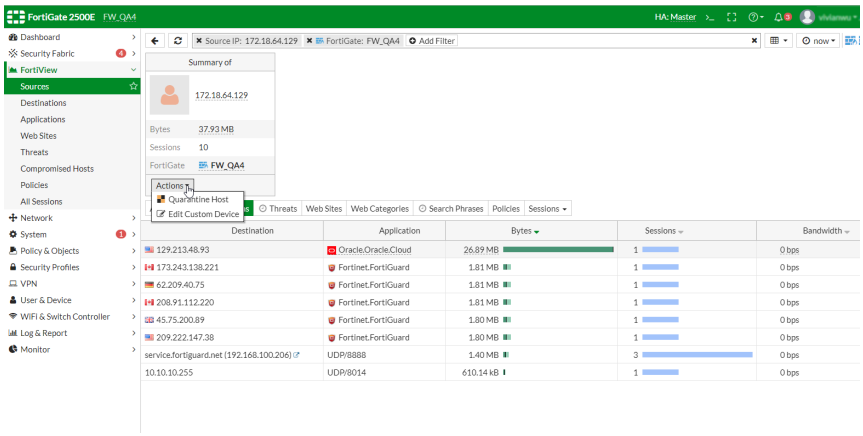


FortiView from FortiGate Cloud


This function requires a FortiGate that is registered and logged into a compatible FortiGate Cloud.

To enable FortiView with log source as FortiGate Cloud:


1. Go to *Security Fabric* > *Settings*.
2. Enable *Cloud Logging* and select *FortiGate Cloud*.
   If the FortiGate is registered and logged into FortiGate Cloud, the *Account* and *Region* is displayed.

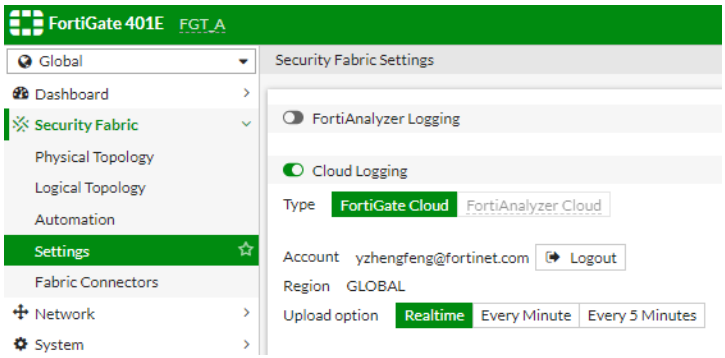


If the FortiGate is logged out from FortiGate Cloud, click *Activate* and log in, and ensure *Send logs to FortiGate Cloud* is selected.

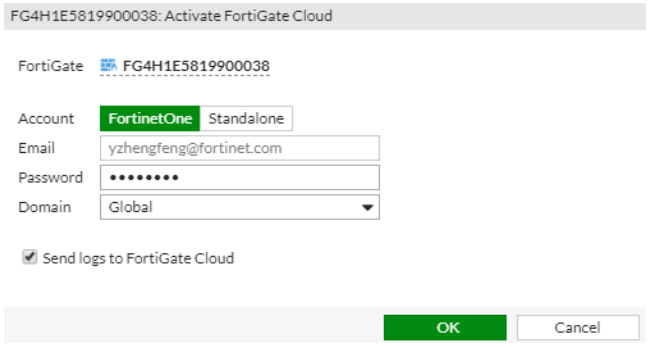


3. Go to *Log & Report* > *Log Settings* and set the following:
   a. Set *Event Logging* to *All*.
   b. Set *Local Traffic Log* to *All*.

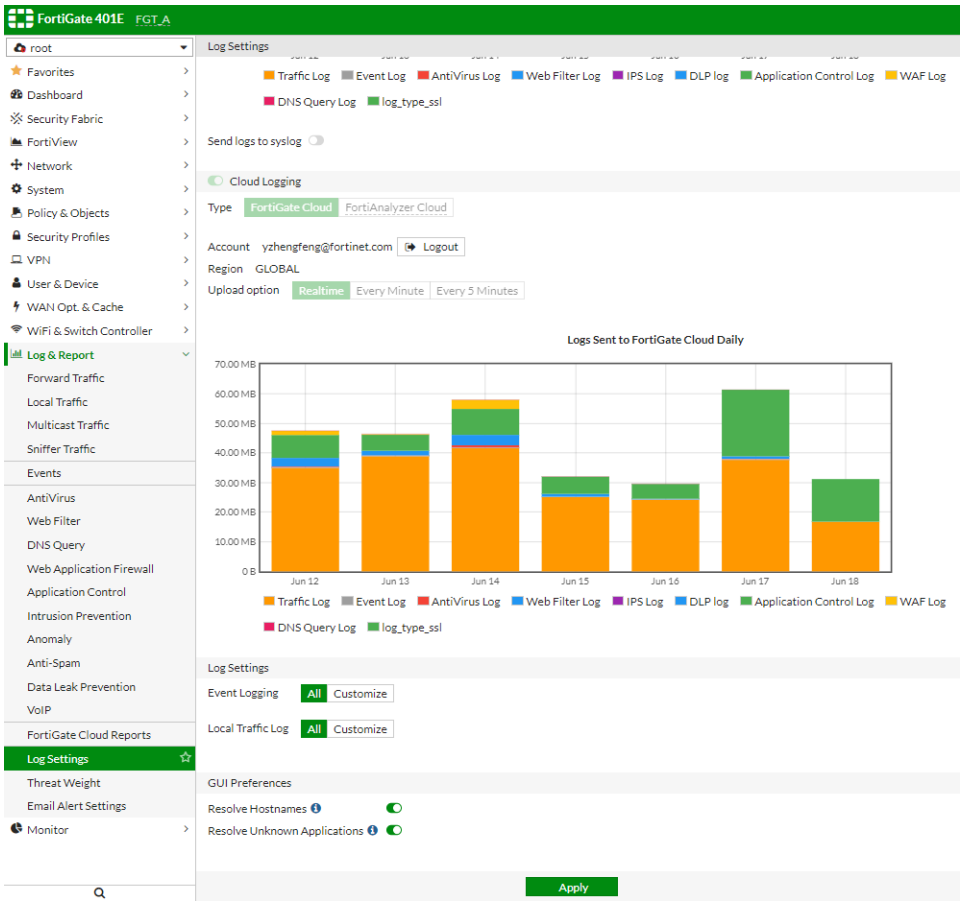

4. Go to *FortiView* > *Sources*.
   The top right has a dropdown menu to select the source.

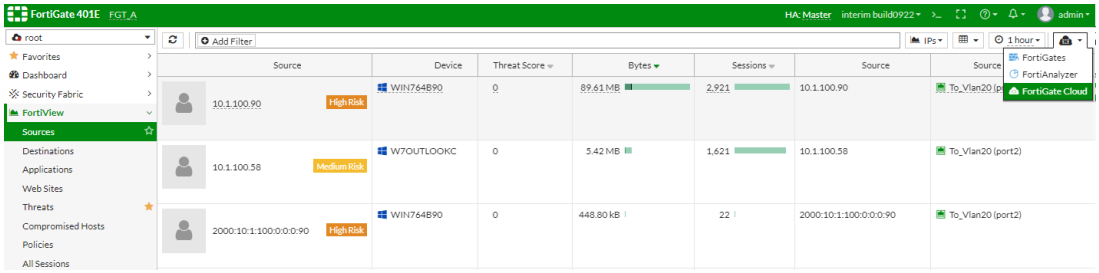

5. In the top right dropdown menu, select *FortiGate Cloud* as the source.

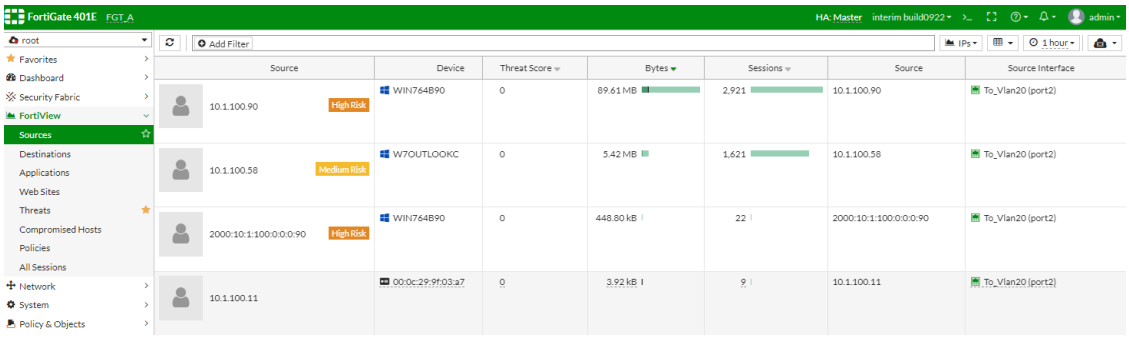

You can select FortiGate Cloud as the data source for all available FortiView pages and widgets.

Supported views for different log sources

The following chart identifies what log sources support which views:

	Disk for FortiOS 6.2.0	FortiAnalyzer 6.2.0	FortiGate Cloud 4.1.1
Sources	Yes	Yes	Yes
Admin logins	Yes	Yes	No
Applications	Yes	Yes	Yes
Cloud Applications	No	No	No
Cloud User	Yes	Yes	No
Destination Countries MAP	Yes	Yes	Yes
Destination Countries Table View	Yes	Yes	Yes
Destination Countries Bubble View	Yes	Yes	Yes
Destination Interface	Yes	Yes	Yes
Destination IPS	Yes	Yes	Yes
Destination Owners	Yes	Yes	No
Destination Firewall Objects	Yes	Yes	No
Endpoint Devices	Yes	Yes	Yes
Endpoint Vulnerability	Yes	Yes	No
Failed Authentication	Yes	Yes	Yes
Interface Pair	Yes	Yes	No
Policies	Yes	Yes	Yes


	Disk for FortiOS 6.2.0	FortiAnalyzer 6.2.0	FortiGate Cloud 4.1.1
Search Phrases	Yes	Yes	No
Source Interface	Yes	Yes	Yes
Source Firewall Objects	Yes	Yes	No
System Events	Yes	Yes	Yes
Threats	Yes	Yes	Yes
Top FortiSandbox Files by Submitted	Yes	Yes	No
VPN	Yes	Yes	Yes
Web Category	Yes	Yes	Yes
Web Sites	Yes	Yes	Yes
WiFi Clients	Yes	Yes	No

FortiGate Cloud-based IOC

Topology, FortiView, and automation support Indicators of Compromise (IOC) detection from the FortiGate Cloud IOC service.

FortiGate lists IOC entries on the *FortiView* pane, and uses the IOC event logs as a trigger for automation stitches. IOC and web filter licenses are required to use this feature. You must also enable FortiGate Cloud logging on the FortiGate.

To view compromised hosts, go to *FortiView* > *Compromised Hosts*. The IOC entries are displayed when the source is FortiGate Cloud.

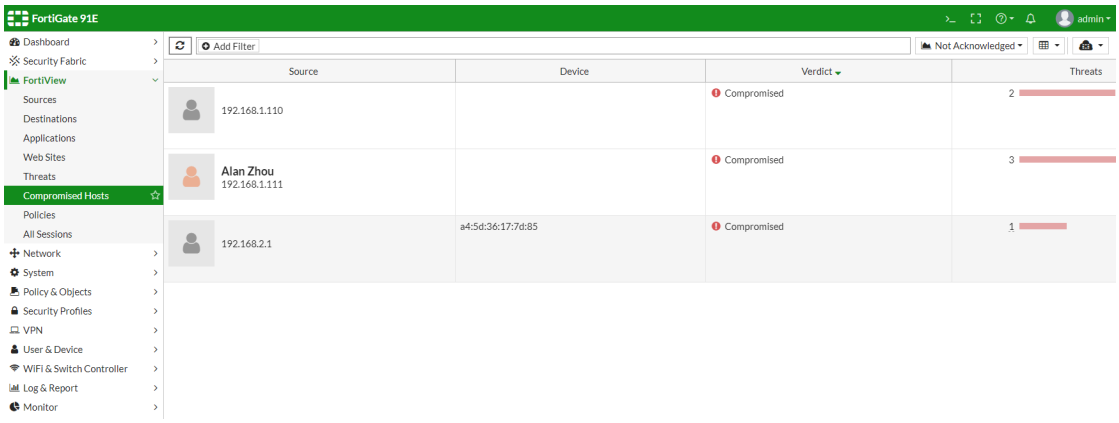

You can also view the IOC entries in the FortiGate Cloud portal.

FortiView — subnet filters

In FortiView, you can filter source IPs or destination IPs with a subnet mask using the x.x.x.x/x format. You can view the results in real-time or historical mode.


Both logging from disk and logging from FortiAnalyzer are supported.

Sample configuration of filtering IPs with a subnet mask

This example shows how to filter destination IPs with a subnet mask using the x.x.x.x/x format.

To filter destination IPs with a subnet mask:

1. Go to *FortiView* > *Destinations*.
2. Click *Add Filter*.
3. In the dropdown menu, select *Destination IP*.
4. Enter the subnet mask (in the example, *91.189.0.0/16*).
5. Press the `Enter` key. The filter results display.

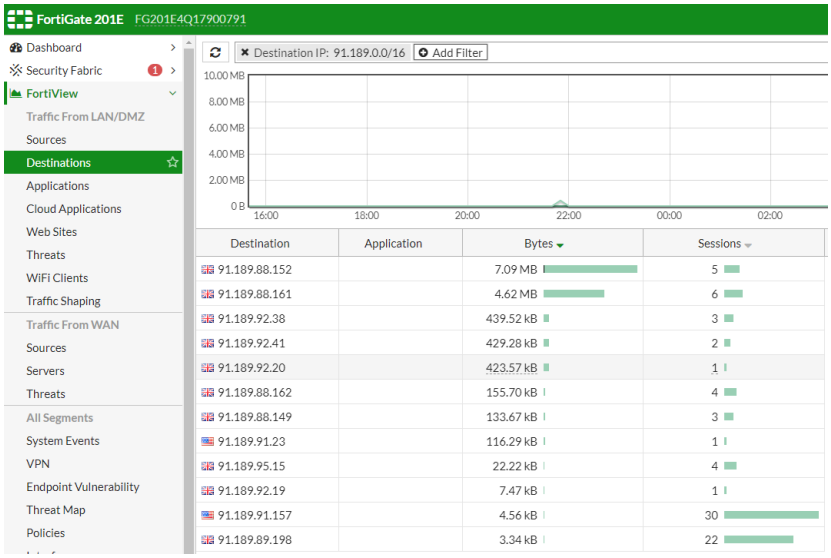

To view results in the backend subnet filter:

```
# diagnose device application miglogd 0x70000
Debug messages will be on for unlimited time.

# fortiview_add_filter_field_ex()-1559: fortiview add filter field:"destination"=>"dstip"
```

```
type:4 negate:0
fortiview_add_filter_field_ex()-1560: values:
fortiview_add_filter_field_ex()-1562: value[0]=91.189.0.0/16
fortiview_add_filter_field_ex()-1559: fortiview add filter
field:"srcintfrole"=>"srcintfrole" type:4 negate:0
fortiview_add_filter_field_ex()-1560: values:
fortiview_add_filter_field_ex()-1562: value[0]=lan
fortiview_add_filter_field_ex()-1562: value[1]=dmz
fortiview_add_filter_field_ex()-1562: value[2]=undefined
__params_from_filter()-583: filter field:dstip  91.189.0.0/16
__params_from_filter()-583: filter field:srcintfrole  lan
__params_from_filter()-583: filter field:srcintfrole  dmz
__params_from_filter()-583: filter field:srcintfrole  undefined
fortiview_request_data()-896: dataset:fv.dest.group tabid:0
_dump_sql()-829: dataset=fv.dest.group, sql:select dstip, max(dstintf) dst_intf,max
(dstdevtype) dst_devtype,max(dstmac) dst_mac,group_concat(distinct appid) appid,group_concat
(distinct appservice||case when subapp is null then '' else '_'||subapp end) appname,sum
(sessioncount) session_count, sum(case when passthrough<>'block' then sessioncount else 0
end) session_allow, sum(case when passthrough='block' then sessioncount else 0 end) session_
block, sum(rcvdbyte) r, sum(sentbyte) s, sum(rcvdbyte + sentbyte) bandwidth ,sum(crscore)
score, sum(case when passthrough<>'block' then crscore else 0 end) score_allow, sum(case
when passthrough='block' then crscore else 0 end) score_block  from grp_traffic_all_dst
where timestamp between 1551397800 and 1551484200 and 1=1 AND ( ft_ipmask(dstip, 0,
'91.189.0.0/16') )  AND srcintfrole  in ('lan','dmz','undefined')  group by dstip   order by
bandwidth desc   limit 100;
 takes 10(ms), agggr:0(ms)

fortiview_request_data()-933: total:12 start:1551397800 end:1551484200
__params_from_filter()-583: filter field:dstip  91.189.0.0/16
__params_from_filter()-583: filter field:srcintfrole  lan
__params_from_filter()-583: filter field:srcintfrole  dmz
__params_from_filter()-583: filter field:srcintfrole  undefined
fortiview_request_data()-896: dataset:fv.general.chart tabid:0
_dump_sql()-829: dataset=fv.general.chart, sql:select a.timestamp1,ses_al,ses_bk,r,s,ifnull
(sc_l,0),ifnull(sc_m,0),ifnull(sc_h,0),ifnull(sc_c,0) from (select timestamp-(timestamp%600)
timestamp1 ,sum(case when passthrough<>'block' then sessioncount else 0 end) ses_al,sum(case
when passthrough='block' then sessioncount else 0 end) ses_bk,sum(rcvdbyte) r,sum(sentbyte)
s from grp_traffic_all_dst where  timestamp BETWEEN 1551397800 and 1551484199  and 1=1 AND (
ft_ipmask(dstip, 0, '91.189.0.0/16') )  AND srcintfrole  in ('lan','dmz','undefined')  group
by timestamp1 ) a left join (select timestamp-(timestamp%600) timestamp1 ,sum(case when
threat_level=1 then crscore else 0 end) sc_l,sum(case when threat_level=2 then crscore else
0 end) sc_m,sum(case when threat_level=3 then crscore else 0 end) sc_h,sum(case when threat_
level=4 then crscore else 0 end) sc_c  from grp_threat where  timestamp BETWEEN 1551397800
and 1551484199  and 1=1 AND ( ft_ipmask(dstip, 0, '91.189.0.0/16') )  AND srcintfrole  in
('lan','dmz','undefined')  group by timestamp1 ) b on a.timestamp1 = b.timestamp1;
 takes 30(ms), agggr:0(ms)

fortiview_request_data()-933: total:47 start:1551397800 end:1551484199
```

FortiView dashboards and widgets


FortiView is consolidated within the System Dashboards. FortiView pages are available as widgets that can be added to the flexible dashboards.

Only core FortiView pages are available in the *FortiView* menu. All non-core FortiView pages are available as dashboard widgets.


Dashboards are available per VDOM.

The *Dashboard* menu contains the following:


- *Status* dashboard

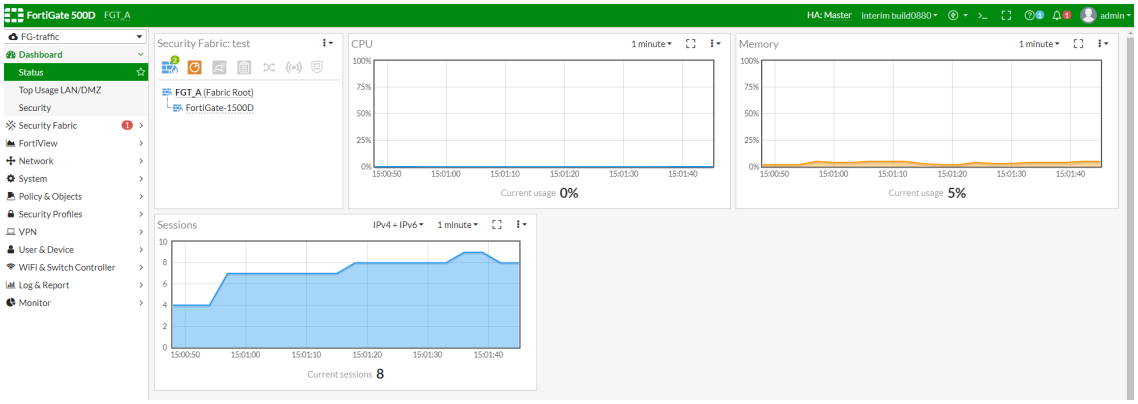


- *Top Usage LAN/DMZ* dashboard

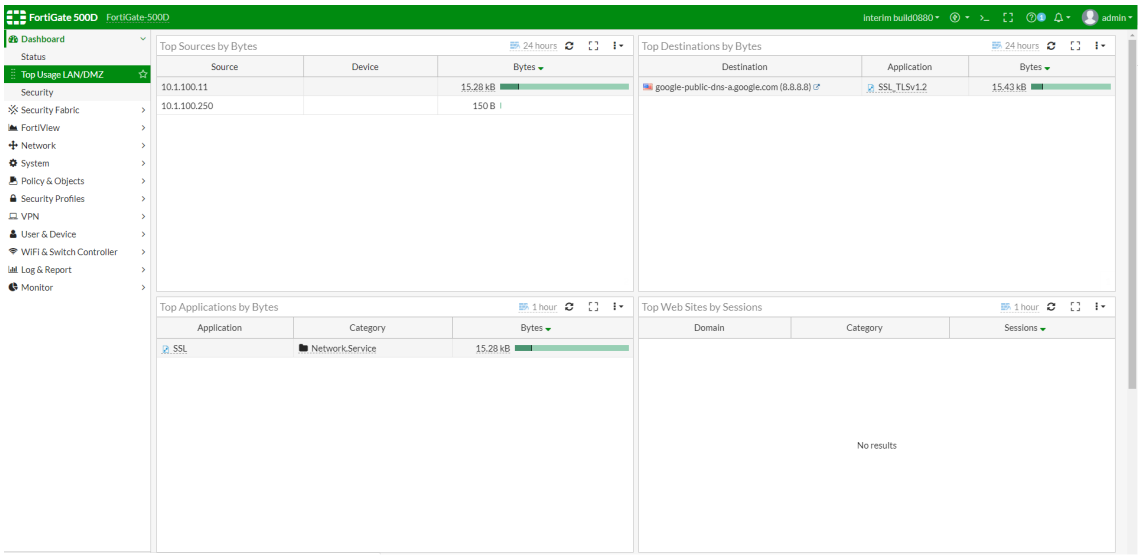

- *Security*dashboard

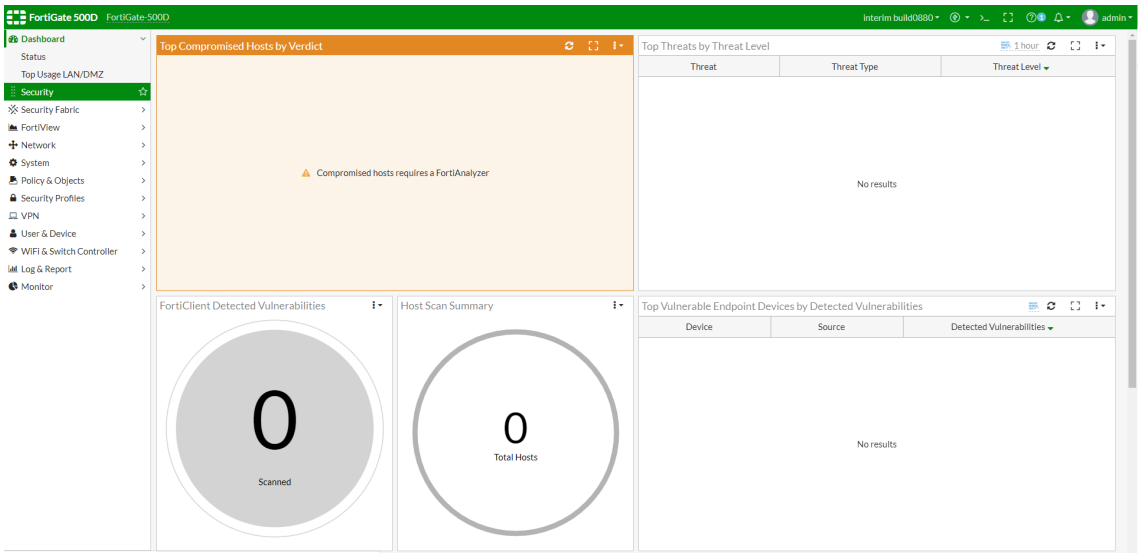


Only core FortiView pages are available in the *FortiView* menu.

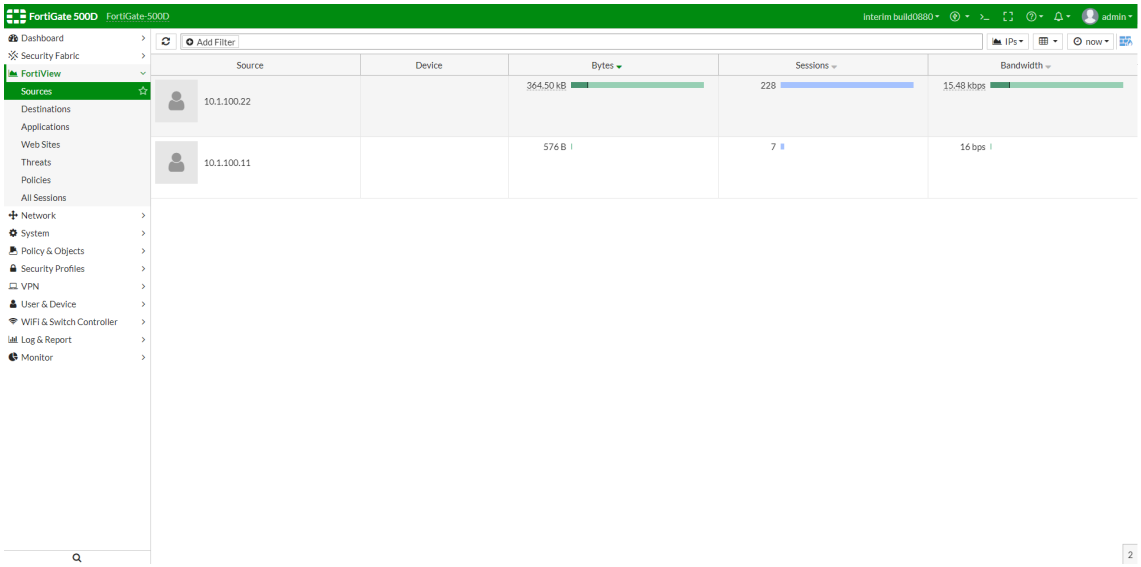



All non-core FortiView pages are available as dashboard widgets.

To add a FortiView widget in the dashboard:

1. Within the *Dashboard* menu, select the dashboard you wish to edit (in the example, *Top Usage LAN/DMZ*).
2. Click the gear button in the bottom-right corner of the screen.
3. Click *Add Widget*.
4. Under the *FortiView* section, select *FortiView Top N*. The *Add Dashboard Widget* pane opens.
5. Under the *FortiView* dropdown, select the widget. There are three submenus to choose from: *LAN/DMZ*, *WAN*, or *All Segments*.

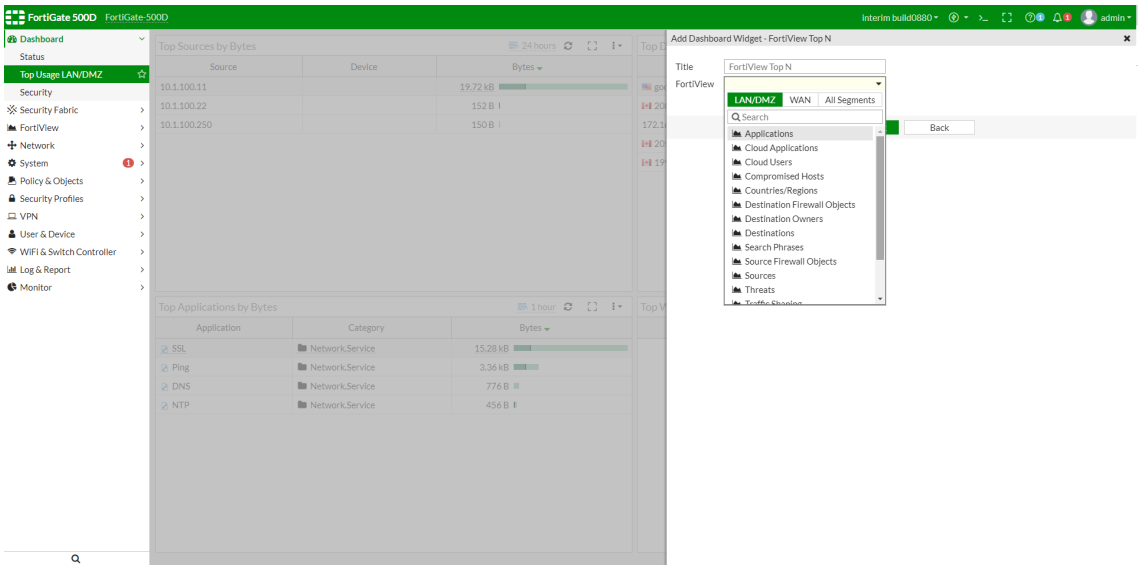
FortiGate 500D
FortiGate-500D
interim build0880
admin
Dashboard
Status
Top Usage LAN/DMZ
Security
Security Fabric
FortiView
Network
System
Policy & Objects
Security Profiles
VPN
User & Device
WiFi & Switch Controller
Log & Report
Monitor
Top Sources by Bytes
24 hours
Source
Device
Bytes
10.1.100.11
19.72 kB
10.1.100.22
152 B
10.1.100.250
150 B
Top Applications by Bytes
1 hour
Application
Category
Bytes
SSL
Network.Service
15.28 kB
Ping
3.36 kB
DNS
776 B
NTP
456 B
Add Dashboard Widget - FortiView Top N
Title
FortiView Top N
FortiView
LAN/DMZ
WAN
All Segments
Search
Back
Applications
Cloud Applications
Cloud Users
Compromised Hosts
Countries/Regions
Destination Firewall Objects
Destination Owners
Destinations
Search Phrases
Source Firewall Objects
Sources
Threats

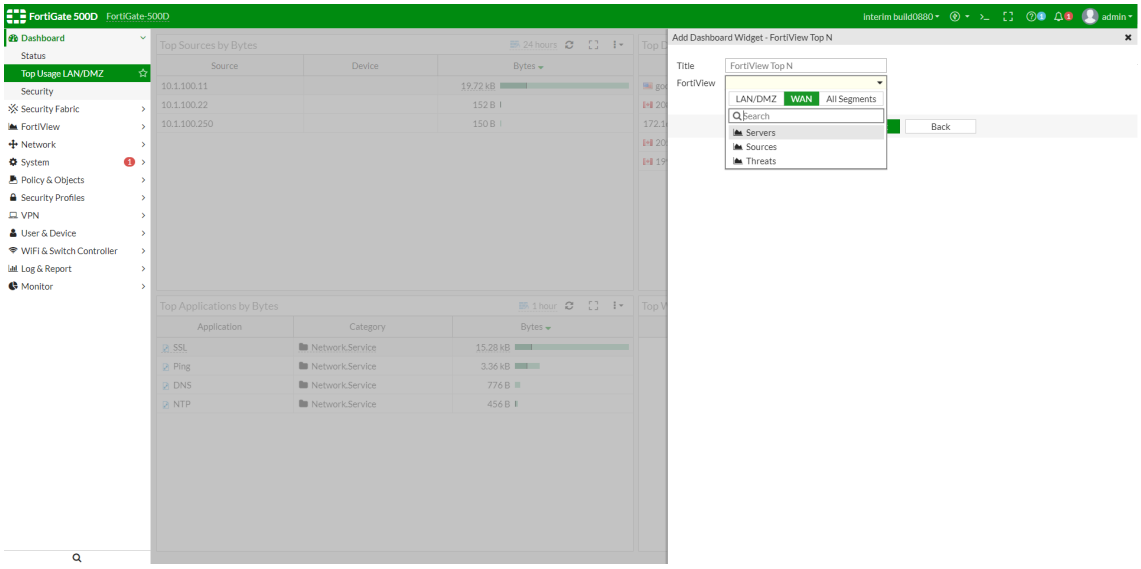
FortiGate 500D
FortiGate-500D
interim build0880
admin
Dashboard
Status
Top Usage LAN/DMZ
Security
Security Fabric
FortiView
Network
System
Policy & Objects
Security Profiles
VPN
User & Device
WiFi & Switch Controller
Log & Report
Monitor
Top Sources by Bytes
24 hours
Source
Device
Bytes
10.1.100.11
19.72 kB
10.1.100.22
152 B
10.1.100.250
150 B
Top Applications by Bytes
1 hour
Application
Category
Bytes
SSL
Network.Service
15.28 kB
Ping
3.36 kB
DNS
776 B
NTP
456 B
Add Dashboard Widget - FortiView Top N
Title
FortiView Top N
FortiView
LAN/DMZ
WAN
All Segments
Search
Back
Servers
Sources
Threats

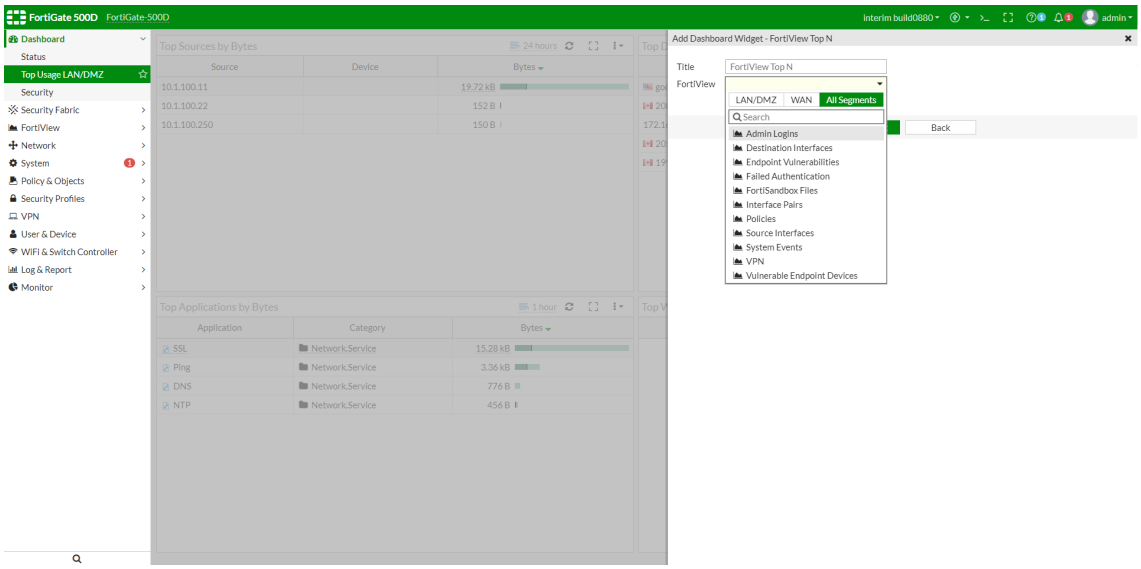


6. Configure the widget settings.
7. Click *Add Widget*.


VDOMs and dashboards

Once VDOMs are enabled, dashboards are created per VDOM.


- For example, if you add a *Sessions* widget to the root VDOM as shown below:

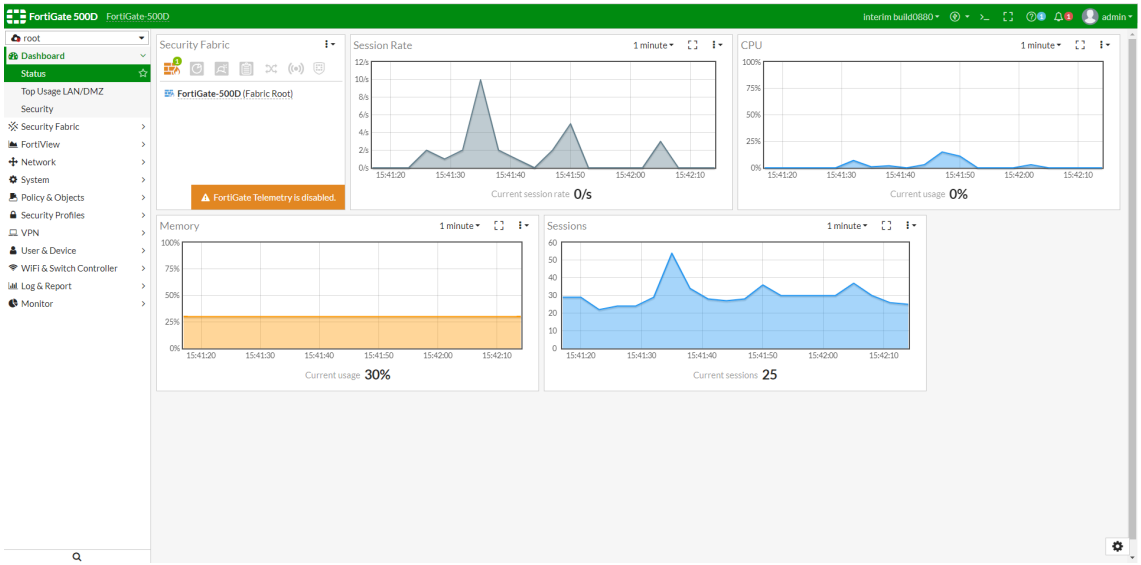

- Notice that other VDOMs have no data in the *Sessions* widget.

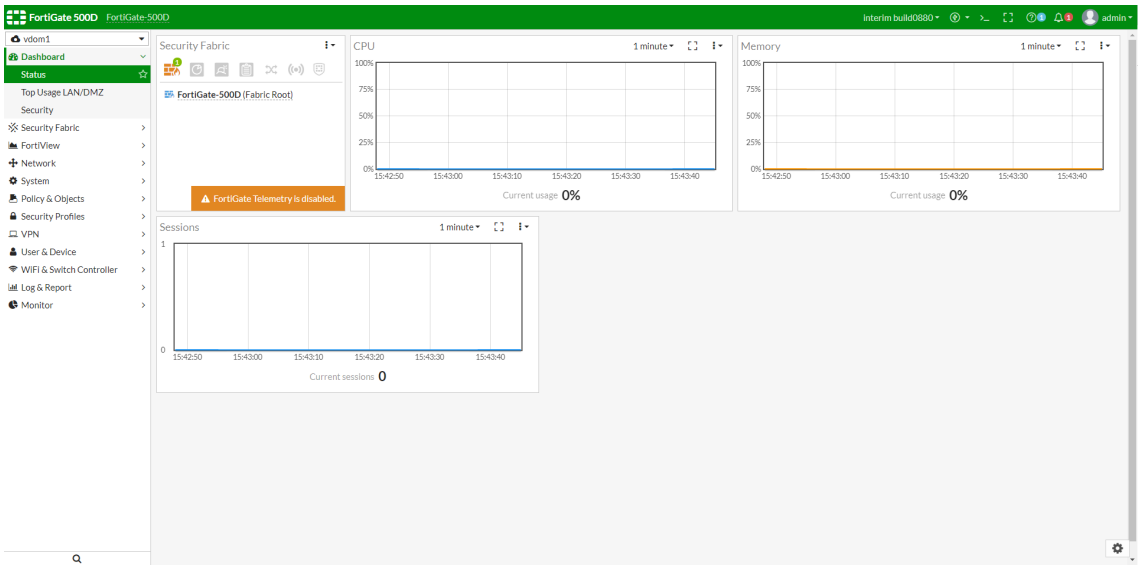

The *Threat Map* is available in the *Monitor* tree menu.

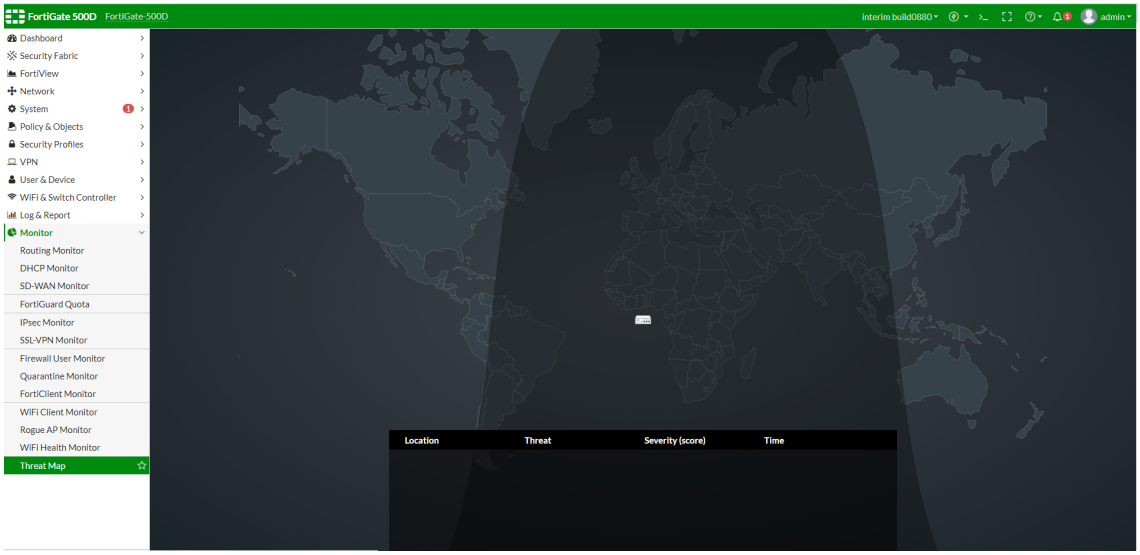

FortiView object names

The FortiView *Sources* and *Destinations* views leverage UUID to resolve firewall object (address) names for improved usability.

Requirements

- The *Firewall Objects*-based view is only available when the data source is disk.
- To have a historical *Firewall Objects*-based view, address objects' UUIDs need to be logged.

To enable address object UUID logging in the CLI:

```
config system global
     set log-uuid-address enable
end
```


Sample configuration


In this example, firewall addresses have been configured using the commands in To configure firewall addresses in the CLI: on page 314, and each firewall address object is associated with an unique UUID.

In the *Sources* and *Destinations* views, firewall objects can be displayed in real-time or in a historical chart. Objects can also be drilled down for more details.

To view Firewall Object-based charts in real-time:


1. In the FortiView tree menu, select the view (*Sources* or*Destinations*).
2. In the top right corner of the settings bar:
   a. Select *Firewall Objects* as the data criterion.
   b. Select *now* as the time criterion.

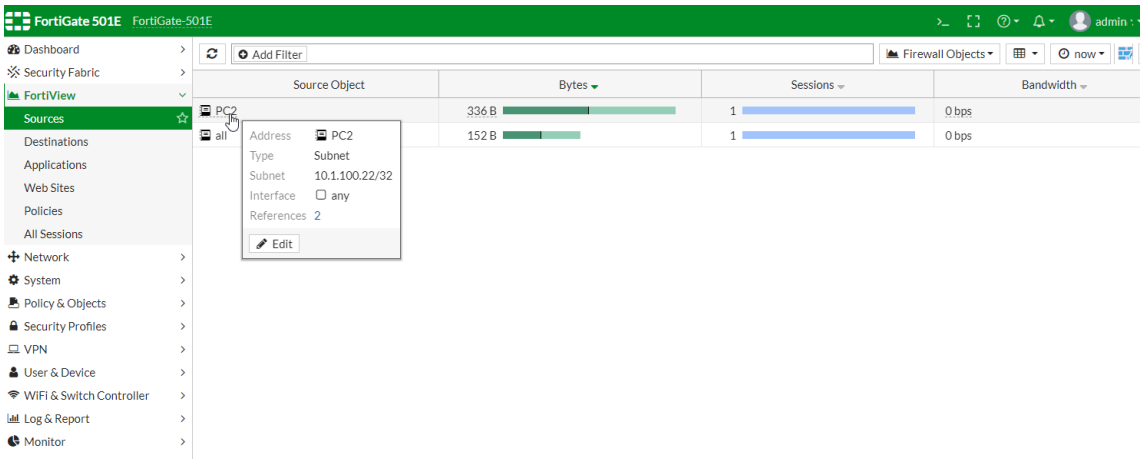


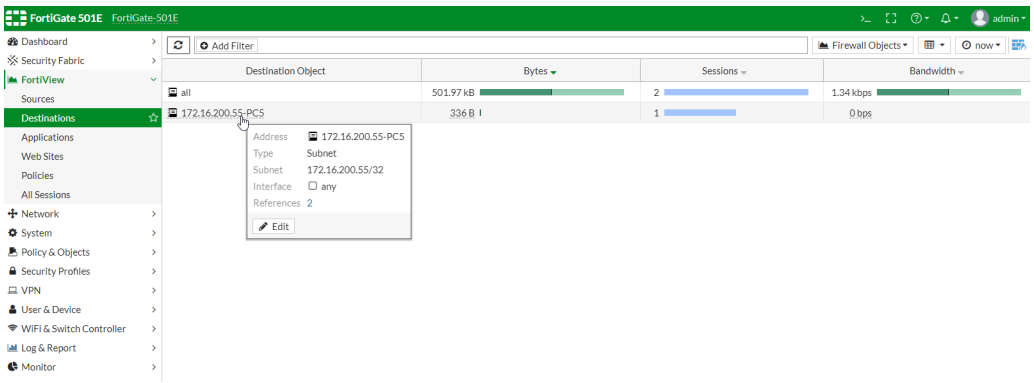

To view Firewall Object-based charts over a historical period:


1. In the FortiView menu, select the view (*Sources* or *Destinations*).
2. In the top right corner of the settings bar:
   a. Select *Firewall Objects* as the data criterion.
   b. Select a time criterion from the dropdown (in the examples, *5 minutes*).

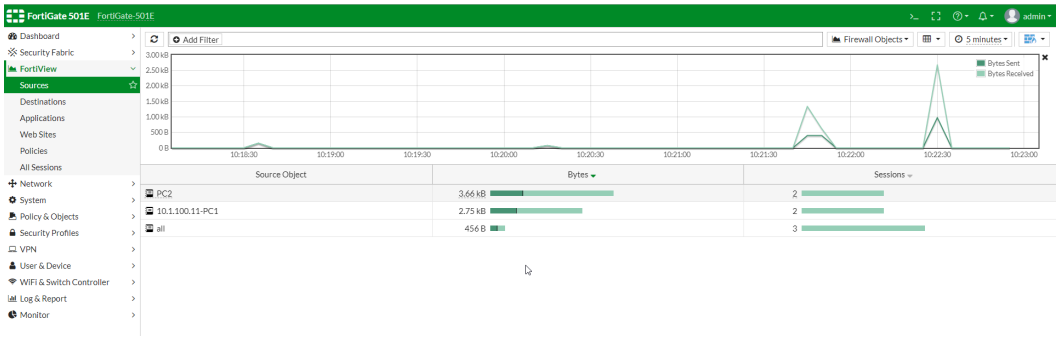

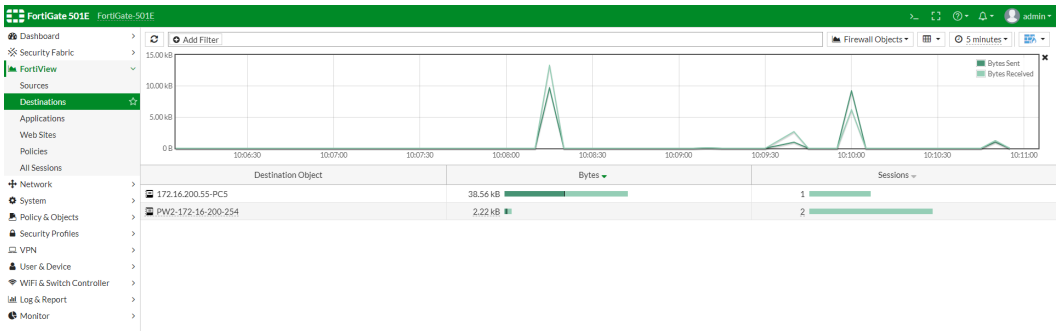


To drill down Firewall Objects:

1. Right-click on any *Source Object* or *Destination Object* in the view results.
2. Select *Drill Down to Details*. More information displays about the object; there are additional criteria to filter data.
   - This example shows a drill down of *PC2* from the *Sources* view.

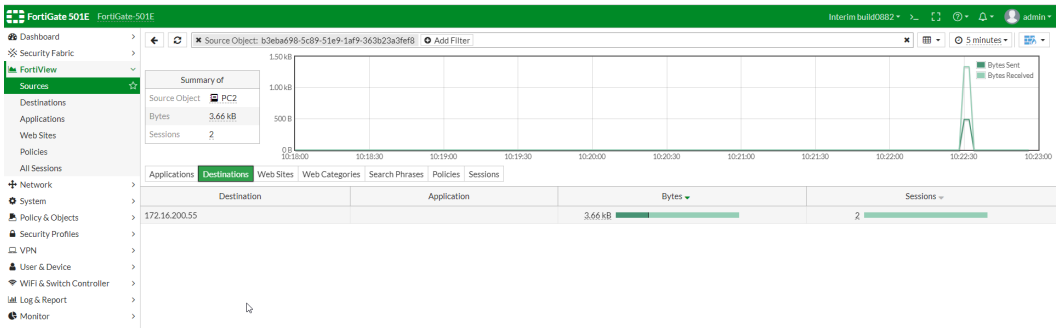

- This example shows a drill down of *172.16.200.55-PC5* from the *Destinations* view.

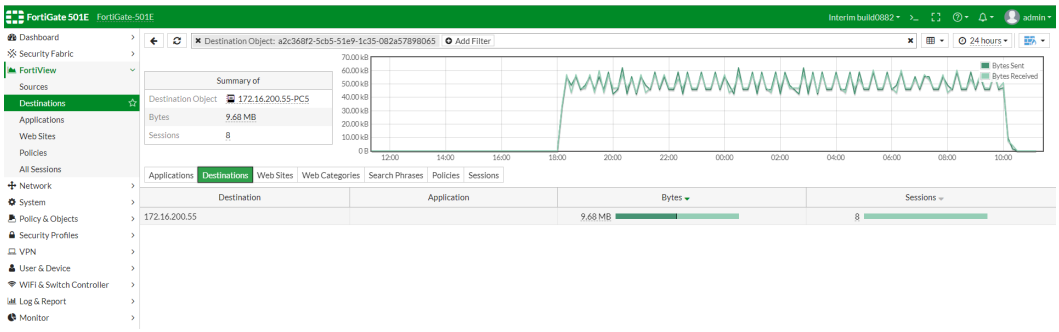

To configure firewall addresses in the CLI:

```
config firewall address
   edit "PC2"
        set uuid b3eba698-5c89-51e9-1af9-363b23a3fef8
        set subnet 10.1.100.22 255.255.255.255
    next
    edit "10.1.100.11-PC1"
        set uuid 96bcbca2-5cb5-51e9-bc02-465c0aab5e2c
        set subnet 10.1.100.11 255.255.255.255
    next
    edit "172.16.200.55-PC5"
        set uuid a2c368f2-5cb5-51e9-1c35-082a57898065
        set subnet 172.16.200.55 255.255.255.255
    next
    edit "PW2-172-16-200-254"
        set uuid def64b6a-5d45-51e9-5ab0-b0d0a3128098
        set subnet 172.16.200.254 255.255.255.255
    next
end
```

To configure the firewall policy with defined firewall addresses in the CLI:

```
config firewall policy
    edit 1
        set name "v4-out"
        set uuid 4825ff5a-dc94-51e8-eeab-e138bc255e4a
        set srcintf "port10"
        set dstintf "port9"
        set srcaddr "PC2" "10.1.100.11-PC1"
        set dstaddr "172.16.200.55-PC5" "PW2-172-16-200-254"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set inspection-mode proxy
        set logtraffic all
        set av-profile "default"
        set ssl-ssh-profile "custom-deep-inspection"
        set nat enable
    next
    edit 2
        set name "to-Internet"
```

```
        set uuid 28379372-5c8a-51e9-c765-cc755a07a200
        set srcintf "port10"
        set dstintf "port9"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set inspection-mode proxy
        set logtraffic all
        set av-profile "default"
        set nat enable
    next
end
```

Network

The following topics provide information about network settings:

- Interfaces on page 316
- DNS on page 353
- Explicit and transparent proxies on page 364
- SD-WAN on page 452
- DHCP server on page 401
- Static routing on page 406
- Multicast on page 428
- Direct IP support for LTE/4G on page 432
- LLDP reception on page 435
- NetFlow on page 437

Interfaces

Physical and virtual interfaces allow traffic to flow between internal networks, and between the internet and internal networks. FortiGate has options for setting up interfaces and groups of subnetworks that can scale as your organization grows. You can create and edit VLAN, EMAC-VLAN, switch interface, zones, and so on.

The following topics provide information about interfaces:

- Interface settings on page 316
- Aggregation and redundancy on page 321
- VLANs on page 323
- Enhanced MAC VLANs on page 329
- Inter-VDOM routing on page 332
- Software switch on page 337
- Hardware switch on page 339
- Zone on page 340
- Virtual Wire Pair on page 342
- Virtual switch support for FortiGate 300E series on page 344
- Failure detection for aggregate and redundant interfaces on page 346
- VLAN inside VXLAN on page 346
- Virtual Wire Pair with VXLAN on page 349
- Interface MTU packet size on page 350

Interface settings

Administrators can configure both physical and virtual FortiGate interfaces in *Network* > *Interfaces*. There are different options for configuring interfaces when FortiGate is in NAT mode or transparent mode.

To configure an interface in the GUI:

1. Go to *Network* > *Interfaces*.
2. Click *Create New* > *Interface*.

3. Configure the interface fields:

Interface Name	Physical interface names cannot be changed.
Alias	Enter an alternate name for a physical interface on the FortiGate unit. This field appears when you edit an existing physical interface. The alias does not appear in logs. The maximum length of the alias is 25 characters.
Type	The configuration type for the interface, such as VLAN or Software Switch.
Link Status	Indicates whether the interface is connected to a network or not (link status is up or down). This field is available when you edit an existing physical interface.
Interface	This field is available when *Type* is set to *VLAN*. Select the name of the physical interface that you want to add a VLAN interface to. Once created, the VLAN interface is listed below its physical interface in the *Interface* list. You cannot change the physical interface of a VLAN interface except when you add a new VLAN interface.
VLAN ID	This field is available when *Type* is set to *VLAN*. Enter the VLAN ID. The VLAN ID can be any number between 1 and 4094 and must match the VLAN ID added by the IEEE 802.1Q-compliant router or switch that is connected to the VLAN subinterface. The VLAN ID cannot be edited after the interface is added.
Virtual Domain	Select the virtual domain to add the interface to. Only administrator accounts with the *super_admin* profile can change the *Virtual Domain*.
Role	Set the role setting for the interface. Different settings will be shown or hidden when editing an interface depending on the role. • *LAN*: Used to connected to a local network of endpoints. It is default role for new interfaces. • *WAN*: Used to connected to the internet. When WAN is selected, the *Estimated bandwidth* setting is available, and the following settings are not: *DHCP server*, *Create address object matching subnet*, *Device detection*, *Security mode*, *One-arm sniffer*, *Dedicate to extension/fortiap modes*, and *Admission Control*.and will show Estimated Bandwidth settings. • *DMZ*: Used to connected to the DMZ. When selected, *DHCP server* and *Security mode* are not available. • *Undefined*: The interface has no specific role. When selected, *Create address object matching subnet* is not available.
Interface Members	This section can has different formats depending on the *Type*: *Software Switch*: This field is read-only, and shows the interfaces that belong to the virtual interface of the software switch. *802.3ad Aggregate* or *Redundant Interface*: This field includes the available and selected interface lists.

Addressing mode	Select the addressing mode for the interface. • *Manual*: Add an IP address and netmask for the interface. If IPv6 configuration is enabled,you can add both an IPv4 and an IPv6 address. • *DHCP*: Get the interface IP address and other network settings from a DHCP server. • *PPPoE*: Get the interface IP address and other network settings from a PPPoE server. This option is only available on the low-end FortiGate models.
IP/Netmask	If *Addressing Mode* is set to *Manual*, enter an IPv4 address and subnet mask for the interface. FortiGate interfaces cannot have multiple IP addresses on the same subnet.
IPv6 Address/Prefix	If *Addressing Mode* is set to *Manual* and IPv6 support is enabled, enter an IPv6 address and subnet mask for the interface. A single interface can have an IPv4 address, IPv6 address, or both.
Create address object matching subnet	This option is available when *Role* is set to *LAN* or *DMZ*. Enable this option to automatically create an address object that matches the interface subnet.
Secondary IP Address	Add additional IPv4 addresses to this interface.
IPv4 Administrative Access	Select the types of administrative access permitted for IPv4 connections to this interface. See Configure administrative access to interfaces on page 320.
IPv6 Administrative Access	Select the types of administrative access permitted for IPv6 connections to this interface. See Configure administrative access to interfaces on page 320.
DHCP Server	Select to enable a DHCP server for the interface.
Device Detection	Enable/disable passively gathering device identity information about the devices on the network that are connected to this interface.
Security Mode	Enable/disable captive portal authentication for this interface. After enabling captive portal authentication, you can configure the authentication portal, user and group access, custom portal messages, exempt sources and destinations/services, and redirect after captive portal.
Outbound shaping profile	Enable/disable traffic shaping on the interface. This allows you to enforce bandwidth limits on individual interfaces.
Comments	Enter a description of the interface of up to 255 characters.
Status	Enable/disable the interface. • *Enabled*: The interface is active and can accept network traffic. • *Disabled*: The interface is not active and cannot accept traffic.

4. Click *OK*.

To configure an interface in the CLI:

```
config system interface
    edit "<Interface_Name>"
        set vdom "<VDOM_Name>"
        set mode static/dhcp/pppoe
```

```
        set ip <IP_address> <netmask>
        set security-mode {none | captive-portal}
        set egress-shaping-profile <Profile_name>
        set device-identification {enable | disable}
        set allowaccess ping https ssh http
        set secondary-IP enable
        config secondaryip
            edit 1
                set ip 9.1.1.2 255.255.255.0
                set allowaccess ping https ssh snmp http
            next
        end
    next
end
```

Configure administrative access to interfaces

You can configure the protocols that administrators can use to access interfaces on the FortiGate. This helps secure access to the FortiGate by restricting access to a limited number of protocols. It helps prevent users from accessing interfaces that you don't want them to access, such as public-facing ports.

As a best practice, you should configure administrative access when you're setting the IP address for a port.

To configure administrative access to interfaces in the GUI:

1. Go to *Network* > *Interfaces*.
2. Create or edit an interface.
3. In the *Administrative Access* section, select which protocols to enable for *IPv4* and *IPv6 Administrative Access*.

HTTPS	Allow secure HTTPS connections to the FortiGate GUI through this interface. If configured, this option is enabled automatically.
HTTP	Allow HTTP connections to the FortiGate GUI through this interface. This option can only be enabled if HTTPS is already enabled.
PING	The interface responds to pings. Use this setting to verify your installation and for testing.
FMG-Access	Allow FortiManager authorization automatically during the communication exchanges between FortiManager and FortiGate devices.
SSH	Allow SSH connections to the CLI through this interface.
SNMP	Allow a remote SNMP manager to request SNMP information by connecting to this interface.
FTM	Allow FortiToken Mobile Push (FTM) access.
RADIUS Accounting	Allow RADIUS accounting information on this interface.
Security Fabric Connection	Allow Security Fabric access. This enables FortiTelemetry and CAPWAP.

Aggregation and redundancy

Link aggregation (IEEE 802.3ad) enables you to bind two or more physical interfaces together to form an aggregated (combined) link. This new link has the bandwidth of all the links combined. If a link in the group fails, traffic is transferred automatically to the remaining interfaces. The only noticeable effect is reduced bandwidth.

This feature is similar to redundant interfaces. The major difference is a redundant interface group only uses one link at a time, where an aggregate link group uses the total bandwidth of the functioning links in the group, up to eight (or more).

An interface is available to be an aggregate interface if:

- It is a physical interface and not a VLAN interface or subinterface.
- It is not already part of an aggregate or redundant interface.
- It is in the same VDOM as the aggregated interface. Aggregate ports cannot span multiple VDOMs.
- It does not have an IP address and is not configured for DHCP or PPPoE.
- It is not referenced in any security policy, VIP, IP Pool, or multicast policy.
- It is not an HA heartbeat interface.
- It is not one of the FortiGate-5000 series backplane interfaces.

When an interface is included in an aggregate interface, it is not listed on the *Network* > *Interfaces* page. Interfaces still appear in the CLI although configuration for those interfaces do not take affect. You cannot configure the interface individually and it is not available for inclusion in security policies, VIPs, IP pools, or routing.

Sample configuration

This example creates an aggregate interface on a FortiGate-140D POE using ports 3-5 with an internal IP address of 10.1.1.123, as well as the administrative access to HTTPS and SSH.

To create an aggregate interface using the GUI:

1. Go to *Network* > *Interfaces* and select *Create New* > *Interface*.
2. For *Interface Name*, enter *Aggregate*.
3. For the Type, select *802.3ad Aggregate*.
4. In the physical *Interface Members*, click to add interfaces and select ports 4, 5, and 6.
5. For *Addressing mode*, select *Manual*.
6. For the IP address for the port, enter *10.1.1.123/24*.
7. For *Administrative Access*, select *HTTPS* and *SSH*.
8. Select *OK*.

To create an aggregate interface using the CLI:

```
FG140P3G15800330 (aggregate) # show
config system interface
    edit "aggregate"
        set vdom "root"
        set ip 10.1.1.123 255.255.255.0
        set allowaccess ping https ssh snmp http fgfm radius-acct capwap ftm
        set type aggregate
        set member "port3" "port4" "port5"
        set device-identification enable
        set lldp-transmission enable
        set fortiheartbeat enable
```

```
        set role lan
        set snmp-index 45
    next
end
```

Redundancy

In a redundant interface, traffic only goes over one interface at any time. This differs from an aggregated interface where traffic goes over all interfaces for increased bandwidth. This difference means redundant interfaces can have more robust configurations with fewer possible points of failure. This is important in a fully-meshed HA configuration.

An interface is available to be in a redundant interface if:

- It is a physical interface and not a VLAN interface.
- It is not already part of an aggregated or redundant interface.
- It is in the same VDOM as the redundant interface.
- It does not have an IP address and is not configured for DHCP or PPPoE.
- It has no DHCP server or relay configured on it.
- It does not have any VLAN subinterfaces.
- It is not referenced in any security policy, VIP, or multicast policy.
- It is not monitored by HA.
- It is not one of the FortiGate-5000 series backplane interfaces.

When an interface is included in a redundant interface, it is not listed on the *Network* > *Interfaces* page. You cannot configure the interface individually and it is not available for inclusion in security policies, VIPs, or routing.

Sample configuration

To create a redundant interface using the GUI:

1. Go to *Network* > *Interfaces* and select *Create New* > *Interface*.
2. For *Interface Name*, enter *Redundant*.
3. For the Type, select *Redundant Interface*.
4. In the physical *Interface Members*, click to add interfaces and select ports 4, 5, and 6.
5. For *Addressing mode*, select *Manual*.
6. For the IP address for the port, enter *10.13.101.100/24*.
7. For *Administrative Access*, select *HTTPS* and *SSH*.
8. Select *OK*.

To create a redundant interface using the CLI:

```
config system interface
    edit "red"
        set vdom "root"
        set ip 10.13.101.100 255.255.255.0
        set allowaccess https http
        set type redundant
        set member "port4" "port5" "port6"
        set device-identification enable
        set role lan
        set snmp-index 9
```

```
    next
end
```

VLANs

Virtual Local Area Networks (VLANs) multiply the capabilities of your FortiGate unit and can also provide added network security. VLANs use ID tags to logically separate devices on a network into smaller broadcast domains. These smaller domains forward packets only to devices that are part of that VLAN domain. This reduces traffic and increases network security.

VLANs in NAT mode

In NAT mode, the FortiGate unit functions as a layer-3 device. In this mode, the FortiGate unit controls the flow of packets between VLANs and can also remove VLAN tags from incoming VLAN packets. The FortiGate unit can also forward untagged packets to other networks such as the Internet.

In NAT mode, the FortiGate unit supports VLAN trunk links with IEEE 802.1Q-compliant switches or routers. The trunk link transports VLAN-tagged packets between physical subnets or networks. When you add VLAN subinterfaces to the FortiGate's physical interfaces, the VLANs have IDs that match the VLAN IDs of packets on the trunk link. The FortiGate unit directs packets with VLAN IDs to subinterfaces with matching IDs.

You can define VLAN subinterfaces on all FortiGate physical interfaces. However, if multiple virtual domains are configured on the FortiGate unit, you only have access to the physical interfaces on your virtual domain. The FortiGate unit can tag packets leaving on a VLAN subinterface. It can also remove VLAN tags from incoming packets and add a different VLAN tag to outgoing packets.

Normally in VLAN configurations, the FortiGate unit's internal interface is connected to a VLAN trunk, and the external interface connects to an Internet router that is not configured for VLANs. In this configuration, the FortiGate unit can apply different policies for traffic on each VLAN interface connected to the internal interface, which results in less network traffic and better security.


Sample topology

In this example, two different internal VLAN networks share one interface on the FortiGate unit and share the connection to the Internet. This example shows that two networks can have separate traffic streams while sharing a single interface. This configuration can apply to two departments in a single company or to different companies.

There are two different internal network VLANs in this example. VLAN_100 is on the 10.1.1.0/255.255.255.0 subnet, and VLAN_200 is on the 10.1.2.0/255.255.255.0 subnet. These VLANs are connected to the VLAN switch.

The FortiGate internal interface connects to the VLAN switch through an 802.1Q trunk. The internal interface has an IP address of 192.168.110.126 and is configured with two VLAN subinterfaces (VLAN_100 and VLAN_200). The external interface has an IP address of 172.16.21.2 and connects to the Internet. The external interface has no VLAN subinterfaces.

When the VLAN switch receives packets from VLAN_100 and VLAN_200, it applies VLAN ID tags and forwards the packets of each VLAN both to local ports and to the FortiGate unit across the trunk link. The FortiGate unit has policies that allow traffic to flow between the VLANs, and from the VLANs to the external network.

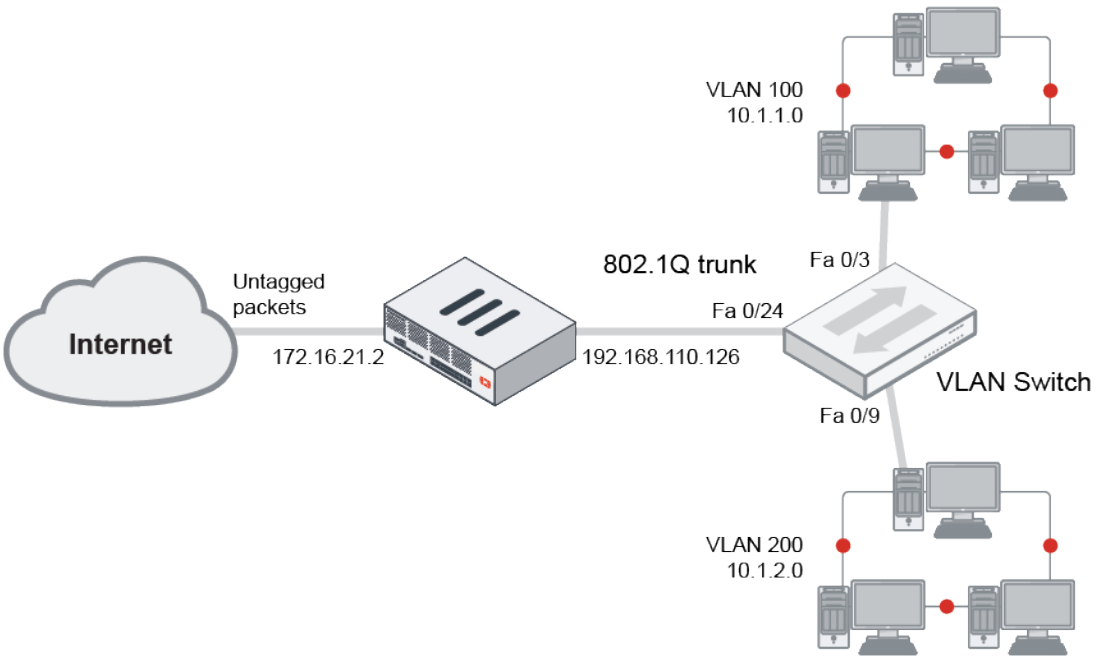

Sample configuration

In this example, both the FortiGate unit and the Cisco 2950 switch are installed and connected and basic configuration has been completed. On the switch, you need access to the CLI to enter commands. No VDOMs are enabled in this example.

General configuration steps include:

1. Configure the external interface.
2. Add two VLAN subinterfaces to the internal network interface.
3. Add firewall addresses and address ranges for the internal and external networks.
4. Add security policies to allow:
   - the VLAN networks to access each other.
   - the VLAN networks to access the external network.

To configure the external interface:

```
config system interface
    edit external
        set mode static
        set ip 172.16.21.2 255.255.255.0
end
```

To add VLAN subinterfaces:

```
config system interface
    edit VLAN_100
        set vdom root
        set interface internal
        set type vlan
        set vlanid 100
```

```
        set mode static
        set ip 10.1.1.1 255.255.255.0
        set allowaccess https ping
    next
    edit VLAN_200
        set vdom root
        set interface internal
        set type vlan
        set vlanid 200
        set mode static
        set ip 10.1.2.1 255.255.255.0
        set allowaccess https ping
end
```

To add the firewall addresses:

```
config firewall address
    edit VLAN_100_Net
        set type ipmask
        set subnet 10.1.1.0 255.255.255.0
    next
    edit VLAN_200_Net
        set type ipmask
        set subnet 10.1.2.0 255.255.255.0
end
```

To add security policies:

Policies 1 and 2 do not need NAT enabled, but policies 3 and 4 do need NAT enabled.

```
config firewall policy
    edit 1
        set srcintf VLAN_100
        set srcaddr VLAN_100_Net
        set dstintf VLAN_200
        set dstaddr VLAN_200_Net
        set schedule always
        set service ALL
        set action accept
        set nat disable
        set status enable
    next
    edit 2
        set srcintf VLAN_200
        set srcaddr VLAN_200_Net
        set dstintf VLAN_100
        set dstaddr VLAN_100_Net
        set schedule always
        set service ALL
        set action accept
        set nat disable
        set status enable
    next
    edit 3
        set srcintf VLAN_100
        set srcaddr VLAN_100_Net
```

```
        set dstintf external
        set dstaddr all
        set schedule always
        set service ALL
        set action accept
        set nat enable
        set status enable
    next
    edit 4
        set srcintf VLAN_200
        set srcaddr VLAN_200_Net
        set dstintf external
        set dstaddr all
        set schedule always
        set service ALL
        set action accept
        set nat enable
        set status enable
    end
```

VLANs in transparent mode

In transparent mode, the FortiGate unit behaves like a layer-2 bridge but can still provide services such as antivirus scanning, web filtering, spam filtering, and intrusion protection to traffic. Some limitations of transparent mode is that you cannot use SSL VPN, PPTP/L2TP VPN, DHCP server, or easily perform NAT on traffic. The limits in transparent mode apply to IEEE 802.1Q VLAN trunks passing through the unit.

You can insert the FortiGate unit operating in transparent mode into the VLAN trunk without making changes to your network. In a typical configuration, the FortiGate unit internal interface accepts VLAN packets on a VLAN trunk from a VLAN switch or router connected to internal network VLANs. The FortiGate external interface forwards VLAN-tagged packets through another VLAN trunk to an external VLAN switch or router and on to external networks such as the Internet. You can configure the unit to apply different policies for traffic on each VLAN in the trunk.

To pass VLAN traffic through the FortiGate unit, you add two VLAN subinterfaces with the same VLAN ID, one to the internal interface and the other to the external interface. You then create a security policy to permit packets to flow from the internal VLAN interface to the external VLAN interface. If required, create another security policy to permit packets to flow from the external VLAN interface to the internal VLAN interface. Typically in transparent mode, you do not permit packets to move between different VLANs. Network protection features such as spam filtering, web filtering, and anti-virus scanning, are applied through the UTM profiles specified in each security policy, enabling very detailed control over traffic.

When the FortiGate unit receives a VLAN-tagged packet on a physical interface, it directs the packet to the VLAN subinterface with the matching VLAN ID. The VLAN tag is removed from the packet and the FortiGate unit then applies security policies using the same method it uses for non-VLAN packets. If the packet exits the FortiGate unit through a VLAN subinterface, the VLAN ID for that subinterface is added to the packet and the packet is sent to the corresponding physical interface.


Sample topology

In this example, the FortiGate unit is operating in transparent mode and is configured with two VLANs: one with an ID of 100 and the other with ID 200. The internal and external physical interfaces each have two VLAN subinterfaces, one for VLAN_100 and one for VLAN_200.

The IP range for the internal VLAN_100 network is 10.100.0.0/255.255.0.0, and for the internal VLAN_200 network is 10.200.0.0/255.255.0.0.

The internal networks are connected to a Cisco 2950 VLAN switch which combines traffic from the two VLANs onto one in the FortiGate unit's internal interface. The VLAN traffic leaves the FortiGate unit on the external network interface, goes on to the VLAN switch, and on to the Internet. When the FortiGate units receives a tagged packet, it directs it from the incoming VLAN subinterface to the outgoing VLAN subinterface for that VLAN.

In this example, we create a VLAN subinterface on the internal interface and another one on the external interface, both with the same VLAN ID. Then we create security policies that allow packets to travel between the VLAN_100_int interface and the VLAN_100_ext interface. Two policies are required: one for each direction of traffic. The same is required between the VLAN_200_int interface and the VLAN_200_ext interface, for a total of four security policies.

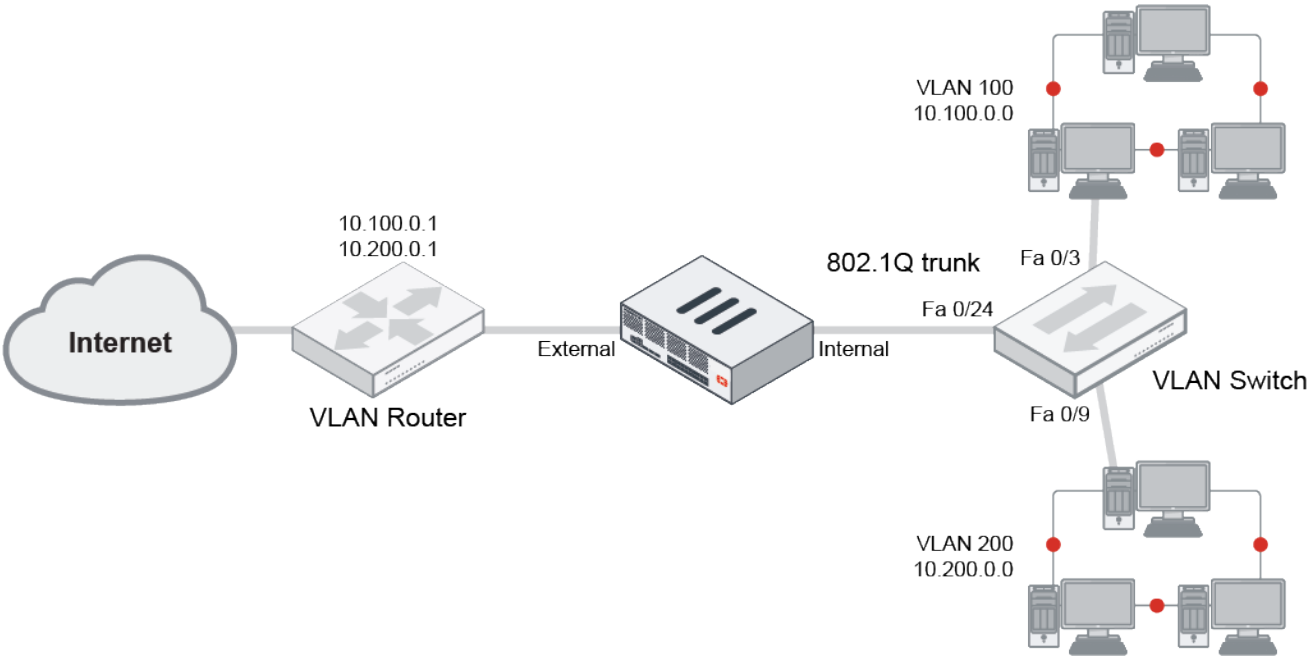

Sample configuration

There are two main steps to configure your FortiGate unit to work with VLANs in transparent mode:

1. Add VLAN subinterfaces.
2. Add security policies.

You can also configure the protection profiles that manage antivirus scanning, web filtering, and spam filtering.

To add VLAN subinterfaces:

```
config system interface
    edit VLAN_100_int
        set type vlan
        set interface internal
        set vlanid 100
    next
    edit VLAN_100_ext
        set type vlan
        set interface external
```

```
        set vlanid 100
    next
    edit VLAN_200_int
        set type vlan
        set interface internal
        set vlanid 200
    next
    edit VLAN_200_ext
        set type vlan
        set interface external
        set vlanid 200
    end
```

To add security policies:

```
config firewall policy
    edit 1
        set srcintf VLAN_100_int
        set srcaddr all
        set dstintf VLAN_100_ext
        set dstaddr all
        set action accept
        set schedule always
        set service ALL
    next
    edit 2
        set srcintf VLAN_100_ext
        set srcaddr all
        set dstintf VLAN_100_int
        set dstaddr all
        set action accept
        set schedule always
        set service ALL
    next
    edit 3
        set srcintf VLAN_200_int
        set srcaddr all
        set dstintf VLAN_200_ext
        set dstaddr all
        set action accept
        set schedule always
        set service ALL
    next
    edit 4
        set srcintf VLAN_200_ext
        set srcaddr all
        set dstintf VLAN_200_int
        set dstaddr all
        set action accept
        set schedule always
        set service ALL
end
```

Enhanced MAC VLANs

The Media Access Control (MAC) Virtual Local Area Network (VLAN) feature in Linux allows you to configure multiple virtual interfaces with different MAC addresses (and therefore different IP addresses) on a physical interface.

FortiGate implements an enhanced MAC VLAN consisting of a MAC VLAN with bridge functionality. Because each MAC VLAN has a unique MAC address, virtual IP addresses (VIPs) and IP pools are supported, and you can disable Source Network Address Translation (SNAT) in policies.

MAC VLAN cannot be used in a transparent mode virtual domain (VDOM). In a transparent mode VDOM, a packet leaves an interface with the MAC address of the original source instead of the interface's MAC address. FortiGate implements an enhanced version of MAC VLAN where it adds a MAC table in the MAC VLAN which learns the MAC addresses when traffic passes through.

If you configure a VLAN ID for an enhanced MAC VLAN, it won't join the switch of the underlying interface. When a packet is sent to this interface, a VLAN tag is inserted in the packet and the packet is sent to the driver of the underlying interface. When the underlying interface receives a packet, if the VLAN ID doesn't match, it won't deliver the packet to this enhanced MAC VLAN interface.



When using a VLAN ID, the ID and the underlying interface must be a unique pair, even if the belong to different VDOMs. This is because the underlying, physical interface uses the VLAN ID as the identifier to dispatch traffic among the VLAN and enhanced MAC VLAN interfaces.

If you use an interface in an enhanced MAC VLAN, do not use it for other purposes such as a management interface, HA heartbeat interface, or in Transparent VDOMs.


If a physical interface is used by an EMAC VLAN interface, you cannot use it in a Virtual Wire Pair.

In high availability (HA) configurations, enhanced MAC VLAN is treated as a physical interface. It's assigned a unique physical interface ID and the MAC table is synchronized with the secondary devices in the same HA cluster.

Example 1: Enhanced MAC VLAN configuration for multiple VDOMs that use the same interface or VLAN

In this example, a FortiGate is connected, through port 1 to a router that's connected to the Internet. Three VDOMs share the same interface (port 1) which connects to the same router that's connected to the Internet. Three enhanced MAC VLAN interfaces are configured on port 1 for the three VDOMs. The enhanced MAC VLAN interfaces are in the same IP subnet segment and each have unique MAC addresses.

The underlying interface (port 1) can be a physical interface, an aggregate interface, or a VLAN interface on a physical or aggregate interface.

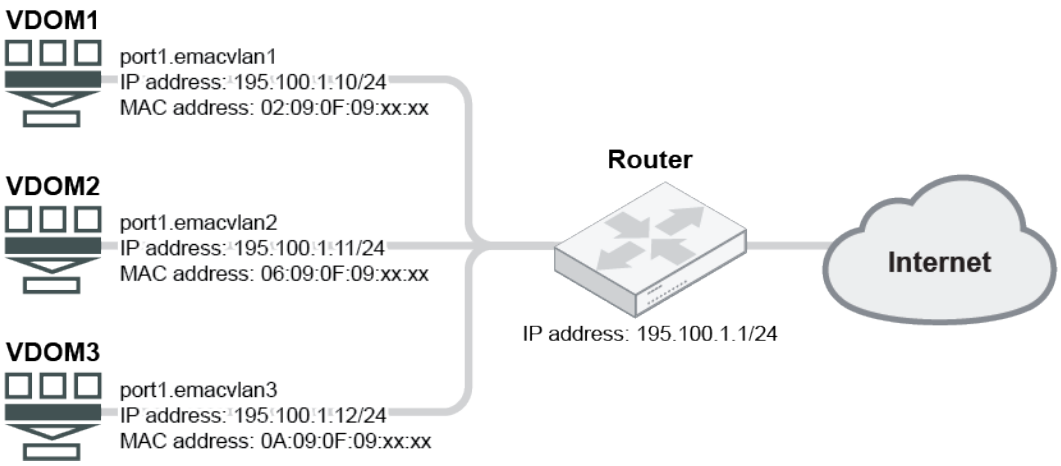


To configure enhanced MAC VLAN for this example in the CLI:

```
config system interface
    edit port1.emacvlan1
        set vdom VDOM1
        set type emac-vlan
        set interface port1
    next
    edit port 1.emacvlan2
        set vdom VDOM2
        set type emac-vlan
        set interface port1
    next
    edit port1.emacvlan3
        set vdom VDOM3
        set type emac-vlan
        set interface port1
    next
end
```

Example 2: Enhanced MAC VLAN configuration for shared VDOM links among multiple VDOMs

In this example, multiple VDOMs can connect to each other using enhanced MAC VLAN on network processing unit (NPU) virtual link (Vlink) interfaces.

FortiGate VDOM links (NPU-Vlink) are designed to be peer-to-peer connections and VLAN interfaces on NPU Vlink ports use the same MAC address. Connecting more than two VDOMs using NPU Vlinks and VLAN interfaces is not recommended.

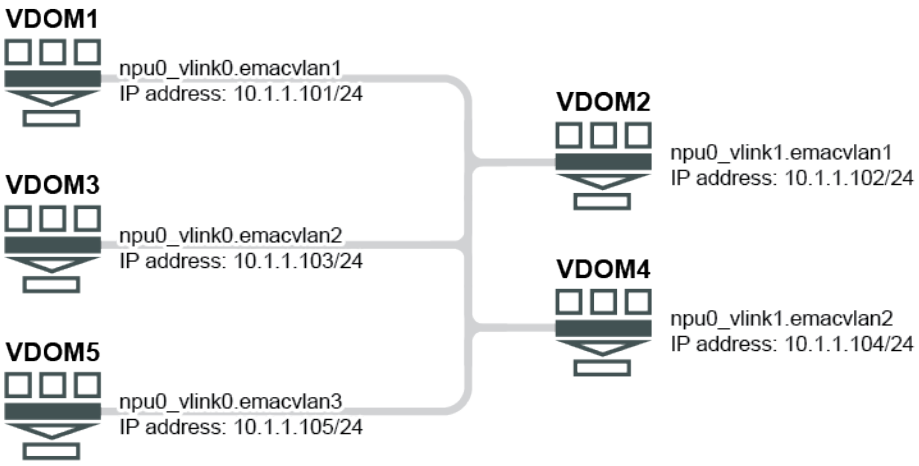

To configure enhanced MAC VLAN for this example in the CLI:

```
config system interface
    edit npu0_vlink0.emacvlan1
        set vdom VDOM1
        set type emac-vlan
        set interface npu0_vlink0
    next
    edit npu0_vlink0.emacvlan2
        set vdom VDOM3
        set type emac-vlan
        set interface npu0_vlink0
    next
    edit npu0_vlink1.emacvlan1
        set vdom VDOM2
        set type emac-vlan
        set interface npu0_vlink1
    next
end
```

Example 3: Enhanced MAC VLAN configuration for unique MAC addresses for each VLAN interface on the same physical port

Some networks require a unique MAC address for each VLAN interface when the VLAN interfaces share the same physical port. In this case, the enhanced MAC VLAN interface is used the same way as normal VLAN interfaces.

To configure this, use the `set vlanid` command for the VLAN tag. The VLAN ID and interface must be a unique pair, even if they belong to different VDOMs.

To configure enhanced MAC VLAN:

```
config system interface
    edit <interface-name>
        set type emac-vlan
        set vlanid <VLAN-ID>
        set interface <physical-interface>
    next
end
```

Inter-VDOM routing

In the past, virtual domains (VDOMs) were separate from each other and there was no internal communication. Any communication between VDOMs involved traffic leaving on a physical interface belonging to one VDOM and re-entering the FortiGate unit on another physical interface belonging to another VDOM to be inspected by firewall policies in both directions.

Inter-VDOM routing changes this. With VDOM links, VDOMs can communicate internally without using additional physical interfaces.

Inter-VDOM routing is the communication between VDOMs. VDOM links are virtual interfaces that connect VDOMs. A VDOM link contains a pair of interfaces, each one connected to a VDOM and forming either end of the inter-VDOM connection.

When VDOMs are configured on your FortiGate unit, configuring inter-VDOM routing and VDOM-links is very much like creating a VLAN interface. VDOM-links are managed through the web-based manager or CLI. In the web-based manager, VDOM link interfaces are managed in the network interface list.



VDOM link does not support traffic offload. If you want to use traffic offload, use NPU-VDOM-LINK.

To configure a VDOM link in the GUI:

1. Go to *Network* > *Interfaces*.
2. Click *Create New* > *VDOM Link*.
3. Configure the fields including the *Name*, *Virtual Domain*, IP information, access levels, and other fields.



By default, VDOM links are created as point-to-point (ppp) links. If required, the link type can be changed in the CLI.

For example, when running OSPF in IPv6, a link-local address is required in order to communicate with OSPF neighbors. For a VDOM link to obtain a link-local address its type must be set to `ethernet`.

To configure a VDOM link in the CLI:

```
config system vdom-link
    edit "<vdom-link-name>"
        set type {ppp | ethernet}    <--Optional
    next
end
config system interface
    edit "<vdom-link-name0>"
        set vdom "<VDOM Name>"
        set type vdom-link
    next
    edit "<vdom-link-name1>"
        set vdom "<VDOM Name>"
        set type vdom-link
    next
end
```


To delete a VDOM link in the GUI:

1. Go to *Network* > *Interfaces*.
2. Select a *VDOM Link* and click *Delete*.

To delete a VDOM link in the CLI:

```
config system vdom-link
    delete <VDOM-LINK-Name>
end
```

Sample configuration: Inter-VDOM routing

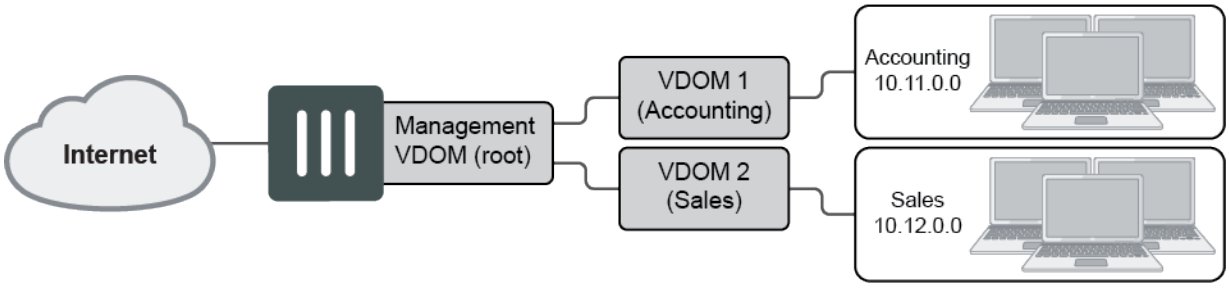

This example shows how to configure a FortiGate unit to use inter-VDOM routing.

Two departments of a company, Accounting and Sales, are connected to one FortiGate. The company uses a single ISP to connect to the Internet.

This example includes the following general steps. We recommend following the steps in the order below.

Create the VDOMs

To enable VDOMs and create the Sales and Accounting VDOMs:

```
config system global
    set vdom-mode multi-vdom
end
config system vdom
    edit Accounting
    next
    edit Sales
    next
end
```

Configure the physical interfaces

Next, configure the physical interfaces. This example uses three interfaces on the FortiGate unit: port2 (internal), port3 (DMZ), and port1 (external). Port2 and port3 interfaces each have a department's network connected. Port1 is for all traffic to and from the Internet and uses DHCP to configure its IP address, which is common with many ISPs.

To configure the interfaces:

```
config global
    config system interface
        edit port2
            set alias AccountingLocal
            set vdom Accounting
            set mode static
            set ip 172.100.1.1 255.255.0.0
            set allowaccess https ping ssh
            set description "The accounting dept internal interface"
        next
        edit port3
            set alias SalesLocal
            set vdom Sales
            set mode static
            set ip 192.168.1.1 255.255.0.0
            set allowaccess https ping ssh
            set description "The sales dept. internal interface"
        next
        edit port1
            set alias ManagementExternal
            set vdom root
            set mode DHCP
            set distance 5
            set gwdetect enable
            set dns-server-override enable
            set allowaccess https ssh snmp
            set description "The systemwide management interface."
        next
    end
end
```

Configure the VDOM links

To complete the connection between each VDOM and the management VDOM, add the two VDOM links. One pair is the Accounting – management link and the other is the Sales – management link.

When configuring inter-VDOM links, you do not have to assign IP addresses to the links unless you are using advanced features such as dynamic routing that require them. Not assigning IP addresses results in faster configuration and more available IP addresses on your networks.

To configure the Accounting and management VDOM link:

```
config global
    config system vdom-link
        edit AccountVlnk
        next
    end
    config system interface
        edit AccountVlnk0
            set vdom Accounting
            set ip 11.11.11.2 255.255.255.0
            set allowaccess https ping ssh
            set description "Accounting side of the VDOM link"
        next
```

```
        edit AccountVlnk1
            set vdom root
            set ip 11.11.11.1 255.255.255.0
            set allowaccess https ping ssh
            set description "Management side of the VDOM link"
        next
    end
end
```

To configure the Sales and management VDOM link:

```
config global
    config system vdom-link
        edit SalesVlnk
        next
    end
    config system interface
        edit SalesVlnk0
            set vdom Sales
            set ip 12.12.12.2 255.255.255.0
            set allowaccess https ping ssh
            set description "Sales side of the VDOM link"
        next
        edit SalesVlnk1
            set vdom root
            set ip 12.12.12.1 255.255.255.0
            set allowaccess https ping ssh
            set description "Management side of the VDOM link"
        next
    end
end
```

Configure the firewall and security profile

With the VDOMs, physical interfaces, and VDOM links configured, the firewall must now be configured to allow the proper traffic. Firewalls are configured per-VDOM, and firewall objects and routes must be created for each VDOM separately.

To configure the firewall policies from AccountingLocal to Internet:

```
config vdom
    edit Accounting
        config firewall policy
            edit 1
                set name "Accounting-Local-to-Management"
                set srcintf port2
                set dstintf AccountVlnk
                set srcaddr all
                set dstaddr all
                set action accept
                set schedule always
                set service ALL
                set nat enable
            next
        end
```

```
    next
    edit root
        config firewall policy
            edit 2
                set name "Accounting-VDOM-to-Internet"
                set srcintf AccountVlnk
                set dstintf port1
                set srcaddr all
                set dstaddr all
                set action accept
                set schedule always
                set service ALL
                set nat enable
            next
        end
    next
end
```

To configure the firewall policies from SalesLocal to the Internet:

```
config vdom
    edit root
        config firewall policy
            edit 6
                set name "Sales-local-to-Management"
                set srcintf port2
                set srcaddr all
                set dstintf SalesVlnk
                set dstaddr all
                set schedule always
                set service ALL
                set action accept
                set logtraffic enable
            next
        end
    next
    edit Sales
        config firewall policy
            edit 7
                set name "Sales-VDOM-to-Internet"
                set srcintf SalesVlnk
                set srcaddr SalesManagement
                set dstintf external
                set dstaddr all
                set schedule always
                set service OfficeServices
                set action accept
                set logtraffic enable
            next
        end
    next
end
```

Test the configuration

When the inter-VDOM routing has been configured, test the configuration to confirm proper operation.

Testing connectivity ensures that physical networking connections, FortiGate unit interface configurations, and firewall policies are properly configured.

The easiest way to test connectivity is to use the `ping` and `traceroute` command to confirm the connectivity of different routes on the network.

Test both from AccountingLocal to Internet and from SalesLocal to Internet.

Software switch

A software switch, or soft switch, is a virtual switch that is implemented at the software or firmware level and not at the hardware level. A software switch can be used to simplify communication between devices connected to different FortiGate interfaces. For example, using a software switch, you can place the FortiGate interface connected to an internal network on the same subnet as your wireless interfaces. Then devices on the internal network can communicate with devices on the wireless network without any additional configuration on the FortiGate unit, such as additional security policies.

A software switch can also be useful if you require more hardware ports for the switch on a FortiGate unit. For example, if your FortiGate unit has a 4-port switch, WAN1, WAN2, and DMZ interfaces, and you need one more port, you can create a soft switch that can include the four-port switch and the DMZ interface, all on the same subnet. These types of applications also apply to wireless interfaces, virtual wireless interfaces, and physical interfaces such as those in FortiWiFi and FortiAP units.

Similar to a hardware switch, a software switch functions like a single interface. A soft switch has one IP address and all the interfaces in the software switch are on the same subnet. Traffic between devices connected to each interface are not regulated by security policies, and traffic passing in and out of the switch are controlled by the same policy.

When setting up a software switch, consider the following:

- Ensure you have a back up of the configuration.
- Ensure you have at least one port or connection such as the console port to connect to the FortiGate unit. If you accidentally combine too many ports, you need a way to undo errors.
- The ports that you include must not have any link or relation to any other aspect of the FortiGate unit, such as DHCP servers, security policies, and so on.
- For increased security, you can create a captive portal for the switch to allow only specific user groups access to the resources connected to the switch.

Some of the difference between software and hardware switches are:

Feature	Software switch	Hardware switch
Processing	Packets are processed in software by the CPU.	Packets are processed in hardware by the hardware switch controller, or SPU where applicable.
STP	Not Supported	Supported
Wireless SSIDs	Supported	Not Supported
Intra-switch traffic	Allowed by default. Can be explicitly set to require a policy.	Allowed by default.

To create a software switch in the GUI:

1. Go to *Network* > *Interfaces*.
2. Click *Create New* > *Interface*.
3. Set *Type* to *Software Switch*.
4. Configure the *Interface Name*, *Virtual Domain*, *Interface Members*, and other fields.

To create a software switch in the CLI:

```
config system switch-interface
    edit <switch-name>
        set type switch
        set member <interface_list>
    next
end
config system interface
    edit <switch_name>
        set ip <ip_address>
        set allowaccess https ssh ping
    next
end
```

Sample configuration: software switch

For this example, the wireless interface (WiFi) needs to be on the same subnet as the DMZ1 interface to facilitate wireless syncing from an iPhone and a local computer. Because synching between two subnets is problematic, putting both interfaces on the same subnet the synching will work. The software switch will accomplish this.

1. Clear the interfaces and back up the configuration.
   a. Ensure the interfaces are not used for other security policy or for other use on the FortiGate unit.
   b. Check the WiFi and DMZ1 ports to ensure DHCP is not enabled on the interface and that there are no other dependencies on these interfaces.
   c. Save the current configuration so that if something doesn't work, recovery can be quick.
2. Merge the interfaces.
   Merge the WiFi port and DMZ1 port to create a software switch named `synchro` with an IP address of 10.10.21.12.
   Use the following CLI commands to create the switch, add the IP, and then set the administrative access for HTTPS, SSH and Ping.

   ```
   config system switch-interface
       edit synchro
           set type switch
           set member dmz1 wifi
       next
   end
   config system interface
       edit synchro
           set ip 10.10.21.12
           set allowaccess https ssh ping
       next
   end
   ```

   When the soft switch is set up, you now add security policies, DHCP servers, and any other configuration you normally do to configure interfaces on the FortiGate unit.

Hardware switch

A hardware switch is a virtual switch interface that groups different ports together so that the FortiGate can use the group as a single interface. Supported FortiGate models have a default hardware switch called either *internal* or *lan*. The hardware switch is supported by the chipset at the hardware level.


Ports that are connected to the same hardware switch behave like they are on the same physical switch in the same broadcast domain. Ports can be removed from a hardware switch and assigned to another switch or used as standalone interfaces.

Some of the difference between hardware and software switches are:

Feature	Hardware switch	Software switch
Processing	Packets are processed in hardware by the hardware switch controller, or SPU where applicable.	Packets are processed in software by the CPU.
STP	Supported	Not Supported
Wireless SSIDs	Not Supported	Supported
Intra-switch traffic	Allowed by default.	Allowed by default. Can be explicitly set to require a policy.

To change the ports in a hardware switch in the GUI:

1. Go to *Network* > *Interface* and edit the hardware switch.
2. Click inside the *Interface members* field.

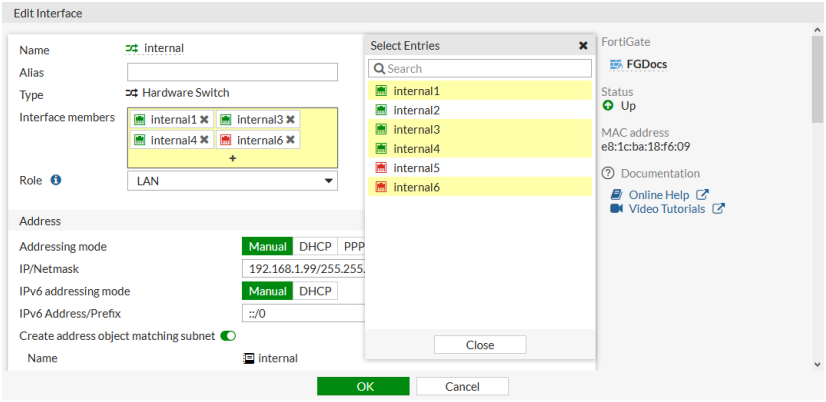

3. Select interfaces to add or remove them from the hardware switch, then click *Close*. Only available interfaces will be listed.
4. Click *OK*.
   Removed interfaces will now be listed as standalone interfaces in the *Physical Interface* section.

To remove ports from a hardware switch in the CLI:

```
config system virtual-switch
    edit "internal"
        config port
            delete internal2
```

```
            delete internal5
        end
    next
end
```

To add ports to a hardware switch in the CLI:

```
config system virtual-switch
    edit "internal"
        set physical-switch "sw0"
        config port
            edit "internal1"
            next
            edit "internal3"
            next
            edit "internal4"
            next
            edit "internal6"
            next
        end
    next
end
```

Zone


Zones are a group of one or more physical or virtual FortiGate interfaces that you can apply security policies to control inbound and outbound traffic. Grouping interfaces and VLAN subinterfaces into zones simplifies the creation of security policies where a number of network segments can use the same policy settings and protection profiles.

When you add a zone, you select the names of the interfaces and VLAN subinterfaces to add to the zone. Each interface still has its own address. Routing is still done between interfaces, that is, routing is not affected by zones. You can use security policies to control the flow of intra-zone traffic.

For example, in the sample configuration below, the network includes three separate groups of users representing different entities on the company network. While each group has its own set of ports and VLANs in each area, they can all use the same security policy and protection profiles to access the Internet. Rather than the administrator making nine separate security policies, he can make administration simpler by adding the required interfaces to a zone and creating three policies.

Sample configuration

You can configure policies for connections to and from a zone but not between interfaces in a zone. For this example, you can create a security policy to go between zone 1 and zone 3, but not between WAN2 and WAN1, or WAN1 and DMZ1.

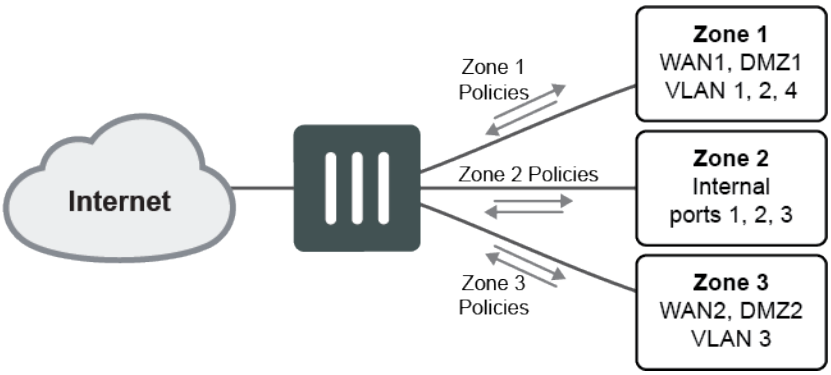

To create a zone in the GUI:

1. Go to *Network* > *Interfaces*.

   If VDOMs are enabled, go to the VDOM to create a zone.

2. Click *Create New* > *Zone*.
3. Configure the *Name* and add the *Interface Members*.

To configure a zone to include the internal interface and a VLAN using the CLI:

```
config system zone
    edit Zone_1
        set interface internal VLAN_1
        set intrazone deny/allow
    next
end
```

Using zone in a firewall policy

To configure a firewall policy to allow any interface to access the Internet using the CLI:

```
config firewall policy
    edit 2
        set name "2"
        set srcintf "Zone_1"
        set dstintf "port15"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end
```

Intra-zone traffic

In the zone configuration you can `set intrazone deny` to prohibit the different interfaces in the same zone to talk to each other.

For example, if you have ten interfaces in your zone and the `intrazone` setting is `deny`. You now want to allow traffic between a very small number of networks on different interfaces that are part of the zone but you do not want to disable the intra-zone blocking.

In this example, the zone VLANs are defined as: `192.168.1.0/24`, `192.168.2.0/24`, ... `192.168.10.0/24`.

This policy allows traffic from 192.168.1.x to 192.168.2.x even though they are in the same zone and intra-zone blocking is enabled. The intra-zone blocking acts as a default deny rule and you have to specifically override it by creating a policy within the zone.

To enable intra-zone traffic, create the following policy:

Source Interface	Zone-name, e.g., `Vlans`
Source Address	192.168.1.0/24
Destination	Zone-name (same as Source Interface, i.e., `Vlans`)
Destination Address	192.168.2.0/24

Virtual Wire Pair

A virtual wire pair consists of two interfaces that do not have IP addressing and are treated like a transparent mode VDOM. All traffic received by one interface in the virtual wire pair can only be forwarded to the other interface, provided a virtual wire pair firewall policy allows this traffic. Traffic from other interfaces cannot be routed to the interfaces in a virtual wire pair. Redundant and 802.3ad aggregate (LACP) interfaces can be included in a virtual wire pair.


Virtual wire pairs are useful for a typical topology where MAC addresses do not behave normally. For example, port pairing can be used in a Direct Server Return (DSR) topology where the response MAC address pair may not match the request's MAC address pair.

Example

In this example, a virtual wire pair (port3 and port4) makes it easier to protect a web server that is behind a FortiGate operating as an Internal Segmentation Firewall (ISFW). Users on the internal network access the web server through the ISFW over the virtual wire pair.



Interfaces used in a virtual wire pair cannot be used to access the ISFW FortiGate. Before creating a virtual wire pair, make sure you have a different port configured to allow admin access using your preferred protocol.

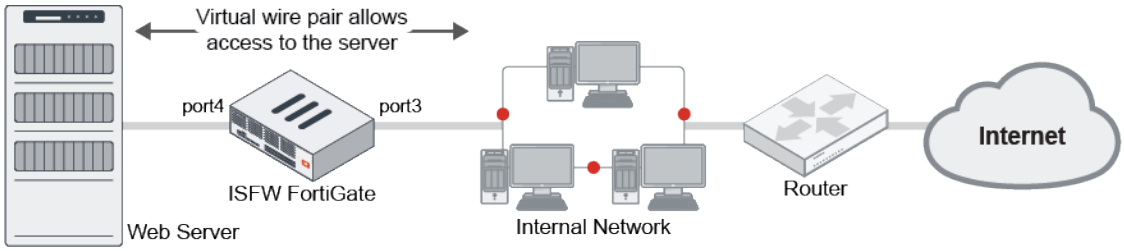

To add a virtual wire pair using the CLI:

```
config system virtual-wire-pair
    edit "VWP-name"
        set member "port3" "port4"
        set wildcard-vlan disable
    next
end
```

To add a virtual wire pair using the GUI:

1. Go to *Network* > *Interfaces*.
2. Click *Create New* > *Virtual Wire Pair*.
3. Select the *Interface Members* to add to the virtual wire pair.
   These interfaces cannot be part of a switch, such as the default LAN/internal interface.
4. If required, enable *Wildcard VLAN* and set the *VLAN Filter*..
5. Click *OK*.

To create a virtual wire pair policy using the CLI:

```
config firewall policy
    edit 1
        set name "VWP-Policy"
        set srcintf "port3" "port4"
        set dstintf "port3" "port4"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set fsso disable
    next
end
```

To create a virtual wire pair policy using the GUI:


1. Go to *Policy & Objects* > *IPv4 Virtual Wire Pair Policy*.
2. Click *Create New*.
3. Select the direction that traffic is allowed to flow.
4. Configure the other fields.
5. Click *OK*.

Virtual switch support for FortiGate 300E series


On the FortiGate 300E series, switch ports can be assigned to different VLANs.

To create a VLAN switch in the GUI:


1. Go to *Network* > *Interfaces* and enable *VLAN Switch Mode*.

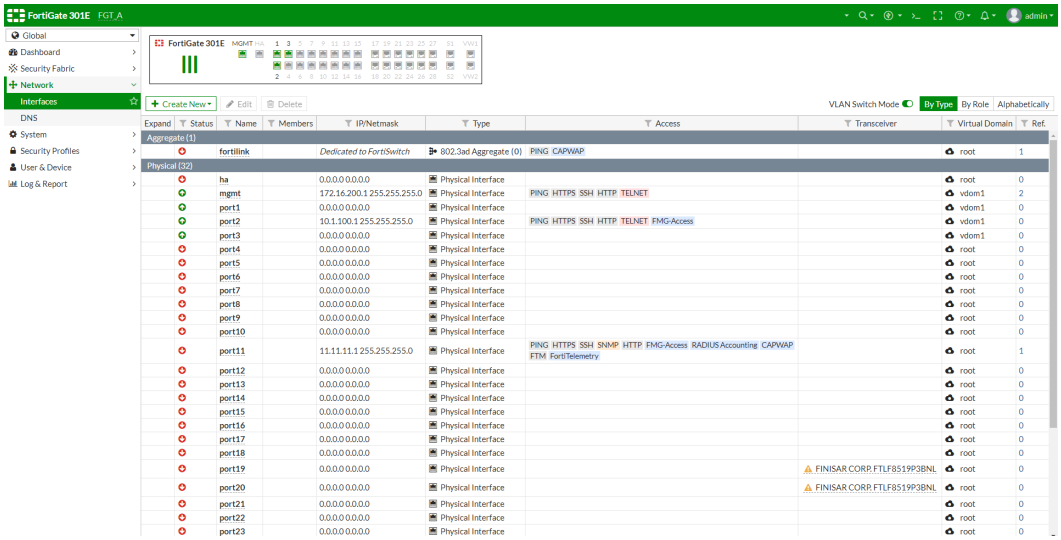

2. Click *Create New* > *Interface*.
3. Enter an interface name and configure the following:
   a. For *Type*, select *VLAN Switch*.
   b. (Optional) Enter a *VLAN ID* (range is 3900–3999).
   c. If applicable, select a *Virtual Domain*.
   d. Add the *Interface Members*.
   e. Configure the *Address* and *Administrative Access* settings as needed.
4. Click *OK*.

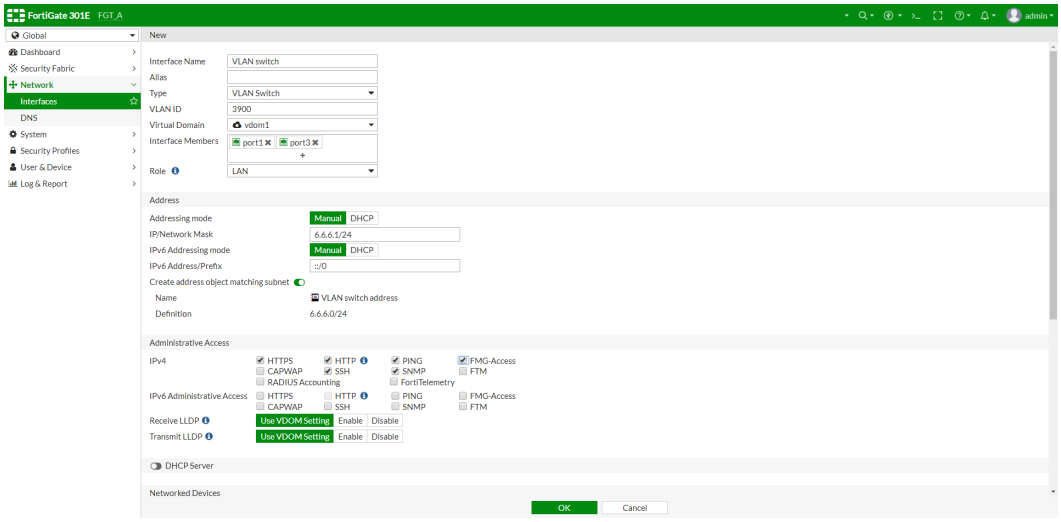

The new VLAN switch is visible in the interface table:

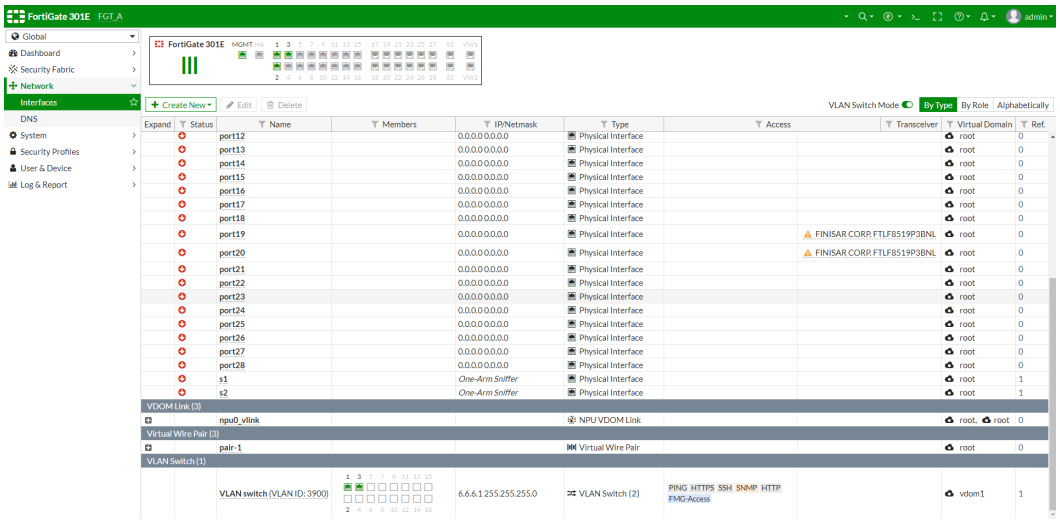

To create a VLAN switch in the CLI:

1. Enable VLAN switch mode:

```
config system global
    set virtual-switch-vlan enable
end
```

2. Create the VLAN switch. Optionally, you can assign an ID to the VLAN:
The default ID is `0`. You can use the default ID, or you can assign an ID to the VLAN (3900–3999).

```
config system virtual-switch
    edit "VLAN switch"
        set physical-switch "sw0"
        set vlan 3900
        config port
            edit "port1"
            next
            edit "port3"
            next
        end
    next
end
```

3. Configure the VLAN switch interface:

```
config system interface
    edit "VLAN switch"
        set vdom "vdom1"
        set ip 6.6.6.1 255.255.255.0
        set allowaccess ping https ssh snmp http fgfm
        set type hard-switch
        set snmp-index 15
    next
end
```


4. (Optional) Create a trunk interface:

```
config system interface
    edit port2
```

```
        set trunk enable
    next
end
```

Failure detection for aggregate and redundant interfaces

When an aggregate or redundant interface goes down, the corresponding fail-alert interface changes to down. When an aggregate or redundant interface comes up, the corresponding fail-alert interface changes to up.

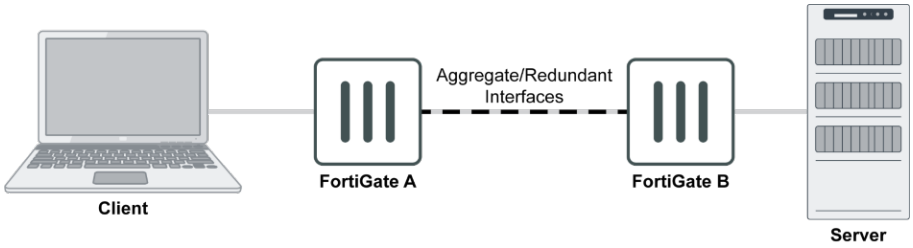

Fail-detect for aggregate and redundant interfaces can be configured using the CLI.

To configure an aggregate interface so that port3 goes down with it:


```
config system interface
   edit "agg1"
      set vdom "root"
      set fail-detect enable
      set fail-alert-method link-down
      set fail-alert-interfaces "port3"
      set type aggregate
      set member "port1" "port2"
   next
end
```

To configure a redundant interface so that port4 goes down with it:

```
config system interface
   edit "red1"
      set vdom "root"
      set fail-detect enable
      set fail-alert-method link-down
      set fail-alert-interfaces "port4"
      set type redundant
      set member "port1" "port2"
   next
end
```

VLAN inside VXLAN

VLANs can be assigned to VXLAN interfaces. In a data center network where VXLAN is used to create an L2 overlay network and for multitenant environments, a customer VLAN tag can be assigned to VXLAN interface. This allows the VLAN tag from VLAN traffic to be encapsulated within the VXLAN packet.

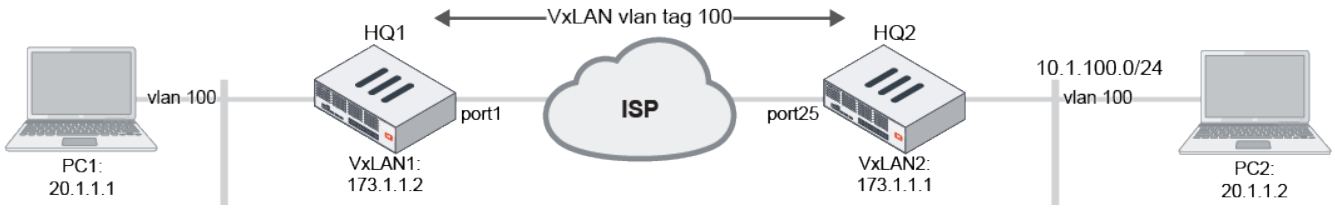

To configure VLAN inside VXLAN on HQ1:

1. Configure VXLAN:

```
config system vxlan
   edit "vxlan1"
      set interface port1
      set vni 1000
      set remote-ip 173.1.1.1
   next
end
```

2. Configure system interface:

```
config system interface
   edit vlan100
     set vdom root
     set vlanid 100
     set interface dmz
   next
   edit vxlan100
     set type vlan
     set vlanid 100
     set vdom root
     set interface vxlan1
   next
end
```

3. Configure software-switch:

```
config system switch-interface
   edit sw1
      set vdom root
      set member vlan100 vxlan100
      set intra-switch-policy implicit
   next
end
```



The default `intra-switch-policy implicit` behavior allows traffic between member interfaces within the switch. Therefore, it is not necessary to create firewall policies to allow this traffic.



Instead of creating a software-switch, it is possible to use a virtual-wire-pair as well. See Virtual Wire Pair with VXLAN on page 349


To configure VLAN inside VXLAN on HQ2:

1. Configure VXLAN:
```
config system vxlan
   edit "vxlan2"
      set interface port25
      set vni 1000
      set remote-ip 173.1.1.2
   next
end
```
2. Configure system interface:
```
config system interface
      edit vlan100
      set vdom root
      set vlanid 100
      set interface port20
   next
   edit vxlan100
      set type vlan
      set vlanid 100
      set vdom root
      set interface vxlan2
   next
end
```
3. Configure software-switch:
```
config system switch-interface
   edit sw1
      set vdom root
      set member vlan100 vxlan100
   next
end
```

To verify the configuration:

Ping PC1 from PC2.

The following is captured on HQ2:

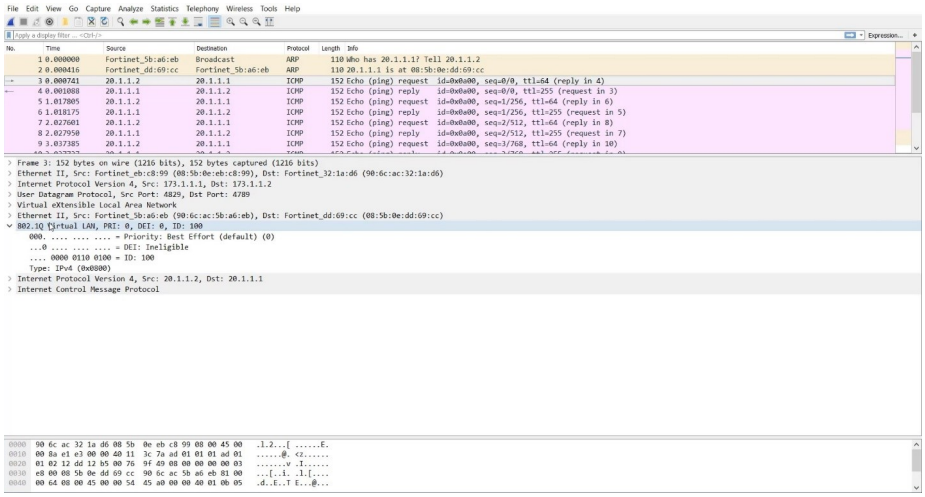


This captures the VXLAN traffic between 172.1.1.1 and 172.1.1.2 with the VLAN 100 tag inside.

Virtual Wire Pair with VXLAN

Virtual wire pairs can be used with VXLAN interfaces.

In this examples, VXLAN interfaces are added between FortiGate HQ1 and FortiGate HQ2, a virtual wire pair is added in HQ1, and firewall policies are created on both HQ1 and HQ2.

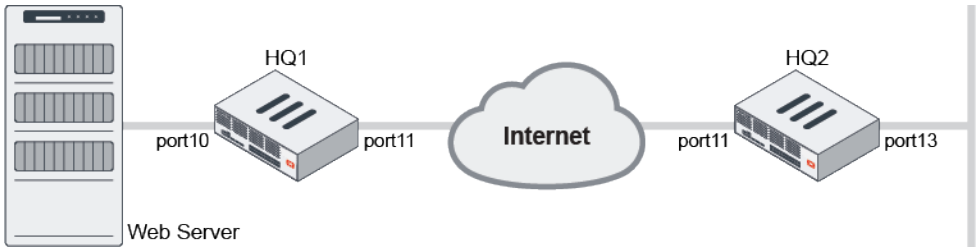

To create VXLAN interface on HQ1:

```
config system interface
    edit "port11"
        set vdom "root"
        set ip 10.2.2.1 255.255.255.0
        set allowaccess ping https ssh snmp telnet
    next
end
config system vxlan
    edit "vxlan1"
        set interface "port11"
        set vni 1000
        set remote-ip "10.2.2.2"
    next
end
```

To create VXLAN interface on HQ2:

```
config system interface
    edit "port11"
        set vdom "root"
        set ip 10.2.2.2 255.255.255.0
        set allowaccess ping https ssh snmp http
    next
end
config system vxlan
    edit "vxlan1"
        set interface "port11"
        set vni 1000
        set remote-ip "10.2.2.1"
    next
end
config system interface
    edit "vxlan1"
        set vdom "root"
        set ip 10.1.100.2 255.255.255.0
        set allowaccess ping https ssh snmp
```

```
    next
end
```

To create a virtual wire pair on HQ1:

```
config system virtual-wire-pair
    edit "vwp1"
        set member "port10" "vxlan1"
    next
end
```

To create a firewall policy on HQ1:

```
config firewall policy
    edit 5
        set name "vxlan-policy"
        set srcintf "port10" "vxlan1"
        set dstintf "port10" "vxlan1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set ssl-ssh-profile "certificate-inspection"
        set av-profile "default"
        set webfilter-profile "default"
        set dnsfilter-profile "default"
        set ips-sensor "default"
        set application-list "default"
        set fsso disable
    next
end
```

To create a firewall policy on HQ2:

```
config firewall policy
    edit 5
        set name "1"
        set srcintf "port13"
        set dstintf "vxlan1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set fsso disable
        set nat enable
    next
end
```

Interface MTU packet size

Changing the maximum transmission unit (MTU) on FortiGate interfaces changes the size of transmitted packets. Most FortiGate device's physical interfaces support jumbo frames that are up to 9216 bytes, but some only support 9000 or 9204 bytes.

To avoid fragmentation, the MTU should be the same as the smallest MTU in all of the networks between the FortiGate and the destination. If the packets sent by the FortiGate are larger than the smallest MTU, then they are fragmented, slowing down the transmission. Packets with the DF flag set in the IPv4 header are dropped and not fragmented .

On many network and endpoint devices, the path MTU is used to determine the smallest MTU and to transmit packets within that size.

- ASIC accelerated FortiGate interfaces, such as NP6, NP7, and SOC4 (np6xlite), support MTU sizes up to 9216 bytes.
- Some small desktop FortiGate models, such as the 30E and 50E, and FortiGate Rugged models, such as the 30D and 35D, support MTU sizes up to 1500 bytes.
- FortiGate VMs can have varying maximum MTU sizes, depending on the underlying interface and driver.
- Virtual interfaces, such as VLAN interfaces, inherit their MTU size from their parent interface.

To verify the supported MTU size:

```
config system interface
    edit <interface>
        set mtu-override enable
        set mtu ?
            <integer>    Maximum transmission unit (<min>-<max>)
    next
end
```

To change the MTU size:

```
config system interface
    edit <interface>
        set mtu-override enable
        set mtu <max bytes>
    next
end
```

Maximum MTU size on a path

To manually test the maximum MTU size on a path, you can use the ping command on a Windows computer.

For example, you can send ICMP packets of a specific size with a DF flag, and iterate through increasing sizes until the ping fails.

- The `-f` option specifies the Do not Fragment (DF) flag.
- The `-l` option specifies the length, in bytes, of the Data field in the echo Request messages. This does not include the 8 bytes for the ICMP header and 20 bytes for the IP header. Therefore, if the maximum MTU is 1500 bytes, then the maximum supported data size is: 1500 - 8 - 20 = 1472 bytes.

To determine the maximum MTU size on a path:

1. In Windows command prompt, try a likely MTU size:

   ```
   >ping 4.2.2.1 -l 1472 -f
   ```

```
Pinging 4.2.2.1 with 1472 bytes of data:
Reply from 4.2.2.1: bytes=1472 time=41ms TTL=52
Reply from 4.2.2.1: bytes=1472 time=42ms TTL=52
Reply from 4.2.2.1: bytes=1472 time=103ms TTL=52
Reply from 4.2.2.1: bytes=1472 time=38ms TTL=52

Ping statistics for 4.2.2.1:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
Approximate round trip times in milli-seconds:
    Minimum = 38ms, Maximum = 103ms, Average = 56ms
```

2. Increase the size and try the ping again:

```
>ping 4.2.2.1 -l 1473 -f

Pinging 4.2.2.1 with 1473 bytes of data:
Request timed out.

Ping statistics for 4.2.2.1:
    Packets: Sent = 1, Received = 0, Lost = 1 (100% loss),
```

The second test fails, so the maximum MTU size on the path is 1472 bytes + 8-byte ICMP header + 20-byte IP header = 1500 bytes

Maximum segment size

The TCP maximum segment size (MSS) is the maximum amount of data that can be sent in a TCP segment. The MSS is the MTU size of the interface minus the 20 byte IP header and 20 byte TCP header. By reducing the TCP MSS, you can effectively reduce the MTU size of the packet.

The TCP MSS can be configured in a firewall policy, or directly on an interface.

To configure the MSS in a policy:

```
config firewall policy
    edit <policy ID>
        set srcintf "internal"
        set dstintf "wan1"
        set srcaddr "10.10.10.6"
        set dstaddr "all"
        set schedule "always"
        set service "ALL"
        set tcp-mss-sender 1448
        set tcp-mss-receiver 1448
    next
end
```

To configure the MSS on an interface:

```
config system interface
    edit "wan2"
        set vdom "root"
        set mode dhcp
        set allowaccess ping fgfm
        set type physical
```

```
        set tcp-mss 1448
        set role wan
    next
end
```

DNS

Domain name system (DNS) is used by devices to locate websites by mapping a domain name to a website's IP address.

A FortiGate can serve different roles based on user requirements:

- A FortiGate can control what DNS server a network uses.
- A FortiGate can function as a DNS server.

FortiGuard Dynamic DNS (DDNS) allows a remote administrator to access a FortiGate's Internet-facing interface using a domain name that remains constant even when its IP address changes.

FortiOS supports DNS configuration for both IPv4 and IPv6 addressing. When a user requests a website, the FortiGate looks to the configured DNS servers to provide the IP address of the website in order to know which server to contact to complete the transaction.

The FortiGate queries the DNS servers whenever it needs to resolve a domain name into an IP address, such as for NTP or web servers defined by their domain names.

The following topics provide information about DNS:

- Important DNS CLI commands on page 353
- DNS domain list on page 354
- FortiGate DNS server on page 356
- DDNS on page 358
- DNS latency information on page 361
- DNS over TLS on page 363
- DNS troubleshooting on page 363

Important DNS CLI commands

DNS settings can be configured with the following CLI command:

```
config system dns
    set primary <ip_address>
    set secondary <ip_address>
    set dns-over-tls {enable | disable | enforce}
    set ssl-certificate <string>
    set domain <domains>
    set ip6-primary <ip6_address>
    set ip6-secondary <ip6_address>
    set timeout <integer>
    set retry <integer>
    set dns-cache-limit <integer>
```

```
    set dns-cache-ttl <integer>
    set cache-notfound-responses {enable | disable}
    set source-ip <class_ip>
end
```

For a FortiGate with multiple logical CPUs, you can set the DNS process number from 1 to the number of logical CPUs. The default DNS process number is 1.

```
config system global
    set dnsproxy-worker-count <integer>
end
```

dns-over-tls

DNS over TLS (DoT) is a security protocol for encrypting and wrapping DNS queries and answers via the Transport Layer Security (TLS) protocol. It can be enabled, disabled, or enforced:

- `disable`: Disable DNS over TLS (default).
- `enable`: Use TLS for DNS queries if TLS is available.
- `enforce`: Use only TLS for DNS queries. Does not fall back to unencrypted DNS queries if TLS is unavailable.

For more information, see DNS over TLS on page 363.

cache-notfound-responses

When enabled, any DNS requests that are returned with `NOT FOUND` can be stored in the cache. The DNS server is not asked to resolve the host name for `NOT FOUND` entries. By default, this option is disabled.

dns-cache-limit

Set the number of DNS entries that are stored in the cache (0 to 4294967295, default = 5000). Entries that remain in the cache provide a quicker response to requests than going out to the Internet to get the same information.

dns-cache-ttl

The duration that the DNS cache retains information, in seconds (60 to 86400 (1 day), default = 1800).

DNS domain list

You can configure up to eight domains in the DNS settings using the GUI or the CLI.

When a client requests a URL that does not include an FQDN, FortiOS resolves the URL by traversing through the DNS domain list and performing a query for each domain until the first match is found.


By default, FortiGate uses FortiGuard's DNS servers:

- Primary: 208.91.112.53
- Secondary: 208.91.112.52

You can also customize the DNS timeout time and the number of retry attempts.

To configure a DNS domain list in the GUI:

1. Go to *Network* > *DNS*.
2. Set *DNS Servers* to *Specify*.
3. Configure the primary and secondary DNS servers as needed.
4. In the *Local Domain Name* field, enter the first domain (`sample.com` in this example).
5. Click the + to add more domains (`example.com` and `domainname.com` in this example). You can enter up to eight domains.

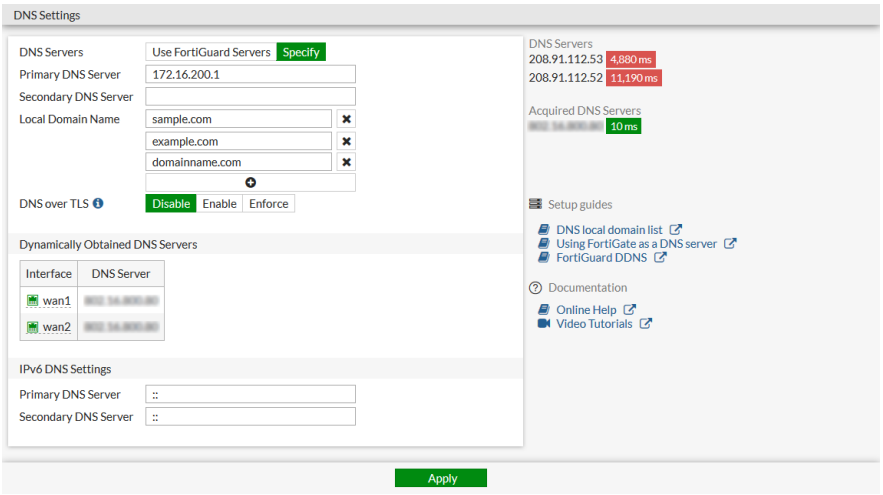

6. Configure additional DNS settings as needed.
7. Click *Apply*.

To configure a DNS domain list in the CLI:

```
config system dns
    set primary 172.16.200.1
    set domain "sample.com" "example.com" "domainname.com"
end
```

Verify the DNS configuration

In the following example, the local DNS server has the entry for *host1* mapped to the FQDN of *host1.sample.com*, and the entry for *host2* is mapped to the FQDN of *host2.example.com*.

To verify that the DNS domain list is configured:

1. Open Command Prompt.
2. Enter `ping host1`.
   The system returns the following response:
   ```
   PING host1.sample.com (1.1.1.1): 56 data bytes
   ```
   As the request does not include an FQDN, FortiOS traverses the configured DNS domain list to find a match. Because *host1* is mapped to the *host1.sample.com*, FortiOS resolves *host1* to *sample.com*, the first entry in the domain list.
3. Enter `ping host2`.
   The system returns the following response:

```
PING host2.example.com (2.2.2.2): 56 data bytes
```

FortiOS traverses the domain list to find a match. It first queries sample.com, the first entry in the domain list, but does not find a match. It then queries the second entry in the domain list, example.com. Because *host2* is mapped to the FQDN of *host2.example.com*, FortiOS resolves *host2* to *example.com*.

DNS timeout and retry settings

The DNS timeout and retry settings can be customized using the CLI.

```
config system dns
    set timeout <integer>
    set retry <integer>
end
```

Variable	Description
timeout <integer>	The DNS query timeout interval, in seconds (1 - 10, default = 5).
retry <integer>	The number of times to retry the DNS query (0 - 5, default - 2).

FortiGate DNS server

You can create local DNS servers for your network. Depending on your requirements, you can either manually maintain your entries (primary DNS server), or use it to refer to an outside source (secondary DNS server).

A local, primary DNS server requires that you to manually add all URL and IP address combinations. Using a primary DNS server for local services can minimize inbound and outbound traffic, and access time. Making it authoritative is not recommended, because IP addresses can change, and maintaining the list can become labor intensive.

A secondary DNS server refers to an alternate source to obtain URL and IP address combinations. This is useful when there is a primary DNS server where the entry list is maintained.

FortiGate as a DNS server also supports TLS connections to a DNS client. See DNS over TLS on page 363 for details.

By default, DNS server options are not available in the FortiGate GUI.

To enable DNS server options in the GUI:

1. Go to *System* > *Feature Visibility*.
2. Enable *DNS Database* in the *Additional Features* section.
3. Click *Apply*.


Example configuration

This section describes how to create an unauthoritative primary DNS server. The interface mode is recursive so that, if the request cannot be fulfilled, the external DNS servers will be queried.


To configure FortiGate as a primary DNS server in the GUI:

1. Go to *Network* > *DNS Servers*.
2. In the *DNS Database* table, click *Create New*.

3. Set *Type* to *Master*.
4. Set *View* to *Shadow*.
   The *View* setting controls the accessibility of the DNS server. If you select *Public*, external users can access or use the DNS server. If you select *Shadow*, only internal users can use it.
5. Enter a *DNS Zone*, for example, *WebServer*.
6. Enter the *Domain Name* of the zone, for example, *fortinet.com*.
7. Enter the *Hostname* of the DNS server, for example, *Corporate*.
8. Enter the *Contact Email Address* for the administrator, for example, *admin@example.com*.
9. Disable *Authoritative*.

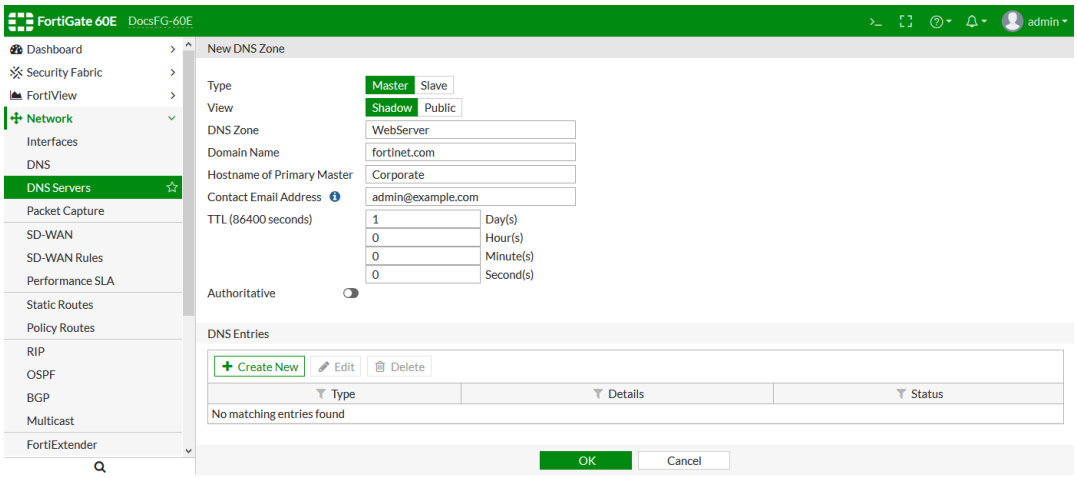


10. Add DNS entries:
    a. In the *DNS Entries* table, click *Create New*.
    b. Select a *Type*, for example *Address (A)*.
    c. Set the *Hostname*, for example *web.example.com*.

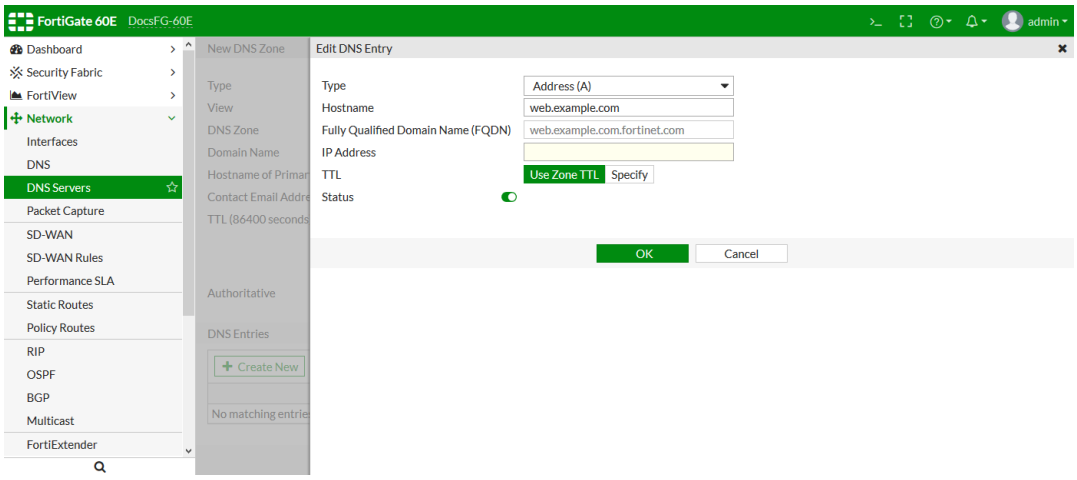

    d. Configure the remaining settings as needed. The options vary depending on the selected *Type*.
    e. Click *OK*.
11. Add more DNS entries as needed.
12. Click *OK*.
13. Enable DNS services on an interface:
    a. Go to *Network* > *DNS Servers*.
    b. In the *DNS Service on Interface* table, click *Create New*.

c. Select the *Interface* for the DNS server, such as *wan2*.

d. Set the *Mode* to *Recursive*.

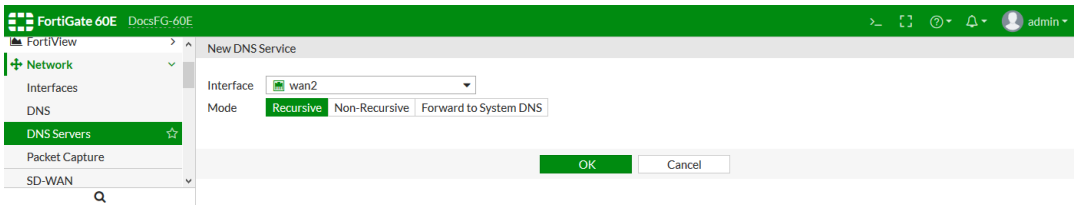

e. Click *OK*.

To configure FortiGate as a primary DNS server in the CLI:

```
config system dns-database
    edit WebServer
        set domain example.com
        set type master
        set view shadow
        set ttl 86400
        set primary-name corporate
        set contact admin@example.com
        set authoritative disable
        config dns-entry
            edit 1
                set hostname web.example.com
                set type A
                set ip 192.168.21.12
                set status enable
            next
        end
    next
end
```

```
config system dns-server
    edit wan1
        set mode recursive
    next
end
```

DDNS


If your external IP address changes regularly and you have a static domain name, you can configure the external interface to use a dynamic DNS (DDNS) service. This ensures that external users and customers can always connect to your company firewall. If you have a FortiGuard subscription, you can use FortiGuard as the DDNS server.



- FortiGate does not support DDNS for pure TP mode.
- FortiGate models 1000D and higher do not support DDNS in the GUI.


You can configure FortiGuard as the DDNS server using the GUI or CLI.

Sample topology

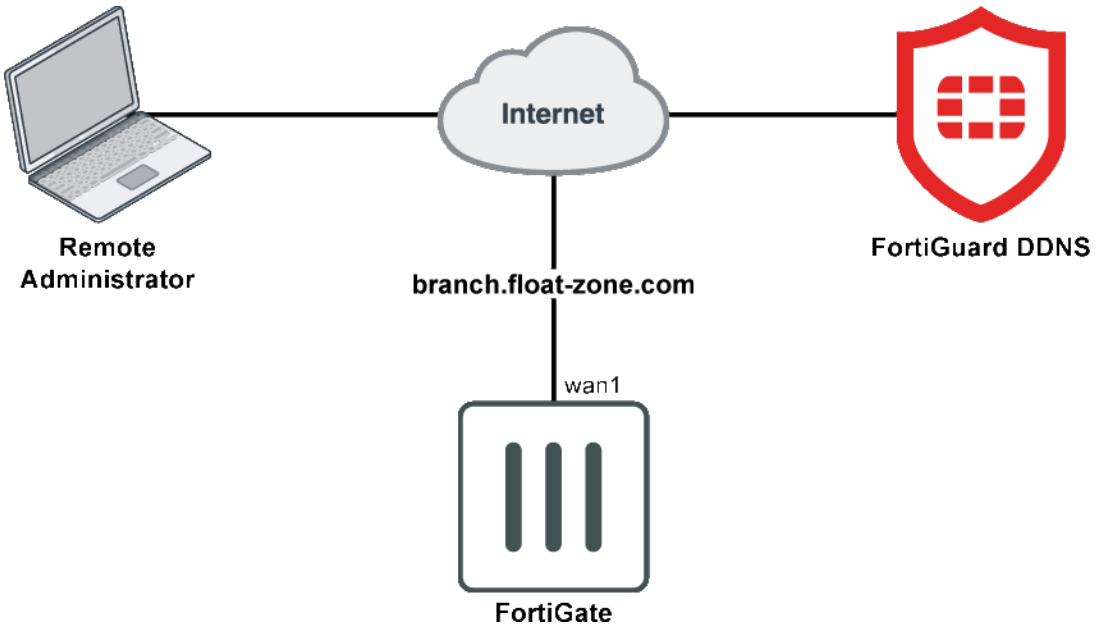

To configure FortiGuard as the DDNS server in the GUI:

1. Go to *Network* > *DNS*
2. Enable *FortiGuard DDNS*.
3. Select the *Interface* with the dynamic connection.
4. Select the *Server* that you have an account with.
5. Enter your *Unique Location*.

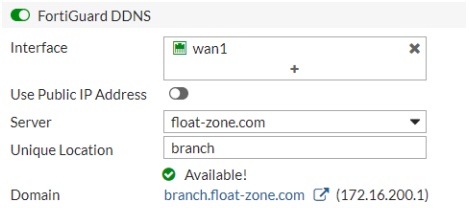

6. Click *Apply*.

To configure FortiGuard as the DDNS server in the CLI:

```
config system ddns
    edit <1>
        set ddns-server FortiGuardDDNS
        set ddns-domain "branch.float-zone.com"
        set monitor-interface "wan1"
    next
end
```

DDNS servers other than FortiGuard

If you do not have a FortiGuard subscription, or want to use a different DDNS server, you can configure a DDNS server for each interface. Only the first configure port appears in the GUI. The available commands vary depending on the selected DDNS server.

To configure DDNS servers other than FortiGuard in the CLI:

```
config system ddns
    edit <DDNS_ID>
        set monitor-interface <external_interface>
        set ddns-server <ddns_server_selection>
        ...
    next
end
```

Refresh DDNS IP addresses

You can configure FortiGate to refresh DDNS IP addresses. FortiGate periodically checks the DDNS server that is configured.

To configure FortiGate to refresh DDNS IP addresses using the CLI:

```
config system ddns
    edit <1>
        set ddns-server FortiGuardDDNS
        set use-public-ip enable
        set update-interval seconds
    next
end
```

Disable cleartext

When `clear-text` is disabled, FortiGate uses the SSL connection to send and receive (DDNS) updates.

To disable cleartext and set the SSL certificate using the CLI:

```
config system ddns
    edit <1>
        set clear-text disable
        set ssl-certificate <cert_name>
    next
end
```

DDNS update override

A DHCP server has an override command option that allows DHCP server communications to go through DDNS to perform updates for the DHCP client. This enforces a DDNS update of the A field every time even if the DHCP client does not request it. This allows support for the `allow`, `ignore`, and `deny client-updates` options.


To enable DDNS update override using the CLI:

```
config system dhcp server
    edit <0>
        set ddns-update enable
        set ddns-update_override enable
        set ddns-server-ip <ddns_server_ip>
        set ddns-zone <ddns_zone>
    next
end
```

DNS latency information

High latency in DNS traffic can result in an overall sluggish experience for end-users. In the *DNS Settings* pane, you can quickly identify DNS latency issues in your configuration.

Go to *Network* > *DNS* to view DNS latency information in the right side bar. If you use FortiGuard DNS, latency information for DNS, DNS filter, web filter, and outbreak prevention servers is also visible. Hover your pointer over a latency value to see when it was last updated.

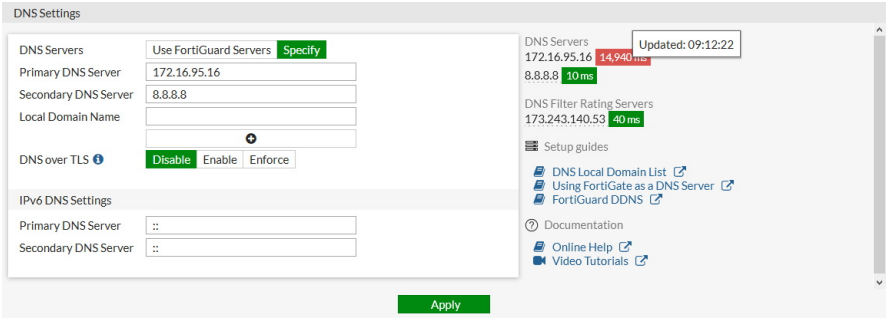

To view DNS latency information using the CLI:

```
# diagnose test application dnsproxy 2
worker idx: 0
worker: count=1 idx=0
retry_interval=500 query_timeout=1495
DNS latency info:
vfid=0 server=2001::1 latency=1494 updated=73311
vfid=0 server=208.91.112.52 latency=1405 updated=2547
vfid=0 server=208.91.112.53 latency=19 updated=91
SDNS latency info:
vfid=0 server=173.243.138.221 latency=1 updated=707681
DNS_CACHE: alloc=35, hit=26
RATING_CACHE: alloc=1, hit=49
DNS UDP: req=66769 res=63438 fwd=83526 alloc=0 cmp=0 retrans=16855 to=3233
          cur=111 switched=8823467 num_switched=294 v6_cur=80 v6_switched=7689041 num_v6_
switched=6
         ftg_res=8 ftg_fwd=8 ftg_retrans=0
DNS TCP: req=0, res=0, fwd=0, retrans=0 alloc=0, to=0
FQDN: alloc=45 nl_write_cnt=9498 nl_send_cnt=21606 nl_cur_cnt=0
Botnet: searched=57 hit=0 filtered=57 false_positive=0
```

To view the latency from web filter and outbreak protection servers using the CLI:

```
# diagnose debug rating
Locale   : english

Service  : Web-filter
Status   : Enable
License  : Contract

Service  : Antispam
Status   : Disable

Service  : Virus Outbreak Prevention
Status   : Disable

-=- Server List (Tue Jan 22 08:03:14 2019) -=-

IP               Weight RTT Flags  TZ  Packets  Curr Lost Total Lost  Updated Time
173.243.138.194  10     0 DI       -8  700      0         2           Tue Jan 22 08:02:44
2019
173.243.138.195  10     0          -8  698      0         4           Tue Jan 22 08:02:44
2019
173.243.138.198  10     0          -8  698      0         4           Tue Jan 22 08:02:44
2019
173.243.138.196  10     0          -8  697      0         3           Tue Jan 22 08:02:44
2019
173.243.138.197  10     1          -8  694      0         0           Tue Jan 22 08:02:44
2019
96.45.33.64      10     22 D       -8  701      0         6           Tue Jan 22 08:02:44
2019
64.26.151.36     40     62         -5  704      0         10          Tue Jan 22 08:02:44
2019
64.26.151.35     40     62         -5  703      0         9           Tue Jan 22 08:02:44
2019
209.222.147.43   40     70 D       -5  696      0         1           Tue Jan 22 08:02:44
2019
66.117.56.42     40     70         -5  697      0         3           Tue Jan 22 08:02:44
2019
66.117.56.37     40     71         -5  702      0         9           Tue Jan 22 08:02:44
2019
65.210.95.239    40     74         -5  695      0         1           Tue Jan 22 08:02:44
2019
65.210.95.240    40     74         -5  695      0         1           Tue Jan 22 08:02:44
2019
45.75.200.88     90     142        0   706      0         12          Tue Jan 22 08:02:44
2019
45.75.200.87     90     155        0   714      0         20          Tue Jan 22 08:02:44
2019
45.75.200.85     90     156        0   711      0         17          Tue Jan 22 08:02:44
2019
45.75.200.86     90     159        0   704      0         10          Tue Jan 22 08:02:44
2019
62.209.40.72     100    157        1   701      0         7           Tue Jan 22 08:02:44
2019
62.209.40.74     100    173        1   705      0         11          Tue Jan 22 08:02:44
2019
```


```
62.209.40.73     100    173        1    699      0         5          Tue Jan 22 08:02:44
2019
121.111.236.179  180    138        9    706      0         12         Tue Jan 22 08:02:44
2019
121.111.236.180  180    138        9    704      0         10         Tue Jan 22 08:02:44
2019
```

DNS over TLS

DNS over TLS (DoT) is a security protocol for encrypting and wrapping DNS queries and answers via the TLS protocol. The goal of DNS over TLS is to increase user privacy and security by preventing eavesdropping and manipulation of DNS data via man-in-the-middle attacks. There is an option in the FortiOS DNS profile settings to enforce DoT for this added security.

To configure DoT in the GUI:

1. Go to *Network* > *DNS*. The *DNS Settings* pane opens.
2. For *DNS over TLS*, click *Enforce*.

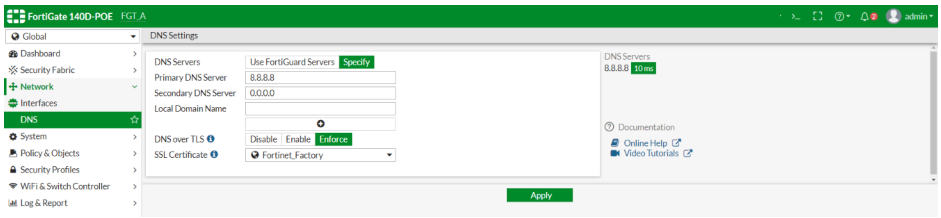

3. Click *Apply*.

To configure DoT in the CLI:

```
config system dns
    set primary 8.8.8.8
    set dns-over-tls enforce
    set ssl-certificate "Fortinet_Factory"
end
```

DNS troubleshooting

The following diagnose command can be used to collect DNS debug information. If you do not specify worker ID, the default worker ID is `0`.

```
# diagnose test application dnsproxy
worker idx: 0
1. Clear DNS cache
2. Show stats
3. Dump DNS setting
4. Reload FQDN
5. Requery FQDN
6. Dump FQDN
7. Dump DNS cache
8. Dump DNS DB
9. Reload DNS DB
```

```
10. Dump secure DNS policy/profile
11. Dump Botnet domain
12. Reload Secure DNS setting
13. Show Hostname cache
14. Clear Hostname cache
15. Show SDNS rating cache
16. Clear SDNS rating cache
17. DNS debug bit mask
99. Restart dnsproxy worker
```

To view useful information about the ongoing DNS connection:

```
# diagnose test application dnsproxy 3
```

Important fields include:

`tls`	1 if the connection is TLS, 0 if the connection is not TLS.
`rt`	The round trip time of the DNS latency.
`probe`	The number of probes sent.

To dump the second DNS worker's cache:

```
diagnose test application dnsproxy 7 1
```

To enable debug on the second worker:

```
diagnose debug application dnsproxy -1 1
```

To enable debug on all workers by specifying -1 as worker ID:

```
diagnose debug application dnsproxy -1 -1
```

Explicit and transparent proxies

This section contains instructions for configuring explicit and transparent proxies.

- Explicit web proxy on page 365
- Transparent proxy on page 369
- FTP proxy on page 367
- Proxy policy addresses on page 372
- Proxy policy security profiles on page 380
- Explicit proxy authentication on page 386
- Transparent web proxy forwarding on page 392
- Multiple dynamic header count on page 393
- Restricted SaaS access (Office 365, G Suite, Dropbox) on page 396
- Explicit proxy and FortiSandbox Cloud on page 398

Explicit web proxy


Explicit web proxy can be configured on FortiGate for proxying HTTP and HTTPS traffic.

To deploy explicit proxy, individual client browsers can be manually configured to send requests directly to the proxy, or they can be configured to download proxy configuration instructions from a Proxy Auto-Configuration (PAC) file.

When explicit proxy is configured on an interface, the interface IP address can be used by client browsers to forward requests directly to the FortiGate. FortiGate also supports PAC file configuration.


To configure explicit web proxy in the GUI:

1. Enable and configure explicit web proxy:
   a. Go to *Network* > *Explicit Proxy*.
   b. Enable *Explicit Web Proxy*.
   c. Select *port2* as the *Listen on Interfaces* and set the *HTTP Port* to *8080*.
   d. Configure the remaining settings as needed.

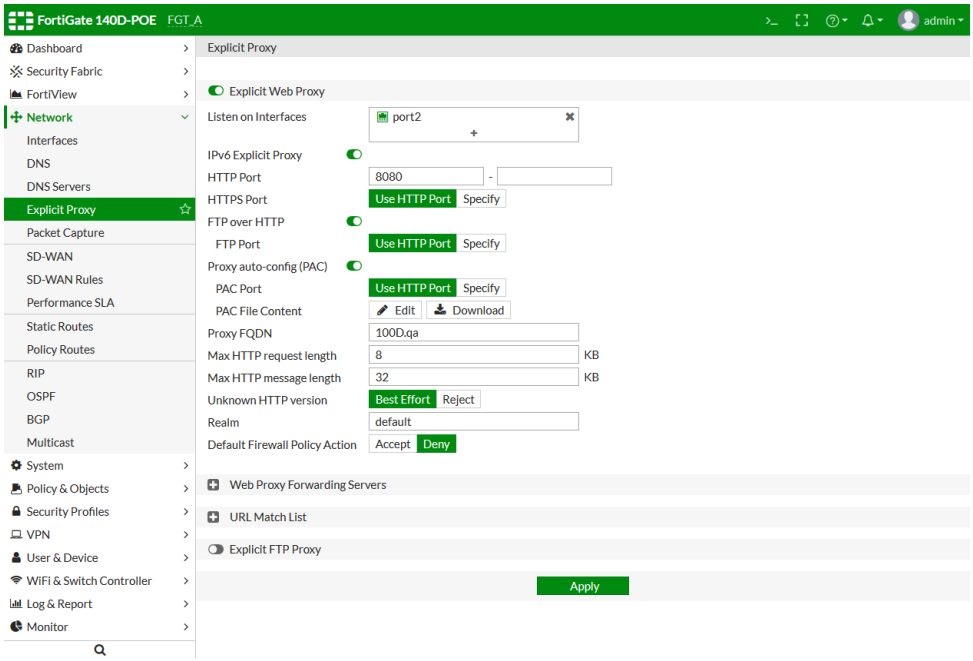

   e. Click *Apply*.
2. Create an explicit web proxy policy:
   a. Go to *Policy & Objects* > *Proxy Policy*.
   b. Click *Create New*.
   c. Set *Proxy Type* to *Explicit Web* and *Outgoing Interface* to *port1*.

d. Also set *Source* and *Destination* to *all*, *Schedule* to *always*, *Service* to *webproxy*, and *Action* to *ACCEPT*.

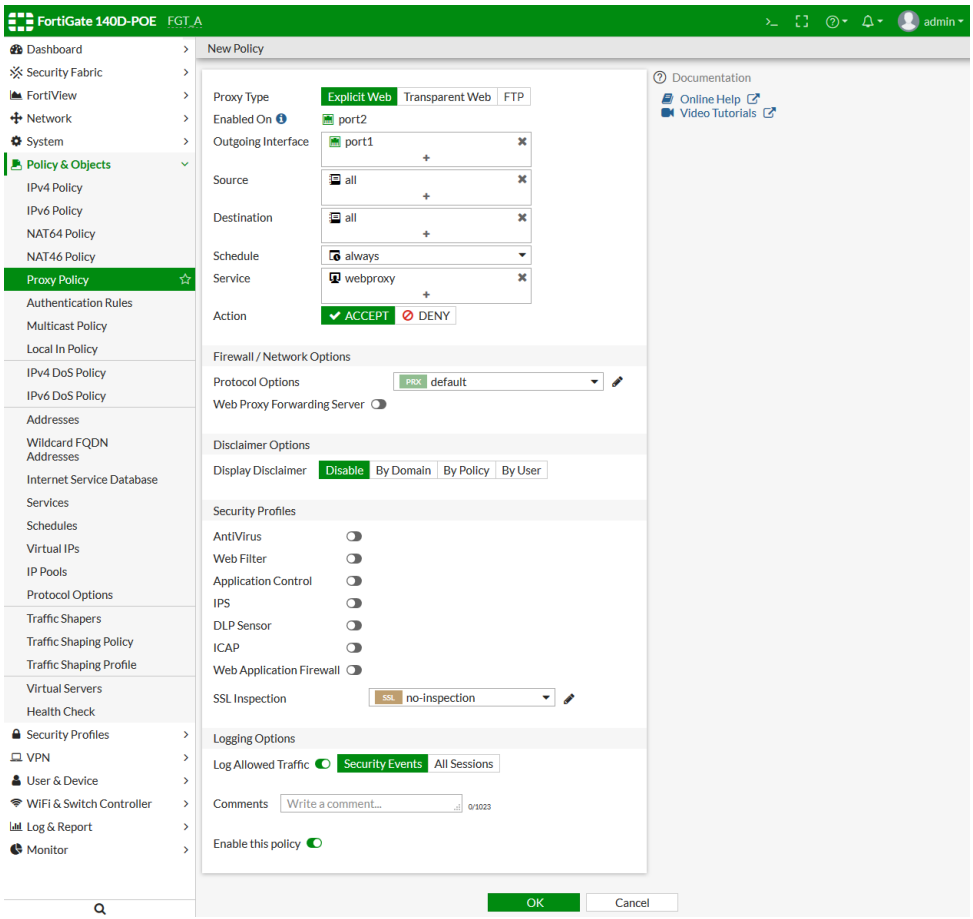

e. Click *OK* to create the policy.



This example creates a basic policy. If required, security profiles can be enabled, and deep SSL inspection can be selected to inspect HTTPS traffic.

3. Configure a client to use the FortiGate explicit proxy:
Set the FortiGate IP address as the proxy IP address in the browser, or use an automatic configuration script for the PAC file.

To configure explicit web proxy in the CLI:

1. Enable and configure explicit web proxy:

```
config web-proxy explicit
    set status enable
    set ftp-over-http enable
    set socks enable
    set http-incoming-port 8080
    set ipv6-status enable
    set unknown-http-version best-effort
end
config system interface
```

```
        edit "port2"
            set vdom "vdom1"
            set ip 10.1.100.1 255.255.255.0
            set allowaccess ping https ssh snmp http telnet
            set type physical
            set explicit-web-proxy enable
            set snmp-index 12
            end
        next
    end
```

2. Create an explicit web proxy policy:

```
    config firewall proxy-policy
        edit 1
            set uuid 722b6130-13aa-51e9-195b-c4196568d667
            set proxy explicit-web
            set dstintf "port1"
            set srcaddr "all"
            set dstaddr "all"
            set service "webproxy"
            set action accept
            set schedule "always"
            set logtraffic all
        next
    end
```



This example creates a basic policy. If required, security profiles can be enabled, and deep SSL inspection can be selected to inspect HTTPS traffic.

3. Configure a client to use the FortiGate explicit web proxy:
   Set the FortiGate IP address as the proxy IP address in the browser, or use an automatic configuration script for the PAC file.


FTP proxy

FTP proxies can be configured on the FortiGate so that FTP traffic can be proxied. When the FortiGate is configured as an FTP proxy, FTP client applications should be configured to send FTP requests to the FortiGate.

To configure explicit FTP proxy in the GUI:


1. Enable and configure explicit FTP proxy:
   a. Go to *Network* > *Explicit Proxy*.
   b. Enable *Explicit FTP Proxy*.
   c. Select *port2* as the *Listen on Interfaces* and set the *HTTP Port* to *21*.

d. Configure the *Default Firewall Policy Action* as needed.

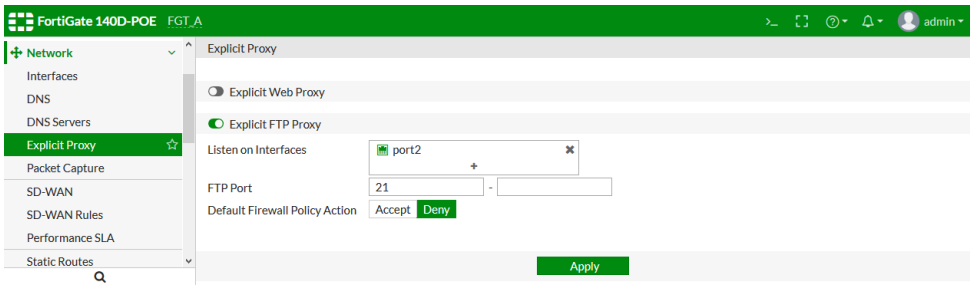

e. Click *Apply*.

2. Create an explicit FTP proxy policy:
   a. Go to *Policy & Objects* > *Proxy Policy*.
   b. Click *Create New*.
   c. Set *Proxy Type* to *FTP* and *Outgoing Interface* to *port1*.
   d. Also set *Source* and *Destination* to *all*, *Schedule* to *always*, and *Action* to *ACCEPT*.

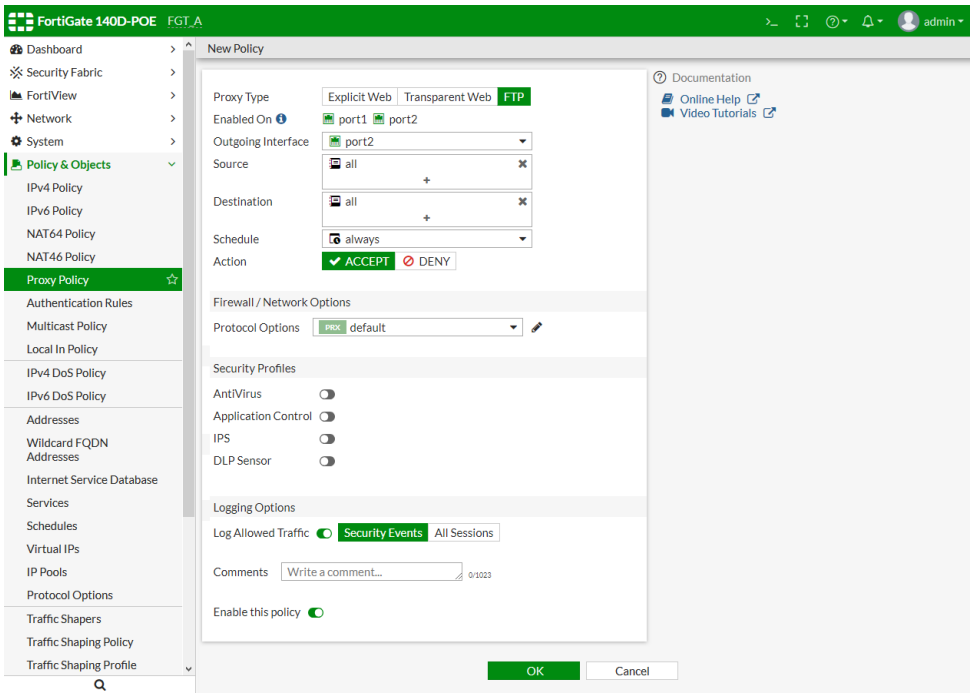

e. Click *OK* to create the policy.



This example creates a basic policy. If required, security profiles can be enabled.

3. Configure the FTP client application to use the FortiGate IP address.

To configure explicit FTP proxy in the CLI:

1. Enable and configure explicit FTP proxy:

```
config ftp-proxy explicit
    set status enable
    set incoming-port 21
end
config system interface
    edit "port2"
        set vdom "vdom1"
        set ip 10.1.100.1 255.255.255.0
        set allowaccess ping https ssh snmp http telnet
        set type physical
        set explicit-ftp-proxy enable
        set snmp-index 12
        end
    next
end
```

2. Create an explicit FTP proxy policy:

```
config firewall proxy-policy
    edit 4
        set uuid 2e945a3a-565d-51e9-4fac-5215d287adc0
        set proxy ftp
        set dstintf "port2"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
    next
end
```



This example creates a basic policy. If required, security profiles can be enabled.

3. Configure the FTP client application to use the FortiGate IP address.

Transparent proxy

In a transparent proxy deployment, the user's client software, such as a browser, is unaware that it is communicating with a proxy.


Users request Internet content as usual, without any special client configuration, and the proxy serves their requests. FortiGate also allows user to configure in transparent proxy mode.

To configure transparent proxy in the GUI:

1. Configure a regular firewall policy with HTTP redirect:
   a. Go to *Policy & Objects* > *IPv4 Policy*.
   b. Click *Create New*.
   c. Name the policy appropriately, set the *Incoming Interface* to *port2*, and set the *Outgoing Interface* to *port1*.

d. Also set *Source* and *Destination* to *all*, *Schedule* to *always*, *Service* to *ALL*, and *Action* to *ACCEPT*.

e. Set *Inspection Mode* to *Proxy-based* and *SSL Inspection* to *deep-inspection*.

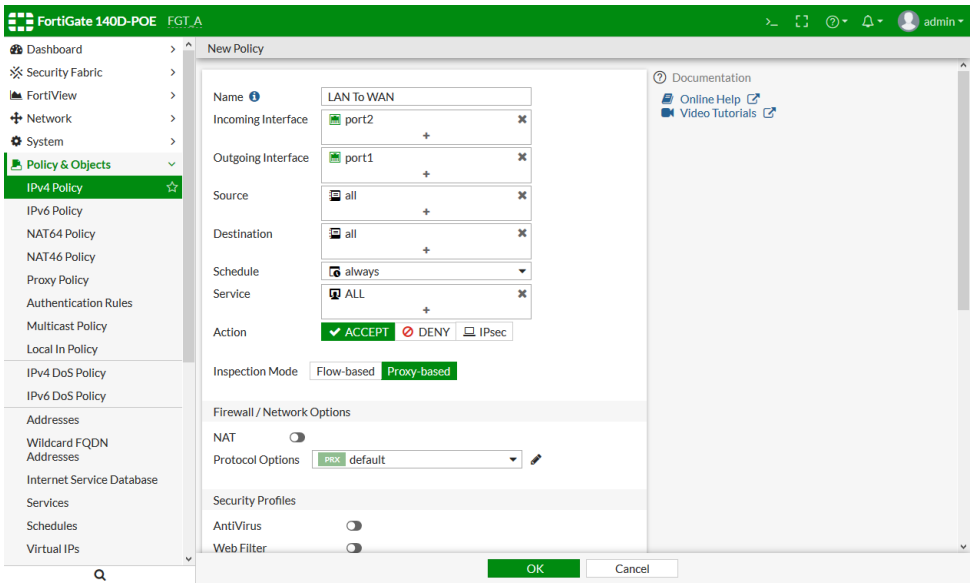

f. Configure the remaining settings as needed.

g. Click *OK*.



HTTP redirect can only be configured in the CLI. To redirect HTTPS traffic, deep inspection is required.


2. Configure a transparent proxy policy:

a. Go to *Policy & Objects* > *Proxy Policy*.

b. Click *Create New*.

c. Set *Proxy Type* to *Transparent Web*, set the *Incoming Interface* to *port2*, and set the *Outgoing Interface* to *port1*.

d. Also set *Source* and *Destination* to *all*, *Schedule*to *always*, *Service* to *webproxy*, and *Action* to *ACCEPT*.

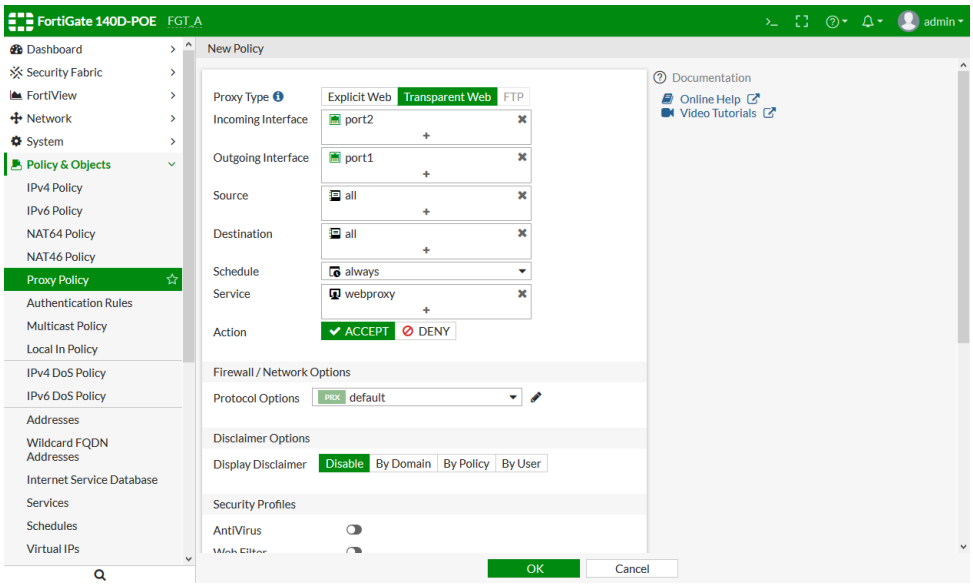

e. Configure the remaining settings as needed.

f. Click *OK* to create the policy.

This example creates a basic policy. If required, security profiles can be enabled, and deep SSL inspection can be selected to inspect HTTPS traffic.

---

3. No special configure is required on the client to use FortiGate transparent proxy. As the client is using the FortiGate as its default gateway, requests will first hit the regular firewall policy, and then be redirected to the transparent proxy policy.

To configure transparent proxy in the CLI:

1. Configure a regular firewall policy with HTTP redirect:

```
config firewall policy
    edit 1
        set name "1"
        set uuid c5c30442-54be-51e9-c17c-4513b1c973c0
        set srcintf "port2"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set inspection-mode proxy
        set http-policy-redirect enable
        set fsso disable
        set ssl-ssh-profile "deep-inspection"
        set nat enable
    next
end
```

2. Configure a transparent proxy policy:

```
config firewall proxy-policy
    edit 5
        set uuid 8fb05036-56fc-51e9-76a1-86f757d3d8dc
        set proxy transparent-web
        set srcintf "port2"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "all"
        set service "webproxy"
        set action accept
        set schedule "always"
    next
end
```



This example creates a basic policy. If required, security profiles can be enabled, and deep SSL inspection can be selected to inspect HTTPS traffic.

3. No special configure is required on the client to use FortiGate transparent proxy. As the client is using the FortiGate as its default gateway, requests will first hit the regular firewall policy, and then be redirected to the transparent proxy policy.

Proxy policy addresses

Proxy addresses are designed to be used only by proxy policies. The following address types are available:

- Host regex match on page 373
- URL pattern on page 373
- URL category on page 374
- HTTP method on page 375
- HTTP header on page 376
- User agent on page 377
- Advanced (source) on page 378
- Advanced (destination) on page 379

Fast policy match

The fast policy match function improves the performance of IPv4 explicit and transparent web proxies on FortiGate devices.

When enabled, after the proxy policies are configured, the FortiGate builds a fast searching table based on the different proxy policy matching criteria. When fast policy matching is disabled, web proxy traffic is compared to the policies one at a time from the beginning of the policy list.

Fast policy matching is enabled by default, and can be configured with the following CLI command:

```
config web-proxy global
    set fast-policy-match {enable | disable}
end
```


Host regex match

In this address type, a user can create a hostname as a regular expression. Once created, the hostname address can be selected as a destination of a proxy policy. This means that a policy will only allow or block requests that match the regular expression.

This example creates a host regex match address with the pattern *qa.[a-z]*.com*.

To create a host regex match address in the GUI:

1. Go to *Policy & Objects* > *Addresses*.
2. Click *Create New* > *Address*.
3. Set the following:
   - *Category* to *Proxy Address*,
   - *Name* to *Host Regex*,
   - *Type* to *Host Regex Match*, and
   - *Host Regex Pattern* to *qa.[a-z]*.com*.

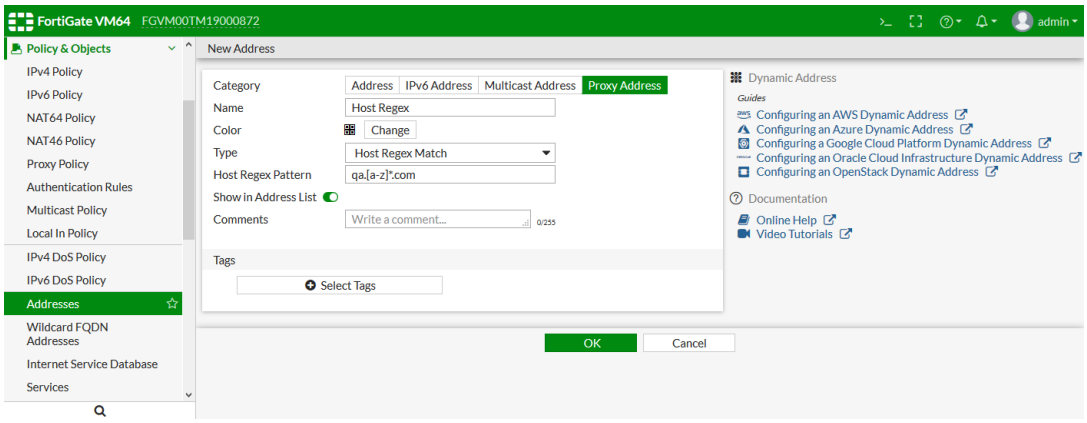

4. Click *OK*.

To create a host regex match address in the CLI:

```
config firewall proxy-address
    edit "Host Regex"
        set uuid 8e374390-57c9-51e9-9353-ee4469629df8
        set type host-regex
        set host-regex "qa.[a-z]*.com"
    next
end
```


URL pattern

In this address type, a user can create a URL path as a regular expression. Once created, the path address can be selected as a destination of a proxy policy. This means that a policy will only allow or block requests that match the regular expression.

This example creates a URL pattern address with the pattern */filetypes/*.

To create a URL pattern address in the GUI:

1. Go to *Policy & Objects* > *Addresses*.
2. Click *Create New* > *Address*.
3. Set the following:
   - *Category* to *Proxy Address*,
   - *Name* to *URL Regex*,
   - *Type* to *URL Pattern*,
   - *Host* to *all*, and
   - *URL Path Regex* to */filetypes/*.

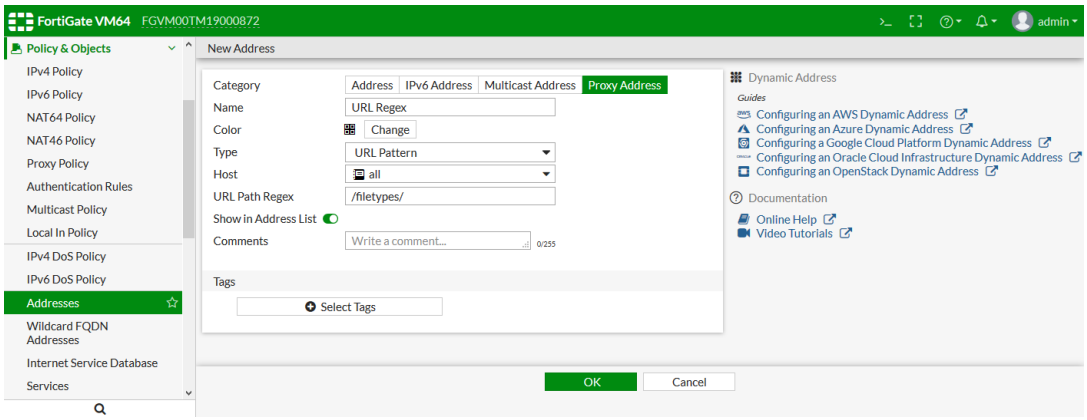

4. Click *OK*.

To create a URL pattern address in the CLI:

```
config firewall proxy-address
    edit "URL Regex"
        set uuid 267dc8e4-57cb-51e9-0cfe-27877bff51d3
        set type url
        set host "all"
        set path "/filetypes/"
    next
end
```

URL category


In this address type, a user can create a URL category based on a FortiGuard URL ID. Once created, the address can be selected as a destination of a proxy policy. This means that a policy will only allow or block requests that match the URL category.

The example creates a URL category address for URLs in the *Education* category. For more information about categories, see https://fortiguard.com/webfilter/categories.

To create a URL category address in the GUI:

1. Go to *Policy & Objects* > *Addresses*.
2. Click *Create New* > *Address*.

3. Set the following:
   - *Category* to *Proxy Address*,
   - *Name* to *url-category*,
   - *Type* to *URL Category*,
   - *Host* to *all*, and
   - *URL Category* to *Education*.

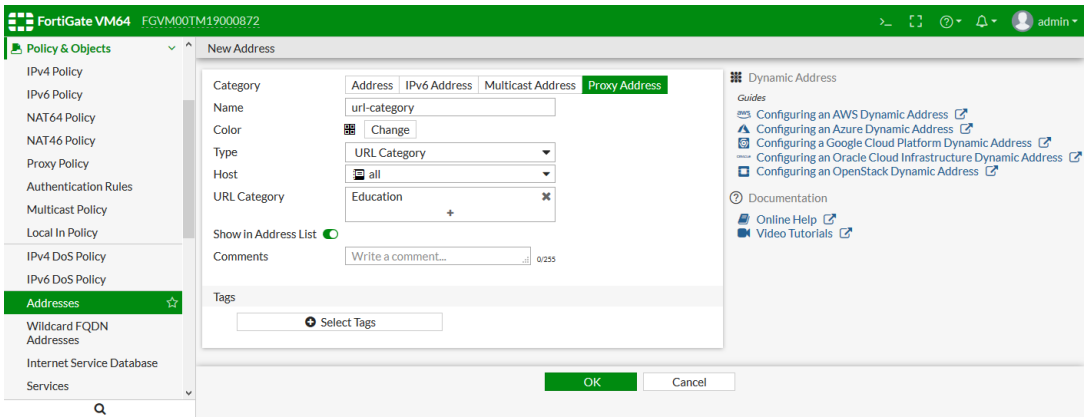

4. Click *OK*.

To create a URL category address in the CLI:

```
config firewall proxy-address
    edit "url-category"
        set uuid 7a5465d2-57cf-51e9-49fd-0c6b5ad2ff4f
        set type category
        set host "all"
        set category 30
    next
end
```

To see a list of all the categories and their numbers, when editing the address, enter `set category ?`.

HTTP method


In this address type, a user can create an address based on the HTTP request methods that are used. Multiple method options are supported, including: *CONNECT*, *DELETE*, *GET*, *HEAD*, *OPTIONS*, *POST*, *PUT*, and *TRACE*. Once created, the address can be selected as a source of a proxy policy. This means that a policy will only allow or block requests that match the selected HTTP method.

The example creates a HTTP method address that uses the GET method.

To create a HTTP method address in the GUI:

1. Go to *Policy & Objects* > *Addresses*.
2. Click *Create New* > *Address*.
3. Set the following:
   - *Category* to *Proxy Address*,
   - *Name* to *method_get*,
   - *Type* to *HTTP Method*,

- *Host* to *all*, and
- *Request Method* to *GET*.

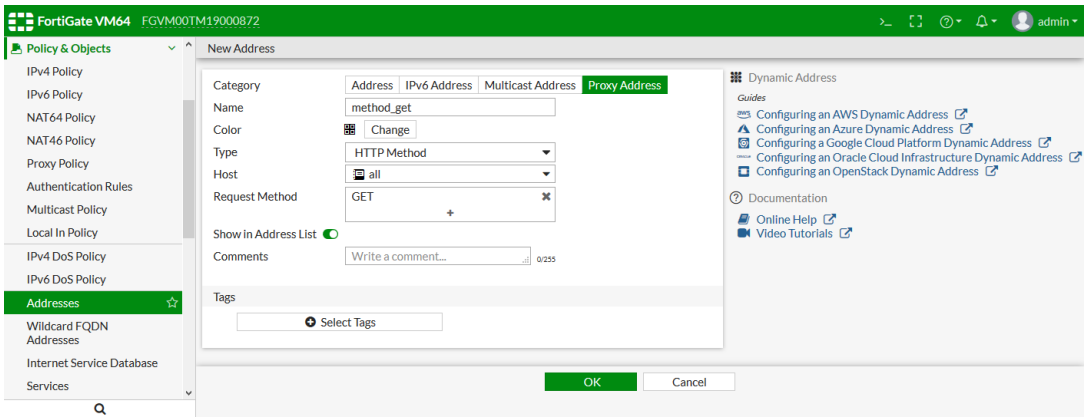

4. Click *OK*.

To create a HTTP method address in the CLI:

```
config firewall proxy-address
    edit "method_get"
        set uuid 1e4d1a02-57d6-51e9-a5c4-73387925b7de
        set type method
        set host "all"
        set method get
    next
end
```


HTTP header

In this address type, a user can create a HTTP header as a regular expression. Once created, the header address can be selected as a source of a proxy policy. This means that a policy will only allow or block requests where the HTTP header matches the regular expression.

This example creates a HTTP header address with the pattern *Q[A-B]*.

To create a HTTP header address in the GUI:

1. Go to *Policy & Objects* > *Addresses*.
2. Click *Create New* > *Address*.
3. Set the following:
   - *Category* to *Proxy Address*,
   - *Name* to *HTTP-header*,
   - *Type* to *HTTP Header*,
   - *Host* to *all*,
   - *Header Name* to *Header_Test*, and
   - *Header Regex* to *Q[A-B]*.

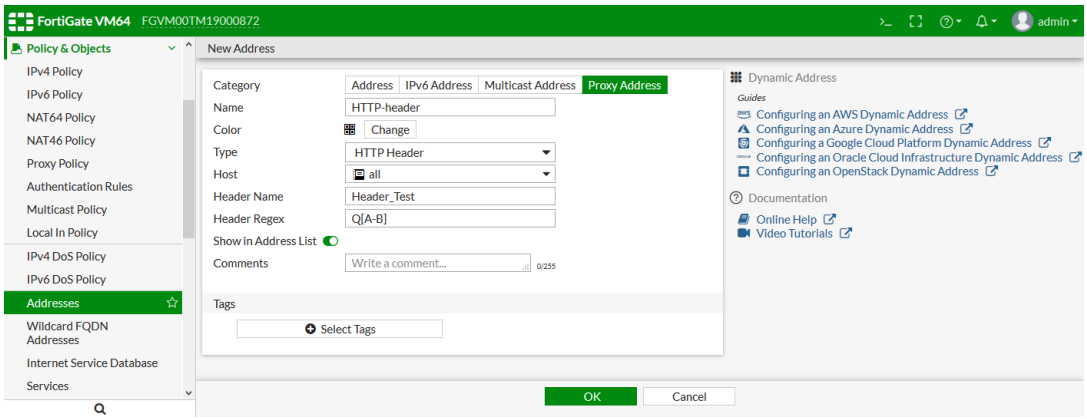

4. Click *OK*.

To create a HTTP header address in the CLI:

```
config firewall proxy-address
    edit "method_get"
        set uuid a0f1b806-57e9-51e9-b214-7a1cfafa9bb3
        set type header
        set host "all"
        set header-name "Header_Test"
        set header "Q[A-B]"
    next
end
```


User agent

In this address type, a user can create an address based on the names of the browsers that are used as user agents. Multiple browsers are supported, such as Chrome, Firefox, Internet Explorer, and others. Once created, the address can be selected as a source of a proxy policy. This means that a policy will only allow or block requests from the specified user agent.

This example creates a user agent address for Google Chrome.

To create a user agent address in the GUI:

1. Go to *Policy & Objects* > *Addresses*.
2. Click *Create New* > *Address*.
3. Set the following:
   - *Category* to *Proxy Address*,
   - *Name* to *UA-Chrome*,
   - *Type* to *User Agent*,
   - *Host* to *all*, and
   - *User Agent* to *Google Chrome*.

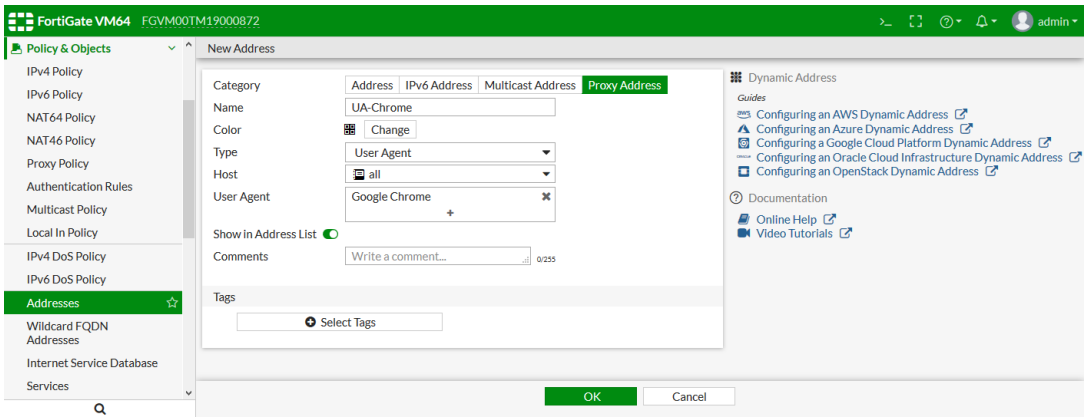

4. Click *OK*.

To create a user agent address in the CLI:

```
config firewall proxy-address
    edit "UA-Chrome"
        set uuid e3550196-57d8-51e9-eed0-115095a7920b
        set type ua
        set host "all"
        set ua chrome
    next
end
```


Advanced (source)

In this address type, a user can create an address based on multiple parameters, including HTTP method, User Agent, and HTTP header. Once created, the address can be selected as a source of a proxy policy. This means that a policy will only allow or block requests that match the selected address.

This example creates an address that uses the get method, a user agent for Google Chrome, and an HTTP header with the pattern *Q[A-B]*.

To create an advanced (source) address in the GUI:

1. Go to *Policy & Objects* > *Addresses*.
2. Click *Create New* > *Address*.
3. Set the following:
   - *Category* to *Proxy Address*,
   - *Name* to *advanced_src*,
   - *Type* to *Advanced (Source)*,
   - *Host* to *all*,
   - *Request Method* to *GET*,
   - *User Agent* to *Google Chrome*, and
   - *HTTP header* to *Header_Test* : *Q[A-B]*.

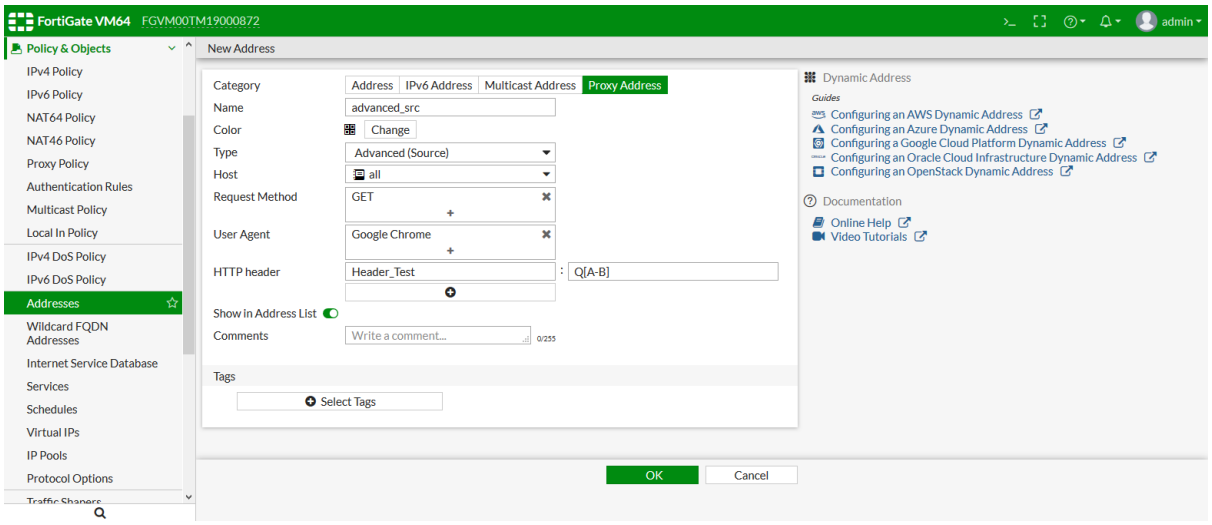

4. Click *OK*.

To create an advanced (source) address in the CLI:

```
config firewall proxy-address
    edit "advance_src"
        set uuid fb9991d0-57e3-51e9-9fed-855e0bca16c3
        set type src-advanced
        set host "all"
        set method get
        set ua chrome
        config header-group
            edit 1
                set header-name "Header_Test"
                set header "Q[A-B]"
            next
        end
    next
end
```

Advanced (destination)


In this address type, a user can create an address based on URL pattern and URL category parameters. Once created, the address can be selected as a destination of a proxy policy. This means that a policy will only allow or block requests that match the selected address.

This example creates an address with the URL pattern */about* that are in the *Education* category. For more information about categories, see https://fortiguard.com/webfilter/categories.

To create an advanced (destination) address in the GUI:

1. Go to *Policy & Objects* > *Addresses*.
2. Click *Create New* > *Address*.
3. Set the following:
   - *Category* to *Proxy Address*,
   - *Name* to *Advanced-dst*,

- *Type* to *Advanced (Destination)*,
- *Host* to *all*,
- *URL Path Regex* to */about*, and
- *URL Category* to *Education*.

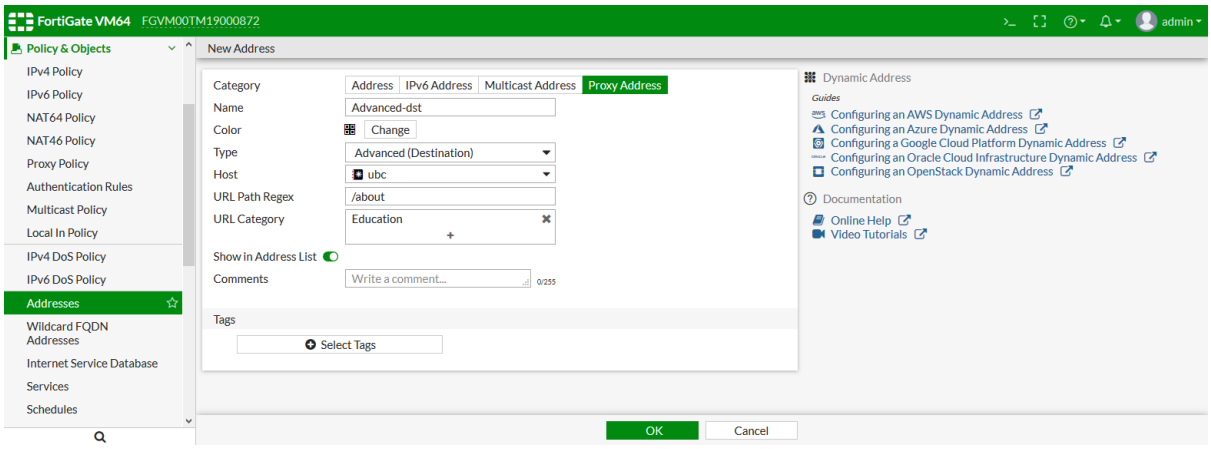

4. Click *OK*.

To create an advanced (destination) address in the CLI:

```
config firewall proxy-address
    edit "Advanced-dst"
        set uuid d9c2a0d6-57e5-51e9-8c92-6aa8b3372198
        set type dst-advanced
        set host "ubc"
        set path "/about"
        set category 30
    next
end
```

Proxy policy security profiles

Web proxy policies support most security profile types.



Security profiles must be created before they can be used in a policy, see Security Profiles on page 867 for information.

Explicit web proxy policy

The security profiles supported by explicit web proxy policies are:

- *AntiVirus*
- *Web Filter*
- *Application Control*
- *IPS*
- *DLP Sensor*

- *ICAP*
- *Web Application Firewall*
- *SSL Inspection*


To configure security profiles on an explicit web proxy policy in the GUI:

1. Go to *Policy & Objects* > *Proxy Policy*.
2. Click *Create New*.
3. Set the following:

Proxy Type	Explicit Web
Outgoing Interface	port1
Source	all
Destination	all
Schedule	always
Service	webproxy
Action	ACCEPT

4. In the *Firewall / Network Options* section, set *Protocol Options* to *default*.
5. In the *Security Profiles* section, make the following selections (for this example, these profiles have all already been created):

AntiVirus	av
Web Filter	urlfiler
Application Control	app
IPS	Sensor-1
DLP Sensor	dlp
ICAP	default
Web Application Firewall	default
SSL Inspection	deep-inspection

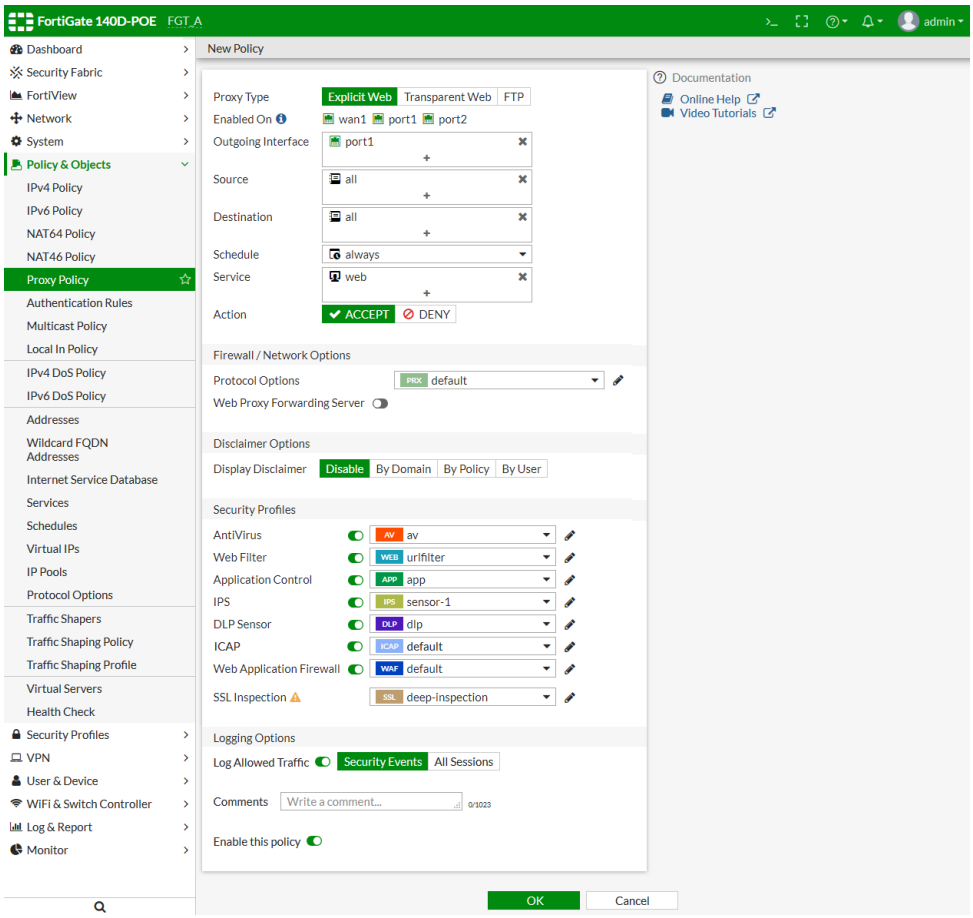

6. Click *OK* to create the policy.

To configure security profiles on an explicit web proxy policy in the CLI:

```
config firewall proxy-policy
    edit 1
        set uuid c8a71a2c-54be-51e9-fa7a-858f83139c70
        set proxy explicit-web
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "all"
        set service "web"
        set action accept
        set schedule "always"
        set utm-status enable
        set av-profile "av"
        set webfilter-profile "urlfilter"
        set dlp-sensor "dlp"
        set ips-sensor "sensor-1"
        set application-list "app"
        set icap-profile "default"
        set waf-profile "default"
        set ssl-ssh-profile "deep-inspection"
    next
end
```

Transparent proxy

The security profiles supported by transparent proxy policies are:

- *AntiVirus*
- *Web Filter*
- *Application Control*
- *IPS*
- *DLP Sensor*
- *ICAP*
- *Web Application Firewall*
- *SSL Inspection*


To configure security profiles on a transparent proxy policy in the GUI:

1. Go to *Policy & Objects* > *Proxy Policy*.
2. Click *Create New*.
3. Set the following:

Proxy Type	Explicit Web
Incoming Interfae	port2
Outgoing Interface	port1
Source	all
Destination	all
Schedule	always
Service	webproxy
Action	ACCEPT

4. In the *Firewall / Network Options* section, set *Protocol Options* to *default*.
5. In the *Security Profiles* section, make the following selections (for this example, these profiles have all already been created):

AntiVirus	av
Web Filter	urlfiler
Application Control	app
IPS	Sensor-1
DLP Sensor	dlp
ICAP	default
Web Application Firewall	default
SSL Inspection	deep-inspection

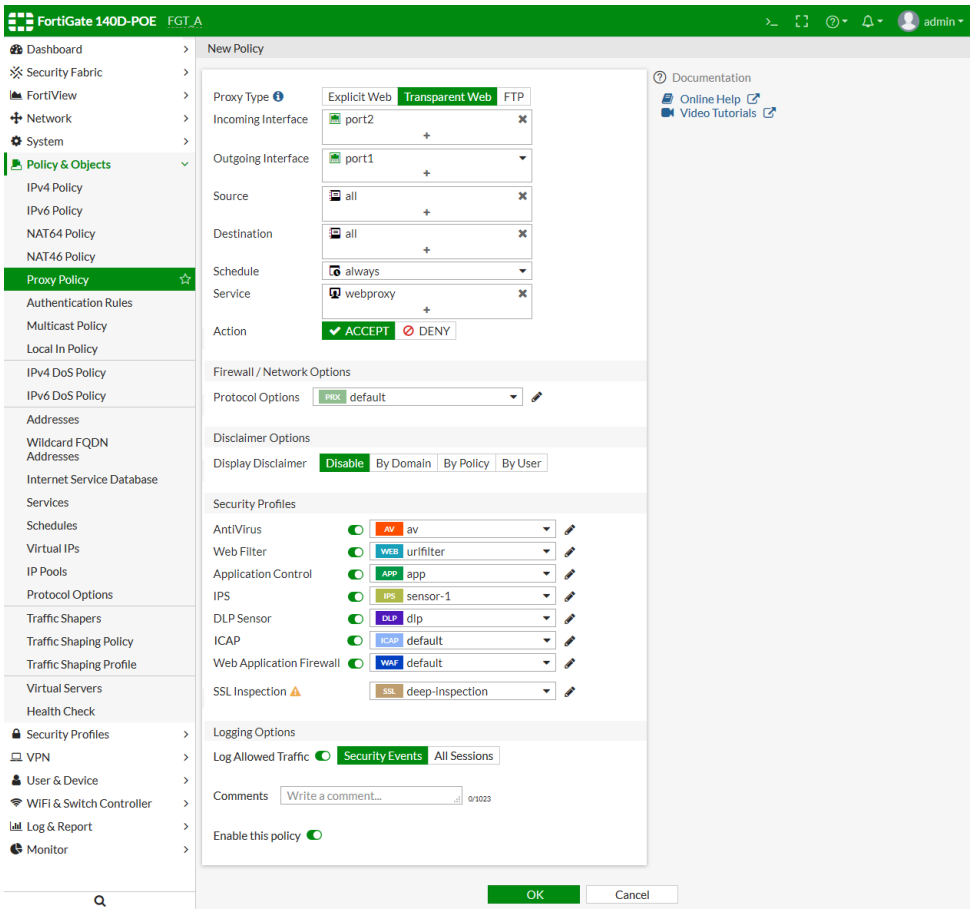

6. Click *OK* to create the policy.

To configure security profiles on a transparent proxy policy in the CLI:

```
config firewall proxy-policy
    edit 2
        set uuid 8fb05036-56fc-51e9-76a1-86f757d3d8dc
        set proxy transparent-web
        set srcintf "port2"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "all"
        set service "webproxy"
        set action accept
        set schedule "always"
        set utm-status enable
        set av-profile "av"
        set webfilter-profile "urlfilter"
        set dlp-sensor "dlp"
        set ips-sensor "sensor-1"
        set application-list "app"
        set icap-profile "default"
        set waf-profile "default"
        set ssl-ssh-profile "certificate-inspection"
```

```
    next
end
```

FTP proxy

The security profiles supported by FTP proxy policies are:

- *AntiVirus*
- *Application Control*
- *IPS*
- *DLP Sensor*


To configure security profiles on an FTP proxy policy in the GUI:

1. Go to *Policy & Objects* > *Proxy Policy*.
2. Click *Create New*.
3. Set the following:

Proxy Type	FTP
Outgoing Interface	port1
Source	all
Destination	all
Schedule	always
Action	ACCEPT

4. In the *Firewall / Network Options* section, set *Protocol Options* to *default*.
5. In the *Security Profiles* section, make the following selections (for this example, these profiles have all already been created):

AntiVirus	av
Application Control	app
IPS	Sensor-1
DLP Sensor	dlp

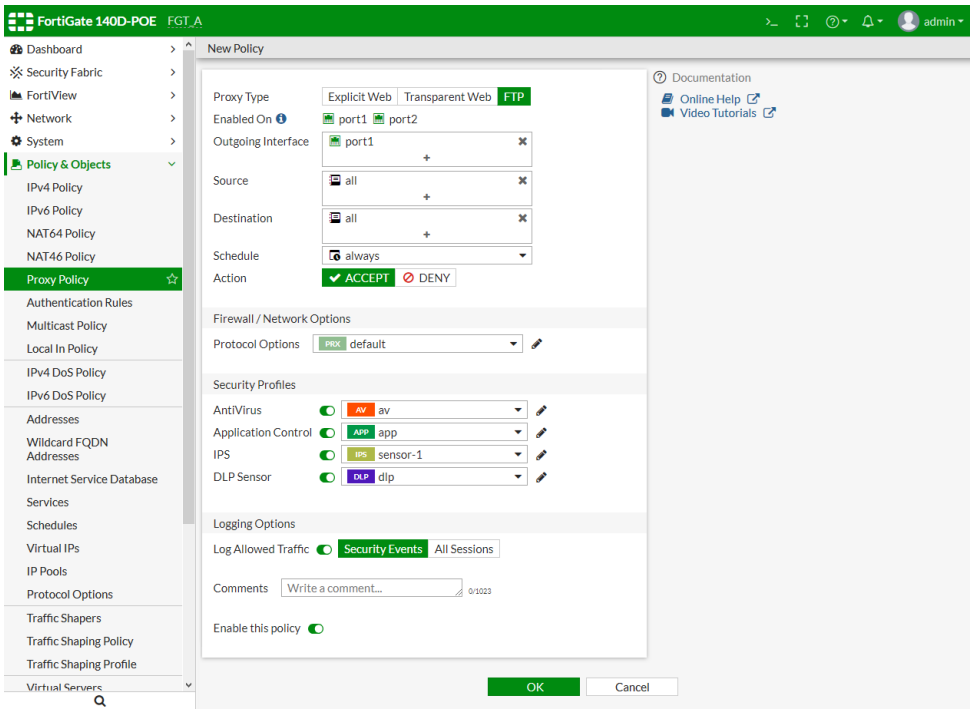

6. Click *OK* to create the policy.

To configure security profiles on an FTP proxy policy in the CLI:

```
config firewall proxy-policy
    edit 3
        set uuid cb89af34-54be-51e9-4496-c69ccfc4d5d4
        set proxy ftp
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set utm-status enable
        set av-profile "av"
        set dlp-sensor "dlp"
        set ips-sensor "sensor-1"
        set application-list "app"
    next
end
```

Explicit proxy authentication

FortiGate supports multiple authentication methods. This topic explains using an external authentication server with Kerberos as the primary and NTLM as the fallback.

To configure Explicit Proxy with authentication:

1. Enable and configure the explicit proxy on page 387.
2. Configure the authentication server and create user groups on page 387.

3. Create an authentication scheme and rules on page 389.
4. Create an explicit proxy policy and assign a user group to the policy on page 390.
5. Verify the configuration on page 391.

Enable and configure the explicit proxy

To enable and configure explicit web proxy in the GUI:

1. Go to *Network* > *Explicit Proxy*.
2. Enable *Explicit Web Proxy*.
3. Select *port2* as the *Listen on Interfaces* and set the *HTTP Port* to *8080*.
4. Configure the remaining settings as needed.
5. Click *Apply*.

To enable and configure explicit web proxy in the CLI:

```
config web-proxy explicit
    set status enable
    set ftp-over-http enable
    set socks enable
    set http-incoming-port 8080
    set ipv6-status enable
    set unknown-http-version best-effort
end
config system interface
    edit "port2"
        set vdom "vdom1"
        set ip 10.1.100.1 255.255.255.0
        set allowaccess ping https ssh snmp http telnet
        set type physical
        set explicit-web-proxy enable
        set snmp-index 12
        end
    next
end
```

Configure the authentication server and create user groups

Since we are using an external authentication server with Kerberos authentication as the primary and NTLM as the fallback, Kerberos authentication is configured first and then FSSO NTLM authentication is configured.

For successful authorization, the FortiGate checks if user belongs to one of the groups that is permitted in the security policy.

To configure an authentication server and create user groups in the GUI:

1. Configure Kerberos authentication:
   a. Go to *User & Device* > *LDAP Servers*.
   b. Click *Create New*.

c. Set the following:

Name	ldap-kerberos
Server IP	172.18.62.220
Server Port	389
Common Name Identifier	cn
Distinguished Name	dc=fortinetqa,dc=local

d. Click *OK*

2. Define Kerberos as an authentication service. This option is only available in the CLI. For information on generating a keytab, see Generating a keytab on a Windows server on page 391.
3. Configure FSSO NTLM authentication:
FSSO NTLM authentication is supported in a Windows AD network. FSSO can also provide NTLM authentication service to the FortiGate unit. When a user makes a request that requires authentication, the FortiGate initiates NTLM negotiation with the client browser, but does not process the NTLM packets itself. Instead, it forwards all the NTLM packets to the FSSO service for processing.
   a. Go to *Security Fabric* > *Fabric Connectors*.
   b. Click *Create New* and select *Fortinet Single Sign-On Agent* from the *SSO/Identity* category.
   c. Set the *Name* to *FSSO*, *Primary FSSO Agent* to *172.16.200.220*, and enter a password.
   d. Click *OK*.
4. Create a user group for Kerberos authentication:
   a. Go to *User & Device* > *User Groups*.
   b. Click *Create New*.
   c. Set the *Name* to *Ldap-Group*, and *Type* to *Firewall*.
   d. In the *Remote Groups* table, click *Add*, and set the *Remote Server* to the previously created *ldap-kerberos* server.
   e. Click *OK*.
5. Create a user group for NTLM authentication:
   a. Go to *User & Device* > *User Groups*.
   b. Click *Create New*.
   c. Set the *Name* to *NTLM-FSSO-Group*, *Type* to *Fortinet Single Sign-On (FSSO)*, and add *FORTINETQA/FSSO* as a member.
   d. Click *OK*.

To configure an authentication server and create user groups in the CLI:

1. Configure Kerberos authentication:

```
config user ldap
    edit "ldap-kerberos"
        set server "172.18.62.220"
        set cnid "cn"
        set dn "dc=fortinetqa,dc=local"
        set type regular
        set username "CN=root,CN=Users,DC=fortinetqa,DC=local"
        set password **********
    next
end
```

2. Define Kerberos as an authentication service:

```
config user krb-keytab
    edit "http_service"
        set pac-data disable
        set principal "HTTP/FGT.FORTINETQA.LOCAL@FORTINETQA.LOCAL"
        set ldap-server "ldap-kerberos"
        set keytab
"BQIAAABFAAIAEEZPUlRJTkVUUUEuTE9DQUwABEhUVFAAFEZHVC5GT1JUSU5FVFFBLkxPQ0FMAAAAAQAAAAA
EAAEACKLCMonpitnVAAAARQACABBGT1JUSU5FVFFBLkxPQ0FMAARIVFRQABRGR1QuRk9SVElORVRRQS5MT0N
BTAAAAAEAAAAABAADAAiiwjKJ6YrZ1QAAAE0AAgAQRk9SVElORVRRQS5MT0NBTAAESFRUUAAURkdULkZPUlR
JTkVUUUEuTE9DQUwAAAABAAAAAAQAFwAQUHo9uqR9cSkzyxdzKCEXdwAAAF0AAgAQRk9SVElORVRRQS5MT0N
BTAAESFRUUAAURkdULkZPUlRJTkVUUUEuTE9DQUwAAAABAAAAAAQAEgAgzee854Aq1HhQiKJZvV4tL2Poy7h
MIARQpK8MCB//BIAAAABNAAIAEEZPUlRJTkVUUUEuTE9DQUwABEhUVFAAFEZHVC5GT1JUSU5FVFFBLkxPQ0F
MAAAAAQAAAAAEABEAEG49vHEiiBghr63Z/lnwYrU="
    next
end
```

For information on generating a keytab, see Generating a keytab on a Windows server on page 391.

3. Configure FSSO NTLM authentication:

```
config user fsso
    edit "1"
        set server "172.18.62.220"
        set password
    next
end
```

4. Create a user group for Kerberos authentication:

```
config user group
    edit "Ldap-Group"
        set member "ldap" "ldap-kerberos"
    next
end
```

5. Create a user group for NTLM authentication:

```
config user group
    edit "NTLM-FSSO-Group"
        set group-type fsso-service
        set member "FORTINETQA/FSSO"
    next
end
```

Create an authentication scheme and rules

Explicit proxy authentication is managed by authentication schemes and rules. An authentication scheme must be created first, and then the authentication rule.

To create an authentication scheme and rules in the GUI:

1. Create an authentication scheme:
   a. Go to *Policy & Objects* > *Authentication Rules*.
   b. Click *Create New* > *Authentication Schemes*.

c. Set the *Name* to *Auth-scheme-Negotiate* and select *Negotiate* as the *Method*.
d. Click *OK*.

2. Create an authentication rule:
a. Go to *Policy & Objects* > *Authentication Rules*.
b. Click *Create New* > *Authentication Rules*.
c. Set the *Name* to *Auth-Rule*, *Source Address* to *all*, and *Protocol* to *HTTP*.
d. Enable *Authentication Scheme*, and select the just created *Auth-scheme-Negotiate* scheme.
e. Click *OK*.

To create an authentication scheme and rules in the CLI:

1. Create an authentication scheme:

```
config authentication scheme
    edit "Auth-scheme-Negotiate"
        set method negotiate       <<< Accepts both Kerberos and NTLM as fallback
    next
end
```

2. Create an authentication rule:

```
config authentication rule
    edit "Auth-Rule"
        set status enable
        set protocol http
        set srcaddr "all"
        set ip-based enable
        set active-auth-method "Auth-scheme-Negotiate"
        set comments "Testing"
    next
end
```

Create an explicit proxy policy and assign a user group to the policy

To create an explicit proxy policy and assign a user group to it in the GUI:

1. Go to *Policy & Object* > *Proxy Policy*.
2. Click *Create New*.
3. Set *Proxy Type* to *Explicit Web* and *Outgoing Interface* to *port1*.
4. Set *Source* to *all*, and the just created user groups *NTLM-FSSO-Group* and *Ldap-Group*.
5. Also set *Destination* to *all*, *Schedule* to *always*, *Service* to *webproxy*, and *Action* to *ACCEPT*.
6. Click *OK*.

To create an explicit proxy policy and assign a user group to it in the CLI:

```
config firewall proxy-policy
    edit 1
        set uuid 722b6130-13aa-51e9-195b-c4196568d667
        set proxy explicit-web
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "all"
```

```
            set service "web"
            set action accept
            set schedule "always"
            set logtraffic all
            set groups "NTLM-FSSO-Group" "Ldap-Group"
            set av-profile "av"
            set ssl-ssh-profile "deep-custom"
        next
    end
```

Verify the configuration

Log in using a domain and system that would be authenticated using the Kerberos server, then enter the `diagnose wad user list` CLI command to verify:

```
# diagnose wad user list
ID: 8, IP: 10.1.100.71, VDOM: vdom1
  user name    : test1@FORTINETQA.LOCAL
  duration     : 389
  auth_type    : IP
  auth_method : Negotiate
  pol_id       : 1
  g_id         : 1
  user_based   : 0
  expire       : no
  LAN:
    bytes_in=4862 bytes_out=11893
  WAN:
    bytes_in=7844 bytes_out=1023
```

Log in using a system that is not part of the domain. The NTLM fallback server should be used:

```
# diagnose wad user list
ID: 2, IP: 10.1.100.202, VDOM: vdom1
  user name    : TEST31@FORTINETQA
  duration     : 7
  auth_type    : IP
  auth_method : NTLM
  pol_id       : 1
  g_id         : 5
  user_based   : 0
  expire       : no
  LAN:
    bytes_in=6156 bytes_out=16149
  WAN:
    bytes_in=7618 bytes_out=1917
```

Generating a keytab on a Windows server

A keytab is used to allow services that are not running Windows to be configured with service instance accounts in the Active Directory Domain Service (AD DS). This allows Kerberos clients to authenticate to the service through Windows Key Distribution Centers (KDCs).

For an explanation of the process, see https://docs.microsoft.com/en-us/windows-server/administration/windows-commands/ktpass.

To generate a keytab on a Windows server:

1. On the server, create a user for the FortiGate:
   - The service name is the FQDN for the explicit proxy interface, such as the hostname in the client browser proxy configuration. In this example, the service name is *FGT*.
   - The account only requires *domain users* membership.
   - The password must be very strong.
   - The password is set to never expire.
2. Add the FortiGate FQDN in to the Windows DNS domain, as well as in-addr.arpa.
3. Generate the Kerberos keytab using the `ktpass` command on Windows servers and many domain workstations:

   ```
   # ktpass -princ HTTP/<domain name of test fgt>@realm -mapuser <user> -pass <password> -crypto all -ptype KRB5_NT_PRINCIPAL -out fgt.keytab
   ```

   For example:

   ```
   ktpass -princ HTTP/FGT.FORTINETQA.LOCAL@FORTINETQA.LOCAL -mapuser FGT -pass ********** -crypto all -ptype KRB5_NT_PRINCIPAL -out fgt.keytab
   ```

   If the FortiGate is handling multiple keytabs in Kerberos authentication, use different passwords when generating each keytab.

4. Encode the keytab to base64 in a text file:
   - On Windows: `certutil -encode fgt.keytab tmp.b64 && findstr /v /c:- tmp.b64 > fgt.txt`
   - On Linux: `base64 fgt.keytab > fgt.txt`
   - On MacOS: `base64 -i fgt.keytab -o fgt.txt`
5. Use the code in `fgt.txt` as the keytab parameter when configuring the FortiGate.

Transparent web proxy forwarding

In FortiOS, there is an option to enable proxy forwarding for transparent web proxy policies and regular firewall policies for HTTP and HTTPS.

In previous versions of FortiOS, you could forward proxy traffic to another proxy server (proxy chaining) with explicit proxy. Now, you can forward web traffic to the upstream proxy without having to reconfigure your browsers or publish a proxy auto-reconfiguration (PAC) file.

Once configured, the FortiGate forwards traffic generated by a client to the upstream proxy. The upstream proxy then forwards it to the server.

To enable proxy forwarding using the CLI:

1. Configure the web proxy forwarding server:

   ```
   config web-proxy forward-server
       edit "PC_03"
           set ip 172.16.200.46
           set healthcheck enable
           set monitor "http://www.google.ca"
   ```

```
    next
end
```

2. Append the web proxy forwarding server to a firewall policy:

```
config firewall policy
    edit 1
        set name "LAN to WAN"
        set uuid b89f6184-2a6b-51e9-5e2d-9b877903a308
        set srcintf "port2"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set logtraffic all
        set webproxy-forward-server "PC_03"
        set fsso disable
        set av-profile "av"
        set ssl-ssh-profile "deep-custom"
        set nat enable
    next
end
```

Multiple dynamic header count

Multiple dynamic headers are supported for web proxy profiles, as well as Base64 encoding and the append/new options.

Administrators only have to select the dynamic header in the profile. The FortiGate will automatically display the corresponding static value. For example, if the administrator selects the `$client-ip` header, the FortiGate will display the actual client IP address.

The supported headers are:

`$client-ip`	Client IP address
`$user`	Authentication user name
`$domain`	User domain name
`$local_grp`	Firewall group name
`$remote_grp`	Group name from authentication server
`$proxy_name`	Proxy realm name

To configure dynamic headers using the CLI:

Since authentication is required, FSSO NTLM authentication is configured in this example.

1. Configure LDAP:

```
config user ldap
    edit "ldap-kerberos"
```

```
        set server "172.18.62.220"
        set cnid "cn"a
        set dn "dc=fortinetqa,dc=local"
        set type regular
        set username "CN=root,CN=Users,DC=fortinetqa,DC=local"
        set password **********
    next
end
```

2. Configure FSSO:

```
config user fsso
    edit "1"
        set server "172.18.62.220"
        set password **********
    next
end
```

3. Configure a user group:

```
config user group
    edit "NTLM-FSSO"
        set group-type fsso-service
        set member "FORTINETQA/FSSO"
    next
end
```

4. Configure an authentication scheme:

```
config authentication scheme
    edit "au-sch-ntlm"
        set method ntlm
    next
end
```

5. Configure an authentication rule:

```
config authentication rule
    edit "au-rule-fsso"
        set srcaddr "all"
        set active-auth-method "au-sch-ntlm"
    next
end
```

6. Create a web proxy profile that adds a new dynamic and custom `Via` header:

```
config web-proxy profile
    edit "test"
        set log-header-change enable
        config headers
            edit 1
                set name "client-ip"
                set content "$client-ip"
            next
            edit 2
                set name "Proxy-Name"
                set content "$proxy_name"
            next
            edit 3
                set name "user"
```


```
                set content "$user"
            next
            edit 4
                set name "domain"
                set content "$domain"
            next
            edit 5
                set name "local_grp"
                set content "$local_grp"
            next
            edit 6
                set name "remote_grp"
                set content "$remote_grp"
            next
            edit 7
                set name "Via"
                set content "Fortigate-Proxy"
            next
        end
    next
end
```

7. In the proxy policy, append the web proxy profile created in the previous step:

```
config firewall proxy-policy
    edit 1
        set uuid bb7488ee-2a6b-51e9-45c6-1715bdc271d8
        set proxy explicit-web
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "all"
        set service "web"
        set action accept
        set schedule "always"
        set logtraffic all
        set groups "NTLM-FSSO"
        set webproxy-profile "test"
        set utm-status enable
        set av-profile "av"
        set webfilter-profile "content"
        set ssl-ssh-profile "deep-custom"
    next
end
```

8. Once traffic is being generated from the client, look at the web filter logs to verify that it is working.
The corresponding values for all the added header fields displays in the *Change headers* section at the bottom of the *Log Details* pane.

```
1: date=2019-02-07 time=13:57:24 logid="0344013632" type="utm" subtype="webfilter"
eventtype="http_header_change" level="notice" vd="vdom1" eventtime=1549576642 policyid=1
transid=50331689 sessionid=1712788383 user="TEST21@FORTINETQA" group="NTLM-FSSO"
profile="test" srcip=10.1.100.116 srcport=53278 dstip=172.16.200.46 dstport=80
srcintf="port2" srcintfrole="undefined" dstintf="port1" dstintfrole="undefined" proto=6
service="HTTP" url="http://172.16.200.46/" agent="curl/7.22.0" chgheaders="Added=client-
ip: 10.1.100.116|Proxy-Name: 1.1 100D.qa|user: TEST21|domain: FORTINETQA|local_grp:
NTLM-FSSO|remote_grp: FORTINETQA/FSSO|Via: Fortigate-Proxy"
```

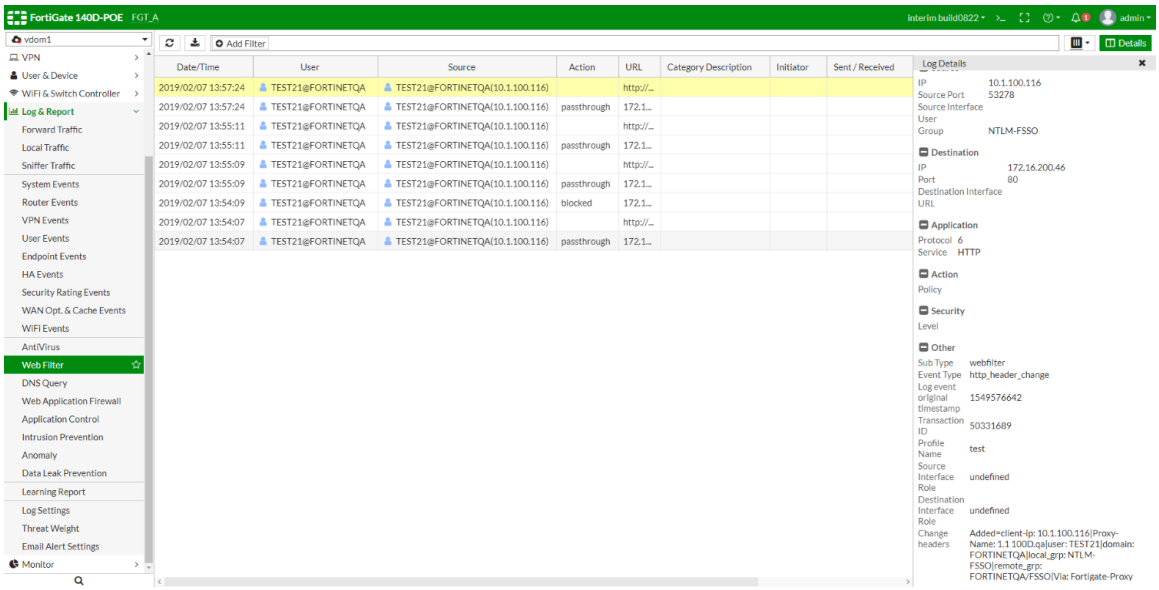

Restricted SaaS access (Office 365, G Suite, Dropbox)

With the web proxy profile, you can specify access permissions for Microsoft Office 365, Google G Suite, and Dropbox. You can insert vendor-defined headers that restrict access to the specific accounts. You can also insert custom headers for any destination.

You can configure the web proxy profile with the required headers for the specific destinations, and then directly apply it to a policy to control the header's insertion.

To implement Office 365 tenant restriction, G Suite account access control, and Dropbox network access control:

1. Configure a web proxy profile according to the vendors' specifications:
   a. Define the traffic destination (service provider).
   b. Define the header name, defined by the service provider.
   c. Define the value that will be inserted into the traffic, defined by your settings.
2. Apply the web proxy profile to a policy.

The following example creates a web proxy profile for Office 365, G Suite, and Dropbox access control.



Due to vendors' changing requirements, this example may no longer comply with the vendors' official guidelines.

To create a web proxy profile for access control using the CLI:

1. Configure the web proxy profile:

```
config web-proxy profile
   edit "SaaS-Tenant-Restriction"
        set header-client-ip pass
```

```
        set header-via-request pass
        set header-via-response pass
        set header-x-forwarded-for pass
        set header-front-end-https pass
        set header-x-authenticated-user pass
        set header-x-authenticated-groups pass
        set strip-encoding disable
        set log-header-change disable
        config headers
            edit 1
                set name "Restrict-Access-To-Tenants"  <---header name defined by
Office365 spec. input EXACTLY as it is
                set dstaddr "Microsoft Office 365" <----built-in destination address for
Office365
                set action add-to-request
                set base64-encoding disable
                set add-option new
                set protocol https http
                set content "contoso.onmicrosoft.com,fabrikam.onmicrosoft.com"  <----
your tenants restriction configuration
            next
            edit 2
                set name "Restrict-Access-Context"  <----header name defined by
Office365 spec. input EXACTLY as it is
                set dstaddr "Microsoft Office 365"  <----build-in destination address
for Office365
                set action add-to-request
                set base64-encoding disable
                set add-option new
                set protocol https http
                set content "456ff232-35l2-5h23-b3b3-3236w0826f3d" <----your directory
ID can find in Azure portal
            next
            edit 3
                set name "X-GooGApps-Allowed-Domains"  <----header name defined by
Google G suite.
                set dstaddr "G Suite"  <---- built-in G Suite destination address
                set action add-to-request
                set base64-encoding disable
                set add-option new
                set protocol https http
                set content "abcd.com"    <----your domain restriction when you create G
Suite account
            next

            edit 4
                set name "X-Dropbox-allowed-Team-Ids" <----header defined by Dropbox
                set dstaddr "wildcard.dropbox.com"  <----build-in destination address
for Dropbox
                set action add-to-request
                set base64-encoding disable
                set add-option new
                set protocol https http
                set content "dbmid:FDFSVF-DFSDF"  <----your team-Id in Dropbox
            next
        end
```

```
    next
end
```

2. Apply the web proxy profile to a firewall policy:


```
config firewall policy
     edit 1
                set name "WF"
                set uuid 09928b08-ce46-51e7-bd95-422d8fe4f200
                set srcintf "port10" "wifi"
                set dstintf "port9"
                set srcaddr "all"
                set dstaddr "all"
                set action accept
                set schedule "always"
                set service "ALL"
                set webproxy-profile "SaaS-Tenant-Restriction"
                set utm-status enable
                set utm-inspection-mode proxy
                set logtraffic all
                set webfilter-profile "blocktest2"
         set application-list "g-default"
                set profile-protocol-options "protocol"
                set ssl-ssh-profile "protocols"
                set nat enable
        next
end
```

References

- Office 365: Use tenant restrictions to manage access to SaaS cloud applications
- G Suite: Block access to consumer accounts
- Dropbox: Network control

Explicit proxy and FortiSandbox Cloud

Explicit proxy connections can leverage FortiSandbox Cloud for advanced threat scanning and updates. This allows FortiGates behind isolated networks to connect to FortiCloud services.

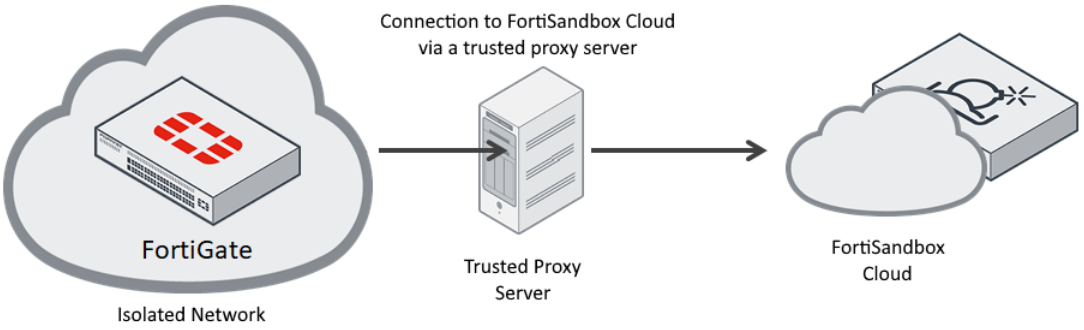

To configure FortiGuard services to communicate with an explicit proxy server:

```
config system fortiguard
    set proxy-server-ip 172.16.200.44
    set proxy-server-port 3128
    set proxy-username "test1"
    set proxy-password ENC
Y0+KTg9UsILkv8+nDe+Pe3VlnlaHUMzLkfAXLATknW/xm/Xv7EdZHTnua1djM+waZA1vxCh8LV7Ci4sEhj/PABSTShSt
xskEn3E1+CjxviwVSljgF6AD+zJZF/+4jkspq+PogZT3LVO68+kqsPdU4rikuy1BbnsbZcPxC/MJyuIx7343bdKYqp+I
UprQUR2wf8tiMg==
end
```

To verify the explicit proxy connection to FortiSandbox Cloud:

```
# diagnose debug application forticldd -1
Debug messages will be on for 30 minutes.
# diagnose debug enable
[2942] fds_handle_request: Received cmd 23 from pid-2526, len 0
[40] fds_queue_task: req-23 is added to Cloud-sandbox-controller
[178] fds_svr_default_task_xmit: try to get IPs for Cloud-sandbox-controller
[239] fds_resolv_addr: resolve aptctrl1.fortinet.com
[169] fds_get_addr: name=aptctrl1.fortinet.com, id=32, cb=0x2bc089
[101] dns_parse_resp: DNS aptctrl1.fortinet.com -&gt; 172.16.102.21
[227] fds_resolv_cb: IP-1: 172.16.102.21
[665] fds_ctx_set_addr: server: 172.16.102.21:443
[129] fds_svr_default_pickup_server: Cloud-sandbox-controller: 172.16.102.21:443
[587] fds_https_start_server: server: 172.16.102.21:443
[579] ssl_new: SSL object is created
[117] https_create: proxy server 172.16.200.44 port:3128
[519] fds_https_connect: https_connect(172.16.102.21) is established.
[261] fds_svr_default_on_established: Cloud-sandbox-controller has connected to
ip=172.16.102.21
[268] fds_svr_default_on_established: server-Cloud-sandbox-controller handles cmd-23
[102] fds_pack_objects: number of objects: 1
[75] fds_print_msg: FCPC: len=109
[81] fds_print_msg: Protocol=2.0
[81] fds_print_msg: Command=RegionList
[81] fds_print_msg: Firmware=FG101E-FW-6.02-0917
[81] fds_print_msg: SerialNumber=FG101E4Q17002429
[81] fds_print_msg: TimeZone=-7
[75] fds_print_msg: http req: len=248
[81] fds_print_msg: POST https://172.16.102.21:443/FCPService HTTP/1.1
[81] fds_print_msg: User-Agent: Mozilla/4.0 (compatible; MSIE 6.0; Windows NT 5.1)
[81] fds_print_msg: Host: 172.16.102.21:443
[81] fds_print_msg: Cache-Control: no-cache
[81] fds_print_msg: Connection: close
[81] fds_print_msg: Content-Type: application/octet-stream
[81] fds_print_msg: Content-Length: 301
[524] fds_https_connect: http request to 172.16.102.21: header=248, ext=301.
[257] fds_https_send: sent 248 bytes: pos=0, len=248
[265] fds_https_send: 172.16.102.21: sent 248 byte header, now send 301-byte body
[257] fds_https_send: sent 301 bytes: pos=0, len=301
[273] fds_https_send: sent the entire request to server: 172.16.102.21:443
[309] fds_https_recv: read 413 bytes: pos=413, buf_len=2048
[332] fds_https_recv: received the header from server: 172.16.102.21:443, [HTTP/1.1 200
Content-Type: application/octet-stream
```

```
Content-Length: 279
Date: Thu, 20 Jun 2019 16:41:11 GMT
Connection: close]
[396] fds_https_recv: Do memmove buf_len=279, pos=279
[406] fds_https_recv: server: 172.16.102.21:443, buf_len=279, pos=279
[453] fds_https_recv: received a packet from server-172.16.102.21:443: sz=279, objs=1
[194] __ssl_data_ctx_free: Done
[839] ssl_free: Done
[830] ssl_disconnect: Shutdown
[481] fds_https_recv: obj-0: type=FCPR, len=87
[294] fds_svr_default_on_response: server-Cloud-sandbox-controller handles cmd-23
[75] fds_print_msg: fcpr:  len=83
[81] fds_print_msg: Protocol=2.0
[81] fds_print_msg: Response=202
[81] fds_print_msg: ResponseItem=Region:Europe,Global,Japan,US
[81] fds_print_msg: existing:Japan
[3220] aptctrl_region_res: Got rsp: Region:Europe,Global,Japan,US
[3222] aptctrl_region_res: Got rsp: Region existing:Japan
[439] fds_send_reply: Sending 28 bytes data.
[395] fds_free_tsk: cmd=23; req.noreply=1
# [136] fds_on_sys_fds_change: trace
[2942] fds_handle_request: Received cmd 22 from pid-170, len 0
[40] fds_queue_task: req-22 is added to Cloud-sandbox-controller
[587] fds_https_start_server: server: 172.16.102.21:443
[579] ssl_new: SSL object is created
[117] https_create: proxy server 172.16.200.44 port:3128
[519] fds_https_connect: https_connect(172.16.102.21) is established.
[261] fds_svr_default_on_established: Cloud-sandbox-controller has connected to
ip=172.16.102.21
[268] fds_svr_default_on_established: server-Cloud-sandbox-controller handles cmd-22
[102] fds_pack_objects: number of objects: 1
[75] fds_print_msg: FCPC: len=146
[81] fds_print_msg: Protocol=2.0
[81] fds_print_msg: Command=UpdateAPT
[81] fds_print_msg: Firmware=FG101E-FW-6.02-0917
[81] fds_print_msg: SerialNumber=FG101E4Q17002429
[81] fds_print_msg: TimeZone=-7
[81] fds_print_msg: TimeZoneInMin=-420
[81] fds_print_msg: DataItem=Region:US
[75] fds_print_msg: http req: len=248
[81] fds_print_msg: POST https://172.16.102.21:443/FCPService HTTP/1.1
[81] fds_print_msg: User-Agent: Mozilla/4.0 (compatible; MSIE 6.0; Windows NT 5.1)
[81] fds_print_msg: Host: 172.16.102.21:443
[81] fds_print_msg: Cache-Control: no-cache
[81] fds_print_msg: Connection: close
[81] fds_print_msg: Content-Type: application/octet-stream
[81] fds_print_msg: Content-Length: 338
[524] fds_https_connect: http request to 172.16.102.21: header=248, ext=338.
[257] fds_https_send: sent 248 bytes: pos=0, len=248
[265] fds_https_send: 172.16.102.21: sent 248 byte header, now send 338-byte body
[257] fds_https_send: sent 338 bytes: pos=0, len=338
[273] fds_https_send: sent the entire request to server: 172.16.102.21:443
[309] fds_https_recv: read 456 bytes: pos=456, buf_len=2048
[332] fds_https_recv: received the header from server: 172.16.102.21:443, [HTTP/1.1 200
Content-Type: application/octet-stream
Content-Length: 322
```

```
Date: Thu, 20 Jun 2019 16:41:16 GMT
Connection: close]
[396] fds_https_recv: Do memmove buf_len=322, pos=322
[406] fds_https_recv: server: 172.16.102.21:443, buf_len=322, pos=322
[453] fds_https_recv: received a packet from server-172.16.102.21:443: sz=322, objs=1
[194] __ssl_data_ctx_free: Done
[839] ssl_free: Done
[830] ssl_disconnect: Shutdown
[481] fds_https_recv: obj-0: type=FCPR, len=130
[294] fds_svr_default_on_response: server-Cloud-sandbox-controller handles cmd-22
[75] fds_print_msg: fcpr:  len=126
[81] fds_print_msg: Protocol=2.0
[81] fds_print_msg: Response=202
[81] fds_print_msg: ResponseItem=Server1:172.16.102.51:514
[81] fds_print_msg: Server2:172.16.102.52:514
[81] fds_print_msg: Contract:20210215
[81] fds_print_msg: NextRequest:86400
[615] parse_apt_contract_time_str: The APTContract is valid to Mon Feb 15 23:59:59 2021
[616] parse_apt_contract_time_str: FGT current local time is Thu Jun 20 09:41:16 2019
[3289] aptctrl_update_res: Got rsp: APT=172.16.102.51:514 APTAlter=172.16.102.52:514 next-
upd=86400
[395] fds_free_tsk: cmd=22; req.noreply=1
```

DHCP server

A DHCP server provides an address from a defined address range to a client on the network, when requested.

You can configure one or more DHCP servers on any FortiGate interface. A DHCP server dynamically assigns IP addresses to hosts on the network connected to the interface. The host computers must be configured to obtain their IP addresses using DHCP.

You can configure a FortiGate interface as a DHCP relay. The interface forwards DHCP requests from DHCP clients to an external DHCP server and returns the responses to the DHCP clients. The DHCP server must have appropriate routing so that its response packets to the DHCP clients arrive at the unit.

Configure DHCP on the FortiGate

To add a DHCP server on the GUI:

1. Go to *Network* > *Interfaces*.
2. Edit an interface.
3. Enable the *DHCP Server* option and configure the settings.

To add a DHCP server on the CLI:

```
config system dhcp server
    edit 1
        set dns-service default
        set default-gateway 192.168.1.2
        set netmask 255.255.255.0
        set interface "port1"
```

```
        config ip-range
            edit 1
                set start-ip 192.168.1.1
                set end-ip 192.168.1.1
            next
            edit 2
                set start-ip 192.168.1.3
                set end-ip 192.168.1.254
            next
        end
        set timezone-option default
        set tftp-server "172.16.1.2"
    next
end
```

DHCP options

When adding a DHCP server, you can include DHCP codes and options. The DHCP options are BOOTP vendor information fields that provide additional vendor-independent configuration parameters to manage the DHCP server. For example, you might need to configure a FortiGate DHCP server that gives out a separate option as well as an IP address, such as an environment that needs to support PXE boot with Windows images.

The option numbers and codes are specific to the application. The documentation for the application indicates the values to use. Option codes are represented in a option value/HEX value pairs. The option is a value between 1 and 255.

You can add up to three DHCP code/option pairs per DHCP server.

To configure option 252 with value http://192.168.1.1/wpad.dat using the CLI:

```
config system dhcp server
    edit <server_entry_number>
        set option1 252 687474703a2f2f3139322e3136382e312e312f777061642e646174
    next
end
```

For detailed information about DHCP options, see RFC 2132, DHCP Options and BOOTP Vendor Extensions.

Option 82

The DHCP relay agent information option (option 82 in RFC 3046) helps protect the FortiGate against attacks such as spoofing (forging) of IP addresses and MAC addresses, and DHCP IP address starvation.

This option is disabled by default. However, when `dhcp-relay-service` is enabled, `dhcp-relay-agent-option` becomes enabled.

To configure the DHCP relay agent option using the CLI:

```
config system interface
    edit <interface>
        set vdom root
        set dhcp-relay-service enable
        set dhcp-relay-ip <ip>
        set dhcp-relay-agent-option enable
        set vlanid <id>
```

```
    next
end
```

See IP address assignment with relay agent information option on page 403 for an example.

Option 42

This option specifies a list of the NTP servers available to the client by IP address.


```
config system dhcp server
    edit 2
        set ntp-service {local | default | specify}
        set ntp-server1 <class_ip>
        set ntp-server2 <class_ip>
        set ntp-server3 <class_ip>
    next
end
```

The NTP service options include:

- `local`: The IP address of the interface that the DHCP server is added to becomes the client's NTP server IP address.
- `default`: Clients are assigned the FortiGate's configured NTP servers.
- `specify`: Specify up to three NTP servers in the DHCP server configuration.

IP address assignment with relay agent information option

Option 82 (DHCP relay information option) helps protect the FortiGate against attacks such as spoofing (or forging) of IP and MAC addresses, and DHCP IP address starvation.

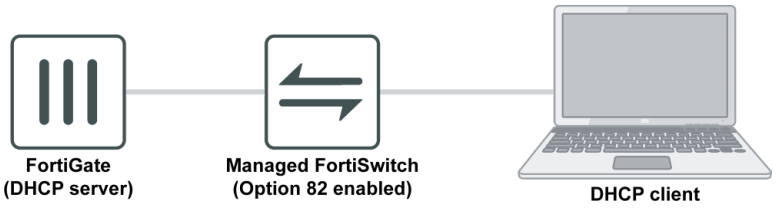

The following CLI variables are included in the `config system dhcp server` > `config reserved-address` command:

`circuit-id-type {hex | string}`	DHCP option type; hex or string (default).
`circuit-id <value>`	Option 82 circuit ID of the client that will get the reserved IP address. Format: *vlan-mod-port* • vlan: VLAN ID (2 bytes) • mod: 1 = snoop, 0 = relay (1 byte) • port: port number (1 byte)
`remote-id-type {hex | string}`	DHCP option type; hex or string (default).
`remote-id <value>`	Option 82 remote ID of the client that will get the reserved IP address. Format: the MAC address of the client.

`type {mac | option82}`	The DHCP reserved address type; mac (default) or option82.


To create an IP address assignment rule using option 82 in the GUI:

1. Go to *Network* > *Interfaces*.
2. Edit an existing port, or create a new one.

The port *Role* must be *LAN* or *Undefined*.

---


3. Enable *DHCP Server*.
4. Configure the address ranges and other settings as needed.
5. Click + to expand the *Advanced* options.
6. In the *IP Address Assignment Rules* table, click *Create New*.

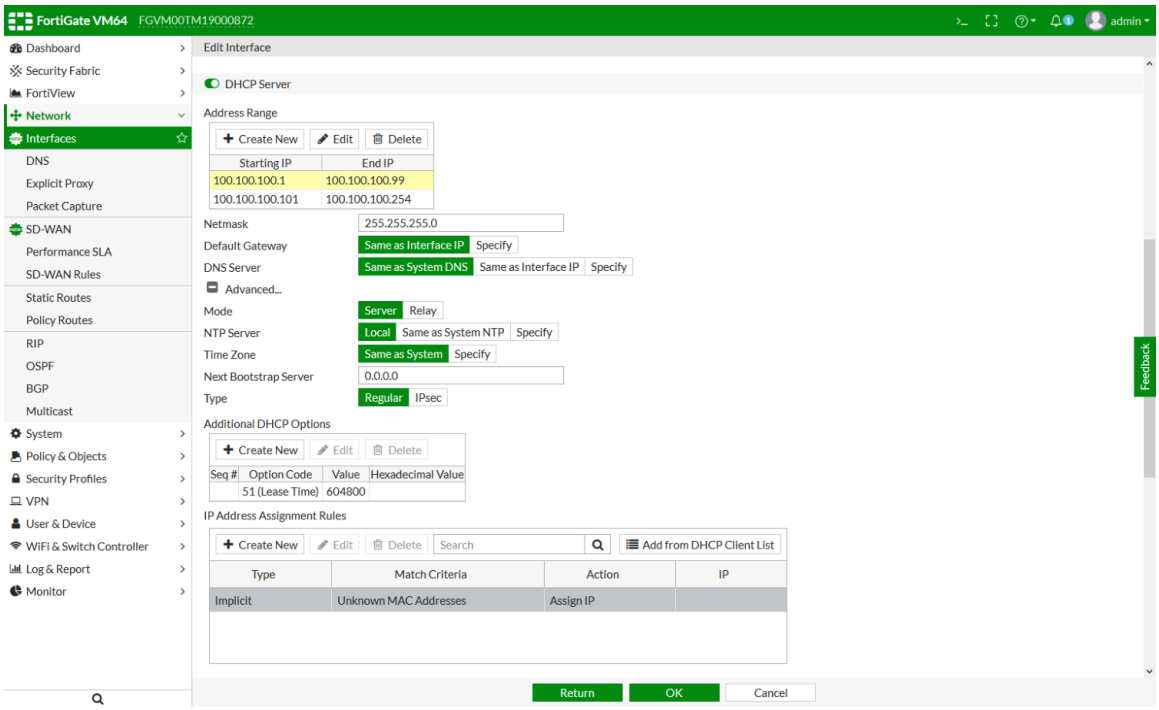

The *Create New IP Address Assignment Rule* pane opens.

7. Configure the new rule:
   a. For the *Type*, select *DHCP Relay Agent*.
   b. Enter the *Circuit ID* and *Remote ID*.
   c. Enter the *IP* address that will be reserved.

8. Click *OK*.

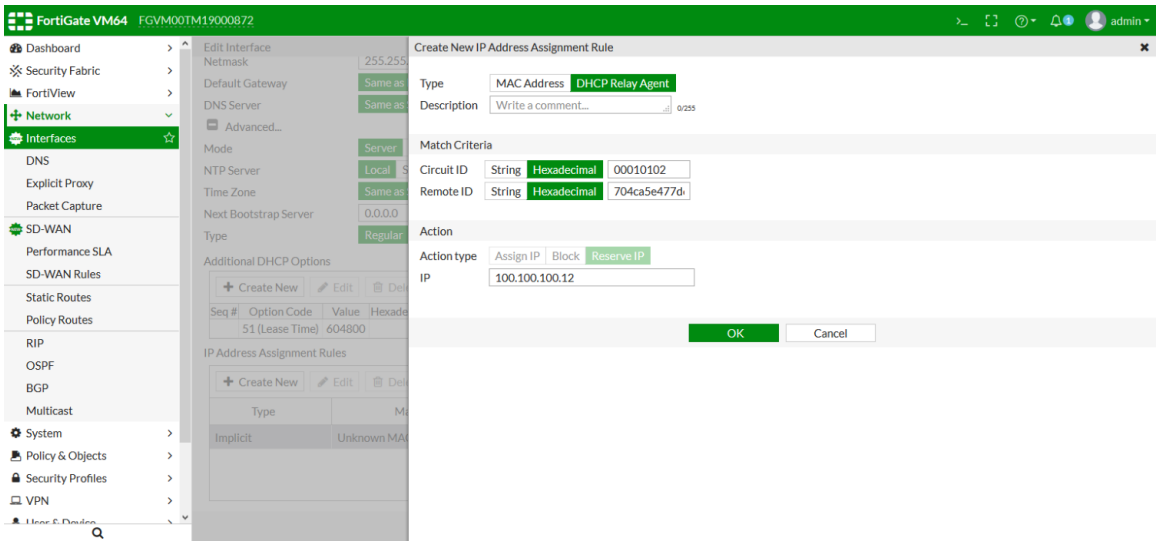

To create an IP address assignment rule using option 82 with the CLI:

```
config system dhcp server
    edit 1
        set netmask 255.255.255.0
        set interface "port4"
        config ip-range
            edit 1
                set start-ip 100.100.100.1
                set end-ip 100.100.100.99
            next
            edit 2
                set start-ip 100.100.100.101
                set end-ip 100.100.100.254
            next
        end
        config reserved-address
            edit 1
                set type option82
                set ip 100.100.100.12
                set circuit-id-type hex
                set circuit-id "00010102"
                set remote-id-type hex
                set remote-id "704ca5e477d6"
            next
        end
    next
end
```

Static routing

Static routing is one of the foundations of firewall configuration. It is a form of routing in which a device uses manually-configured routes. In the most basic setup, a firewall will have a default route to its gateway to provide network access. In a more complex setup with dynamic routing, ADVPN, or SD-WAN involved, you would still likely find static routes being deployed.

This section explores concepts in using static routing and provides examples in common use cases:

- Routing concepts on page 406
- Policy routes on page 416
- Equal cost multi-path on page 418
- Dual internet connections on page 422

The following topics include additional information about static routes:

- Deploying the Security Fabric on page 104
- Security Fabric over IPsec VPN on page 112
- Viewing and controlling network risks via topology view on page 102
- Adding a static route on page 455
- Configure VDOM-A on page 658
- Configure VDOM-A on page 668
- IPsec VPN in an HA environment on page 1194
- IPsec VPN to Azure with virtual network gateway on page 1126
- FortiGate as dialup client on page 1147
- ADVPN with BGP as the routing protocol on page 1252
- ADVPN with OSPF as the routing protocol on page 1261
- ADVPN with RIP as the routing protocol on page 1270
- Basic site-to-site VPN with pre-shared key on page 1088
- Site-to-site VPN with digital certificate on page 1093
- Tunneled Internet browsing on page 1177
- FortiGate multiple connector support on page 1609
- IPsec aggregate for redundancy and traffic load-balancing on page 1200
- Using BGP tags with SD-WAN rules on page 519

Routing concepts

This section contains the following topics:

- Default route on page 407
- Adding or editing a static route on page 407
- Configuring FQDNs as a destination address in static routes on page 408
- Routing table on page 408
- Viewing the routing database on page 411
- Kernel routing table on page 412
- Route cache on page 413
- Route look-up on page 413

- Blackhole routes on page 414
- Reverse path look-up on page 415
- Asymmetric routing on page 415
- Routing changes on page 416

Default route

The default route has a destination of `0.0.0.0/0.0.0.0`, representing the least specific route in the routing table. It is a catch all route in the routing table when traffic cannot match a more specific route. Typically this is configured with a static route with an administrative distance of `10`. In most instances, you will configure the next hop interface and the gateway address pointing to your next hop. If your FortiGate is sitting at the edge of the network, your next hop will be your ISP gateway. This provides internet access for your network.

Sometimes the default route is configured through DHCP. On some desktop models, the WAN interface is preconfigured in DHCP mode. Once the WAN interface is plugged into the network modem, it will receive an IP address, default gateway, and DNS server. FortiGate will add this default route to the routing table with a distance of `5`, by default. This will take precedence over any default static route with a distance of `10`. Therefore, take caution when you are configuring an interface in DHCP mode, where *Retrieve default gateway from server* is enabled. You may disable it and/or change the distance from the *Network* > *Interfaces* page when you edit an interface.

Adding or editing a static route

To add a static route using the GUI:

1. Go to *Network* > *Static Routes* and click *Create New*.
2. Enter the following information:

Dynamic Gateway	When enabled, a selected DHCP/PPPoE interface will automatically retrieve its dynamic gateway.
Destination	• Subnet Enter the destination IP address and netmask. A value of `0.0.0.0/0.0.0.0` creates a default route. • Named Address Select an address or address group object. Only addresses with static route configuration enabled will appear on the list. This means a geography type address cannot be used. • Internet Service Select an Internet Service. These are known IP addresses of popular services across the Internet.
Interface	Select the name of the interface that the static route will connect through.
Gateway Address	Enter the gateway IP address. When selecting an IPsec VPN interface or SD-WAN creating a blackhole route, the gateway cannot be specified.
Administrative Distance	Enter the distance value, which will affect which routes are selected first by different protocols for route management or load balancing. The default is 10.

Advanced Options	Optionally, expand *Advanced Options* and enter a *Priority*. When two routes have an equal distance, the route with a lower priority number will take precedence. The default is 0.

3. Click *OK*.

Configuring FQDNs as a destination address in static routes

You can configure FQDN firewall addresses as destination addresses in a static route, using either the GUI or the CLI.

In the GUI, to add an FQDN firewall address to a static route in the firewall address configuration, enable the *Static Route Configuration* option. Then, when you configure the static route, set *Destination* to *Named Address*.

To configure an FQDN as a destination address in a static route using the CLI:

```
config firewall address
   edit 'Fortinet-Documentation-Website'
      set type fqdn
      set fqdn docs.fortinet.com
      set allow-routing enable
end
config router static
   edit 0
      set dstaddr Fortinet-Documentation-Website
      ...
end
```


Routing table

A routing table consists of only the best routes learned from the different routing protocols. The most specific route always takes precedence. If there is a tie, then the route with a lower administrative distance will be injected into the routing table. If administrative distances are also equal, then all the routes are injected into the routing table, and *Cost* and *Priority* become the deciding factors on which a route is preferred. If these are also equal, then FortiGate will use Equal cost multi-path on page 418 to distribute traffic between these routes.

Viewing the routing table in the GUI

You can view routing tables in the FortiGate GUI under *Monitor* > *Routing Monitor* by default. You can also monitor policy routes by toggling from *Static & Dynamic* to *Policy* from the toolbar on the top left of the page. The active policy routes include policy routes that you created, SD-WAN rules, and Internet Service static routes. It also supports downstream devices in the Security Fabric.

The following screenshot shows an example of the static and dynamic routes under *Monitor* > *Routing Monitor*:

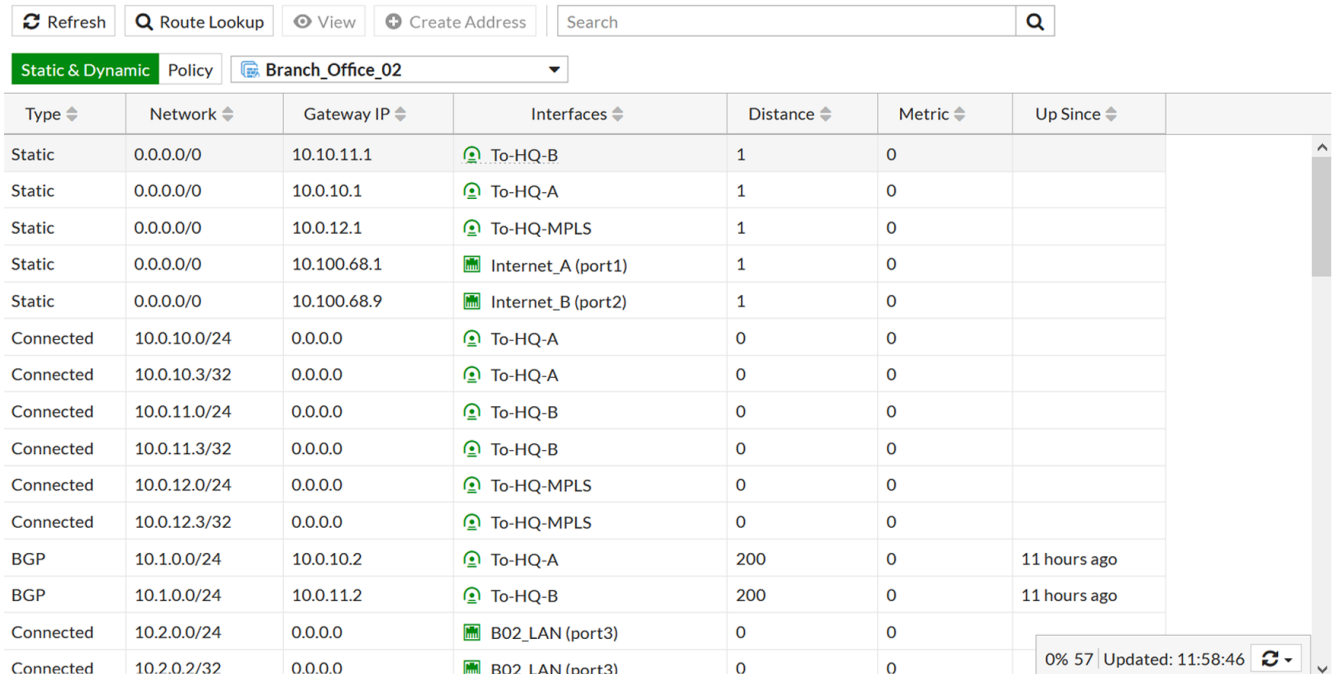

To view more columns, right-click on the column header to select the columns to be displayed:

Field	Description
Type	The type values assigned to FortiGate routes (Static, Connected, RIP, OSPF, or BGP): • *Connected*: All routes associated with direct connections to FortiGate interfaces • *Static*: The static routes that have been added to the routing table manually • *RIP*: All routes learned through RIP • *RIPNG*: All routes learned through RIP version 6 (which enables the sharing of routes through IPv6 networks) • *BGP*: All routes learned through BGP • *OSPF*: All routes learned through OSPF • *OSPF6*: All routes learned through OSPF version 6 (which enables the sharing of routes through IPv6 networks) • *IS-IS*: All routes learned through IS-IS • *HA*: RIP, OSPF, and BGP routes synchronized between the primary unit and the subordinate units of a high availability (HA) cluster. HA routes are maintained on subordinate units and are visible only if you're viewing the router monitor from a virtual domain that is configured as a subordinate virtual domain in a virtual cluster.
Network	The IP addresses and network masks of destination networks that the FortiGate can reach.
Gateway IP	The IP addresses of gateways to the destination networks.
Interfaces	The interface through which packets are forwarded to the gateway of the destination network.
Distance	The administrative distance associated with the route. A lower value means the route is preferable compared to other routes to the same destination.

Field	Description
Metric	The metric associated with the route type. The metric of a route influences how the FortiGate dynamically adds it to the routing table. The following are types of metrics and the protocols they are applied to: • *Hop count*: Routes learned through RIP • *Relative cost*: Routes learned through OSPF • *Multi-Exit Discriminator (MED)*: Routes learned through BGP. By default, the MED value associated with a BGP route is zero. However, the MED value can be modified dynamically. If the value was changed from the default, the Metric column displays a non-zero value.
Up Since	The total accumulated amount of time that a route learned through RIP, OSPF, or BGP has been reachable.

Viewing the routing table in the CLI

Viewing the routing table using the CLI displays the same routes as you would see from the GUI.

If VDOMs are enabled on the FortiGate, all routing-related CLI commands must be run within a VDOM and not in the global context.

To view the routing table using the CLI:

```
# get router info routing-table all
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
             O - OSPF, IA - OSPF inter area
             N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
             E1 - OSPF external type 1, E2 - OSPF external type 2
             i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
             * - candidate default
Routing table for VRF=0
S* 0.0.0.0/0 [1/0] via 172.31.0.1, MPLS [1/0]
     via 192.168.2.1, port1 [1/0] via 192.168.122.1, port2
S 1.2.3.4/32 [10/0] via 172.16.100.81, VLAN100
C 10.10.2.0/24 is directly connected, hub
C 10.10.2.1/32 is directly connected, hub
O 10.10.10.0/24 [110/101] via 192.168.2.1, port1, 01:54:18
C 10.253.240.0/20 is directly connected, wqt.root
S 110.2.2.122/32 [22/0] via 2.2.2.2, port2, [3/3]
C 172.16.50.0/24 is directly connected, WAN1-VLAN50
C 172.16.60.0/24 is directly connected, WAN2-VLAN60
C 172.16.100.0/24 is directly connected, VLAN100
C 172.31.0.0/30 is directly connected, MPLS
C 172.31.0.2/32 is directly connected, MPLS
B 192.168.0.0/24 [20/0] via 172.31.0.1, MPLS, 00:31:43
C 192.168.2.0/24 is directly connected, port1
C 192.168.20.0/24 is directly connected, port3
C 192.168.99.0/24 is directly connected, Port1-VLAN99
C 192.168.122.0/24 is directly connected, port2
Routing table for VRF=10
C 172.16.101.0/24 is directly connected, VLAN101
```

Examining an entry:

```
B 192.168.0.0/24 [20/0] via 172.31.0.1, MPLS, 00:31:43
```

Value	Description
B	BGP. The routing protocol used.
192.168.0.0/24	The destination of this route, including netmask.
[20/0]	20 indicates an administrative distance of 20 out of a range of 0 to 255. 0 is an additional metric associated with this route, such as in OSPF.
172.31.0.1	The gateway or next hop.
MPLS	The interface that the route uses.
00:31:43	The age of the route in HH:MM:SS.

Viewing the routing database

The routing database consists of all learned routes from all routing protocols before they are injected into the routing table. This likely lists more routes than the routing table as it consists of routes to the same destinations with different distances. Only the best routes are injected into the routing table. However, it is useful to see all learned routes for troubleshooting purposes.

To view the routing database using the CLI:

```
# get router info routing-table database
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
             O - OSPF, IA - OSPF inter area
             N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
             E1 - OSPF external type 1, E2 - OSPF external type 2
             i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
             > - selected route, * - FIB route, p - stale info
Routing table for VRF=0
S *> 0.0.0.0/0 [1/0] via 172.31.0.1, MPLS
     *> [1/0] via 192.168.2.1, port1
     *> [1/0] via 192.168.122.1, port2
S *> 1.2.3.4/32 [10/0] via 172.16.100.81, VLAN100
C *> 10.10.2.0/24 is directly connected, hub
C *> 10.10.2.1/32 is directly connected, hub
O *> 10.10.10.0/24 [110/101] via 192.168.2.1, port1, 02:10:17
C *> 10.253.240.0/20 is directly connected, wqt.root
S *> 110.2.2.122/32 [22/0] via 2.2.2.2, port2, [3/3]
C *> 172.16.50.0/24 is directly connected, WAN1-VLAN50
C *> 172.16.60.0/24 is directly connected, WAN2-VLAN60
C *> 172.16.100.0/24 is directly connected, VLAN100
O 172.31.0.0/30 [110/201] via 192.168.2.1, port1, 00:47:36
C *> 172.31.0.0/30 is directly connected, MPLS
```

Selected routes are marked by the > symbol. In the above example, the OSPF route to destination 172.31.0.0/30 is not selected.

Kernel routing table

The kernel routing table makes up the actual Forwarding Information Base (FIB) that used to make forwarding decisions for each packet. The routes here are often referred to as kernel routes. Parts of this table are derived from the routing table that is generated by the routing daemon.

To view the kernel routing table using the CLI:

```
# get router info kernel
tab=254 vf=0 scope=0 type=1 proto=11 prio=0 0.0.0.0/0.0.0.0/0->0.0.0.0/0 pref=0.0.0.0
     gwy=172.31.0.1 flag=04 hops=0 oif=31(MPLS) gwy=192.168.2.1 flag=04 hops=0 oif=3(port1)
     gwy=192.168.122.1 flag=04 hops=0 oif=4(port2)
tab=254 vf=0 scope=0 type=1 proto=17 prio=0 192.168.122.98/255.255.255.255/0->1.1.1.1/32
     pref=0.0.0.0 gwy=192.168.122.1 dev=4(port2)
tab=254 vf=0 scope=0 type=1 proto=17 prio=0 172.31.0.2/255.255.255.255/0->1.1.1.1/32
     pref=0.0.0.0 gwy=172.31.0.1 dev=31(MPLS)
tab=254 vf=0 scope=0 type=1 proto=17 prio=0 192.168.2.5/255.255.255.255/0->1.1.1.1/32
     pref=0.0.0.0 gwy=192.168.2.1 dev=3(port1)
tab=254 vf=0 scope=0 type=1 proto=11 prio=0 0.0.0.0/0.0.0.0/0->1.2.3.4/32 pref=0.0.0.0
     gwy=172.16.100.81 dev=20(VLAN100)
tab=254 vf=0 scope=0 type=1 proto=17 prio=0 192.168.122.98/255.255.255.255/0->8.8.8.8/32
     pref=0.0.0.0 gwy=192.168.122.1 dev=4(port2)
```

The kernel routing table entries are:

Value	Description
`tab`	Table number: It will either be `254` (unicast) or `255` (multicast).
`vf`	Virtual domain of the firewall: It is the VDOM index number. If VDOMs are not enabled, this number is `0`.
`type`	Type of routing connection. Valid values include: • `0` - unspecific • `1` - unicast • `2` - local • `3` - broadcast • `4` - anycast • `5` - multicast • `6` - blackhole • `7` - unreachable • `8` - prohibited
`proto`	Type of installation that indicates where the route came from. Valid values include: • `0` - unspecific • `2` - kernel • `11` - ZebOS routing module • `14` - FortiOS • `15` - HA • `16` - authentication based • `17` - HA1

Value	Description
prio	Priority of the route. Lower priorities are preferred.
->0.0.0.0/0 (->x.x.x.x/mask)	The IP address and subnet mask of the destination.
pref	Preferred next hop along this route.
gwy	Gateway: The address of the gateway this route will use.
dev	Outgoing interface index: This number is associated with the interface for this route. If VDOMs are enabled, the VDOM is also included here. If an interface alias is set for this interface, it is also displayed here.

Route cache

The route cache contains recently used routing entries in a table. It is consulted before the routing table to speed up the route look-up process.

To view the route cache using the CLI:

```
# diagnose ip rtcache list
family=02 tab=254 vrf=0 vf=0 type=01 tos=0 flag=00000200
     0.0.0.0@0->208.91.113.230@3(port1) gwy=192.168.2.1 prefsrc=192.168.2.5
     ci: ref=0 lastused=1 expire=0 err=00000000 used=5 br=0 pmtu=1500
family=02 tab=254 vrf=0 vf=0 type=01 tos=0 flag=00000200
     192.168.2.5@0->8.8.8.8@3(port1) gwy=192.168.2.1 prefsrc=0.0.0.0
     ci: ref=0 lastused=0 expire=0 err=00000000 used=2 br=0 pmtu=1500
family=02 tab=254 vrf=0 vf=0 type=02 tos=8 flag=80000200
     8.8.8.8@31(MPLS)->172.31.0.2@6(root) gwy=0.0.0.0 prefsrc=172.31.0.2
     ci: ref=1 lastused=0 expire=0 err=00000000 used=0 br=0 pmtu=16436
family=02 tab=254 vrf=0 vf=0 type=02 tos=0 flag=84000200
     192.168.20.6@5(port3)->192.168.20.5@6(root) gwy=0.0.0.0 prefsrc=192.168.20.5
     ci: ref=2 lastused=0 expire=0 err=00000000 used=1 br=0 pmtu=16436
...
```

The size of the route cache is calculated by the kernel. However, you can modify it.

To modify the size of the route cache:

```
# config system global
   set max-route-cache-size <number_of_cache_entries>
end
```

Route look-up

Route look-up typically occurs twice in the life of a session. Once when the first packet is sent by the originator and once more when the first reply packet is sent from the responder. When a route look-up occurs, the routing information is written to the session table and the route cache. If routing changes occur during the life of a session, additional routing look-ups may occur.

FortiGate performs a route look-up in the following order:

1. Policy-based routes: If a match occurs and the action is to forward, traffic is forwarded based on the policy route.
2. Route Cache: If there are no matches, FortiGate looks for the route in the route cache.
3. Forwarding Information Base, otherwise known as the kernel routing table.
4. If no match occurs, the packet is dropped.

Searching the routing table

When there are many routes in your routing table, you can perform a quick search by using the search bar to specify your criteria, or apply filters on the column header to display only certain routes. For example, if you want to only display static routes, you may use "static" as the search term, or filter by the *Type* field with value *Static*.

Route look-up on the other hand provides a utility for you to enter criteria such as *Destination*, *Destination Port*, *Source*, *Protocol* and/or *Source Interface*, in order to determine the route that a packet will take. Once you click *Search*, the corresponding route will be highlighted.

You can also use the CLI for a route look-up. The CLI provides a basic route look-up tool.

To look-up a route using the CLI:

```
# get router info routing-table details 4.4.4.4
Routing table for VRF=0
Routing entry for 0.0.0.0/0
      Known via "static", distance 1, metric 0, best
      * 172.31.0.1, via MPLS distance 0
      * 192.168.2.1, via port1 distance 0
      * 192.168.122.1, via port2 distance 0
```

Blackhole routes

Sometimes upon routing table changes, it is not desirable for traffic to be routed to a different gateway. For example, you may have traffic destined for a remote office routed through your IPsec VPN interface. When the VPN is down, traffic will try to re-route to another interface. However, this may not be viable and traffic will instead be routed to your default route through your WAN, which is not desirable. Traffic may also be routed to another VPN, which you do not want. For such scenarios, it is good to define a blackhole route so that traffic is dropped when your desired route is down. Upon reconnection, your desired route is once again added to the routing table and your traffic will resume routing to your desired interface. For this reason, blackhole routes are created when you configure an IPsec VPN using the IPsec wizard.

To create a blackhole route from the GUI:

1. Go to *Network* > *Static Routes*.
2. Click *Create New*. The *New Static Route* screen appears.
3. Specify a *Destination* type.
4. Select *Blackhole* from the *Interface* field.
5. Type the desired *Administrative Distance*.
6. Click *OK*.



Route priority for a *Blackhole* route can only be configured from the CLI.

Reverse path look-up

Whenever a packet arrives at one of the interfaces on a FortiGate, the FortiGate determines whether the packet was received on a legitimate interface by doing a reverse look-up using the source IP address in the packet header. This protects against IP spoofing attacks. If the FortiGate does not have a route to the source IP address through the interface on which the packet was received, the FortiGate drops the packet as per Reverse Path Forwarding (RPF) check. There are two modes of RPF – feasible path and strict. The default feasible RPF mode checks only for the existence of at least one active route back to the source using the incoming interface. The strict RPF check ensures the best route back to the source is used as the incoming interface.

To configure a strict Reverse Path Forwarding check using the CLI:

```
# config system settings
   set strict-src-check enable
end
```

You can remove RPF state checks without needing to enable asymmetric routing by disabling state checks for traffic received on specific interfaces. Disabling state checks makes a FortiGate less secure and should only be done with caution for troubleshooting purposes.

To remove Reverse Path Forwarding checks from the state evaluation process using the CLI:

```
# config system interface
   edit <interface_name>
      set src-check disable
   next
end
```

Asymmetric routing

The firewall tries to ensure symmetry in its traffic by using the same source-destination combination in the original and reverse path. Asymmetric routing occurs when traffic in the returning direction takes a different path than the original. There may be various scenarios in which this happens. For example, traffic in the original direction hits the firewall on `port1`, and is routed to `port2`. However, returning traffic is received on `port3` instead. In this scenario, asymmetric routing occurs and the returning traffic is blocked.

If for some specific reason it is required that a FortiGate unit should permit asymmetric routing, you can configure it by using CLI commands per VDOM.

To configure asymmetric routing per VDOM by using the CLI:

```
# config vdom
   edit <vdom_name>
      config system settings
         set asymroute enable
      end
   next
end
```

Routing changes

When routing changes occur, routing look-up may occur on an existing session depending on certain configurations.

Routing Changes without SNAT

When a routing change occurs, FortiGate flushes all routing information from the session table and performs new routing look-up for all new packets on arrival by default. You can modify the default behavior using the following commands:

```
# config system interface
   edit <interface>
      set preserve-session-route enable
   next
end
```

By enabling `preserve-session-route`, the FortiGate marks existing session routing information as persistent. Therefore, routing look-up only occurs on new sessions.

Routing Changes with SNAT

When SNAT is enabled, the default behavior is opposite to that of when SNAT is not enabled. After a routing change occurs, sessions with SNAT keep using the same outbound interface as long as the old route is still active. This may be the case if the priority of the static route was changed. You can modify this default behavior using the following commands:

```
# config system global
   set snat-route-change enable
end
```

By enabling `snat-route-change`, sessions with SNAT will require new route look-up when a routing change occurs. This will apply a new SNAT to the session.

Policy routes

Policy routing allows you to specify an interface to route traffic. This is useful when you need to route certain types of network traffic differently than you would if you were using the routing table. You can use the incoming traffic's protocol, source or destination address, source interface, or port number to determine where to send the traffic.

When a packet arrives, the FortiGate starts at the top of the policy route list and attempts to match the packet with a policy. For a match to be found, the policy must contain enough information to route the packet. At a minimum, this requires the outgoing interface to forward the traffic, and the gateway to route the traffic to. If one or both of these are not specified in the policy route, then the FortiGate searches the routing table to find the best active route that corresponds to the policy route. If no routes are found in the routing table, then the policy route does not match the packet. The FortiGate continues down the policy route list until it reaches the end. If no matches are found, then the FortiGate does a route lookup using the routing table.



Policy routes are sometimes referred to as Policy-based routes (PBR).


Configuring a policy route

In this example, a policy route is configured to send all FTP traffic received at port1 out through port4 and to a next hop router at 172.20.120.23. To route FTP traffic, the protocol is set to TCP (6) and the destination ports are set to 21 (the FTP port).

To configure a policy route in the GUI:

1. Go to *Network* > *Policy Routes*.
2. Click *Create New* > *Policy Route*.
3. Configure the following fields:

Incoming interface	port1
Source Address	0.0.0.0/0.0.0.0
Destination Address	0.0.0.0/0.0.0.0
Protocol	TCP
Destination ports	21 - 21
Type of service	0x00
Bit Mask	0x00
Outgoing interface	Enable and select port4
Gateway address	172.20.120.23

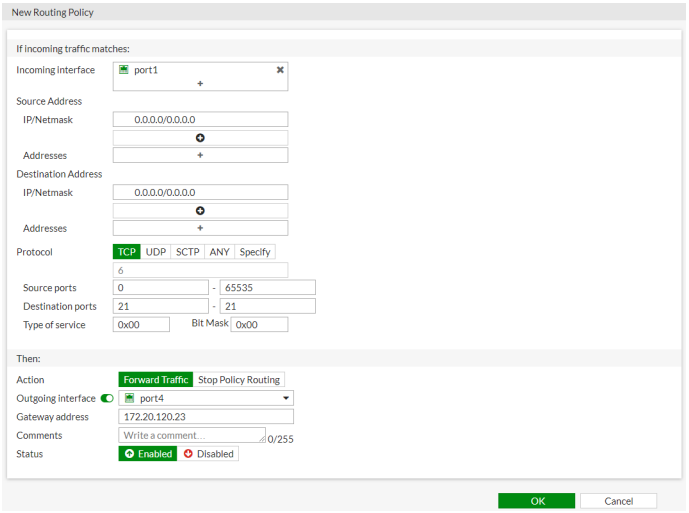

4. Click *OK*.

To configure a policy route in the CLI:

```
config router policy
    edit 1
        set input-device "port1"
        set src "0.0.0.0/0.0.0.0"
        set dst "0.0.0.0/0.0.0.0"
```


```
        set protocol 6
        set start-port 21
        set end-port 21
        set gateway 172.20.120.23
        set output-device "port4"
        set tos 0x00
        set tos-mask 0x00
    next
end
```

Moving a policy route


A routing policy is added to the bottom of the table when it is created. Routing policies can be moved to a different location in the table to change the order of preference. In this example, routing policy 3 will be moved before routing policy 2.

To move a policy route in the GUI:

1. Go to *Network* > *Policy Routes*.
2. In the table, select the policy route.

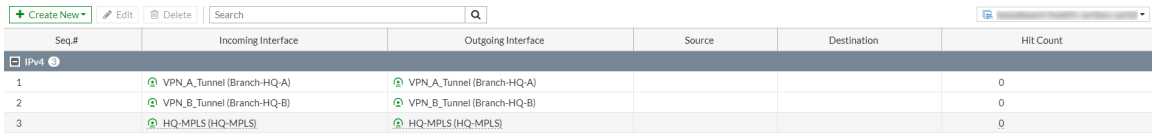

3. Drag the selected policy route to the desired position.

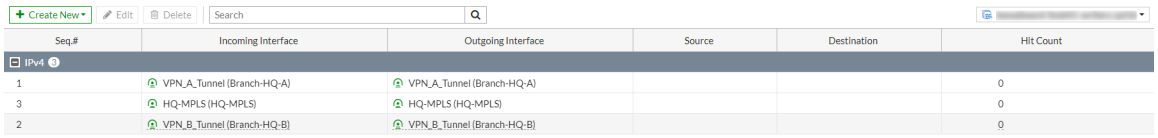

To move a policy route in the CLI:

```
config router policy
    move 3 after 1
end
```

Equal cost multi-path

Equal cost multi-path (ECMP) is a mechanism that allows a FortiGate to load-balance routed traffic over multiple gateways. Just like routes in a routing table, ECMP is considered after policy routing, so any matching policy routes will take precedence over ECMP.

ECMP pre-requisites are as follows:

- Routes must have the same destination and costs. In the case of static routes, costs include distance and priority
- Routes are sourced from the same routing protocol. Supported protocols include static routing, OSPF, and BGP

ECMP and SD-WAN implicit rule

ECMP and SD-WAN implicit rule are essentially similar in the sense that an SD-WAN implicit rule is processed after SD-WAN service rules are processed. See Implicit rule on page 470 to learn more.

The following table summarizes the different load-balancing algorithms supported by each:

ECMP	SD-WAN (GUI)	SD-WAN (CLI)	Description
`source-ip-based`	Source IP	`source-ip-based`	Traffic is divided equally between the interfaces. Sessions that start at the same source IP address use the same path. This is the default selection.
`weight-based`	Sessions	`weight-based`	The workload is distributed based on the number of sessions that are connected through the interface. The weight that you assign to each interface is used to calculate the percentage of the total sessions allowed to connect through an interface, and the sessions are distributed to the interfaces accordingly.
`usage-based`	Spillover	`usage-based`	The interface is used until the traffic bandwidth exceeds the ingress and egress thresholds that you set for that interface. Additional traffic is then sent through the next interface member.
`source-dest-ip-based`	Source-Destination IP	`source-dest-ip-based`	Traffic is divided equally between the interfaces. Sessions that start at the same source IP address and go to the same destination IP address use the same path.
Not supported	Volume	`measured-volume-based`	This mode is supported in SD-WAN only. The workload is distributed based on the number of packets that are going through the interface.

To configure the ECMP algorithm from the CLI:

- At the VDOM-level:
```
config system settings
   set v4-ecmp-mode {source-ip-based* | weight-based | usage-based | source-dest-ip-
        based}
end
```
- If SD-WAN is enabled, the above option is not available and ECMP is configured under the SD-WAN settings:
```
config system sdwan
   set sdwan enable
   set load-balance-mode {source-ip-based* | weight-based | usage-based | source-dest-ip-
        based | measured-volume-based}
end
```

For ECMP in IPv6, the mode must also be configured under SD-WAN.


```
# diagnose sys vd list
system fib version=63
list virtual firewall info:
name=root/root index=0 enabled fib_ver=40 use=168 rt_num=46 asym_rt=0 sip_helper=0, sip_nat_
     trace=1, mc_fwd=0, mc_ttl_nc=0, tpmc_sk_pl=0
ecmp=source-ip-based, ecmp6=source-ip-based asym_rt6=0 rt6_num=55 strict_src_check=0 dns_
     log=1 ses_num=20 ses6_num=0 pkt_num=19154477
```

To change the number of paths allowed by ECMP:

```
config system settings
   set ecmp-max-paths <number of paths>
end
```

Setting `ecmp-max-paths` to the lowest value of `1` is equivalent to disabling ECMP.

ECMP configuration examples

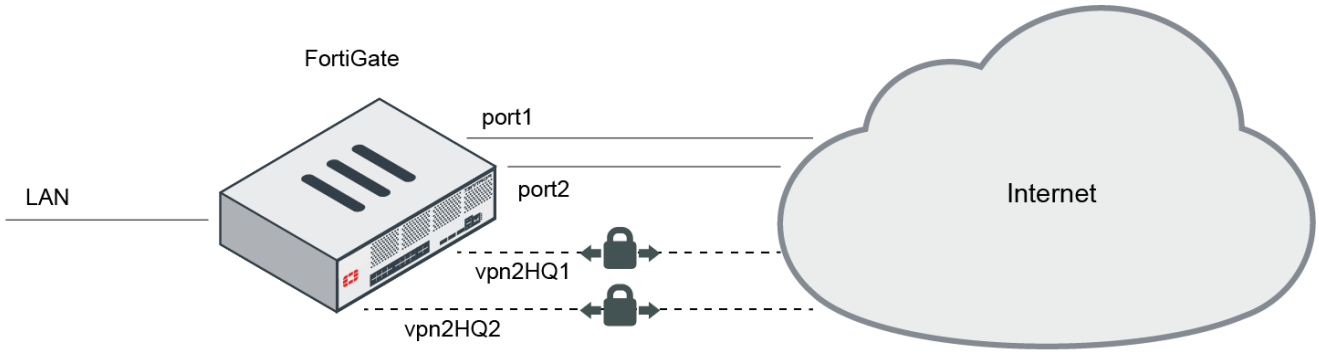

The following examples demonstrate the behavior of ECMP in different scenarios:

- Example 1: Default ECMP on page 420
- Example 2: Same distance, different priority on page 421
- Example 3: Weight-based ECMP on page 421
- Example 4: Load-balancing BGP routes on page 422

Example 1: Default ECMP

```
config router static
   edit 1
      set gateway 172.16.151.1
      set device "port1"
   next
   edit 2
      set gateway 192.168.2.1
      set device "port2"
   next
end
```

```
# get router info routing-table all
Routing table for VRF=0
S*    0.0.0.0/0 [10/0] via 172.16.151.1, port1
                [10/0] via 192.168.2.1, port2
C    172.16.151.0/24 is directly connected, port1
C    192.168.2.0/24 is directly connected, port2
```

Result:

Both routes are added to the routing table and load-balanced based on the source IP.

Example 2: Same distance, different priority

```
config router static
   edit 1
      set gateway 172.16.151.1
      set priority 5
      set device "port1"
   next
   edit 2
      set gateway 192.168.2.1
      set device "port2"
   next
end

# get router info routing-table all
Routing table for VRF=0
S*    0.0.0.0/0 [10/0] via 192.168.2.1, port2
                [10/0] via 172.16.151.1, port1, [5/0]
C    172.16.151.0/24 is directly connected, port1
C    192.168.2.0/24 is directly connected, port2
```

Result:

Both routes are added to the routing table, but traffic is routed to `port2` which has a lower priority value with a default of `0`.

Example 3: Weight-based ECMP

```
config router static
   edit 3
      set dst 10.10.30.0 255.255.255.0
      set weight 80
      set device "vpn2HQ1"
   next
   edit 5
      set dst 10.10.30.0 255.255.255.0
      set weight 20
      set device "vpn2HQ2"
   next
end

# get router info routing-table all
Routing table for VRF=0
...
```

```
S    10.10.30.0/24 [10/0] is directly connected, vpn2HQ1, [0/80]
                   [10/0] is directly connected, vpn2HQ2, [0/20]
C    172.16.151.0/24 is directly connected, port1
C    192.168.0.0/24 is directly connected, port3
C    192.168.2.0/24 is directly connected, port2
```

Result:

Both routes are added to the routing table, but 80% of the sessions to `10.10.30.0/24` are routed to `vpn2HQ1`, and 20% are routed to `vpn2HQ2`.

Example 4: Load-balancing BGP routes

```
config router bgp
   set as 64511
   set router-id 192.168.2.86
   set ebgp-multipath enable
   config neighbor
      edit "192.168.2.84"
         set remote-as 64512
      next
      edit "192.168.2.87"
         set remote-as 64512
      next
   end
end

# get router info routing-table all
Routing table for VRF=0
...
C    172.16.151.0/24 is directly connected, port1
C    192.168.0.0/24 is directly connected, port3
C    192.168.2.0/24 is directly connected, port2
B    192.168.80.0/24 [20/0] via 192.168.2.84, port2, 00:00:33
                     [20/0] via 192.168.2.87, port2, 00:00:33
```

Result:


The network `192.168.80.0/24` is advertised by two BGP neighbors. Both routes are added to the routing table, and traffic is load-balanced based on Source IP.

For multiple BGP paths to be added to the routing table, you must enable `ebgp-multipath` for eBGP or `ibgp-multipath` for iBGP. These settings are disabled by default.

Dual internet connections

Dual internet connections, also referred to as dual WAN or redundant internet connections, refers to using two FortiGate interfaces to connect to the Internet. This is generally accomplished with SD-WAN, but this legacy solution provides the means to configure dual WAN without using SD-WAN. You can use dual internet connections in several ways:

- Link redundancy: If one interface goes down, the second interface automatically becomes the main connection.
- Load sharing: This ensures better throughput.
- Use a combination of link redundancy and load sharing.

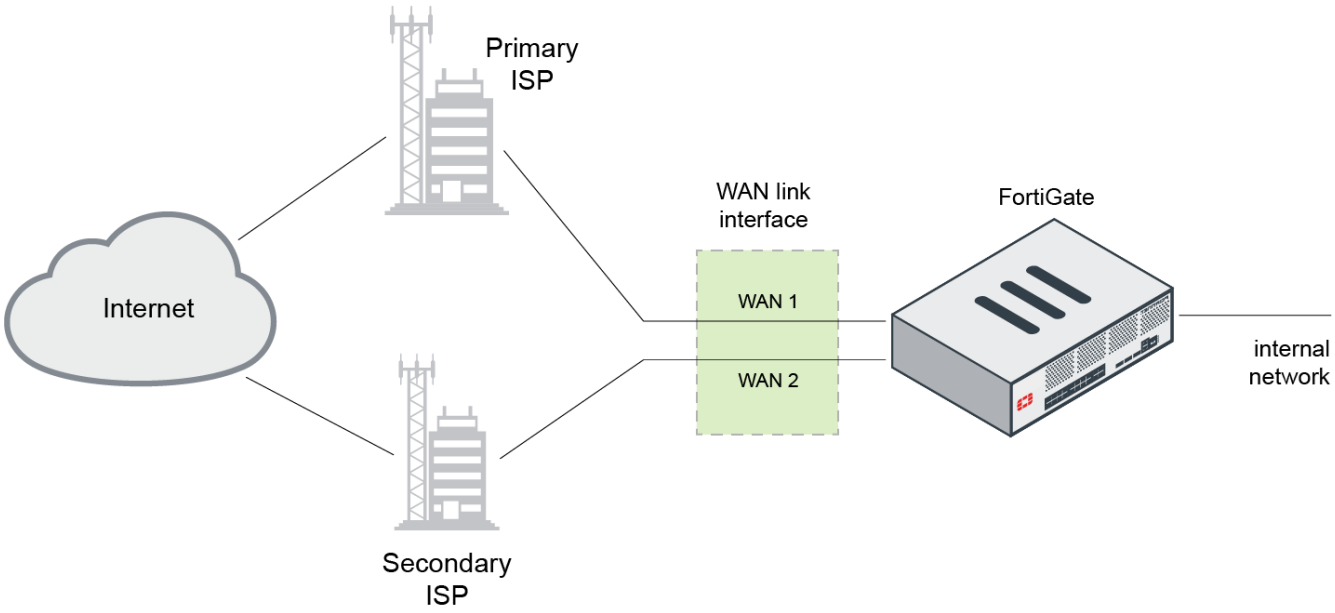

This section describes the following dual internet connection scenarios:

- Scenario 1: Link redundancy and no load-sharing on page 423
- Scenario 2: Load-sharing and no link redundancy on page 425
- Scenario 3: Link redundancy and load-sharing on page 427

Scenario 1: Link redundancy and no load-sharing

Link redundancy ensures that if your Internet access is no longer available through a certain port, the FortiGate uses an alternate port to connect to the Internet.

In this scenario, two interfaces, WAN1 and WAN2, are connected to the Internet using two different ISPs. WAN1 is the primary connection. In the event of a failure of WAN1, WAN2 automatically becomes the connection to the Internet. For this configuration to function correctly, you must configure the following settings:

- Link health monitor on page 423: To determine when the primary interface (WAN1) is down and when the connection returns.
- Routing on page 424: Configure a default route for each interface.
- Security policies on page 425: Configure security policies to allow traffic through each interface to the internal network.

Link health monitor

Adding a link health monitor is required for routing failover traffic. A link health monitor confirms the device interface connectivity by probing a gateway or server at regular intervals to ensure it is online and working. When the server is not accessible, that interface is marked as down.

Set the `interval` (how often to send a ping) and `failtime` (how many lost pings are considered a failure). A smaller interval value and smaller number of lost pings results in faster detection, but creates more traffic on your network.

The link health monitor supports both IPv4 and IPv6, and various other protocols including ping, tcp-echo, udp-echo, http, and twamp.

To add a link health monitor (IPv4) using the CLI:

```
config system link-monitor
   edit <link-monitor-name>
      set addr-mode ipv4
      set srcintf <interface-name>
      set server <server-IP-address>
      set protocol {ping tcp-echo udp-echo http twamp}
      set gateway-ip <gateway-IP-address>
      set interval <seconds>
      set failtime <retry-attempts>
      set recoverytime <number-of-successful-responses>
      set status enable
   next
end
```

Option	Description
`set update-cascade-interface {enable | disable}`	This option is used in conjunction with fail-detect and fail-alert options in interface settings to cascade the link failure down to another interface. See the Bring other interfaces down when link monitor fails KB article for details.
`set update-static-route {enable | disable}`	When the link fails, all static routes associated with the interface will be removed.

Routing

You must configure a default route for each interface and indicate your preferred route as follows:

- Specify different distances for the two routes. The lower of the two distance values is declared active and placed in the routing table

  OR
- Specify the same distance for the two routes, but give a higher priority to the route you prefer by defining a lower value. Both routes will be added to the routing table, but the route with a higher priority will be chosen as the best route

In the following example, we will use the first method to configure different distances for the two routes. You might not be able to connect to the backup WAN interface because the FortiGate does not route traffic out of the backup interface. The FortiGate performs a reverse path look-up to prevent spoofed traffic. If an entry cannot be found in the routing table that sends the return traffic out through the same interface, the incoming traffic is dropped.

To configure the routing of the two interfaces using the GUI:

1. Go to *Network* > *Static Routes*, and click *Create New*.
2. Enter the following information:

Destination	For an IPv4 route, enter a subnet of `0.0.0.0/0.0.0.0`. For an IPv6 route, enter a subnet of `::/0`.
Interface	Select the primary connection. For example, `wan1`.

Gateway Address	Enter the gateway address.
Administrative Distance	Leave as the default of `10`.

3. Click *OK*.
4. Repeat the above steps to set *Interface* to `wan2` and *Administrative Distance* to `20`.

To configure the routing of the two interfaces using the CLI:

```
config router {static | static6}
   edit 0
      set dst 0.0.0.0 0.0.0.0
      set device wan1
      set gateway <gateway_address>
      set distance 10
   next
   edit 0
      set dst 0.0.0.0 0.0.0.0
      set device wan2
      set gateway <gateway_address>
      set distance 20
   next
end
```

Security policies

When you create security policies, you need to configure duplicate policies to ensure that after traffic fails over WAN1, regular traffic is allowed to pass through WAN2, as it did with WAN1. This ensures that failover occurs with minimal effect to users.

Scenario 2: Load-sharing and no link redundancy

Load sharing may be accomplished in a few of the following ways of the many possible ways:

- By defining a preferred route with a lower distance, and specifying policy routes to route certain traffic to the secondary interface.
- By defining routes with same distance values but different priorities, and specifying policy routes to route certain traffic to the secondary interface.
- By defining routes with same distance values and priorities, and use equal-cost multi-path (ECMP) routing to equally distribute traffic between the WAN interfaces.

In our example, we will use the first option for our configuration. In this scenario, because link redundancy is not required, you do not have to configure a link monitor.



Traffic behaviour without a link monitor is as follows:

- If the remote gateway is down but the primary WAN interface of a FortiGate is still up, the FortiGate will continue to route traffic to the primary WAN. This results in traffic interruptions.
- If the primary WAN interface of a FortiGate is down due to physical link issues, the FortiGate will remove routes to it and the secondary WAN routes will become active. Traffic will failover to the secondary WAN.

Routing

Configure routing as you did in Scenario 1: Link redundancy and no load-sharing on page 423 above.

Policy routes

By configuring policy routes, you can redirect specific traffic to the secondary WAN interface. This works in this case because policy routes are checked before static routes. Therefore, even though the static route for the secondary WAN is not in the routing table, traffic can still be routed using the policy route.

In this example, we will create a policy route to route traffic from one address group to the secondary WAN interface.

To configure a policy route from the GUI:

1. Go to *Network* > *Policy Routes*, and click *Create New*.
2. Enter the following information:

Incoming interface	Define the source of the traffic. For example, `internal`.
Source Address	If we prefer to route traffic only from a group of addresses, define an address or address group, and add here.
Destination Address	Because we want to route all traffic from the address group here, we do not specify a destination address.
Protocol	Specify any protocol.
Action	Forward traffic.
Outgoing interface	Select the secondary WAN as the outbound interface. For example, `wan2`.
Gateway address	Input the gateway address for your secondary WAN. Because its default route has a higher distance value and is not added to the routing table, the gateway address must be added here.

3. Click OK.

To configure a policy route from the CLI:

```
config router policy
   edit 1
      set input-device "internal"
      set srcaddr "Laptops"
      set gateway <gateway_address>
      set output-device "wan2"
   next
end
```

Security policies

Your security policies should allow all traffic from `internal` to WAN1. Because link redundancy is not needed, you do not need to duplicate all WAN1 policies to WAN2. You will only need to define policies used in your policy route.

Scenario 3: Link redundancy and load-sharing

In this scenario, both the links are available to distribute Internet traffic with the primary WAN being preferred more. Should one of the interfaces fail, the FortiGate will continue to send traffic over the other active interface. The configuration is a combination of both the link redundancy and the load-sharing scenarios. The main difference is that the configured routes have equal distance values, with the route with a higher priority being preferred more. This ensures both routes are active in the routing table, but the route with a higher priority will be the best route.

Link health monitor

Link monitor must be configured for both the primary and the secondary WAN interfaces. This ensures that if the primary or the secondary WAN fails, the corresponding route is removed from the routing table and traffic re-routed to the other WAN interface.

For configuration details, see sample configurations in Scenario 1: Link redundancy and no load-sharing on page 423.

Routing

Both WAN interfaces must have default routes with the same distance. However, preference is given to the primary WAN by giving it a higher priority.

To configure the routing of the two interfaces using the CLI:

```
config router {static | static6}
   edit 0
      set dst 0.0.0.0 0.0.0.0
      set device wan1
      set gateway <gateway_address>
      set distance 10
      set priority 0
   next
   edit 0
      set dst 0.0.0.0 0.0.0.0
      set device wan2
      set gateway <gateway_address>
      set distance 10
      set priority 10
   next
end
```

Policy routes

The policy routes configuration is very similar to that of the policy routes in Scenario 2: Load-sharing and no link redundancy on page 425, except that the gateway address should not be specified. When a policy route is matched and the gateway address is not specified, the FortiGate looks at the routing table to obtain the gateway. In case the secondary WAN fails, traffic may hit the policy route. Because there is no gateway specified and the route to the secondary WAN is removed by the link monitor, the policy route will by bypassed and traffic will continue through the primary WAN. This ensures that the policy route is not active when the link is down.

Security policies

When you create security policies, you need to configure duplicate policies to ensure that after traffic fails over WAN1, regular traffic is allowed to pass through WAN2, as it was with WAN1. This ensures that failover occurs with minimal effect to users.

Multicast

The following topics include information about multicast:

- Multicast routing and PIM support on page 428
- Configuring multicast forwarding on page 429

Multicast routing and PIM support

Multicasting (also called IP multicasting) consists of using a single multicast source to send data to many receivers. Multicasting can be used to send data to many receivers simultaneously while conserving bandwidth and reducing network traffic. Multicasting can be used for one-way delivery of media streams to multiple receivers and for one-way data transmission for news feeds, financial information, and so on. Many dynamic routing protocols such as RIPv2, OSPF, and EIGRP use multicasting to share hello packets and routing information.

A FortiGate can operate as a Protocol Independent Multicast (PIM) version 2 router. FortiGates support PIM sparse mode (RFC 4601) and PIM dense mode (RFC 3973), and can service multicast servers or receivers on the network segment to which a FortiGate interface is connected. Multicast routing is not supported in transparent mode.

To support PIM communications, the sending and receiving applications, and all connecting PIM routers in between, must be enabled with PIM version 2. PIM can use static routes, RIP, OSPF, or BGP to forward multicast packets to their destinations. To enable source-to-destination packet delivery, sparse mode or dense mode must be enabled on the PIM router interfaces. Sparse mode routers cannot send multicast messages to dense mode routers. If the FortiGate is located between a source and a PIM router, between two PIM routers, or is connected directly to a receiver, you must manually create a multicast policy to pass encapsulated (multicast) packets or decapsulated data (IP traffic) between the source and destination.

PIM domains

A PIM domain is a logical area comprising a number of contiguous networks. The domain contains at least one bootstrap router (BSR), and if sparse mode is enabled, a number of rendezvous points (RPs) and designated routers (DRs). When PIM is enabled, the FortiGate can perform any of these functions at any time as configured.

A PIM domain can be configured in the GUI by going to *Network* > *Multicast*, or in the CLI using `config router multicast`. Note that PIM version 2 must be enabled on all participating routers between the source and receivers. Use `config router multicast` to set the global operating parameters.

When PIM is enabled, the FortiGate allocates memory to manage mapping information. The FortiGate communicates with neighboring PIM routers to acquire mapping information and, if required, processes the multicast traffic associated with specific multicast groups.

Instead of sending multiple copies of generated IP traffic to more than one specific IP destination address, PIM-enabled routers encapsulate the data and use a Class D multicast group address (224.0.0.0 to 239.255.255.255) to forward

multicast packets to multiple destinations. A single stream of data can be sent because one destination address is used. Client applications receive multicast data by requesting that the traffic destined for a certain multicast group address be delivered to them.

Configuring multicast forwarding

There is sometimes confusion between the terms forwarding and routing. These two functions should not take place at the same time. Multicast forwarding should be enabled when the FortiGate is in NAT mode and you want to forward multicast packets between multicast routers and receivers. However, this function should not be enabled when the FortiGate itself is operating as a multicast router, or has an applicable routing protocol that uses multicast.

There are two steps to configure multicast forwarding:

1. Enable multicast forwarding
2. Configure multicast policies

Enabling multicast forwarding

Multicast forwarding is enabled by default. If a FortiGate is operating in transparent mode, adding a multicast policy enables multicast forwarding. In NAT mode you must use the `multicast-forward` setting to enable or disable multicast forwarding.

Multicast forwarding in NAT mode

When `multicast-forward` is enabled, the FortiGate forwards any multicast IP packets in which the TTL is 2 or higher to all interfaces and VLAN interfaces, except the receiving interface. The TTL in the IP header will be reduced by 1. Even though the multicast packets are forwarded to all interfaces, you must add multicast policies to allow multicast packets through the FortiGate.

To enable multicast forwarding in NAT mode:

```
config system settings
    set multicast-forward enable
end
```

Prevent the TTL for forwarded packets from being changed

You can use the `multicast-ttl-notchange` option so that the FortiGate does not increase the TTL value for forwarded multicast packets. Use this option only if packets are expiring before reaching the multicast router.

To prevent the TTL for forwarded packets from being changed:

```
config system settings
    set multicast-ttl-notchange enable
end
```

Disable multicast traffic from passing through the FortiGate without a policy check in transparent mode

In transparent mode, the FortiGate does not forward frames with multicast destination addresses. The FortiGate should not interfere with the multicast traffic used by routing protocols, streaming media, or other multicast communication. To avoid any issues during transmission, you can disable `multicast-skip-policy` and configure multicast security policies.

To disable multicast traffic from passing through the FortiGate without a policy check in transparent mode:

```
config system settings
    set multicast-skip-policy disable
end
```

Configuring multicast policies

Multicast packets require multicast policies to allow packets to pass from one interface to another. Similar to firewall policies, in a multicast policy you specify the source and destination interfaces, and the allowed address ranges for the source and destination addresses of the packets. You can also use multicast policies to configure source NAT and destination NAT for multicast packets.

Keep the following in mind when configuring multicast policies:

- The matched forwarded (outgoing) IP multicast source IP address is changed to the configured IP address.
- The `snat` setting is optional. Use it when SNAT is needed.

Sample basic policy

In this basic policy, multicast packets received on an interface are flooded unconditionally to all interfaces on the forwarding domain, except the incoming interface.

```
config firewall multicast-policy
    edit 1
        set srcintf "any"
        set dstintf "any"
        set srcaddr "all"
        set dstaddr "all"
    next
end
```

The destination address (`dstaddr`) is a multicast address object. The `all` option corresponds to all multicast addresses in the range 224.0.0.0-239.255.255.255.

Sample policy with specific source and destination interfaces

This multicast policy only applies to the source port `wan1` and the destination port `internal`.

```
config firewall multicast-policy
    edit 1
        set srcintf "wan1"
        set dstintf "internal"
        set srcaddr "all"
        set dstaddr "all"
```

```
    next
end
```

Sample policy with specific source address object

In this policy, packets are allowed to flow from `wan1` to `internal`, and sourced by the address 172.20.120.129, which is represented by the `example_addr-1` address object.

```
config firewall multicast-policy
    edit 1
        set srcintf "wan1"
        set dstintf "internal"
        set srcaddr "example_addr-1"
        set dstaddr "all"
    next
end
```

Sample detailed policy

This policy accepts multicast packets that are sent from a PC with IP address 192.168.5.18 to destination address range 239.168.4.0-255. The policy allows the multicast packets to enter the `internal` interface and then exit the `external` interface. When the packets leave the external interface, their source address is translated to 192.168.18.10.

```
config firewall address
    edit "192.168.5.18"
        set subnet 192.168.5.18 255.255.255.255
    next
end
```

```
config firewall multicast-address
    edit "239.168.4.0"
        set start-ip 239.168.4.0
        set end-ip 239.168.4.255
    next
end
```

```
config firewall multicast-policy
    edit 1
        set srcintf "internal"
        set dstintf "external"
        set srcaddr "192.168.5.18"
        set dstaddr "239.168.4.0"
        set snat enable
        set snat-ip 192.168.18.10
    next
end
```



To configure multicast policies in the GUI, enable *Multicast Policy* in *System* > *Feature Visibility*.

Direct IP support for LTE/4G

Direct IP is a public IP address that is assigned to a computing device, which allows the device to directly access the internet.

When an LTE modem is enabled in FortiOS, a DHCP interface is created. As a result, the FortiGate can acquire direct IP (which includes IP, DNS, and gateway) from the LTE network carrier.

Since some LTE modems require users to input the access point name (APN) for the LTE network, the LTE modem configuration allows you to set the APN.



LTE modems can only be enabled by using the CLI.

To enable direct IP support using the CLI:

1. Enable the LTE modem:

```
config system lte-modem
  set status enable
end
```

2. Check that the LTE interface was created:

```
config system interface
  edit "wwan"
    set vdom "root"
    set mode dhcp
    set status down
    set distance 1
    set type physical
    set snmp-index 23
  next
end
```

Shortly after the LTE modem joins its carrier network, `wwan` is enabled and granted direct IP:

```
# config system interface
(interface) # edit wwan
(wwan) # get
name                : wwan
....
ip                  : 100.112.75.43 255.255.255.248
....
status              : up
....
defaultgw           : enable
DHCP Gateway        : 100.112.75.41
Lease Expires       : Thu Feb 21 19:33:27 2019
dns-server-override : enable
Acquired DNS1       : 184.151.118.254
Acquired DNS2       : 70.28.245.227
....
```

PCs can reach the internet via the following firewall policy:


```
config firewall policy
....
  edit 5
    set name "LTE"
    set uuid 61880e9a-36ce-51e9-a4f4-15cc3ffc25f3
    set srcintf "port9"
    set dstintf "wwan"
    set srcaddr "all"
    set dstaddr "all"
    set action accept
    set schedule "always"
    set service "ALL"
    set utm-status enable
    set fsso disable
    set nat enable
  next
end
```

Sample LTE interface

When an LTE modem is enabled, you can view the LTE interface in the GUI and check the acquired IP, DNS, and gateway.


To view the LTE interface in the GUI:

1. Go to *Network* > *Interfaces*.
2. Double-click the LTE interface to view the properties.
3. Look in the *Address* section to view the:
   a. *Obtained IP*
   b. *Acquired DNS*
   c. *Default Gateway*
4. Click *Return*.

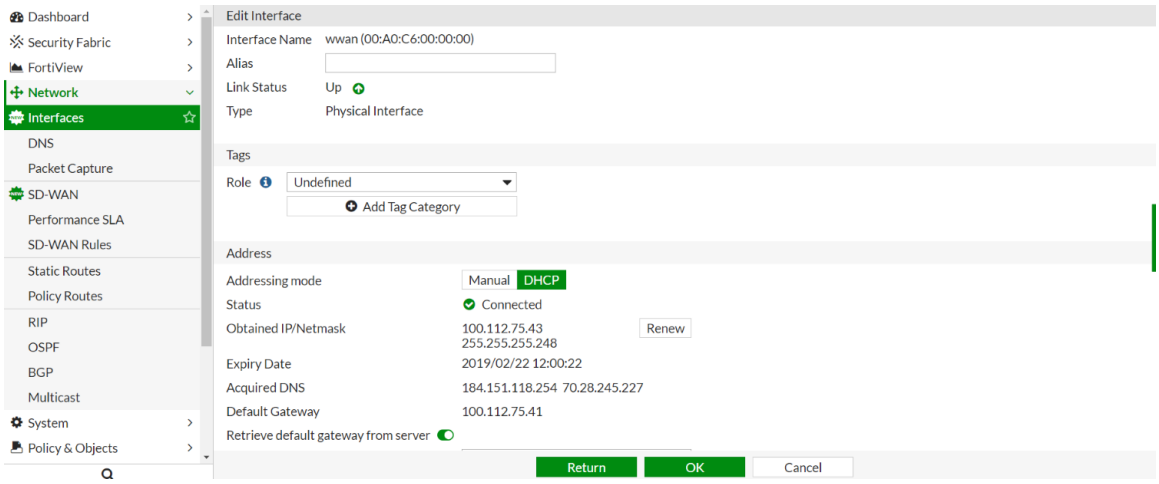

To configure the firewall policy that uses the LTE interface:

1. Go to *Policy & Objects* > *IPv4 Policy*.
2. Double-click the LTE policy. The *Edit Policy* pane opens.
3. In the *Outgoing Interface* field, select the interface (`wwan` in this example).
4. Configure the rest of the policy as needed.

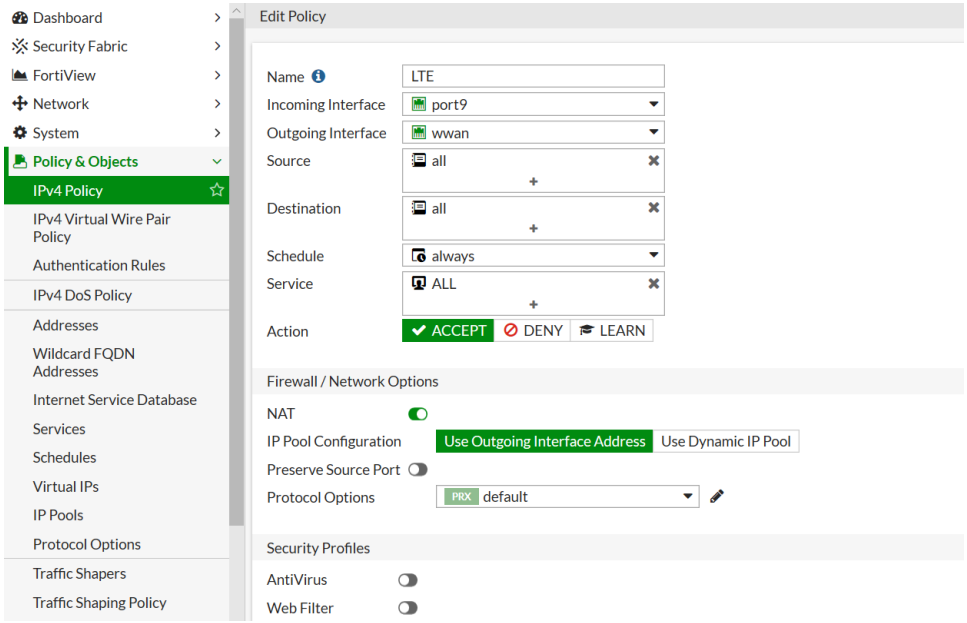

5. Click *OK*.

Limitations

- Most LTE modems have a preset APN in their SIM card. Therefore, the APN does not need to be set in the FortiOS configuration. In cases where the internet cannot be accessed, consult with your carrier and set the APN in the LTE modem configuration (for example, inet.bell.ca):

```
config system lte-modem
  set status enable
  set apn "inet.bell.ca"
end
```

- Some models, such as the FortiGate 30E-3G4G, have built-in LTE modems. In this scenario, the LTE modem is enabled by default. The firewall policy via the LTE interface is also created by default. Once you plug in a SIM card, your network devices can connect to the internet.

  Sample FortiGate 30E-3G4G default configuration:

```
config system lte-modem
  set status enable
  set extra-init ''
  set manual-handover disable
  set force-wireless-profile 0
  set authtype none
  set apn ''
  set modem-port 255
```

```
    set network-type auto
    set auto-connect disable
    set gpsd-enabled disable
    set data-usage-tracking disable
    set gps-port 255
  end

  config firewall policy
  ....
    edit 3
      set uuid f7c77cc6-36d1-51e9-2899-a7040791330c
      set srcintf "internal"
      set dstintf "wwan"
      set srcaddr "all"
      set dstaddr "all"
      set action accept
      set schedule "always"
      set service "ALL"
      set nat enable
    next
  end
```

LLDP reception

Natively, device detection can scan LLDP as a source for device identification. However, the FortiGate does not read or store the full information. Enabling LLDP reception allows the FortiGate to receive and store LLDP messages, learn about active neighbors, and makes the LLDP information available via the CLI, REST API, and SNMP.

You will need to enable `device-identification` at the interface level, and then `lldp-reception` can be enabled on three levels: globally, per VDOM, or per interface.

To configure device identification on an interface:

```
config system interface
    edit <port>
        set device-identification enable
    next
end
```

To configure LLDP reception globally:

```
config system global
    set lldp-reception enable
end
```

To configure LLDP reception per VDOM:


```
config system setting
    set lldp-reception enable
end
```

To configure LLDP reception per interface:

```
config system interface
    edit <port>
        set lldp-reception enable
    next
end
```

To view the LLDP information in the GUI:

1. Go to *User & Device* > *Device Inventory* to view the information.

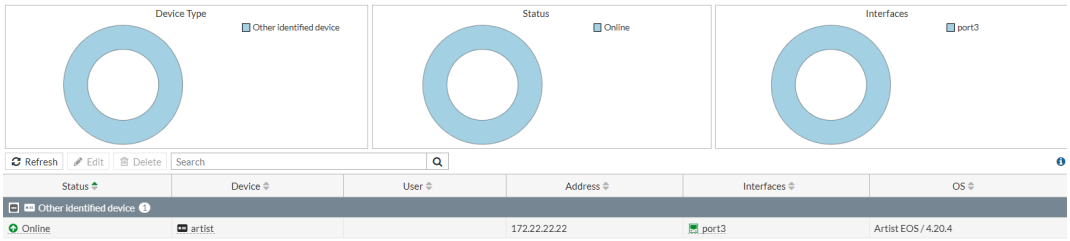

To view the received LLDP information in the CLI:

```
# diagnose user device list
    hosts
      vd root/0 44:0a:a0:0a:0a:0a gen 3 req S/2
        created 10290s gen 1 seen 0s port3 gen 1
        ip 172.22.22.22 src lldp
        type 20 'Other Network Device' src lldp id 155 gen 2
        os 'Artist EOS ' version '4.20.4' src lldp id 155
        host 'artist' src lldp
```

To view additional information about LLDP neighbors and ports:

```
# diagnose lldprx neighbor {summary | details | clear}
# diagnose lldprx port {details | summary | neighbor | filter}
# diagnose lldprx port neighbor {summary | details}
```

Note that the port index in the output corresponds to the port index from the following command:

```
# diagnose netlink interface list port2 port3 | grep index
      if=port2 family=00 type=1 index=4 mtu=1500 link=0 master=0
      if=port3 family=00 type=1 index=5 mtu=1500 link=0 master=0
```

To view the received LLDP information in the REST API:

```
{
  "http_method":"GET",
  "results":[
    {
      "mac":"90:9c:9c:c9:c9:90",
      "chassis_id":"90:9C:9C:C9:C9:90",
      "port":19,
      "port_id":"port12",
      "port_desc":"port12",
```

```
        "system_name":"S124DN3W00000000",
        "system_desc":"FortiSwitch-124D v3.6.6,build0416,180515 (GA)",
        "ttl":120,
        "addresses":[
          {
            "type":"ipv4",
            "address":"192.168.1.99"
          }
        ]
      }
    ],
    "vdom":"root",
    "path":"network",
    "name":"lldp",
    "action":"neighbors",
    "status":"success",
    "serial":"FG201E4Q00000000",
    "version":"v6.2.0",
    "build":866
}
{
    "http_method":"GET",
    "results":[
      {
        "name":"port1",
        "rx":320,
        "neighbors":1
      }
    ],
    "vdom":"root",
    "path":"network",
    "name":"lldp",
    "action":"ports",
    "mkey":"port1",
    "status":"success",
    "serial":"FG201E4Q00000000",
    "version":"v6.2.0",
    "build":866
}
```


NetFlow

NetFlow allows you to collect IP network traffic statistics for an interface, and then export those statistics for analysis. NetFlow samplers, that sample every packet, are configured per interface. Full NetFlow is supported through the information maintained in the firewall session.

To configure NetFlow:

```
config system netflow
    set collector-ip <ip>
    set collector-port <port>
    set source-ip <ip>
```

```
    set active-flow-timeout <integer>
    set inactive-flow-timeout <integer>
    set template-tx-timeout <integer>
    set template-tx-counter <integer>
end
```

collector-ip <ip>	Collector IP address.
collector-port <port>	NetFlow collector port number (0 - 65535)
source-ip <ip>	Source IP address, for communication with the NetFlow agent.
active-flow-timeout <integer>	Timeout to report active flows, in minutes (1 - 60, default = 30).
inactive-flow-timeout <integer>	Timeout for periodic report of finished flows, in seconds (10 - 600, default = 15).
template-tx-timeout <integer>	Timeout for periodic template flowset transmission, in minutes (1 - 1440, default = 30).
template-tx-counter <integer>	Counter of flowset records, before resending a template flowset record (10 - 6000, default = 20).

To configure NetFlow in a specific VDOM:

```
config vdom
    edit <vdom>
        config system vdom-netflow
            set vdom-netflow enable
            set collector-ip <ip>
            set collector-port <port>
            set source-ip <ip>
        end
    next
end
```

To configure a NetFlow sampler on an interface:

```
config system interface
    edit <interface>
        set netflow-sampler {disable | tx | rx | both}
    next
end
```

disable	Disable the NetFlow protocol on this interface (default).
tx	Monitor transmitted traffic on this interface.
rx	Monitor received traffic on this interface.
both	Monitor transmitted/received traffic on this interface.

Verification and troubleshooting

If data are not seen on the NetFlow collector after it has been configured, use the following sniffer commands to verify if the FortiGate and the collector are communicating:

- By collector port:

```
# diagnose sniffer packet 'port <collector-port>'  6 0 a
```

- By collector IP address:

```
# diagnose sniffer packet 'host <collector-ip>' 6 0 a
```

NetFlow uses the sflow daemon. The current NetFlow configuration can be viewed using test level 3 or 4:

```
# diagnose test application sflowd 3
```

```
# diagnose test application sflowd 4
Netflow Cache Stats:
vdoms=1 Collectors=1 Cached_intf=2 Netflow_enabled_intf=1 Live_sessions=0 Session cache max
count:71950
```

NetFlow templates

Netflow uses templates to capture and categorize the data that it collects. FortiOS supports the following Netflow templates:

Name	Template ID	Description
STAT_OPTIONS	256	Statistics information about exporter
APP_ID_OPTIONS	257	Application information
IPV4	258	No NAT IPv4 traffic
IPV6	259	No NAT IPv6 traffic
ICMP4	260	No NAT ICMPv4 traffic
ICMP6	261	No NAT ICMPv6 traffic
IPV4_NAT	262	Source/Destination NAT IPv4 traffic
IPV4_AF_NAT	263	AF NAT IPv4 traffic (4->6)
IPV6_NAT	264	Source/Destination NAT IPv6 traffic
IPV6_AF_NAT	265	AF NAT IPv6 traffic (6->4)
ICMP4_NAT	266	Source/Destination NAT ICMPv4 traffic
ICMP4_AF_NAT	267	AF NAT ICMPv4 traffic (4->6)
ICMP6_NAT	268	Source/Destination NAT ICMPv6 traffic
ICMPv6_AF_NAT	269	AF NAT ICMPv6 traffic (6->4)

256 - STAT_OPTIONS

Description	Statistics information about exporter
Scope Field Count	1
Data Field Count	7
Option Scope Length	4
Option Length	28
Padding	0000

Scope fields

Field #	Field	Type	Length
1	System	System (1)	2

Data fields

Field #	Field	Type	Length
1	TOTAL_BYTES_EXP	TOTAL_BYTES_EXP (40)	8
2	TOTAL_PKTS_EXP	TOTAL_PKTS_EXP (41)	8
3	TOTAL_FLOWS_EXP	TOTAL_FLOWS_EXP (42)	8
4	FLOW_ACTIVE_TIMEOUT	FLOW_ACTIVE_TIMEOUT (36)	2
5	FLOW_INACTIVE_TIMEOUT	FLOW_INACTIVE_TIMEOUT (37)	2
6	SAMPLING_INTERVAL	SAMPLING_INTERVAL (34)	4
7	SAMPLING_ALGORITHM	SAMPLING_ALGORITHM (35)	1

257 - APP_ID_OPTIONS

Description	Application information
Scope Field Count	1
Data Field Count	4
Option Scope Length	4
Option Length	16
Padding	0000

Scope fields

Field #	Field	Type	Length
1	System	System (1)	2

Data fields

Field #	Field	Type	Length
1	APPLICATION_ID	APPLICATION_ID (95)	9
2	APPLICATION_NAME	APPLICATION_NAME (96)	64
3	APPLICATION_DESC	APPLICATION_DESC (94)	64
4	applicationCategoryName	applicationCategoryName (372)	32

258 - IPV4

Description	No NAT IPv4 traffic
Data Field Count	17

Data fields

Field #	Field	Type	Length
1	BYTES	BYTES (1)	8
2	OUT_BYTES	OUT_BYTES (23)	8
3	PKTS	PKTS (2)	4
4	OUT_PKTS	OUT_PKTS (24)	4
5	FIRST_SWITCHED	FIRST_SWITCHED (22)	4
6	LAST_SWITCHED	LAST_SWITCHED (21)	4
7	L4_SRC_PORT	L4_SRC_PORT (7)	2
8	L4_DST_PORT	L4_DST_PORT (11)	2
9	INPUT_SNMP	INPUT_SNMP (10)	2
10	OUTPUT_SNMP	OUTPUT_SNMP (14)	2
11	PROTOCOL	PROTOCOL (4)	1
12	APPLICATION_ID	APPLICATION_ID (95)	9
13	FLOW_FLAGS	FLOW_FLAGS (65)	2
14	FORWARDING_STATUS	FORWARDING_STATUS (89)	1

Field #	Field	Type	Length
15	flowEndReason	flowEndReason (136)	1
16	IP_SRC_ADDR	IP_SRC_ADDR (8)	4
17	IP_DST_ADDR	IP_DST_ADDR (12)	4

259 - IPV6

Description	No NAT IPv6 traffic
Data Field Count	17

Data fields

Field #	Field	Type	Length
1	BYTES	BYTES (1)	8
2	OUT_BYTES	OUT_BYTES (23)	8
3	PKTS	PKTS (2)	4
4	OUT_PKTS	OUT_PKTS (24)	4
5	FIRST_SWITCHED	FIRST_SWITCHED (22)	4
6	LAST_SWITCHED	LAST_SWITCHED (21)	4
7	L4_SRC_PORT	L4_SRC_PORT (7)	2
8	L4_DST_PORT	L4_DST_PORT (11)	2
9	INPUT_SNMP	INPUT_SNMP (10)	2
10	OUTPUT_SNMP	OUTPUT_SNMP (14)	2
11	PROTOCOL	PROTOCOL (4)	1
12	APPLICATION_ID	APPLICATION_ID (95)	9
13	FLOW_FLAGS	FLOW_FLAGS (65)	2
14	FORWARDING_STATUS	FORWARDING_STATUS (89)	1
15	flowEndReason	flowEndReason (136)	1
16	IPV6_SRC_ADDR	IPV6_SRC_ADDR (27)	16
17	IPV6_DST_ADDR	IPV6_DST_ADDR (28)	16

260 - ICMP4

Description	No NAT ICMPv4 traffic
Data Field Count	16

Data fields

Field #	Field	Type	Length
1	BYTES	BYTES (1)	8
2	OUT_BYTES	OUT_BYTES (23)	8
3	PKTS	PKTS (2)	4
4	OUT_PKTS	OUT_PKTS (24)	4
5	FIRST_SWITCHED	FIRST_SWITCHED (22)	4
6	LAST_SWITCHED	LAST_SWITCHED (21)	4
7	INPUT_SNMP	INPUT_SNMP (10)	2
8	OUTPUT_SNMP	OUTPUT_SNMP (14)	2
9	ICMP_TYPE	ICMP_TYPE (32)	2
10	PROTOCOL	PROTOCOL (4)	1
11	APPLICATION_ID	APPLICATION_ID (95)	9
12	FLOW_FLAGS	FLOW_FLAGS (65)	2
13	FORWARDING_STATUS	FORWARDING_STATUS (89)	1
14	flowEndReason	flowEndReason (136)	1
15	IP_SRC_ADDR	IP_SRC_ADDR (8)	4
16	IP_DST_ADDR	IP_DST_ADDR(12)	4

261 - ICMP6

Description	No NAT ICMPv6 traffic
Data Field Count	16

Data fields

Field #	Field	Type	Length
1	BYTES	BYTES (1)	8
2	OUT_BYTES	OUT_BYTES (23)	8
3	PKTS	PKTS (2)	4
4	OUT_PKTS	OUT_PKTS (24)	4
5	FIRST_SWITCHED	FIRST_SWITCHED (22)	4
6	LAST_SWITCHED	LAST_SWITCHED (21)	4

Field #	Field	Type	Length
7	INPUT_SNMP	INPUT_SNMP (10)	2
8	OUTPUT_SNMP	OUTPUT_SNMP (14)	2
9	ICMP_TYPE	ICMP_TYPE (32)	2
10	PROTOCOL	PROTOCOL (4)	1
11	APPLICATION_ID	APPLICATION_ID (95)	9
12	FLOW_FLAGS	FLOW_FLAGS (65)	2
13	FORWARDING_STATUS	FORWARDING_STATUS (89)	1
14	flowEndReason	flowEndReason (136)	1
15	IPV6_SRC_ADDR	IPV6_SRC_ADDR (27)	16
16	IPV6_DST_ADDR	IPV6_DST_ADDR (28)	16

262 - IPV4_NAT

Description	Source/Destination NAT IPv4 traffic
Data Field Count	21

Data fields

Field #	Field	Type	Length
1	BYTES	BYTES (1)	8
2	OUT_BYTES	OUT_BYTES (23)	8
3	PKTS	PKTS (2)	4
4	OUT_PKTS	OUT_PKTS (24)	4
5	FIRST_SWITCHED	FIRST_SWITCHED (22)	4
6	LAST_SWITCHED	LAST_SWITCHED (21)	4
7	L4_SRC_PORT	L4_SRC_PORT (7)	2
8	L4_DST_PORT	L4_DST_PORT (11)	2
9	INPUT_SNMP	INPUT_SNMP (10)	2
10	OUTPUT_SNMP	OUTPUT_SNMP (14)	2
11	PROTOCOL	PROTOCOL (4)	1
12	APPLICATION_ID	APPLICATION_ID (95)	9
13	FLOW_FLAGS	FLOW_FLAGS (65)	2

Field #	Field	Type	Length
14	FORWARDING_STATUS	FORWARDING_STATUS (89)	1
15	flowEndReason	flowEndReason (136)	1
16	IP_SRC_ADDR	IP_SRC_ADDR (8)	4
17	IP_DST_ADDR	IP_DST_ADDR (12)	4
18	postNATSourceIPv4Address	postNATSourceIPv4Address (225)	4
19	postNATDestinationIPv4Address	postNATDestinationIPv4Address (226)	4
20	postNAPTSourceTransportPort	postNAPTSourceTransportPort (227)	2
21	postNAPTDestinationTransportPort	postNAPTDestinationTransportPort (228)	2

263 - IPV4_AF_NAT

Description	AF NAT IPv4 traffic (4->6)
Data Field Count	21

Data fields

Field #	Field	Type	Length
1	BYTES	BYTES (1)	8
2	OUT_BYTES	OUT_BYTES (23)	8
3	PKTS	PKTS (2)	4
4	OUT_PKTS	OUT_PKTS (24)	4
5	FIRST_SWITCHED	FIRST_SWITCHED (22)	4
6	LAST_SWITCHED	LAST_SWITCHED (21)	4
7	L4_SRC_PORT	L4_SRC_PORT (7)	2
8	L4_DST_PORT	L4_DST_PORT (11)	2
9	INPUT_SNMP	INPUT_SNMP (10)	2
10	OUTPUT_SNMP	OUTPUT_SNMP (14)	2
11	PROTOCOL	PROTOCOL (4)	1
12	APPLICATION_ID	APPLICATION_ID (95)	9
13	FLOW_FLAGS	FLOW_FLAGS (65)	2
14	FORWARDING_STATUS	FORWARDING_STATUS (89)	1
15	flowEndReason	flowEndReason (136)	1

Field #	Field	Type	Length
16	IPV6_SRC_ADDR	IPV6_SRC_ADDR (27)	16
17	IPV6_DST_ADDR	IPV6_DST_ADDR (28)	16
18	postNATSourceIPv6Address	postNATSourceIPv6Address (281)	16
19	postNATDestinationIPv6Address	postNATDestinationIPv6Address (282)	16
20	postNAPTSourceTransportPort	postNAPTSourceTransportPort (227)	2
21	postNAPTDestinationTransportPort	postNAPTDestinationTransportPort (228)	2

264 - IPV6_NAT

Description	Source/Destination NAT IPv6 traffic
Data Field Count	21

Data fields

Field #	Field	Type	Length
1	BYTES	BYTES (1)	8
2	OUT_BYTES	OUT_BYTES (23)	8
3	PKTS	PKTS (2)	4
4	OUT_PKTS	OUT_PKTS (24)	4
5	FIRST_SWITCHED	FIRST_SWITCHED (22)	4
6	LAST_SWITCHED	LAST_SWITCHED (21)	4
7	L4_SRC_PORT	L4_SRC_PORT (7)	2
8	L4_DST_PORT	L4_DST_PORT (11)	2
9	INPUT_SNMP	INPUT_SNMP (10)	2
10	OUTPUT_SNMP	OUTPUT_SNMP (14)	2
11	PROTOCOL	PROTOCOL (4)	1
12	APPLICATION_ID	APPLICATION_ID (95)	9
13	FLOW_FLAGS	FLOW_FLAGS (65)	2
14	FORWARDING_STATUS	FORWARDING_STATUS (89)	1
15	flowEndReason	flowEndReason (136)	1
16	IP_SRC_ADDR	IP_SRC_ADDR (8)	4
17	IP_DST_ADDR	IP_DST_ADDR (12)	4

Field #	Field	Type	Length
18	postNATSourceIPv6Address	postNATSourceIPv6Address (281)	16
19	postNATDestinationIPv6Address	postNATDestinationIPv6Address (282)	16
20	postNAPTSourceTransportPort	postNAPTSourceTransportPort (227)	2
21	postNAPTDestinationTransportPort	postNAPTDestinationTransportPort (228)	2

265 - IPV6_AF_NAT

Description	AF NAT IPv6 traffic (6->4)
Data Field Count	21

Data fields

Field #	Field	Type	Length
1	BYTES	BYTES (1)	8
2	OUT_BYTES	OUT_BYTES (23)	8
3	PKTS	PKTS (2)	4
4	OUT_PKTS	OUT_PKTS (24)	4
5	FIRST_SWITCHED	FIRST_SWITCHED (22)	4
6	LAST_SWITCHED	LAST_SWITCHED (21)	4
7	L4_SRC_PORT	L4_SRC_PORT (7)	2
8	L4_DST_PORT	L4_DST_PORT (11)	2
9	INPUT_SNMP	INPUT_SNMP (10)	2
10	OUTPUT_SNMP	OUTPUT_SNMP (14)	2
11	PROTOCOL	PROTOCOL (4)	1
12	APPLICATION_ID	APPLICATION_ID (95)	9
13	FLOW_FLAGS	FLOW_FLAGS (65)	2
14	FORWARDING_STATUS	FORWARDING_STATUS (89)	1
15	flowEndReason	flowEndReason (136)	1
16	IPV6_SRC_ADDR	IPV6_SRC_ADDR (27)	16
17	IPV6_DST_ADDR	IPV6_DST_ADDR (28)	16
18	postNATSourceIPv4Address	postNATSourceIPv4Address (225)	4
19	postNATDestinationIPv4Address	postNATDestinationIPv4Address (226)	4

Field #	Field	Type	Length
20	postNAPTSourceTransportPort	postNAPTSourceTransportPort (227)	2
21	postNAPTDestinationTransportPort	postNAPTDestinationTransportPort (228)	2

266 - ICMPV4_NAT

Description	Source/Destination NAT ICMPv4 traffic
Data Field Count	20

Data fields

Field #	Field	Type	Length
1	BYTES	BYTES (1)	8
2	OUT_BYTES	OUT_BYTES (23)	8
3	PKTS	PKTS (2)	4
4	OUT_PKTS	OUT_PKTS (24)	4
5	FIRST_SWITCHED	FIRST_SWITCHED (22)	4
6	LAST_SWITCHED	LAST_SWITCHED (21)	4
7	INPUT_SNMP	INPUT_SNMP (10)	2
8	OUTPUT_SNMP	OUTPUT_SNMP (14)	2
9	ICMP_TYPE	ICMP_TYPE (32)	2
10	PROTOCOL	PROTOCOL (4)	1
11	APPLICATION_ID	APPLICATION_ID (95)	9
12	FLOW_FLAGS	FLOW_FLAGS (65)	2
13	FORWARDING_STATUS	FORWARDING_STATUS (89)	1
14	flowEndReason	flowEndReason (136)	1
15	IP_SRC_ADDR	IP_SRC_ADDR (8)	4
16	IP_DST_ADDR	IP_DST_ADDR (12)	4
17	postNATSourceIPv4Address	postNATSourceIPv4Address (225)	4
18	postNATDestinationIPv4Address	postNATDestinationIPv4Address (226)	4
19	postNAPTSourceTransportPort	postNAPTSourceTransportPort (227)	2
20	postNAPTDestinationTransportPort	postNAPTDestinationTransportPort (228)	2

267 - ICMPV4_AF_NAT

Description	AF NAT ICMPv4 traffic (4->6)
Data Field Count	20

Data fields

Field #	Field	Type	Length
1	BYTES	BYTES (1)	8
2	OUT_BYTES	OUT_BYTES (23)	8
3	PKTS	PKTS (2)	4
4	OUT_PKTS	OUT_PKTS (24)	4
5	FIRST_SWITCHED	FIRST_SWITCHED (22)	4
6	LAST_SWITCHED	LAST_SWITCHED (21)	4
7	INPUT_SNMP	INPUT_SNMP (10)	2
8	OUTPUT_SNMP	OUTPUT_SNMP (14)	2
9	ICMP_TYPE	ICMP_TYPE (32)	2
10	PROTOCOL	PROTOCOL (4)	1
11	APPLICATION_ID	APPLICATION_ID (95)	9
12	FLOW_FLAGS	FLOW_FLAGS (65)	2
13	FORWARDING_STATUS	FORWARDING_STATUS (89)	1
14	flowEndReason	flowEndReason (136)	1
15	IPV6_SRC_ADDR	IPV6_SRC_ADDR (27)	16
16	IPV6_DST_ADDR	IPV6_DST_ADDR (28)	16
17	postNATSourceIPv6Address	postNATSourceIPv6Address (281)	16
18	postNATDestinationIPv6Address	postNATDestinationIPv6Address (282)	16
19	postNAPTSourceTransportPort	postNAPTSourceTransportPort (227)	2
20	postNAPTDestinationTransportPort	postNAPTDestinationTransportPort (228)	2

268 - ICMPV6_NAT

Description	Source/Destination NAT ICMPv6 traffic
Data Field Count	20

Data fields

Field #	Field	Type	Length
1	BYTES	BYTES (1)	8
2	OUT_BYTES	OUT_BYTES (23)	8
3	PKTS	PKTS (2)	4
4	OUT_PKTS	OUT_PKTS (24)	4
5	FIRST_SWITCHED	FIRST_SWITCHED (22)	4
6	LAST_SWITCHED	LAST_SWITCHED (21)	4
7	INPUT_SNMP	INPUT_SNMP (10)	2
8	OUTPUT_SNMP	OUTPUT_SNMP (14)	2
9	ICMP_TYPE	ICMP_TYPE (32)	2
10	PROTOCOL	PROTOCOL (4)	1
11	APPLICATION_ID	APPLICATION_ID (95)	9
12	FLOW_FLAGS	FLOW_FLAGS (65)	2
13	FORWARDING_STATUS	FORWARDING_STATUS (89)	1
14	flowEndReason	flowEndReason (136)	1
15	IP_SRC_ADDR	IP_SRC_ADDR (8)	4
16	IP_DST_ADDR	IP_DST_ADDR (12)	4
17	postNATSourceIPv6Address	postNATSourceIPv6Address (281)	16
18	postNATDestinationIPv6Address	postNATDestinationIPv6Address (282)	16
19	postNAPTSourceTransportPort	postNAPTSourceTransportPort (227)	2
20	postNAPTDestinationTransportPort	postNAPTDestinationTransportPort (228)	2

269 - ICMPV6_AF_NAT

Description	AF NAT ICMPv6 traffic (6->4)
Data Field Count	20

Data fields

Field #	Field	Type	Length
1	BYTES	BYTES (1)	8

Field #	Field	Type	Length
2	OUT_BYTES	OUT_BYTES (23)	8
3	PKTS	PKTS (2)	4
4	OUT_PKTS	OUT_PKTS (24)	4
5	FIRST_SWITCHED	FIRST_SWITCHED (22)	4
6	LAST_SWITCHED	LAST_SWITCHED (21)	4
7	INPUT_SNMP	INPUT_SNMP (10)	2
8	OUTPUT_SNMP	OUTPUT_SNMP (14)	2
9	ICMP_TYPE	ICMP_TYPE (32)	2
10	PROTOCOL	PROTOCOL (4)	1
11	APPLICATION_ID	APPLICATION_ID (95)	9
12	FLOW_FLAGS	FLOW_FLAGS (65)	2
13	FORWARDING_STATUS	FORWARDING_STATUS (89)	1
14	flowEndReason	flowEndReason (136)	1
15	IPV6_SRC_ADDR	IPV6_SRC_ADDR (27)	16
16	IPV6_DST_ADDR	IPV6_DST_ADDR (28)	16
17	postNATSourceIPv4Address	postNATSourceIPv4Address (225)	4
18	postNATDestinationIPv4Address	postNATDestinationIPv4Address (226)	4
19	postNAPTSourceTransportPort	postNAPTSourceTransportPort (227)	2
20	postNAPTDestinationTransportPort	postNAPTDestinationTransportPort (228)	2

SD-WAN

SD-WAN is a software-defined approach to managing Wide-Area Networks (WAN). It allows you to offload internet-bound traffic, meaning that private WAN services remain available for real-time and mission critical applications. This added flexibility improves traffic flow and reduces pressure on the network.

SD-WAN platforms create hybrid networks that integrate broadband and other network services into the corporate WAN while maintaining the performance and security of real-time and sensitive applications.

SD-WAN with Application Aware Routing can measure and monitor the performance of multiple services in a hybrid network. It uses application routing to offer more granular control of where and when an application uses a specific service, allowing better use of the overall network.

Some of the key benefits of SD-WAN include:

- Reduced cost with transport independence across MPLS, 3G/4G LTE, and others.
- Improve business application performance thanks to increased availability and agility.
- Optimized user experience and efficiency with SaaS and public cloud applications.

SD-WAN has 3 objects:


- **SD-WAN interface**
  Also called members, SD-WAN interfaces are the ports and interfaces that are used to run traffic. At least one interface must be configured for SD-WAN to function; up to 255 member interfaces can be configured. See Configuring the SD-WAN interface on page 453.
- **Performance SLA**
  Also called health-check, performance SLAs are used to monitor member interface link quality, and to detect link failures. They can be used to remove routes, and to reroute traffic when an SD-WAN member cannot detect the server. They can also be used in SD-WAN rules to select the preferred member interface for forwarding traffic. See Performance SLA - link monitoring on page 464.
- **SD-WAN rule**
  Also called service, SD-WAN rules are used to control path selection. Specific traffic can be dynamically sent to the best link, or use a specific route. There are five modes:
  - *auto*: Assign interfaces a priority based on quality.
  - *manual*: Assign interfaces a priority manually.
  - *priority*: Assign interfaces a priority based on the link-cost-factor quality of the interface.
  - *sla*: Assign interfaces a priority based on selected SLA settings.
  - *load-balance*: Distribute traffic among all available links based on the load balance algorithm.

  See SD-WAN rules - best quality on page 473, SD-WAN rules - lowest cost (SLA) on page 476, and SD-WAN rules - maximize bandwidth (SLA) on page 478.

SD-WAN quick start

This section provides an example of how to start using SD-WAN for load balancing and redundancy.

In this example, two ISP internet connections, wan1 (DHCP) and wan2 (static), use SD-WAN to balance traffic between them at 50% each.

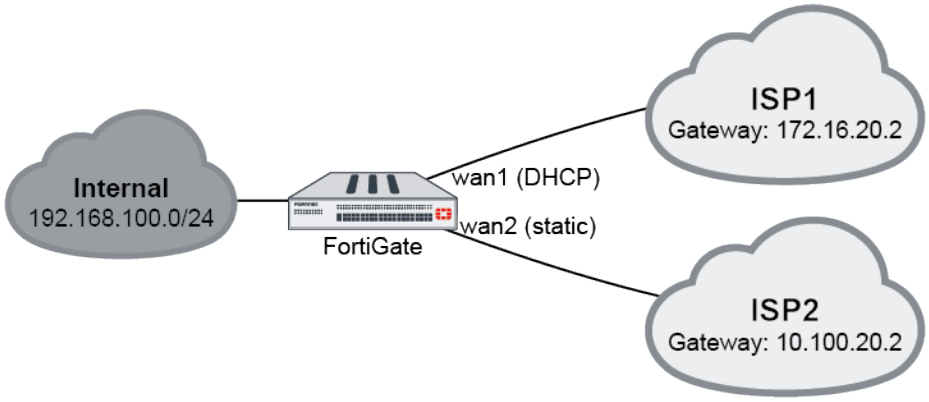

1. Configuring the SD-WAN interface on page 453
2. Adding a static route on page 455
3. Selecting the implicit SD-WAN algorithm on page 455
4. Configuring security policies for SD-WAN on page 456
5. Link monitoring and failover on page 456
6. Results on page 458
7. Configuring SD-WAN in the CLI on page 462

Configuring the SD-WAN interface

First, SD-WAN must be enabled and member interfaces must be selected. The selected FortiGate interfaces can be of any type (physical, aggregate, VLAN, IPsec, and others), but must be removed from any other configurations on the FortiGate.

In this step, two interfaces are configured and then selected as SD-WAN member interfaces. This example uses a mix of static and dynamic IP addresses; your deployment could also use only one or the other.

Once the SD-WAN interface is configured, it is referenced as *SD-WAN* in the GUI for static routes and firewall policies, and `virtual-wan-link` can be enabled in the CLI.


To configure SD-WAN members:

1. Configure the wan1 and wan2 interfaces. See Interface settings on page 316 for details.
   a. Set the wan1 interface *Addressing mode* to *DHCP* and *Distance* to *10*.


   By default, a DHCP interface has a distance of 5, and a static route has a distance of 10. It is important to account for this when configuring your SD-WAN for 50/50 load balancing by setting the DHCP interface's distance to 10.

   b. Set the wan2 interface *IP/Netmask* to *10.100.20.1 255.255.255.0*.
2. Go to *Network* > *SD-WAN* and set *Status* to *Enable*.
   Routing for each SD-WAN interface is defined here.

3. In the *SD-WAN Interface Members* table, click *Create New*.

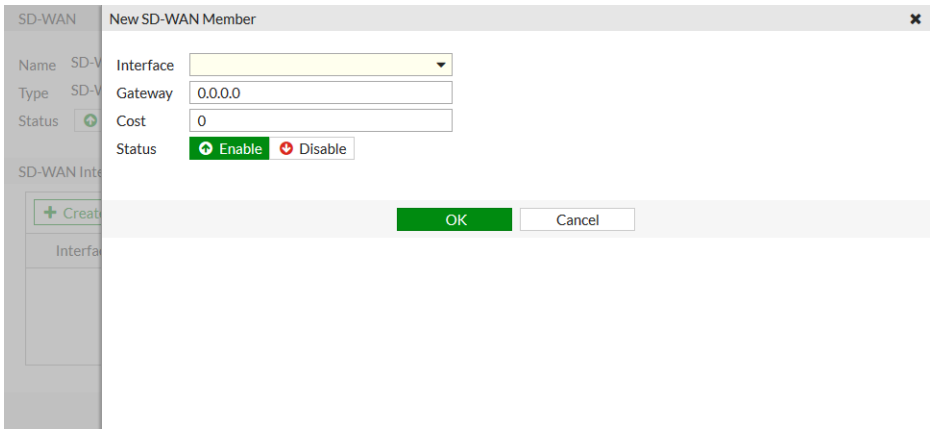

4. Select *wan1* as the interface.
5. As wan1 uses DHCP, leave *Gateway* as the default *0.0.0.0*.
   If IPv6 visibility is enabled in the GUI, an IPv6 gateway can also be added for each member. See Feature visibility on page 716 for details.
6. Leave *Cost* as *0*.
   The *Cost* field is used by the Lowest Cost (SLA) strategy. The link with the lowest cost is chosen to pass traffic. The lowest possible *Cost* is *0*.
7. Set *Status* to *Enable*, and click *OK*.
8. Repeat the above steps for wan2, setting *Gateway* to the ISP's gateway: *10.100.20.2*.
9. Click *Apply*.

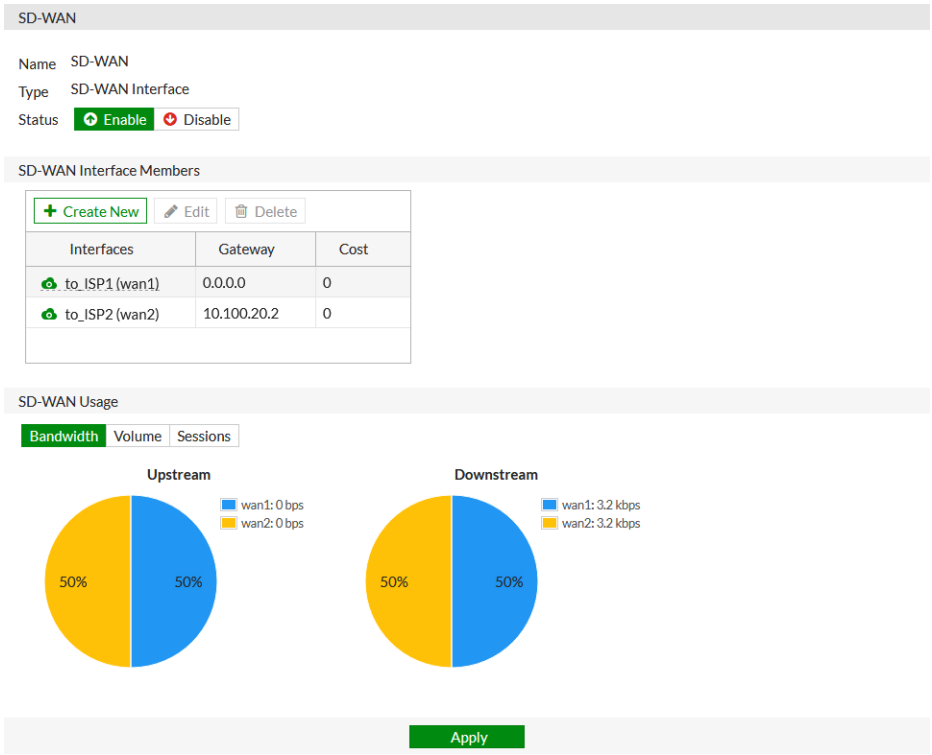

SD-WAN Usage shows pie charts of usage per interface member.


Adding a static route

After you create an SD-WAN interface, FortiGate adds a virtual interface for SD-WAN to the interface list that can be used to create routes.

You must configure a default route for the SD-WAN interface. The default gateways for each SD-WAN member interface do not need to be defined in the static routes table. FortiGate will decide which route or routes are preferred using Equal Cost Multi-Path (ECMP) based on distance and priority.

To create a static route for SD-WAN:

1. Go to *Network* > *Static Routes*.
2. Click *Create New*. The *New Static Route* page opens.
3. Set *Destination* to *Subnet*, and leave the IP address and subnet mask as *0.0.0.0/0.0.0.0*.
4. From the *Interface* drop-down list, select *SD-WAN*.

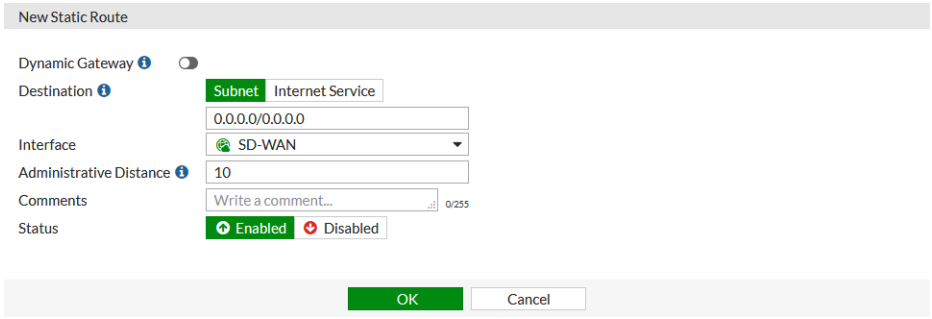

5. Ensure that *Status* is *Enabled*.
6. Click *OK* to save your changes.

Selecting the implicit SD-WAN algorithm

SD-WAN rules define specific routing options to route traffic to an SD-WAN member.

If no routing rules are defined, the default *Implicit* rule is used. It can be configured to use one of five different load balancing algorithms. See Implicit rule on page 470 for more details and examples.

This example shows four methods to equally balance traffic between the two WAN connections. Go to *Network* > *SD-WAN Rules* and edit the *sd-wan* rule to select the method that is appropriate for your requirements.

- *Source IP* (CLI command: `source-ip-based`):
  Select this option to balance traffic equally between the SD-WAN members according to a hash algorithm based on the source IP addresses.
- *Session* (`weight-based`):
  Select this option to balance traffic equally between the SD-WAN members by the session numbers ratio among its members. Use weight 50 for each of the 2 members.
- *Source-Destination IP* (`source-dest-ip-based`):
  Select this option to balance traffic equally between the SD-WAN members according to a hash algorithm based on the source and destination IP addresses.
- *Volume* (`measured-volume-based`):
  Select this option to balance traffic equally between the SD-WAN members according to the bandwidth ratio among its members.

Configuring security policies for SD-WAN

After you create an SD-WAN interface, FortiGate adds a virtual interface for SD-WAN to the interface list that can be used to create security policies.

You must configure a policy that allows traffic from your organization's internal network to the SD-WAN interface (`virtual-wan-link` in the CLI). You do not need to configure policies for each individual SD-WAN member interface because policies configured with the SD-WAN interface apply to all SD-WAN interface members.

To create a security policy for SD-WAN:


1. Go to *Policy & Objects* > *IPv4 Policy*.
2. Click *Create New*. The *New Policy* page opens.
3. Configure the following:

Name	Enter a name for the policy.
Incoming Interface	*internal*
Outgoing Interface	*SD-WAN*
Source	*all*
Destination	*all*
Schedule	*always*
Service	*ALL*
Action	*ACCEPT*
Firewall / Network Options	Enable *NAT* and set *IP Pool Configuration* to *Use Outgoing Interface Address*.
Security Profiles	Apply profiles as required.
Logging Options	Enable *Log Allowed Traffic* and select *All Sessions*. This allows you to verify results later.

4. Enable the policy, then click *OK*.

Link monitoring and failover


Performance SLA link monitoring measures the health of links that are connected to SD-WAN member interfaces by sending probing signals through each link to a server, and then measuring the link quality based on latency, jitter, and packet loss. If a link is broken, the routes on that link are removed and traffic is routed through other links. When the link is working again, the routes are re-enabled. This prevents traffic being sent to a broken link and lost.

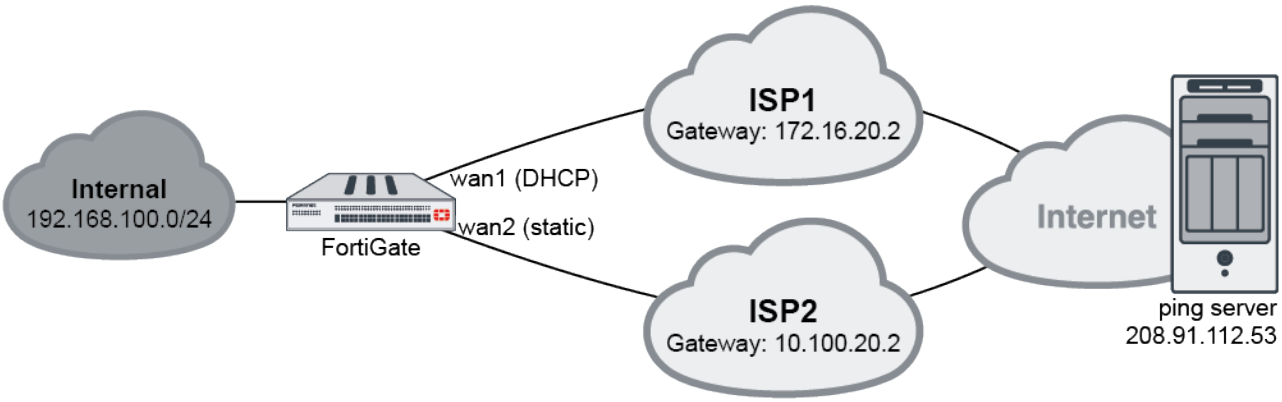

In this example, the detection server IP address is 208.91.112.53. A performance SLA is created so that, if ping fails per the metrics defined, the routes to that interface are removed and traffic is detoured to the other interface. The ping protocol is used, but other protocols could also be selected as required.

To configure a performance SLA:

1. Go to *Network* > *Performance SLA*.
2. Click *Create New*. The *Performance SLA* page opens.
3. Enter a name for the SLA and select a protocol.
4. In the *Server* field, enter the detection server IP address (208.91.112.53 in this example).
5. In the *Participants* field, select both wan1 and wan2.

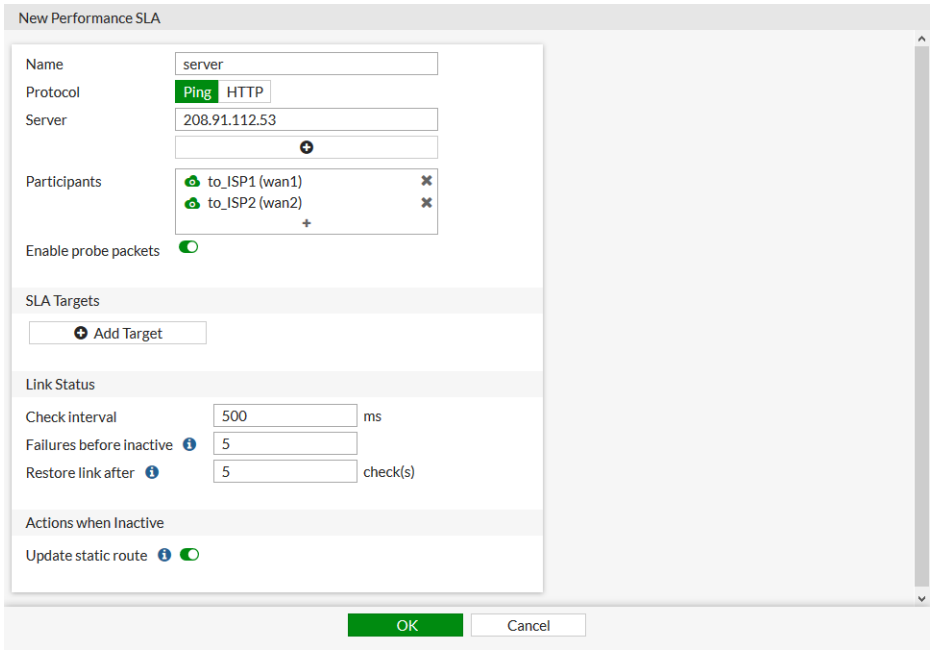

   SLA targets are not required for link monitoring.
6. Configure the required metrics in *Link Status*.
7. Ensure that *Update static route* is enabled. This disables static routes for the inactive interface and restores routes on recovery.
8. Click *OK*.

Results

The following GUI pages show the function of the SD-WAN and can be used to confirm that it is setup and running correctly:


- Interface usage on page 458
- Routing table on page 461
- Interface monitor on page 461
- Firewall policy on page 462

Interface usage

Go to *Network* > *SD-WAN* to review the SD-WAN interfaces' statuses.


Bandwidth

Select *Bandwidth* to view the amount of downloaded and uploaded data for each interface.

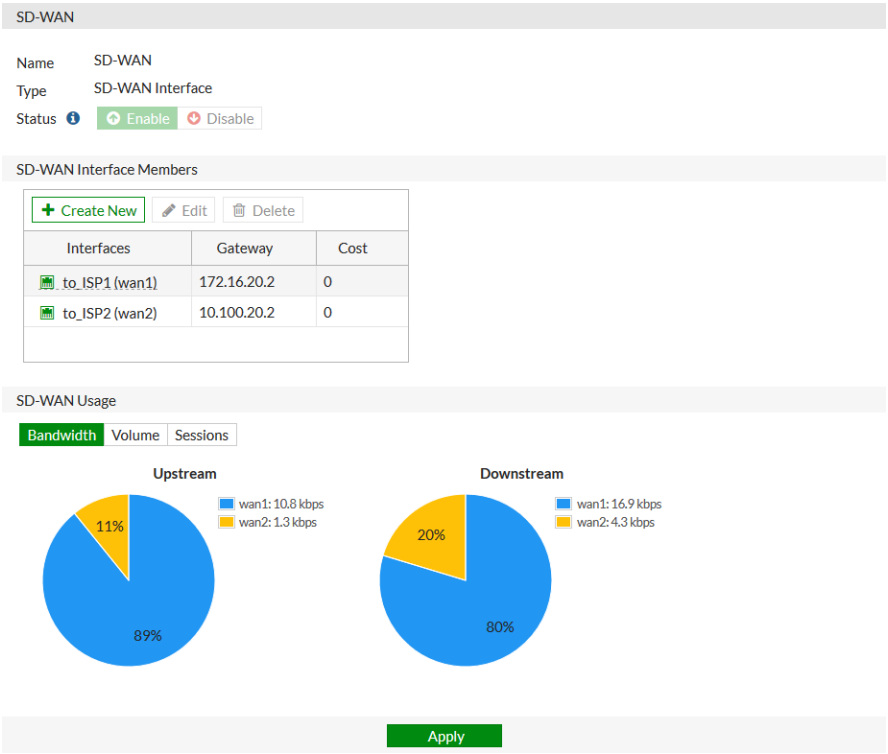


Volume

Select *Volume* to see pie charts of the received and sent bytes on the interfaces.

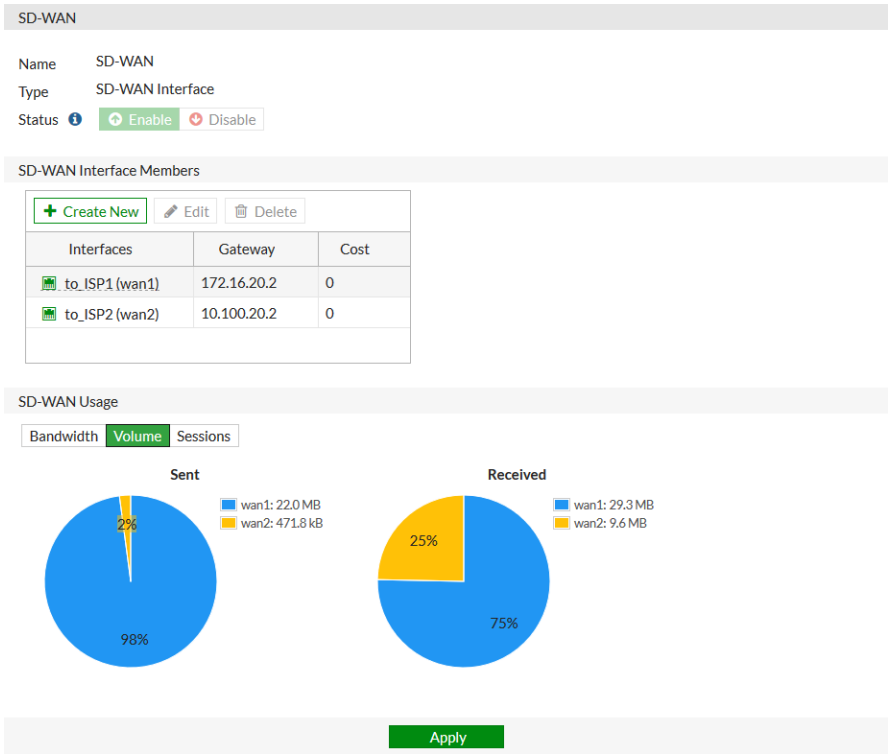

Sessions

Select *Sessions* to see a pie chart of the number of active sessions on each interface.

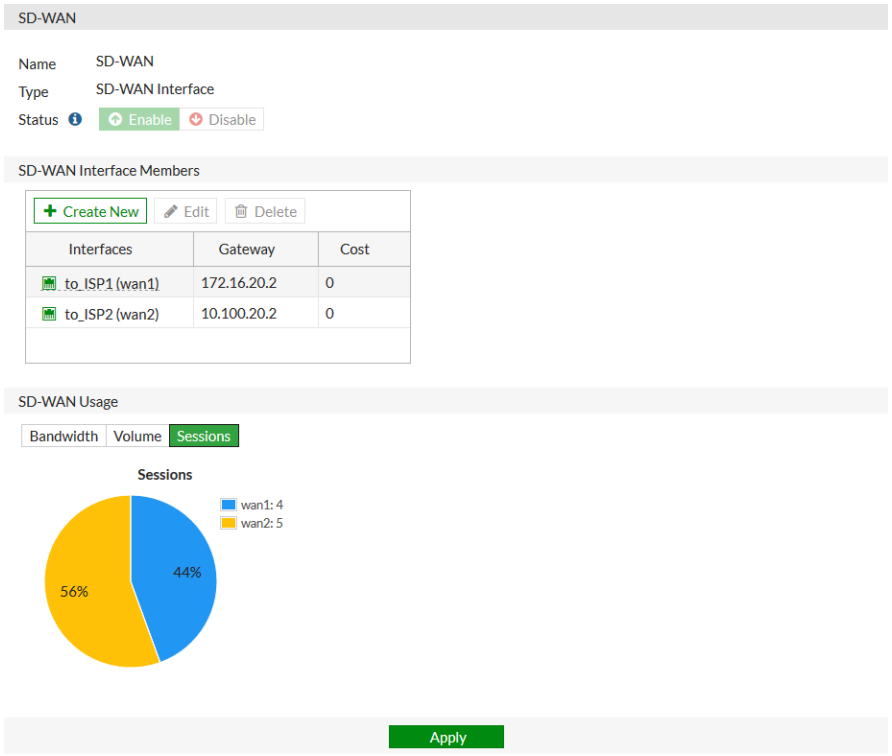


Performance SLA

Go to *Network* > *Performance SLA* and select the SLA from the table (*server* in this example) to view the packet loss, latency, and jitter on each SD-WAN member in the health check server.


Packet loss

Select *Packet Loss* to see the percentage of packets lost for each member.

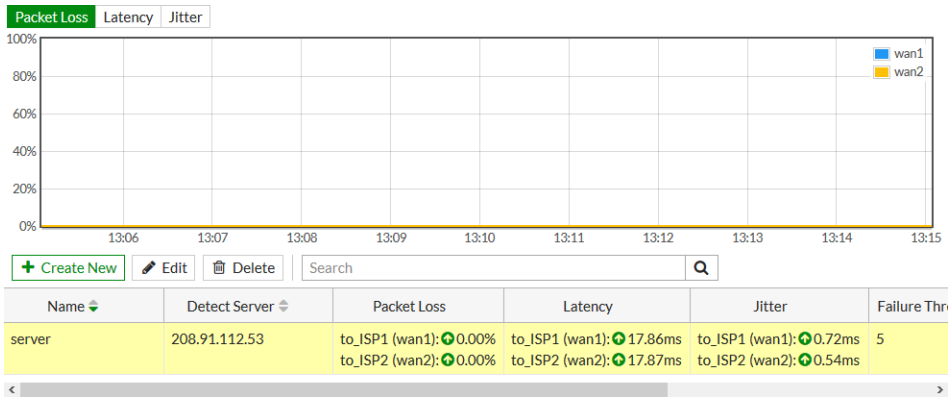


Latency

Select *Latency* to see the current latency, in milliseconds, for each member.

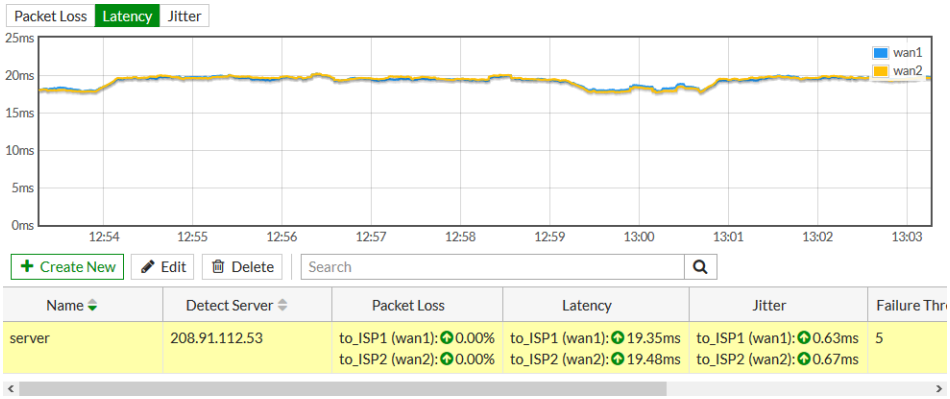

Jitter

Select *Jitter* to see the jitter, in milliseconds, for each member.

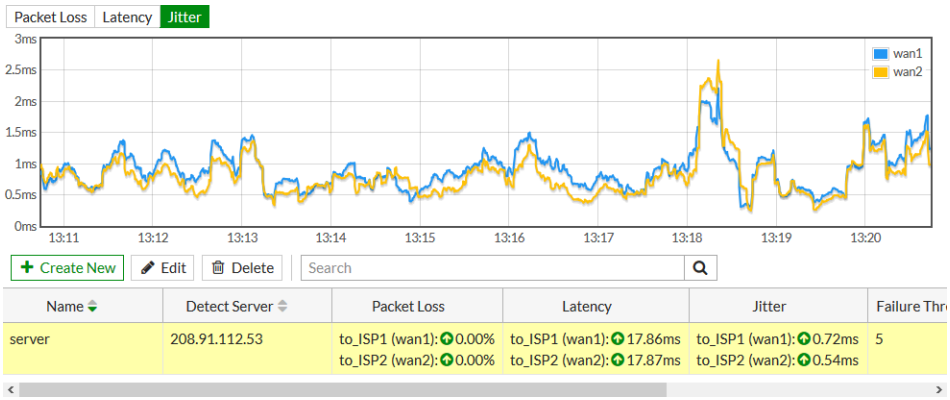


Routing table

Go to *Monitor* > *Routing Monitor* and to review all static and dynamic routes.




Interface monitor

Go to *Monitor* > *SD-WAN Monitor* to review interface status, sessions, and usage.

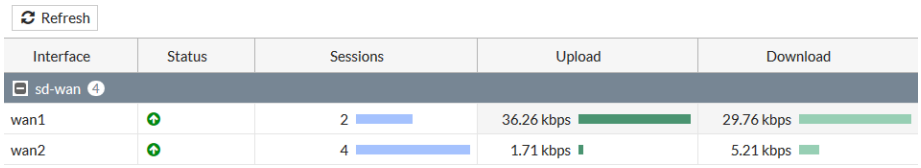

Firewall policy

Go to *Policy & Objects* > *IPv4 Policy* to review the SD-WAN policy.

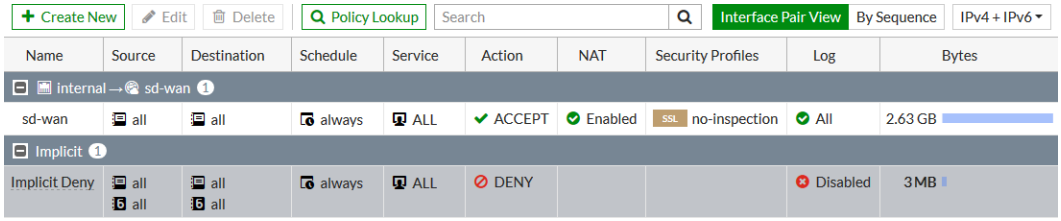

Configuring SD-WAN in the CLI

This example can be entirely configured using the CLI.

To configure SD-WAN in the CLI:

1. Configure the wan1 and wan2 interfaces:

```
config system interface
    edit "wan1"
        set alias to_ISP1
        set mode dhcp
        set distance 10
    next
    edit "wan2"
        set alias to_ISP2
        set ip 10.100.20.1 255.255.255.0
    next
end
```

2. Enable SD-WAN and add the interfaces as members:

```
config system virtual-wan-link
    set status enable
    config members
        edit 1
            set interface "wan1"
        next
        edit 2
            set interface "wan2"
            set gateway 10.100.20.2
        next
    end
end
```

3. Create a static route for SD-WAN:

```
config router static
    edit 1
        set virtual-wan-link enable
    next
end
```

4. Select the implicit SD-WAN algorithm:

```
config system virtual-wan-link
    set load-balance-mode {source-ip-based | weight-based | source-dest-ip-based |
measured-volume-based}
end
```

5. Create a firewall policy for SD-WAN:

```
config firewall policy
    edit <policy_id>
        set name <policy_name>
        set srcintf internal
        set dstintf virtual-wan-link
        set srcaddr all
        set dstaddr all
        set action accept
        set schedule always
        set service ALL
        set utm-status enable
        set ssl-ssh-profile <profile_name>
        set av-profile <profile_name>
        set webfilter-profile <profile_name>
        set dnsfilter-profile <profile_name>
        set application-list <app_list>
        set logtraffic all
        set nat enable
        set status enable
    next
end
```

6. Configure a performance SLA:

```
config system virtual-wan-link
    config health-check
        edit "server"
            set server "208.91.112.53"
            set update-static-route enable
            set members 1 2
        next
    end
end
```

Results

To view the routing table in the CLI:

```
# get router info routing-table all

Routing table for VRF=0
```

```
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
       O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
       * - candidate default

S*      0.0.0.0/0 [1/0] via 172.16.20.2, wan1
                  [1/0] via 10.100.20.2, wan2
C       10.100.20.0/24 is directly connected, wan2
C       172.16.20.2/24 is directly connected, wan1
C       192.168.0.0/24 is directly connected, internal
```

To diagnose the Performance SLA status:

```
FGT # diagnose sys virtual-wan-link health-check
Health Check(server):
Seq(1): state(alive), packet-loss(0.000%) latency(15.247), jitter(5.231) sla_map=0x0
Seq(2): state(alive), packet-loss(0.000%) latency(13.621), jitter(6.905) sla_map=0x0
```


WAN path control

The following topics provide instructions on configuring WAN path control:

- Performance SLA - link monitoring on page 464
- Performance SLA - SLA targets on page 466
- Factory default health checks on page 467
- Implicit rule on page 470
- SD-WAN rules - best quality on page 473
- SD-WAN rules - lowest cost (SLA) on page 476
- SD-WAN rules - maximize bandwidth (SLA) on page 478
- Application steering using SD-WAN rules on page 481
- SD-WAN traffic shaping and QoS on page 493
- Per-link controls for policies and SLA checks on page 497
- DSCP tag-based traffic steering in SD-WAN on page 499

Performance SLA - link monitoring

Performance SLA link monitoring measures the health of links that are connected to SD-WAN member interfaces by sending probing signals through each link to a server and measuring the link quality based on latency, jitter, and packet loss. If a link is broken, the routes on that link are removed and traffic is routed through other links. When the link is working again, the routes are reenabbled. This prevents traffic being sent to a broken link and lost.

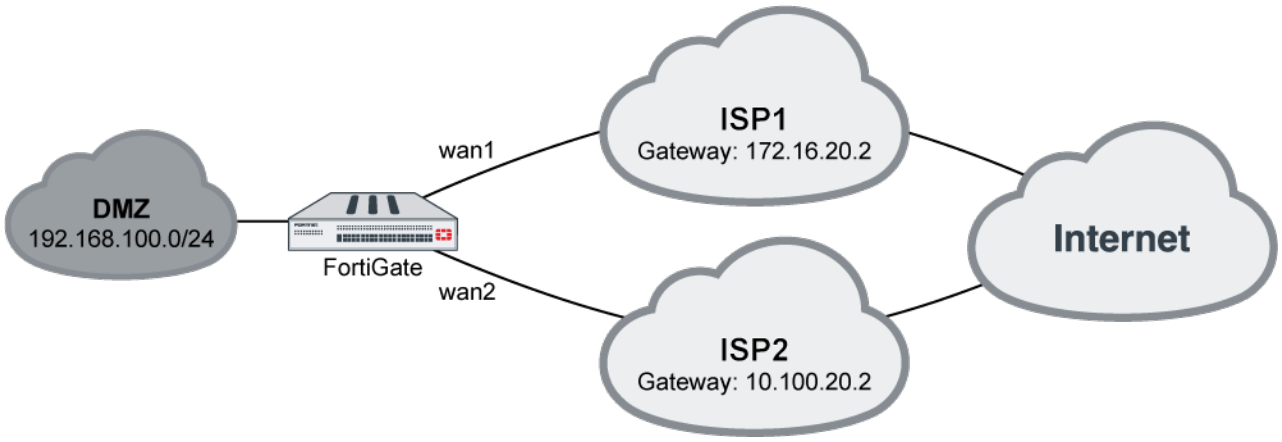


In this example:

- Interfaces wan1 and wan2 connect to the internet through separate ISPs
- The detection server IP address is 208.91.114.182

A performance SLA is created so that, if one link fails, its routes are removed and traffic is detoured to the other link.

To configure a Performance SLA using the GUI:

1. On the FortiGate, enable SD-WAN and add wan1 and wan2 as SD-WAN members, then add a policy and static route. See Configuring the SD-WAN interface on page 453 for details.
2. Go to *Network* > *Performance SLA*.
3. Click *Create New*. The *Performance SLA* page opens.
4. Enter a name for the SLA and select a protocol.
5. In the *Server* field, enter the detection server IP address (208.91.114.182 in this example).
6. In the *Participants* field, select both wan1 and wan2.

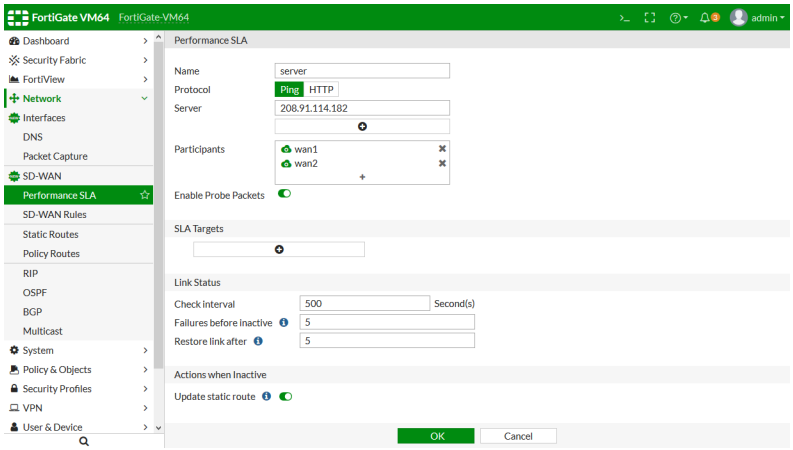

7. Configured the remaining settings as needed, then click *OK*.

To configure a Performance SLA using the CLI:

```
config system virtual-wan-link
    config health-check
        edit "server"
            set server "208.91.114.182"
```

```
            set update-static-route enable
            set members 1 2
        next
    end
end
```

To diagnose the Performance SLA status:


```
FGT # diagnose sys virtual-wan-link health-check
Health Check(server):
Seq(1): state(alive), packet-loss(0.000%) latency(15.247), jitter(5.231) sla_map=0x0
Seq(2): state(alive), packet-loss(0.000%) latency(13.621), jitter(6.905) sla_map=0x0
```

Performance SLA - SLA targets

SLA targets are a set of constraints that are used in SD-WAN rules to control the paths that traffic take.

The available constraints are:


- *Latency threshold*: Latency for SLA to make decision, in milliseconds (0 - 10000000, default = 5).
- *Jitter threshold*: Jitter for SLA to make decision, in milliseconds (0 - 10000000, default = 5).
- *Packet loss threshold*: Packet loss for SLA to make decision, in percentage (0 - 100, default = 0).

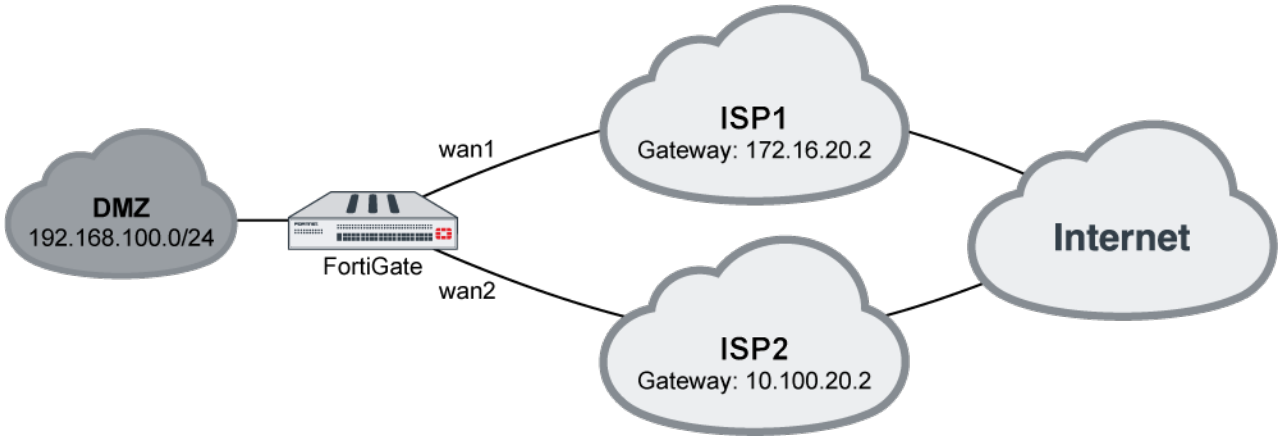

To configure Performance SLA targets using the GUI:

1. On the FortiGate, enable SD-WAN and add wan1 and wan2 as SD-WAN members, then add a policy and static route. See Configuring the SD-WAN interface on page 453 for details.
2. Go to *Network* > *Performance SLA*.
3. Create a new Performance SLA or edit an existing one. See Performance SLA - link monitoring on page 464.
4. Under *SLA Targets*, click the plus icon to add a target.

5. Turn on or off the required constraints, and set their values.

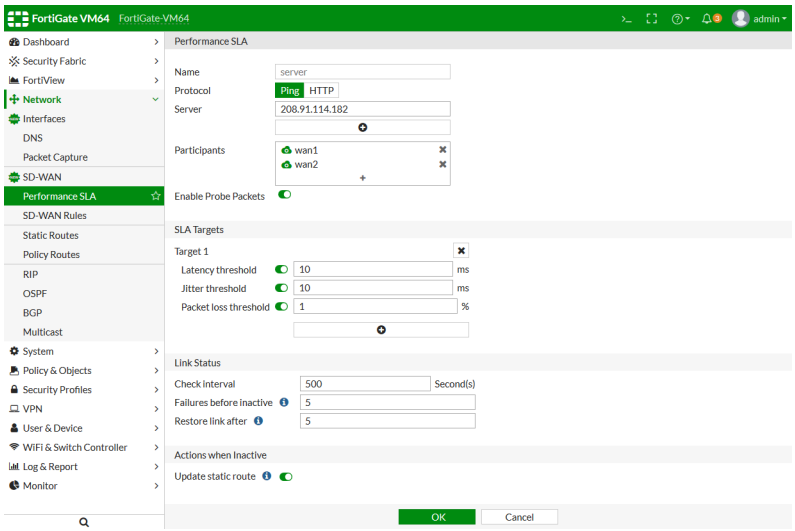

6. Configured the remaining settings as needed, then click *OK*.

To configure Performance SLA targets using the GUI:

```
config system virtual-wan-link
    config health-check
        edit "server"
            set server "208.91.114.182"
            set members 1 2
            config sla
                edit 1
                    set link-cost-factor latency jitter packet-loss
                    set latency-threshold 10
                    set jitter-threshold 10
                    set packetloss-threshold 1
                next
            end
        next
    end
end
```


The `link-cost-factor` variable is used to select which constraints are enabled.

Factory default health checks


There are five predefined performance SLA profiles for newly created VDOMs or factory reset FortiGate devices:

- AWS
- FortiGuard
- Gmail
- Google Search
- Office 365

You can view and configure the SLA profiles in *Network* > *Performance SLA*.

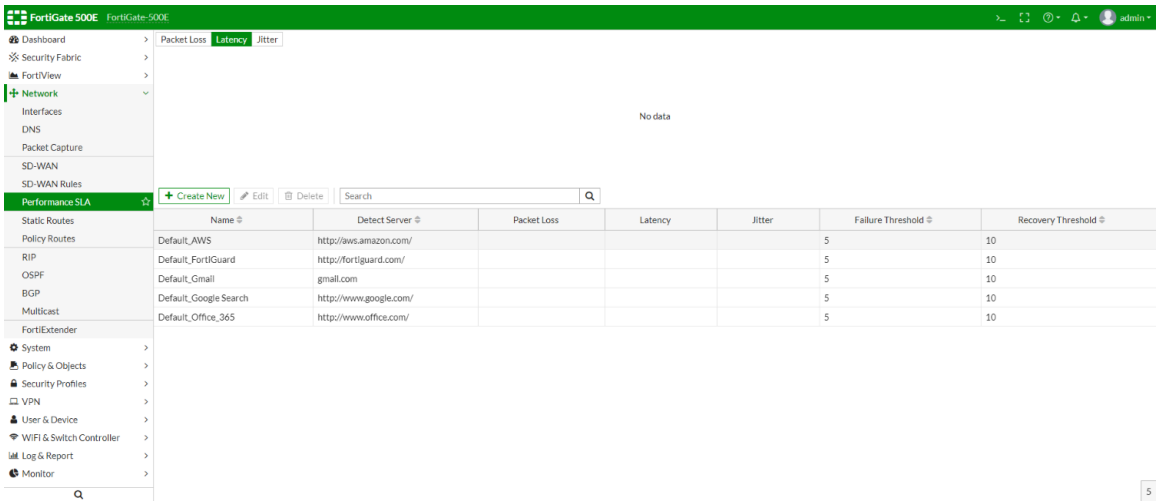

After configuring a health check, you will be able to view packet loss, latency, and jitter data for the SLA profiles. If a value is colored red, it means that it failed to meet the SLA requirements.

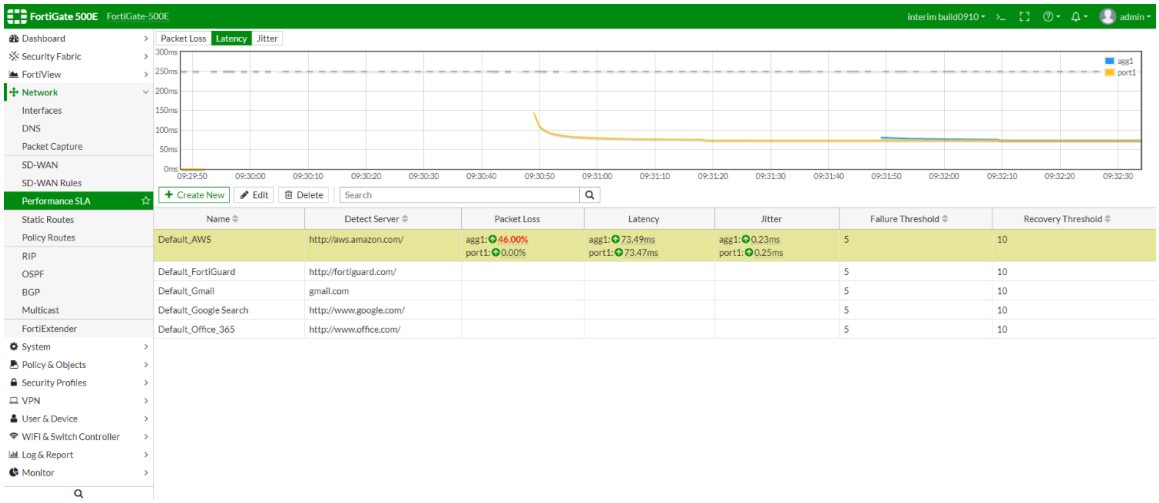

To configure the performance SLA profiles in the CLI:

```
config system virtual-wan-link
    config health-check
        edit "Default_Office_365"
            set server "www.office.com"
            set protocol http
            set interval 1000
            set recoverytime 10
            config sla
                edit 1
                    set latency-threshold 250
                    set jitter-threshold 50
                    set packetloss-threshold 5
                next
            end
        next
        edit "Default_Gmail"
```

```
            set server "gmail.com"
            set interval 1000
            set recoverytime 10
            config sla
                edit 1
                    set latency-threshold 250
                    set jitter-threshold 50
                    set packetloss-threshold 2
                next
            end
        next
        edit "Default_AWS"
            set server "aws.amazon.com"
            set protocol http
            set interval 1000
            set recoverytime 10
            config sla
                edit 1
                    set latency-threshold 250
                    set jitter-threshold 50
                    set packetloss-threshold 5
                next
            end
        next
        edit "Default_Google Search"
            set server "www.google.com"
            set protocol http
            set interval 1000
            set recoverytime 10
            config sla
                edit 1
                    set latency-threshold 250
                    set jitter-threshold 50
                    set packetloss-threshold 5
                next
            end
        next
        edit "Default_FortiGuard"
            set server "fortiguard.com"
            set protocol http
            set interval 1000
            set recoverytime 10
            config sla
                edit 1
                    set latency-threshold 250
                    set jitter-threshold 50
                    set packetloss-threshold 5
                next
            end
        next
    end
end
```


Implicit rule

SD-WAN supports five types of implicit rules (load-balance mode):

- Source IP (CLI command: `source-ip-based`): SD-WAN will load balance the traffic equally among its members according to a hash algorithm based on the source IP addresses.
- Session (`weight-based`): SD-WAN will load balance the traffic according to the session numbers ratio among its members.
- Spillover (`usage-based`): SD-WAN will use the first member until the bandwidth reaches its limit, then use the second, and so on.
- Source-Destination IP (`source-dest-ip-based`): SD-WAN will load balance the traffic equally among its members according to a hash algorithm based on both the source and destination IP addresses.
- Volume (`measured-volume-based`): SD-WAN will load balance the traffic according to the bandwidth ratio among its members.

Examples

The following four examples demonstrate how to use the implicit rules (load-balance mode).

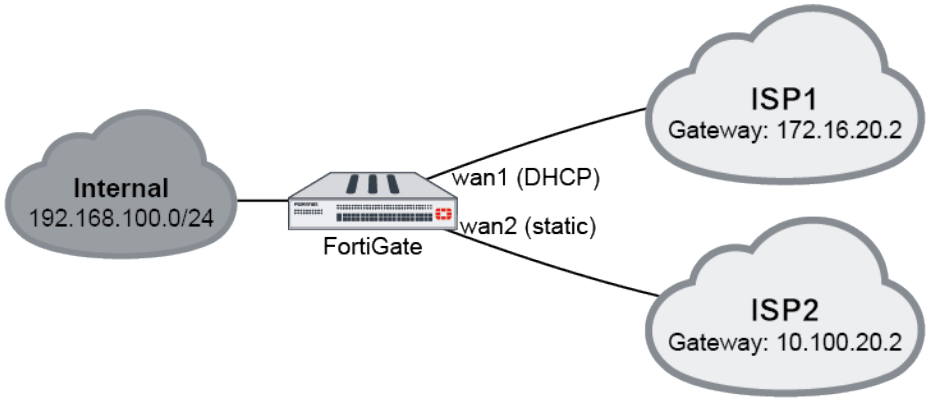


Example 1

Outgoing traffic is equally balanced between wan1 and wan2, using *source-ip-based* or *source-dest-ip-based* mode.

Using the GUI:

1. On the FortiGate, enable SD-WAN and add wan1 and wan2 as SD-WAN members, then add a policy and static route. See Configuring the SD-WAN interface on page 453 for details.
2. Go to *Network* > *SD-WAN Rules*.
3. Edit the *sd-wan* rule (the last default rule).

4. For the *Load Balancing Algorithm*, select either *Source IP* or *Source-Destination IP*.

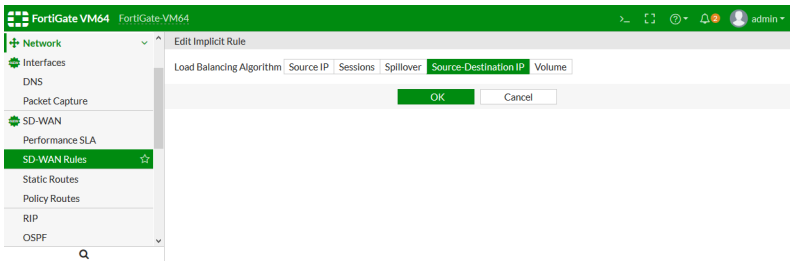

5. Click *OK*.

Using the CLI:

1. Enable SD-WAN and add wan1 and wan2 as SD-WAN members, then add a policy and static route. See Configuring the SD-WAN interface on page 453 for details.
2. Set the load balancing algorithm:
   Source IP based:

```
config system virtual-wan-link
    set load-balance-mode source-ip-based
end
```

   Source-Destination IP based:

```
config system virtual-wan-link
    set load-balance-mode source-dest-ip-based
end
```


Example 2

Outgoing traffic is balanced between wan1 and wan2 with a customized ratio, using *weight-based* mode: wan1 runs 80% of the sessions, and wan2 runs 20% of the sessions.

Sessions with the same source and destination IP addresses (`src-ip` and `dst-ip`) will be forwarded to the same path, but will still be considered in later session ratio calculations.

Using the GUI:

1. Go to *Network* > *SD-WAN Rules*.
2. Edit the *sd-wan* rule (the last default rule).
3. For the *Load Balancing Algorithm*, select *Sessions*.
4. Enter 80 in the *wan1* field, and 20 in the *wan2* field.

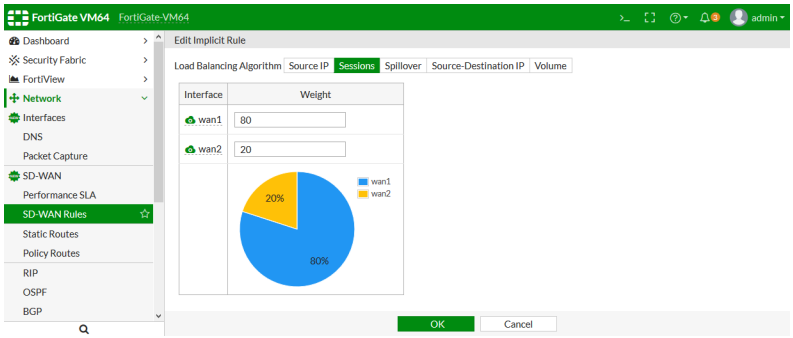

5. Click *OK*.

Using the CLI:

```
config system virtual-wan-link
    set load-balance-mode weight-based
    config members
        edit 1
            set interface "wan1"
            set weight 80
        next
        edit 2
            set interface "wan2"
            set weight 20
        next
    end
end
```

Example 3

Outgoing traffic is balanced between wan1 and wan2 with a customized ratio, using *measured-volume-based* mode: wan1 runs 80% of the volume, and wan2 runs 20% of the volume.

Using the GUI:

1. Go to *Network* > *SD-WAN Rules*.
2. Edit the *sd-wan* rule (the last default rule).
3. For the *Load Balancing Algorithm*, select *Volume*.
4. Enter 80 in the *wan1* field, and 20 in the *wan2* field.
5. Click *OK*.

Using the CLI:

```
config system virtual-wan-link
    set load-balance-mode measured-volume-based
    config members
        edit 1
            set interface "wan1"
            set volume-ratio 80
        next
        edit 2
            set interface "wan2"
            set volume-ratio 20
        next
    end
end
```


Example 4

Load balancing can be used to reduce costs when internet connections are charged at different rates. For example, if wan2 charges based on volume usage and wan1 charges a fixed monthly fee, we can use wan1 at its maximum bandwidth, and use wan2 for overflow.

In this example, wan1's bandwidth is 10Mbps down and 2Mbps up. Traffic will use wan1 until it reaches its spillover limit, then it will start to use wan2. Note that `auto-asic-offload` must be disabled in the firewall policy.

Using the GUI:

1. On the FortiGate, enable SD-WAN and add wan1 and wan2 as SD-WAN members, then add a policy and static route. See Configuring the SD-WAN interface on page 453 for details.
2. Go to *Network* > *SD-WAN Rules*.
3. Edit the *sd-wan* rule (the last default rule).
4. For the *Load Balancing Algorithm*, select *Spillover*.
5. Enter 10000 in the *wan1 Ingress Spillover Threshold* field, and 2000 in the *wan1 Egress Spillover Threshold* field.

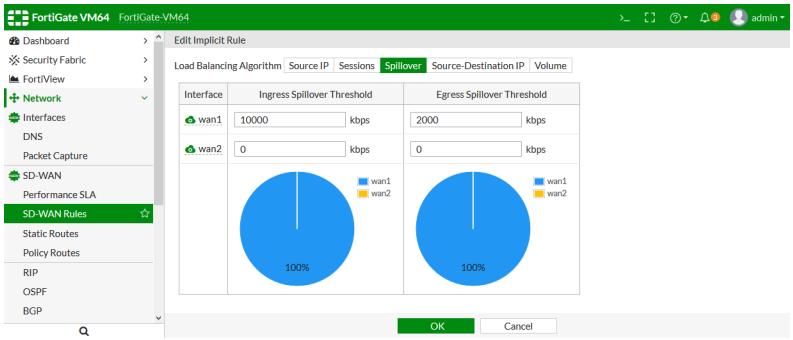

6. Click *OK*.

Using the CLI:

```
config system virtual-wan-link
    set load-balance-mode usage-based
    config members
        edit 1
            set interface "wan1"
            set spillover-threshold 2000
            set ingress-spillover-threshold 10000
        next
    end
end
```


SD-WAN rules - best quality

SD-WAN rules are used to control how sessions are distributed to SD-WAN members. Rules can be configured in one of five modes:

- `auto`: Interfaces are assigned a priority based on quality.
- Manual (`manual`): Interfaces are manually assigned a priority.
- Best Quality (`priority`): Interface are assigned a priority based on the link-cost-factor of the interface.
- Lowest Cost (SLA) (`sla`): Interfaces are assigned a priority based on selected SLA settings. See SD-WAN rules - lowest cost (SLA) on page 476.
- Maximize Bandwith (SLA) (`load-balance`): Traffic is distributed among all available links based on the selected load balancing algorithm. See SD-WAN rules - maximize bandwidth (SLA) on page 478.

When using *Best Quality* mode, SD-WAN will choose the best link to forward traffic by comparing the *link-cost-factor*, selected from one of the following:

GUI	CLI	Description
Latency	`latency`	Select a link based on latency.
Jitter	`jitter`	Select a link based on jitter.
Packet Loss	`packet-loss`	Select a link based on packet loss.
Downstream	`inbandwidth`	Select a link based on available bandwidth of incoming traffic.
Upstream	`outbandwidth`	Select a link based on available bandwidth of outgoing traffic.
Bandwidth	`bibandwidth`	Select a link based on available bandwidth of bidirectional traffic.
custom-profile-1	`custom-profile-1`	Select link based on customized profile. If selected, set the following weights: • packet-loss-weight: Coefficient of packet-loss. • latency-weight: Coefficient of latency. • jitter-weight: Coefficient of jitter. • bandwidth-weight: Coefficient of reciprocal of available bidirectional bandwidth.

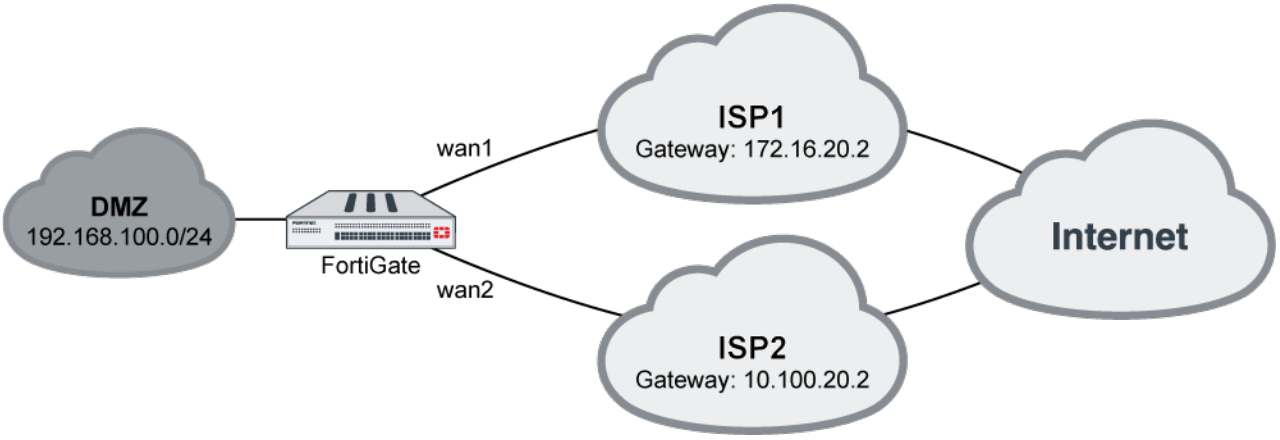


In this example, your wan1 and wan2 SD-WAN interfaces connect to two ISPs that both go to the public internet, and you want Gmail services to use the link with the least latency.

To configure an SD-WAN rule to use Best Quality:

1. On the FortiGate, enable SD-WAN and add wan1 and wan2 as SD-WAN members, then add a policy and static route. See Configuring the SD-WAN interface on page 453 for details.
2. Create a new Performance SLA named *google*. See Performance SLA - link monitoring on page 464.
3. Go to *Network* > *SD-WAN Rules*.
4. Click *Create New*. The *Priority Rule* page opens.
5. Enter a name for the rule, such as *gmail*.

6. Configure the following settings:

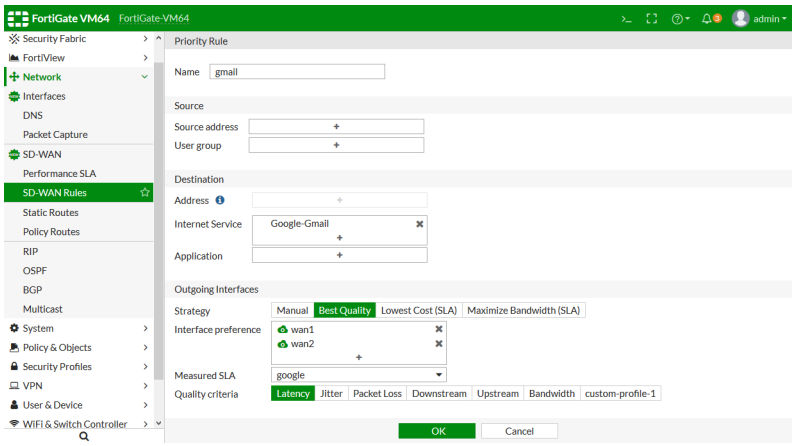

Field	Setting
Internet Service	Google-Gmail
Strategy	Best Quality
Interface preference	wan1 and wan2
Measured SLA	google (created in step 2).
Quality criteria	Latency

7. Click *OK* to create the rule.

To configure an SD-WAN rule to use priority:

```
config system virtual-wan-link
    config health-check
        edit "google"
            set server "google.com"
            set members 1 2
        next
    end
    config service
        edit 1
            set name "gmail"
            set mode priority
            set internet-service enable
            set internet-service-id 65646
            set health-check "google"
            set link-cost-factor latency
            set priority-members 1 2
        next
    end
end
```

To diagnose the Performance SLA status:

```
FGT # diagnose sys virtual-wan-link health-check google
Health Check(google):
```

```
Seq(1): state(alive), packet-loss(0.000%) latency(14.563), jitter(4.334) sla_map=0x0
Seq(2): state(alive), packet-loss(0.000%) latency(12.633), jitter(6.265) sla_map=0x0

FGT # diagnose sys virtual-wan-link service 1
Service(1):

    TOS(0x0/0x0), protocol(0: 1->65535), Mode(priority), link-cost-facotr(latency), link-
cost-threshold(10), health-check(google) Members:

        1: Seq_num(2), alive, latency: 12.633, selected
        2: Seq_num(1), alive, latency: 14.563, selected

    Internet Service: Google-Gmail(65646)
```


As wan2 has a smaller latency, SD-WAN will put Seq_num(2) on top of Seq_num(1) and wan2 will be used to forward Gmail traffic.

SD-WAN rules - lowest cost (SLA)

SD-WAN rules are used to control how sessions are distributed to SD-WAN members. Rules can be configured in one of five modes:

- `auto`: Interfaces are assigned a priority based on quality.
- Manual (`manual`): Interfaces are manually assigned a priority.
- Best Quality (`priority`): Interface are assigned a priority based on the link-cost-factor of the interface. See SD-WAN rules - best quality on page 473.
- Lowest Cost (SLA) (`sla`): Interfaces are assigned a priority based on selected SLA settings.
- Maximize Bandwidth (SLA) (`load-balance`): Traffic is distributed among all available links based on the selected load balancing algorithm. See SD-WAN rules - maximize bandwidth (SLA) on page 478.


When using *Lowest Cost (SLA)* mode (`sla` in the CLI), SD-WAN will choose the lowest cost link that satisfies SLA to forward traffic. The lowest possible cost is `0`. If multiple eligible links have the same cost, the *Interface preference* order will be used to select a link.

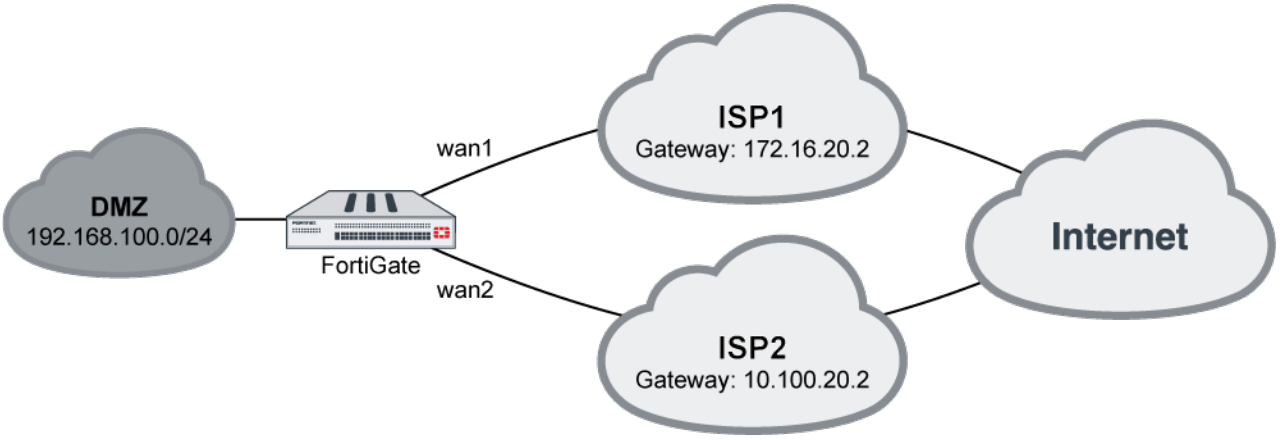

In this example, your wan1 and wan2 SD-WAN interfaces connect to two ISPs that both go to the public internet. The cost of wan2 is less than that of wan1. You want to configure Gmail services to use the lowest cost interface, but the link quality must meet a standard of latency: 10ms, and jitter: 5ms.

To configure an SD-WAN rule to use Lowest Cost (SLA):

1. On the FortiGate, enable SD-WAN and add wan1 and wan2 as SD-WAN members, then add a policy and static route. See Configuring the SD-WAN interface on page 453 for details.
2. Create a new Performance SLA named *google* that includes an SLA Target 1 with *Latency threshold* = 10ms and *Jitter threshold* = 5ms. See Performance SLA - link monitoring on page 464.
3. Go to *Network* > *SD-WAN Rules*.
4. Click *Create New*. The *Priority Rule* page opens.
5. Enter a name for the rule, such as *gmail*.
6. Configure the following settings:

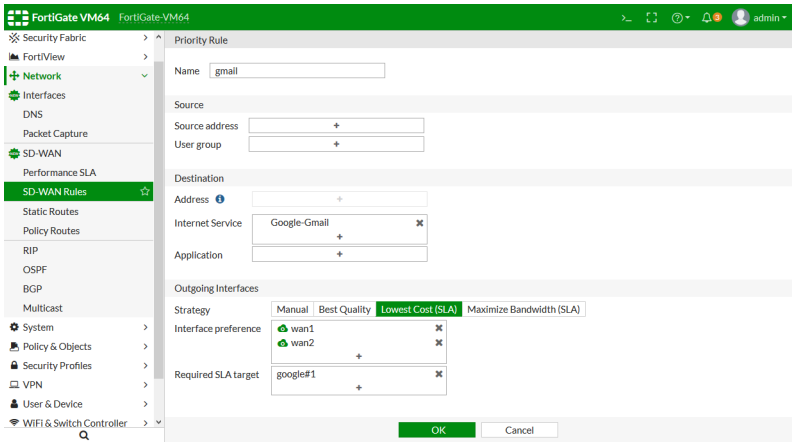

Field	Setting
Internet Service	Google-Gmail
Strategy	Lowest Cost (SLA)
Interface preference	wan1 and wan2
Required SLA target	google#1 (created in step 2).

7. Click *OK* to create the rule.

To configure an SD-WAN rule to use sla:

```
config system virtual-wan-link
    config members
        edit 1
            set interface "wan1"
            set cost 10
        next
        edit 2
            set interface "wan2"
            set cost 5
        next
    end

    config health-check
        edit "google"
            set server "google.com"
```

```
            set members 1 2
            config sla
                edit 1
                    set latency-threshold 10
                    set jitter-threshold 5
                next
            end
        next
    end
    config service
        edit 1
            set name "gmail"
            set mode sla
            set internet-service enable
            set internet-service-id 65646
            config sla
                edit "google"
                    set id 1
                next
            end
            set priority-members 1 2
        next
    end
end
```

To diagnose the Performance SLA status:

```
FGT # diagnose sys virtual-wan-link health-check google
Health Check(google):
Seq(1): state(alive), packet-loss(0.000%) latency(14.563), jitter(4.334) sla_map=0x0
Seq(2): state(alive), packet-loss(0.000%) latency(12.633), jitter(6.265) sla_map=0x0

FGT # diagnose sys virtual-wan-link service 1
Service(1): Address Mode(IPV4) flags=0x0

    TOS(0x0/0x0), Protocol(0: 1->65535), Mode(sla)
    Members:<<BR>>

        1: Seq_num(2), alive, sla(0x1), cfg_order(1), selected
        2: Seq_num(1), alive, sla(0x1), cfg_order(0), selected

    Internet Service: Google.Gmail(65646)
```

When both wan1 and wan2 meet the SLA requirements, Gmail traffic will only use wan2. If only wan1 meets the SLA requirements, Gmail traffic will only use wan1, even though it has a higher cost. If neither interface meets the requirements, wan2 will be used.

If both interface had the same cost and both met the SLA requirements, the first link configured in `set priority-members` would be used.


SD-WAN rules - maximize bandwidth (SLA)

SD-WAN rules are used to control how sessions are distributed to SD-WAN members. Rules can be configured in one of five modes:

- `auto`: Interfaces are assigned a priority based on quality.
- Manual (`manual`): Interfaces are manually assigned a priority.
- Best Quality (`priority`): Interface are assigned a priority based on the link-cost-factor of the interface. See SD-WAN rules - best quality on page 473.
- Lowest Cost (SLA) (`sla`): Interfaces are assigned a priority based on selected SLA settings. See SD-WAN rules - lowest cost (SLA) on page 476.
- Maximize Bandwidth (SLA) (`load-balance`): Traffic is distributed among all available links based on the selected load balancing algorithm.

When using *Maximize Bandwidth* mode (`load-balance` in the CLI), SD-WAN will all of the links that satisfies SLA to forward traffic based on a round-robin load balancing algorithm.

ADVPN is not supported in this mode.

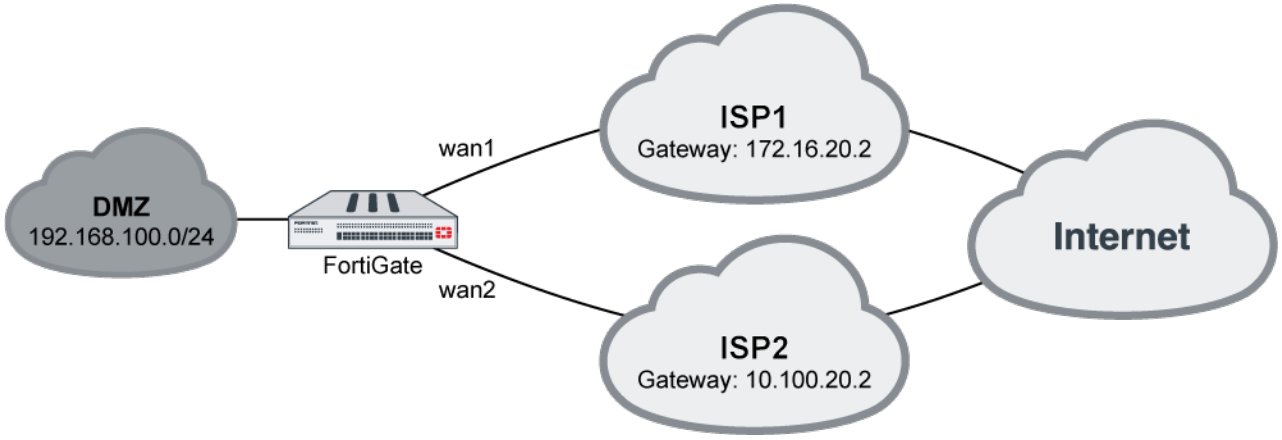


In this example, your wan1 and wan2 SD-WAN interfaces connect to two ISPs that both go to the public internet. You want to configure Gmail services to use both of the interface, but the link quality must meet a standard of latency: 10ms, and jitter: 5ms. This can maximize the bandwidth usage.

To configure an SD-WAN rule to use Maximize Bandwidth (SLA):

1. On the FortiGate, enable SD-WAN and add wan1 and wan2 as SD-WAN members, then add a policy and static route. See Configuring the SD-WAN interface on page 453 for details.
2. Create a new Performance SLA named *google* that includes an SLA Target 1 with *Latency threshold* = 10ms and *Jitter threshold* = 5ms. See Performance SLA - link monitoring on page 464.
3. Go to *Network* > *SD-WAN Rules*.
4. Click *Create New*. The *Priority Rule* page opens.
5. Enter a name for the rule, such as *gmail*.

6. Configure the following settings:

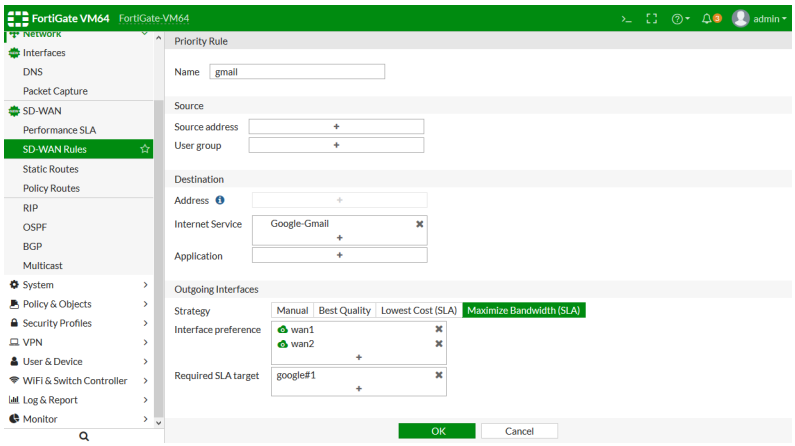

Field	Setting
Internet Service	Google-Gmail
Strategy	Maximize Bandwidth (SLA)
Interface preference	wan1 and wan2
Required SLA target	google#1 (created in step 2).

7. Click *OK* to create the rule.

To configure an SD-WAN rule to use SLA:

```
config system virtual-wan-link
    config health-check
        edit "google"
            set server "google.com"
            set members 1 2
            config sla
                edit 1
                    set latency-threshold 10
                    set jitter-threshold 5
                next
            end
        next
    end
    config service
        edit 1
            set name "gmail"
            set mode load-balance
            set internet-service enable
            set internet-service-id 65646
            config sla
                edit "google"
                    set id 1
                next
            end
            set priority-members 1 2
        next
```

```
    end
end
```

To diagnose the performance SLA status:

```
FGT # diagnose sys virtual-wan-link health-check google
Health Check(google):
Seq(1): state(alive), packet-loss(0.000%) latency(14.563), jitter(4.334) sla_map=0x0
Seq(2): state(alive), packet-loss(0.000%) latency(12.633), jitter(6.265) sla_map=0x0

FGT # diagnose sys virtual-wan-link service 1
Service(1): Address Mode(IPV4) flags=0x0

    TOS(0x0/0x0), Protocol(0: 1->65535), Mode(load-balance)
    Members:<<BR>>

        1: Seq_num(1), alive, sla(0x1), num of pass(1), selected
        2: Seq_num(2), alive, sla(0x1), num of pass(1), selected

    Internet Service: Google.Gmail(65646)
```

When both wan1 and wan2 meet the SLA requirements, Gmail traffic will use both wan1 and wan2. If only one of the interfaces meets the SLA requirements, Gmail traffic will only use that interface.

If neither interface meets the requirements but health-check is still alive, then wan1 and wan2 tie. The traffic will try to balance between wan1 and wan2, using both interfaces to forward traffic.


Application steering using SD-WAN rules

This topic covers how to use application steering in a topology with multiple WAN links. The following examples illustrate how to use different strategies to perform application steering to accommodate different business needs:

- Static application steering with a manual strategy on page 481
- Dynamic application steering with lowest cost and best quality strategies on page 484

Static application steering with a manual strategy

This example covers a typical usage scenario where the SD-WAN has two members: MPLS and DIA. DIA is primarily used for direct internet access to internet applications, such as Office365, Google applications, Amazon, and Dropbox. MPLS is primarily used for SIP, and works as a backup when DIA is not working.

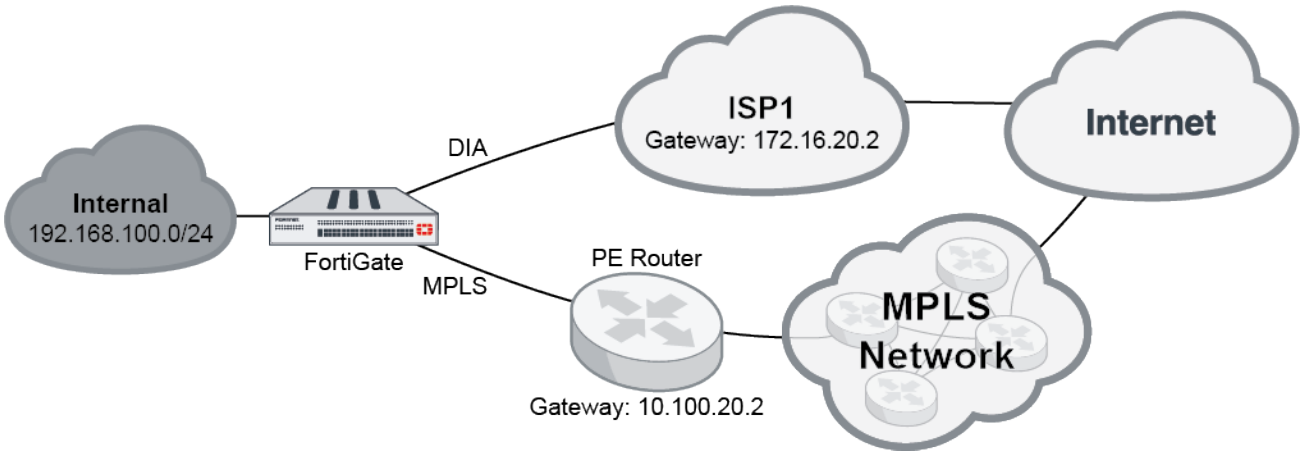


This example configures all SIP traffic to use MPLS while all other traffic uses DIA. If DIA is not working, the traffic will use MPLS.

To configure an SD-WAN rule to use SIP and DIA in the GUI:

1. Add port1 (DIA) and port2 (MPLS) as SD-WAN members, and configure a static route. See Configuring the SD-WAN interface on page 453 for details.
2. Create a firewall policy with an *Application Control* profile configured. See Configuring security policies for SD-WAN on page 456 for details.
3. Go to *Network* > *SD-WAN Rules*.
4. Click *Create New*. The *Priority Rule* page opens.
5. Enter a name for the rule, such as *SIP*.
6. Click the *Application* field and select the applicable SIP applications from the *Select Entries* panel.
7. Under *Outgoing Interfaces*, set the *Strategy* to *Manual*.
8. For *Interface preference*, select *MPLS*.
9. Click *OK*.
10. Click *Create New* to create another rule.
11. Enter a name for the rule, such as *Internet*.
12. Click the *Address* field and select *all* from the panel.
13. Under *Outgoing Interfaces*, set the *Strategy* to *Manual*.

14. For *Interface preference*, select *DIA*.

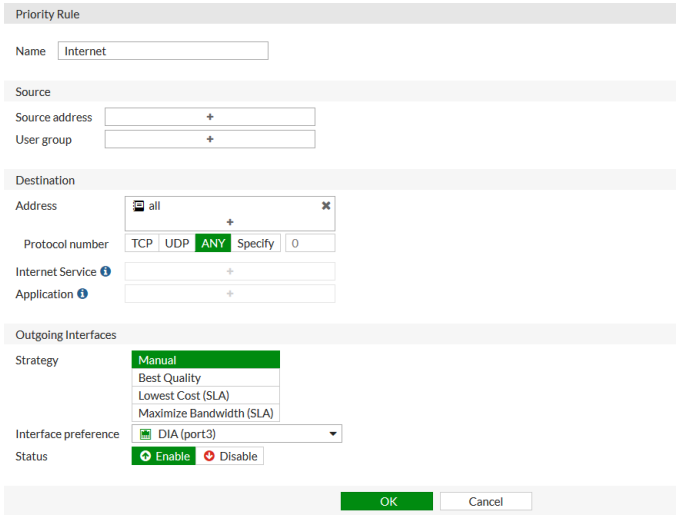

15. Click *OK*.

To configure the firewall policy using the CLI:

```
config firewall policy
    edit 1
        set name "1"
        set srcintf "dmz"
        set dstintf "virtual-wan-link"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set fsso disable
        set application-list "default"
        set ssl-ssh-profile "certificate-inspection"
        set nat enable
    next
end
```

To configure an SD-WAN rule to use SIP and DIA using the CLI:

```
config system virtual-wan-link
    set status enable
    config members
        edit 1
            set interface "MPLS"
        next
        edit 2
            set interface "DIA"
        next
    end
    config service
        edit 1
            set name "SIP"
```

```
            set internet-service enable
            set internet-service-app-ctrl 34640 152305677 38938 26180 26179 30251
            set priority-members 1
        next
        edit 2
            set name "Internet"
            set input-device "dmz"
            set dst "all"
            set priority-members 2
        next
    end
end
```

All SIP traffic uses MPLS. All other traffic goes to DIA. If DIA is broken, the traffic uses MPLS. If you use VPN instead of MPLS to run SIP traffic, you must configure a VPN interface, for example vpn1, and then replace member 1 from MPLS to vpn1 for SD-WAN member.

To use the diagnose command to check performance SLA status using the CLI:

```
# diagnose sys virtual-wan-link service 1

Service(1): Address Mode(IPV4) flags=0x0

TOS(0x0/0x0), Protocol(0: 1->65535), Mode(manual)
Members:<<BR>>

1: Seq_num(1), alive, selected

Internet Service: SIP(4294836224 34640) SIP.Method(4294836225 152305677) SIP.Via.NAT
(4294836226 38938) SIP_Media.Type.Application(4294836227 26180) SIP_Message(4294836228
26179) SIP_Voice(4294836229 30251)
```

```
# diagnose sys virtual-wan-link service 2

Service(2): Address Mode(IPV4) flags=0x0

TOS(0x0/0x0), Protocol(0: 1->65535), Mode(manual)
Members:<<BR>>


1: Seq_num(2), alive, selected

Dst address: 0.0.0.0-255.255.255.255
```

```
# diagnose sys virtual-wan-link internet-service-app-ctrl-list
Ctrl application(SIP 34640):Internet Service ID(4294836224)
Ctrl application(SIP.Method 152305677):Internet Service ID(4294836225)
Ctrl application(SIP.Via.NAT 38938):Internet Service ID(4294836226)
Ctrl application(SIP_Media.Type.Application 26180):Internet Service ID(4294836227)
Ctrl application(SIP_Message 26179):Internet Service ID(4294836228)
Ctrl application(SIP_Voice 30251):Internet Service ID(4294836229)
```

Dynamic application steering with lowest cost and best quality strategies


In this example, the SD-WAN has three members: two ISPs (DIA_1 and DIA_2) that are used for access to internet applications, and an MPLS link that is used exclusively as a backup for business critical applications.

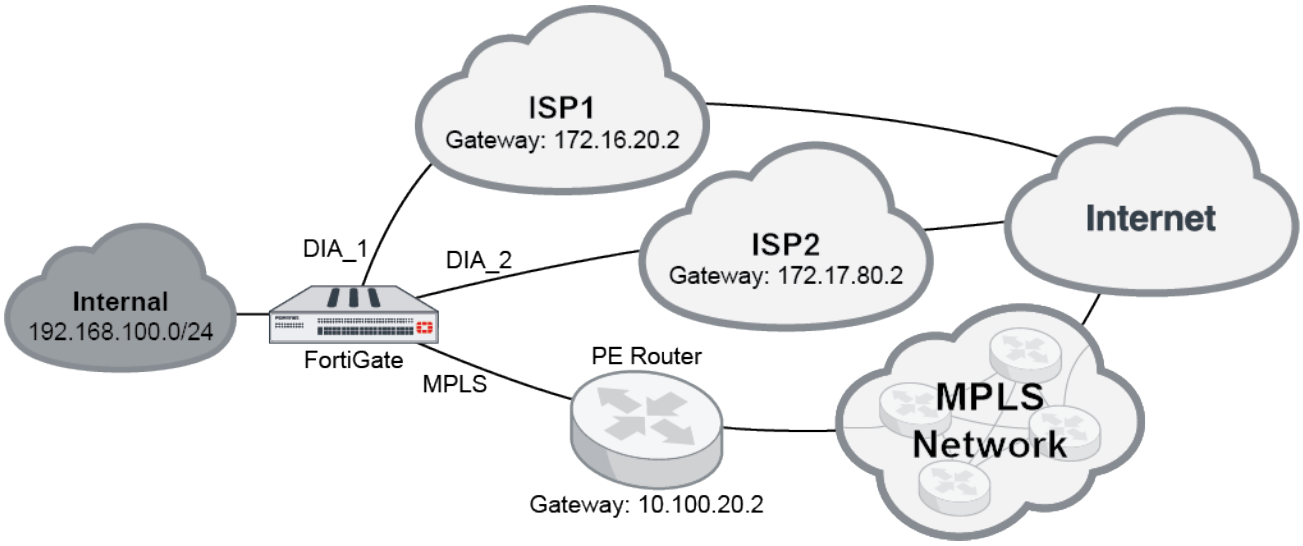

Business applications, such as Office365, Google, Dropbox, and SIP, use the *Lowest Cost (SLA)* strategy to provide application steering, and traffic falls back to MPLS only if both ISP1 and ISP2 are down. Non-business applications, such as Facebook and Youtube, use the *Best Quality* strategy to choose between the ISPs.

To configure the SD-WAN members, static route, and firewall policy in the GUI:

1. Add port1 (DIA_1), port2 (DIA_2), and port3 (MPLS) as SD-WAN members. Set the cost of DIA_1 and DIA_2 to *0*, and MPLS to *20*. See Configuring the SD-WAN interface on page 453 for details.

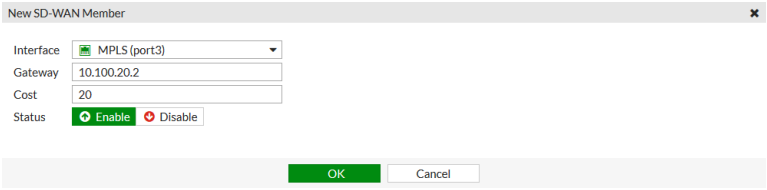

2. Configure a static route. See Adding a static route on page 455 for details.
3. Create a firewall policy to allow traffic out on SD-WAN, with an *Application Control* profile configured. See Configuring security policies for SD-WAN on page 456 for details.


To configure the SD-WAN rule and performance SLA checks for business critical application in the GUI:

1. Go to *Network* > *SD-WAN Rules*, and click *Create New*.
2. Set the name to *BusinessCriticalApps*.
   This rule will steer your business critical traffic to the appropriate link based on the *Lowest Cost (SLA)*.
3. Set *Source address* to *all*.
4. Under *Destination*, set *Application* to your required applications. In this example: *Microsoft.Office.365*, *Microsoft.Office.Online*, *Google.Docs*, *Dropbox*, and *SIP*.
5. Under *Outgoing Interfaces*, set *Strategy* to *Lowest Cost (SLA)*.
   The lowest cost is defined in the SD-WAN member interface settings (see Configuring the SD-WAN interface on page 453). The lowest possible cost is *0*, which represents the most preferred link. In this example, DIA_1 and DIA_2 both have a cost of *0*, while MPLS has a cost of *20* because it is used for backup.
6. In *Interface preference*, add the interfaces in order of preference when the cost of the links is tied. In this example, DIA_1, DIA_2, then MPLS.

MPLS will always be chosen last, because it has the highest cost. DIA_1 and DIA_2 have the same cost, so an interface is selected based on their order in the *Interface preference* list.

7. Set *Required SLA target* to ensure that only links that pass your SLA target are chosen in this SD-WAN rule:
   a. Click in the *Required SLA target* field.
   b. In the *Select Entries* pane, click *Create*. The *New Performace SLA* pane opens.
   c. Set *Name* to *BusinessCritical_HC*.
      This health check is used for business critical applications in your SD-WAN rule.
   d. Leave *Protocol* set to *Ping*, and add up to two servers, such as *office.com* and *google.com*.
   e. Set *Participants* to all three interfaces: DIA_1, DIA_2, and MPLS.
   f. Under *SLA Target* click *Add Target*.
      The attributes in your target determine the quality of your link. The SLA target of each link is compared when determining which link to use based on the lowest cost. Links that meet the SLA target are preferred over links that fail, and move to the next step of selection based on cost. If no links meet the SLA target, then they all move to the next step.
      In this example, disable *Latency threshold* and *Jitter threshold*, and set *Packet loss threshold* to *1*.
   g. Click *OK*.
   h. Select the new performance SLA to set it as the *Required SLA target*.

   When multiple SLA targets are added, you can choose which target to use in the SD-WAN rule.

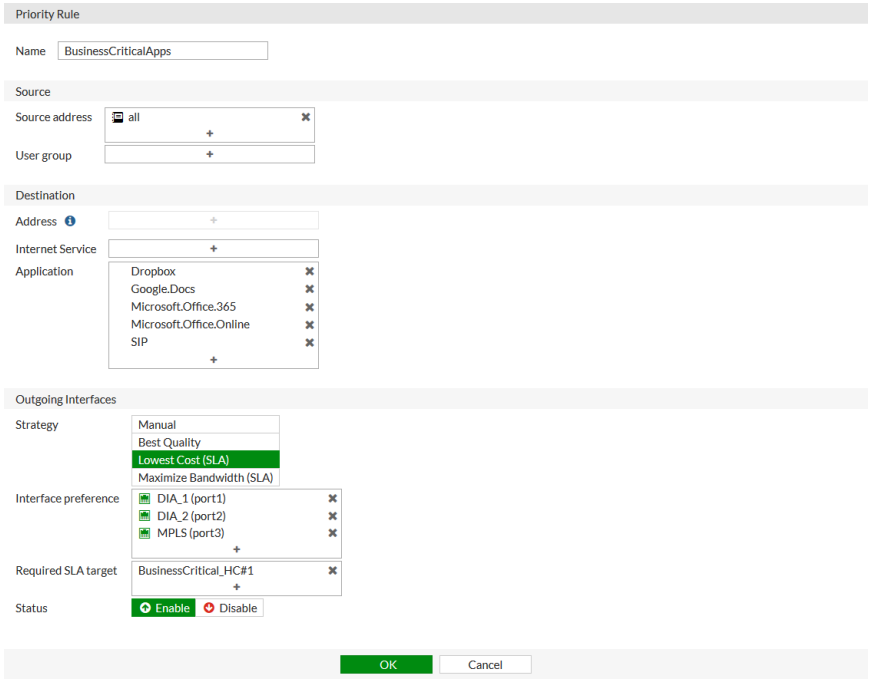

8. Click *OK* to create the SD-WAN rule.

To configure the SD-WAN rule and performance SLA checks for non-business critical application in the GUI:

1. Go to *Network* > *SD-WAN Rules*, and click *Create New*.
2. Set the name to *NonBusinessCriticalApps*.
   This rule will steer your non-business critical traffic to the appropriate link based on the *Best Quality*. No SLA target must be met, as the best link is selected based on the configured quality criteria and interface preference order.
3. Set *Source address* to *all*.


4. Under *Destination*, set *Application* to your required applications. In this example: *Facebook*, and *Youtube*.
5. Under *Outgoing Interfaces*, set *Strategy* to *Best Quality*.
6. In *Interface preference*, add the interfaces in order of preference.
   By default, a more preferred link has an advantage of 10% over a less preferred link. For example, when latency is used, the preferred link's calculated latency = real latency / (1+10%).



The preferred link advantage can be customized in the CLI when the mode is `priority` (*Best Quality*) or `auto`:

```
config system virtual-wan-link
    config service
        edit <id>
            set link-cost-threshold <integer>
        next
    end
end
```

7. Create and apply a new performance SLA profile:
   a. Click in the *Measured SLA* field.
   b. In the drop-down list, click *Create*. The *New Performace SLA* pane opens.
   c. Set *Name* to *NonBusinessCritical_HC*.
      This health check is used for non-business critical applications in your SD-WAN rule.
   d. Leave *Protocol* set to *Ping*, and add up to two servers, such as *youtube.com* and *facebook.com*.
   e. Set *Participants* to the DIA_1 and DIA_2 interfaces. In this example, MPLS is not used for non-business critical applications.
   f. Leave *SLA Target* disabled.
   g. Click *OK*.
   h. Select the new performance SLA from the list to set it as the *Measured SLA*.
8. Set *Quality criteria* as required. In this example, *Latency* is selected.
   For bandwidth related criteria, such as *Downstream*, *Upstream*, and *Bandwidth* (bi-directional), the selection is based on available bandwidth. An estimated bandwidth should be configured on the interface to provide a baseline, maximum available bandwidth.

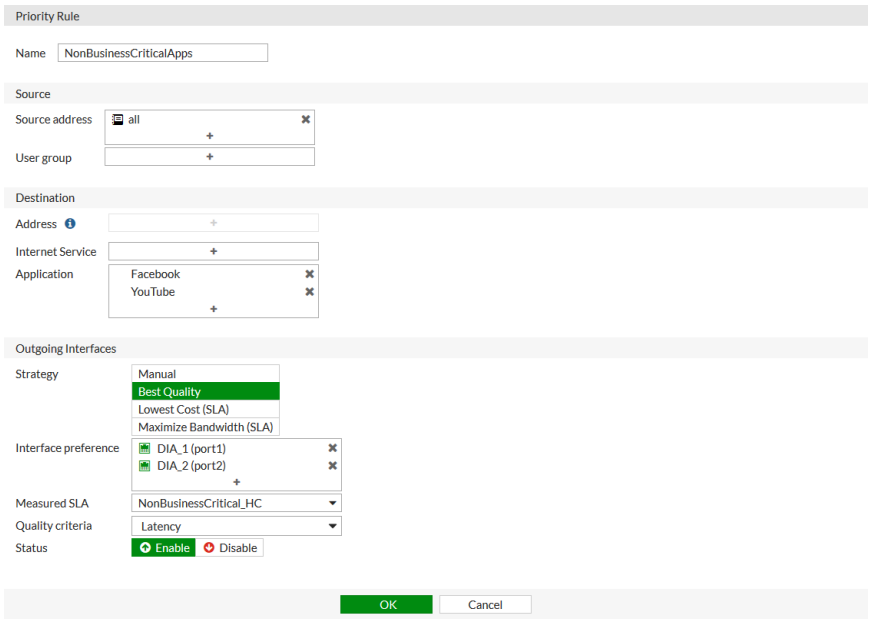

9. Click *OK* to create the SD-WAN rule.

To configure the SD-WAN members, static route, and firewall policy in the CLI:

1. Configure the interfaces:

```
config system interface
    edit "port1"
        set ip <class_ip&net_netmask>
        set alias "DIA_1"
        set role wan
    next
    edit "port2"
        set ip <class_ip&net_netmask>
        set alias "DIA_2"
        set role wan
    next
    edit "port3"
        set ip <class_ip&net_netmask>
        set alias "MPLS"
        set role wan
    next
end
```

2. Configure the SD-WAN members:

```
config system virtual-wan-link
    set status enable
    config members
        edit 1
            set interface "port1"
            set gateway 172.16.20.2
        next
        edit 2
            set interface "port2"
            set gateway 172.17.80.2
```

```
        next
        edit 3
            set interface "port3"
            set gateway 10.100.20.2
            set cost 20
        next
    end
end
```

To configure the SD-WAN rule and performance SLA checks for business critical application in the CLI:

1. Configure the *BusinessCriticalApps_HC* health-check:

```
config system virtual-wan-link
    config health-check
        edit "BusinessCriticalApps_HC"
            set server "office.com" "google.com"
            set members 1 2 3
            config sla
                edit 1
                    set link-cost-factor packet-loss
                    set packetloss-threshold 1
                next
            end
        next
    end
end
```

2. Configure the *BusinessCriticalApps* service to use *Lowest Cost (SLA)*:

```
config system virtual-wan-link
    config service
        edit 1
            set name "BusinessCriticalApps"
            set mode sla
            set src "all"
            set internet-service enable
            set internet-service-app-ctrl 17459 16541 33182 16177 34640
            config sla
                edit "BusinessCriticalApps_HC"
                    set id 1
                next
            end
            set priority-members 1 2 3
        next
    end
end
```

To configure the SD-WAN rule and performance SLA checks for non-business critical application in the CLI:

1. Configure the *nonBusinessCriticalApps_HC* health-check:

```
config system virtual-wan-link
    config health-check
        edit "NonBusinessCriticalApps_HC"
            set server "youtube.com" "facebook.com"
```

```
            set members 1 2
        next
    end
end
```

2. Configure the *BusinessCriticalApps* service to use *Lowest Cost (SLA)*:

```
config system virtual-wan-link
    config service
        edit 4
            set name "NonBusinessCriticalApps"
            set mode priority
            set src "all"
            set internet-service enable
            set internet-service-app-ctrl 15832 31077
            set health-check "NonBusinessCriticalApps_HC"
            set priority-members 1 2
        next
    end
end
```


Verification


Check the following GUI pages, and run the following CLI commands to confirm that your traffic is being steered by the SD-WAN rules.

Health checks

To verify the status of each of the health checks in the GUI:

1. Go to *Network* > *Performance SLA* and select each of the health checks from the list.

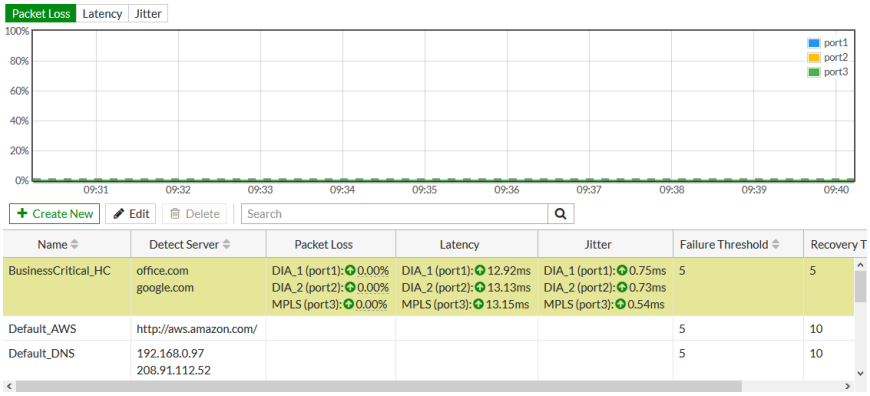

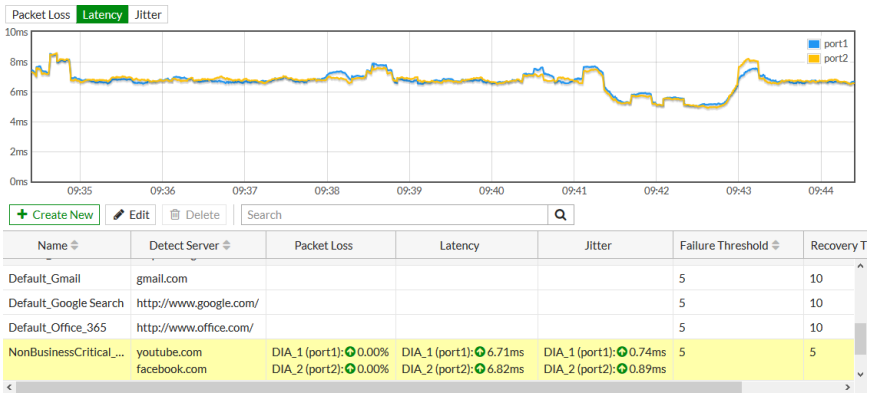


To verify the status of each of the health checks in the CLI:

```
# diagnose sys virtual-wan-link health-check
Health Check(BusinessCritical_HC):
Seq(1 port1): state(alive), packet-loss(0.000%) latency(12.884), jitter(0.919) sla_map=0x1
Seq(2 port2): state(alive), packet-loss(0.000%) latency(13.018), jitter(0.723) sla_map=0x1
Seq(3 port3): state(alive), packet-loss(0.000%) latency(13.018), jitter(0.923) sla_map=0x1
Health Check(NonBusinessCritical_HC):
Seq(1 port1): state(alive), packet-loss(0.000%) latency(6.888), jitter(0.953) sla_map=0x0
Seq(2 port2): state(alive), packet-loss(0.000%) latency(6.805), jitter(0.830) sla_map=0x0
```

Rule members and hit count

To verify the active members and hit count of the SD-WAN rule in the GUI:

1. Go to *Network* > *SD-WAN Rules*.

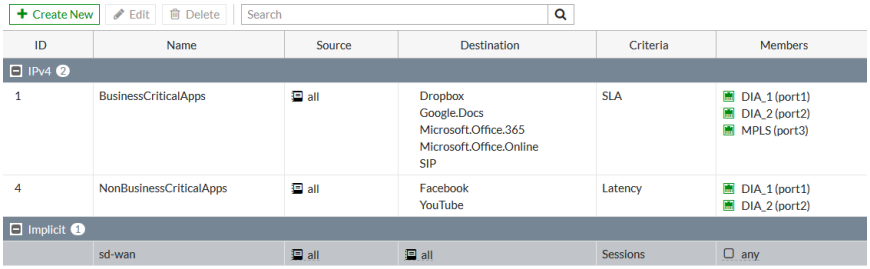

To verify the active members and hit count of the SD-WAN rule in the CLI:

```
# diagnose sys virtual-wan-link service


Service(3): Address Mode(IPV4) flags=0x0
  Gen(13), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(sla), sla-compare-order
  Members:
    1: Seq_num(1 port1), alive, sla(0x1), cfg_order(0), cost(0), selected
    2: Seq_num(2 port2), alive, sla(0x1), cfg_order(1), cost(0), selected
    3: Seq_num(3 port3), alive, sla(0x1), cfg_order(2), cost(20), selected
  Internet Service: Dropbox(4294836727,0,0,0 17459) Google.Docs(4294836992,0,0,0 16541)
Microsoft.Office.365(4294837472,0,0,0 33182) Microsoft.Office.Online(4294837475,0,0,0 16177)
SIP(4294837918,0,0,0 34640)
  Src address:
        0.0.0.0-255.255.255.255
```

```
Service(4): Address Mode(IPV4) flags=0x0
  Gen(211), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(priority), link-cost-factor(latency),
link-cost-threshold(10), heath-check(NonBusinessCritical_HC)
  Members:
    1: Seq_num(1 port1), alive, latency: 5.712, selected
    2: Seq_num(2 port2), alive, latency: 5.511, selected
  Internet Service: Facebook(4294836806,0,0,0 15832) YouTube(4294838537,0,0,0 31077)
  Src address:
       0.0.0.0-255.255.255.255
```

Applications and sessions

To verify sessions in FortiView:

1. Go to a dashboard and add the *FortiView Top N* widget configured for cloud applications and sorted by bytes. See Configuring the Cloud Applications widget on page 290 for details.
2. Drill down on an application, such as *YouTube*, then select the *Sessions* tab.

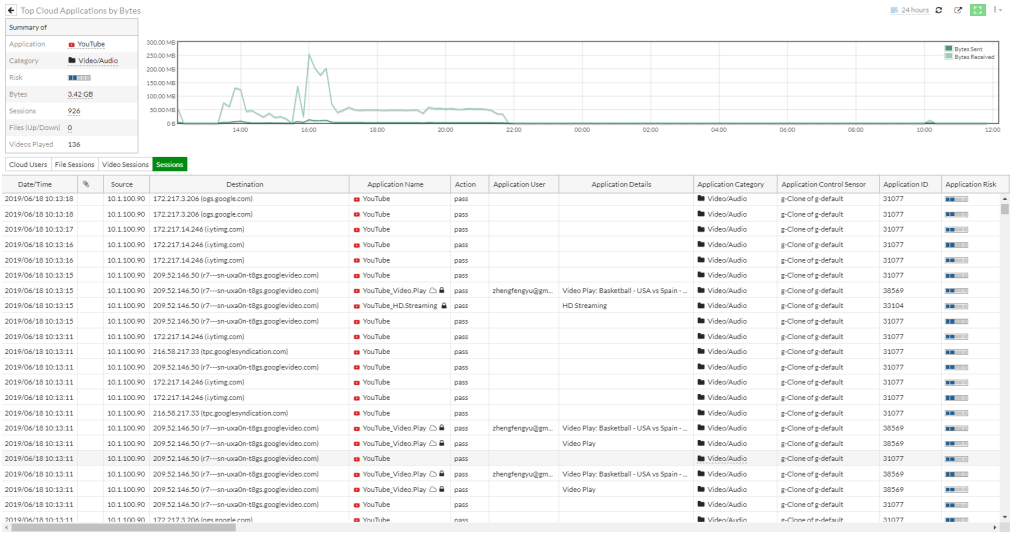

To verify applications identified by Application Control in SD-WAN:

```
# diagnose sys virtual-wan-link internet-service-app-ctrl-list

Facebook(15832 4294836697): 31.13.67.20 6 443 Fri April 17 22:33:39 2020
Facebook(15832 4294836697): 31.13.67.35 6 443 Fri April 17 22:33:41 2020
Facebook(15832 4294836697): 31.13.70.36 6 443 Fri April 17 22:36:41 2020
Facebook(15832 4294836697): 157.240.11.22 6 443 Fri April 17 22:36:42 2020
Facebook(15832 4294836697): 157.240.11.35 6 443 Fri April 17 22:36:41 2020
YouTube(31077 4294838227): 172.217.24.150 6 443 Fri April 17 22:32:16 2020
YouTube(31077 4294838227): 172.217.25.78 6 443 Fri April 17 22:32:16 2020
YouTube(31077 4294838227): 216.58.220.129 6 443 Fri April 17 22:32:34 2020
```


SD-WAN traffic shaping and QoS

Use a traffic shaper in a firewall shaping policy to control traffic flow. You can use it to control maximum and guaranteed bandwidth, or put certain traffic to one of the three different traffic priorities: high, medium, or low.

An advanced shaping policy can classify traffic into 30 groups. Use a shaping profile to define the percentage of the interface bandwidth that is allocated to each group. Each group of traffic is shaped to the assigned speed limit based on the outgoing bandwidth limit configured on the interface.

For more information, see the online help on shared policy traffic shaping and interface-based traffic shaping.

Sample topology

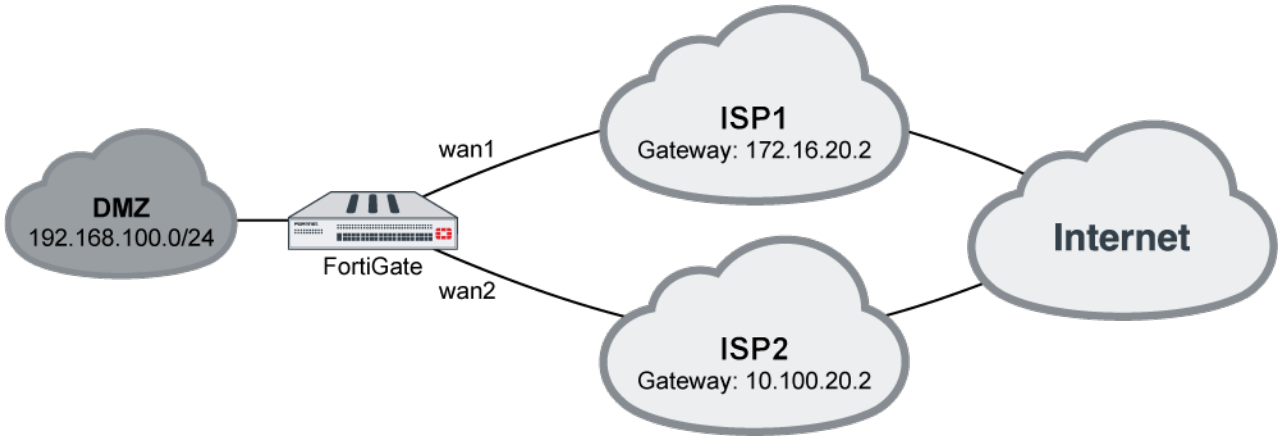

Sample configuration

This example shows a typical customer usage where the customer's SD-WAN has two member: wan1 and wan2 and each is 10Mb/s.

An overview of the procedures to configure SD-WAN traffic shaping and QoS with SD-WAN includes:

1. Give HTTP/HTTPS traffic high priority and give FTP low priority so that if there are conflicts, FortiGate will forward HTTP/HTTPS traffic first.
2. Even though FTP has low priority, configure FortiGate to give it a 1Mb/s guaranteed bandwidth on each SD-WAN member so that if there is no FTP traffic, other traffic can use all the bandwidth. If there is heavy FTP traffic, it can still be guaranteed a 1Mb/s bandwidth.
3. Traffic going to specific destinations such as a VOIP server uses wan1 to forward, and SD-WAN forwards with an Expedited Forwarding (EF) DSCP tag 101110.

To configure SD-WAN traffic shaping and QoS with SD-WAN in the GUI:

1. On the FortiGate, enable SD-WAN and add wan1 and wan2 as SD-WAN members, then add a policy and static route.
   See Configuring the SD-WAN interface on page 453.
2. When you add a firewall policy, enable *Application Control*.
3. Go to *Policy & Objects* > *Traffic Shapers* and edit *low-priority*.
   a. Enable *Guaranteed Bandwidth* and set it to *1000* kbps.

4. Go to *Policy & Objects* > *Traffic Shaping Policy* and click *Create New*.
   a. Name the traffic shaping policy, for example, *HTTP-HTTPS*.
   b. Click the *Source* box and select *all*.
   c. Click the *Destination* box and select *all*.
   d. Click the *Service* box and select *HTTP* and *HTTPS*.
   e. Click the *Outgoing Interface* box and select *SD-WAN*.
   f. Enable both *Shared Shaper* and *Reverse Shaper* and select *high-priority* for both options.
   g. Click *OK*.
5. Go to *Policy & Objects* > *Traffic Shaping Policy* and click *Create New*.
   a. Name the traffic shaping policy, for example, *FTP*.
   b. Click the *Source* box and select *all*.
   c. Click the *Destination* box and select *all*.
   d. Click the *Service* box and select *FTP*, *FTP_GET*, and *FTP_PUT*.
   e. Click the *Outgoing Interface* box and select *SD-WAN*.
   f. Enable both *Shared Shaper* and *Reverse Shaper* and select *low-priority* for both options.
   g. Click *OK*
6. Go to *Network* > *SD-WAN Rules* and click *Create New*.
   a. Enter a name for the rule, such as *Internet*.
   b. In the *Destination* section, click the *Address* box and select the VOIP server you created in the firewall address.
   c. For *Strategy*, select *Manual*.
   d. For *Interface preference*, select *wan1*.
   e. Click *OK*.
7. Use CLI commands to modify DSCP settings. See the DSCP CLI commands below.

To configure the firewall policy using the CLI:

```
config firewall policy
    edit 1
        set name "1"
        set srcintf "dmz"
        set dstintf ""virtual-wan-link""
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end
```

To configure the firewall traffic shaper priority using the CLI:

```
config firewall shaper traffic-shaper
    edit "high-priority"
        set maximum-bandwidth 1048576
        set per-policy enable
    next
    edit "low-priority"
        set guaranteed-bandwidth 1000
        set maximum-bandwidth 1048576
```

```
        set priority low
        set per-policy enable
    next
end
```

To configure the firewall traffic shaping policy using the CLI:

```
config firewall shaping-policy
    edit 1
        set name "http-https"
        set service "HTTP" "HTTPS"
        set dstintf "virtual-wan-link"
        set traffic-shaper "high-priority"
        set traffic-shaper-reverse "high-priority"
        set srcaddr "all"
        set dstaddr "all"
    next
    edit 2
        set name "FTP"
        set service "FTP" "FTP_GET" "FTP_PUT"
        set dstintf "virtual-wan-link"
        set traffic-shaper "low-priority"
        set traffic-shaper-reverse "low-priority"
        set srcaddr "all"
        set dstaddr "all"
    next
end
```

To configure SD-WAN traffic shaping and QoS with SD-WAN in the CLI:

```
config system virtual-wan-link
    set status enable
    config members
        edit 1
            set interface "wan1"
            set gateway x.x.x.x
        next
        edit 2
            set interface "wan2"
            set gateway x.x.x.x
        next
    end
    config service
        edit 1
            set name "SIP"
            set dst "voip-server"
            set dscp-forward enable
            set dscp-forward-tag 101110
            set priority-members 1
        next
    end
end
```

To use the diagnose command to check if specific traffic is attached to the correct traffic shaper:

```
# diagnose firewall iprope list 100015

policy index=1 uuid_idx=0 action=accept
flag (0):
shapers: orig=high-priority(2/0/134217728) reply=high-priority(2/0/134217728)
cos_fwd=0  cos_rev=0
group=00100015 av=00000000 au=00000000 split=00000000
host=0 chk_client_info=0x0 app_list=0 ips_view=0
misc=0 dd_type=0 dd_mode=0
zone(1): 0 -> zone(2): 36 38
source(1): 0.0.0.0-255.255.255.255, uuid_idx=6,
dest(1): 0.0.0.0-255.255.255.255, uuid_idx=6,
service(2):
        [6:0x0:0/(1,65535)->(80,80)] helper:auto
        [6:0x0:0/(1,65535)->(443,443)] helper:auto

policy index=2 uuid_idx=0 action=accept
flag (0):
shapers: orig=low-priority(4/128000/134217728) reply=low-priority(4/128000/134217728)
cos_fwd=0  cos_rev=0
group=00100015 av=00000000 au=00000000 split=00000000
host=0 chk_client_info=0x0 app_list=0 ips_view=0
misc=0 dd_type=0 dd_mode=0
zone(1): 0 -> zone(2): 36 38
source(1): 0.0.0.0-255.255.255.255, uuid_idx=6,
dest(1): 0.0.0.0-255.255.255.255, uuid_idx=6,
service(3):
        [6:0x0:0/(1,65535)->(21,21)] helper:auto
        [6:0x0:0/(1,65535)->(21,21)] helper:auto
        [6:0x0:0/(1,65535)->(21,21)] helper:auto

FGT_A (root) #
```

To use the diagnose command to check if the correct traffic shaper is applied to the session:

```
# diagnose sys session list
session info: proto=6 proto_state=01 duration=11 expire=3599 timeout=3600 flags=00000000
sockflag=00000000 sockport=0 av_idx=0 use=5
origin-shaper=low-priority prio=4 guarantee 128000Bps max 1280000Bps traffic 1050Bps drops
0B
reply-shaper=
per_ip_shaper=
class_id=0 shaping_policy_id=2 ha_id=0 policy_dir=0 tunnel=/ helper=ftp vlan_cos=0/255
state=may_dirty npu npd os mif route_preserve
statistic(bytes/packets/allow_err): org=868/15/1 reply=752/10/1 tuples=2
tx speed(Bps/kbps): 76/0 rx speed(Bps/kbps): 66/0
orgin->sink: org pre->post, reply pre->post dev=39->38/38->39 gwy=172.16.200.55/0.0.0.0
hook=post dir=org act=snat 10.1.100.11:58241->172.16.200.55:21(172.16.200.1:58241)
hook=pre dir=reply act=dnat 172.16.200.55:21->172.16.200.1:58241(10.1.100.11:58241)
pos/(before,after) 0/(0,0), 0/(0,0)
misc=0 policy_id=1 auth_info=0 chk_client_info=0 vd=4
serial=0003255f tos=ff/ff app_list=0 app=0 url_cat=0
rpdb_link_id = 00000000
dd_type=0 dd_mode=0
```

```
npu_state=0x100000
npu info: flag=0x00/0x00, offload=0/0, ips_offload=0/0, epid=0/0, ipid=0/0,
vlan=0x0000/0x0000
vlifid=0/0, vtag_in=0x0000/0x0000 in_npu=0/0, out_npu=0/0, fwd_en=0/0, qid=0/0
no_ofld_reason:  offload-denied helper
total session 1
```

To use the diagnose command to check the status of a shared traffic shaper:

```
 # diagnose firewall shaper traffic-shaper list

name high-priority
maximum-bandwidth 131072 KB/sec
guaranteed-bandwidth 0 KB/sec
current-bandwidth 0 B/sec
priority 2
tos ff
packets dropped 0
bytes dropped 0

name low-priority
maximum-bandwidth 131072 KB/sec
guaranteed-bandwidth 125 KB/sec
current-bandwidth 0 B/sec
priority 4
tos ff
packets dropped 0
bytes dropped 0

name high-priority
maximum-bandwidth 131072 KB/sec
guaranteed-bandwidth 0 KB/sec
current-bandwidth 0 B/sec
priority 2
policy 1
tos ff
packets dropped 0
bytes dropped 0

name low-priority
maximum-bandwidth 131072 KB/sec
guaranteed-bandwidth 125 KB/sec
current-bandwidth 0 B/sec
priority 4
policy 2
tos ff
packets dropped 0
bytes dropped 0
```

Per-link controls for policies and SLA checks

Firewall policies can use SD-WAN members as source and destination interfaces. This allows controlling traffic so that certain types of traffic can only use certain SD-WAN members.

Per link health-check parameters are supported in SLA configurations using the following CLI command:

```
config system virtual-wan-link
    config service
        edit <priority_rule>
            set sla-compare-method number
        next
    end
end
```

SLA values are compared based on the number of satisfied health checks, and health checks are limited to configured member interfaces only. The member with the most health check passes is set as the priority member. This only applies to SLA mode and load balance mode rules.

Example

In this example, a customer has four health checks and two SD-WAN members:

- health-check1 and health-check2 check SD-WAN member1
- health-check3 and health-check4 check SD-WAN member2

The customer wants traffic going to destination A to use the SD-WAN member that passes the most SLAs. For example, if health-check1 fails, then member1 only has one pass, while member2 has two passes, and traffic will use member2 for forwarding. If both checks fail for member2, then traffic would use member1.

To configure the FortiGate device:

```
config system virtual-wan-link
    config members
        edit 1
            set interface "port1"
        next
        edit 2
            set interface "port2"
        next
    end
    config health-check
        edit "ping1"
            set server "x.x.x.x"
            set members 1
            config sla
                edit 1
                next
            end
        next
        edit "ping2"
            set server "x.x.x.x"
            set members 1
            config sla
                edit 1
                next
            end
        next
        edit "ping3"
            set server "x.x.x.x"
            set members 2
            config sla
```


```
                edit 1
                next
            end
        next
        edit "ping4"
            set server "x.x.x.x"
            set members 2
            config sla
                edit 1
                next
            end
        next
    end
    config service
        edit 1
            set mode sla
            set dst "destination-A"
            config sla
                edit "ping1"
                    set id 1
                next
                edit "ping2"
                    set id 1
                next
                edit "ping3"
                    set id 1
                next
                edit "ping4"
                    set id 1
                next
            end
            set priority-members 1 2
            set sla-compare-method number
        next
    end
end
```

DSCP tag-based traffic steering in SD-WAN

This document demonstrates the Differentiated Services Code Point (DSCP) tag-based traffic steering in Fortinet secure SD-WAN. You can use this guide as an example to deploy DSCP tag-based traffic steering in Fortinet secure SD-WAN.

DSCP tags are often used to categorize traffic to provide quality of service (QoS). Based on DSCP tags, you can provide SD-WAN traffic steering on an edge device.

In this example, we have two different departments at the Headquarters site - Customer Service and Marketing. Traffic from each of these departments is marked with separate DSCP tags by the core switch, and passes through the core switch to the edge FortiGate. The edge FortiGate reads the DSCP tags and steers traffic to the preferred interface based on the defined SD-WAN rules.

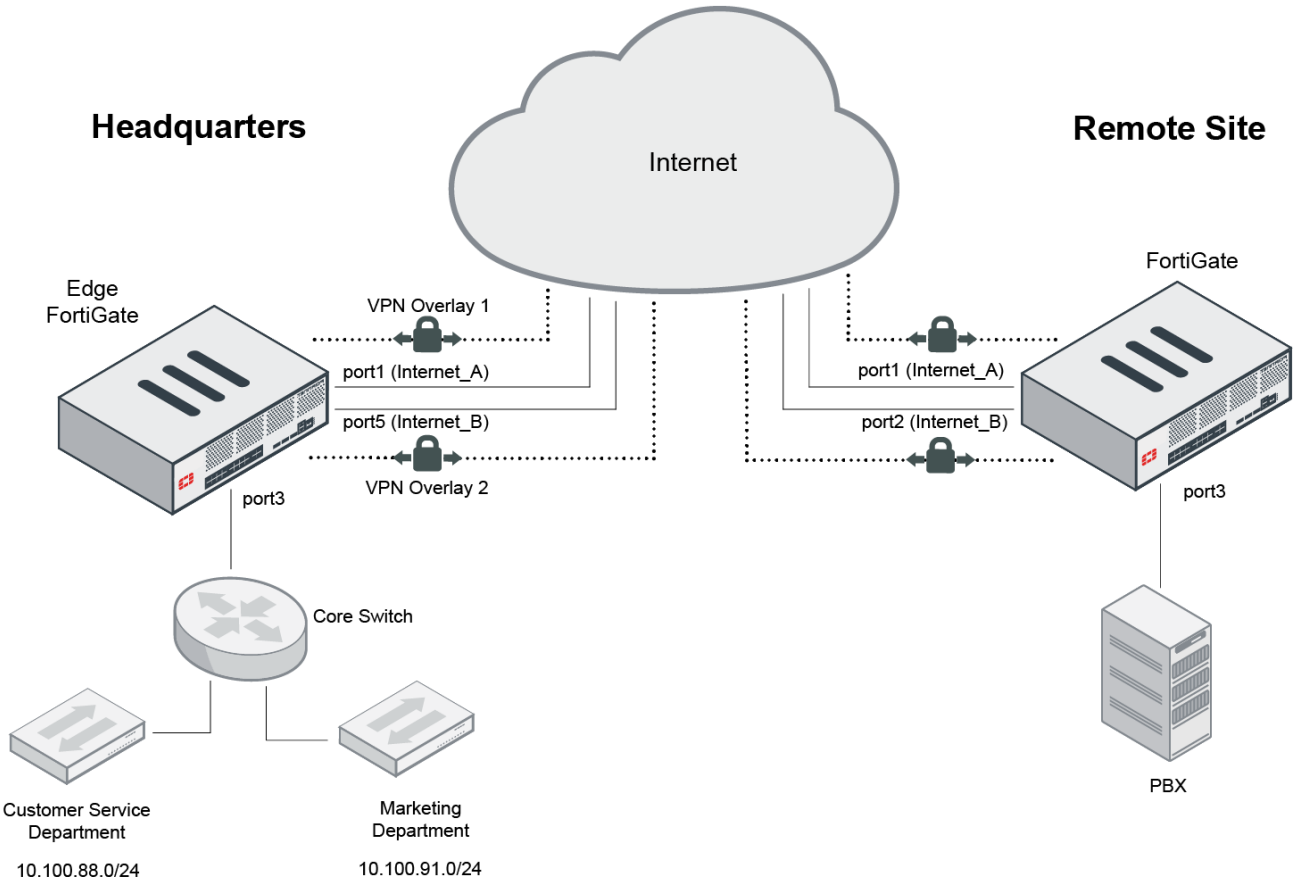

In our example, we consider two types of traffic - social media traffic and VoIP traffic. VoIP traffic from Customer Service is considered to be more important than social media traffic. Each of these traffic types is marked with a DSCP tag by the core switch - VoIP traffic is marked with the DSCP tag of `011100`, and social media traffic is marked with the DSCP tag of `001100`. The DSCP tagged traffic is then passed on to the edge FortiGate. The edge FortiGate identifies the DSCP tagged traffic and based on the defined SD-WAN rules, the edge FortiGate steers:

- VoIP traffic to the preferred VPN overlay with the least jitter in order to provide the best quality of voice communication with the remote VoIP server (PBX)
- Social media traffic to the preferred Internet link with a lower cost (less expensive and less reliable)


If you are familiar with SD-WAN configurations in FortiOS, you can directly jump to the Configuring SD-WAN rules on page 502 section to learn how to configure the SD-WAN rules to perform traffic steering. Otherwise, you can proceed with all of the following topics to configure the edge FortiGate:

- Configuring IPsec tunnels on page 501
- Configuring SD-WAN interfaces on page 501
- Configuring firewall policies on page 502
- Configuring Performance SLA test on page 502
- Configuring SD-WAN rules on page 502
- Results on page 506

Configuring IPsec tunnels

In our example, we have two interfaces `Internet_A (port1)` and `Internet_B(port5)` on which we have configured IPsec tunnels `Branch-HQ-A` and `Branch-HQ-B` respectively. To learn how to configure IPsec tunnels, refer to the IPsec VPNs on page 1063 section.

After you have configured the IPsec tunnels as required, verify your IPsec tunnels by navigating to *VPN* > *IPsec Tunnels* in the GUI.

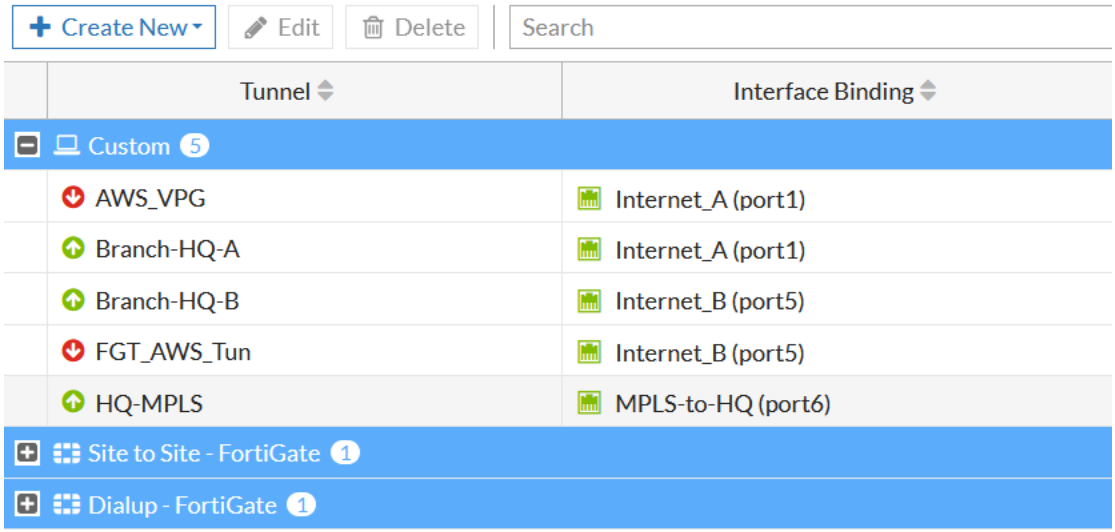


Configuring SD-WAN interfaces

In order for us to steer traffic based on SD-WAN rules, first we need to configure SD-WAN interface members. To know more about creating SD-WAN interfaces, refer to the Configuring the SD-WAN interface on page 453 section.

In our example, we created four SD-WAN interface members. SD-WAN interfaces `Internet_A(port1)` and `Internet_B(port5)` for the underlay traffic, and `Branch-HQ-A` and `Branch-HQ-B` interfaces for the overlay traffic.

Verify the configurations on the *Network* > *SD-WAN* screen:

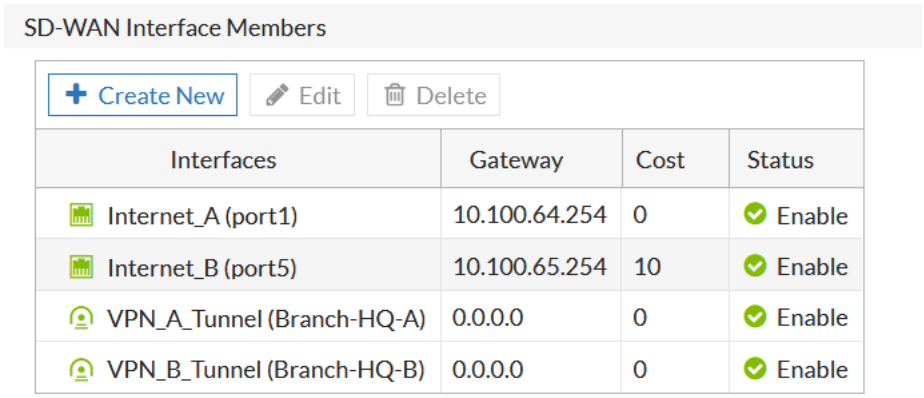

In the screenshot above, we have configured the `Internet_A(port1)` and `Internet_B (port5)` SD-WAN interface members with their *Cost* values being `0` and `10` respectively. A lower *Cost* value indicates that this member is the primary interface member, and is preferred more than a member with a higher *Cost* value when using the *Lowest Cost (SLA)* strategy.


We also need to configure a static route that points to the *SD-WAN* interface. To know more about static routes, refer to the Adding a static route on page 455 section.

Configuring firewall policies

Configure firewall policies for both the overlay and underlay traffic. To know more about firewall policies, refer to the Policies on page 726 section.

In this example, the *Overlay-out* policy governs the overlay traffic and the *SD-WAN-Out* policy governs the underlay traffic. The firewall policies are configured accordingly.

Once created, verify the firewall policies by navigating to *Policy & Objects* > *Firewall Policy*:

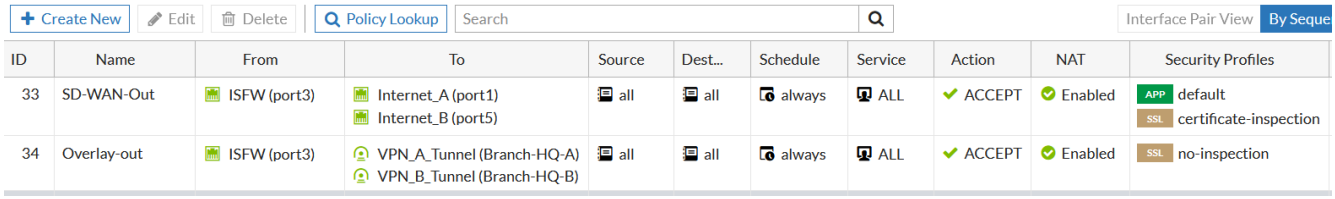


ID	Name	From	To	Source	Dest...	Schedule	Service	Action	NAT	Security Profiles
33	SD-WAN-Out	ISFW (port3)	Internet_A (port1) Internet_B (port5)	all	all	always	ALL	ACCEPT	Enabled	APP default SSL certificate-inspection
34	Overlay-out	ISFW (port3)	VPN_A_Tunnel (Branch-HQ-A) VPN_B_Tunnel (Branch-HQ-B)	all	all	always	ALL	ACCEPT	Enabled	SSL no-inspection

The *Security Profiles* column indicates that the *Overlay-out* firewall policy for the overlay traffic is set up to not scan any traffic, while the *SD-WAN-Out* firewall policy is set to scan all web traffic to identify and govern social media traffic as *Application Control* profile is active.

Configuring Performance SLA test

Configure a performance SLA test that will be tied to the SD-WAN interface members we created and assigned to SD-WAN zones. To know more about Performance SLA, refer to the Performance SLA - SLA targets on page 466 section.

In this example, we created a *Performance SLA* test *Default_DNS* with `Internet_A(port1)` and `Internet_B (port5)` interface members as participants. We will use the created *Performance SLA* test to steer all web traffic passing through the underlays other than social media traffic based on the *Lowest Cost (SLA)* strategy.

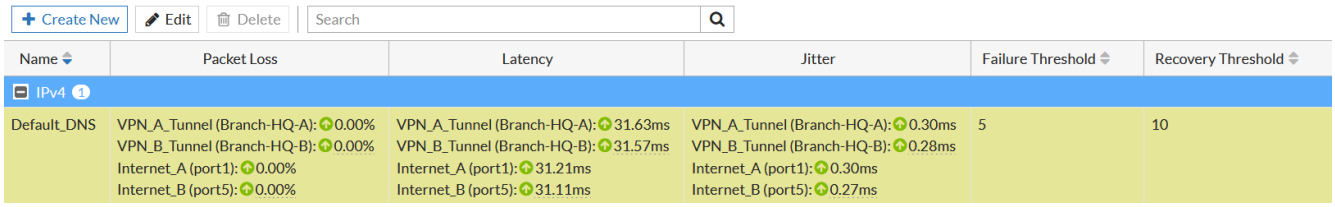

Name	Packet Loss	Latency	Jitter	Failure Threshold	Recovery Threshold
IPv4 1					
Default_DNS	VPN_A_Tunnel (Branch-HQ-A): 0.00% VPN_B_Tunnel (Branch-HQ-B): 0.00% Internet_A (port1): 0.00% Internet_B (port5): 0.00%	VPN_A_Tunnel (Branch-HQ-A): 31.63ms VPN_B_Tunnel (Branch-HQ-B): 31.57ms Internet_A (port1): 31.21ms Internet_B (port5): 31.11ms	VPN_A_Tunnel (Branch-HQ-A): 0.30ms VPN_B_Tunnel (Branch-HQ-B): 0.28ms Internet_A (port1): 0.30ms Internet_B (port5): 0.27ms	5	10

Configuring SD-WAN rules

Configure SD-WAN rules to govern the steering of DSCP tag-based traffic to the appropriate interfaces. Traffic will be steered based on the *Criteria* configured as part of the SD-WAN rules configuration.

In our example, we configured three different SD-WAN rules to govern DSCP tagged traffic. We have one SD-WAN rule each for VoIP traffic, social media traffic (Facebook in this case), and all other web traffic. VoIP traffic is always steered to either of the two overlays - `VPN_A_tunnel(Branch-HQ-A)` or `VPN_B_tunnel(Branch-HQ-B)`. Similarly, social media traffic and other web traffic is always steered to either of the two underlays - `Internet_A(port1)` or `Internet_B(port5)`. The interface that is preferred by the system over another depends upon the *Criteria* configured in the SD-WAN rule definition.

We configured the following SD-WAN rules:

- SD-WAN rule for VoIP traffic on page 503
- SD-WAN rule for social media traffic on page 504
- SD-WAN rule for other web traffic on page 505

SD-WAN rule for VoIP traffic


To configure SD-WAN rule for DSCP tagged VoIP traffic using the CLI:

```
FortiGate # config sys virtual-wan-link
   config service
      edit 1
         set name "VoIP-Steer"
         set mode priority
         set tos 0x70
         set tos-mask 0xf0
         set dst "all"
         set health-check "Default_DNS"
         set link-cost-factor jitter
         set priority-members 4 3
   end
```

The `VoIP-Steer` SD-WAN rule configured above governs the DSCP tagged VoIP traffic.

DSCP values commonly are 6-bit binary numbers that are padded with zeros at the end. Therefore, in this example, VoIP traffic with DSCP tag `011100` will become `01110000`. This 8-bit binary number `01110000` is represented in its hexadecimal form `0x70` as the `tos` (Type of Service bit pattern) value. The `tos-mask` (Type of Service evaluated bits) hexadecimal value of `0xf0` (binary `11110000`) is used to check the four most significant bits from the `tos` value in this case. Hence, the first four bits of the `tos` (`0111`) will be used to match the first four bits of the DSCP tag in our policy above. Only the non-zero bit positions are used for comparison and the zero bit positions are ignored from the `tos-mask`.

We used the *Best Quality* strategy to define the *Criteria* to select the preferred interface from the overlays. With the *Best Quality* strategy selected, the interface with the best measured performance is selected. The system prefers the interface with the least *Jitter*.

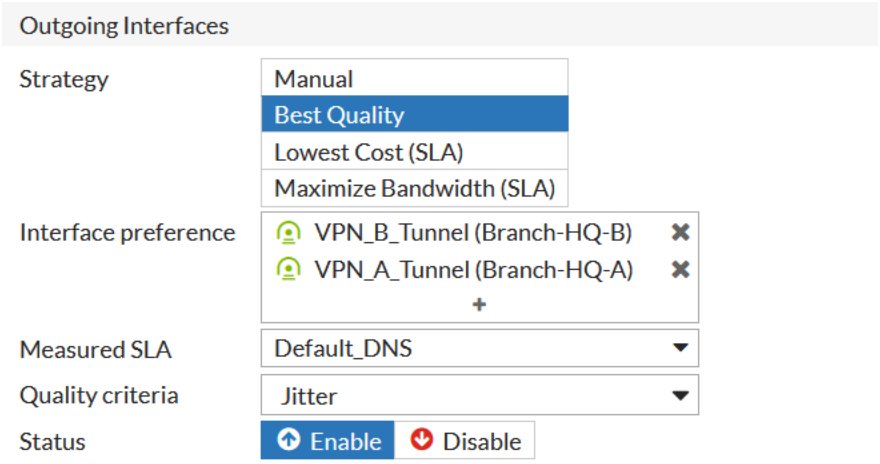

To know more about configuring SD-WAN rules with the *Best Quality* strategy, refer to the SD-WAN rules - best quality on page 473 section.

SD-WAN rule for social media traffic


To configure SD-WAN rule for DSCP tagged social media traffic using the CLI:

```
FortiGate # config sys virtual-wan-link
   config service
      edit 2
         set name "Facebook-DSCP-steer"
         set tos 0x30
         set tos-mask 0xf0
         set dst "all"
         set priority-members 2
   end
```

The `Facebook-DSCP-steer` SD-WAN rule configured above governs the DSCP tagged social media traffic.

DSCP values commonly are 6-bit binary numbers that are padded with zeros at the end. Therefore, in this example, social media traffic with DSCP tag `001100` will become `00110000`. This 8-bit binary number `00110000` is represented in its hexadecimal form `0x30` as the `tos` (Type of Service bit pattern) value. The `tos-mask` (Type of Service evaluated bits) hexadecimal value of `0xf0` (binary `11110000`) is used to check the four most significant bits from the `tos` value in this case. Hence, the first four bits of the `tos` (`0011`) will be used to match the first four bits of the DSCP tag in our policy above. Only the non-zero bit positions are used for comparison and the zero bit positions are ignored from the `tos-mask`.

We used a manual strategy to select the preferred interface from the underlay SD-WAN zone. We manually select the preferred interface as *Internet_B(port5)* to steer all social media traffic to.

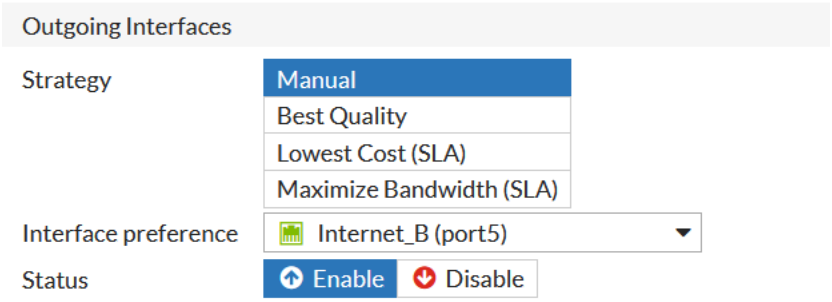

To know more about configuring SD-WAN rules with static application steering with a manual strategy, refer to the Static application steering with a manual strategy on page 481 section.


SD-WAN rule for other web traffic

To configure SD-WAN rule for all other web traffic using the CLI:

```
FortiGate # config sys virtual-wan-link
   config service
      edit 3
         set name "All-traffic"
         set mode sla
         set dst "all"
         config sla
            edit "Default_DNS"
               set id 1
            next
         end
         set priority-members 1 2
   end
```


The `All-traffic` SD-WAN rule configured above governs all other web traffic.

We used the *Lowest Cost (SLA)* strategy to define the *Criteria* to select the preferred interface from the underlay SD-WAN zone. With the *Lowest Cost (SLA)* strategy selected, the interface that meets the defined *Performance SLA* targets (*Default_DNS* in our case) is selected. When there is a tie, the interface with the lowest assigned *Cost* (`Internet_A (port1)` in our case) is selected.

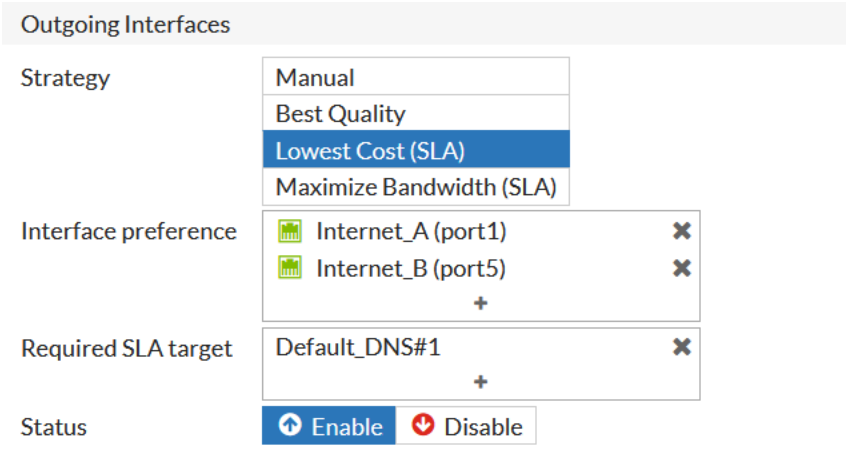

To know more about configuring SD-WAN rules with the *Lowest Cost (SLA)* strategy, refer to the SD-WAN rules - lowest cost (SLA) on page 476 section.

Once configured, verify your SD-WAN rules by navigating to *Network* > *SD-WAN Rules*:

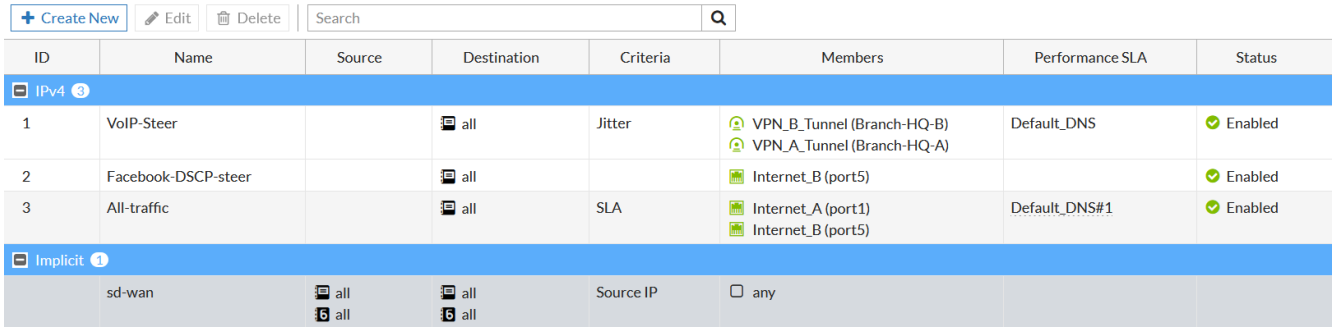

Results

The following sections show the function of the FortiGate and specifically of secure SD-WAN with respect to DSCP tagged traffic steering, and can be used to confirm that it is setup and running correctly:

- Verifying the DSCP tagged traffic on FortiGate on page 506
- Verifying service rules on page 508
- Verifying steered traffic leaving the required interface on page 509


Verifying the DSCP tagged traffic on FortiGate

To verify the incoming DSCP tagged traffic, we used packet sniffing and converting the sniffed traffic to a desired format. To know more about packet sniffing, refer to the Using the FortiOS built-in packet sniffer guide on the *Fortinet Knowledge Base*.

For VoIP traffic that is marked with DSCP tag `0x70`:

```
FortiGate # diag sniffer packet any '(ip and ip[1] & 0xfc == 0x70)' 6 0 l
```


We used the open-source packet analyzer *Wireshark* to verify that VoIP traffic is tagged with the `0x70` DSCP tag.

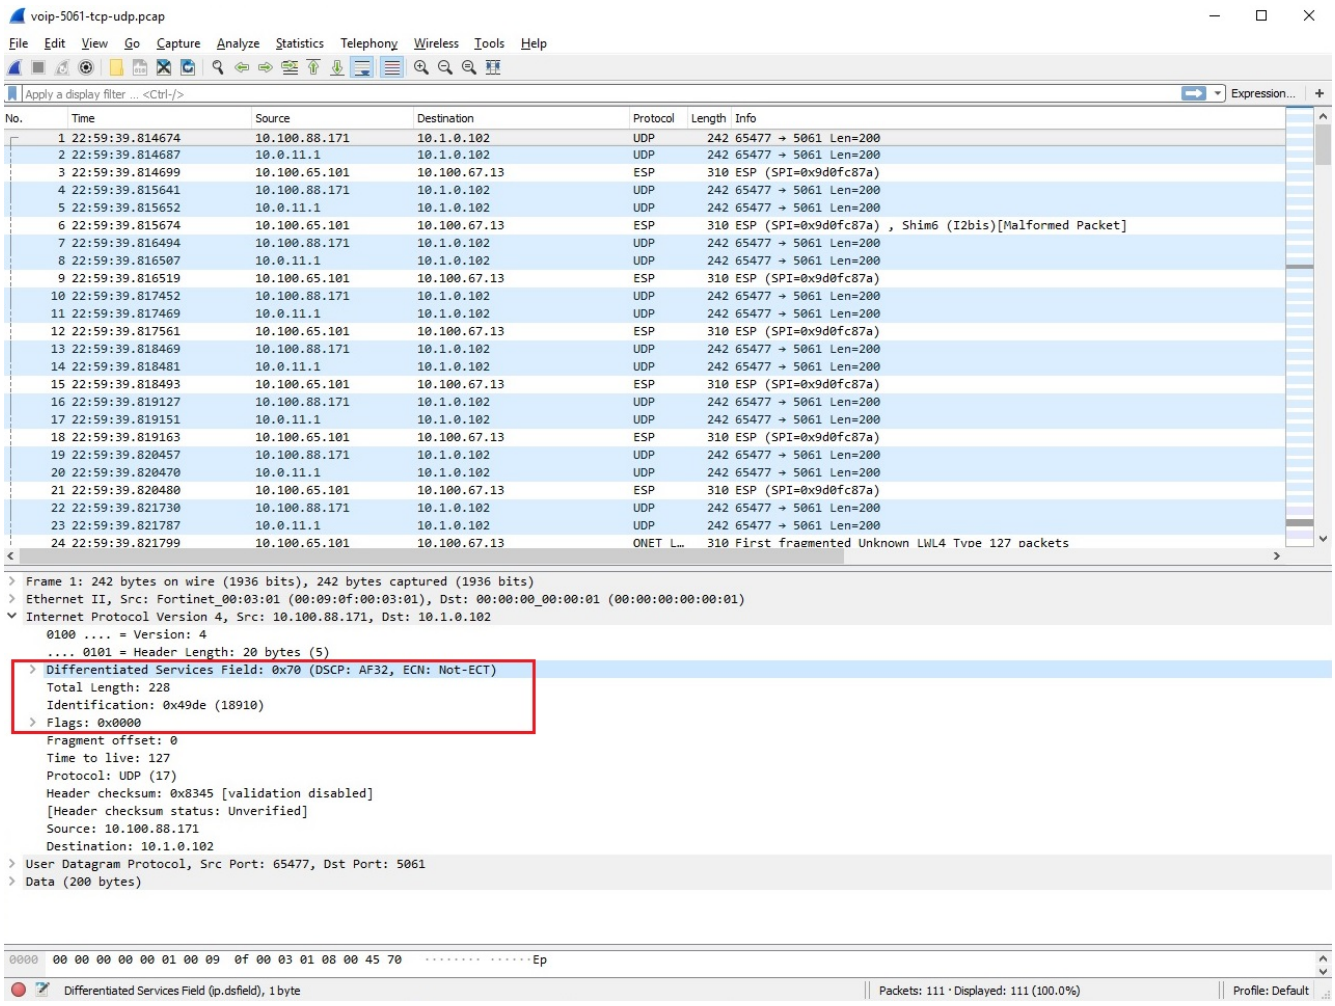

For web traffic marked with DSCP tag `0x30`:

```
FortiGate # diag sniffer packet any '(ip and ip[1] & 0xfc == 0x30)' 6 0 l
```

We used the open-source packet analyzer *Wireshark* to verify that web traffic is tagged with the `0x30` DSCP tag.

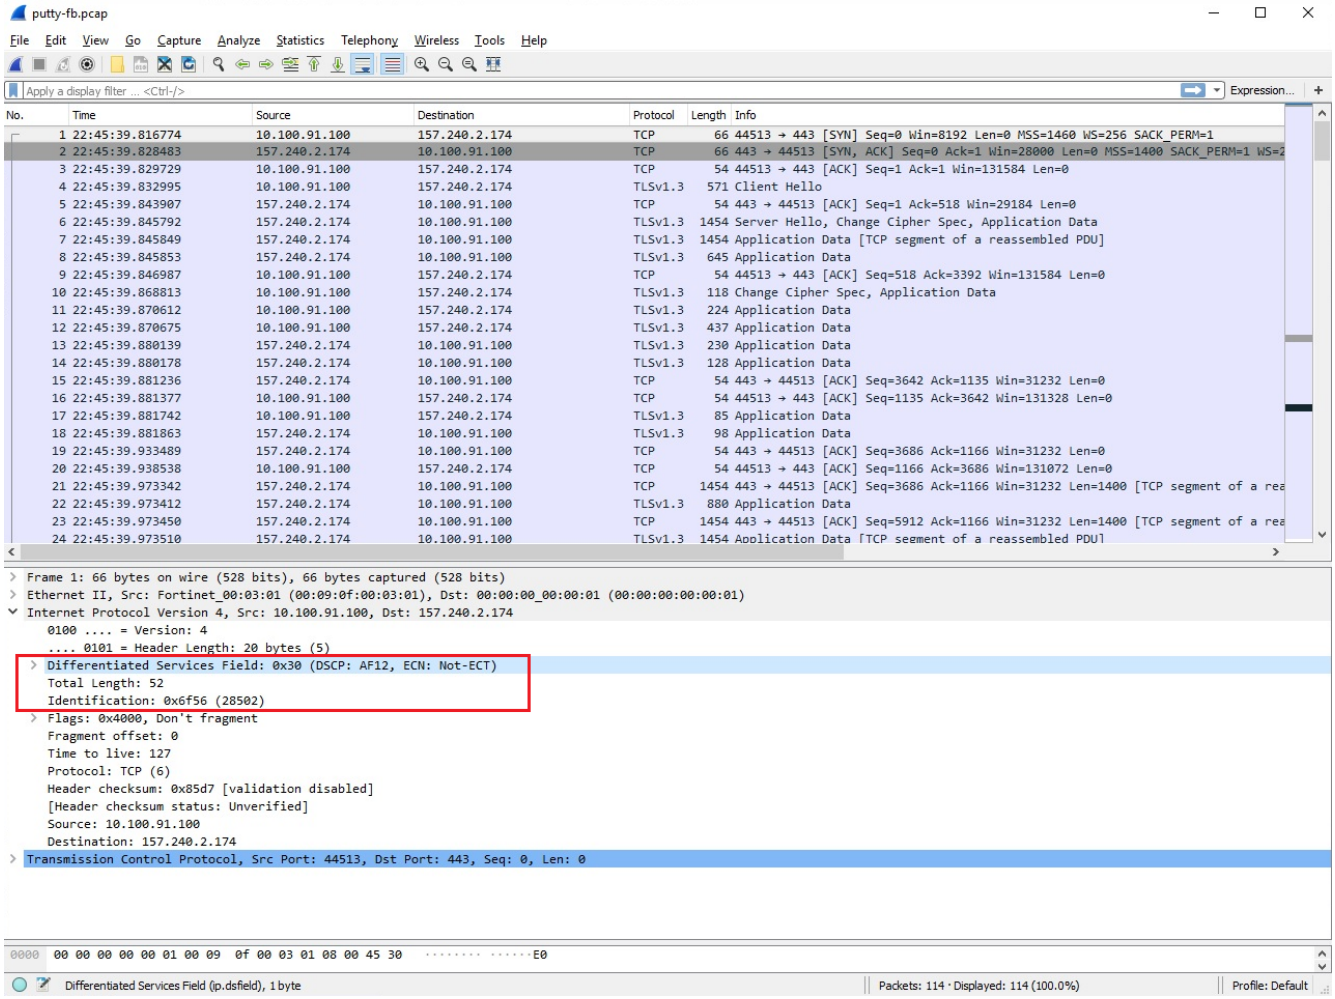

Verifying service rules

The following CLI commands show the appropriate DSCP tags and the corresponding interfaces selected by the SD-WAN rules to steer traffic:

```
FortiGate # diag sys virtual-wan-link service

Service(1): Address Mode(IPV4) flags=0x0
   TOS(0x70/0xf0), Protocol(0: 1->65535), Mode(priority), link-cost-factor(jitter), link-
        cost-threshold(10), health-check(Default_DNS)
   Service role: standalone
   Member sub interface:
   Members:
      1: Seq_num(4), alive, jitter: 0.624, selected
      2: Seq_num(3), alive, jitter: 0.643, selected
   Dst address:
        0.0.0.0-255.255.255.255

Service(2): Address Mode(IPV4) flags=0x0
   TOS(0x30/0xf0), Protocol(0: 1->65535), Mode(manual)
   Service role: standalone
   Member sub interface:
   Members:
```


```
      1: Seq_num(2), alive, selected
   Dst address:
        0.0.0.0-255.255.255.255

Service(3): Address Mode(IPV4) flags=0x0
   TOS(0x0/0x0), Protocol(0: 1->65535), Mode(sla)
   Service role: standalone
   Member sub interface:
   Members:
      1: Seq_num(1), alive, sla(0x1), cfg_order(0), cost(0), selected
      2: Seq_num(2), alive, sla(0x1), cfg_order(1), cost(10), selected
   Dst address:
        0.0.0.0-255.255.255.255
```

Verifying steered traffic leaving the required interface

Go to *Dashboard* > *Top Policies* to confirm that web traffic (port 443) flows through the right underlay interface members, and VoIP traffic flows through the right overlay interface member.

Web traffic leaves either `Interface_A(port1)` or `Interface_B(port5)`.

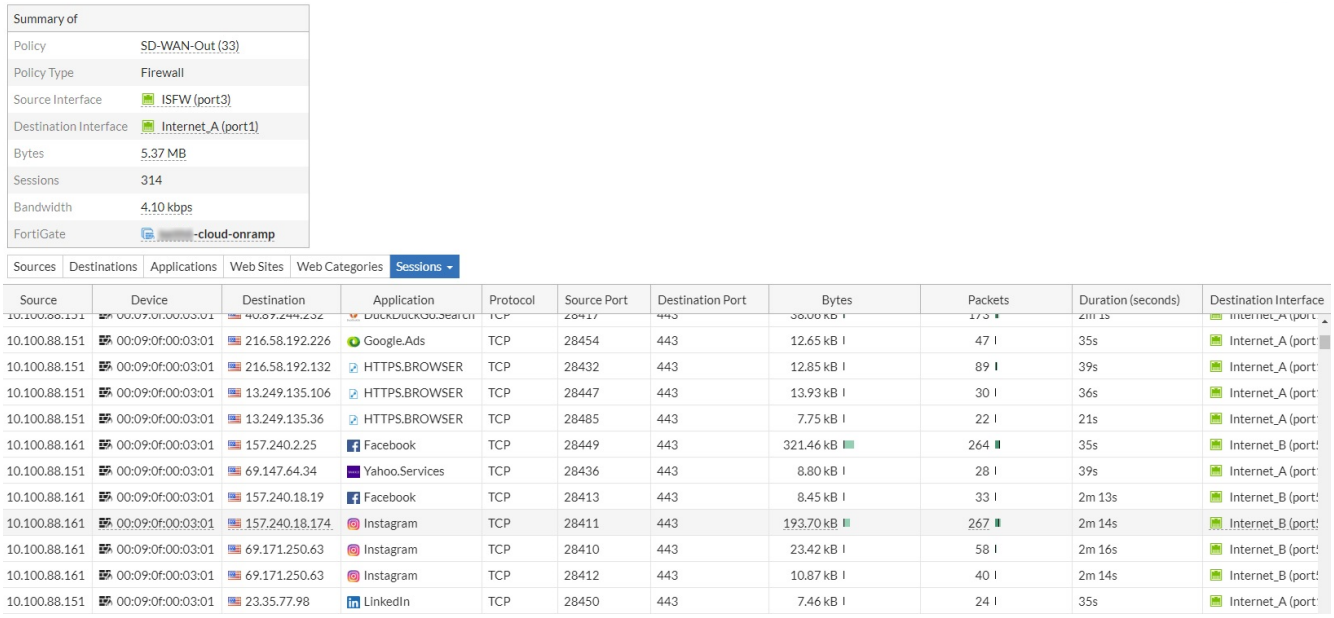


Summary of	
Policy	SD-WAN-Out (33)
Policy Type	Firewall
Source Interface	ISFW (port3)
Destination Interface	Internet_A (port1)
Bytes	5.37 MB
Sessions	314
Bandwidth	4.10 kbps
FortiGate	[redacted]-cloud-onramp

Sources | Destinations | Applications | Web Sites | Web Categories | Sessions

Source	Device	Destination	Application	Protocol	Source Port	Destination Port	Bytes	Packets	Duration (seconds)	Destination Interface
10.100.88.151	00:09:0f:00:03:01	216.58.192.226	Google.Ads	TCP	28454	443	12.65 kB	47	35s	Internet_A (port
10.100.88.151	00:09:0f:00:03:01	216.58.192.132	HTTPS.BROWSER	TCP	28432	443	12.85 kB	89	39s	Internet_A (port
10.100.88.151	00:09:0f:00:03:01	13.249.135.106	HTTPS.BROWSER	TCP	28447	443	13.93 kB	30	36s	Internet_A (port
10.100.88.151	00:09:0f:00:03:01	13.249.135.36	HTTPS.BROWSER	TCP	28485	443	7.75 kB	22	21s	Internet_A (port
10.100.88.161	00:09:0f:00:03:01	157.240.2.25	Facebook	TCP	28449	443	321.46 kB	264	35s	Internet_B (port
10.100.88.151	00:09:0f:00:03:01	69.147.64.34	Yahoo.Services	TCP	28436	443	8.80 kB	28	39s	Internet_A (port
10.100.88.161	00:09:0f:00:03:01	157.240.18.19	Facebook	TCP	28413	443	8.45 kB	33	2m 13s	Internet_B (port
10.100.88.161	00:09:0f:00:03:01	157.240.18.174	Instagram	TCP	28411	443	193.70 kB	267	2m 14s	Internet_B (port
10.100.88.161	00:09:0f:00:03:01	69.171.250.63	Instagram	TCP	28410	443	23.42 kB	58	2m 16s	Internet_B (port
10.100.88.161	00:09:0f:00:03:01	69.171.250.63	Instagram	TCP	28412	443	10.87 kB	40	2m 14s	Internet_B (port
10.100.88.151	00:09:0f:00:03:01	23.35.77.98	LinkedIn	TCP	28450	443	7.46 kB	24	35s	Internet_A (port

VoIP traffic leaves the preferred `VPN_B_Tunnel(Branch-HQ-B)` interface.

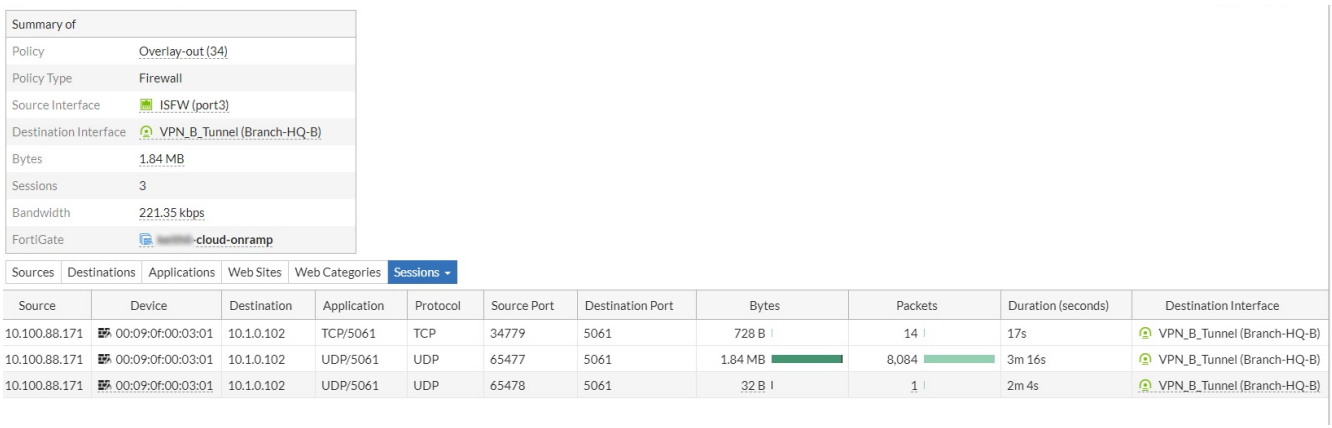

Summary of	
Policy	Overlay-out (34)
Policy Type	Firewall
Source Interface	ISFW (port3)
Destination Interface	VPN_B_Tunnel (Branch-HQ-B)
Bytes	1.84 MB
Sessions	3
Bandwidth	221.35 kbps
FortiGate	[redacted]-cloud-onramp

Sources | Destinations | Applications | Web Sites | Web Categories | Sessions

Source	Device	Destination	Application	Protocol	Source Port	Destination Port	Bytes	Packets	Duration (seconds)	Destination Interface
10.100.88.171	00:09:0f:00:03:01	10.1.0.102	TCP/5061	TCP	34779	5061	728 B	14	17s	VPN_B_Tunnel (Branch-HQ-B)
10.100.88.171	00:09:0f:00:03:01	10.1.0.102	UDP/5061	UDP	65477	5061	1.84 MB	8,084	3m 16s	VPN_B_Tunnel (Branch-HQ-B)
10.100.88.171	00:09:0f:00:03:01	10.1.0.102	UDP/5061	UDP	65478	5061	32 B	1	2m 4s	VPN_B_Tunnel (Branch-HQ-B)

Advanced configuration

The following topics provide instructions on SD-WAN advanced configuration:

- Self-originating traffic on page 510
- SDN dynamic connector addresses in SD-WAN rules on page 513
- Forward error correction on VPN overlay networks on page 516
- Using BGP tags with SD-WAN rules on page 519
- BGP multiple path support on page 522
- Controlling traffic with BGP route mapping and service rules on page 524
- Applying BGP route-map to multiple BGP neighbors on page 531
- ADVPN and shortcut paths on page 537
- DSCP matching (shaping) on page 550
- Dual VPN tunnel wizard on page 553
- SD-WAN with FGCP HA on page 556

See also Per packet distribution and tunnel aggregation on page 1211.

Self-originating traffic



This topic applies to FortiOS 6.2.6. In other versions, self-originating (local-out) traffic behaves differently.

By default, self-originating traffic, such as Syslog, FortiAnalyzer logging, FortiGuard services, remote authentication, and others, relies on routing table lookups to determine the egress interface that is used to initiate the connection. Policy routes generated by SD-WAN rules do not apply to this traffic.

For the following features, self-originating traffic can be configured to use SD-WAN rules or a specific interface:

PING

IPv4 and IPv6 pings can be configured to use SD-WAN rules.

```
execute ping-options use-sdwan {yes | no}
execute ping6-options use-sd-wan {yes | no}
```

DNS

DNS and non-management VDOM DNS traffic can use SD-WAN rules or a specific interface:

```
config system {dns | vdom-dns}
    set interface-select-method {auto | sdwan | specify}
    set interface <interface>
end
```

interface-select-method {auto | sdwan | specify}	Select the interface selection method: • `auto`: Set the outgoing interface automatically (default) • `sdwan`: Set the interface by SD-WAN or policy routing rules • `specify`: Set the interface manually.
interface <interface>	Specify the outgoing interface. This option is only available and must be configured when `interface-select-method` is `specify`.

FortiGuard

FortiGuard traffic can use SD-WAN rules or a specific interface:

```
config system fortiguard
    set interface-select-method {auto | sdwan | specify}
    set interface <interface>
end
```

RADIUS

RADIUS, and individual accounting servers, traffic can use SD-WAN rules or a specific interface:

```
config user radius
    edit <name>
        set interface-select-method {auto | sdwan | specify}
        set interface <interface>
        config accounting-server
            edit <name>
                set interface-select-method {auto | sdwan | specify}
                set interface <interface>
            next
        end
    next
end
```

LDAP

LDAP traffic can use SD-WAN rules or a specific interface:

```
config user ldap
    edit <name>
        set interface-select-method {auto | sdwan | specify}
        set interface <interface>
```

```
    next
end
```

TACACS+

TACACS+ traffic can use SD-WAN rules or a specific interface:

```
config user tacacs+
    edit <name>
        set interface-select-method {auto | sdwan | specify}
        set interface <interface>
    next
end
```

Central management

Central management traffic can use SD-WAN rules or a specific interface:

```
config system central-management
    set interface-select-method {auto | sdwan | specify}
    set interface <interface>
end
```

DHCP proxy

DHCP proxy traffic can use SD-WAN rules or a specific interface:

```
config system settings
    set dhcp-proxy-interface-select-method {auto | sdwan | specify}
    set dhcp-proxy-interface <interface>
end
```

dhcp-proxy-interface-select-method {auto | sdwan | specify}	Select the interface selection method: • `auto`: Set the outgoing interface automatically (default) • `sdwan`: Set the interface by SD-WAN or policy routing rules • `specify`: Set the interface manually.
dhcp-proxy-interface <interface>	Specify the outgoing interface. This option is only available and must be configured when `interface-select-method` is `specify`.

DHCP relay

DHCP relay traffic can use SD-WAN rules or a specific interface:

```
config system interface
    edit <interface>
        set dhcp-relay-interface-select-method {auto | sdwan | specify}
        set dhcp-relay-interface <interface>
    next
end
```

dhcp-relay-interface-select-method {auto | sdwan | specify}	Select the interface selection method: • `auto`: Set the outgoing interface automatically (default) • `sdwan`: Set the interface by SD-WAN or policy routing rules

	• `specify`: Set the interface manually.
dhcp-relay-interface <interface>	Specify the outgoing interface. This option is only available and must be configured when `interface-select-method` is `specify`.

CA and local certificate renewal with SCEP


Certificate renewal with SCEP traffic can use SD-WAN rules or a specific interface:

```
config vpn certificate setting
    set interface-select-method {auto | sdwan | specify}
    set interface <interface>
end
```

SDN dynamic connector addresses in SD-WAN rules

SDN dynamic connector addresses can be used in SD-WAN rules. FortiGate supports both public (AWS, Azure, GCP, OCI, AliCloud) and private (Kubernetes, VMware ESXi and NSX, OpenStack, ACI, Nuage) SDN connectors.

The configuration procedure for all of the supported SDN connector types is the same. This example uses an Azure public SDN connector.

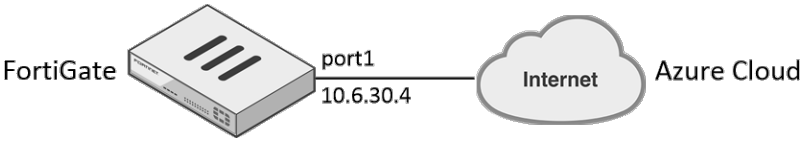

There are four steps to create and use an SDN connector address in an SD-WAN rule:

1. Configure the FortiGate IP address and network gateway so that it can reach the Internet.
2. Create an Azure SDN connector.
3. Create a firewall address to associate with the configured SDN connector.
4. Use the firewall address in an SD-WAN service rule.

To create an Azure SDN connector:

1. Go to *Security Fabric* > *Fabric Connectors*.
2. Click *Create New*.
3. In the *Public SDN* section, click *Microsoft Azure*.

4. Enter the following:


Name	azure1
Status	Enabled
Update Interval	Use Default
Server region	Global
Tenant ID	942b80cd-1b14-42a1-8dcf-4b21dece61ba
Client ID	14dbd5c5-307e-4ea4-8133-68738141feb1
Client secret	xxxxxx
Resource path	disabled

5. Click *OK*.

To create a firewall address to associate with the configured SDN connector:

1. Go to *Policy & Objects* > *Addresses*.
2. Click *Create New* > *Address*.
3. Enter the following:

Category	Address
Name	azure-address
Type	Fabric Connector Address
SDN Connector	azure1
SDN address type	Private
Filter	SecurityGroup=edsouza-centos
Interface	Any

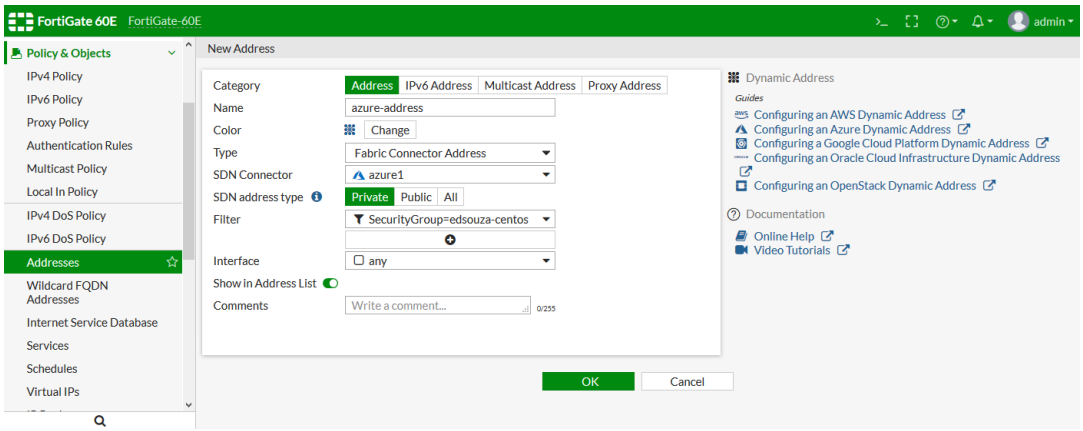

4. Click *OK*.

To use the firewall address in an SD-WAN service rule:

1. Go to *Network* > *SD-WAN Rules*.
2. Click *Create New*.
3. Set the *Name* to *Azure1*.
4. For the *Destination Address* select *azure-address*.
5. Configure the remaining settings as needed. See WAN path control on page 464 for details.
6. Click *OK*.

Diagnostics

Use the following CLI commands to check the status of and troubleshoot the connector.

To see the status of the SDN connector:

```
diagnose sys sdn status

    SDN Connector       Type        Status          Updating        Last update
    ------------------------------------------------------------------------------------------
-
    azure1              azure       connected       no              n/a
```

To debug the SDN connector to resolve the firewall address:

```
diagnose debug application azd -1
    Debug messages will be on for 30 minutes.

    ...
    azd sdn connector azure1 start updating IP addresses
    azd checking firewall address object azure-address-1, vd 0
     IP address change, new list:
      10.18.0.4
      10.18.0.12
      ...
      ...

diagnose sys virtual-wan-link service

    Service(2): Address Mode(IPV4) flags=0x0
      TOS(0x0/0x0), Protocol(0: 1->65535), Mode(manual)
      Service role: standalone
      Member sub interface:
      Members:
        1: Seq_num(1), alive, selected
      Dst address:
            10.18.0.4 - 10.18.0.4
            10.18.0.12 - 10.18.0.12
             ... ...
             ... ...
             ... ...
```

Forward error correction on VPN overlay networks

This topic shows an SD-WAN with forward error correction (FEC) on VPN overlay networks. FEC is a technique used to control and correct errors in data transmission by sending redundant data across the VPN. It uses six parameters in IPsec phase1/phase1-interface settings:

`fec-ingress`	Enable/disable Forward Error Correction for ingress IPsec traffic (default = disable).
`fec-egress`	Enable/disable Forward Error Correction for egress IPsec traffic (default = disable).
`fec-base`	The number of base Forward Error Correction packets (1 - 100, default = 20).
`fec-redundant`	The number of redundant Forward Error Correction packets (1 - 100, default = 10).
`fec-send-timeout`	The time before sending Forward Error Correction packets, in milliseconds (1 - 1000, default = 8).
`fec-receive-timeout`	The time before dropping Forward Error Correction packets, in milliseconds (1 - 1000, default = 5000).

For every `fec-base` number of sent packets, the tunnel will send `fec-redundant` number of redundant packets.




If your FortiGate is NPU capable, disable `npu-offload` in your phase1 configurations:

```
config vpn ipsec phase1-interface
    edit <name>
        set npu-offload disable
    next
end
```

Example

For example, a customer has two ISP connections, wan1 and wan2. Using these two connections, create two IPsec VPN interfaces as SD-WAN members. Configure FEC on each VPN interface to lower packet loss ratio by re-transmitting the packets using its backend algorithm.

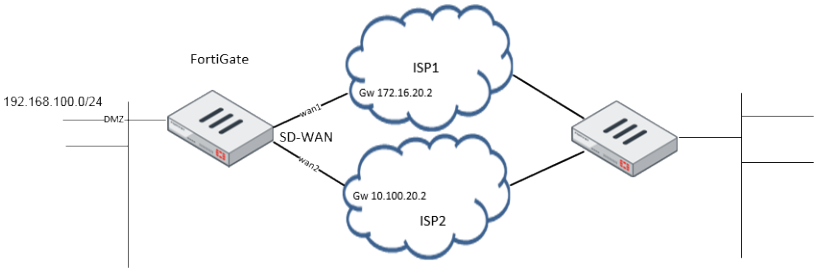

To configure IPsec VPN:

```
config vpn ipsec phase1-interface
    edit "vd1-p1"
        set interface "wan1"
        set peertype any
        set net-device disable
```

```
        set proposal aes256-sha256
        set dhgrp 14
        set remote-gw 172.16.201.2
        set psksecret ftnt1234
        set fec-egress enable
        set fec-send-timeout 8
        set fec-base 20
        set fec-redundant 10
        set fec-ingress enable
        set fec-receive-timeout 5000
    next
    edit "vd1-p2"
        set interface "wan2"
        set peertype any
        set net-device disable
        set proposal aes256-sha256
        set dhgrp 14
        set remote-gw 172.16.202.2
        set psksecret ftnt1234
        set fec-egress enable
        set fec-send-timeout 8
        set fec-base 20
        set fec-redundant 10
        set fec-ingress enable
        set fec-receive-timeout 5000
    next
end
config vpn ipsec phase2-interface
    edit "vd1-p1"
        set phase1name "vd1-p1"
    next
    edit "vd1-p2"
        set phase1name "vd1-p2"
    next
end
```

To configure the interface:

```
config system interface
    edit "vd1-p1"
        set ip 172.16.211.1 255.255.255.255
        set remote-ip 172.16.211.2 255.255.255.255
    next
    edit "vd1-p2"
        set ip 172.16.212.1 255.255.255.255
        set remote-ip 172.16.212.2 255.255.255.255
    next
end
```

To configure the firewall policy:

```
config firewall policy
    edit 1
        set name "1"
        set srcintf "dmz"
        set dstintf ""virtual-wan-link""
```

```
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end
```

To configure SD-WAN:

```
config system virtual-wan-link
    set status enable
    config members
        edit 1
            set interface "vd1-p1"
            set gateway 172.16.211.2
        next
        edit 1
            set interface "vd2-p2"
            set gateway 172.16.212.2
        next
    end
end
```


To use the diagnose command to check VPN FEC status:

```
# diagnose vpn tunnel list
list all ipsec tunnel in vd 0
------------------------------------------------------
name=vd1 ver=1 serial=1 172.16.200.1:0->172.16.200.2:0
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/3600 options[0e10]=create_dev
frag-rfc fec-egress fec-ingress  accept_traffic=1

proxyid_num=1 child_num=0 refcnt=11 ilast=8 olast=8 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
fec-egress: base=20 redundant=10 remote_port=50000     <<<<<<<<<<<<<<<<<<<<<<
fec-ingress: base=20 redundant=10                      <<<<<<<<<<<<<<<<<<<<<<
proxyid=demo proto=0 sa=1 ref=2 serial=1
  src: 0:10.1.100.0/255.255.255.0:0
  dst: 0:173.1.1.0/255.255.255.0:0
  SA:  ref=3 options=10226 type=00 soft=0 mtu=1390 expire=42897/0B replaywin=2048
       seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42899/43200
  dec: spi=181f4f81 esp=aes key=16 6e8fedf2a77691ffdbf3270484cb2555
       ah=sha1 key=20 f92bcf841239d15d30b36b695f78eaef3fad05c4
  enc: spi=0ce10190 esp=aes key=16 2d684fb19cbae533249c8b5683937329
       ah=sha1 key=20 ba7333f89cd34cf75966bd9ffa72030115919213
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
```

Using BGP tags with SD-WAN rules

SD-WAN rules can use Border Gateway Protocol (BGP) learned routes as dynamic destinations.

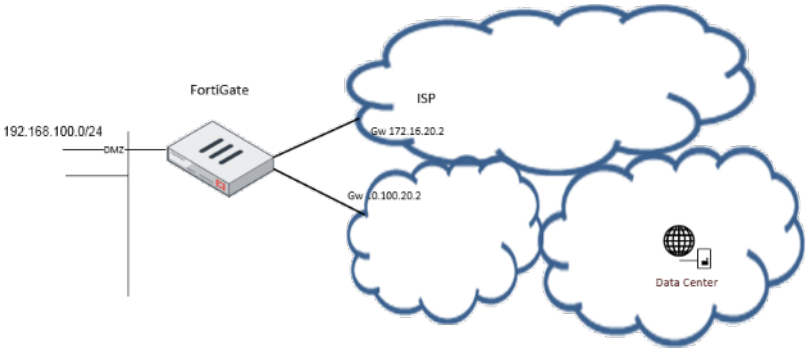

In this example, a customer has two ISP connections, wan1 and wan2. wan1 is used primarily for direct access to internet applications, and wan2 is used primarily for traffic to the customer's data center.

The customer could create an SD-WAN rule using the data center's IP address range as the destination to force that traffic to use wan2, but the data center's IP range is not static. Instead, a BGP tag can be used.

For this example, wan2's BGP neighbor advertises the data center's network range with a community number of 30:5.

This example assumes that SD-WAN is enable on the FortiGate, wan1 and wan2 are added as SD-WAN members, and a policy and static route have been created. See Configuring the SD-WAN interface on page 453 for details.

To configure BGP tags with SD-WAN rules:

1. Configure the community list:

```
config router community-list
    edit "30:5"
        config rule
            edit 1
                set action permit
                set match "30:5"
            next
        end
    next
end
```

2. Configure the route map:

```
config router route-map
    edit "comm1"
        config rule
            edit 1
                set match-community "30:5"
                set set-route-tag 15
            next
        end
    next
end
```

3. Configure BGP:

```
config router bgp
    set as xxxxx
    set router-id xxxx
    config neighbor
        edit "10.100.20.2"
            set soft-reconfiguration enable
            set remote-as xxxxx
            set route-map-in "comm1"
        next
    end
end
```

4. Configure a firewall policy:

```
config firewall policy
    edit 1
        set name "1"
        set srcintf "dmz"
        set dstintf ""virtual-wan-link""
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end
```

5. Edit the SD-WAN configuration:

```
config system virtual-wan-link
    set status enable
    config members
        edit 1
            set interface "wan1"
            set gateway 172.16.20.2
        next
        edit 2
            set interface "wan2"
        next
    end
    config service
        edit 1
            set name "DataCenter"
            set mode manual
            set route-tag 15
            set priority-members 2
        next
    end
end
```

Troubleshooting BGP tags with SD-WAN rules

Check the network community

Use the `get router info bgp network` command to check the network community:

```
# get router info bgp network
BGP table version is 5, local router ID is 1.1.1.1
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal,
              S Stale
Origin codes: i - IGP, e - EGP, ? - incomplete

   Network Next Hop Metric LocPrf Weight RouteTag Path
*> 0.0.0.0/0 10.100.1.5 32768 0 ?
*> 1.1.1.1/32 0.0.0.0 32768 0 ?
*> 10.1.100.0/24 172.16.203.2 32768 0 ?
*> 10.100.1.0/30 0.0.0.0 32768 0 ?
*> 10.100.1.4/30 0.0.0.0 32768 0 ?
*> 10.100.1.248/29 0.0.0.0 32768 0 ?
*> 10.100.10.0/24 10.100.1.5 202 10000 15 20 e
*> 172.16.200.0/24 0.0.0.0 32768 0 ?
*> 172.16.200.200/32
                    0.0.0.0 32768 0 ?
*> 172.16.201.0/24 172.16.200.4 32768 0 ?
*> 172.16.203.0/24 0.0.0.0 32768 0 ?
*> 172.16.204.0/24 172.16.200.4 32768 0 ?
*> 172.16.205.0/24 0.0.0.0 32768 0 ?
*> 172.16.206.0/24 0.0.0.0 32768 0 ?
*> 172.16.207.1/32 0.0.0.0 32768 0 ?
*> 172.16.207.2/32 0.0.0.0 32768 0 ?
*> 172.16.212.1/32 0.0.0.0 32768 0 ?
*> 172.16.212.2/32 0.0.0.0 32768 0 ?
*> 172.17.200.200/32
                    0.0.0.0 32768 0 ?
*> 172.27.1.0/24 0.0.0.0 32768 0 ?
*> 172.27.2.0/24 0.0.0.0 32768 0 ?
*> 172.27.5.0/24 0.0.0.0 32768 0 ?
*> 172.27.6.0/24 0.0.0.0 32768 0 ?
*> 172.27.7.0/24 0.0.0.0 32768 0 ?
*> 172.27.8.0/24 0.0.0.0 32768 0 ?
*> 172.29.1.0/24 0.0.0.0 32768 0 ?
*> 172.29.2.0/24 0.0.0.0 32768 0 ?
*> 192.168.1.0 0.0.0.0 32768 0 ?

Total number of prefixes 28

# get router info bgp network 10.100.11.0
BGP routing table entry for 10.100.10.0/24
Paths: (2 available, best 1, table Default-IP-Routing-Table)
  Advertised to non peer-group peers:
   172.10.22.2
  20
    10.100.20.2 from 10.100.20.2 (6.6.6.6)
      Origin EGP metric 200, localpref 100, weight 10000, valid, external, best
      Community: 30:5 <<<<==========================
      Last update: Wen Mar 20 18:45:17 2019
```

Check dynamic BGP addresses

Use the `get router info route-map-address` command to check dynamic BGP addresses:

```
# get router info route-map-address
Extend-tag: 15, interface(wan2:16)
        10.100.11.0/255.255.255.0
```

Check dynamic BGP addresses used in policy routes

Use the `diagnose firewall proute list` command to check dynamic BGP addresses used in policy routes:


```
# diagnose firewall proute list
list route policy info(vf=root):

id=4278779905 vwl_service=1(DataCenter) flags=0x0 tos=0x00 tos_mask=0x00 protocol=0
sport=0:65535 iif=0 dport=1-65535 oif=16
source wildcard(1): 0.0.0.0/0.0.0.0
destination wildcard(1): 10.100.11.0/255.255.255.0
```

BGP multiple path support

BGP supports multiple paths, allowing an ADVPN to advertise multiple paths. This allows BGP to extend and keep additional network paths according to RFC 7911.

In this example, Spoke1 and Spoke2 each have four VPN tunnels that are connected to the Hub with ADVPN. The Spoke-Hub has established four BGP neighbors on all four tunnels.

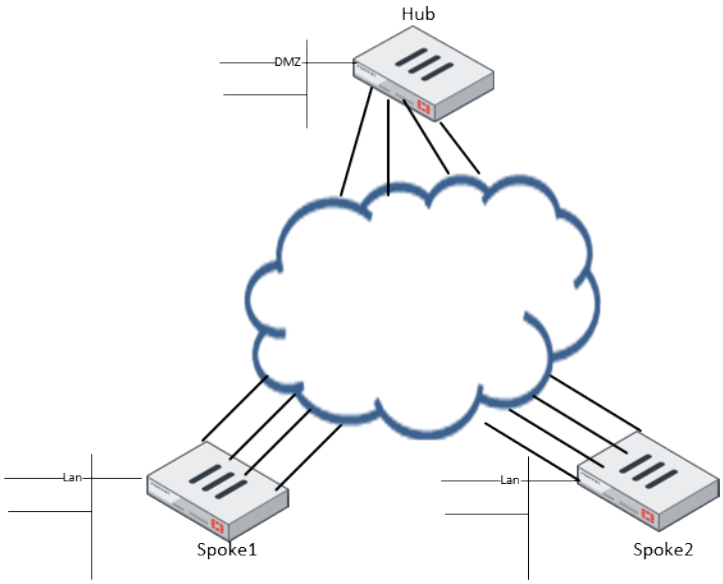

Spoke 1 and Spoke 2 can learn four different routes from each other.

To configure the hub:

```
config router bgp
    set as 65505
    set router-id 11.11.11.11
    set ibgp-multipath enable
    set additional-path enable
    set additional-path-select 4
    config neighbor-group
```

```
        edit "gr1"
            set capability-default-originate enable
            set remote-as 65505
            set additional-path both
            set adv-additional-path 4
            set route-reflector-client enable
        next
    end
    config neighbor-range
        edit 1
            set prefix 10.10.0.0 255.255.0.0
            set neighbor-group "gr1"
        next
    end
    config network
        edit 12
            set prefix 11.11.11.11 255.255.255.255
        next
    end
end
```

To configure a spoke:

```
config router bgp
    set as 65505
    set router-id 2.2.2.2
    set ibgp-multipath enable
    set additional-path enable
    set additional-path-select 4
    config neighbor
        edit "10.10.100.254"
            set soft-reconfiguration enable
            set remote-as 65505
            set additional-path both
            set adv-additional-path 4
        next
        edit "10.10.200.254"
            set soft-reconfiguration enable
            set remote-as 65505
            set additional-path both
            set adv-additional-path 4
        next
        edit "10.10.203.254"
            set soft-reconfiguration enable
            set remote-as 65505
            set additional-path both
            set adv-additional-path 4
        next
        edit "10.10.204.254"
            set soft-reconfiguration enable
            set remote-as 65505
            set additional-path both
            set adv-additional-path 4
        next
    end
    config network
```

```
        edit 3
            set prefix 22.1.1.0 255.255.255.0
        next
    end
end
```

To view the BGP routing table on a spoke:

```
Spoke1 # get router info routing-table bgp
    Routing table for VRF=0
    B*      0.0.0.0/0 [200/0] via 10.10.200.254, vd2-2, 03:57:26
        [200/0] via 10.10.203.254, vd2-3, 03:57:26
        [200/0] via 10.10.204.254, vd2-4, 03:57:26
        [200/0] via 10.10.100.254, vd2-1, 03:57:26
    B       1.1.1.1/32 [200/0] via 11.1.1.1 (recursive via 12.1.1.1), 03:57:51
        [200/0] via 11.1.1.1 (recursive via 12.1.1.1), 03:57:51
        [200/0] via 11.1.1.1 (recursive via 12.1.1.1), 03:57:51
        [200/0] via 11.1.1.1 (recursive via 12.1.1.1), 03:57:51
    B       11.11.11.11/32 [200/0] via 10.10.200.254, vd2-2, 03:57:51
        [200/0] via 10.10.203.254, vd2-3, 03:57:51
        [200/0] via 10.10.204.254, vd2-4, 03:57:51
        [200/0] via 10.10.100.254, vd2-1, 03:57:51
    B       33.1.1.0/24 [200/0] via 10.10.204.3, vd2-4, 03:57:26
        [200/0] via 10.10.203.3, vd2-3, 03:57:26
        [200/0] via 10.10.200.3, vd2-2, 03:57:26
        [200/0] via 10.10.100.3, vd2-1, 03:57:26
        [200/0] via 10.10.204.3, vd2-4, 03:57:26
        [200/0] via 10.10.203.3, vd2-3, 03:57:26
        [200/0] via 10.10.200.3, vd2-2, 03:57:26
        [200/0] via 10.10.100.3, vd2-1, 03:57:26
        [200/0] via 10.10.204.3, vd2-4, 03:57:26
        [200/0] via 10.10.203.3, vd2-3, 03:57:26
        [200/0] via 10.10.200.3, vd2-2, 03:57:26
        [200/0] via 10.10.100.3, vd2-1, 03:57:26
        [200/0] via 10.10.204.3, vd2-4, 03:57:26
        [200/0] via 10.10.203.3, vd2-3, 03:57:26
        [200/0] via 10.10.200.3, vd2-2, 03:57:26
        [200/0] via 10.10.100.3, vd2-1, 03:57:26
```

Controlling traffic with BGP route mapping and service rules


SD-WAN allows you to select different outbound WAN links based on performance SLAs. It is important that BGP neighbors are aware of these settings, and changes to them.

BGP can adapt to changes in SD-WAN link SLAs in the following ways:

- Applying different route-maps based on the SD-WAN's health checks. For example, different BGP community strings can be advertised to BGP neighbors when SLAs are not met.
- Traffic can be selectively forwarded based on the active BGP neighbor. If the SD-WAN service's role matches the active SD-WAN neighbor, the service is enabled. If there is no match, then the service is disabled.

Example

In this topology, a branch FortiGate has two SD-WAN gateways serving as the primary and secondary gateways. The gateways reside in different datacenters, but have a full mesh network between them.

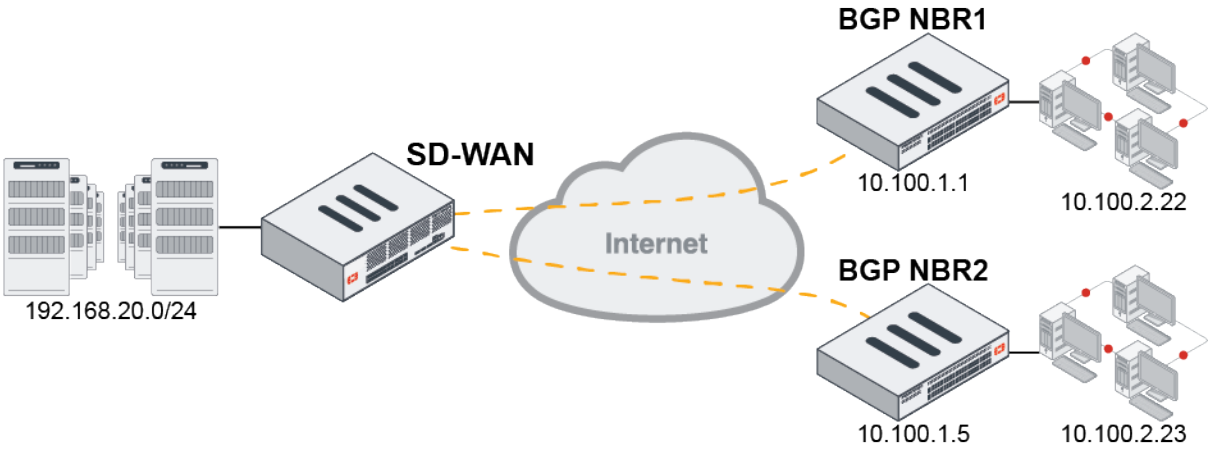

This example shows how route-maps and service rules are selected based on performance SLAs and the member that is currently active. Traffic flows through the primary gateway unless the neighbor's health check is outside of its SLA. If that happens, traffic routes to the secondary gateway.

BGP NBR1 is the primary neighbor and BGP NBR2 is the secondary neighbor.

The branch FortiGate's wan1 and wan2 interfaces are members of the SD-WAN. When the SD-WAN neighbor status is primary, it will advertise community *20:1* to BGP NBR1 and *20:5* to BGP NBR2. When the SD-WAN neighbor status is secondary, it will advertise *20:5* to BGP NBR1 and *20:2* to BGP NBR2.

Only one of the primary or secondary neighbors can be active at one time. The SD-WAN neighbor status is used to decide which neighbor is selected:

- **Primary**: The primary neighbor takes precedence if its SLAs are met.
- **Secondary**: If the primary neighbor's SLAs are not met, the secondary neighbor becomes active if its SLAs are met.
- **Standalone**: If neither the primary or secondary neighbor's SLAs are met, the SD-WAN neighbor status becomes standalone.

Route map

SD-WAN is configured to let BGP advertise different communities when the SLA status changes. When the SLA is missed, it triggers BGP to advertise a different community to its BGP neighbor based on its route-map. The BGP neighbors can use the received community string to select the best path to reach the branch.

To configure BGP route-maps and neighbors:

1. Configure an access for the routes to be matched:

```
config router access-list
    edit "net192"
        config rule
            edit 1
                set prefix 192.168.20.0 255.255.255.0
            next
```

```
        end
    next
end
```

2. Configure the primary neighbor's preferred route-map:

```
config router route-map
    edit "comm1"
        config rule
            edit 1
                set match-ip-address "net192"
                set set-community "20:1"
            next
        end
    next
end
```

3. Configure the secondary neighbor's preferred route-map:

```
config router route-map
    edit "comm2"
        config rule
            edit 1
                set match-ip-address "net192"
                set set-community "20:2"
            next
        end
    next
end
```

4. Configure the failed route-map:

```
config router route-map
    edit "comm5"
        config rule
            edit 1
                set match-ip-address "net192"
                set set-community "20:5"
            next
        end
    next
end
```

5. Configure BGP neighbors:

```
config router bgp
    set as 65412
    set router-id 1.1.1.1
    set ibgp-multipath enable
    config neighbor
        edit "10.100.1.1"
            set soft-reconfiguration enable
            set remote-as 20
            set route-map-out "comm5"
            set route-map-out-preferable "comm1"
        next
        edit "10.100.1.5"
            set soft-reconfiguration enable
            set remote-as 20
```

```
            set route-map-out "comm5"
            set route-map-out-preferable "comm2"
        next
    end
end
```

When SLAs are met, `route-map-out-preferable` is used. When SLAs are missed, `route-map-out` is used.

To configure SD-WAN:

1. Configure the SD-WAN members:

```
config system virtual-wan-link
    set status enable
    config members
        edit 1
            set interface "port1"
        next
        edit 2
            set interface "port2"
        next
    end
end
```

2. Configure health checks for each member:

```
config system virtual-wan-link
    config health-check
        edit "ping"
            set server "10.100.2.22"
            set members 1
            config sla
                edit 1
                    set link-cost-factor packet-loss
                    set packetloss-threshold 1
                next
            end
        next
        edit "ping2"
            set server "10.100.2.23"
            set members 2
            config sla
                edit 1
                    set link-cost-factor packet-loss
                    set packetloss-threshold 1
                next
            end
        next
    end
end
```

3. Configure the SD-WAN neighbors and assign them a role and the health checks used to determine if the neighbor meets the SLA:
   SD-WAN neighbors can only be configured in the CLI.

```
config system virtual-wan-link
    config neighbor
        edit "10.100.1.1"
```

```
            set member 1
            set role primary
            set health-check "ping"
            set sla-id 1
        next
        edit "10.100.1.5"
            set member 2
            set role secondary
            set health-check "ping2"
            set sla-id 1
        next
    end
end
```

Service rules

Create SD-WAN service rules to direct traffic to the primary neighbor when its SLAs are met, and to the secondary neighbor when the primary neighbor's SLAs are missed.

To configure the SD-WAN service rules:

```
config system virtual-wan-link
    config service
        edit 1
            set name "Primary-Out"
            set role primary
            set dst "all"
            set src "all"
            set priority-members 1
        next
        edit 2
            set name "Secondary-Out"
            set role secondary
            set dst "all"
            set src "all"
            set priority-members 2
        next
    end
end
```



If neither the primary nor secondary neighbors are active, the SD-WAN neighbor status becomes standalone. Only service rules with standalone-action enabled will continue to pass traffic. This option is disabled by default.

Verification

To verify when the primary neighbor is passing traffic:

1. Verify the health check status:

```
FortiGate-Branch # diagnose sys virtual-wan-link health-check
Health Check(ping):
Seq(1 port1): state(alive), packet-loss(0.000%) latency(0.569), jitter(0.061) sla_
```

```
map=0x1
Health Check(ping2):
Seq(2 port2): state(alive), packet-loss(0.000%) latency(3.916), jitter(2.373) sla_
map=0x1
```

2. Verify SD-WAN neighbor status:

```
FortiGate-Branch # diagnose sys virtual-wan-link neighbor
SD-WAN neighbor status: hold-down(disable), hold-down-time(0), hold_boot_time(0)
        Selected role(primary) last_secondary_select_time/current_time in seconds 0/572
Neighbor(10.100.1.1): member(1) role(primary)
        Health-check(ping:1)  sla-pass selected alive
Neighbor(10.100.1.5): member(2) role(secondary)
        Health-check(ping2:1)  sla-pass alive
```

3. Verify service rules status:

```
FortiGate-Branch # diagnose sys virtual-wan-link service

Service(1): Address Mode(IPV4) flags=0x0
  Gen(3), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(manual)
  Service role: primary
  Members:
    1: Seq_num(1 port1), alive, selected
  Src address:
        0.0.0.0-255.255.255.255

  Dst address:
        0.0.0.0-255.255.255.255

Service(2): Address Mode(IPV4) flags=0x0
  Gen(6), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(manual)
  Service role: secondary, disabled by unselected.
  Members:
    1: Seq_num(2 port2), alive, selected
  Src address:
        0.0.0.0-255.255.255.255

  Dst address:
        0.0.0.0-255.255.255.255
```

4. Verify neighbor routers:
   a. Primary neighbor router:

```
FGT-NBR1 # get router info bgp network 192.168.20.0
BGP routing table entry for 192.168.20.0/24
Paths: (1 available, best #1, table Default-IP-Routing-Table)
  Not advertised to any peer
  64512
    10.100.1.2 from 10.100.1.2 (192.168.122.98)
      Origin IGP metric 0, localpref 100, valid, external, best
      Community: 20:1
      Last update: Thu Apr 30 13:41:40 2020
```

   b. Secondary neighbor router:

```
FGT-NBR2 # get router info bgp network 192.168.20.0
VRF 0 BGP routing table entry for 192.168.20.0/24
Paths: (1 available, best #1, table Default-IP-Routing-Table)
```

```
      Not advertised to any peer
      Original VRF 0
      64512
        10.100.1.6 from 10.100.1.6 (192.168.122.98)
          Origin IGP metric 0, localpref 100, valid, external, best
          Community: 20:5
          Last update: Thu Apr 30 13:41:39 2020
```

To verify when the secondary neighbor is passing traffic:

1. Verify the health check status:

```
FortiGate-Branch # diagnose sys virtual-wan-link health-check
Health Check(ping):
Seq(1 port1): state(dead), packet-loss(54.000%) sla_map=0x0
Health Check(ping2):
Seq(2 port2): state(alive), packet-loss(0.000%) latency(4.339), jitter(3.701) sla_
map=0x1
```

2. Verify SD-WAN neighbor status:

```
FortiGate-Branch # diagnose sys virtual-wan-link neighbor
SD-WAN neighbor status: hold-down(disable), hold-down-time(0), hold_boot_time(0)
        Selected role(secondary) last_secondary_select_time/current_time in seconds
936/936
Neighbor(10.100.1.1): member(1) role(primary)
        Health-check(ping:1)  sla-fail dead
Neighbor(10.100.1.5): member(2) role(secondary)
        Health-check(ping2:1)  sla-pass selected alive
```

3. Verify service rules status:

```
FortiGate-Branch # diagnose sys virtual-wan-link service

Service(1): Address Mode(IPV4) flags=0x0
  Gen(4), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(manual)
  Service role: primary, disabled by unselected.
  Members:
    1: Seq_num(1 port1), alive, selected
  Src address:
        0.0.0.0-255.255.255.255

  Dst address:
        0.0.0.0-255.255.255.255

Service(2): Address Mode(IPV4) flags=0x0
  Gen(7), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(manual)
  Service role: secondary
  Members:
    1: Seq_num(2 port2), alive, selected
  Src address:
        0.0.0.0-255.255.255.255

  Dst address:
        0.0.0.0-255.255.255.255
```

4. Verify neighbor routers:
   a. Primary neighbor router:

```
FGT-NBR1 # get router info bgp network 192.168.20.0
BGP routing table entry for 192.168.20.0/24
Paths: (1 available, best #1, table Default-IP-Routing-Table)
  Not advertised to any peer
  64512
    10.100.1.2 from 10.100.1.2 (192.168.122.98)
      Origin IGP metric 0, localpref 100, valid, external, best
      Community: 20:5
      Last update: Thu Apr 30 15:41:58 2020
```


   b. Secondary neighbor router:

```
FGT-NBR2 # get router info bgp network 192.168.20.0
VRF 0 BGP routing table entry for 192.168.20.0/24
Paths: (1 available, best #1, table Default-IP-Routing-Table)
  Not advertised to any peer
  Original VRF 0
  64512
    10.100.1.6 from 10.100.1.6 (192.168.122.98)
      Origin IGP metric 0, localpref 100, valid, external, best
      Community: 20:2
      Last update: Thu Apr 30 15:42:07 2020
```

Applying BGP route-map to multiple BGP neighbors

Controlling traffic with BGP route mapping and service rules explained how BGP can apply different route-maps to the primary and secondary SD-WAN neighbors based on SLA health checks.

In this example, SD-WAN neighbors that are not bound to primary and secondary roles are configured.

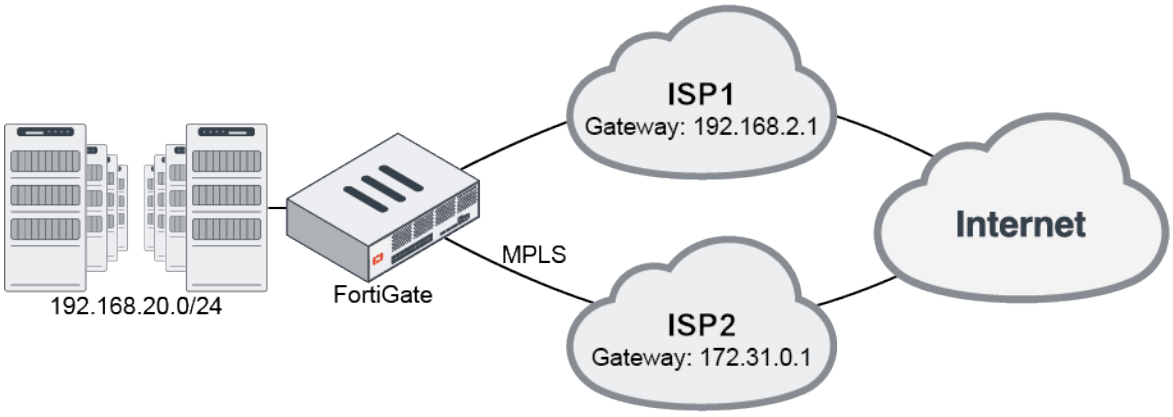

The FortiGate has multiple SD-WAN links and has formed BGP neighbors with both ISPs.

ISP1 is used primarily for outbound traffic, and has an SD-WAN service rule using the lowest cost algorithm applied to it. When SLAs for ISP1 are not met, it will fail over to the MPLS line.

Inbound traffic is allowed by both WAN links, with each WAN advertising a community string when SLAs are met. When SLAs are not met, the WAN links advertise a different community string.

This example uses two SD-WAN links. The topology can be expanded to include more links as needed.

To configure BGP route-maps and neighbors:

1. Configure an access list for routes to be matched:

```
config router access-list
    edit "net192"
        config rule
            edit 1
                set prefix 192.168.20.0 255.255.255.0
            next
        end
    next
end
```

2. Configure route-maps for neighbor ISP1:

```
config router route-map
    edit "comm1"
        config rule
            edit 1
                set match-ip-address "net192"
                set set-community "64511:1"
            next
        end
    next
    edit "comm-fail1"
        config rule
            edit 1
                set match-ip-address "net192"
                set set-community "64511:5"
            next
        end
    next
end
```

3. Configure route-maps for neighbor ISP2:

```
config router route-map
    edit "comm2"
        config rule
            edit 1
                set match-ip-address "net192"
                set set-community "64522:1"
            next
        end
    next
    edit "comm-fail2"
        config rule
            edit 1
                set match-ip-address "net192"
                set set-community "64522:5"
            next
        end
    next
end
```

4. Configure the BGP neighbors:

```
config router bgp
    set as 64512
    set keepalive-timer 1
    set holdtime-timer 3
    config neighbor
        edit "192.168.2.1"
            set soft-reconfiguration enable
            set remote-as 64511
            set route-map-out "comm-fail1"
            set route-map-out-preferable "comm1"
        next
        edit "172.31.0.1"
            set soft-reconfiguration enable
            set remote-as 64522
            set route-map-out "comm-fail2"
            set route-map-out-preferable "comm2"
        next
    end
    config network
        edit 1
            set prefix 192.168.20.0 255.255.255.0
        next
    end
end
```

When SLAs are met, `route-map-out-preferable` is used. When SLAs are missed, `route-map-out` is used.

To configure SD-WAN:

1. Configure the SD-WAN members:

```
config system virtual-wan-link
    set status enable
    config members
        edit 1
            set interface "port1"
                  set gateway 192.168.2.1
        next
        edit 2
            set interface "MPLS"
            set cost 20
        next
    end
end
```

2. Configure the health checks that must be met:

```
config system virtual-wan-link
    config health-check
        edit "pingserver"
            set server "8.8.8.8"
            set members 2 1
            config sla
                edit 1
                    set link-cost-factor packet-loss
                    set packetloss-threshold 2
```

```
                next
            end
        next
    end
end
```

3. Configure the SD-WAN neighbors and assign them a role and the health checks used to determine if the neighbor meets the SLA:
   When no role is defined, the default role, `standalone`, is used.

```
config system virtual-wan-link
    config neighbor
        edit "192.168.2.1"
            set member 1
            set health-check "pingserver"
            set sla-id 1
        next
        edit "172.31.0.1"
            set member 2
            set health-check "pingserver"
            set sla-id 1
        next
    end
end
```

Service rules

Create SD-WAN service rules to direct traffic to the SD-WAN links based on the lowest cost algorithm The same SLA health check and criteria that are used for the SD-WAN neighbor are used for this SD-WAN service rule.

When no roles are defined in the service rule, the default role, `standalone`, is used.

To configure the SD-WAN service rule:

```
config system virtual-wan-link
    config service
        edit 1
            set name "OutboundAll"
            set mode sla
            set dst "all"
            set src "all"
            config sla
                edit "pingserver"
                    set id 1
                next
            end
            set priority-members 1 2
        next
    end
end
```

Verification

To verify that when both SLAs are met, port1 is selected due to its lower cost:

1. Verify the health check status:

```
FortiGate-Branch # diagnose sys virtual-wan-link health-check
Health Check(pingserver):
Seq(2 MPLS): state(alive), packet-loss(0.000%) latency(24.709), jitter(14.996) sla_
map=0x1
Seq(1 port1): state(alive), packet-loss(0.000%) latency(28.771), jitter(14.840) sla_
map=0x1
```

2. Verify SD-WAN neighbor status:

```
FortiGate-Branch # diagnose sys virtual-wan-link neighbor
Neighbor(192.168.2.1): member(1) role(standalone)
        Health-check(pingserver:1)  sla-pass selected alive
Neighbor(172.31.0.1): member(2) role(standalone)
        Health-check(pingserver:1)  sla-pass selected alive
```

3. Verify service rules status:
   Because the service role is `standalone`, it matches both neighbors. The mode (SLA) determines that port1 is lower cost.

```
FortiGate-Branch # diagnose sys virtual-wan-link service

Service(1): Address Mode(IPV4) flags=0x0
  Gen(1), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(sla), sla-compare-order
  Service role: standalone
  Members:
    1: Seq_num(1 port1), alive, sla(0x1), cfg_order(0), cost(0), selected
    2: Seq_num(2 MPLS), alive, sla(0x1), cfg_order(1), cost(20), selected
  Src address:
        0.0.0.0-255.255.255.255

  Dst address:
        0.0.0.0-255.255.255.255
```

4. Verify neighbor routers:
   a. Primary neighbor router:

```
FGT-NBR1 # get router info bgp network 192.168.20.0
BGP routing table entry for 192.168.20.0/24
Paths: (1 available, best #1, table Default-IP-Routing-Table)
  Not advertised to any peer
  64512
    192.168.2.5 from 192.168.2.5 (192.168.122.98)
      Origin IGP metric 0, localpref 100, valid, external, best
      Community: 64511:1
      Last update: Thu Apr 30 23:59:05 2020
```

   b. Secondary neighbor router:

```
FGT-NBR2 # get router info bgp network 192.168.20.0
VRF 0 BGP routing table entry for 192.168.20.0/24
Paths: (1 available, best #1, table Default-IP-Routing-Table)
  Not advertised to any peer
  Original VRF 0
```

```
64512
  172.31.0.2 from 172.31.0.2 (192.168.122.98)
    Origin IGP metric 0, localpref 100, valid, external, best
    Community: 64522:1
    Last update: Fri May  1 00:11:28 2020
```

To verify that when neighbor ISP1 misses SLAs, MPLS is selected and BGP advertises a different community string for ISP1:

1. Verify the health check status:

```
FortiGate-Branch # diagnose sys virtual-wan-link health-check
Health Check(pingserver):
Seq(2 MPLS): state(alive), packet-loss(0.000%) latency(25.637), jitter(17.820) sla_
map=0x1
Seq(1 port1): state(dead), packet-loss(16.000%) sla_map=0x0
```

2. Verify SD-WAN neighbor status:

```
FortiGate-Branch # diagnose sys virtual-wan-link neighbor
Neighbor(192.168.2.1): member(1) role(standalone)
        Health-check(pingserver:1)  sla-fail dead
Neighbor(172.31.0.1): member(2) role(standalone)
        Health-check(pingserver:1)  sla-pass selected alive
```

3. Verify service rules status:
   As SLA failed for neighbor ISP1, MPLS is preferred.

```
FortiGate-Branch # diagnose sys virtual-wan-link service

Service(1): Address Mode(IPV4) flags=0x0
  Gen(3), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(sla), sla-compare-order
  Service role: standalone
  Members:
    1: Seq_num(2 MPLS), alive, sla(0x1), cfg_order(1), cost(20), selected
    2: Seq_num(1 port1), dead, sla(0x0), cfg_order(0), cost(0)
  Src address:
        0.0.0.0-255.255.255.255

  Dst address:
        0.0.0.0-255.255.255.255
```

4. Verify neighbor routers:
   The community received on ISP1 is updated.
   a. Primary neighbor router:

```
FGT-NBR1 # get router info bgp network 192.168.20.0
BGP routing table entry for 192.168.20.0/24
Paths: (1 available, best #1, table Default-IP-Routing-Table)
  Not advertised to any peer
  64512
    192.168.2.5 from 192.168.2.5 (192.168.122.98)
      Origin IGP metric 0, localpref 100, valid, external, best
      Community: 64511:5
      Last update: Fri May  1 00:33:26 2020
```

b. Secondary neighbor router:

```
FGT-NBR2 # get router info bgp network 192.168.20.0
VRF 0 BGP routing table entry for 192.168.20.0/24
Paths: (1 available, best #1, table Default-IP-Routing-Table)
  Not advertised to any peer
  Original VRF 0
  64512
    172.31.0.2 from 172.31.0.2 (192.168.122.98)
      Origin IGP metric 0, localpref 100, valid, external, best
      Community: 64522:1
      Last update: Fri May  1 00:22:42 2020
```

ADVPN and shortcut paths

This topic provides an example of how to use SD-WAN and ADVPN together.

ADVPN (Auto Discovery VPN) is an IPsec technology that allows a traditional hub-and-spoke VPN's spokes to establish dynamic, on-demand, direct tunnels between each other to avoid routing through the topology's hub device. The primary advantage is that it provides full meshing capabilities to a standard hub-and-spoke topology. This greatly reduces the provisioning effort for full spoke-to-spoke low delay reachability, and addresses the scalability issues associated with very large fully meshed VPN networks.

If a customer's head office and branch offices all have two or more internet connections, they can build a dual-hub ADVPN network. Combined with SD-WAN technology, the customer can load-balance traffic to other offices on multiple dynamic tunnels, control specific traffic using specific connections, or choose better performance connections dynamically.




SD-WAN load-balance mode rules (or services) do not support ADVPN members. Other modes' rules, such as SLA and priority, support ADVPN members.

This topic covers three parts:

1. Configure dual-hub ADVPN with multiple branches.
2. Configure BGP to exchange routing information among hubs and spokes.
3. Configure SD-WAN on spoke to do load-balancing and control traffic.

Configuration example

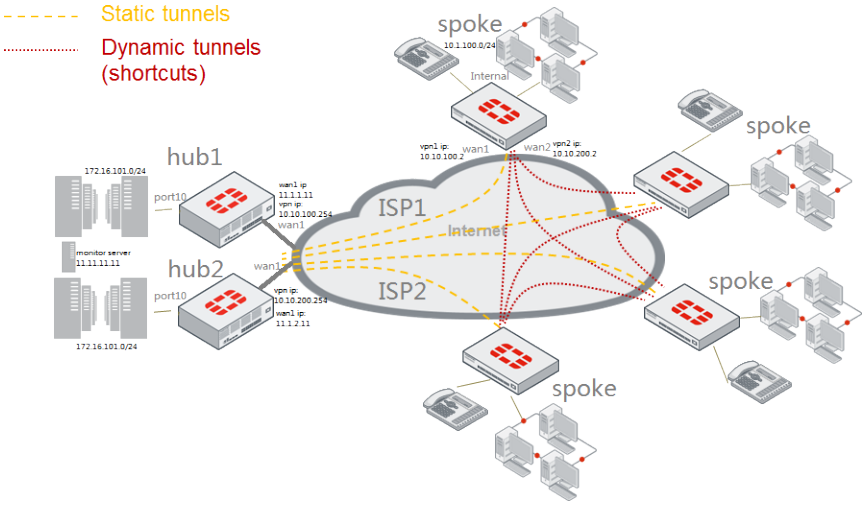

A typical ADVPN configuration with SD-WAN usually has two hubs, and each spoke connects to two ISPs and establishes VPN tunnels with both hubs.

This example shows a hub-and-spoke configuration using two hubs and one spoke:

- Hub1 and Hub2 both use wan1 to connect to the ISPs and port10 to connect to internal network.
- Spoke1 uses wan1 to connect to ISP1 and wan2 to connect to ISP2.
- wan1 sets up VPN to hub1.
- wan2 sets up VPN to hub2.

The SD-WAN is configured on the spoke. It uses the two VPN interfaces as members and two rules to control traffic to headquarters or other spokes using ADVPN VPN interfaces. You can create more rules if required.

For this example:

- Use SD-WAN member 1 (via ISP1) and its dynamic shortcuts for financial department traffic if member 1 meets SLA requirements. If it doesn't meet SLA requirements, it will use SD-WAN member 2 (via ISP2).
- Use SD-WAN member 2 (via ISP2) and its dynamic shortcuts for engineering department traffic.
- Load balance other traffic going to hubs and other spokes between these two members.
- Set up all other traffic to go with their original ISP connection. All other traffic does not go through SD-WAN.
- Set up basic network configuration to let all hubs and spokes connect to their ISPs and the Internet.

Hub internal network	172.16.101.0/24
Spoke1 internal network	10.1.100.0/24
ADVPN 1 network	10.10.100.0/24
ADVPN 2 network	10.10.200.0/24
Hub1 wan1 IP	11.1.1.11
Hub2 wan1 IP	11.1.2.11
Hub1 VPN IP	10.10.100.254
Hub2 VPN IP	10.10.200.254

Spoke1 to hub1 VPN IP	10.10.100.2
Spoke1 to hub2 VPN IP	10.10.200.2
Ping server in Headquarters	11.11.11.11
Internal subnet of spoke1	22.1.1.0/24
Internal subnet of spoke2	33.1.1.0/24
Firewall addresses	Configure hub_subnets and spoke_subnets before using in policies. These can be customized.

The GUI does not support some ADVPN related options, such as auto-discovery-sender, auto-discovery-receiver, auto-discovery-forwarder, and IBGP neighbor-group setting, so this example only provides CLI configuration commands.

Hub1 sample configuration

To configure the IPsec phase1 and phase2 interface:

```
config vpn ipsec phase1-interface
    edit "hub-phase1"
        set type dynamic
        set interface "wan1"
        set peertype any
        set net-device disable
        set proposal aes128-sha256 aes256-sha256 3des-sha256 aes128-sha1 aes256-sha1 3des-
sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-sender enable
        set tunnel-search nexthop
        set psksecret sample
        set dpd-retryinterval 5
    next
end
config vpn ipsec phase2-interface
    edit "hub-phase2"
        set phase1name "hub-phase1"
        set proposal aes128-sha1 aes256-sha1 3des-sha1 aes128-sha256 aes256-sha256 3des-
sha256
    next
end
```

To configure the VPN interface and BGP:

```
config system interface
    edit "hub-phase1"
        set ip 10.10.100.254 255.255.255.255
        set remote-ip 10.10.100.253 255.255.255.0
    next
end
config router bgp
    set as 65505
    config neighbor-group
        edit "advpn"
```

```
            set link-down-failover enable
            set remote-as 65505
            set route-reflector-client enable
        next
    end
    config neighbor-range
        edit 1
            set prefix 10.10.100.0 255.255.255.0
            set neighbor-group "advpn"
        next
    end
    config network
        edit 1
            set prefix 172.16.101.0 255.255.255.0
        next
        edit 2
            set prefix 11.11.11.0 255.255.255.0
         next
    end
end
```

To configure the firewall policy:

```
config firewall policy
    edit 1
        set name "spoke2hub"
        set srcintf "hub-phase1"
        set dstintf "port10"
        set srcaddr "spoke_subnets"
        set dstaddr "hub_subnets"
        set action accept
        set schedule "always"
        set service "ALL"
        set comments "allow traffic from spokes to headquater"
    next
    edit 2
        set name "spoke2spoke"
        set srcintf "hub-phase1"
        set dstintf "hub-phase1"
        set srcaddr "spoke_subnets"
        set dstaddr "spoke_subnets"
        set action accept
        set schedule "always"
        set service "ALL"
        set comments "allow traffic from spokes to spokes"
    next
    edit 3
        set name "internal2spoke"
        set srcintf "port10"
        set dstintf "hub-phase1"
        set srcaddr "hub_subnets"
        set dstaddr "spoke_subnets"
        set action accept
        set schedule "always"
        set service "ALL"
        set comments "allow traffic from headquater to spokes"
```

```
    next
end
```

Hub2 sample configuration

Hub2 configuration is the same as hub1 except the wan1 IP address, VPN interface IP address, and BGP neighbor-range prefix.

To configure the IPsec phase1 and phase2 interface:

```
config vpn ipsec phase1-interface
    edit "hub-phase1"
        set type dynamic
        set interface "wan1"
        set peertype any
        set net-device disable
        set proposal aes128-sha256 aes256-sha256 3des-sha256 aes128-sha1 aes256-sha1 3des-
sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-sender enable
        set tunnel-search nexthop
        set psksecret sample
        set dpd-retryinterval 5
    next
end
config vpn ipsec phase2-interface
    edit "hub-phase2"
        set phase1name "hub-phase1"
        set proposal aes128-sha1 aes256-sha1 3des-sha1 aes128-sha256 aes256-sha256 3des-
sha256
    next
end
```

To configure the VPN interface and BGP:

```
config system interface
    edit "hub-phase1"
        set ip 10.10.200.254 255.255.255.255
        set remote-ip 10.10.200.253 255.255.255.0
    next
end
config router bgp
    set as 65505
    config neighbor-group
        edit "advpn"
            set link-down-failover enable
            set remote-as 65505
            set route-reflector-client enable
        next
    end
    config neighbor-range
        edit 1
            set prefix 10.10.200.0 255.255.255.0
            set neighbor-group "advpn"
```

```
        next
    end
    config network
        edit 1
            set prefix 172.16.101.0 255.255.255.0
        next
        edit 2
            set prefix 11.11.11.0 255.255.255.0
         next
    end
end
```

To configure the firewall policy:

```
config firewall policy
    edit 1
        set name "spoke2hub"
        set srcintf "hub-phase1"
        set dstintf "port10"
        set srcaddr "spoke_subnets"
        set dstaddr "hub_subnets"
        set action accept
        set schedule "always"
        set service "ALL"
        set comments "allow traffic from spokes to headquater"
    next
    edit 2
        set name "spoke2spoke"
        set srcintf "hub-phase1"
        set dstintf "hub-phase1"
        set srcaddr "spoke_subnets"
        set dstaddr "spoke_subnets"
        set action accept
        set schedule "always"
        set service "ALL"
        set comments "allow traffic from spokes to spokes"
    next
    edit 3
        set name "internal2spoke"
        set srcintf "port10"
        set dstintf "hub-phase1"
        set srcaddr "hub_subnets"
        set dstaddr "spoke_subnets"
        set action accept
        set schedule "always"
        set service "ALL"
        set comments "allow traffic from headquater to spokes"
    next
end
```

Spoke1 sample configuration

To configure the IPsec phase1 and phase2 interface:

```
config vpn ipsec phase1-interface
    edit "spoke1-phase1"
        set interface "wan1"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-receiver enable
        set remote-gw 11.1.1.11
        set psksecret sample
        set dpd-retryinterval 5
    next
    edit "spoke1-2-phase1"
        set interface "wan2"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-receiver enable
        set remote-gw 11.1.2.11
        set psksecret sample
        set dpd-retryinterval 5
    next
end
config vpn ipsec phase2-interface
    edit "spoke1-phase2"
        set phase1name "spoke1-phase1"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm aes256gcm
chacha20poly1305
        set auto-negotiate enable
    next
    edit "spoke1-2-phase2"
        set phase1name "spoke1-2-phase1"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm aes256gcm
chacha20poly1305
        set auto-negotiate enable
    next
end
```

To configure the VPN interface and BGP:

```
config system interface
    edit "spoke1-phase1"
        set ip 10.10.100.2 255.255.255.255
        set remote-ip 10.10.100.254 255.255.255.0
    next
    edit "spoke1-2-phase1"
        set ip 10.10.200.2 255.255.255.255
        set remote-ip 10.10.200.254 255.255.255.0
    next
```

```
end
config router bgp
    set as 65505
    config neighbor
        edit "10.10.100.254"
            set advertisement-interval 1
            set link-down-failover enable
            set remote-as 65505
        next
        edit "10.10.200.254"
            set advertisement-interval 1
            set link-down-failover enable
            set remote-as 65505
        next
    end
    config network
        edit 1
            set prefix 10.1.100.0 255.255.255.0
        next
    end
end
```

To configure SD-WAN:

```
config system virtual-wan-link
    set status enable
    config members
        edit 1
            set interface "spoke1-phase1"
        next
        edit 2
            set interface "spoke1-2-phase1"
        next
    end
    config health-check
        edit "ping"
            set server "11.11.11.11"
            set members 1 2
            config sla
                edit 1
                    set latency-threshold 200
                    set jitter-threshold 50
                    set packetloss-threshold 5
                next
            end
            end
        next
    end
    config service
        edit 1
            set mode sla
            set dst "finacial-department"
            config sla
                edit "ping"
                    set id 1
                next
```

```
            end
            set priority-member 1 2
        next
        edit 2
            set member 2
            set dst "engineering-department"
        next
    end
end
```

To configure the firewall policy:

```
config firewall policy
    edit 1
        set name "outbound_advpn"
        set srcintf "internal"
        set dstintf "virtual-wan-link"
        set srcaddr "spoke_subnets"
        set dstaddr "spoke_subnets" "hub_subnets"
        set action accept
        set schedule "always"
        set service "ALL"
        set comments "allow internal traffic going out to headquater and other spokes"
    next
    edit 2
        set name "inbound_advpn"
        set srcintf "virtual-wan-link"
        set dstintf "internal"
        set srcaddr "spoke_subnets" "hub_subnets"
        set dstaddr "spoke_subnets"
        set action accept
        set schedule "always"
        set service "ALL"
        set comments "allow headquater and other spokes traffic coming in"
    next
end
```

Troubleshooting ADVPN and shortcut paths

Before spoke vs spoke shortcut VPN is established

Use the following CLI commands to check status before spoke vs spoke shortcut VPN is established.

```
# get router info bgp summary
BGP router identifier 2.2.2.2, local AS number 65505
BGP table version is 13
3 BGP AS-PATH entries
0 BGP community entries

Neighbor        V         AS MsgRcvd MsgSent   TblVer  InQ OutQ Up/Down  State/PfxRcd
10.10.100.254   4      65505    3286    3270       11    0    0 00:02:15        5
10.10.200.254   4      65505    3365    3319       12    0    0 00:02:14        5

Total number of neighbors 2
```

```
# get router info routing-table bgp

Routing table for VRF=0
B*      0.0.0.0/0 [200/0] via 10.10.200.254, spoke1-2-phase1, 00:00:58
                  [200/0] via 10.10.100.254, spoke1-phase1, 00:00:58
B       1.1.1.1/32 [200/0] via 11.1.1.1 (recursive via 12.1.1.1), 00:01:29
                   [200/0] via 11.1.1.1 (recursive via 12.1.1.1), 00:01:29
B       11.11.11.0/24 [200/0] via 10.10.200.254, spoke1-2-phase1, 00:01:29
                      [200/0] via 10.10.100.254, spoke1-phase1, 00:01:29
B       33.1.1.0/24 [200/0] via 10.10.200.3, spoke1-2-phase1, 00:00:58
                    [200/0] via 10.10.100.3, spoke1-phase1, 00:00:58
                    [200/0] via 10.10.200.3, spoke1-2-phase1, 00:00:58
                    [200/0] via 10.10.100.3, spoke1-phase1, 00:00:58
```

```
# diagnose vpn tunnel list
list all ipsec tunnel in vd 3
------------------------------------------------------
name=spoke1-phase1 ver=1 serial=5 12.1.1.2:0->11.1.1.11:0 dst_mtu=15324
bound_if=48 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu create_dev
frag-rfc  accept_traffic=1

proxyid_num=1 child_num=0 refcnt=22 ilast=0 olast=0 ad=r/2
stat: rxp=1 txp=185 rxb=16428 txb=11111
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=4
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=spoke1 proto=0 sa=1 ref=4 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=6 options=1a227 type=00 soft=0 mtu=15262 expire=42820/0B replaywin=2048
       seqno=ba esn=0 replaywin_lastseq=00000002 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42903/43200
  dec: spi=03e01a2a esp=aes key=16 56e673f0df05186aa657f55cbb631c13
       ah=sha1 key=20 b0d50597d9bed763c42469461b03da8041f87e88
  enc: spi=2ead61bc esp=aes key=16 fe0ccd4a3ec19fe6d520c437eb6b8897
       ah=sha1 key=20 e3e669bd6df41b88eadaacba66463706f26fb53a
  dec:pkts/bytes=1/16368, enc:pkts/bytes=185/22360
  npu_flag=03 npu_rgwy=11.1.1.11 npu_lgwy=12.1.1.2 npu_selid=0 dec_npuid=1 enc_npuid=1
------------------------------------------------------
name=spoke1-2-phase1 ver=1 serial=6 112.1.1.2:0->11.1.2.11:0 dst_mtu=15324
bound_if=90 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu create_dev
frag-rfc  accept_traffic=1

proxyid_num=1 child_num=0 refcnt=21 ilast=0 olast=0 ad=r/2
stat: rxp=1 txp=186 rxb=16498 txb=11163
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=74
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=spoke1-2 proto=0 sa=1 ref=4 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=6 options=1a227 type=00 soft=0 mtu=15262 expire=42818/0B replaywin=2048
       seqno=bb esn=0 replaywin_lastseq=00000002 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42901/43200
  dec: spi=03e01a2b esp=aes key=16 fe49f5042a5ad236250bf53312db1346
       ah=sha1 key=20 5dbb15c8cbc046c284bb1c6425dac2b3e15bec85
  enc: spi=2ead61bd esp=aes key=16 d6d97be52c3cccb9e88f28a9db64ac46
       ah=sha1 key=20 e20916ae6ea2295c2fbd5cbc8b8f5dd8b17f52f1
```

```
  dec:pkts/bytes=1/16438, enc:pkts/bytes=186/22480
  npu_flag=03 npu_rgwy=11.1.2.11 npu_lgwy=112.1.1.2 npu_selid=1 dec_npuid=1 enc_npuid=1
```

diagnose sys virtual-wan-link service

```
Service(1): Address Mode(IPV4) flags=0x0
  TOS(0x0/0x0), Protocol(0: 1->65535), Mode(sla)
  Member sub interface:
  Members:
    1: Seq_num(1), alive, sla(0x1), cfg_order(0), cost(0), selected
    2: Seq_num(2), alive, sla(0x1), cfg_order(1), cost(0), selected
  Dst address: 33.1.1.1-33.1.1.100

Service(2): Address Mode(IPV4) flags=0x0
  TOS(0x0/0x0), Protocol(0: 1->65535), Mode(manual)
  Member sub interface:
  Members:
    1: Seq_num(2), alive, selected
  Dst address: 33.1.1.101-33.1.1.200
```

diagnose firewall proute list

```
list route policy info(vf=vd2):

id=2132869121 vwl_service=1 vwl_mbr_seq=1 dscp_tag=0xff 0xff flags=0x0 tos=0x00 tos_
mask=0x00 protocol=0 sport=0:65535 iif=0 dport=1-65535 oif=70 oif=71
destination(1): 33.1.1.1-33.1.1.100
source wildcard(1): 0.0.0.0/0.0.0.0

id=2132869122 vwl_service=2 vwl_mbr_seq=2 dscp_tag=0xff 0xff flags=0x0 tos=0x00 tos_
mask=0x00 protocol=0 sport=0:65535 iif=0 dport=1-65535 oif=71
destination(1): 33.1.1.101-33.1.1.200
source wildcard(1): 0.0.0.0/0.0.0.0
```

After spoke vs spoke shortcut VPN is established

Use the following CLI commands to check status after spoke vs spoke shortcut VPN is established.

get router info routing-table bgp

```
Routing table for VRF=0
B*      0.0.0.0/0 [200/0] via 10.10.200.254, spoke1-2-phase1, 00:01:33
                  [200/0] via 10.10.100.254, spoke1-phase1, 00:01:33
B       1.1.1.1/32 [200/0] via 11.1.1.1 (recursive via 12.1.1.1), 00:02:04
                   [200/0] via 11.1.1.1 (recursive via 12.1.1.1), 00:02:04
B       11.11.11.0/24 [200/0] via 10.10.200.254, spoke1-2-phase1, 00:02:04
                      [200/0] via 10.10.100.254, spoke1-phase1, 00:02:04
B       33.1.1.0/24 [200/0] via 10.10.200.3, spoke1-2-phase1_0, 00:01:33
                    [200/0] via 10.10.100.3, spoke1-phase1_0, 00:01:33
                    [200/0] via 10.10.200.3, spoke1-2-phase1_0, 00:01:33
                    [200/0] via 10.10.100.3, spoke1-phase1_0, 00:01:33
```

diagnose sys virtual-wan-link service

```
Service(1): Address Mode(IPV4) flags=0x0
  TOS(0x0/0x0), Protocol(0: 1->65535), Mode(sla)
  Member sub interface:
    1: seq_num(1), interface(spoke1-phase1):
       1: spoke1-phase1_0(111)
```

```
    2: seq_num(2), interface(spoke1-2-phase1):
       1: spoke1-2-phase1_0(113)
  Members:
    1: Seq_num(1), alive, sla(0x1), cfg_order(0), cost(0), selected
    2: Seq_num(2), alive, sla(0x1), cfg_order(1), cost(0), selected
  Dst address: 33.1.1.1-33.1.1.100

Service(2): Address Mode(IPV4) flags=0x0
  TOS(0x0/0x0), Protocol(0: 1->65535), Mode(manual)
  Member sub interface:
    1: seq_num(2), interface(spoke1-2-phase1):
       1: spoke1-2-phase1_0(113)
  Members:
    1: Seq_num(2), alive, selected
  Dst address: 33.1.1.101-33.1.1.200
```

```
# diagnose vpn tunnel list
list all ipsec tunnel in vd 3
------------------------------------------------------
name=spoke1-phase1 ver=1 serial=5 12.1.1.2:0->11.1.1.11:0 dst_mtu=15324
bound_if=48 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu create_dev
frag-rfc  accept_traffic=1

proxyid_num=1 child_num=1 refcnt=20 ilast=0 olast=0 ad=r/2
stat: rxp=1 txp=759 rxb=16428 txb=48627
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=4
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=vd2-1 proto=0 sa=1 ref=5 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=6 options=1a227 type=00 soft=0 mtu=15262 expire=42536/0B replaywin=2048
       seqno=2f8 esn=0 replaywin_lastseq=00000002 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42898/43200
  dec: spi=03e01a42 esp=aes key=16 1f131bda108d33909d49fc2778bd08bb
       ah=sha1 key=20 14131d3f0da9b741a2fd13d530b0553aa1f58983
  enc: spi=2ead61d8 esp=aes key=16 81ed24d5cd7bb59f4a80dceb5a560e1f
       ah=sha1 key=20 d2ccc2f3223ce16514e75f672cd88c4b4f48b681
  dec:pkts/bytes=1/16360, enc:pkts/bytes=759/94434
  npu_flag=03 npu_rgwy=11.1.1.11 npu_lgwy=12.1.1.2 npu_selid=0 dec_npuid=1 enc_npuid=1
------------------------------------------------------
name=spoke1-2-phase1 ver=1 serial=6 112.1.1.2:0->11.1.2.11:0 dst_mtu=15324
bound_if=90 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu create_dev
frag-rfc  accept_traffic=1

proxyid_num=1 child_num=1 refcnt=19 ilast=0 olast=0 ad=r/2
stat: rxp=1 txp=756 rxb=16450 txb=48460
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=74
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=vd2-2 proto=0 sa=1 ref=5 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=6 options=1a227 type=00 soft=0 mtu=15262 expire=42538/0B replaywin=2048
       seqno=2f5 esn=0 replaywin_lastseq=00000002 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42900/43200
  dec: spi=03e01a43 esp=aes key=16 7fc87561369f88b56d08bfda769eb45b
       ah=sha1 key=20 0ed554ef231c5ac16dc2e71d1907d7347dda33d6
  enc: spi=2ead61d9 esp=aes key=16 00286687aa1762e7d8216881d6720ef3
```

```
      ah=sha1 key=20 59d5eec6299ebcf038c190860774e2833074d7c3
  dec:pkts/bytes=1/16382, enc:pkts/bytes=756/94058
  npu_flag=03 npu_rgwy=11.1.2.11 npu_lgwy=112.1.1.2 npu_selid=1 dec_npuid=1 enc_npuid=1
-----------------------------------------------------
name=spoke1-phase1_0 ver=1 serial=55 12.1.1.2:0->13.1.1.3:0 dst_mtu=15324
bound_if=48 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/728 options[02d8]=npu
create_dev no-sysctl rgwy-chg frag-rfc  accept_traffic=1

 parent=vd2-1 index=0
proxyid_num=1 child_num=0 refcnt=18 ilast=8 olast=8 ad=r/2
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=vd2-1 proto=0 sa=1 ref=2 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=3 options=1a227 type=00 soft=0 mtu=15262 expire=42893/0B replaywin=2048
       seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42901/43200
  dec: spi=03e01a44 esp=aes key=16 c3b77a98e3002220e2373b73af14df6e
       ah=sha1 key=20 d18d107c248564933874f60999d6082fd7a78948
  enc: spi=864f6dba esp=aes key=16 eb6181806ccb9bac37931f9eadd4d5eb
       ah=sha1 key=20 ab788f7a372877a5603c4ede1be89a592fc21873
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
  npu_flag=00 npu_rgwy=13.1.1.3 npu_lgwy=12.1.1.2 npu_selid=51 dec_npuid=0 enc_npuid=0
-----------------------------------------------------
name=spoke1-2-phase1_0 ver=1 serial=57 112.1.1.2:0->113.1.1.3:0 dst_mtu=15324
bound_if=90 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/728 options[02d8]=npu
create_dev no-sysctl rgwy-chg frag-rfc  accept_traffic=1

 parent=vd2-2 index=0
proxyid_num=1 child_num=0 refcnt=17 ilast=5 olast=5 ad=r/2
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=vd2-2 proto=0 sa=1 ref=3 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=3 options=1a227 type=00 soft=0 mtu=15262 expire=42900/0B replaywin=2048
       seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42901/43200
  dec: spi=03e01a45 esp=aes key=16 0beb519ed9f800e8b4c0aa4e1df7da35
       ah=sha1 key=20 bc9f38db5296cce4208a69f1cc8a9f7ef4803c37
  enc: spi=864f6dbb esp=aes key=16 1d26e3556afcdb9f8e3e33b563b44228
       ah=sha1 key=20 564d05ef6f7437e1fd0a88d5fee7b6567f9d387e
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
  npu_flag=00 npu_rgwy=113.1.1.3 npu_lgwy=112.1.1.2 npu_selid=53 dec_npuid=0 enc_npuid=0
```

diagnose firewall proute list

```
list route policy info(vf=vd2):

id=2132869121 vwl_service=1 vwl_mbr_seq=1 dscp_tag=0xff 0xff flags=0x0 tos=0x00 tos_
mask=0x00 protocol=0 sport=0:65535 iif=0 dport=1-65535 oif=111 oif=70 oif=113 oif=71
destination(1): 33.1.1.1-33.1.1.100
source wildcard(1): 0.0.0.0/0.0.0.0

id=2132869122 vwl_service=2 vwl_mbr_seq=2 dscp_tag=0xff 0xff flags=0x0 tos=0x00 tos_
```

```
mask=0x00 protocol=0 sport=0:65535 iif=0 dport=1-65535 oif=113 oif=71
destination(1): 33.1.1.101-33.1.1.200
source wildcard(1): 0.0.0.0/0.0.0.0
```

DSCP matching (shaping)

This feature has three parts:

- DSCP matching in firewall policies
- DSCP matching in firewall shaping policies
- DSCP marking in firewall shaping policies

DSCP matching in firewall policies

Traffic is allowed or blocked according to the DSCP values in the incoming packets.

The following CLI variables are available in the `config firewall policy` command:

`tos-mask <mask_value>`	Non-zero bit positions are used for comparison. Zero bit positions are ignored (default = 0x00). This variable replaces the `dscp-match` variable.
`tos <tos_value>`	Type of Service (ToC) value that is used for comparison (default = 0x00). This variable is only available when `tos-mask` is not zero. This variable replaces the `dscp-value` variable.
`tos-negate {enable | disable}`	Enable/disable negated ToS match (default = disable). This variable is only available when `tos-mask` is not zero. This variable replaces the `dscp-negate` variable.

DSCP matching in firewall shaping policies

Shaping is applied to the session or not according to the DSCP values in the incoming packets. The same logic and commands as in firewall policies are used.

DSCP marking in firewall shaping policies

Traffic is allowed or blocked according to the DSCP values in the incoming packets. DSCP marking in firewall shaping policies uses the same logic and commands as in firewall policy and traffic-shaper.


When DSCP marking on `firewall shaper traffic-shaper`, `firewall shaping-policy`, and `firewall policy` all apply to the same session, `shaping-policy` overrides `policy`, and `shaper traffic-shaper` overrides both `shaping-policy` and `policy`.

The following CLI variables in `config firewall policy` are used to mark the packets:

`diffserv-forward {enable | disable}`	Enable/disable changing a packet's DiffServ values to the value specified in `diffservcode-forward` (default = disable).
`diffservcode-forward <dscp_value>`	The value that packet's DiffServ is set to (default = 000000). This variable is only available when `diffserv-forward` is enabled.

`diffserv-reverse {enable | disable}`	Enable/disable changing a packet's reverse (reply) DiffServ values to the value specified in `diffservcode-rev` (default = disable).
`diffservcode-rev <dscp_value>`	The value that packet's reverse (reply) DiffServ is set to (default = 000000). This variable is only available when `diffserv-rev` is enabled.

Examples

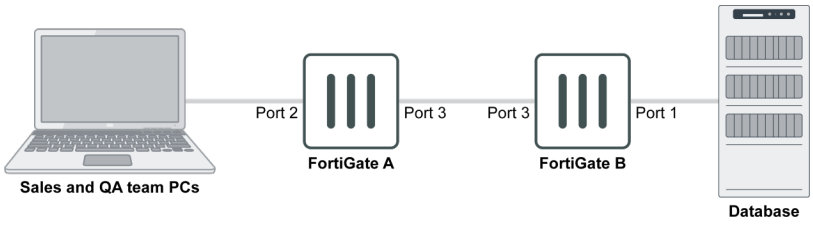

Example 1

FortiGate A marks traffic from the sales and QA teams with different DSCP values. FortiGate B does DSCP matching, allowing only the sales team to access the database.

1. Configure FortiGate A:

```
config firewall policy
    edit 1
        set srcintf "port2"
        set dstintf "port3"
        set srcaddr "QA"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set diffserv-forward enable
        set diffservcode-forward 110000
        set nat enable
    next

    edit 5
        set srcintf "port2"
        set dstintf "port3"
        set srcaddr "Sales"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set diffserv-forward enable
        set diffservcode-forward 111011
        set nat enable
    next
end
```

2. Configure FortiGate B:

```
config firewall policy
    edit 2
```

```
        set srcintf "port3"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "Database"
        set action accept
        set schedule "always"
        set service "ALL"
        set tos-mask 0xf0
        set tos 0xe0
        set fsso disable
        set nat enable
    next
end
```

Example 2

FortiGate A marks traffic from the sales and QA teams with different DSCP values. FortiGate B uses a firewall shaping policy to do the DSCP matching, limiting the connection speed of the sales team to the database to 10MB/s.

1. Configure FortiGate A:

```
config firewall policy
    edit 1
        set srcintf "port2"
        set dstintf "port3"
        set srcaddr "QA"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set diffserv-forward enable
        set diffservcode-forward 110000
        set nat enable
    next

    edit 5
        set srcintf "port2"
        set dstintf "port3"
        set srcaddr "Sales"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set diffserv-forward enable
        set diffservcode-forward 111011
        set nat enable
    next
end
```

2. Configure FortiGate B:

```
config firewall policy
    edit 2
        set srcintf "port3"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "all"
```

```
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end

config firewall shaper traffic-shaper
    edit "10MB/s"
        set guaranteed-bandwidth 60000
        set maximum-bandwidth 80000
    next
end

config firewall shaping-policy
    edit 1
        set service "ALL"
        set dstintf "port1"
        set tos-mask 0xf0
        set tos 0xe0
        set traffic-shaper "10MB/s"
        set srcaddr "all"
        set dstaddr "all"
    next
end
```

Example 3

FortiGate A has a traffic shaping policy to mark traffic from the QA team with a DSCP value of 100000, while reverse traffic is marked with 000011.

1. Configure FortiGate A:


```
config firewall shaping-policy
    edit 1
        set name "QA Team 50MB"
        set service "ALL"
        set dstintf "port3"
        set traffic-shaper "50MB/s"
        set traffic-shaper-reverse "50MB/s"
        set diffserv-forward enable
        set diffserv-reverse enable
        set srcaddr "QA"
        set dstaddr "all"
        set diffservcode-forward 100000
        set diffservcode-rev 000011
    next
end
```

Dual VPN tunnel wizard


This wizard is used to automatically set up multiple VPN tunnels to the same destination over multiple outgoing interfaces. This includes automatically configuring IPsec, routing, and firewall settings, avoiding cumbersome and error-prone configuration steps.

To create a new SD-WAN VPN interface using the tunnel wizard:


1. Go to *Network* > *SD-WAN*.
2. Add a new interface member.

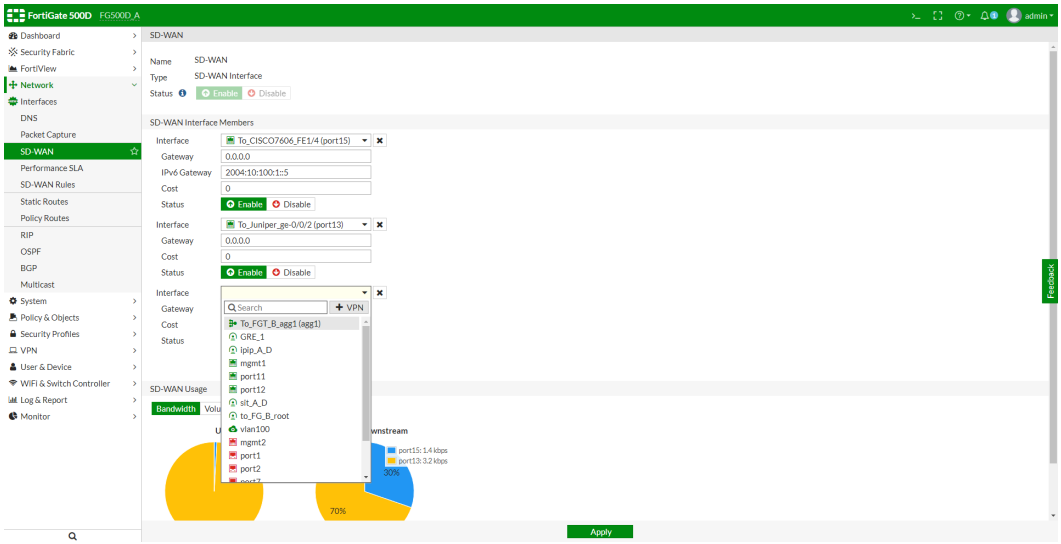


3. In the *Interface* drop-down, click *+VPN*. The *Create IPsec VPN for SD-WAN members* pane opens.

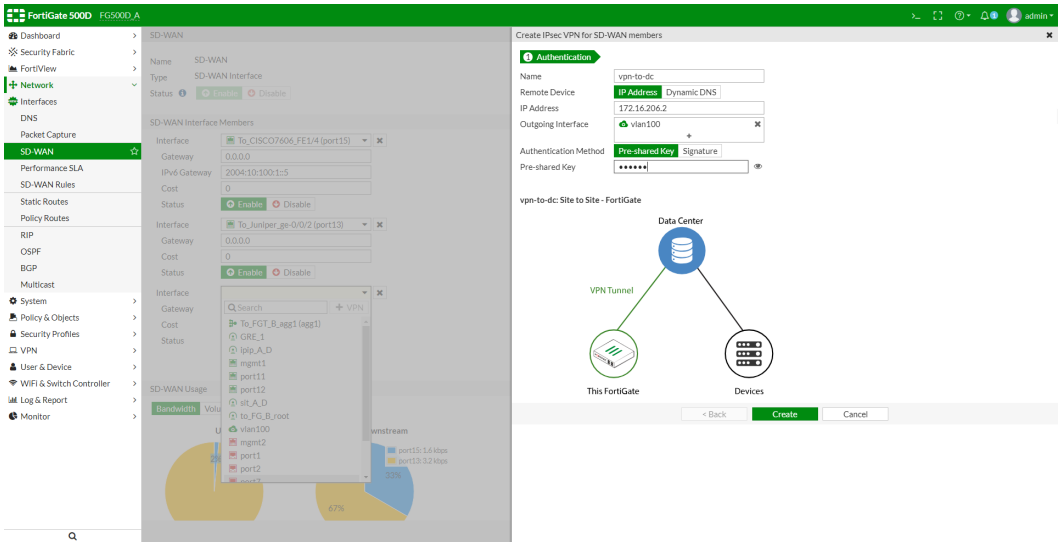

4. Enter the required information, then click *Create*.

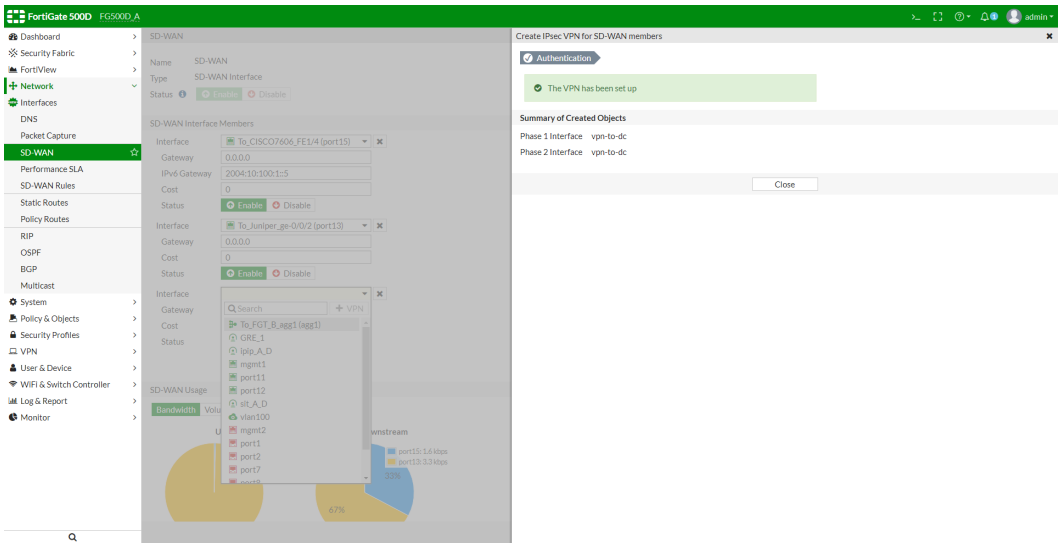


5. Click *Close* to return to the SD-WAN page.
The newly created VPN interface will be highlighted in the *Interface* drop-down list.

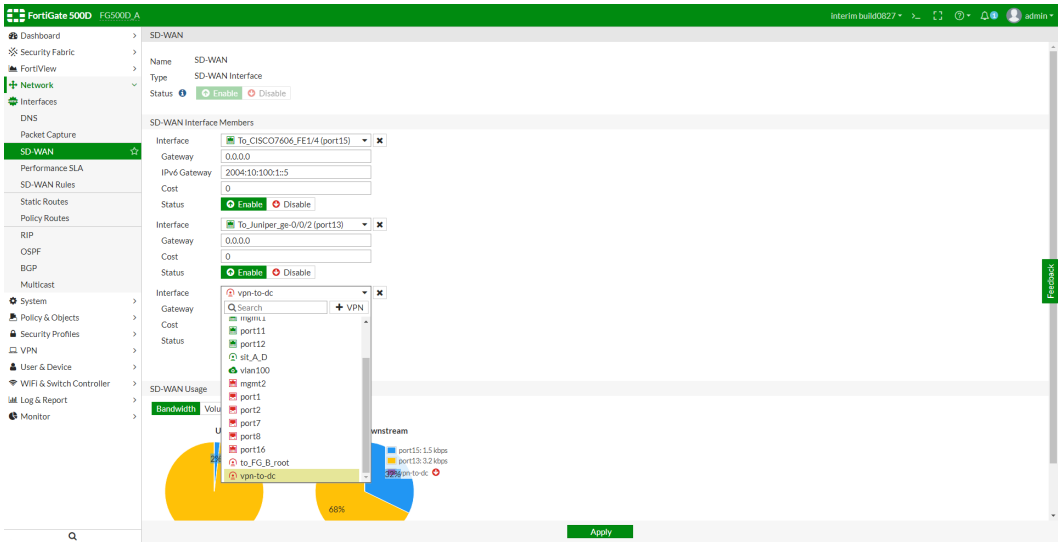

6. Select the VPN interface to add it as an SD-WAN member.

7. Click *Apply* to save the SD-WAN settings.

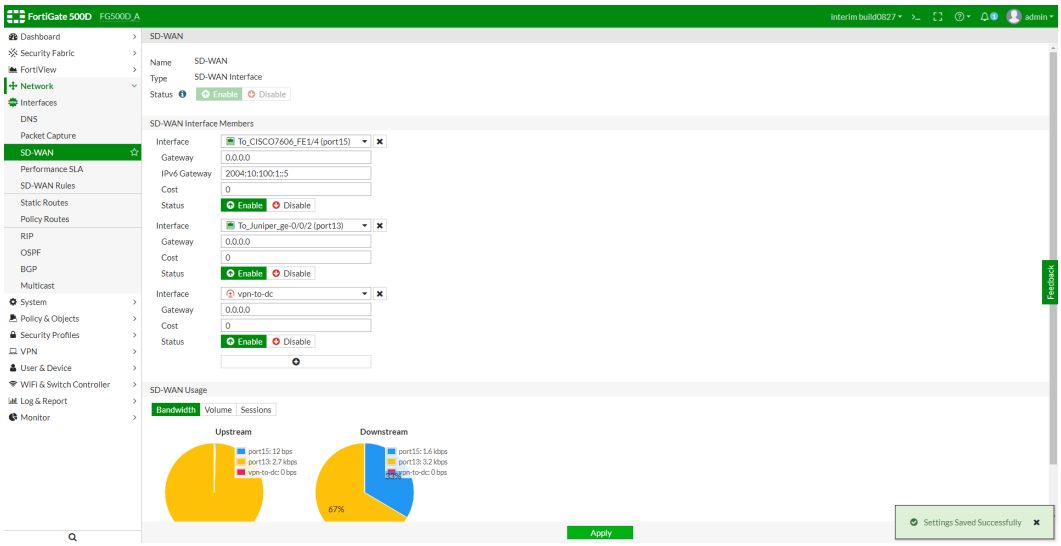


SD-WAN with FGCP HA


This example shows how to convert a standalone FortiGate SD-WAN solution to a FGCP HA cluster with full-mesh WAN set up. This configuration allows you to load balance your internet traffic between multiple ISP links. It also provides redundancy for your internet connection if your primary ISP in unavailable, or if one of the FortiGates in the HA cluster fails.

This example assumes that a standalone FortiGate has already been configured for SD-WAN by following the SD-WAN quick start on page 452.

Standalone FortiGate:

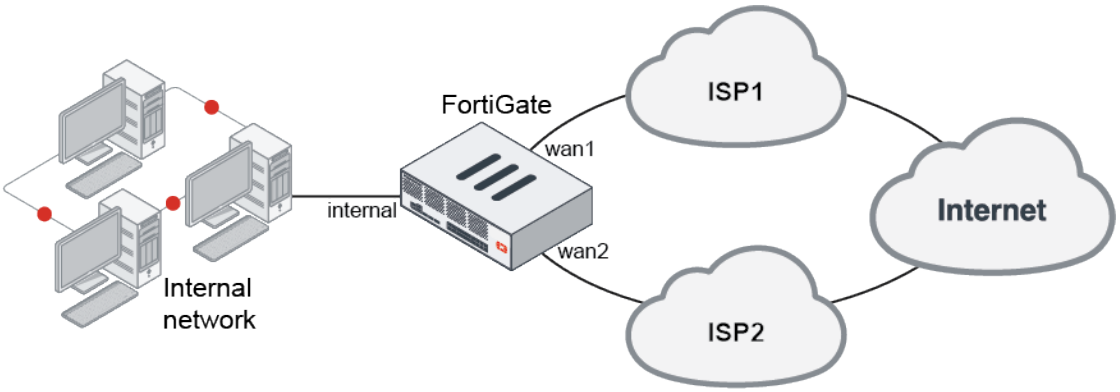

FGCP HA cluster:

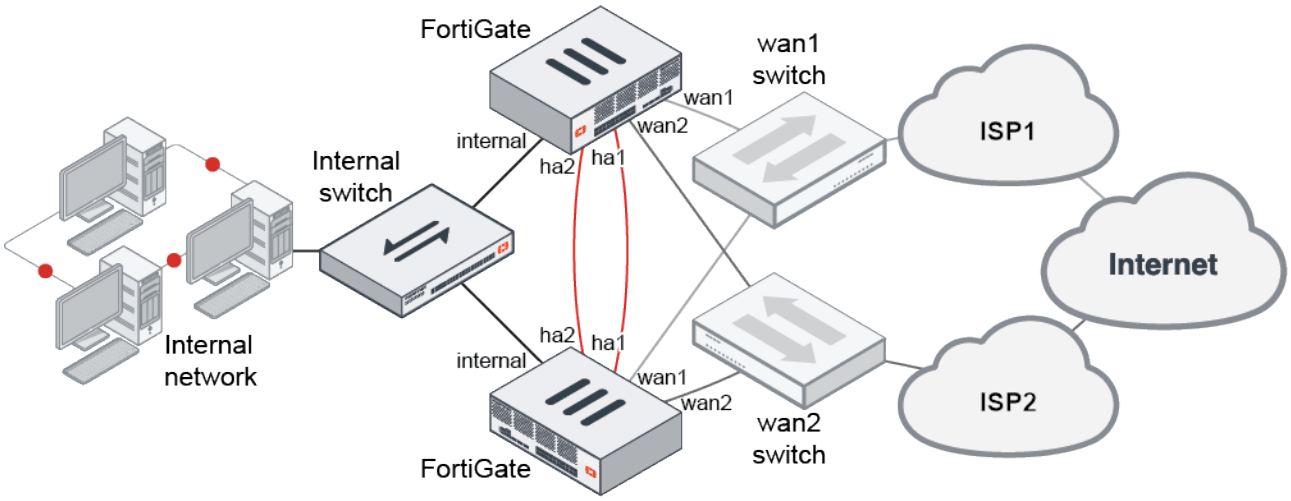

The following devices are required to convert the topology to HA:

- A second FortiGate that is the same model running the same firmware version.
- Two switches for connecting each FortiGate's WAN interface to the corresponding ISP modem.

Before you begin:

- Ensure that the licenses and subscriptions on both HA members match.
- Ensure that there are one or more ports reserved for HA heartbeat.
- Ensure you have physical access to both HA members.

Enabling HA and re-cabling the WAN interfaces will cause network interruptions.
This procedure should be performed during a maintenance window.

Configuring the standalone FortiGate for HA

After running the following commands, the FortiGate negotiates to establish an HA cluster. You might temporarily lose connectivity with the FortiGate as FGCP negotiations take place and the MAC addresses of the FortiGate interfaces are changed to HA virtual MAC addresses.

This configurations sets the HA mode to active-passive.

The ha1 and ha2 interfaces are configured as the heartbeat interfaces, with priorities set to 200 and 100 respectively. Setting different priorities for the heartbeat interfaces is a best practice, but is not required.

If you have more than one cluster on the same network, each cluster should have a different group ID. Changing the group ID changes the cluster interface's virtual MAC addresses. If the group IP causes a MAC address conflict on your network, select a different group ID.


Enabling override and increasing the device priority means that this FortiGate always becomes the primary unit.

To configure the standalone FortiGate for HA in the GUI:

1. Go to *System* > *Settings* and change the *Host name* so that the FortiGate can be easily identified as the primary unit.
2. Go to *System* > *HA* and configure the following options:

Mode	Active-Passive
Device priority	250
Group name	My-cluster
Password	<password>
Heartbeat interfaces	ha1 and ha2
Heartbeat Interface Priority	**port2** (ha1): 200 **port3** (ha2): 100

Override and the group ID can only be configured from the CLI.

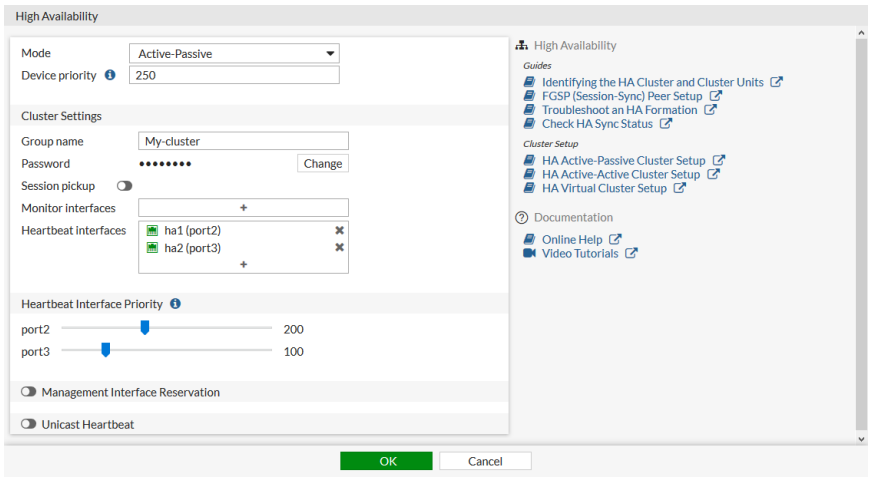

3. Click *OK*.
   Connectivity with the FortiGate will temporarily be lost.

To configure the standalone FortiGate for HA in the CLI:

1. Change the host name so that the FortiGate can be easily identified:

```
config system global
    set hostname primary_FG
end
```

2. Configure HA:

```
config system ha
    set mode a-p
    set group-id 100
    set group-name My-cluster
```

```
    set password <password>
    set priority 250
    set override enable
    set hbdev ha1 200 ha2 100
end
```



If HA mode does not start after running the above steps, ensure that none of the FortiGate's interfaces use DHCP or PPPoE addressing.

Configuring the secondary FortiGate for HA

The secondary FortiGate must be the same model and running the same firmware version as the primary FortiGate. The HA settings are the same as the for the primary unit, except the secondary device has a lower priority and override is not enabled.



It is best practice to reset the FortiGate to factory default settings prior to configuring HA. This reduces the chance of synchronization problems.

```
# execute factoryreset
This operation will reset the system to factory default!
Do you want to continue? (y/n) y
```

This is unnecessary if the device is new from the factory.

To configure the secondary FortiGate for HA in the GUI:

1. Go to *System* > *Settings* and change the *Host name* so that the FortiGate can be easily identified as the backup unit.
2. Go to *System* > *HA* and configure the options the same as for the primary FortiGate, except with a lower priority:

Mode	Active-Passive
Device priority	128
Group name	My-cluster
Password	<password>
Heartbeat interfaces	ha1 and ha2
Heartbeat Interface Priority	**port2** (ha1): 200 **port3** (ha2): 100

3. Click *OK*.

To configure the secondary FortiGate for HA in the CLI:

1. Change the host name so that the secondary FortiGate can be easily identified:

```
config system global
    set hostname secondary_FG
end
```

2. Configure HA:

```
config system ha
    set mode a-p
    set group-id 100
    set group-name My-cluster
    set password <password>
    set priority 128
    set hbdev ha1 200 ha2 100
end
```

Connecting the heartbeat interfaces between the FortiGates

To connect and check the heartbeat interfaces:

1. Connect the heartbeat interfaces ha1 and ha2 between the primary and secondary FortiGate.
   a. An HA primary is selected. Because the primary FortiGate has a higher priority and override enabled, it assumes the role of HA primary.
   b. The secondary FortiGate synchronizes its configuration from the primary device.
2. Verify that the checksums match between the primary and secondary FortiGates:

   ```
   # diagnose sys ha checksum cluster
   ```

   If all of the cluster members have identical checksums, then their configurations are synchronized. If the checksums are not the same, wait for a few minutes, then repeat the command. Some parts of the configuration might take a significant amount of time to synchronize (tens of minutes).

Connecting other traffic interfaces

After the device configurations are synchronized, you can connect the rest of the traffic interfaces. Making these connections will disrupt traffic as cables are disconnected and reconnected.

Switches must be used between the cluster and the ISPs, and between the cluster and the internal network, as shown in the topology diagram.

Checking cluster operations

The *HA Status* dashboard widget shows the synchronization status. Hover over the host names of each FortiGate in the widget to verify that they are synchronized and have the same checksum.


To view more information about the cluster status, including the number of sessions passing through the cluster members, go to *System* > *HA*.

See Check HA sync status on page 679 for more information.

Results

1. Browse the internet on a computer in the internal network.
2. Go to *Network* > *SD-WAN* to see the bandwidth, volume, and sessions for traffic on the SD-WAN interfaces. See Results on page 458 for details.

3. Go to *Monitor* > *SD-WAN Monitor* to see information about each interface, such as the number of sessions and the bit rate.



Testing HA failover

All traffic should currently be flowing through the primary FortiGate. If it becomes unavailable, traffic fails over to the secondary FortiGate. When the primary FortiGate rejoins the cluster, the secondary FortiGate continues to operate as the primary FortiGate.

To test this, ping a reliable IP address from a computer in the internal network, and then power off the primary FortiGate.

There will be a momentary pause in the ping results until traffic diverts to the backup FortiGate, allowing the ping traffic to continue:

```
64 bytes from 184.25.76.114: icmp_seq=69 ttl=52 time=8.719 ms\
64 bytes from 184.25.76.114: icmp_seq=70 ttl=52 time=8.822 ms\
64 bytes from 184.25.76.114: icmp_seq=74 ttl=52 time=8.901 ms\
Request timeout for icmp_seq 75\
64 bytes from 184.25.76.114: icmp_seq=76 ttl=52 time=8.860 ms\
64 bytes from 184.25.76.114: icmp_seq=77 ttl=52 time=9.174 ms\
64 bytes from 184.25.76.114: icmp_seq=83 ttl=52 time=8.639 ms}
```



If you are using port monitoring, you can also unplug the primary FortiGate's internet facing interface to test failover.


After the secondary FortiGate becomes the primary, you can log into the cluster using the same IP address as before the fail over. If the primary FortiGate is powered off, you will be logged into the backup FortiGate. Check the host name to verify what device you have logged into. The FortiGate continues to operate in HA mode, and if you restart the primary FortiGate, it will rejoin the cluster and act as the backup FortiGate. Traffic is not disrupted when the restarted FortiGate rejoins the cluster.

Testing ISP failover


To test a failover of the redundant internet configuration, you need to simulate a failed internet connection to one of the ports. You can do this by disconnecting power from the wan1 switch, or by disconnecting the wan1 interfaces of both FortiGates from ISP1.

After disconnecting, verify that users still have internet access

- Go to *Dashboard* > *Network*, and expand the *SD-WAN* widget. The *Upload* and *Download* columns for wan1 show that traffic is not going through that interface.



- Go to *Network* > *SD-WAN*. The *Bandwidth*, *Volume*, and *Sessions* tabs show that traffic is entirely diverted to wan2.

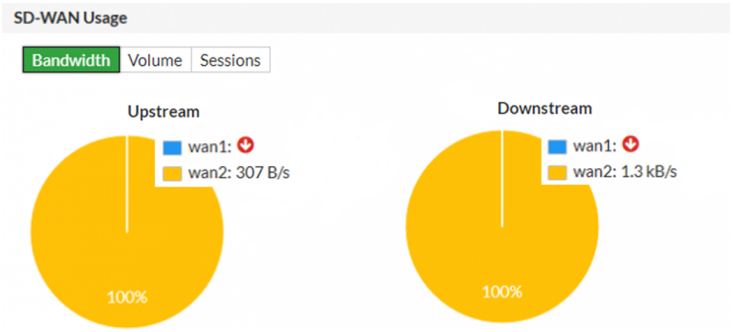

Users on the network should not notice the wan1 failure. If you are using the wan1 gateway IP address to connect to the administrator dashboard, it will appear as though you are still connecting through wan1.


After verifying a successful failover, reestablish the connection to ISP1.

Enable dynamic connector addresses in SD-WAN policies

Dynamic Fabric Connector addresses can be used in SD-WAN policies.

To add a dynamic connector address to an SD-WAN rule:

1. Go to *Network* > *SD-WAN Rules*.
2. Click *Create New*.
3. In the *Name* field, enter the rule name.
4. In the *Destination* > *Addresses* field, click the +. The *Select Entries* pane will appear.
5. In the *Select Entries* pane, select the dynamic connector (in the example, *aws1*).

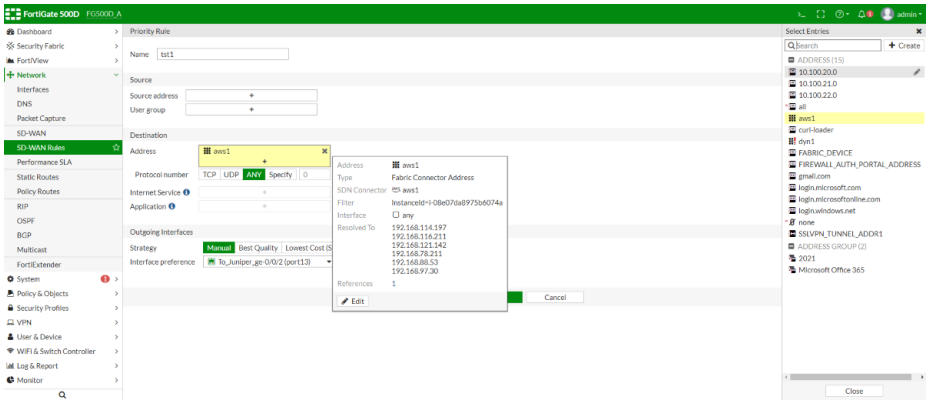


6. Configure the remaining settings as required.
7. Click *OK* to save the rule.

SD-WAN cloud on-ramp

In this example, you configure a connection to a new cloud deployment that has some remote servers. SD-WAN is used to steer traffic through the required overlay tunnel.

The on-premise FortiGate has two internet connections, each with a single VPN connection. The two VPN gateways are configured on the cloud for redundancy, one terminating at the FortiGate-VM, and the other at the native AWS VPN Gateway.

This example uses AWS as the Infrastructure as a Service (IaaS) provider, but the same configuration can also apply to other services. A full mesh VPN setup is not shown, but can be added later if required.

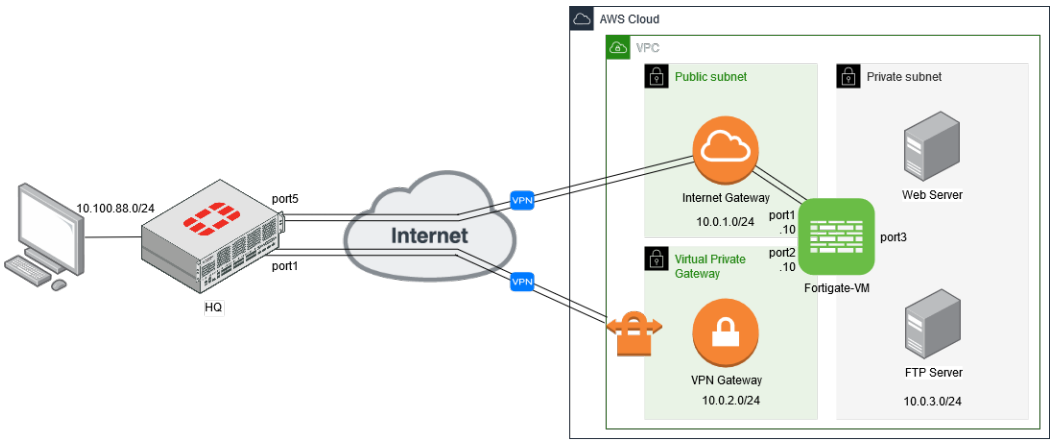

To connect to the servers that are behind the cloud FortiGate-VM, virtual IP addresses (VIPs) are configured on port2 to map to the servers:

- VPN traffic terminating on port1 is routed to the VIP on port2 to access the web servers.
- VPN traffic terminating on the VPN gateway accesses the VIPs on port2 directly.

There are four major steps to configure this setup:

1. Configuring the VPN overlay between the HQ FortiGate and cloud FortiGate-VM on page 563
2. Configuring the VPN overlay between the HQ FortiGate and AWS native VPN gateway on page 568
3. Configuring the VIP to access the remote servers on page 572
4. Configuring the SD-WAN to steer traffic between the overlays on page 574

After the configuration is complete, verify the traffic to ensure that the configuration is working as expected, see Verifying the traffic on page 578.


Configuring the VPN overlay between the HQ FortiGate and cloud FortiGate-VM

Configure the cloud FortiGate-VM

To create an address for the VPN gateway:

1. Go to *Policy & Objects* > *Addresses* and click *Create New* > *Address*.
2. Set *Name* to *local_subnet_10_0_2_0*.


3. Set *IP/Netmask* to *10.0.2.0/24*.

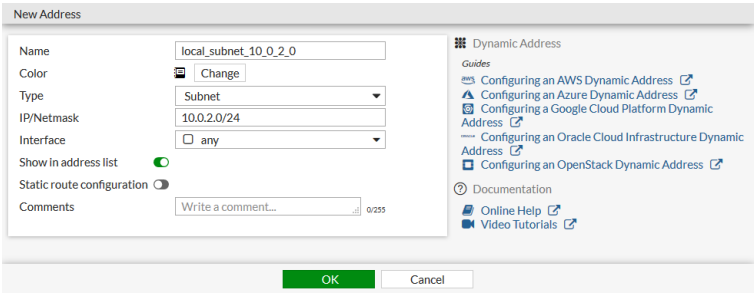

4. Click *OK*.

To configure a custom IPsec VPN:

1. Go to *VPN* > *IPsec Wizard*.
2. Set *Name* to *Core_Dialup*.
3. Set *Template type* to *Custom*.

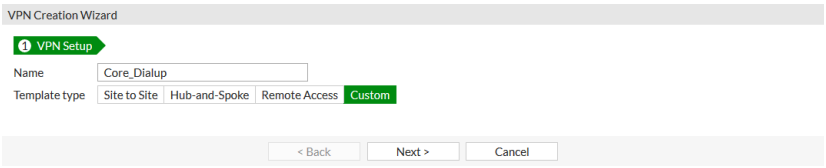


4. Click *Next*.
5. Configure *Network* settings:

Remote Gateway	Dialup User
Interface	port1
NAT Traversal	Enable

6. Configure *Authentication* settings:

Method	Pre-shared Key
Pre-shared Key	Enter the pre-shared key.
Version	1
Mode	Aggressive This setting allows the peer ID to be specified.
Accept Types	Specific peer ID
Peer ID	IaaS The other end of the tunnel needs to have its local ID set to IaaS.

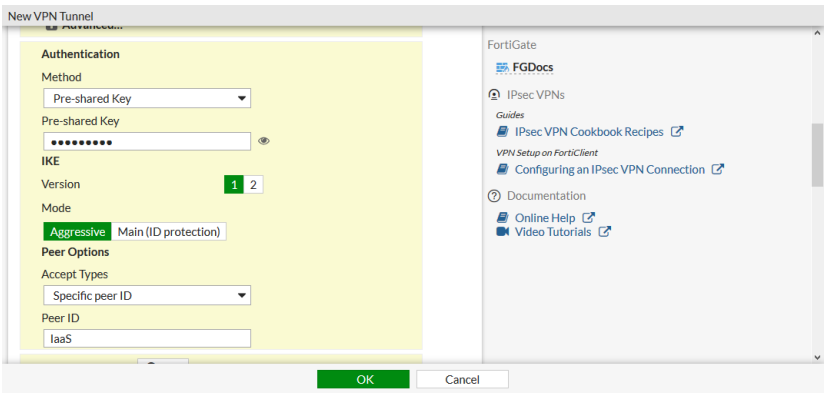


7. Leave the default *Phase 1 Proposal* settings and disable *XAUTH*.
8. Configure the *Phase 2 Selector* settings:

Name	Ent_Core
Local Address	Named Address - *local_subnet_10_0_2_0*
Remote Address	Named Address - *all* This setting allows traffic originating from both the remote subnet 10.100.88.0 and the health checks from the VPN interface on the remote FortiGate. For increased security, each subnet can be specified individually.

9. Click *OK*.

To configure remote and local tunnel IP addresses:

1. Go to *Network* > *Interfaces* and edit the *Core_Dialup* interface under *port1*.
2. Set *IP* to *172.16.200.1*.
3. Set *Remote IP/Netmask* to *172.16.200.2 255.255.255.0*. This is where remote health check traffic will come from.
4. Enable *Administrative access* for *HTTPS*, *PING*, and *SSH*.

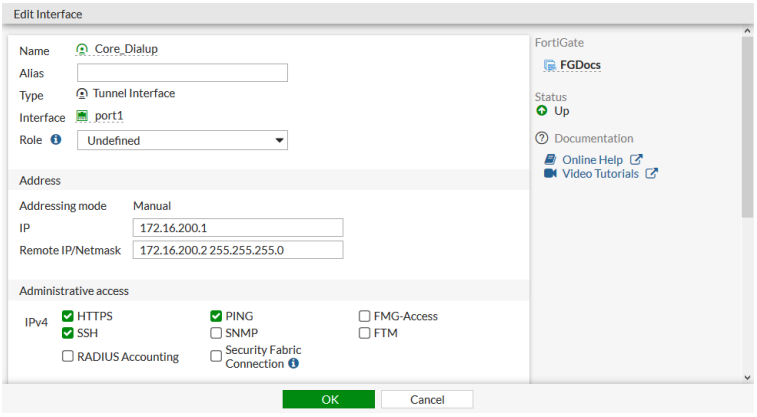


5. Click *OK*.

To configure a route to the remote subnet through the tunnel:

1. Go to *Network* > *Static Routes* and click *Create New*.
2. Set *Destination* to *Subnet* and enter the IP address and netmask: *10.100.88.0/255.255.255.0*.

3. Set *Interface* to *Core_Dialup*.

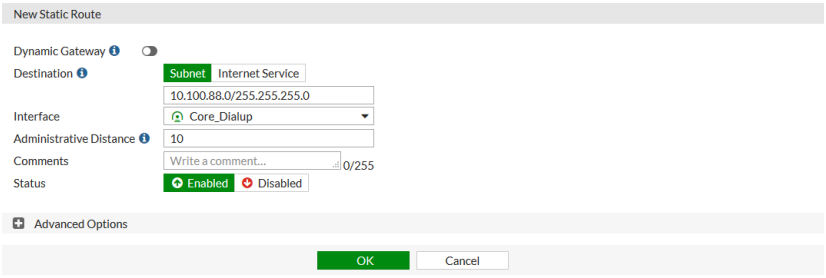


4. Click *OK*.

To configure a firewall policy to allow traffic from the tunnel to port2:

1. Go to *Policy & Objects* > *IPv4 Policy* and click *Create New*.
2. Configure the following:

Name	Core_Dialup-to-port2
Incoming Interface	Core_Dialup
Outgoing Interface	port2
Source	all
Destination	local_subnet_10_0_2_0
Schedule	always
Service	ALL
Action	ACCEPT

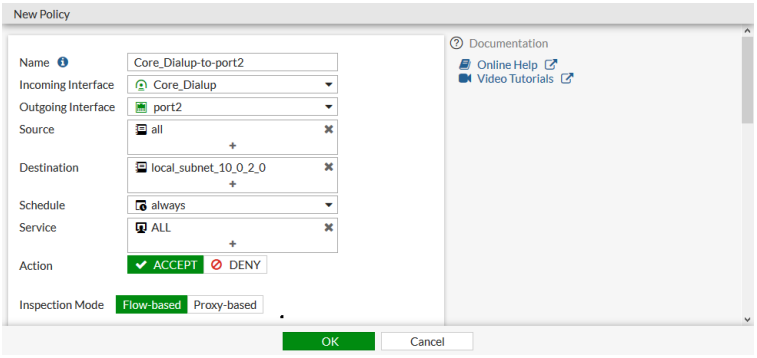

3. Configure the remaining settings as required.
4. Click *OK*.

Configure the HQ FortiGate

To create an address for the VPN gateway:

1. Go to *Policy & Objects* > *Addresses* and click *Create New* > *Address*.
2. Set *Name* to *remote_subnet_10_0_2_0*.

3. Set *IP/Netmask* to *10.0.2.0/24*.
4. Click *OK*.

To configure a custom IPsec VPN:

1. Go to *VPN* > *IPsec Wizard*.
2. Set *Name* to *FGT_AWS_Tun*.
3. Set *Template type* to *Custom*.
4. Click *Next*.
5. Configure *Network* settings:

Remote Gateway	Static IP Address
IP Address	100.21.29.17
Interface	port5
NAT Traversal	Enable

6. Configure *Authentication* settings:

Method	Pre-shared Key
Pre-shared Key	Enter the pre-shared key.
Version	1
Mode	Aggressive This setting allows the peer ID to be specified.
Accept Types	Any peer ID

7. Leave the default *Phase 1 Proposal* settings, except set *Local ID* to *IaaS*.
8. Disable *XAUTH*.
9. Configure the *Phase 2 Selector* settings:

Name	FGT_AWS_Tun
Local Address	Named Address - *all* This setting allows traffic originating from both the local subnet 10.100.88.0 and the health checks from the VPN interface. For increased security, each subnet can be specified individually.
Remote Address	Named Address - *remote_subnet_10_0_2_0*

10. Click *OK*.

To configure local and remote tunnel IP addresses:

1. Go to *Network* > *Interfaces* and edit the *FGT_AWS_Tun* interface under *port5*.
2. Set *IP* to *172.16.200.2*.
3. Set *Remote IP/Netmask* to *172.16.200.1 255.255.255.0*.
4. Enable *Administrative access* for *HTTPS*, *PING*, and *SSH*.
5. Click *OK*.

Routing is defined when creating the SD-WAN interface. The firewall policy is created after the SD-WAN interface is defined.

Configuring the VPN overlay between the HQ FortiGate and AWS native VPN gateway


This example uses static routing. It is assumed that the AWS VPN Gateway is already configured, and that proper routing is applied on the corresponding subnet.

Verify the AWS configuration


See Creating routing tables and associate subnets in the AWS Cookbook for configuration details.

To check the AWS configuration:


1. Go to *Virtual Private Network (VPN)* > *Customer Gateways* to confirm that the customer gateway defines the FortiGate IP address as its Gateway IP address, in this case *34.66.121.231*.

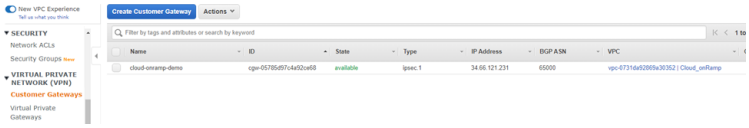


2. Go to *Virtual Private Network (VPN)* > *Virtual Private Gateways* to confirm that a virtual private gateway (VPG) has been created. In this case it is attached to the *Cloud_onRamp* VPC that contains the FortiGate and servers.

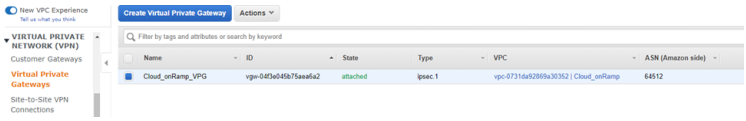


3. Go to *Virtual Private Network (VPN)* > *Site-to-Site VPN Connections* to confirm that site-to-site VPN connections have been created and attached to the customer gateway and virtual private gateway.
If *Routing Options* is *Static*, the IP prefix of the remote subnet on the HQ FortiGate (10.100.88.0) is entered here.

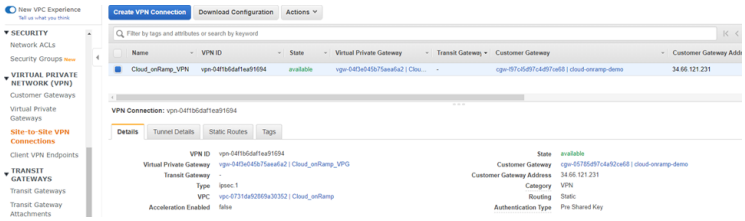


AWS site-to-site VPN always creates two VPN tunnels for redundancy. In this example, only Tunnel 1 is used.

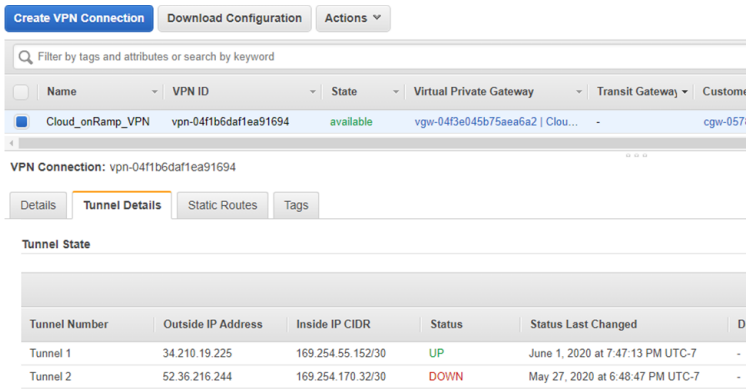

4. Click *Download Configuration* to download the FortiGate's tunnel configurations. The configuration can be referred to when configuring the FortiGate VPN.
5. The new VPG is attached to your VPC, but to successfully route traffic to the VPG, proper routing must be defined. Go to *Virtual Private Cloud* > *Subnets*, select the *Cloud-OnRamp-VPN*, and select the *Route Table* tab to verify that there are at least two routes to send traffic over the VPG.

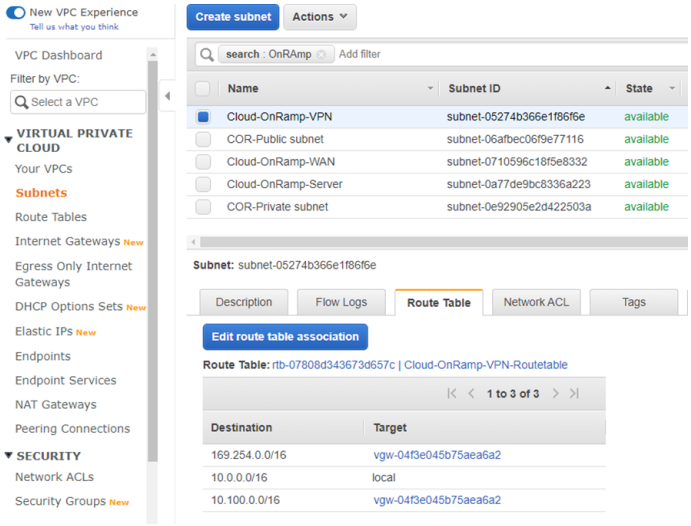


   - *169.254.0.0/24* defines the tunnel IP address. Health check traffic originating from the FortiGate will come from this IP range.
   - *10.100.0.0/16* defines the remote subnet from the HQ FortiGate.
   - Both routes point to the just created VPG *vgw-04xxxx*.
6. On the cloud FortiGate-VM EC2 instances, ensure that port1 and port2 both have *Source/Dest. Check* set to *false*. This allows the FortiGate to accept and route traffic to and from a different network.
   If you launched the instance from the AWS marketplace, this setting defaults to *true*.

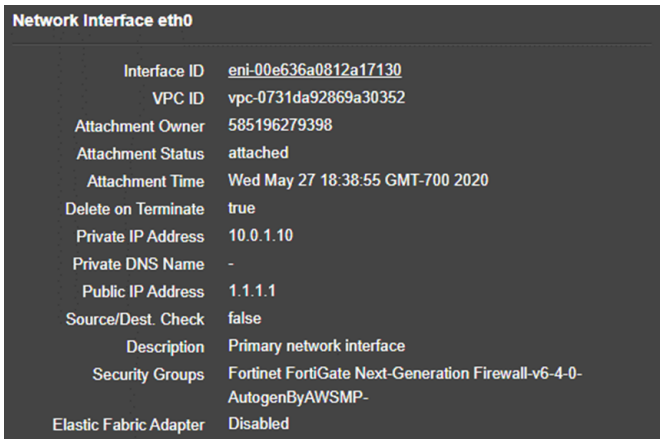

Configure routing to the VPG on the cloud FortiGate-VM

To configure routing to the VPG on the cloud FortiGate-VM:


1. Go to *Network* > *Static Routes* and click *Create New*.
2. Set *Destination* to *Subnet* and enter the IP address and netmask: *10.100.88.0/255.255.255.0*.
3. Set *Gateway Address* to *Specify* and enter *10.0.2.1*.
4. Set *Interface* to *port2*.

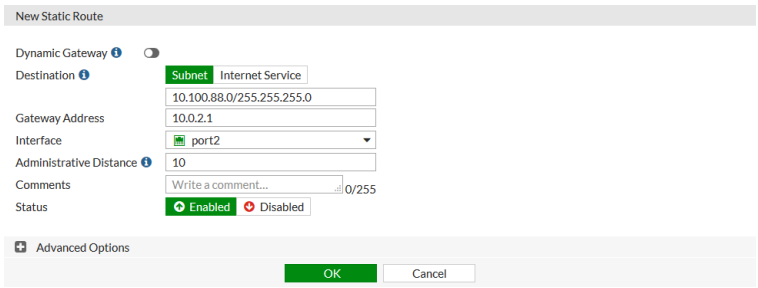

The new route must have the same *Administrative Distance* as the route that was created for traffic through the *Core_Dialup* tunnel to ensure that both routes are added to the routing table (see To configure a route to the remote subnet through the tunnel).

The *Gateway Address* is arbitrarily set to 10.0.2.1. The VPG does not have an IP address, but the address defined here allows the FortiGate to route traffic out of port2, while AWS routes the traffic based on its routing table.

5. Click *OK*.
6. Go to *Network* > *Static Routes* to view the configured static routes:

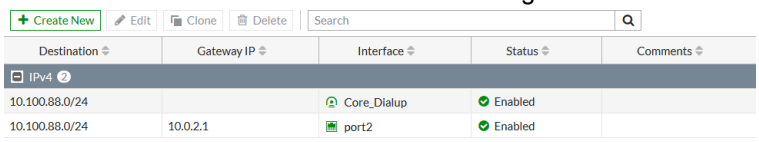

7. Go to *Monitor* > *Routing Monitor* to view the routing table.



Configure IPsec VPN on the HQ FortiGate

To configure a custom IPsec VPN:

1. Go to *VPN* > *IPsec Wizard*.
2. Set *Name* to *AWS_VPG*.
3. Set *Template type* to *Custom*.
4. Click *Next*.
5. Configure *Network* settings:

Remote Gateway	Static IP Address
IP Address	34.210.19.225 This address is taken from the downloaded AWS configuration file.
Interface	port1
NAT Traversal	Enable

6. Configure *Authentication* settings:

Method	Pre-shared Key
Pre-shared Key	Enter the pre-shared key.
Version	1
Mode	Main

7. Configure the *Phase 1 Proposal* settings using information from the downloaded AWS configuration file.
8. Disable *XAUTH*.
9. Configure the *Phase 2 Selector* settings:

Name	AWS_VPG
Local Address	Named Address - *all* This setting allows traffic originating from both the local subnet 10.100.88.0 and the health checks from the VPN interface. For increased security, each subnet can be specified individually.
Remote Address	Named Address - *remote_subnet_10_0_2_0*

10. Click *OK*.

To configure local and remote tunnel IP addresses:

1. Go to *Network* > *Interfaces* and edit the *AWS_VPG* interface under *port1*.
2. Set *IP* to *169.254.55.154*.
3. Set *Remote IP/Netmask* to *169.254.55.153 255.255.255.0*.
4. Enable *Administrative access* for *HTTPS* and *PING*.
5. Click *OK*.


Routing is defined when creating the SD-WAN interface. The firewall policy is created after the SD-WAN interface is defined.

Configuring the VIP to access the remote servers

VIPs, interface IP addresses, and policies are created on the cloud FortiGate-VM to allow access to the remote servers.

To configure additional private IPs on AWS for the FortiGate VIP:

1. On the FortiGate EC2 instance, edit the *Elastic Network Interface* that corresponds to *port2*. In this example, Network Interface *eth1*.
2. Go to *Actions* > *Manage IP Addresses*.
3. Add two private IP address in the 10.0.2.0/24 subnet.
   These address will be used in the VIPs on the FortiGate. This ensures that traffic to these IP addresses is routed to the FortiGate by AWS.

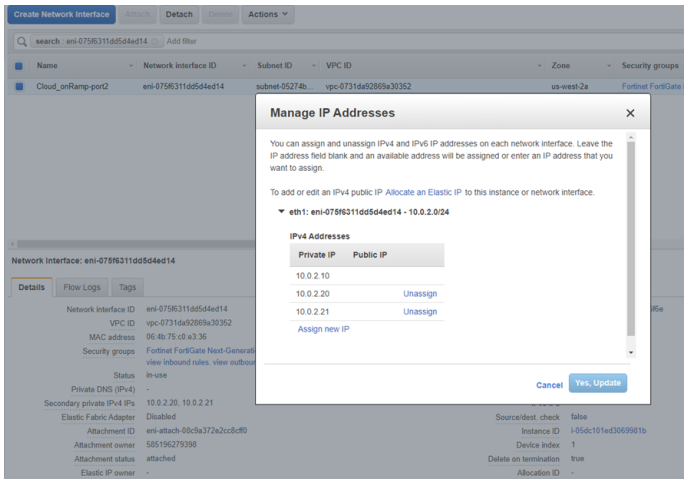


4. Click *Yes, Update*.

To configure VIPs on the cloud FortiGate-VM:


1. Go to *Policy & Objects* > *Virtual IPs* and click *Create New* > *Virtual IP*.
2. Configure the following:

Name	VIP-HTTP
Interface	port2
External IP address/range	10.0.2.20
Mapped IP address/range	10.0.3.33

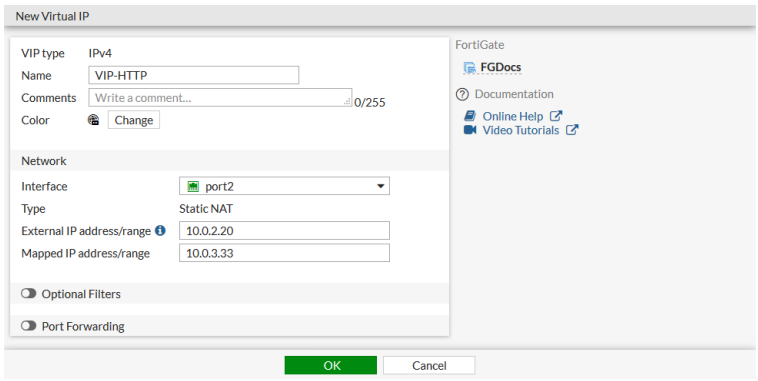

3. Click *OK*.
4. Create a second VIP for the FTP server with the following settings:


Name	VIP-FTP
Interface	port2
External IP address/range	10.0.2.21
Mapped IP address/range	10.0.3.44

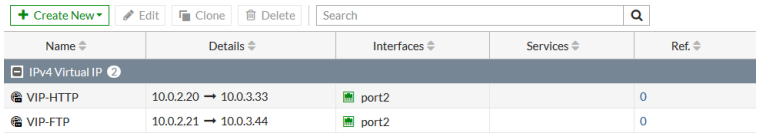

To configure firewall policies to allow traffic from port2 to port3:

1. Go to *Policy & Objects* > *IPv4 Policy* and click *Create New*.
2. Configure the following:


Name	To-WebServer
Incoming Interface	port2
Outgoing Interface	port3
Source	all
Destination	VIP-HTTP
Schedule	always
Service	ALL
Action	ACCEPT
NAT	Enabled

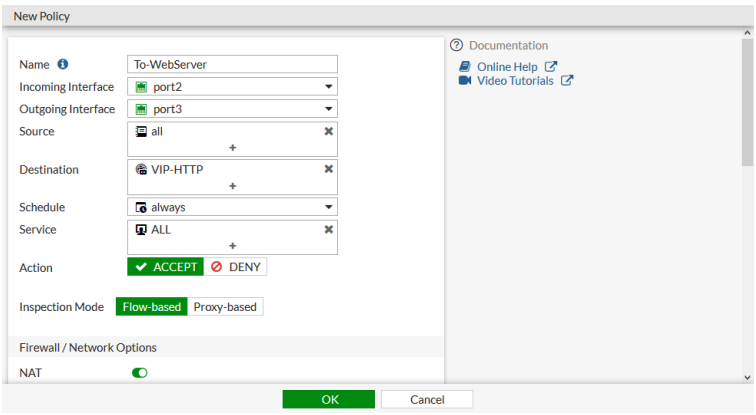

3. Configure the remaining settings as required.
4. Click *OK*.
5. Create a second policy for the FTP VIP with the following settings:

Name	To-FTP
Incoming Interface	port2
Outgoing Interface	port3
Source	all
Destination	VIP-FTP
Schedule	always
Service	ALL
Action	ACCEPT
NAT	Enabled

6. Click *OK*.

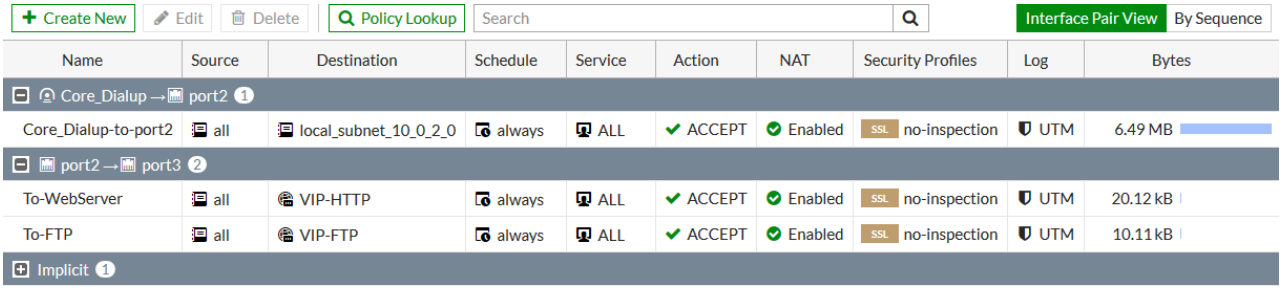

Configuring the SD-WAN to steer traffic between the overlays


Configure the HQ FortiGate to use two overlay tunnels for SD-WAN, steering HTTPS and HTTP traffic through the FGT_AWS_Tun tunnel, and SSH and FTP throguh the AWS_VPG tunnel.

1. Add SD-WAN member interfaces
2. Configure a route to the remote network
3. Configure firewall policies


4. Configure a health check
5. Configure SD-WAN rules

To add SD-WAN member interfaces:

1. Go to *Network* > *SD-WAN*
2. Set *Status to* Enable.
3. In the *SD-WAN Interface Members* table, click *Create New*.
4. Set *Interface* to *AWS_VPG* then click *OK*.

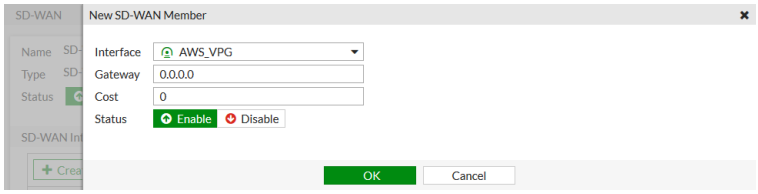


5. Click *Create New* again.
6. Set *Interface* to *FGT_AWS_Tun*.
7. Set *Gateway* to *172.16.200.1*.
8. Click *OK*.

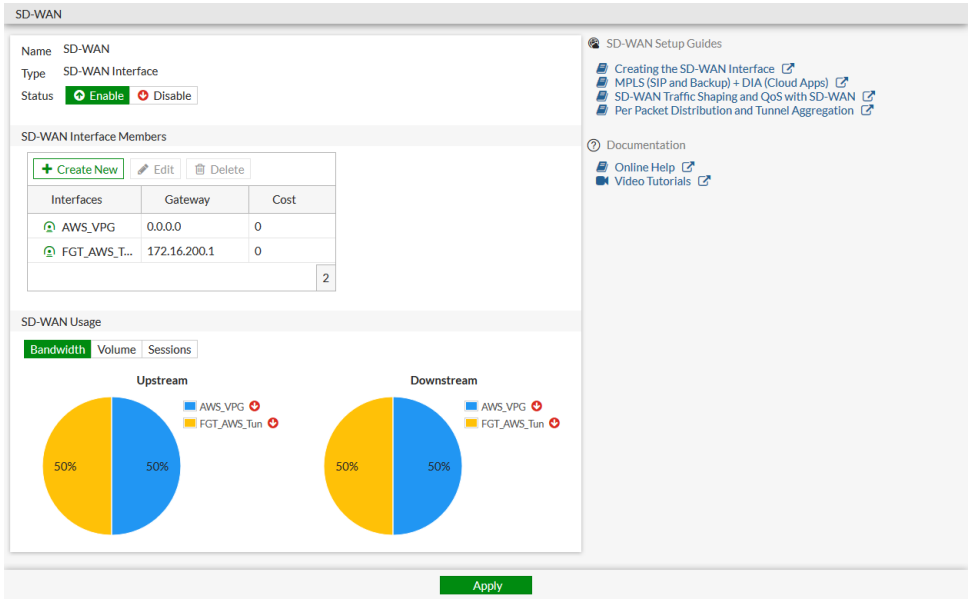

To configure a route to the remote network 10.0.2.0/24:

1. Go to *Network* > *Static Routes* and click *Create New*.
2. Set *Destination* to *Subnet* and enter the IP address and netmask: *10.0.2.0/255.255.255.0*.
3. Set *Interface* to *SD-WAN*.

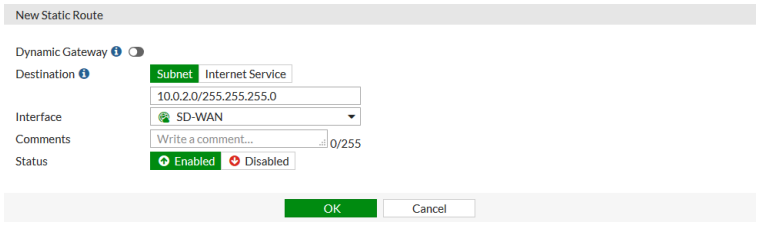


4. Click *OK*.

To configure firewall policies to allow traffic from the internal subnet to SD-WAN:

1. Go to *Policy & Objects* > *IPv4 Policy* and click *Create New*.
2. Configure the following:

Name	ISFW-to-IaaS
Incoming Interface	port3
Outgoing Interface	SD-WAN
Source	all
Destination	all
Schedule	always
Service	ALL
Action	ACCEPT
NAT	Enabled

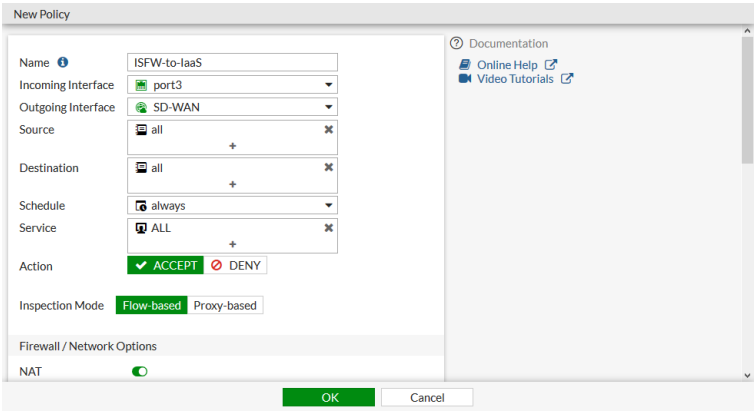

3. Configure the remaining settings as required.
4. Click *OK*.
   Once the firewall policies are configured, the VPN tunnels should come up when there is traffic.


To configure a health check to monitor the status of the tunnels:

As you are accessing the servers on the 10.0.2.0/24 subnet, it is preferable to use the FortiGate port2 interface as the ping server for detection. This ensures that, if the gateway is not reachable in either tunnel, its routes are brought down and traffic continues on the other tunnel.


1. Go to *Network* > *Performance SLA* and click *Create New*.
2. Configure the following:

Name	ping_AWS_Gateway
Protocol	Ping

Server	10.0.2.10
Participants	Add AWS_VPG and FGT_AWS_Tun as participants.

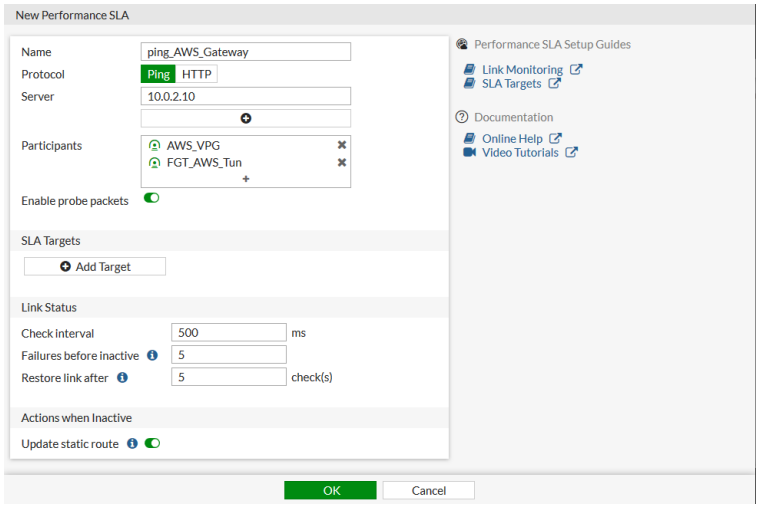

3. Click *OK*.

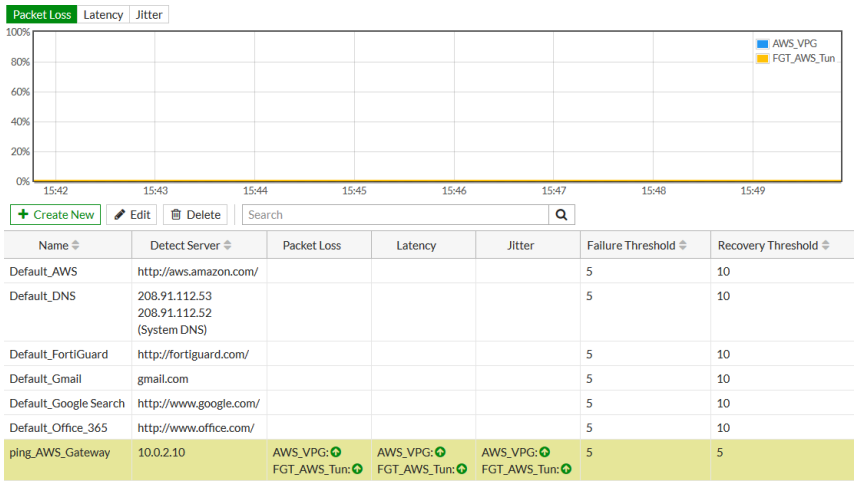

Name	Detect Server	Packet Loss	Latency	Jitter	Failure Threshold	Recovery Threshold
Default_AWS	http://aws.amazon.com/				5	10
Default_DNS	208.91.112.53 208.91.112.52 (System DNS)				5	10
Default_FortiGuard	http://fortiguard.com/				5	10
Default_Gmail	gmail.com				5	10
Default_Google Search	http://www.google.com/				5	10
Default_Office_365	http://www.office.com/				5	10
ping_AWS_Gateway	10.0.2.10	AWS_VPG: FGT_AWS_Tun:	AWS_VPG: FGT_AWS_Tun:	AWS_VPG: FGT_AWS_Tun:	5	5

Health check probes originate from the VPN interface's IP address. This is why the phase2 selectors are configured with *Local Address* set to *all*.


To configure SD-WAN rules to steer traffic:

HTTPS and HTTP traffic is steered to the FGT_AWS_Tun tunnel, and SSH and FTP traffic is steered to the AWS_VPG tunnel. The Manual algorithm is used in this example.


1. Go to *Network* > *SD-WAN Rules* and click *Create New*.
2. Configure the following:

Name	http-to-FGT_AWS_Tun
Source Address	all
Address	remote_subnet_10_0_2_0

Protocol	TCP
Port range	80 - 80
Outgoing Interfaces	Manual
Interface preference	FGT_AWS_Tun

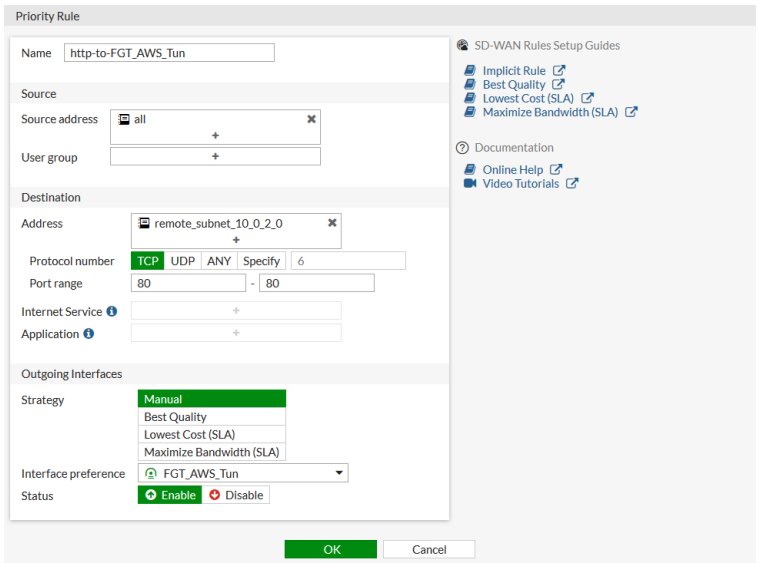

3. Click *OK*.
4. Create other SD-WAN rules as required:

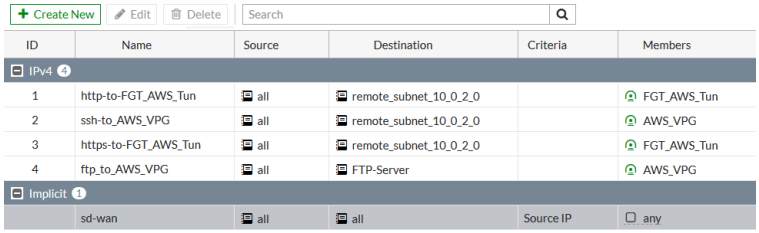

Verifying the traffic

To verify that pings are sent across the IPsec VPN tunnels

- On the HQ FortiGate, run the following CLI command:

```
# diagnose sniffer packet any 'host 10.0.2.10' 4 0 1 interfaces=[any]
filters=[host 10.0.2.10]
2020-06-05 11:35:14.822600 AWS_VPG out 169.254.55.154 -> 10.0.2.10: icmp: echo request
2020-06-05 11:35:14.822789 FGT_AWS_Tun out 172.16.200.2 -> 10.0.2.10: icmp: echo request
2020-06-05 11:35:14.877862 FGT_AWS_Tun in 10.0.2.10 -> 172.16.200.2: icmp: echo reply
2020-06-05 11:35:14.878887 AWS_VPG in 10.0.2.10 -> 169.254.55.154: icmp: echo reply
```


- On the cloud FortiGate-VM, run the following CLI command:

```
# diagnose sniffer packet any 'host 10.0.2.10' 4 0 1 interfaces=[any]
filters=[host 10.0.2.10]
2020-06-05 11:37:57.176329 port2 in 169.254.55.154 -> 10.0.2.10: icmp: echo request
```

```
2020-06-05 11:37:57.176363 port2 out 10.0.2.10 -> 169.254.55.154: icmp: echo reply
2020-06-05 11:37:57.176505 Core_Dialup in 172.16.200.2 -> 10.0.2.10: icmp: echo request
2020-06-05 11:37:57.176514 Core_Dialup out 10.0.2.10 -> 172.16.200.2: icmp: echo reply
```

To verify the SLA health checks on the HQ FortiGate:

1. Go to *Network* > *Performance SLA* and select *Packet Loss* and the *ping_AWS_Gateway* SLA:

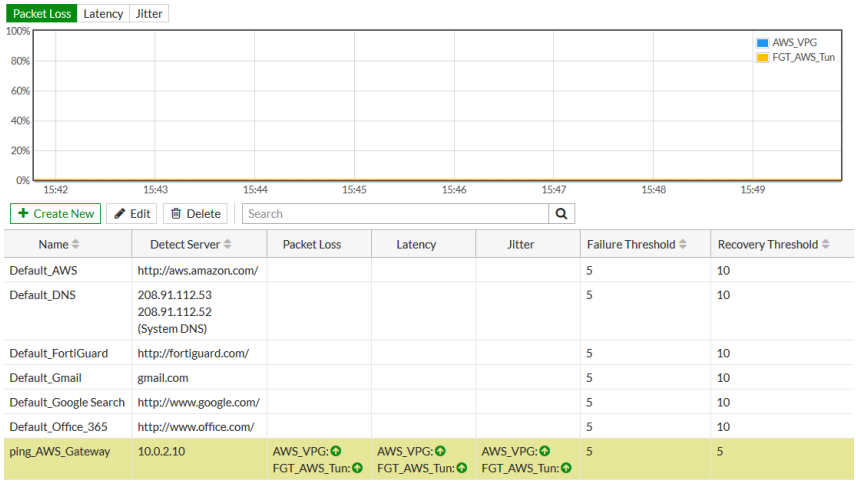


Name	Detect Server	Packet Loss	Latency	Jitter	Failure Threshold	Recovery Threshold
Default_AWS	http://aws.amazon.com/				5	10
Default_DNS	208.91.112.53 208.91.112.52 (System DNS)				5	10
Default_FortiGuard	http://fortiguard.com/				5	10
Default_Gmail	gmail.com				5	10
Default_Google Search	http://www.google.com/				5	10
Default_Office_365	http://www.office.com/				5	10
ping_AWS_Gateway	10.0.2.10	AWS_VPG: FGT_AWS_Tun:	AWS_VPG: FGT_AWS_Tun:	AWS_VPG: FGT_AWS_Tun:	5	5

2. Run the following CLI command:

```
# diagnose sys sdwan health-check
…
Seq(1 AWS_VPG): state(alive), packet-loss(0.000%) latency(56.221), jitter(0.290) sla_
map=0x0
Seq(2 FGT_AWS_Tun): state(alive), packet-loss(0.000%) latency(55.039), jitter(0.223)
sla_map=0x0
```

To verify service rules:

1. Go to *Network* > *SD-WAN Rules*:

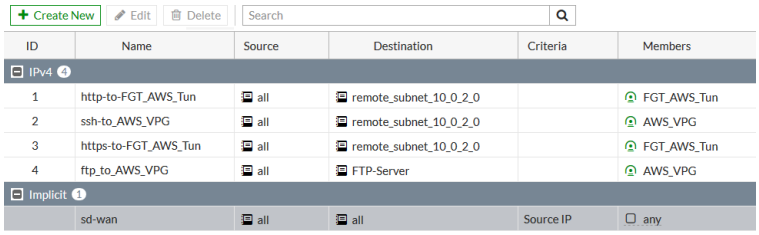

ID	Name	Source	Destination	Criteria	Members
IPv4 4					
1	http-to-FGT_AWS_Tun	all	remote_subnet_10_0_2_0		FGT_AWS_Tun
2	ssh-to_AWS_VPG	all	remote_subnet_10_0_2_0		AWS_VPG
3	https-to-FGT_AWS_Tun	all	remote_subnet_10_0_2_0		FGT_AWS_Tun
4	ftp_to_AWS_VPG	all	FTP-Server		AWS_VPG
Implicit 1					
	sd-wan	all	all	Source IP	any

2. Run the following CLI command:

```
# diagnose sys sdwan service

Service(1): Address Mode(IPV4) flags=0x0
  Gen(1), TOS(0x0/0x0), Protocol(6: 80->80), Mode(manual)
  Members:
    1: Seq_num(2 FGT_AWS_Tun), alive, selected
  Src address:
        0.0.0.0-255.255.255.255
  Dst address:
        10.0.2.0-10.0.2.255
```

```
Service(2): Address Mode(IPV4) flags=0x0
  Gen(1), TOS(0x0/0x0), Protocol(6: 22->22), Mode(manual)
  Members:
    1: Seq_num(1 AWS_VPG), alive, selected
  Src address:
        0.0.0.0-255.255.255.255
  Dst address:
        10.0.2.0-10.0.2.255

Service(3): Address Mode(IPV4) flags=0x0
  Gen(1), TOS(0x0/0x0), Protocol(6: 443->443), Mode(manual)
  Members:
    1: Seq_num(2 FGT_AWS_Tun), alive, selected
  Src address:
        0.0.0.0-255.255.255.255
  Dst address:
        10.0.2.0-10.0.2.255

Service(4): Address Mode(IPV4) flags=0x0
  Gen(1), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(manual)
  Members:
    1: Seq_num(1 AWS_VPG), alive, selected
  Src address:
        0.0.0.0-255.255.255.255
  Dst address:
        10.0.2.21-10.0.2.21
```

To verify that sessions are going to the correct tunnel:

1. Run the following CLI command to verify that HTTPS and HTTP traffic destined for the Web server at 10.0.2.20 uses FGT_AWS_Tun:

```
# diagnose sys session filter dst 10.0.2.20
# diagnose sys session list

session info: proto=6 proto_state=11 duration=2 expire=3597 timeout=3600 flags=00000000
socktype=0 sockport=0 av_idx=0 use=4
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=FGT_AWS_Tun/ vlan_cos=0/255
state=log may_dirty npu f00 csf_syncd_log app_valid
statistic(bytes/packets/allow_err): org=593/4/1 reply=3689/5/1 tuples=3
tx speed(Bps/kbps): 264/2 rx speed(Bps/kbps): 1646/13
orgin->sink: org pre->post, reply pre->post dev=0->18/18->0 gwy=172.16.200.1/0.0.0.0
hook=post dir=org act=snat 10.100.88.101:55589->10.0.2.20:80(172.16.200.2:55589)
hook=pre dir=reply act=dnat 10.0.2.20:80->172.16.200.2:55589(10.100.88.101:55589)
hook=post dir=reply act=noop 10.0.2.20:80->10.100.88.101:55589(0.0.0.0:0)
pos/(before,after) 0/(0,0), 0/(0,0)
src_mac=00:09:0f:00:03:01
misc=0 policy_id=32 auth_info=0 chk_client_info=0 vd=0
serial=00b7442c tos=ff/ff app_list=2000 app=34050 url_cat=0
rpdb_link_id= ff000001 rpdb_svc_id=2154552596 ngfwid=n/a
npu_state=0x3041008
```

```
session info: proto=6 proto_state=66 duration=1 expire=3 timeout=3600 flags=00000000
socktype=0 sockport=0 av_idx=0 use=4
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=FGT_AWS_Tun/ vlan_cos=0/255
state=log may_dirty ndr f00 csf_syncd_log
statistic(bytes/packets/allow_err): org=48/1/0 reply=40/1/1 tuples=3
tx speed(Bps/kbps): 26/0 rx speed(Bps/kbps): 22/0
orgin->sink: org pre->post, reply pre->post dev=5->18/18->5
gwy=172.16.200.1/10.100.88.101
hook=post dir=org act=snat 10.100.88.101:55621->10.0.2.20:443(172.16.200.2:55621)
hook=pre dir=reply act=dnat 10.0.2.20:443->172.16.200.2:55621(10.100.88.101:55621)
hook=post dir=reply act=noop 10.0.2.20:443->10.100.88.101:55621(0.0.0.0:0)
pos/(before,after) 0/(0,0), 0/(0,0)
src_mac=00:09:0f:00:03:01
misc=0 policy_id=32 auth_info=0 chk_client_info=0 vd=0
serial=00b74b50 tos=ff/ff app_list=2000 app=0 url_cat=0
rpdb_link_id= ff000003 rpdb_svc_id=2154552596 ngfwid=n/a
npu_state=0x3041008
```

2. Run the following CLI command to verify that SSH and FTP traffic destined for the FTP server at 10.0.2.21 uses AWS_VPG:

```
# diagnose sys session filter dst 10.0.2.20
# diagnose sys session list

session info: proto=6 proto_state=11 duration=197 expire=3403 timeout=3600
flags=00000000 socktype=0 sockport=0 av_idx=0 use=4
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=AWS_VPG/ helper=ftp vlan_cos=0/255
state=log may_dirty ndr npu f00 csf_syncd_log app_valid
statistic(bytes/packets/allow_err): org=580/12/1 reply=863/13/1 tuples=3
tx speed(Bps/kbps): 2/0 rx speed(Bps/kbps): 4/0
orgin->sink: org pre->post, reply pre->post dev=5->17/17->5
gwy=169.254.55.153/10.100.88.101
hook=post dir=org act=snat 10.100.88.101:55528->10.0.2.21:21(169.254.55.154:55528)
hook=pre dir=reply act=dnat 10.0.2.21:21->169.254.55.154:55528(10.100.88.101:55528)
hook=post dir=reply act=noop 10.0.2.21:21->10.100.88.101:55528(0.0.0.0:0)
pos/(before,after) 0/(0,0), 0/(0,0)
src_mac=00:09:0f:00:03:01
misc=0 policy_id=32 auth_info=0 chk_client_info=0 vd=0
serial=00b72a5f tos=ff/ff app_list=2000 app=15896 url_cat=0
rpdb_link_id= ff000004 rpdb_svc_id=2149689849 ngfwid=n/a
npu_state=0x3041008


session info: proto=6 proto_state=11 duration=3 expire=3596 timeout=3600 flags=00000000
socktype=0 sockport=0 av_idx=0 use=4
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=AWS_VPG/ vlan_cos=0/255
state=log may_dirty ndr npu f00 csf_syncd_log app_valid
statistic(bytes/packets/allow_err): org=1496/6/1 reply=1541/5/1 tuples=3
tx speed(Bps/kbps): 416/3 rx speed(Bps/kbps): 429/3
```

```
orgin->sink: org pre->post, reply pre->post dev=5->17/17->5
gwy=169.254.55.153/10.100.88.101
hook=post dir=org act=snat 10.100.88.101:55644->10.0.2.21:22(169.254.55.154:55644)
hook=pre dir=reply act=dnat 10.0.2.21:22->169.254.55.154:55644(10.100.88.101:55644)
hook=post dir=reply act=noop 10.0.2.21:22->10.100.88.101:55644(0.0.0.0:0)
pos/(before,after) 0/(0,0), 0/(0,0)
src_mac=00:09:0f:00:03:01
misc=0 policy_id=32 auth_info=0 chk_client_info=0 vd=0
serial=00b75287 tos=ff/ff app_list=2000 app=16060 url_cat=0
rpdb_link_id= ff000002 rpdb_svc_id=2149689849 ngfwid=n/a
npu_state=0x3041008
```

To simulate an issue on an overlay VPN tunnel:

On the cloud FortiGate-VM, disable the firewall policy allowing Core_Dialup to port2.

1. Health-checks through the FGT_AWS_Tun tunnel fail:
   a. Go to *Network* > *Performance SLA* and select *Packet Loss* and the *ping_AWS_Gateway* SLA:

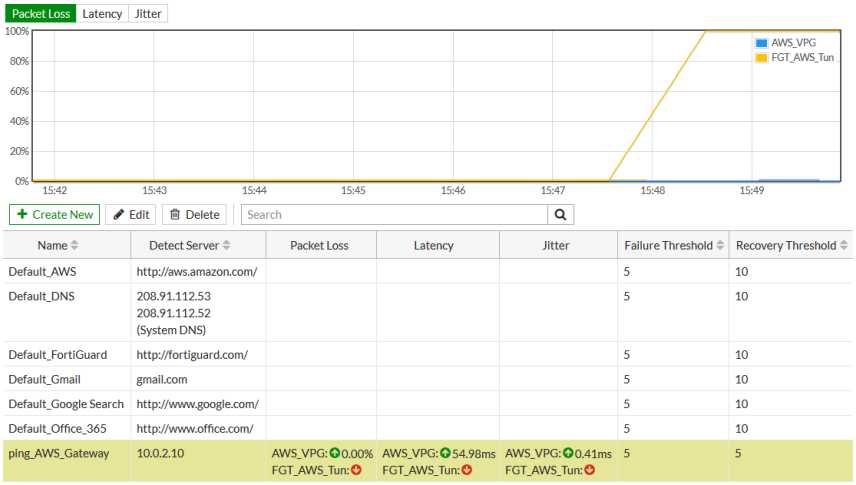


Name	Detect Server	Packet Loss	Latency	Jitter	Failure Threshold	Recovery Threshold
Default_AWS	http://aws.amazon.com/				5	10
Default_DNS	208.91.112.53 208.91.112.52 (System DNS)				5	10
Default_FortiGuard	http://fortiguard.com/				5	10
Default_Gmail	gmail.com				5	10
Default_Google Search	http://www.google.com/				5	10
Default_Office_365	http://www.office.com/				5	10
ping_AWS_Gateway	10.0.2.10	AWS_VPG: 0.00% FGT_AWS_Tun:	AWS_VPG: 54.98ms FGT_AWS_Tun:	AWS_VPG: 0.41ms FGT_AWS_Tun:	5	5

   b. Run the following CLI command:

```
# diagnose sys sdwan health-check
…
Seq(1 AWS_VPG): state(alive), packet-loss(0.000%) latency(52.746), jitter(0.713) sla_
map=0x0
Seq(2 FGT_AWS_Tun): state(dead), packet-loss(19.000%) sla_map=0x0
```

2. Service rules show that the member is down:
   a. Go to *Network* > *SD-WAN Rules*:

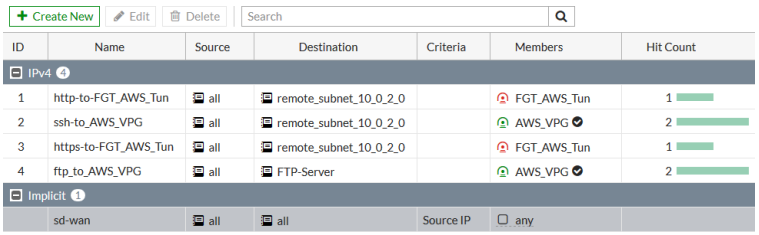

ID	Name	Source	Destination	Criteria	Members	Hit Count
IPv4 4						
1	http-to-FGT_AWS_Tun	all	remote_subnet_10_0_2_0		FGT_AWS_Tun	1
2	ssh-to_AWS_VPG	all	remote_subnet_10_0_2_0		AWS_VPG	2
3	https-to-FGT_AWS_Tun	all	remote_subnet_10_0_2_0		FGT_AWS_Tun	1
4	ftp_to_AWS_VPG	all	FTP-Server		AWS_VPG	2
Implicit 1						
	sd-wan	all	all	Source IP	any	

   b. Run the following CLI command:

```
# diagnose sys sdwan service
```

```
Service(1): Address Mode(IPV4) flags=0x0
  Gen(2), TOS(0x0/0x0), Protocol(6: 80->80), Mode(manual)
  Members:
    1: Seq_num(2 FGT_AWS_Tun), dead
  Src address:
        0.0.0.0-255.255.255.255
  Dst address:
        10.0.2.0-10.0.2.255

Service(2): Address Mode(IPV4) flags=0x0
  Gen(1), TOS(0x0/0x0), Protocol(6: 22->22), Mode(manual)
  Members:
    1: Seq_num(1 AWS_VPG), alive, selected
  Src address:
        0.0.0.0-255.255.255.255
  Dst address:
        10.0.2.0-10.0.2.255

Service(3): Address Mode(IPV4) flags=0x0
  Gen(2), TOS(0x0/0x0), Protocol(6: 443->443), Mode(manual)
  Members:
    1: Seq_num(2 FGT_AWS_Tun), dead
  Src address:
        0.0.0.0-255.255.255.255
  Dst address:
        10.0.2.0-10.0.2.255

Service(4): Address Mode(IPV4) flags=0x0
  Gen(1), TOS(0x0/0x0), Protocol(0: 1->65535), Mode(manual)
  Members:
    1: Seq_num(1 AWS_VPG), alive, selected
  Src address:
        0.0.0.0-255.255.255.255
  Dst address:
        10.0.2.21-10.0.2.21
```

3. Sessions are redirected to the working tunnel:
   a. Run the following CLI command:

```
# diagnose sys session list

session info: proto=6 proto_state=11 duration=3 expire=3596 timeout=3600
flags=00000000 socktype=0 sockport=0 av_idx=0 use=4
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=AWS_VPG/ vlan_cos=0/255
state=log may_dirty ndr npu f00 csf_syncd_log app_valid
statistic(bytes/packets/allow_err): org=504/4/1 reply=620/3/1 tuples=3
tx speed(Bps/kbps): 150/1 rx speed(Bps/kbps): 184/1
orgin->sink: org pre->post, reply pre->post dev=0->17/17->0
gwy=169.254.55.153/0.0.0.0
hook=post dir=org act=snat 10.100.88.101:56373->10.0.2.20:80(169.254.55.154:56373)
hook=pre dir=reply act=dnat 10.0.2.20:80->169.254.55.154:56373(10.100.88.101:56373)
hook=post dir=reply act=noop 10.0.2.20:80->10.100.88.101:56373(0.0.0.0:0)
pos/(before,after) 0/(0,0), 0/(0,0)
```

```
src_mac=00:09:0f:00:03:01
misc=0 policy_id=32 auth_info=0 chk_client_info=0 vd=0
serial=00b87199 tos=ff/ff app_list=2000 app=34050 url_cat=0
rpdb_link_id= 80000000 rpdb_svc_id=0 ngfwid=n/a
npu_state=0x3041008

session info: proto=6 proto_state=66 duration=3 expire=1 timeout=3600 flags=00000000
socktype=0 sockport=0 av_idx=0 use=4
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=AWS_VPG/ vlan_cos=0/255
state=log may_dirty ndr f00 csf_syncd_log
statistic(bytes/packets/allow_err): org=48/1/0 reply=40/1/1 tuples=3
tx speed(Bps/kbps): 15/0 rx speed(Bps/kbps): 12/0
orgin->sink: org pre->post, reply pre->post dev=5->17/17->5
gwy=169.254.55.153/10.100.88.101
hook=post dir=org act=snat 10.100.88.101:56383->10.0.2.20:443(169.254.55.154:56383)
hook=pre dir=reply act=dnat 10.0.2.20:443->169.254.55.154:56383(10.100.88.101:56383)
hook=post dir=reply act=noop 10.0.2.20:443->10.100.88.101:56383(0.0.0.0:0)
pos/(before,after) 0/(0,0), 0/(0,0)
src_mac=00:09:0f:00:03:01
misc=0 policy_id=32 auth_info=0 chk_client_info=0 vd=0
serial=00b876bb tos=ff/ff app_list=2000 app=0 url_cat=0
rpdb_link_id= 80000000 rpdb_svc_id=0 ngfwid=n/a
npu_state=0x3041008
total session 2
```

4. Routes to the *FGT_AWS_Tun* tunnel are removed:
   a. If *Optimal* dashboards is selected, go to *Dashboard* > *Network* and expand the Routing widget to view the routing table.
   If *Comprehensive* dashboards is selected, go to *Dashboard* > *Routing Monitor* and select *Static & Dynamic* in the widget toolbar to view the routing table:

Network	Gateway IP	Interfaces	Distance	IP Version	Type
IPv4 40					
0.0.0.0/0	10.100.64.254	Internet_A (port1)	1	IPv4	Static
0.0.0.0/0	10.100.65.254	Internet_B (port5)	1	IPv4	Static
10.0.2.0/24	169.254.55.153	AWS_VPG	1	IPv4	Static
10.0.10.0/24	0.0.0.0	VPN_A_Tunnel (Branch-HQ-A)	0	IPv4	Connected
10.0.10.1/32	0.0.0.0	VPN_A_Tunnel (Branch-HQ-A)	0	IPv4	Connected

   b. Run the following CLI command:


```
# get router info routing-table all
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
       O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
       * - candidate default

Routing table for VRF=0
S*      0.0.0.0/0 [1/0] via 10.100.64.254, port1
```

```
                    [1/0] via 10.100.65.254, port5
S       10.0.2.0/24 [1/0] via 169.254.55.153, AWS_VPG
C       10.0.10.0/24 is directly connected, Branch-HQ-A
C       10.0.10.1/32 is directly connected, Branch-HQ-A
…
```

Hub and spoke SD-WAN deployment example

This topology diagram shows an overview of the network that is configured in this example:

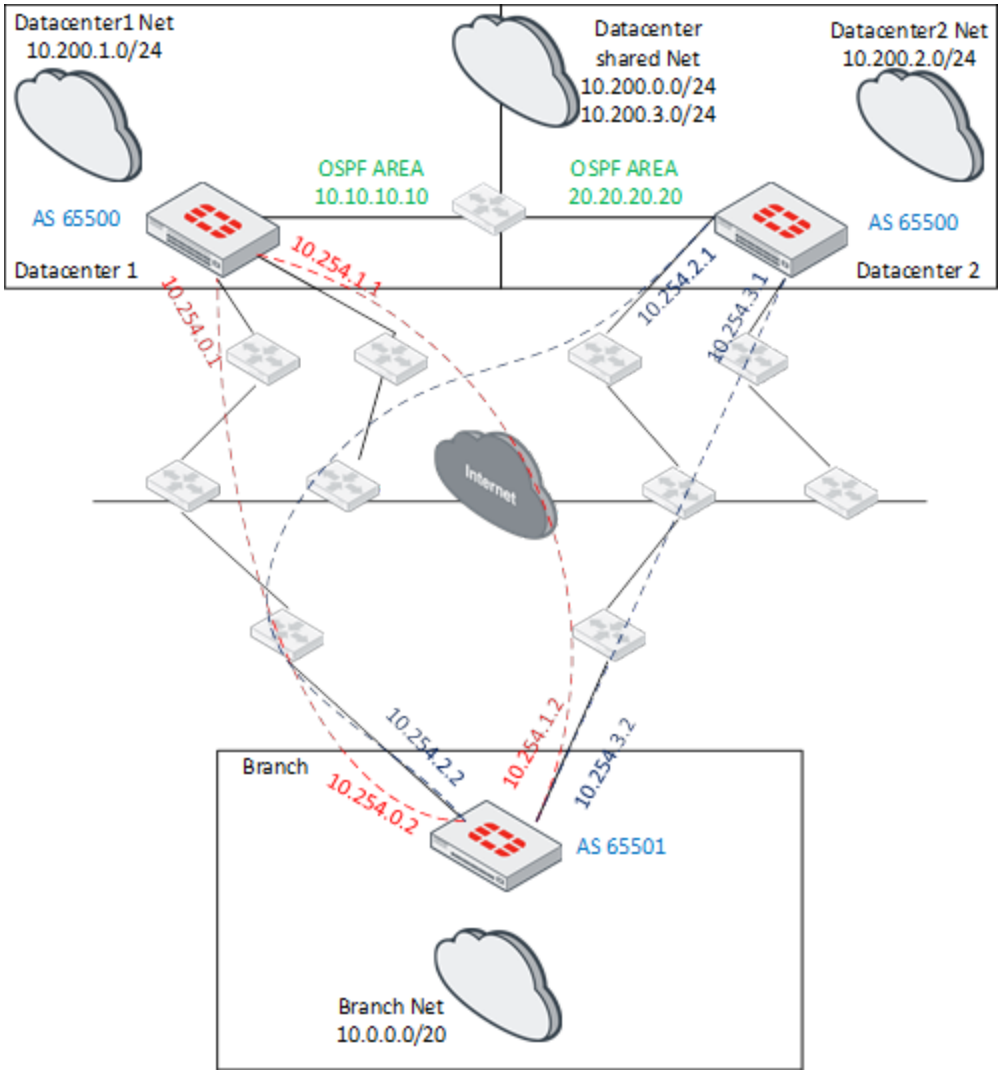

Datacenter configuration

The datacenter is configured to support:

- Zero touch provisioning of new spokes
- Point to multipoint VPN
- Central management of access with the datacenter firewall
- Dynamic peering, to share routing information between branches and the datacenter
- VDOM compatibility, with inter-VDOM links for isolation and segmentation

To configure the datacenter, complete the following steps:

1. Configure dial-up (dynamic) VPN
2. Configure VPN interfaces
3. Configure loopback interface
4. Configure BGP
5. Firewall policies
6. Configure a black hole route

Configure dial-up (dynamic) VPN

Dial-up, or dynamic, VPNs are used to facilitate zero touch provisioning of new spokes to establish VPN connections to the hub FortiGate.

The `exchange-interface-ip` option is enabled to allow the exchange of IPsec interface IP addresses. This allows a point to multipoint connection to the hub FortiGate.

The `add-route` option is disabled to allow multiple dial-up tunnels to be established to the same host that is advertising the same network. This dynamic network discovery is facilitated by the BGP configuration; see Configure BGP on page 588 for details.

Wildcard security associations are defined for the phase2 interface because routing is used to determine if traffic is subject to encryption and transmission through the IPsec VPN tunnel. The phase1 interface name must be 11 characters or less.

A dynamic VPN configuration must be defined for each interface that connects to the internet.

To configure the IPsec phase1 interfaces:

```
config vpn ipsec phase1-interface
    edit "vpn-isp-a"
        set type dynamic
        set interface "port2"
        set peertype any
        set exchange-interface-ip enable
        set proposal aes256-sha256
        set add-route disable
        set dhgrp 5
        set net-device enable
        set psksecret ********
```

```
    next
    edit "vpn-isp-b"
        set type dynamic
        set interface "port3"
        set peertype any
        set exchange-interface-ip enable
        set proposal aes256-sha256
        set add-route disable
        set dhgrp 5
        set net-device enable
        set psksecret ********
    next
end
```

To configure the IPsec phase2 interfaces:

```
config vpn ipsec phase2-interface
    edit "vpn-isp-a_p2"
        set phase1name "vpn-isp-a"
        set proposal aes256-sha256
        set pfs disable
        set replay disable
    next
    edit "vpn-isp-b_p2"
        set phase1name "vpn-isp-b"
        set proposal aes256-sha256
        set pfs disable
        set replay disable
    next
end
```

Configure VPN interfaces

To establish the BGP session, IP addresses must be assigned to the tunnel interfaces that BGP will use to peer.

The hub IP address is set to the address that the tunnels connect to. The remote IP address is set to highest unused IP address that is part of the tunnel network. This establishes two connected routes directly back to the branch FortiGate in the hub FortiGate's routing table.

Ping is allowed on the virtual interface to confirm that a point to point tunnel has been established between the hub and branch FortiGates.

To define IP addresses for VPN interfaces:

```
config system interface
    edit "vpn-isp-a"
        set vdom "root"
        set ip 10.254.0.1 255.255.255.255
        set allowaccess ping
        set type tunnel
        set remote-ip 10.254.0.254 255.255.255.0
        set interface "port2"
    next
    edit "vpn-isp-b"
        set vdom "root"
```

```
        set ip 10.254.1.1 255.255.255.255
        set allowaccess ping
        set type tunnel
        set remote-ip 10.254.1.254 255.255.255.0
        set interface "port3"
    next
end
```

Configure loopback interface

A loopback interface must be defined on the hub FortiGate to be used as a common probe point for the FortiGates that are using SD-WAN. The FortiGates send a probe packet from each of their SD-WAN member interfaces so that they can determine the best route according to their policies. Ping is allowed so that it can be used for measurements.

To configure the loopback interface on the hub FortiGate:

```
config system interface
    edit "loopback_0"
        set vdom "root"
        set ip 10.255.255.1 255.255.255.255
        set allowaccess ping
        set type loopback
    next
end
```

Configure BGP

Network route discovery is facilitated by BGP.

EBGP is used to prevent the redistribution of routes that are in the same Autonomous System (AS) number as the host. It is also required to influence route selection on the branches with AS-Path prepending. EBGP multipath is enabled so that the hub FortiGate can dynamically discover multiple paths for networks that are advertised at the branches.

The neighbor range and group settings are configured to allow peering relationships to be established without defining each individual peer. Connecting branches have their tunnel interfaces configured within the range of the BGP peer.

In order to facilitate the fastest route failovers, configure the following timers to their lowest levels: `scan-time`, `advertisement-interval`, `keep-alive-timer`, and `holdtime-timer`.

To configure BGP on the hub FortiGate:

```
config router bgp
    set as 65500
    set router-id 10.10.0.1
    set ebgp-multipath enable
    set graceful-restart enable
    config neighbor-group
        edit "branch-peers-1"
            set soft-reconfiguration enable
            set remote-as 65501
        next
        edit "branch-peers-2"
            set soft-reconfiguration enable
```

```
            set remote-as 65501
        next
    end
    config neighbor-range
        edit 1
            set prefix 10.254.0.0 255.255.255.0
            set neighbor-group "branch-peers-1"
        next
        edit 2
            set prefix 10.254.1.0 255.255.255.0
            set neighbor-group "branch-peers-2"
        next
    end
    config network
        edit 1
            set prefix 10.200.1.0 255.255.255.0
        next
        edit 2
            set prefix 10.200.0.0 255.255.255.0
        next
        edit 3
            set prefix 10.200.3.0 255.255.255.0
        next
    end
end
```

Firewall policies

Centralized access is controlled from the hub FortiGate using Firewall policies. In addition to layer three and four inspection, security policies can be used in the policies for layer seven traffic inspection.

It is best practice to only allow the networks and services that are required for communication through the firewall. The following rules are the minimum that must be configured to allow SD-WAN to function:

Source Interface	Destination Interface	Source Address	Destination Address	Action	Schedule	Service	Comments
<vpn interfaces>	<internal Interface>	<branch tunnel IP addresses>	<hub FortiGate internal interface>	Accept	Always	ICMP	Allow health checks to the hub FortiGate
<vpn interfaces>	<internal Interface>	<branch networks>	<datacenter networks>	Accept	Always	<allowed services>	Allow traffic from branch networks

For this example, a simple policy that allows all traffic is configured.

To configure a firewall policy:

```
config firewall policy
    edit 1
        set name "Allow All"
        set srcintf "any"
```

```
        set dstintf "any"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

Configure a black hole route

If there is a temporary loss of connectivity to the branch routes, it is best practice to send the traffic that is destined for those networks into a black hole until connectivity is restored.

To configure a black hole route for branch networks:

```
config router static
    edit 6
        set dst 10.0.0.0/14
        set distance 254
        set blackhole enable
    next
end
```

Branch configuration

The branches are configured to support:

- Client side SD-WAN with intelligent load balancing based on link quality
- Easy to create configuration templates for quick spoke deployment
- Split tunnel deployment for local internet access
- VDOM compatibility, with inter-VDOM links for isolation and segmentation

To configure a branch, complete the following steps:

1. Configure VPN to the hub
2. Configure VPN interfaces
3. Configure BGP
4. Configure SD-WAN
5. Firewall configuration

Configure VPN to the hub

The branch uses a normal site-to-site VPN configuration.

Wildcard security associations are define in the phase2 configuration because dynamic routing with BGP determines what traffic must traverse the VPN tunnel for encryption/transmission.

To make sure that the VPN is established, `auto-negotiate` is enabled.

To configure the IPsec phase1 interfaces:

```
config vpn ipsec phase1-interface
    edit "vpn_dc1-1"
        set interface "port2"
        set peertype any
        set exchange-interface-ip enable
        set proposal aes256-sha256
        set dhgrp 5
        set remote-gw 172.16.0.78
        set psksecret ********
    next
    edit "vpn_dc1-2"
        set interface "port3"
        set peertype any
        set exchange-interface-ip enable
        set proposal aes256-sha256
        set dhgrp 5
        set remote-gw 172.16.0.82
        set psksecret ********
    next
end
```

To configure the IPsec phase2 interfaces:

```
config vpn ipsec phase2-interface
    edit "vpn_dc1-1_p2"
        set phase1name "vpn_dc1-1"
        set proposal aes256-sha256
        set pfs disable
        set replay disable
        set auto-negotiate enable
    next
    edit "vpn_dc1-2_p2"
        set phase1name "vpn_dc1-2"
        set proposal aes256-sha256
        set pfs disable
        set replay disable
        set auto-negotiate enable
    next
end
```

Configure VPN interfaces

The branch must define its local tunnel interface IP address, and the remote tunnel interface IP address of the datacenter FortiGate, to establish the point to multipoint VPN.

To define IP addressses for VPN interfaces:

```
config system interface
    edit "vpn_dc1-1"
        set vdom "root"
        set ip 10.255.0.2 255.255.255.255
        set allowaccess ping
        set type tunnel
        set remote-ip 10.255.0.1 255.255.255.255
        set interface "port2"
    next
    edit "vpn_dc1-2"
        set vdom "root"
        set ip 10.255.1.2 255.255.255.255
        set allowaccess ping
        set type tunnel
        set remote-ip 10.255.1.1 255.255.255.255
        set interface "port3"
    next
end
```

Configure BGP

BGP enables learning dynamic routes from the datacenter. The BGP configuration is normal, with the definition of the datacenter FortiGate tunnel IP addresses set as BGP peers.

Routes that have the same network mask, administrative distance, priority, and AS length are automatically considered for SD-WAN when the interfaces that those routes are on are added to the SD-WAN interface group.

In order to facilitate the fastest route failovers, configure the following timers to their lowest levels: `scan-time`, `advertisement-interval`, `keep-alive-timer`, and `holdtime-timer`.

The `distance-external` option might need to be configured if you need routes that are learned from BGP to take precedence over static routes.

To configure BGP on the branch FortiGate:

```
config router bgp
    set as 65501
    set router-id 10.254.0.2
    set ebgp-multipath enable
    config neighbor
        edit "10.254.0.1"
            set soft-reconfiguration enable
            set remote-as 65500
        next
        edit "10.254.1.1"
            set soft-reconfiguration enable
            set remote-as 65500
        next
    end
end
```

Configure SD-WAN

SD-WAN configuration is required to load balance based on the quality of the links. It can be configured to select the best link based on characteristics such as jitter, packet loss, and latency. A policy route is created by the FortiGate to select the best link based on the defined criteria.

For SD-WAN interfaces, or members, the peer is defined to reference the BGP neighbor that is tied to that specific interface.

The health check is the ping server that gathers the link characteristics used for link selection. It is recommended that the minimum `failtime` be set to `2`.

The service definition defines the criteria for the policy routes. It can match based on the following characteristics:

- Protocol
- Destination Address
- Source Address
- Identity Based Group
- Internet Service Definition
- Source Port
- Destination Port
- Destination Route Tag

To dynamically determine the networks of the policy routes, routes that are learned from a BGP neighbor are matched against a route map, and a tag is defined for the matching routes. The service rules learn the networks based on these tags, instead of defining objects based on the learned addresses' network prefixes . See Dynamic definition of SD-WAN routes on page 597 for details on configuring the FortiGate to use the destination tags for the SD-WAN service definition.

To define the SD-WAN member interfaces:

```
config system virtual-wan-link
    set status enable
    config members
        edit 1
            set interface "vpn_dc1-1"
        next
        edit 2
            set interface "vpn_dc1-2"
        next
    end
end
```

To define the SD-WAN health checks:

```
config system virtual-wan-link
    config health-check
        edit "datacenter1"
            set server "10.200.1.1"
            set interval 1
            set failtime 2
            set recoverytime 10
        next
    end
end
```

To define the SD-WAN service rules:

```
config system virtual-wan-link
    config service
        edit 1
            set mode priority
            set dst n-corporate
            set health-check "datacenter1"
            set priority-members 1 2
        next
    end
end
```

Firewall configuration

Centralized access is controlled from the hub FortiGate using Firewall policies. In addition to layer three and four inspection, security policies can be used in the policies for layer seven traffic inspection.

It is best practice to only allow the networks and services that are required for communication through the firewall. The following rules are the minimum that must be configured to allow SD-WAN to function:

Source Interface	Destination Interface	Source Address	Destination Address	Action	Schedule	Service	Comments
<internal interface>	<virtual wan link>	<branch networks>	<datacenter networks>	Accept	Always	<allowed services>	Allow traffic from branch to datacenter
<virtual wan link>	<internal Interface>	<datacenter networks>	<branch networks>	Accept	Always	<allowed services>	Allow traffic from datacenter to branch

For this example, a simple policy that allows all traffic is configured.

To configure a firewall policy:

```
config firewall policy
    edit 1
        set name "Allow All"
        set srcintf "any"
        set dstintf "any"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

Validation

The following commands can be used to validate the connections on the datacenter and branches.

Datacenter

Routing table:

```
get router info routing-table all
```

VPN establishment:

```
diagnose vpn ike gateway list
```

Branch

SD-WAN validation:

```
diagnose sys virtual-wan-link member
diagnose sys virtual-wan-link service
diagnose sys virtual-wan-link health-check
```

Routing table:

```
get router info routing-table all
get router info route-map-address
get router info bgp route-map <route-map-name>
```

VPN establishment:

```
diagnose vpn ike gateway list
```

Dynamic definition of SD-WAN routes

Dynamic definitions of SD-WAN routes alleviate administrators from needing to know the destination of the traffic that is being load balanced, which, in an environment where routes are constantly added and removed, required a significant amount of administrative overhead.

The FortiGate can be configured to apply a route map to a BGP neighbor, and tag the routes that are learned from that neighbor with the `set-route-tag` command. After those routes are assigned a tag ID in the route map, the ID can be referenced in the SD-WAN rule.

To define the route map to apply to the BGP neighbor:

```
config router route-map
    edit "map-comm1"
        config rule
            edit 1
                set match-origin igp
                set set-route-tag 12
            next
            edit 2
                set match-ip-address "pf-all-in"
                set set-route-tag 11
            next
        end
    next
end
```

To apply the route map to the BGP neighbor:

```
config router bgp
    config neighbor
        edit "10.254.0.1"
            set route-map-in "map-comm1"
        next
    end
end
```

To reference tagged routes in an SD-WAN rule:

```
config system virtual-wan-link
    config service
        edit 1
            set mode priority
            set dst-tag 11
            set health-check "datacenter1"
            set priority-members 1 2
        next
    end
end
```

Adding another datacenter

Datacenter FortiGates should be configured to establish an OSPF neighbor relationship with the internal core router. This allows the dynamic redistribution of routes to the branches that are receiving updates from the datacenter FortiGates.

To ensure the fastest failover with OSPF, the following timers are set to their minimum levels: `spf-timers`, `hello-interval`, `dead-interval`.

Bi-directional forwarding is enabled to allow the fastest convergence time if there is a failure with a peering neighbor.


To configure OSPF:

```
config router ospf
    set router-id 10.10.10.10
    set spf-timers 0 1
    set distribute-list-in "pf-datacenter2-tunnel"
    set restart-mode graceful-restart
    config area
        edit 10.10.10.10
        next
    end
    config ospf-interface
        edit "port5"
            set interface "port5"
            set dead-interval 3
            set hello-interval 1
            set bfd enable
        next
    end
    config network
        edit 1
            set prefix 192.168.100.0 255.255.255.252
            set area 10.10.10.10
        next
    end
    config redistribute "connected"
        set status enable
        set routemap "redistribute-branch-tunnel"
    end
    config redistribute "static"
    end
    config redistribute "rip"
    end
    config redistribute "bgp"
        set status enable
        set routemap "redistribute-branch-networks"
    end
    config redistribute "isis"
    end
end
```

Configuring SD-WAN in an HA cluster using internal hardware switches

This setup is not fully compliant with a regular HA configuration. Failover is also unnecessary. Flipping can occur if failover is configured using a ping server interface.

Two FortiGates with internal hardware switches can be configured as an active-active (A-A) HA pair. In the following topology, both FortiGates forward traffic through internal switches connected to service providers. SD-WAN is configured on all upstream interfaces and overlays.

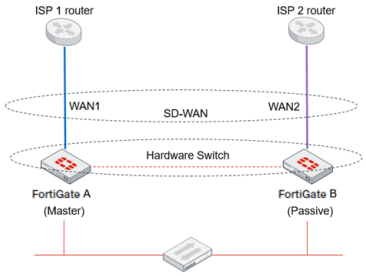

This setup is not fully compliant with a regular HA configuration. In a regular HA configuration, two logical switches are used: one for incoming traffic and one for outgoing traffic. In this example, only incoming traffic has a switch while outgoing traffic uses the internal switch. This means that if FortiGate A loses power, ISP 1 will not be available.


Traffic will flow either through ISP 1 directly or through ISP 2 via a connection between FortiGate A and FortiGate B's internal switch interface. FortiGate A decides how traffic will go through ISP 1 or ISP 2 based on SD-WAN rules. If ISP 1 is not available, then traffic will go through ISP 2.

Failover is unnecessary in this setup. Because SD-WAN will automatically failover traffic to the accessible ISP, traffic is not blocked so there is no network downtime. Also, the hardware switch interface cannot be monitored as an HA interface. If HA failover is required, a ping server must be used. The ping server monitor interface has to be configured under HA settings. This failover setup, however, results in flipping. FortiGate B will act as the primary after failover and traffic will still flow to the available ISP. Since the broken link to one of the ISPs still fails, HA will start flipping until the link is back up.

To configure the HA A-A cluster with internal hardware switches:

1. Configure two FortiGates with internal switches in an active-active HA cluster (follow the steps in HA active-active cluster setup on page 684), starting by connecting the heartbeat interface.
2. On the primary FortiGate, remove the existing interface members:
   a. Go to *Network* > *Interfaces*.
   b. In the *LAN* section, double-click the *internal* interface to edit it.


c. In the *Interface Members* box, remove all the interfaces.

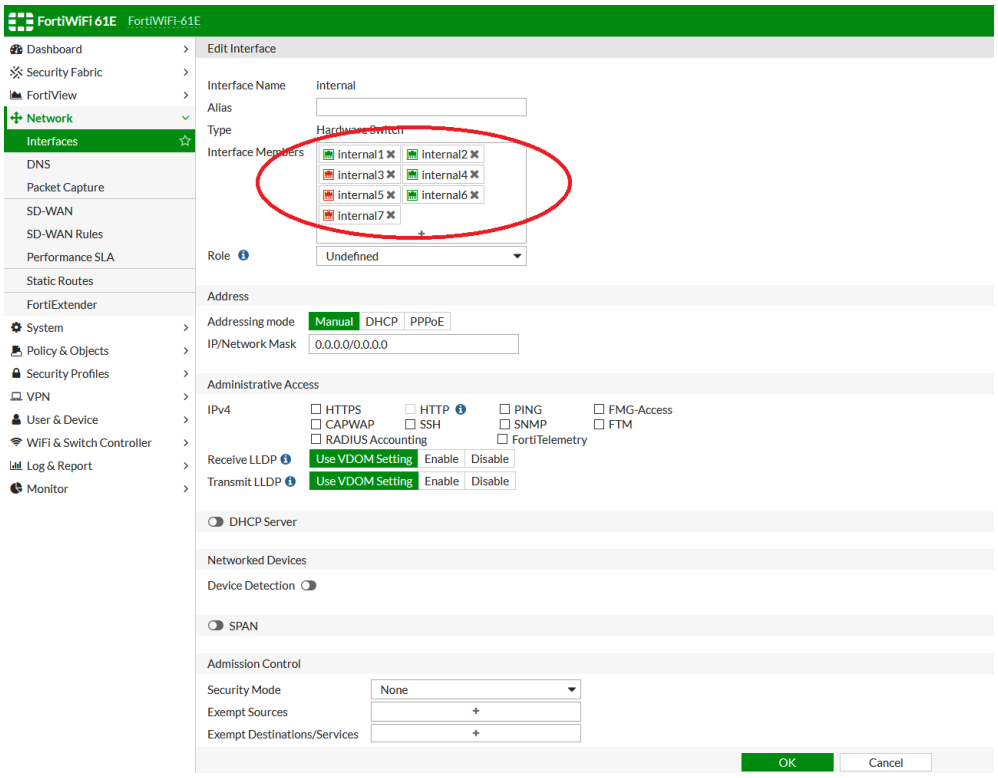


d. Click *OK*.

3. On the primary FortiGate, configure the hardware switch interfaces for the two ISPs:
   a. Go to *Network* > *Interfaces*.
   b. Click *Create New* > *Interface*.
   c. Enter a name (*HD_SW1*).
   d. For type, select *Hardware Switch*.
   e. For *Interface Members*, add two interfaces (*internal1* and *internal2*).
   f. Configure the other settings as needed.

g. Click *OK*.

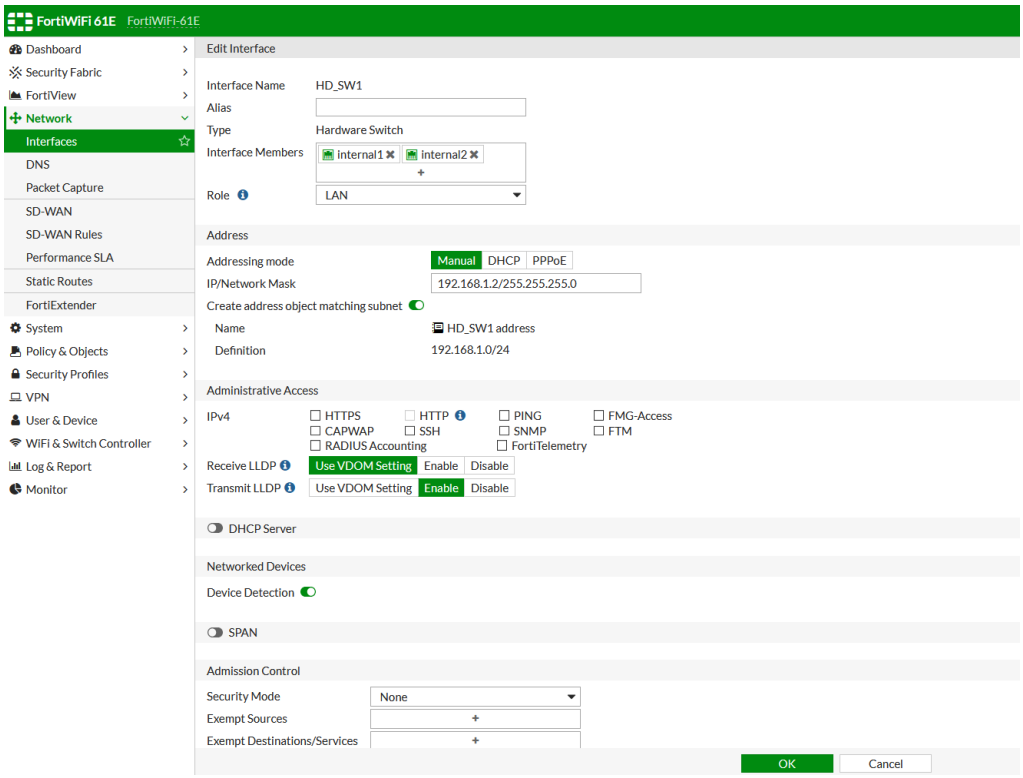

h. Repeat these steps to create a second hardware switch interface (*HD_SW2*) with two interface members (*internal3* and *internal4*).

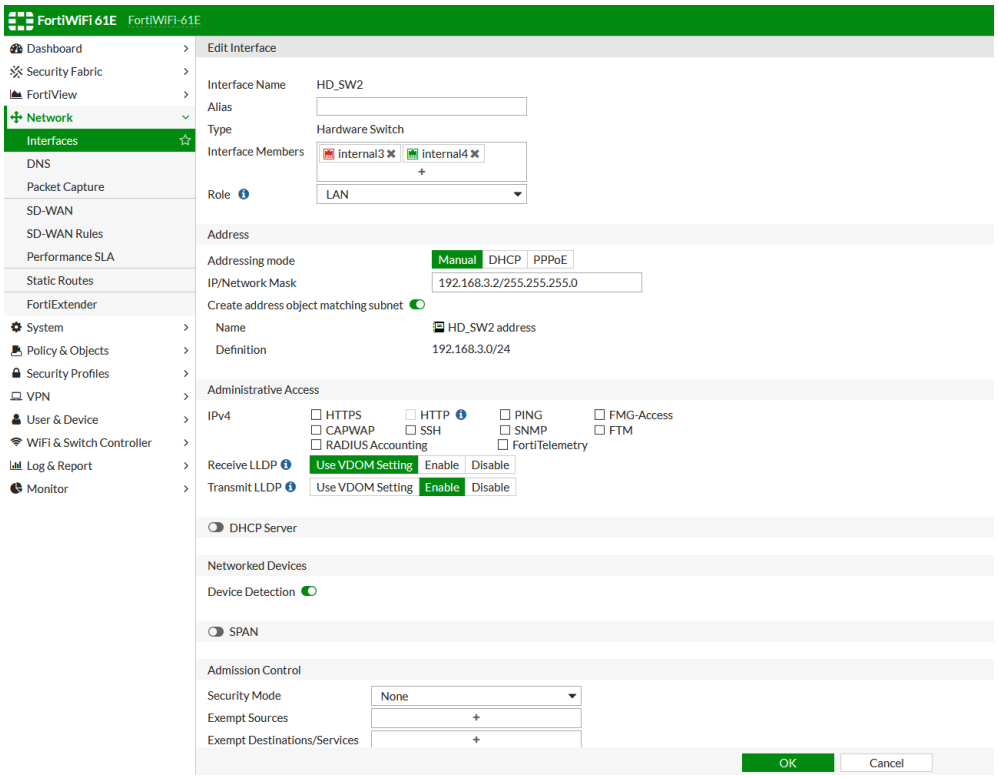


4. On the primary FortiGate, set up SD-WAN:



The primary FortiGate makes all the SD-WAN decisions.

   a. Go to *Network* > *SD-WAN*.
   b. For *Status*, click *Enable*.
   c. In the *SD-WAN Interface Members* section, click *Create New*. The *New SD-WAN Member* pane opens.
   d. In the *Interface* dropdown, select *HD_SW1* and enter the *Gateway* address.
   e. Click *OK*.
   f. Repeat these steps to add the second interface (*HD_SW2*).
   g. Click *Apply*.

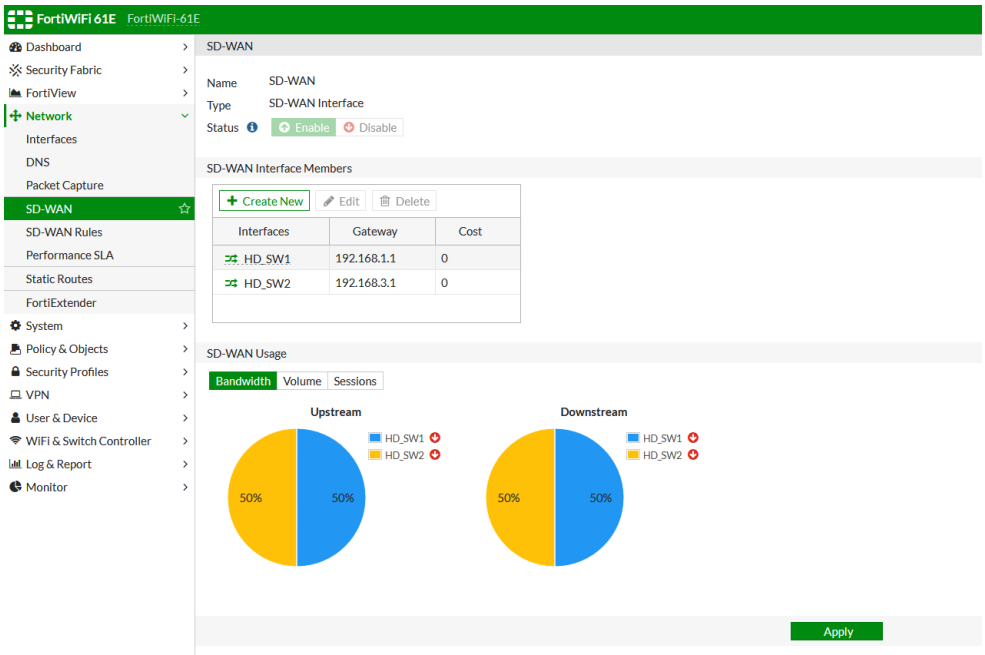

5. Connect the devices as shown in the topology:
   a. Connect the incoming interface to the internal switch on both FortiGates.
   b. On FortiGate A, connect ISP 1 to HD_SW1.
   c. On FortiGate B, connect ISP 2 to HD_SW2.
   d. For HD_SW1, connect FortiGate A directly to B.
   e. For HD_SW2, connect FortiGate A directly to B.



The default implicit rule load-balancing algorithm for SD-WAN is the source IP address. For more information about rule types and configurations, see Implicit rule on page 470.

Troubleshooting SD-WAN

The following topics provide instructions on SD-WAN troubleshooting:


- Tracking SD-WAN sessions on page 603
- Understanding SD-WAN related logs on page 603
- SD-WAN related diagnose commands on page 606
- SLA logging on page 611
- SLA monitoring using the REST API on page 612
- SD-WAN bandwidth monitoring service on page 614

Tracking SD-WAN sessions

You can check the destination interface in *FortiView* in order to see which port the traffic is being forwarded to.

The example below demonstrates a source-based load-balance between two SD-WAN members.

- If the source IP address is an *even* number, it will go to *port13*.
- If the source IP address is an *odd* number, it will go to *port12*.

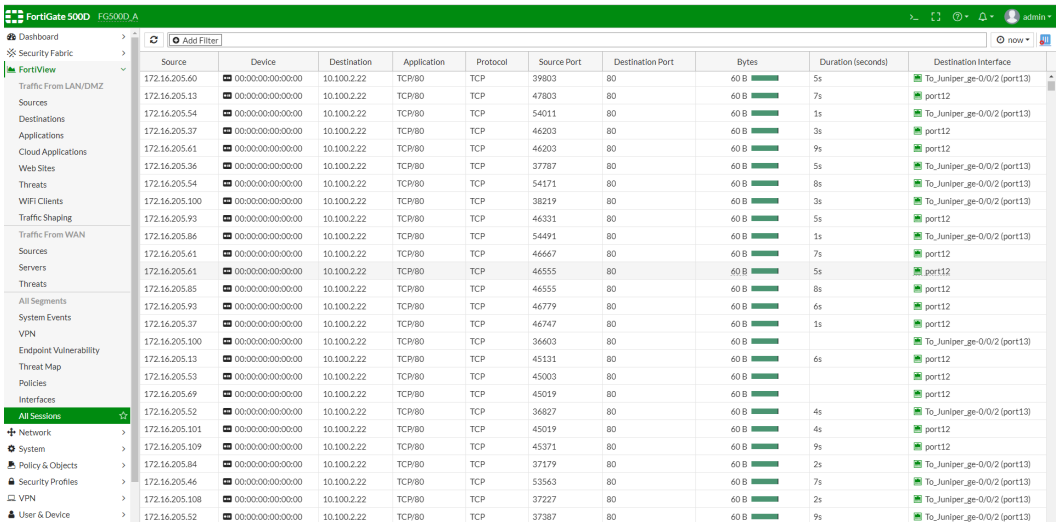

For information on other features of FortiView, see FortiView on page 277.

Understanding SD-WAN related logs

This topic lists the SD-WAN related logs and explains when the logs will be triggered.

Health-check detects a failure:

- When health-check detects a failure, it will record a log:

```
34: date=2019-03-23 time=17:26:06 logid="0100022921" type="event" subtype="system"
level="critical" vd="root" eventtime=1553387165 logdesc="Routing information changed"
```

```
name="test" interface="R150" status="down" msg="Static route on interface R150 may be
removed by health-check test. Route:  (10.100.1.2->10.100.2.22 ping-down)"
```

- When health-check detects a recovery, it will record a log:

```
32: date=2019-03-23 time=17:26:54 logid="0100022921" type="event" subtype="system"
level="critical" vd="root" eventtime=1553387214 logdesc="Routing information changed"
name="test" interface="R150" status="up" msg="Static route on interface R150 may be
added by health-check test. Route:  (10.100.1.2->10.100.2.22 ping-up)"
```

Health-check has an SLA target and detects SLA qualification changes:

- When health-check has an SLA target and detects SLA changes, and changes to fail:

```
5: date=2019-04-11 time=11:48:39 logid="0100022923" type="event" subtype="system"
level="notice" vd="root" eventtime=1555008519816639290 logdesc="Virtual WAN Link status"
msg="SD-WAN Health Check(ping) SLA(1): number of pass members changes from 2 to 1."
```

- When health-check has an SLA target and detects SLA changes, and changes to pass:

```
2: date=2019-04-11 time=11:49:46 logid="0100022923" type="event" subtype="system"
level="notice" vd="root" eventtime=1555008586149038471 logdesc="Virtual WAN Link status"
msg="SD-WAN Health Check(ping) SLA(1): number of pass members changes from 1 to 2."
```

SD-WAN calculates a link's session/bandwidth over/under its ratio and stops/resumes traffic:

- When SD-WAN calculates a link's session/bandwidth over its configured ratio and stops forwarding traffic:

```
3: date=2019-04-10 time=17:15:40 logid="0100022924" type="event" subtype="system"
level="notice" vd="root" eventtime=1554941740185866628 logdesc="Virtual WAN Link volume
status" interface="R160" msg="The member(3) enters into conservative status with limited
ablity to receive new sessions for too much traffic."
```

- When SD-WAN calculates a link's session/bandwidth according to its ratio and resumes forwarding traffic:

```
1: date=2019-04-10 time=17:20:39 logid="0100022924" type="event" subtype="system"
level="notice" vd="root" eventtime=1554942040196041728 logdesc="Virtual WAN Link volume
status" interface="R160" msg="The member(3) resume normal status to receive new sessions
for internal adjustment."
```

The SLA mode service rule's SLA qualified member changes:

- When the SLA mode service rule's SLA qualified member changes. In this example R150 fails the SLA check, but is still alive:

```
14: date=2019-03-23 time=17:44:12 logid="0100022923" type="event" subtype="system"
level="notice" vd="root" eventtime=1553388252 logdesc="Virtual WAN Link status"
msg="Service2() prioritized by SLA will be redirected in seq-num order 2(R160) 1(R150)."
15: date=2019-03-23 time=17:44:12 logid="0100022923" type="event" subtype="system"
level="notice" vd="root" eventtime=1553388252 logdesc="Virtual WAN Link status"
interface="R150" msg="The member1(R150) SLA order changed from 1 to 2. "
16: date=2019-03-23 time=17:44:12 logid="0100022923" type="event" subtype="system"
level="notice" vd="root" eventtime=1553388252 logdesc="Virtual WAN Link status"
interface="R160" msg="The member2(R160) SLA order changed from 2 to 1. "
```

- When the SLA mode service rule's SLA qualified member changes. In this example R150 changes from fail to pass:

```
1: date=2019-03-23 time=17:46:05 logid="0100022923" type="event" subtype="system"
level="notice" vd="root" eventtime=1553388365 logdesc="Virtual WAN Link status"
```

```
msg="Service2() prioritized by SLA will be redirected in seq-num order 1(R150) 2(R160)."
2: date=2019-03-23 time=17:46:05 logid="0100022923" type="event" subtype="system"
level="notice" vd="root" eventtime=1553388365 logdesc="Virtual WAN Link status"
interface="R160" msg="The member2(R160) SLA order changed from 1 to 2. "
3: date=2019-03-23 time=17:46:05 logid="0100022923" type="event" subtype="system"
level="notice" vd="root" eventtime=1553388365 logdesc="Virtual WAN Link status"
interface="R150" msg="The member1(R150) SLA order changed from 2 to 1. "
```

The priority mode service rule member's link status changes:

- When priority mode service rule member's link status changes. In this example R150 changes to better than R160, and both are still alive:

```
1: date=2019-03-23 time=17:33:23 logid="0100022923" type="event" subtype="system"
level="notice" vd="root" eventtime=1553387603 logdesc="Virtual WAN Link status"
msg="Service2() prioritized by packet-loss will be redirected in seq-num order 1(R150) 2
(R160)."
2: date=2019-03-23 time=17:33:23 logid="0100022923" type="event" subtype="system"
level="notice" vd="root" eventtime=1553387603 logdesc="Virtual WAN Link status"
interface="R160" msg="The member2(R160) link quality packet-loss order changed from 1 to
2. "
3: date=2019-03-23 time=17:33:23 logid="0100022923" type="event" subtype="system"
level="notice" vd="root" eventtime=1553387603 logdesc="Virtual WAN Link status"
interface="R150" msg="The member1(R150) link quality packet-loss order changed from 2 to
1. "
```

- When priority mode service rule member's link status changes. In this example R160 changes to better than R150, and both are still alive:

```
6: date=2019-03-23 time=17:32:01 logid="0100022923" type="event" subtype="system"
level="notice" vd="root" eventtime=1553387520 logdesc="Virtual WAN Link status"
msg="Service2() prioritized by packet-loss will be redirected in seq-num order 2(R160) 1
(R150)."
7: date=2019-03-23 time=17:32:01 logid="0100022923" type="event" subtype="system"
level="notice" vd="root" eventtime=1553387520 logdesc="Virtual WAN Link status"
interface="R150" msg="The member1(R150) link quality packet-loss order changed from 1 to
2. "
8: date=2019-03-23 time=17:32:01 logid="0100022923" type="event" subtype="system"
level="notice" vd="root" eventtime=1553387520 logdesc="Virtual WAN Link status"
interface="R160" msg="The member2(R160) link quality packet-loss order changed from 2 to
1. "
```

SD-WAN member is used in service and it fails the health-check:

- When SD-WAN member fails the health-check, it will stop forwarding traffic:

```
6: date=2019-04-11 time=13:33:21 logid="0100022923" type="event" subtype="system"
level="notice" vd="root" eventtime=1555014801844089814 logdesc="Virtual WAN Link status"
interface="R160" msg="The member2(R160) link is unreachable or miss threshold. Stop
forwarding traffic. "
```

- When SD-WAN member passes the health-check again, it will resume forwarding logs:

```
2: date=2019-04-11 time=13:33:36 logid="0100022923" type="event" subtype="system"
level="notice" vd="root" eventtime=1555014815914643626 logdesc="Virtual WAN Link status"
interface="R160" msg="The member2(R160) link is available. Start forwarding traffic. "
```

Load-balance mode service rule's SLA qualified member changes:

- When load-balance mode service rule's SLA qualified member changes. In this example R150 changes to not meet SLA:

```
2: date=2019-04-11 time=14:11:16 logid="0100022923" type="event" subtype="system"
level="notice" vd="root" eventtime=1555017075926510687 logdesc="Virtual WAN Link status"
msg="Service1(rule2) will be load balanced among members  2(R160) with available
routing."
3: date=2019-04-11 time=14:11:16 logid="0100022923" type="event" subtype="system"
level="notice" vd="root" eventtime=1555017075926508676 logdesc="Virtual WAN Link status"
interface="R150" msg="The member1(R150) SLA order changed from 1 to 2. "
4: date=2019-04-11 time=14:11:16 logid="0100022923" type="event" subtype="system"
level="notice" vd="root" eventtime=1555017075926507182 logdesc="Virtual WAN Link status"
interface="R160" msg="The member2(R160) SLA order changed from 2 to 1. "
```

- When load-balance mode service rule's SLA qualified member changes. In this example R150 changes to meet SLA:

```
1: date=2019-04-11 time=14:33:23 logid="0100022923" type="event" subtype="system"
level="notice" vd="root" eventtime=1555017075926510668 logdesc="Virtual WAN Link status"
msg="Service1(rule2) will be load balanced among members 1(R150) 2(R160) with available
routing."
2: date=2019-03-23 time=14:33:23 logid="0100022923" type="event" subtype="system"
level="notice" vd="root" eventtime=1553387603592651068 logdesc="Virtual WAN Link status"
interface="R160" msg="The member2(R160) link quality packet-loss order changed from 1 to
2. "
3: date=2019-03-23 time=14:33:23 logid="0100022923" type="event" subtype="system"
level="notice" vd="root" eventtime=1553387603592651068 logdesc="Virtual WAN Link status"
interface="R150" msg="The member1(R150) link quality packet-loss order changed from 2 to
1. "
```

SLA link status logs, generated with interval sla-fail-log-period or sla-pass-log-period:

- When SLA fails, SLA link status logs will be generated with interval sla-fail-log-period:

```
7: date=2019-03-23 time=17:45:54 logid="0100022925" type="event" subtype="system"
level="notice" vd="root" eventtime=1553388352 logdesc="Link monitor SLA information"
name="test" interface="R150" status="up" msg="Latency: 0.016, jitter: 0.002, packet
loss: 21.000%, inbandwidth: 0Mbps, outbandwidth: 200Mbps, bibandwidth: 200Mbps, sla_map:
0x0"
```

- When SLA passes, SLA link status logs will be generated with interval sla-pass-log-period:

```
5: date=2019-03-23 time=17:46:05 logid="0100022925" type="event" subtype="system"
level="information" vd="root" eventtime=1553388363 logdesc="Link monitor SLA
information" name="test" interface="R150" status="up" msg="Latency: 0.017, jitter:
0.003, packet loss: 0.000%, inbandwidth: 0Mbps, outbandwidth: 200Mbps, bibandwidth:
200Mbps, sla_map: 0x1"
```

SD-WAN related diagnose commands

This topic lists the SD-WAN related diagnose commands and related output.

To check SD-WAN health-check status:

```
FGT # diagnose sys virtual-wan-link health-check
Health Check(server):
Seq(1): state(alive), packet-loss(0.000%) latency(15.247), jitter(5.231) sla_map=0x0
Seq(2): state(alive), packet-loss(0.000%) latency(13.621), jitter(6.905) sla_map=0x0

FGT  # diagnose sys virtual-wan-link health-check
Health Check(ping):
Seq(1): state(alive), packet-loss(0.000%) latency(0.683), jitter(0.082) sla_map=0x0
Seq(2): state(dead), packet-loss(100.000%) sla_map=0x0

FGT # diagnose sys virtual-wan-link health-check google
Health Check(google):
Seq(1): state(alive), packet-loss(0.000%) latency(14.563), jitter(4.334) sla_map=0x0
Seq(2): state(alive), packet-loss(0.000%) latency(12.633), jitter(6.265) sla_map=0x0
```

To check SD-WAN member status:

- When SD-WAN load-balance mode is *source-ip-based*/*source-dest-ip-based*.

  ```
  FGT # diagnose sys virtual-wan-link member
  Member(1): interface: port13, gateway: 10.100.1.1 2004:10:100:1::1, priority: 0, weight:
  0
  Member(2): interface: port15, gateway: 10.100.1.5 2004:10:100:1::5, priority: 0, weight:
  0
  ```

- When SD-WAN load-balance mode is *weight-based*.

  ```
  FGT # diagnose sys virtual-wan-link  member
  Member(1): interface: port13, gateway: 10.100.1.1 2004:10:100:1::1, priority: 0, weight:
  33
  Member(2): interface: port15, gateway: 10.100.1.5 2004:10:100:1::5, priority: 0, weight:
  66
  ```

- When SD-WAN load-balance mode is *measured-volume-based*.
  - Both members are under volume and still have room:

    ```
    FGT # diagnose sys virtual-wan-link member
    Member(1): interface: port13, gateway: 10.100.1.1 2004:10:100:1::1, priority: 0,
    weight: 33
      Config volume ratio: 33, last reading: 8211734579B, volume room 33MB
    Member(2): interface: port15, gateway: 10.100.1.5 2004:10:100:1::5, priority: 0,
    weight: 66
      Config volume ratio: 66, last reading: 24548159B, volume room 66MB
    ```

  - Some members are overloaded and some still have room:

    ```
    FGT # diagnose sys virtual-wan-link member
    Member(1): interface: port1, gateway: 10.10.0.2, priority: 0, weight: 0
      Config volume ratio: 10, last reading: 10297221000B, overload volume 1433MB
    Member(2): interface: port2, gateway: 10.11.0.2, priority: 0, weight: 38
      Config volume ratio: 50, last reading: 45944239916B, volume room 38MB
    ```

- When SD-WAN load balance mode is *usage-based*/*spillover*.
  - When no spillover occurs:

```
FGT # diagnose sys virtual-wan-link member
Member(1): interface: port13, gateway: 10.100.1.1 2004:10:100:1::1, priority: 0,
weight: 255
  Egress-spillover-threshold: 400kbit/s, ingress-spillover-threshold: 300kbit/s
  Egress-overbps=0, ingress-overbps=0
Member(2): interface: port15, gateway: 10.100.1.5 2004:10:100:1::5, priority: 0,
weight: 254
  Egress-spillover-threshold: 0kbit/s, ingress-spillover-threshold: 0kbit/s
  Egress-overbps=0, ingress-overbps=0
```

  - When member has reached limit and spillover occurs:

```
FGT # diagnose sys virtual-wan-link member
Member(1): interface: port13, gateway: 10.100.1.1 2004:10:100:1::1, priority: 0,
weight: 255
  Egress-spillover-threshold: 400kbit/s, ingress-spillover-threshold: 300kbit/s
  Egress-overbps=1, ingress-overbps=1
Member(2): interface: port15, gateway: 10.100.1.5 2004:10:100:1::5, priority: 0,
weight: 254
  Egress-spillover-threshold: 0kbit/s, ingress-spillover-threshold: 0kbit/s
  Egress-overbps=0, ingress-overbps=0
```

  - You can also use the `diagnose netlink dstmac list` command to check if you are over the limit.

```
FGT # diagnose netlink dstmac list port13
dev=port13 mac=08:5b:0e:ca:94:9d rx_tcp_mss=0 tx_tcp_mss=0 egress_overspill_
threshold=51200 egress_bytes=103710 egress_over_bps=1 ingress_overspill_
threshold=38400 ingress_bytes=76816 ingress_over_bps=1 sampler_rate=0
```

To check SD-WAN service rules status:

- *Manual mode* service rules.

```
FGT # diagnose sys virtual-wan-link  service
Service(1): Address Mode(IPV4) flags=0x0
  TOS(0x0/0x0), Protocol(0: 1->65535), Mode(manual)
  Members:
    1: Seq_num(2), alive, selected
  Dst address: 10.100.21.0-10.100.21.255
```

- *Auto mode* service rules.

```
FGT # diagnose sys virtual-wan-link service
Service(1): Address Mode(IPV4) flags=0x0
  TOS(0x0/0x0), Protocol(0: 1->65535), Mode(auto), link-cost-factor(latency), link-cost-
threshold(10), health-check(ping)
  Members:
    1: Seq_num(2), alive, latency: 0.011
    2: Seq_num(1), alive, latency: 0.018, selected
  Dst address: 10.100.21.0-10.100.21.255
```

- *Priority mode* service rules.

```
FGT # diagnose sys virtual-wan-link  service
Service(1): Address Mode(IPV4) flags=0x0
  TOS(0x0/0x0), Protocol(0: 1->65535), Mode(priority), link-cost-factor(latency), link-
```

```
cost-threshold(10), health-check(ping)
  Members:
    1: Seq_num(2), alive, latency: 0.011, selected
    2: Seq_num(1), alive, latency: 0.017, selected
  Dst address: 10.100.21.0-10.100.21.255
```

- *Load-balance* mode service rules.

```
FGT # diagnose sys virtual-wan-link  service
Service(1): Address Mode(IPV4) flags=0x0
  TOS(0x0/0x0), Protocol(0: 1->65535), Mode(load-balance)
  Members:
    1: Seq_num(1), alive, sla(0x1), num of pass(1), selected
    2: Seq_num(2), alive, sla(0x1), num of pass(1), selected
  Dst address: 10.100.21.0-10.100.21.255
```

- *SLA mode* service rules.

```
FGT # diagnose sys virtual-wan-link service
Service(1): Address Mode(IPV4) flags=0x0
  TOS(0x0/0x0), Protocol(0: 1->65535), Mode(sla)
  Members:
    1: Seq_num(1), alive, sla(0x1), cfg_order(0), cost(0), selected
    2: Seq_num(2), alive, sla(0x1), cfg_order(1), cost(0), selected
  Dst address: 10.100.21.0-10.100.21.255
```

To check interface logs from the past 15 minutes:

```
FGT (root) # diagnose sys virtual-wan-link intf-sla-log R150
Timestamp: Fri Apr 12 11:08:36 2019, used inbandwidth: 0bps, used outbandwidth: 0bps, used
bibandwidth: 0bps, tx bytes: 860bytes, rx bytes: 1794bytes.
Timestamp: Fri Apr 12 11:08:46 2019, used inbandwidth: 1761bps, used outbandwidth: 1710bps,
used bibandwidth: 3471bps, tx bytes: 2998bytes, rx bytes: 3996bytes.
Timestamp: Fri Apr 12 11:08:56 2019, used inbandwidth: 2452bps, used outbandwidth: 2566bps,
used bibandwidth: 5018bps, tx bytes: 7275bytes, rx bytes: 7926bytes.
Timestamp: Fri Apr 12 11:09:06 2019, used inbandwidth: 2470bps, used outbandwidth: 3473bps,
used bibandwidth: 5943bps, tx bytes: 13886bytes, rx bytes: 11059bytes.
Timestamp: Fri Apr 12 11:09:16 2019, used inbandwidth: 2433bps, used outbandwidth: 3417bps,
used bibandwidth: 5850bps, tx bytes: 17946bytes, rx bytes: 13960bytes.
Timestamp: Fri Apr 12 11:09:26 2019, used inbandwidth: 2450bps, used outbandwidth: 3457bps,
used bibandwidth: 5907bps, tx bytes: 22468bytes, rx bytes: 17107bytes.
```

To check SLA logs in the past 15 minutes:

```
FGT (root) # diagnose sys virtual-wan-link sla-log ping 1
Timestamp: Fri Apr 12 11:09:27 2019, vdom root, health-check ping, interface: R150, status:
up, latency: 0.014, jitter: 0.003, packet loss: 16.000%.
Timestamp: Fri Apr 12 11:09:28 2019, vdom root, health-check ping, interface: R150, status:
up, latency: 0.015, jitter: 0.003, packet loss: 15.000%.
Timestamp: Fri Apr 12 11:09:28 2019, vdom root, health-check ping, interface: R150, status:
up, latency: 0.014, jitter: 0.003, packet loss: 14.000%.
Timestamp: Fri Apr 12 11:09:29 2019, vdom root, health-check ping, interface: R150, status:
up, latency: 0.015, jitter: 0.003, packet loss: 13.000%.
```

To check Application Control used in SD-WAN and the matching IP addresses:

```
FGT # diagnose sys virtual-wan-link internet-service-app-ctrl-list
Ctrl application(Microsoft.Authentication 41475):Internet Service ID(4294836224)
        Protocol(6), Port(443)
        Address(2): 104.42.72.21 131.253.61.96
Ctrl application(Microsoft.CDN 41470):Internet Service ID(4294836225)
Ctrl application(Microsoft.Lync 28554):Internet Service ID(4294836226)
Ctrl application(Microsoft.Office.365 33182):Internet Service ID(4294836227)
Ctrl application(Microsoft.Office.365.Portal 41468):Internet Service ID(4294836228)
Ctrl application(Microsoft.Office.Online 16177):Internet Service ID(4294836229)
Ctrl application(Microsoft.OneNote 40175):Internet Service ID(4294836230)
Ctrl application(Microsoft.Portal 41469):Internet Service ID(4294836231)
        Protocol(6), Port(443)
        Address(8): 23.58.134.172 131.253.33.200 23.58.135.29 204.79.197.200 64.4.54.254
23.59.156.241 13.77.170.218 13.107.22.200
Ctrl application(Microsoft.Sharepoint 16190):Internet Service ID(4294836232)
Ctrl application(Microsoft.Sway 41516):Internet Service ID(4294836233)
Ctrl application(Microsoft.Tenant.Namespace 41471):Internet Service ID(4294836234)
```

To check IPsec aggregate interface when SD-WAN uses the per-packet distribution feature:

```
# diagnose sys ipsec-aggregate list
agg1 algo=L3 member=2 run_tally=2
members:
        vd1-p1
        vd1-p2
```

To check BGP learned routes and determine if they are used in SD-WAN service:

```
FGT # get router info bgp network
FGT # get router info bgp network 10.100.11.0
BGP routing table entry for 10.100.10.0/24
Paths: (2 available, best 1, table Default-IP-Routing-Table)
  Advertised to non peer-group peers:
   172.10.22.2
  20
    10.100.20.2 from 10.100.20.2 (6.6.6.6)
      Origin EGP metric 200, localpref 100, weight 10000, valid, external, best
      Community: 30:5
      Last update: Wen Mar 20 18:45:17 2019
FGT # get router info route-map-address
Extend-tag: 15, interface(wan2:16)
        10.100.11.0/255.255.255.0

 FGT # diagnose firewall proute list
list route policy info(vf=root):

id=4278779905 vwl_service=1(DataCenter) flags=0x0 tos=0x00 tos_mask=0x00 protocol=0
sport=0:65535 iif=0 dport=1-65535 oif=16
source wildcard(1): 0.0.0.0/0.0.0.0
destination wildcard(1): 10.100.11.0/255.255.255.0
```

SLA logging

The features adds an SD-WAN daemon function to keep a short, 10 minute history of SLA that can be viewed in the CLI.

Performance SLA results related to interface selection, session failover, and other information, can be logged. These logs can then be used for long-term monitoring of traffic issues at remote sites, and for reports and views in FortiAnalyzer.

The time intervals that Performance SLA fail and pass logs are generated in can be configured.

To configure the fail and pass logs' generation time interval:

```
config system virtual-wan-link
    config health-check
        edit "ping"
            set sla-fail-log-period 30
            set sla-pass-log-period 60
        next
    end
end
```

To view the 10 minute Performance SLA link status history:


```
FGT_A (root) # diagnose sys virtual-wan-link sla-log ping 1
Timestamp: Thu Feb 28 10:58:24 2019, vdom root, health-check ping, interface: R150, status:
up, latency: 0.000, jitter: 0.000, packet loss: 0.000%.
Timestamp: Thu Feb 28 10:58:24 2019, vdom root, health-check ping, interface: R150, status:
up, latency: 0.097, jitter: 0.000, packet loss: 0.000%.
Timestamp: Thu Feb 28 10:58:25 2019, vdom root, health-check ping, interface: R150, status:
up, latency: 0.058, jitter: 0.040, packet loss: 0.000%.
Timestamp: Thu Feb 28 10:58:25 2019, vdom root, health-check ping, interface: R150, status:
up, latency: 0.044, jitter: 0.026, packet loss: 0.000%.
... ...
```

SLA pass logs

The FortiGate generates Performance SLA logs at the specified pass log interval (`sla-pass-log-period`) when SLA passes.

```
3: date=2019-02-28 time=11:53:26 logid="0100022925" type="event" subtype="system"
level="information" vd="root" eventtime=1551383604 logdesc="Link monitor SLA information"
name="ping" interface="R160" status="up" msg="Latency: 0.013, jitter: 0.001, packet loss:
0.000%, inbandwidth: 0Mbps, outbandwidth: 0Mbps, bibandwidth: 0Mbps, sla_map: 0x1"
7: date=2019-02-28 time=11:52:26 logid="0100022925" type="event" subtype="system"
level="information" vd="root" eventtime=1551383545 logdesc="Link monitor SLA information"
name="ping" interface="R160" status="up" msg="Latency: 0.013, jitter: 0.002, packet loss:
0.000%, inbandwidth: 0Mbps, outbandwidth: 0Mbps, bibandwidth: 0Mbps, sla_map: 0x1"
```


In the FortiAnalyzer GUI:

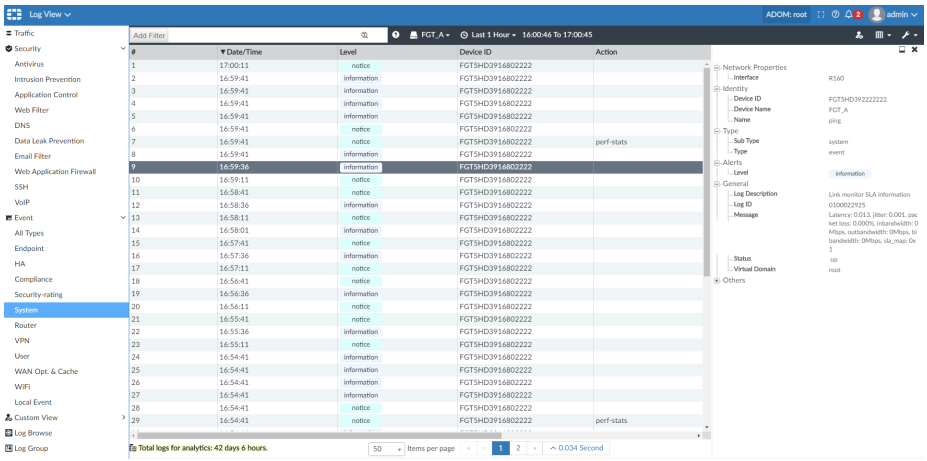

SLA fail logs

The FortiGate generates Performance SLA logs at the specified fail log interval (`sla-fail-log-period`) when SLA fails.

```
6: date=2019-02-28 time=11:52:32 logid="0100022925" type="event" subtype="system"
level="notice" vd="root" eventtime=1551383552 logdesc="Link monitor SLA information"
name="ping" interface="R150" status="down" msg="Latency: 0.000, jitter: 0.000, packet loss:
100.000%, inbandwidth: 0Mbps, outbandwidth: 200Mbps, bibandwidth: 200Mbps, sla_map: 0x0"
8: date=2019-02-28 time=11:52:02 logid="0100022925" type="event" subtype="system"
level="notice" vd="root" eventtime=1551383522 logdesc="Link monitor SLA information"
name="ping" interface="R150" status="down" msg="Latency: 0.000, jitter: 0.000, packet loss:
100.000%, inbandwidth: 0Mbps, outbandwidth: 200Mbps, bibandwidth: 200Mbps, sla_map: 0x0"
```

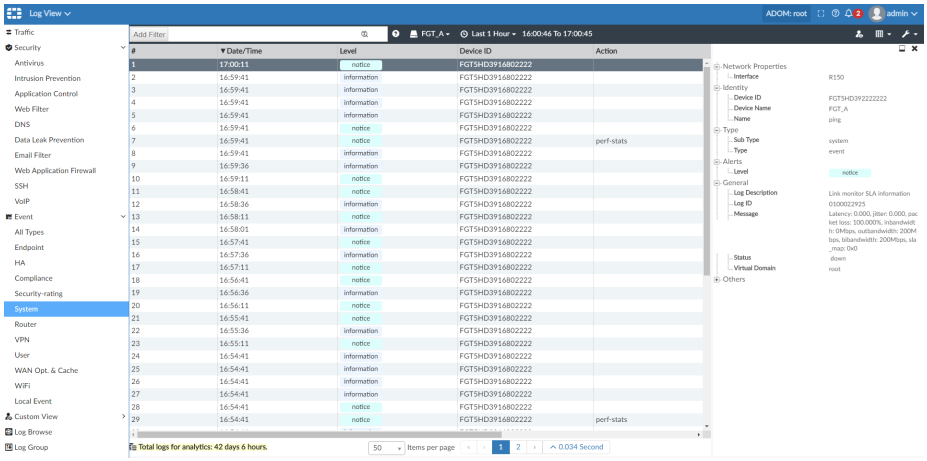

SLA monitoring using the REST API

SLA log information and interface SLA information can be monitored using the REST API. This feature is also be used by FortiManager as part of its detailed SLA monitoring and drill-down features.

Interface log command example:

```
https://172.172.172.9/api/v2/monitor/virtual-wan/interface-log
{
  "http_method":"GET",
  "results":[
    {
      "interface":"port13",
      "logs":[
        {
          "timestamp":1547087168,
          "tx_bandwidth":3447,
          "rx_bandwidth":3457,
          "bi_bandwidth":6904,
          "tx_bytes":748875,
          "rx_bytes":708799,
          "egress_queue":[
          ]
        },
        {
          "timestamp":1547087178,
          "tx_bandwidth":3364,
          "rx_bandwidth":3400,
          "bi_bandwidth":6764,
          "tx_bytes":753789,
          "rx_bytes":712835,
          "egress_queue":[
          ]
        },
....
....
```

SLA log command example:

```
https://172.172.172.9/api/v2/monitor/virtual-wan/sla-log
{
  "http_method":"GET",
  "results":[
    {
      "name":"ping",
      "interface":"port13",
      "logs":[
        {
          "timestamp":1547087204,
          "link":"up",
          "latency":0.686433,
          "jitter":0.063400,
          "packetloss":0.000000
        },
        {
          "timestamp":1547087205,
          "link":"up",
          "latency":0.688433,
          "jitter":0.063133,
          "packetloss":0.000000
        },
```

```
        {
          "timestamp":1547087206,
          "link":"up",
          "latency":0.688300,
          "jitter":0.065267,
          "packetloss":0.000000
        },
....
....
```

CLI diagnose commands:

```
# diagnose sys virtual-wan-link sla-log ping 1
    Timestamp: Wed Jan 9 18:35:11 2019, vdom root, health-check ping, interface: port13,
status: up, latency: 0.698, jitter: 0.073, packet loss: 0.000%.
    Timestamp: Wed Jan 9 18:35:12 2019, vdom root, health-check ping, interface: port13,
status: up, latency: 0.704, jitter: 0.073, packet loss: 0.000%.
    Timestamp: Wed Jan 9 18:35:13 2019, vdom root, health-check ping, interface: port13,
status: up, latency: 0.709, jitter: 0.073, packet loss: 0.000%.
    Timestamp: Wed Jan 9 18:35:14 2019, vdom root, health-check ping, interface: port13,
status: up, latency: 0.707, jitter: 0.066, packet loss: 0.000%.
    Timestamp: Wed Jan 9 18:35:15 2019, vdom root, health-check ping, interface: port13,
status: up, latency: 0.710, jitter: 0.061, packet loss: 0.000%.
    Timestamp: Wed Jan 9 18:35:16 2019, vdom root, health-check ping, interface: port13,
status: up, latency: 0.707, jitter: 0.055, packet loss: 0.000%.
    Timestamp: Wed Jan 9 18:35:17 2019, vdom root, health-check ping, interface: port13,
status: up, latency: 0.703, jitter: 0.055, packet loss: 0.000%.

# diagnose sys virtual-wan-link intf-sla-log port13
    Timestamp: Wed Jan 9 18:33:49 2019, used inbandwidth: 3208bps, used outbandwidth:
3453bps, used bibandwidth: 6661bps, tx bytes: 947234bytes, rx bytes: 898622bytes.
    Timestamp: Wed Jan 9 18:33:59 2019, used inbandwidth: 3317bps, used outbandwidth:
3450bps, used bibandwidth: 6767bps, tx bytes: 951284bytes, rx bytes: 902937bytes.
    Timestamp: Wed Jan 9 18:34:09 2019, used inbandwidth: 3302bps, used outbandwidth:
3389bps, used bibandwidth: 6691bps, tx bytes: 956268bytes, rx bytes: 907114bytes.
    Timestamp: Wed Jan 9 18:34:19 2019, used inbandwidth: 3279bps, used outbandwidth:
3352bps, used bibandwidth: 6631bps, tx bytes: 958920bytes, rx bytes: 910793bytes.
    Timestamp: Wed Jan 9 18:34:29 2019, used inbandwidth: 3233bps, used outbandwidth:
3371bps, used bibandwidth: 6604bps, tx bytes: 964374bytes, rx bytes: 914854bytes.
    Timestamp: Wed Jan 9 18:34:39 2019, used inbandwidth: 3235bps, used outbandwidth:
3362bps, used bibandwidth: 6597bps, tx bytes: 968250bytes, rx bytes: 918846bytes.
    Timestamp: Wed Jan 9 18:34:49 2019, used inbandwidth: 3165bps, used outbandwidth:
3362bps, used bibandwidth: 6527bps, tx bytes: 972298bytes, rx bytes: 922724bytes.
    Timestamp: Wed Jan 9 18:34:59 2019, used inbandwidth: 3184bps, used outbandwidth:
3362bps, used bibandwidth: 6546bps, tx bytes: 977282bytes, rx bytes: 927019bytes.
```

SD-WAN bandwidth monitoring service

The bandwidth measuring tool is used to detect true upload and download speeds. Bandwidth tests can be run on demand or automated using a script, and can be useful when configuring SD-WAN SLA and rules to balance SD-WAN traffic.

The speed test tool requires a valid SD-WAN Bandwidth Monitoring Service license.

The speed test tool is compatible with iperf3.6 with SSL support. It can test the upload bandwidth to the FortiGate Cloud speed test service. It can initiate the server connection and send download requests to the server. The tool can be run up to 10 times a day .

FortiGate downloads the speed test server list. The list expires after 24 hours. One of the speed test servers is selected, based on user input. The speed test runs, testing upload and download speeds. The test results are shown in the command terminal.

To download the speed test server list:

```
# execute speed-test-server download
Download completed.
```

To check the speed test server list:

```
# execute speed-test-server list
AWS_West valid
        Host: 34.210.67.183 5204 fortinet
        Host: 34.210.67.183 5205 fortinet
        Host: 34.210.67.183 5206 fortinet
        Host: 34.210.67.183 5207 fortinet
Google_West valid
        Host: 35.197.55.210 5204 fortinet
        Host: 35.197.55.210 5205 fortinet
        Host: 35.197.55.210 5206 fortinet
        Host: 35.197.55.210 5207 fortinet
        Host: 35.230.2.124 5204 fortinet
        Host: 35.230.2.124 5205 fortinet
        Host: 35.230.2.124 5206 fortinet
        Host: 35.230.2.124 5207 fortinet
        Host: 35.197.18.234 5204 fortinet
        Host: 35.197.18.234 5205 fortinet
        Host: 35.197.18.234 5206 fortinet
        Host: 35.197.18.234 5207 fortinet
```

To run the speed test:

You can run the speed test without specifying a server. The system will automatically choose one server from the list and run the speed test.

```
# execute speed-test auto
The license is valid to run speed test.
Speed test quota for 2/1 is 9
current vdom=root
Run in uploading mode.
Connecting to host 35.230.2.124, port 5206
[ 16] local 172.16.78.185 port 2475 connected to 35.230.2.124 port 5206
[ ID] Interval Transfer Bitrate Retr Cwnd
[ 16] 0.00-1.01 sec 11.0 MBytes 91.4 Mbits/sec 0 486 KBytes
[ 16] 1.01-2.00 sec 11.6 MBytes 98.4 Mbits/sec 0 790 KBytes
[ 16] 2.00-3.01 sec 11.0 MBytes 91.6 Mbits/sec 15 543 KBytes
[ 16] 3.01-4.01 sec 11.2 MBytes 94.2 Mbits/sec 1 421 KBytes
[ 16] 4.01-5.01 sec 11.2 MBytes 93.5 Mbits/sec 0 461 KBytes
- - - - - - - - - - - - - - - - - - - - - - - - -
[ ID] Interval Transfer Bitrate Retr
```

```
[ 16] 0.00-5.01 sec 56.1 MBytes 93.8 Mbits/sec 16 sender
[ 16] 0.00-5.06 sec 55.8 MBytes 92.6 Mbits/sec receiver

speed test Done.
Run in reverse downloading mode!
Connecting to host 35.230.2.124, port 5206
Reverse mode, remote host 35.230.2.124 is sending
[ 16] local 172.16.78.185 port 2477 connected to 35.230.2.124 port 5206
[ ID] Interval Transfer Bitrate
[ 16] 0.00-1.00 sec 10.9 MBytes 91.4 Mbits/sec
[ 16] 1.00-2.00 sec 11.2 MBytes 93.9 Mbits/sec
[ 16] 2.00-3.00 sec 11.2 MBytes 94.0 Mbits/sec
[ 16] 3.00-4.00 sec 11.2 MBytes 93.9 Mbits/sec
[ 16] 4.00-5.00 sec 10.9 MBytes 91.1 Mbits/sec
- - - - - - - - - - - - - - - - - - - - - - - - -
[ ID] Interval Transfer Bitrate Retr
[ 16] 0.00-5.03 sec 57.5 MBytes 95.9 Mbits/sec 40 sender
[ 16] 0.00-5.00 sec 55.4 MBytes 92.9 Mbits/sec receiver

speed test Done
```

To run the speed test on a server farm or data center:

```
# execute speed-test auto AWS_West
The license is valid to run speed test.
Speed test quota for 2/1 is 8
current vdom=root
Run in uploading mode.
Connecting to host 34.210.67.183, port 5205
```

To run the speed test on a local interface when there are multiple valid routes:

```
# execute speed-test port1 Google_West
The license is valid to run speed test.
Speed test quota for 2/1 is 6
bind to local ip 172.16.78.202
current vdom=root
Specified interface port1 does not comply with default outgoing interface port2 in routing
table!
Force to use the specified interface!
Run in uploading mode.
Connecting to host 35.197.18.234, port 5205
[ 11] local 172.16.78.202 port 20852 connected to 35.197.18.234 port 5205
[ ID] Interval Transfer Bitrate Retr Cwnd
[ 11] 0.00-1.01 sec 10.7 MBytes 89.0 Mbits/sec 0 392 KBytes
[ 11] 1.01-2.01 sec 10.5 MBytes 88.5 Mbits/sec 1 379 KBytes
[ 11] 2.01-3.01 sec 11.3 MBytes 94.5 Mbits/sec 0 437 KBytes
[ 11] 3.01-4.01 sec 11.2 MBytes 94.3 Mbits/sec 0 478 KBytes
[ 11] 4.01-5.00 sec 11.3 MBytes 95.2 Mbits/sec 0 503 KBytes
- - - - - - - - - - - - - - - - - - - - - - - - -
[ ID] Interval Transfer Bitrate Retr
[ 11] 0.00-5.00 sec 55.1 MBytes 92.3 Mbits/sec 1 sender
[ 11] 0.00-5.04 sec 54.5 MBytes 90.7 Mbits/sec receiver

speed test Done.
Run in reverse downloading mode!
```

```
Connecting to host 35.197.18.234, port 5205
Reverse mode, remote host 35.197.18.234 is sending
[ 11] local 172.16.78.202 port 20853 connected to 35.197.18.234 port 5205
[ ID] Interval Transfer Bitrate
[ 11] 0.00-1.00 sec 10.9 MBytes 91.1 Mbits/sec
[ 11] 1.00-2.00 sec 11.2 MBytes 94.0 Mbits/sec
[ 11] 2.00-3.00 sec 11.2 MBytes 94.0 Mbits/sec
[ 11] 3.00-4.00 sec 11.2 MBytes 94.0 Mbits/sec
[ 11] 4.00-5.00 sec 11.2 MBytes 94.0 Mbits/sec
- - - - - - - - - - - - - - - - - - - - - - - - -
[ ID] Interval Transfer Bitrate Retr
[ 11] 0.00-5.03 sec 57.4 MBytes 95.8 Mbits/sec 33 sender
[ 11] 0.00-5.00 sec 55.7 MBytes 93.4 Mbits/sec receiver

speed test Done.
```

To add a script to run a speed test automatically once every 24 hours:

```
config system auto-script
    edit "speedtest"
        set interval 86400
        set repeat 0
        set start auto
        set script "
execute speed-test-server download
execute speed-test"
    next
end
```

To view the results of the speed test script:

```
execute auto-script result speedtest
```

System

This topic contains information about FortiGate administration and system configuration that you can do after installing the FortiGate in your network.

Basic system settings

Administrators

By default, FortiGate has an administrator account with the username *admin* and no password. See Administrators on page 620 for more information.

Administrator profiles

An administrator profile defines what the administrator can see and do on the FortiGate. See Administrator profiles on page 620 for more information.

Password policy

Set up a password policy to enforce password criteria and change frequency. See Password policy on page 624 for more information.

Interfaces

Physical and virtual interface allow traffic to flow between internal networks, and between the internet and internal networks. See Interfaces on page 316 for more information.

Advanced system settings

SNMP

The simple network management protocol (SNMP) allows you to monitor hardware on your network. See SNMP on page 692 for more information.

DHCP server

You can configure one or more DHCP servers on any FortiGate interface. See DHCP server on page 401 for more information.

VDOM

You can use virtual domains (VDOMs) to divide a FortiGate into multiple virtual devices that function independently. See Virtual Domains on page 651 for more information.

High availability

You can configure multiple FortiGate devices, including private and public cloud VMs, in HA mode. See High Availability on page 671 for more information.

Certificates

You can manage certificates on the FortiGate. See Certificates on page 717 for more information.

Operating modes

A FortiGate or VDOM (in multi-vdom mode) can operate in either NAT/Route mode or Transparent mode.

NAT/Route mode

The FortiGate or VDOM is installed as a gateway between two networks, such as a private network and the internet. This allows the FortiGate to hide the IP addresses on the private network using NAT. NAT/Route mode can also be used when several ISPs are used for redundant internet connections.

By default, new VDOMs are set to NAT/Route operation mode.

See Configure VDOM-A on page 658 for more information.

Transparent mode

The FortiGate or VDOM is installed between the internal network and the router. The FortiGate does not changes any IP addresses, and only applies security scanning to traffic. When you add a FortiGate that is in transparent mode to a network, it only needs to be provided with a management IP address.

Transparent mode is primarily used when increased network protection is needed without changing the network configuration.

See Configure VDOM-A on page 668 for more information.

To change the operating mode of a FortiGate or VDOM:

```
config system settings
    set opmode {nat | transparent}
end
```

Administrators

By default, FortiGate has an administrator account with the username *admin* and no password. To prevent unauthorized access to the FortiGate, this account must be protected with a password. Additional administrators can be added for various functions, each with a unique username, password, and set of access privileges.

The following topics provide information about administrators:

- Administrator profiles on page 620
- Add a local administrator on page 622
- Remote authentication for administrators on page 622
- Password policy on page 624
- Associating a FortiToken to an administrator account on page 625

Administrator profiles

Administrator profiles define what the administrator can do when logged into the FortiGate. When you set up an administrator account, you also assign an administrator profile which dictates what the administrator sees. Depending on the nature of the administrator's work, access level or seniority, you can allow them to view and configure as much or as little as is required.

By default, the FortiGate has an *admin* administrator account that uses the *super_admin* profile.

Super_admin profile

This profile has access to all components of FortiOS, including the ability to add and remove other system administrators. For certain administrative functions, such as backing up and restoring the configuration, super_admin access is required. To ensure that there is always a method to administer the FortiGate, the super_admin profile can't be deleted or modified.



Lower level administrator profiles can't backup or restore the FortiOS configuration.

The super_admin profile is used by the default admin account. It is recommended that you add a password and rename this account once you have set up your FortiGate. In order to rename the default account, a second admin account is required.

Creating customized profiles

To create a profile in the GUI:

1. Go to *System* > *Admin Profiles*.
2. Select *Create New*.
3. Configure the following settings:
   - Name.
   - Access permissions.

- Override idle timeout.

4. Select *OK*.

To create a profile in the CLI:

```
config system accprofile
    edit "sample"
        set secfabgrp read-write
        set ftviewgrp read-write
        set authgrp read-write
        set sysgrp read-write
        set netgrp read-write
        set loggrp read-write
        set fwgrp read-write
        set vpngrp read-write
        set utmgrp read-write
        set wanoptgrp read-write
        set wifi read-write
    next
end
```

Edit profiles

To edit a profile in the GUI:

1. Go to *System* > *Admin Profiles*.
2. Choose the profile to be edited and select *Edit*.
3. Select *OK* to save any changes made.

To edit a profile in the CLI:

```
config system accprofile
    edit "sample"
        set secfabgrp read
    next
end
```

Delete profiles

To delete a profile in the GUI:

1. Go to *System* > *Admin Profiles*.
2. Choose the profile to be deleted and select *Delete*.
3. Select *OK*.

To delete a profile in the CLI:

```
config system accprofile
    delete "sample"
end
```

Add a local administrator

By default, FortiGate has one super admin named `admin`. You can create more administrator accounts with different privileges.

To create an administrator account in the GUI:

1. Go to *System* > *Administrators*.
2. Select *Create New* > *Administrator*.
3. Specify the *Username*.



Do not use the characters `< > ( ) # " '` in the administrator username.

Using these characters in an administrator username might have a cross site scripting (XSS) vulnerability.

4. Set *Type* to *Local User*.
5. Set the password and other fields.
6. Click *OK*.

To create an administrator account in the CLI:

```
config system admin
    edit <admin_name>
        set accprofile <profile_name>
        set vdom <vdom_name>
        set password <password for this admin>
    next
end
```

Remote authentication for administrators

Administrators can use remote authentication, such as LDAP, to connect to the FortiGate.

Setting up remote authentication for administrators includes the following steps:

1. Configure the LDAP server on page 622
2. Add the LDAP server to a user group on page 623
3. Configure the administrator account on page 623

Configure the LDAP server

To configure the LDAP server in the GUI:

1. Go to *User & Device* > *LDAP Servers* and select *Create New*.
2. Enter the server *Name*, *Server IP* address or *Name*.
3. Enter the *Common Name Identifier* and *Distinguished Name*.
4. Set the *Bind Type* to *Regular* and enter the *Username* and *Password*.
5. Click *OK*.

To configure the LDAP server in the CLI:

```
config user ldap
  edit <ldap_server_name>
    set server <server_ip>
    set cnid "cn"
    set dn "dc=XYZ,dc=fortinet,dc=COM"
    set type regular
    set username "cn=Administrator,dc=XYA, dc=COM"
    set password <password>
  next
end
```

Add the LDAP server to a user group

After configuring the LDAP server, create a user group that includes that LDAP server.

To create a user group in the GUI:

1. Go to *User & Device* > *User Groups* and select *Create New*.
2. Enter a *Name* for the group.
3. In the *Remote groups* section, select *Create New*.
4. Select the *Remote Server* from the dropdown list.
5. Click *OK*.

To create a user group in the CLI:

```
config user group
  edit <Group_name>
    set member "ldap_server_name"
  next
end
```

Configure the administrator account

After configuring the LDAP server and adding it to a user group, create a new administrator. For this administrator, instead of entering a password, use the new user group and the wildcard option for authentication.

To create an administrator in the GUI:

1. Go to *System* > *Administrators*.
2. Select *Create New* > *Administrator*.
3. Specify the *Username*.
4. Set *Type* to *Match a user on a remote server group*.
5. In *Remote User Group*, select the user group you created.
6. Select *Wildcard*.
   The Wildcard option allows LDAP users to connect as this administrator.
7. Select an *Administrator Profile*.
8. Click *OK*.

To create an administrator in the CLI:

```
config system admin
  edit <admin_name>
    set remote-auth enable
    set accprofile super_admin
    set wild card enable
    set remote-group ldap
end
```

Other methods of administrator authentication

Administrator accounts can use different methods for authentication, including RADIUS, TACACS+, and PKI.

RADIUS authentication for administrators

To use a RADIUS server to authenticate administrators, you must:

- Configure the FortiGate to access the RADIUS server.
- Create the RADIUS user group.
- Configure an administrator to authenticate with a RADIUS server.

TACACS+ authentication for administrators

To use a TACACS+ server to authenticate administrators, you must:

- Configure the FortiGate to access the TACACS+ server.
- Create a TACACS+ user group.
- Configure an administrator to authenticate with a TACACS+ server.

PKI certificate authentication for administrators

To use PKI authentication for an administrator, you must:

- Configure a PKI user.
- Create a PKI user group.
- Configure an administrator to authenticate with a PKI certificate.

Password policy

Brute force password software can launch more than just dictionary attacks. It can discover common passwords where a letter is replaced by a number. For example, if `p4ssw0rd` is used as a password, it can be cracked.

Using secure passwords is vital for preventing unauthorized access to your FortiGate. When changing the password, consider the following to ensure better security:

- Do not use passwords that are obvious, such as the company name, administrator names, or other obvious words or phrases.
- Use numbers in place of letters, for example: `passw0rd`.
- Administrator passwords can be up to 64 characters.
- Include a mixture of numbers, symbols, and upper and lower case letters.

- Use multiple words together, or possibly even a sentence, for example: `correcthorsebatterystaple`.
- Use a password generator.
- Change the password regularly and always make the new password unique and not a variation of the existing password. for example, do not change from `password` to `password1`.
- Make note of the password and store it in a safe place away from the management computer, in case you forget it; or ensure at least two people know the password in the event one person becomes unavailable. Alternatively, have two different admin logins.

FortiGate allows you to create a password policy for administrators and IPsec pre-shared keys. With this policy, you can enforce regular changes and specific criteria for a password policy, including:

- Minimum length between 8 and 64 characters.
- If the password must contain uppercase (A, B, C) and/or lowercase (a, b, c) characters.
- If the password must contain numbers (1, 2, 3).
- If the password must contain special or non-alphanumeric characters (!, @, #, $, %, ^, &, *, (, and)).
- Where the password applies (admin or IPsec or both).
- The duration of the password before a new one must be specified.

If you add a password policy or change the requirements on an existing policy, the next time that administrator logs into the FortiGate, the administrator is prompted to update the password to meet the new requirements before proceeding to log in.

For information about setting passwords, see Default administrator password on page 633.

To create a system password policy the GUI:

1. Go to *System* > *Settings*.
2. In the *Password Policy* section, change the *Password scope* to *Admin*, *IPsec*, or *Both*.
3. Configure the password policy options.
4. Click *Apply*.

To create a system password policy the CLI:

```
config system password-policy
    set status {enable | disable}
    set apply-to {admin-password | ipsec-preshared-key}
    set minimum-length <8-128>
    set min-lower-case-letter <0-128>
    set min-upper-case-letter <0-128>
    set min-non-alphanumeric <0-128>
    set min-number <0-128>
    set change-4-characters {enable | disable}
    set expire-status {enable | disable}
    set expire-day <1-999>
    set reuse-password {enable | disable}
end
```

Associating a FortiToken to an administrator account

You can also associate FortiTokens with administrator accounts.

To associate a FortiToken to an administrator account using the GUI:

1. Ensure that you have successfully added your FortiToken serial number to FortiOS and that its status is Available.
2. Go to *System* > *Administrators*. Edit the admin account. This example assumes that the account is fully configured except for two-factor authentication.
3. In the *Email Address* field, enter the administrator's email address.
4. Enable *Two-factor Authentication*.
5. From the *Token* dropdown list, select the desired FortiToken serial number.
6. Click *OK*.



For a mobile token, click *Send Activation Code* to send the activation code to the configured email address. The admin uses this code to activate their mobile token. You must have configured an email service in *System* > *Settings* to send the activation code.

To associate a FortiToken to an administrator account using the CLI:

```
config system admin
   edit <username>
      set password "myPassword"
      set two-factor fortitoken
      set fortitoken <serial_number>
      set email-to "username@example.com"
   next
end
```

The `fortitoken` keyword is not visible until you select `fortitoken` for the `two-factor` option.



Before you can use a new FortiToken, you may need to synchronize it due to clock drift.

Firmware

Fortinet periodically updates the FortiGate firmware to include new features and resolve important issues. After you have registered your FortiGate unit, firmware updates can be downloaded from the Fortinet Customer Service & Support website.



Always back up the current configuration before installing new firmware. See Configuration backups on page 61.

Before you install any new firmware, follow the below steps:

1. Review the Release Notes for a new firmware release.
2. Review the Supported Upgrade Paths.
3. Download a copy of the currently installed firmware, in case you need to revert to it. See Downloading a firmware image on page 627 and Downgrading to a previous firmware version on page 630 for details.

4. Have a plan in place in case there is a critical failure, such as the FortiGate not coming back online after the update. This could include having console access to the device (Connecting to the CLI on page 22), ensuring that you TFTP server is working (Installing firmware from system reboot on page 630), and preparing a USB drive (Restoring from a USB drive on page 632).
5. Backup the current configuration, including local certificates. See Configuration backups on page 61 for details.
6. Test the new firmware until you are satisfied that it applies to your configuration. See Testing a firmware version on page 627 and Controlled upgrade on page 633 for details.

Installing new firmware without reviewing release notes or testing the firmware may result in changes to settings and unexpected issues.



Only FortiGate admin users and administrators whose access profiles contain system read and write privileges can change the FortiGate firmware.

Downloading a firmware image

Firmware images for all FortiGate units are available on the Fortinet Customer Service & Support website.

To download firmware:

1. Log into the support site with your user name and password.
2. Go to *Download* > *Firmware Images*.
   A list of Release Notes is shown. If you have not already done so, download and review the Release Notes for the firmware version that you are upgrading your FortiGate unit to.
3. Select the *Download* tab.
4. Navigate to the folder for the firmware version that you are upgrading to.
5. Find your device model from the list. FortiWiFi devices have file names that start with *FWF*.
6. Click *HTTPS* in the far right column to download the firmware image to your computer.



Firmware can also be downloaded using FTP, but as FTP is not an encrypted file transferring protocol, HTTPS downloading is recommended.

Testing a firmware version

The integrity of firmware images downloaded from Fortinet's support portal can be verified using a file checksum. A file checksum that does not match the expected value indicates a corrupt file. The corruption could be caused by errors in transfer or by file modification. A list of expected checksum values for each build of released code is available on Fortinet's support portal.

Image integrity is also verified when the FortiGate is booting up. This integrity check is done through a cyclic redundancy check (CRC). If the CRC fails, the FortiGate unit will encounter an error during the boot process.

Firmware images are signed and the signature is attached to the code as it is built. When upgrading an image, the running OS will generate a signature and compare it with the signature attached to the image. If the signatures do not match, the new OS will not load.

Testing before installation

FortiOS lets you test a new firmware image by installing the firmware image from a system reboot and saving it to system memory. After completing this procedure, the FortiGate unit operates using the new firmware image with the current configuration. The new firmware image is not permanently installed. The next time the FortiGate unit restarts, it operates with the originally installed firmware image using the current configuration. If the new firmware image operates successfully, you can install it permanently using the procedure explained in Upgrading the firmware.

For this procedure, you must install a TFTP server that you can connect to from the FortiGate internal interface. The TFTP server should be on the same subnet as the internal interface.

To test the new firmware version:

1. Connect to the CLI using an RJ-45 to USB (or DB-9) or null modem cable.
2. Ensure that the TFTP server is running.
3. Copy the new firmware image file to the root directory on the TFTP server.
4. Ensure that the FortiGate unit can connect to the TFTP server using the `execute ping` command.
5. Restart the FortiGate unit: `execute reboot`. The following message is shown:
   ```
   This operation will reboot the system!
   Do you want to continue? (y/n)
   ```
6. Type `y`. As the FortiGate unit starts, a series of system startup messages appears.
7. When the following messages appears:
   ```
   Press any key to display configuration menu.....
   ```
   Immediately press any key to interrupt the system startup.

   You have only three seconds to press any key. If you do not press a key during this time, the FortiGate will reboot, and you will have to log in and repeat the `execute reboot` command.

   If you successfully interrupt the startup process, the following messages appears:
   ```
   [G]: Get firmware image from TFTP server.
   [F]: Format boot device.
   [B]: Boot with backup firmware and set as default
   [C]: Configuration and information
   [Q]: Quit menu and continue to boot with default firmware.
   [H]: Display this list of options.
   Enter G, F, Q, or H:
   ```
8. Type *G* to get the new firmware image from the TFTP server. The following message appears: `Enter TFTP server address [192.168.1.168]:`
9. Type the address of the TFTP server, then press *Enter*. The following message appears: `Enter Local Address [192.168.1.188]:`
10. Type the IP address of the FortiGate unit to connect to the TFTP server.

    The IP address must be on the same network as the TFTP server.

    Make sure that you do not enter the IP address of another device on this network.

    The following message appears:
    ```
    Enter File Name [image.out]:
    ```
11. Enter the firmware image file name then press *Enter*. The TFTP server uploads the firmware image file to the FortiGate unit and the following message appears:
    ```
    Save as Default firmware/Backup firmware/Run image without saving: [D/B/R]
    ```

12. Type *R*. The FortiGate image is installed to system memory and the FortiGate unit starts running the new firmware image, but with its current configuration.

Test the new firmware image as required. When done testing, reboot the FortiGate unit, and the it will resume using the firmware that was running before you installed the test firmware.

Upgrading the firmware

Installing a new firmware image replaces the current antivirus and attack definitions, along with the definitions included with the firmware release that is being installing. After you install new firmware, make sure that the antivirus and attack definitions are up to date.



Back up your configuration before making any firmware changes.

To upgrade the firmware in the GUI:

1. Log into the FortiGate GUI as the admin administrative user.
2. Go to *System* > *Firmware*.
3. Under *Upload Firmware*, click *Browse* and locate the previously downloaded firmware image file (see Downloading a firmware image on page 627).
4. Click *Backup config and upgrade*.
   The FortiGate unit backs up the current configuration to the management computer, uploads the firmware image file, upgrades to the new firmware version, and restarts. This process takes a few minutes.

To upgrade the firmware in the CLI:

1. Make sure that the TFTP server is running.
2. Copy the new firmware image file to the root directory of the TFTP server.
3. Log into the CLI.
4. Ping the TFTP server to ensure that the FortiGate can connect to it:
   ```
   execute ping <tftp_ipv4>
   ```
5. Enter the following command to copy the firmware image from the TFTP server to the FortiGate unit:
   ```
   execute restore image tftp <filename> <tftp_ipv4>
   ```
   The FortiGate unit responds with the message:
   ```
   This operation will replace the current firmware version!
   Do you want to continue? (y/n)
   ```
6. Type `y`. The FortiGate unit uploads the firmware image file, upgrades to the new firmware version, and restarts. This process takes a few minutes.
7. Reconnect to the CLI.
8. Update the antivirus and attack definitions:
   ```
   execute update-now
   ```

Downgrading to a previous firmware version



Downgrading the firmware is not recommended.

This procedure downgrades the FortiGate to a previous firmware version. The backup configuration might not be able to be restored after downgrading.

To downgrade to a previous firmware version in the GUI:

1. Log into the FortiGate GUI as the admin administrative user.
2. Go to *System* > *Firmware*.
3. Under *Upload Firmware*, click *Browse* and locate the previously downloaded firmware image file (see Downloading a firmware image on page 627).
4. Click *Confirm version downgrade*.
5. Click *Backup config and downgrade*.
   The FortiGate unit backs up the current configuration to the management computer, uploads the firmware image file, upgrades to the new firmware version, and restarts. This process takes a few minutes.

To downgrade to a previous firmware version in the CLI:

1. Make sure that the TFTP server is running.
2. Copy the new firmware image file to the root directory of the TFTP server.
3. Log into the CLI.
4. Ping the TFTP server to ensure that the FortiGate can connect to it:
   ```
   execute ping <tftp_ipv4>
   ```
5. Enter the following command to copy the firmware image from the TFTP server to the FortiGate unit:
   ```
   execute restore image tftp <filename> <tftp_ipv4>
   ```
   The FortiGate unit responds with the message:
   ```
   This operation will replace the current firmware version!
   Do you want to continue? (y/n)
   ```
6. Type `y`. The FortiGate unit uploads the firmware image file, then a message similar to the following is shown:
   ```
   Get image from tftp server OK.
   Check image OK.
   This operation will downgrade the current firmware version!
   Do you want to continue? (y/n)
   ```
7. Type `y`. The FortiGate unit downgrades to the old firmware version and restarts. This process takes a few minutes.
8. Reconnect to the CLI.
9. Update the antivirus and attack definitions:
   ```
   execute update-now
   ```

Installing firmware from system reboot

In the event that the firmware upgrade does not load properly and the FortiGate unit will not boot, or continuously reboots, it is best to perform a fresh install of the firmware from a reboot using the CLI. If configured, the firmware can also be automatically installed from a USB drive; see Restoring from a USB drive on page 632 for details.

This procedure installs a firmware image and resets the FortiGate unit to factory default settings. You can use this procedure to upgrade to a new firmware version, revert to an older firmware version, or re-install the current firmware.

To use this procedure, you must connect to the CLI using the FortiGate console port and a RJ-45 to USB (or DB-9), or null modem cable. You must also install a TFTP server that you can connect to from the FortiGate internal interface. The TFTP server should be on the same subnet as the internal interface.

Before beginning this procedure, ensure that you backup the FortiGate unit configuration. See Configuration backups on page 61 for details. If you are reverting to a previous FortiOS version, you might not be able to restore the previous configuration from the backup configuration file.

Installing firmware replaces your current antivirus and attack definitions, along with the definitions included with the firmware release you are installing. After you install new firmware, make sure that antivirus and attack definitions are up to date.

To install firmware from a system reboot:

1. Connect to the CLI using the RJ-45 to USB (or DB-9) or null modem cable.
2. Ensure that the TFTP server is running.
3. Copy the new firmware image file to the root directory of the TFTP server.
4. Ensure that the FortiGate unit can connect to the TFTP server using the `execute ping` command.
5. Restart the FortiGate unit: `execute reboot`. The following message is shown:
   ```
   This operation will reboot the system!
   Do you want to continue? (y/n)
   ```
6. Type `y`. As the FortiGate unit starts, a series of system startup messages appears.
7. When the following messages appears:
   ```
   Press any key to display configuration menu.........
   ```
   Immediately press any key to interrupt the system startup.

   You have only three seconds to press any key. If you do not press a key during this time, the FortiGate will reboot, and you will have to log in and repeat the `execute reboot` command.

   If you successfully interrupt the startup process, the following messages appears:

   ```
   [C]: Configure TFTP parameters.
   [R]: Review TFTP parameters.
   [T]: Initiate TFTP firmware transfer.
   [F]: Format boot device.
   [I]: System information.
   [B]: Boot with backup firmware and set as default.
   [Q]: Quit menu and continue to boot.
   [H]: Display this list of options.

   Enter C,R,T,F,I,B,Q,or H:
   ```
8. If necessary, type `C` to configure the TFTP parameters, then type `Q` to return to the previous menu:

   ```
   [P]: Set firmware download port.
   [D]: Set DHCP mode.
   [I]: Set local IP address.
   [S]: Set local subnet mask.
   [G]: Set local gateway.
   [V]: Set local VLAN ID.
   [T]: Set remote TFTP server IP address.
   [F]: Set firmware file name.
   [E]: Reset TFTP parameters to factory defaults.
   ```

```
[R]: Review TFTP parameters.
[N]: Diagnose networking(ping).
[Q]: Quit this menu.
[H]: Display this list of options.

Enter P,D,I,S,G,V,T,F,E,R,N,Q,or H:
```



The IP address must be on the same network as the TFTP server.
Make sure that you do not enter the IP address of another device on this network.

9. Type `T` get the new firmware image from the TFTP server.
   The FortiGate unit loads the firmware.
10. Save the firmware as the default (`D`) or backup (`B`) firmware image, or run the image without saving it (`R`).
    The FortiGate unit installs the new firmware image and restarts. The installation might take a few minutes to complete.

Restoring from a USB drive

The FortiGate firmware can be manually restored from a USB drive, or installed automatically from a USB drive after a reboot.

To restore the firmware from a USB drive:

1. Copy the firmware file to the root directory on the USB drive.
2. Connect the USB drive to the USB port of the FortiGate device.
3. Connect to the FortiGate CLI using the RJ-45 to USB (or DB-9) or null modem cable.
4. Enter the following command:
   ```
   execute restore image usb <filename>
   ```
   The FortiGate unit responds with the following message:
   ```
   This operation will replace the current firmware version! Do you want to continue?
   (y/n)
   ```
5. Type `y`. The FortiGate unit restores the firmware and restarts. This process takes a few minutes.
6. Update the antivirus and attack definitions:
   ```
   execute update-now
   ```

To install firmware automatically from a USB drive:

1. Go to *System* > *Settings*.
2. In the *Start Up Settings* section, enable *Detect firmware* and enter the name of the firmware file.
3. Copy the firmware file to the root directory on the USB drive.
4. Connect the USB drive to the USB port of the FortiGate device.
5. Reboot the FortiGate device.

Controlled upgrade

Using a controlled upgrade, you can upload a new version of the FortiOS firmware to a separate partition in the FortiGate memory for later upgrade. The FortiGate unit can be configured so that when it is rebooted, it will automatically load the new firmware. Using this option, you can stage multiple FortiGate units to upgrade simultaneously using FortiManager or a script.

To load the firmware for later installation:

```
execute restore secondary-image {ftp | tftp | usb} <filename_str>
```

To set the FortiGate unit so that when it reboots, the new firmware is loaded:

```
execute set-next-reboot {primary | secondary}
```

where `{primary | secondary}` is the partition with the preloaded firmware.

Settings

The default administrator password should be configured immediately after the FortiGate is installed, see Default administrator password on page 633.

After that, there are several system settings that should also be configured in *System* > *Settings*:

- Changing the host name on page 634
- Setting the system time on page 634
- Configuring ports on page 638
- Setting the idle timeout time on page 639
- Setting the password policy on page 639
- Changing the view settings on page 639
- Setting the administrator password retries and lockout time on page 640
- TLS configuration on page 641
- Controlling return path with auxiliary session on page 641
- Email alerts on page 645
- Trusted platform module support on page 649

Default administrator password

By default, your FortiGate has an administrator account set up with the username `admin` and no password. In order to prevent unauthorized access to the FortiGate, it is highly recommended that you add a password to this account.



In FortiOS 6.2.1 and later, adding a password to the *admin* administrator is mandatory. You will be prompted to configured it the first time you log in to the FortiGate using that account, after a factory reset, and after a new image installation.

To change the default password in the GUI:

1. Go to *System* > *Administrators*.
2. Edit the *admin* account.
3. Click *Change Password*.
4. If applicable, enter the current password in the *Old Password* field.
5. Enter a password in the *New Password* field, then enter it again in the *Confirm Password* field.
6. Click *OK*.

To change the default password in the CLI:

```
config system admin
    edit admin
        set password <password>
    next
end
```



It is also recommended that you change the user name of this account; however, since you cannot change the user name of an account that is currently in use, a second administrator account must be created in order to do this.

Changing the host name

The FortiGate host name is shown in the *Hostname* field in the *System Information* widget on a dashboard, as the command prompt in the CLI, as the SNMP system name, as the device name on FortiGate Cloud, and other places. If the FortiGate is in an HA cluster, use a unique host name to distinguish it from the other devices in the cluster.

An administrator requires *System* > *Configuration* read/write access to edit the host name. See Administrator profiles on page 620 for details.

To change the host name in the GUI:

1. Go to *System* > *Settings*.
2. In the *Host name* field, enter a new name.
3. Click *Apply*.

To change the host name in the CLI:

```
config system global
    set hostname <hostname>
end
```

Setting the system time

You can either manually set the FortiOS system time, or configure the device to automatically keep its system time correct by synchronizing with a Network Time Protocol (NTP) server.

Daylight savings time is enabled by default, and can only be configured in the CLI.



For many features to work, including scheduling, logging, and SSL-dependent features, the FortiOS system time must be accurate.

To configure the date and time in the GUI:

1. Go to *System* > *Settings*.
2. In the *System Time* section, configure the following settings to either manually set the time or use an NTP server:

Time Zone		Select a time zone from the list. This should be the time zone that the FortiGate is in.
Set Time		Select to either *Synchronize with an NTP Server*, or use *Manual settings*.
	Synchronize with an NTP Server	To use an NTP server other than FortiGuard, the CLI must be used. In the *Sync interval* field, enter how often, in minutes, that the device synchronizes its time with the NTP server.
	Manual settings	Manually enter the *Date*, *Hour* (in 24-hour format), *Minute*, and *Second* in their fields.
Setup device as local NTP server		Enable to configure the FortiGate as a local NTP server. In the *Listen on Interfaces* field, set the interface or interfaces that the FortiGate will listen for NTP requests on.

3. Click *Apply*.

To configure the date and time in the CLI:

1. Configure the timezone and daylight savings time:

```
config system global
    set timezone <integer>
    set dst {enable | disable}
end
```

2. Either manually configure the date and time, or configure an NTP server:

   Manual:

```
execute date <yyyy-mm-dd>
execute time <hh:mm:ss>
```

   NTP server:

```
config system ntp
    set ntpsync enable
    set type {fortiguard | custom}
    set syncinterval <integer>
    set source-ip <ip_address>
    set source-ip6 <ip6_address>
    set server-mode {enable | disable}
    set interface <interface>
    set authentication {enable | disable}
    set key-type {MD5 | SHA1}
```

```
        set key <password>
        set key-id <integer>
        config ntpserver
            edit <server_id>
                set server <ip_address or hostname>
                set ntpv3 {enable | disable}
                set authentication {enable | disable}
                set key <password>
                set key-id <integer>
            next
        end
    end
```

SHA-1 authentication support (for NTPv4)

SHA-1 authentication support allows the NTP client to verify that severs are known and trusted and not intruders masquerading (accidentally or intentionally) as legitimate servers. In cryptography, SHA-1 is a cryptographic hash algorithmic function.



SHA-1 authentication support is only available for NTP clients, not NTP servers.

To configure authentication on a FortiGate NTP client:

```
config system ntp
    set ntpsync enable
    set type custom
    set syncinterval 1
    config ntpserver
        edit "883502"
            set server "10.1.100.11"
            set authentication enable
            set key
ENCi9NmcqsV3xBJvOkgIL3lFxA8mnNs2XKfB7spOQoUw4cm8FOOP0nrCbqx6rJ+om95+hVUHpaVZmepdd4KznPlAHNiu
liPgPOk
            set key-id 1
        next
    end
end
```

Command	Description
`authentication <enable | disable>`	Enable/disable MD5/SHA1 authentication (default = disable).
`key <passwd>`	Key for MD5/SHA1 authentication. Enter a password value.
`key-id <integer>`	Key ID for authentication. Enter an integer value from 0 to 4294967295.

To confirm that NTP authentication is set up correctly:

```
# diagnose sys ntp status
synchronized: yes, ntpsync: enabled, server-mode: disabled
ipv4 server(10.1.100.11) 10.1.100.11 -- reachable(0xff) S:4 T:6 selected
server-version=4, stratum=3
```

If NTP authentication is set up correctly, the server version is equal to 4.

PTPv2

Precision time protocol (PTP) is used to synchronize network clocks. It is best suited to situations where time accuracy is of the utmost importance, as it supports accuracy in the sub-microsecond range. Conversely, NTP accuracy is in the range of milliseconds or tens of milliseconds.


The following CLI commands are available:

```
config system ptp
  set status {enable | disable}
  set mode {multicast | hybrid}
  set delay-mechanism {E2E | P2P}
  set request-interval <integer>
  set interface <interface>
end
```

Command	Description
status {enable | disable}	Enable or disable the FortiGate system time by synchronizing with a PTP server (default = disable).
mode {multicast | hybrid}	Use multicast or hybrid transmission (default = multicast).
delay-mechanism {E2E | P2P}	Use end-to-end (E2E) or peer-to-peer (P2P) delay detection (default = E2E).
request-interval <integer>	The logarithmic mean interval between the delay request messages sent by the client to the server in seconds (default = 1).
interface <interface>	The interface that the PTP client will reply through.

Sample configuration

This example uses the following topology:

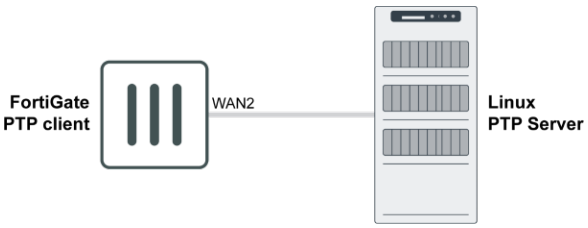

To configure a FortiGate to act as a PTP client that synchronizes itself with a Linux PTP server:

1. Enable debug messages:
   ```
   diagnose debug application ptpd -1
   ```

This command will provide details to debug the PTP communication with the server.

2. Check the system date:
```
execute date
   current date is: 2019-01-01
```
3. Configure PTP in global mode:
```
config system ptp
   set status enable
   set interface wan2
end
```
4. Check the system date again after synchronization with the PTP server:
```
execute date
   current date is: 2019-01-14
```

Configuring ports

To improve security, the default ports for administrative connections to the FortiGate can be changed. Port numbers must be unique. If a conflict exists with a particular port, a warning message is shown.

When connecting to the FortiGate after a port has been changed, the port number be included, for example: `https://192.168.1.99:100`.

To configure the ports in the GUI:

1. Go to *System* > *Settings*.
2. In the *Administration Settings* section, set the HTTP, HTTPS, SSH, and Telnet ports.
3. Enable *Redirect to HTTPS* to prevent HTTP from being used by administrators.
4. Click *Apply*.

To configure the ports in the CLI:

```
config system global
    set admin-port <port>
    set admin-sport <port>
    set admin-https-redirect {enable | disable}
    set admin-ssh-port <port>
    set admin-telnet-port <port>
end
```

Custom default service port range

The default service port range can be customized using the following CLI command:

```
config system global
   set default-service-source-port <port range>
end
```

Where `<port range>` is the new default service port range, that can have a minimum value of 0 and a maximum value up to 65535. The default value is 1 to 65535.



This change effects the TCP/UDP protocol.

Setting the idle timeout time

The idle timeout period is the amount of time that an administrator will stay logged in to the GUI without any activity. This is to prevent someone from accessing the FortiGate if the management PC is left unattended. By default, it is set to five minutes.



A setting of higher than 15 minutes will have a negative effect on a security rating score. See Security rating on page 134 for more information.

To change the idle timeout in the GUI:

1. Go to *System* > *Settings*.
2. In the *Administration Settings* section, set the *Idle timeout* to up to 480 minutes.
3. Click *Apply*.

To change the idle timeout in the CLI:

```
config system global
    set admintimeout <integer>
end
```

Setting the password policy

A password policy can be created for administrators and IPsec pre-shared keys. See Password policy on page 624 for information.

Changing the view settings

The view settings change the look and language of the FortiOS GUI.

To change the view settings in the GUI:

1. Go to *System* > *Settings*.
2. In the *View Settings* section, configure the following settings:

Language	Set the GUI language: *English*, *French*, *Spanish*, *Portuguese*, *Japanese*, *Traditional Chinese*, *Simplifies Chinese*, *Korean*.
Lines per page	Set the number of lines per page, from 20 to 100.

Theme	Set the theme color: *Green*, *Red*, *Blue*, *Melongene*, or *Mariner*.
Date/Time Display	Set the date and time to display using the FortiGate's or the browser's timezone.
NGFW Mode	Set the NGFW mode to either *Profile-based* (default) or *Policy-based*. If *Policy-based* is selected, the *SSL/SSH Inspection* profile must be selected.

3. Click *Apply*.

To change the view settings in the CLI:

```
config system global
    set language {english | french | spanish | portuguese | japanese | trach | simch |
korean}
    set gui-lines-per-page <integer>
    set gui-theme {green | red | blue | melongene | mariner}
    set gui-date-time-source {system | browser}
end
config system settings
    set ngfw-mode {profile-based | policy-based}
    set ssl-ssh-profile {certificate-inspection | custom-deep-inspection | deep-inspection |
no-inspection}
end
```

Setting the administrator password retries and lockout time

By default, the number password retry attempts is set to three, allowing the administrator a maximum of three attempts at logging in to their account before they are locked out for a set amount of time (by default, 60 seconds).

The number of attempts and the default wait time before the administrator can try to enter a password again can be configured using the CLI.

A maximum of ten retry attempts can be configured, and the lockout period can be 1 to 2147483647 seconds (over 68 years). The higher the retry attempts, the higher the risk that someone might be able to guess the password.

To configure the lockout options:

```
config system global
    set admin-lockout-threshold <failed_attempts>
    set admin-lockout-duration <seconds>
end
```

Example:

To set the number of retry attempts to 1, and the lockout time to 5 minutes, enter the following commands:

```
config system global
    set admin-lockout-threshold 1
    set admin-lockout-duration 300
end
```



If the time span between the first failed log in attempt and the lockout threshold failed attempt is less than lockout time, the lockout will be triggered.

TLS configuration

The minimum TLS version that is used for local out connections from the FortiGate can be configured in the CLI:

```
config system global
    set ssl-min-proto-version {SSLv3 | TLSv1 | TLSv1-1 | TLSv1-2 | TLSv1-3}
end
```

By default, the minimum version is TLSv1.2. The FortiGate will try to negotiate a connection using the configured version or higher. If the server that FortiGate is connecting to does not support the version, then the connection will not be made. Some FortiCloud and FortiGuard services do not support TLSv1.3.

Minimum SSL/TLS versions can also be configured individually for the following settings, not all of which support TLSv1.3:

Setting	CLI
Email server	`config system email-server`
Certificate	`config vpn certificate setting`
FortiSandbox	`config system fortisandbox`
FortiGuard	`config log fortiguard setting`
FortiAnalyzer	`config log fortianalyzer setting`
Syslog	`config log syslogd setting`
User Authentication	`config user setting`
LDAP server	`config user ldap`
POP3 server	`config user pop3`
Exchange server	`config user exchange`

A minimum (`ssl-min-proto-ver`) and a maximum (`ssl-max-proto-ver`) version can be configured for SSL VPN.
See TLS 1.3 support on page 1417

Controlling return path with auxiliary session


When multiple incoming or outgoing interfaces are used in SD-WAN or for load balancing, changes to routing or incoming or return traffic interfaces impacts how an existing sessions handles the traffic. In FortiOS 6.2.3 and later, auxiliary sessions can be used to handle these changes to traffic patterns.

- In FortiOS 6.0 and earlier, the auxiliary session feature is not supported.
- In FortiOS 6.2.0 to 6.2.2, the auxiliary session feature is permanently enabled.
- In FortiOS 6.2.3 and later, the auxiliary session feature is disabled by default, and can be enabled if required.

To enable the auxiliary session feature:

```
config system settings
    set auxiliary-session {enable | disable*}
end
```

Scenarios

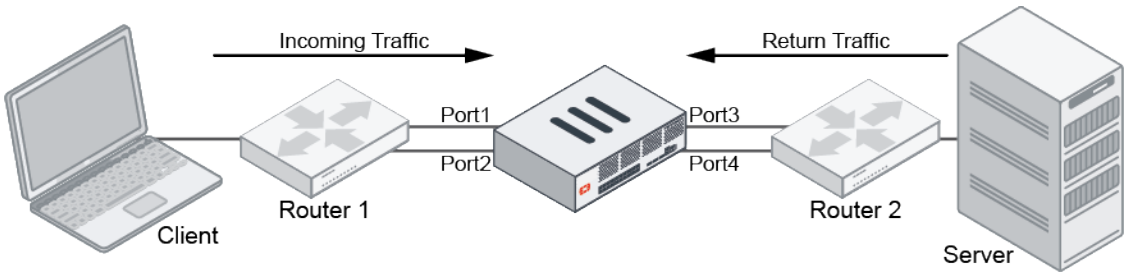

Incoming traffic is from the client to the server. Return traffic is from the server to the client.

Scenario 1 - Return traffic returns on the original outgoing interface

In this scenario, a session is established between port1 and port3. When the return traffic hits port3:

Auxiliary sessions disabled:

The reply to the client egresses on the original incoming interface, port1. If policy routes or SD-WAN rules are configured, the next hop gateway is applied if the output device is the same as the original incoming interface.

Auxiliary sessions enabled:

The reply to the client egresses on the best route in the routing table:

- If the best route is port1, then it will egress on port1.
- If the best route is port2, then it will egress on port2.

If policy routes or SD-WAN rules are configured, they must be matched to determine the egress interface. If both are configured, policy routes have higher priority.

Scenario 2 - Return traffic returns on an interfaces other than the original outgoing interfaces

In this scenario, a session is established between port1 and port3. When the return traffic hits port4:

Auxiliary sessions disabled:

- The session is dirtied and then gets refreshed, and interfaces on the session are updated.
- If there is a high traffic volume or flapping between the interfaces, the CPU usage increases.

Auxiliary sessions enabled:

An auxiliary session is created for the existing session, and traffic returns to the client as normal on the auxiliary session.

Scenario 3 - Incoming traffic enters on an interfaces other than the original incoming interfaces

In this scenario, a session is established between port1 and port3. When the incoming traffic hits port2:

Auxiliary sessions disabled:

The session is dirtied and then gets refreshed, and interfaces on the session are updated.

Auxiliary sessions enabled:

An auxiliary session is created for the existing session, and traffic is forwarded to the server as normal on the auxiliary session.

Scenario 4 - the routing table is changed

In this scenario, a session has been established between port1 and port3, when a new route on port4 is updated as the route to the server.

Auxiliary sessions disabled:

As long as there is a route to the destination, the session will not be dirtied or refreshed. Even though there is a better route, traffic continues on the original path between port1 and port3.

Auxiliary sessiosn enabled:

The session is dirtied and then gets refreshed, and interfaces on the session are updated.

Effect on NPU offloading sessions

When the auxiliary session feature is disabled, there is always one session. If the incoming or return interface changes, the FortiGate marks the session as dirty and updates the session's interfaces. This cannot be done by the NPU, so the session is not offloaded to the NPU, and is processed by the CPU instead. If Equal-Cost Multi-Path (ECMP) causes the interface to keep changing, then it will use significant CPU resources.

When the auxiliary session feature is enabled and the incoming or return interface changes, it creates an auxiliary session, and all traffic can continue to be processed by the NPU.

Verification

When an auxiliary, or reflect, session is created, it will appear as a reflect session below the existing session:

```
# diagnose sys session list
session info: proto=17 proto_state=00 duration=111 expire=175 timeout=0 flags=00000000
socktype=0 sockport=0 av_idx=0 use=4
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=may_dirty npu
statistic(bytes/packets/allow_err): org=131/4/1 reply=0/0/0 tuples=2
tx speed(Bps/kbps): 0/0 rx speed(Bps/kbps): 0/0
```

```
orgin->sink: org pre->post, reply pre->post dev=36->38/38->36 gwy=10.1.2.3/0.0.0.0
hook=pre dir=org act=noop 10.1.100.22:51926->172.16.204.44:5001(0.0.0.0:0)
hook=post dir=reply act=noop 172.16.204.44:5001->10.1.100.22:51926(0.0.0.0:0)
src_mac=90:6c:ac:19:19:58
misc=0 policy_id=1 auth_info=0 chk_client_info=0 vd=2
serial=00002b11 tos=ff/ff app_list=0 app=0 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=0
rpdb_link_id=00000000 rpdb_svc_id=0 ngfwid=n/a
npu_state=0x000400
npu info: flag=0x91/0x00, offload=8/0, ips_offload=0/0, epid=129/0, ipid=142/0,
vlan=0x0016/0x0000
vlifid=142/0, vtag_in=0x0016/0x0000 in_npu=1/0, out_npu=1/0, fwd_en=0/0, qid=4/0
no_ofld_reason:
reflect info 0:
dev=37->38/38->37
npu_state=0x000400
npu info: flag=0x91/0x00, offload=8/0, ips_offload=0/0, epid=129/0, ipid=142/0,
vlan=0x0017/0x0000
vlifid=142/0, vtag_in=0x0017/0x0000 in_npu=1/0, out_npu=1/0, fwd_en=0/0, qid=4/0
total reflect session num: 1
total session 1
```

When a session is dirtied, a dirty flag is added to it:

```
# diagnose sys session list
session info: proto=17 proto_state=00 duration=28 expire=152 timeout=0 flags=00000000
socktype=0 sockport=0 av_idx=0 use=3
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/255
state=dirty may_dirty npu
statistic(bytes/packets/allow_err): org=68/2/1 reply=0/0/0 tuples=2
tx speed(Bps/kbps): 2/0 rx speed(Bps/kbps): 0/0
orgin->sink: org pre->post, reply pre->post dev=0->0/0->0 gwy=0.0.0.0/0.0.0.0
hook=pre dir=org act=noop 10.1.100.22:51926->172.16.204.44:5001(0.0.0.0:0)
hook=post dir=reply act=noop 172.16.204.44:5001->10.1.100.22:51926(0.0.0.0:0)
src_mac=90:6c:ac:19:19:58  dst_mac=02:6c:ac:5c:c6:f9
misc=0 policy_id=1 auth_info=0 chk_client_info=0 vd=2
serial=00002b2c tos=ff/ff app_list=0 app=0 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=0
rpdb_link_id=00000000 rpdb_svc_id=0 ngfwid=n/a
npu_state=0x000400
npu info: flag=0x00/0x00, offload=0/0, ips_offload=0/0, epid=0/0, ipid=0/0,
vlan=0x0000/0x0000
vlifid=0/0, vtag_in=0x0000/0x0000 in_npu=0/0, out_npu=0/0, fwd_en=0/0, qid=0/0
no_ofld_reason:
total session 1
```

When an auxiliary session is created, NPU offloading will continue in the reflect session:

```
# diagnose sys session list
session info: proto=17 proto_state=01 duration=169 expire=129 timeout=0 flags=00000000
socktype=0 sockport=0 av_idx=0 use=4
origin-shaper=
reply-shaper=
per_ip_shaper=
class_id=0 ha_id=0 policy_dir=0 tunnel=/ vlan_cos=0/255
```

```
state=may_dirty npu
statistic(bytes/packets/allow_err): org=131/4/1 reply=66/2/1 tuples=2
tx speed(Bps/kbps): 0/0 rx speed(Bps/kbps): 0/0
orgin->sink: org pre->post, reply pre->post dev=36->38/38->36 gwy=10.1.2.3/172.17.2.1
hook=pre dir=org act=noop 10.1.100.22:51926->172.16.204.44:5001(0.0.0.0:0)
hook=post dir=reply act=noop 172.16.204.44:5001->10.1.100.22:51926(0.0.0.0:0)
src_mac=90:6c:ac:19:19:58
misc=0 policy_id=1 auth_info=0 chk_client_info=0 vd=2
serial=00002b11 tos=ff/ff app_list=0 app=0 url_cat=0
sdwan_mbr_seq=0 sdwan_service_id=0
rpdb_link_id=00000000 rpdb_svc_id=0 ngfwid=n/a
npu_state=0x000c00
npu info: flag=0x91/0x81, offload=8/8, ips_offload=0/0, epid=129/142, ipid=142/128,
vlan=0x0016/0x0016
vlifid=142/128, vtag_in=0x0016/0x0016 in_npu=1/1, out_npu=1/1, fwd_en=0/0, qid=4/4
reflect info 0:
dev=37->38/38->37
npu_state=0x000400
npu info: flag=0x91/0x00, offload=8/0, ips_offload=0/0, epid=129/0, ipid=142/0,
vlan=0x0017/0x0000
vlifid=142/0, vtag_in=0x0017/0x0000 in_npu=1/0, out_npu=1/0, fwd_en=0/0, qid=4/0
total reflect session num: 1
total session 1
```

Email alerts

Alert emails are used to notify administrators about events on the FortiGate device, allowing a quick response to any issues.

There are two methods that can be used to configure email alerts:

- Automation stitches on page 646
- Alert emails on page 648


The FortiGate has a default SMTP server, notification.fortinet.net, that provides secure mail service with SMTPS. It is used for all emails that are sent by the FortiGate, including alert emails, automation stitch emails, and FortiToken Mobile activations. You can also configure a custom email service.

To configure a custom email service in the GUI:

1. Go to *System* > *Settings*.
2. In the *Email Service* section, enable *Use custom settings*.
3. Configure the following settings:

SMTP Server	Enter the address or name of the SMTP server, such as *smtp.example.com*.
Port	If required, select *Specify* and enter a specific port number. The default is port 465.
Authentication	If required by the email server, enable authentication. If enabled, enter the *Username* and *Password*.
Security Mode	Set the security mode: *None*, *SMTPS*, or *STARTTLS*.

Default Reply To	Optionally, enter the reply to email address, such as noreply@example.com. This address will override the from address that is configured for an alert email.

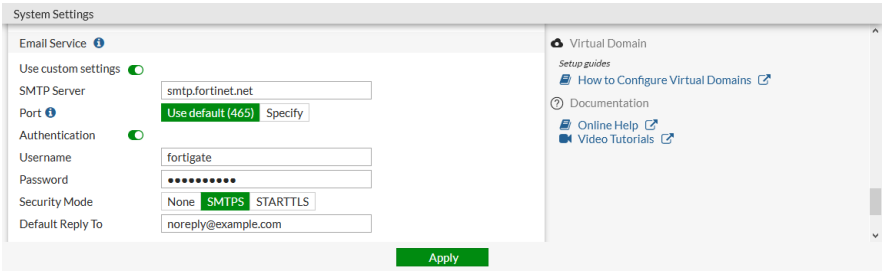

4. Click *Apply*.

To configure a custom email service in the CLI:

```
config system email-server
    set reply-to "noreply@example.com"
    set server "smtp.fortinet.net"
    set port 465
    set authenticate enable
    set username "fortigate"
    set password **********
    set security smtps
end
```


Automation stitches

Automation stitches can be configured to send emails based on a variety of triggers, giving you control over the events that cause an alert, and who gets alerted. For more information, see Automation stitches on page 234.

In this example, the default mail service sends an email to two recipients when there is a configuration change or an Admin login failed event occurs.

To configure the automation stitch in the GUI:

1. On the root FortiGate, go to *Security Fabric* > *Automation* and click *Create New*.
2. Enter a name for the stitch, such as *Admin Fail*.
3. In the *Trigger* section, select *FortiOS Event Log*.
4. Click in the *Event* field, and in the slide out pane, search for and select *Admin login failed*.
5. In the *Action* section, select *Email*.
6. Configure the *Email* settings:
   a. In the *To* field, click the plus icon, then enter the two email recipients' addresses, such as *admin@example.com* and *manager@example.com*.
   b. Enter the *Email subject*, such as *Admin log in failed*.
   c. Edit the *Email body* as required. By default, the email body will include all the fields from the log event that triggered the stitch.

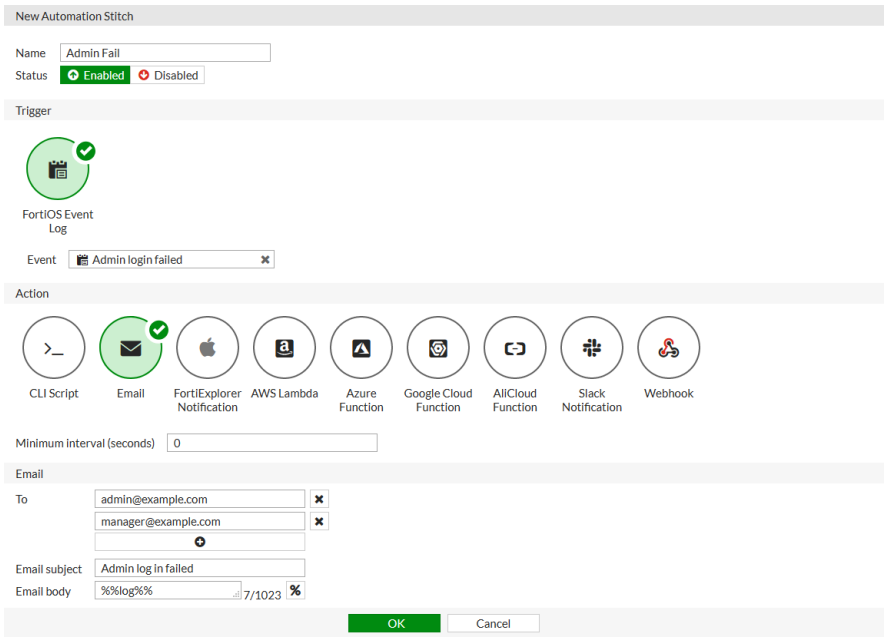

7. Click *OK*.
8. Create a second stitch, selecting *Configuration Change* as the trigger.

To configure the automation stitch in the CLI:

1. Create automation actions to send the email messages:

```
config system automation-action
    edit "Config Change_email"
        set action-type email
        set email-to "admin@example.com" "manager@example.com"
        set email-subject "Configuration Change Detected"
    next
    edit "Admin Fail_email"
        set action-type email
        set email-to "admin@example.com" "manager@example.com"
        set email-subject "Admin log in failed"
    next
end
```

2. Create the automation triggers:

```
config system automation-trigger
    edit "Config Change"
        set event-type config-change
    next
    edit "Admin Fail"
        set event-type event-log
        set logid 32002
    next
end
```

3. Create the automation stitches:

```
config system automation-stitch
    edit "Config Change"
        set trigger "Config Change"
        set action "Config Change_email"
    next
    edit "Admin Fail"
        set trigger "Admin Fail"
        set action "Admin Fail_email"
    next
end
```

Alert emails


When configuring an alert email, you can define the threshold when an issue becomes critical and requires attention. When the threshold is reached, an email is sent to up to three recipients on the configured schedule to notify them of the issue.

In this example, the FortiGate is configured to send email messages to two addresses, admin@example.com and manager@example.com, every two minutes when multiple intrusions, administrator log in or out events, or configuration changes occur.

To configure an alert email in the GUI:

1. Go to *Log & Report* > *Email Alert Settings* and enable *Enabled*.
2. Configure the following:

From	Enter the name in the *From* field of the message: fortigate@example.com.
To	Enter the two addresses that the message is sent to: admin@example.com and manager@example.com
Alert parameter	Send the alert based on specific events (`category`), as opposed to the severity (`threshold`).
Interval	Set the interval between messages to 2 minutes.
Security	Enable *Intrusion detected* (`IPS-logs`).
Administrative	Enable *Administrator login/logout* (`admin-login-logs`) and *Configuration change* (`configuration-changes-logs`).

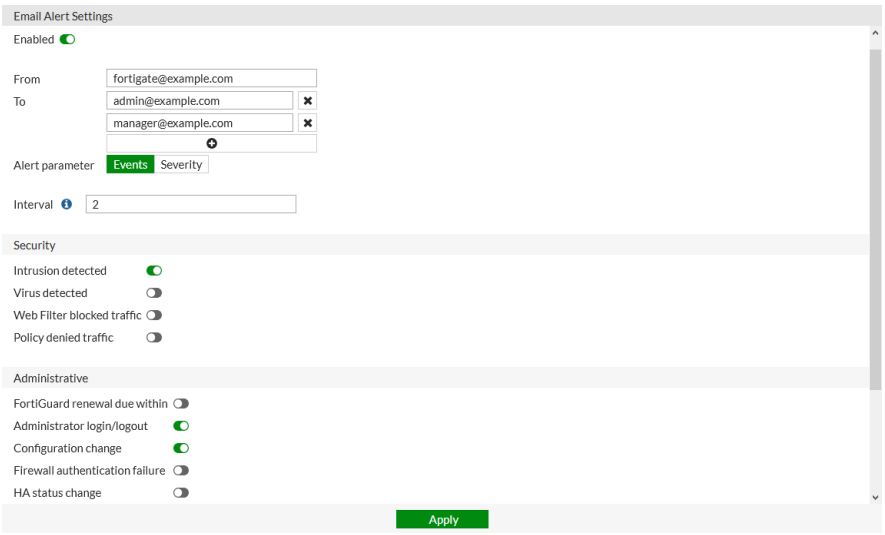

3. Click *Apply*.

To configure an alert email in the CLI:

```
config alertemail setting
    set username fortigate@example.com
    set mailto1 admin@example.com
    set mailto2 manager@example.com
    set filter-mode category
    set email-interval 2
    set IPS-logs enable
    set configuration-changes-logs enable
    set admin-login-logs enable
end
```

For more information on the available CLI commands, see Configure alert email settings.

Trusted platform module support

On supported FortiGate hardware devices, the Trusted Platform Module (TPM) can be used to protect your password and key against malicious software and phishing attacks. The dedicated module hardens the FortiGate by generating, storing, and authenticating cryptographic keys.

By default, the TPM is disabled. To enable it, you must set the 32 hexadecimal digit master-encryption-password. The TPM protects the master-encryption-password, and uses it to generate a master-encryption-key. The key is also protected by the TPM, and used to encrypt and decrypt users' passwords. The TPM does not directly encrypt, decrypt, or store users' passwords.

When backing up the configuration, the TPM uses the master encryption key to encrypt the master-encryption-password in the configuration file. When restoring a configuration that includes a TPM protected master-encryption-password:

- If TPM is not enabled, then the configuration cannot be restored.
- If TPM is enabled but has a different master-encryption-password than the configuration file, then the configuration cannot be restored.
- If TPM is enabled and the master-encryption-password is the same in the configuration file, then the configuration can be restored.

For information on backing up and restoring the configuration, see Configuration backups on page 61.

Passwords and keys that can be encrypted by the master-encryption-key include:

- Alert email user's password
- BGP and other routing related configurations
- External resource
- FortiGuard proxy password
- FortiToken/FortiToken Mobile's seed
- HA password
- IPsec pre-shared key
- Link Monitor, server side password
- Local certificate's private key
- local, LDAP. RADIUS, FSSO, and other user category related passwords
- Modem/PPPoE
- NST password
- NTP Password
- SDN connector, server side password
- SNMP
- Wireless Security related password



In HA configurations, each cluster member must use the same master-encryption-key so that the HA cluster can form and its members can synchronize their configurations.

To check if your FortiGate device has a TPM:

```
# diagnose hardware deviceinfo tpm
```

or

```
# diagnose hardware test tpm

========== Fortinet Hardware Test Report ==================

TPM

  TPM Device Detection..................................... PASS

================ Fortinet Hardware Test PASSED ==============
```

To enable TPM and input the master-encryption-password:

```
config system global
    set private-data-encryption enable
end

Please type your private data encryption key (32 hexadecimal numbers):
1234567890abcdef1234567890abcdef
```

```
Please re-enter your private data encryption key (32 hexadecimal numbers) again:
1234567890abcdef1234567890abcdef
Your private data encryption key is accepted.
```

Virtual Domains

Virtual Domains (VDOMs) are used to divide a FortiGate into two or more virtual units that function independently. VDOMs can provide separate security policies and, in NAT mode, completely separate configurations for routing and VPN services for each connected network.

There are two VDOM modes:

- Split-task VDOM mode: One VDOM is used only for management, and the other is used to manage traffic. See Split-task VDOM mode on page 652.
- Multi VDOM mode: Multiple VDOMs can be created and managed as independent units. See Multi VDOM mode on page 655.

By default, most FortiGate units support 10 VDOMs, and many FortiGate models support purchasing a license key to increase the maximum number.


Global settings are configured outside of a VDOM. They effect the entire FortiGate, and include settings such as interfaces, firmware, DNS, some logging and sandboxing options, and others. Global settings should only be changed by top level administrators.

Switching VDOM modes

Current VDOM mode	New VDOM mode	Rule
No VDOM	Split-task VDOM	Allowed
Split-task VDOM	No VDOM	Allowed
No VDOM	Multi VDOM	Allowed only if the FortiGate is not a member of a Security Fabric. See Configuring the root FortiGate and downstream FortiGates on page 69 for more information.
Multi VDOM	No VDOM	Allowed
Split-task VDOM	Multi VDOM	Allowed only if the FortiGate is not a member of a Security Fabric. See Configuring the root FortiGate and downstream FortiGates on page 69 for more information.
Multi VDOM	Split-task VDOM	Not Allowed. User must first switch to *No VDOM*

Split-task VDOM mode

In split-task VDOM mode, the FortiGate has two VDOMs: the management VDOM (*root*) and the traffic VDOM (*FG-traffic*).

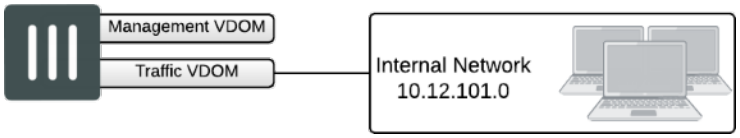

The management VDOM is used to manage the FortiGate, and cannot be used to process traffic.

The following GUI sections are available when in the management VDOM:

- The Status dashboard
- Security Fabric topology and settings (read-only, except for *HTTP Service* settings)
- Interface and static route configuration
- FortiClient configuration
- Replacement messages
- Certificates
- System events
- Log and email alert settings
- Threat weight definitions

The traffic VDOM provides separate security policies, and is used to process all network traffic.

The following GUI sections are available when in the traffic VDOM:

- The Status, Top Usage LAN/DMZ, and Security dashboards
- Security Fabric topology, settings (read-only, except for *HTTP Service* settings), and Fabric Connectors (*SSO/Identity* connectors only)
- FortiView
- Interface configuration
- Packet capture
- SD-WAN, SD-WAN Rules, and Performance SLA
- Static and policy routes
- RIP, OSPF, BGP, and Multicast
- Replacement messages
- Feature visibility
- Tags
- Certificates
- Policies and objects
- Security profiles
- VPNs
- User and device authentication
- Wifi and switch controller
- Logging
- Monitoring

Split-task VDOM mode is not available on all FortiGate models. The Fortinet Security Fabric supports split-task VDOM mode.

Enable split-task VDOM mode


Split-task VDOM mode can be enabled in the GUI or CLI. Enabling it does not require a reboot, but does log you out of the FortiGate.

When split-task VDOM mode is enabled, all current management configuration is assigned to the *root* VDOM, and all non-management settings, such as firewall policies and security profiles, are deleted.

On FortiGate 60 series models and lower, VDOMs can only be enabled using the CLI.

To enable split-task VDOM mode in the GUI:

1. On the FortiGate, go to *System* > *Settings*.
2. In the *System Operation Settings* section, enable *Virtual Domains*.

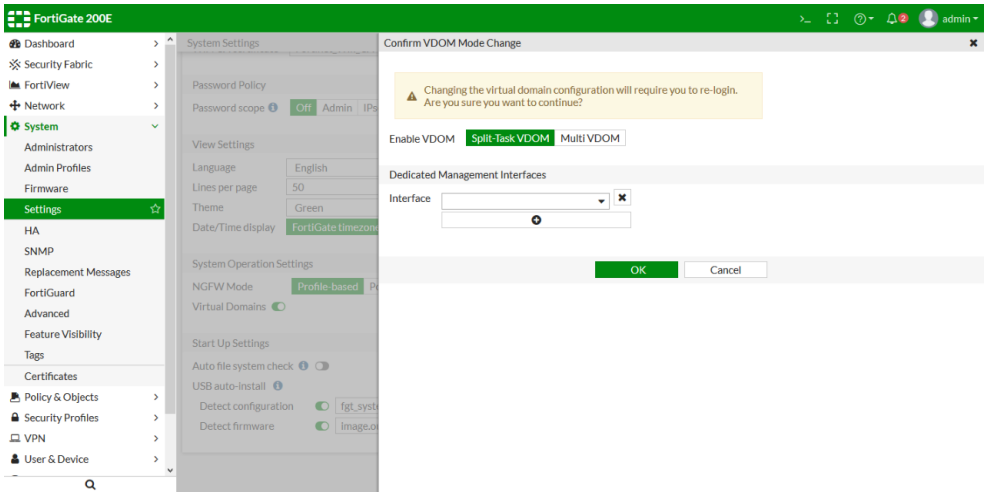

3. Select *Split-Task VDOM* for the VDOM mode.
4. Select a *Dedicated Management Interface* from the *Interface* list. This interface is used to access the management VDOM, and cannot be used in firewall policies.
5. Click *OK*.

To enable split-task VDOM mode with the CLI:

```
config system global
   set vdom-mode split-vdom
end
```

Assign interfaces to a VDOM


An interface can only be assigned to one of the VDOMs. When split-task VDOM mode is enabled, all interfaces are assigned to the *root* VDOM. To use an interface in a policy, it must first be assigned to the traffic VDOM.

An interface cannot be moved if it is referenced in an existing configuration.

In the GUI, the interface list *Ref.* column shows if the interface is referenced in an existing configuration, and allows you to quickly access and edit those references.

To assign an interface to a VDOM in the GUI:

1. On the FortiGate, go to *Global* > *Network* > *Interfaces*.
2. Edit the interface that will be assigned to a VDOM.
3. Select the VDOM that the interface will be assigned to from the *Virtual Domain* list.

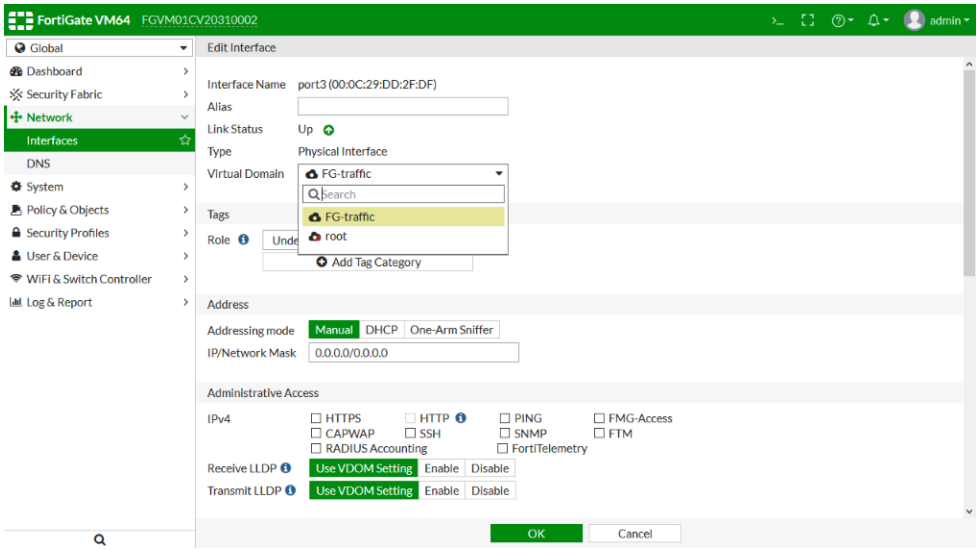

4. Click *OK*.

To assign an interface to a VDOM using the CLI:

```
config global
   config system interface
      edit <interface>
         set vdom <VDOM_name>
      next
   end
end
```

Create per-VDOM administrators


Per-VDOM administrators can be created that can access only the management or traffic VDOM. These administrators must use either the *prof_admin* administrator profile, or a custom profile.

A per-VDOM administrator can only access the FortiGate through a network interface that is assigned to the VDOM that they are assigned to. The interface must also be configured to allow management access. They can also connect to the FortiGate using the console port.

To assign an administrator to multiple VDOMs, they must be created at the global level. When creating an administrator at the VDOM level, the *super_admin* administrator profile cannot be used.

To create a per-VDOM administrator in the GUI:

1. On the FortiGate, connect to the management VDOM.
2. Go to *Global* > *System* > *Administrators* and click *Create New* > *Administrator*.
3. Fill in the required information, setting the *Type* as *Local User*.
4. In the *Virtual Domains* field, add the VDOM that the administrator will be assigned to, and if necessary, remove the other VDOM from the list.

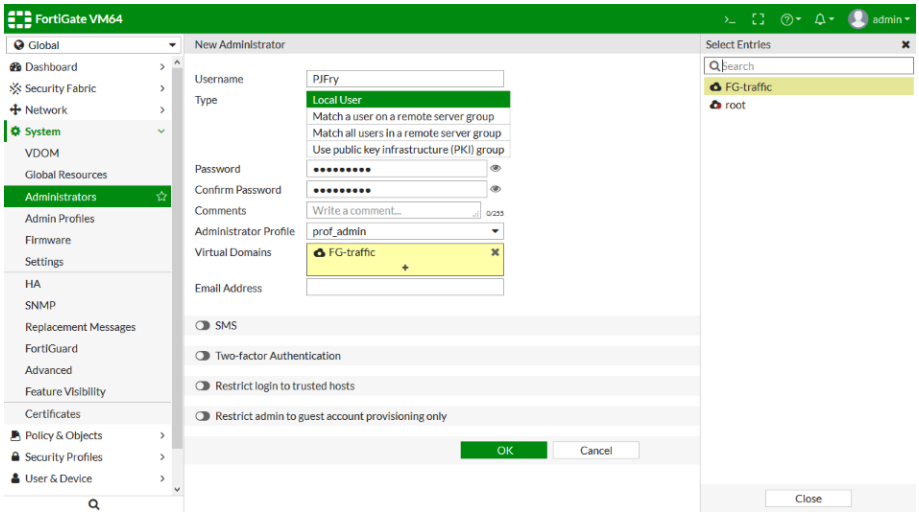

5. Click *OK*.

To create a per-VDOM administrator using the CLI:

```
config global
   config system admin
      edit <name>
         set vdom <VDOM_name>
         set password <password>
         set accprofile <admin_profile>
         ...
      next
   end
end
```


Multi VDOM mode

In multi VDOM mode, the FortiGate can have multiple VDOMs that function as independent units. One VDOM is used to manage global settings. The root VDOM cannot be deleted, and remains in the configuration even if it is not processing any traffic.

Multi VDOM mode isn't available on all FortiGate models. The Fortinet Security Fabric does not support multi VDOM mode.


There are three main configuration types in multi VDOM mode:

Independent VDOMs:

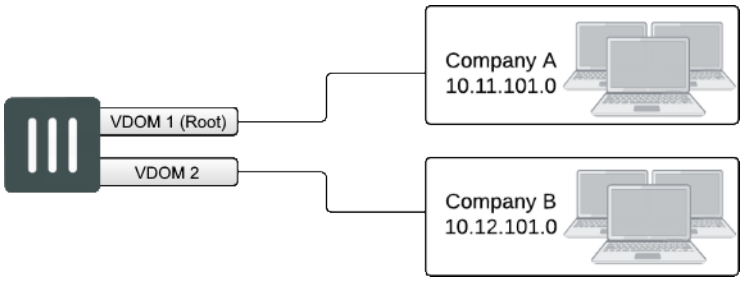

Multiple, completely separate VDOMs are created. Any VDOM can be the management VDOM, as long as it has Internet access. There are no inter-VDOM links, and each VDOM is independently managed.


Management VDOM:

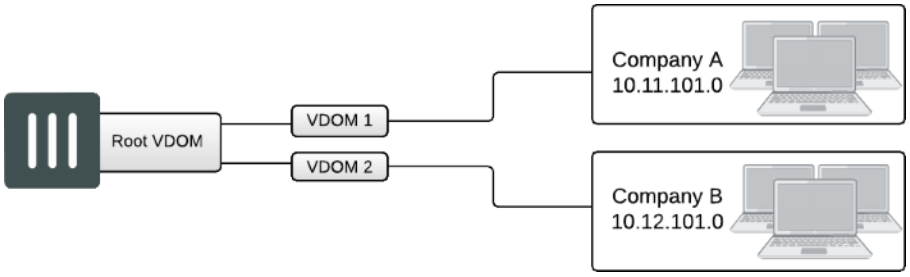

A management VDOM is located between the other VDOMs and the Internet, and the other VDOMs connect to the management VDOM with inter-VDOM links. The management VDOM has complete control over Internet access, including the types of traffic that are allowed in both directions. This can improve security, as there is only one point of ingress and egress.

There is no communication between the other VDOMs.

Meshed VDOMs:

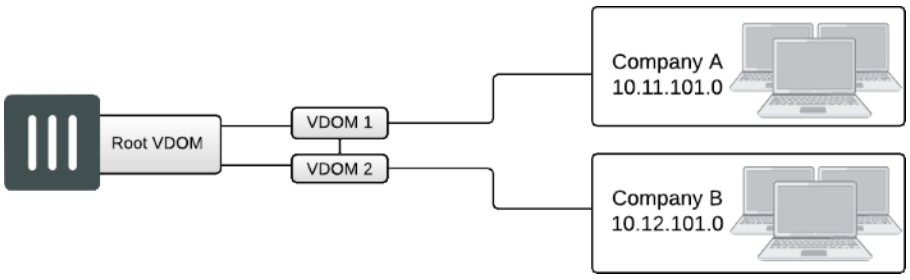


VDOMs can communicate with inter-VDOM links. In full-mesh configurations, all the VDOMs are interconnected. In partial-mesh configurations, only some of the VDOMs are interconnected.

In this configuration, proper security must be achieved by using firewall policies and ensuring secure account access for administrators and users.

Multi VDOM configuration examples

The following examples show how to configure per-VDOM settings, such as operation mode, routing, and security policies, in a network that includes the following VDOMs:

- VDOM-A: allows the internal network to access the Internet.
- VDOM-B: allows external connections to an FTP server.
- root: the management VDOM.

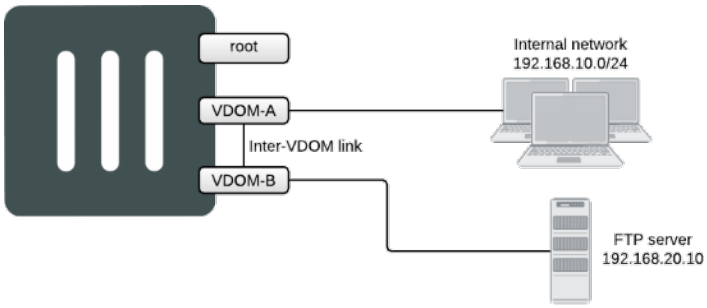

You can use VDOMs in either NAT or transparent mode on the same FortiGate. By default, VDOMs operate in NAT mode.

For both examples, multi VDOM mode must be enabled, and VDOM-A and VDOM-B must be created.

Enable multi VDOM mode

Multi VDOM mode can be enabled in the GUI or CLI. Enabling it does not require a reboot, but does log you out of the device. The current configuration is assigned to the *root* VDOM.



On FortiGate 60 series models and lower, VDOMs can only be enabled using the CLI.

To enable multi VDOM mode in the GUI:

1. On the FortiGate, go to *System* > *Settings*.
2. In the *System Operation Settings* section, enable *Virtual Domains*.
3. Select *Multi VDOM* for the VDOM mode.
4. Click *OK*.


To enable multi VDOM mode with the CLI:

```
config system global
   set vdom-mode multi-vdom
end
```

Create the VDOMs

To create the VDOMs in the GUI:

1. In the *Global* VDOM, go to *System* > *VDOM*, and click *Create New*. The *New Virtual Domain* page opens.

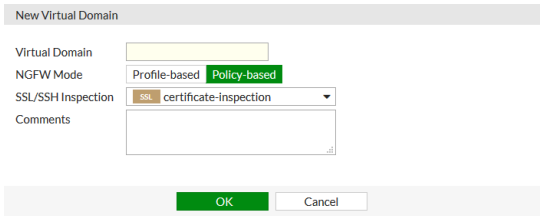

2. In the *Virtual Domain* field, enter *VDOM-A*.
3. If required, set the *NGFW Mode*. If the *NGFW Mode* is *Policy-based*, select an *SSL/SSH Inspection* from the list.
4. Optionally, enter a comment.
5. Click *OK* to create the VDOM.
6. Repeat the above steps for *VDOM-B*.

To create the VDOMs with the CLI:

```
config vdom
   edit <VDOM-A>
      next
   edit <VDOM-B>
      next
   end
end
```

NAT mode

In this example, both VDOM-A and VDOM-B use NAT mode. A VDOM link is created that allows users on the internal network to access the FTP server.

This configuration requires the following steps:

1. Configure VDOM-A on page 658
2. Configure VDOM-B on page 660
3. Configure the VDOM link on page 663

Configure VDOM-A

VDOM-A allows connections from devices on the internal network to the Internet. WAN 1 and port 1 are assigned to this VDOM.

The per-VDOM configuration for VDOM-A includes the following:

- A firewall address for the internal network
- A static route to the ISP gateway
- A security policy allowing the internal network to access the Internet

All procedures in this section require you to connect to VDOM-A, either using a global or per-VDOM administrator account.

To add the firewall addresses in the GUI:

1. Go to *Policy & Objects* > *Addresses* and create a new address.
2. Enter the following information:

Name	internal-network
Type	Subnet
Subnet / IP Range	192.168.10.0/255.255.255.0
Interface	port1
Show in Address List	enabled

To add the firewall addresses with the CLI:

```
config vdom
   edit VDOM-A
      config firewall address
         edit internal-network
            set associated-interface port1
            set subnet 192.168.10.0 255.255.255.0
         next
      end
   next
end
```

To add a default route in the GUI:

1. Go to *Network* > *Static Routes* and create a new route.
2. Enter the following information:

Destination	Subnet
IP address	0.0.0.0/0.0.0.0
Gateway	172.20.201.7
Interface	wan1
Distance	10

To add a default route with the CLI:

```
config vdom
   edit VDOM-A
      config router static
         edit 0
            set gateway 172.20.201.7
            set device wan1
         next
      end
   next
end
```

To add the security policy in the GUI:

1. Connect to VDOM-A.
2. Go to *Policy & Objects* > *IPv4 Policy* and create a new policy.
3. Enter the following information:

Name	VDOM-A-Internet
Incoming Interface	port1
Outgoing Interface	wan1
Source Address	internal-network
Destination Address	all
Schedule	always
Service	ALL
Action	ACCEPT
NAT	enabled

To add the security policy with the CLI:

```
config vdom
   edit VDOM-A
      config firewall policy
         edit 0
            set name VDOM-A-Internet
            set srcintf port1
            set dstintf wan1
            set srcaddr internal-network
            set dstaddr all
            set action accept
            set schedule always
            set service ALL
            set nat enable
         next
      end
   next
end
```

Configure VDOM-B

VDOM-B allows external connections to reach an internal FTP server. WAN 2 and port 2 are assigned to this VDOM.

The per-VDOM configuration for VDOM-B includes the following:

- A firewall address for the FTP server
- A virtual IP address for the FTP server
- A static route to the ISP gateway
- A security policy allowing external traffic to reach the FTP server

All procedures in this section require you to connect to VDOM-B, either using a global or per-VDOM administrator account.

To add the firewall addresses in the GUI:

1. Go to *Policy & Objects* > *Addresses* and create a new address.
2. Enter the following information:

Address Name	FTP-server
Type	Subnet
Subnet / IP Range	192.168.20.10/32
Interface	port2
Show in Address List	enabled

To add the firewall addresses with the CLI:

```
config vdom
   edit VDOM-B
      config firewall address
         edit FTP-server
            set associated-interface port2
            set subnet 192.168.20.10 255.255.255.255
         next
      end
   next
end
```

To add the virtual IP address in the GUI:

1. Go to *Policy & Objects* > *Virtual IPs* and create a new virtual IP address.
2. Enter the following information:

Name	FTP-server-VIP
Interface	wan2
External IP Address/Range	172.25.177.42
Internal IP Address/Range	192.168.20.10

To add the virtual IP address with the CLI:

```
config firewall vip
   edit FTP-server-VIP
      set extip 172.25.177.42
      set extintf wan2
      set mappedip 192.168.20.10
   next
end
```

To add a default route in the GUI:

1. Go to *Network* > *Static Routes* and create a new route.
2. Enter the following information:

Destination	Subnet
IP address	0.0.0.0/0.0.0.0
Gateway	172.20.10.10
Interface	wan2
Distance	10

To add a default route with the CLI:

```
config vdom
   edit VDOM-B
      config router static
         edit 0
            set device wan2
            set gateway 172.20.10.10
         next
      end
   next
end
```

To add the security policy in the GUI:

1. Go to *Policy & Objects* > *IPv4 Policy* and create a new policy.
2. Enter the following information:

Name	Access-server
Incoming Interface	wan2
Outgoing Interface	port2
Source Address	all
Destination Address	FTP-server-VIP
Schedule	always
Service	FTP
Action	ACCEPT
NAT	enabled

To add the security policy with the CLI:

```
config vdom
   edit VDOM-B
      config firewall policy
         edit 0
            set name Access-server
```

```
            set srcintf wan2
            set dstintf port2
            set srcaddr all
            set dstaddr FTP-server-VIP
            set action accept
            set schedule always
            set service FTP
            set nat enable
        next
    end
  next
end
```

Configure the VDOM link

The VDOM link allows connections from VDOM-A to VDOM-B. This allows users on the internal network to access the FTP server through the FortiGate.

The configuration for the VDOM link includes the following:

- The VDOM link interface
- Firewall addresses for the FTP server on VDOM-A and for the internal network on VDOM-B
- Static routes for the FTP server on VDOM-A and for the internal network on VDOM-B
- Policies allowing traffic using the VDOM link

All procedures in this section require you to connect to the global VDOM using a global administrator account.

To add the VDOM link in the GUI:

1. Connect to root.
2. Go to **Global > Network > Interfaces** and select **Create New > VDOM link.**
3. Enter the following information:

Name	VDOM-link
Interface 0	
Virtual Domain	VDOM-A
IP/Netmask	0.0.0.0/0.0.0.0
Interface 1	
Virtual Domain	VDOM-B
IP/Netmask	0.0.0.0/0.0.0.0

To add the VDOM link with the CLI:

```
config global
  config system vdom-link
    edit vlink
  end
  config system interface
    edit VDOM-link0
      set vdom VDOM-A
```

```
        set ip 0.0.0.0 0.0.0.0
      next
      edit VDOM-link1
        set vdom VDOM-B
        set ip 0.0.0.0 0.0.0.0
      next
    end
end
```

To add the firewall address on VDOM-A in the GUI:

1. Connect to VDOM-A.
2. Go to **Policy & Objects > Addresses** and create a new address.
3. Enter the following information:

Address Name	FTP-server
Type	Subnet
Subnet / IP Range	192.168.20.10/32
Interface	VDOM-link0
Show in Address List	enabled
Static Route Configuration	enabled

To add the firewall addresses on VDOM-A with the CLI:

```
config vdom
  edit VDOM-B
    config firewall address
      edit FTP-server
        set associated-interface VDOM-link0
        set allow-routing enable
        set subnet 192.168.20.10 255.255.255.255
      next
    end
  next
end
```

To add the static route on VDOM-A in the GUI:

1. Connect to VDOM-A.
2. Go to **Network > Static Routes** and create a new route.
3. Enter the following information:

Destination	Named Address
Named Address	FTP-server
Gateway	0.0.0.0
Interface	VDOM-link0

To add the static route on VDOM-A with the CLI:

```
config vdom
   edit VDOM-A
      config router static
         edit 0
            set device VDOM-link0
            set dstaddr FTP-server
         next
      end
   next
end
```

To add the security policy on VDOM-A in the GUI:

1. Connect to VDOM-A.
2. Go to **Policy & Objects > IPv4 Policy** and create a new policy.
3. Enter the following information:

Name	Access-FTP-server
Incoming Interface	port1
Outgoing Interface	VDOM-link0
Source	internal-network
Destination	FTP-server
Schedule	always
Service	FTP
Action	ACCEPT
NAT	disabled

To add the security policy on VDOM-A with the CLI:

```
config vdom
   edit VDOM-A
      config firewall policy
         edit 0
            set name Access-FTP-server
            set srcintf port1
            set dstintf VDOM-link0
            set srcaddr internal-network
            set dstaddr FTP-server
            set action accept
            set schedule always
            set service FTP
         next
      end
   next
end
```

To add the firewall address on VDOM-B in the GUI:

1. Connect to VDOM-B.
2. Go to **Policy & Objects > Addresses** and create a new address.
3. Enter the following information:

Address Name	internal-network
Type	Subnet
Subnet / IP Range	192.168.10.0/24
Interface	VDOM-link1
Show in Address List	enabled
Static Route Configuration	enabled

To add the firewall addresses on VDOM-B with the CLI:

```
config vdom
   edit VDOM-B
      config firewall address
         edit internal-network
            set associated-interface VDOM-link1
            set allow-routing enable
            set subnet 192.168.10.0 255.255.255.0
         next
      end
   next
end
```

To add the static route on VDOM-B in the GUI:

1. Connect to VDOM-B.
2. Go to **Network > Static Routes** and create a new route.
3. Enter the following information:

Destination	Named Address
Named Address	internal-network
Gateway	0.0.0.0
Interface	VDOM-link1

To add the static route on VDOM-B with the CLI:

```
config vdom
   edit VDOM-B
      config router static
         edit 0
            set device VDOM-link1
            set dstaddr internal-network
         next
      end
   next
```

```
end
```

To add the security policy on VDOM-B in the GUI:

1. Connect to VDOM-B.
2. Go to **Policy & Objects > IPv4 Policy** and create a new policy.
3. Enter the following information:

Name	Internal-server-access
Incoming Interface	VDOM-link1
Outgoing Interface	port2
Source	internal-network
Destination	FTP-server
Schedule	always
Service	FTP
Action	ACCEPT
NAT	disabled

To add the security policy on VDOM-B with the CLI:

```
config vdom
   edit VDOM-B
      config firewall policy
         edit 0
            set name Internal-server-access
            set srcintf VDOM-link1
            set dstintf port2
            set srcaddr internal-network
            set dstaddr FTP-server
            set action accept
            set schedule always
            set service FTP
         next
      end
   next
end
```

NAT and transparent mode

In this example, VDOM-A uses NAT mode and VDOM-B uses transparent mode.

This configuration requires the following steps:

1. Configure VDOM-A on page 668
2. Configure VDOM-B on page 670

Configure VDOM-A

VDOM-A allows connections from devices on the internal network to the Internet. WAN 1 and port 1 are assigned to this VDOM.

The per-VDOM configuration for VDOM-A includes the following:

- A firewall address for the internal network
- A static route to the ISP gateway
- A security policy allowing the internal network to access the Internet

All procedures in this section require you to connect to VDOM-A, either using a global or per-VDOM administrator account.

To add the firewall addresses in the GUI:

1. Go to *Policy & Objects* > *Addresses* and create a new address.
2. Enter the following information:

Name	internal-network
Type	Subnet
Subnet / IP Range	192.168.10.0/24
Interface	port1
Show in Address List	enabled

To add the firewall addresses with the CLI:

```
config vdom
   edit VDOM-A
      config firewall address
         edit internal-network
            set associated-interface port1
            set subnet 192.168.10.0 255.255.255.0
         next
      end
   next
end
```

To add a default route in the GUI:

1. Go to *Network* > *Static Routes* and create a new route.
2. Enter the following information:

Destination	Subnet
IP address	0.0.0.0/0.0.0.0
Gateway	172.20.201.7
Interface	wan1
Distance	10

To add a default route with the CLI:

```
config vdom
   edit VDOM-A
      config router static
         edit 0
            set gateway 172.20.201.7
            set device wan1
         next
      end
   next
end
```

To add the security policy in the GUI:

1. Connect to VDOM-A.
2. Go to *Policy & Objects* > *IPv4 Policy* and create a new policy.
3. Enter the following information:

Name	VDOM-A-Internet
Incoming Interface	port1
Outgoing Interface	wan1
Source Address	internal-network
Destination Address	all
Schedule	always
Service	ALL
Action	ACCEPT
NAT	enabled

To add the security policy with the CLI:

```
config vdom
   edit VDOM-A
      config firewall policy
         edit 0
            set name VDOM-A-Internet
            set srcintf port1
            set dstintf wan1
            set srcaddr internal-network
            set dstaddr all
            set action accept
            set schedule always
            set service ALL
            set nat enable
         next
      end
   next
end
```

Configure VDOM-B

VDOM-B allows external connections to reach an internal FTP server. WAN 2 and port 2 are assigned to this VDOM.

The per-VDOM configuration for VDOM-B includes the following:

- A firewall address for the FTP server
- A static route to the ISP gateway
- A security policy allowing external traffic to reach the FTP server

All procedures in this section require you to connect to VDOM-B, either using a global or per-VDOM administrator account.

To add the firewall addresses in the GUI:

1. Go to *Policy & Objects* > *Addresses* and create a new address.
2. Enter the following information:

Address Name	FTP-server
Type	Subnet
Subnet / IP Range	172.25.177.42/32
Interface	port2
Show in Address List	enabled

To add the firewall addresses with the CLI:

```
config vdom
   edit VDOM-B
      config firewall address
         edit FTP-server
            set associated-interface port2
            set subnet 172.25.177.42 255.255.255.255
         next
      end
   next
end
```

To add a default route in the GUI:

1. Go to *Network* > *Routing Table* and create a new route.
2. Enter the following information:

Destination	Subnet
IP address	0.0.0.0/0.0.0.0
Gateway	172.20.10.10

To add a default route with the CLI:

```
config vdom
   edit VDOM-B
```

```
    config router static
       edit 0
          set gateway 172.20.10.10
       next
    end
    next
end
```

To add the security policy in the GUI:

1. Connect to VDOM-B.
2. Go to *Policy & Objects* > *IPv4 Policy* and create a new policy.
3. Enter the following information:

Name	Access-server
Incoming Interface	wan2
Outgoing Interface	port2
Source Address	all
Destination Address	FTP-server
Schedule	always
Service	FTP
Action	ACCEPT

To add the security policy with the CLI:

```
config vdom
   edit VDOM-B
      config firewall policy
         edit 0
            set name Access-server
            set srcintf wan2
            set dstintf port2
            set srcaddr all
            set dstaddr FTP-server-VIP
            set action accept
            set schedule always
            set service FTP
         next
      end
   next
end
```

High Availability


The following sections provide instructions on configuring High Availability (HA):

- Introduction to the FGCP cluster on page 672
- Failover protection on page 673
- FGSP (session synchronization) peer setup on page 674
- Synchronizing sessions between FGCP clusters on page 675
- Using standalone configuration synchronization on page 677
- Troubleshoot an HA formation on page 679
- Check HA sync status on page 679
- Disabling stateful SCTP inspection on page 681
- Upgrading FortiGates in an HA cluster on page 682
- HA cluster setup examples on page 683

Introduction to the FGCP cluster

High availability (HA) is usually required in a system where there is high demand for little downtime. There are usually hot-swaps, backup routes, or standby backup units and as soon as the active entity fails, backup entities will start functioning. This results in minimal interruption for the users.

The FortiGate Clustering Protocol (FGCP) is a proprietary HA solution whereby FortiGates can find other member FortiGates to negotiate and create a cluster. A FortiGate HA cluster consists of at least two FortiGates (members) configured for HA operation. All FortiGates in the cluster must be the same model and have the same firmware installed. Cluster members must also have the same hardware configuration (such as the same number of hard disks). All cluster members share the same configurations except for their host name and priority in the HA settings. The cluster works like a device but always has a hot backup device.

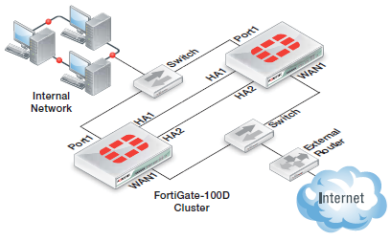

Critical cluster components

The following are critical components in an HA cluster:

- Heartbeat connections: members will use this to communicate with each other. In general, a two-member cluster is most common. We recommend double back-to-back heartbeat connections.
- Identical connections for internal and external interfaces: as demonstrated in the topology, we recommend similar connections from each member to the switches for the cluster to function properly.

General operation

The following are best practices for general cluster operation:

- Ensure that heartbeat communication is present.
- Enable the session synchronization option in daily operation (see FGSP (session synchronization) peer setup on page 674).
- Monitor traffic flowing in and out of the interfaces.

Failover

FGCP provides failover protection in the following scenarios:

- The active device loses power.
- A monitored interface loses a connection.

After failover occurs, the user will not notice any difference, except that the active device has changed. See Failover protection on page 673 for more information.

Synchronizing the configuration

FGCP uses a combination of incremental and periodic synchronization to make sure that the configuration of all cluster units is synchronized to that of the primary unit.

The following settings are not synchronized between cluster units:

- The FortiGate host name
- GUI Dashboard widgets
- HA override
- HA device priority
- The virtual cluster priority
- The HA priority setting for a ping server (or dead gateway detection) configuration
- The system interface settings of the HA reserved management interface
- The HA default route for the reserved management interface, set using the `ha-mgmt-interface-gateway` option of the `config system ha` command

Most subscriptions and licenses are not synchronized, as each FortiGate must be licensed individually. FortiToken Mobile is an exception; they are registered to the primary unit and synchronized to the secondary units.

The primary unit synchronizes all other configuration settings, including the other HA configuration settings.

All synchronization activity takes place over the HA heartbeat link using TCP/703 and UDP/703 packets.

Failover protection

The FortiGate Clustering Protocol (FGCP) provides failover protection, meaning that a cluster can provide FortiGate services even when one of the devices in the cluster encounters a problem that would result in the complete loss of connectivity for a stand-alone FortiGate unit. Failover protection provides a backup mechanism that can be used to reduce the risk of unexpected downtime, especially in mission-critical environments.

FGCP supports failover protection in three ways:

1. Link failover maintains traffic flow if a link fails.
2. If a device loses power, it automatically fails over to a backup unit with minimal impact on the network.
3. Optionally, if an SSD fails, it can automatically fail over to a backup unit.

When session-pickup is enabled in the HA settings, existing TCP session are kept, and users on the network are not impacted by downtime as the traffic can be passed without reestablishing the sessions.

When and how the failover happens

1. Link fails

Before triggering a failover when a link fails, the administrator must ensure that monitor interfaces are configured. Normally, the internal interface that connects to the internal network, and an outgoing interface for traffic to the internet or outside the network, should be monitored. Any of those links going down will trigger a failover.

2. Loss of power for active unit.

When an active (primary) unit loses power, a backup (secondary) unit automatically becomes the primary, and the impact on traffic is minimal. There are no settings for this kind of fail over.

3. SSD failure

HA failover can be triggered by an SSD failure.


To enable an SSD failure triggering HA fail over:

```
config system ha
    set ssd-failover enable
end
```

FGSP (session synchronization) peer setup

The FortiGate Session Life Support Protocol (FGSP) is a proprietary HA solution for only sharing sessions between two entities and is based on a peer-to-peer structure. The entities could be standalone FortiGates or an FGCP cluster.

Connect all necessary interfaces as per the topology diagram below. Interfaces may be changed depending on the models in use. Interface names in the topology diagram are for example purposes only.

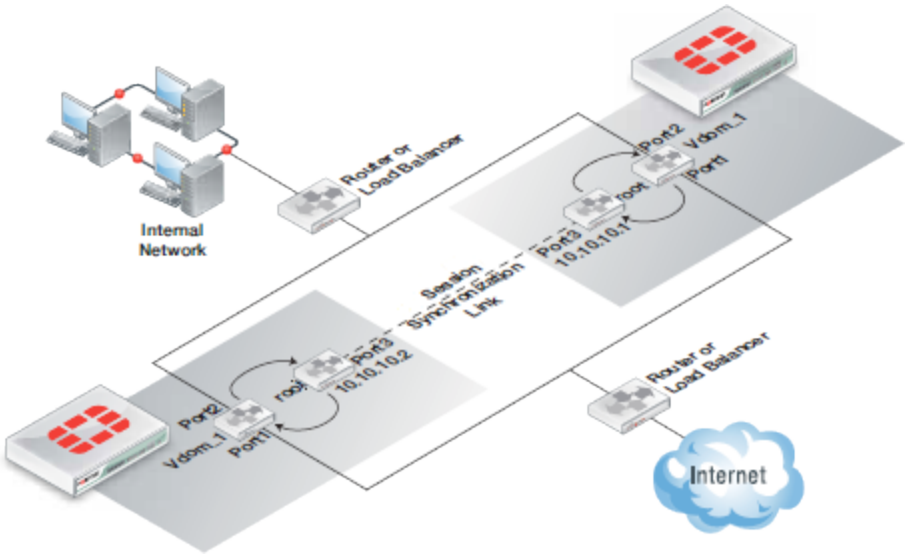

To setup an FGSP peer through the CLI:

These instructions assume that the device has been connected to the console, the CLI is accessible, and that all FortiGates have been factory reset.

1. Connect all necessary interfaces as per the topology diagram.
2. Enter the following command to change the FortiGate unit host name:

```
config system global
    set hostname Example1_host(Example2_host, etc)
end
```

3. On each FGSP peer device, enter the following command:

```
config system cluster-sync
   set peerip xx.xx.xx.xx    --->> peer's interface IP for session info to be
passed.
end
```

4. Set up identical firewall policies.
   FGSP peers share the same session information which goes from the same incoming interface (example: port1) to the outgoing interface (example: port2). Firewall policies should be identical as well, and can be copied from one device to its peer.

To test the setup:


1. Initiate TCP traffic (like HTTP access) to go through *FortiGateA*.
2. Check the session information.
   For example:

```
diagnose sys session filter src xxx.xxx.xxx.xxx (your PCs IP)
diagnose sys session list
```

3. Use the same command on *FortiGateB* to determine if the same session information appeared.

Synchronizing sessions between FGCP clusters

Synchronizing sessions between FGCP clusters is useful when data centers in different locations are used for load-balancing, and traffic must be shared and flow freely based on demand.

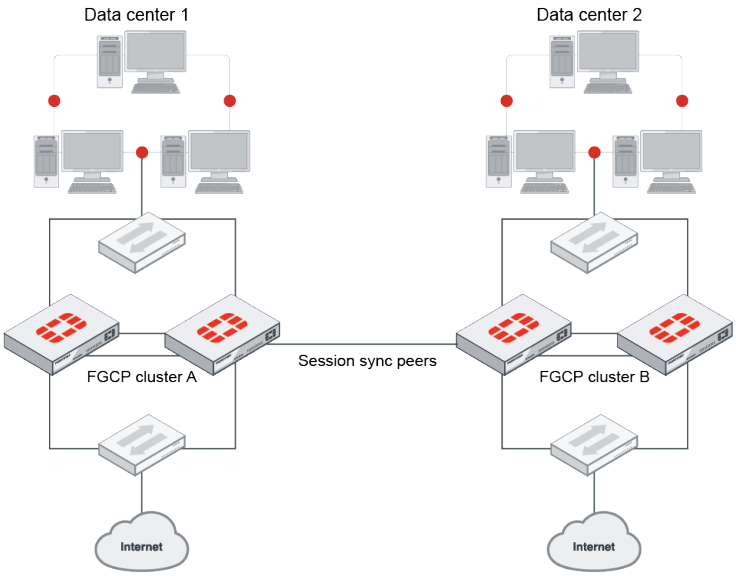

There are some limitations when synchronizing sessions between FGCP clusters:

- All FortiGates must have the same model and generation, hardware configuration, and FortiOS version.
- All sessions cannot be synced between clusters. Currently, only TCP sessions can be synced.
- Currently, a total of four clusters can share sessions.

To configure session synchronization between two clusters:

1. Configure the two clusters (see HA active-passive cluster setup on page 683 or HA active-active cluster setup on page 684).
2. On each cluster, enable session synchronization among HA clusters:

```
config system ha
    set inter-cluster-session-sync enable
end
```

3. On cluster A, configure the peer IP for the interface:

```
config system interface
    edit "port5"
        set vdom "root"
        set ip 10.10.10.1 255.255.255.0
        set allowaccess ping https ssh snmp http telnet
    next
end
```

   In this example, cluster A uses port5 and its IP address, 10.10.10.1, is reachable from another cluster.

4. On cluster A, configure cluster synchronization:

```
config system cluster-sync
    edit 1
        set peerip 10.10.10.2
    next
end
```

5. On cluster B, configure the peer IP for the interface:

```
config system interface
    edit "port5"
        set vdom "root"
        set ip 10.10.10.2 255.255.255.0
        set allowaccess ping https ssh snmp http telnet
    next
end
```

In this example, cluster B uses port5 and its IP address, 10.10.10.2, is reachable from another cluster.

6. On cluster B, configure cluster synchronization:

```
config system cluster-sync
    edit 1
        set peerip 10.10.10.1
    next
end
```

Using standalone configuration synchronization

You can configure synchronization from one standalone FortiGate to another standalone FortiGate (`standalone-config-sync`). With the exception of some configurations that do not sync (settings that identify the FortiGate to the network), the rest of the configurations are synced, such as firewall policies, firewall addresses, and UTM profiles.

This option is useful in situations when you need to set up FGSP peers, or when you want to quickly deploy several FortiGates with the same configurations. You can set up `standalone-config-sync` for multiple members.



`standalone-config-sync` is an independent feature and should be used with caution as there are some limitations. We recommend disabling it once the configurations have been synced over.


Limitations

When standalone configuration synchronization is enabled, there are some limitations, including but not limited to the following:

- Network interruptions occur during firmware upgrades: when upgrading the firmware, all members in the `standalone-config-sync` group are upgraded simultaneously. This creates downtime if the FortiGates are the only outgoing gateway in the network. We recommend disabling the option before upgrading firmware.
- Some unwanted configurations might be synced: the current design and implementation of `standalone-config-sync` is based on requirements from specific customers. Thus, some users may find that unwanted parts of the configurations are synced. Should this occur, we recommend disabling the option and modifying those configurations manually.
- The wrong primary device might be picked accidentally: `standalone-config-sync` is derived from the HA primary unit selection mechanism. All members in the group will join the selection process in the same way as a the HA cluster selection process. It is important to select the correct device as the primary, otherwise the wrong device could be selected and existing configurations could be overwritten.
- Layer 2 heartbeat connections must be present: similar to HA heartbeat requirements, one or more layer 2 heartbeat connections are needed to sync configurations between the primary and secondary devices.

Setting up standalone configuration synchronization

Two or more standalone FortiGates should be connected to each other with one or more heartbeat interfaces, either back-to-back or via a switch. In the following example, the device supplying the configurations is called "conf-prim," and the devices receiving the configurations are called "conf-seco".

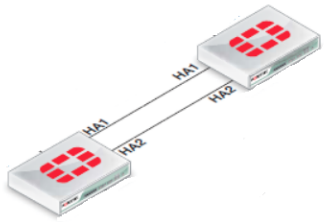

To set up standalone configuration synchronization:

1. Configure the conf-prim device for the group:

```
config system ha
    set hbdev ha1 50 ha2 100
    set priority 255
    set override enable
    set standalone-config-sync enable
end
```

2. Configure the conf-prim device as needed to be functional.
3. Configure the other group members as conf-seco:

```
config system ha
    set standalone-config-sync enable
end
```

4. Wait 10–15 minutes for the configurations to sync over.
5. Verify the synchronization status:

```
# get sys ha status...
Configuration Status:
  FG201E4Q17900771(updated 3 seconds ago): out-of-sync
  FG201ETK19900991(updated 1 seconds ago): in-sync
System Usage stats:
  FG201E4Q17900771(updated 3 seconds ago):
    sessions=1, average-cpu-user/nice/system/idle=0%/0%/0%/100%, memory=16%
  FG201ETK19900991(updated 1 seconds ago):
    sessions=1, average-cpu-user/nice/system/idle=0%/0%/0%/100%, memory=16%
...
```

If all members are `in-sync`, this means all members share the same configurations, except those that should not be synced. If any members are `out-of-sync`, this means the member failed to sync with the primary device.



Debugging is similar when a cluster is out of sync.

Troubleshoot an HA formation

The following are requirements for setting up an HA cluster or FGSP peers.

Cluster members must have:

- The same model.
- The same hardware configuration.
- The same connections.
- The same generation.



The requirement to have the same generation is done as a best practice as it avoids issues that can occur later on. If you are unsure if the FortiGates are from the same generation, please contact customer service.

Troubleshooting common HA formation errors

One member keeps shutting down during HA setup (hard drive failure):

If one member has a hard drive failure but the other does not, the one with the hard drive failure will be shut down during HA setup. In this case, RMA the member to resolve the issue.

All members are primary devices and members can't see other members:

Typically, this is a heartbeat issue. It is recommended that for a two-member cluster, you use a back-to-back connection for heartbeat communication. If there are more than three members in the cluster, a separate switch should be used to connect all heartbeat interfaces.


Check HA sync status

The HA sync status can be viewed in the GUI through either a widget on the *Dashboard* or on the *System* > *HA* page. It can also be confirmed through the CLI. When a cluster is out of sync, administrators should correct the issue as soon as possible as it affects the configuration integrity and can cause issues to occur.


HA sync status in the GUI

- Dashboard widget:
  - Following HA setup, the *HA Status* widget can be added to the *Dashboard*. The widget shows the HA sync status by displaying a green checkmark next to each member in sync. A red mark indicates the member is out

of sync.

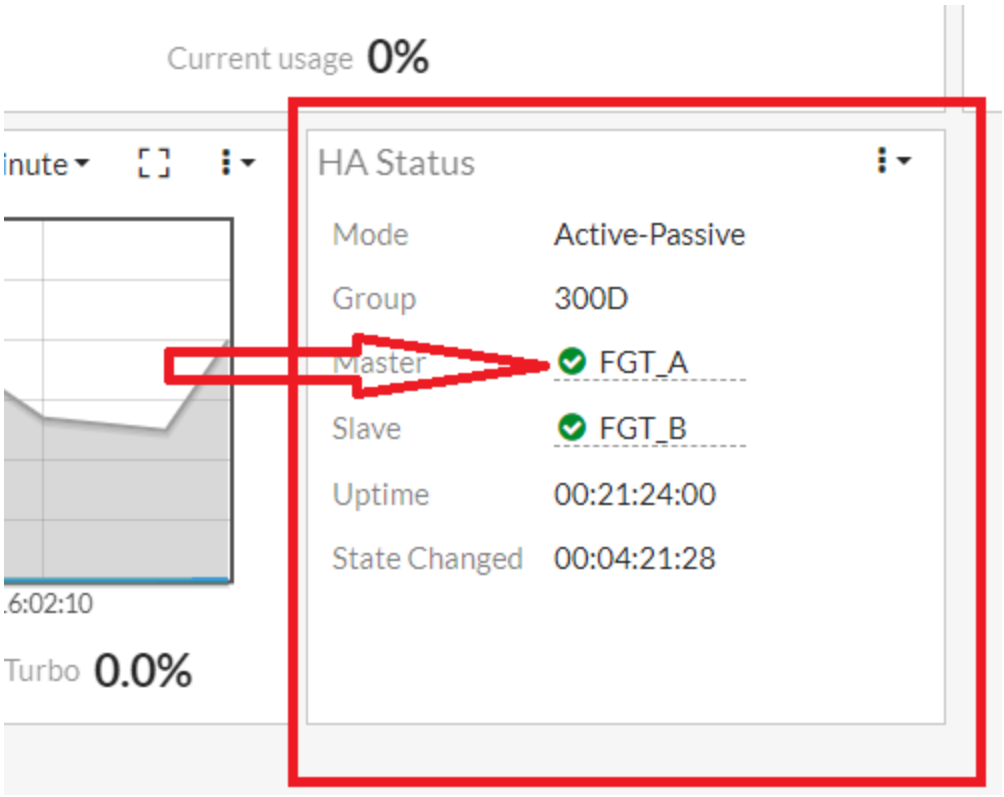

- *System* > *HA* page:
  - The same set of icons will be displayed on the *System* > *HA* page to indicate if the member is in sync.

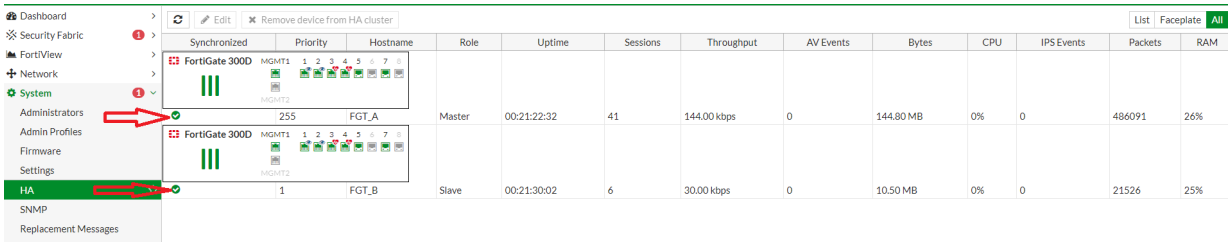

HA sync status in the CLI

- In the CLI, run the command `get sys ha status` to see if the cluster is in sync. The sync status is reported under *Configuration Status*. In the following example, both members are in sync:

```
    FGT_A # get sys ha status

HA Health Status: OK Model: FortiGate-300D Mode: HA A-P Group: 146 Debug: 0 Cluster
Uptime: 0 days 21:42:53 Cluster state change time: 2019-03-09 11:40:51 Master selected
using:

    <2019/03/08 18:56:12> FGT6HD3914800153 is selected as the master because it has the
least value 0 of link-failure + pingsvr-failure.

ses_pickup: enable, ses_pickup_delay=disable override: enable Configuration Status:
```

```
    FGT6HD3914800069(updated 5 seconds ago): in-sync
    FGT6HD3914800153(updated 4 seconds ago): in-sync

System Usage stats:

    FGT6HD3914800069(updated 5 seconds ago):
        sessions=17, average-cpu-user/nice/system/idle=0%/0%/0%/100%, memory=25%
    FGT6HD3914800153(updated 4 seconds ago):
        sessions=0, average-cpu-user/nice/system/idle=0%/0%/0%/100%, memory=25%

: : : Master: FGT6HD3914800069, HA operating index = 0 Slave : FGT6HD3914800153, HA
operating index = 1
```

Disabling stateful SCTP inspection


There is an option in FortiOS to disable stateful SCTP inspection. This option is useful when FortiGates are deployed in a high availability (HA) cluster that uses the FortiGate Clustering Protocol (FGCP) and virtual clustering in a multihoming topology. In this configuration, the primary stream control transmission protocol (SCTP) path traverses the primary FortiGate node by using its active VDOM (for example, VDOM1), and the backup SCTP path traverses the other passive FortiGate node by using its active VDOM (for example, VDOM2).

When stateful SCTP inspection is enabled, SCTP heartbeat traffic fails by means of the backup path because the primary path goes through a different platform and VDOM. Since there is no state sharing between VDOMs, the passive FortiGate is unaware of the original SCTP session and drops the heartbeats because of no associated sessions. When stateful SCTP inspection is disabled, the passive node permits the SCTP heartbeats to pass.

When set to `enable`, SCTP session creation without SCTP INIT is enabled. When set to `disable`, SCTP session creation without SCTP INIT is disabled (this is the default setting):

```
config system settings
   set sctp-session-without-init {enable | disable}
end
```

The following is an example topology and scenario:

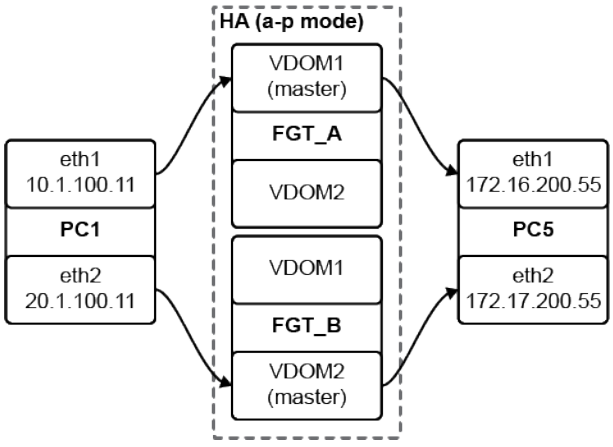

In this example, FGT_A and FGT_B are in HA a-p mode with two virtual clusters. Two primary devices exist on different FortiGate units. PC1 eth1 can access PC5 eth1 through VDOM1, and PC1 eth2 can access PC5 eth2 through VDOM2.

On PC5, to listen for an SCTP connection:

```
sctp_darn -H 172.16.200.55 -B 172.17.200.55 -P 2500 -l
```

On PC1, to start an SCTP connection:

```
sctp_darn -H 10.1.100.11 -B 20.1.100.11 -P 2600 -c 172.16.200.55 -c 172.17.200.55 -p 2500
    -s
```

An SCTP four-way handshake is on one VDOM, and a session is created on that VDOM. With the default configuration, there is no session on any other VDOM, and the heartbeat on another path (another VDOM) is dropped. After enabling `sctp-session-without-init`, the other VDOM creates the session when it receives the heartbeat, and the heartbeat is forwarded:

```
config system settings
  set sctp-session-without-init enable
end
```

Upgrading FortiGates in an HA cluster

You can upgrade the firmware on an HA cluster in the same way as on a standalone FortiGate. During a firmware upgrade, the cluster upgrades the primary unit and all of the subordinate units to the new firmware image.



Before upgrading a cluster, back up your configuration (Configuration backups on page 61), schedule a maintenance window, and make sure that you are using a supported upgrade path (https://docs.fortinet.com/upgrade-tool).

Uninterrupted upgrade

An uninterrupted upgrade occurs without interrupting communication in the cluster.

To upgrade the cluster firmware without interrupting communication, the following steps are followed. These steps are transparent to the user and the network, and might result in the cluster selecting a new primary unit.

1. The administrator uploads a new firmware image using the GUI or CLI. See Firmware on page 626 for details.
2. The firmware is upgraded on all of the subordinate units.
3. A new primary unit is selected from the upgraded subordinates.
4. The firmware is upgraded on the former primary unit.
5. Primary unit selection occurs, according to the standard primary unit selection process.

If all of the subordinate units crash or otherwise stop responding during the upgrade process, the primary unit will continue to operate normally, and will not be upgraded until at least one subordinate rejoins the cluster.

Interrupted upgrade

An interrupted upgrade upgrades all cluster members at the same time. This takes less time than an uninterrupted upgrade, but it interrupts communication in the cluster. Interrupted upgrade is disabled by default.

To enable interrupted upgrade:

```
config system ha
    set uninterruptible-upgrade disable
end
```

HA cluster setup examples


The following examples provide instructions on HA cluster setup:

- HA active-passive cluster setup on page 683
- HA active-active cluster setup on page 684
- HA virtual cluster setup on page 686
- HA using a hardware switch to replace a physical switch on page 689

HA active-passive cluster setup

An HA Active-Passive (A-P) cluster can be set up using the GUI or CLI.

This example uses the following network topology:

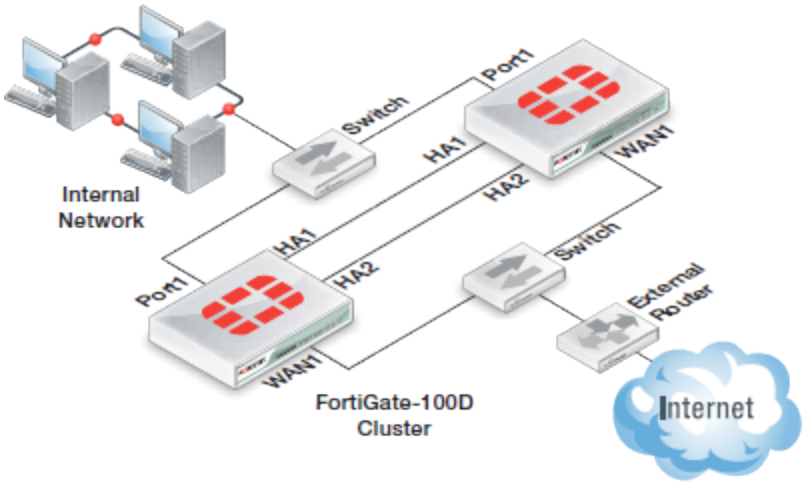


To set up an HA A-P cluster using the GUI:

1. Make all the necessary connections as shown in the topology diagram.
2. Log into one of the FortiGates.
3. Go to *System* > *HA* and set the following options:

Mode	Active-Passive
Device priority	128 or higher
Group name	Example_cluster
Heartbeat interfaces	ha1 and ha2

Except for the device priority, these settings must be the same on all FortiGates in the cluster.

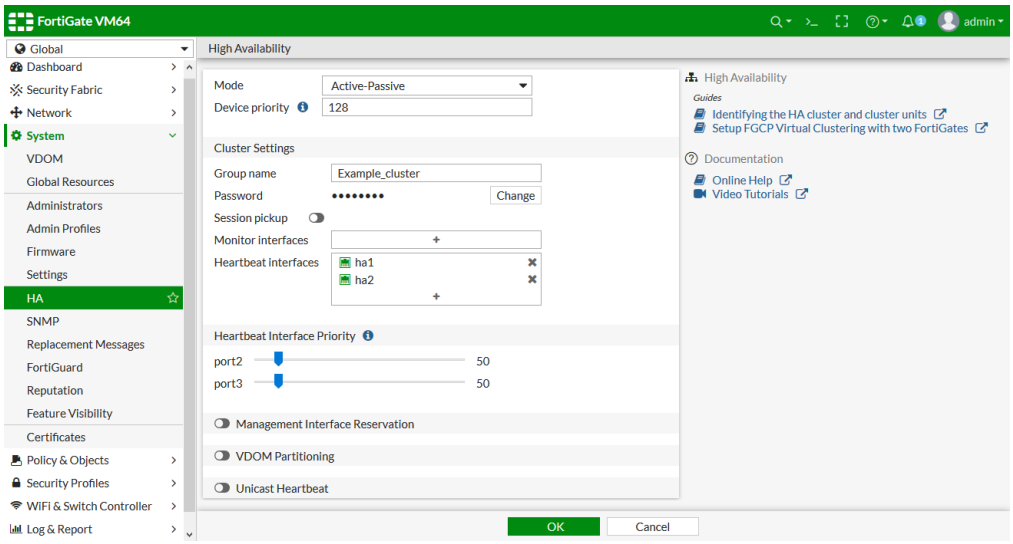

4. Leave the remaining settings as their default values. They can be changed after the cluster is in operation.
5. Click *OK*.
   The FortiGate negotiates to establish an HA cluster. Connectivity with the FortiGate may be temporarily lost as the HA cluster negotiates and the FGCP changes the MAC addresses of the FortiGate's interfaces.
6. Factory reset the other FortiGate that will be in the cluster, configure GUI access, then repeat steps 1 to 5, omitting setting the device priority, to join the cluster.

To set up an HA A-P cluster using the CLI:

1. Make all the necessary connections as shown in the topology diagram.
2. Log into one of the FortiGates.
3. Change the hostname of the FortiGate:

```
config system global
    set hostname Example1_host
end
```

   Changing the host name makes it easier to identify individual cluster units in the cluster operations.
4. Enable HA:


```
config system ha
    set mode a-p
    set group-name Example_cluster
    set hbdev ha1 10 ha2 20
end
```

5. Leave the remaining settings as their default values. They can be changed after the cluster is in operation.
6. Repeat steps 1 to 5 on the other FortiGate devices to join the cluster.

HA active-active cluster setup

An HA Active-Active (A-A) cluster can be set up using the GUI or CLI.

This example uses the following network topology:

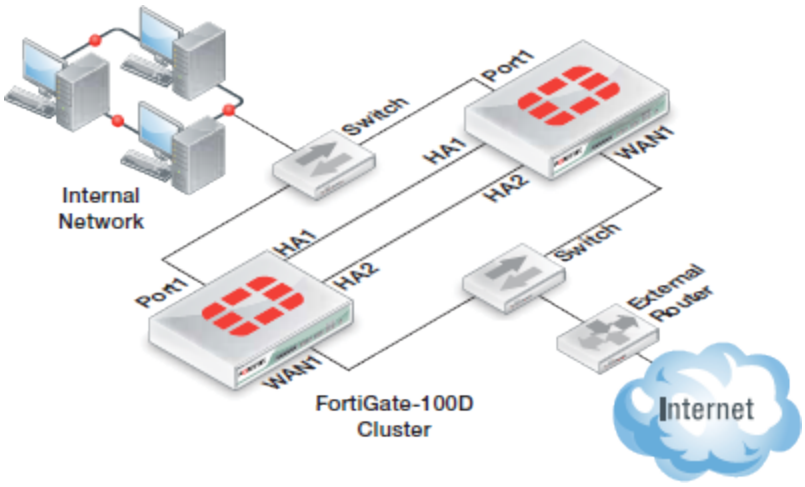


To set up an HA A-A cluster using the GUI:

1. Make all the necessary connections as shown in the topology diagram.
2. Log into one of the FortiGates.
3. Go to *System* > *HA* and set the following options:

Mode	Active-Active
Device priority	128 or higher
Group name	Example_cluster
Heartbeat interfaces	ha1 and ha2

Except for the device priority, these settings must be the same on all FortiGates in the cluster.

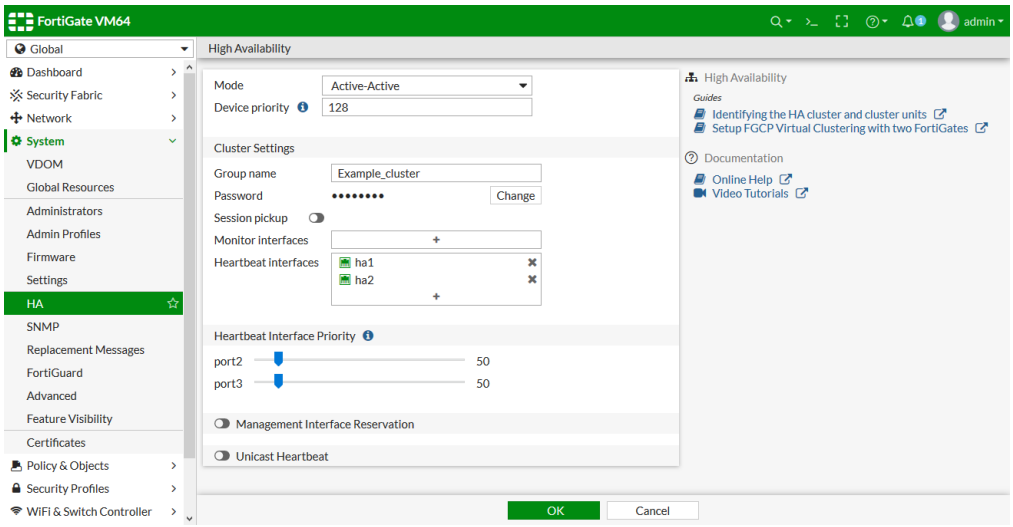

4. Leave the remaining settings as their default values. They can be changed after the cluster is in operation.
5. Click *OK*.
   The FortiGate negotiates to establish an HA cluster. Connectivity with the FortiGate may be temporarily lost as the HA cluster negotiates and the FGCP changes the MAC addresses of the FortiGate's interfaces.

6. Factory reset the other FortiGate that will be in the cluster, configure GUI access, then repeat steps 1 to 5, omitting setting the device priority, to join the cluster.

To set up an HA A-A cluster using the CLI:

1. Make all the necessary connections as shown in the topology diagram.
2. Log into one of the FortiGates.
3. Change the hostname of the FortiGate:

```
config system global
    set hostname Example1_host
end
```

   Changing the host name makes it easier to identify individual cluster units in the cluster operations.
4. Enable HA:


```
config system ha
    set mode a-a
    set group-name Example_cluster
    set hbdev ha1 10 ha2 20
end
```

5. Leave the remaining settings as their default values. They can be changed after the cluster is in operation.
6. Repeat steps 1 to 5 on the other FortiGate devices to join the cluster.

HA virtual cluster setup

An HA virtual cluster can be set up using the GUI or CLI.

This example uses the following network topology:

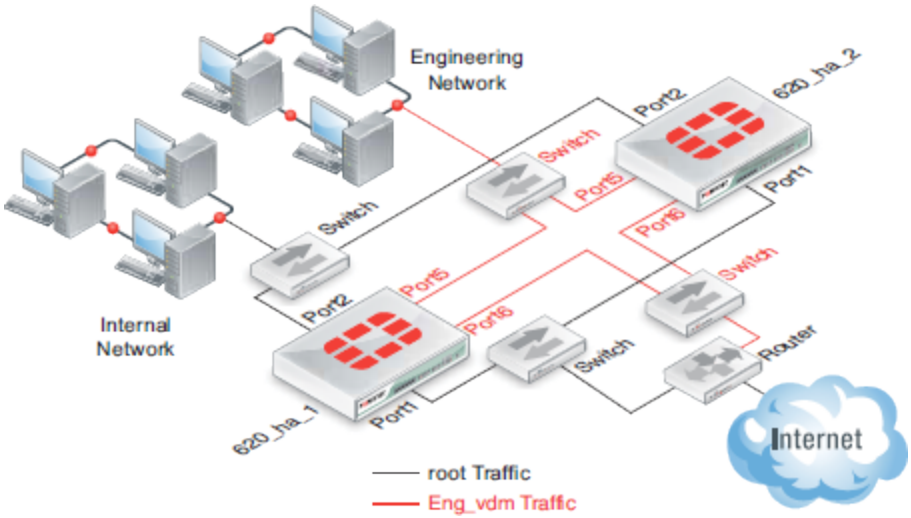

HA virtual clusters are based on VDOMs and are more complicated than regular clusters.



The root VDOM can only be associated with virtual cluster 1.

The VDOM that is assigned as the management VDOM can also only be associated with virtual cluster 1.


To set up an HA virtual cluster using the GUI:

1. Make all the necessary connections as shown in the topology diagram.
2. Log into one of the FortiGates.
3. Go to *System* > *HA* and set the following options:

Mode	Active-Passive
Device priority	128 or higher
Group name	Example_cluster
Heartbeat interfaces	ha1 and ha2

   Except for the device priority, these settings must be the same on all FortiGates in the cluster.
4. Leave the remaining settings as their default values. They can be changed after the cluster is in operation.
5. Click *OK*.
   The FortiGate negotiates to establish an HA cluster. Connectivity with the FortiGate may be temporarily lost as the HA cluster negotiates and the FGCP changes the MAC addresses of the FortiGate's interfaces.
6. Factory reset the other FortiGate that will be in the cluster, configure GUI access, then repeat steps 1 to 5, omitting setting the device priority, to join the cluster.
7. Go to *System* > *Settings* and enable *Virtual Domains*.
8. Click *Apply*. You will be logged out of the FortiGate.
9. Log back into the FortiGate, ensure that you are in the global VDOM, and go to *System* > *VDOM*.
10. Create two new VDOMs, such as VD1 and VD2:
    a. Click *Create New*. The *New Virtual Domain* page opens.
    b. Enter a name for the VDOM in the *Virtual Domain* field, then click *OK* to create the VDOM.
    c. Repeat these steps to create a second new VDOM.
11. Implement a virtual cluster by moving the new VDOMs to *Virtual cluster 2*:
    a. Go to *System* > *HA*.
    b. Enable *VDOM Partitioning*.

c. Click on the *Virtual cluster 2* field and select the new VDOMs.

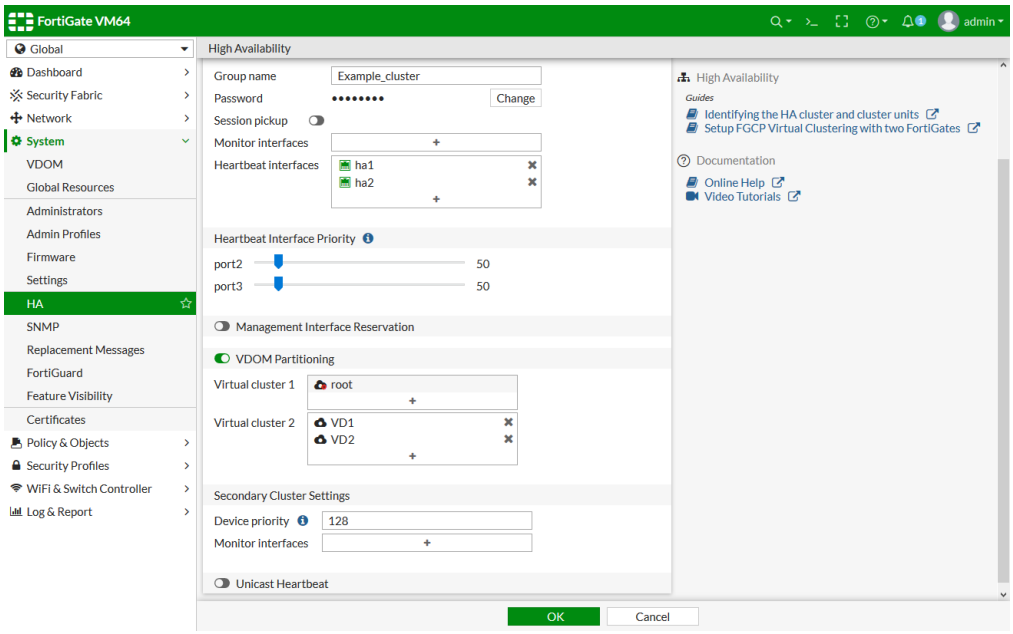

d. Click *OK*.

To set up an HA virtual cluster using the CLI:

1. Make all the necessary connections as shown in the topology diagram.
2. Set up a regular A-P cluster. See HA active-passive cluster setup on page 683.
3. Enable VDOMs:

```
config system global
    set vdom-mode multi-vdom
end
```

You will be logged out of the FortiGate.

4. Create two VDOMs:

```
config vdom
    edit VD1
    next
    edit VD2
    next
end
```

5. Reconfigure the HA settings to be a virtual cluster:

```
config global
    config system ha
        set vcluster2 enable
        config secondary-vcluster
            set vdom "VD1" "VD2"
        end
    end
end
```


HA using a hardware switch to replace a physical switch

Using a hardware switch to replace a physical switch is not recommended, as it offers no redundancy or interface monitoring.

- If one FortiGate loses power, all of the clients connected to that FortiGate device cannot go to another device until that FortiGate recovers.
- A hardware switch cannot be used as a monitor interface in HA. Any incoming or outgoing link failures on hardware member interfaces will not trigger failover; this can affect traffic.

Examples

The examples use the following topology:

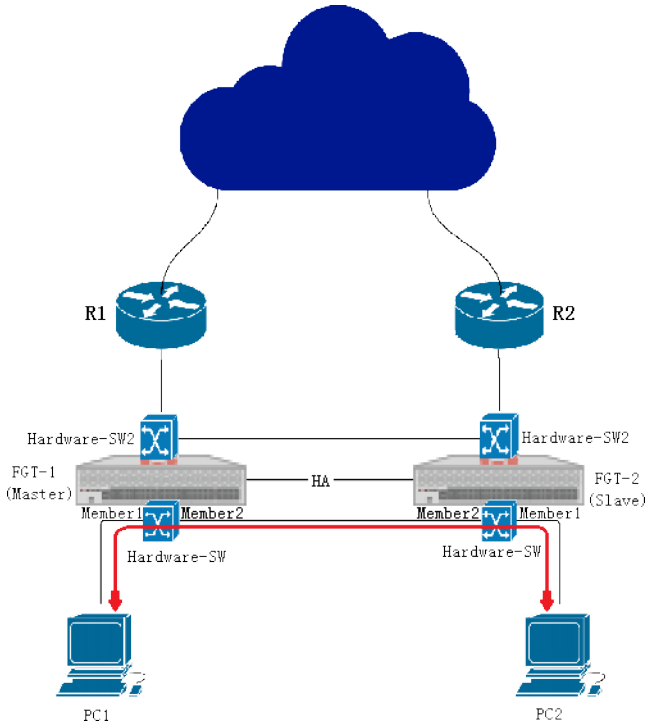

Traffic between hardware switches

When using Hardware switch in HA environment, a client device connected to the hardware switch on the primary FortiGate can communicate with client devices connected to the hardware switch on secondary FortiGates as long as there is a direct connection between the two switches.

No configuration is required after setting up the hardware switches. If a client connected to both of the hardware switches needs to reach destinations outside of the cluster, the firewall must be configured for it.

To configure the FortiGate devices:

1. Connect the devices as shown in the topology diagram.
2. On each FortiGate, configure HA:

```
config system ha
    set mode a-a
    set group-name Example_cluster
    set hbdev ha1 10 ha2 20
end
```

3. On the primary FortiGate, configure the hardware switch:

```
config system virtual-switch
    edit Hardware-SW
        set physical-switch sw0
        config port
            edit port3
            next
            edit port5
            next
        end
    next
end
```

4. On each FortiGate, configure the IP addresses on the hardware switches:

```
config system interface
    edit Hardware-SW
        set ip 6.6.6.1 255.255.255.0
        set allowaccess ping ssh http https
    next
end
```

After configuring the hardware switches, PC1 and PC2 can now communicate with each other.

Traffic passes through FortiGate

If client device needs to send traffic through the FortiGate, additional firewall configuration on the FortiGate is required.

All traffic from the hardware switches on either the primary or secondary FortiGate reaches the primary FortiGate first. The traffic is then directed according to the HA mode and firewall configuration.

To configure the FortiGate devices:

1. Connect the devices as shown in the topology diagram.
2. On each FortiGate, configure HA:

```
config system ha
    set mode a-a
    set group-name Example_cluster
    set hbdev ha1 10 ha2 20
end
```

3. On the primary FortiGate, configure the hardware switch:

```
config system virtual-switch
    edit Hardware-SW
```

```
        set physical-switch sw0
        config port
            edit port3
            next
            edit port5
            next
        end
    next
    edit Hardware-SW2
        set physical-switch sw0
        config port
            edit port1
            next
        end
    next
end
```

4. On each FortiGate, configure the IP addresses on the hardware switch:

```
config system interface
    edit Hardware-SW
        set ip 6.6.6.1 255.255.255.0
        set allowaccess ping ssh http https
    next
    edit Hardware-SW2
        set ip 172.16.200.1 255.255.255.0
        set allowaccess ping ssh http https
    next
end
```

5. On each FortiGate, configure a firewall policy:

```
config firewall policy
    edit 1
        set srcintf Hardware-SW
        set dstintf Hardware-SW2
        set srcaddr all
        set dstaddr all
        set service ALL
        set action accept
        set schedule always
        set nat enable
    next
end
```

6. On each FortiGate, configure a static route:

```
config router static
    edit 1
        set device Hardware-SW2
        set gateway 172.16.200.254
    next
end
```

Traffic from PC1 and PC2 can now reach destinations outside of the FortiGate cluster.

SNMP

SNMP enables you to monitor hardware on your network. You can configure the hardware, such as the FortiGate SNMP agent, to report system information and send traps (alarms or event messages) to SNMP managers. SNMP traps alert you to events that happen, such as when a log disk is full or a virus is detected.

The FortiGate SNMP implementation is read-only. SNMP v1/v2c, and v3 compliant SNMP managers have read-only access to FortiGate system information through queries, and can receive trap messages from the FortiGate unit.

- Interface access on page 692
- MIB files on page 692
- SNMP agent on page 693
- SNMP v1/v2c communities on page 694
- SNMP v3 users on page 695
- Important SNMP traps on page 696

Interface access

Before a remote SNMP manager can connect to the FortiGate SNMP agent, you must configure one or more FortiGate interfaces to accept SNMP connections.

To configure a FortiGate interface to accept SNMP connections in the GUI:

1. Go to *Network* > *Interfaces*.
2. Edit the interface.
3. In the *Administrative Access* options, enable *SNMP*.
4. Click *OK*.

To configure a FortiGate interface to accept SNMP connections in the CLI:

```
config system interface
    edit <interface>
        append allowaccess snmp
        set snmp-index <integer>
        config ipv6
            append ip6-allowaccess snmp
        end
    next
end
```

MIB files

The FortiGate SNMP agent supports Fortinet proprietary MIBs, as well as the parts of RFC 2665 and RFC 1213 that apply to FortiGate unit configuration.

Your SNMP manager may already include standard and private MIBs in a compiled database that is ready to use. You must add the Fortinet proprietary MIBs to this database to have access to Fortinet specific information.

MIB file or RFC	Description
FORTINET-CORE-MIB.mib	The Fortinet core MIB includes all system configuration and trap information that is common to all Fortinet products. Your SNMP manager requires this information to monitor Fortinet device settings and receive traps from the FortiGate SNMP agent.
FORTINET-FORTIGATE-MIB.mib	The FortiGate MIB includes all system configuration information and trap information that is specific to FortiGate units. Your SNMP manager requires this information to monitor FortiGate settings and receive traps from the FortiGate SNMP agent.
RFC-1213 (MIB II)	The FortiGate SNMP agent supports MIB II groups with the following exceptions: • No support for the EGP group from MIB II (RFC 1213, section 3.11 and 6.10). • Protocol statistics returned for MIB II groups (IP/ICMP/TCP/UDP/etc.) do not accurately capture all Fortinet traffic activity. More accurate information can be obtained from the information reported by the Fortinet MIB.
RFC-2665 (Ethernet-like MIB)	The FortiGate SNMP agent supports Ethernet-like MIB information. FortiGate SNMP does not support for the dot3Tests and dot3Errors groups.

To download the MIB files:

1. Go to *System* > *SNMP*.
2. Click *Download FortiGate MIB File* and save the file to the management computer.
3. Click *Download Fortinet Core MIB File* and save the file to the management computer.

SNMP agent

The SNMP agent sends SNMP traps originating on the FortiGate to an external monitoring SNMP manager defined in a SNMP community. The SNMP manager can monitor the FortiGate system to determine if it is operating properly, or if any critical events occurring.

The description, location, and contact information for this FortiGate system will be part of the information that the SNMP manager receives. This information is useful if the SNMP manager is monitoring many devices, and enables faster responses when the FortiGate system requires attention.

To configure the SNMP agent in the GUI:

1. Go to *System* > *SNMP*.
2. Enable *SNMP Agent*.
3. Enter a description of the agent.
4. Enter the location of the FortiGate unit.
5. Enter a contact or administrator for the SNMP Agent or FortiGate unit.
6. Click *Apply*.

To configure the SNMP agent in the CLI:

```
config system snmp sysinfo
    set status enable
```

```
    set description <string>
    set contact-info <string>
    set location <string>
end
```


SNMP v1/v2c communities

An SNMP community is a grouping of equipment for network administration purposes. A single device can belong to multiple communities.

You must add an SNMP community to the FortiGate so that the SNMP manager can receive traps and system information. Up to three communities can be added.

To create a n SNMP v1/v2c community in the GUI:

1. Go to *System* > *SNMP*.
2. In the *SNMP v1/v2c* table, click *Create New*.

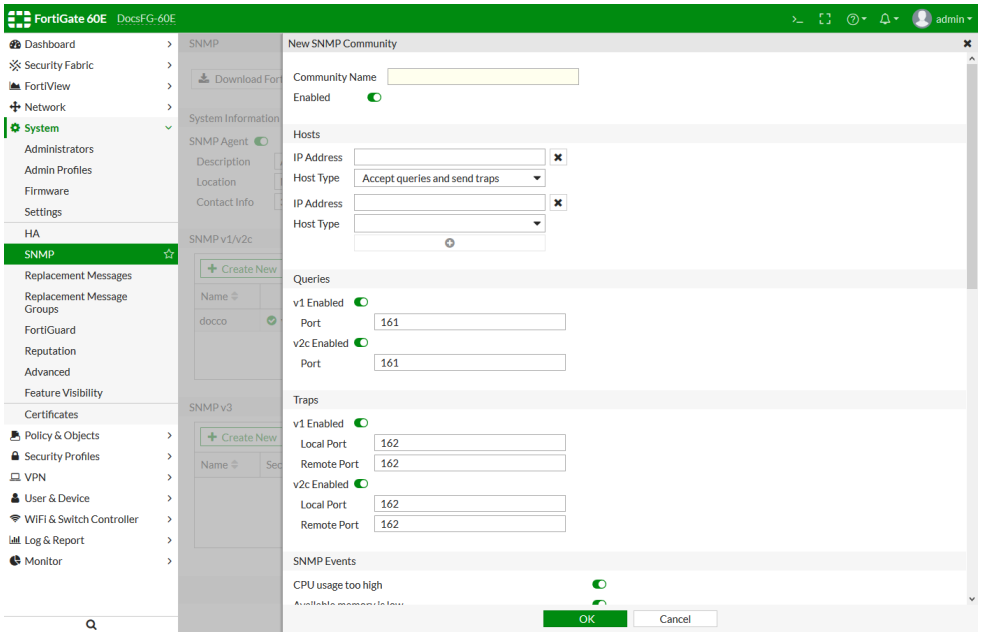

3. Enter a *Community Name* and enable the community.
4. In the *Hosts* section, enter the *IP Address* and select the *Host Type* for each SNMP manager.
5. In the *Queries* section, enable or disable v1 and v2c queries, then enter the port numbers that the SNMP managers in this community use for them.
6. In the *Traps* section, enable or disable v1 and v2c traps, then enter the local and remote port numbers that the SNMP managers in this community use for them.
7. In the *SNMP Events* section, enable or disable the events that activate traps in this community.
8. Click *OK*.

To create a n SNMP v1/v2c community in the CLI:

```
config system snmp community
    edit 2
        set name <string>
```


```
        set status {enable | disable}
        config hosts
            edit <host_id>
                set ip <ip/mask>
                set source-ip <class_ip>
                set ha-direct {enable | disable}
                set host-type {any | query | trap}
            next
        end
        set query-v1-port <port_number>
        set query-v1-status {enable | disable}
        set query-v2c-port <port_number>
        set query-v2c-status {enable | disable}
        set trap-v1-lport <port_number>
        set trap-v1-rport <port_number>
        set trap-v1-status {enable | disable}
        set trap-v2c-lport <port_number>
        set trap-v2c-rport <port_number>
        set trap-v2c-status {enable | disable}
        set events <events>
    next
end
```

SNMP v3 users

Authentication is used to ensure the identity of users. Privacy allows for encryption of SNMP v3 messages to ensure confidentiality of data. These protocols provide a higher level of security than is available in SNMP v1 and v2c, which use community strings for security. Both authentication and privacy are optional.

To create a n SNMP v3 user in the GUI:

1. Go to *System* > *SNMP*.
2. In the *SNMP v3* table, click *Create New*.

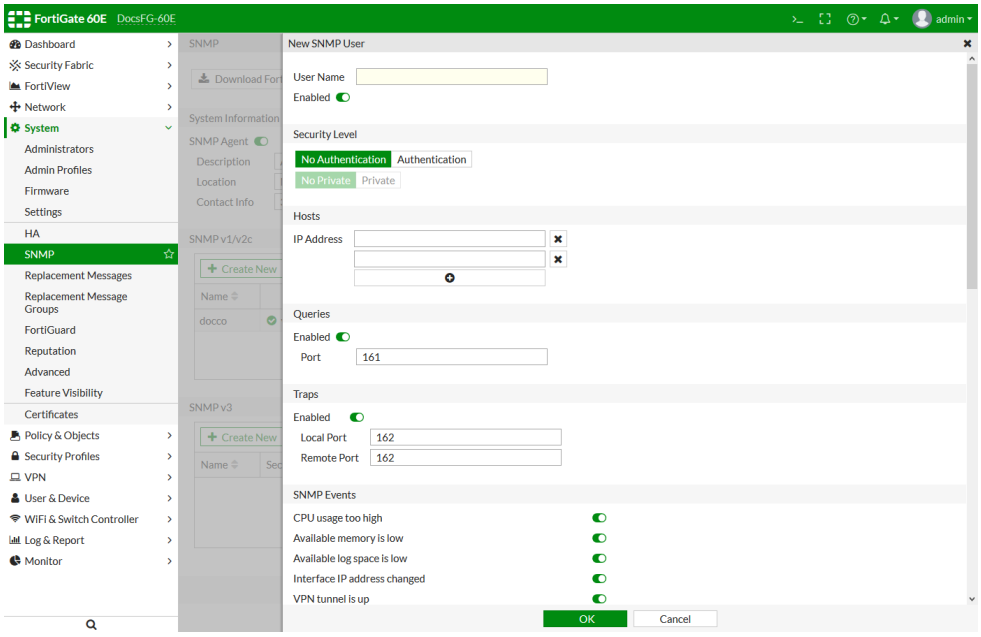

3. Enter a *Use Name* and enable the user.
4. In the *Security Level* section, configure the security level:
   - *No Authentication*: No authentication or encryption.
   - *Authentication*: Select the authentication algorithm and password.
   - *Authentication and Private*: Select both the authentication and encryption algorithms and password.
5. In the *Hosts* section, enter the *IP Address* for each SNMP manager.
6. In the *Queries* section, enable or disable queries, then enter the port number that the SNMP managers use for them.
7. In the *Traps* section, enable or disable traps, then enter the local and remote port numbers that the SNMP managers use for them.
8. In the *SNMP Events* section, enable or disable the events that activate traps.
9. Click *OK*.

To create an SNMP v3 user in the CLI:

```
config system snmp user
    edit <user>
        set status {enable | disable}
        set trap-status {enable | disable}
        set trap-lport <port_number>
        set trap-rport <port_number>
        set queries {enable | disable}
        set query-port <port_number>
        set notify-hosts <class_ip> ... <class_ip>
        set source-ip <class_ip>
        set ha-direct {enable | disable}
        set events <events>
        set security-level {no-auth-no-priv | auth-no-priv | auth-priv}
        set auth-proto {md5 | sha}
        set auth-pwd <password>
        set prive-proto {aes | des | aes256 | aes256cisco}
        set priv-pwd <password>
    next
end
```

Important SNMP traps

Link Down and Link Up traps

This trap is sent when a FortiGate port either goes down or is brought up.

For example, the following traps are generated when the state of port34 is set to down using `set status down`, and then brought up using `set status up`:

```
NET-SNMP version 5.7.3 2019-01-31 14:11:48 10.1.100.1(via UDP: [10.1.100.1]:162->
[10.1.100.11]:162) TRAP, SNMP v1, community REGR-SYS SNMPv2-MIB::snmpTraps Link Down Trap
(0) Uptime: 0:14:44.95 IF-MIB::ifIndex.42 = INTEGER: 42 IF-MIB::ifAdminStatus.42 = INTEGER:
down(2) IF-MIB::ifOperStatus.42 = INTEGER: down(2) FORTINET-CORE-MIB::fnSysSerial.0 =
STRING: FG140P3G15800330 SNMPv2-MIB::sysName.0 = STRING: FortiGate-140D-POE
```

```
2019-01-31 14:11:48 <UNKNOWN> [UDP: [10.1.100.1]:162->[10.1.100.11]:162]: DISMAN-EVENT-
MIB::sysUpTimeInstance = Timeticks: (88495) 0:14:44.95 SNMPv2-MIB::snmpTrapOID.0 = OID: IF-
```

```
MIB::linkDown IF-MIB::ifIndex.42 = INTEGER: 42 IF-MIB::ifAdminStatus.42 = INTEGER: down(2)
IF-MIB::ifOperStatus.42 = INTEGER: down(2) FORTINET-CORE-MIB::fnSysSerial.0 = STRING:
FG140P3G15800330 SNMPv2-MIB::sysName.0 = STRING: FortiGate-140D-POE 2019-01-31 14:12:01
10.1.100.1(via UDP: [10.1.100.1]:162->[10.1.100.11]:162) TRAP, SNMP v1, community REGR-SYS
SNMPv2-MIB::snmpTraps Link Up Trap (0) Uptime: 0:14:57.98 IF-MIB::ifIndex.42 = INTEGER: 42
IF-MIB::ifAdminStatus.42 = INTEGER: up(1) IF-MIB::ifOperStatus.42 = INTEGER: up(1) FORTINET-
CORE-MIB::fnSysSerial.0 = STRING: FG140P3G15800330 SNMPv2-MIB::sysName.0 = STRING:
FortiGate-140D-POE

2019-01-31 14:12:01 <UNKNOWN> [UDP: [10.1.100.1]:162->[10.1.100.11]:162]: DISMAN-EVENT-
MIB::sysUpTimeInstance = Timeticks: (89798) 0:14:57.98 SNMPv2-MIB::snmpTrapOID.0 = OID: IF-
MIB::linkUp IF-MIB::ifIndex.42 = INTEGER: 42 IF-MIB::ifAdminStatus.42 = INTEGER: up(1) IF-
MIB::ifOperStatus.42 = INTEGER: up(1) FORTINET-CORE-MIB::fnSysSerial.0 = STRING:
FG140P3G15800330 SNMPv2-MIB::sysName.0 = STRING: FortiGate-140D-POE
```

fgFmTrapIfChange trap

This trap is sent when any changes are detected on the interface. The change can be very simple, such as giving an IPV4 address.

For example, the user has given the IP address of 1.2.3.4/24 to port 1 and the EMS Manager has detected the following trap:

```
DISMAN-EXPRESSION-MIB::sysUpTimeInstance = Timeticks: (7975058) 22:09:10.58 SNMPv2-
MIB::snmpTrapOID.0 = OID: FORTINET-FORTIGATE-MIB::fgFmTrapIfChange FORTINET-CORE-
MIB::fnSysSerial.0 = STRING: FG140P3G15800330 IF-MIB::ifName.45 = STRING: port1 FORTINET-
FORTIGATE-MIB::fgManIfIp.0 = IpAddress: 1.2.3.4 FORTINET-FORTIGATE-MIB::fgManIfMask.0 =
IpAddress: 255.255.255.0 FORTINET-FORTIGATE-MIB::fgManIfIp6.0 = STRING: 0:0:0:0:0:0:0:0
```

entConfigChange trap

The change to the interface in the previous example has also triggered the *ConfChange Trap* which is sent along with the *fgFmTrapIfChange* trap:

```
2018-11-15 09:30:23 FGT_A [UDP: [172.16.200.1]:162->[172.16.200.55]:162]: DISMAN-EXPRESSION-
MIB::sysUpTimeInstance = Timeticks: (8035097) 22:19:10.97 SNMPv2-MIB::snmpTrapOID.0 = OID:
ENTITY-MIB::entConfigChange
```

fgTrapDeviceNew trap

This trap is triggered when a new device, like a FortiSwitch, is connected to the FortiGate.

For example, the following scenario has given the device a new trap for adding FortiAP on a PoE interface a FortiGate 140D-POE. The trap has important information about the device name, device MAC address, and when it was last seen.

```
2018-11-15 11:17:43 UDP/IPv6: [2000:172:16:200::1]:162 [UDP/IPv6: [2000:172:16:200::1]:162]:
DISMAN-EXPRESSION-MIB::sysUpTimeInstance = Timeticks: (520817) 1:26:48.17 SNMPv2-
MIB::snmpTrapOID.0 = OID: FORTINET-FORTIGATE-MIB::fgTrapDeviceNew FORTINET-CORE-
MIB::fnSysSerial.0 = STRING: FG140P3G15800330 SNMPv2-MIB::sysName.0 = STRING: FGT_A IF-
MIB::ifIndex.0 = INTEGER: 0 FORTINET-FORTIGATE-MIB::fgVdEntIndex.0 = INTEGER: 0 FORTINET-
FORTIGATE-MIB::fgDeviceCreated.0 = Gauge32: 5 FORTINET-FORTIGATE-MIB::fgDeviceLastSeen.0 =
Gauge32: 5 FORTINET-FORTIGATE-MIB::fgDeviceMacAddress.0 = STRING: 90:6c:ac:f9:97:a0

2018-11-15 11:17:43 FGT_A [UDP: [172.16.200.1]:162->[172.16.200.55]:162]: DISMAN-EXPRESSION-
MIB::sysUpTimeInstance = Timeticks: (520817) 1:26:48.17 SNMPv2-MIB::snmpTrapOID.0 = OID:
```

```
FORTINET-FORTIGATE-MIB::fgTrapDeviceNew FORTINET-CORE-MIB::fnSysSerial.0 = STRING:
FG140P3G15800330 SNMPv2-MIB::sysName.0 = STRING: FGT_A IF-MIB::ifIndex.0 = INTEGER: 0
FORTINET-FORTIGATE-MIB::fgVdEntIndex.0 = INTEGER: 0 FORTINET-FORTIGATE-
MIB::fgDeviceCreated.0 = Gauge32: 5 FORTINET-FORTIGATE-MIB::fgDeviceLastSeen.0 = Gauge32: 5
FORTINET-FORTIGATE-MIB::fgDeviceMacAddress.0 = STRING: 90:6c:ac:f9:97:a0
```

fgTrapAvOversize trap

The `fgTrapAvOversize` trap is generated when the antivirus scanner detects an oversized file:

```
019-01-31 13:22:04 10.1.100.1(via UDP: [10.1.100.1]:162->[10.1.100.11]:162) TRAP, SNMP v1,
community REGR-SYS FORTINET-FORTIGATE-MIB::fgt140P Enterprise Specific Trap (602) Uptime: 1
day, 3:41:10.31 FORTINET-CORE-MIB::fnSysSerial.0 = STRING: FG140P3G15800330 SNMPv2-
MIB::sysName.0 = STRING: FortiGate-140D-POE 2019-01-31 13:22:29 <UNKNOWN> [UDP:
[10.1.100.1]:162->[10.1.100.11]:162]: DISMAN-EVENT-MIB::sysUpTimeInstance = Timeticks:
(9967031) 1 day, 3:41:10.31 SNMPv2-MIB::snmpTrapOID.0 = OID: FORTINET-FORTIGATE-
MIB::fgTrapAvOversize FORTINET-CORE-MIB::fnSysSerial.0 = STRING: FG140P3G15800330 SNMPv2-
MIB::sysName.0 = STRING: FortiGate-140D-POE
```

Replacement messages

The replacement message list in *System > Replacement Messages* enables you to view and customize replacement messages. Highlight the replacement messages you want to edit and customize the message content to your requirements. Hit *Save* when done. If you do not see the message you want to edit, select the *Extended View* option in the upper right-hand corner of the screen.

If you make a mistake, select *Restore Default* to return to the original message and code base.

Replacement message images

You can add images to replacement messages on:

- Disclaimer pages
- Login pages
- Declined disclaimer pages
- Login failed pages
- Login challenge pages
- Keepalive pages




Supported image formats are GIF, JPEG, TIFF, and PNG. The maximum file size supported is 24KB.


Adding images to replacement messages

To add images to replacement messages in the GUI:

1. Go to *System* > *Replacement Messages*.
2. Click *Manage Images* at the top of the page.
3. Click *Create New*.
4. Enter a name for the image.
5. Click *Upload Image* and locate the file.

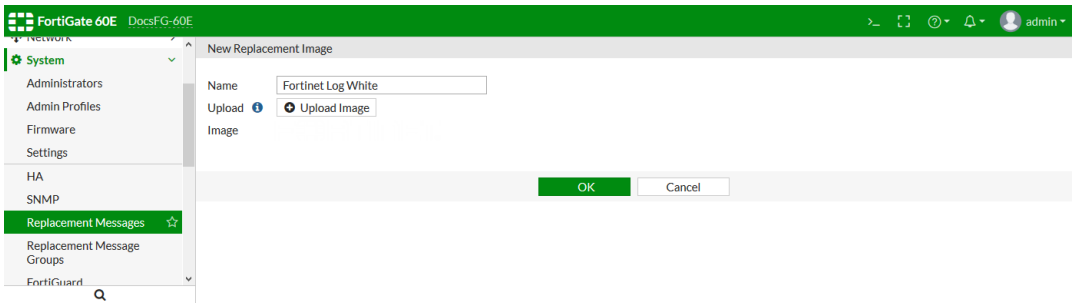

6. Click *OK*.

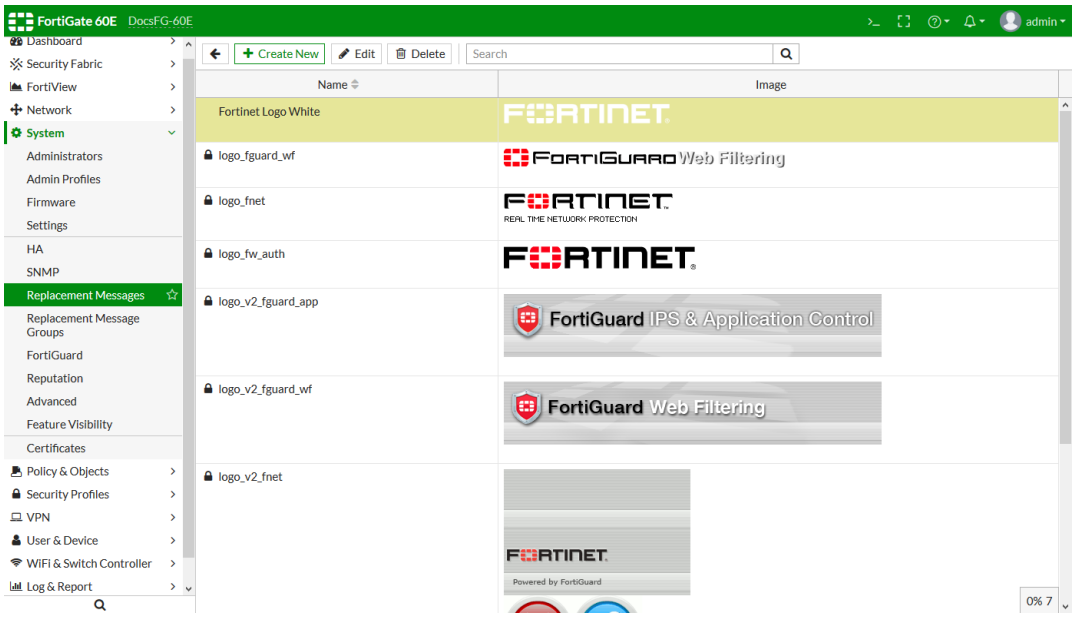

To add images to replacement messages in the CLI:


```
config system replacemsg-image
    edit <image_name>
        set image-type {gif | jpg | tiff | png}
        set image-base64 <string>
    next
end
```

Modifying replacement messages

Replacement messages can be modified to include an HTML message or content that suits your organization. A list of common replacement messages appear in the main window. Select *Extended View* to see the entire list and all categories for replacement messages.

To modify a replacement message in the GUI:

1. Go to *System* > *Replacement Messages*.
2. Select the replacement message you want to edit.
3. In the bottom pane of the GUI the message will be displayed on the left alongside the HTML code on the right. Edit the HTML code as needed.
   The message view changes in real-time as you edit the content.

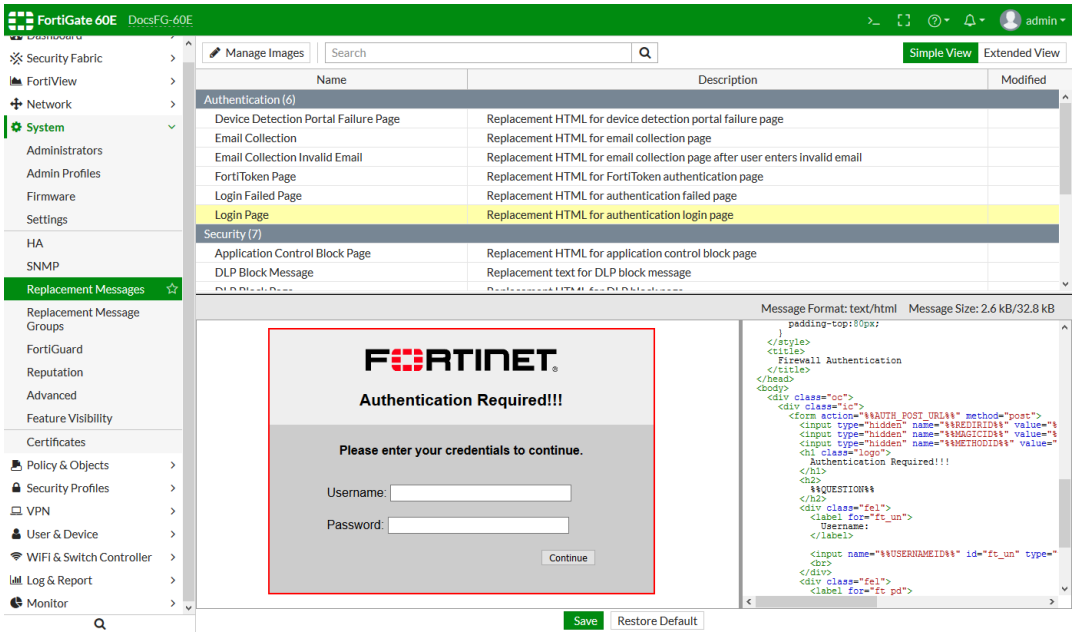

4. Click *Save*.

To modify a replacement message in the CLI:

```
config system replacemsg <message_category> <message_type>
    set buffer <string>
    set header {none | http | 8bit}
    set format {none | text | html}
end
```

For example, to modify the *Traffic Quota Limit Exceeded Page* message:

```
config system replacemsg traffic-quota "per-ip-shaper-block"
    set buffer "<html>
  <head>
    <title>
      Traffic Quota Control
    </title>
  </head>
  <body>
```

```
    <font size=2>
      <table width=\"100%\">
        <tr>
          <td bgcolor=#3300cc align=\"center\" colspan=2>
            <font color=#ffffff>
              <b>
                Traffic blocked because exceeded session quota
              </b>
            </font>
          </td>
        </tr>
      </table>
      <br>
      <br>
      Traffic blocked because it exceeded the per IP shaper session quota. Please contact
the system administrator.
      <br>
      %%QUOTA_INFO%%
      <br>
      <br>
      <hr>
    </font>
  </body>
</html>"
    set header http
    set format html
end
```

Replacement message groups

Replacement message groups allow you to customize replacement messages for individual policies and profiles.

There are two types of replacement message groups:

- `utm`: Used with UTM settings in firewall policies. Messages in the following categories can be customized: mail, http, webproxy, ftp, nntp, fortiguard-wf, spam, alertmail, admin, sslvpn, nac-quar, traffic-quota, utm, custom-message, and icap.
- `auth`: Used with authentication pages in firewall policies. Messages in the following categories can be customized: webproxy and auth.

The messages added to a group do not need to be customized. The body content, header type, and format of a message will use the default values if not customized.

To create or edit a replacement message group in the CLI:

```
config system replacemsg-group
    edit <group>
        set group-type {auth | utm}
        config <message_category>
            edit <message_type>
                set buffer <message>
                set header {none | http | 8bit}
                set format {none | text | html}
```


```
            next
        end
    next
end
```

To create a replacement message group in the GUI:

1. Make replacement message groups visible in the GUI with the following CLI command:

```
config system settings
    set gui-replacement-message-groups enable
end
```

2. Go to *System* > *Replacement Message Groups*.
3. Click *Create New*.
4. Enter a name for the new group.
5. Optionally, enter a comment describing the group.
6. Select the *Group Type*, either *Security* or *Authentication*.

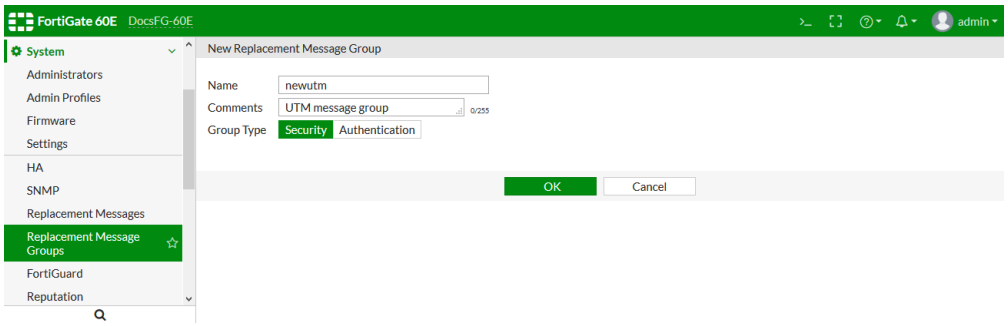

7. Click *OK*.

Example

In this example, two replacement message groups are created. The UTM type message group includes custom mail related messages, changes the formats of some spam related message, and is assigned to an email filter profile. The authentication type message group has a custom authentication success message that is applied to a proxy-based firewall policy that with the email filter profile assigned.

To create the replacement message groups and use them in a profile and a policy in the CLI:

1. Create the replacement message groups:

```
config system replacemsg-group
    edit "newutm"
        set group-type utm
        config mail
            edit "partial"
                set buffer "Fragmented emails are blocked, sorry."
            next
            edit "email-av-fail"
                set buffer "The email has been blocked for reasons."
            next
        end
```

```
        config spam
            edit "submit"
                set header http
                set format html
            next
            edit "reversedns"
                set header http
                set format html
            next
        end
    next
    edit "newauth"
        set group-type auth
        config auth
            edit "auth-success-msg"
                set buffer "Welcome to the firewall. Your authentication has been
accepted, please reconnect."
                set header none
                set format text
            next
        end
    next
end
```

2. Apply the message groups:


```
config emailfilter profile
    edit "newmsgs"
        set replacemsg-group "newutm"
    next
end

config firewall policy
    edit 1
        ...
        set replacemsg-override-group "newauth"
        set inspection-mode proxy
        set emailfilter-profile "newmsgs"
        ...
    next
end
```

To create the replacement message groups and use them in a profile and a policy in the GUI:


1. Create the *Security* replacement message groups:
   a. Go to *System* > *Replacement Message Groups*.
   b. Click *Create New*.
   c. Enter *newutm* in the *Name* field.
   d. Enter *UTM message group* in the *Comments* field.
   e. Select *Security* as the *Group Type*.
   f. Click *OK*.
2. Customize the replacement messages in the *newutm* group:
   a. Go to *System* > *Replacement Message Groups*.
   b. Edit the *newutm* group.

c. Locate the *AV Engine Load Error Email Block Message*, edit the message, then click *Save*.

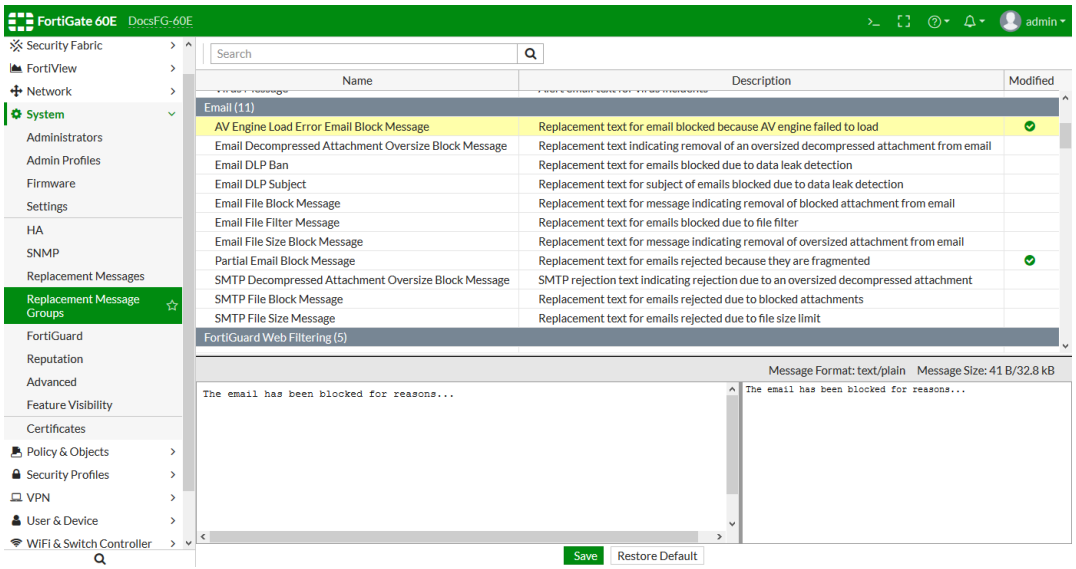

d. Locate the *Partial Email Block Message*, edit the message, then click *Save*.

3. Create the *Authentication* replacement message group:
   a. Go to *System Replacement Message Groups*.
   b. Click *Create New*.
   c. Enter *newauth* in the *Name* field.
   d. Enter *Authentication message group* in the *Comments* field.
   e. Select *Authentication* as the *Group Type*.

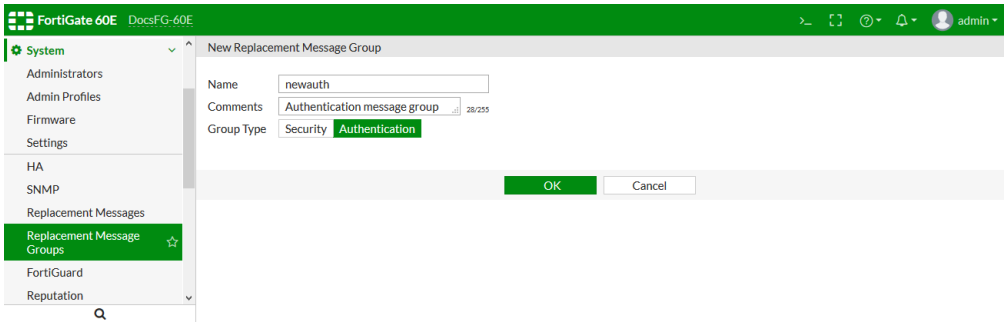

   f. Click *OK*.
4. Apply the *newutm* replacement message group to an email filter profile using the CLI.
5. Apply the *newauth* replacement message group and the email filter profile to a firewall policy using the CLI.

FortiGuard

FortiGuard services can be purchased and registered to your FortiGate unit. The FortiGate must be connected to the Internet in order to automatically connect to the FortiGuard Distribution Network (FDN) to validate the license and download FDN updates.

The FortiGuard subscription update services include:

- Antivirus (AV)
- Intrusion Protection Service (IPS)
- Application Control
- Antispam
- Web Filtering
- Web Application Firewall (WAF)

To view FDN support contract information, go to *System* > *FortiGuard*. The *License Information* table shows the status of your FortiGate's support contract.

- IPv6 FortiGuard connections on page 705
- Configuring antivirus and IPS options on page 706
- Manual updates on page 706
- Automatic updates on page 707
- Sending malware statistics to FortiGuard on page 709
- Update server location on page 709
- Filtering on page 710
- Override FortiGuard servers on page 711
- Online security tools on page 711
- FortiGuard third party SSL validation and anycast support on page 712

IPv6 FortiGuard connections

The Fortinet DNS can resolve FortiGuard related servers to both IPv4 and IPv6 addresses. FortiOS daemons (update, forticldd, url) connect using either IPv4 or IPv6 addresses. The first available connection will be used for updates or the rating service.

To configure an interface and route for IPv6:

```
config system interface
    edit "wan1"
        set vdom "root"
        config ipv6
            set ip6-address 2000:172:16:200::1/64
        end
    next
end
```

```
config router static6
    edit 1
        set gateway 2000:172:16:200::254
        set device "wan1"
    next
end
```

To configure push updates:

```
config system autoupdate push-update
    set status enable
    set override enable
```

```
    set address "2620:101:9005:3860::94"
end
```

Configuring antivirus and IPS options

To configure antivirus and IPS options:

1. Go to *System* > *FortiGuard*
2. Scroll down to the *AntiVirus & IPS Updates* section.
3. Configure the antivirus and IPS options for connecting and downloading definition files:

Accept push updates	Enable to allow updates to be sent automatically to your FortiGate. New definitions will be added as soon as they are released by FortiGuard. See Push updates on page 708.
Use override push	Only available if *Accept push updates* is enabled. See Override push on page 708.
Scheduled Updates	Enable to schedule updates to be sent to the FortiGate at the specified time. See Scheduled updates on page 707.
Improve IPS quality	Enable to send information to the FortiGuard servers when an attack occurs. This can help keep the FortiGuard database current as attacks evolve, and improve IPS signatures.
Use extended IPS signature package	Enable to use the extended IPS database, that includes protection from legacy attacks, along with the regular IPS database that protects against the latest common and in-the-wild attacks.
Update AV & IPS Definitions	Click to manually initiate an FDN update.


4. Click *Apply*.

Manual updates

When needed, FDN updates can be manually uploaded.

To manually update the signature definitions files:

1. Log in to the Fortinet Support website.
2. Go to *Download* > *FortiGuard Service Updates*.
3. Select your *OS Version* from the dropdown list.
4. Locate your device in the table, and download the signature definitions files.
5. On the FortiGate, go to *System FortiGuard*.
6. In the *License Information* table, locate the row of the definitions that you are updating, and click *Upgrade Database* in the rightmost column.
7. In the pane that opens, click *Upload*, locate the downloaded definitions file on your computer, then click *Open*. The download may take a few minutes to complete.

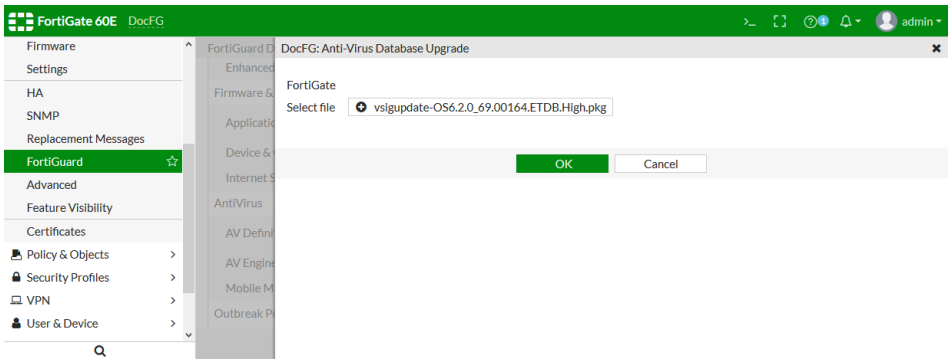

8. Click *OK*.

Automatic updates

The FortiGate can be configured to request updates from FDN on a schedule, or via push notification.

Scheduled updates

Scheduling updates ensures that the virus and IPS definitions are downloaded to your FortiGate on a regular basis.


Updating definitions can cause a brief disruption in traffic that is currently being scanned while the FortiGate unit applies the new signature database. Updates should be scheduled during off-peak hours when network usage is at a minimum to ensure that network activity will not be affected by downloading the definitions files.



A schedule of once a week means any urgent updates will not be pushed until the scheduled time. If an urgent update is required, click the *Update AV & IPS Definitions* button to manually update the definitions.

To configure scheduled updates in the GUI:

1. Go to *System* > *FortiGuard*
2. Scroll down to the *AntiVirus & IPS Updates* section.
3. Enable *Scheduled Updates*.
4. Configure the update schedule.

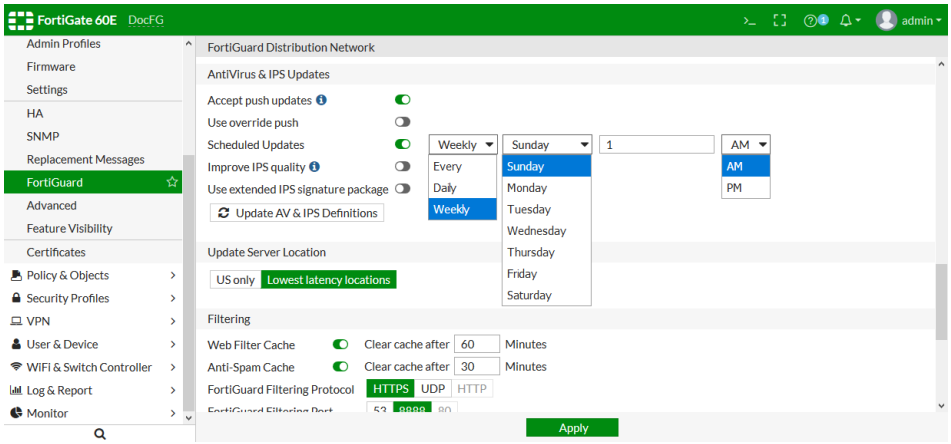

5. Click *Apply*.

To configure scheduled updates in the CLI:

```
config system autoupdate schedule
    set status enable
    set frequency {every | daily | weekly}
    set time <hh:mm>
    set day <day_of_week>
end
```

Push updates

Push updates enable you to get immediate updates when new viruses or intrusions are discovered and new signatures are created. This ensures that the latest signature are sent to the FortiGate as soon as possible.

When a push notification occurs, the FortiGuard server sends a notice to the FortiGate that a new signature definition file available. The FortiGate then initiates a download of the definition file. For maximum security, both scheduled and push updates should be enabled.

To enable push updates - GUI:

1. Go to *System* > *FortiGuard*
2. Scroll down to the *AntiVirus & IPS Updates* section.
3. Enable *Accept push updates*.
4. Click *Apply*.

To enable push updates in the CLI:

```
config system autoupdate push-update
    set status enable
    set override {enable | disable}
    set address <vip_address>
end
```

Override push

If the FortiGate is behind a NAT device (or another FortiGate), or if your organization provides updates using their own FortiGuard server, an override server must be used to ensure that the FortiGate receives push update notifications. The FDS will connect to the NAT device when attempting to reach the FortiGate, and the NAT device must be configured to forward FDS traffic to the FortiGate on UDP port 9443.

Push updates must be enabled to configure a push update override.

For example, if the NAT device is another FortiGate:

1. On the FortiGate NAT device, add a port forwarding virtual IP address in *Policy & Objects* > *Virtual IPs*. See for details.
2. On the FortiGate NAT device, add a security policy that connects to the internet and includes the port forwarding VIP.
3. On the internal FortiGate device, configure *Push update override*.

To configure push update override in the GUI:

1. Go to *System* > *FortiGuard*
2. Scroll down to the *AntiVirus & IPS Updates* section.
3. Enable *Accept push updates*.
4. Enable *Use override push*.
5. Enter the IP address and port number configured on the NAT device.
6. Click *Apply*.

To configure push update override in the CLI:

```
config system autoupdate push-update
    set status enable
    set override {enable | disable}
    set address <vip_address>
end
```

Sending malware statistics to FortiGuard

FortiGate devices periodically send encrypted antivirus, IPS, botnet IP list, and application control statistics to FortiGuard. Included with these data is the IP address and serial number of the FortiGate, and the country that it is in. This information is never shared with external parties, Fortinet Privacy Policy.

The malware statistics are used to improve various aspects of FortiGate malware protection. For example, antivirus data allow FortiGuard to determine what viruses are currently active. Signatures for those viruses are kept in the Active AV Signature Database that is used by multiple Fortinet products.Inactive virus signatures are moved to the Extended AV Signature Database (see Configuring antivirus and IPS options on page 706). When events for inactive viruses start appearing in the malware data, the signatures are moved back into the AV Signature Database.

The FortiGate and FortiGuard servers go through a 2-way SSL/TLS 1.2 authentication before any data is transmitted. The certificates used in this process must be trusted by each other and signed by the Fortinet CA server.

The FortiGate only accepts data from authorized FortiGuard severs. Fortinet products use DNS to find FortiGuard servers and periodically update their FortiGate server list. All other servers are provided by a list that is updated through the encrypted channel.

Malware statistics are accumulated and sent every 60 minutes by default.

To configure sharing this information, use the following CLI command:

```
config system global
    set fds-statistics {enable | disable}
    set fds-statistics-period <minutes>
end
```

Update server location

The location of the FortiGuard update server that the FortiGate connects to can be set to either only servers in the USA only, or to the servers with the lowest latency.

On hardware FortiGate devices, the default is *Lowest latency locations*. On VM devices, the default is *US only*.

To configure the update server location in the GUI:

1. Go to *System* > *FortiGuard*
2. Scroll down to the *Update Server Location* section.
3. Select *US only* or *Lowest latency locations*.
4. Click *Apply*.

To configure the update server location in the CLI:

```
config system fortiguard
    set update-server-location {usa | any}
end
```

Filtering

Web filtering is used to block access to harmful, inappropriate, and dangerous web sites (see FortiGuard filter on page 914).

Email filtering is used to detect and block spam messages (see FortiGuard-based filters on page 996).

To configure filtering in the GUI:

1. Go to *System* > *FortiGuard*
2. Scroll down to the *Filtering* section.
3. Configure the settings as needed:

Web Filter Cache	Enable/disable web filter cache, and set the amount of time that the FortiGate will store a blocked IP address or URL locally. After the time expires, the FortiGate contacts the FDN to verify the address.
Anti-Spam Cache	Enable/disable email filter cache, and set the amount of time that the FortiGate will store an email address locally.
FortiGuard Filtering Protocol	Select the protocol for contacting the FortiGuard servers.
FortiGuard Filtering Port	Select the port assignments for contacting the FortiGuard servers.
Filtering Service Availability	The status of the filtering service. Click *Check Again* if the filtering service is not available.
Request re-evaluation of a URL's category	Click to re-evaluate a URL category rating on the FortiGuard web filter service.

4. Click *Apply*.

To configure filtering in the CLI:

```
config system fortiguard
    set protocol {https | udp | http}
    set port {443 | 53 | 8888 |80}
    set antispam-force-off {enable | disable}
    set antispam-cache {enable | disable}
    set antispam-cache-ttl <integer>
```

```
    set antispam-cache-mpercent <percent>
    set antispam-timeout <integer>
    set webfilter-force-off {enable | disable}
    set webfilter-cache {enable | disable}
    set webfilter-cache-ttl <integer>
    set webfilter-timeout <integer>
end
```



FortiGuard server support for HTTPS on port 443 is supported as of FortiOS 6.2.2.

Override FortiGuard servers

By default, FortiOS will update signature packages and query rating servers using public FortiGuard servers. This list can be overridden by adding servers to the override server list. Communication with public FortiGuard servers can also be disabled.

To add an override FortiGuard server in the GUI:

1. Go to *System* > *FortiGuard*
2. Scroll down to the *Override FortiGuard Servers* section.
3. In the table, click *Create New*. The *Create New Override FortiGuard Server* pane opens.
4. Select the server address type: *IPv4*, *IPv6*, or *FQDN*.
5. Enter the server address of the selected type in the *Address* field.
6. Select the type of server: *AntiVirus & IPS Updates*, *Filtering*, or *Both*.
7. Click *Apply*.

To add an override FortiGuard server in the CLI:

```
config system central-management
    set type fortiguard
    config server-list
        edit <integer>
            set server-type {update rating}
            set server-address <ip_address>
        next
    end
end
```

Online security tools

FortiGuard Labs provides a number of online security tools, including but not limited to:

- **URL lookup**
  Enter a website address to see if it has been rated and what category and classification it is filed as. If you find a site that has been wrongly categorized, use this page to request that the site be re-evaluated:
  https://www.fortiguard.com/webfilter

- **Threat Encyclopedia**
  Browse FortiGuard Labs extensive encyclopedia of threats. Search for viruses, botnet C&C, IPS, endpoint vulnerabilities, and mobile malware: https://www.fortiguard.com/encyclopedia
- **Application Control**
  Browse FortiGuard Labs extensive encyclopedia of applications: https://www.fortiguard.com/appcontrol

FortiGuard third party SSL validation and anycast support

You can enable anycast to optimize the routing performance to FortiGuard servers. Relying on Fortinet DNS servers, the FortiGate will get a single IP address for the domain name of each FortiGuard service. BGP routing optimization is transparent to the FortiGate. The domain name of each FortiGuard service is the common name in that service's certificate. The certificate is signed by a third party intermediate CA. The FortiGuard server uses the Online Certificate Status Protocol (OCSP) stapling technique, so that the FortiGate can always validate the FortiGuard server certificate efficiently.

To enable anycast in the FortiGuard settings:

```
config system fortiguard
    set protocol https
    set port 443
    set fortiguard-anycast enable
    set fortiguard-anycast-source fortinet
end
```

After anycast is enabled, the FortiGuard settings will enforce a connection using HTTPS and port 443.



HTTPS/443 is only supported on anycast servers. When `fortiguard-anycast` is disabled, use HTTPS/8888 or HTTPS/53.

Connecting to the FortiGuard

The FortiGate will only complete the TLS handshake with a FortiGuard that provides a *good* OCSP status for its certificate. Any other status will result in a failed SSL connection. OCSP stapling is reflected on the signature interval (currently, 24 hours) so that *good* means that the certificate is not revoked at that timestamp. The FortiGuard servers query the CA's OCSP responder every four hours and update its OCSP status. If the FortiGuard is unable to reach the OCSP responder, it will keep the last known OCSP status for seven days. This cached OCSP status will be sent out immediately when a client connection request is made, thus optimizing the response time.

The following steps are taken to connect to FortiGuard:

1. The FortiGate embeds the CA_bundle certificate, which includes the root CA with CRL list and third party intermediate CA, in the root CA level.
2. The FortiGate finds the FortiGuard IP address from its domain name from DNS:

   ```
   fds=qaupdate.fortinet.net-192.168.100.242
   ```

3. The FortiGate starts a TLS handshake with the FortiGuard IP address. The client hello includes an extension of the *status request*.
4. The FortiGuard servers provide a certificate with its OCSP status: *good*, *revoked*, or *unknown*.

5. The FortiGate verifies the CA chain against the root CA in the CA_bundle.
6. The FortiGate verifies the intermediate CA's revoke status against the root CA's CRL.
7. The FortiGate verifies the FortiGuard certificate's OCSP status:

```
OCSP Response Data:
    OCSP Response Status: successful (0x0)
    Response Type: Basic OCSP Response
    Version: 1 (0x0)
    Responder Id: 3DD350A5D6A0ADEEF34A600A65D321D4F8F8D60F
    Produced At: Aug 20 07:50:58 2019 GMT
    Responses:
    Certificate ID:
      Hash Algorithm: sha1
      Issuer Name Hash: 49F4BD8A18BF760698C5DE402D683B716AE4E686
      Issuer Key Hash: 3DD350A5D6A0ADEEF34A600A65D321D4F8F8D60F
      Serial Number: 02555C9F3901B799DF1873402FA9392D
    Cert Status: good
    This Update: Aug 20 07:50:58 2019 GMT
    Next Update: Aug 27 07:05:58 2019 GMT
```

Using FortiManager as local FortiGuard server

FortiManager can provide a local FortiGuard server with port 443 access.

Anycast FortiGuard settings force the rating process to use port 443, even with an override server. Using a unique address in the same subnet as the FortiManager access IP address, the FortiManager can provide local FortiGuard updates and rating access with a dedicated IP address and port 443.

To use a FortiManager as a local FortiGuard server:

```
config system central-management
    set type fortimanager
    set fmg "172.18.37.148"
    config server-list
        edit 1
            set server-type update
            set server-address 172.18.37.150
        next
        edit 2
            set server-type rating
            set server-address 172.18.37.149
        next
    end
    set fmg-update-port 443
    set include-default-servers enable
end
```

When `fmg-update-port` is set to `443`, the update process will use port 443 to connect to the override update server, which is the local FortiGuard server in the FortiManager. If this is not set, the update process will use port 8890, and the server address setting has to be the FortiManager access IP address. Override FortiGuard services come from the server list that is the local FortiGuard server in the FortiManager, and use the traditional, non-OCSP TLS handshake. If override servers in the FortiManager are not available, the default FortiGuard servers are connected, and the anycast OCSP TLS handshake is used.

Configuration scripts

Configuration scripts are text files that contain CLI command sequences. They can be created using a text editor or copied from a CLI console, either manually or using the *Record CLI Script* function.


Scripts can be used to run the same task on multiple devices. For example, if your devices use the same security policies, you can enter or record the commands to create those policies in a script, and then run the script on each device. You could also create the policies in the GUI, and then copy and paste the CLI commands from the *CLI Console* using the *show* command.

If the FortiGate is managed by FortiManager, scripts can be uploaded to FortiManager and then run on any other FortiGates that are managed by that FortiManager. See Scripts in the FortiManager Administration Guide.

A comment line in a script starts with the number sign (#). Comments are not executed.

To run a script using the GUI:

1. Click on your username and select *Configuration* > *Scripts*.
2. Click *Run Script*.
3. Select the text file containing the script on your management computer, then click *OK*.
   The script runs immediately, and the *Script Execution History* table is updated, showing if the script ran successfully.

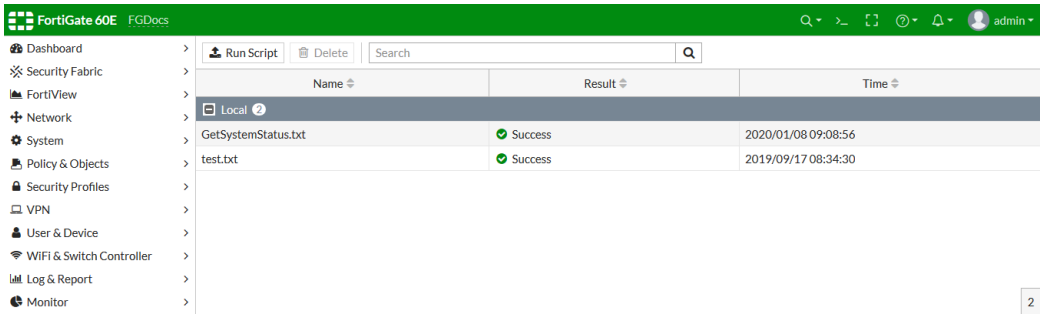

Workspace mode

Workspace mode allows administrators to make a batch of changes that are not implemented until the transaction is committed. Prior to committing, the changes can be reverted or edited as needed without impacting current operations.

When an object is edited in workspace mode it is locked, preventing other administrators from editing that object. A warning message will be shown to let the administrator know that the object is currently being configured in another transaction.

All administrators can use workspace mode; their permissions in workspace mode are the same as defined in their account profile.

A workspace mode transaction times out after five minutes if there is no activity. When a transaction times out, all changes are discarded. A warning message will be shown to let the administrator know that a timeout is imminent, or has already happened:

```
config transaction id=1 will expire in 30 seconds
config transaction id=1 will expire in 20 seconds
config transaction id=1 will expire in 10 seconds
config transaction id=1 has expired
```

The following commands are not changeable in a workspace transaction:

```
config system console
config system resource-limits
config system elbc
config system global
   set split-port
   set vdom-admin
   set management-vdom
   set wireless-mode
   set internal-switch-mode
end
config system settings
   set opmode
end
config system npu
config system np6
config system wireless
   set mode
end
config system vdom-property
config system storage
```

The `execute batch` command cannot be used in or to start workspace mode.

To use workspace mode:

1. Start workspace mode:
   ```
   execute config-transaction
   ```
   Once in workspace mode, the administrator can make configuration changes, all of which are made in a local CLI process that is not viewable by other processes.
2. Commit configuration changes:
   ```
   execute config-transaction commit
   ```
   After performing the commit, the changes are available for all other processes, and are also made in the kernel.
3. Abort configuration changes:
   ```
   execute config-transaction abort
   ```
   If changes are aborted, no changes are made to the current configuration or the kernel.

Diagnose commands

```
diagnose sys config-transaction show txn-meta
```

Show config transaction meta information. For example:

```
# diagnose sys config-transaction show txn-meta
txn_next_id=8, txn_nr=2
```

```
diagnose sys config-transaction show txn-info
```

Show config transaction information. For example:

```
# diagnose sys config-transaction show txn-info
current_jiffies=680372

txn_id=6, expire_jiffies=706104, clicmd_fpath='/dev/cmdb/txn/6_EiLl9G.conf'
txn_id=7, expire_jiffies=707427, clicmd_fpath='/dev/cmdb/txn/7_UXK6wY.conf'
```

```
diagnose sys config-transaction show txn-entity
```

Show config transaction entity. For example:

```
# diagnose sys config-transaction show txn-entity
vd='global', cli-node-oid=37(system.vdom), txn_id=7. location: fileid=0, storeid=0,
     pgnr=0, pgidx=0
vd='global', cli-node-oid=46(system.interface), txn_id=7. location: fileid=3,
     storeid=0, pgnr=0, pgidx=0
```

```
diagnose sys config-transaction show txn-lock
```

Show transaction lock status. For example:

```
# diagnose sys config-transaction show txn-lock
type=-1, refcnt=0, value=256, pid=128
```

```
diagnose sys config-transaction status
```

Show the transaction status in the current CLI.

Feature visibility

Feature visibility is used to control which features are visible in the GUI. This allows features that are not in use to be hidden. Some features are also invisible by default and must be made visible before they can be configure in the GUI.

The visibility of a feature does not affect its functionality or configuration. Invisible features can still be configured using the CLI.

To change the visibility of features:

1. Go to *System* > *Feature Visibility*.
2. Change the visibility of the features as required. To simplify setting security features, a feature set can be selected from the dropdown list.
   For information about what settings each options affects, click on the + icon to the right of the feature name.
   Changes are listed on the right of the screen.
3. Click *Apply*.

Security feature presets

Six system presets are available:

- *NGFW*: for networks that require application control and protection from external attacks.
- *ATP*: for networks that require protection from viruses and other external threats.
- *WF*: for networks that require web filtering.

- *NGFW + ATP*: for networks that require protection from external threats and attacks.
- *UTM*: for networks that require protection from external threats and wish to use security features that control network usage. This is the default setting.
- *Full UTM*: for networks that require the normal UTM features, as well as antivirus, application control, endpoint control, and web filtering.
- *Custom* should be chosen for networks that require customization of available features (including the ability to select all features).

Certificates

The following recipes provide instructions about certificates:

- Microsoft CA deep packet inspection on page 717
- Purchase and import a signed SSL certificate on page 722

Microsoft CA deep packet inspection

In most production environments, you want to use a certificate issued be your own PKI for deep packet inspection (DPI).

An existing Microsoft root CA can be used to issue a subordinate CA (sub CA) certificate that is installed as a DPI certificate on the FortiGate.

Complete the following steps to create your own sub CA certificate and use it for DPI:

1. Create a Microsoft sub CA certificate
2. Export the certificate and private key
3. Import the certificate and private key into the FortiGate
4. Configure a firewall policy for DPI
5. Verify that the sub CA certificate is being used for DPI

The FortiGate firewall uses information in the original web server certificate, then issues a new certificate signed by the Microsoft DPI certificate. The FortiGate then sends this certificate with the issuing DPI certificate to the client's web browser when the SSL session is being established.

The browser verifies that the certificate was issued by a valid CA, then looks for the issuing CA of the Microsoft DPI certificate in its loca trusted root CA store to complete the path to trusted root CA.

The Microsoft CA root certificate is normally deployed to all client PCs in the Windows domain, so the client can complete the certificate path up to a trusted root CA. The FortiGate now controlsand can inspect the two HTTPS sessions: one with the external web server, and one with the client PC.


Create a Microsoft sub CA certificate

A Microsoft sub CA certificate can be created on a Microsoft CA server, or remotely using a web browser.


Creating a certificate remotely requires that the web enrollment option is configured on the Microsoft CA server. Remote certificate requests require HTTPS; requests are not allowed with HTTP.

To create a Microsoft sub CA certificate remotely:


1. Open a web browser and go to one of the following URLs:
   - *https://<FQDN-CA-server>/CertSrv*
   - *https://<IP-CA-server>/CertSrv*.
2. Log in to a domain administrator account that has web enrollment rights.

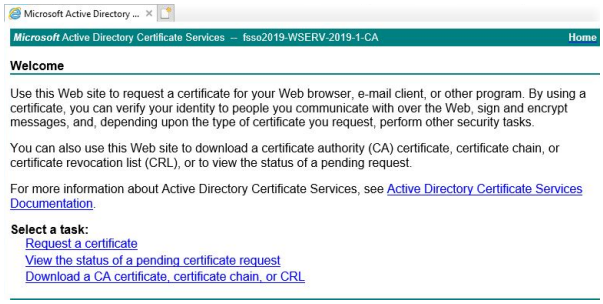

3. Click *Request a certificate*.
4. Click *advanced certificate request*.

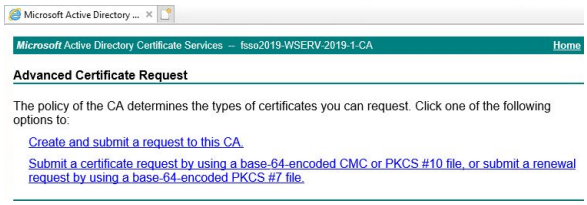

5. Click *Create and submit a request to this CA*, then click *Yes* in the *Web Access Confirmation* warning.
6. For the *Certificate Template*, select *Subordinate Certification Authority*.
7. Enable *Mark keys as exportable*.
8. Fill out the remaining information according to your security policy.

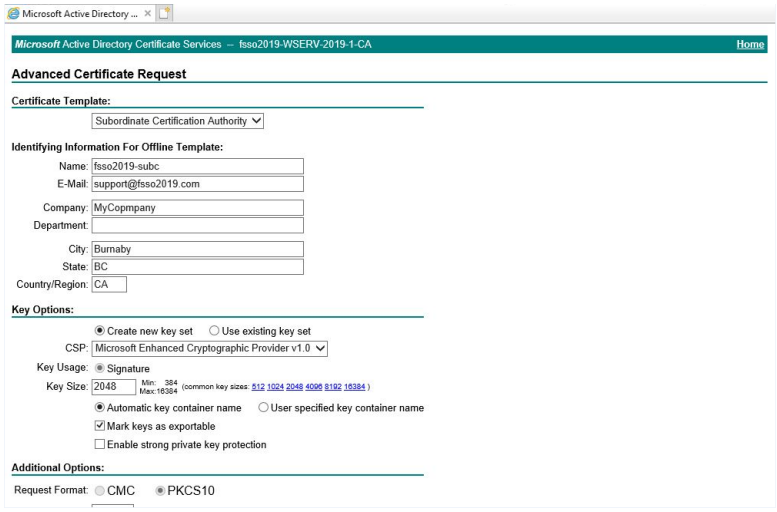


9. Submit the request.
10. Click *Yes* in the *Web Access Confirmation* warning.
11. Click *Install this certificate*.
    The certificate and private key are located in the current user's certificate store.


Export the certificate and private key

To export the certificate and private key:

1. Open the Microsoft Management Console (MMC) and add the *Certificate Snap-in*.
2. Go to the user's certificate store to locate the sub CA certificate that you just installed.

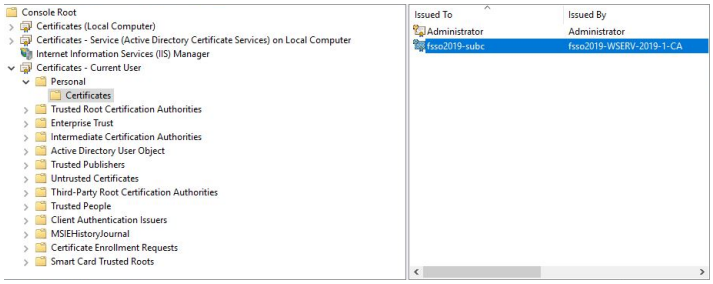

3. Right-click on the certificate and select *All Tasks* > *Export*.
4. Click *Next* to start the *Microsoft Certificate Export Wizard*.
5. Follow the steps in the wizard:
   - When asked, select *Yes, export the private key*.
   - Only the PKCS #12 (.PFX) format is available, and it requires a password.
   - When selecting the encryption type, select *TripleDES-SHA1* if you are using an older version of FortiOS (5.6.9 and earlier). Otherwise, select *AES256-SHA256*.

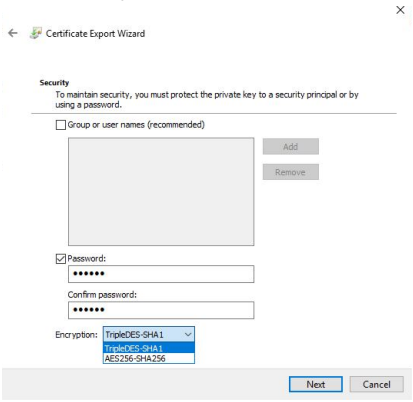

6. Complete the wizard, and save the DPI certificate to a local folder.

Import the certificate and private key into the FortiGate


The certificate can be imported from the local computer using the GUI, or from a TFTP server using the CLI.

After importing the certificate, you can view it in the GUI to verify that it was successfully imported.

To import the certificate and private key into the FortiGate in the GUI:

1. Go to *System* > *Certificates*.
2. Select *Import* > *Local Certificate*.
3. Set *Type* to *PKCS #12 Certificate*.
4. Click *Upload* and locate the certificate file.
5. Enter the *Password*.

6. Optionally, modify the *Certificate Name*.

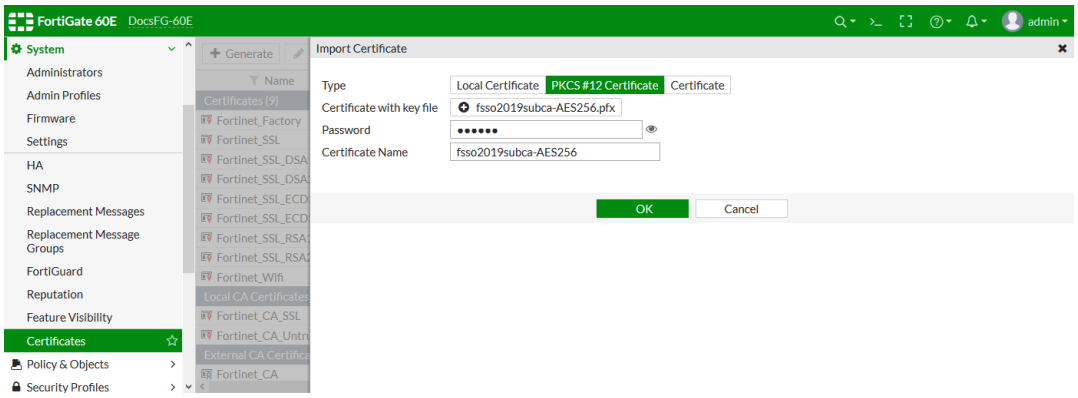


7. Click *OK*.

To import the certificate and private key into the FortiGate in the CLI:

```
execute vpn certificate local import <certificate file name> <tftp ip address> <password>
```

To verify that the certificate was imported:

1. Go to *System* > *Certificates*.
2. Locate the newly imported certificate in the table.
3. Select the certificate and click *View Details* to view the certificate details.

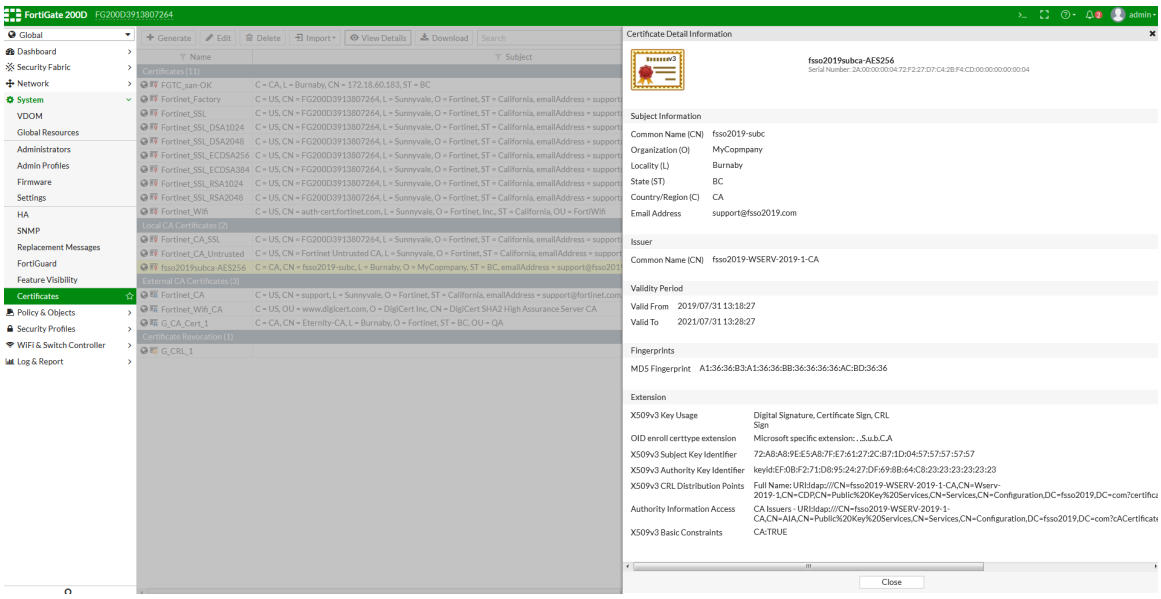


Configure a firewall policy for DPI


The certificate is used in an SSL/SSH inspection profile that is then used in a firewall policy.

To configure a firewall policy for DPI:

1. Go to *Security Profiles* > *SSL/SSH Inspection*.
2. Click *Create New*.
3. Configure the inspection profile, selecting the new certificate

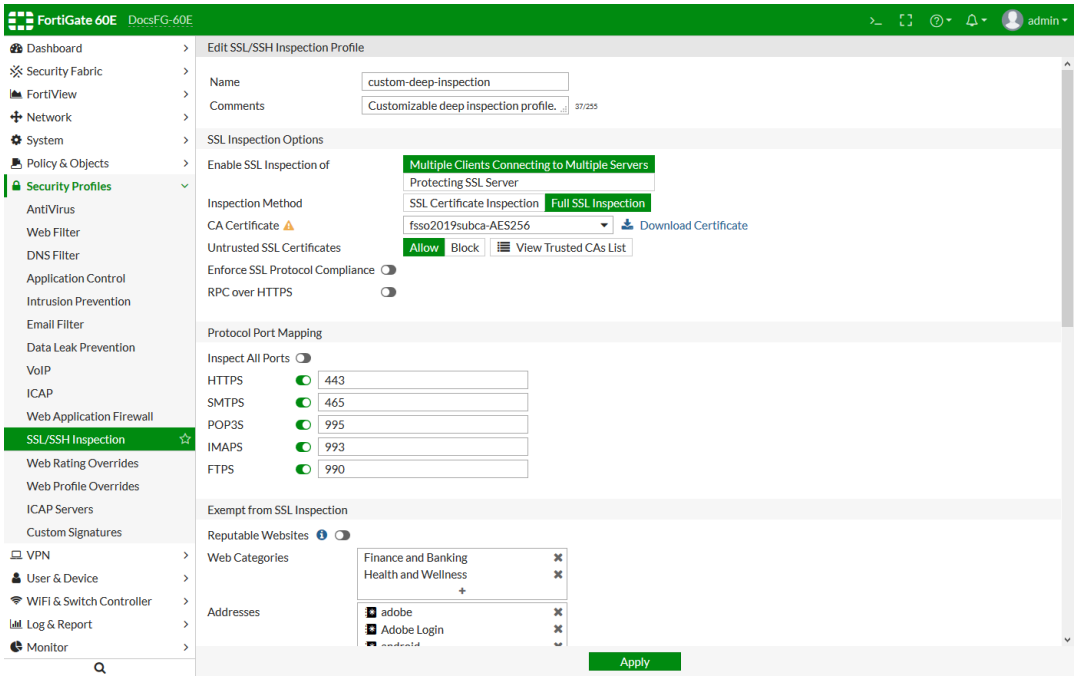

4. Click *Apply*.
5. Go to *Policy & Objects* > *IPv4 Policy*.
6. Create a new policy, or edit an existing policy.
7. In the *SSL Inspection* field, select the new SSL inspection profile.

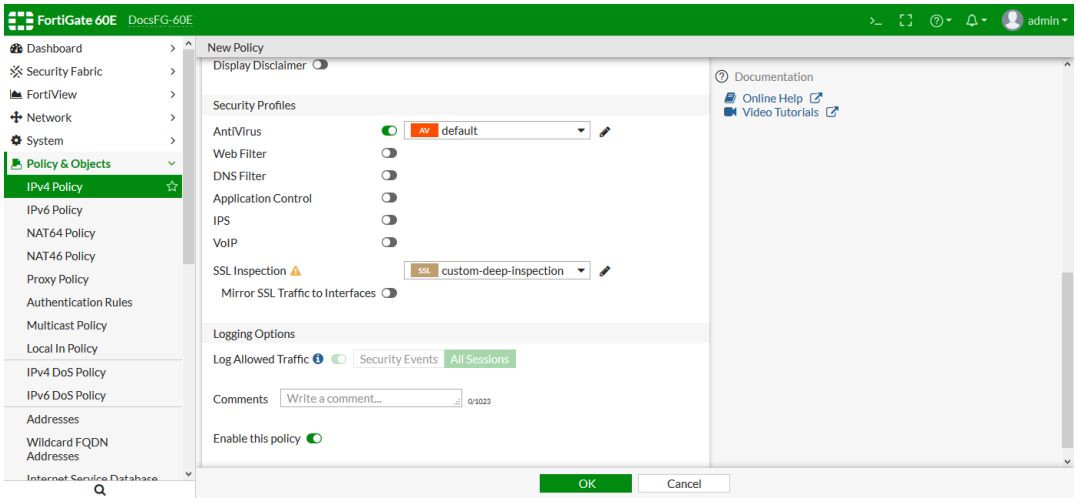

8. Configure the remaining settings as needed.
9. Click *OK*.

Verify that the sub CA certificate is being used for DPI

You can verify that the certificate is being used for resigning web server certificates when a user connects to an external HTTPS website.

To verify that the certificate is being used:

1. On a client PC that is behind the FortiGate, go to an external HTTPS website.
   When connecting to the website, no certificate warning should be shown.
2. In your web browser, view the certificate and certificate path.
   The methods for doing this vary depending on the browser. See your browsers documentation for information.

Purchase and import a signed SSL certificate

A signed SSL certificate can be used when configuring SSL VPN, for administrator GUI access, and for other functions that require a certificate.



Before creating a certificate, you must have a registered domain.

Follow these instructions to purchase, import, and use a signed SSL certificate:

- Purchase, setup, and download an SSL certificate package from a certificate authority
- Generate a CSR
- Import the signed certificate into your FortiGate
- Configure your FortiGate device to use the signed certificate

Purchase, setup, and download an SSL certificate package from a certificate authority

SSL certificate packages can be purchased from any Certificate Authority (CA), such as DigiCert, GoDaddy, or GlobalSign.



A third party CA might not sign a certificate with an intranet name or IP address. For details, see Can I request a certificate for an intranet name or IP address?

The process for purchasing, setting up, and downloading a certificate will vary depending on the CA that is used, and if a CSR must be generated on the FortiGate.

To purchase a certificate package:

1. Create an account with your chosen vendor, or use the account that you used to purchase your domain.
2. Locate the SSL Certificates page.
3. Purchase a basic SSL certificate for domain validation only. If required, a more secure SSL certificate can be purchased.


4. If required, load the CSR, either by uploaded the text file or copying and pasting the contents into the requisite text box. See Generate a CSR on page 723 for information on generating the CSR on the FortiGate.
5. If required, set the server type to *Other*.
6. Verify the certificate per the requirements of the CA.
7. Download the signed certificate to your computer.
8. Import the signed certificate into your FortiGate; see Import the signed certificate into your FortiGate on page 724.

Generate a CSR

Some CAs can auto-generate the CSR during the signing process, or provide tools for creating CSRs. If necessary, a CSR can be created in your FortiGate device's GUI.

To generate a CSR on your FortiGate:

1. Go to *System* > *Certificates*. By default, the *Certificate* option is not visible, see Feature visibility on page 716 for information.
2. Click *Generate*. The *Generate Certificate Signing Request* page opens.

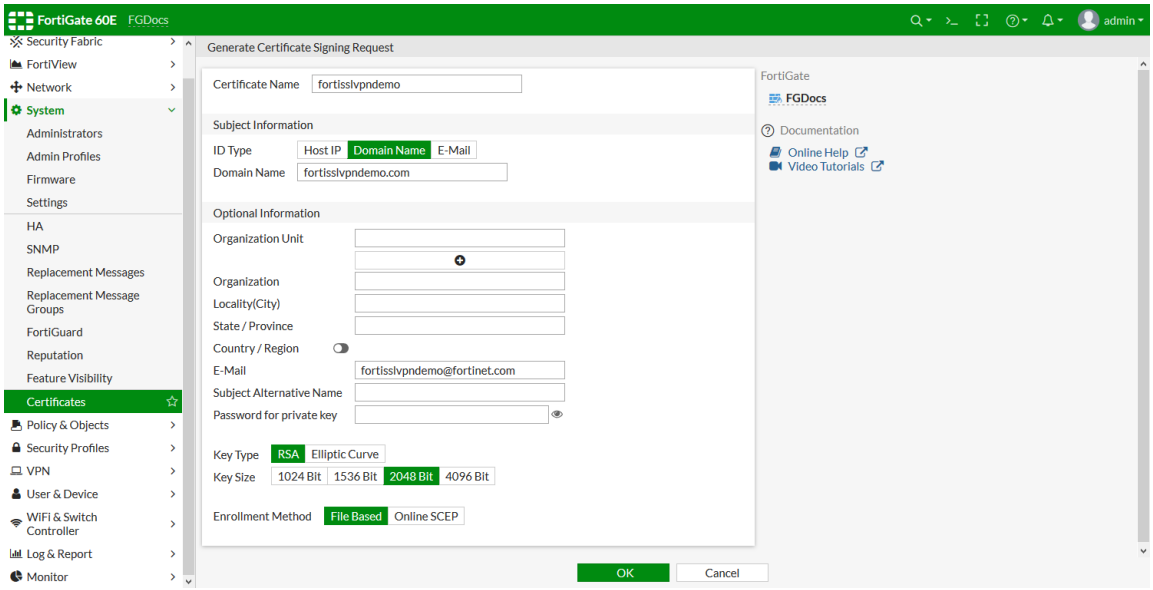

3. Configure the CSR request:
   - Ensure that the certificate has a unique name.
   - Set the *ID Type* to *Domain Name* and enter a *Domain Name*.
   - An email address is required.
   - Ensure that the *Key Size* is set to *2048 Bit*.
   - Set the *Enrollment Method* to *File Based*.
4. Click *OK*.
   The CSR will be added to the certificate list with a status of *PENDING*.
5. In the certificate list, select the new CSR then click *Download* to save the CSR to your computer.
   The CSR file can be opened in any text editor, and will resemble the following:


```
-----BEGIN CERTIFICATE REQUEST-----
MIICuTCCAaECAQAwSzEcMBoGA1UEAxMTZm9ydGlzc2x2cG5kZW1vLmNvbTErMCkG
CSqGSIb3DQEJARYcZm9ydGlzc2x2cG5kZW1vQGZvcnRpbmV0LmNvbTCCASIwDQYJ
```

```
KoZIhvcNAQEBBQADggEPADCCAQoCggEBAMtnpNoR20NH2+UEX/NsyCmZhQqc4af3
Be1u9iOoNbo9Fk42gw47r71moAN+1jTL/Tcp3hRhXtpgoI7Zh3vjZnBbD2wwU8Ow
U7d1h5MULyMehR9r4T6OAJl4KbKPt5u90r5SpIb6mM1OIKvzMncuRS66rW1St0KP
mp/f6QjpjMrthnyJkCejgyTA1YwWNuT9BcO6PTkxBqVMLaRP6TUH6He9uhOx1Cj/
5tzvSdAozZIr2moMieQy0lNd6oQcgpdzaB9QN41+cZOlUXRCMPoH7E4KUe3/Gnis
+NMdQ8rIBijvWCXrKj20wb6sUEjAGJkcXlqVHWYCKWXl6Owejmc4ipkCAwEAAaAp
MCcGCSqGSIb3DQEJDjEaMBgwCQYDVR0TBAIwADALBgNVHQ8EBAMCBaAwDQYJKoZI
hvcNAQELBQADggEBAJKhtz2BPIKeHH9HcJKnfBKL+a6vu1l+1sW+YqnyD+3oR9ec
0eCmLnPxyyxsVel/tRsUg4DTfmooLNDhOjgfMsWxAGUQgrDH2k87cw6kiDAPCqv1
b+hFPNKZQSd09+HXAvOpXrMlrw5YdSaoRnau6Q02yUIYennKTIzFIscgh1mk4FSe
mb12DhPF+QydDCGDgtqnQbfxlDC0WmDcmxwa/0ZktoQhhhEbYgJ2O7l4TMqOxs/q
AZgwJlSNGBALLA2AxkIRUMKUteDdXz0QE8xNrvZpLTbWCNIpYJdRRqSd5C1w2VF4
CFgugTjFaJ13kYmBimeMRQsFtjLV5AxN+bUUsnQ=
-----END CERTIFICATE REQUEST-----
```

Import the signed certificate into your FortiGate

To import the signed certificate into your FortiGate:

1. Unzip the file downloaded from the CA.
   There should be two CRT files: a CA certificate with *bundle* in the file name, and a local certificate.
2. Log in to your FortiGate unit and go to *System* > *Certificates*.
3. Click *Import* > *Local Certificate*.

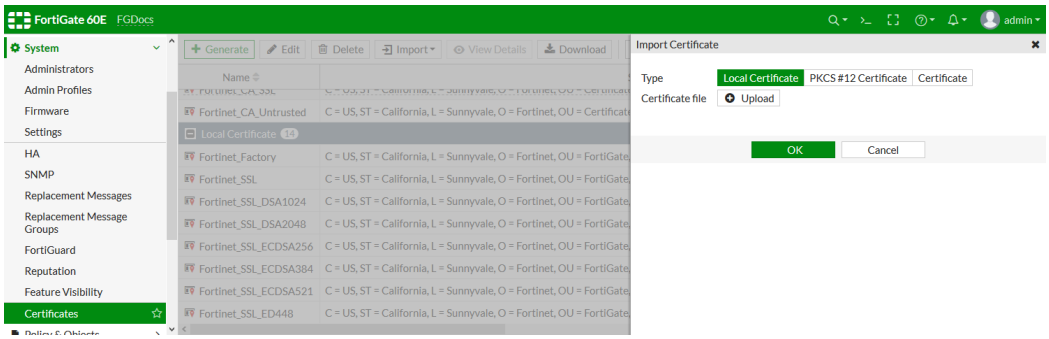

4. Upload the local certificate file, then click *OK*.
5. The status of the certificate will change from *PENDING* to *OK*.
6. Click *Import* > *CA Certificate*.
7. Set the *Type* to *File*, upload the CA certificate file, then click *OK*.
   The CA certificate will be listed in the *CA Certificates* section of the certificates list.

Configure your FortiGate device to use the signed certificate

After the signed certificates have been imported, you can use it when configuring SSL VPN, for administrator GUI access, and for other functions that require a certificate.

To configure your FortiGate to use the signed certificate for SSL VPN:

1. Go to *VPN* > *SSL-VPN Settings*.
2. Set *Server Certificate* to the new certificate.

3. Configure other settings as needed.
4. Click *Apply*.

For more information on configuring SSL VPN, see SSL VPN on page 1308 and the Setup SSL VPN video in the Fortinet Video Library.

To configure using the certificate for administrator GUI access in the CLI:

```
config system global
    set admin-server-cert fortisslvpndemo
end
```

To change the certificate that is used for administrator GUI access in the GUI:

1. Go to *System* > *Settings*.
2. In the *Administration Settings* section, change *HTTPS server certificate* as needed.
3. Click *Apply*. You will be logged out of FortiOS.

Policy and Objects

Policies

The firewall policy is the axis around which most features of the FortiGate revolve. Many firewall settings end up relating to or being associated with the firewall policies and the traffic they govern. Any traffic going through a FortiGate has to be associated with a policy. These policies are essentially discrete compartmentalized sets of instructions that control the traffic flow going through the firewall. These instructions control where the traffic goes, how it is processed, if it is processed, and whether or not it is allowed to pass through the FortiGate.

When the firewall receives a connection packet, it analyzes the source address, destination address, and service (by port number). It also registers the incoming interface, the outgoing interface it needs to use, and the time of day. Using this information, the FortiGate firewall attempts to locate a security policy that matches the packet. If a policy matches the parameters, then the FortiGate takes the required action for that policy. If it is *Accept*, the traffic is allowed to proceed to the next step. If the action is *Deny* or a match cannot be found, the traffic is not allowed to proceed.

The two basic actions at the initial connection are either *Accept* or *Deny*:

- If the action is *Accept*, the policy permits communication sessions. There may be other packet processing instructions, such as requiring authentication to use the policy or restrictions on the source and destination of the traffic.
- If the action is *Deny*, the policy blocks communication sessions, and you can optionally log the denied traffic. If no security policy matches the traffic, the packets are dropped. A *Deny* security policy is needed when it is required to log the denied traffic, also called *violation traffic*.

One other action can be associated with the policy:

- *IPsec*—this is an *Accept* action that is specifically for IPsec VPNs.

The following topics provide instructions on configuring policies:

- Firewall policy parameters on page 727
- Profile-based NGFW vs policy-based NGFW on page 727
- NGFW policy mode application default service on page 732
- Policy views and policy lookup on page 734
- Policy with source NAT on page 735
- Policy with destination NAT on page 745
- Policy with Internet Service on page 758
- NAT64 policy and DNS64 (DNS proxy) on page 773
- NAT46 policy on page 777
- Local-in policies on page 780
- DoS protection on page 781
- IPv4/IPv6 access control lists on page 789
- Mirroring SSL traffic in policies on page 790
- Inspection mode per policy on page 790
- Combined IPv4 and IPv6 policy on page 793
- FortiGuard DNS filter for IPv6 policies on page 794
- OSPFv3 neighbor authentication on page 796

- Firewall anti-replay option per policy on page 798
- Enabling advanced policy options in the GUI on page 798
- Recognize anycast addresses in geo-IP blocking on page 799
- Authentication policy extensions on page 800
- NTLM extensions on page 801
- HTTP to HTTPS redirect for load balancing on page 804
- GTPv2 in policies on page 806
- Use active directory objects directly in policies on page 807
- FortiGate Cloud / FDN communication through an explicit proxy on page 811

Firewall policy parameters

For traffic to flow through the FortiGate firewall, there must be a policy that matches its parameters:

- Incoming interface(s)
- Outgoing interface(s)
- Source address(es)
- User(s) identity
- Destination address(es)
- Internet service(s)
- Schedule
- Service

Without all six (possibly eight) of these things matching, the traffic is declined.

Traffic flow initiated from each direction requires a policy, that is, if sessions can be initiated from both directions, each direction requires a policy.

Just because packets can go from point A to point B on port X does not mean that the traffic can flow from point B to point A on port X. A policy must be configured for each direction.

When designing a policy, there is often reference to the traffic flow, but most communication is two-way so trying to determine the direction of the flow might be confusing. If traffic is HTTP web traffic, the user sends a request to the website, but most of the traffic flow will be coming from the website to the user or in both directions? For the purposes of determining the direction for a policy, the important factor is the direction of the initiating communication. The user is sending a request to the website, so this is the initial communication; the website is responding so the traffic is from the user's network to the Internet.



FortiOS does not perform a reverse-path check on reply traffic that matches an allowed session based on the IP tuple. The request traffic can be sent on one interface and the reply traffic could return on another interface.

Profile-based NGFW vs policy-based NGFW

Profile-based next-generation firewall (NGFW) mode is the traditional mode where you create a profile (antivirus, web filter, and so on) and then apply the profile to a policy.

In policy-based NGFW mode, you allow applications and URL categories to be used directly in security policies, without requiring web filter or application control profiles.

In policy-based mode:

- Central NAT is always enabled. If no Central SNAT policy exists, you must create one. See Central SNAT on page 742 for more information.
- Pre-match rules are defined separately from security policies, and define broader rules, such as SSL inspection and user authentication.

If your FortiGate operates in NAT mode, rather than enabling source NAT in individual NGFW policies, go to *Policy & Objects* > *Central SNAT* and add source NAT policies that apply to all matching traffic. In many cases, you may only need one SNAT policy for each interface pair.

The NGFW mode is set per VDOM, and it is only available when the VDOM inspection mode is flow-based. You can operate your entire FortiGate or individual VDOMs in NGFW policy mode.



Switching from profile-based to policy-based mode converts your policies to policy-based. To avoid issues, you could create a new VDOM for the policy-based mode. We recommend backing up your configuration before switching modes. See Configuration backups on page 61 for information.

Enabling policy-based NGFW mode

To enable policy-based NGFW mode without VDOMs in the GUI:

1. Go to *System* > *Settings*.
2. In *NGFW Mode*, select *Policy-based*.
3. Click *Apply*.

To enable policy-based NGFW mode with VDOMs in the GUI:

1. Go to *System* > *VDOM* .
2. Double-click a VDOM to edit the settings.
3. In *NGFW Mode*, select *Policy-based*.
4. Click *OK*.

To enable policy-based NGFW mode without VDOMs in the CLI:

```
config system settings
    set ngfw-mode policy-based
end
```

To enable policy-based NGFW mode with VDOMs in the CLI:


```
config vdom
    edit <vdom>
        config system settings
            set ngfw-mode policy-based
        end
    next
end
```

Security and SSL Inspection & Authentication policies

Security policies work with SSL Inspection & Authentication policies to inspect traffic. To allow traffic from a specific user or user group, both Security and SSL Inspection & Authentication policies must be configured. A default SSL Inspection & Authentication policy with the certificate-inspection SSL Inspection profile is preconfigured. Traffic will match the SSL Inspection & Authentication policy first. If the traffic is allowed, packets are sent to the IPS engine for application, URL category, user, and user group match, and then, if enabled, UTM inspection (antivirus, IPS, DLP, and email filter) is performed.


SSL Inspection & Authentication policies are used to pre-match traffic before sending the packets to the IPS engine:

- There are no schedule or action options; traffic matching the policy is always redirected to the IPS engine.
- SSL inspection, formerly configured in the VDOM settings, is configured in an SSL Inspection & Authentication policy.
- Users and user groups that require authentication must be configured in an SSL Inspection & Authentication policy.

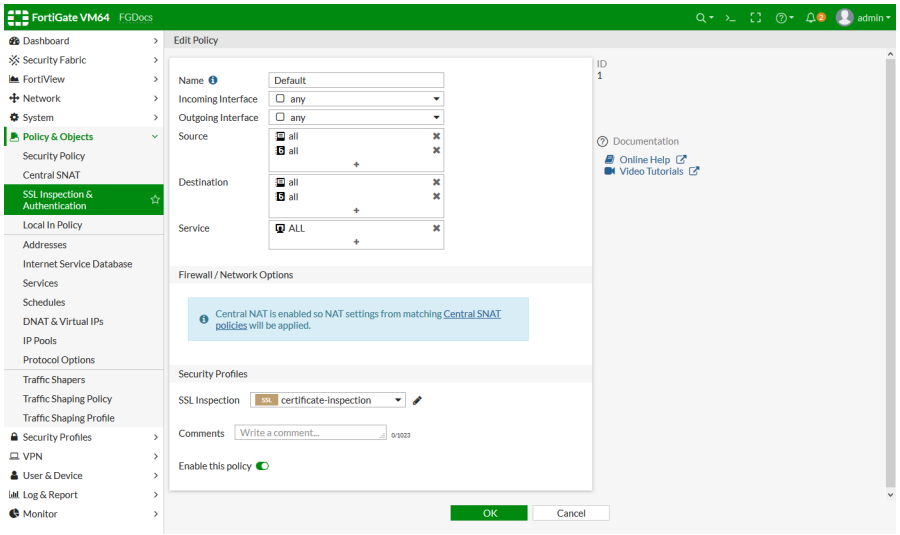

Security policies work with SSL Inspection & Authentication policies to inspect traffic:

- Applications and URL categories can be configured directly in the policy.
- Users and user groups that require authentication must also be configured in a security policy.
- The available actions are *Accept* or *Deny*.
- The *Service* option can be used to enforce the standard port for the selected applications. See NGFW policy mode application default service on page 732 for details.
- UTM inspection is configured in a security policy.

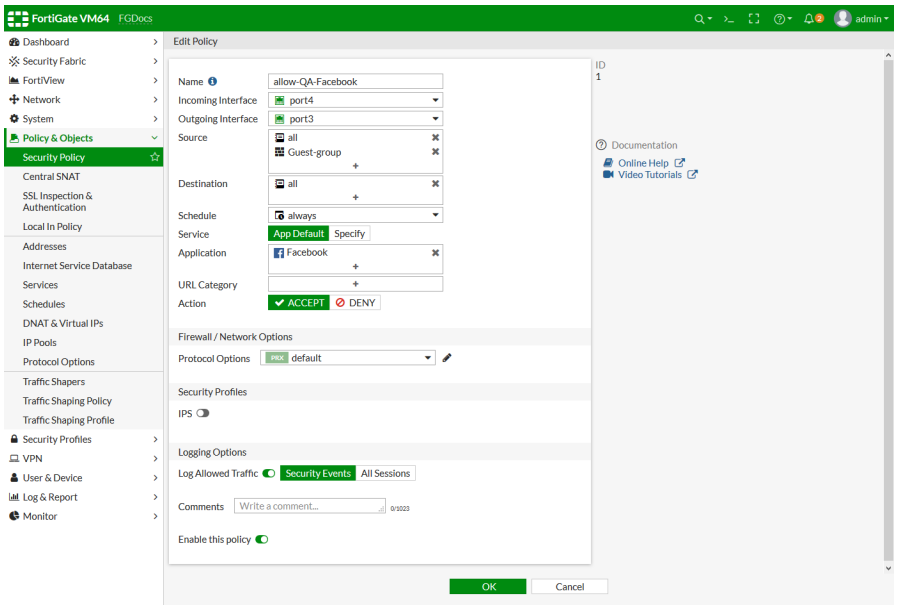

To configure policies for Facebook and Gmail access in the CLI:

1. Configure an SSL Inspection & Authentication policy:

```
config firewall consolidated policy
    edit 1
        set name "Policy-1
        set srcintf "port18"
        set dstintf "port17"
        set srcaddr4 "all"
        set dstaddr4 "all"
        set service "ALL"
        set ssl-ssh-profile "new-deep-inspection"
        set groups "Dev" "HR" "QA" "SYS"
    next
end
```

2. Configure security policies:

```
config firewall security-policy
    edit 2
        set name "allow-QA-Facebook"
        set srcintf "port18"
        set dstintf "port17"
        set srcaddr4 "all"
        set dstaddr4 "all"
        set action accept
        set schedule "always"
        set application 15832
        set groups "Dev" "QA"
    next
    edit 4
        set name "allow-QA-Email"
        set srcintf "port18"
        set dstintf "port17"
        set srcaddr4 "all"
```

```
            set dstaddr4 "all"
            set action accept
            set schedule "always"
            set url-category 23
            set groups "QA"
        next
    end
```

Logs

In the application control and web filter logs, `securityid` maps to the security policy ID.

Application control log:

```
date=2019-06-17 time=16:35:47 logid="1059028704" type="utm" subtype="app-ctrl"
eventtype="signature" level="information" vd="vd1" eventtime=1560814547702405829 tz="-0700"
appid=15832 user="Jack" group="QA" srcip=10.1.100.102 dstip=157.240.3.29 srcport=56572
dstport=443 srcintf="port18" srcintfrole="undefined" dstintf="port17"
dstintfrole="undefined" proto=6 service="P2P" direction="incoming" policyid=1
sessionid=42445 appcat="Social.Media" app="Facebook" action="pass" hostname="external-sea1-
1.xx.fbcdn.net" incidentserialno=1419629662 url="/" securityid=2 msg="Social.Media:
Facebook," apprisk="medium" scertcname="*.facebook.com" scertissuer="DigiCert SHA2 High
Assurance Server CA"
```

Web filter log:

```
date=2019-06-17 time=16:42:41 logid="0317013312" type="utm" subtype="webfilter"
eventtype="ftgd_allow" level="notice" vd="vd1" eventtime=1560814961418114836 tz="-0700"
policyid=4 sessionid=43201 user="Jack" group="QA" srcip=10.1.100.102 srcport=56668
srcintf="port18" srcintfrole="undefined" dstip=172.217.3.165 dstport=443 dstintf="port17"
dstintfrole="undefined" proto=6 service="HTTPS" hostname="mail.google.com"
action="passthrough" reqtype="direct" url="/" sentbyte=709 rcvdbyte=0 direction="outgoing"
msg="URL belongs to an allowed category in policy" method="domain" cat=23 catdesc="Web-based
Email" securityid=4
```

Traffic logs:

```
date=2019-06-17 time=16:35:53 logid="0000000013" type="traffic" subtype="forward"
level="notice" vd="vd1" eventtime=1560814553778525154 tz="-0700" srcip=10.1.100.102
srcport=56572 srcintf="port18" srcintfrole="undefined" dstip=157.240.3.29 dstport=443
dstintf="port17" dstintfrole="undefined" poluuid="b740d418-8ed3-51e9-5a7b-114e99ab6370"
sessionid=42445 proto=6 action="server-rst" user="Jack" group="QA" policyid=1
policytype="consolidated" centralnatid=1 service="HTTPS" dstcountry="United States"
srccountry="Reserved" trandisp="snat" transip=172.16.200.2 transport=56572 duration=6
sentbyte=276 rcvdbyte=745 sentpkt=5 rcvdpkt=11 appid=15832 app="Facebook"
appcat="Social.Media" apprisk="medium" utmaction="allow" countapp=1 utmref=65531-294

2: date=2019-06-17 time=16:47:45 logid="0000000013" type="traffic" subtype="forward"
level="notice" vd="vd1" eventtime=1560815265058557636 tz="-0700" srcip=10.1.100.102
srcport=56668 srcintf="port18" srcintfrole="undefined" dstip=172.217.3.165 dstport=443
dstintf="port17" dstintfrole="undefined" poluuid="b740d418-8ed3-51e9-5a7b-114e99ab6370"
sessionid=43201 proto=6 action="timeout" user="Jack" group="QA" policyid=1
policytype="consolidated" centralnatid=1 service="HTTPS" dstcountry="United States"
srccountry="Reserved" trandisp="snat" transip=172.16.200.2 transport=56668 duration=303
sentbyte=406 rcvdbyte=384 sentpkt=4 rcvdpkt=4 appcat="unscanned" utmaction="allow"
countweb=1 utmref=65531-3486
```

Other NGFW policy-based mode options

You can combine *Application Control* and *Web Filter* in the same NGFW mode policy. If the policy accepts applications or URL categories, you can also apply *AntiVirus*, *DNS Filter*, *IPS* profiles, and logging options.

NGFW policy mode application default service

In NGFW policy-based mode, the application default service enforces applications running only on their default service port. The applications specified in the policy are monitored, and if traffic is detected from a nonstandard port, it is blocked, and a log entry is recorded with a *port-violation* event type.

If you are not using the default ports, and need to pick specific services, select *Specify* to select the required services.


Example

In this example, the standard port is enforced for HTTPS traffic using the HTTP.Audio application.

First, an SSL Inspection & Authentication policy is created do to traffic pre-match, and then a security policy is created to allow the HTTP.Audio application when using the default port. Fetching an MP3 file from an HTTP server using port 443 is allowed, but is blocked when using a nonstandard port, such as 8443.

To enforce the HTTP.Audio application using the default port in the GUI:

1. Create a new SSL Inspection & Authentication policy, or use the default policy.
2. Go to *Policy & Objects* > *Security Policy*, and click *Create New*.
3. Enter a name for the policy, such as *allow_HTTP.Audio*.
4. Configure the ports as needed.
5. Set *Service* to *App Default*.
6. In the *Application* field, select *HTTP.Audio*.
7. Set the *Action* to *Accept*.

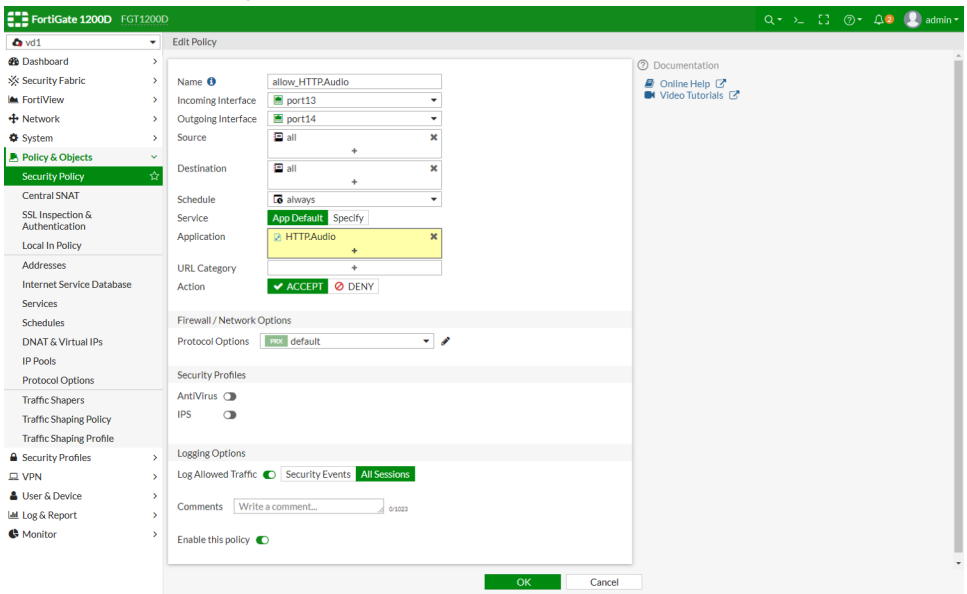

8. Click *OK*.

To enforce the HTTP.Audio application using the default port in the CLI:

1. Create a firewall policy:

```
config firewall consolidated policy
    edit 1
        set name "consolidated_all"
        set srcintf "port13"
        set dstintf "port14"
        set srcaddr4 "all"
        set dstaddr4 "all"
        set service "ALL"
        set ssl-ssh-profile "new-deep-inspection"
    next
end
```

2. Create a security policy:

```
config firewall security-policy
    edit 1
        set name "allow_HTTP.Audio"
        set srcintf "port13"
        set dstintf "port14"
        set srcaddr4 "all"
        set enforce-default-app-port enable
        set action accept
        set schedule "always"
        set logtraffic all
        set application 15879
    next
end
```

Logs

The application logs show logs with an event type of `port-violation` for traffic on port 8443 that is blocked, and an event type of `signature` for traffic on port 443 that is allowed.

Blocked:

```
2: date=2019-06-18 time=16:15:40 logid="1060028736" type="utm" subtype="app-ctrl"
eventtype="port-violation" level="warning" vd="vd1" eventtime=1560899740218875746 tz="-0700"
appid=15879 srcip=10.1.100.22 dstip=172.16.200.216 srcport=52680 dstport=8443
srcintf="port13" srcintfrole="undefined" dstintf="port14" dstintfrole="undefined" proto=6
service="HTTPS" direction="incoming" policyid=1 sessionid=5041 appcat="Video/Audio"
app="HTTP.Audio" action="block" hostname="172.16.200.216" incidentserialno=1906780850
url="/app_data/story.mp3" securityid=2 msg="Video/Audio: HTTP.Audio," apprisk="elevated"
```

Allowed:

```
1: date=2019-06-18 time=16:15:49 logid="1059028704" type="utm" subtype="app-ctrl"
eventtype="signature" level="information" vd="vd1" eventtime=1560899749258579372 tz="-0700"
appid=15879 srcip=10.1.100.22 dstip=172.16.200.216 srcport=54527 dstport=443
srcintf="port13" srcintfrole="undefined" dstintf="port14" dstintfrole="undefined" proto=6
service="HTTPS" direction="incoming" policyid=1 sessionid=5064 appcat="Video/Audio"
app="HTTP.Audio" action="pass" hostname="172.16.200.216" incidentserialno=1139663486
url="/app_data/story.mp3" securityid=2 msg="Video/Audio: HTTP.Audio," apprisk="elevated"
```


Policy views and policy lookup

This topic provides a sample of firewall policy views and firewall policy lookup.


Policy views

In *Policy & Objects* policy list page, there are two policy views: *Interface Pair View* and *By Sequence* view.

Interface Pair View displays the policies in the order that they are checked for matching traffic, grouped by the pairs of Incoming and Outgoing interfaces. For example, all policies referencing traffic from WAN1 to DMZ are in one section. The policies referencing traffic from DMZ to WAN1 are in another section. The sections are collapsible so that you only need to look at the sections you want.

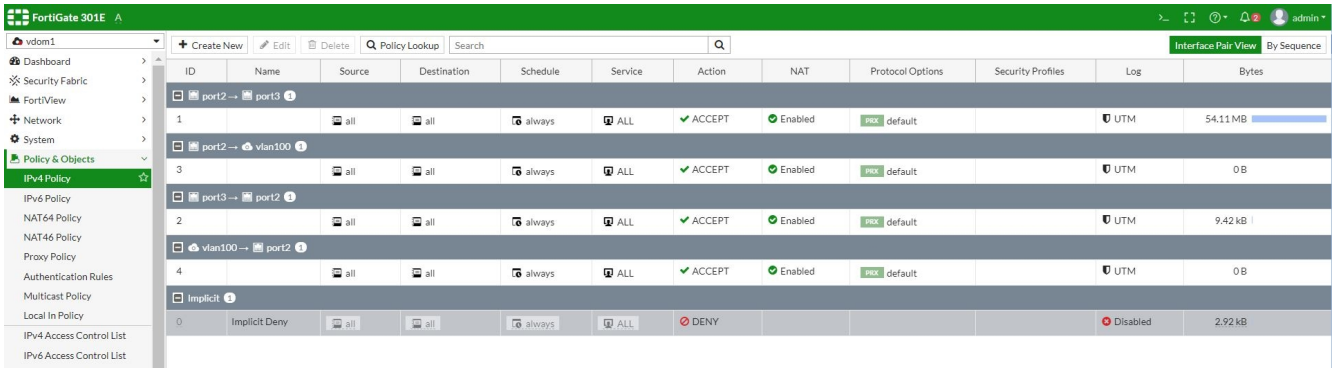

By Sequence displays policies in the order that they are checked for matching traffic without any grouping.

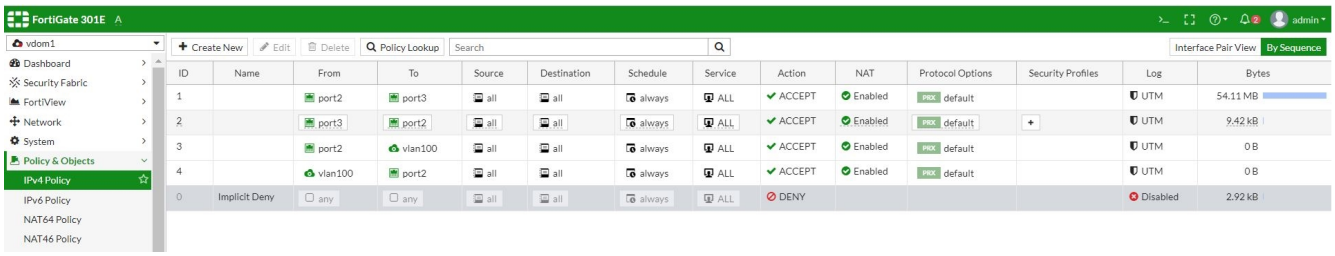


The default display is *Interface Pair View*. You can switch between the two views except if *any* or multiple-interfaces are applied in the policy.

How *Any* or multiple-interfaces policy can change the *Interface Pair View*

The FortiGate unit automatically changes the view on the policy list page to *By Sequence* whenever there is a policy containing *any* or multiple-interfaces as the *Source* or *Destination* interface. If the *Interface Pair View* is grayed out, it is likely that one or more policies have used the *any* or multiple-interfaces.

When you use the *any* or multiple-interfaces, the policy goes into multiple sections because it might be any one of a number of interface pairings. Policies are divided into sectioned using the interface pairings, for example, port1 to port2.

Each section has its own policy order. The order in which a policy is checked for matching criteria to a packet's information is based solely on the position of the policy within its section or within the entire list of policies. If the policy is in multiple sections, FortiGate cannot place the policy in order in multiple sections. Therefore the view can only be *By Sequence*.

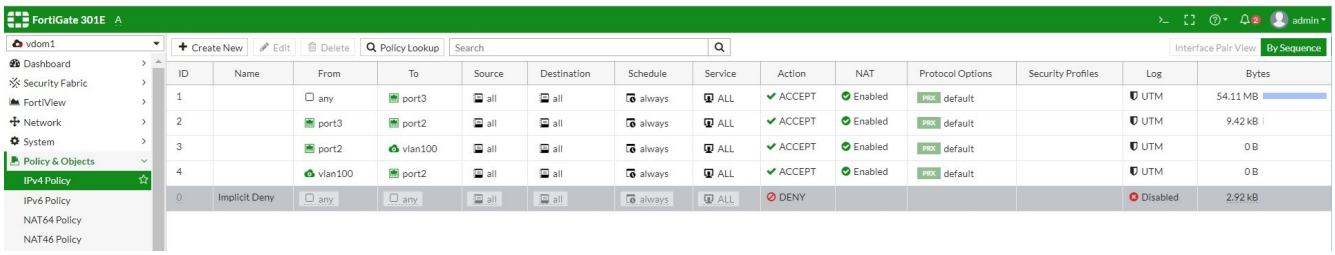

Policy lookup

Firewall policy lookup is based on the `Source_interfaces/Protocol/Source_Address/Destination_Address` that matches the `source-port` and `dst-port` of the protocol. Use this tool to find out which policy matches specific traffic from a number of policies. After completing the lookup, the matching firewall policy is highlighted on the policy list page.


The Policy Lookup tool has the following requirements:

- Transparent mode does not support Policy lookup function.
- When executing the policy lookup, you need to confirm whether the relevant route required for the policy work already exists.


Sample configuration

This example uses the TCP protocol to show how policy lookup works:

1. In *Policy & Objects* policy list page, click *Policy Lookup* and enter the traffic parameters.

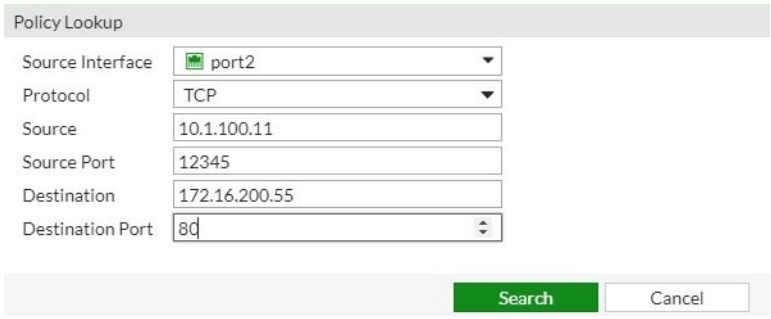

2. Click *Search* to display the policy lookup results.

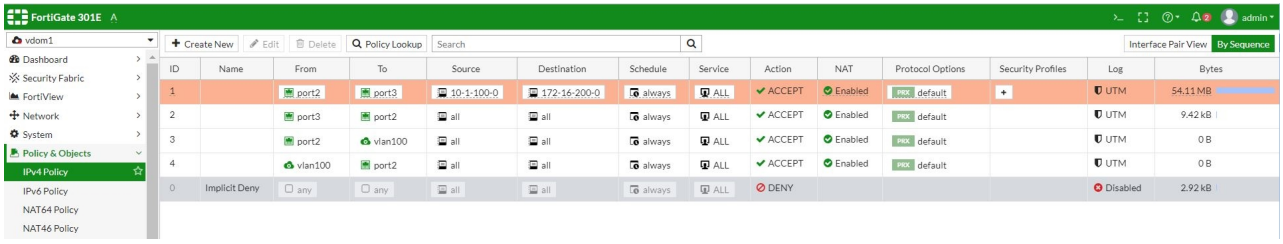

Policy with source NAT

The following recipes provide instructions on configuring policies with source NAT:

- Static SNAT on page 736
- Dynamic SNAT on page 737
- Central SNAT on page 742

Static SNAT

Network Address Translation (NAT) is the process that enables a single device such as a router or firewall to act as an agent between the Internet or Public Network and a local or private network. This agent acts in real time to translate the source or destination IP address of a client or server on the network interface. For the source IP translation, this enables a single public address to represent a significantly larger number of private addresses. For the destination IP translation, the firewall can translate a public destination address to a private address. So we don't have to configure a real public IP address for the server deployed in a private network.

We can subdivide NAT into two types: source NAT (SNAT) and destination NAT (DNAT). This topic is about SNAT, We support three NAT working modes: static SNAT, dynamic SNAT, and central SNAT.

In static SNAT all internal IP addresses are always mapped to the same public IP address. This is a port address translation, Since we have 60416 available port numbers, this one public IP address can handle the conversion of 60,416 internal IP addresses. See example below.

Internal Source IP	Source Port	Translated Source IP	Translated Source Port
10.1.100.1	11110	172.16.200.1	5117
10.1.100.1	11111	172.16.200.1	5118
10.1.100.2	11112	172.16.200.1	5119
.....	.....	172.16.200.1	.....
.....	.....	172.16.200.1	65533

FortiGate firewall configurations commonly use the Outgoing Interface address.


Sample configuration

The following example of static SNAT uses an internal network with subnet 10.1.100.0/24 (vlan20) and an external/ISP network with subnet 172.16.200.0/24 (vlan30).

When the clients in internal network need to access the servers in external network, We need to translate IP addresses from 10.1.100.0/24 to an IP address 172.16.200.0/24, In this example, we implement static SNAT by creating a firewall policy.

To configure static NAT:

1. In *Policy & Objects* > *IPv4 Policy*, click *Create New*.
2. Enter the required policy parameters.
3. Enable *NAT* and select *Use Outgoing Interface Address*.
4. If needed, enable *Preserve Source Port*.
   Enable *Preserve Source Port* to keep the same source port for services that expect traffic to come from a specific source port.
   Disable *Preserve Source Port* to allow more than one connection through the firewall for that service.

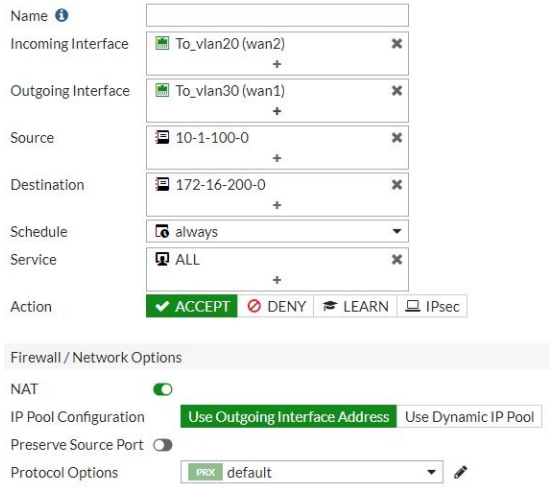

For packets that match this policy, its source IP address is translated to the IP address of the outgoing interface.

Dynamic SNAT

Dynamic SNAT maps the private IP addresses to the first available public address from a pool of addresses. In the FortiGate firewall, this can be done by using IP pools. IP pools is a mechanism that allows sessions leaving the FortiGate firewall to use NAT. An IP pool defines a single IP address or a range of IP addresses to be used as the source address for the duration of the session. These assigned addresses are used instead of the IP address assigned to that FortiGate interface.

IP pool types

FortiGate uses four types of IPv4 IP pools. This recipe focuses on some of the differences between them.

Overload

This type of IP pool is similar to static SNAT mode. We need to define an external IP range that contains one or more IP addresses. When there is only one IP address it is almost the same as static SNAT, the outgoing interface address is used. When it contains multiple IP addresses, it is equivalent to an extended mode of static SNAT.

For instance, if we define an overload type IP pool with two external IP addresses (172.16.200.1—172.16.200.2), since there are 60,416 available port numbers per IP, this IP pool can handle 60,416*2 internal IP addresses.

Original Source IP	Original Source Port	Translated Source IP	Translated Source Port
10.1.100.1	11110	172.16.200.1	5117
10.1.100.2	11111	172.16.200.1	5118
.....	.....	172.16.200.1	.....
.....	.....	172.16.200.1	65533
.....	.....	172.16.200.2	5117
.....	.....	.....	.....
.....	.....	172.16.200.2	65533

The mapped IP address can be calculated from the source IP address. The index number of the address in the pool is the remainder of the source IP address, in decimal, divided by the number addresses in the pool.



To calculate the decimal value of the source IP address, either use an online calculator, or use the following equation:

$$a.b.c.d = a * (256)^3 + b * (256)^2 + c * (256) + d$$

For example:

$$192.168.0.1 = 192 * (256)^3 + 168 * (256)^2 + 0 * (256) + 1 = 3232235521$$

If there is one IP pool, where:

- P_1 = the first address in the IP pool
- R_1 = the number of IP addresses in the IP pool
- X = the source IP address as a decimal number
- Y = the mapped IP address

Then the equation to determine the mapped address is:

$$Y = P_1 + X \bmod R_1$$

For example:

IP pool	Source IP address
172.26.73.20 to 172.26.73.90	192.168.1.200

1. Convert the source IP address to a decimal number:
$$192 * (256)^3 + 168 * (256)^2 + 1 * (256) + 200 = 3232235976$$
2. Determine the number of IP addresses in the pool:
$$172.26.73.90 - 172.26.73.20 = 71$$
3. Find the remainder of the source IP address divided by the number of addresses in the pool:
$$3232235976 \bmod 71 = 26$$
4. Add the remainder to the first IP address in the pool:
$$172.26.73.20 + 26 = 172.26.73.46$$
So, the mapped IP address is **172.26.73.46**.

If there are multiple IP pools, the calculation is similar to when there is only one pool.

If there are two IP pools, where:

- P_1 = the first address in the first IP pool
- P_2 = the first address in the second IP pool
- R_1 = the number of IP addresses in the first IP pool
- R_2 = the number of IP addresses in the second IP pool
- X = the source IP address as a decimal number
- Y = the mapped IP address

Then the equations to determine the mapped address are:

$$\text{If } X \bmod (R_1 + R_2) >= R_1, \text{ then } Y = P_2 + X \bmod R_2$$

$$\text{If } X \bmod (R_1 + R_2) < R_1, \text{ then } Y = P_1 + X \bmod R_1$$

For example:

IP pools	Source IP address
pool01: 172.26.73.20 to 172.26.73.90	192.168.1.200
pool02: 172.26.75.50 to 172.26.75.150	

1. Convert the source IP address to a decimal number:
$$192 * (256)^3 + 168 * (256)^2 + 1 * (256) + 200 = 3232235976$$
2. Determine the total number of IP addresses in the pools:
$$(172.26.73.90 - 172.26.73.20) + (172.26.75.50 - 172.26.75.150) = 71 + 101 = 172$$
3. Find the remainder of the source IP address divided by the number of addresses in the pools:
$$3232235976 \bmod 172 = 108$$
4. The remainder is greater than the number of addresses in pool01, so the address is selected from pool02 and the remainder is recalculated based only on pool02:
$$3232235976 \bmod 101 = 40$$
5. Add the new remainder to the first IP address in pool02:
$$172.26.75.50 + 40 = 172.26.75.90$$
So, the mapped IP address is **172.26.75.90**.

One-to-one

This type of IP pool means that the internal IP address and the external (translated) IP address match one-to-one. The port address translation (PAT) is disabled when using this type of IP pool. For example, if we define a one-to-one type IP pool with two external IP addresses (172.16.200.1 - 172.16.200.2), this IP pool only can handle two internal IP addresses.

Fixed port range

For the overload and one-to-one IP pool types, we do not need to define the internal IP range. For the fixed port range type of IP pool, we can define both internal IP range and external IP range. Since each external IP address and the number of available port numbers is a specific number, if the number of internal IP addresses is also determined, we can calculate the port range for each address translation combination. So we call this type fixed port range. This type of IP pool is a type of port address translation (PAT).

For instance, if we define one external IP address (172.16.200.1) and ten internal IP addresses (10.1.100.1-10.1.100.10), we have translation IP+Port combination like following table:

Original Source IP	Original Source Port	Translated Source IP	Translated Source Port Range
10.1.100.1	.....	172.16.200.1	5117~11157
10.1.100.2	.....	172.16.200.1	11158~17198
10.1.100.3	.....	172.16.200.1	.....
10.1.100.4	.....	172.16.200.1	.....
10.1.100.5	.....	172.16.200.1	.....
10.1.100.6	.....	172.16.200.1	.....
10.1.100.7	.....	172.16.200.1	.....
10.1.100.8	.....	172.16.200.1	.....
10.1.100.9	.....	172.16.200.1	53445~59485
10.1.100.10	.....	172.16.200.1	59486~65526

Port block allocation

This type of IP pool is also a type of port address translation (PAT). It gives users a more flexible way to control the way external IPs and ports are allocated. Users need to define *Block Size/Block Per User* and external IP range. *Block Size* means how many ports each Block contains. *Block per User* means how many blocks each user (internal IP) can use.

The following is a simple example:

- **External IP Range**: 172.16.200.1—172.16.200.1
- **Block Size**: 128
- **Block Per User**: 8


Result:

- **Total-PBAs**: 472 (60416/128)
- **Maximum ports can be used per User (Internal IP Address)**: 1024 (128*8)
- **How many Internal IP can be handled**: 59 (60416/1024 or 472/8)

Sample configuration

To configure overload IP pool in the GUI:

1. In *Policy & Objects* > *IP Pools*, click *Create New*.
2. Select *IPv4 Pool* and then select *Overload*.

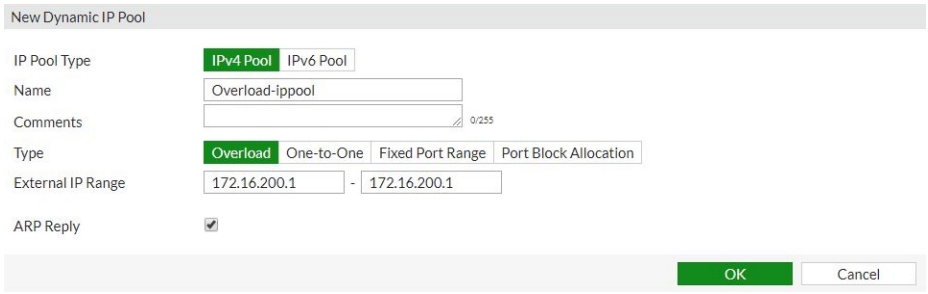


To configure overload IP pool in the CLI:

```
config firewall ippool
    edit "Overload-ippool"
        set startip 172.16.200.1
        set endip 172.16.200.1
    next
end
```

To configure one-to-one IP pool using the GUI:

1. In *Policy & Objects* > *IP Pools*, click *Create New*.
2. Select *IPv4 Pool* and then select *One-to-One*.

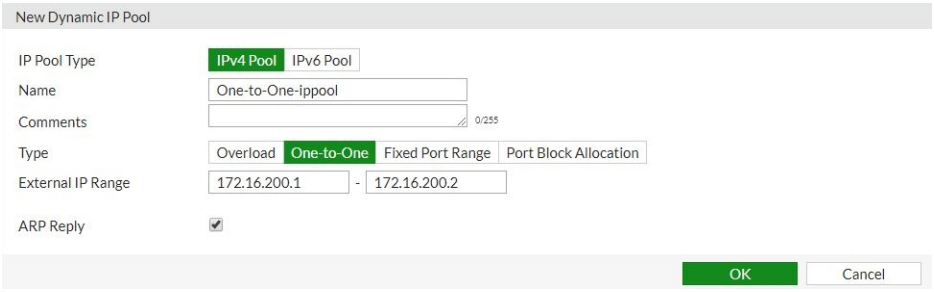


To configure one-to-one IP pool in the CLI:

```
config firewall ippool
    edit "One-to-One-ippool"
        set type one-to-one
        set startip 172.16.200.1
        set endip 172.16.200.2
    next
end
```

To configure fixed port range IP pool in the GUI:

1. In *Policy & Objects* > *IP Pools*, click *Create New*.
2. Select *IPv4 Pool* and then select *Fixed Port Range*.

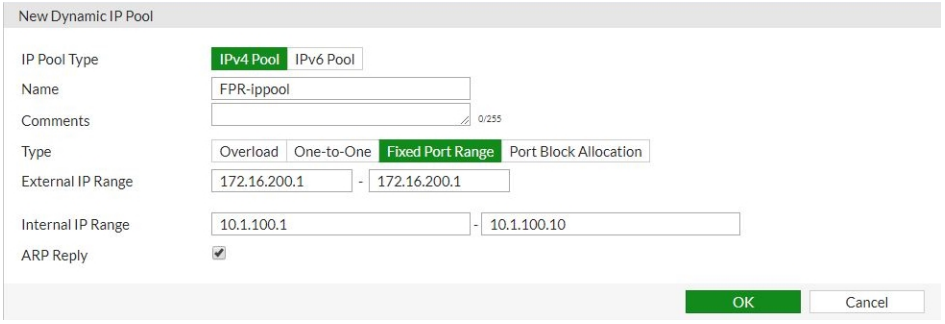


To configure fixed port range IP pool in the CLI:

```
config firewall ippool
    edit "FPR-ippool"
        set type fixed-port-range
        set startip 172.16.200.1
        set endip 172.16.200.1
        set source-startip 10.1.100.1
        set source-endip 10.1.100.10
   next
end
```

To configure port block allocation IP pool in the GUI:

1. In *Policy & Objects* > *IP Pools*, click *Create New*.
2. Select *IPv4 Pool* and then select *Port Block Allocation*.

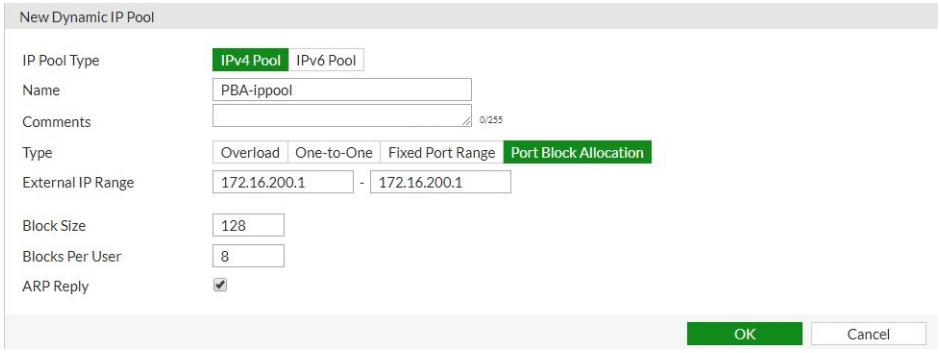

To configure port block allocation IP pool in the CLI:

```
config firewall ippool
    edit PBA-ippool
        set type port-block-allocation
        set startip 172.16.200.1
        set endip 172.16.200.1
        set block-size 128
        set num-blocks-per-user 8
    next
end
```

Central SNAT

The central SNAT table enables you to define and control (with more granularity) the address translation performed by FortiGate. With the NAT table, you can define the rules for the source address or address group, and which IP pool the destination address uses.

While similar in functionality to IP pools where a single address is translated to an alternate address from a range of IP addresses, with IP pools there is no control over the translated port. When using the IP pool for source NAT, you can define a fixed port to ensure the source port number is unchanged. If no fixed port is defined, the port translation is randomly chosen by FortiGate. With the central NAT table, you have full control over both the IP address and port translation.

FortiGate reads the NAT rules from the top down until it hits a matching rule for the incoming address. This enables you to create multiple NAT policies that dictate which IP pool is used based on the source address. NAT policies can be rearranged within the policy list. NAT policies are applied to network traffic after a security policy.

The central SNAT table allows you to create, edit, delete, and clone central SNAT entries.

Central SNAT notes

- The central NAT feature is not enabled by default.
- If central NAT is enabled, the NAT option under IPv4 policies is skipped and SNAT must be done via `central-snat-map`. The IPv4 policy list and dialog boxes have messages and redirection links to show this information.
- If NGFW mode is policy-based, then it is assumed that central NAT (specifically SNAT) is enabled implicitly.

- The option to toggle NAT in `central-snat-map` policies has been added. Previously it was only shown in NGFW policy-based mode.
- In the central SNAT policy dialog box, the port mapping fields for the original port have been updated to accept ranges.
- If per VDOM NAT is enabled, NAT is skipped in firewall policy.
- The central SNAT window contains a table of all the central SNAT policies.

Sample configuration

To enable or disable central SNAT using the CLI:

```
config system settings
   set central-nat [enable | disable]
end
```

When central NAT is enabled, *Policy & Objects* displays the Central SNAT section.

To create central SNAT using the GUI:

1. In *Policy & Objects* > *Central SNAT*.
   The right pane displays a table of Central SNAT entries.
2. To create a new entry, click *Create New* in the right pane.
   To edit an entry, double-click the policy you want to edit.
3. To set the *Incoming Interface*, click + in that field.
4. In the pane on the right, select an interface to add it.
   You can select multiple interfaces.
5. To set the *Outgoing Interface*, click click + in that field.
6. In the pane on the right, select an interface to add it.
   You can select multiple interfaces.
7. To set the *Source Address*, click click + in that field.
8. In the pane on the right, select an address to add it.
   You can select multiple addresses.
9. To set the *Destination Address*, click click + in that field.
10. In the pane on the right, select an address to add it.
    You can select multiple addresses.
11. In *NAT* > *IP Pool Configuration*, select either *Use Outgoing Interface Address* or *Use Dynamic IP Pool*.
    If you select *Use Dynamic IP Pool*, click + and select which IP pool to use.
12. Select one of the following *Protocol* parameters.
    - *ANY*. Use any protocol traffic.
    - *TCP*. Use TCP traffic only. Protocol number is set to *6*.
    - *UDP*. Use UDP traffic only. Protocol number is set to *17*.
    - *SCTP*. Use SCTP traffic only. Protocol number is set to *132*.
    - *Specify*. You can specify the traffic filter protocol by setting the protocol number.
13. If you use the *Overload* type of IP pool, you can enable *Explicit Port Mapping*.
    a. If you enable *Explicit Port Mapping*, set the *Original Source Port* to the start number of the source port range.
    b. Set the *Translated Port* to the start number of the translated port range.
14. Click *OK*.

To configure central SNAT using the CLI:

```
config firewall central-snat-map
edit <policyID number>set status [enable|disable]
  set orig-addr <valid address object preconfigured on the FortiGate>
  set srcintf <name of interface on the FortiGate>
  set dst-addr <valid address object preconfigured on the FortiGate>
  set dstintf <name of interface on the FortiGate>
  set protocol <integer for protocol number>
  set orig-port <integer for original port number>
  set nat-port <integer for translated port number>
  set comments <string>
end
```

To set NAT to be not available regardless of NGFW mode:

```
config firewall central-snat-map
    edit 1
        set orig-addr "192-86-1-86"
        set srcintf "port23"
        set dst-addr "192-96-1-96"
        set dstintf "port22"
        set nat-ippool "pool1"
        set protocol 17
        set orig-port 2896-2897
        set nat enable
    next
end
```

To hide NAT port if NAT IP pool is not set or if NAT is disabled:

```
config firewall central-snat-map
    edit 1
        set orig-addr "192-86-1-86"
        set srcintf "port23"
        set dst-addr "192-96-1-96"
        set dstintf "port22"
        set nat-ippool "pool1"
        set protocol 17
        set orig-port 2896-2897
        set nat disable
    next
end
```

To change original port to accept range:

```
config firewall central-snat-map
    edit 1
        set orig-addr "192-86-1-86"
        set srcintf "port23"
        set dst-addr "192-96-1-96"
        set dstintf "port22"
        set nat-ippool "pool1"
        set protocol 17
        set orig-port 2896-2897 (help text changed to: Original port or port range).
```

```
        set nat-port 35804-35805
    next
end
```

Policy with destination NAT

The following recipes provide instructions on configuring policies with destination NAT:

- Static virtual IPs on page 745
- Virtual IP with services on page 746
- Virtual IPs with port forwarding on page 748
- Virtual server on page 750

Static virtual IPs

Mapping a specific IP address to another specific IP address is usually called Destination NAT (DNAT). When this central NAT table is not used, FortiOS calls this a Virtual IP address (VIP). DNAT, or VIP, is used to map an external IP address to an IP address or address range. The mapping can include all TCP/UDP ports or, if port forwarding is enabled, it only refers to the specific configured ports. As the central NAT table is disabled by default, the term VIP is usually used.


VIPs are typically used to NAT external or public IP addresses to internal or private IP addresses. Using a VIP between two internal interfaces made up of private IP addresses is possible, but rare, because the two networks can just use the IP addresses of the networks without any address translation. Using a VIP for traffic going from the inside to the internet is supported, but unlikely to be required.

Sample configuration

To create a virtual IP using the GUI:

1. In *Policy & Objects* > *Virtual IPs*.
2. Click *Create New* and select *Virtual IP*.
3. Select a *VIP Type* based on the IP versions used:
   - If IPv4 is on both sides of the FortiGate unit, select *IPv4*.
   - If IPv6 is on both sides of the FortiGate unit, select *IPv6*.
   - If traffic goes from an IPv4 network to an IPv6 network, select *NAT46*.
   - If traffic goes from an IPv6 network to an IPv4 network, select *NAT64*.

4. Enter a unique name for the virtual IP and fill in the other fields.

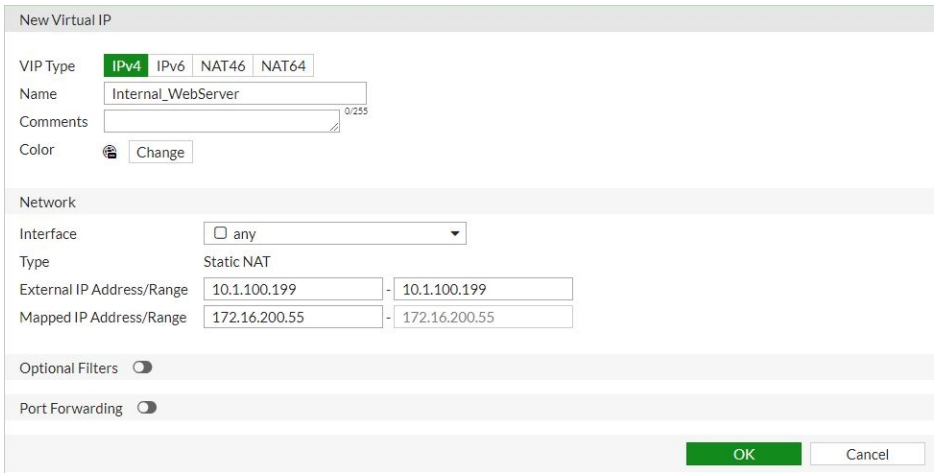

To create a virtual IP using the CLI:

```
config firewall vip
    edit "Internal_WebServer"
        set extip 10.1.100.199
        set extintf "any"
        set mappedip "172.16.200.55"
    next
end
```

To apply a virtual IP to policy using the CLI:

```
config firewall policy
    edit 8
        set name "Example_Virtual_IP_in_Policy"
        set srcintf "wan2"
        set dstintf "wan1"
        set srcaddr "all"
        set dstaddr "Internal_WebServer"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end
```

Virtual IP with services


Virtual IP with services is a more flexible virtual IP mode. This mode allows users to define services to a single port number mapping.

This recipe shows how to use virtual IP with services enabled. This example has one public external IP address. We map TCP ports 8080, 8081, and 8082 to an internal WebServer TCP port 80. This allows remote connections to communicate with a server behind the firewall.

Sample configuration

To create a virtual IP with services using the GUI:

1. In *Policy & Objects* > *Virtual IPs*.
2. Click *Create New* and select *Virtual IP*.
3. For *VIP Type*, select *IPv4*.
4. Enter a unique name for the virtual IP and fill in the other fields.
5. Configure the fields in the *Network* section. For example:
   - Set *Interface* to *any*.
   - Set *External IP Address/Range* to *10.1.100.199*.
   - Set *Mapped IP Address/Range* to *172.16.200.55*.
6. Enable *Optional Filters* and then enable *Services*.
7. In the *Services* field, click + to display the Services pane.
8. In the *Services* pane, select *TCP_8080*, *TCP_8081*, and *TCP_8082*.
9. Enable *Port Forwarding*.
10. Set *Map to Port* to *80*.

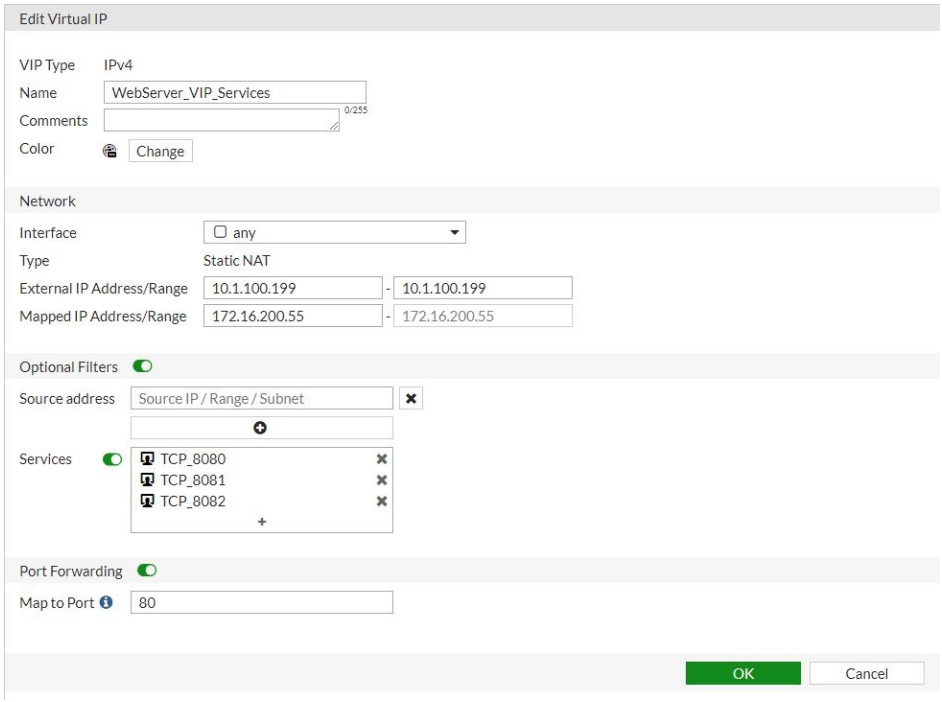

11. Click *OK*.

To see the results:

1. Apply the above virtual IP to the Firewall policy.
2. The results are:
   - Access 10.1.100.199:8080 from external network and FortiGate maps to 172.16.200.55:80 in internal network.
   - Access 10.1.100.199:8081 from external network and FortiGate maps to 172.16.200.55:80 in internal network.
   - Access 10.1.100.199:8082 from external network and FortiGate maps to 172.16.200.55:80 in internal network.

To create a virtual IP with services using the CLI:

```
config firewall vip
    edit "WebServer_VIP_Services"
        set service "TCP_8080" "TCP_8081" "TCP_8082"
        set extip 10.1.100.199
        set extintf "any"
        set portforward enable
        set mappedip "172.16.200.55"
        set mappedport 80
    next
end
```

Virtual IPs with port forwarding


If you need to hide the internal server port number or need to map several internal servers to the same public IP address, enable port-forwarding for Virtual IP.

This recipe shows how to use virtual IPs to configure port forwarding on a FortiGate unit. This example has one public external IP address. We map TCP ports 8080, 8081, and 8082 to different internal WebServers' TCP port 80. This allows remote connections to communicate with a server behind the firewall.

Sample configuration

To create a virtual IP with port forwarding using the GUI:

1. In *Policy & Objects* > *Virtual IPs*.
2. Click *Create New* and select *Virtual IP*.
3. For *VIP Type*, select *IPv4*.
4. Enter a unique name for the virtual IP and fill in the other fields.
5. Configure the fields in the *Network* section. For example:
   - Set *Interface* to *any*.
   - Set *External IP Address/Range* to *10.1.100.199*.
   - Set *Mapped IP Address/Range* to *172.16.200.55*.
6. Leave *Optional Filters* disabled.
7. Enable *Port Forwarding*.
8. Configure the fields in the *Port Forwarding* section. For example:
   - Set *Protocol* to *TCP*.
   - Set *External Service Port* to *8080 - 8080*.
   - Set *Map to Port* to *80 - 80*.

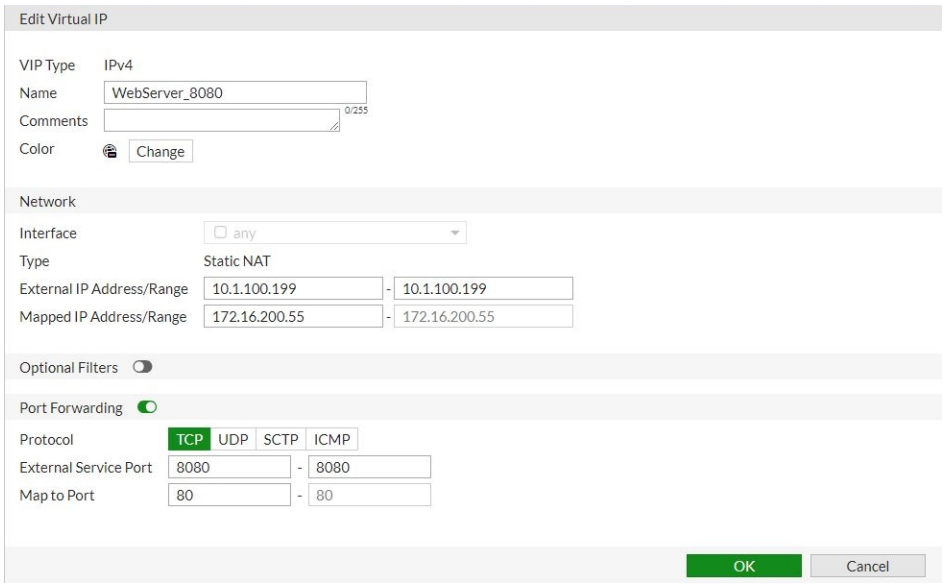

9. Click *OK*.
10. Follow the above steps to create two additional virtual IPs.
    a. For one virtual IP:
        - Use a different *Mapped IP Address/Range*, for example, *172.16.200.56*.
        - Set *External Service Port* to *8081 - 8081*.
        - Use the same *Map to Port* numbers: *80 - 80*.
    b. For the other virtual IP:
        - Use a different *Mapped IP Address/Range*, for example, *172.16.200.57*.
        - Set *External Service Port* to *8082 - 8082*.
        - Use the same *Map to Port* numbers: *80 - 80*.
11. Create a *Virtual IP Group* and put the above three virtual IPs into that group.



To see the results:

1. Apply the above virtual IP to the Firewall policy.
2. The results are:
    - Access 10.1.100.199:8080 from external network and FortiGate maps to 172.16.200.55:80 in internal network.
    - Access 10.1.100.199:8081 from external network and FortiGate maps to 172.16.200.56:80 in internal network.
    - Access 10.1.100.199:8082 from external network and FortiGate maps to 172.16.200.57:80 in internal network

Virtual server


This topic shows a special virtual IP type: virtual server. Use this type of VIP to implement server load balancing.

The FortiOS server load balancing contains all the features of a server load balancing solution. You can balance traffic across multiple backend servers based on multiple load balancing schedules including:

- Static (failover)
- Round robin
- Weighted (to account for different sized servers or based on the health and performance of the server including round trip time and number of connections)

The load balancer supports HTTP, HTTPS, IMAPS, POP3S, SMTPS, SSL/TLS, and generic TCP/UDP and IP protocols. Session persistence is supported based on the SSL session ID based on an injected HTTP cookie, or based on the HTTP or HTTPS host. SSL/TLS load balancing includes protection from protocol downgrade attacks. Server load balancing is supported on most FortiGate devices and includes up to 10,000 virtual servers on high end systems.

Sample topology

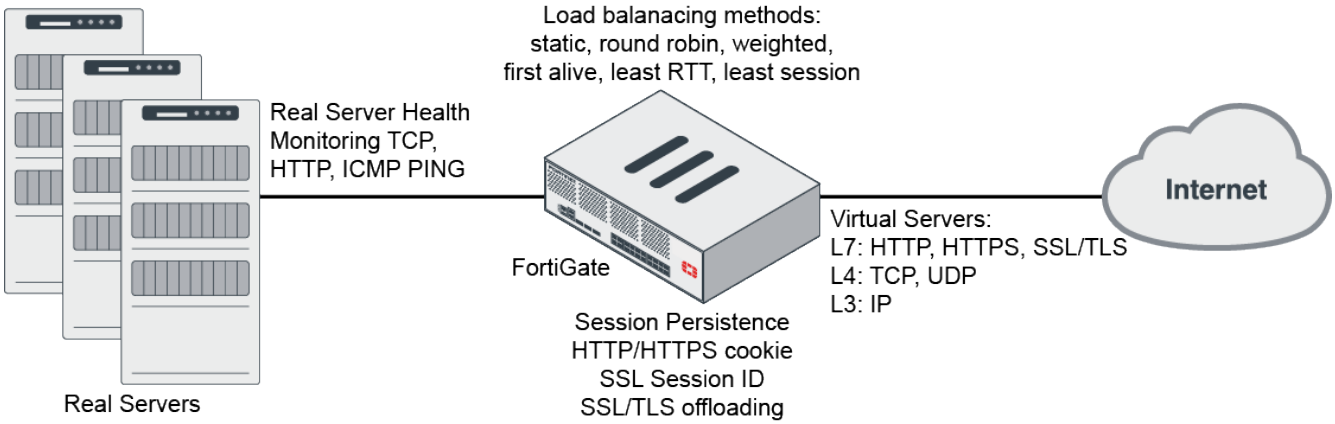

SSL/TLS offloading

FortiGate SSL/TLS offloading is designed for the proliferation of SSL/TLS applications. The key exchange and encryption/decryption tasks are offloaded to the FortiGate unit where they are accelerated using FortiASIC technology which provides significantly more performance than a standard server or load balancer. This frees up valuable resources on the server farm to give better response to business operations. Server load balancing offloads most SSL/TLS versions including SSL 3.0, TLS 1.0, and TLS 1.2, and supports full mode or half mode SSL offloading with DH key sizes up to 4096 bits.

FortiGate SSL offloading allows the application payload to be inspected before it reaches your servers. This prevents intrusion attempts, blocks viruses, stops unwanted applications, and prevents data leakage. SSL/TLS content inspection supports TLS versions 1.0, 1.1, and 1.2 and SSL versions 1.0, 1.1, 1.2, and 3.0.

Virtual server requirements

When creating a new virtual server, you must configure the following options:

- Virtual Server Type.
- Load Balancing Methods.

- Health check monitoring (optional).
- Session persistence (optional).
- Virtual Server IP (External IP Address).
- Virtual Server Port (External Port).
- Real Servers (Mapped IP Address & Port).

Virtual server types

Select the protocol to be load balanced by the virtual server. If you select a general protocol such as IP, TCP, or UDP, the virtual server load balances all IP, TCP, or UDP sessions. If you select specific protocols such as HTTP, HTTPS, or SSL, you can apply additional server load balancing features such as *Persistence* and *HTTP Multiplexing*.

HTTP	Select *HTTP* to load balance only HTTP sessions with the destination port number that matches the *Virtual Server Port* setting. Change *Virtual Server Port* to match the destination port of the sessions to be load balanced (usually port 80 for HTTP sessions). You can enable *HTTP Multiplexing*. You can also set *Persistence* to *HTTP Cookie* to enable cookie-based persistence.
HTTPS	Select *HTTPS* to load balance only HTTPS sessions with the destination port number that matches the *Virtual Server Port* setting. Change *Virtual Server Port* to match the destination port of the sessions to be load balanced (usually port 443 for HTTPS sessions). You can enable *HTTP Multiplexing*. You can also set *Persistence* to *HTTP Cookie* to enable cookie-based persistence, or you can set *Persistence* to *SSL Session ID*.
IMAPS	Select *IMAPS* to load balance only IMAPS sessions with the destination port number that matches the *Virtual Server Port* setting. Change *Virtual Server Port* to match the destination port of the sessions to be load balanced (usually port 993 for IMAPS sessions). You can also set *Persistence* to *SSL Session ID*.
POP3S	Select *POP3S* to load balance only POP3S sessions with the destination port number that matches the *Virtual Server Port* setting. Change *Virtual Server Port* to match the destination port of the sessions to be load balanced (usually port 995 for POP3S sessions). You can also set *Persistence* to *SSL Session ID*.
SMTPS	Select *SMTPS* to load balance only SMTPS sessions with the destination port number that matches the *Virtual Server Port* setting. Change *Virtual Server Port* to match the destination port of the sessions to be load balanced (usually port 465 for SMTPS sessions). You can also set *Persistence* to *SSL Session ID*.
SSL	Select *SSL* to load balance only SSL sessions with the destination port number that matches the *Virtual Server Port* setting. Change *Virtual Server Port* to match the destination port of the sessions to be load balanced. You can also set *Persistence* to *SSL Session ID*.
TCP	Select *TCP* to load balance only TCP sessions with the destination port number that matches the *Virtual Server Port* setting. Change *Virtual Server Port* to match the destination port of the sessions to be load balanced.
UDP	Select *UDP* to load balance only UDP sessions with the destination port number that matches the *Virtual Server Port* setting. Change *Virtual Server Port* to match the destination port of the sessions to be load balanced.
IP	Select *IP* to load balance all sessions accepted by the security policy that contains this virtual server.

Load balancing methods

The load balancing method defines how sessions are load balanced to real servers.

All load balancing methods do not send traffic to real servers that are down or not responding. FortiGate can only determine if a real server is not responding by using a health check monitor. You should always add at least one health check monitor to a virtual server or to real servers; otherwise load balancing might try to distribute sessions to real servers that are not functioning.

Static	The traffic load is statically spread evenly across all real servers. Sessions are not assigned according to how busy individual real servers are. This load balancing method provides some persistence because all sessions from the same source address always go to the same real server. Because the distribution is stateless, so if a real server is added, removed, or goes up or down, the distribution is changed and persistence might be lost.
Round Robin	Directs new requests to the next real server. This method treats all real servers as equals regardless of response time or the number of connections. This method does not direct requests to real servers that down or non responsive.
Weighted	Real servers with a higher weight value receive a larger percentage of connections. Set the real server weight when adding a real server.
Least Session	Directs requests to the real server that has the least number of current connections. This method works best in environments where the real servers or other equipment you are load balancing all have similar capabilities. This load balancing method uses the FortiGate session table to track the number of sessions being processed by each real server. The FortiGate unit cannot detect the number of sessions actually being processed by a real server.
Least RTT	Directs sessions to the real server with the lowest round trip time. The round trip time is determined by a ping health check monitor. The default is 0 if no ping health check monitors are added to the virtual server.
First Alive	Directs sessions to the first live real server. This load balancing schedule provides real server failover protection by sending all sessions to the first live real server. If a real server fails, all sessions are sent to the next live real server. Sessions are not distributed to all real servers so all sessions are processed by the first real server only.
HTTP Host	Load balances HTTP host connections across multiple real servers using the host's HTTP header to guide the connection to the correct real server.

Health check monitoring

In the FortiGate GUI, you can configure health check monitoring so that the FortiGate unit can verify that real servers are able respond to network connection attempts. If a real server responds to connection attempts, the load balancer continues to send sessions to it. If a real server stops responding to connection attempts, the load balancer assumes that the server is down and does not send sessions to it. The health check monitor configuration determines how the load balancer tests real servers. You can use a single health check monitor for multiple load balancing configurations. You can configure TCP, HTTP, and Ping health check monitors. You usually set the health check monitor to use the same protocol as the traffic being load balanced to it. For example, for an HTTP load balancing configuration, you would normally use an HTTP health check monitor.

Session persistence

Use persistence to ensure a user is connected to the same real server every time the user makes an HTTP, HTTPS, or SSL request that is part of the same user session. For example, if you are load balancing HTTP and HTTPS sessions to a collection of eCommerce web servers, when users make a purchase, they will be starting multiple sessions as they navigate the eCommerce site. In most cases, all the sessions started by this user during one eCommerce session should be processed by the same real server. Typically, the HTTP protocol keeps track of these related sessions using cookies. HTTP cookie persistence ensure all sessions that are part of the same user session are processed by the same real server.

When you configure persistence, the FortiGate unit load balances a new session to a real server according to the load balance method. If the session has an HTTP cookie or an SSL session ID, the FortiGate unit sends all subsequent sessions with the same HTTP cookie or SSL session ID to the same real server.

Real servers


Add real servers to a load balancing virtual server to provide information the virtual server requires to send sessions to the server. A real server configuration includes the IP address of the real server and port number the real server receives sessions on. The FortiGate unit sends sessions to the real server's IP address using the destination port number in the real server configuration.

When configuring a real server, you can also specify the weight (if the load balance method is set to *Weighted*) and you can limit the maximum number of open connections between the FortiGate unit and the real server. If the maximum number of connections is reached for the real server, the FortiGate unit automatically switches all further connection requests to other real servers until the connection number drops below the limit. Setting *Maximum Connections* to 0 means that the FortiGate unit does not limit the number of connections to the real server.

Sample of HTTP load balancing to three real web servers

This example describes the steps to configure the load balancing configuration below. In this configuration, a FortiGate unit is load balancing HTTP traffic from the Internet to three HTTP servers on the internal network. HTTP sessions are accepted at the wan1 interface with destination IP address 172.20.120.121 on TCP port 8080, and forwarded from the internal interface to the web servers. When forwarded, the destination address of the session is translated to the IP address of one of the web servers.

This load balancing configuration also includes session persistence using HTTP cookies, round-robin load balancing, and TCP health monitoring for the real servers. Ping health monitoring consists of the FortiGate unit using ICMP ping to ensure the web servers can respond to network traffic.

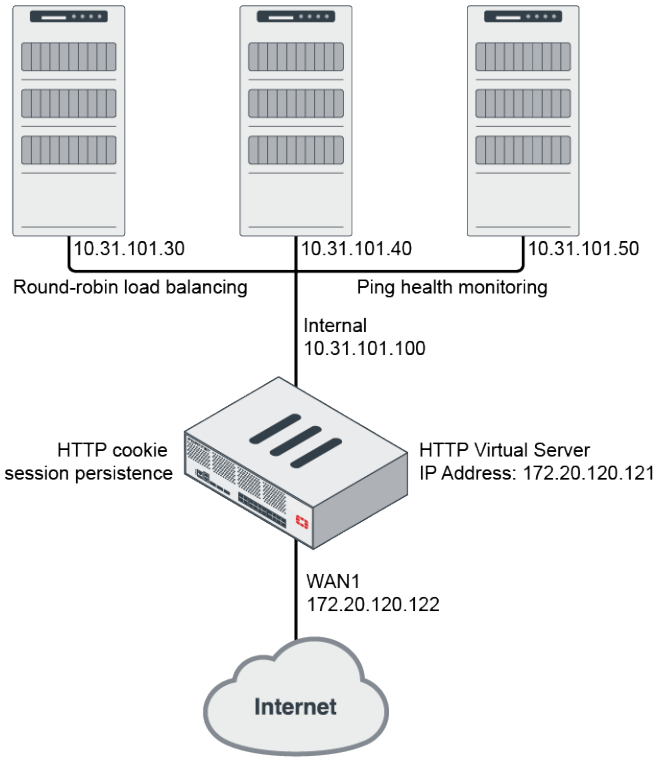

General steps:


1. Create a health check monitor.
   A ping health check monitor causes the FortiGate to ping the real servers every 10 seconds. If one of the servers does not respond within 2 seconds, the FortiGate unit will retry the ping 3 times before assuming that the HTTP server is not responding.
2. Create a load balance virtual server with three real servers.
3. Add the load balancing virtual server to a policy as the destination address.

To see the virtual servers and health check monitors options in the GUI, Load Balancing must be selected in Feature Visibility > Additional Features. See Feature visibility on page 716 on page 1 for details.

Configure a load balancing virtual server in the GUI

To create a health check monitor:


1. Go to *Policy & Objects* > *Health Check*.
2. Click *Create New*.
3. Set the following:
   - *Name* to *Ping-mon-1*
   - *Type* to *Ping*
   - *Interval* to *10* seconds
   - *Timeout* to *2* seconds
   - *Retry* to *3* attempt(s)

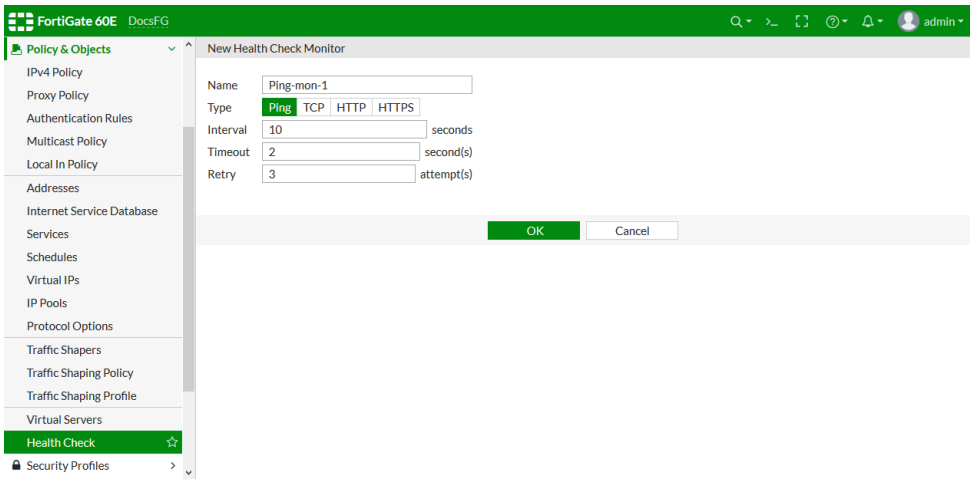

4. Click *OK*.


To create a virtual server:

1. Go to *Policy & Objects* > *Virtual Servers*.
2. Click *Create New*.
3. Set the following:
   - *Name* to *Vserver-HTTP-1*
   - *Type* to *HTTP*
   - *Interface* to *wan1*
   - *Virtual Server IP* to *172.20.120.121*
   - *Virtual Server Port* to *8080*
   - *Load Balance Method* to *Round Robin*
   - *Persistence* to *HTTP Cookie*
   - *Health Check* to *Ping-mon-1*

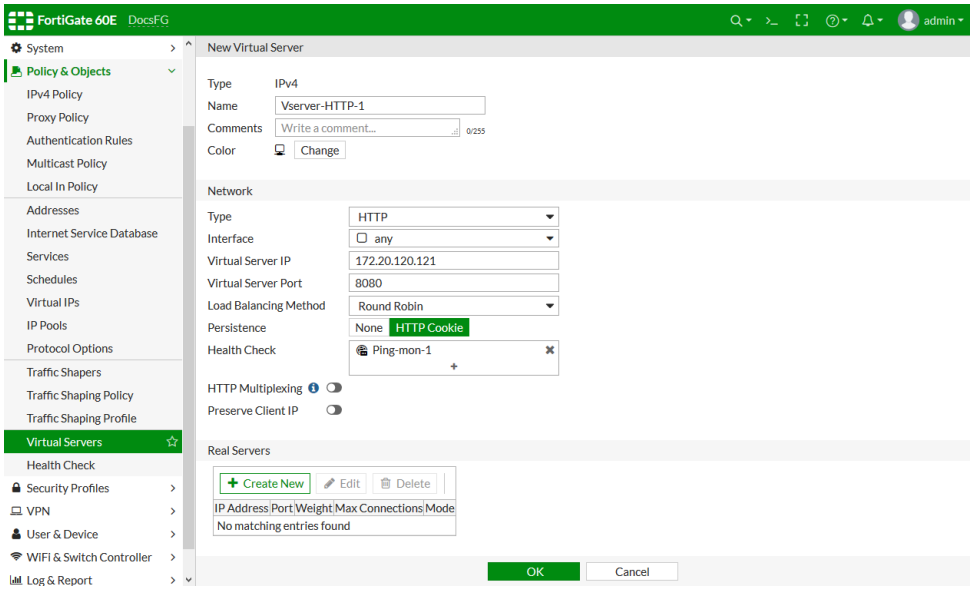

4. In the *Real Servers* table, click *Create New*.

5. Set the following for the first real server:
   - *IP Address* to *10.31.101.30*
   - *Port* to *80*
   - *Max Connections* to *0*
   - *Mode* to *Active*

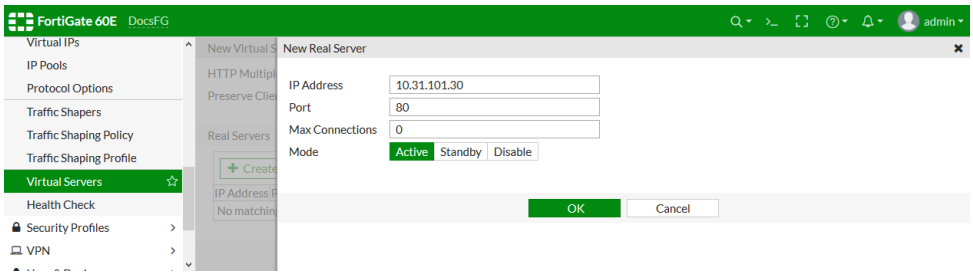


6. Configure two more real servers with IP addresses 10.31.101.40 and 10.31.101.50, and the remaining settings the same as the first real server.
7. Click *OK*.

To create a security policy that includes the load balance virtual server as the destination address:

1. Go to *Policy & Objects* > *IPv4 Policy*.
2. Click *Create New*.
3. Set the *Inspection Mode* to *Proxy-based*. The new virtual server will not be available if the inspection mode is *Flow-based*.
4. Set the following:
   - *Name* to *LB-policy*
   - *Incoming Interface* to *wan1*
   - *Outgoing Interface* to *internal*
   - *Source* to *all*
   - *Destination* to *Vserver-HTTP-1*
   - *Schedule* to *always*
   - *Service* to *ALL*
   - *Action* to *ACCEPT*
5. Enable *NAT* and set *IP Pool Configuration* to *Use Outgoing Interface Address*.

6. Enable *AntiVirus* and select an antivirus profile.

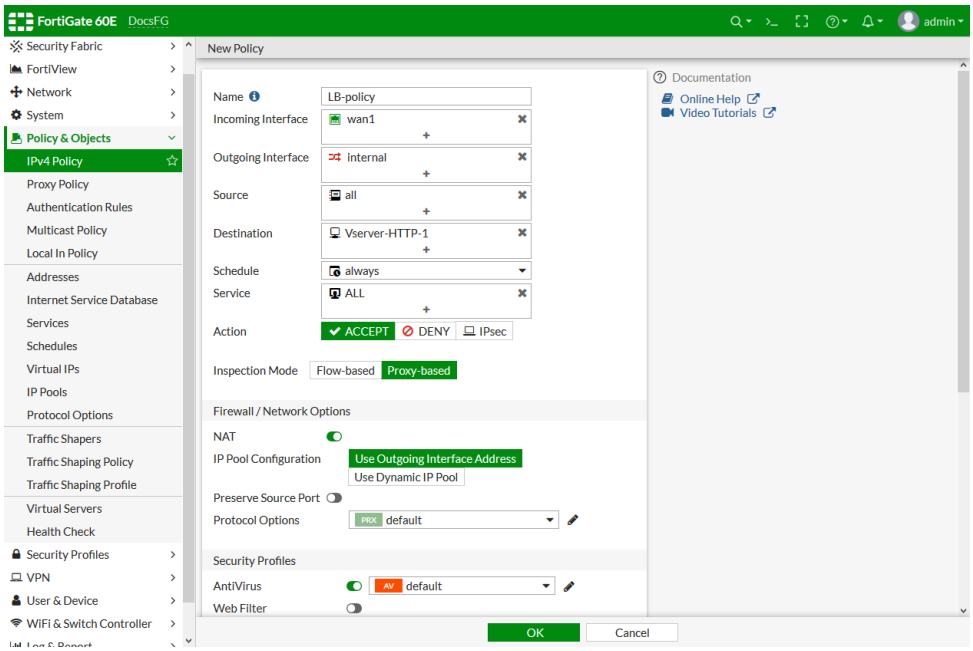

7. Click *OK*.

Configure a load balancing virtual server in the CLI

To configure HTTP load balancing to three real web servers in the CLI:

1. Create a health check monitor:

```
config firewall ldb-monitor
    edit "Ping-mon-1"
        set type ping
        set interval 10
        set timeout 2
        set retry 3
    next
end
```

2. Create a virtual server:

```
config firewall vip
    edit "Vserver-HTTP-1"
        set type server-load-balance
        set extip 172.20.120.121
        set extintf "any"
        set server-type http
        set monitor "Ping-mon-1"
        set ldb-method round-robin
        set persistence http-cookie
        set extport 8080
        config realservers
            edit 1
                set ip 10.31.101.30
                set port 80
```

```
            next
            edit 2
                set ip 10.31.101.40
                set port 80
            next
            edit 3
                set ip 10.31.101.50
                set port 80
            next
        end
    next
end
```

3. Add the load balancing virtual server to a policy as the destination address:

```
config firewall policy
    edit 2
        set name "LB-policy"
        set inspection-mode proxy
        set srcintf "wan1"
        set dstintf "internal"
        set srcaddr "all"
        set dstaddr "Vserver-HTTP-1"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set ssl-ssh-profile "certificate-inspection"
        set av-profile "default"
        set fsso disable
        set nat enable
    next
end
```

Results

Traffic accessing 172.20.120.121:8080 is forwarded in turn to the three real servers.

If the access request has an http-cookie, FortiGate forwards the access to the corresponding real server according to the cookie.

Policy with Internet Service

Using Internet Service in policy

This recipe shows how to apply a predefined Internet Service entry into a policy.

The Internet Service Database is a comprehensive public IP address database that combines IP address range, IP owner, service port number, and IP security credibility. The data comes from the FortiGuard service system. Information is regularly added to this database, for example, geographic location, IP reputation, popularity & DNS, and so on. All this information helps users define Internet security more effectively. You can use the contents of the database as criteria for inclusion or exclusion in a policy.

From FortiOS version 5.6, Internet Service is included in the firewall policy. It can be applied to a policy only as a destination object. From version 6.0, Internet Service can be applied both as source and destination objects in a policy. You can also apply Internet Services to shaping policy.


There are three types of Internet Services you can apply to a firewall policy:

- Predefined Internet Services
- Custom Internet Services
- Extension Internet Services

Sample configuration

To apply a predefined Internet Service entry to a policy using the GUI:

1. Go to *Policy & Objects* and create a new policy.
2. In the *Source* or *Destination* field, click +.
3. In the *Select Entries* pane, click *Internet Service*.
4. Locate and click *Google.Gmail*.

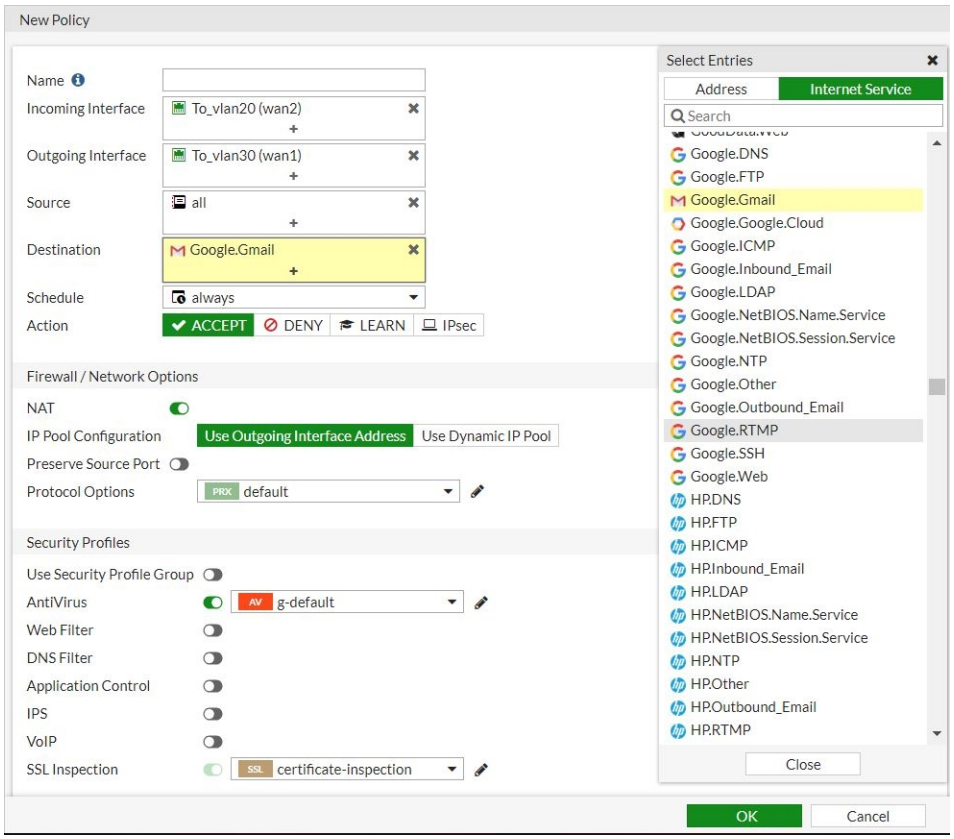

5. Configure the other fields and then click *OK*.

To apply a predefined Internet Service entry to a policy using the CLI:

In the CLI, enable the `internet-service` first and then use its ID to apply the policy.

This example uses Google Gmail and its ID is 65646. Each Internet Service has a unique ID.

```
config firewall policy
    edit 9
        set name "Internet Service in Policy"
        set srcintf "wan2"
        set dstintf "wan1"
        set srcaddr "all"
        set internet-service enable
        set internet-service-id 65646
        set action accept
        set schedule "always"
        set utm-status enable
        set av-profile "g-default"
        set ssl-ssh-profile "certificate-inspection"
        set nat enable
    next
end
```

To diagnose an Internet Service entry using the CLI:

```
# diagnose internet-service id-summary 65646
Version: 0000600096
Timestamp: 201902111802
Total number of IP ranges: 444727
Number of Groups: 7
Group(0), Singularity(20), Number of IP ranges(142740)
Group(1), Singularity(19), Number of IP ranges(1210)
Group(2), Singularity(16), Number of IP ranges(241)
Group(3), Singularity(15), Number of IP ranges(38723)
Group(4), Singularity(10), Number of IP ranges(142586)
Group(5), Singularity(8), Number of IP ranges(5336)
Group(6), Singularity(6), Number of IP ranges(113891)
Internet Service: 65646(Google.Gmail)
Number of IP range: 60
Number of IP numbers: 322845
Singularity: 15
Reputation: 5(Known and verified safe sites such as Gmail, Amazon, eBay, etc.)
Icon Id: 510
Second Level Domain: 53(gmail.com)
Direction: dst
Data source: isdb
```

Result

Because the IP and services related to Google Gmail on the Internet are included in this Internet Service (65646), all traffic to Google Gmail is forwarded by this policy.

Using custom Internet Service in policy

Custom Internet Services can be created and used in firewall policies.

When creating a custom Internet Service, you must set following elements:

- IP or IP ranges
- Protocol number

- Port or port ranges
- Reputation

You must use CLI to create a custom Internet Service.

Custom Internet Service CLI syntax

```
config firewall internet-service-custom
    edit <name>
       set comment <comment>
       set reputation {1|2|3|4|5}
       config entry
           edit <ID #>
               set protocol <number #>
               set dst <object_name>
               config port-range
                   edit <ID #>
                       set start-port <number #>
                       set end-port <number #>
                   next
               end
           next
       end
    end
end
```

Sample configuration

To configure a custom Internet Service:

```
config firewall internet-service-custom
   edit "test-isdb-1"
       set comment "Test Custom Internet Service"
       set reputation 4
       config entry
          edit 1
              set protocol 6
              config port-range
                  edit 1
                      set start-port 80
                      set end-port 443
                  next
              end
              set dst "10-1-100-0"
          next
          edit 2
              set protocol 6
              config port-range
                  edit 1
                      set start-port 80
                      set end-port 80
                  next
              end
              set dst "172-16-200-0"
          next
```

```
        end
    next
end
```

To apply a custom Internet Service into a policy:

```
config firewall policy
    edit 1
        set name "Internet Service in Policy"
        set srcintf "wan2"
        set dstintf "wan1"
        set srcaddr "all"
        set internet-service enable
        set internet-service-id 65646
        set internet-service-custom "test-isdb-1"
        set action accept
        set schedule "always"
        set utm-status enable
        set av-profile "g-default"
        set ssl-ssh-profile "certificate-inspection"
        set nat enable
    next
end
```

Result

In addition to the IP address, IP address ranges, and services allowed by Google.Gmail, this policy also allows the traffic which access to 10.1.100.0/24 and TCP/80-443 and 172.16.200.0/24 and TCP/80.

Using extension Internet Service in policy

Extension Internet Service lets you add custom or remove existing IP address and port ranges to an existing predefined Internet Service entries. Using an extension type Internet Service is actually editing a predefined type Internet Service entry and adding IP address and port ranges to it.

When creating an extension Internet Service and adding custom ranges, you must set following elements:

- IP or IP ranges
- Protocol number
- Port or port ranges

You must use CLI to add custom IP address and port entries into a predefined Internet Service.

You must use GUI to remove entries from a predefined Internet Service.

Custom extension Internet Service CLI syntax

```
config firewall internet-service-extension
    edit <ID #>
        set comment <comment>
        config entry
            edit <ID #>
                set protocol <number #>
                set dst <object_name>
```

```
                config port-range
                    edit <ID #>
                         set start-port <number #>
                         set end-port <number #>
                    next
                end
            next
        end
    end
end
```

Sample configuration


To configure an extension Internet Service using the CLI:

```
config firewall internet-service-extension
    edit 65646
        set comment "Test Extension Internet Service 65646"
        config entry
            edit 1
                set protocol 6
                config port-range
                    edit 1
                        set start-port 80
                        set end-port 443
                    next
                end
                set dst "172-16-200-0"
            next
            edit 2
                set protocol 17
                config port-range
                    edit 1
                        set start-port 53
                        set end-port 53
                    next
                end
                set dst "10-1-100-0"
            next
        end
    next
end
```

To remove IP address and port entries from an existing Internet Service:

1. Go to *Policy & Objects* > *Internet Service Database*.
2. Search for *Google.Gmail*.
3. Select *Google.Gmail* and click *Edit*.

4. Locate the *IP* entry you want to remove and click *Disable* beside that entry.

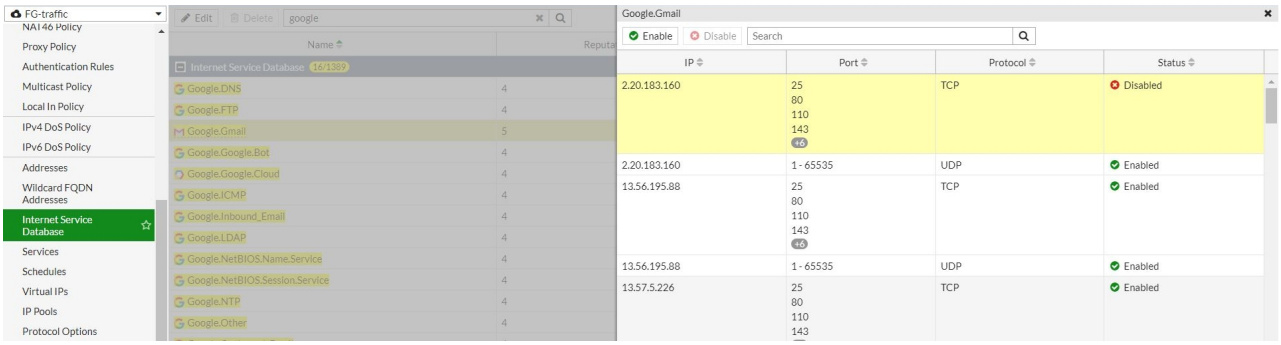

5. Click *Return*.
6. When you complete the actions in the GUI, the CLI automatically generates the configuration from your GUI actions:

```
config firewall internet-service-extension
    edit 65646
        set comment "Test Extension Internet Service 65646"
        config entry
            edit 1
                set protocol 6
                config port-range
                    edit 1
                        set start-port 80
                        set end-port 443
                    next
                end
                set dst "172-16-200-0"
            next
            edit 2
                set protocol 17
                config port-range
                    edit 1
                        set start-port 53
                        set end-port 53
                    next
                end
                set dst "10-1-100-0"
            next
        end
        config disable-entry
            edit 1
                set protocol 6
                config port-range
                    edit 1
                        set start-port 25
                        set end-port 25
                    next
                    edit 2
                        set start-port 80
                        set end-port 80
                    next
                    edit 3
                        set start-port 110
                        set end-port 110
```

```
                    next
                    edit 4
                        set start-port 143
                        set end-port 143
                    next
                    edit 5
                        set start-port 443
                        set end-port 443
                    next
                    edit 6
                        set start-port 465
                        set end-port 465
                    next
                    edit 7
                        set start-port 587
                        set end-port 587
                    next
                    edit 8
                        set start-port 993
                        set end-port 993
                    next
                    edit 9
                        set start-port 995
                        set end-port 995
                    next
                    edit 10
                        set start-port 2525
                        set end-port 2525
                    next
                end
                config ip-range
                    edit 1
                        set start-ip 2.20.183.160
                        set end-ip 2.20.183.160
                    next
                end
            next
        end
    next
end
```

To apply an extension Internet Service into policy using the CLI:

```
config firewall policy
    edit 9
        set name "Internet Service in Policy"
        set srcintf "wan2"
        set dstintf "wan1"
        set srcaddr "all"
        set internet-service enable
        set internet-service-id 65646
        set action accept
        set schedule "always"
        set utm-status enable
        set av-profile "g-default"
        set ssl-ssh-profile "certificate-inspection"
```

```
        set nat enable
    next
end
```

Result

In addition to the IP addresses, IP address ranges, and services allowed by Google.Gmail, this policy also allows the traffic which accesses 10.1.100.0/24 and UDP/53 and 172.16.200.0/24 and TCP/80-443. At the same time, the traffic that accesses 2.20.183.160 is dropped because this IP address and port is disabled from Google.Gmail.

Global IP address information database

The Internet Service and IP Reputation databases download details about public IP address, including: ownership, known services, geographic location, blocklisting information, and more. The details are available in drilldown information, tooltips, and other mechanisms in the FortiView and other pages.

The global IP address database is an integrated database containing all public IP addresses, and is implemented in the Internet Service Database.

To view the owner of the IP address:

```
(global) # get firewall internet-service-owner ?
    id    Internet Service owner ID.
    1  Google
    2  Facebook
    3  Apple
    4  Yahoo
    5  Microsoft
    ......
    115  Cybozu
    116  VNC
```

To check for any known service running on an IP address:

```
(global) # diagnose internet-service info FG-traffic 6 80 8.8.8.8
    Internet Service: 65537(Google.Web)
```

To check GeoIP location and blocklist information:

```
(global) # diagnose internet-service id 65537 | grep 8.8.8.8
```

To check a known malicious server:

```
(global) # diagnose internet-service id-summary 3080383
    Version: 0000600096
    Timestamp: 201902111802
    Total number of IP ranges: 444727
    Number of Groups: 7
    Group(0), Singularity(20), Number of IP ranges(142740)
    Group(1), Singularity(19), Number of IP ranges(1210)
    Group(2), Singularity(16), Number of IP ranges(241)
    Group(3), Singularity(15), Number of IP ranges(38723)
    Group(4), Singularity(10), Number of IP ranges(142586)
```

```
    Group(5), Singularity(8), Number of IP ranges(5336)
    Group(6), Singularity(6), Number of IP ranges(113891)
    Internet Service: 3080383(Botnet.C&C.Server)
    Number of IP range: 111486
    Number of IP numbers: 111486
    Singularity: 20
    Reputation: 1(Known malicious sites related to botnet servers, phishing sites, etc.)
    Icon Id: 591
    Second Level Domain: 1(other)
    Direction: dst
    Data source: irdb
```

To check questionable usage:

```
(global) # diagnose internet-service id-summary 2818238
    Version: 0000600096
    Timestamp: 201902111802
    Total number of IP ranges: 444727
    Number of Groups: 7
    Group(0), Singularity(20), Number of IP ranges(142740)
    Group(1), Singularity(19), Number of IP ranges(1210)
    Group(2), Singularity(16), Number of IP ranges(241)
    Group(3), Singularity(15), Number of IP ranges(38723)
    Group(4), Singularity(10), Number of IP ranges(142586)
    Group(5), Singularity(8), Number of IP ranges(5336)
    Group(6), Singularity(6), Number of IP ranges(113891)
    Internet Service: 2818238(Tor.Relay.Node)
    Number of IP range: 13718
    Number of IP numbers: 13718
    Singularity: 20
    Reputation: 2(Sites providing high risk services such as TOR, proxy, P2P, etc.)
    Icon Id: 43
    Second Level Domain: 1(other)
    Direction: dst
    Data source: irdb

(global) # diagnose internet-service id-summary 2818243
    Version: 0000600096
    Timestamp: 201902111802
    Total number of IP ranges: 444727
    Number of Groups: 7
    Group(0), Singularity(20), Number of IP ranges(142740)
    Group(1), Singularity(19), Number of IP ranges(1210)
    Group(2), Singularity(16), Number of IP ranges(241)
    Group(3), Singularity(15), Number of IP ranges(38723)
    Group(4), Singularity(10), Number of IP ranges(142586)
    Group(5), Singularity(8), Number of IP ranges(5336)
    Group(6), Singularity(6), Number of IP ranges(113891)
    Internet Service: 2818243(Tor.Exit.Node)
    Number of IP range: 1210
    Number of IP numbers: 1210
    Singularity: 19
    Reputation: 2(Sites providing high risk services such as TOR, proxy, P2P, etc.)
    Icon Id: 43
    Second Level Domain: 1(other)
```

```
    Direction: src
    Data source: irdb
```

IP reputation filtering

There are currently five reputation levels in the Internet Service Database (ISDB), and custom reputation levels can be defined in a custom internet service. You can configure firewall policies to filter traffic according to the desired reputation level. If the reputation level of either the source or destination IP address is equal to or greater than the level set in the policy, then the packet is forwarded, otherwise, the packet is dropped.

The five default reputation levels are:

1	Known malicious sites, such as phishing sites or sites related to botnet servers
2	High risk services sites, such as TOR, proxy, and P2P
3	Unverified sites
4	Reputable social media sites, such as Facebook and Twitter
5	Known and verified safe sites, such as Gmail, Amazon, and eBay

The default minimum reputation level in a policy is zero, meaning that the reputation filter is disabled.

For IP addresses that are not included in the ISDB, the default reputation level is three.

The default reputation direction is `destination`.

To set the reputation level and direction in a policy using the CLI:

```
config firewall policy
    edit 1
        set uuid dfcaec9c-e925-51e8-cf3e-fed9a1d42a1c
        set srcintf "wan2"
        set dstintf "wan1"
        set dstaddr "all"
        set reputation-minimum 3
       set reputation-direction source
        set action accept
        set schedule "always"
        set service "ALL"
        set logtraffic all
        set auto-asic-offload disable
        set nat enable
    next
end
```

Packets from the source IP address with reputation levels three, four, or five will be forwarded by this policy.



In a policy, if `reputation-minimum` is set, and the `reputation-direction` is `destination`, then the `dstaddr`, `service`, and `internet-service` options are removed from the policy.

If `reputation-minimum` is set, and the `reputation-direction` is `source`, then the `srcaddr`, and `internet-service-src` options are removed from the policy.

Internet service groups in policies

This feature provides support for Internet Service Groups in traffic shaping and firewall policies. Service groups can be used as the source and destination of the policy. Internet Service Groups are used as criteria to match traffic; the shaper will be applied when the traffic matches.


To use a group as a destination, `internet-service` must be enabled. To use a group as a source, `internet-service-src` must be enabled.

The following CLI variables are available in the `firewall policy` and `firewall shaping-policy` commands:

Variable	Description
internet-service-group <string>	Internet Service group name.
internet-service-custom-group <string>	Custom Internet Service group name.
internet-service-src-group <string>	Internet Service source group name.
internet-service-src-custom-group <string>	Custom Internet Service source group name.

Examples

The following examples use the below topology.

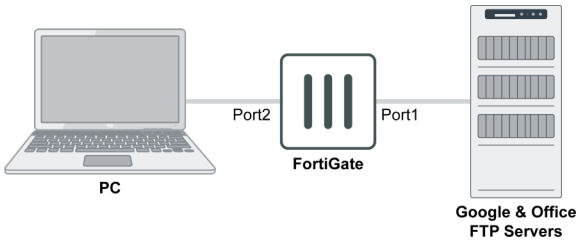

Example 1

In this example, the PC is allowed to access Google, so all Google services are put into an Internet Service Group.

To configure access to Google services using an Internet Service Group using the CLI:

1. Create a Service Group:

```
config firewall internet-service-group
    edit "Google_Group"
        set direction destination
        set member 65537 65538 65539 65540 65542 65543 65544 65545 65550 65536 65646
    next
end
```


2. Create a firewall policy to allow access to all Google Services from the PC:

```
config firewall policy
    edit 1
        set name "PC to Google"
        set srcintf "port2"
```


```
        set dstintf "port1"
        set srcaddr "PC"
        set internet-service enable
        set internet-service-group "Google_Group"
        set action accept
        set schedule "always"
        set fsso disable
        set nat enable
    next
end
```

To configure access to Google services using an Internet Service Group in the GUI:

1. On the FortiGate, create a Service Group using the CLI.
2. Go to *Policy & Objects* > *IPv4 Policy*, and create a new policy.
3. Set the *Destination* as the just created Internet Service Group.

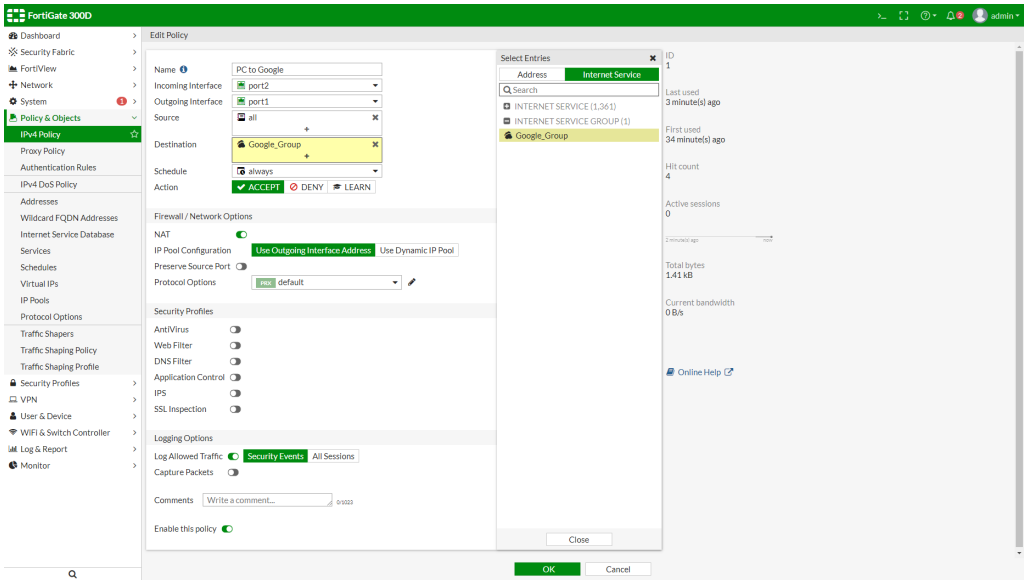

4. Configure the remaining options as shown, then click *OK*.
   On the policy page, hover over the group to view a list of its members.

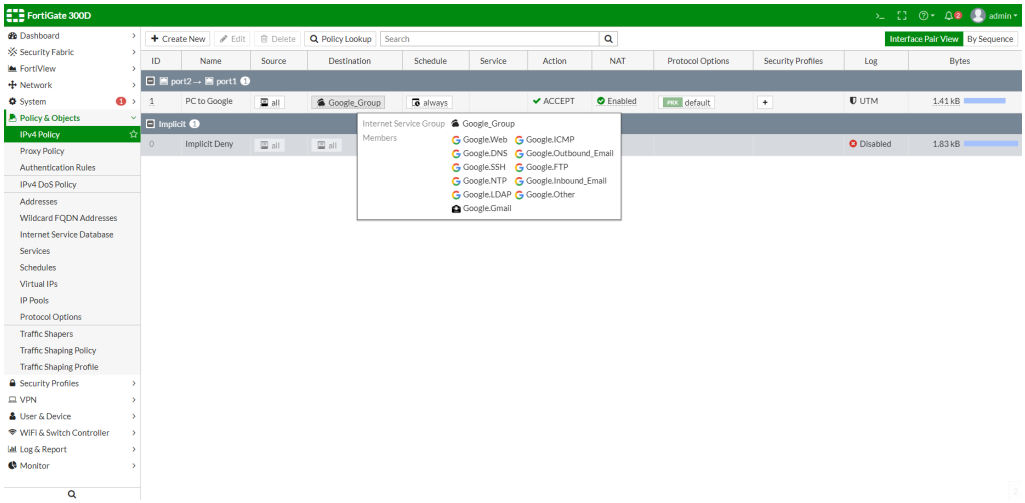

Example 2

In this example, two office FTP servers are put into an Internet Custom Service Group, and the PC connection to the FTP servers is limited to 1Mbps.

To put two FTP servers into a custom service group and limit the PC connection speed to them using the CLI:

1. Create custom internet services for the internal FTP servers:

```
config firewall internet-service-custom
    edit "FTP_PM"
        config entry
            edit 1
                config port-range
                    edit 1
                        set start-port 21
                        set end-port 21
                    next
                end
                set dst "PM_Server"
            next
        end
    next
    edit "FTP_QA"
        config entry
            edit 1
                config port-range
                    edit 1
                        set start-port 21
                        set end-port 21
                    next
                end
                set dst "QA_Server"
            next
        end
    next
end
```

2. Create a custom internet server group and add the just created custom internet services to it:

```
config firewall internet-service-custom-group
    edit "Internal_FTP"
        set member "FTP_QA" "FTP_PM"
    next
end
```

3. Create a traffic shaper to limit the maximum bandwidth:


```
config firewall shaper traffic-shaper
    edit "Internal_FTP_Limit_1Mbps"
        set guaranteed-bandwidth 500
        set maximum-bandwidth 1000
        set priority medium
    next
end
```

4. Create a firewall shaping policy to limit the speed from the PC to the internal FTP servers:

```
config firewall shaping-policy
    edit 1
        set name "For Internal FTP"
        set internet-service enable
        set internet-service-custom-group "Internal_FTP"
        set dstintf "port1"
        set traffic-shaper "Internal_FTP_Limit_1Mbps"
        set traffic-shaper-reverse "Internal_FTP_Limit_1Mbps"
        set srcaddr "PC"
    next
end
```

To put two FTP servers into a custom service group and limit the PC connection speed to the using the GUI:

1. Create custom internet services for the internal FTP servers using the CLI.
2. Create a custom internet server group and add the just created custom internet services to it using the CLI.
3. Create a traffic shaper to limit the maximum bandwidth:
   a. Go to *Policy & Objects* > *Traffic Shapers*, and click *Create New*.
   b. Enter a *Name* for the shaper, such as *Internal_FTP_Limit_1Mbps*.
   c. Set the *Traffic Priority* to *Medium*.
   d. Enable *Max Bandwidth* and set it to *1000*.
   e. Enable *Guaranteed Bandwidth* and set it to *500*.
   f. Click *OK*.
4. Create a firewall shaping policy to limit the speed from the PC to the internal FTP servers:
   a. Go to *Policy & Objects* > *Traffic Shaping Policy*, and click *Create New*.
   b. Set the *Destination* as the just created Custom Internet Service Group, and apply the just create traffic shaper.

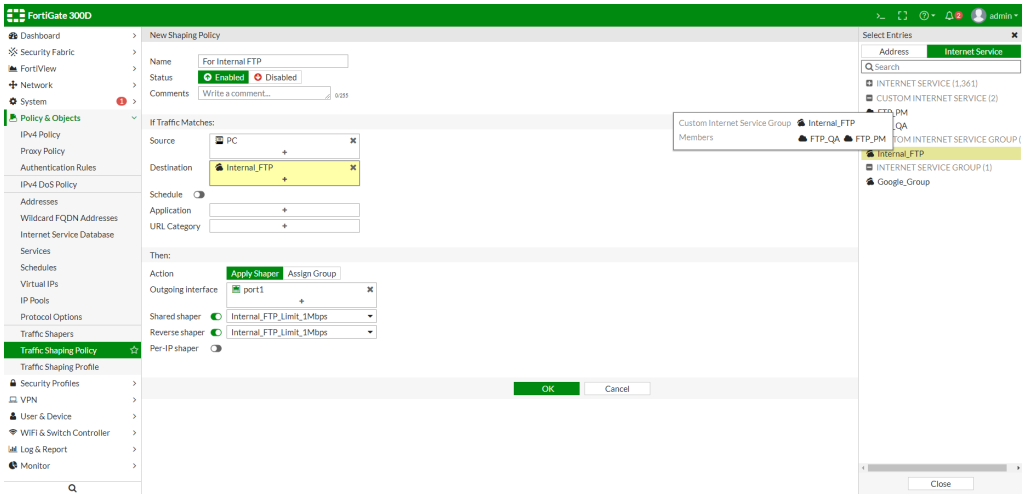

   c. Configure the remaining options as shown, then click *OK*.

Internet service customization

Internet Service Database (ISDB) entries can be tuned for their environments by adding custom ports and port ranges, as well as port mapping.

To add a custom port range:

```
config firewall internet-service-addition
    edit 65646
        set comment "Add custom port-range:tcp/8080-8090 into 65646"
        config entry
            edit 1
                set protocol 6
                config port-range
                    edit 1
                        set start-port 8080
                        set end-port 8090
                    next
                end
            next
        end
    next
end
Warning: Configuration will only be applied after rebooting or using the 'execute internet-
service refresh' command.
```

To verify that the change was applied:

```
 # diagnose internet-service info FG-traffic 6 8080 2.20.183.160
 Internet Service: 65646(Google.Gmail)
```

To configure additional port mapping:


```
config firewall internet-service-append
    set match-port 10
    set append-port 20
end
Warning: Configuration will only be applied after rebooting or using the 'execute internet-
service refresh' command.
```

NAT64 policy and DNS64 (DNS proxy)

NAT64 policy translates IPv6 addresses to IPv4 addresses so that a client on an IPv6 network can communicate transparently with a server on an IPv4 network.

NAT64 policy is usually implemented in combination with the DNS proxy called DNS64. DNS64 synthesizes AAAA records from A records and is used to synthesize IPv6 addresses for hosts that only have IPv4 addresses. DNS proxy and DNS64 are interchangeable terms.

Sample topology

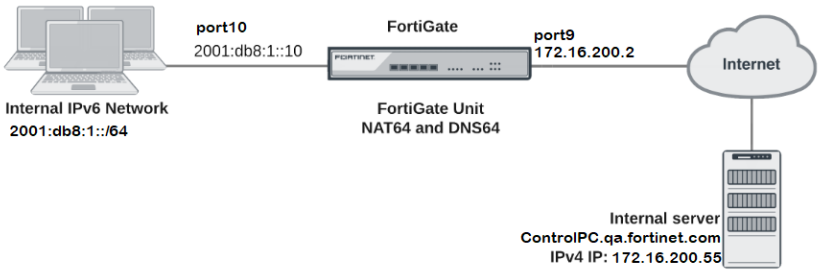

In this example, a host on the internal IPv6 network communicates with `ControlPC.qa.fortinet.com` that only has IPv4 address on the Internet.

1. The host on the internal network does a DNS lookup for `ControlPC.qa.fortinet.com` by sending a DNS query for an AAAA record for `ControlPC.qa.fortinet.com`.
2. The DNS query is intercepted by the FortiGate DNS proxy. The DNS proxy performs an A-record query for `ControlPC.qa.fortinet.com` and gets back an RRSet containing a single A record with the IPv4 address `172.16.200.55`.
3. The DNS proxy then synthesizes an AAAA record. The IPv6 address in the AAAA record begins with the configured NAT64 prefix in the upper 96 bits and the received IPv4 address in the lower 32 bits. By default, the resulting IPv6 address is `64:ff9b::172.16.200.55`.
4. The host on the internal network receives the synthetic AAAA record and sends a packet to the destination address `64:ff9b::172.16.200.55`.
5. The packet is routed to the FortiGate internal interface (port10) where it is accepted by the NAT64 security policy.
6. The FortiGate unit translates the destination address of the packets from IPv6 address `64:ff9b::172.16.200.55` to IPv4 address `172.16.200.55` and translates the source address of the packets to `172.16.200.200` (or another address in the IP pool range) and forwards the packets out the port9 interface to the Internet.

Sample configuration

To enable display for IPv6, NAT46/NAT64, and DNS Database using the GUI:

1. Go to *System* > *Feature Visibility*.
2. In the *Basic Features* section, enable *IPv6*.
3. In the *Additional Features* section, enable the following features:
   - *NAT46 & NAT64*
   - *DNS Database*
4. Click *Apply*.

To enable display for IPv6, NAT46/NAT64, and DNS Database using the CLI:

```
config system global
   set gui-ipv6 enable
end
config system settings
   set gui-nat46-64 enable
   set gui-dns-database enable
end
```

To enable DNS proxy on the IPv6 interface using the GUI:

1. Go to *Network* > *DNS Servers*.
2. In *DNS Service on Interface*, click *Create New*.
3. For *Interface*, select *port10*.
4. Click *OK*.

To enable DNS proxy on the IPv6 interface using the CLI:

```
config system dns-server
   edit "port10"
       set mode forward-only
   next
end
```

To configure IPv6 DHCP server using the CLI:

```
config system dhcp6 server
   edit 1
       set subnet 2001:db8:1::/64
       set interface "port10"
       config ip-range
           edit 1
               set start-ip 2001:db8:1::11
               set end-ip 2001:db8:1::20
           next
       end
       set dns-server1 2001:db8:1::10
   next
end
```

To enable NAT64 and related settings using the CLI:

Enabling NAT64 with the `config system nat64` command means that all IPv6 traffic received by the current VDOM can be subject to NAT64 if the source and destination address matches an NAT64 security policy.

By default, the setting `always-synthesize-aaaa-record` is enabled. If you disable this setting, the DNS proxy (DNS64) will attempt to find an AAAA records for queries to domain names and therefore resolve the host names to IPv6 addresses. If the DNS proxy cannot find an AAAA record, it synthesizes one by adding the NAT64 prefix to the A record.

`nat64-prefix` setting is the `nat64` prefix. By default, it is `64:ff9b::/96`.

```
config system nat64
   set status enable
end
```

To create NAT64 policy using the GUI:

1. Add an IPv4 firewall address for the external network.
   a. Go to *Policy & Object* > *Addresses*.
   b. Click *Create New*.
   c. For *Name*, enter *external-net4*.
   d. For *IP/Network*, enter *17216.200.0/24*.

e. For *Interface*, select *port9*.
f. Click *OK*.

2. Add an IPv6 firewall address for the internal network.
   a. Go to *Policy & Object* > *Addresses*.
   b. Click *Create New*.
   c. Change *Category* to *IPv6 Address*.
   d. For *Name*, enter *internal-net6*.
   e. For *IPv6 Address*, enter *2001:db8:1::/48*.
   f. Click *OK*.
3. Add an IP pool containing the IPv4 address that is used as the source address of the packets exiting port9.
   a. Go to *Policy & Object* > *IP Pools*.
   b. Click *Create New*.
   c. For *Name*, enter *exit-pool4*.
   d. For *External IP Range*, enter *172.16.200.200-172.16.200.210*.
   e. Click *OK*.
4. Add a NAT64 policy that allows connections from the internal IPv6 network to the external IPv4 network.
   a. Go to *Policy & Object* > *NAT64 Policy*.
   b. Click *Create New*.
   c. For *Incoming Interface*, select *port10*.
   d. For *Outgoing Interface*, select *port9*.
   e. For *Source Address*, select *internal-net6*.
   f. For *Destination Address*, select *external-net4*.
   g. Set *IP Pool Configuration* to *Use Dynamic IP Pool* and select the IP pool *exit-pool4*.
   h. Click *OK*.

To create NAT64 policy using the CLI:


```
config firewall address
    edit "external-net4"
        set associated-interface "port9"
        set subnet 172.16.200.0 255.255.255.0
    next
end
config firewall address6
    edit "internal-net6"
        set ip6 2001:db8:1::/48
    next
end
config firewall ippool
    edit "exit-pool4"
        set startip 172.16.200.200
        set endip 172.16.200.210
    next
end
config firewall policy64
    edit 1
        set srcintf "port10"
        set dstintf "port9"
        set srcaddr "internal-net6"
        set dstaddr "external-net4"
```

```
        set action accept
        set schedule "always"
        set service "ALL"
        set ippool enable
        set poolname "exit-pool4"
    next
end
```

NAT46 policy

NAT46 refers to the mechanism that allows IPv4 addressed hosts to communicate with IPv6 hosts. Without such a mechanism, IPv4 environments cannot connect to IPv6 networks.

Sample topology

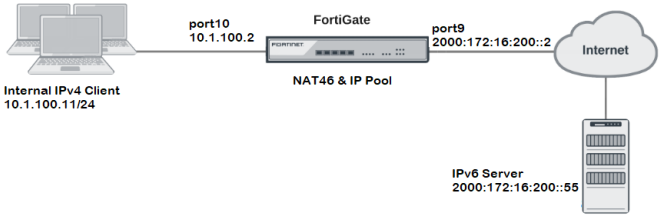

In this example, an IPv4 client tries to connect to an IPv6 server. A VIP is configured on FortiGate to map the server IPv6 IP address `2000:172:16:200:55` to an IPv4 address `10.1.100.55`. On the other side, an IPv6 IP pool is configured and the source address of packets from client are changed to the defined IPv6 address. In this setup, the client PC can access the server by using IP address `10.1.100.55`.

Sample configuration

To enable display for IPv6 and NAT46/NAT64 using the GUI:

1. Go to *System* > *Feature Visibility*.
2. In the *Basic Features* section, enable *IPv6*.
3. In the *Additional Features* section, enable *NAT46 & NAT64*.
4. Click *Apply*.

To enable display for IPv6 and NAT46/NAT64 using the CLI:

```
config system global
    set gui-ipv6 enable
end
config system settings
    set gui-nat46-64 enable
end
```

To configure VIP46 using the GUI:

1. Go to *Policy & Object* > *Virtual IPs*.
2. Click *Create New*.

3. For *Name*, enter *vip46_server*.
4. For *External IP Address/Range*, enter *10.1.100.55- 10.1.100.55*.
5. For *Mapped IP Address/Range*, enter *2000:172:16:200::55*.
6. Click *OK*.

To configure VIP46 using the CLI:

```
config firewall vip46
    edit "vip46_server"
        set extip 10.1.100.55
        set mappedip 2000:172:16:200::55
    next
end
```

To configure IPv6 IP pool using the GUI:

1. Go to *Policy & Object* > *IP Pools*.
2. Click *Create New*.
3. For *Name*, enter *client_expternal*.
4. For *External IP Range*, enter *2000:172:16:201::11- 2000:172:16:201::20*.
5. Click *OK*.

To configure IPv6 IP pool using the CLI:

```
config firewall ippool6
    edit "client_external"
        set startip 2000:172:16:201::11
        set endip 2000:172:16:201::20
    next
end
```

To enable NAT64 and configure address prefix using the CLI:

```
config system nat64
    set status enable
    set secondary-prefix-status enable
    config secondary-prefix
        edit "1"
            set nat64-prefix 2000:172:16:201::/96
        next
    end
end
```

To create NAT46 policy using the GUI:

1. Go to *Policy & Object* > *NAT46 Policy*.
2. Click *Create New*.
3. For *Incoming Interface*, select *port10*.
4. For *Outgoing Interface*, select *port9*.
5. For *Source Address*, select *all*.
6. For *Destination Address*, select *vip46_server*.

7. Set *IP Pool Configuration* to *Use Dynamic IP Pool* and select the IP pool *client_expernal*.
8. Click *OK*.

To create NAT46 policy using the CLI:

```
config firewall policy46
    edit 1
        set srcintf "port10"
        set dstintf "port9"
        set srcaddr "all"
        set dstaddr "vip46_server"
        set action accept
        set schedule "always"
        set service "ALL"
        set ippool enable
        set poolname "client_external"
    next
end
```

Sample troubleshooting

Example to trace flow to see the whole process.

```
# diagnose debug flow filter saddr 10.1.100.11
# diagnose debug flow show function-name enable
show function name
# diagnose debug flow show iprope enable
show trace messages about iprope
# diagnose debug flow trace start 5

id=20085 trace_id=1 func=print_pkt_detail line=5401 msg="vd-root:0 received a packet
(proto=1, 10.1.100.11:27592->10.1.100.55:2048) from port10. type=8, code=0, id=27592,
seq=1."
id=20085 trace_id=1 func=init_ip_session_common line=5561 msg="allocate a new session-
000003b9"
id=20085 trace_id=1 func=iprope_dnat_check line=4948 msg="in-[port10], out-[]"
id=20085 trace_id=1 func=iprope_dnat_tree_check line=822 msg="len=1"
id=20085 trace_id=1 func=__iprope_check_one_dnat_policy line=4822 msg="checking gnum-100000
policy-1"
id=20085 trace_id=1 func=get_vip46_addr line=998 msg="find DNAT46: IP-2000:172:16:200::55,
port-27592"
id=20085 trace_id=1 func=__iprope_check_one_dnat_policy line=4904 msg="matched policy-1,
act=accept, vip=1, flag=100, sflag=2000000"
id=20085 trace_id=1 func=iprope_dnat_check line=4961 msg="result: skb_flags-02000000, vid-1,
ret-matched, act-accept, flag-00000100"
id=20085 trace_id=1 func=fw_pre_route_handler line=183 msg="VIP-10.1.100.55:27592, outdev-
unkown"
id=20085 trace_id=1 func=__ip_session_run_tuple line=3220 msg="DNAT 10.1.100.55:8-
>10.1.100.55:27592"
id=20085 trace_id=1 func=vf_ip_route_input_common line=2594 msg="find a route: flag=80000000
gw-10.1.100.55 via root"
id=20085 trace_id=1 func=ip4_nat_af_input line=601 msg="nat64 ipv4 received a packet
proto=1"
id=20085 trace_id=1 func=__iprope_check line=2112 msg="gnum-100012, check-ffffffffa0024ebe"
id=20085 trace_id=1 func=__iprope_check_one_policy line=1873 msg="checked gnum-100012
```

```
policy-1, ret-matched, act-accept"
id=20085 trace_id=1 func=__iprope_user_identity_check line=1677 msg="ret-matched"
id=20085 trace_id=1 func=get_new_addr46 line=1047 msg="find SNAT46: IP-2000:172:16:201::13
(from IPPOOL), port-27592"
id=20085 trace_id=1 func=__iprope_check_one_policy line=2083 msg="policy-1 is matched, act-
accept"
id=20085 trace_id=1 func=__iprope_check line=2131 msg="gnum-100012 check result: ret-
matched, act-accept, flag-08050500, flag2-00200000"
id=20085 trace_id=1 func=iprope_policy_group_check line=4358 msg="after check: ret-matched,
act-accept, flag-08050500, flag2-00200000"
id=20085 trace_id=1 func=resolve_ip6_tuple line=4389 msg="allocate a new session-00000081"
```

Local-in policies

While security profiles control traffic flowing through the FortiGate, local-in policies control inbound traffic that is going to a FortiGate interface.

Administrative access traffic (HTTPS, PING, SSH, and others) can be controlled by allowing or denying the service in the interface settings. Trusted hosts can be configured under an administrator to restrict the hosts that can access the administrative service.

Local-in policies allow administrators to granularly define the source and destination addresses, interface, and services. Traffic destined for the FortiGate interface specified in the policy that meets the other criteria is subject to the policies action.

Local-in policies can be used to restrict administrative access or other services, such as VPN, that can be specified as services. You can define source addresses or address groups to restrict access from. For example, by using a geographic type address you can restrict a certain geographic set of IP addresses from accessing the FortiGate.

By default, no local-in policies are defined, so there are no restrictions on local-in traffic.



Local-in policies can only be created or edited in the CLI. You can view the existing local-in policies in the GUI by enabling it in *System > Feature Visibility* under the *Additional Features* section. This page does not list the custom local-in policies.

To configure a local-in policy using the CLI:

```
config firewall {local-in-policy | local-in-policy6}
    edit <policy_number>
        set intf <interface>
        set srcaddr <source_address> [source_address] ...
        set dstaddr <destination_address> [destination_address] ...
        set action {accept | deny}
        set service <service_name> [service_name] ...
        set schedule <schedule_name>
        set comments <string>
    next
end
```

For example, to prevent the source subnet 10.10.10.0/24 from pinging port1, but allow administrative access for PING on port1:

```
config firewall address
    edit "10.10.10.0"
```

```
        set subnet 10.10.10.0 255.255.255.0
    next
end

config firewall local-in-policy
    edit 1
        set intf "port1"
        set srcaddr "10.10.10.0"
        set dstaddr "all"
        set service "PING"
        set schedule "always"
    next
end
```

To test the configuration:

1. From the PC at 10.10.10.12, start a continuous ping to port1:

   ```
   ping 192.168.2.5 -t
   ```

2. On the FortiGate, enable debug flow:

   ```
   # diagnose debug flow filter addr 10.10.10.12
   # diagnose debug flow filter proto 1
   # diagnose debug enable
   # diagnose debug flow trace start 10
   ```

3. The output of the debug flow shows that traffic is dropped by local-in policy 1:

   ```
   # id=20085 trace_id=1 func=print_pkt_detail line=5746 msg="vd-root:0 received a packet
   (proto=1, 10.10.10.12:1->192.168.2.5:2048) from port1. type=8, code=0, id=1, seq=128."
   id=20085 trace_id=1 func=init_ip_session_common line=5918 msg="allocate a new session-
   0017c5ad"
   id=20085 trace_id=1 func=vf_ip_route_input_common line=2615 msg="find a route:
   flag=80000000 gw-192.168.2.5 via root"
   id=20085 trace_id=1 func=fw_local_in_handler line=474 msg="iprope_in_check() check
   failed on policy 1, drop"
   ```

Additional options

To disable or re-enable the local-in policy, use the `set status {enable | disable}` command.

To dedicate the interface as an HA management interface, use the `set ha-mgmt-intf-only enable` command.

DoS protection

A Denial of Service (DoS) policy examines network traffic arriving at a FortiGate interface for anomalous patterns, which usually indicates an attack.

A denial of service occurs when an attacking system starts an abnormally large number of sessions with a target system. The large number of sessions slows down or disables the target system, preventing legitimate users from using it.

DoS policies are checked before security policies, preventing attacks from triggering more resource intensive security protection and slowing down the FortiGate.

DoS anomalies

Predefined sensors are setup for specific anomalous traffic patterns. New DoS anomalies cannot be added by the user.

The predefined anomalies that can be used in DoS policies are:

Anomaly	Description	Recommended Threshold
tcp_syn_flood	If the SYN packet rate of new TCP connections, including retransmission, to one destination IP address exceeds the configured threshold value, the action is executed.	2000 packets per second.
tcp_port_scan	If the SYN packet rate of new TCP connections, including retransmission, from one source IP address exceeds the configured threshold value, the action is executed.	1000 packets per second.
tcp_src_session	If the number of concurrent TCP connections from one source IP address exceeds the configured threshold value, the action is executed.	5000 concurrent sessions.
tcp_dst_session	If the number of concurrent TCP connections to one destination IP address exceeds the configured threshold value, the action is executed.	5000 concurrent sessions.
udp_flood	If the UDP traffic to one destination IP address exceeds the configured threshold value, the action is executed.	2000 packets per second.
udp_scan	If the number of UDP sessions originating from one source IP address exceeds the configured threshold value, the action is executed.	2000 packets per second.
udp_src_session	If the number of concurrent UDP connections from one source IP address exceeds the configured threshold value, the action is executed.	5000 concurrent sessions.
udp_dst_session	If the number of concurrent UDP connections to one destination IP address exceeds the configured threshold value, the action is executed.	5000 concurrent sessions.
icmp_flood	If the number of ICMP packets sent to one destination IP address exceeds the configured threshold value, the action is executed.	250 packets per second.
icmp_sweep	If the number of ICMP packets originating from one source IP address exceeds the configured threshold value, the action is executed.	100 packets per second.
icmp_src_session	If the number of concurrent ICMP connections from one source IP address exceeds the configured threshold value, the action is executed.	300 concurrent sessions
icmp_dst_session	If the number of concurrent ICMP connections to one destination IP address exceeds the configured threshold value, the action is executed.	1000 concurrent sessions

Anomaly	Description	Recommended Threshold
ip_src_session	If the number of concurrent IP connections from one source IP address exceeds the configured threshold value, the action is executed.	5000 concurrent sessions.
ip_dst_session	If the number of concurrent IP connections to one destination IP address exceeds the configured threshold value, the action is executed.	5000 concurrent sessions.
sctp_flood	If the number of SCTP packets sent to one destination IP address exceeds the configured threshold value, the action is executed.	2000 packets per second
sctp_scan	If the number of SCTP sessions originating from one source IP address exceeds the configured threshold value, the action is executed.	1000 packets per second
sctp_src_session	If the number of concurrent SCTP connections from one source IP address exceeds the configured threshold value, the action is executed.	5000 concurrent sessions
sctp_dst_session	If the number of concurrent SCTP connections to one destination IP address exceeds the configured threshold value, the action is executed.	5000 concurrent sessions

For thresholds based on the number of concurrent sessions, blocking the anomaly will not allow more than the number of concurrent sessions to be set as the threshold.

For example, if the period for a particular anomaly is 60 seconds, such as those where the threshold is measured in concurrent sessions, after the 60 second timer has expired the number of allowed sessions that match the anomaly criteria is reset to zero. This means that, if you allow 10 sessions through before blocking, after the 60 seconds has elapsed, another 10 sessions will be allowed. The attrition of sessions from expiration should keep the allowed sessions from reaching the maximum.

For rate based thresholds, where the threshold is measured in packets per second, the *Block* action prevents anomalous traffic from overwhelming the firewall in two ways:

- continuous: Block packets once an anomaly is detected, and continue to block packets while the rate is above the threshold. This is the default setting.
- periodical: After an anomaly is detected, allow the configured number of packets per second.

For example, if a DoS policy is configured to block icmp_flood with a threshold of 10pps, and a continuous ping is started at a rate of 20pps for 1000 packets:

- In continuous mode, the first 10 packets are passed before the DoS sensor if triggered, and then the remaining 990 packets are blocked.
- In periodical mode, 10 packets are allowed to pass per second, so 500 packets are blocked in the 50 seconds during which the ping is occuring.



The actual numbers of passed and blocked packets may not be exact, as fluctuations in the rates can occur, but the numbers should be close to the defined threshold.

To configure the block action for rate based anomaly sensors:

```
config ips global
    set anomaly-mode {continuous | periodical}
end
```

DoS policies

A DoS policy can be configured to use one or more anomalies.

To configure a DoS policy in the GUI:

1. Go to *Policy & Objects* > *IPv4 DoS Policy* or *Policy & Objects* > *IPv6 DoS Policy* and click *Create New*.
   If the option is not visible, enable *DoS Policy* in *Feature Visibility*. See Feature visibility on page 716 for details.
2. Configure the following:

ID	Enter an ID number for the policy.
Incoming Interface	Enter the interface that the policy applies to.
Source Address	Enter the source address.
Destination Address	Enter the destination address. This is the address that the traffic is addressed to. In this case, it must be an address that is associated with the firewall interface. For example, it could be an interface address, a secondary IP address, or the address assigned to a VIP address.
Service	Select the services or service groups. The ALL service can used or, to optimize the firewall resources, only the services that will be answered on an interface can be used.
L3 Anomalies **L4 Anomalies**	Configure the anomalies: • *Logging*: Enable/disable logging for specific anomalies or all of them. Anomalous traffic will be logged when the action is *Block* or *Monitor*. • *Action*: Select the action to take when the threshold is reached: • *Disable*: Do not scan for the anomaly. • *Block*: Block the anomalous traffic. • *Monitor*: Allow the anomalous traffic, but record a log message if logging is enabled. • *Threshold*: The number of detected instances per minute that triggers the anomaly action.
Comments	Optionally, enter a comment.

3. Enable the policy, then click *OK*.



The quarantine option is only available in the CLI. See Quarantine on page 786 for information.

To configure a DoS policy in the GUI:

```
config firewall DoS-policy
    edit 1
        set interface "port1"
        set srcaddr "all"
        set dstaddr "all"
        set service "ALL"
        config anomaly
            edit "icmp_flood"
                set status enable
                set log enable
                set action block
                set quarantine attacker
                set quarantine-expiry 1d1h1m
                set quarantine-log enable
                set threshold 100
            next
        end
    next
end
```

`interface <string>`	Enter the interface that the policy applies to.
`srcaddr <string>`	Enter the source address.
`dstaddr <string>`	Enter the destination address. This is the address that the traffic is addressed to. In this case, it must be an address that is associated with the firewall interface. For example, it could be an interface address, a secondary IP address, or the address assigned to a VIP address.
`service <string>`	Enter the services or service groups. The `ALL` service can used or, to optimize the firewall resources, only the services that will be answered on an interface can be used.
`status {enable | disable}`	Enable/disable this anomaly.
`log {enable | disable}`	Enable/disable anomaly logging. When enabled, a log is generated whenever the anomaly action is triggered, regardless of which action is configured.
`action {pass | block}`	Set the action to take when the threshold is reached: • `pass`: Allow traffic, but record a log message if logging is enabled. • `block`: Block traffic if this anomaly is found.
`quarantine {none | attacker}`	Set the quarantine method (see Quarantine on page 786): • `none`: Disable quarantine. • `attacker`: Block all traffic from the attacker's IP address, and add the attacker's IP address to the banned user list.
`quarantine-expiry <###d##h##m>`	Set the duration of the quarantine, in days, hours, and minutes (###d##h##m) (1m - 364d23h59m, default = 5m). This option is available if `quarantine` is set `attacker`.

`quarantine-log {enable | disable}`	Enable/disable quarantine logging (default = disable). This option is available if `quarantine` is set `attacker`.
`threshold <integer>`	The number of detected instances per minute that triggers the anomaly action. The default value varies depending on the anomaly.

Quarantine

Quarantine is used to block any further traffic from a source IP address that is considered a malicious actor or a source of traffic that is dangerous to the network. Traffic from the source IP address is blocked for the duration of the quarantine, and the source IP address is added to the banned user list.


The banned user list is kept in the kernel, and used by Antivirus, Data Leak Prevention (DLP), DoS, and Intrusion Prevention System (IPS). Any policies that use any of these features will block traffic from the attacker's IP address.

To view the quarantined user list:

```
# diagnose user quarantine list
src-ip-addr       created                  expires                  cause
192.168.2.205     Wed Nov 25 12:47:54 2020 Wed Nov 25 12:57:54 2020 DOS
```

Troubleshooting DoS attacks

The best way to troubleshoot DoS attacks is with Anomaly logs and IPS anomaly debug messages.

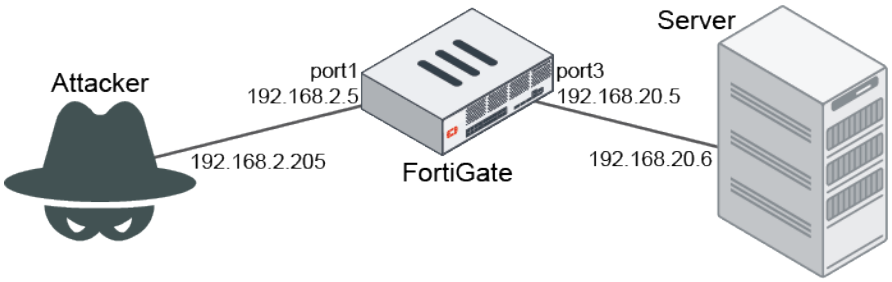

To test an icmp_flood attack:

1. From the Attacker, launch an icmp_flood with 50pps lasting for 3000 packets.
2. On the FortiGate, configure continuous mode and create a DoS policy with an icmp_flood threshold of 30pps:

```
config firewall DoS-policy
    edit 1
        set interface "port1"
        set srcaddr "all"
        set dstaddr "all"
        set service "ALL"
        config anomaly
            edit "icmp_flood"
                set status enable
                set log enable
                set action block
                set threshold 30
            next
```

```
        end
    next
end
```

3. Configure the debugging filter:

```
# diagnose ips anomaly config
DoS sensors in kernel vd 0:
DoS id 1 proxy 0
  0 tcp_syn_flood status 0 log 0 nac 0 action 0 threshold 2000
  ...
  7 udp_dst_session status 0 log 0 nac 0 action 0 threshold 5000
  8 icmp_flood status 1 log 1 nac 0 action 7 threshold 30
  9 icmp_sweep status 0 log 0 nac 0 action 0 threshold 100
  ...
total # DoS sensors: 1.
```

```
# diagnose ips anomaly filter id 8
```

4. Launch the icmp_flood from a Linux machine. This example uses Nmap:

```
$ sudo nping --icmp --rate 50 -c 3000 192.168.2.50
SENT (0.0522s) ICMP [192.168.2.205 > 192.168.2.50 Echo request (type=8/code=0) id=8597
seq=1] IP [ttl=64 id=47459 iplen=28 ]
...
Max rtt: 11.096ms | Min rtt: 0.028ms | Avg rtt: 1.665ms
Raw packets sent: 3000 (84.000KB) | Rcvd: 30 (840B) | Lost: 2970 (99.00%)
Nping done: 1 IP address pinged in 60.35 seconds
```

5. During the attack, check the anomaly list on the FortiGate:

```
# diagnose ips anomaly list
list nids meter:
id=icmp_flood         ip=192.168.2.50 dos_id=1 exp=998 pps=46 freq=50

total # of nids meters: 1.
```

id=icmp_flood	The anomaly name.
ip=192.168.2.50	The IP address of the host that triggered the anomaly. It can be either the client or the server. For icmp_flood, the IP address is the destination IP address. For icmp_sweep, it would be the source IP address.
dos_id=1	The DoS policy ID.
exp=998	The time to be expired, in jiffies (one jiffy = 0.01 seconds).
pps=46	The number of packets that had been received when the diagnose command was executed.
freq=50	For session based anomalies, freq is the number of sessions. For packet rate based anomalies (flood, scan): • In continuous mode: freq is the greater of pps, or the number of packets received in the last second. • In periodic mode: freq is the pps.

6. Go to *Log & Report* > *Anomaly* and download the logs:

```
date=2020-11-20 time=14:38:39 eventtime=1605911919824184594 tz="-0800"
logid="0720018433" type="utm" subtype="anomaly" eventtype="anomaly" level="alert"
vd="root" severity="critical" srcip=192.168.2.205 srccountry="Reserved"
dstip=192.168.2.50 srcintf="port1" srcintfrole="undefined" sessionid=0 action="clear_
session" proto=1 service="PING" count=1307 attack="icmp_flood" icmpid="0x2195"
icmptype="0x08" icmpcode="0x00" attackid=16777316 policyid=1 policytype="DoS-policy"
ref="http://www.fortinet.com/ids/VID16777316" msg="anomaly: icmp_flood, 31 > threshold
30, repeats 28 times" crscore=50 craction=4096 crlevel="critical"
```

```
date=2020-11-20 time=14:39:09 eventtime=1605911949826224056 tz="-0800"
logid="0720018433" type="utm" subtype="anomaly" eventtype="anomaly" level="alert"
vd="root" severity="critical" srcip=192.168.2.205 srccountry="Reserved"
dstip=192.168.2.50 srcintf="port1" srcintfrole="undefined" sessionid=0 action="clear_
session" proto=1 service="PING" count=1497 attack="icmp_flood" icmpid="0x2195"
icmptype="0x08" icmpcode="0x00" attackid=16777316 policyid=1 policytype="DoS-policy"
ref="http://www.fortinet.com/ids/VID16777316" msg="anomaly: icmp_flood, 50 > threshold
30, repeats 1497 times" crscore=50 craction=4096 crlevel="critical"
```

Analysis

In the first log message:

msg="anomaly: icmp_flood, 31 > threshold 30	At the beginning of the attack, a log is recorded when the threshold of 30pps is broken.
repeats 28 times	The number of packets that has exceeded the threshold since the last time a log was recorded.
srcip=192.168.2.205 **dstip=192.168.2.50**	The source and destination IP addresses of the attack.
action="clear_session"	Equivalent to block. If `action` was set to `monitor` and logging was enabled, this would be `action="detected"`.

In the second log message:

- Because it is an ongoing attack, the FortiGate generates one log message for multiple packets every 30 seconds..
- It will not generate a log message if:
  - The same attack ID happened more than once in a five second period, or
  - The same attack ID happened more than once in a 30 second period and the actions are the same and have the same source and destination IP addresses.

msg="anomaly: icmp_flood, 50 > threshold 30	In the second before the log was recorded, 50 packets were detected, exceeding the configured threshold.
repeats 1497 times	The number of packets that has exceeded the threshold since the last time a log was recorded

IPv4/IPv6 access control lists

An access control list (ACL) is a granular, targeted blocklist that is used to block IPv4 and IPv6 packets on a specified interface based on the criteria configured in the ACL policy.

On FortiGate models with ports that are connected through an internal switch fabric with TCAM capabilities, ACL processing is offloaded to the switch fabric and does not use CPU resources. VLAN interfaces that are based on physical switch fabric interfaces are also supported. Interfaces that are connected through an internal switch fabric usually have names prefixed with port or lan, such as port1 or lan2; other interfaces are not supported.

The packets will be processed by the CPU when offloading is disabled or not possible, such as when a port on a supported model does not connect to the internal fabric switch.

ACL is supported on the following FortiGate models:

- 100D, 100E, 100EF, 101E
- 140D, 140D-POE, 140E, 140E-POE
- 1200D, 1500D, 1500DT
- 3000D, 3100D, 3200D, 3700D, 3800D, 3810D, 3815D
- All 300E and larger E-series models
- All 100F and larger F-series models

Example

To block all IPv4 and IPv6 Telnet traffic from port2 to Company_Servers:

```
config firewall acl
    edit 1
       set interface "port2"
       set srcaddr "all"
       set dstaddr "Company_Servers"
       set service "TELNET"
    next
end
config firewall acl6
    edit 1
        set interface "port2"
        set srcaddr "all"
        set dstaddr "Company_Servers_v6"
        set service "TELNET"
    next
end
```

Diagnose commands

To check the number of packets drop by an ACL:

```
# diagnose firewall acl counter
ACL id 1 dropped 0 packets
```

```
# diagnose firewall acl counter6
ACL id 2 dropped 0 packets
```

To clear the packet drop counter:

```
# diagnose firewall acl clearcounter
# diagnose firewall acl clearcounter6
```


Mirroring SSL traffic in policies

You can configure the mirroring of SSL inspected traffic for IPv4 and IPv6 policies in the GUI.

SSL inspection is automatically enabled when you enable a security profile in the policy configuration page.

To configure mirroring of SSL traffic in a policy:

1. Go to *Policy & Objects* > *IPv4 Policy* or *IPv6 Policy*.
2. Create a new policy, or edit an existing one.
3. In the *Security Profiles* section, for *SSL Inspection*, select *deep-inspection*.
4. Enable *Mirror SSL Traffic to Interfaces*. The *SSL Mirror Terms of Use* agreement appears.
5. Click *Agree* to accept the terms.
6. Select an interface from the dropdown.

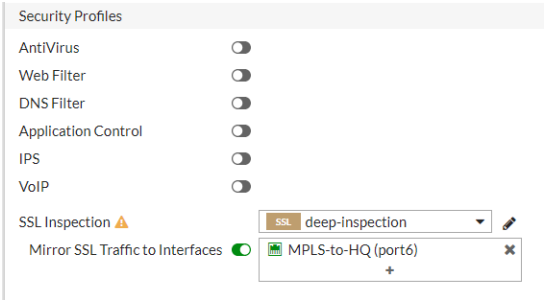

7. Click *OK* to save your changes.

Inspection mode per policy


Inspection mode is configured on a per-policy basis in NGFW mode. This gives you more flexibility when setting up different policies.

When configuring an IPv4 or IPv6 policy, you can select a *Flow-based* or *Proxy-basedInspection Mode*. The default setting is *Flow-based*.


To configure inspection mode in a policy:

1. Go to *Policy & Objects* > *IPv4 Policy* or *IPv6 Policy*.
2. Create a new policy, or edit an existing policy.


3. Configure the policy as needed.
   a. If you change the *Inspection Mode* to *Proxy-based*, the *Proxy HTTP(S) traffic* option displays.

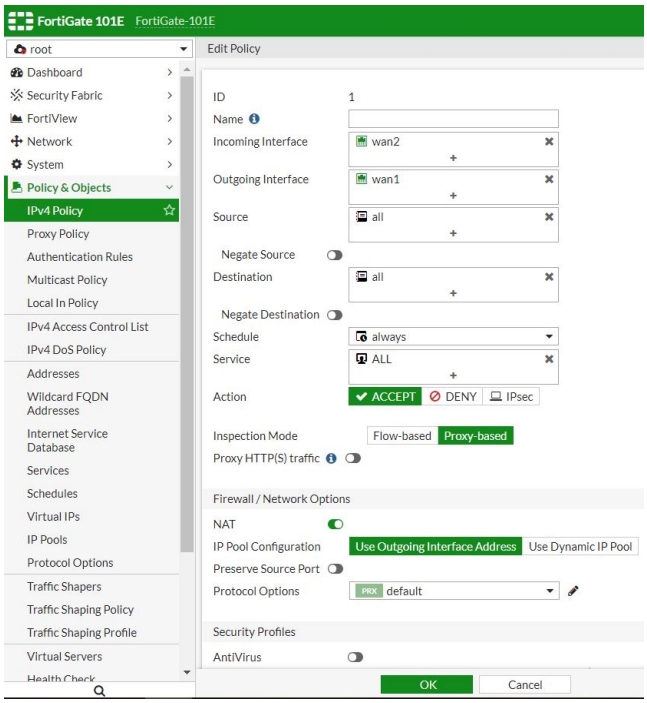

   b. In the *Security Profiles* section, if no security profiles are enabled, the default *SSL Inspection* is *no-inspection*.

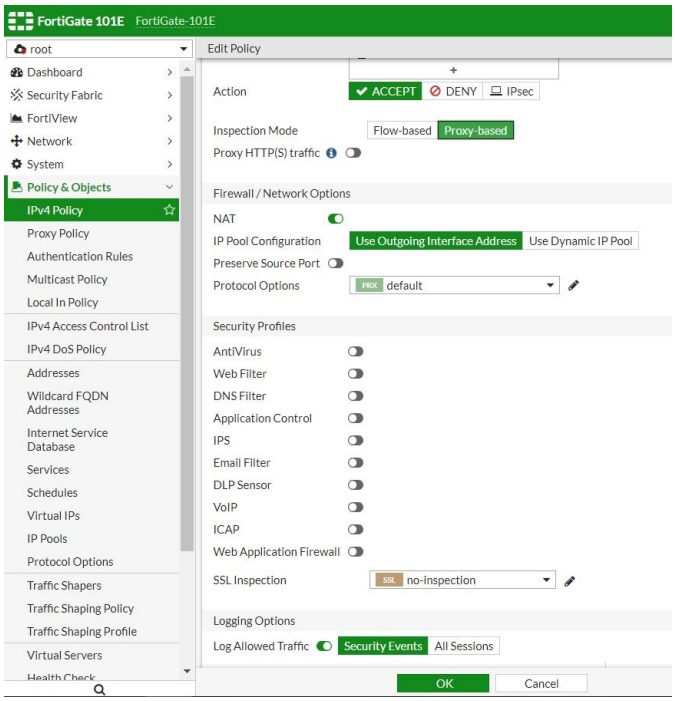

   c. In the *Security Profiles* section, if you enable any security profile, the *SSL Inspection* changes to *certificate-inspection*.

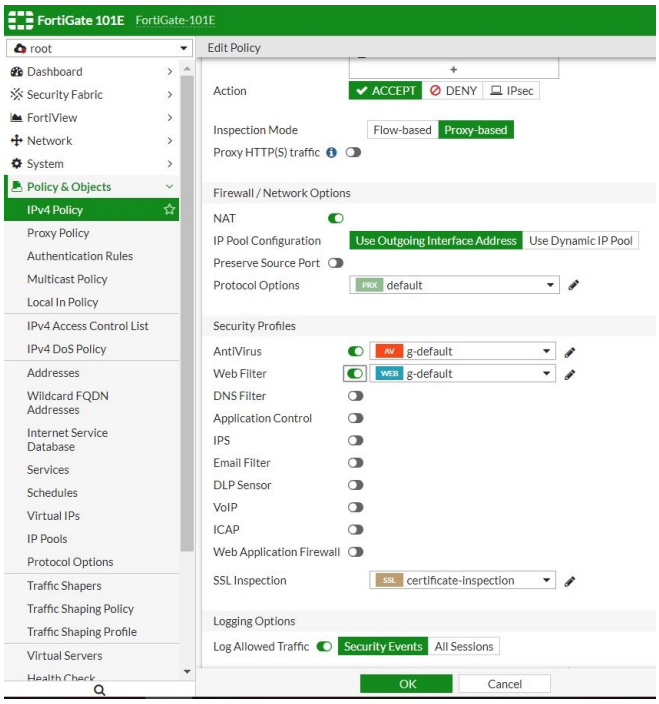

To see the inspection mode changes using the CLI:

```
config firewall policy
    edit 1
        set uuid 05d88354-4817-51e9-7494-06cb70accbf0
        set srcintf "wan2"
        set dstintf "wan1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set inspection-mode proxy
        set nat enable
    next
end
```

To see the HTTP and SSH policy redirect settings when inspection mode is set to proxy using the CLI:

```
config firewall policy
    edit 1
        set uuid 05d88354-4817-51e9-7494-06cb70accbf0
        set srcintf "wan2"
        set dstintf "wan1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set inspection-mode proxy
```

```
        set http-policy-redirect enable
        set ssh-policy-redirect enable
        set nat enable
    next
end
```


To see the default SSL-SSH policy set to no inspection using the CLI:

```
config firewall policy
    edit 1
       show fu | grep ssl-ssh-profile
        set ssl-ssh-profile "no-inspection"
    next
end
```

Combined IPv4 and IPv6 policy

In consolidated policy mode, IPv4 and IPv6 policies are combined into a single policy instead of defining separate policies.

There is a single policy table for the GUI. The same source interface, destination interface, service, user, and schedule are shared for IPv4 and IPv6, while there are different IP addresses and IP pool settings.

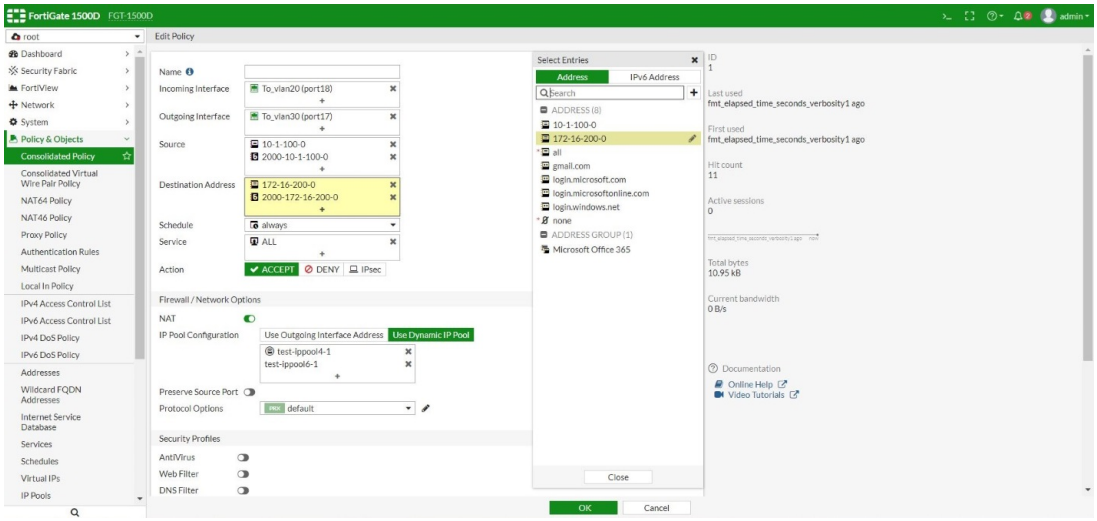

To enable consolidated policy mode using the CLI:



Enabling consolidated policy mode will delete all existing IPv4 and IPv6 policies.

```
  config system settings
     set consolidated-firewall-mode enable
        Enabling consolidated-firewall-mode will delete all firewall policy/policy6. Do you
             want to continue? (y/n) y
  end
```

To configure a consolidated policy using the CLI:

```
config firewall consolidated policy
   edit 1
      set uuid 754a86b6-2507-51e9-ef0d-13a6e4bf2e9d
      set srcintf "port18"
      set dstintf "port17"
      set srcaddr4 "10-1-100-0" <-------- IPv4 srcaddr
      set dstaddr4 "172-16-200-0" <-------- IPv4 dstaddr
      set srcaddr6 "2000-10-1-100-0" <-------- IPv6 srcaddr
      set dstaddr6 "2000-172-16-200-0" <-------- IPv6 dstaddr
      set action accept
      set schedule "always"
      set service "ALL"
      set logtraffic all
      set ippool enable
      set poolname4 "test-ippool4-1" <-------- IPv4 poolname
      set poolname6 "test-ippool6-1" <-------- IPv6 poolname
      set nat enable
   next
end
```

Limitations


The following features are not currently supported by consolidated policy mode:

- *Internet Services* entries
- `address-negate` and `service-negate`
- DSCP and ToS matching
- Traffic shapers
- Packet capture
- External IP lists
- `schedule-timeout`, `block-notification`, `disclaimer`, `custom-log-fields`, or `reputation`
- `timeout-send-rst`, `tcp-session-without-syn`, or `anti-replay`
- *Interface Pair View* function in the pane toolbar
- *Policy Lookup* function in the pane toolbar

The `session/iprope` tables for IPv4 and IPv6 still display separately.

FortiGuard DNS filter for IPv6 policies

You can add DNS filter profile inspection to IPv6 policies. This includes FortiGuard DNS filtering (with a web filtering license) and portal replacement message redirect.

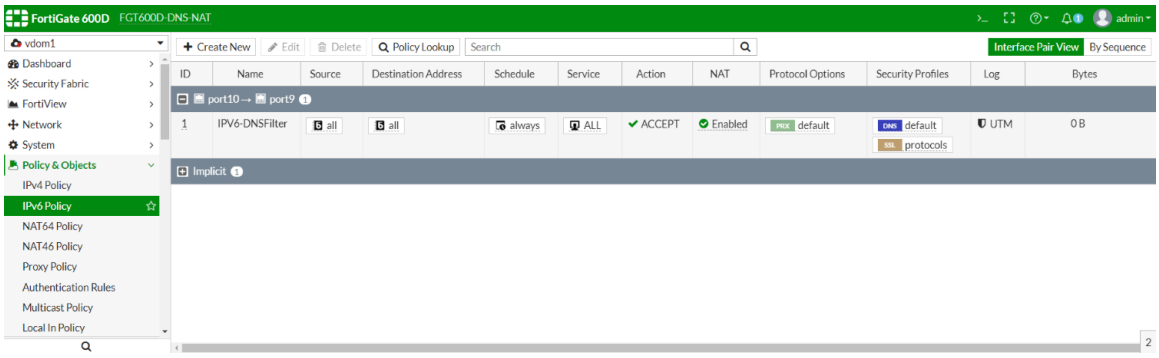

To apply a DNS filter profile to an IPv6 policy using the CLI:

```
config firewall policy6
   edit 1
      set name "IPV6-DNSFilter"
      set uuid b1adb096-1919-51e9-05c7-87813d4e2b2a
      set srcintf "port10"
      set dstintf "port9"
      set srcaddr "all"
      set dstaddr "all"
      set action accept
      set schedule "always"
      set service "ALL"
      set utm-status enable
      set dnsfilter-profile "default"
      set ssl-ssh-profile "protocols"
      set nat enable
   next
end
```

A new CLI variable is added to the DNS filter profile for the IPv6 address of the SDNS redirect portal, `redirect-portal6`:

```
config dnsfilter profile
   edit "default"
      set comment "Default dns filtering."
      config domain-filter
         unset domain-filter-table
      end
      config ftgd-dns
         unset options
         config filters
            edit 1
               set category 2
               set action monitor
            next
            edit 2
               set category 7
               set action monitor
            next
         ......
      end
      set log-all-domain disable
      set sdns-ftgd-err-log enable
      set sdns-domain-log enable
```

```
        set block-action redirect
        set block-botnet enable
        set safe-search disable
        set redirect-portal 0.0.0.0
        set redirect-portal6 ::
      next
   end
```

After the FortiGate successfully initializes communication with the SDNS server (for the domain rating service), the following CLI command shows the default redirect portal IPv6 address:

```
(global) # diagnose test application dnsproxy 3
  ......
  FGD_REDIR_V4:208.91.112.55 FGD_REDIR_V6:[2001:cdba::3257:9652]
```

OSPFv3 neighbor authentication

OSPFv3 neighbor authentication is available for enhanced IPv6 security.

To configure an OSPF6 interface:

```
config router ospf6
    config ospf6-interface
        edit <name>
            set authentication {none | ah | esp | area}
            set key-rollover-interval <integer>
            set ipsec-auth-alg {md5 | sha1 | sha256 | sha384 | sha512}
            set ipsec-enc-alg {null | des | 3des | aes128 | aes192 | aes256}
            config ipsec-keys
                edit <spi>
                    set auth-key <string>
                    set enc-key <string>
                next
            end
        next
    end
end
```

To configure an OSPF6 virtual link:

```
config router ospf6
    config area
        edit <id>
            config virtual-link
                edit <name>
                    set authentication {none | ah | esp | area}
                    set key-rollover-interval <integer>
                    set ipsec-auth-alg {md5 | sha1 | sha256 | sha384 | sha512}
                    set ipsec-enc-alg {null | des | 3des | aes128 | aes192 | aes256}
                    config ipsec-keys
                        edit <spi>
                            set auth-key <string>
                            set enc-key <string>
                        next
                    end
```

```
                next
            end
        next
    end
end
```

To configure an OSPF6 area:

```
config router ospf6
    config area
        edit <id>
            set authentication {none | ah | esp}
            set key-rollover-interval <integer>
            set ipsec-auth-alg {md5 | sha1 | sha256 | sha384 | sha512}
            set ipsec-enc-alg {null | des | 3des | aes128 | aes192 | aes256}
            config ipsec-keys
                edit <spi>
                    set auth-key <string>
                    set enc-key <string>
                next
            end
        next
    end
end
```

CLI command descriptions

Command	Description
<id>	Area entry IP address.
authentication {none | ah | esp | area}	Authentication mode: • `none`: Disable authentication • `ah`: Authentication Header • `esp`: Encapsulating Security Payload • `area`: Use the routing area authentication configuration
key-rollover-interval <integer>	Enter an integer value (300 - 216000, default = 300).
ipsec-auth-alg {md5 | sha1 | sha256 | sha384 | sha512}	Authentication algorithm.
ipsec-enc-alg {null | des | 3des | aes128 | aes192 | aes256}	Encryption algorithm.
<spi>	Security Parameters Index.
auth-key <string>	Authentication key should be hexadecimal numbers. Key length for each algorithm: • MD5: 16 bytes • SHA1: 20 bytes • SHA256: 32 bytes • SHA384:48 bytes • SHA512:84 bytes

Command	Description
	If the key is shorter than the required length, it will be padded with zeroes.
enc-key <string>	Encryption key should be hexadecimal numbers. Key length for each algorithm: • DES: 8 bytes • 3DES: 24 bytes • AES128: 16 bytes • AES192: 24 bytes • AES256: 32 bytes If the key is shorter than the required length, it will be padded with zeroes.

Firewall anti-replay option per policy

When the global anti-replay option is disabled, the FortiGate does not check TCP flags in packets. The per policy anti-replay option overrides the global setting. This allows you to control whether or not TCP flags are checked per policy.

To enable the anti-replay option so TCP flags are checked using the CLI:

```
config firewall policy
   edit 1
      set name "policyid-1"
      set uuid dfcaec9c-e925-51e8-cf3e-fed9a1d42a1c
      set srcintf "wan2"
      set dstintf "wan1"
      set srcaddr "all"
      set dstaddr "all"
      set action accept
      set schedule "always"
      set service "ALL"
      set anti-replay enable
      set logtraffic all
      set nat enable
   next
end
```


Enabling advanced policy options in the GUI

Advanced policy options can be enabled so you can configure the options in the GUI.

To enable advanced policy options:

```
config system settings
    set gui-advanced-policy enable
end
```


Advanced policy options are now available when creating or editing a policy in the GUI:

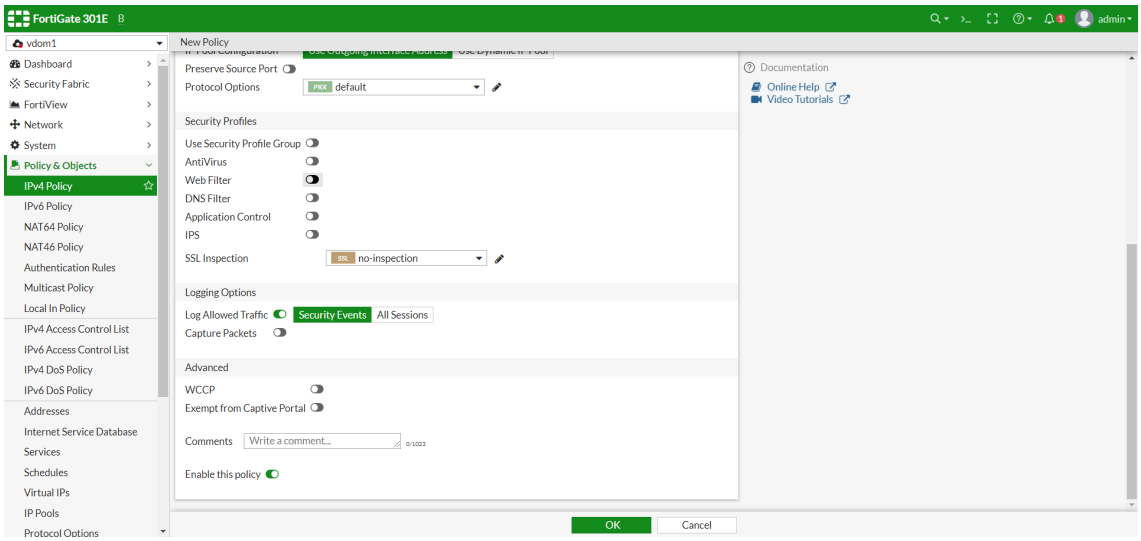

To enable configuring TCP sessions without SYN:

```
config system settings
    set tcp-session-without-syn enable
end
```

TCP sessions without SYN can now be configured when creating or editing a policy in the GUI:

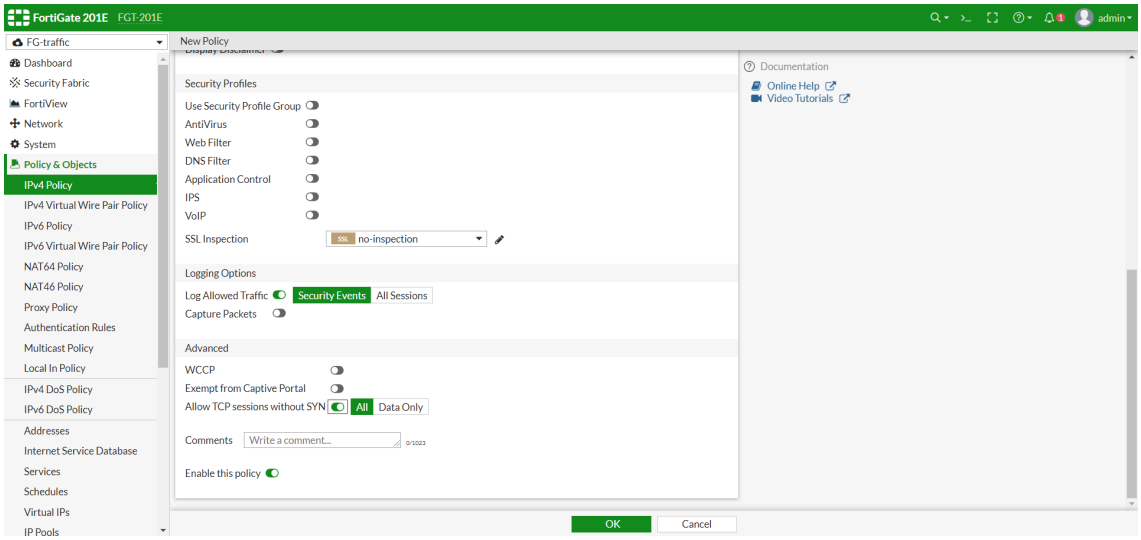

Recognize anycast addresses in geo-IP blocking

An anycast IP can be advertised from multiple locations and the router selects a path based on latency, distance, cost, number of hops, and so on. This technique is widely used by providers to route users to the closest server. Since the IP is hosted in multiple geographic locations, there is no way to specify one single location to that IP.

In FortiOS 6.2.6, there is an option to bypass anycast IP ranges in geo-IP blocking. The ISDB contains a list of confirmed anycast IP ranges that can be used for this purpose.

When the source or destination is set to `geoip`, you can enable the `geoip-anycast` option. Once enabled, IPs where the anycast option is set to `1` in `geoip_db` are bypassed in country matching and blocking.



You can only use the CLI to configure this feature.

To enable the geoip-anycast option using the CLI:

```
config firewall policy
   edit 1
      set name "policyid-1"
      set uuid dfcaec9c-e925-51e8-cf3e-fed9a1d42a1c
      set srcintf "wan2"
      set dstintf "wan1"
      set srcaddr "all"
      set dstaddr "test-geoip-CA_1"
      set action accept
      set schedule "always"
      set service "ALL"
      set geoip-anycast enable
      set logtraffic all
      set nat enable
   next
end
```

To check the geoip-anycast option for an IP address using the CLI:

```
diagnose geoip ip2country 1.0.0.1
   1.0.0.1 - Australia, is anycast ip
```

The anycast IP is `1.0.0.1`.

Authentication policy extensions

By default, unauthenticated traffic is permitted to fall to the next policy. This means that unauthenticated users are only forced to authenticate against a policy when there are no other matching policies. To avoid this, you can force authentication to always take place.

To set that authentication requirement:

```
config user setting
    set auth-on-demand {always | implicitly}
end
```

Where:

`always`	Always trigger firewall authentication on demand.
`implicitly` (default)	Implicitly trigger firewall authentication on demand. This is the default setting (and the behavior in FortiOS 6.0 and earlier).

In the following example, authentication is required; traffic that would otherwise be allowed by the second policy is instead blocked by the first policy.

To use forced authentication:

```
config user setting
    set auth-on-demand always
end
config firewall policy
    edit 1
        set name "QA to Database"
        set srcintf "port10"
        set dstintf "port9"
        set srcaddr "QA_subnet"
        set dstaddr "Database"
        set action accept
        set schedule "always"
        set service "ALL"
        set fsso disable
        set groups "qa_group"
        set nat enable
    next
    edit 2
        set name "QA to Internet"
        set srcintf "port10"
        set dstintf "port9"
        set srcaddr "QA_subnet"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set fsso disable
        set nat enable
    next
end
```

NTLM extensions

In FortiOS, agentless Windows NT LAN Manager (NTLM) authentication includes support for the following items:

- Multiple servers
- Individual users

You can use multiple domain controller servers for the agentless NTLM. They can be used for load balancing and high service stability.

You can also use user-based matching in groups for Kerberos and agentless NTLM. In these scenarios, FortiOS matches the user's group information from an LDAP server.

To support multiple domain controllers for agentless NTLM using the CLI:

1. Configure an LDAP server:
```
config user ldap
  edit "ldap-kerberos"
```

```
      set server "172.18.62.177"
      set cnid "cn"
      set dn "dc=fortinetqa,dc=local"
      set type regular
      set username "CN=root,CN=Users,DC=fortinetqa,DC=local"
      set password **********
   next
end
```

2. Configure multiple domain controllers:

```
config user domain-controller
   edit "dc1"
      set ip-address 172.18.62.177
      config extra-server
         edit 1
            set ip-address 172.18.62.220
         next
      end
      set ldap-server "ldap-kerberos"
   next
end
```

3. Create an authentication scheme and rule:

```
config authentication scheme
   edit "au-ntlm"
      set method ntlm
      set domain-controller "dc1"
   next
end
config authentication rule
   edit "ru-ntlm"
      set srcaddr "all"
      set ip-based disable
      set active-auth-method "au-ntlm"
   next
end
```

4. In the proxy policy, append the user group for authorization:

```
config firewall proxy-policy
   edit 1
      set uuid 6cfe58e4-2ff1-51e9-6b4c-a7d4a8db0f30
      set proxy explicit-web
      set dstintf "port1"
      set srcaddr "all"
      set dstaddr "all"
      set service "web"
      set action accept
      set schedule "always"
      set groups "ldap-group"
      set utm-status enable
      set av-profile "av"
      set ssl-ssh-profile "deep-custom"
   next
end
```

This configuration uses a round-robin method. When the first user logs in, the FortiGate sends the authentication request to the first domain controller. Later when another user logs in, the FortiGate sends the authentication request to another domain controller.

5. Verify the behavior after the user successfully logs in:

```
# diagnose wad user list
ID: 1825, IP: 10.1.100.71, VDOM: vdom1
   user name : test1
   duration : 497
   auth_type : Session
   auth_method : NTLM
   pol_id : 1 g_id : 5
   user_based : 0 e
   xpire : 103
   LAN:
      bytes_in=2167 bytes_out=7657
   WAN:
      bytes_in=3718 bytes_out=270
```

To support individual users for agentless NTLM using the CLI:

1. Configure an LDAP server:

```
config user ldap
   edit "ldap-kerberos"
      set server "172.18.62.177"
      set cnid "cn"
      set dn "dc=fortinetqa,dc=local"
      set type regular
      set username "CN=root,CN=Users,DC=fortinetqa,DC=local"
      set password **********
   next
end
```

2. Configure the user group and allow user-based matching:

```
config user group
   edit "ldap-group"
      set member "ldap" "ldap-kerberos"
      config match
         edit 1
            set server-name "ldap-kerberos"
            set group-name "test1"
         next
      end
   next
end
```

3. Create an authentication scheme and rule:

```
config authentication scheme
   edit "au-ntlm"
      set method ntlm
      set domain-controller "dc1"
   next
end
config authentication rule
   edit "ru-ntlm"
      set srcaddr "all"
      set ip-based disable
      set active-auth-method "au-ntlm"
   next
end
```

4. In the proxy policy, append the user group for authorization:

```
config firewall proxy-policy
```

```
    edit 1
       set uuid 6cfe58e4-2ff1-51e9-6b4c-a7d4a8db0f30
       set proxy explicit-web
       set dstintf "port1"
       set srcaddr "all"
       set dstaddr "all"
       set service "web"
       set action accept
       set schedule "always"
       set groups "ldap-group"
       set utm-status enable
       set av-profile "av"
       set ssl-ssh-profile "deep-custom"
    next
end
```

This implementation lets you configure a single user instead of a whole group. The FortiGate will now allow the user named `test1`.

To verify the configuration using the CLI:

```
diagnose wad user list
   ID: 1827, IP: 10.1.15.25, VDOM: vdom1
   user name : test1
   duration : 161
   auth_type : Session
   auth_method : NTLM
   pol_id : 1
   g_id : 5
   user_based : 0
   expire : 439
   LAN:
      bytes_in=1309 bytes_out=4410
   WAN:
      bytes_in=2145 bytes_out=544
```

HTTP to HTTPS redirect for load balancing

Starting with FortiOS 6.2.1, you can configure a virtual server with HTTP to HTTPS redirect enabled. When enabled, a virtual server can convert a client's HTTP requests to HTTPS requests. Through this mandatory conversion, HTTP traffic is converted to HTTPS traffic. This conversion improves the security of the user network.

You can only enable this feature by using the CLI. After you enable this feature, traffic flows as follows:

- When FortiGate receives an HTTP request for an external IP, such as 10.1.100.201 in the following example, FortiGate sends an HTTP 303 response back to the original client and redirects HTTP to HTTPS, instead of forwarding the HTTP request to the real backend servers.
- The client browser restarts the TCP session to HTTPS.
- The HTTPS session comes to the FortiGate where a matching IPv4 policy allows the HTTPS traffic and establishes a secure SSL connection, and then forwards the request to the real backend servers.

To configure virtual server with HTTPS redirect enabled:

1. Create a virtual server with `server-type` set to `http`:
   `config firewall vip`

```
    edit "virtual-server-http"
       set type server-load-balance
       set extip 10.1.100.201
       set extintf "wan2"
       set server-type http
       set ldb-method round-robin
       set extport 80
       config realservers
          edit 1
             set ip 172.16.200.44
             set port 80
          next
          edit 2
             set ip 172.16.200.55
             set port 80
          next
       end
    next
end
```

2. Create a virtual server with `server-type` set to `https` and with the same external IP address:

```
config firewall vip
   edit "virtual-server-https"
      set type server-load-balance
      set extip 10.1.100.201
      set extintf "wan2"
      set server-type https
      set ldb-method round-robin
      set extport 443
         config realservers
            edit 1 set ip 172.16.200.44
            set port 443
         next
         edit 2
            set ip 172.16.200.55
            set port 443
         next
      end
      set ssl-certificate "Fortinet_CA_SSL"
   next
end
```

3. Enable the `http-redirect` option for the virtual server with `server-type` set to `http`:

```
config firewall vip
   edit "virtual-server-http"
      set http-redirect enable
   next
end
```

4. Add the two virtual servers to a policy:

```
config firewall policy
   edit 9
      set srcintf "wan2"
      set dstintf "wan1"
      set srcaddr "all"
      set dstaddr "virtual-server-http" "virtual-server-https"
      set action accept
      set schedule "always"
      set service "ALL"
```

```
        set inspection-mode proxy set logtraffic all
        set auto-asic-offload disable
        set nat enable
      next
    end
```

GTPv2 in policies

You can use GTPv2 in the policy section of a GTP profile.

GTPv2 is only available for the following advanced fields:

- `apnmember`
- `apn-sel-mode`
- `messages`
- `max-apn-restriction`
- `imsi-prefix`
- `msisdn-prefix`
- `rat-type`
- `mei`
- `uli`

GTPv2 support includes the following changes for overall GTP support:

- `rai` is no longer supported in any GTP version.
- `uli` can coexist with CGI, SAI, RAI, TAI, ECGI, or LAI, each of which has the pattern MCC.MNC.ID or MCC.MNC.ID.ID2.
- `mei` can take IMEI (15 digits) or IMEISV (16 digits).

To configure a new GTPv2 policy:

```
config firewall gtp
    edit "gtpv2"
        config policy-v2
            edit 1
                set messages create-ses-req
            next
        end
    next
end
```

To configure the new ULI format:

This example matches packets with TAI 510-519.01-09.d02a and ECGI 505.02.1409900-14099ff.

```
config firewall gtp
    edit "gtpv2"
        config policy-v2
            edit 1
                set messages create-ses-req
                set uli "0" "0" "0" "51*.01-09.d02a" "505.02.14099*"
            next
        end
```

```
    next
end
```

To configure the GTPv2 message type:

```
config firewall gtp
    edit "gtpv2"
        config policy-v2
            edit 1
                set messages create-ses-req create-ses-res modify-bearer-req modify-bearer-
res
            next
        end
    next
end
```

To configure the RAT type:

This example includes virtual and NB-IoT types.

```
config firewall gtp
    edit "gtpv2"
        config policy-v2
            edit 1
                set messages create-ses-req
                set rat-type virtual nbiot
            next
        end
    next
end
```

Use active directory objects directly in policies

Active Directory (AD) groups can be used directly in identity-based firewall policies. You do not need to add remote AD groups to local FSSO groups before using them in policies.


FortiGate administrators can define how often group information is updated from AD LDAP servers.

To retrieve and use AD user groups in policies:

1. Set the FSSO Collector Agent AD access mode on page 807
2. Add an LDAP server on page 808
3. Create the FSSO collector that updates the AD user groups list on page 809
4. Use the AD user groups in a policy on page 810

Set the FSSO Collector Agent AD access mode


To use this feature, you must set FSSO Collector Agent to *Advanced* AD access mode. If the FSSO Collector Agent is running in the default mode, FortiGate cannot correctly match user group memberships.

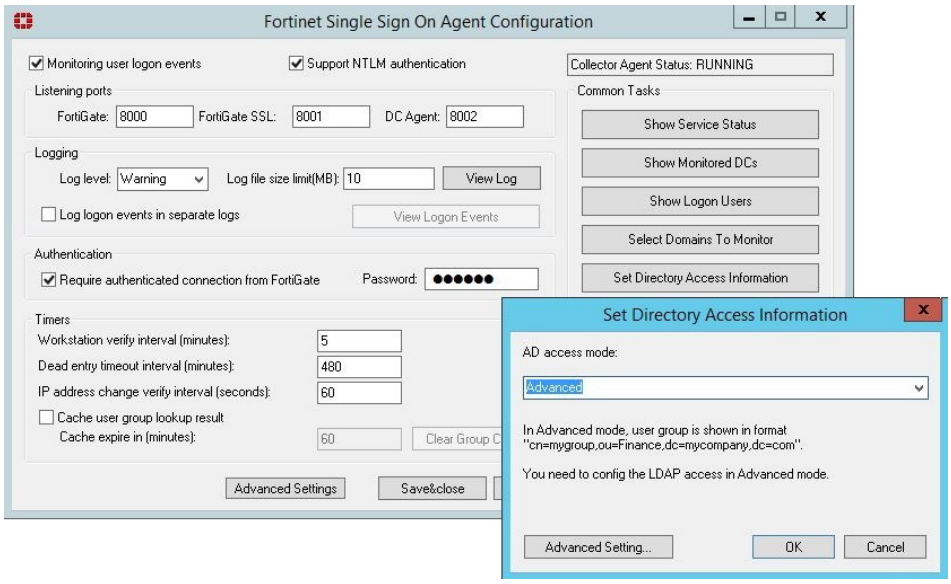

Add an LDAP server

To add an LDAP server in the GUI:

1. Go to *User & Device* > *LDAP Servers*.
2. Click *Create New*.
3. Configure the settings as needed.

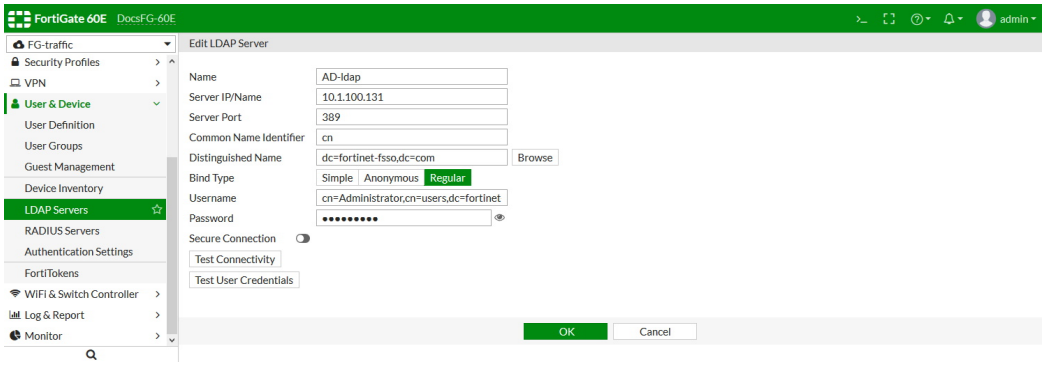

4. If secure communication over TLS is supported by the remote AD LDAP server:
   a. Enable *Secure Connection* .
   b. Select the protocol.
   c. Select the certificate from the CA that issued the AD LDAP server certificate.
      If the protocol is LDAPS, the port will automatically change to 636.
5. Click *OK*.

To add an LDAP server in the CLI:


```
config user ldap
    edit "AD-ldap"
        set server "10.1.100.131"
        set cnid "cn"
```

```
        set dn "dc=fortinet-fsso,dc=com"
        set type regular
        set username "cn=Administrator,cn=users,dc=fortinet-fsso,dc=com"
        set password XXXXXXXXXXXXXXXXXXXXXXXX
    next
end
```

Create the FSSO collector that updates the AD user groups list


To create an FSSO agent connector in the GUI:

1. Go to *Security Fabric* > *Fabric Connectors*.
2. Click *Create New*.
3. In the *SSO/Identity* section, click *Fortinet Single Sign-On Agent*.
4. Fill in the *Name*
5. Set the *Primary FSSO Agent* to the IP address of the FSSO Collector Agent, and enter its password.
6. Set the *User Group Source* to *Local*.
7. Set the *LDAP Server* to the just created *AD-ldap* server.
8. Enable *Proactively Retrieve from LDAP Server*.
9. Set the *Search Filter* to *(&(objectClass=group)(cn=group*))*.
   The default search filter retrieves all groups, including Microsoft system groups. In this example, the filter is configured to retrieve *group1*, *group2*, etc, and not groups like *grp199*.
   The filter syntax is not automatically checked; if it is incorrect, the FortiGate might not retrieve any groups.
10. Set the *Interval (minutes)* to configure how often the FortiGate contacts the remote AD LDAP server to update the group information.

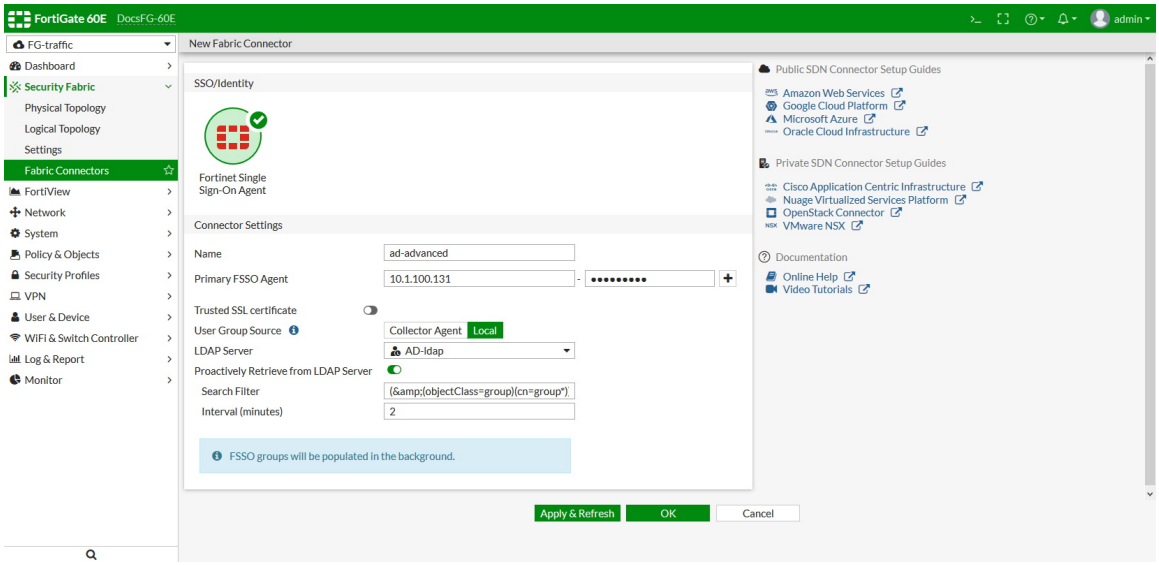

11. Click *OK*.
12. To view the AD user groups that are retrieved by the FSSO agent, hover the cursor over the group icon on the fabric

connector listing.

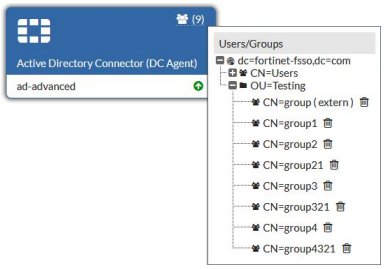


To create an FSSO agent connector in the CLI:

```
config user fsso
    edit "ad-advanced"
        set server "10.1.100.131"
        set password XXXXXXXXXXXXXX
        set ldap-server "AD-ldap"
        set ldap-poll enable
        set ldap-poll-interval 2
        set ldap-poll-filter "(&amp;(objectClass=group)(cn=group*))"
    next
end
```

You view the retrieved AD user groups with the `show user adgrp` command.

Use the AD user groups in a policy


The AD user groups retrieved by the FortiGate can be used directly in firewall policies.

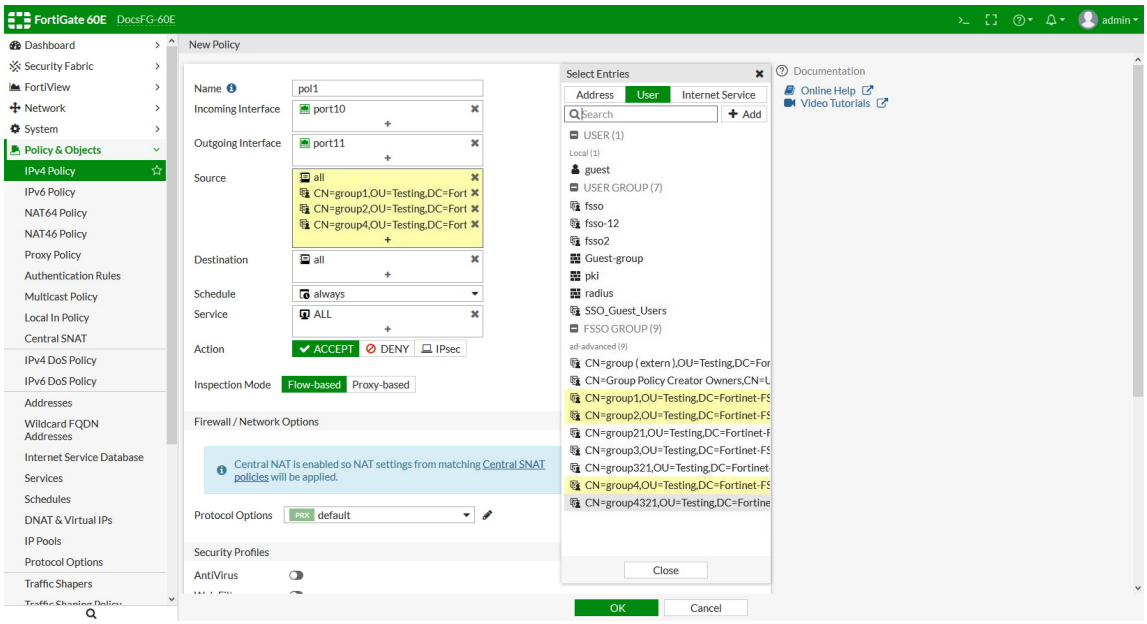

FortiGate Cloud / FDN communication through an explicit proxy

Explicit proxy communication to FortiGate Cloud and FortiGuard servers from FortiGate is enabled. A proxy server can be configured in the FortiGuard settings so that all FortiGuard connections under the `forticldd` process can be established through the proxy server.

Not all FortiGuard services are supported by these proxy settings. For example, web filter service traffic to FortiGuard will not be directed to the configured proxy.

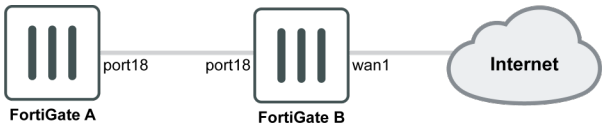

To configure a proxy server and communicate with FortiGate Cloud though it:

1. Configure FortiGate B as a proxy server:

```
config firewall proxy-policy
    edit 1
        set proxy explicit-web
        set dstintf "wan1"
        set srcaddr "all"
        set dstaddr "all"
        set service "webproxy"
        set action accept
        set schedule "always"
        set logtraffic all
        set users "guest1"
    next
end
config user local
    edit "guest1"
        set type password
        set passwd 123456
    next
end
config authentication scheme
    edit "local-basic"
        set method basic
        set user-database "local-user-db"
    next
end
config authentication rule
    edit "local-basic-rule"
        set srcaddr "all"
        set ip-based disable
        set active-auth-method "local-basic"
    next
end
```

2. Configure a firewall policy on FortiGate B to allow FortiGate A to get DNS resolution:

```
config firewall policy
    edit 1
        set name "dns"
        set uuid c55cd2fa-9486-51e9-fc0a-c17b296f9c72
        set srcintf "port18"
        set dstintf "wan1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "DNS"
        set fsso disable
        set nat enable
    next
end
```

3. Configure the FortiGuard proxy settings on FortiGate A:

```
config system fortiguard
    set proxy-server-ip 10.2.2.2
    set proxy-server-port 8080
    set proxy-username "guest1"
    set proxy-password 123456
end
```

4. On FortiGate A, log in to FortiGate Cloud to activate the logging service:

```
execute fortiguard-log login <username> <password>
```

5. On FortiGate A, view the `forticldd` debug message to see the connection to the log controller through the proxy server:

```
#
[136] fds_on_sys_fds_change: trace
[40] fds_queue_task: req-111 is added to log-controller
[596] fds_https_start_server: server: 172.16.95.168:443
[654] ssl_new: SSL object is created
[117] https_create: proxy server 10.2.2.2 port:8080
[40] fds_queue_task: req-101 is added to message-controller
[596] fds_https_start_server: server: 172.16.95.187:443
[654] ssl_new: SSL object is created
[117] https_create: proxy server 10.2.2.2 port:8080
[124] fds_on_log_setting_change: trace
[528] fds_https_connect: https_connect(172.16.95.168) is established.
[265] fds_svr_default_on_established: log-controller has connected to ip=172.16.95.168

# diagnose test application forticldd 1
```

Objects

The following topics provide information about objects:

- Address group exclusions on page 813
- MAC addressed-based policies on page 814

- Dynamic policy — fabric devices on page 816
- FSSO dynamic address subtype on page 818
- ClearPass integration for dynamic address objects on page 822
- Using wildcard FQDN addresses in firewall policies on page 827


Address group exclusions

Specific IP addresses or ranges can be subtracted from the address group with the *Exclude Members* setting in IPv4 address groups.


This feature is only supported for IPv4 address groups, and only for addresses with a *Type* of *IP Range* or *Subnet*.

To exclude addresses from an address group using the GUI:


1. Go to *Policy & Objects* > *Addresses*.
2. Create a new address group, or edit an existing address group.

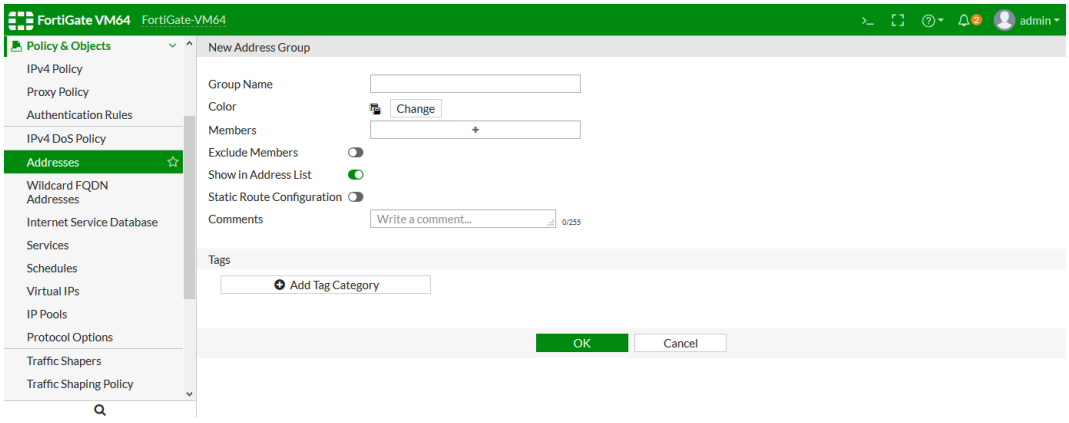

3. Enable *Exclude Members*. The *Select Entries* pane opens.
4. Select the addresses you want to exclude from the group.
5. Click *OK*.

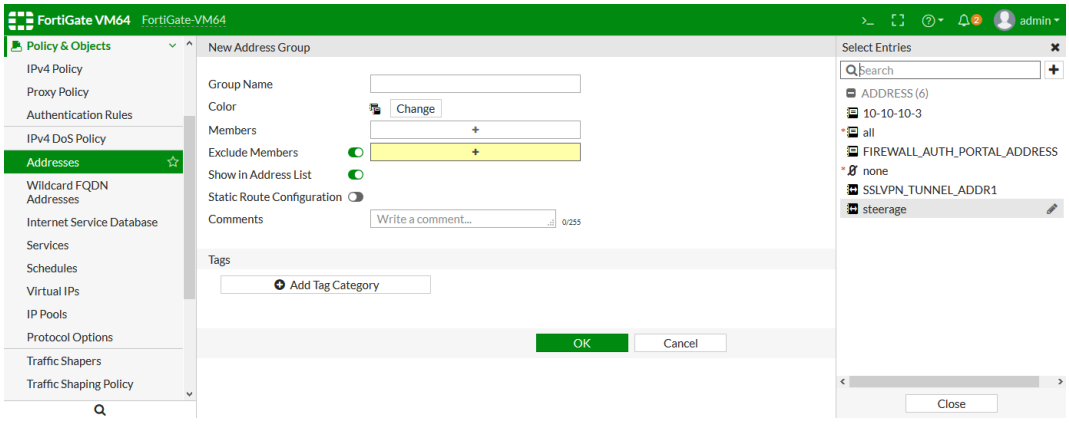

The excluded members are listed in the *Exclude Members* column.

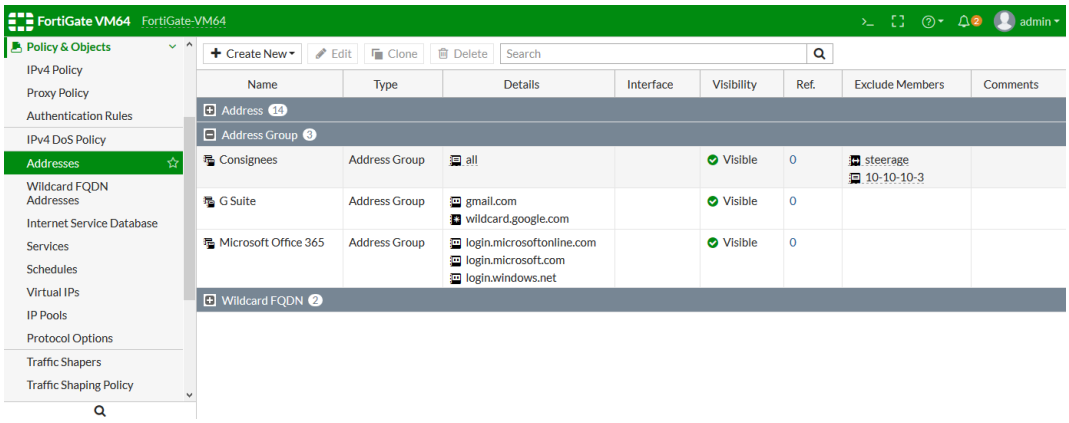

To exclude addresses from an address group using the CLI:

```
config firewall addrgrp
   edit <address group>
      set exclude enable
      set exclude-member <address> <address> ... <address>
   next
end
```

MAC addressed-based policies

MAC address ranges can be added to the following IPv4 policies:

- Firewall
- Virtual wire pair
- ACL
- Central SNAT
- DoS

A MAC address is a link layer-based address type and it cannot be forwarded across different IP segments.


FortiOS only supports the MAC address type as source address for policies in NAT mode VDOM. When you use the MAC address type in a policy as source address in NAT mode VDOM, IP address translation (NAT) is still performed according to the rules defined in the policy. The MAC address type only works for source address matching. It does not have any association with NAT actions.

For policies in transparent mode or the virtual wire pair interface, you can use the MAC address type as source or destination address.

To configure a MAC address range using the GUI:

1. Go to *Policy & Objects* > *Addresses* to create or edit an address:
   a. For *Category*, select *Address*.
   b. For *Type*, select *MAC Address Range*.
   c. Enter the address range in the empty fields.
   d. Configure the other fields as needed.

e. Click *OK*.

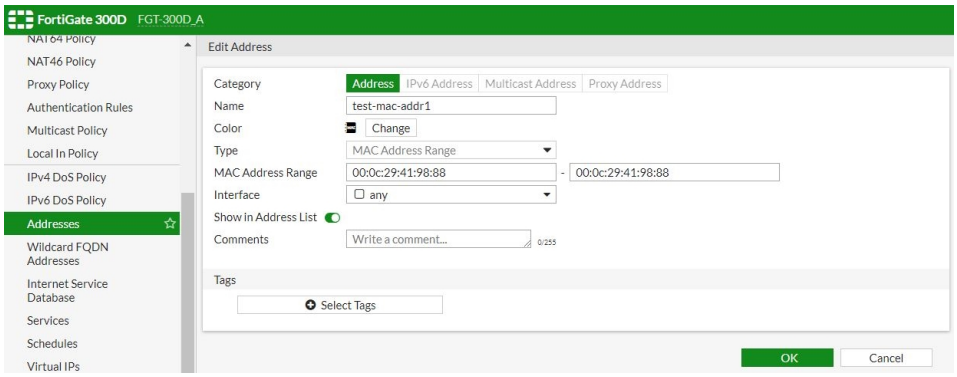


2. Go to *Policy & Objects* > *IPv4 Policy* to apply the address type to a policy in NAT mode VDOM:
   a. For *Source*, select the MAC address you just configured.
   b. For *Destination*, select an address.



In NAT mode VDOM, this address type cannot be used as destination address.

   c. Click *OK*.

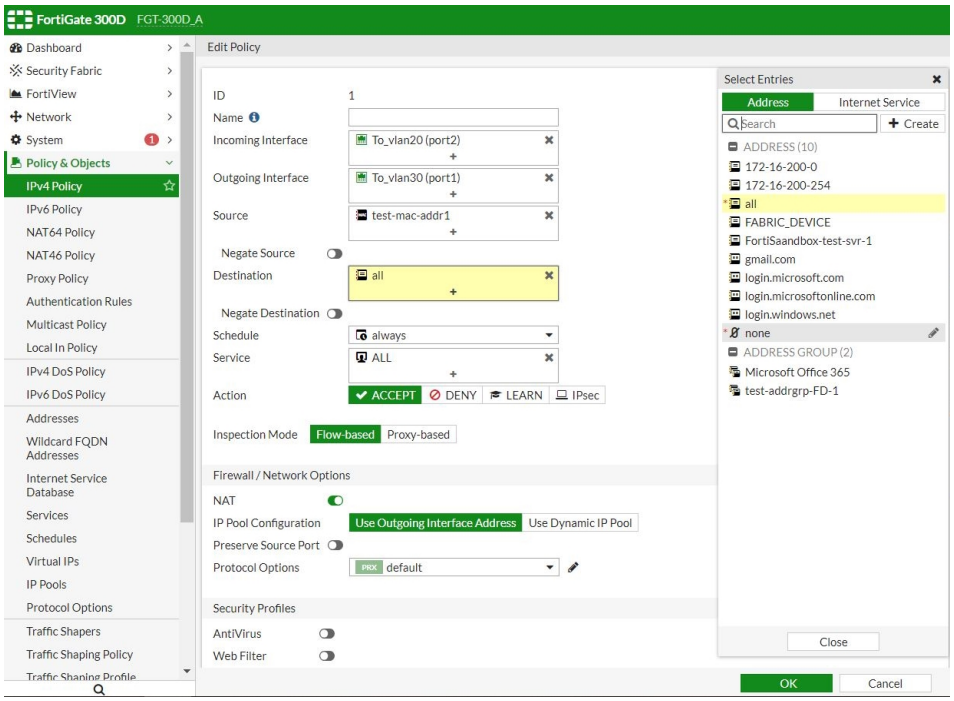

To configure a MAC address range using the CLI:

1. Create a new MAC address range type:

```
config firewall address
    edit <object_name>
        set type mac
```

```
        set start-mac <mac_address_start #>
        set end-mac <mac_address_end #>
    next
end
```

2. Apply the address type to a policy. In transparent mode or the virtual wire pair interface, this address type can be mixed with other address types in the policy:

```
config firewall address
    edit "test-mac-addr1"
        set type mac
        set start-mac 00:0c:29:41:98:88
        set end-mac 00:0c:29:41:98:88
    next
end
config firewall policy
    edit 1
        set srcintf "port2"
        set dstintf "port1"
        set srcaddr "test-mac-addr1" "10-1-100-42"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set logtraffic all
        set nat enable
    next
end
```

Dynamic policy — fabric devices

The dynamic address group represents the configured IP addresses of all Fortinet devices connected to the Security Fabric. It currently includes FortiManager, FortiAnalyzer, FortiClient EMS, FortiMail, FortiAP(s), and FortiSwitch(es). Like other dynamic address groups for fabric connectors, it can be used in IPv4 policies and objects.

The list of firewall addresses includes a default address object called `FABRIC_DEVICE`. You can apply the `FABRIC_DEVICE` object to the following types of policies:

- IPv4 firewall policy (including virtual wire pairs)
- IPv4 shaping policy
- IPv4 ACL policy
- `policy64` and `policy46` (IPv4 only)
- Consolidated policy (IPv4 only)


You cannot apply the `FABRIC_DEVICE` object to the following types of policies:

- All IPv6 policies
- IPv4 explicit proxy policy

You also cannot use the `FABRIC_DEVICE` object with the following settings:

- Custom extension on `internet-service`
- Exclusion of `addrgrp`

Initially the FABRIC_DEVICE object does not have an address value. The address value is populated dynamically as things change. As a result, you cannot edit the FABRIC_DEVICE object, add any addresses to the object, or remove any addresses from the object. The *Edit Address* pane in the GUI only has a *Return* button because the object is read-only:

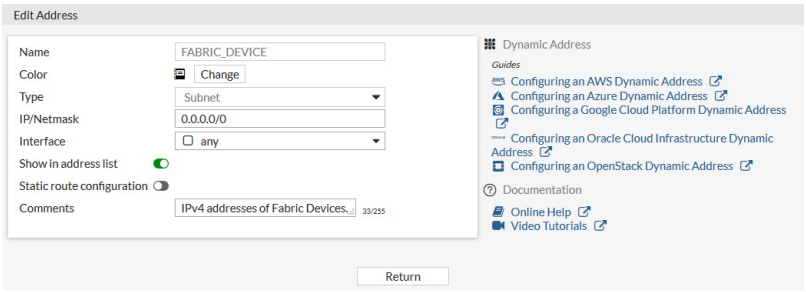


The FABRIC_DEVICE object address values are populated based on:

- FortiAnalyzer IP (from the *Fabric Settings* pane)
- FortiManager IP (from the *Fabric Settings* pane)
- FortiMail IP (from the *Fabric Settings* pane)
- FortiClient EMS IP (from the *Fabric Settings* pane)
- FortiAP IPs (from the *FortiAP Setup* pane or DHCP)
- FortiSwitch IPs (from the *FortiSwitch Setup* page or DHCP)

To apply the FABRIC_DEVICE object to an IPv4 policy using the GUI:

1. Go to *Policy & Objects* > *IPv4 Policy*.
2. Create a new policy or edit an existing policy.
3. For the *Destination* field, select *FABRIC_DEVICE* from the list of address entries.

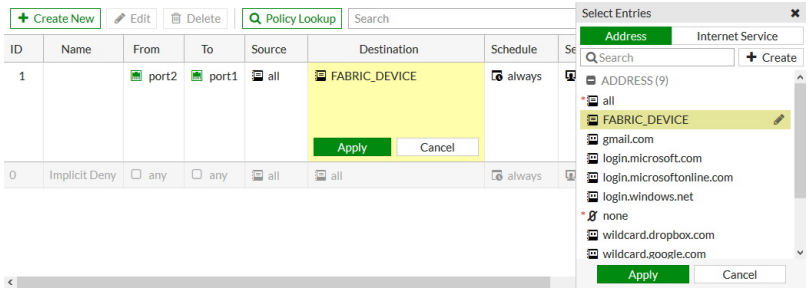

4. Configure the rest of the policy as needed.
5. Click *OK*.

To apply the FABRIC_DEVICE object to an IPv4 policy using the CLI:

```
(root) # show full-configuration firewall address FABRIC_DEVICE
config firewall address
    edit "FABRIC_DEVICE"
        set uuid ffde44a6-9eab-51ea-62f2-d5facde7af77
        set type ipmask
        set comment "IPv4 addresses of Fabric Devices."
        set associated-interface ''
        set color 0
        set allow-routing disable
        set subnet 0.0.0.0 0.0.0.0
```

```
    next
end

config firewall policy
    edit 1
        set srcintf "port2"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "FABRIC_DEVICE"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set fsso disable
        set nat enable
    next
end
```

Diagnose command

You can use the diagnose command to list IP addresses of Fortinet devices that are configured in the Security Fabric.

To run the diagnose command using the CLI:

```
(root) # diagnose firewall sf-addresses list

FabricDevices: 172.18.64.48
FortiAnalyzer: 172.18.60.25
FortiSandbox: 172.18.52.154
FortiManager: 172.18.28.31
FortiClientEMS: 172.18.62.6
FortiAP:
FortiSwitch:
FortiAP/SW-DHCP:
```

FSSO dynamic address subtype


The Fortinet Single Sign-ON (FSSO) dynamic firewall address subtype can be used in policies that support dynamic address types. The FortiGate will update the dynamic address used in firewall policies based on the source IP information for the authenticated FSSO users.

It can also be used with FSSO group information that is forwarded by ClearPass Policy Manager (CPPM) via FortiManager, and other FSSO groups provided by the FSSO collector agent or FortiNAC.

To configure FSSO dynamic addresses with CPPM and FortiManager in the GUI:


1. Create the dynamic address object:
   a. Go to *Policy & Objects* > *Addresses* > *Create New* > *Address*.
   b. For *Type*, select *Dynamic*.
   c. For *Sub Type*, select *Fortinet Single Sign-On (FSSO)*. The *Select Entries* pane opens and displays all available FSSO groups.
   d. Select one or more groups.

e. Click *OK* to save the configuration.

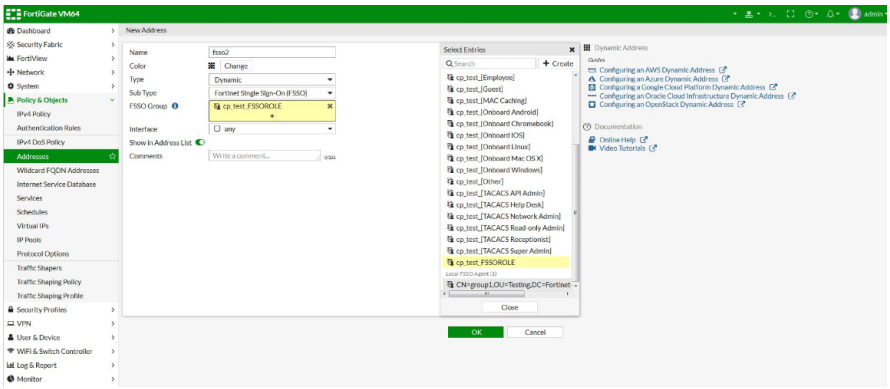


When the address table appears, there will be an error message for the address you just created (*Unresolved dynamic address: fsso*). This is expected because there are currently no authenticated FSSO users (based on source IP) in the local FSSO user list.

2. Add the dynamic address object to a firewall policy:
   a. Go to *Policy & Objects* > *IPv4 Policy*.
   b. Create a new policy or edit an existing policy.
   c. For *Source*, add the dynamic FSSO address object you just created.
   d. Configure the rest of the policy as needed.
   e. Click *OK* to save your changes.

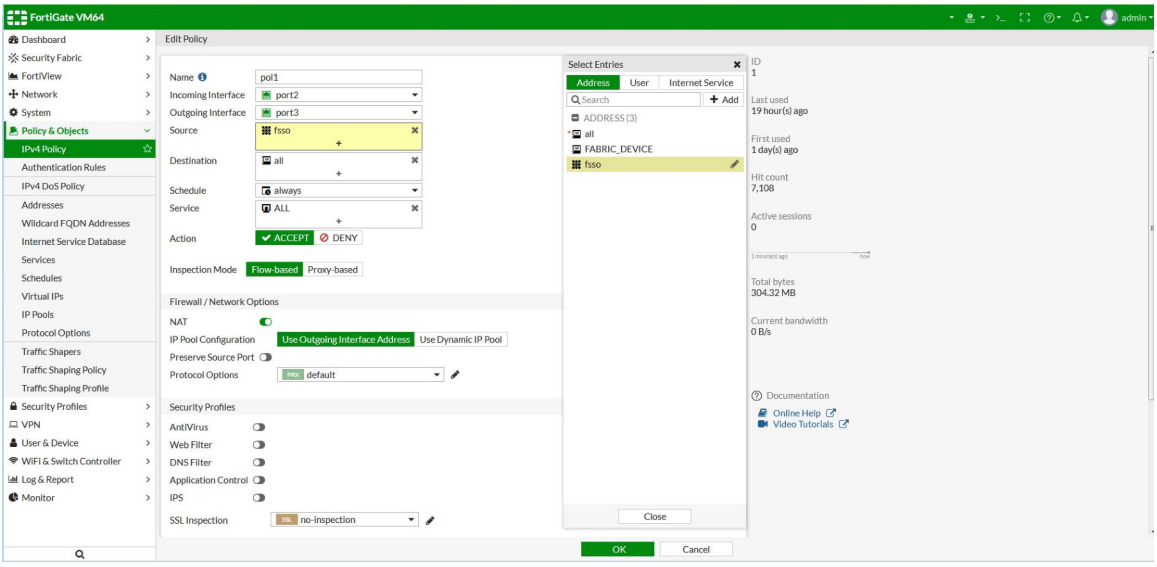


3. Test the authentication to add a source IP address to the FSSO user list:
   a. Log in as user and use CPPM for user authentication to connect to an external web server. After successful authentication, CPPM forwards the user name, source IP address, and group membership to the FortiGate via FortiManager.

b. Go to *Monitor* > *Firewall User Monitor* to view the user name (*fsso1*) and IP address.

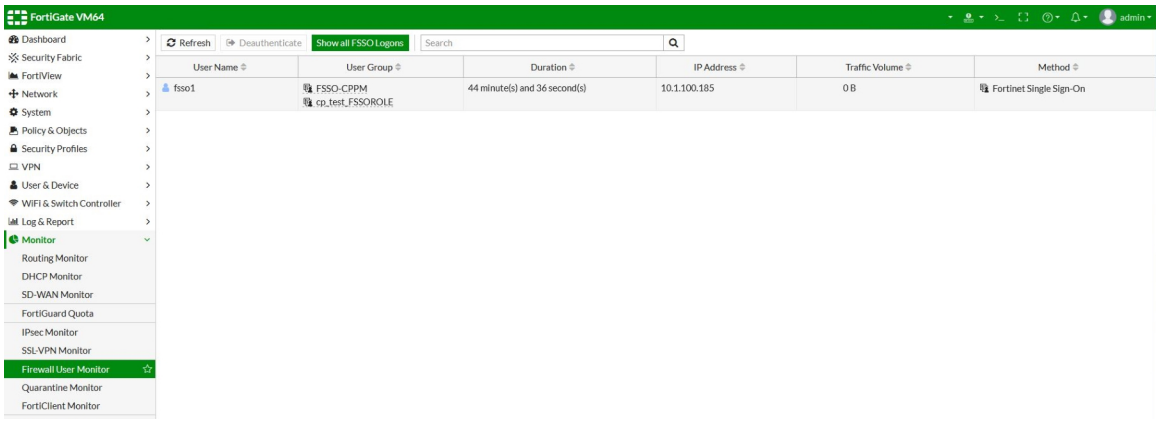


c. Go to *Policy & Objects* > *Addresses* to view the updated address table. The error message no longer appears.

d. Hover over the dynamic FSSO address to view the IP address (*fsso resolves to: 10.1.100.185*).

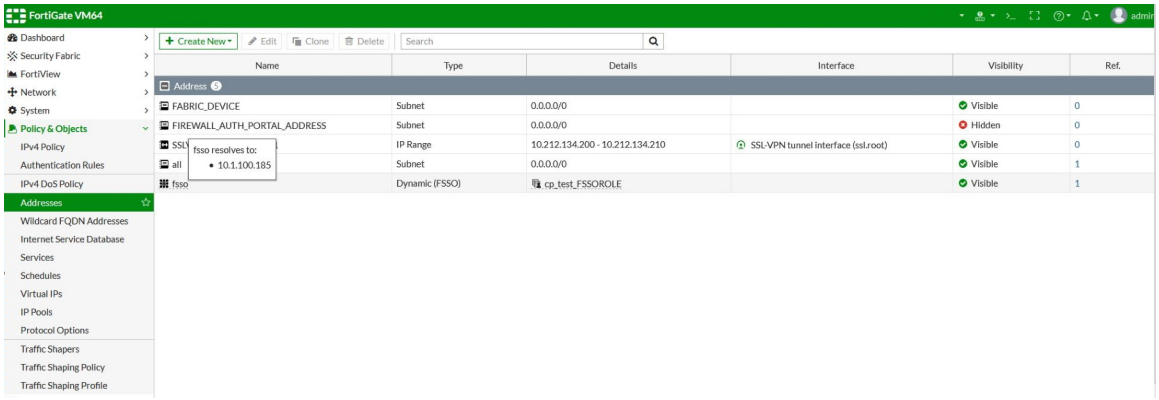


To verify user traffic in the GUI:


1. Go to *Log & Report* > *Forward Traffic*.
Details for the user *fsso1* are visible in the traffic log:

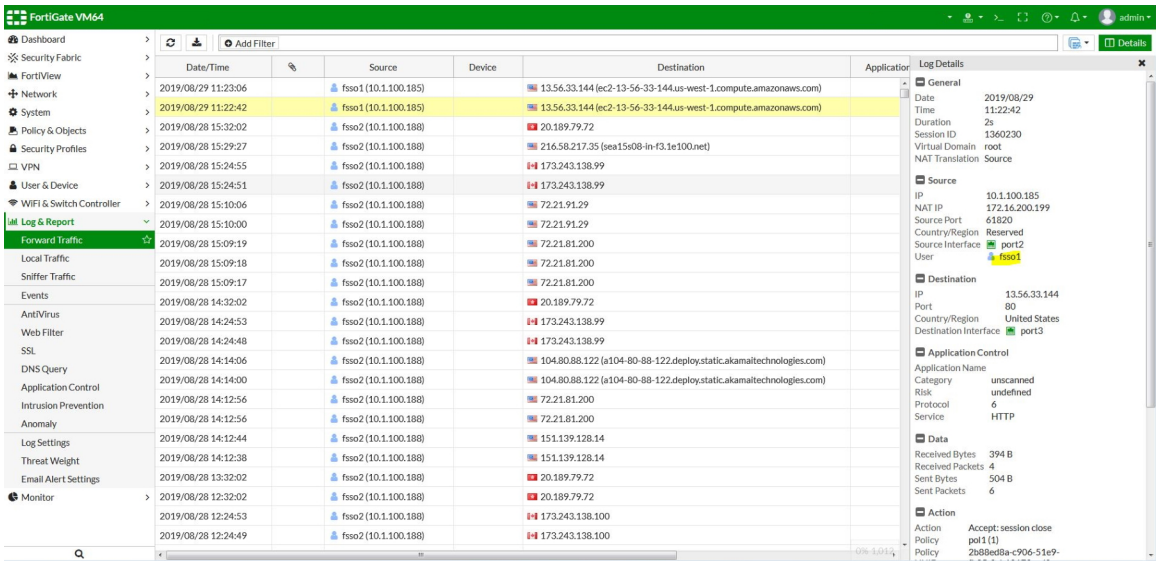

- If another user is authenticated by CPPM, then the dynamic address *fsso* entry in the address table will be updated. The IP address for user *fsso2* (*10.1.100.188*) is now visible:

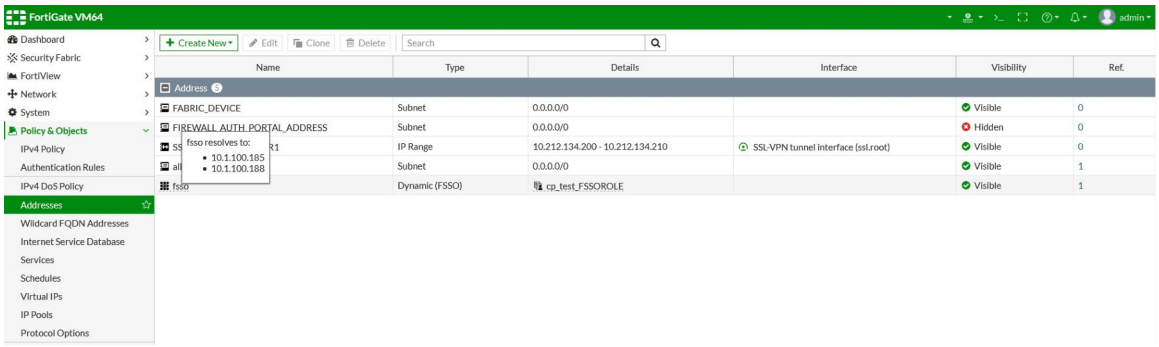

2. Go to *FortiView* > *Sources* to verify that the users were able to successfully pass the firewall policy.

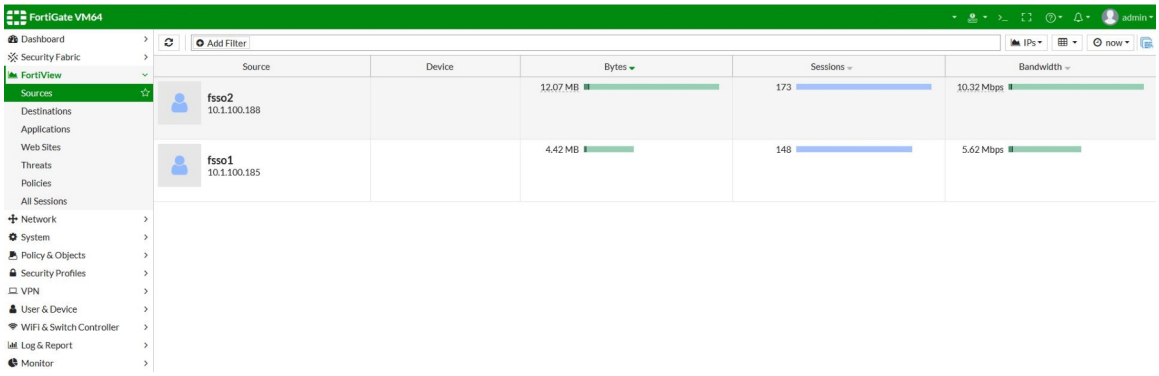



If a user logs off and CPPM receives log off confirmation, then CPPS updates the FortiGate FSSO user list via FortiManager. The user IP address is deleted from the dynamic FSSO address, and the user is no longer be able to pass the firewall policy.

To configure FSSO dynamic addresses with CPPM and FortiManager in the CLI:

1. Create the dynamic address object:

```
config firewall address
    edit "fsso"
        set uuid 6f63c872-c90b-51e9-ebfd-16c18807c795
        set type dynamic
        set sub-type fsso
        set fsso-group "cp_test_FSSOROLE"
    next
end
```

2. Add the dynamic address object to a policy:

```
config firewall policy
    edit 1
        set name "pol1"
        set uuid 2b88ed8a-c906-51e9-fb25-8cb12172acd8
        set srcintf "port2"
        set dstintf "port3"
        set srcaddr "fsso"
```

```
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set logtraffic all
        set fsso disable
        set nat enable
    next
end
```

To verify user traffic in the CLI:

1. Check the FSSO user list:

```
diagnose debug authd fsso list
----FSSO logons----
IP: 10.1.100.185  User: fsso1  Groups: cp_test_FSSOROLE  Workstation:  MemberOf: FSSO-
CPPM cp_test_FSSOROLE
Total number of logons listed: 1, filtered: 0
----end of FSSO logons----
```

2. Check the authenticated firewall users list:

```
diagnose firewall auth list
10.1.100.185, fsso1
type: fsso, id: 0, duration: 2928, idled: 2928
server: FortiManager
packets: in 0 out 0, bytes: in 0 out 0
group_id: 2 33554433
group_name: FSSO-CPPM cp_test_FSSOROLE
----- 1 listed, 0 filtered ------
```

After user traffic passes through the firewall, the nu

```
diagnose firewall auth list
10.1.100.185, fsso1
type: fsso, id: 0, duration: 3802, idled: 143
server: FortiManager
packets: in 1629 out 1817, bytes: in 2203319 out 133312
group_id: 2 33554433
group_name: FSSO-CPPM cp_test_FSSOROLE
----- 1 listed, 0 filtered ------
```

ClearPass integration for dynamic address objects

ClearPass Policy Manager (CPPM) can gather information about the statuses of network hosts, for example, the latest patches or virus infections. Based on this information, CPPM send the IP addresses and current states, such as Healthy or Infected, to the FortiGate.

On the FortiGate, the IP addresses received from CPPM are added to a dynamic firewall address with the *clearpass-spt* subtype. This address can be used in any policy that supports dynamic addresses, such as Firewall or SSL-VPN policies.

In this example, you create two dynamic IP addresses that are used in two firewall policies (deny and allow). One policy allows traffic (host state = Healthy), and the other denies traffic (host state = Infected). When CPPM sends the information, the IP addresses are assigned according to their host state: Healthy or Infected.


You can then verify that traffic from the Infected host is denied access by the deny policy, and traffic from the Healthy host is allowed access by the allow policy.

Create a REST API administrator

A RESET API administrator is required to generate an authorization token for REST API messages, and to limit hosts that can send REST API messages to the FortiGate.


To create a REST API administrator in the GUI:

1. Go to *System* > *Administrators*.
2. Click *Create New* > *REST API Admin*.
3. Configure the *Username* and other information as needed.
4. Disable *PKI Group*.
5. In the *Trusted Hosts* field, enter *10.1.100.0/24*.

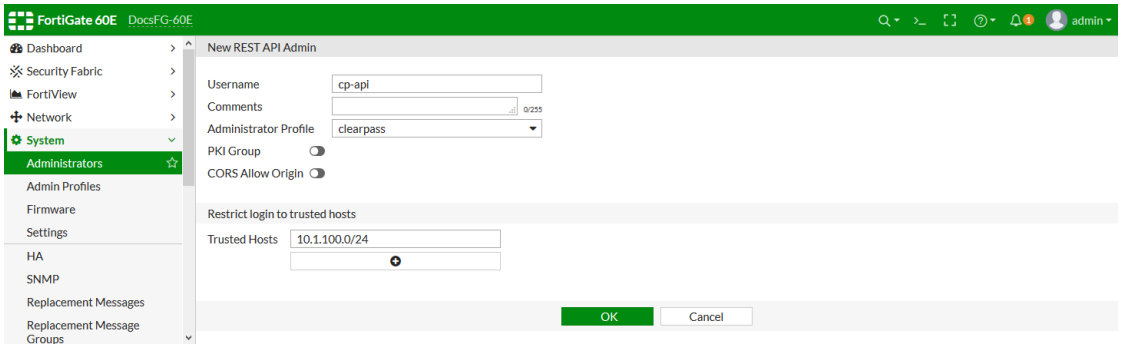

For this example, an administrator profile called *clearpass* was created with full read/write access. See Administrator profiles on page 620 for details.

6. Click *OK*.
   The *New API key* pane opens.

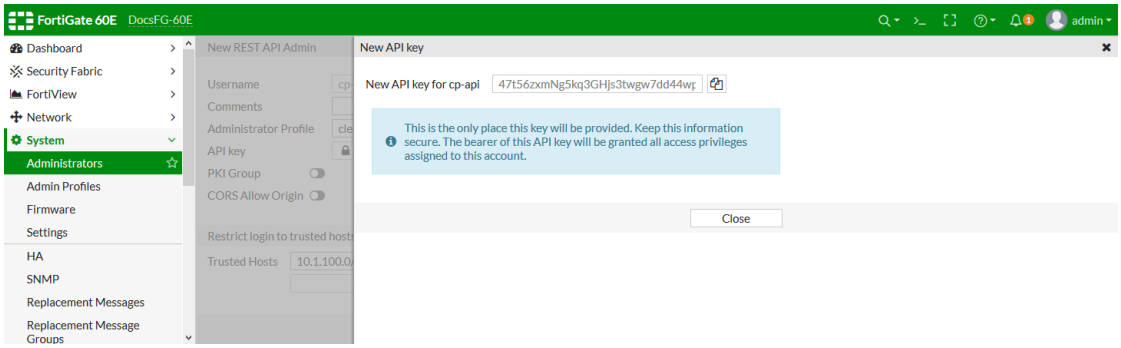

   The API key is the REST API authorization token that is used in REST API messages sent by CPPM to the FortiGate.
7. Copy the API key to a secure location. A new key can be generated if this one is lost or compromised.
8. Click *Close*.

To create a REST API administrator in the CLI:

```
config system api-user
    edit "cpi-back"
        set accprofile "clearpass"
        config trusthost
            edit 1
                set ipv4-trusthost 10.1.100.0 255.255.255.0
            next
        end
    next
end
```

```
execute api-user generate-key cp-api
    New API key: 0f1HxGHh9r9p74k7qgfHNH40p51bjs
    NOTE: The bearer of this API key will be granted all access privileges assigned to the
api-user cp-api.
```

Create dynamic IP addresses with the clearpass subtype

Two dynamic IP addresses are required, one for the allow policy, and the other for the deny policy.

To create the dynamic IP addresses:


```
config firewall address
    edit "cppm"
        set uuid 62a180c0-cb36-51e9-6e70-4a2034d82179
        set type dynamic
        set sub-type clearpass-spt
        set clearpass-spt healthy
        set comment ''
        set visibility enable
        set associated-interface ''
        set color 0
    next
    edit "cppm-deny"
        set uuid b318e962-cb36-51e9-7a34-74a34cf3bf0b
        set type dynamic
        set sub-type clearpass-spt
        set clearpass-spt infected
        set comment ''
        set visibility enable
        set associated-interface ''
        set color 0
    next
end
```

Create firewall policies

Two firewall policies are required, one to accept traffic (*cppm-allow*), and the other to deny traffic (*cppm-deny*).


To create the firewall policies in the GUI:

1. Go to *Policy & Objects* > *IPv4 Policy*.
2. Configure the allow policy:
   a. Click *Create New*.
   b. Enter a name for the policy.
   c. Set *Source* set to *cppm*.
   d. Set *Action* to *ACCEPT*.
   e. Configure the remaining settings as needed.

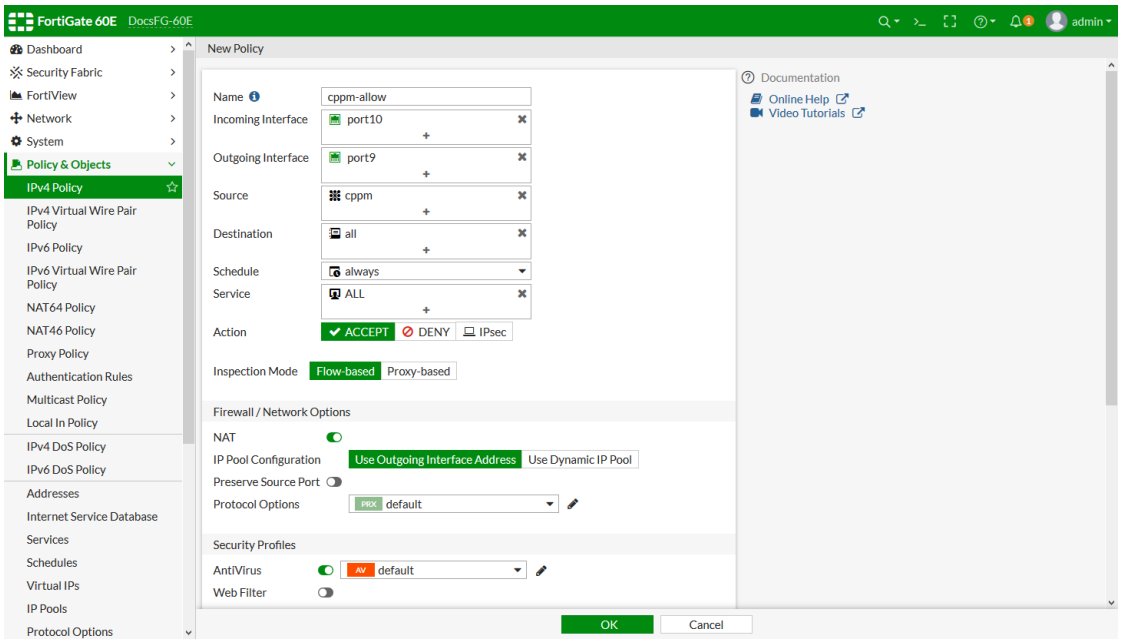

   f. Click *OK*.
3. Configure the deny policy:
   a. Click *Create New*.
   b. Enter a name for the policy.
   c. Set *Source* set to *cppm-deny*.
   d. Set *Action* to *DENY*.

e. Configure the remaining settings as needed.

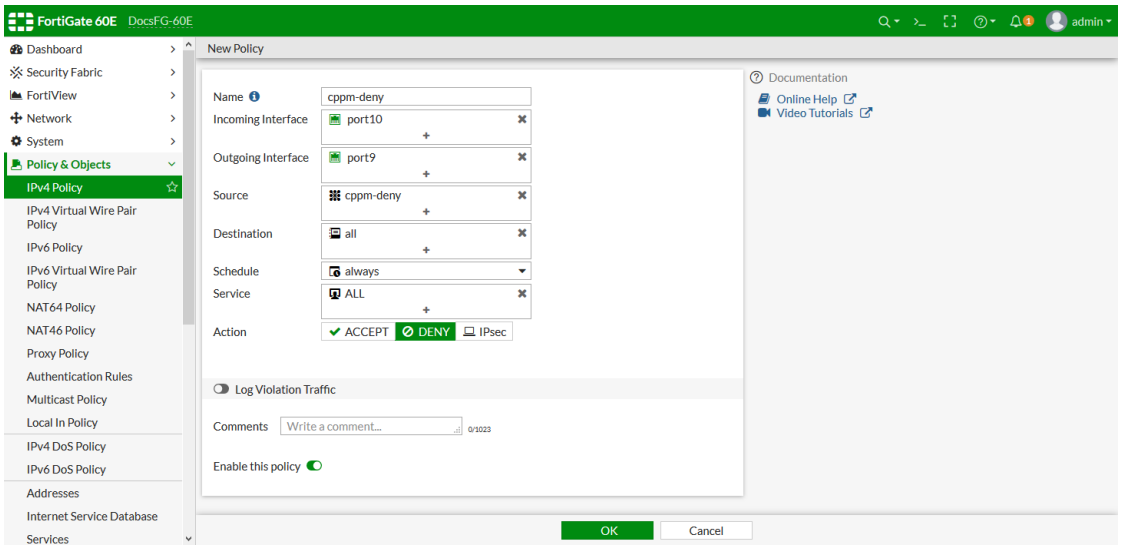

f. Click *OK*.

To create the firewall policies in the CLI:

```
config firewall address
    edit "cppm"
        set uuid 62a180c0-cb36-51e9-6e70-4a2034d82179
        set type dynamic
        set sub-type clearpass-spt
        set clearpass-spt healthy
        set comment ''
        set visibility enable
        set associated-interface ''
        set color 0
    next
    edit "cppm-deny"
        set uuid b318e962-cb36-51e9-7a34-74a34cf3bf0b
        set type dynamic
        set sub-type clearpass-spt
        set clearpass-spt infected
        set comment ''
        set visibility enable
        set associated-interface ''
        set color 0
    next
end
```

Verification

Go to *Log & Report* > *Forward Traffic* to review traffic logs and ensure that traffic is allowed or denied as expected.

To verify that FortiGate addresses are assigned correctly, enter the following CLI command:

```
# diagnose firewall dynamic list
List all dynamic addresses:
cppm-deny: ID(141)
```

```
        ADDR(10.1.100.188)

cppm: ID(176)
        ADDR(10.1.100.185)
        ADDR(10.1.100.186)
```

Using wildcard FQDN addresses in firewall policies

You can use wildcard FQDN addresses in firewall policies.

The firewall policy types that support wildcard FQDN addresses include IPv4, IPv6, ACL, local, shaping, NAT64, NAT46, and NGFW.

For wildcard FQDN addresses to work, the FortiGate should allow DNS traffic to pass through. Clients behind the FortiGate should use the same DNS server(s) as the FortiGate to ensure the FortiGate and the clients are resolving to the same addresses.

Initially, the wildcard FQDN object is empty and contains no addresses. When the client tries to resolve a FQDN address, the FortiGate will analyze the DNS response. The IP address(es) contained in the answer section of the DNS response will be added to the corresponding wildcard FQDN object.



Since FortiGate must analyze the DNS response, it does not work with DNS over HTTPS.

When the wildcard FQDN gets the resolved IP addresses, FortiOS loads the addresses into the firewall policy for traffic matching.

The FortiGate will keep the IP addresses in the FQDN object table as long as the DNS entry itself has not expired. Once it expires, the IP address is removed from the wildcard FQDN object until another query is made. At any given time, a single wildcard FQDN object may have up to 1000 IP addresses.




The DNS expiry TTL value is set by the authoritative name server for that DNS record. If the TTL for a specific DNS record is very short and you would like to cache the IP address longer, then you can extend it with the CLI. See To extend the TTL for a DNS record in the CLI: on page 830

For more information, see FQDN address firewall object type.

To create a wildcard FQDN using the GUI:

1. Go to *Policy & Objects* > *Addresses* and click *Create New* > *Address*.
2. Specify a *Name*.
3. For *Type*, select *FQDN*.


4. For *FQDN*, enter a wildcard FQDN address, for example, `*.fortinet.com`.

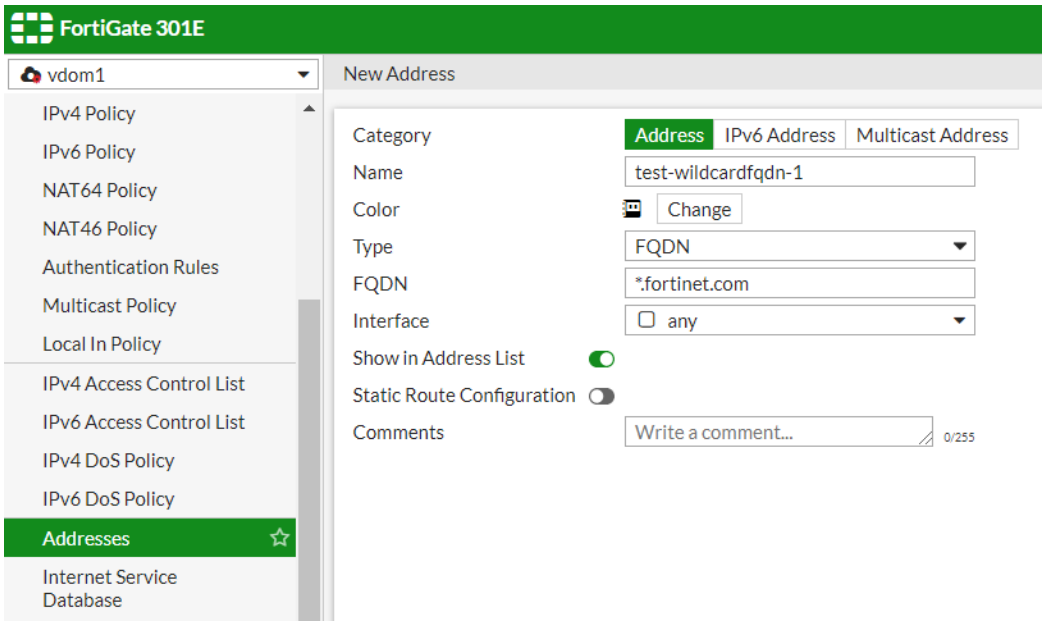

5. Click *OK*.

To use a wildcard FQDN in a firewall policy using the GUI:

1. Go to *Policy & Objects* > *IPv4 Policy* and click *Create New*..
2. For *Destination*, select the wildcard FQDN.
3. Configure the rest of the policy as needed.
4. Click *OK*.
   In this example, policy ID 2 uses the wildcard FQDN:

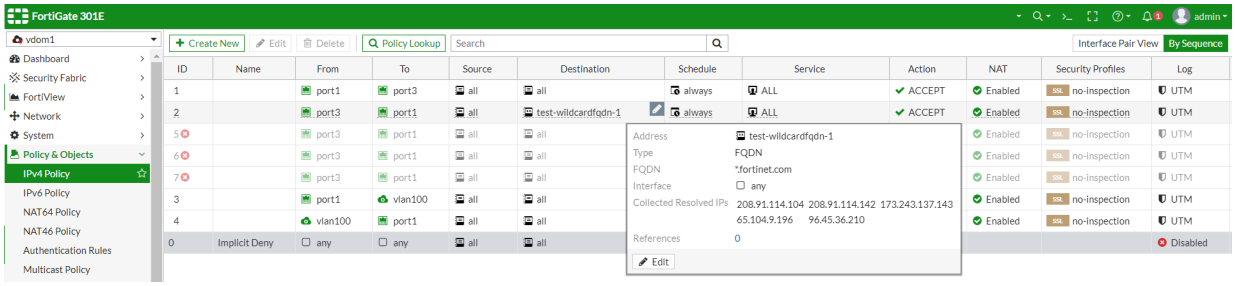

To create a wildcard FQDN using the CLI:

```
config firewall address
    edit "test-wildcardfqdn-1"
        set uuid 7288ba26-ce92-51e9-04c0-39c707eb4519
        set type fqdn
        set fqdn "*.fortinet.com"
    next
end
```

To use wildcard FQDN in a firewall policy using the CLI:

```
config firewall policy
    edit 2
        set uuid 2f5ffcc0-cddc-51e9-0642-ab9966b202dd
        set srcintf "port3"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "test-wildcardfqdn-1"
        set action accept
        set schedule "always"
        set service "ALL"
        set auto-asic-offload disable
        set nat enable
    next
end
```

To use the diagnose command to list resolved IP addresses of wildcard FQDN objects:

```
# diagnose firewall fqdn list

List all FQDN:

*.fortinet.com: ID(48) ADDR(96.45.36.159) ADDR(192.168.100.161) ADDR(65.39.139.161)
```

Alternatively:

```
# diagnose test application dnsproxy 6

worker idx: 0

vfid=0 name=*.fortinet.com ver=IPv4  min_ttl=3266:0, cache_ttl=0 , slot=-1, num=3,
wildcard=1

       96.45.36.159 (ttl=68862:68311:68311) 192.168.100.161 (ttl=3600:3146:3146)
65.39.139.161

(ttl=3600:3481:3481)
```

To use the diagnose command for firewall policies which use wildcard FQDN:

```
# diagnose firewall iprope list 100004
policy index=2 uuid_idx=46 action=accept
flag (8050108): redir nat master use_src pol_stats
flag2 (4200): no_asic resolve_sso
flag3 (20):
schedule(always)
cos_fwd=255  cos_rev=255
group=00100004 av=00004e20 au=00000000 split=00000000
host=3 chk_client_info=0x0 app_list=0 ips_view=0
misc=0 dd_type=0 dd_mode=0
zone(1): 11 -> zone(1): 9
source(1): 0.0.0.0-255.255.255.255, uuid_idx=0,
destination fqdn or dynamic address (1):
        *.fortinet.com ID(48) uuid_idx=57 ADDR(208.91.114.104) ADDR(208.91.114.142) ADDR
(173.243.137.143) ADDR(65.104.9.196) ADDR(96.45.36.210)
service(1):
        [0:0x0:0/(0,0)->(0,0)] helper:auto
```

To extend the TTL for a DNS record in the CLI:

In this the example the `set cache-ttl` value has been extended to 3600 seconds.

```
config firewall address
   edit "fortinet.com"
      set type fqdn
      set fqdn "www.fortinet.com"
      set cache-ttl 3600
   next
end
```

Traffic shaping

QoS (quality of service) is the capability to adjust quality aspects of your overall network traffic, including techniques such as priority-based queuing and traffic policing. Because bandwidth is finite and some types of traffic are slow, jitter or packet loss sensitive, bandwidth intensive, or critical for operations, QoS is a useful tool to optimize the performance of various applications in your network. QoS is especially important for managing voice and streaming multimedia traffic because these types of traffic can rapidly consume bandwidth and are sensitive to latency. You can implement QoS on FortiGate devices using the following techniques:

Technique	Description
Traffic policing	The FortiGate drops packets that do not conform to the configured bandwidth limitations. Note that excessive traffic policing can degrade network performance rather than improve it.
Traffic shaping	The FortiGate ensures that traffic consumes bandwidth at least at the guaranteed rate by assigning a greater priority queue to the traffic if the guaranteed rate is not being met. The FortiGate ensures that traffic does not consume more than the maximum configured bandwidth. Traffic that exceeds the maximum rate is subject to traffic policing.
Queuing	The FortiGate transmits packets in the order of their assigned priority queue for that physical interface. All traffic in a higher priority traffic queue must be completely transmitted before traffic in lower priority queues is transmitted.

When determining how to configure QoS, it is helpful to know when a FortiGate uses each technique in the overall traffic processing flow and the considerations for each technique. After the FortiGate accepts packets, it classifies the traffic and may apply traffic policing at additional points during traffic processing. The FortiGate may also apply QoS techniques, such as prioritization and traffic shaping. Traffic shaping consists of both traffic policing to enforce bandwidth limits and adjusting priority queues to help packets achieve the guaranteed rate.

Traffic shaping accuracy is optimal for security policies without a protection profile where no FortiGate content inspection is processed.



You can enable traffic shaping in *System* > *Feature Visibility* under the *Additional Features* section.

The following topics provide information about configuring traffic shaping policies:

- Determining your QoS requirements on page 831
- Packet rates on page 832
- Interface bandwidth limit on page 834
- Changing traffic shaper bandwidth unit of measurement on page 835
- Shared traffic shaper on page 835
- Per-IP traffic shaper on page 839
- Type of Service-based prioritization and policy-based traffic shaping on page 842
- Interface-based traffic shaping profile on page 845
- Classifying traffic by source interface on page 854
- Configuring traffic class IDs on page 855
- Traffic shaping schedules on page 857
- QoS assignment and rate limiting for quarantined VLANs on page 859
- Weighted random early detection queuing on page 860

Determining your QoS requirements

Before implementing QoS, you should identify the types of traffic that:

- Are important to your organization
- Use high amounts of bandwidth
- Are sensitive to latency or packet loss

Discovering the needs and relative importance of each traffic type on your network will help you design an appropriate overall approach, including how you configure each available QoS component technique. Some organizations discover they only need to configure bandwidth limits for some services. Other organizations determine they need to fully configure interface and security policy bandwidth limits for all services, and prioritize the queuing of critical services relative to traffic rate.

For example, your organization wants to guarantee sufficient bandwidth for revenue-producing e-commerce traffic. You need to ensure that customers complete transactions and do not experience service delays. At the same time, you need to ensure low latency for voice over IP (VoIP) traffic that sales and customer support teams use, while traffic latency and bursts may be less critical to the success of other network applications, such as long term, resumable file transfers.

Best practices

The following list includes recommendations and considerations when configuring QoS in your network:

- Ensure maximum bandwidth limits at the source interface and security policy are not too low. This can cause the FortiGate to discard an excessive number of packets.
- Consider the ratios of how packets are distributed between the available queues, and which queues are used by which types of services. Assigning most packets to the same priority queue can reduce the effects of configuring prioritization. Assigning a lot of high bandwidth services to high priority queues may take too much bandwidth away from lower priority queues and cause increased or indefinite latency. For example, you may want to prioritize a latency-sensitive service, such as SIP, over a bandwidth-intensive service, such as FTP. Also consider that bandwidth guarantees can affect queue distribution, and assign packets to queue 0 instead of their regular queue in high-volume situations.
- Decide whether or not to guarantee bandwidth because it causes the FortiGate to assign packets to queue 0 if the guaranteed packet rate is not being met. When you compare queuing behavior for low and high bandwidth

situations, this means the effect of prioritization only becomes visible as traffic volumes rise and exceed their guarantees. Because of this, you might want only some services to use bandwidth guarantees. This way, you can avoid the possibility that all traffic uses the same queue in high-volume situations, which negates the effects of configuring prioritization.

- Configure prioritization for all through traffic by either ToS (type of service)-based priority or security policy priority, not both, to simplify analysis and troubleshooting. Traffic subject to both ToS-based and security policy priorities use a combined priority from both parts of the configuration. Traffic subject to only one of the prioritization methods will use only that priority. If you configure both methods, or if you configure either method for only a subset of traffic, packets that apply to the combined configuration may receive a lower priority queue than packets that apply to only one of the priority methods, as well as packets that do not apply to the configured prioritization. For example, if both the ToS-based priority and security policy priority dictate that a packet should receive a medium priority, in the absence of bandwidth guarantees, a packet will use queue 3. If only ToS-based priority is configured, the packet will use queue 1. If only security policy priority is configured, the packet will use queue 2. If no prioritization is configured, the packet will use queue 0.
  - Because you can configure QoS using a combination of security policies and ToS-based priorities, and to distribute traffic over the six possible queues for each physical interface, the results of those configurations can be more difficult to analyze because of their complexity. In those cases, prioritization behavior can vary by several factors, including: traffic volume, ToS or differentiated services (DiffServ) markings, and correlation of session to a security policy.



The FortiGate does not prioritize traffic based on the differentiated services code point (DSCP) marking configured in the security policy. However, ToS-based prioritization can be used for ingress traffic.

- Use the UDP protocol to obtain more accurate testing results. Packets that are discarded by traffic shapers impact flow-control mechanisms, such as TCP.
- Do not oversubscribe outbandwidth throughput. For example, sum [guaranteed bandwidth] < outbandwidth. For accurate bandwidth calculations, you must set the outbandwidth parameter on interfaces.

Packet rates

The formula for packet rates specified for maximum bandwidth or guaranteed bandwidth is:

rate = amount / time

where rate is in Kbps

Burst size cannot exceed the configured maximum bandwidth. The FortiGate drops packets that exceed the configured maximum bandwidth. Packets deduct from the amount of bandwidth available to subsequent packets, and available bandwidth regenerates at a fixed rate. As a result, the available bandwidth for a packet may be less than the configured rate, down to a minimum of 0 Kbps.

Alternatively, rate calculation and behavior can be described using the token bucket metaphor. A traffic flow has an associated bucket, which represents burst size bounds and is the size of the configured bandwidth limit. The bucket receives tokens, which represent available bandwidth at the fixed configured rate. As time passes, tokens are added to the bucket up to capacity, and excess tokens are discarded. When a packet arrives at the FortiGate, the packet must deduct bandwidth tokens from the bucket equal to its size in order to leave the FortiGate. If there are not enough tokens, the packet cannot leave the FortiGate and is dropped.

Bursts are not redistributed over a longer interval, so bursts are propagated rather than smoothed. However, peak size is limited. The maximum burst size is the capacity of the bucket, which is the configured bandwidth limit. The actual size varies depending on the current number of tokens in the bucket, which may be less than the capacity of the bucket due to

deductions made by previous packets and the fixed rate at which tokens accumulate. A depleted bucket refills at the rate of the configured bandwidth limit. Bursts cannot borrow tokens from other time intervals.

By limiting traffic peaks and token regeneration, the available bandwidth may be less than the capacity of the bucket, but the limit of the total amount per time interval is ensured. Total bandwidth use during each interval of one second is, at most, the integral of the configured rate.

Rate discrepancy

You may observe that external clients, such as FTP or BitTorrent, initially report rates between the maximum bandwidth and twice the amount of the maximum bandwidth depending on the size of their initial burst. For example, when a connection is initiated following a period of no network activity. The apparent discrepancy in rates is caused by a difference in perspective when delimiting time intervals. A burst from the client may initially consume all tokens in the bucket, and before the end of one second as the bucket regenerates, is allowed to consume almost another bucket worth of bandwidth. From the perspective of the client, this equals one time interval. However, from the perspective of the FortiGate, the bucket cannot accumulate tokens when it is full. Therefore, the time interval for token regeneration begins after the initial burst and does not contain the burst. These different points of reference result in an initial discrepancy equal to the size of the burst. The client's rate contains it, but the FortiGate's rate does not. However, if the connection is sustained to its limit and time progresses over an increasing number of intervals, this discrepancy decreases in importance relative to the bandwidth total. The client reported rate will eventually approach the configured rate limit for the FortiGate.

Example

The maximum bandwidth is 50 Kbps, there has been no network activity for one or more seconds, and the bucket is full. A burst from an FTP client immediately consumes 50 kilobits. Because the bucket completely regenerates over one second, by the time another second elapses from the initial burst, traffic can consume another 49.999 kilobits, for a total of 99.999 kilobits between the two points in time. From the vantage point of an external FTP client regulated by this bandwidth limit, it initially appears that the bandwidth limit is 99.999 Kbps. This is almost twice the configured limit of 50 Kbps. However, bucket capacity only regenerates at the configured rate of 50 Kbps, and the connection can only consume a maximum of 50 kilobits during each subsequent second. The result is that as bandwidth consumption is averaged over an increasing number of time intervals, each of which are limited to 50 Kbps, the effect of the first interval's doubled bandwidth size diminishes proportionately, and the client's reported rate eventually approaches the configured rate limit. The following table shows the effects of a 50 Kbps limit on client reported rates:

Total size transferred (kilobits)	Time (seconds)	Rate reported by client (Kbps)
99.999 (50 + 49.999)	1	99.999
149.999	2	74.999
199.999	3	66.666
249.999	4	62.499
299.999	5	59.998
349.999	6	58.333

Guaranteed bandwidth can also be described using a token bucket metaphor. However, because this feature attempts to achieve or exceed a rate rather than limit it, the FortiGate does not discard non-conforming packets, as it does for


maximum bandwidth. Instead, when the flow does not achieve the rate, the FortiGate increases the packet priority queue, in an effort to increase the rate.

Guaranteed and maximum bandwidth rates apply to the bidirectional total for all sessions controlled by the security policy. For example, an FTP connection may entail two separate connections for the data and control portion of the session. Some packets may be reply traffic rather than initiating traffic. All packets for both connections are counted when calculating the packet rate for comparison with the guaranteed and maximum bandwidth rate.

Interface bandwidth limit

You can limit interface bandwidth for arriving and departing traffic. In some cases, the traffic received on an interfaces could exceed the maximum bandwidth limit defined in the security policy. Rather than waste processing power on packets that will get dropped later in the process, you can configure FortiGate to preemptively drop excess packets when they're received at the source interface. A similar command is available to the outgoing interface.

The following diagram shows how excess packets going from LAN to WAN1 can be intercepted and dropped at the source interface.

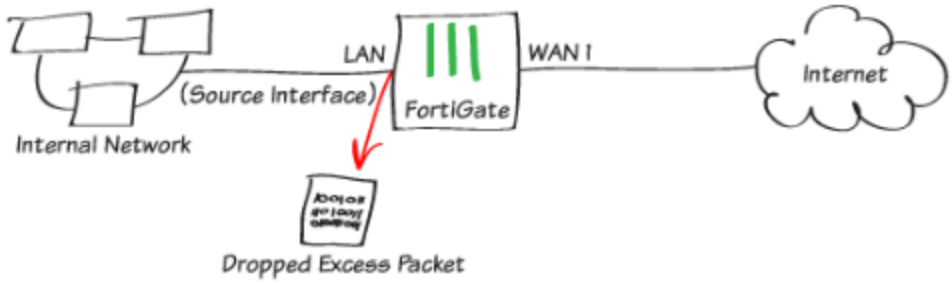

To configure an interface bandwidth limit in the GUI:

1. Go to *Network* > *Interfaces*.
2. Edit port1.
3. In the *Traffic Shaping* section set the following options:
   a. Enable *Inbound Bandwidth* and enter *200*.
      The default bandwidth unit is kbps.
   b. Enable *Outbound Bandwidth* and enter *400*.
      The default bandwidth unit is kbps.
4. Click *OK*.

To configure an interface bandwidth limit in the CLI:

1. On the FortiGate, configure the interface bandwidth limit:

```
config system interface
    edit "port1"
        .....
        set inbandwidth 200
        set outbandwidth 400
        .....
```

```
        next
    end
```

Changing traffic shaper bandwidth unit of measurement

Bandwidth speeds are measured in kilobits per second (Kbps), and bytes that are sent and received are measured in megabytes (MB). In some cases, this can cause confusion depending on whether your ISP uses kilobits per second (Kbps), kilobytes per second (KBps), megabits per second (Mbps), or gigabits per second (Gbps).

You can change the unit of measurement for traffic shapers in the CLI.

To change the bandwidth unit of measurement for a shared traffic shaper:

```
config firewall shaper traffic-shaper
    edit <traffic_shaper_name>
        set bandwidth-unit {kbps | mbps | gbps}
    next
end
```

To change the bandwidth unit of measurement for a per-IP traffic shaper:

```
config firewall shaper per-ip-shaper
    edit <traffic_shaper_name>
        set bandwidth-unit {kbps | mbps | gbps}
    next
end
```

Shared traffic shaper

Shared traffic shaper is used in a firewall shaping policy to indicate the priority and guaranteed and maximum bandwidth for a specified type of traffic use.

The maximum bandwidth indicates the largest amount of traffic allowed when using the policy. You can set the maximum bandwidth to a value between 1 and 16776000 Kbps. The GUI displays an error if any value outside this range is used. If you want to allow unlimited bandwidth, use the CLI to enter a value of 0.

The guaranteed bandwidth ensures that there is a consistent reserved bandwidth available. When setting the guaranteed bandwidth, ensure that the value is significantly less than the interface's bandwidth capacity. Otherwise, the interface will allow very little or no other traffic to pass through, potentially causing unwanted latency.

In a shared traffic shaper, the administrator can prioritize certain traffic as high, medium, or low. FortiOS provides bandwidth to low priority connections only when high priority connections do not need the bandwidth. For example, you should assign a high traffic priority to a policy for connecting a secure web server that needs to support e-commerce traffic. You should assign less important services a low priority.

When you configure a shared traffic shaper, you can apply bandwidth shaping per policy or for all policies. By default, a shared traffic shaper applies traffic shaping evenly to all policies that use the shared traffic shaper.

When configuring a per-policy traffic shaper, FortiOS applies the traffic shaping rules defined for each security policy individually. For example, if a per-policy traffic shaper is configured with a maximum bandwidth of 1000 Kbps, any security policies that have that traffic shaper enabled get 1000 Kbps of bandwidth each.

If a traffic shaper for all policies is configured with a maximum bandwidth of 1000 Kbps, all policies share the 1000 Kbps on a first-come, first-served basis.

The configuration is as follows:

```
config firewall shaper traffic-shaper
   edit "traffic_shaper_name"
      set per-policy enable
   next
end
```


The shared traffic shaper selected in the traffic shaping policy affects traffic in the direction defined in the policy. For example, if the source port is LAN and the destination is WAN1, the traffic shaping affects the flow in this direction only, affecting the outbound traffic's upload speed. You can define the traffic shaper for the policy in the opposite direction (reverse shaper) to affect the inbound traffic's download speed. In this example, that would be from WAN1 to LAN.

Only traffic through forward traffic shapers will be included in FortiView; reverse and per-IP shapers are not included.

The following example shows how to apply different speeds to different types of service. The example configures two shared traffic shapers to use in two firewall shaping policies. One policy guarantees a speed of 10 Mbps for VoIP traffic. The other policy guarantees a speed of 1 Mbps for other traffic. In the example, FortiOS communicates with a PC using port10 and the Internet using port9.

To configure shared traffic shapers in the GUI:

1. Create a firewall policy:
   a. Go to *Policy & Objects* > *IPv4 Policy* and click *Create New*.
   b. Set the *Name* to *Internet Access*.
   c. Set the *Incoming Interface* to *port10*.
   d. Set the *Outgoing Interface* to *port9*.
   e. Set the *Source* and *Destination* to *all*.
   f. Set the *Schedule* to *always*.
   g. Set the *Service* to *ALL*.
   h. Click *OK*.
2. Create the shared traffic shapers:
   a. Go to *Policy & Objects* > *Traffic Shapers* and click *Create New*.
   b. Set the *Name* to *10Mbps*. This shaper is for VoIP traffic.
   c. Set the *Traffic Priority* to *High*.
   d. Enable *Max Bandwidth* and enter *20000*.
   e. Enable *Guaranteed Bandwidth* and enter *10000*.

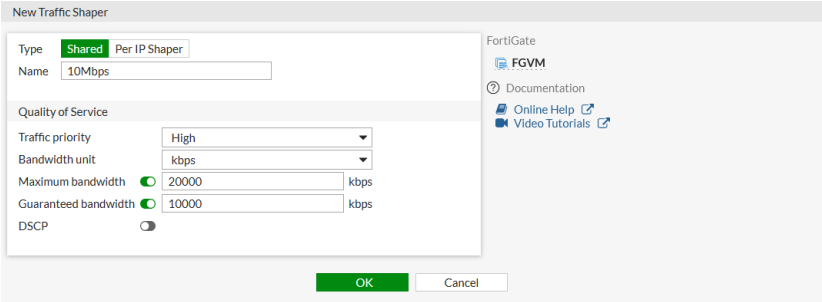

   f. Click *OK*.

g. Repeat the above steps to create another traffic shaper named *1Mbps* with the *Traffic Priority* set to *Low*, the *Max Bandwidth* set to *10000*, and the *Guaranteed Bandwidth* set to *1000*.

3. Create a firewall shaping policy:
   a. Go to *Policy & Objects* > *Traffic Shaping Policy* and click *Create New*.
   b. Set the *Name* to *VoIP_10Mbps_High*. This policy is for VoIP traffic.
   c. Set the *Source* and *Destination* to *all*.
   d. Set the *Service* to all VoIP services.
   e. Set the *Outgoing Interface* to *port9*.
   f. Enable *Shared shaper* and select *10Mbps*.
   g. Enable *Reverse shaper* and select *10Mbps*.
   h. Click *OK*.
   i. Repeat the above steps to create anpther firewall shaping policy named *Other_1Mbps_Low* for other traffic, with the *Source* and *Destination* set to *all*, *Service* set to *ALL*, *Outgoing Interface* set to *port9*, and *Shared shaper* and *Reverse shaper* set to *1Mbps*.

To configure shared traffic shapers in the CLI:

1. Create a firewall policy:
```
config firewall policy
   edit 1
      set name "Internet Access"
      set srcintf "port10"
      set dstintf "port9"
      set srcaddr "all"
      set dstaddr "all"
      set action accept
      set schedule "always"
      set service "ALL"
      set fsso disable
      set nat enable
   next
end
```
2. Create the shared traffic shapers:
```
config firewall shaper traffic-shaper
   edit "10Mbps"
      set guaranteed-bandwidth 10000
      set maximum-bandwidth 20000
   next
   edit "1Mbps"
      set guaranteed-bandwidth 1000
      set maximum-bandwidth 10000
      set priority low
   next
end
```
3. Create a firewall shaping policy:
```
config firewall shaping-policy
   edit 1
      set name "VOIP_10Mbps_High"
      set service "H323" "IRC" "MS-SQL" "MYSQL" "RTSP" "SCCP" "SIP" "SIP-MSNmessenger"
      set dstintf "port9"
      set traffic-shaper "10Mbps"
      set traffic-shaper-reverse "10Mbps"
      set srcaddr "all"
```

```
      set dstaddr "all"
    next
    edit 2
      set name "Other_1Mbps_Low"
      set service "ALL"
      set dstintf "port9"
      set traffic-shaper "1Mbps"
      set traffic-shaper-reverse "1Mbps"
      set srcaddr "all"
      set dstaddr "all"
    next
end
```

To troubleshoot shared traffic shapers:

1. To check if specific traffic is attached to the correct traffic shaper, run the `diagnose firewall iprope list 100015` command. The example output shows the traffic attached to the 10Mbps and 1Mbps shapers:

```
# diagnose firewall iprope list 100015

policy index=1 uuid_idx=0 action=accept
flag (0):
shapers: orig=10Mbps(2/1280000/2560000)
cos_fwd=0 cos_rev=0
group=00100015 av=00000000 au=00000000 split=00000000
host=4 chk_client_info=0x0 app_list=0 ips_view=0
misc=0 dd_type=0 dd_mode=0
zone(1): 0 -> zone(1): 38
source(1): 0.0.0.0-255.255.255.255, uuid_idx=0,
dest(1): 0.0.0.0-255.255.255.255, uuid_idx=0,
service(15):
   [6:0x0:0/(1,65535)->(1720,1720)] helper:auto
   [6:0x0:0/(1,65535)->(1503,1503)] helper:auto
   [17:0x0:0/(1,65535)->(1719,1719)] helper:auto
   [6:0x0:0/(1,65535)->(6660,6669)] helper:auto
   [6:0x0:0/(1,65535)->(1433,1433)] helper:auto
   [6:0x0:0/(1,65535)->(1434,1434)] helper:auto
   [6:0x0:0/(1,65535)->(3306,3306)] helper:auto
   [6:0x0:0/(1,65535)->(554,554)] helper:auto
   [6:0x0:0/(1,65535)->(7070,7070)] helper:auto
   [6:0x0:0/(1,65535)->(8554,8554)] helper:auto
   [17:0x0:0/(1,65535)->(554,554)] helper:auto
   [6:0x0:0/(1,65535)->(2000,2000)] helper:auto
   [6:0x0:0/(1,65535)->(5060,5060)] helper:auto
   [17:0x0:0/(1,65535)->(5060,5060)] helper:auto
   [6:0x0:0/(1,65535)->(1863,1863)] helper:auto

policy index=2 uuid_idx=0 action=accept
flag (0):
shapers: orig=1Mbps(4/128000/1280000)
cos_fwd=0 cos_rev=0
group=00100015 av=00000000 au=00000000 split=00000000
host=4 chk_client_info=0x0 app_list=0 ips_view=0
misc=0 dd_type=0 dd_mode=0
zone(1): 0 -> zone(1): 38
source(1): 0.0.0.0-255.255.255.255, uuid_idx=0,
dest(1): 0.0.0.0-255.255.255.255, uuid_idx=0,
```

```
service(1):
   [0:0x0:0/(0,0)->(0,0)] helper:auto
```

2. To check if the correct traffic shaper is applied to the session, run the `diagnose sys session list` command. The example output shows that the 1Mbps shaper is applied to the session:

```
# diagnose sys session list
session info: proto=6 proto_state=01 duration=11 expire=3599 timeout=3600 flags=00000000
     sockflag=00000000 sockport=0 av_idx=0 use=5
origin-shaper=1Mbps prio=4 guarantee 128000Bps max 1280000Bps traffic 1050Bps drops 0B
reply-shaper=
per_ip_shaper=
class_id=0 shaping_policy_id=2 ha_id=0 policy_dir=0 tunnel=/ helper=ftp vlan_cos=0/255
state=may_dirty npu npd os mif route_preserve
statistic(bytes/packets/allow_err): org=868/15/1 reply=752/10/1 tuples=2
tx speed(Bps/kbps): 76/0 rx speed(Bps/kbps): 66/0
orgin->sink: org pre->post, reply pre->post dev=39->38/38->39 gwy=172.16.200.55/0.0.0.0
hook=post dir=org act=snat 10.1.100.11:58241->172.16.200.55:21(172.16.200.1:58241)
hook=pre dir=reply act=dnat 172.16.200.55:21->172.16.200.1:58241(10.1.100.11:58241)
pos/(before,after) 0/(0,0), 0/(0,0)
misc=0 policy_id=1 auth_info=0 chk_client_info=0 vd=4
serial=0003255f tos=ff/ff app_list=0 app=0 url_cat=0
rpdb_link_id = 00000000
dd_type=0 dd_mode=0
npu_state=0x100000
npu info: flag=0x00/0x00, offload=0/0, ips_offload=0/0, epid=0/0, ipid=0/0,
     vlan=0x0000/0x0000
vlifid=0/0, vtag_in=0x0000/0x0000 in_npu=0/0, out_npu=0/0, fwd_en=0/0, qid=0/0
no_ofld_reason: offload-denied helper
total session 1
```

3. To check statuses of shared traffic shapers, run the `diagnose firewall shaper traffic-shaper list` command. The output should resemble the following:

```
# diagnose firewall shaper traffic-shaper list

name 10Mbps
maximum-bandwidth 2500 KB/sec
guaranteed-bandwidth 1250 KB/sec
current-bandwidth 0 B/sec
priority 2
tos ff
packets dropped 0
bytes dropped 0

name 1Mbps
maximum-bandwidth 1250 KB/sec
guaranteed-bandwidth 125 KB/sec
current-bandwidth 0 B/sec
priority 4
tos ff
packets dropped 0
bytes dropped 0
```

Per-IP traffic shaper

With per-IP traffic shaping, you can limit each IP address's behavior to avoid a situation where one user uses all of the available bandwidth. In addition to controlling the maximum bandwidth used per IP address, you can also define the

maximum number of concurrent sessions for an IP address. For example, if you apply a per-IP shaper of 1 Mbps to your entire network, FortiOS allocates each user/IP address 1 Mbps of bandwidth. Even if the network consists of a single user, FortiOS allocates them 1 Mbps. If there are ten users, each user gets 1 Mbps of bandwidth, totaling 10 Mbps of outgoing traffic.


For shared shapers, all users share the set guaranteed and maximum bandwidths. For example, if you set a shared shaper for all PCs using an FTP service to 10 Mbps, all users uploading to the FTP server share the 10 Mbps.

Shared shapers affect upload speed. If you want to limit the download speed from the FTP server in the example, you must configure the shared shaper as a reverse shaper. Per-IP shapers apply the speed limit on both upload and download operations. Only traffic through forward traffic shapers will be included in FortiView; reverse and per-IP shapers are not included.

The following example shows how to apply a per-IP shaper to a traffic shaping policy. This shaper assigns each user a maximum bandwidth of 1 Mbps and allows each user to have a maximum of ten concurrent connections to the FTP server. In the example, FortiOS communicates with users using port10 and the FTP server using port9.

To configure a per-IP traffic shaper in the GUI:

1. Create a firewall policy:
   a. Go to *Policy & Objects* > *IPv4 Policy* and click *Create New*.
   b. Set the *Name* to *FTP Access*.
   c. Set the *Incoming Interface* to *port10*.
   d. Set the *Outgoing Interface* to *port9*.
   e. Set the *Source* to *all*.
   f. Set the *Destination* to *FTP_Server*.
   g. Set the *Schedule* to *always*.
   h. Set the *Service* to *ALL*.
   i. Click *OK*.
2. Create the per-IP traffic shaper:
   a. Go to *Policy & Objects* > *Traffic Shapers* and click *Create New*.
   b. Set *Type* to *Per IP Shaper*.
   c. Set the *Name* to *FTP_Max_1M*. This shaper is for VoIP traffic.
   d. Enable *Max Bandwidth* and enter *1000*.
   e. Enable *Max Concurrent Connections* and enter *10*. This means that each user can have up to ten concurrent connections to the FTP server.

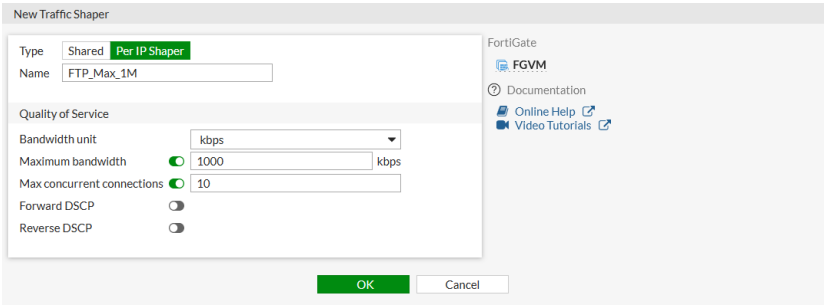

   f. Click *OK*.
3. Create a firewall shaping policy:
   a. Go to *Policy & Objects* > *Traffic Shaping Policy* and click *Create New*.
   b. Set the *Name* to *FTP speed 1M*.

c. Set the *Source* to the addresses and users that require access to the FTP server.
d. Set the *Destination* to *FTP_Server*.
e. Set the *Service* to *ALL*.
f. Set the *Outgoing Interface* to *port9*.
g. Enable *Per-IP shaper* and select *FTP_Max_1M*.
h. Click *OK*.

To configure a per-IP traffic shaper in the CLI:

1. Create a firewall policy:
```
config firewall policy
   edit 1
      set name "FTP Access"
      set srcintf "port10"
      set dstintf "port9"
      set srcaddr "all"
      set dstaddr "FTP_Server"
      set action accept
      set schedule "always"
      set service "ALL"
      set fsso disable
      set nat enable
   next
end
```
2. Create the per-IP traffic shaper:
```
config firewall shaper per-ip-shaper
   edit "FTP_Max_1M"
      set max-bandwidth 1000
      set max-concurrent-session 10
   next
end
```
3. Create a firewall shaping policy:
```
config firewall shaping-policy
   edit 1
      set name "FTP speed 1M"
      set service "ALL"
      set dstintf "port9"
      set per-ip-shaper "FTP_Max_1M"
      set srcaddr "PC1" "WinPC" "PC2"
      set dstaddr "FTP_Server"
   next
end
```

To troubleshoot per-IP traffic shapers:

1. To check if specific traffic is attached to the correct traffic shaper, run the `diagnose firewall iprope list 100015` command. The example output shows the traffic attached to the FTP_Max_1M shaper:
```
# diagnose firewall iprope list 100015

policy index=3 uuid_idx=0 action=accept
flag (0):
shapers: per-ip=FTP_Max_1M
cos_fwd=0 cos_rev=0
group=00100015 av=00000000 au=00000000 split=00000000
```

```
host=2 chk_client_info=0x0 app_list=0 ips_view=0
misc=0 dd_type=0 dd_mode=0
zone(1): 0 -> zone(1): 38
source(3): 10.1.100.11-10.1.100.11, uuid_idx=30, 10.1.100.143-10.1.100.143, uuid_idx=32,
     10.1.100.22-10.1.100.22, uuid_idx=31,
dest(1): 172.16.200.55-172.16.200.55, uuid_idx=89,
service(1):
   [0:0x0:0/(0,65535)->(0,65535)] helper:auto
```

2. To check if the correct traffic shaper is applied to the session, run the `diagnose sys session list` command. The example output shows that the FTP_Max_1M shaper is applied to the session:

```
# diagnose sys session list
session info: proto=6 proto_state=01 duration=36 expire=3567 timeout=3600 flags=00000000
     sockflag=00000000 sockport=0 av_idx=0 use=4
origin-shaper=
reply-shaper=
per_ip_shaper=FTP_Max_1M
class_id=0 shaping_policy_id=3 ha_id=0 policy_dir=0 tunnel=/ helper=ftp vlan_cos=0/255
state=may_dirty per_ip npu npd mif route_preserve
statistic(bytes/packets/allow_err): org=506/9/1 reply=416/6/1 tuples=2
tx speed(Bps/kbps): 0/0 rx speed(Bps/kbps): 0/0
orgin->sink: org pre->post, reply pre->post dev=39->38/38->39 gwy=172.16.200.55/0.0.0.0
hook=post dir=org act=snat 10.1.100.11:58275->172.16.200.55:21(172.16.200.1:58275)
hook=pre dir=reply act=dnat 172.16.200.55:21->172.16.200.1:58275(10.1.100.11:58275)
pos/(before,after) 0/(0,0), 0/(0,0)
misc=0 policy_id=1 auth_info=0 chk_client_info=0 vd=2
serial=0000211a tos=ff/ff app_list=0 app=0 url_cat=0
rpdb_link_id = 00000000
dd_type=0 dd_mode=0
npu_state=0x100000
npu info: flag=0x00/0x00, offload=0/0, ips_offload=0/0, epid=0/0, ipid=0/0,
     vlan=0x0000/0x0000
vlifid=0/0, vtag_in=0x0000/0x0000 in_npu=0/0, out_npu=0/0, fwd_en=0/0, qid=0/0
no_ofld_reason: offload-denied helper
```

3. To check statuses of per-IP traffic shapers, run the `diagnose firewall shaper per-ip-shaper list` command. The output should resemble the following:

```
# diagnose firewall shaper per-ip-shaper list

name FTP_Max_1M
maximum-bandwidth 125 KB/sec
maximum-concurrent-session 10
tos ff/ff
packets dropped 0
bytes dropped 0
addr=10.1.100.11 status: bps=0 ses=3
```


Type of Service-based prioritization and policy-based traffic shaping

Priority queues

After packet acceptance, FortiOS classifies traffic and may apply Quality of Service (QoS) techniques, such as prioritization and traffic shaping. Traffic shaping consists of a mixture of traffic policing to enforce bandwidth limits and priority queue adjustment to assist packets in achieving the guaranteed rate.

If you have configured prioritization, FortiOS prioritizes egressing packets by distributing them among first in first out (FIFO) queues associated with each possible priority number. Each physical interface has six priority queues. Virtual interfaces use the priority queues of the physical interface that they are bound to.

The physical interface's six queues are queue 0 to 5, where queue 0 is the highest priority queue. You might observe that your traffic uses only a subset of those six queues. For example, some traffic may always use a certain queue number. Queuing may also vary by the packet rate or mixture of services. Some queue numbers may only be used by through traffic for which you have configured traffic shaping in the security policy that applies to that traffic session.

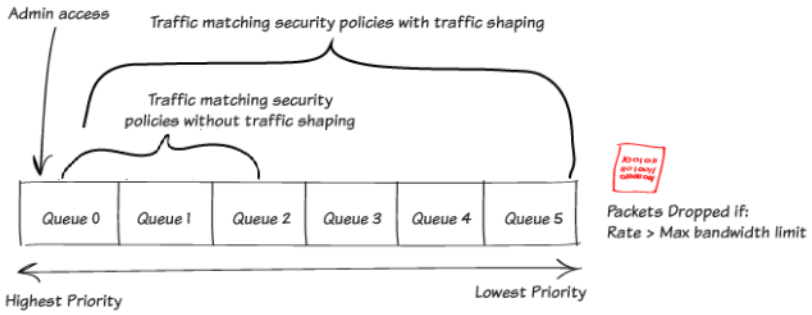

- Administrative access traffic always uses queue 0.
- Traffic matching firewall policies without traffic shaping may use queue 0, 1, or 2. The queue is selected based on the priority value you have configured for packets with that ToS bit value, if you have configured ToS-based priorities.
- Traffic matching firewall shaping policies with traffic shaping enabled can use any queue. The queue is selected based on whether the packet rate is currently below the guaranteed bandwidth (queue 0), or above the guaranteed bandwidth. Packets at rates greater than the maximum bandwidth limit are dropped.

Priority types

Packets can be assigned a priority in one of three types:

- On entering ingress – for packets flowing through the firewall.
- Upon generation – for packets generated by the firewall (including packets generated due to AV proxying).
- On passing through a firewall policy – for packets passing through a firewall policy (firewall shaping policy) that has a traffic shaper defined.

ToS priority

The first and second types, ingress priority and priority for generated packets, are controlled by two different CLI settings:

```
config system global
    set traffic-priority-level {high | medium | low}
end
config system tos-based-priority
    edit 1
        set tos [0-15]      <---- type of service bit in the IP datagram header with a value
between 0 and 15
        set priority (high | medium | low)      <---- priority of this type of service
    next
end
```

Each priority level is mapped to a value as follows:

ToS priority	Value
High	0
Medium	1
Low	2



ToS-based traffic prioritization cannot be used to apply bandwidth limits and guarantees, but can be used to prioritize traffic at per-packet levels.

Example

In the following example configuration, packets with ToS bit values of 10 are prioritized as medium and packets with ToS bit values of 20 are prioritized as high. All the other traffic is prioritized as low.

```
config system global
    set traffic-priority-level low
end
config system tos-based-priority
    edit 1
        set tos 10
        set priority medium
    next
    edit 2
        set tos 20
        set priority high
    next
end
```

Firewall shaping policy priority

You can enable traffic shaping in a firewall shaping policy. In the shared traffic shaper, you can set the firewall priority to high, medium, or low:

```
config firewall shaper traffic-shaper
    edit 1
        set priority {high | medium | low}
    next
end
```

As the priority in a traffic shaper is set to high by default, you must set some traffic at a lower priority to see results. Each priority level is mapped to a value as follows:

Firewall policy priority	Value
High (default)	1
Medium	2
Low	3


Combination of two priority types

To combine the two priority types, the global or ingress ToS-based priority value is combined with the firewall policy priority value:

ToS priority (0, 1, 2) + policy priority (1, 2, 3) = total priority (queue number)

Consider the following scenarios:

- If the current packet rate is less than the guaranteed bandwidth, packets use priority queue 0. Packet priority is 0.
- If the current packet rate exceeds the maximum bandwidth, excess packets are dropped.
- If the current packet rate is greater than the guaranteed bandwidth but less than the maximum bandwidth, FortiOS assigns a priority queue by adding the ToS-based priority and the firewall priority.
  For example, if you have enabled traffic shaping in the security policy and the security policy's traffic priority is low (value 3), and the priority normally applied to packets with that ToS bit is medium (value 1), the packets have a total packet priority of 4, and use priority queue 4.

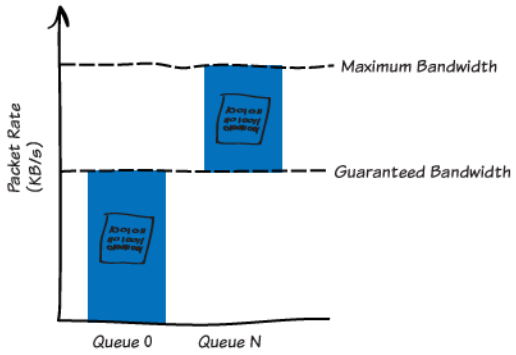

Interface-based traffic shaping profile

A traffic shaping policy can be used for interface-based traffic shaping by organizing traffic into 30 class IDs. The shaping profile defines the percentage of the interface bandwidth that is allocated to each class. Each traffic class ID is shaped to the assigned speed according to the outgoing bandwidth limit configured to the interface.

Traffic classification

A shaping policy classifies traffic and organizes it into different class IDs, based on matching criteria. For traffic matching a criteria, you can choose to put it into 30 different shaping classes, identified by class ID 2 to 31.

You must select an outgoing interface for the traffic. The shaping policy is only applied when the traffic goes to one of the selected outgoing interfaces.

Criterion	Description
Source	• Address: match the source address of the traffic to the selected address or address group. • User: use the user credentials of the traffic to match the selected user or user group. At least one address, address group, or internet service must also be selected. • Internet service: match the traffic to the selected internet service. Internet

Criterion	Description
	services cannot be used if addresses or address or groups are used.
Destination	• Address: match the destination address of the traffic to the selected address or address group. • Internet service: match the traffic to the selected internet service. Internet services cannot be used if addresses or address or groups are used.
Schedule	Match the current date and time to the selected schedule. You can select a one-time schedule, recurring schedule, or schedule group. This setting is optional.
Service	Match the service of the traffic to the selected service or service group.
Application	Match the application of the traffic to the selected application, application category, or application group. Application control must be enabled in the related firewall policy to know the application of the traffic. See Application control on page 980 for more information.
URL category	Match the URL of the traffic to the selected URL category. Web filter must be enabled in the related firewall policy to know the URL of the traffic. See Web filter on page 907 for more information.



When multiple items are selected in one criterion, it is considered a match when traffic matches any one of them.

Traffic prioritization

Shaping profiles define how different shaping classes of traffic are prioritized. For each class, you can define three prioritization strategies: guaranteed bandwidth, maximum bandwidth, and priority.

For each shaping profile, a default shaping class must be defined. Traffic is prioritized based on the default shaping group in the following two circumstances:

- All traffic to the outgoing interface that does not match to any shaping policy
- Traffic with a shaping group that is not defined in a shaping profile


Prioritization strategy	Description
Guaranteed bandwidth	The percentage of the link speed that is reserved for the shaping group. The total guaranteed bandwidth for all shaping groups cannot exceed 100%.
Maximum bandwidth	The maximum percentage of the link speed that the shaping group can use.
Priority	The shaping class priority: top, critical, high, medium, or low. When groups are competing for bandwidth on the interface, the group with the higher priority wins.

Applying a shaping profile to an interface

Traffic shaping is accomplished by configuring the outgoing bandwidth and outgoing shaping profile on an interface. The shaping profile uses the outgoing bandwidth of the interface as the maximum link speed, and it only works when the outgoing bandwidth is configured.

This example shows how to apply interface-based traffic shaping to web and file accessing traffic according to a schedule:

- The link speed of the wan1 interface is 10 Mb/s.
- File access can use up to 2 Mb/s from 8:00 AM to 6:00 PM.
- Web access can use 8 Mb/s from 8:00 AM to 6:00 PM.

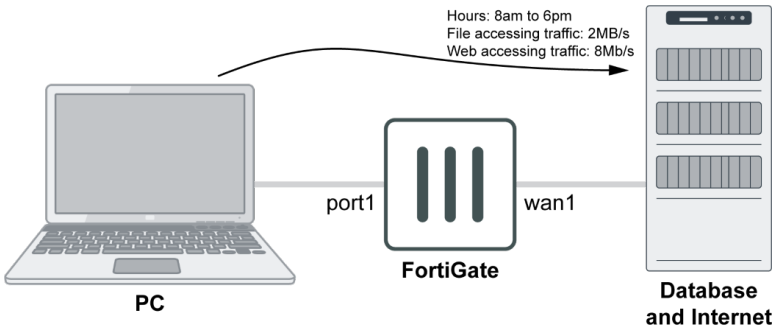

Putting the traffic into shaping classes

To create a recurring schedule in the GUI:

1. Go to *Policy & Objects* > *Schedules*.
2. Click *Create New* > *Schedule*.
3. Configure a recurring schedule called *Day_Hours* for everyday from 8:00 AM to 6:00 PM.
4. Click *OK*.


To create a traffic shaping policy and class ID for the web accessing traffic in the GUI:

1. Go to *Policy & Objects* > *Traffic Shaping Policy* and click *Create New*.
2. Enter a name for the policy, such as *web_access_day_hours*.
3. Enable *Schedule* and select the schedule you just created.
4. Set *Service* to web accessing services, such as *HTTP* and *HTTPS*.
5. Set *Action* to *Assign Shaping Class ID*, and *Outgoing interface* to *wan1*
6. Click the *Traffic shapping class ID* drop down then click *Create*.
7. Enter a value for the *ID* (integer) and a description for the *Name*, such as *Web Access*.



8. Click *OK*.


9. Set *Traffic shaping class ID* to the just created class ID.

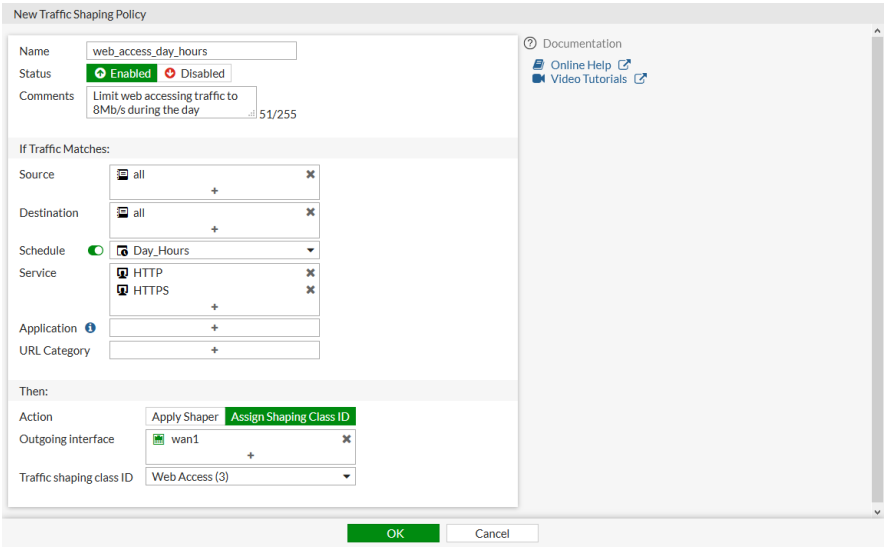

10. Configure the remaining settings as required.
11. Click *OK*.


To create a traffic shaping policy and class ID for the file accessing traffic in the GUI:

1. Go to *Policy & Objects* > *Traffic Shaping Policy* and click *Create New*.
2. Enter a name for the policy, such as *file_access_day_hours*.
3. Enable *Schedule* and select the schedule you just created.
4. Set *Service* to file accessing services, such as *ASF3*, *FTP* and *SMB*.
5. Set *Action* to *Assign Shaping Class ID*, and *Outgoing interface* to *wan1*
6. Click the *Traffic shapping class ID* drop down then click *Create*.
7. Enter a value for the *ID* (integer) and a description for the *Name*, such as *File Access*.

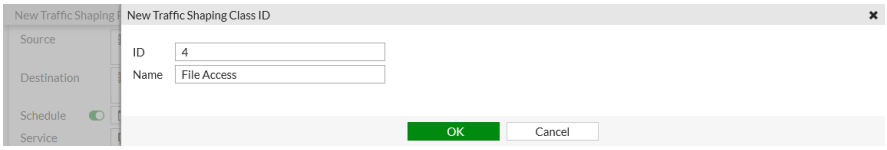

8. Click *OK*.

9. Set *Traffic shaping class ID* to the just created class ID.

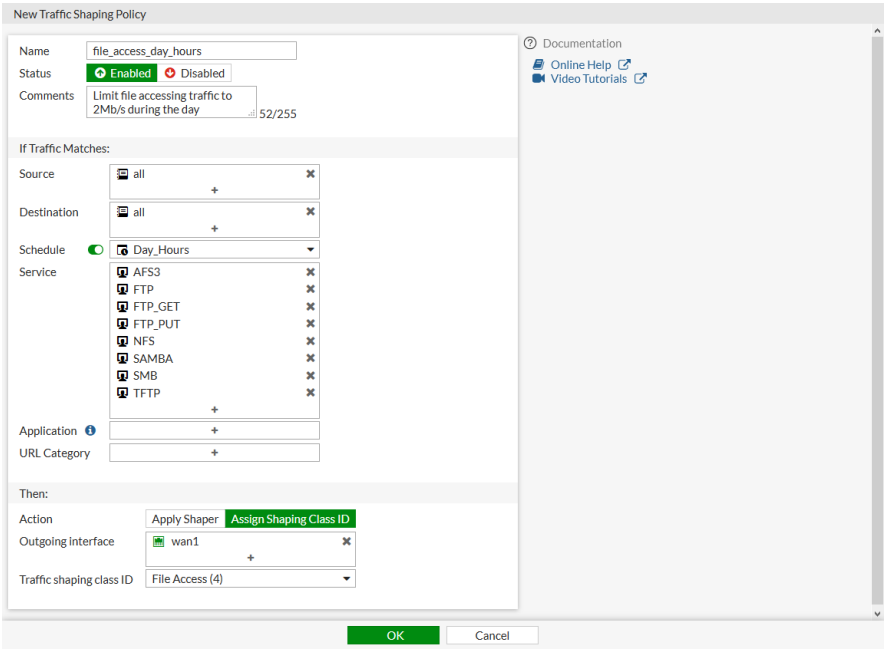

10. Configure the remaining settings as required.
11. Click *OK*.

To put the traffic into shaping classes in the CLI:

1. Create a recurring schedule:

```
config firewall schedule recurring
    edit "Day_Hours"
        set start 08:00
        set end 18:00
        set day sunday monday tuesday wednesday thursday friday saturday
    next
end
```

2. Create the traffic class IDs:

```
config firewall traffic-class
    edit 3
        set class-name "Web Access"
    next
    edit 4
        set class-name "File Access"
    next
end
```

3. Create the web and file accessing traffic shaping policies:

```
config firewall shaping-policy
    edit 2
        set name "web_access_day_hours"
        set comment "Limit web accessing traffic to 8Mb/s in day time"
        set service "HTTP" "HTTPS"
        set schedule "Day_Hours"
```


```
            set dstintf "wan1"
            set class-id 3
            set srcaddr "all"
            set dstaddr "all"
        next
        edit 3
            set name "file_access_day_hours"
            set comment "Limit file accessing traffic to 2Mb/s during the day"
            set service "AFS3" "FTP" "FTP_GET" "FTP_PUT" "NFS" "SAMBA" "SMB" "TFTP"
            set schedule "Day_Hours"
            set dstintf "wan1"
            set class-id 4
            set srcaddr "all"
            set dstaddr "all"
        next
    end
```

Allocating bandwidth to the shaping classes

A traffic shaping profile defines the guaranteed and maximum bandwidths each class receives. In this example, file access can use up to 2 Mb/s and web access can use 8 Mb/s from 8:00 AM to 6:00 PM.

To create a traffic shaping profile using the GUI:


1. Go to *Policy & Objects* > *Traffic Shaping Profile* and click *Create New*.
2. Enter a name for the profile, such as *Day_Hours_Profile*.
3. Configure a default traffic shaping class:
   This class has a high priority, meaning that when the other classes have reached their guaranteed bandwidths, this default class will use the rest of the available bandwidth.
   a. In the *Traffic Shaping Classes* table click *Create New*.
   b. Click the *Traffic shapping class ID* drop down then click *Create*.
   c. Enter a name for the class, such as *Default Access*.

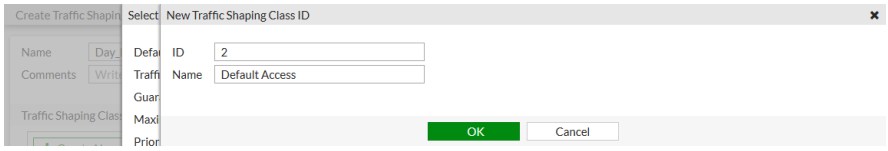

   d. Click *OK*.
   e. Set *Traffic shaping class ID* to the just created class ID.


f. Configure the following settings, then click *OK*:

Guaranteed bandwidth	30
Maximum bandwidth	100
Priority	High

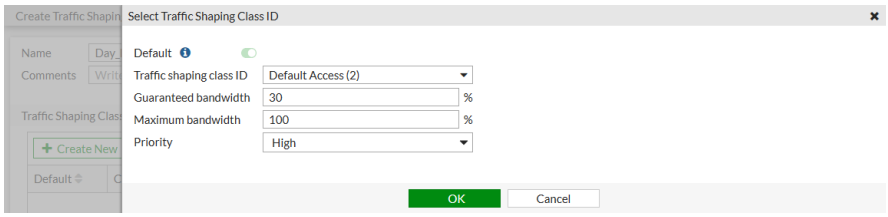


4. Configure a web accessing traffic shaping class:
When other types of traffic are competing for bandwidth, this class is guaranteed to 6 Mb/s, or 60% of the bandwidth.
   a. In the *Traffic Shaping Classes* table click *Create New*.
   b. Configure the following settings, then click *OK*:


Traffic shaping class ID	Web Access
Guaranteed bandwidth	60
Maximum bandwidth	80
Priority	High

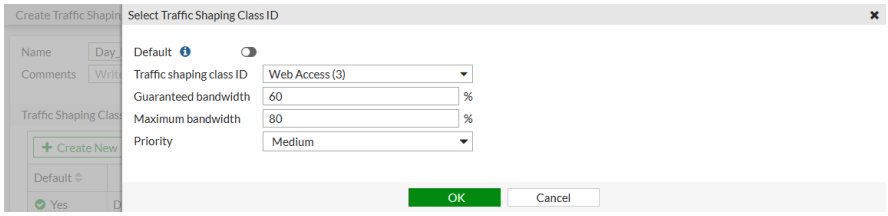

5. Configure a file accessing traffic shaping class:
When other types of traffic are competing for bandwidth, this group is guaranteed to 1 Mb/s, or 10% of the bandwidth.
   a. In the *Traffic Shaping Classes* table click *Create New*.
   b. Configure the following settings, then click *OK*:

Traffic shaping class ID	File Access
Guaranteed bandwidth	10
Maximum bandwidth	20
Priority	High

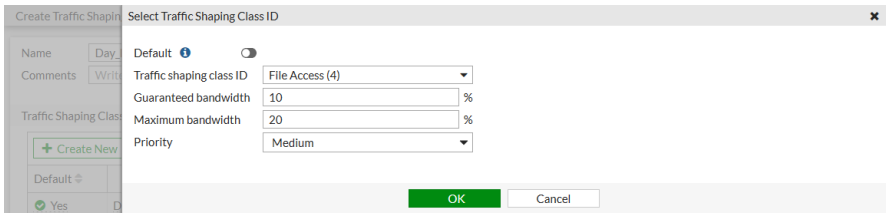

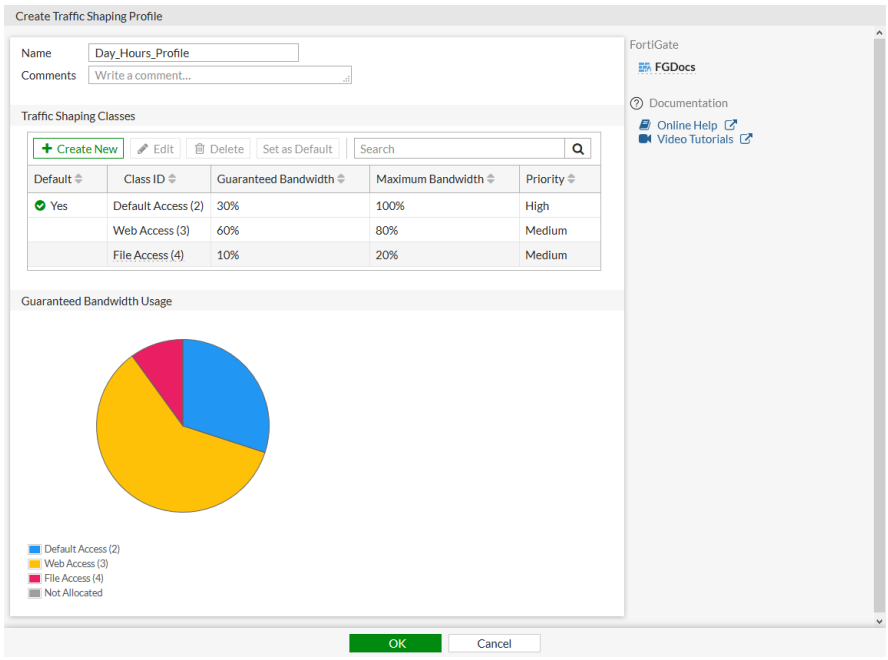

6. Click *OK*.

To create a traffic shaping profile using the CLI:

```
config firewall shaping-profile
    edit "Day_Hours_Profile"
        set default-class-id 2
        config shaping-entries
            edit 1
                set class-id 2
                set guaranteed-bandwidth-percentage 30
                set maximum-bandwidth-percentage 100
            next
            edit 2
                set class-id 3
                set priority medium
                set guaranteed-bandwidth-percentage 60
                set maximum-bandwidth-percentage 80
            next
            edit 3
                set class-id 4
                set priority medium
                set guaranteed-bandwidth-percentage 10
                set maximum-bandwidth-percentage 20
            next
        end
```


```
    next
end
```

Defining the available bandwidth on an interface

In this example, the link speed of the wan1 interface is 10 Mb/s.

To set the bandwidth of the wan1 interface in the GUI:

1. Go to *Network* > *Interfaces*.
2. Edit the wan1 interface.
3. Under Traffic Shaping, enable *Outbound shaping profile* and select the profile that you just created, *Day_Hours_Profile*.
4. Enable *Outbound Bandwidth* and set it to *10000* Kbps.

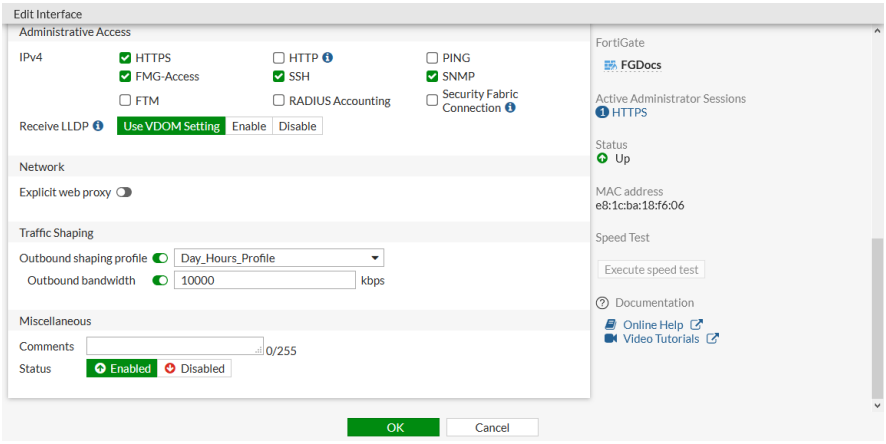

5. Click *OK*.

To set the bandwidth of the wan1 interface in the CLI:

```
config system interface
    edit "wan1"
        ....
        set egress-shaping-profile "Day_Hours_Profile"
        set outbandwidth 10000
        ....
    next
end
```

Diagnose commands

To check that the specific traffic is put into the correct shaping group or class ID:

```
# diagnose firewall iprope list 100015
```

To check the speed limit for each class ID on an interface:


```
# diagnose netlink interface list wan1
```

Classifying traffic by source interface

In firewall shaping policies, you can classify traffic by source interface with the following command:

```
config firewall shaping-policy
   edit 1
      set srcintf <interface_name>
      ......
   next
end
```

Sample configuration

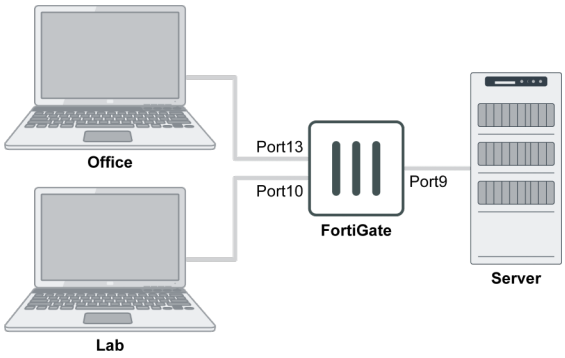

For this example, there are two shaping policies:

- Policy 1 is for traffic from the Office to the Server, with the speed limited to 5 MB/s.
- Policy 2 is for traffic from the Lab to the Server, with the speed limited to 1 MB/s.

To configure the traffic shaping policy:

```
config firewall shaping-policy
    edit 1
        set name "Office_Speed_5MB"
        set service "ALL"
        set srcintf "port13"
        set dstintf "port9"
        set traffic-shaper "5MB/s"
        set traffic-shaper-reverse "5MB/s"
        set srcaddr "all"
        set dstaddr "all"
    next
    edit 2
        set name "Lab_Speed_1MB"
        set service "ALL"
        set srcintf "port10"
        set dstintf "port9"
        set traffic-shaper "1MB/s"
        set traffic-shaper-reverse "1MB/s"
        set srcaddr "all"
        set dstaddr "all"
    next
end
```

Configuring traffic class IDs

As of FortiOS 6.2.2, you can configure traffic class IDs with a descriptive name in the GUI or CLI. Class IDs can help you correlate traffic shaping policy and profile entries.

GUI configurations


Within the GUI, there are three locations to configure the traffic class ID:

- Traffic shaping policy
- Traffic shaping profile
- Interface

Assign Shaping Class ID replaces the *Assign Group* functionality in earlier versions of FortiOS.

To configure the traffic class ID in a traffic shaping policy:

1. Go to *Policy & Objects* > *Traffic Shaping Policy*.
2. Edit an existing policy, or create a new one.
3. In the *Then: Action* section, click *Assign Shaping Class ID*.
4. In *Traffic shaping class ID*, click *Create*.
5. Enter a value for the *ID* (integer) and a description for the *Name*.
6. Click *OK* to save the class ID.

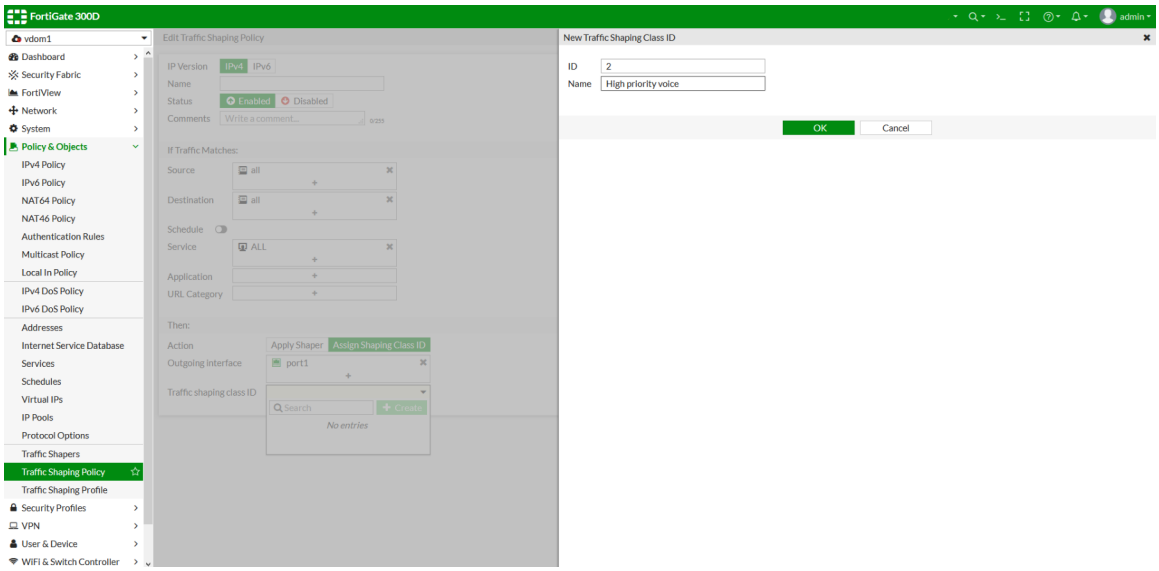


7. Configure the rest of the policy as needed.
8. Click *OK* to save the policy.

To configure the traffic class ID in a traffic shaping profile:

1. Go to *Policy & Objects* > *Traffic Shaping Profile*.
2. Edit an existing profile, or create a new one.

3. In the *Traffic Shaping Classes* section, click *Create New*. The *Select Traffic Shaping Class ID* window opens.
4. Click *Create*. The *New Traffic Shaping Class ID* window opens.
5. Enter a value for the *ID* (integer) and a description for the *Name*.
6. Click *OK* to save the class ID.

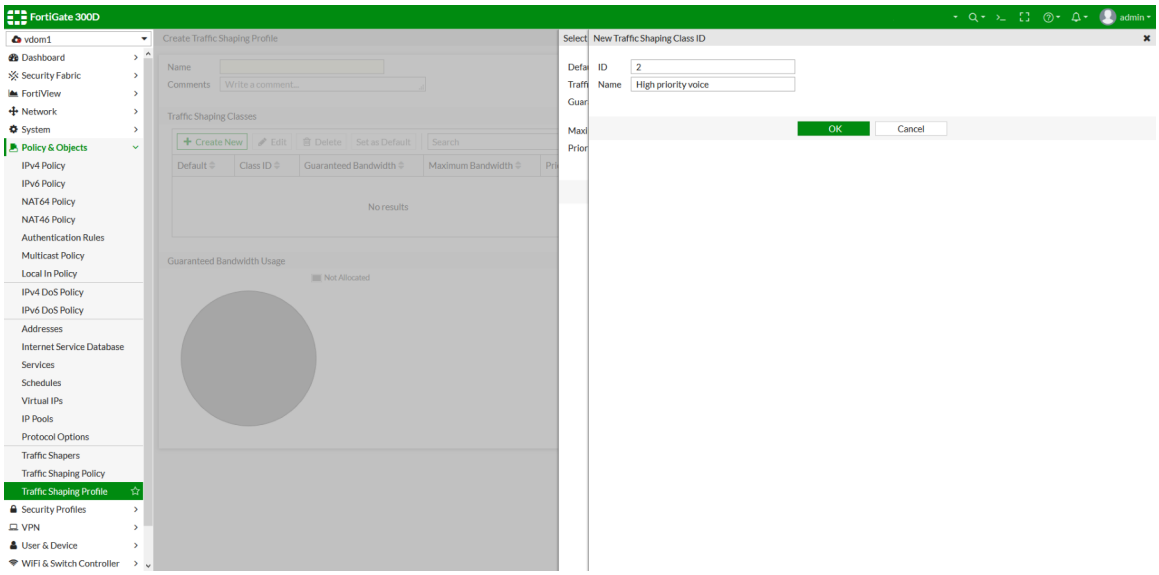


7. Click *OK* to add the class ID.
8. Configure the rest of the profile as needed.
9. Click *OK* to save the profile.

To configure the traffic class ID in an interface:

1. Go to *Network* > *Interfaces*.
2. Edit an existing interface, or create a new one.
3. In the *Traffic Shaping* section, enable *Outbound shaping profile* and *Outbound Bandwidth*.
4. Click *Create*. The *Create Traffic Shaping Profile* window opens.
5. Click *Create New*. The *Select Traffic Shaping Class ID* window opens.
6. Select an existing class ID, or create a new one.

7. Click *OK* to save the class ID.

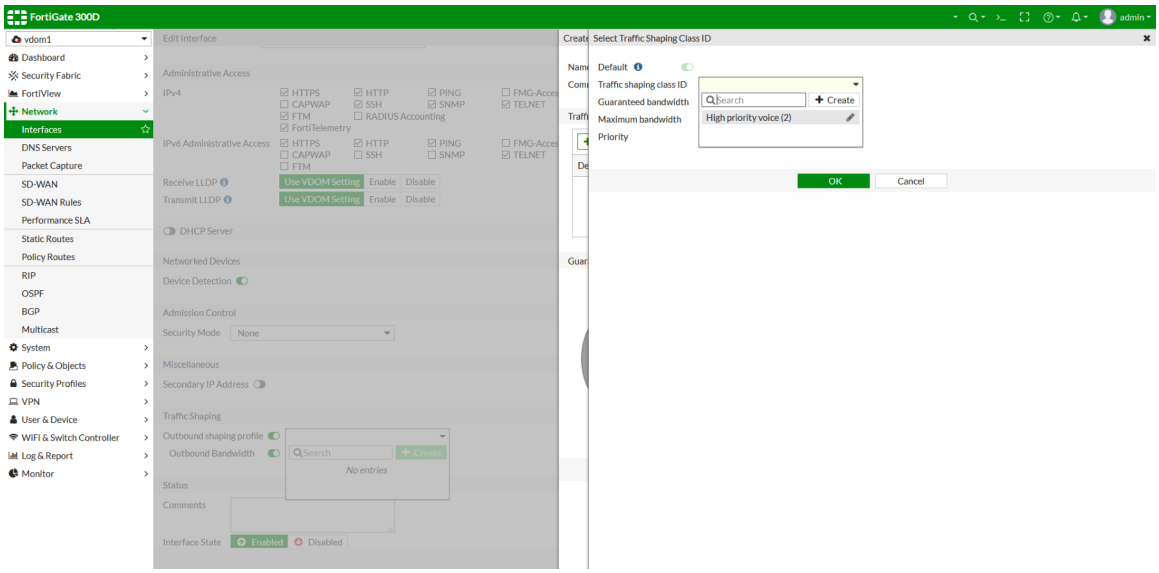

8. Click *OK* to add the class ID .
9. Configure the rest of the interface as needed.
10. Click *OK* to save the interface.

CLI configuration

To configure the traffic class ID in the CLI:

```
config firewall traffic-class
    edit 2
        set class-name "High priority voice."
    next
    ...
end
```

Traffic shaping schedules


In a shaping policy, there are many matching criteria available for administrators to match a specific traffic and apply a traffic shaper or shaping group to the traffic, including using schedules. This feature gives shaping policy the ability to apply different shaping profiles at different times. Administrators can select a one-time schedule, recurring schedule, or schedule group.

Schedule is not a mandatory setting. If it is not set, then the current date and time are not used to match the traffic.

To configure a traffic shaping policy in the GUI:

1. Navigate to *Policy & Objects* > *Traffic Shaping Policy*.
2. Create or edit a *Traffic Shaping Policy*.

3. Enable *Schedule* and select a schedule option.

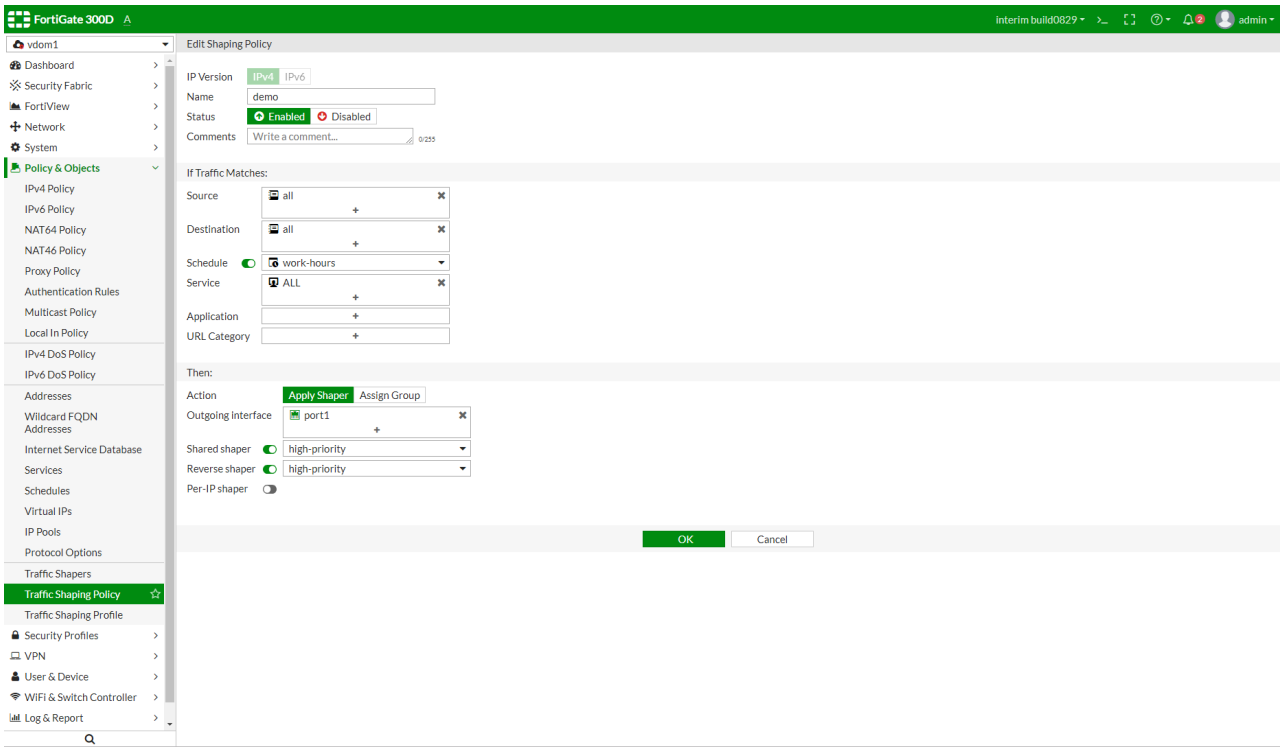

4. Configure other options and click *OK*.

To configure a traffic shaping policy in the CLI:

```
config firewall schedule recurring
    edit "work-hours"
        set start 07:00
        set end 20:00
        set day monday tuesday wednesday thursday friday
    next
end

config firewall shaping-policy
    edit 1
        set name "demo"
        set service "ALL"
        set schedule "work-hours"  <<< Can select schedule from one-time schedule, recurring
schedule or schedule group
        set dstintf "port1"
        set traffic-shaper "high-priority"
        set traffic-shaper-reverse "high-priority"
        set srcaddr "all"
        set dstaddr "all"
    next
end
```

To troubleshoot a traffic shaping policy in the CLI:

The selected schedule is listed in the `iprope`.

```
diagnose firewall iprope list 100015

policy index=1 uuid_idx=0 action=accept
flag (0):
schedule(work-hours)
shapers: orig=high-priority(2/0/134217728) reply=high-priority(2/0/134217728)
cos_fwd=0  cos_rev=0
group=00100015 av=00000000 au=00000000 split=00000000
host=1 chk_client_info=0x0 app_list=0 ips_view=0
misc=0 dd_type=0 dd_mode=0
zone(1): 0 -> zone(1): 9
source(1): 0.0.0.0-255.255.255.255, uuid_idx=28,
dest(1): 0.0.0.0-255.255.255.255, uuid_idx=28,
service(1):
    [0:0x0:0/(0,65535)->(0,65535)] helper:auto
```

QoS assignment and rate limiting for quarantined VLANs

When devices are quarantined, they are isolated from the rest of the network. However, they can still impact the network if not controlled beyond isolation. A quarantined host, which offers heavy traffic, could congest the network and create a DOS-style reduction in service to authorized hosts.

Within the quarantined VLAN, two restrictions are available within the network:

- Traffic policing (also known as rate limiting)
- QoS (Quality of Service) assignment (also known as priority assignment)

Each quarantined host's traffic can be subject to rate limiting and priority adjustment. This reduces the impact that any quarantined host can have on authorized traffic on the network.

To configure QoS assignment and rate limiting for quarantined VLANs:

1. Configure a traffic policy, or use the default "quarantine" policy:

```
config switch-controller traffic-policy
    edit "quarantine"
        set description "Rate control for quarantined traffic"
        set guaranteed-bandwidth 163840
        set guaranteed-burst 8192
        set maximum-burst 163840
        set cos-queue 0
    next
end
```

2. Configure an interface:

```
config system interface
    edit "qtn.aggr1"
        set vdom "root"
        set ip 10.254.254.254 255.255.255.0
        set description "Quarantine VLAN"
        set security-mode captive-portal
        set replacemsg-override-group "auth-intf-qtn.aggr1"
        set device-identification enable
        set snmp-index 30
        set switch-controller-access-vlan enable
```

```
            set switch-controller-traffic-policy "quarantine"
            set color 6
            set interface "aggr1"
            set vlanid 4093
        next
    end
```

By default, `switch-controller-traffic-policy` is empty. You need to apply the necessary traffic policy (not only limited to "quarantine").

Weighted random early detection queuing

You can use the weighted random early detection (WRED) queuing function within traffic shaping.

This topic includes three parts:

- Traffic shaping with queuing
- Burst control in queuing mode
- Multi-stage DSCP marking and class ID in traffic shapers

You cannot configure or view WRED in the GUI; you must use the CLI.



WRED is not supported when traffic is offloaded to an NPU.

Traffic shaping with queuing

Traffic shaping has a queuing option. Use this option to fine-tune the queue by setting the profile queue size or performing random early drop (RED) according to queue usage.

This example shows setting the profile queue size limit to 5 so that the queue can contain a maximum of five packets and more packets are dropped.

To set the profile queue size limit:

```
config firewall shaping-profile
    edit "profile"
        set type queuing
        set default-class-id 31
        config shaping-entries
            edit 31
                set class-id 31
                set guaranteed-bandwidth-percentage 5
                set maximum-bandwidth-percentage 10
                set limit 5  <range from 5 to 10000; default: 1000>
            next
        end
    next
end
```

This example shows performing RED according to queue usage by setting `red-probability`, `min`, and `max`. Setting `red-probability` to `10` means start to drop packets when queue usage reaches the `min` setting. When queue usage reaches the `max` setting, drop 10% of the packets.

- Level 1: when queue is less than `min` packets, drop 0% of packets.
- Level 2: when queue reaches `min` packets, start to drop packets.
- Level 3: when queue usage is between `min` and `max` packets, drop 0–10% of packets by proportion.
- Level 4: when queue (average queue size) is more than `max` packets, drop 100% of packets.

To set RED according to queue usage:

```
config firewall shaping-profile
    edit "profile"
        set type queuing
        set default-class-id 31
        config shaping-entries
            edit 31
                set class-id 31
                set guaranteed-bandwidth-percentage 5
                set maximum-bandwidth-percentage 10
                set red-probability 10 <range from 0 to 20; default: 0 no drop>
                set min 100 <range from 3 to 3000>
                set max 300 <range from 3 to 3000>
            next
        end
    next
end
```

To troubleshoot this function, use the following diagnose commands:

```
diagnose netlink intf-class list <intf>
diagnose netlink intf-qdisc list <intf>
```

Burst control in queuing mode

In a hierarchical token bucket (HTB) algorithm, each traffic class has buckets to allow a burst of traffic. The maximum burst is determined by the bucket size `burst` (for guaranteed bandwidth) and `cburst` (for maximum bandwidth). The shaping profile has `burst-in-msec` and `cburst-in-msec` parameters for each shaping entry (`class id`) to control the bucket size.

This example uses the outbandwidth of the interface as 1 Mbps and the maximum bandwidth of class is 50%.

burst = burst-in-msec * guaranteed bandwidth = 100 ms × 1 Mbps x 50% = 50000 b = 6250 B

cburst = cburst-in-msec * maximum bandwidth = 200 ms × 1 Mbps x 50% = 100000 b = 12500 B

The following example sets `burst-in-msec` to 100 and `cburst-in-msec` to 200.

To set burst control in queuing mode:

```
config firewall shaping-profile
    edit "profile"
        set type queuing
        set default-class-id 31
        config shaping-entries
            edit 31
                set class-id 31
                set guaranteed-bandwidth-percentage 5
                set maximum-bandwidth-percentage 50
```

```
                set burst-in-msec 100 <range from 0 to 2000>
                set cburst-in-msec 200 <range from 0 to 2000>
            next
        end
    next
end
```

Multi-stage DSCP marking and class ID in traffic shapers

Traffic shapers have a multi-stage method so that packets are marked with a different differentiated services code point (DSCP) and `class id` at different traffic speeds. Marking packets with a different DSCP code is for the next hop to classify the packets. The FortiGate benefits by marking packets with a different `class id`. Combined with the egress interface shaping profile, the FortiGate can handle the traffic differently according to its `class id`.

Rule	DSCP code	Class ID
speed < guarantee bandwidth	`diffservcode`	`class id` in shaping policy
guarantee bandwidth < speed < exceed bandwidth	`exceed-dscp`	`exceed-class-id`
exceed bandwidth < speed	`maximum-dscp`	`exceed-class-id`

This example sets the following parameters:

- When the current bandwidth is less than 50 Kbps, mark packets with `diffservcode` 100000 and set `class id` to 10.
- When the current bandwidth is between 50 Kbps and 100 Kbps, mark packets with `exceed-dscp` 111000 and set `exceed-class-id` to 20.
- When the current bandwidth is more than 100 Kbps, mark packets with `maximum-dscp` 111111 and set `exceed-class-id` to 20.

To set multi-stage DSCP marking and class ID in a traffic shaper:

```
config firewall shaper traffic-shaper
    edit "50k-100k-150k"
        set guaranteed-bandwidth 50
        set maximum-bandwidth 150
        set diffserv enable
        set dscp-marking-method multi-stage
        set exceed-bandwidth 100
        set exceed-dscp 111000
        set exceed-class-id 20
        set maximum-dscp 111111
        set diffservcode 100000
    next
end
```

```
config firewall shaping-policy
     edit 1
         set service "ALL"
         set dstintf PORT2
         set srcaddr "all"
         set dstaddr "all"
         set class-id 10
     next
end
```

Traffic shapers also have an `overhead` option that defines the per-packet size overhead used in rate computation.

To set the traffic shaper overhead option:

```
config firewall shaper traffic-shaper
    edit "testing"
        set guaranteed-bandwidth 50
        set maximum-bandwidth 150
        set overhead 14 <range from 0 to 100>
    next
end
```

Examples

Enabling RED for FTP traffic from QA

This first example shows how to enable RED for FTP traffic from QA. This example sets a maximum of 10% of the packets to be dropped when queue usage reaches the maximum value.

To configure the firewall address:

```
config firewall address
    edit QA_team
        set subnet 10.1.100.0/24
    next
end
```

To set the shaping policy to classify traffic into different class IDs:

```
config firewall shaping-policy
    edit 1
        set service HTTPS HTTP
        set dstintf port1
        set srcaddr QA_team
        set dstaddr all
        set class-id 10
    next
    edit 2
        set service FTP
        set dstintf port1
        set srcaddr QA_team
        set dstaddr all
        set class-id 20
    next
end
```

To set the shaping policy to define the speed of each class ID:

```
config firewall shaping-profile
    edit QA_team_profile
       set type queuing
       set default-class-id 30
            config shaping-entries
                edit 1
```

```
                    set class-id 10
                    set guaranteed-bandwidth-percentage 50
                    set maximum-bandwidth-percentage 100
                next
                edit 2
                    set class-id 20
                    set guaranteed-bandwidth-percentage 30
                    set maximum-bandwidth-percentage 60
                    set red-probability 10
                next
                edit 3
                    set class-id 30
                    set guaranteed-bandwidth-percentage 20
                    set maximum-bandwidth-percentage 50
                next
            end
    next
end
```

To apply the shaping policy to the interface:

```
config sys interface
    edit port1
        set outbandwidth 10000
        set egress-shaping-profile QA_team_profile
    next
end
```

To use diagnose commands to troubleshoot:

```
# diagnose netlink intf-class list port1
class htb 1:1 root rate 1250000Bps ceil 1250000Bps burst 1600B/8 mpu 0B overhead 0B cburst
1600B/8 mpu 0B overhead 0B level 7 buffer [00004e20] cbuffer [00004e20]
 Sent 11709 bytes 69 pkt (dropped 0, overlimits 0 requeues 0)
 rate 226Bps 2pps backlog 0B 0p
 lended: 3 borrowed: 0 giants: 0
 tokens: 18500 ctokens: 18500
class htb 1:10 parent 1:1 leaf 10: prio 1 quantum 62500 rate 625000Bps ceil 1250000Bps burst
1600B/8 mpu 0B overhead 0B cburst 1600B/8 mpu 0B overhead 0B level 0 buffer [00009c40]
cbuffer [00004e20]
 Sent 0 bytes 0 pkt (dropped 0, overlimits 0 requeues 0)
 rate 0Bps 0pps backlog 0B 0p
 lended: 0 borrowed: 0 giants: 0
 tokens: 40000 ctokens: 20000
class htb 1:20 parent 1:1 leaf 20: prio 1 quantum 37500 rate 375000Bps ceil 750000Bps burst
1599B/8 mpu 0B overhead 0B cburst 1599B/8 mpu 0B overhead 0B level 0 buffer [0001046a]
cbuffer [00008235]
 Sent 0 bytes 0 pkt (dropped 0, overlimits 0 requeues 0)
 rate 0Bps 0pps backlog 0B 0p
 lended: 0 borrowed: 0 giants: 0
 tokens: 66666 ctokens: 33333
class htb 1:30 parent 1:1 leaf 30: prio 1 quantum 25000 rate 250000Bps ceil 625000Bps burst
1600B/8 mpu 0B overhead 0B cburst 1600B/8 mpu 0B overhead 0B level 0 buffer [000186a0]
cbuffer [00009c40]
 Sent 11709 bytes 69 pkt (dropped 0, overlimits 0 requeues 0)
 rate 226Bps 2pps backlog 0B 0p
```

```
 lended: 66 borrowed: 3 giants: 0
 tokens: 92500 ctokens: 37000
class red 20:1 parent 20:0

 # diagnose netlink intf-qdisc list port1
qdisc htb 1: root refcnt 5 r2q 10 default 30 direct_packets_stat 0 ver 3.17
 Sent 18874 bytes 109 pkt (dropped 0, overlimits 5 requeues 0)
 backlog 0B 0p
qdisc pfifo 10: parent 1:10 refcnt 1 limit 1000p
 Sent 0 bytes 0 pkt (dropped 0, overlimits 0 requeues 0)
 backlog 0B 0p
qdisc red 20: parent 1:20 refcnt 1 limit 4000000B min 300000B max 1000000B ewma 9 Plog 23
Scell_log 20 flags 0
 Sent 0 bytes 0 pkt (dropped 0, overlimits 0 requeues 0)
 backlog 0B 0p
  marked 0 early 0 pdrop 0 other 0
qdisc pfifo 30: parent 1:30 refcnt 1 limit 1000p
 Sent 18874 bytes 109 pkt (dropped 0, overlimits 0 requeues 0)
 backlog 0B 0p
```

Marking QA traffic with a different DSCP

This second example shows how to mark QA traffic with a different DSCP according to real-time traffic speed.

To configure the firewall address:

```
config firewall address
    edit QA_team
        set subnet 10.1.100.0/24
    next
end
```

To configure the firewall shaper traffic shaper:

```
config firewall shaper traffic-shaper
    edit "500k-1000k-1500k"
        set guaranteed-bandwidth 500
        set maximum-bandwidth 1500
        set diffserv enable
        set dscp-marking-method multi-stage
        set exceed-bandwidth 1000
        set exceed-dscp 111000
        set maximum-dscp 111111
        set diffservcode 100000
    next
end

config firewall shaping-policy
    edit QA_team
        set service "ALL"
        set dstintf port1
        set traffic-shaper "500k-1000k-1500k"
        set traffic-shaper-reverse "500k-1000k-1500k"
        set srcaddr "QA_team"
        set dstaddr "all"
```

```
    next
end
```

Security Profiles

This section contains information about configuring FortiGate security features, including:

- Antivirus on page 867
- Web filter on page 907
- DNS filter on page 958
- Application control on page 980
- Intrusion prevention on page 987
- Email filter on page 991
- Data leak prevention on page 1004
- VoIP solutions on page 1015
- ICAP on page 1026
- Web application firewall on page 1029
- Inspection modes on page 1033
- Overrides on page 1050
- Custom signatures on page 1060



If you are unable to view a security profile feature, go to *System* > *Feature Visibility* to enable it.

Antivirus

FortiOS offers the unique ability to implement both flow-based and proxy-based antivirus concurrently, depending on the traffic type, users, and locations. Flow-based antivirus offers higher throughput performance, while proxy-based solutions are useful to mitigate stealthy malicious codes.

FortiOS includes two preloaded antivirus profiles:

- *default*
- *wifi-default*

You can customize these profiles, or you can create your own to inspect certain protocols, remove viruses, analyze suspicious files with FortiSandbox, and apply botnet protection to network traffic. Once configured, you can add the antivirus profile to a firewall policy.



This functionality requires a subscription to FortiGuard Antivirus.

The following topics provide information about antivirus profiles:

- Content disarm and reconstruction for antivirus on page 868
- FortiGuard outbreak prevention for antivirus on page 870
- External malware block list for antivirus on page 873
- Checking flow antivirus statistics on page 876
- CIFS support on page 878
- Databases on page 885

The following topics provide information about sandbox inspection with antivirus:

- Using FortiSandbox appliance with antivirus on page 885
- Using FortiSandbox Cloud with antivirus on page 896


Content disarm and reconstruction for antivirus

Content disarm and reconstruction (CDR) allows the FortiGate to sanitize Microsoft Office documents and PDF files by removing active content, such as hyperlinks, embedded media, javascript, macros, and so on (disarm) from the files without affecting the integrity of its textual content (reconstruction). It allows network admins to protect their users from malicious document files.

- CDR can be performed on Microsoft Office document and PDF files, including those that are in ZIP archives.
- CDR is supported on HTTP, SMTP, POP3, IMAP. SMTP splice and client-comfort mode are not supported.
- CDR does not support flow-based inspection modes.
- Local disk CDR quarantine can be used on FortiGate models that contain a hard disk or disks.

Files processed by CDR can have the original copy quarantined on the FortiGate, allowing administrators to observe them. The original copies can also be obtained in the event of a false positive.

Network topology example

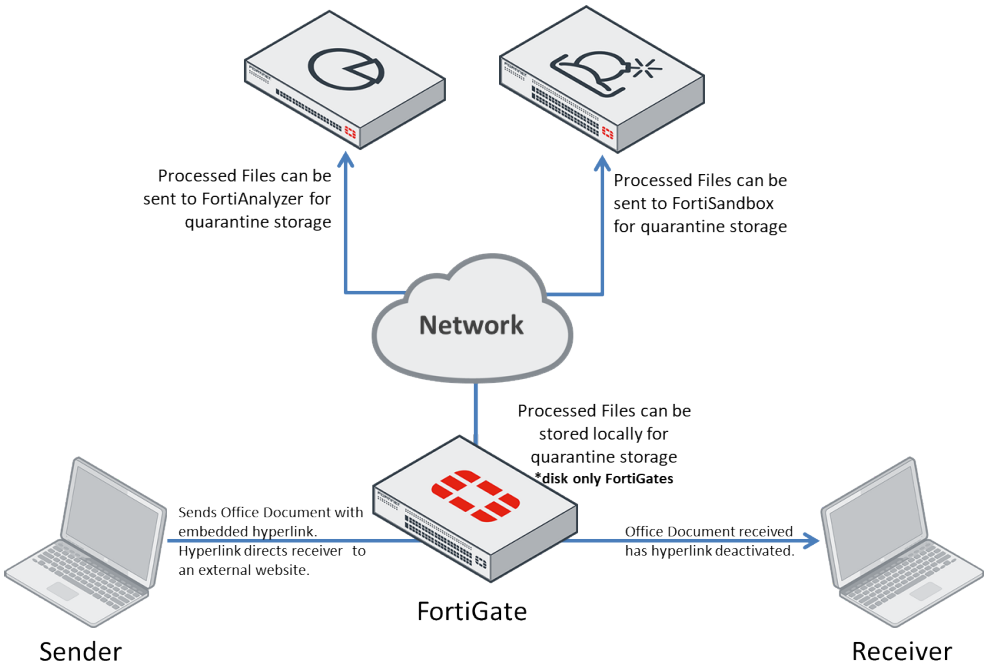


Configuring the feature

In order to configure antivirus to work with CDR, you must enable CDR on your antivirus profile, set the quarantine location, and then fine-tune the CDR detection parameters.

To enable CDR on your antivirus profile:

1. Go to *Security Profiles* > *AntiVirus*.
2. Edit an antivirus profile, or create a new one.
3. Enable the toggle for *Content Disarm and Reconstruction* under *APT Protection Options*.

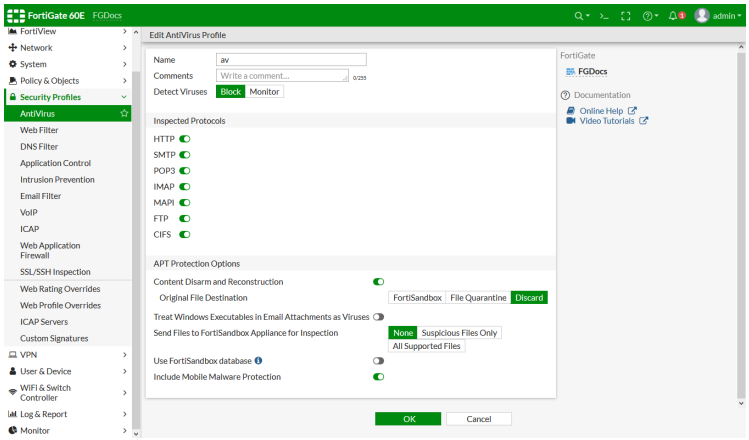

To set a quarantine location:

1. Go to *Security Profiles* > *AntiVirus*.
2. Edit an antivirus profile, or create a new one.
3. Select a quarantine location from the available options: *Discard*, *File Quarantine*, or *FortiSandbox*.

Discard	The default setting, which discards the original document file.
File Quarantine	Saves the original document file to disk (if possible) or a connected FortiAnalyzer based on the FortiGate's log settings, visible through *Config Global* > *Config Log FortiAnalyzer Setting*.
FortiSandbox	Saves the original document file to a connected FortiSandbox.

4. Click *Apply*.

To fine-tune CDR detection parameters in the CLI:

- Select which active content to detect/process:
  By default, all active office and PDF content types are enabled. To fine-tune CDR to ignore certain content, you must disable that particular content parameter. The example below configures the CDR to ignore Microsoft Office macros.

```
config antivirus profile
    edit av
        config content-disarm
            set office-macro disable
```

```
        end
    next
end
```

- Detect but do not modify active content:
  By default, CDR will disarm any detected documents containing active content. To prevent CDR from disarming documents, you can set it to operate in detect-only mode. To do this, the option *detect-only* must be enabled.

```
config antivirus profile
    edit av
        config content-disarm
            set detect-only enable
        end
    next
end
```

- Disable the CDR cover page:
  By default, a cover page will be attached to the file's content when the file has been processed by CDR. To disable the cover page, the `cover-page` parameter needs to be disabled.

```
config antivirus profile
    edit av
        config content-disarm
            set cover-page disable
        end
    next
end
```

FortiGuard outbreak prevention for antivirus

FortiGuard outbreak prevention allows the FortiGate antivirus database to be subsidized with third-party malware hash signatures curated by the FortiGuard. The hash signatures are obtained from external sources such as VirusTotal, Symantec, Kaspersky, and other third-party websites and services.


This feature provides the mechanism for antivirus to query the FortiGuard with the hash of a scanned file. If the FortiGuard returns a match from its many curated signature sources, the scanned file is deemed to be malicious.

The concept of FortiGuard outbreak prevention is to detect zero-day malware in a collaborative approach.

Support and limitations

- FortiGuard outbreak prevention can be used in both proxy-based and flow-based policy inspections across all supported protocols.
- FortiGuard outbreak prevention does not support AV in quick scan mode.
- FortiGate must be registered with a valid FortiGuard outbreak prevention license before this feature can be used.

Network topology example

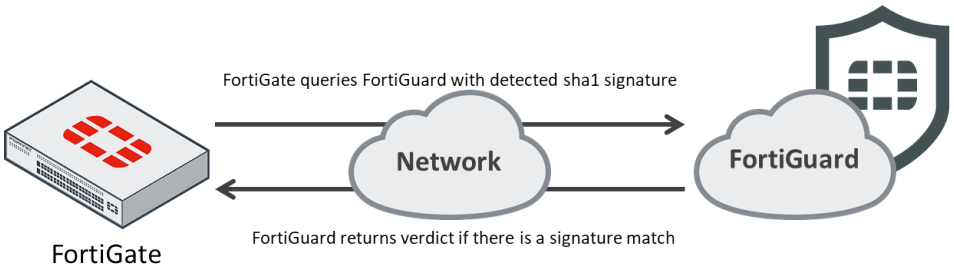


Configuring the feature

In order for antivirus to work with an external block list, you must register the FortiGate with a FortiGuard outbreak prevention license and enable FortiGuard outbreak prevention in the antivirus profile.

To obtain/renew a FortiGuard antivirus license:

1. See the following link for instructions on how to purchase or renew a FortiGuard outbreak prevention license: https://video.fortinet.com/products/fortigate/6.0/how-to-purchase-or-renew-fortiguard-services-6-0
2. Once the license has been activated, you can verify its status by going to *Global* > *System* > *FortiGuard*.

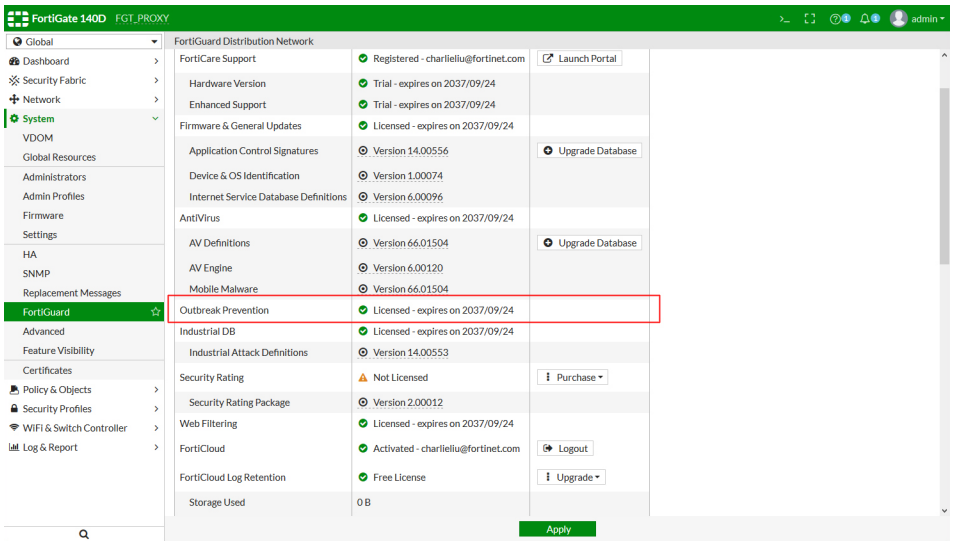

To enable FortiGuard outbreak prevention in the antivirus profile:

1. Go to *Security Profiles* > *AntiVirus*.
2. Edit an antivirus profile, or create a new one.
3. Select the toggle to enable *Use FortiGuard Outbreak Prevention Database*.
4. Click *Apply*.

Diagnostics and debugging

- Check if FortiGate has outbreak prevention license:

```
# diagnose debug rating
Locale       : english

Service      : Web-filter
Status       : Enable
License      : Contract

Service      : Antispam
Status       : Disable

Service      : Virus Outbreak Prevention
Status       : Enable
License      : Contract

-=- Server List (Tue Feb 19 16:36:15 2019) -=-

IP                    Weight    RTT Flags  TZ    Packets  Curr Lost Total Lost
       Updated Time
192.168.100.185          -218      2 DI     -8        113          0          0 Tue
Feb 19 16:35:55 2019
```

- Scanunit daemon showing outbreak prevention verdict:

```
# diagnose debug application scanunit -1
Debug messages will be on for 30 minutes.

# diagnose debug enable

# su 4739 job 1 open
su 4739 req vfid 1 id 1 ep 0 new request, size 313, policy id 1, policy type 0
su 4739 req vfid 1 id 1 ep 0 received; ack 1, data type: 0
su 4739 job 1 request info:
su 4739 job 1   client 10.1.100.11:39412 server 172.16.200.44:80
su 4739 job 1   object_name 'zhvo_test.com'
su 4739 file-typing NOT WANTED options 0x0 file_filter no
su 4739 enable databases 0b (core mmdb extended)
su 4739 job 1 begin http scan
su 4739 scan file 'zhvo_test.com' bytes 68
su 4739 job 1 outbreak-prevention scan, level 0, filename 'zhvo_test.com'
su 4739 scan result 0
su 4739 job 1 end http scan
su 4739 job 1 inc pending tasks (1)
su 4739 not wanted for analytics: analytics submission is disabled (m 0 r 0)
su 4739 job 1 suspend
su 4739 outbreak-prevention recv error
su 4739 ftgd avquery id 0 status 1
su 4739 job 1 outbreak-prevention infected entryid=0
su 4739 report AVQUERY infection priority 1
su 4739 insert infection AVQUERY SUCCEEDED loc (nil) off 0 sz 0 at index 0 total
infections 1 error 0
su 4739 job 1 dec pending tasks 0
su 4739 job 1 send result
```

```
su 4739 job 1 close
su 4739 outbreak-prevention recv error
```

External malware block list for antivirus

The external malware block list is a new feature introduced in FortiOS 6.2.0, which falls under the umbrella of outbreak prevention.

This feature provides another means of supporting the AV Database by allowing users to add their own malware signatures in the form of MD5, SHA1, and SHA256 hashes.

This feature provides a mechanism for antivirus to retrieve an external malware hash list from a remote server and polls the hash list every *n* minutes for updates.


Support and limitations

Malware detection using the external malware block list can be used in both proxy-based and flow-based policy inspections.

Just like FortiGuard outbreak prevention, external dynamic block list is not supported in AV default scan mode.

Using different types of hashes simultaneously may slow down the performance of malware scanning. For this reason, users are recommended to only using one type of hash (either MD5, SHA1, or SHA256), not all three simultaneously.

Network topology example

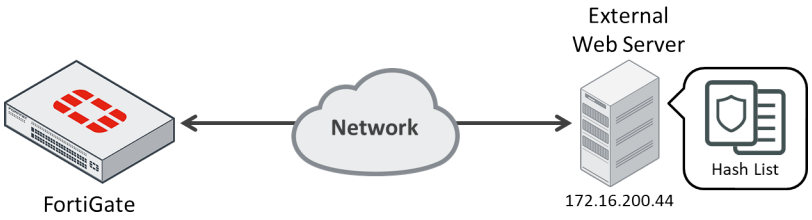

Configuring the feature

To configure antivirus to work with external block list:

1. Create the malware hash list
   The malware hash list follows a strict format in order for its contents to be valid. Malware hash signature entries must be separated into each line. A valid signature needs to follow the format below:

```
# MD5 Entry with hash description
aa67243f746e5d76f68ec809355ec234  md5_sample1


# SHA1 Entry with hash description
a57983cb39e25ab80d7d3dc05695dd0ee0e49766  sha1_sample2

# SHA256 Entry with hash description
ae9bc0b4c5639d977d720e4271da06b50f7c60d1e2070e9c75cc59ab30e49379  sha256_sample1


# Entry without hash description
0289b0d967cb7b1fb1451339c7b9818a621903090e0020366ab415c549212521
```

```
# Invalid entries
7688499dc71b932feb126347289c0b8a_md5_sample2
7614e98badca10b5e2d08f8664c519b7a906fbd5180ea5d04a82fce9796a4b87sha256_sample3
```

2. Configure the external malware block list source:
   a. Go to *Global* > *Security Fabric* > *Fabric Connectors* and click *Create New*.
   b. Select *Malware Hash*.

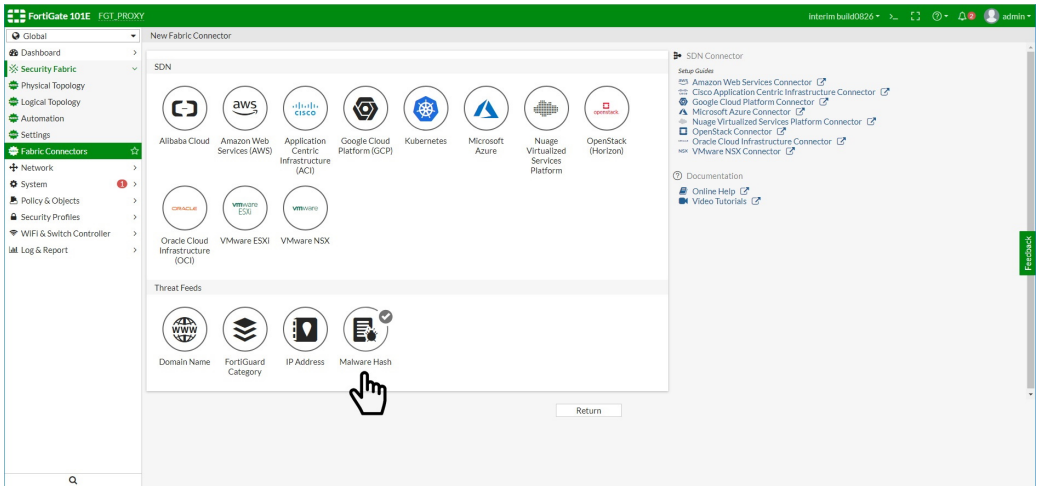


   c. Fill out the fields as shown. The URI must point to the malware hash list on the remote server.

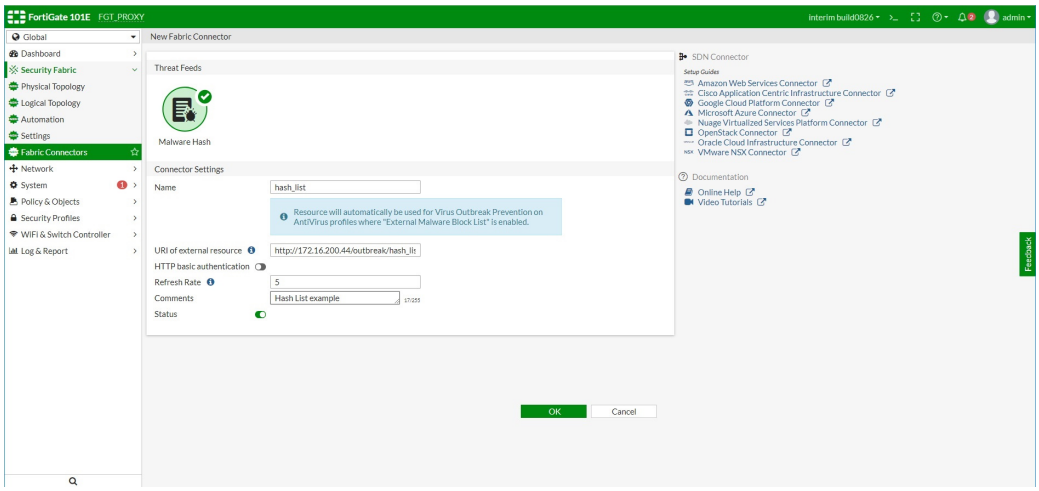


   d. Click *OK*.
      The malware hash source object is now created.

To view entries inside the malware block list, click the *View Entries* button:

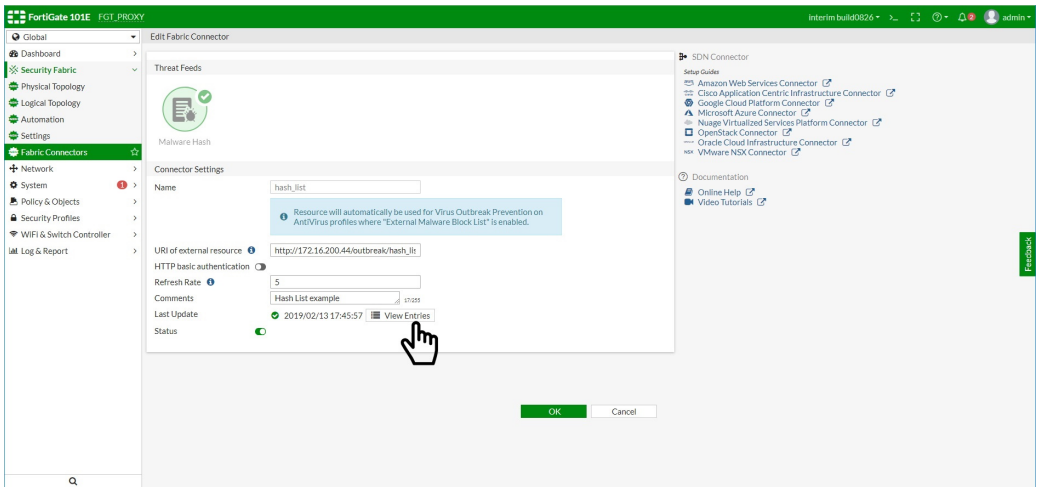

The malware hash threat feed is shown (*hash_list*):

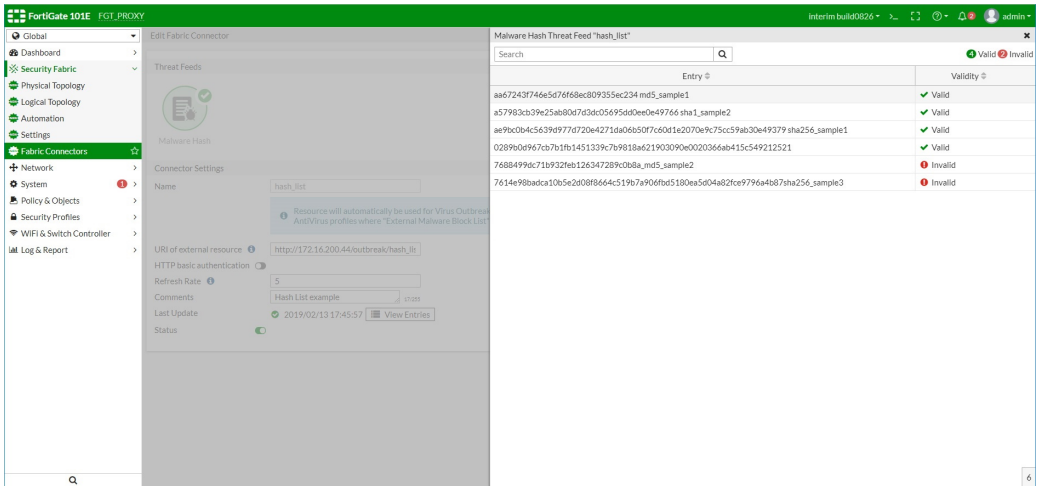

3. Enable the external malware block list in the antivirus profile:

```
config antivirus profile
    edit <av_profile>
        config outbreak-prevention
            set external-blocklist enable
        end
    next
end
```

Antivirus is now ready to use the external malware block list.

Diagnostics and debugging

Check if the `scanunit` daemon has updated itself with the external hashes:

```
FGT_PROXY # config global
FGT_PROXY (global) # diagnose sys scanunit malware-list list
md5 'aa67243f746e5d76f68ec809355ec234' profile 'hash_list' description 'md5_sample1'
sha1 'a57983cb39e25ab80d7d3dc05695dd0ee0e49766' profile 'hash_list' description 'sha1_
sample2'
sha256 '0289b0d967cb7b1fb1451339c7b9818a621903090e0020366ab415c549212521' profile 'hash_
```

```
list' description ''
sha256 'ae9bc0b4c5639d977d720e4271da06b50f7c60d1e2070e9c75cc59ab30e49379' profile 'hash_
list' description 'sha256_sample1'
```


Checking flow antivirus statistics

This feature provides a flow antivirus statistics check, and an API for SNMP to get AV statistics.

Two CLI commands are used to show and clear the antivirus statistics:

```
diagnose ips av stats show
diagnose ips av stats clear
```

This example uses the following topology:

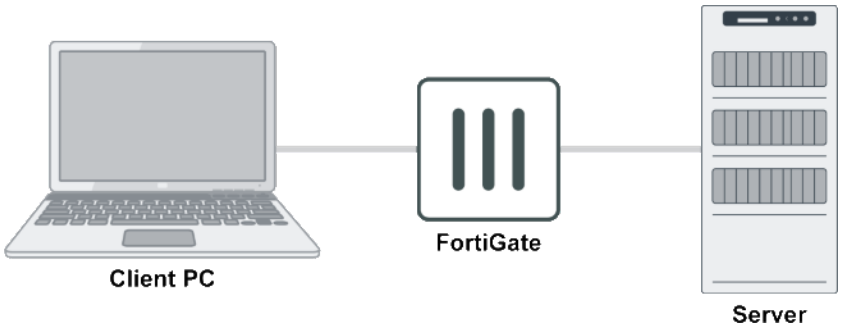

To check flow antivirus statistics:

1. Create an antivirus profile:

```
config antivirus profile
    edit "av-test"
        config http
            set options scan avmonitor
        end
        config ftp
            set options scan quarantine
        end
    next
end
```

2. Enable the profile on a firewall policy:

```
config firewall policy
    edit 1
        set name "policy1"
        set srcintf "port2"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set fsso disable
        set av-profile "av-test"
```

```
        set ssl-ssh-profile "custom-deep-inspection"
        set nat enable
    next
end
```

3. On the client PC, download the EICAR Standard Anti-Virus Test File via HTTP.
4. Check the antivirus statistics on the FortiGate. As the action is set to monitor for HTTP, `HTTP virus detected` is increased by 1:

```
# diagnose ips av stats show
AV stats:
HTTP virus detected: 1
HTTP virus blocked: 0
SMTP virus detected: 0
SMTP virus blocked: 0
POP3 virus detected: 0
POP3 virus blocked: 0
IMAP virus detected: 0
IMAP virus blocked: 0
NNTP virus detected: 0
NNTP virus blocked: 0
FTP virus detected: 0
FTP virus blocked: 0
SMB virus detected: 0
SMB virus blocked: 0
```

5. On the client PC, download the EICAR file via FTP.
6. Check the antivirus statistics on the FortiGate. As the action is set to quarantine for FTP, `FTP virus detected` and `FTP virus blocked` are both increased by 1:

```
# diagnose ips av stats show
AV stats:
HTTP virus detected: 1
HTTP virus blocked: 0
SMTP virus detected: 0
SMTP virus blocked: 0
POP3 virus detected: 0
POP3 virus blocked: 0
IMAP virus detected: 0
IMAP virus blocked: 0
NNTP virus detected: 0
NNTP virus blocked: 0
FTP virus detected: 1
FTP virus blocked: 1
SMB virus detected: 0
SMB virus blocked: 0
```

7. Check the antivirus statistics using snmpwalk:

```
root:~# snmpwalk -c public -v 1 10.1.100.6 1.3.6.1.4.1.12356.101.8.2.1.1
iso.3.6.1.4.1.12356.101.8.2.1.1.1.1 = Counter32: 2  (fgAvVirusDetected)
iso.3.6.1.4.1.12356.101.8.2.1.1.2.1 = Counter32: 1  (fgAvVirusBlocked)
iso.3.6.1.4.1.12356.101.8.2.1.1.3.1 = Counter32: 1  (fgAvHTTPVirusDetected)
iso.3.6.1.4.1.12356.101.8.2.1.1.4.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.5.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.6.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.7.1 = Counter32: 0
```

```
iso.3.6.1.4.1.12356.101.8.2.1.1.8.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.9.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.10.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.11.1 = Counter32: 1  (fgAvFTPVirusDetected)
iso.3.6.1.4.1.12356.101.8.2.1.1.12.1 = Counter32: 1  (fgAvFTPVirusBlocked)
iso.3.6.1.4.1.12356.101.8.2.1.1.13.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.14.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.15.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.16.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.17.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.18.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.19.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.20.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.21.1 = Counter32: 0
iso.3.6.1.4.1.12356.101.8.2.1.1.22.1 = Counter32: 0
```

8. Optionally, reset the antivirus statistics to zero:

```
diagnose ips av stats clear
```

CIFS support

File filtering and antivirus scanning for proxy-based inspection on Common Internet File System (CIFS) traffic is supported.

File filtering for CIFS is performed by inspecting the first 4 KB of the file to identify the file's magic number. If a match occurs, CIFS file filtering prevents the CIFS command that contains that file from running.

The CIFS security profile handles the configuration of file filtering on CIFS. The antivirus profile handles the antivirus configuration for CIFS scanning.

For a CIFS profile to be available for assignment in a policy, the policy must use proxy inspection mode. See Proxy mode inspection on page 1035 for details.

The following are not supported by CIFS scanning in proxy inspection mode:

- File types and infections within archive files cannot be detected.
- Oversized files cannot be detected.
- Special condition archive files (encrypted, corrupted, mailbomb, and so on) marked by the antivirus engine are blocked automatically.

Supported file types

File filter supports the following file types:

File Type Name	Description
7z	Match 7-zip files
arj	Match arj compressed files
cab	Match Windows cab files
lzh	Match lzh compressed files

File Type Name	Description
rar	Match rar archives
tar	Match tar files
zip	Match zip files
bzip	Match bzip files
gzip	Match gzip files
bzip2	Match bzip2 files
xz	Match xz files
bat	Match Windows batch files
msc	Match msc files
uue	Match uue files
mime	Match mime files
base64	Match base64 files
binhex	Match binhex files
bin	Match bin files
elf	Match elf files
exe	Match Windows executable files
hta	Match hta files
html	Match html files
jad	Match jad files
class	Match class files
cod	Match cod files
javascript	Match javascript files
msoffice	Match MS-Office files. For example, doc, xls, ppt, and so on.
msofficex	Match MS-Office XML files. For example, docx, xlsx, pptx, and so on.
fsg	Match fsg files
upx	Match upx files
petite	Match petite files
aspack	Match aspack files
prc	Match prc files
sis	Match sis files

File Type Name	Description
hlp	Match Windows help files
activemime	Match activemime files
jpeg	Match jpeg files
gif	Match gif files
tiff	Match tiff files
png	Match png files
bmp	Match bmp files
unknown	Match unknown files
mpeg	Match mpeg files
mov	Match mov files
mp3	Match mp3 files
wma	Match wma files
wav	Match wav files
pdf	Match pdf files
avi	Match avi files
rm	Match rm files
torrent	Match torrent files
msi	Match Windows Installer msi bzip files
mach-o	Match Mach object files
dmg	Match Apple disk image files
.net	Match .NET files
xar	Match xar archive files
chm	Match Windows compiled HTML help files
iso	Match ISO archive files
crx	Match Chrome extension files

Configure file-type filtering and antivirus scanning on CIFS traffic

To configure file-type filtering and antivirus scanning on CIFS traffic:

1. Configure a CIFS domain controller on page 881
2. Configure a CIFS profile on page 881
3. Configure an antivirus profile on page 883

Configure a CIFS domain controller

The domain controller must be configured when CIFS traffic is encrypted, like SMB 3.0 traffic. The configuration tells the FortiGate the network location of the domain controller and the superuser credentials.

To configure the CIFS domain controller:

```
config cifs domain-controller
    edit "DOMAIN"
        set domain-name "EXAMPLE.COM"
        set username "admin-super"
        set password **********
        set ip 172.16.201.40
    next
end
```

Configure a CIFS profile

To create a CIFS profile, configure the server credential type and add file filter entries.

Set the CIFS server credential type

The CIFS server credential type can be `none`, `credential-replication`, or `credential-keytab`.

none

The CIFS profile assumes the CIFS traffic is unencrypted (used with SMB 2.0). This is the default value.

```
config cifs profile
    edit "cifs"
        set server-credential-type none
    next
end
```

credential-replication

To decrypt CIFS traffic, FortiOS obtains the session key from the domain controller by logging in to the superuser account. The domain controller must be configured.

```
config cifs profile
    edit "cifs"
        set server-credential-type credential-replication
        set domain-controller "DOMAIN"
    next
end
```

Variable	Description
domain-controller <string>	The previously configured domain to decrypt CIFS traffic for.

credential-keytab

To decrypt CIFS traffic, FortiOS uses a series of keytab values. This method is used when the SMB connection is authenticated by Kerberos. Keytab entries must be configured, and are stored in FortiOS in plaintext.

```
config cifs profile
    edit "cifs"
        set server-credential-type credential-keytab
        config server-keytab
            edit "keytab1"
                set keytab
"BQIAAABFAAEAC0VYQU1QTEUuQ09NAAdleGFtcGxlAAAAAVUmAlwBABIAILdV5P6NXT8RrTvapcMJQxDYCjRQiD0Bzxh
wS9h0VgyM"
            next
        end
    next
end
```

Variable	Description
keytab <keytab>	Base64 encoded keytab file containing the credentials of the server.

Configure CIFS profile file filtering

Multiple file filter entries can be added to a profile.

To configure a file filter entry in a CIFS profile:

```
config cifs profile
    edit "cifs"
        config file-filter
            set status {enable | disable}
            set log {enable | disable}
            config entries
                edit <filter>
                    set comment <string>
                    set action {log | block}
                    set direction {incoming | outgoing | any}
                    set file-type <file_type>
                next
            end
        end
    next
end
```

Variable	Description
status {enable | disable}	Enable/disable file filter (default = enable).
log {enable | disable}	Enable/disable file filter logging (default = enable).
comment <string>	A brief comment describing the entry.
action {log | block}	The action to take for matched files: • `log`: Allow the content and write a log message (default). • `block`: Block the content and write a log message.
direction {incoming | outgoing | any}	Match files transmitted in the session's originating (`incoming`) and/or reply (`outgoing`) direction (default = any).

Variable	Description
file-type <file_type>	The file types to be matched (default = none). See Supported file types on page 878 for details.

Configure an antivirus profile

The antivirus profile handles the antivirus configuration for CIFS scanning.

To configure an antivirus profile:

```
config antivirus profile
    edit "av"
        ...
        config cifs
            set options {scan avmonitor quarantine}
            set archive-block {encrypted corrupted partiallycorrupted multipart nested
mailbomb fileslimit timeout unhandled}
            set archive-log {encrypted corrupted partiallycorrupted multipart nested
mailbomb fileslimit timeout unhandled}
            set emulator {enable | disable}
            set outbreak-prevention {disabled | files | full-archive}
        end
    next
end
```

Variable	Description
options {scan avmonitor quarantine}	Enable/disable CIFS antivirus scanning, monitoring, and quarantine.
archive-block {encrypted corrupted partiallycorrupted multipart nested mailbomb fileslimit timeout unhandled}	Select the archive types to block: • `encrypted`: Block encrypted archives. • `corrupted`: Block corrupted archives. • `partiallycorrupted`: Block partially corrupted archives. • `multipart`: Block multipart archives. • `nested`: Block nested archives. • `mailbomb`: Block mail bomb archives. • `fileslimit`: Block exceeded archive files limit. • `timeout`: Block scan timeout. • `unhandled`: Block archives that FortiOS cannot open.
archive-log {encrypted corrupted partiallycorrupted multipart nested mailbomb fileslimit timeout unhandled}	Select the archive types to log: • `encrypted`: Log encrypted archives. • `corrupted`: Log corrupted archives. • `partiallycorrupted`: Log partially corrupted archives. • `multipart`: Log multipart archives. • `nested`: Log nested archives. • `mailbomb`: Log mail bomb archives. • `fileslimit`: Log exceeded archive files limit. • `timeout`: Log scan timeout.

Variable	Description
	• `unhandled`: Log archives that FortiOS cannot open.
emulator {enable | disable}	Enable/disable the virus emulator (default = enable).
outbreak-prevention {disabled | files | full-archive}	Enable the virus outbreak prevention service: • `disabled`: Disabled (default). • `files`: Analyze files as sent, not the content of archives. • `full-archive`: Analyze files, including the content of archives.

Log examples

File-type detection events generated by CIFS profiles are logged in the `utm-cifs` log category. Antivirus detection over the CIFS protocol generates logs in the `utm-virus` category. See the FortiOS Log Message Reference for more information.

Logs generated by CIFS profile file filter:

```
date=2019-03-28 time=10:39:19 logid="1800063001" type="utm" subtype="cifs" eventtype="cifs-
filefilter" level="notice" vd="vdom1" eventtime=1553794757 msg="File was detected by file
filter." direction="incoming" action="passthrough" service="CIFS" srcip=10.1.100.11
dstip=172.16.200.44 srcport=33372 dstport=445 srcintf="wan2" srcintfrole="wan"
dstintf="wan1" dstintfrole="wan" policyid=1 proto=16 profile="cifs" filesize="1154"
filename="virus\\test.png" filtername="2" filetype="png"

date=2019-03-28 time=10:39:12 logid="1800063001" type="utm" subtype="cifs" eventtype="cifs-
filefilter" level="notice" vd="vdom1" eventtime=1553794751 msg="File was detected by file
filter." direction="incoming" action="passthrough" service="CIFS" srcip=10.1.100.11
dstip=172.16.200.44 srcport=33370 dstport=445 srcintf="wan2" srcintfrole="wan"
dstintf="wan1" dstintfrole="wan" policyid=1 proto=16 profile="cifs" filesize="81975"
filename="virus\\screen.png" filtername="2" filetype="png"

date=2019-03-28 time=10:33:55 logid="1800063000" type="utm" subtype="cifs" eventtype="cifs-
filefilter" level="warning" vd="vdom1" eventtime=1553794434 msg="File was blocked by file
filter." direction="incoming" action="blocked" service="CIFS" srcip=10.1.100.11
dstip=172.16.200.44 srcport=33352 dstport=445 srcintf="wan2" srcintfrole="wan"
dstintf="wan1" dstintfrole="wan" policyid=1 proto=16 profile="cifs" filesize="28432"
filename="filetypes\\mpnotify.exe" filtername="3" filetype="exe"

date=2019-03-28 time=10:33:45 logid="1800063000" type="utm" subtype="cifs" eventtype="cifs-
filefilter" level="warning" vd="vdom1" eventtime=1553794424 msg="File was blocked by file
filter." direction="incoming" action="blocked" service="CIFS" srcip=10.1.100.11
dstip=172.16.200.44 srcport=33348 dstport=445 srcintf="wan2" srcintfrole="wan"
dstintf="wan1" dstintfrole="wan" policyid=1 proto=16 profile="cifs" filesize="96528"
filename="filetypes\\winmine.exe" filtername="3" filetype="exe"
```

Logs generated by AV profile for infections detected over CIFS:

```
date=2019-04-09 time=15:19:02 logid="0204008202" type="utm" subtype="virus"
eventtype="outbreak-prevention" level="warning" vd="vdom1" eventtime=1554848342519005401
msg="Blocked by Virus Outbreak Prevention service." action="blocked" service="SMB"
sessionid=177 srcip=10.1.100.11 dstip=172.16.200.44 srcport=37444 dstport=445 srcintf="wan2"
srcintfrole="wan" dstintf="wan1" dstintfrole="wan" policyid=1 proto=6 direction="incoming"
filename="outbreak\\zhvo_test.com" quarskip="File-was-not-quarantined."
```

```
virus="503e99fe40ee120c45bc9a30835e7256fff3e46a" dtype="File Hash"
filehash="503e99fe40ee120c45bc9a30835e7256fff3e46a" filehashsrc="fortiguard" profile="av"
analyticssubmit="false" crscore=50 craction=2 crlevel="critical"

date=2019-04-09 time=15:18:59 logid="0211008192" type="utm" subtype="virus"
eventtype="infected" level="warning" vd="vdom1" eventtime=1554848339909808987 msg="File is
infected." action="blocked" service="SMB" sessionid=174 srcip=10.1.100.11
dstip=172.16.200.44 srcport=37442 dstport=445 srcintf="wan2" srcintfrole="wan"
dstintf="wan1" dstintfrole="wan" policyid=1 proto=6 direction="incoming"
filename="sample\\eicar.com" quarskip="File-was-not-quarantined." virus="EICAR_TEST_FILE"
dtype="Virus" ref="http://www.fortinet.com/ve?vn=EICAR_TEST_FILE" virusid=2172 profile="av"
analyticscksum="275a021bbfb6489e54d471899f7db9d1663fc695ec2fe2a2c4538aabf651fd0f"
analyticssubmit="false" crscore=50 craction=2 crlevel="critical"
```

Databases

The antivirus scanning engine uses a virus signatures database to record the unique attributes of each infection. The antivirus scan searches for these signatures and when one is discovered, the FortiGate unit determines if the file is infected and takes action.

All FortiGate units have the normal antivirus signature database. Some models also have additional databases that you can use. The database that you use depends on your network and security needs.

Normal	Includes currently spreading viruses, as determined by the FortiGuard Global Security Research Team. These viruses are the greatest threat.
Extended	Includes the normal database, as well as recent viruses that are no longer active. This is the default setting. These viruses may have been spreading within the last year but have since nearly or completely disappeared.
Extreme	Includes the extended database, as well as a large collection of zoo viruses. These are viruses that have not spread in a long time and are largely dormant. Some zoo viruses might rely on operating systems and hardware that are no longer widely used.

The extended virus definitions database is the default setting and provides comprehensive antivirus protection. This coverage comes at a cost because more processing requires additional resources.

To change the antivirus database:

```
config antivirus settings
    set default-db {normal | extended | extreme}
end
```

Using FortiSandbox appliance with antivirus

Antivirus can use FortiSandbox to supplement its detection capabilities. In real-world situations, networks are always under the threat of zero-day attacks.


Antivirus can submit potential zero-day viruses to FortiSandbox for inspection. Based on FortiSandbox's analysis, the FortiGate can supplement its own antivirus database with FortiSandbox's database to detect files determined as

malicious or risky by FortiSandbox. This helps FortiGate antivirus detect zero-day viruses and malware whose signatures are not found in the FortiGate antivirus database.

Support and limitations

- FortiSandbox can be used with antivirus in both proxy-based and flow-based inspection modes.
- Default scan mode antivirus cannot submit only suspicious files to FortiSandbox. It can only do the following:
  - Submit every file to FortiSandbox for inspection.
  - Not submit anything.
- With FortiSandbox enabled, legacy scan mode antivirus can do the following:
  - Submit only suspicious files to FortiSandbox for inspection.
  - Submit every file to FortiSandbox for inspection.
  - Not submit anything.

Network topology example

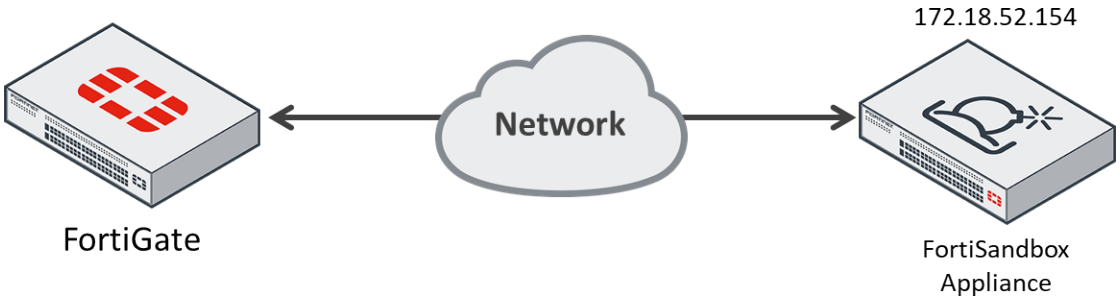


Configuring the feature

To configure antivirus to work with an external block list, the following steps are required:


1. Enable FortiSandbox on the FortiGate.
2. Authorize FortiGate on the FortiSandbox.
3. Enable FortiSandbox inspection.
4. Enable use of the FortiSandbox database.

To enable FortiSandbox on the FortiGate:


1. Go to *Global* > *Security Fabric* > *Settings*.
2. Enable *Sandbox Inspection*.

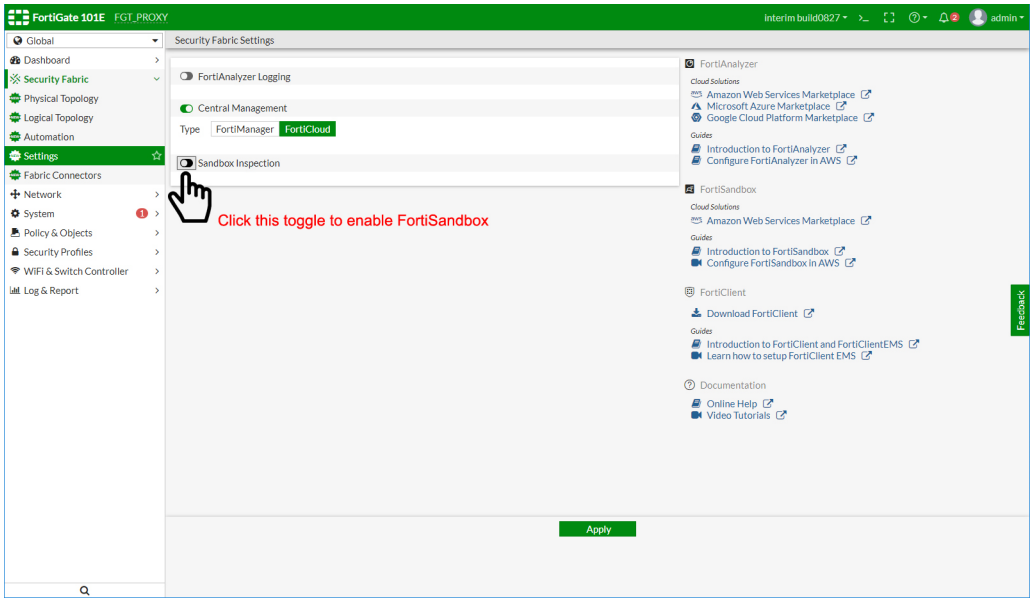

3. Enter the IP address of the FortiSandbox.
4. Add an optional *Notifier email* if desired.

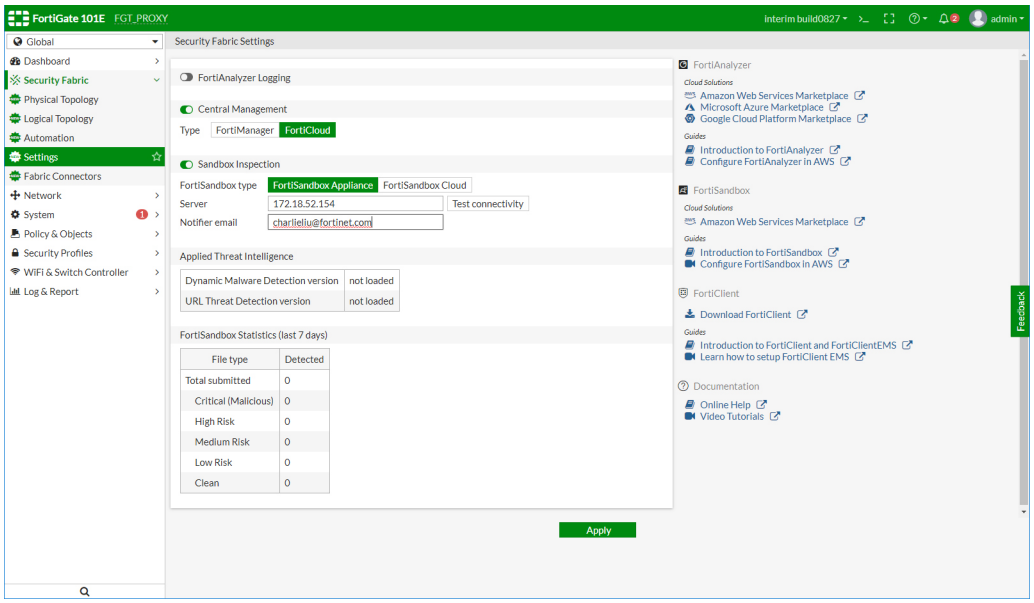


5. At this point, selecting *Test connectivity* will return an unreachable status. This is expected, because the FortiGate is not yet authorized by the FortiSandbox.

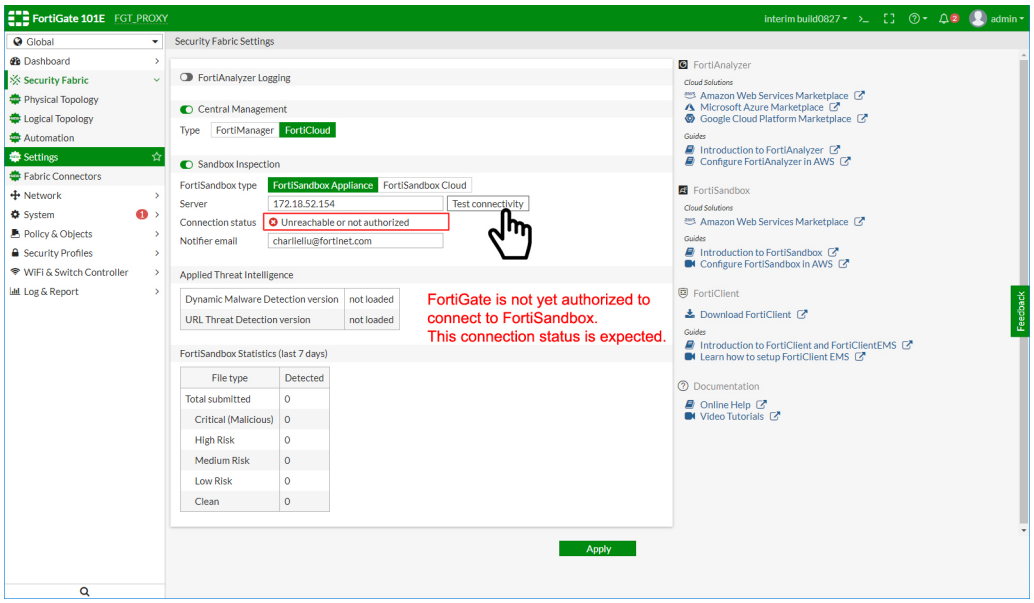

6. Click *Apply* to save the settings.


To authorize FortiGate on the FortiSandbox:

1. In the FortiSandbox Appliance GUI, go to *Scan Input* > *Device*.

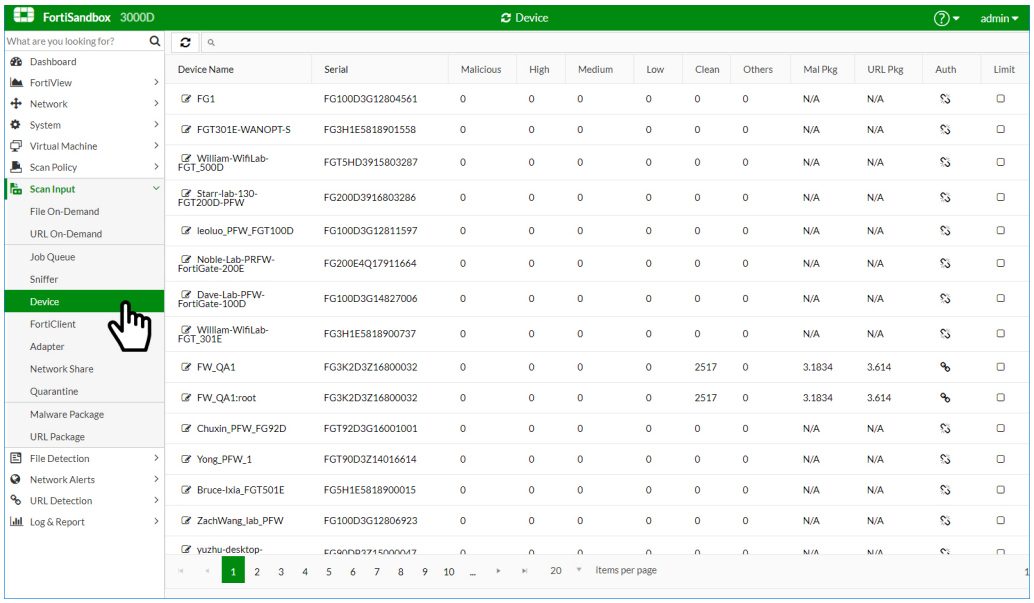


2. Use the FortiGate serial number to quickly locate the desired FortiGate and select the *link* icon to authorize the FortiGate.

3. Enable the desired VDOM in the same manner.

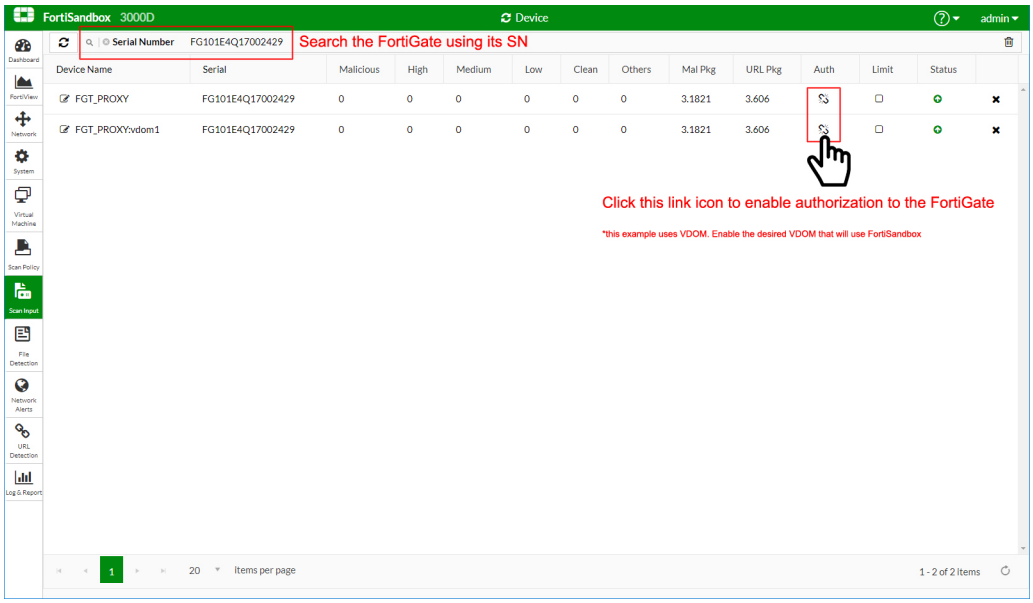


4. The *link* icon changes from an open to closed link. This indicates that the FortiSandbox has authorized this FortiGate.

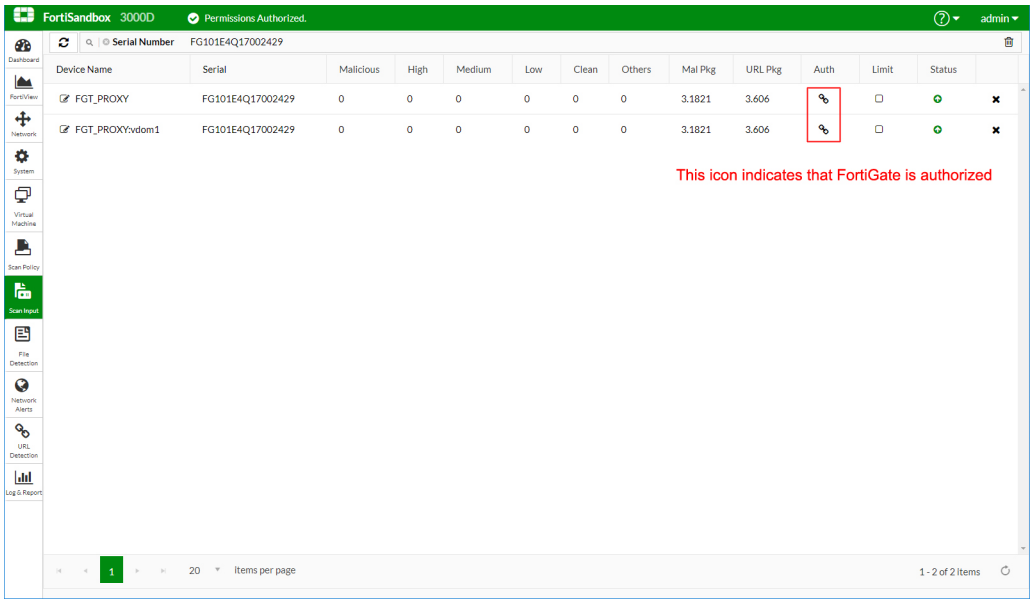


5. In the FortiGate GUI, go to *Global* > *Security Fabric* > *Settings*.

6. Click *Test connectivity*. The FortiGate is now authorized and the status displays as *Connected*.

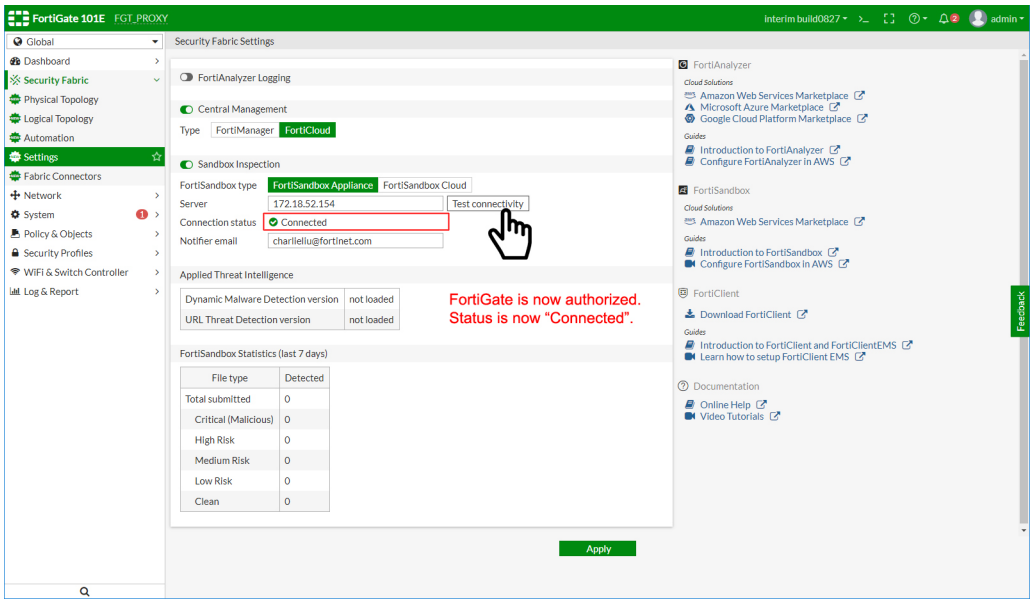


7. FortiSandbox options are now displayed in the *AV Profile* page.

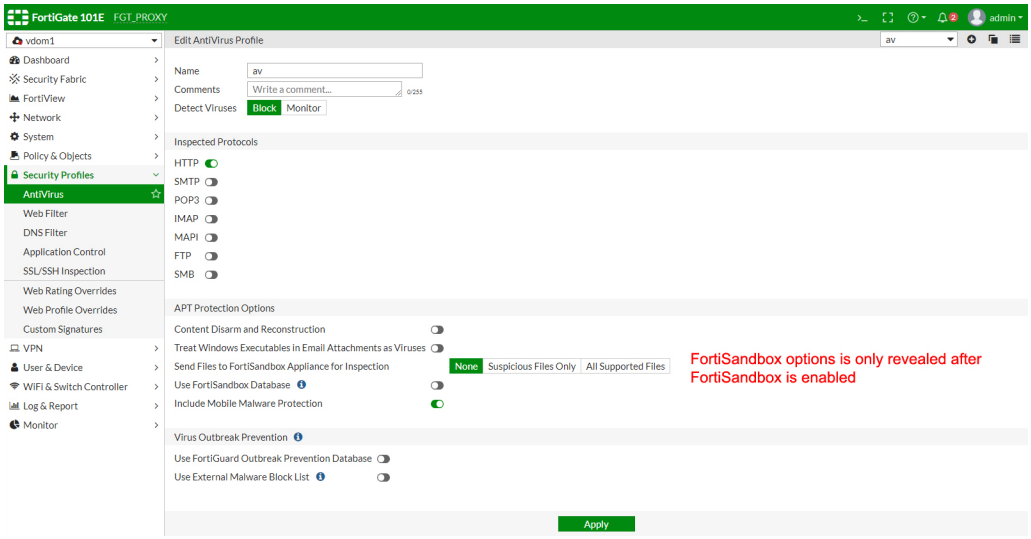


To enable FortiSandbox inspection:


1. Go to *Security Profiles* > *AntiVirus*.
2. Enable FortiSandbox inspection by selecting either *Suspicious Files Only* or *All Supported Files*.

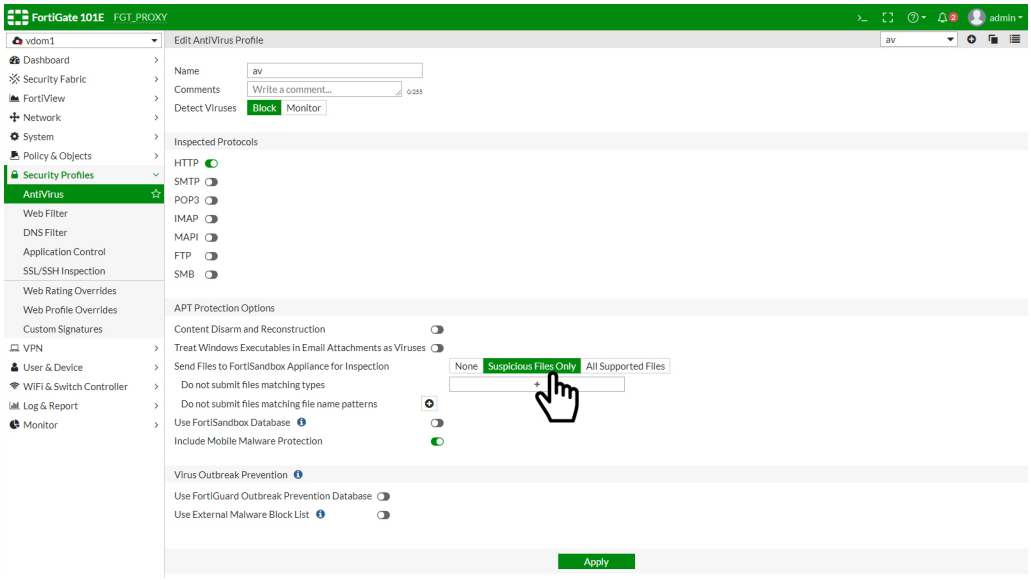

3. Files can be excluded from being sent to FortiSandbox based on their file types by choosing from a list of supported file types.

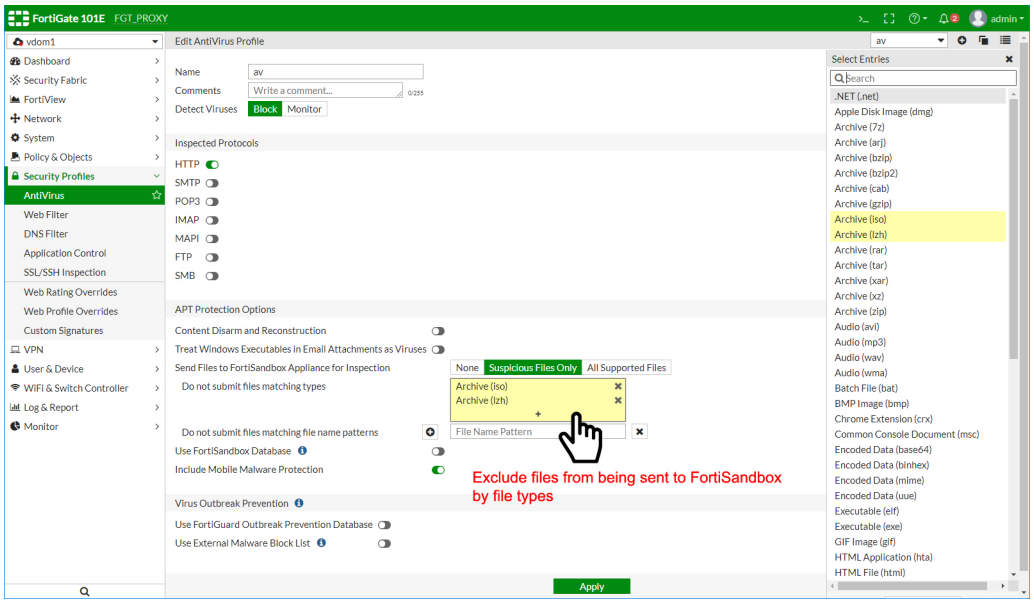


4. Files can also be excluded from being sent to FortiSandbox by using wildcard patterns.

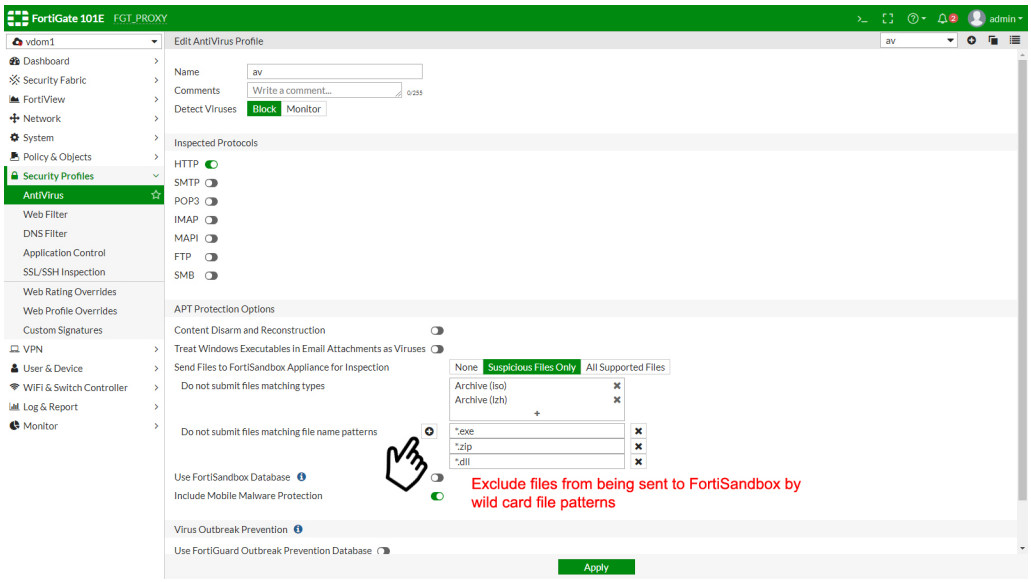

5. Click *Apply*.

To enable use of the FortiSandbox database:

1. Go to *Security Profiles* > *AntiVirus*
2. Enable *Use FortiSandbox Database*.

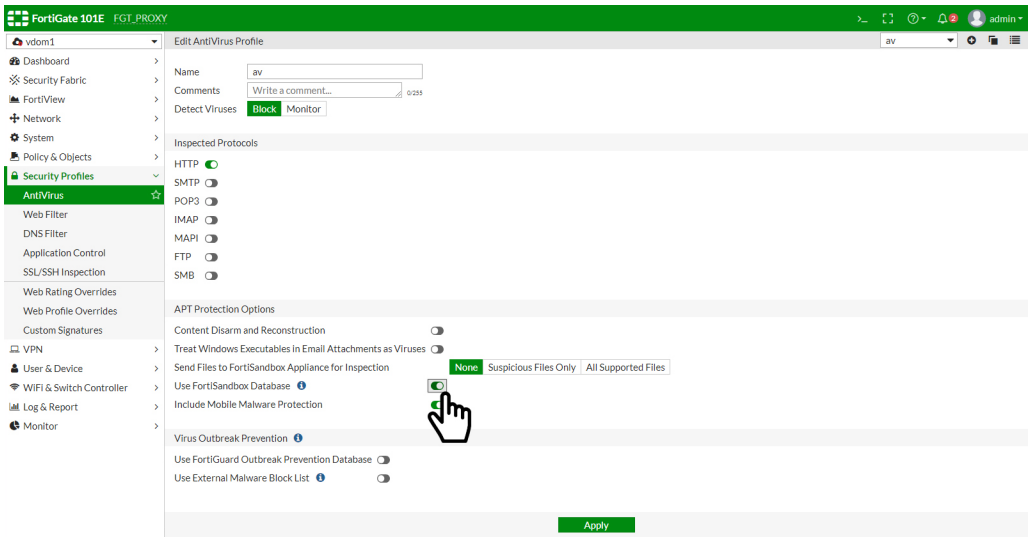

3. Click *Apply*.

Diagnostics and Debugging

Debug on the FortiGate side

- Update daemon:

```
FGT_PROXY (global) # diagnose debug application quarantined -1
FGT_PROXY (global) # diagnose debug enable

quar_req_fsa_file()-890: fsa ext list new_version (1547781904)
quar_fsb_handle_quar()-1439: added a req-6 to fortisandbox-fsb5, vfid=1, oftp-name=[].
__quar_start_connection()-908: start server fortisandbox-fsb5-172.18.52.154 in vdom-1
[103] __ssl_cert_ctx_load: Added cert /etc/cert/factory/root_Fortinet_Factory.cer, root
ca Fortinet_CA, idx 0 (default)
[551] ssl_ctx_create_new_ex: SSL CTX is created
[578] ssl_new: SSL object is created
upd_cfg_extract_av_db_version[378]-version=06002000AVDB00201-00066.01026-1901301530
upd_cfg_extract_ids_db_version[437]-version=06002000NIDS02403-00014.00537-1901300043
upd_cfg_extract_ids_db_version[437]-version=06002000APDB00103-00006.00741-1512010230
upd_cfg_extract_ids_db_version[437]-version=06002000ISDB00103-00014.00537-1901300043
upd_cfg_extract_ibdb_botnet_db_version[523]-version=06002000IBDB00101-00004.00401-
1901281000
upd_cfg_extract_av_db_version[378]-version=06002000AVDB00201-00066.01026-1901301530
upd_cfg_extract_ids_db_version[437]-version=06002000NIDS02403-00014.00537-1901300043
upd_cfg_extract_ids_db_version[437]-version=06002000APDB00103-00006.00741-1512010230
upd_cfg_extract_ids_db_version[437]-version=06002000ISDB00103-00014.00537-1901300043
upd_cfg_extract_ibdb_botnet_db_version[523]-version=06002000IBDB00101-00004.00401-
1901281000
upd_cfg_extract_av_db_version[378]-version=06002000AVDB00201-00066.01026-1901301530
upd_cfg_extract_ids_db_version[437]-version=06002000NIDS02403-00014.00537-1901300043
upd_cfg_extract_ids_db_version[437]-version=06002000APDB00103-00006.00741-1512010230
upd_cfg_extract_ids_db_version[437]-version=06002000ISDB00103-00014.00537-1901300043
upd_cfg_extract_ibdb_botnet_db_version[523]-version=06002000IBDB00101-00004.00401-
1901281000
upd_cfg_extract_av_db_version[378]-version=06002000AVDB00201-00066.01026-1901301530
upd_cfg_extract_ids_db_version[437]-version=06002000NIDS02403-00014.00537-1901300043
upd_cfg_extract_ids_db_version[437]-version=06002000APDB00103-00006.00741-1512010230
upd_cfg_extract_ids_db_version[437]-version=06002000ISDB00103-00014.00537-1901300043
upd_cfg_extract_ibdb_botnet_db_version[523]-version=06002000IBDB00101-00004.00401-
1901281000
upd_cfg_extract_av_db_version[378]-version=06002000AVDB00201-00066.01026-1901301530
upd_cfg_extract_ids_db_version[437]-version=06002000NIDS02403-00014.00537-1901300043
upd_cfg_extract_ids_db_version[437]-version=06002000APDB00103-00006.00741-1512010230
upd_cfg_extract_ids_db_version[437]-version=06002000ISDB00103-00014.00537-1901300043
upd_cfg_extract_ibdb_botnet_db_version[523]-version=06002000IBDB00101-00004.00401-
1901281000
quar_remote_recv_send()-731: dev=fortisandbox-fsb2 xfer-status=0
__quar_build_pkt()-408: build req(id=337, type=4) for vdom-vdom1, len=99, oftp_name=
__quar_send()-470: dev buffer -- pos=0, len=99
quar_remote_send()-520: req(id=337, type=4) read response, dev=fortisandbox-fsb2, xfer_
status=1, buflen=12
quar_remote_recv_send()-770: dev-fortisandbox-fsb2, oevent=4, nevent=1, xfer-status=1
quar_remote_recv_send()-731: dev=fortisandbox-fsb3 xfer-status=0
__quar_build_pkt()-408: build req(id=338, type=6) for vdom-vdom1, len=93, oftp_name=
__quar_send()-470: dev buffer -- pos=0, len=93
quar_remote_send()-520: req(id=338, type=6) read response, dev=fortisandbox-fsb3, xfer_
```

```
status=1, buflen=12
quar_remote_recv_send()-770: dev-fortisandbox-fsb3, oevent=4, nevent=1, xfer-status=1
quar_remote_recv_send()-731: dev=fortisandbox-fsb5 xfer-status=0
__quar_build_pkt()-408: build req(id=340, type=6) for vdom-vdom1, len=93, oftp_name=
__quar_send()-470: dev buffer -- pos=0, len=93
quar_remote_send()-520: req(id=340, type=6) read response, dev=fortisandbox-fsb5, xfer_
status=1, buflen=12
quar_remote_recv_send()-770: dev-fortisandbox-fsb5, oevent=4, nevent=1, xfer-status=1
quar_remote_recv_send()-731: dev=fortisandbox-fsb2 xfer-status=1
quar_remote_recv()-662: dev(fortisandbox-fsb2) received a packet: len=69, type=1
quar_remote_recv()-718: file-[337] is accepted by server(fortisandbox-fsb2).
quar_put_job_req()-332: Job 337 deleted
quar_remote_recv_send()-731: dev=fortisandbox-fsb4 xfer-status=0
__quar_build_pkt()-408: build req(id=339, type=6) for vdom-vdom1, len=93, oftp_name=
__quar_send()-470: dev buffer -- pos=0, len=93
quar_remote_send()-520: req(id=339, type=6) read response, dev=fortisandbox-fsb4, xfer_
status=1, buflen=12
quar_remote_recv_send()-770: dev-fortisandbox-fsb4, oevent=4, nevent=1, xfer-status=1
quar_remote_recv_send()-731: dev=fortisandbox-fsb1 xfer-status=0
__quar_build_pkt()-408: build req(id=336, type=4) for vdom-root, len=98, oftp_name=
__quar_send()-470: dev buffer -- pos=0, len=98
...
__get_analytics_stats()-19: Received an ANALYTICS_STATS request, vfid: 0
__quar_req_handler()-127: Request 0 was handled successfully
__get_analytics_stats()-19: Received an ANALYTICS_STATS request, vfid: 0
__quar_req_handler()-127: Request 0 was handled successfully
__get_analytics_stats()-19: Received an ANALYTICS_STATS request, vfid: 0
__quar_req_handler()-127: Request 0 was handled successfully
__get_analytics_stats()-19: Received an ANALYTICS_STATS request, vfid: 0
__quar_req_handler()-127: Request 0 was handled successfully
quar_fsb_handle_quar()-1439: added a req-6 to fortisandbox-fsb1, vfid=1, oftp-name=[].
__quar_start_connection()-908: start server fortisandbox-fsb1-172.18.52.154 in vdom-1
[103] __ssl_cert_ctx_load: Added cert /etc/cert/factory/root_Fortinet_Factory.cer, root
ca Fortinet_CA, idx 0 (default)
[551] ssl_ctx_create_new_ex: SSL CTX is created
[578] ssl_new: SSL object is created
upd_cfg_extract_av_db_version[378]-version=06002000AVDB00201-00066.01026-1901301530
upd_cfg_extract_ids_db_version[437]-version=06002000NIDS02403-00014.00537-1901300043
upd_cfg_extract_ids_db_version[437]-version=06002000APDB00103-00006.00741-1512010230
upd_cfg_extract_ids_db_version[437]-version=06002000ISDB00103-00014.00537-1901300043
upd_cfg_extract_ibdb_botnet_db_version[523]-version=06002000IBDB00101-00004.00401-
1901281000
quar_remote_recv_send()-731: dev=fortisandbox-fsb1 xfer-status=0
__quar_build_pkt()-408: build req(id=2, type=6) for vdom-vdom1, len=93, oftp_name=
__quar_send()-470: dev buffer -- pos=0, len=93
quar_remote_send()-520: req(id=2, type=6) read response, dev=fortisandbox-fsb1, xfer_
status=1, buflen=12
quar_remote_recv_send()-770: dev-fortisandbox-fsb1, oevent=4, nevent=1, xfer-status=1
quar_remote_recv_send()-731: dev=fortisandbox-fsb1 xfer-status=1
quar_remote_recv()-662: dev(fortisandbox-fsb1) received a packet: len=767, type=1
quar_store_analytics_report()-590: Analytics-report return
file=/tmp/fsb/83bb2d9928b03a68b123730399b6b9365b5cc9a5a77f8aa007a6f1a499a13b18.json.gz,
buf_sz=735
quar_store_analytics_report()-597: The request
'83bb2d9928b03a68b123730399b6b9365b5cc9a5a77f8aa007a6f1a499a13b18' score is 1
quar_remote_recv()-718: file-[2] is accepted by server(fortisandbox-fsb1).
```

```
quar_put_job_req()-332: Job 2 deleted
quar_monitor_connection_func()-978: monitoring dev fortisandbox-fsb1
quar_monitor_connection_func()-978: monitoring dev fortisandbox-fsb1
__get_analytics_stats()-19: Received an ANALYTICS_STATS request, vfid: 0
__quar_req_handler()-127: Request 0 was handled successfully
__get_analytics_stats()-19: Received an ANALYTICS_STATS request, vfid: 0
__quar_req_handler()-127: Request 0 was handled successfully
quar_monitor_connection_func()-978: monitoring dev fortisandbox-fsb1
quar_stop_connection()-1006: close connection to server(fortisandbox-fsb1)
[193] __ssl_data_ctx_free: Done
[805] ssl_free: Done
[185] __ssl_cert_ctx_free: Done
[815] ssl_ctx_free: Done
[796] ssl_disconnect: Shutdown
```

- Appliance FortiSandbox diagnostics:

```
FGT_PROXY # config global
FGT_PROXY (global) # diagnose test application quarantined 1
Total remote&local devices: 8, any task full? 0
System have disk, vdom is enabled, mgmt=1, ha=2
xfer-fas is enabled: ips-archive dlp-archive, realtime=yes, taskfull=no
    addr=0.0.0.0/514, source-ip=0.0.0.0, keep-alive=no.
    ssl_opt=0, hmac_alg=0
    License=0, content_archive=0, arch_pause=0.

global-fas is disabled.
forticloud-fsb is disabled.
fortisandbox-fsb1 is enabled: analytics, realtime=yes, taskfull=no
    addr=172.18.52.154/514, source-ip=0.0.0.0, keep-alive=no.
    ssl_opt=3, hmac_alg=0
fortisandbox-fsb2 is enabled: analytics, realtime=yes, taskfull=no
    addr=172.18.52.154/514, source-ip=0.0.0.0, keep-alive=no.
    ssl_opt=3, hmac_alg=0
fortisandbox-fsb3 is enabled: analytics, realtime=yes, taskfull=no
    addr=172.18.52.154/514, source-ip=0.0.0.0, keep-alive=no.
    ssl_opt=3, hmac_alg=0
fortisandbox-fsb4 is enabled: analytics, realtime=yes, taskfull=no
    addr=172.18.52.154/514, source-ip=0.0.0.0, keep-alive=no.
    ssl_opt=3, hmac_alg=0
fortisandbox-fsb5 is enabled: analytics, realtime=yes, taskfull=no
    addr=172.18.52.154/514, source-ip=0.0.0.0, keep-alive=no.
    ssl_opt=3, hmac_alg=0
fortisandbox-fsb6 is enabled: analytics, realtime=yes, taskfull=no
    addr=172.18.52.154/514, source-ip=0.0.0.0, keep-alive=no.
    ssl_opt=3, hmac_alg=0
global-faz is disabled.
global-faz2 is disabled.
global-faz3 is disabled.
```

- Checking FortiSandbox analysis statistics:

```
FGT_PROXY (global) # diagnose test application quarantine 7
Total: 0

Statistics:
        vfid: 0, detected: 0, clean: 0, risk_low: 0, risk_med: 0, risk_high: 0, limit_
reached:0
```

```
        vfid: 3, detected: 0, clean: 0, risk_low: 0, risk_med: 0, risk_high: 0, limit_
reached:0
        vfid: 4, detected: 0, clean: 0, risk_low: 0, risk_med: 0, risk_high: 0, limit_
reached:0

FGT_PROXY (global) #
```

Debug on the FortiSandbox side

- Appliance FortiSandbox OFTP debug:

```
# diagnose-debug device FG101E4Q17002429

[2019/01/31 00:48:21] LOGIN->SUCCEED: Serial(FG101E4Q17002429), HOSTNAME(FGT_PROXY)
[2019/01/31 00:48:21] FG101E4Q17002429 VDOM: vdom1
[2019/01/31 00:48:21] FG101E4Q17002429 suspicious stats START_TIME: 1548290749
[2019/01/31 00:48:21] FG101E4Q17002429 suspicious stats END_TIME: 1548895549
[2019/01/31 00:48:21] FG101E4Q17002429 opd_data_len=37 clean=2 detected=2 risk_low=0
risk_med=0 risk_high=0 sus_limit=0
[2019/01/31 00:48:21] FG101E4Q17002429 ENTERING->HANDLE_SEND_FILE.
[2019/01/31 00:48:21] FG101E4Q17002429 ENTERING->HANDLE_SEND_FILE.
[2019/01/31 00:48:21] FG101E4Q17002429 INCOMING->FGT->VDOM: vdom1
[2019/01/31 00:48:21] FG101E4Q17002429 INCOMING->FGT->VDOM: vdom1
[2019/01/31 00:48:21] FG101E4Q17002429 INCOMING->IMG_VERSION: 6.2.0.0818
[2019/01/31 00:48:21] FG101E4Q17002429 INCOMING->IMG_VERSION: 6.2.0.0818
[2019/01/31 00:48:21] INCOMING->FGT: FG101E4Q17002429, VDOM: vdom1
[2019/01/31 00:48:21] INCOMING->FGT: FG101E4Q17002429, VDOM: vdom1
[2019/01/31 00:48:21] FG101E4Q17002429 INCOMING->TYPE: 0
[2019/01/31 00:48:21] FG101E4Q17002429 INCOMING->TYPE: 1
[2019/01/31 00:48:21] FG101E4Q17002429 INCOMING->VERSION: 3 . 1795
[2019/01/31 00:48:21] FG101E4Q17002429 INCOMING->VERSION: 3 . 595
[2019/01/31 00:48:21] FG101E4Q17002429 VDOM: root
[2019/01/31 00:48:21] FG101E4Q17002429 ENTERING->HANDLE_SEND_FILE.
[2019/01/31 00:48:21] FG101E4Q17002429 suspicious stats START_TIME: 1548290749
[2019/01/31 00:48:21] FG101E4Q17002429 INCOMING->FGT->VDOM: vdom1
[2019/01/31 00:48:21] FG101E4Q17002429 suspicious stats END_TIME: 1548895549
[2019/01/31 00:48:21] FG101E4Q17002429 INCOMING->IMG_VERSION: 6.2.0.0818
[2019/01/31 00:48:21] INCOMING->FGT: FG101E4Q17002429, VDOM: vdom1
[2019/01/31 00:48:21] FG101E4Q17002429 INCOMING->TYPE: 4
[2019/01/31 00:48:21] FG101E4Q17002429 opd_data_len=37 clean=0 detected=0 risk_low=0
risk_med=0 risk_high=0 sus_limit=0
[2019/01/31 00:48:22] FG101E4Q17002429 RETRIEVE->PKG: TYPE: av, ENTRY_VERSION: 1795,
PACKAGE_PATH: /Storage/malpkg/pkg/avsig/avsigrel_1795.pkg
[2019/01/31 00:48:22] FG101E4Q17002429 RETRIEVE->PKG: TYPE: url, ENTRY_VERSION: 595,
PACKAGE_PATH: /Storage/malpkg/pkg/url/urlrel_595.pkg.gz
[2019/01/31 00:48:29] LOGIN->SUCCEED: Serial(FG101E4Q17002429), HOSTNAME(FGT_PROXY)
[2019/01/31 00:48:32] LOGIN->SUCCEED: Serial(FG101E4Q17002429), HOSTNAME(FGT_PROXY)
[2019/01/31 00:48:59] LOGIN->SUCCEED: Serial(FG101E4Q17002429), HOSTNAME(FGT_PROXY)
[2019/01/31 00:49:03] LOGIN->SUCCEED: Serial(FG101E4Q17002429), HOSTNAME(FGT_PROXY)
```

Using FortiSandbox Cloud with antivirus

Feature overview


FortiSandbox Cloud allows users to take advantage of FortiSandbox features without having to purchase, operate, and maintain a physical appliance. It works the same way as the physical FortiSandbox appliance.

FortiSandbox Cloud allows you to control the region where your traffic is sent to for analysis. This allows you to meet your country's compliances regarding data storage locations.

Support and limitations

- In FortiOS 6.2 and later, users do not require a FortiGate Cloud account to use FortiSandbox Cloud.
- Without a valid AVDB license, FortiGate devices are limited to 100 FortiGate Cloud submissions per day.
- Unlimited FortiGate Cloud submissions are allowed if the FortiGate has a valid AVDB license.
  - There is a limit on how many submissions are sent per minute.
  - The per-minute submission rate is based on the FortiGate model.
- FortiSandbox can be used with antivirus in both proxy-based and flow-based policy inspection modes.
- With FortiSandbox enabled, full scan mode antivirus can do the following:
  - Submit only suspicious files to FortiSandbox for inspection.
  - Submit every file to FortiSandbox for inspection.
  - Do not submit anything.
- Quick scan mode antivirus cannot submit suspicious files to FortiSandbox. It can only do the following:
  - Submit every file to FortiSandbox for inspection.
  - Do not submit anything.

Network topology example

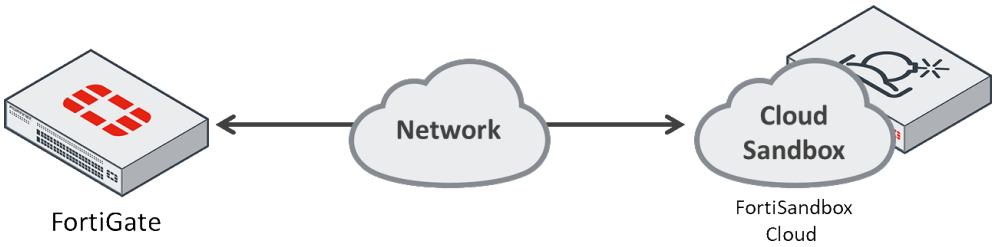

Configuring the feature


To configure antivirus to work with an external block list, the following steps are required:

1. Through FortiCare, register the FortiGate device and purchase a FortiGuard antivirus license
2. Enable FortiSandbox Cloud on the FortiGate
3. Enable FortiSandbox inspection
4. Enable the use of the FortiSandbox database


To obtain or renew an AVDB license:

1. Please see the video How to Purchase or Renew FortiGuard Services for FortiGuard antivirus license purchase instructions.

2. Once a FortiGuard license has been purchased or activated, users will be provided with a paid FortiSandbox Cloud license.
   a. Go to *Global* > *Dashboard* > *Status* to view the FortiSandbox Cloud license indicator.

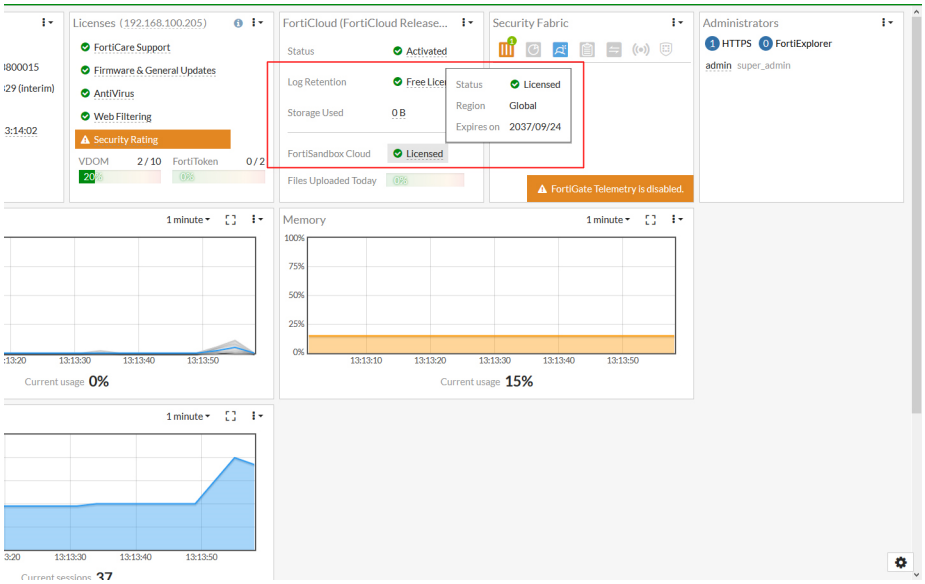

   b. Users can also view this indicator at *Global* > *System* > *FortiGuard*.

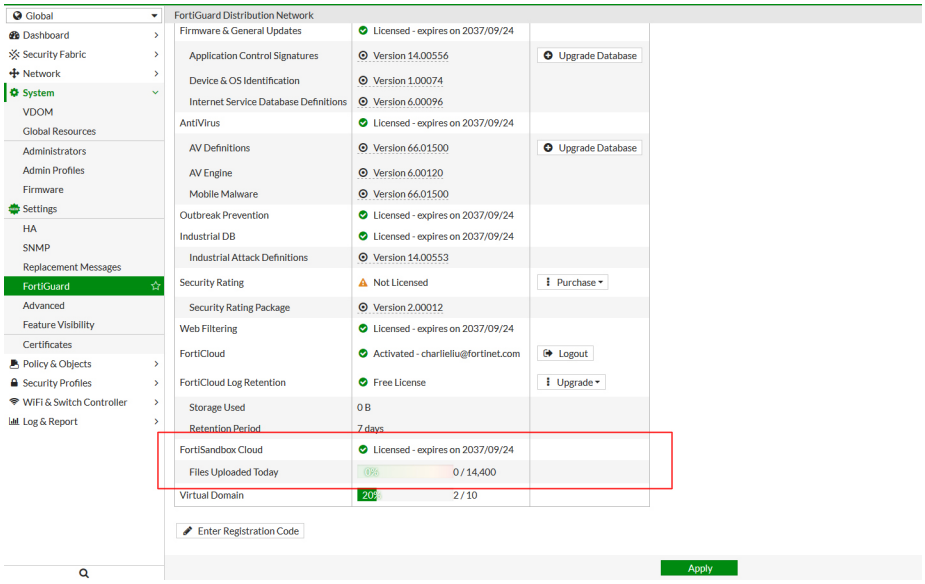


To enable FortiSandbox Cloud on the FortiGate:

1. Make the FortiSandbox Cloud feature visible:


```
config system global
    set gui-fortisandbox-cloud enable
end
```

2. Log out of FortiOS and log in again.


3. Go to *Global* > *Security Fabric* > *Settings* and enable *Sandbox Inspection*.

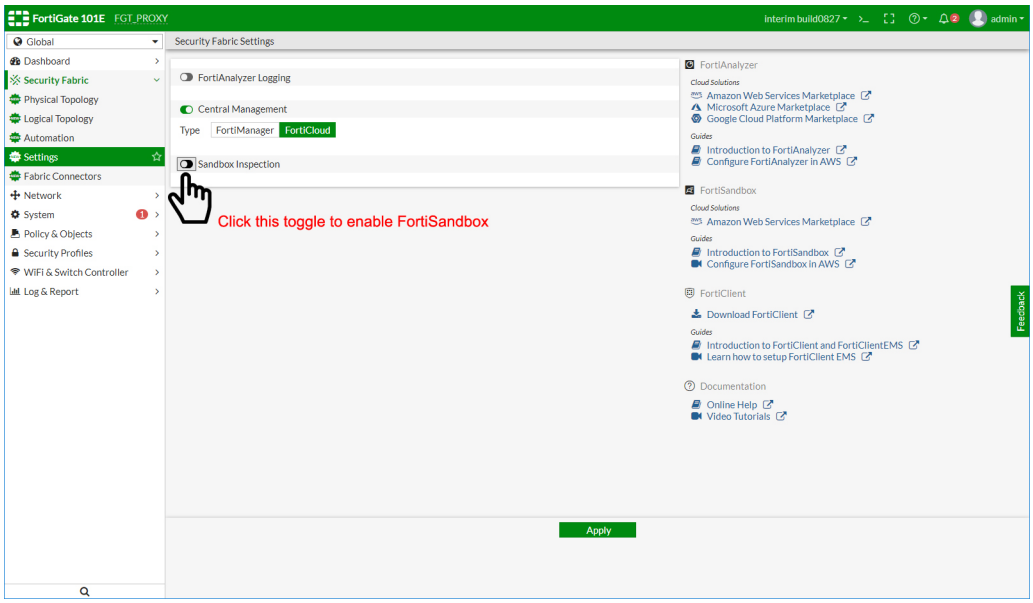


4. Select *FortiSandbox Cloud* and choose a region from the dropdown list.

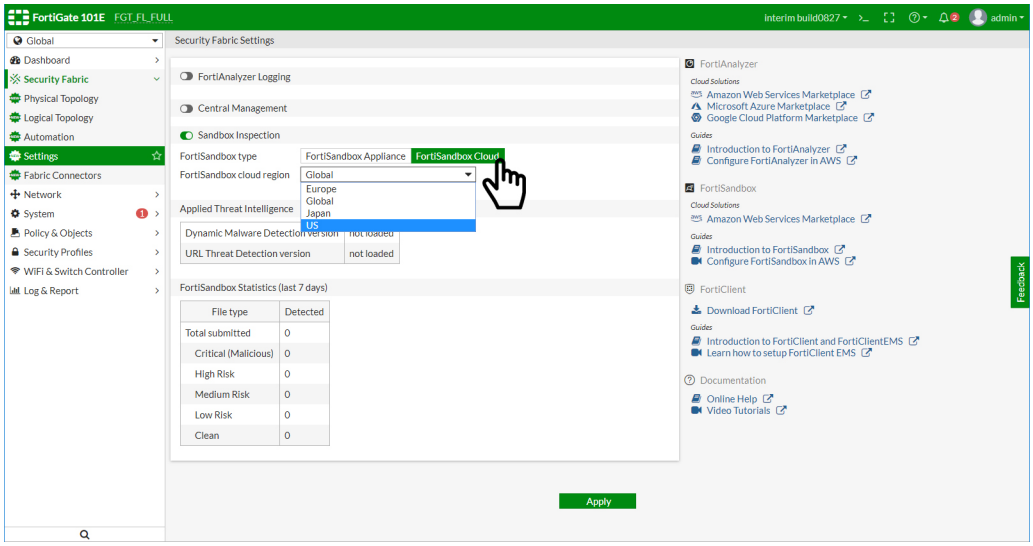

5. Click *Apply* to save the settings.

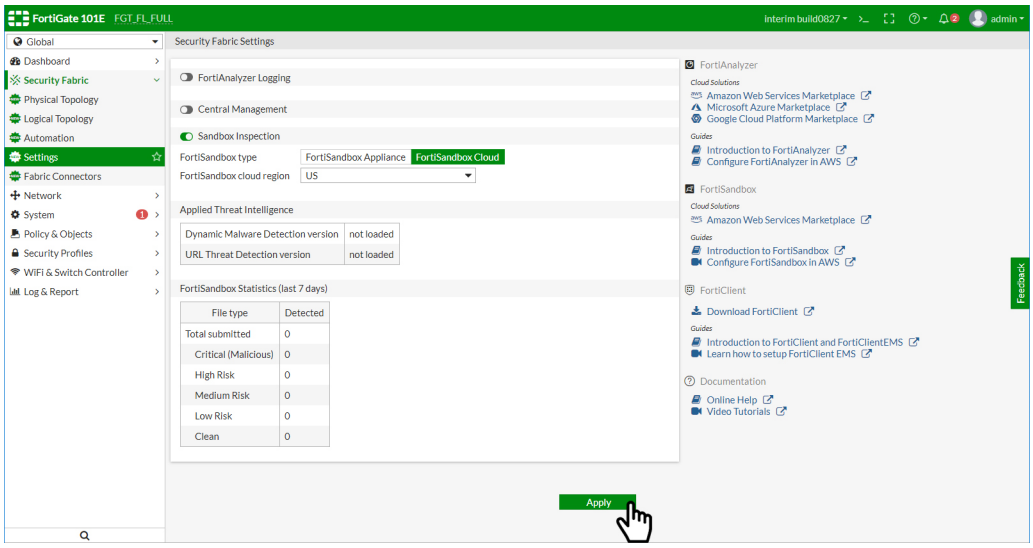


6. When the FortiGate is connected to the FortiSandbox Cloud, FortiSandbox's current database version is displayed.

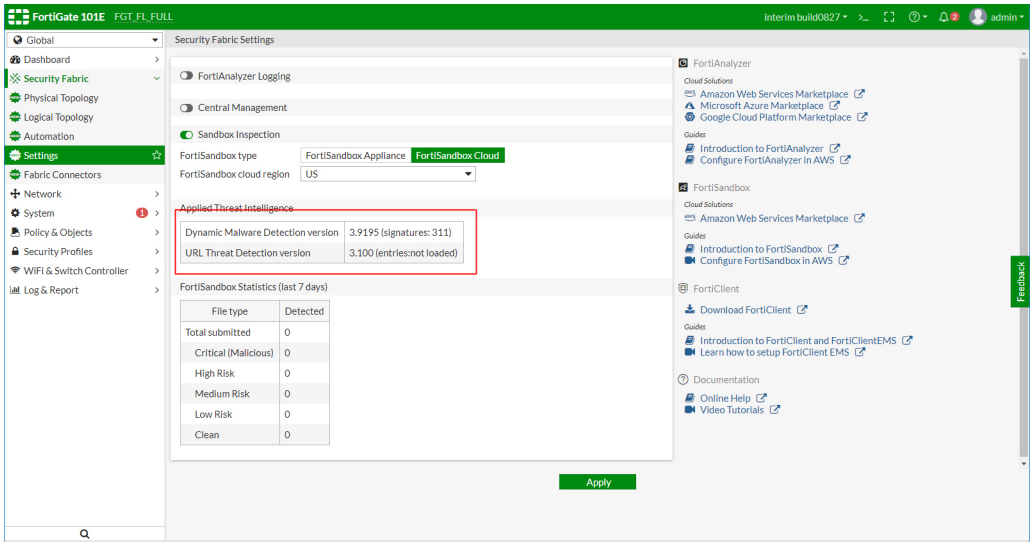


To enable FortiSandbox inspection:


1. Go to *Security Profiles* > *AntiVirus*.
2. Enable FortiSandbox inspection by selecting either *Suspicious Files Only* or *All Supported Files*.

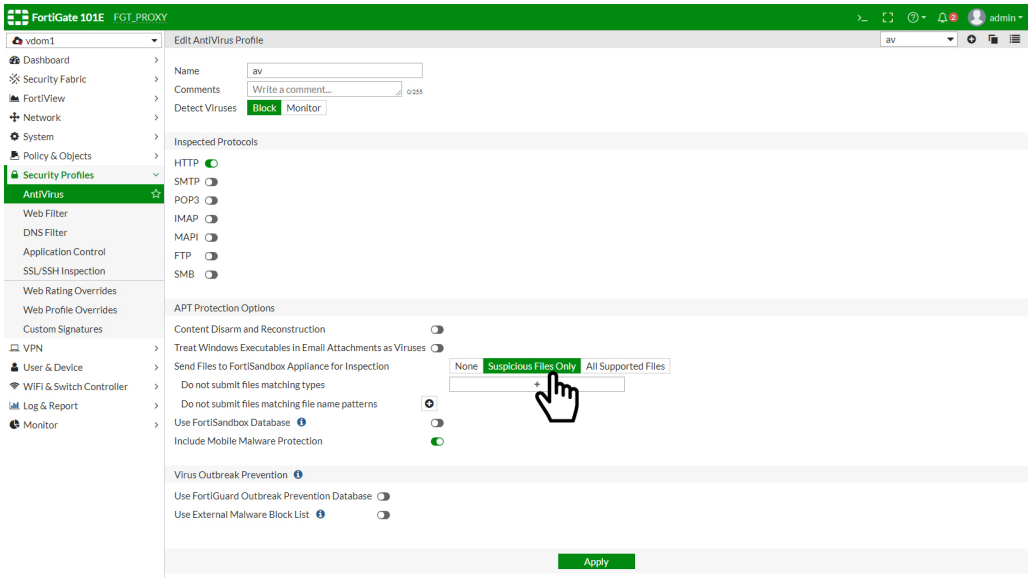

3. Files can be excluded from being sent to FortiSandbox based on their file types by choosing from a list of supported file types.

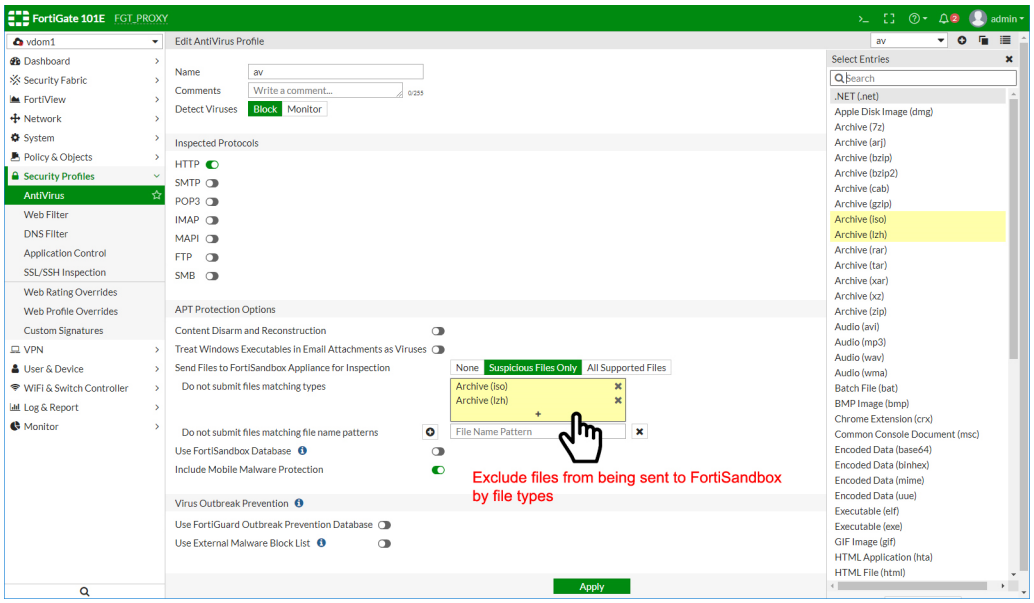


4. Files can also be excluded from being sent to FortiSandbox by using wildcard patterns.

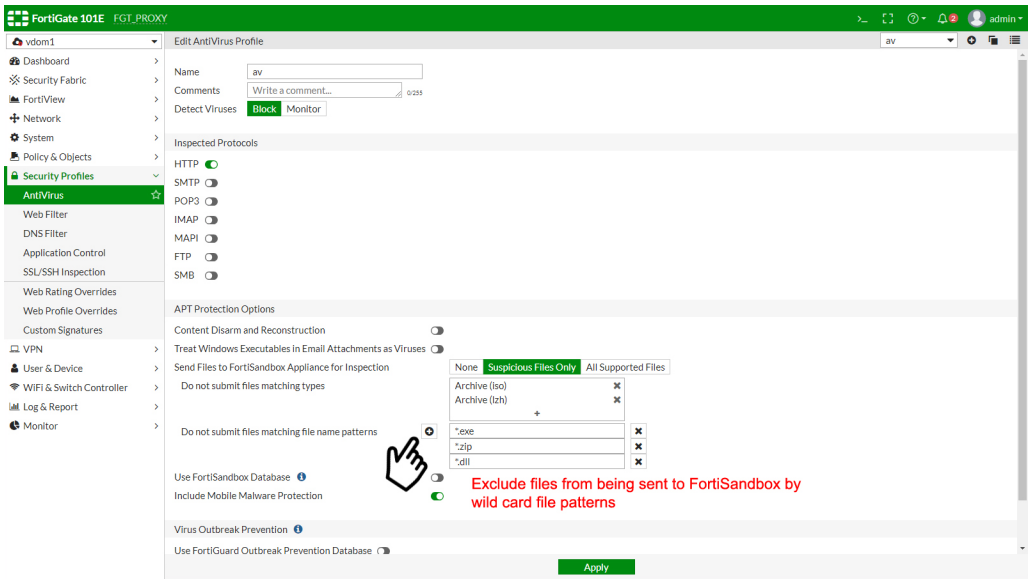

5. Click *Apply*.

To enable the use of the FortiSandbox database:

1. Go to *Security Profiles* > *AntiVirus*.
2. Enable *Use FortiSandbox Database*.

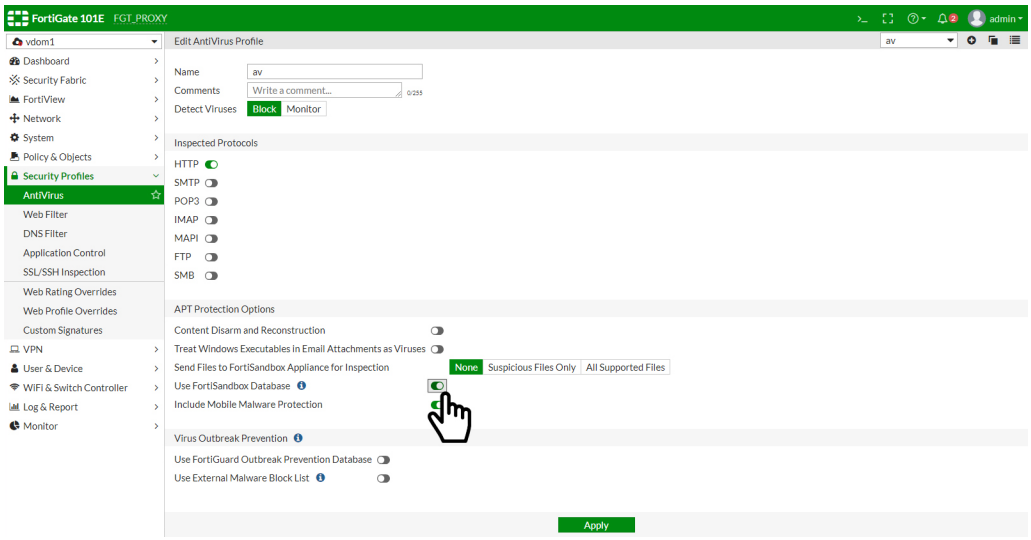

3. Click *Apply*.

Diagnostics and debugging

- Checking FortiGate Cloud controller status:

```
FGT_FL_FULL (global) # diagnose test application forticldd 2
Server: log-controller, task=0/10, watchdog is off
Domain name: logctrl1.fortinet.com
```

```
Address of log-controller: 1
        172.16.95.168:443
        Statistics: total=3, discarded=1, sent=2, last_updated=12163 secs ago
http connection: is not in progress
        Current address: 172.16.95.168:443
        Calls: connect=9, rxtx=12
Current tasks number: 0
Account: name=empty, status=0, type=basic
Current volume: 0B
Current tasks number: 0
Update timer fires in 74240 secs
```

- Checking Cloud APT server status:

```
FGT_FL_FULL (global) # diagnose test application forticldd 3
Debug zone info:
    Domain:
    Home log server: 0.0.0.0:0
    Alt log server: 0.0.0.0:0
    Active Server IP:      0.0.0.0
    Active Server status:  down
    Log quota:      0MB
    Log used:       0MB
    Daily volume:   0MB
    fams archive pause: 0
    APTContract : 1                          <====
    APT server: 172.16.102.51:514            <====
    APT Altserver: 172.16.102.52:514         <====
    Active APTServer IP:      172.16.102.51  <====
    Active APTServer status:  up             <====
```

- FortiSandbox Cloud diagnostics:

```
FGT_FL_FULL (global) # diagnose test application quarantine 1
Total remote&local devices: 4, any task full? 0
System have disk, vdom is enabled, mgmt=3, ha=1
xfer-fas is enabled: ips-archive dlp-archive, realtime=yes, taskfull=no
    addr=0.0.0.0/514, source-ip=0.0.0.0, keep-alive=no.
    ssl_opt=1, hmac_alg=0
    License=0, content_archive=0, arch_pause=0.

global-fas is disabled.
forticloud-fsb is enabled: analytics, realtime=yes, taskfull=no
    addr=172.16.102.51/514, source-ip=0.0.0.0, keep-alive=no.
    ssl_opt=1, hmac_alg=0
fortisandbox-fsb1 is disabled.
fortisandbox-fsb2 is disabled.
fortisandbox-fsb3 is disabled.
fortisandbox-fsb4 is disabled.
fortisandbox-fsb5 is disabled.
fortisandbox-fsb6 is disabled.
global-faz is disabled.
global-faz2 is disabled.
global-faz3 is disabled.
```

- Checking FortiSandbox Cloud submission statistics:

```
FGT_FL_FULL (global) # diagnose test application quarantined 2
Quarantine daemon state:
QUAR mem: mem_used=0, mem_limit=97269, threshold=72951
dropped(0 by quard, 0 by callers)
pending-jobs=0, tot-mem=0, last_ipc_run=12353, check_new_req=1
alloc_job_failed=0, job_wrong_type=0, job_wrong_req_len=0, job_invalid_qfd=0
tgz_create_failed=0, tgz_attach_failed=0, qfd_mmap_failed=0, buf_attached=0
xfer-fas:
    ips: total=0, handled=0, accepted=0
    quar: total=0, handled=0, accepted=0
    archive: total=0, handled=0, accepted=0
    analytics: total=0, handled=0, accepted=0, local_dups=0
    analytics stats: total=0, handled=0, accepted=0
    last_rx=0, last_tx=0, error_rx=0, error_tx=0
    max_num_tasks=10000, num_tasks=0, mem_used=0, ttl_drops=0, xfer_status=0
forticloud-fsb:
    ips: total=0, handled=0, accepted=0
    quar: total=0, handled=0, accepted=0
    archive: total=0, handled=0, accepted=0
    analytics: total=0, handled=0, accepted=0, local_dups=0
num_buffer=0(per-minute:10) last_min_count=0 last_vol_count=0 next_vol_reset_tm='Sun Feb
17 00:00:00 2019
'
    analytics stats: total=24, handled=24, accepted=24
    last_rx=1224329, last_tx=1224329, error_rx=2, error_tx=0
    max_num_tasks=200, num_tasks=0, mem_used=0, ttl_drops=0, xfer_status=0
```

- Checking FortiSandbox analysis statistics:

```
FGT_FL_FULL (global) # diagnose test application quarantine 7
Total: 0

Statistics:
        vfid: 0, detected: 0, clean: 0, risk_low: 0, risk_med: 0, risk_high: 0, limit_
reached:0
        vfid: 3, detected: 0, clean: 0, risk_low: 0, risk_med: 0, risk_high: 0, limit_
reached:0
        vfid: 4, detected: 0, clean: 0, risk_low: 0, risk_med: 0, risk_high: 0, limit_
reached:0

FGT_FL_FULL (global) #
```

- Update Daemon debug:

```
FGT_FL_FULL (global) # diagnose debug application quarantined -1
FGT_FL_FULL (global) # diagnose debug enable

quar_req_fsa_file()-890: fsa ext list new_version (1547781904)
quar_fsb_handle_quar()-1439: added a req-6 to fortisandbox-fsb5, vfid=1, oftp-name=[].
__quar_start_connection()-908: start server fortisandbox-fsb5-172.18.52.154 in vdom-1
[103] __ssl_cert_ctx_load: Added cert /etc/cert/factory/root_Fortinet_Factory.cer, root
ca Fortinet_CA, idx 0 (default)
[551] ssl_ctx_create_new_ex: SSL CTX is created
[578] ssl_new: SSL object is created
upd_cfg_extract_av_db_version[378]-version=06002000AVDB00201-00066.01026-1901301530
upd_cfg_extract_ids_db_version[437]-version=06002000NIDS02403-00014.00537-1901300043
```

```
upd_cfg_extract_ids_db_version[437]-version=06002000APDB00103-00006.00741-1512010230
upd_cfg_extract_ids_db_version[437]-version=06002000ISDB00103-00014.00537-1901300043
upd_cfg_extract_ibdb_botnet_db_version[523]-version=06002000IBDB00101-00004.00401-
1901281000
upd_cfg_extract_av_db_version[378]-version=06002000AVDB00201-00066.01026-1901301530
upd_cfg_extract_ids_db_version[437]-version=06002000NIDS02403-00014.00537-1901300043
upd_cfg_extract_ids_db_version[437]-version=06002000APDB00103-00006.00741-1512010230
upd_cfg_extract_ids_db_version[437]-version=06002000ISDB00103-00014.00537-1901300043
upd_cfg_extract_ibdb_botnet_db_version[523]-version=06002000IBDB00101-00004.00401-
1901281000
upd_cfg_extract_av_db_version[378]-version=06002000AVDB00201-00066.01026-1901301530
upd_cfg_extract_ids_db_version[437]-version=06002000NIDS02403-00014.00537-1901300043
upd_cfg_extract_ids_db_version[437]-version=06002000APDB00103-00006.00741-1512010230
upd_cfg_extract_ids_db_version[437]-version=06002000ISDB00103-00014.00537-1901300043
upd_cfg_extract_ibdb_botnet_db_version[523]-version=06002000IBDB00101-00004.00401-
1901281000
upd_cfg_extract_av_db_version[378]-version=06002000AVDB00201-00066.01026-1901301530
upd_cfg_extract_ids_db_version[437]-version=06002000NIDS02403-00014.00537-1901300043
upd_cfg_extract_ids_db_version[437]-version=06002000APDB00103-00006.00741-1512010230
upd_cfg_extract_ids_db_version[437]-version=06002000ISDB00103-00014.00537-1901300043
upd_cfg_extract_ibdb_botnet_db_version[523]-version=06002000IBDB00101-00004.00401-
1901281000
upd_cfg_extract_av_db_version[378]-version=06002000AVDB00201-00066.01026-1901301530
upd_cfg_extract_ids_db_version[437]-version=06002000NIDS02403-00014.00537-1901300043
upd_cfg_extract_ids_db_version[437]-version=06002000APDB00103-00006.00741-1512010230
upd_cfg_extract_ids_db_version[437]-version=06002000ISDB00103-00014.00537-1901300043
upd_cfg_extract_ibdb_botnet_db_version[523]-version=06002000IBDB00101-00004.00401-
1901281000
quar_remote_recv_send()-731: dev=fortisandbox-fsb2 xfer-status=0
__quar_build_pkt()-408: build req(id=337, type=4) for vdom-vdom1, len=99, oftp_name=
__quar_send()-470: dev buffer -- pos=0, len=99
quar_remote_send()-520: req(id=337, type=4) read response, dev=fortisandbox-fsb2, xfer_
status=1, buflen=12
quar_remote_recv_send()-770: dev-fortisandbox-fsb2, oevent=4, nevent=1, xfer-status=1
quar_remote_recv_send()-731: dev=fortisandbox-fsb3 xfer-status=0
__quar_build_pkt()-408: build req(id=338, type=6) for vdom-vdom1, len=93, oftp_name=
__quar_send()-470: dev buffer -- pos=0, len=93
quar_remote_send()-520: req(id=338, type=6) read response, dev=fortisandbox-fsb3, xfer_
status=1, buflen=12
quar_remote_recv_send()-770: dev-fortisandbox-fsb3, oevent=4, nevent=1, xfer-status=1
quar_remote_recv_send()-731: dev=fortisandbox-fsb5 xfer-status=0
__quar_build_pkt()-408: build req(id=340, type=6) for vdom-vdom1, len=93, oftp_name=
__quar_send()-470: dev buffer -- pos=0, len=93
quar_remote_send()-520: req(id=340, type=6) read response, dev=fortisandbox-fsb5, xfer_
status=1, buflen=12
quar_remote_recv_send()-770: dev-fortisandbox-fsb5, oevent=4, nevent=1, xfer-status=1
quar_remote_recv_send()-731: dev=fortisandbox-fsb2 xfer-status=1
quar_remote_recv()-662: dev(fortisandbox-fsb2) received a packet: len=69, type=1
quar_remote_recv()-718: file-[337] is accepted by server(fortisandbox-fsb2).
quar_put_job_req()-332: Job 337 deleted
quar_remote_recv_send()-731: dev=fortisandbox-fsb4 xfer-status=0
__quar_build_pkt()-408: build req(id=339, type=6) for vdom-vdom1, len=93, oftp_name=
__quar_send()-470: dev buffer -- pos=0, len=93
quar_remote_send()-520: req(id=339, type=6) read response, dev=fortisandbox-fsb4, xfer_
status=1, buflen=12
quar_remote_recv_send()-770: dev-fortisandbox-fsb4, oevent=4, nevent=1, xfer-status=1
```

```
quar_remote_recv_send()-731: dev=fortisandbox-fsb1 xfer-status=0
__quar_build_pkt()-408: build req(id=336, type=4) for vdom-root, len=98, oftp_name=
__quar_send()-470: dev buffer -- pos=0, len=98
...
__get_analytics_stats()-19: Received an ANALYTICS_STATS request, vfid: 0
__quar_req_handler()-127: Request 0 was handled successfully
__get_analytics_stats()-19: Received an ANALYTICS_STATS request, vfid: 0
__quar_req_handler()-127: Request 0 was handled successfully
__get_analytics_stats()-19: Received an ANALYTICS_STATS request, vfid: 0
__quar_req_handler()-127: Request 0 was handled successfully
__get_analytics_stats()-19: Received an ANALYTICS_STATS request, vfid: 0
__quar_req_handler()-127: Request 0 was handled successfully
quar_fsb_handle_quar()-1439: added a req-6 to fortisandbox-fsb1, vfid=1, oftp-name=[].
__quar_start_connection()-908: start server fortisandbox-fsb1-172.18.52.154 in vdom-1
[103] __ssl_cert_ctx_load: Added cert /etc/cert/factory/root_Fortinet_Factory.cer, root
ca Fortinet_CA, idx 0 (default)
[551] ssl_ctx_create_new_ex: SSL CTX is created
[578] ssl_new: SSL object is created
upd_cfg_extract_av_db_version[378]-version=06002000AVDB00201-00066.01026-1901301530
upd_cfg_extract_ids_db_version[437]-version=06002000NIDS02403-00014.00537-1901300043
upd_cfg_extract_ids_db_version[437]-version=06002000APDB00103-00006.00741-1512010230
upd_cfg_extract_ids_db_version[437]-version=06002000ISDB00103-00014.00537-1901300043
upd_cfg_extract_ibdb_botnet_db_version[523]-version=06002000IBDB00101-00004.00401-
1901281000
quar_remote_recv_send()-731: dev=fortisandbox-fsb1 xfer-status=0
__quar_build_pkt()-408: build req(id=2, type=6) for vdom-vdom1, len=93, oftp_name=
__quar_send()-470: dev buffer -- pos=0, len=93
quar_remote_send()-520: req(id=2, type=6) read response, dev=fortisandbox-fsb1, xfer_
status=1, buflen=12
quar_remote_recv_send()-770: dev-fortisandbox-fsb1, oevent=4, nevent=1, xfer-status=1
quar_remote_recv_send()-731: dev=fortisandbox-fsb1 xfer-status=1
quar_remote_recv()-662: dev(fortisandbox-fsb1) received a packet: len=767, type=1
quar_store_analytics_report()-590: Analytics-report return
file=/tmp/fsb/83bb2d9928b03a68b123730399b6b9365b5cc9a5a77f8aa007a6f1a499a13b18.json.gz,
buf_sz=735
quar_store_analytics_report()-597: The request
'83bb2d9928b03a68b123730399b6b9365b5cc9a5a77f8aa007a6f1a499a13b18' score is 1
quar_remote_recv()-718: file-[2] is accepted by server(fortisandbox-fsb1).
quar_put_job_req()-332: Job 2 deleted
quar_monitor_connection_func()-978: monitoring dev fortisandbox-fsb1
quar_monitor_connection_func()-978: monitoring dev fortisandbox-fsb1
__get_analytics_stats()-19: Received an ANALYTICS_STATS request, vfid: 0
__quar_req_handler()-127: Request 0 was handled successfully
__get_analytics_stats()-19: Received an ANALYTICS_STATS request, vfid: 0
__quar_req_handler()-127: Request 0 was handled successfully
quar_monitor_connection_func()-978: monitoring dev fortisandbox-fsb1
quar_stop_connection()-1006: close connection to server(fortisandbox-fsb1)
[193] __ssl_data_ctx_free: Done
[805] ssl_free: Done
[185] __ssl_cert_ctx_free: Done
[815] ssl_ctx_free: Done
[796] ssl_disconnect: Shutdown
```

- Appliance FortiSandbox diagnostics:

```
FGT_PROXY # config global
FGT_PROXY (global) # diagnose test application quarantined 1
```

```
Total remote&local devices: 8, any task full? 0
System have disk, vdom is enabled, mgmt=1, ha=2
xfer-fas is enabled: ips-archive dlp-archive, realtime=yes, taskfull=no
    addr=0.0.0.0/514, source-ip=0.0.0.0, keep-alive=no.
    ssl_opt=0, hmac_alg=0
    License=0, content_archive=0, arch_pause=0.

global-fas is disabled.
forticloud-fsb is disabled.
fortisandbox-fsb1 is enabled: analytics, realtime=yes, taskfull=no
    addr=172.18.52.154/514, source-ip=0.0.0.0, keep-alive=no.
    ssl_opt=3, hmac_alg=0
fortisandbox-fsb2 is enabled: analytics, realtime=yes, taskfull=no
    addr=172.18.52.154/514, source-ip=0.0.0.0, keep-alive=no.
    ssl_opt=3, hmac_alg=0
fortisandbox-fsb3 is enabled: analytics, realtime=yes, taskfull=no
    addr=172.18.52.154/514, source-ip=0.0.0.0, keep-alive=no.
    ssl_opt=3, hmac_alg=0
fortisandbox-fsb4 is enabled: analytics, realtime=yes, taskfull=no
    addr=172.18.52.154/514, source-ip=0.0.0.0, keep-alive=no.
    ssl_opt=3, hmac_alg=0
fortisandbox-fsb5 is enabled: analytics, realtime=yes, taskfull=no
    addr=172.18.52.154/514, source-ip=0.0.0.0, keep-alive=no.
    ssl_opt=3, hmac_alg=0
fortisandbox-fsb6 is enabled: analytics, realtime=yes, taskfull=no
    addr=172.18.52.154/514, source-ip=0.0.0.0, keep-alive=no.
    ssl_opt=3, hmac_alg=0
global-faz is disabled.
global-faz2 is disabled.
global-faz3 is disabled.
```

Web filter

Web filtering restricts or controls user access to web resources and can be applied to firewall policies.

In FortiOS, there are three main components of web filtering:

- Web content filter: blocks web pages containing words or patterns that you specify.
- URL filter: uses URLs and URL patterns to block or exempt web pages from specific sources, or block malicious URLs discovered by FortiSandbox.
- FortiGuard Web Filtering service: provides many additional categories you can use to filter web traffic.

These components interact with each other to provide maximum control over what users on your network can view and protect your network from many internet content threats.

Web filters are applied in the following order:

1. URL filter
2. FortiGuard Web Filtering
3. Web content filter
4. Web script filter
5. Antivirus scanning

FortiOS includes three preloaded web filter profiles:

- *default*
- *monitor-all* (monitors and logs all URLs visited, flow-based)
- *wifi-default* (default configuration for offloading WiFi traffic)

You can customize these profiles, or you can create your own to manage network user access.

Some features of this functionality require a subscription to FortiGuard Web Filtering.


The following topics provide information about web filters:

- URL filter on page 908
- FortiGuard filter on page 914
- Usage quota on page 921
- Web content filter on page 923
- File filter on page 927
- Advanced filters 1 on page 933
- Advanced filters 2 on page 937
- External resources for web filter on page 942
- Reliable web filter statistics on page 948
- Flow-based web filtering on page 951
- URL certificate blocklist on page 953

URL filter

URL filter is also called static URL filter. By adding specific URLs with patterns containing text and regular expressions, FortiGate can allow, block, exempt, and monitor web pages matching any specified URLs or patterns, and can display a replacement message instead.

Sample topology

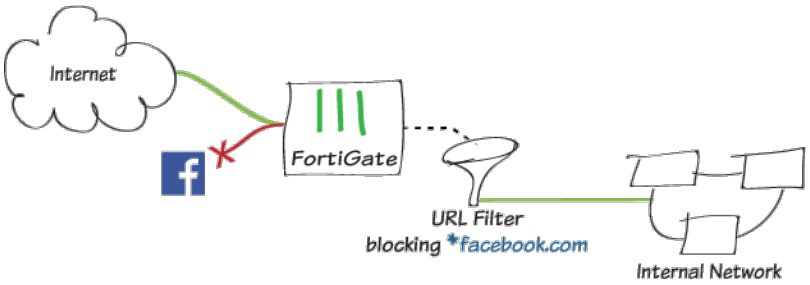


Create URL filter


You can create a URL filter using the GUI or CLI. After creating the URL filter, attach it to a web filter profile.

To create URL filter in the GUI:

1. Go to *Security Profiles* > *Web Filter* and go to the *Static URL Filter* section.
2. Enable *URL Filter*.

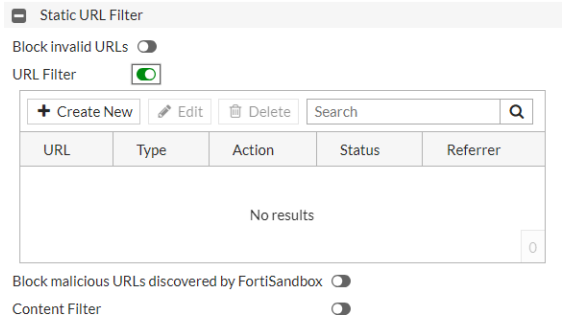

3. Under *URL Filter*, click *Create New* to display the *New URL Filter* pane.

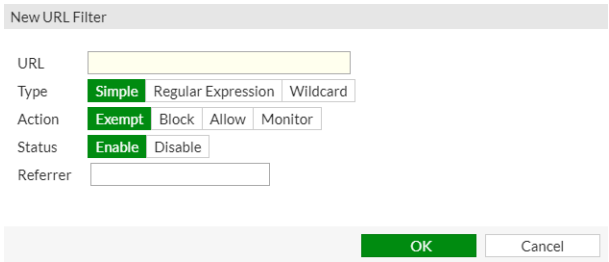


URL Filter Type	Description
Simple	FortiGate tries to strictly match the full context. For example, if you enter *www.facebook.com* in the *URL* field, it only matches traffic with *www.facebook.com*. It won't match *facebook.com* or *message.facebook.com*. When FortiGate finds a match, it performs the selected URL *Action*.
Regular Expression or Wildcard	FortiGate tries to match the pattern based on the rules of regular expressions or wildcards. For example, if you enter **fa** in the *URL* field, it matches all the content that has *fa* such as *www.facebook.com*, *message.facebook.com*, *fast.com*, etc. When FortiGate finds a match, it performs the selected URL *Action*.

For more information, see the URL Filter expressions technical note in https://kb.fortinet.com/kb/documentLink.do?externalID=FD37057.

URL Filter Action	Description
Block	Denies or blocks attempts to access any URL matching the URL pattern. FortiGate displays a replacement message.
Allow	The traffic is passed to the remaining FortiGuard web filters, web content filters, web script filters, antivirus proxy operations, and DLP proxy operations. If the URL does not appear in the URL list, the traffic is permitted.
Monitor	The traffic is processed the same way as the *Allow* action. For the *Monitor* action, a log message is generated each time a matching traffic pattern is established.
Exempt	The traffic is allowed to bypass the remaining FortiGuard web filters, web content filters, web script filters, antivirus scanning, and DLP proxy operations

4. Enter **facebook.com*, select *Wildcard*, and select *Block*.

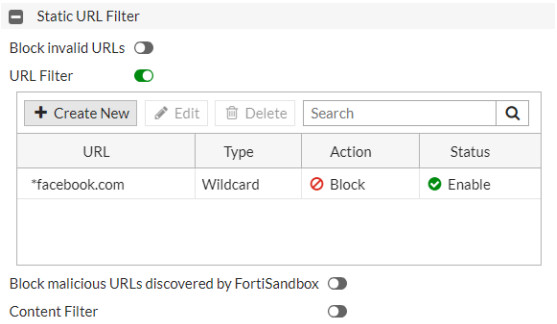

5. Click *OK*.

After creating the URL filter, attach it to a webfilter profile.

Create URL filter using CLI

To create and enable a URL filter using the CLI, create the URL filter and then attach it to a `webfilter` profile. The CLI commands below show the full configuration of creating a URL filter.

```
config webfilter urlfilter
   edit {id}
   # Configure URL filter lists.
      set name {string}   Name of URL filter list. size[35]
      config entries
         edit {id}
         # URL filter entries.
            set url {string}   URL to be filtered. size[511]
            set type {simple | regex | wildcard}  Filter type (simple, regex, or wildcard).
                    simple    Simple URL string.
                    regex     Regular expression URL string.
                    wildcard  Wildcard URL string.
            set action {exempt | block | allow | monitor}  Action to take for URL filter
matches.
                    exempt   Exempt matches.
                    block    Block matches.
                    allow    Allow matches (no log).
                    monitor  Allow matches (with log).
            set status {enable | disable}   Enable/disable this URL filter.
            set exempt {option}   If action is set to exempt, select the security profile
operations that exempt URLs skip. Separate multiple options with a space.
                    av                   AntiVirus scanning.
                    web-content          Web Filter content matching.
                    activex-java-cookie  ActiveX, Java, and cookie filtering.
                    dlp                  DLP scanning.
                    fortiguard           FortiGuard web filter.
                    range-block          Range block feature.
                    pass                 Pass single connection from all.
                    all                  Exempt from all security profiles.
            set referrer-host {string}   Referrer host name. size[255]
         next
   next
end
```

To create URL filter to filter Facebook using the CLI:

```
config webfilter urlfilter
    edit 1
        set name "webfilter"
        config entries
            edit 1
                set url "*facebook.com"
                set type wildcard
                set action block
            next
        end
    next
end
```

To attach the URL filter to a web filter profile:


```
config webfilter profile
    edit "webfilter"                <-- the name of the webfilter profile
        config web
            set urlfilter-table 1   <-- the URL filter created with ID number 1
        end
        config ftgd-wf
            unset options
        end
    next
end
```

Attach web filter profile to the firewall policy

After you have created the URL filter and attached it to a web filter profile, you must attach the profile to a firewall policy.

To attach a web filter profile to a firewall policy using the GUI:

1. Go to *Policy & Objects* > *IPv4 Policy*.
2. Edit the policy that you want to enable the web filter.
3. In the *Security Profiles* section, enable *Web Filter* and select the profile you created.

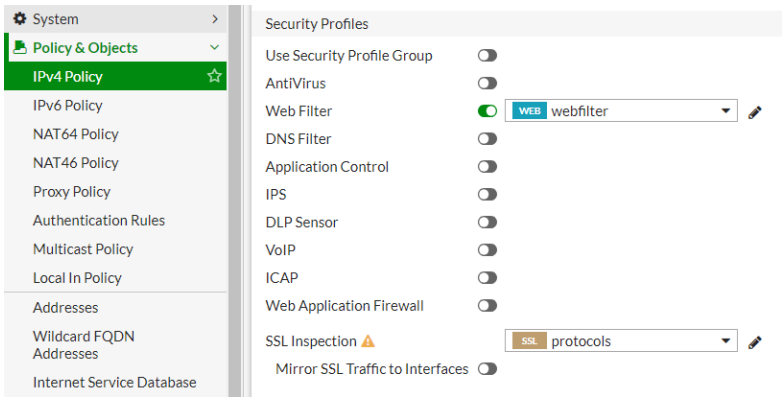


4. Click *OK*.

To attach a web filter profile to a firewall policy using the CLI:

```
config firewall policy
    edit 1
        set name "WF"
        set uuid b725a4d4-5be5-51e9-43fa-6d4e67d56bad
        set srcintf "wan2"
        set dstintf "wan1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set inspection-mode proxy
        set logtraffic all
        set webfilter-profile "webfilter"    <-- attach the webfilter profile you just
created.
        set profile-protocol-options "protocol"
        set ssl-ssh-profile "protocols"
        set nat enable
    next
end
```

Validate the URL filter results


Validate the URL filter results by going to a blocked website. For example, when you go to the Facebook website, you see the replacement message.

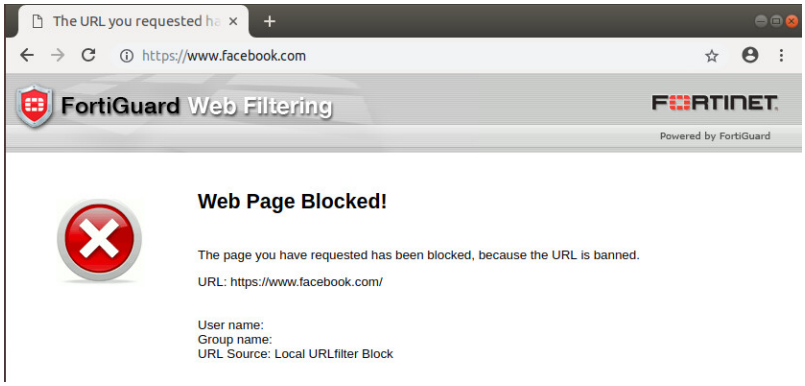

To customize the URL web page blocked message:


1. Go to *System* > *Replacement Messages*.
2. Go to the *Security* section and select *URL Block Page*.

3. Set up a custom message for blocked pages.

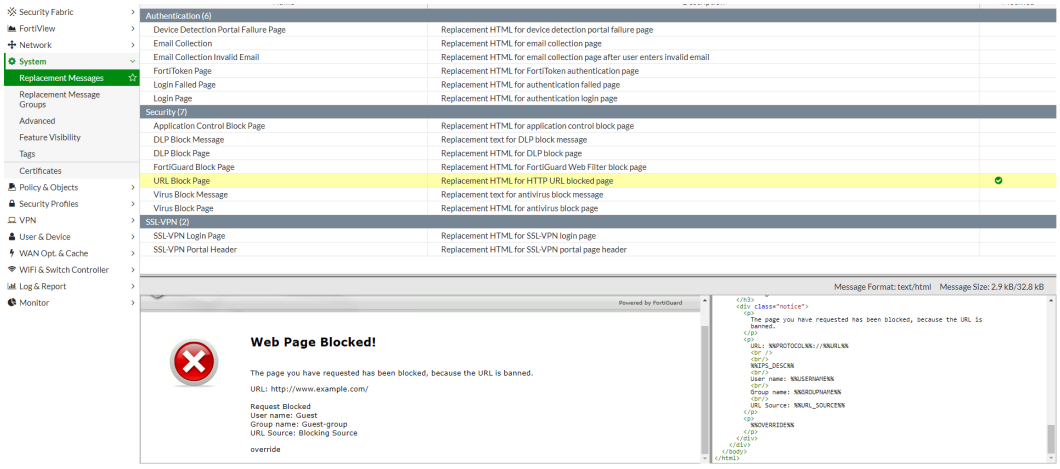

To check web filter logs in the GUI:

1. Go to *Log & Report* > *Web Filter*.

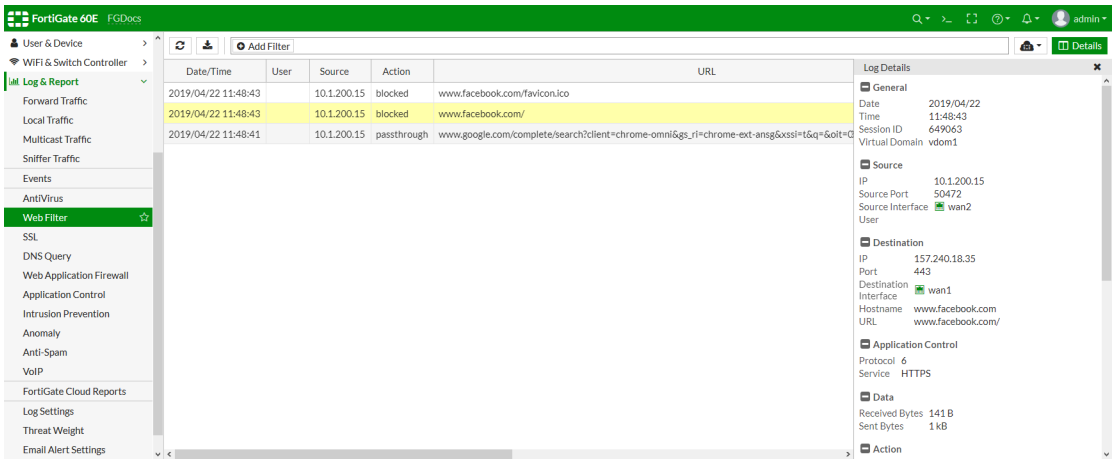

2. If there are too many log entries, click *Add Filter* and select *Event Type* > *URL Filter* to display logs generated by the URL filter.

To check web filter logs in the CLI:

```
# execute log filter category utm-webfilter

# execute log display

1: date=2019-04-22 time=11:48:43 logid="0315012544" type="utm" subtype="webfilter"
eventtype="urlfilter" level="warning" vd="vdom1" eventtime=1555958923322174610
urlfilteridx=0 urlsource="Local URLfilter Block" policyid=1 sessionid=649063
srcip=10.1.200.15 srcport=50472 srcintf="wan2" srcintfrole="wan" dstip=157.240.18.35
dstport=443 dstintf="wan1" dstintfrole="wan" proto=6 service="HTTPS"
hostname="www.facebook.com" profile="webfilter" action="blocked" reqtype="direct" url="/"
sentbyte=1171 rcvdbyte=141 direction="outgoing" msg="URL was blocked because it is in the
URL filter list" crscore=30 craction=8 crlevel="high"
```

FortiGuard filter

To use this service, you must have a valid subscription on your FortiGate.

FortiGuard filter enhances the web filter features supplied with your FortiGate unit by sorting billions of web pages into a wide range of categories that users can allow or block.

The FortiGuard Web Filtering service includes over 45 million individual website ratings that apply to more than two billion pages. When the FortiGuard filter is enabled in a web filter and is applied to firewall policies, if a request for a web page appears in traffic controlled by one of the firewall policies, the URL is sent to the nearest FortiGuard server. The URL category or rating is returned. If the category is blocked, the FortiGate shows a replacement message in place of the requested page. If the category is not blocked, the page request is sent to the requested URL as normal.

FortiGuard web filter actions

You can select one of the following FortiGuard web filter actions:

FortiGuard Web Filter Action	Description
Allow	Permit access to the sites in the category.
Block	Prevent access to the sites in the category. Users trying to access a blocked site sees a replacement message indicating the site is blocked.
Monitor	Permits and logs access to sites in the category. You can enable user quotas when you enable this action.
Warning	Displays a message to the user allowing them to continue if they choose.
Authenticate	Requires the user to authenticate with the FortiGate before allowing access to the category or category group.

FortiGuard web filter categories

FortiGuard has many web filter categories including two local categories and a special remote category. For more information on the different categories, see the table below.

FortiGuard Web Filter category	Where to find more information
All URL categories	https://fortiguard.com/webfilter/categories
Local categories	Web rating override on page 1051
Remote category	External resources for web filter on page 942


The priority of categories is local category > external category > FortiGuard built-in category. If a URL is configured as a local category, it only follows the behavior of local category and not external or FortiGuard built-in category.

Sample configuration of blocking a web category


This example shows blocking a website based on its category (rating), for example, information technology.

To block a category in the GUI:

1. Go to *Security Profiles* > *Web Filter* and go to the *FortiGuard category based filter* section.

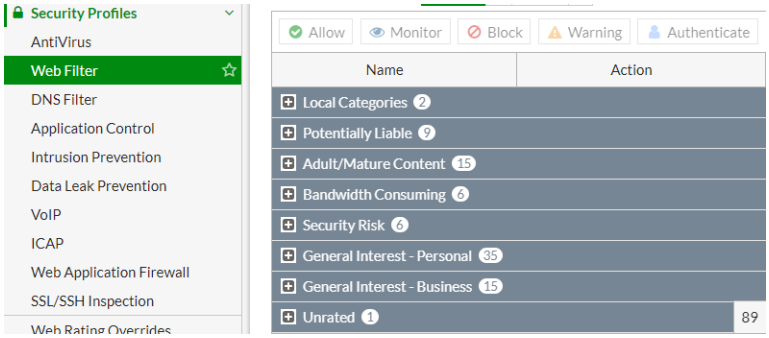

2. Open the *General Interest - Business* section by clicking the + icon beside it.
3. Select *Information Technology* and then select *Block*.

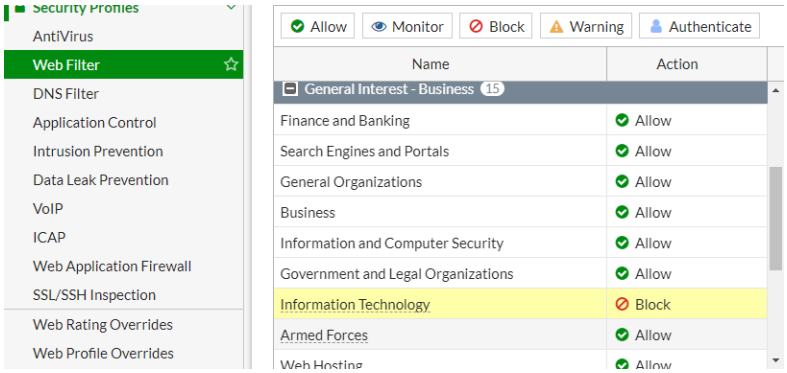


To block a category in the CLI:

```
config webfilter profile
    edit "webfilter"
        config ftgd-wf
            unset options
            config filters
                edit 1
                    set category 52      -- the pre-set id of "information technology"
caterogy
                    set action block     -- set action to block
                next
            end
        end
    next
end
```


To validate that you have blocked a category:

1. Go to a website belonging to the blocked category, for example, www.fortinet.com, and you see a blocked page and the category that is blocked.

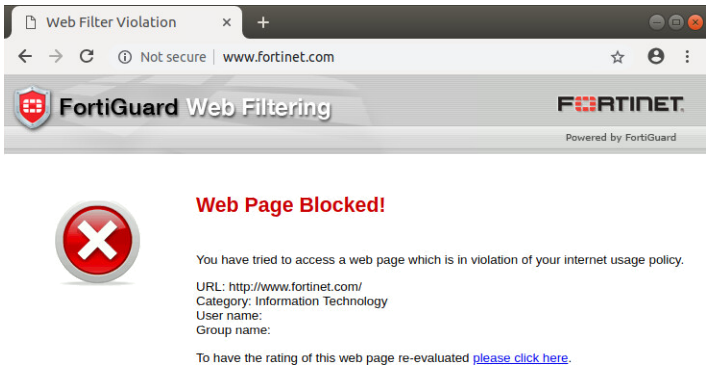

To view the log of a blocked website in the GUI:

1. Go to *Log & Report* > *Web Filter*.

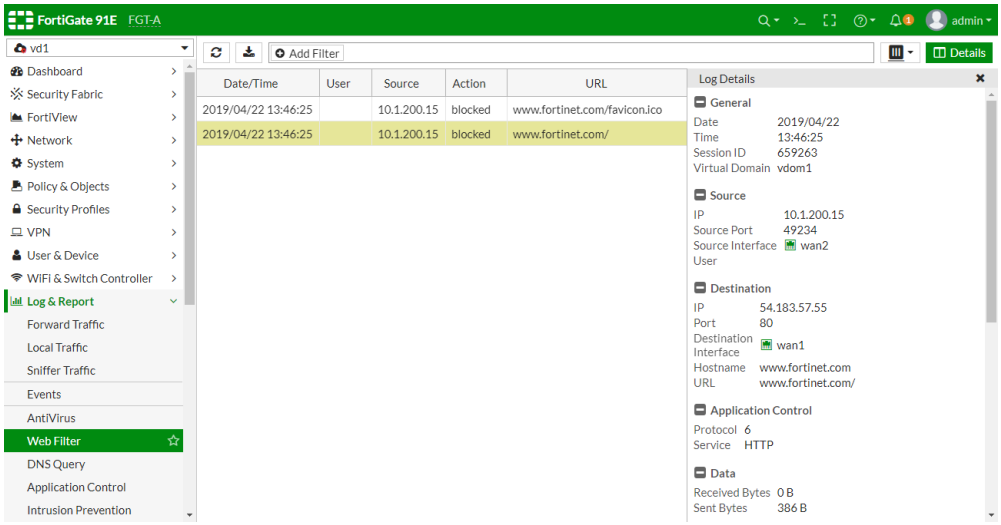

To view the log of a blocked website in the CLI:

```
FGT52E-NAT-WF # execute log filter category utm-webfilter

FGT52E-NAT-WF # execute log display


1: date=2019-04-22 time=13:46:25 logid="0316013056" type="utm" subtype="webfilter"
eventtype="ftgd_blk" level="warning" vd="vdom1" eventtime=1555965984972459609 policyid=1
sessionid=659263 srcip=10.1.200.15 srcport=49234 srcintf="wan2" srcintfrole="wan"
dstip=54.183.57.55 dstport=80 dstintf="wan1" dstintfrole="wan" proto=6 service="HTTP"
hostname="www.fortinet.com" profile="webfilter" action="blocked" reqtype="direct" url="/"
sentbyte=386 rcvdbyte=0 direction="outgoing" msg="URL belongs to a denied category in
policy" method="domain" cat=52 catdesc="Information Technology"
```

Sample configuration of issuing a warning


This example shows issuing a warning when a user visits a website based on its category (rating), for example, information technology.

To configure a warning in the GUI:

1. Go to *Security Profiles* > *Web Filter* and go to the *FortiGuard category based filter* section.

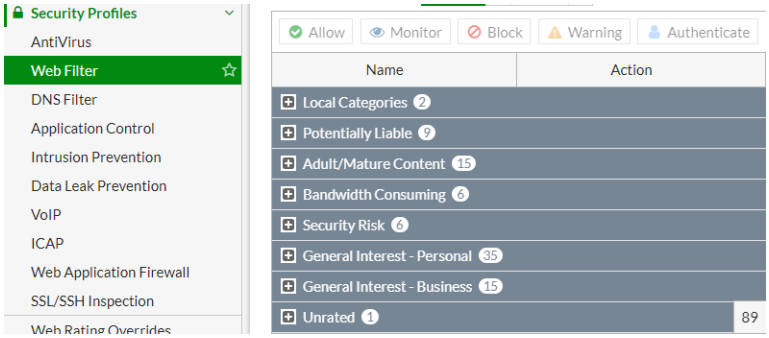

2. Open the *General Interest - Business* section by clicking the + icon beside it.
3. Select *Information Technology* and then select *Warning*.

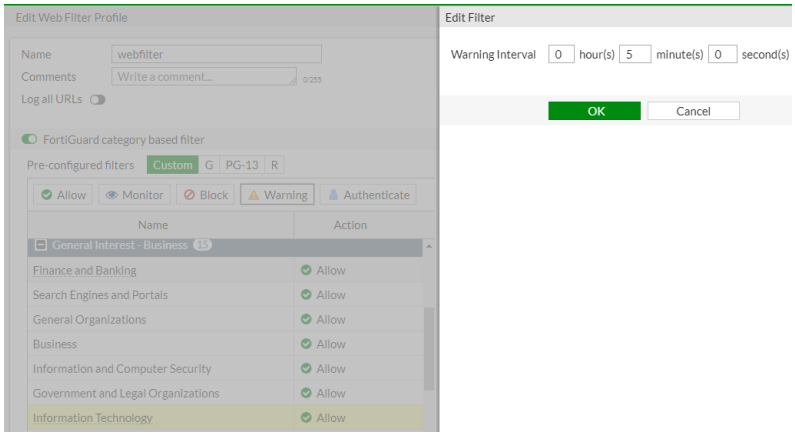


4. Set the *Warning Interval* which is the interval when the warning page appears again after the user chooses to continue.

To configure a warning in the CLI:

```
config webfilter profile
    edit "webfilter"
        config ftgd-wf
            unset options
            config filters
                edit 1
                    set category 52
                    set action warning     -- set action to warning
                next
            end
        end
    next
end
```

To validate that you have configured the warning:

1. Go to a website belonging to the selected category, for example, www.fortinet.com, and you see a warning page where you can choose to *Proceed* or *Go Back*.

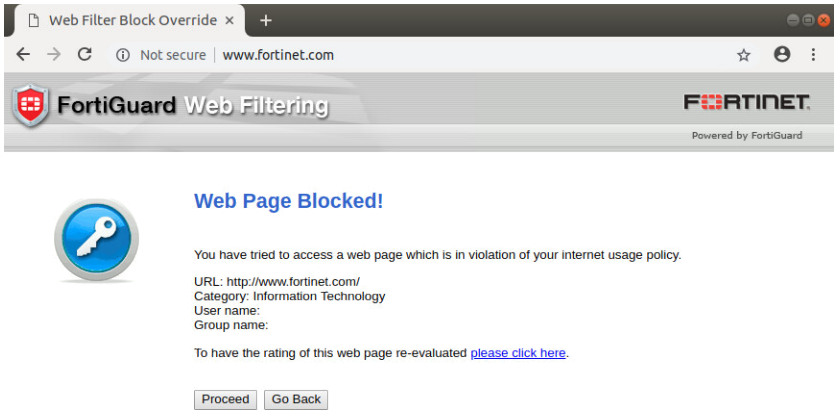


Sample configuration of authenticating a web category


This example shows authenticating a website based on its category (rating), for example, information technology.

To authenticate a category in the GUI:


1. Go to *Security Profiles* > *Web Filter* and go to the *FortiGuard category based filter* section.

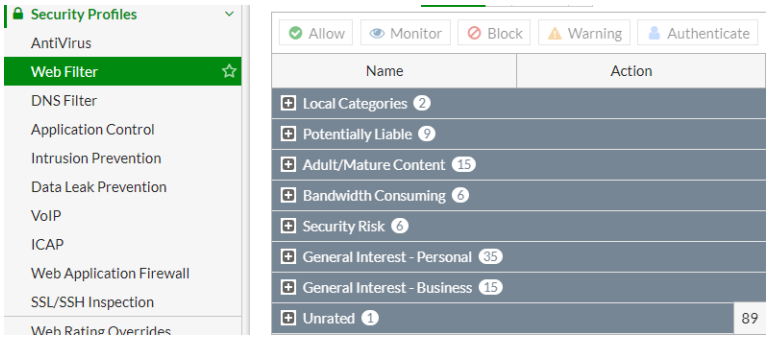

2. Open the *General Interest - Business* section by clicking the + icon beside it.
3. Select *Information Technology* and then select *Authenticate*.

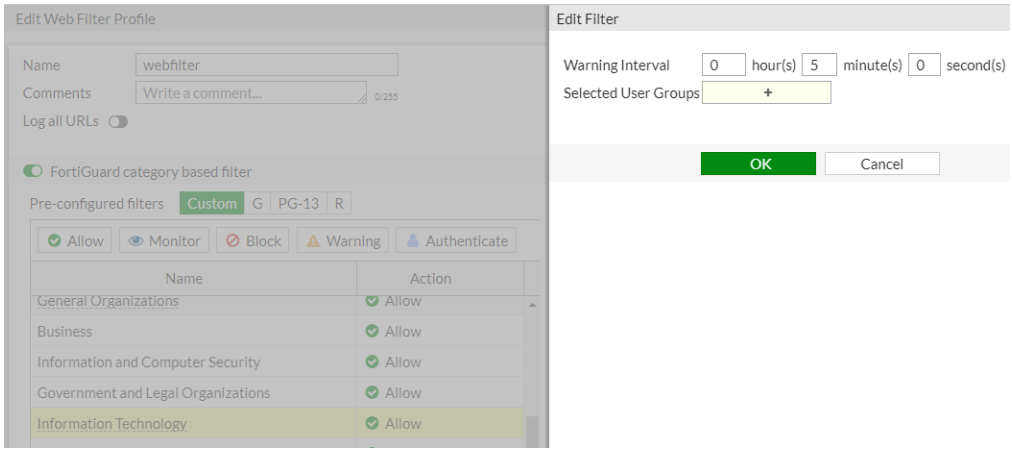

4. Set the *Warning Interval* which is the interval when the authentication page appears again after authentication.
5. Click the + icon beside Selected User Group and select a user group. You must have a valid user group to use this feature.

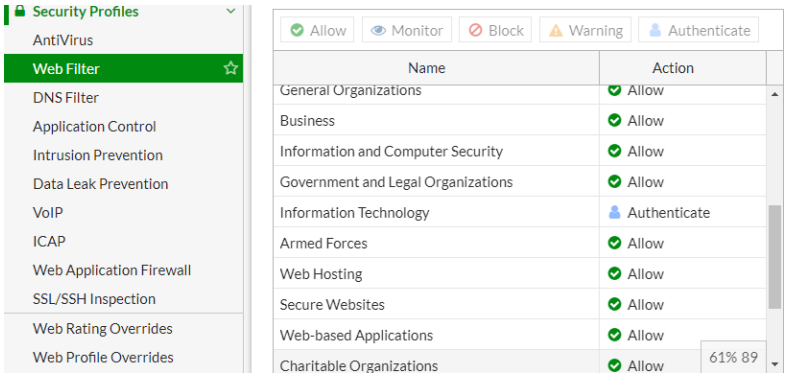


To authenticate a category in the CLI:


```
config webfilter profile
    edit "webfilter"
        config ftgd-wf
            unset options
            config filters
                edit 1
                    set category 52
                    set action authenticate             -- set the action of authenticate
                    set auth-usr-grp "local_group"      -- user to authenticate
                next
            end
        end
    next
end
```

To validate that you have configured authentication:

1. Go to a website belonging to the selected category, for example, www.fortinet.com. First, you see a warning page where you can choose to *Proceed* or *Go Back*.

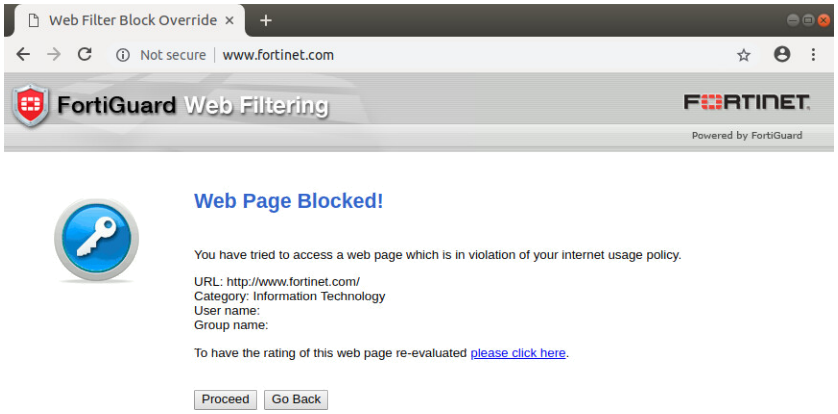

2. Click *Proceed* to check that the authentication page appears.

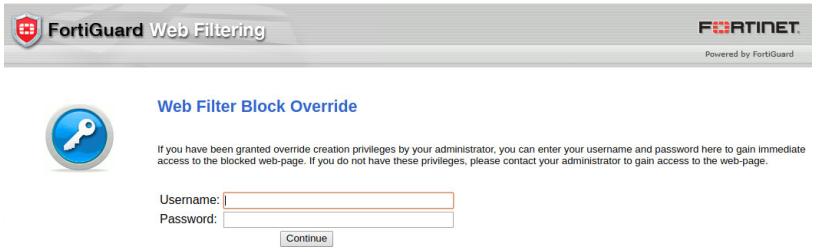


3. Enter the username and password of the user group you selected, and click *Continue*.
   If the credentials are correct, the traffic is allowed through.

Sample customization of the replacement page


When the FortiGuard Web Filter action is *Block*, *Warning*, or *Authenticate*, there is a *Customize* option for you to customize the replace page.

To customize the replace page:

1. Go to *Security Profiles* > *Web Filter* and go to the *FortiGuard category based filter* section.
2. Right-click the item and select *Customize*.

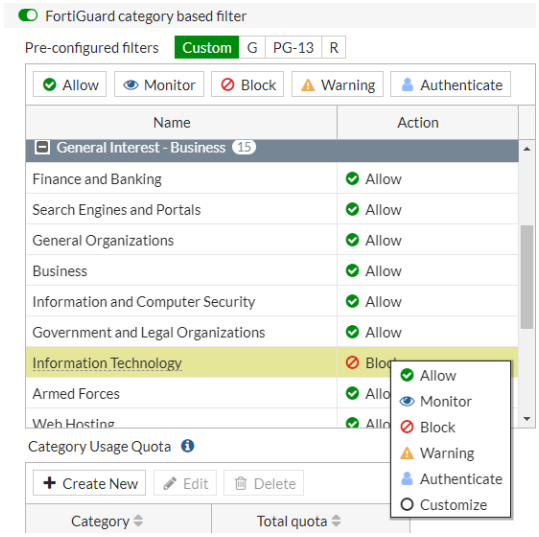

3. A pane appears for you to customize the page.

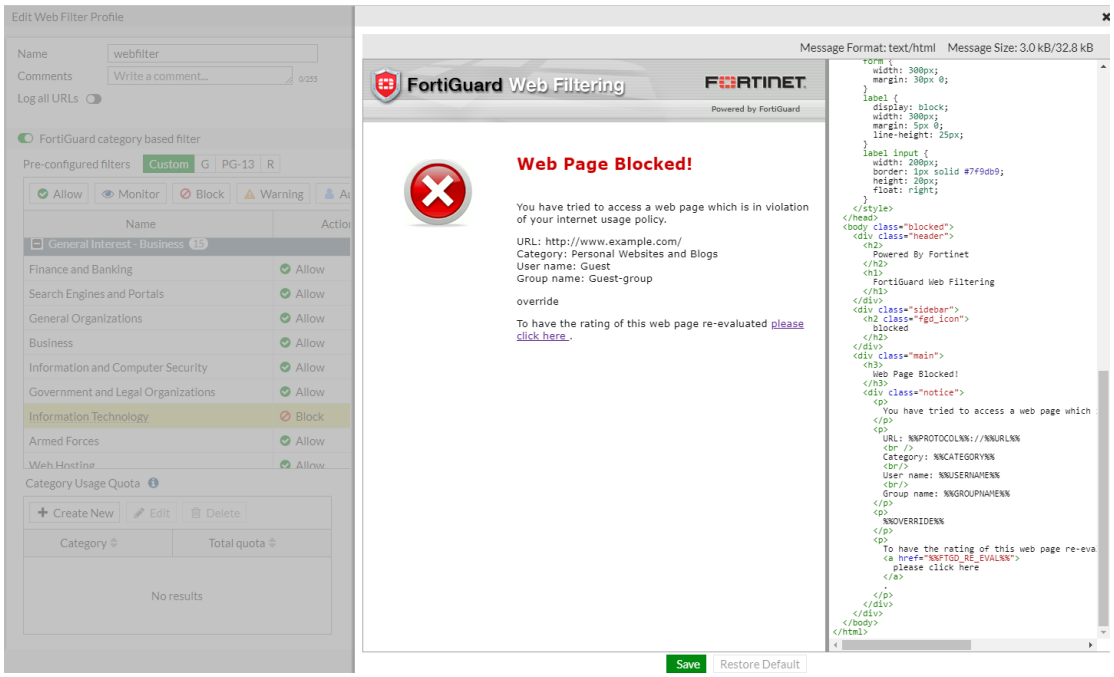

Usage quota

In addition to using category and classification blocks and overrides to limit user access to URLs, you can set a daily quota by category, category group, or classification. Quotas allow access for a specified length of time or a specific bandwidth, and is calculated separately for each user. Quotas are reset everyday at midnight.

Quotas can be set only for the actions of *Monitor*, *Warning*, or *Authenticate*. When the quota is reached, the traffic is blocked and the replacement page displays.

You can only use quotas when inspection mode is *Proxy*.

Sample topology




Sample configuration of setting a quota


This example shows setting a time quota for a category, for example, the Education category.

To configure a quota in the GUI:


1. Go to *Security Profiles* > *Web Filter* and go to the *FortiGuard category based filter* section.
2. Open the *General Interest - Personal* section by selecting the + icon beside it.
3. Select *Education* and then select *Monitor*.
4. In the *Category Usage Quota* section, select *Create New*.

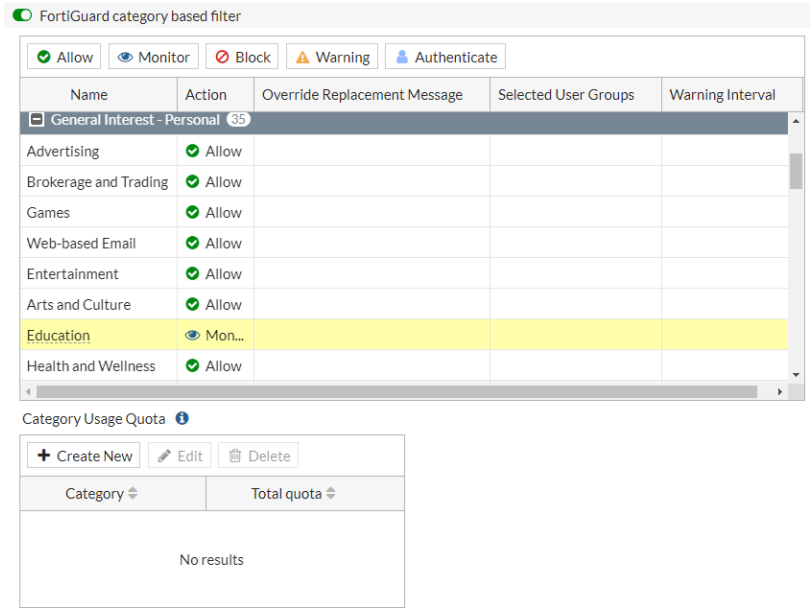

5. In the right pane, select the *Category* field and then select *Education*.
6. For the *Quota Type*, select *Time* and set the *Total quota* to 5 *minute(s)*.

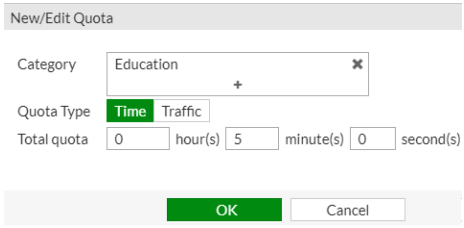

7. Select *OK* and the Category Usage Quota section displays the quota.

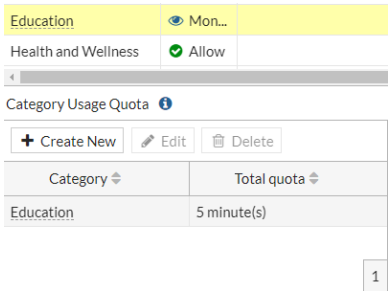

8. Validate the configuration by visiting a website in the education category, for example https://www.harvard.edu/. You can view websites in the education category.

9. Check the used and remaining quota in *Monitor* > *FortiGuard Quota*.


Category Usage Quota

User 10.1.100.11

Web Filter Profile webfilter

Category	Used Quota	Remaining
Education	1 second(s)	4 minute(s) and 59 second(s)

10. When the quota reaches its limit, traffic is blocked and the replacement page displays.

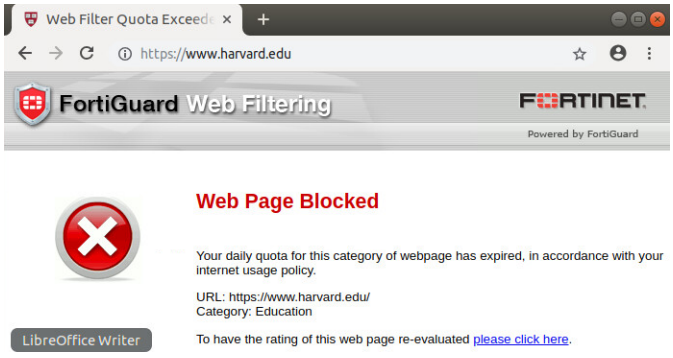

To configure a quota in the CLI:

```
config webfilter profile
    edit "webfilter"
        config ftgd-wf
           unset options
           config filters
              edit 1
                 set category 30 <-- the id of education category
              next
           end
           config quota
              edit 1
                 set category 30
                 set type time
                 set duration 5m
              next
           end
        end
    next
end
```

Web content filter

You can control access to web content by blocking web pages containing specific words or patterns. This helps to prevent access to pages with questionable material. You can specify words, phrases, patterns, wildcards and Perl regular expressions to match content on web pages. You can use multiple web content filter lists and select the best web content filter list for each Web Filter profile.

Pattern type

When you have created the Web Filter content list, you need to add web content patterns to it. There are two types of patterns: wildcard and regular expression.

Wildcard

Use the wildcard setting to block or exempt one word or text strings of up to 80 characters. You can also use wildcard symbols such as **?** or ***** to represent one or more characters. For example, a wildcard expression *forti*.com* matches *fortinet.com* and *forticare.com*. The ***** represents any character appearing any number of times.

Regular expression

Use the regular expression setting to block or exempt patterns of Perl expressions which use some of the same symbols as wildcard expressions but for different purposes. In regular expressions, ***** represents the character before the symbol. For example, *forti*.com* matches *fortiii.com* but not *fortinet.com* or *fortiice.com*. In this case, the symbol ***** represents **i** appearing any number of times.

The maximum number of web content patterns in a list is 5000.

Content evaluation

The web content filter feature scans the content of every web page that is accepted by a security policy. The system administrator can specify banned words and phrases and attach a numerical value, or score, to the importance of those words and phrases. When the web content filter scan detects banned content, it adds the scores of banned words and phrases found on that page. If the sum is higher than a threshold set in the Web Filter profile, FortiGate blocks the page.

The default score for web content filter is 10 and the default threshold is 10. This means that by default, a web page is blocked by a single match.

Banned words or phrases are evaluated according to the following rules:

- The score for each word or phrase is counted only once, even if that word or phrase appears many times in the web page.
- The score for any word in a phrase without quotation marks is counted.
- The score for a phrase in quotation marks is counted only if it appears exactly as written.

Sample of applying banned pattern rules

The following table is an example of how rules are applied to the contents of a web page. For example, a web page contains only this sentence:


The score for each word or phrase is counted only once, even if that word or phrase appears many times in the web page.

Banned pattern	Assigned score	Score added to the sum for the entire page	Threshold score	Comment
word	20	20	20	Appears twice but only counted once. Web page is blocked.
word phrase	20	40	20	Each word appears twice but only counted once giving a total score of 40. Web page is blocked.
word sentence	20	20	20	“word” appears twice, “sentence” does not appear, but since any word in a phrase without quotation marks is counted, the score for this pattern is 20. Web page is blocked.
"word sentence"	20	0	20	This phrase does not appear exactly as written. Web page is allowed.
"word or phrase"	20	20	20	This phrase appears twice but is counted only once. Web page is blocked.


Sample configuration

To configure web content filter in the GUI:


1. Go to *Security Profiles* > *Web Filter* and go to the *Static URL Filter* section.
2. Enable *Content Filter* to display its options.

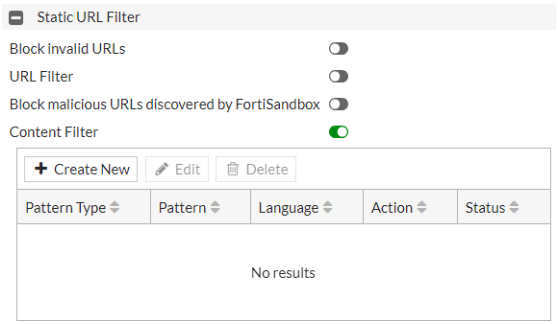


3. Select *Create New* to display the content filter options.

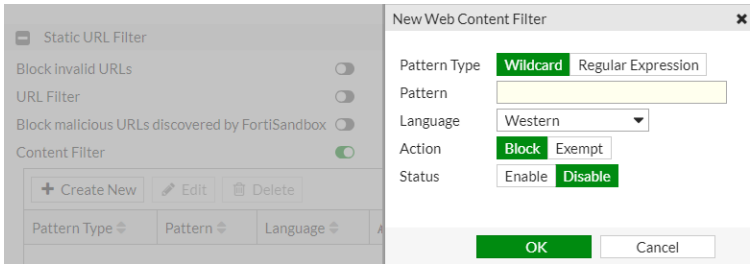


4. For *Pattern Type*, select *Regular Expression* and enter *fortinet* in the *Pattern* field.
   - Leave *Language* as *Western*.
   - Set *Action* to *Block*.
   - Set *Status* to *Enable*.

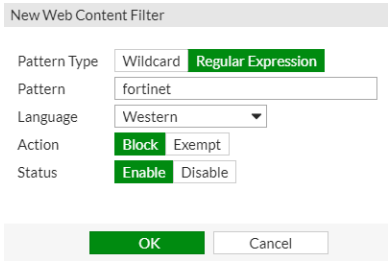

5. Select *OK* to see the updated *Static URL Filter* section.

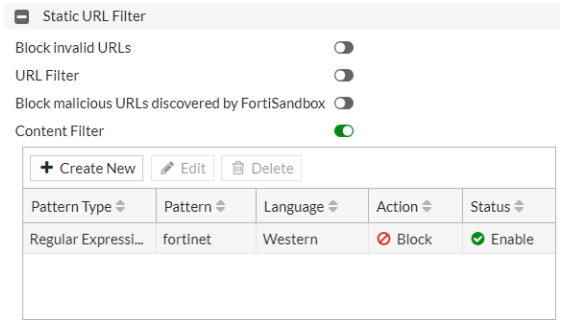

6. Validate the configuration by visiting a website with the word *fortinet*, for example, www.fortinet.com. The website is blocked and a replacement page displays.

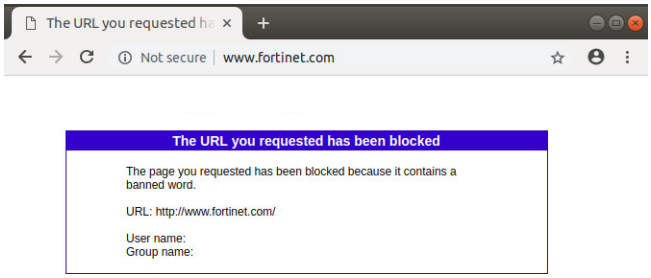

To configure web content filter in the CLI:

1. Create a content table:

```
config webfilter content
   edit 1                          <-- the id of this content
      set name "webfilter"
      config entries
         edit "fortinet"           <-- the banned word
           set pattern-type regexp  <-- the type is regular expression
           set status enable
           set lang western
           set score 10             <-- the score for this word is 10
           set action block
         next
      end
```

```
   next
end
```

2. Attach the content table to the Web Filter profile:

```
config webfilter profile
   edit "webfilter"
      config web
         set bword-threshold 10  <-- the threshold is 10
         set bword-table 1       <-- the id of content table we created in the previous
step
      end
      config ftgd-wf
         unset options
      end
   next
end
```

File filter

File Filter allows the Web Filter profile to block files passing through a FortiGate based on file type.

HTTP and FTP File Filtering is configurable in Web Filter profile.

File Filtering in Web Filter profile is based on file type (file's meta data) only, and not on file size or file content. You need to configure a DLP sensor to block files based on size or content such as SSN numbers, credit card numbers, or regexp.

File filtering only works on proxy mode policies.

Supported file types

The following file types are supported in File Filter and DLP profiles:

File Type Name	Description
.net	Match .NET files
7z	Match 7-zip files
activemime	Match activemime files
arj	Match arj compressed files
aspack	Match aspack files
avi	Match avi files
base64	Match base64 files
bat	Match Windows batch files
bin	Match bin files
binhex	Match binhex files
bmp	Match bmp files
bzip	Match bzip files

File Type Name	Description
bzip2	Match bzip2 files
cab	Match Windows cab files
chm	Match Windows compiled HTML help files
class	Match class files
cod	Match cod files
crx	Match Chrome extension files
dmg	Match Apple disk image files
elf	Match elf files
exe	Match Windows executable files
flac	Match FLAC files
fsg	Match fsg files
gif	Match gif files
gzip	Match gzip files
hlp	Match Windows help files
hta	Match hta files
html	Match html files
iso	Match ISO archive files
jad	Match jad files
javascript	Match javascript files
jpeg	Match jpeg files
lzh	Match lzh compressed files
mach-o	Match Mach object files
mime	Match mime files
mov	Match mov files
mp3	Match mp3 files
mpeg	Match mpeg files
msc	Match msc files
msi	Match Windows Installer msi bzip files
msoffice	Match MS-Office files. For example, doc, xls, ppt, and so on.
msofficex	Match MS-Office XML files. For example, docx, xlsx, pptx, and so on.

File Type Name	Description
pdf	Match pdf files
petite	Match petite files
png	Match png files
prc	Match prc files
rar	Match rar archives
rm	Match rm files
sis	Match sis files
tar	Match tar files
tiff	Match tiff files
torrent	Match torrent files
unknown*	Match unknown files
upx	Match upx files
uue	Match uue files
wav	Match wav files
wma	Match wma files
xar	Match xar archive files
xz	Match xz files
zip	Match zip files

* This file type is only available in DLP profiles.

Example

In the following example, three file filters are used in the Web Filter profile:

1. Block PDFs from entering our leaving the network (filter1).
2. Log the download of some graphics file-types via HTTP (filter2).
3. Block executable files from leaving to the network over FTP (filter3).

To configure a file-type based web filter in the CLI:

```
config webfilter profile
    edit "webfilter-file-filter"
        config file-filter
            set status enable
            set log enable
            set scan-archive-contents enable
            config entries
                edit "filter1"
                    set comment "Block PDF files"
```

```
                    set protocol http ftp
                    set action block
                    set direction any
                    set encryption any
                    set file-type "pdf"
                next
                edit "filter2"
                    set comment "Log graphics files"
                    set protocol http
                    set action log
                    set direction incoming
                    set encryption any
                    set file-type "jpeg" "png" "gif"
                next
                edit "filter3"
                    set comment "Block upload of EXE files"
                    set protocol ftp
                    set action block
                    set direction outgoing
                    set encryption any
                    set file-type "exe"
                next
            end
        end
    next
end
```

After configuring file filters in Web Filter profile, apply it to a firewall policy:

```
config firewall policy
    edit 1
        set name "client-to-internet"
        set srcintf "dmz"
        set dstintf "wan1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set utm-inspection-mode proxy
        set logtraffic all
        set webfilter profile "webfilter-filefilter"
        set profile-protocol-options "protocol"
        set ssl-ssh-profile "protocols"
        set nat enable
    next
end
```

To view the file filter logs:

```
# execute log filter category utm-file-filter
# execute log display
```

File filter block action:

```
1: date=2020-06-25 time=10:10:38 logid="1900064000" type="utm" subtype="file-filter"
eventtype="file-filter" level="warning" vd="root" eventtime=1593047438715790048 tz="+0900"
```


```
policyid=1 sessionid=206159 srcip=10.0.0.20 srcport=46172 srcintf="port1" srcintfrole="lan"
dstip=10.0.10.20 dstport=80 dstintf="wan1" dstintfrole="wan" proto=6 service="HTTP"
profile="default" direction="incoming" action="blocked"
url="http://www.fortitest.jp/download/test.pdf" hostname="www.fortitest.jp"
agent="curl/7.58.0" filtername="test" filename="test.pdf" filesize=17556 filetype="pdf"
msg="File was blocked by file filter."
```

File filter log action:

```
2: date=2019-03-19 time=10:48:23 logid="0346012672" type="utm" subtype="file-filter"
eventtype="file-filter" level="notice" vd="vd1" eventtime=1548442102 policyid=1
sessionid=521 srcip=10.1.100.22 srcport=52894 srcintf="dmz" srcintfrole="undefined"
dstip=172.16.200.55 dstport=80 dstintf="wan1" dstintfrole="undefined" proto=6 service="HTTP"
hostname="172.16.200.55" profile="webfilter-filefilter" action="passthrough"
reqtype="direct" url="/app_data/park.jpg" sentbyte=0 rcvdbyte=0 direction="incoming"
filename="park.jpg" filtername="filter2" filetype="jpeg" msg="File was detected by file
filter."
```


To configure a file-type based web filter in the GUI:

1. Go to *Security Profiles* > *Web Filter*.
2. Click *Create New* or select an existing profile and click *Edit*.

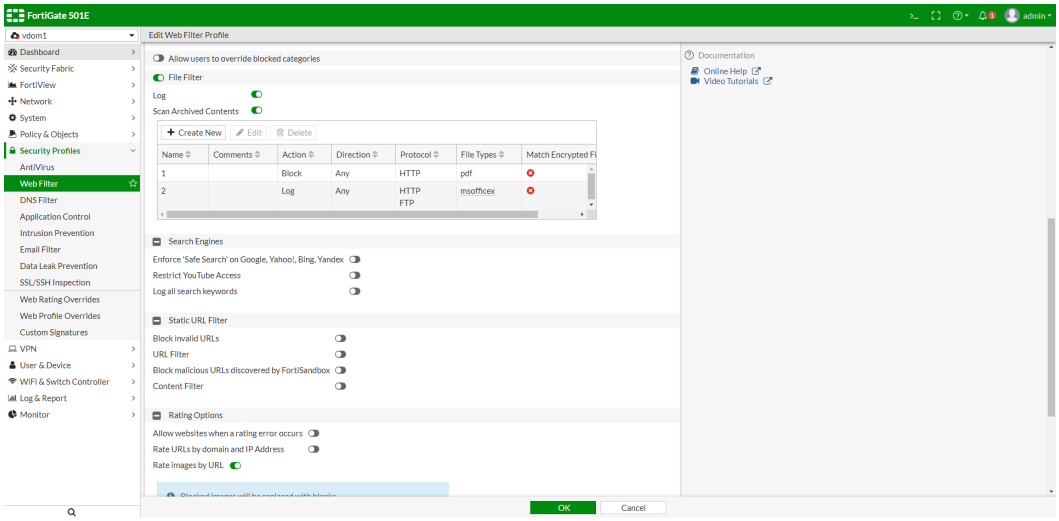


3. Enable *File Filter*.
4. Enable *Log* and *Scan Archived Contents*.
5. In the *File Filter* table, click *Create New*.


6. Configure the filters:
   a. *filter1* blocks PDFs from entering our leaving the network .

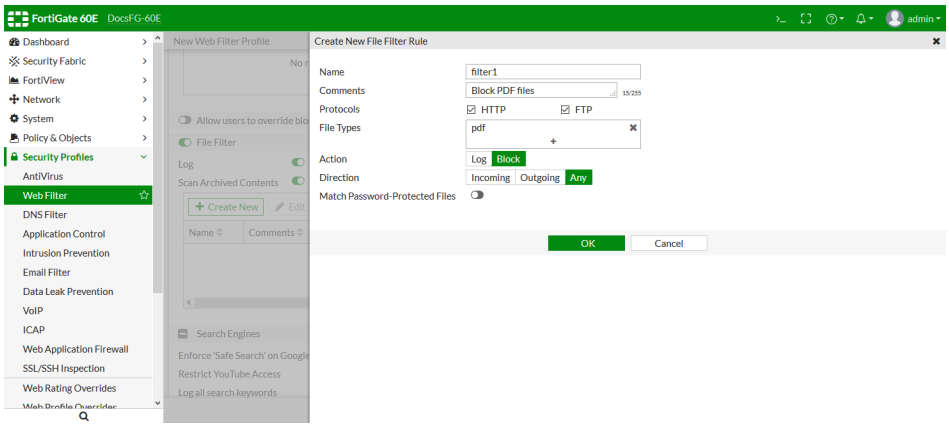


   b. *filter2* logs the download of some graphics file-types via HTTP .

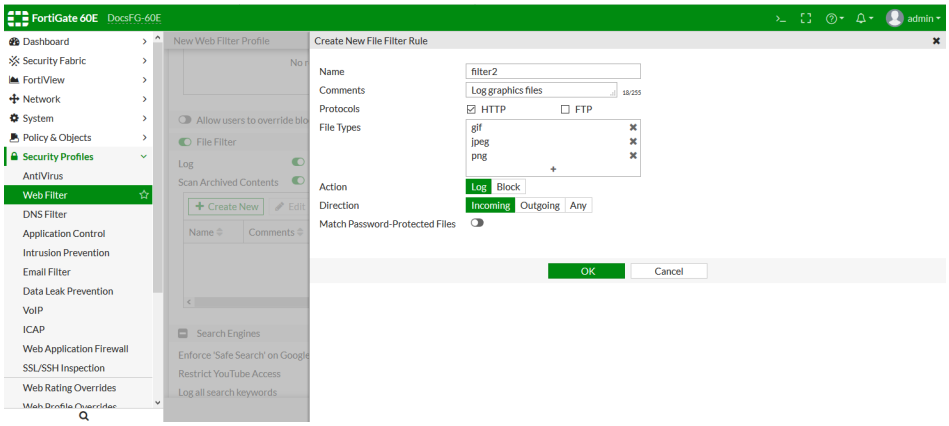

   c. *filter3* blocks EXE files from leaving to the network over FTP .

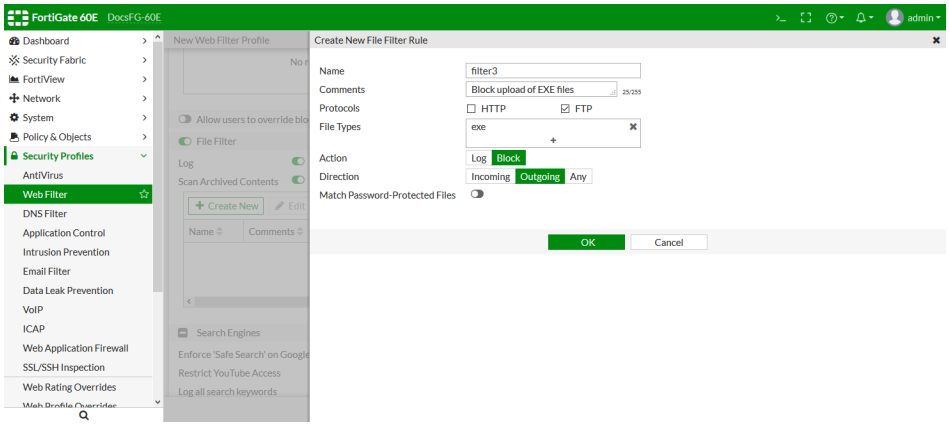

7. Click *OK*.
8. Add the new web filter profile to a firewall policy.
9. To see if there are file filter logs, go to *VDOM* > *Log & Report* > *Forward Traffic*. Select an entry and view the *Log Details*. The number of file filter logs for that entry is listed in the *Other* category.

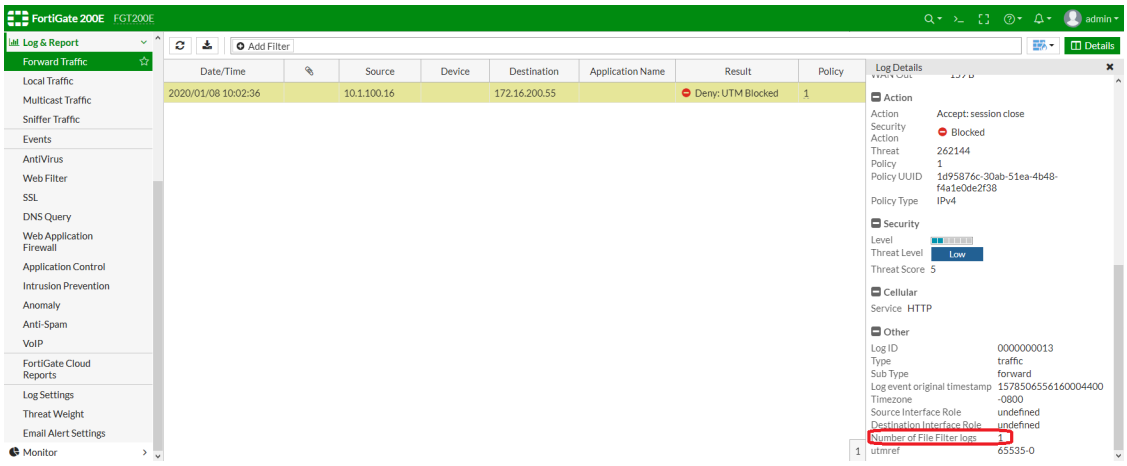

File filter logs can only be viewed in the CLI.

Advanced filters 1

This topic gives examples of the following advanced filter features:

- Block malicious URLs discovered by FortiSandbox on page 933
- Allow websites when a rating error occurs on page 934
- Rate URLs by domain and IP address on page 934
- Block invalid URLs on page 935
- Rate images by URL on page 936

Block malicious URLs discovered by FortiSandbox


To use this feature, you must be registered to a FortiSandbox and be connected to it.

This feature blocks malicious URLs that FortiSandbox finds.

For information on configuring FortiSandbox, see Using FortiSandbox Cloud with antivirus on page 896.

To enable this feature in the GUI:

1. Go to *Security Profiles* > *Web Filter* and go to the *Static URL Filter* section.
2. Enable *Block malicious URLs discovered by FortiSandbox*.

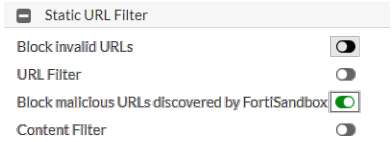

To enable this feature in the CLI:

```
config webfilter profile
    edit "webfilter"
        config web
            set blacklist enable
        end
    next
end
```


Allow websites when a rating error occurs

If you don't have a FortiGuard license but you have enabled services that need a FortiGuard license, such as FortiGuard filter, then you'll get a rating error message.

Use this setting to allow access to websites that return a rating error from the FortiGuard Web Filter service.

To enable this feature in the GUI:

1. Go to *Security Profiles* > *Web Filter* and go to the *Rating Options* section.
2. Enable *Allow websites when a rating error occurs*.

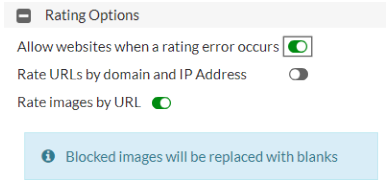

To enable this feature in the CLI:

```
config webfilter profile
    edit "webfilter"
        config ftgd-wf
            set options error-allow
        end
    next
end
```

Rate URLs by domain and IP address

If you enable this feature, in addition to only sending domain information to FortiGuard for rating, FortiGate always sends both the URL domain name and the TCP/IP packet's IP address (except for private IP addresses) to FortiGuard for the rating.


FortiGuard server might return a different category of IP address and URL domain. If they are different, FortiGate uses the rating weight of the IP address or domain name to determine the rating result and decision. This rating weight is hard-coded in FortiGate.

For example, if we use a spoof IP of Google as www.irs.gov, FortiGate will send both the IP address and domain name to FortiGuard to get the rating. In this example, we get two different ratings, one is search engine and portals which belongs to the IP of Google, another is government and legal organizations which belongs to www.irs.gov. As the search engine

and portals has a higher weight than government and legal organizations, this traffic will be rated as search engine and portals and not rated as government and legal organizations.

To enable this feature in the GUI:

1. Go to *Security Profiles* > *Web Filter* and go to the *Rating Options* section.
2. Enable *Rate URLs by domain and IP address*.

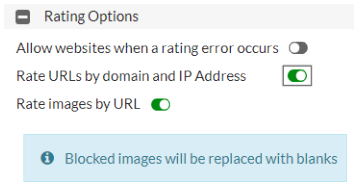

To enable this feature in the CLI:

```
config webfilter profile
    edit "webfilter"
        config ftgd-wf
            set options rate-server-ip
        end
    next
end
```


Block invalid URLs

Use this feature to block websites when their SSL certificate CN field does not contain a valid domain name.

For example, this option blocks URLs which contains spaces. If there is a space in the URL, it must be written as: *http://www.example.com/space%20here.html*.

To enable this feature in the GUI:

1. Go to *Security Profiles* > *Web Filter* and go to the *Static URL Filter* section.
2. Enable *Block invalid URLs* .

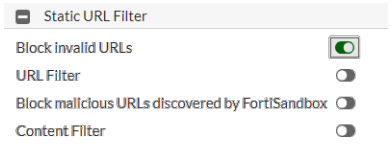

To enable this feature in the CLI:


```
config webfilter profile
    edit "webfilter"
        set options block-invalid-url
    next
end
```

Rate images by URL

This feature enable FortiGate to retrieve ratings for individual images in addition to websites. Images in a blocked category are not displayed even if they are part of a site in an allowed category. Blocked images are replaced with blank placeholders. These image file types are rated: GIF, JPEG, PNG, BMP, and TIFF.

This feature requires a valid FortiGuard license, otherwise rating errors will occur. By default, this feature is enabled.

For example, if the Other Adult Materials category is blocked, before enabling *Rate images by URL*, the image is not blocked:

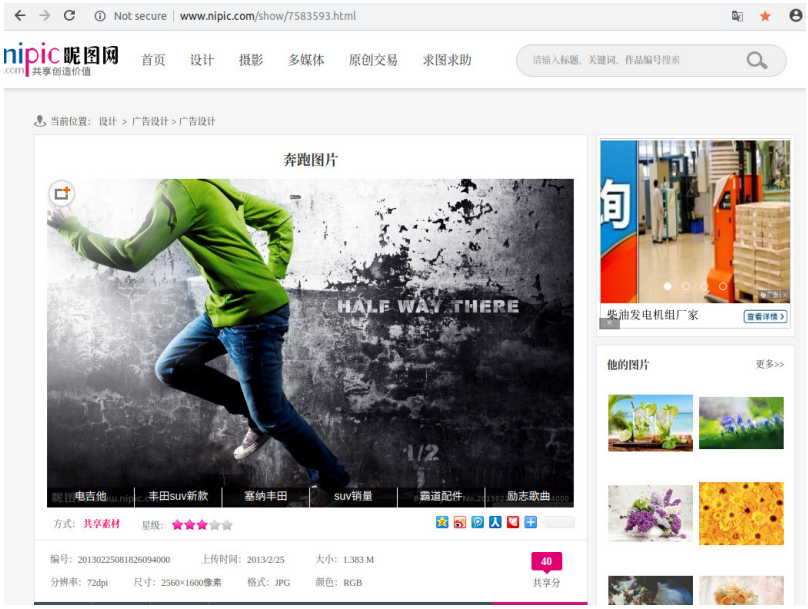


After enabling *Rate images by URL*, images in the Other Adult Materials category are blocked. For example:



To enable this feature in the GUI:

1. Go to *Security Profiles* > *Web Filter* and go to the *Rating Options* section.
2. Enable *Rate images by URL*.

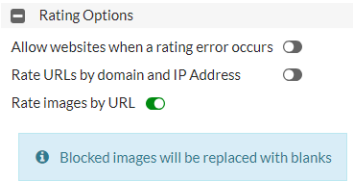

To enable this feature in the CLI:

```
config webfilter profile
    edit "webfilter"
        config ftgd-wf
            unset options
            set rate-image-urls enable
        end
    next
end
```

Advanced filters 2

This topic gives examples of the following advanced filter features:

- Safe search on page 937
- YouTube education filters on page 938
  - Restrict YouTube access on page 938
  - YouTube channel filtering on page 939
- Log all search keywords on page 940
- Restrict Google account usage to specific domains on page 940
- HTTP POST Action on page 941
- Remove Java applets, remove ActiveX, and remove cookies on page 942



These advanced filters are only available when inspection mode is *Proxy*.

Safe search


This feature applies to popular search sites and prevents explicit websites and images from appearing in search results.

Supported search sites are:

- Google
- Yahoo
- Bing
- Yandex

To enable this feature in the GUI:

1. Go to *Security Profiles* > *Web Filter* and go to the *Search Engines* section.
2. Enable *Enforce 'Safe Search' on Google, Yahoo!, Bing, Yandex*.



To enable this feature in the CLI:

```
config webfilter profile
    edit "webfilter"
        config web
            set safe-search url
        end
    next
end
```

YouTube education filters

Use these features to limit users' access to YouTube channels, such as in an education environment where you want students and users to be able to access YouTube education videos but not other YouTube videos.

Restrict YouTube access


Formerly, YouTube for Schools was a way to access educational videos inside a school network. This YouTube feature lets schools access educational videos on YouTube EDU and to specify the videos accessible within the school network.

When Google stopped supporting YouTube for Schools on July 1, 2016, YouTube safe search also stopped working.

Google provides information on restricting YouTube content such as Restrict YouTube content available to G Suite users. At this time, the options Google offers to restrict inappropriate content includes: DNS, HTTP headers, and Chromebooks..

To enable this feature in the GUI:

1. Go to *Security Profiles* > *Web Filter* and go to the *Search Engines* section.
2. Enable *Restrict YouTube Access* and select *Strict* or *Moderate*.



To enable this feature in the CLI:

```
config webfilter profile
    edit "webfilter"
        config web
            set youtube-restrict strict
        end
    next
end
```

YouTube channel filtering

This Web Filter feature is also called *Restrict YouTube access to specific channels*. Use this feature to block or only allow matching YouTube channels.

The following identifiers are used:

```
given <channel-id>, affect on:
   www.youtube.com/channel/<channel-id>
   www.youtube.com/user/<user-id>
```


matches channel-id from <meta itemprop="channelId" content="UCGzuiiLdQZu9wxDNJHO_JnA">

```
   www.youtube.com/watch?v=<string>
```


matches channel-id from <meta itemprop="channelId" content="UCGzuiiLdQZu9wxDNJHO_JnA">

To enable this feature in the GUI:


1. Go to *Security Profiles* > *Web Filter* and go to the *Proxy Options* section.
2. Enable *Restrict YouTube access to specific channels*.

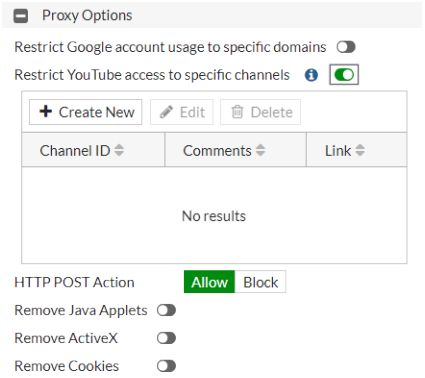

3. Select *Create New* and specify the *Channel ID*, for example, `UCGzuiiLdQZu9wxDNJHO_JnA`.

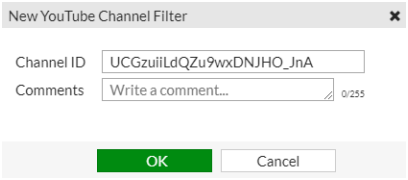

4. Select *OK* and the option shows the *Channel ID* and its *Link*.

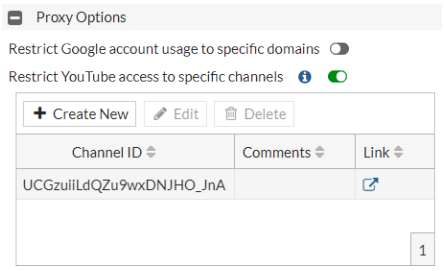

To enable this feature in the CLI:

```
config webfilter profile
   edit "webfilter"
```

```
      set youtube-channel-status whitelist
      config youtube-channel-filter
         edit 1
            set channel-id "UCGzuiiLdQZu9wxDNJHO_JnA"
         next
      end
   next
end
```

Where:


- `whitelist`: only allow the traffic belongs to this channel id and relative identifiers.
- `blacklist`: only block the traffic belongs to this channel id and relative identifiers and allow the other traffic pass

Log all search keywords

Use this feature to log all search phrases.

To enable this feature in the GUI:

1. Go to *Security Profiles* > *Web Filter* and go to the *Search Engines* section.
2. Enable *Log all search keywords*.



To enable this feature in the CLI:


```
config webfilter profile
    edit "webfilter"
        config web
            set log-search enable
        end
    next
end
```

Restrict Google account usage to specific domains


Use this feature to block access to some Google accounts and services while allowing access to accounts in the domains in the exception list.

To enable this feature in the GUI:

1. Go to *Security Profiles* > *Web Filter* and go to the *Proxy Options* section.
2. Enable *Restrict Google account usage to specific domains*.

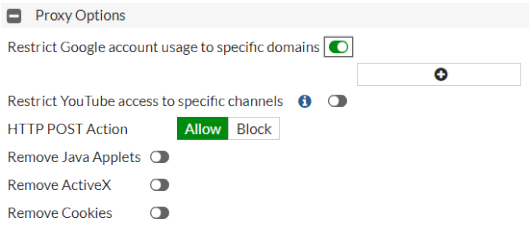

3. Select the + button and enter the domains that Google can access, for example, www.fortinet.com.

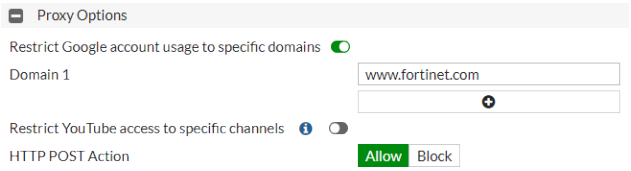

When you try to use Google services like Gmail, only traffic from the domain of www.fortinet.com can go through. Traffic from other domains is blocked.


HTTP POST Action

Select the action to take with HTTP POST traffic. HTTP POST is the command used by your browser when you send information, such as a form you have filled-out or a file you are uploading to a web server.

The action options are Allow or Block. The default is Allow.

To enable this feature in the GUI:

1. Go to *Security Profiles* > *Web Filter* and go to the *Proxy Options* section.
2. For *HTTP POST Action*, select *Allow* or *Block*.

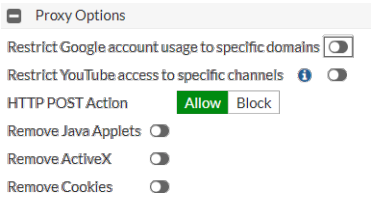

To enable this feature in the CLI:

```
config webfilter profile
    edit "webfilter"
        set post-action [normal/block]
        config ftgd-wf
            unset options
        end
    next
end
```

Remove Java applets, remove ActiveX, and remove cookies


The *Remove Java Applets* feature filters java applets from web traffic. Websites using java applets might not function properly if you enable this filter.

The *Remove ActiveX* feature filters ActiveX scripts from web traffic. Websites using ActiveX might not function properly with if you enable this filter.

The *Remove Cookies* feature filters cookies from web traffic. Websites using cookies might not function properly if you enable this filter.

To enable this feature in the GUI:

1. Go to *Security Profiles* > *Web Filter* and go to the *Proxy Options* section.
2. Select the filters you want to use: *Remove Java Applets*, *Remove ActiveX*, and/or *Remove Cookies*.

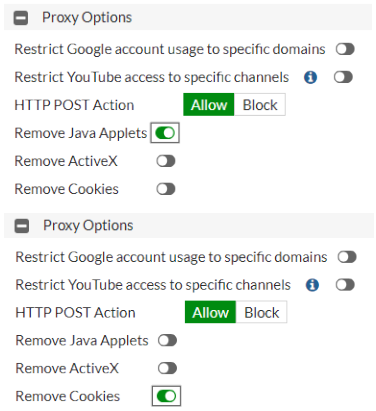

To enable this feature in the CLI:

```
config webfilter profile
   edit "webfilter"
      set options activexfilter cookiefilter javafilter <-- enable one or more of
activexfilter cookiefilter javafilter.
      config ftgd-wf
         unset options
      end
   next
end
```

External resources for web filter

External Resources is a new feature introduced in FortiOS 6.0, which provides a capability to import an external blocklist which sits on an HTTP server. This feature helps FortiGate retrieve a dynamic URL/Domain Name/IP Address/Malware hash list from an external HTTP server periodically. FortiGate uses these external resources as Web Filter's remote categories, DNS Filter's remote categories, policy address objects or antivirus profile's malware definitions. If the external resource is updated, FortiGate objects will update dynamically.

External Resource are categorized into 4 types:

- URL list (Type=*category*)
- Domain Name List (Type=*domain*)

- IP Address list (Type=*address*)
- Malware hash list (Type=*malware*)

For Web Filter profile, it can use category type external resources. Category type external resources file is a URL entries list in a plain text file.

When a *category* type external resource is configured in Web Filter profile, it will be treated as a Remote Category. If the URL in a HTTP/HTTPS request matches the entry inside this external resource file, it will be treated as the Remote Category and follow the action configured for this category in Web Filter profile.

External resource type *category* also can be used in *ssl-ssh-profile* configuration for category-based *SSL-Exempt*. When a Remote Category is configured in *ssl-ssh-profile SSL-Exempt*, if a HTTPS request's URL matches in the Remote Category's entry list, HTTPS request with destination for this URL can be exempted from SSL Deep Inspection.

External Resources File Format

External Resources File should follow the following requirements:

- The external resource file is a plain text format file and each URL list/IP Address/Domain Name occupies a single line.
- The file is limited to 10M, line is limited 128K (128 x 1024 entries), and the line length limit is 4K characters.
- The entries limited also follow table size limitation defined by CMDB per model.
- The external resource update period can be set to 1 minute, hourly, daily, weekly, or monthly (43200 min, 30 days).
- The external resource type as category (URL list) and domain (Domain Name list) share the category number range 192-221 (total 30 categories).
- There's no duplicated entry validation for external resources file (entry inside each file or inside different files).

For URL list (Type=category):

Scheme is optional, and will be truncated if found (http://, https:// is not needed).

Wildcard (*) is supported (from 6.2). It supports the '*' at beginning and ending of URL, and not in the middle of URL as follows:

```
+ support *.domain2.com, domain.com.* + not support: domain3.*.com
```

IDN (International Domain Name) and UTF encoding URL is supported (from 6.2).

IPv4,IPv6 format URL is supported. IPv6 in URL list must in [ ] form.

Configure External Resources from CLI

We can use CLI to configure the external resources files that is located on external HTTP Server. Under Global, configure the external resource file location and specify the resource type.

Web Filter will use *category* type external resources as Remote Categories. In the following example, it is configured a file *Ext-Resource-Type-as-Category-1.txt* as type as category, it will be treated in Web Filter as Remote Category, the category name configured as *Ext-Resource-Type-as-Category-1* and category-id as *192*:

```
config system external-resource
    edit "Ext-Resource-Type-as-Category-1"
        set type category  <----
        set category 192   <----
        set resource "http://172.16.200.66/external-resources/Ext-Resource-Type-as-Category-
1.txt"
        set refresh-rate 1
```

```
    next
end
```

Now in each VDOM, category type external resource can be used in Web Filter as Remote Cateogry. In the example above, URL list in "Ext-Resource-Type-as-Category-1.txt" file will be treated as remote category (category-id 192). Configure the action for this remote category in Web Filter profile and apply it in the policy:

```
config webfilter profile
    edit "webfilter"
        config ftgd-wf
            unset options
            config filters
                edit 1
                    set category 2
                    set action warning
                next
                ......


                edit 24
                    set category 192  <----
                    set action block
                next
                edit 25
                    set category 221
                    set action warning
                next
                edit 26
                    set category 193
                next
            end
        end
        set log-all-url enable
    next
end
```

```
config firewall policy
    edit 1
        set name "WebFilter"
        set srcintf "port10"
        set dstintf "port9"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set logtraffic all
        set webfilter-profile "webfilter"
        set profile-protocol-options "protocol"
        set ssl-ssh-profile "protocols"
        set nat enable
    next
end
```


Configure External Resources from GUI

To configure, edit, or view the Entries for external resources from GUI:


1. Go to *Global* > *Security Fabric* > *Fabric Connectors*:

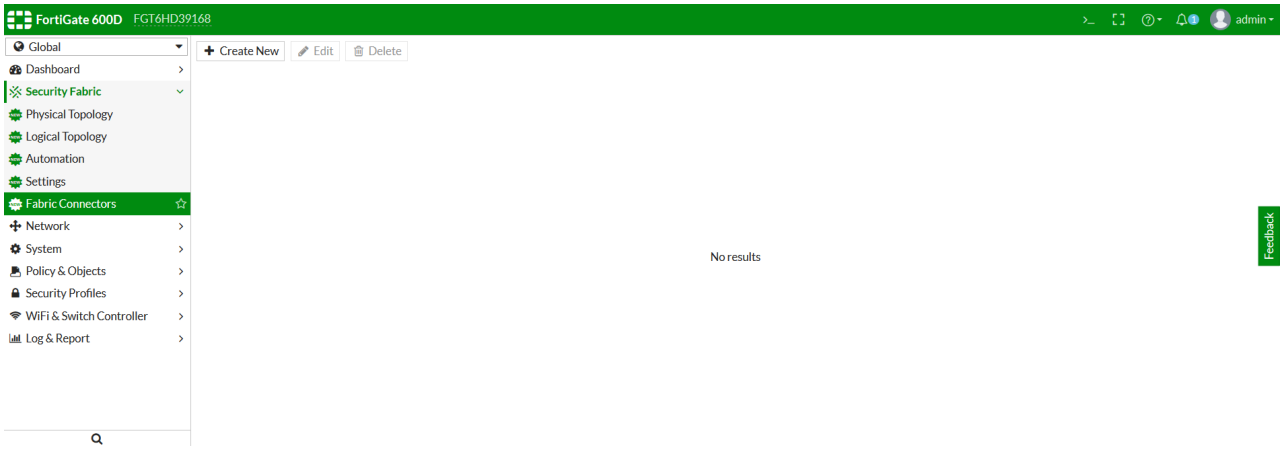


2. Go to *Global* > *Security Fabric* > *Fabric Connectors*.
3. Click *Create New*, and in the *Threat Feeds* section, select *FortiGuard Category*.

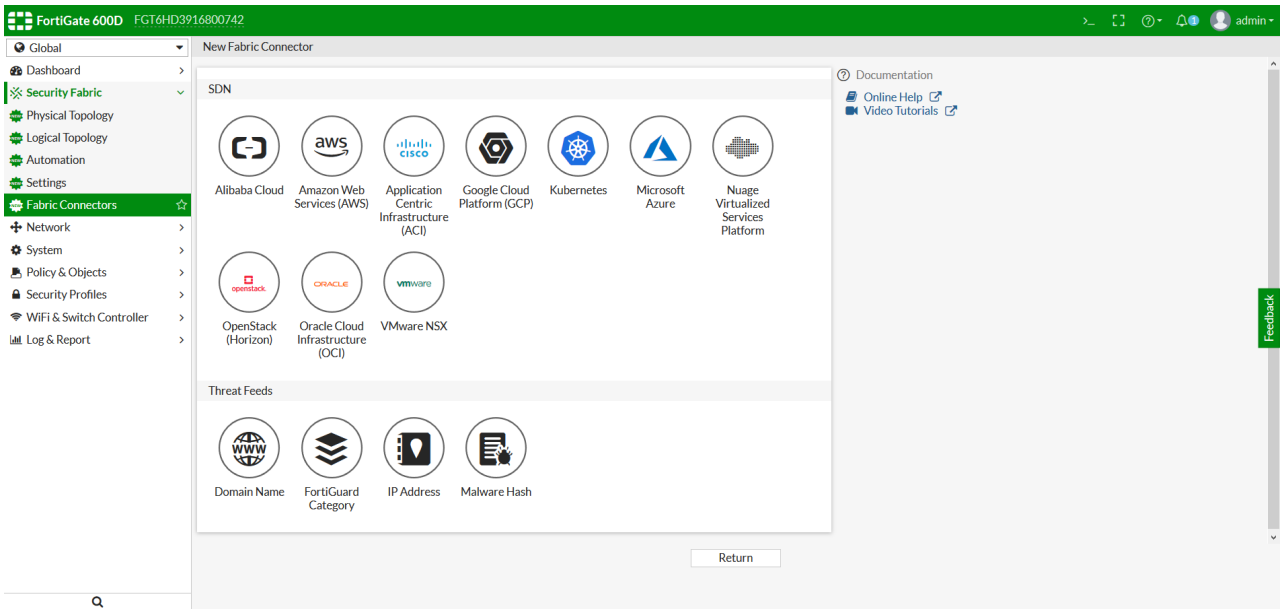


4. Enter the resource name, URI location of the resource file, resource authentication credential, and *Refresh Rate*.

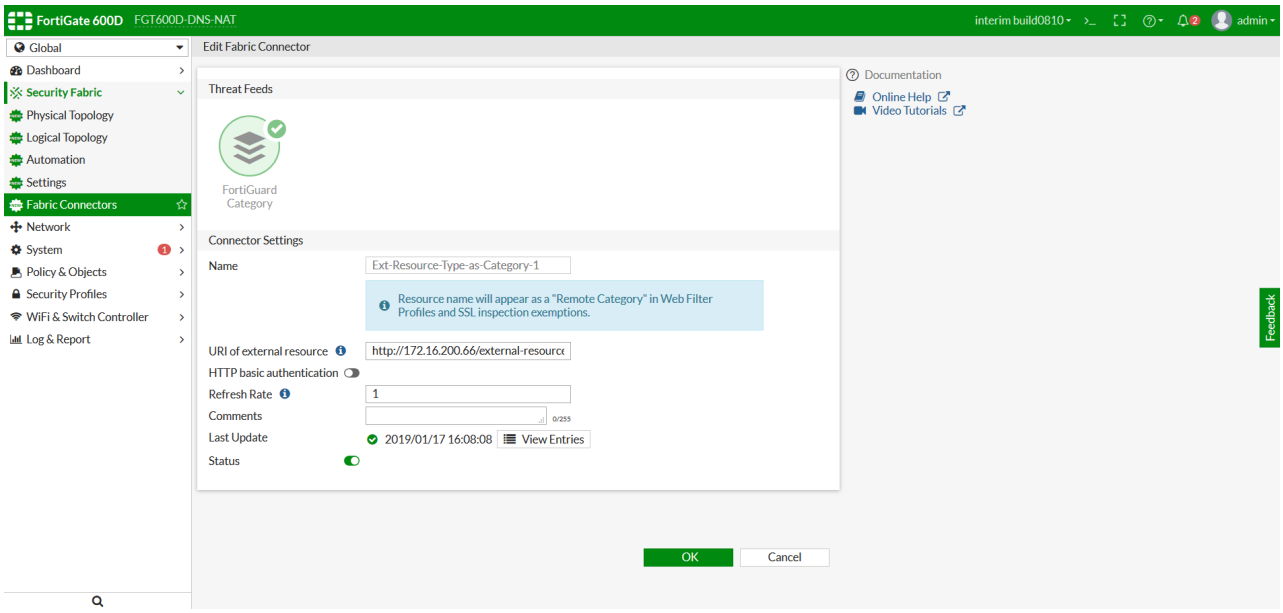

5. Click *OK*.
6. After a few minutes, double-click the *Threat Feeds Object* you just configured. It is shown in the *Edit* page.
7. Click *View Entries* to view the entry list in the external resources file:

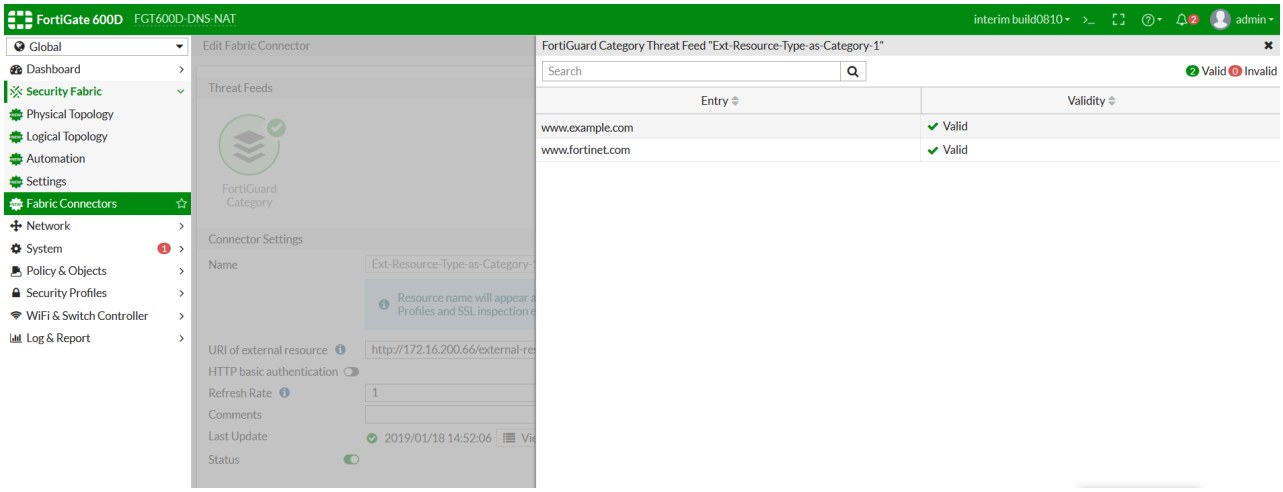


8. Go to *VDOM* > *Security Profiles* > *Web Filter*. The configured external resources is shown and configured in each Web Filter Profile:

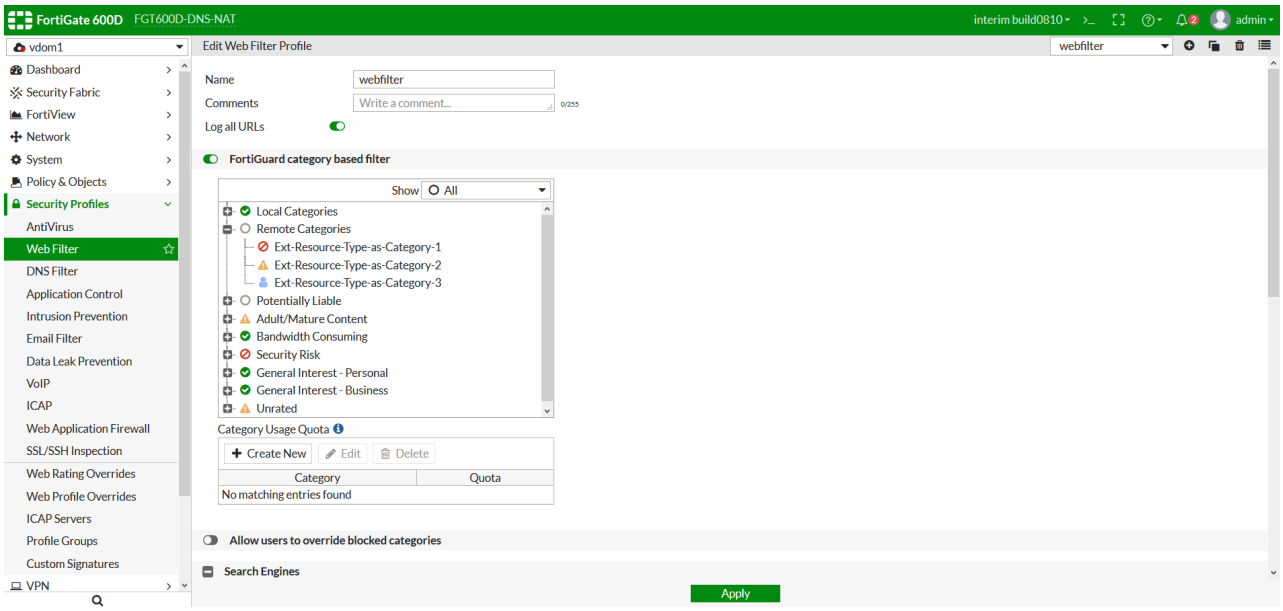

Log Example

If an HTTP/HTTPS request URL is matched in remote category's entry list, it will override its original FortiGuard URL rating and be treated as a remote category.

Go to *VDOM > Log & Report > Web Filter*:

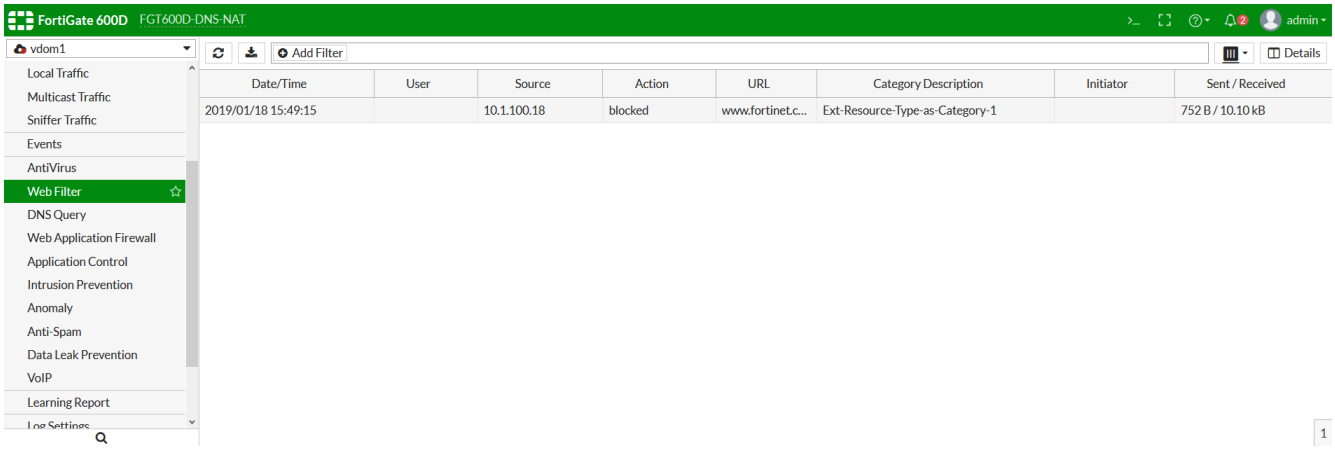


CLI Example:

```
1: date=2019-01-18 time=15:49:15 logid="0316013056" type="utm" subtype="webfilter"
eventtype="ftgd_blk" level="warning" vd="vdom1" eventtime=1547855353 policyid=1
sessionid=88922 srcip=10.1.100.18 srcport=39886 srcintf="port10" srcintfrole="undefined"
dstip=216.58.193.67 dstport=443 dstintf="port9" dstintfrole="undefined" proto=6
service="HTTPS" hostname="www.fortinet.com" profile="webfilter" action="blocked"
reqtype="direct" url="/" sentbyte=752 rcvdbyte=10098 direction="outgoing" msg="URL belongs
to a denied category in policy" method="domain" cat=192 catdesc="Ext-Resource-Type-as-
Category-1"
```

Remote Category in ssl-ssh-profile category-based SSL-Exempt

Remote category can be applied in *ssl-ssh-profile category-based SSL-Exempt*.

Go to *VDOM* > *Security Profiles* > *SSL/SSH Inspection*:

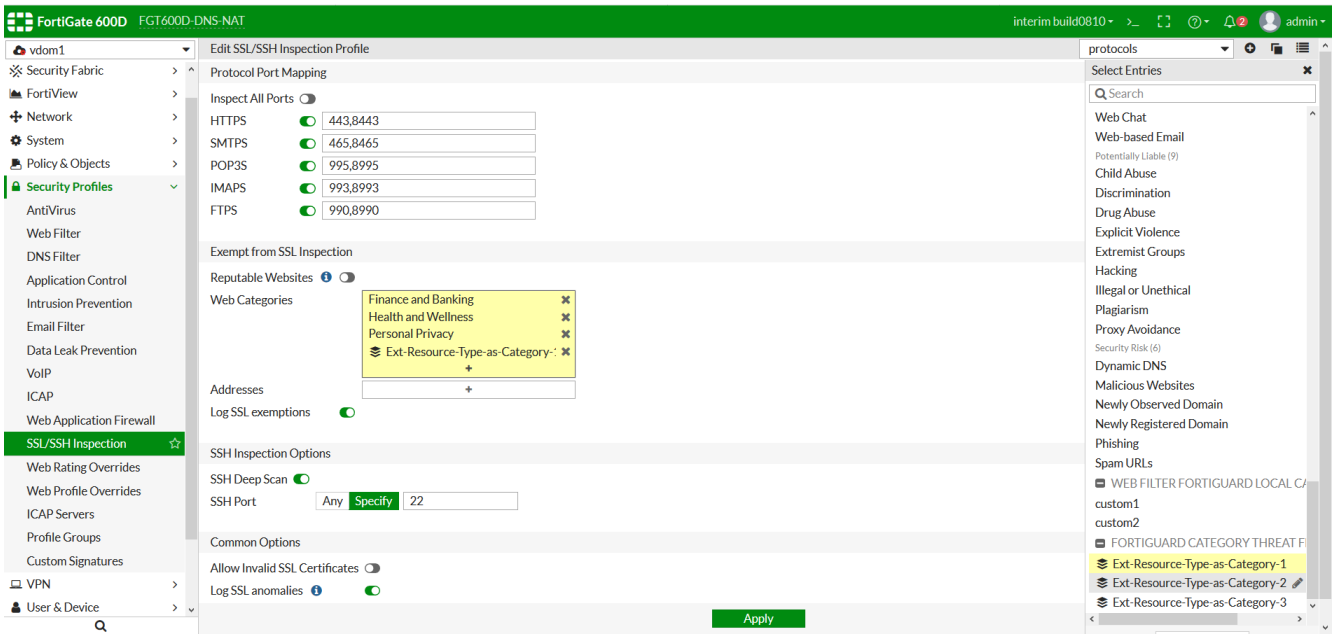

HTTPS request URLs matched in this remote category will be exempted from SSL deep inspection.

Log example:

```
3: date=2019-01-18 time=16:06:21 logid="0345012688" type="utm" subtype="webfilter"
eventtype="ssl-exempt" level="information" vd="vdom1" eventtime=1547856379 policyid=1
sessionid=90080 srcip=10.1.100.18 srcport=39942 srcintf="port10" srcintfrole="undefined"
dstip=216.58.193.67 dstport=443 dstintf="port9" dstintfrole="undefined" proto=6
service="HTTPS" hostname="www.fortinet.com" profile="webfilter" action="passthrough"
reqtype="direct" url="/" sentbyte=517 rcvdbyte=0 direction="outgoing" msg="The SSL session
was exempted." method="domain" cat=192 catdesc="Ext-Resource-Type-as-Category-1"
urlsource="exempt_type_user_cat"
```

Local Category and Remote Category Priority

Web Filter can have both local category and remote category at the same time. There's no duplication check between local category URL override and remote category resource file. For example, a URL like www.example.com may be shown both in remote category entry list and in FortiGate's local category URL override configuration. We recommend avoiding this scenario since FortiGate does not check for duplicates. However, if a URL is duplicated in both local category and remote category, it is rated as local category.

Reliable web filter statistics

FortiOS 6.2 provides command line tools to view the Web Filter statistics report. These command line tools currently fall into either proxy-based or flow-based Web Filter statistics commands.

Proxy-based Web Filter statistics report

- The proxy-based Web Filter statistics command line tools are as follows. These commands are available in both global or per-VDOM command lines.

```
#diagnose wad filter   <----define the interested objects for output
(global) # diagnose wad ?
console-log    Send WAD log messages to the console.
debug          Debug setting.
stats          Show statistics.
filter         Filter for listing sessions or tunnels. <----use filter to filter-out
interested object and output
kxp            SSL KXP diagnostics.
user           User diagnostics.
memory         WAD memory diagnostics.
restore        Restore configuration defaults.
history        Statistics history.
session        Session diagnostics.
tunnel         Tunnel diagnostics.
webcache       Web cache statistics.
worker         Worker diagnostics.
csvc           Cache service diagnostics.

#diagnose wad stat filter list/clear <----list/clear Web Filter/DLP statistics
report
```

- In the example below, there are two VDOMs using proxy-based policies which have Web Filter profiles enabled. The command line can be used to view the proxy-based Web Filter statistics report.

```
(global) # diagnose wad filter ?
list                    Display current filter.
clear                   Erase current filter settings.
src                     Source address range to filter by.
dst                     Destination address range to filter by.
sport                   Source port range to filter by.
dport                   Destination port range to filter by.
vd                      Virtual Domain Name.  <----filter for per-vdom or global
statistics report
explicit-policy         Index of explicit-policy. -1 matches all.
firewall-policy         Index of firewall-policy. -1 matches all.
drop-unknown-session    Enable drop message unknown sessions.
negate                  Negate the specified filter parameter.
protocol                Select protocols to filter by.

FGT_600D-ICAP-NAT (global) # diagnose wad filter vd
<vdom>    Virtual Domain Name.
ALL     all vdoms
root    vdom
vdom1   vdom

FGT_600D-ICAP-NAT (global) # diagnose wad filter vd root  <----filter-out root vdom
statistics
Drop_unknown_session is enabled.

FGT_600D-ICAP-NAT (global) # diagnose wad stats filter list
filtering of vdom root  <----Displayed the WF statistics for root vdom
  dlp          = 0      <----Number of Reuqest that DLP Sensor processed;
```

```
  content-type = 0      <----Number of Reuqest that matching content-type filter;
  urls:
    examined = 6  <----Number of Request that Proxy Web-Filter(all wad daemons)
examined;
    allowed = 3   <----Number of Request that be allowed in the examined requests;
    blocked = 0   <----Number of Request that be blocked in the examined requests;
    logged = 0    <----Number of Request that be logged in the examined requests;
    overridden = 0 <----Number of Request that be overrided to another Web Filter
profile in the examined requests;

FGT_600D-ICAP-NAT (global) # diagnose wad filter vd vdom1  <----filter-out vdom1
statistics

FGT_600D-ICAP-NAT (global) # diagnose wad stats filter list
filtering of vdom vdom1  <----Displayed the WF statistics for vdom1
  dlp          = 0
  content-type = 0
  urls:
    examined = 13
    allowed = 2
    blocked = 9
    logged = 8
    overridden = 0

FGT_600D-ICAP-NAT (global) # diagnose wad filter vd ALL

FGT_600D-ICAP-NAT (global) # diagnose wad stats filter list
filtering of all accessible vdoms  <----global statistics is sum of two VDOMs
  dlp          = 0
  content-type = 0
  urls:
    examined = 19
    allowed = 5
    blocked = 9
    logged = 8
    overridden = 0
```

Flow-based Web Filter statistics report

- The flow-based Web Filter statistics command line tools are as follows. These commands are available in global command lines only.

```
(global) # diagnose test application ipsmonitor

IPS Engine Test Usage:

    1: Display IPS engine information
    2: Toggle IPS engine enable/disable status
    3: Display restart log
    4: Clear restart log
    5: Toggle bypass status
    6: Submit attack characteristics now
   10: IPS queue length
   11: Clear IPS queue length
   12: IPS L7 socket statistics
```

```
   13: IPS session list
   14: IPS NTurbo statistics
   15: IPSA statistics
   18: Display session info cache
   19: Clear session info cache
   21: Reload FSA malicious URL database
   22: Reload whitelist URL database
   24: Display Flow AV statistics
   25: Reset Flow AV statistics
   27: Display Flow urlfilter statistics
   28: Reset Flow urlfilter statistics
   29: Display global Flow urlfilter statistics  <----List the Flow Web Filter
Statistics
   30: Reset global Flow urlfilter statistics    <----Reset the Flow Web Filter
Statistics
   96: Toggle IPS engines watchdog timer
   97: Start all IPS engines
   98: Stop all IPS engines
   99: Restart all IPS engines and monitor
```

- In the example below, there are two VDOMs using flow-based policies which have Web Filter profiles enabled. The command line can be used to view the flow-based Web Filter statistics report.

```
(global) # diagnose test application ipsmonitor 29
Global URLF states:
 request: 14   <----Number of Requests that Flow Web-Filter(all ips engines)
received;
 response: 14  <----Number of Response that Flow Web-Filter(all ips engines) sent;
 pending: 0    <----Number of Requests that under processing at that moment;
 request error: 0     <----Number of Request that have error;
 response timeout: 0  <----Number of response that ips engine not been received in-
time;
 blocked: 12          <----Number of Request that Flow Web-Filter blocked;
 allowed: 2           <----Number of Request that Flow Web-Filter allowed;
```

Flow-based web filtering


Flow-based web filtering includes the following options:

- Authenticate: requires user authentication for specific website categories.
- Warn: displays a warning message for specific website categories, but allows users to continue to the website.
- Override: allows users with valid credentials to override their web filter profile.

To enable *Authenticate* and *Warning* web filters:

1. Go to *Security Profiles* > *Web Filter*.
2. Edit an existing profile, or create a new one.
3. In the *FortiGuard category based filter* section, right-click on a category.
4. Select the *Authenticate* or *Warning* web filter.
5. Configure other settings as needed.


6. Click *Apply*.

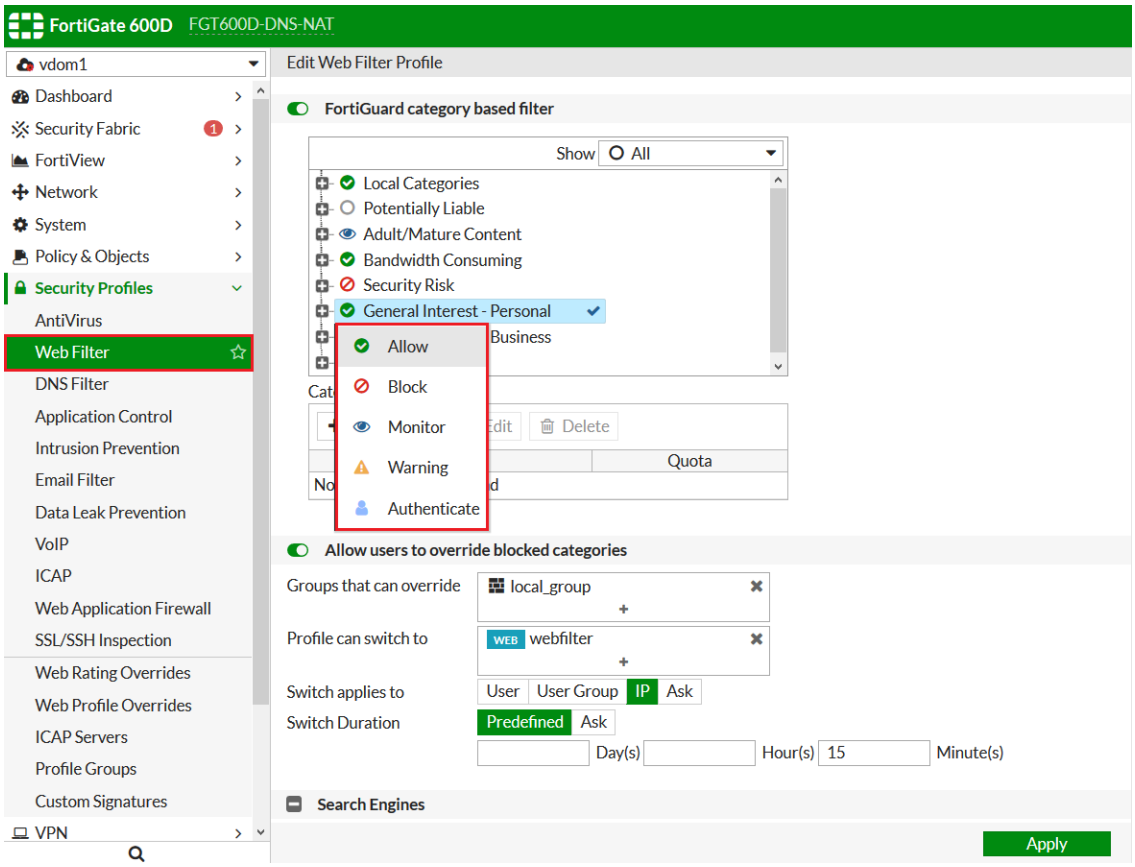

To allow users to override blocked categories:

1. Go to *Security Profiles* > *Web Filter*.
2. Edit an existing profile, or create a new one.
3. Enable *Allow users to override blocked categories*.
4. Enter information in the following fields:
   - *Groups that can override*
   - *Profile can switch to*
   - *Switch applies to*
   - *Switch Duration*
5. Configure other settings as needed.

6. Click *Apply*.

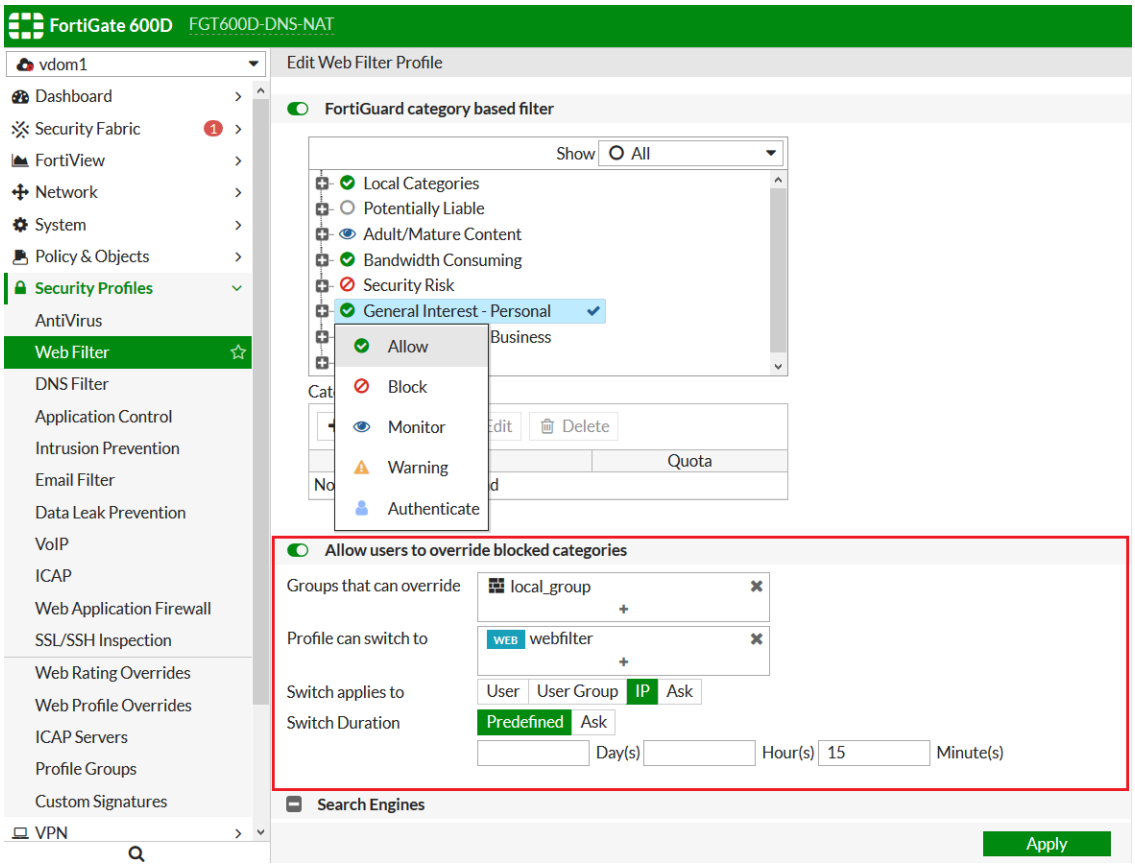

URL certificate blocklist

As increasing numbers of malware have started to use SSL to attempt to bypass IPS, maintaining a fingerprint-based certificate blocklist is useful to block botnet communication that relies on SSL.

This feature adds a dynamic package that is distributed by FortiGuard and is part of the Web Filtering service. It is enabled by default for SSL/SSH profiles, and can be configured using the following CLI commands (highlighted in bold):

```
config vdom
    edit <vdom>
        config firewall ssl-ssh-profile
            edit "certificate-inspection"
                set comment "Read-only SSL handshake inspection profile."
                config ssl
                    set inspect-all disable
                end
                config https
                    set ports 443
                    set status certificate-inspection
                    set invalid-server-cert block
                    set untrusted-server-cert allow
                    set sni-server-cert-check enable
                end
                config ftps
```

```
            set status disable
            set invalid-server-cert block
            set untrusted-server-cert allow
        end
        config imaps
            set status disable
            set invalid-server-cert block
            set untrusted-server-cert allow
        end
        config pop3s
            set status disable
            set invalid-server-cert block
            set untrusted-server-cert allow
        end
        config smtps
            set status disable
            set invalid-server-cert block
            set untrusted-server-cert allow
        end
        config ssh
            set ports 22
            set status disable
            set inspect-all disable
            set unsupported-version bypass
            set ssh-tun-policy-check disable
            set ssh-algorithm compatible
        end
        set block-blacklisted-certificates enable
        set caname "Fortinet_CA_SSL"
        set ssl-anomalies-log enable
    next
    edit "deep-inspection"
        set comment "Read-only deep inspection profile."
        config ssl
            set inspect-all disable
        end
        config https
            set ports 443
            set status deep-inspection
            set client-cert-request bypass
            set unsupported-ssl bypass
            set invalid-server-cert block
            set untrusted-server-cert allow
            set sni-server-cert-check enable
        end
        config ftps
            set ports 990
            set status deep-inspection
            set client-cert-request bypass
            set unsupported-ssl bypass
            set invalid-server-cert block
            set untrusted-server-cert allow
        end
        config imaps
            set ports 993
            set status deep-inspection
```

```
        set client-cert-request inspect
        set unsupported-ssl bypass
        set invalid-server-cert block
        set untrusted-server-cert allow
    end
    config pop3s
        set ports 995
        set status deep-inspection
        set client-cert-request inspect
        set unsupported-ssl bypass
        set invalid-server-cert block
        set untrusted-server-cert allow
    end
    config smtps
        set ports 465
        set status deep-inspection
        set client-cert-request inspect
        set unsupported-ssl bypass
        set invalid-server-cert block
        set untrusted-server-cert allow
    end
    config ssh
        set ports 22
        set status disable
        set inspect-all disable
        set unsupported-version bypass
        set ssh-tun-policy-check disable
        set ssh-algorithm compatible
    end
    set whitelist disable
    set block-blacklisted-certificates enable
    config ssl-exempt
        edit 1
            set type fortiguard-category
            set fortiguard-category 31
        next
        edit 2
            set type fortiguard-category
            set fortiguard-category 33
        next
        edit 3
            set type wildcard-fqdn
            set wildcard-fqdn "g-adobe"
        next
        edit 4
            set type wildcard-fqdn
            set wildcard-fqdn "g-Adobe Login"
        next
        edit 5
            set type wildcard-fqdn
            set wildcard-fqdn "g-android"
        next
        edit 6
            set type wildcard-fqdn
            set wildcard-fqdn "g-apple"
        next
```

```
edit 7
    set type wildcard-fqdn
    set wildcard-fqdn "g-appstore"
next
edit 8
    set type wildcard-fqdn
    set wildcard-fqdn "g-auth.gfx.ms"
next
edit 9
    set type wildcard-fqdn
    set wildcard-fqdn "g-citrix"
next
edit 10
    set type wildcard-fqdn
    set wildcard-fqdn "g-dropbox.com"
next
edit 11
    set type wildcard-fqdn
    set wildcard-fqdn "g-eease"
next
edit 12
    set type wildcard-fqdn
    set wildcard-fqdn "g-firefox update server"
next
edit 13
    set type wildcard-fqdn
    set wildcard-fqdn "g-fortinet"
next
edit 14
    set type wildcard-fqdn
    set wildcard-fqdn "g-googleapis.com"
next
edit 15
    set type wildcard-fqdn
    set wildcard-fqdn "g-google-drive"
next
edit 16
    set type wildcard-fqdn
    set wildcard-fqdn "g-google-play2"
next
edit 17
    set type wildcard-fqdn
    set wildcard-fqdn "g-google-play3"
next
edit 18
    set type wildcard-fqdn
    set wildcard-fqdn "g-Gotomeeting"
next
edit 19
    set type wildcard-fqdn
    set wildcard-fqdn "g-icloud"
next
edit 20
    set type wildcard-fqdn
    set wildcard-fqdn "g-itunes"
next
```

```
                    edit 21
                        set type wildcard-fqdn
                        set wildcard-fqdn "g-microsoft"
                    next
                    edit 22
                        set type wildcard-fqdn
                        set wildcard-fqdn "g-skype"
                    next
                    edit 23
                        set type wildcard-fqdn
                        set wildcard-fqdn "g-softwareupdate.vmware.com"
                    next
                    edit 24
                        set type wildcard-fqdn
                        set wildcard-fqdn "g-verisign"
                    next
                    edit 25
                        set type wildcard-fqdn
                        set wildcard-fqdn "g-Windows update 2"
                    next
                    edit 26
                        set type wildcard-fqdn
                        set wildcard-fqdn "g-live.com"
                    next
                    edit 27
                        set type wildcard-fqdn
                        set wildcard-fqdn "g-google-play"
                    next
                    edit 28
                        set type wildcard-fqdn
                        set wildcard-fqdn "g-update.microsoft.com"
                    next
                    edit 29
                        set type wildcard-fqdn
                        set wildcard-fqdn "g-swscan.apple.com"
                    next
                    edit 30
                        set type wildcard-fqdn
                        set wildcard-fqdn "g-autoupdate.opera.com"
                    next
                end
                set server-cert-mode re-sign
                set caname "Fortinet_CA_SSL"
                set untrusted-caname "Fortinet_CA_Untrusted"
                set ssl-anomalies-log enable
                set ssl-exemptions-log disable
                set rpc-over-https disable
                set mapi-over-https disable
                set use-ssl-server disable
            next
        end
    next
end
```


DNS filter

You can apply DNS category filtering to control user access to web resources. You can customize the default profile, or create your own to manage network user access and apply it to a firewall policy, or you can add it to a DNS server on a FortiGate interface.

DNS filtering has the following features:

- FortiGuard Filtering: filters the DNS request based on the FortiGuard domain rating.
- Botnet C&C domain blocking: blocks the DNS request for the known botnet C&C domains.
- External dynamic category domain filtering: allows you to define your own domain category.
- DNS safe search: enforces Google, Bing, and YouTube safe addresses for parental controls.
- Local domain filter: allows you to define your own domain list to block or allow.
- External IP block list: allows you to define an IP block list to block resolved IPs that match this list.
- DNS translation: maps the resolved result to another IP that you define.

The following sample topology is used in the topics of this section. It includes an internal network and a FortiGate that is used as a gateway device that all DNS traffic traverses.

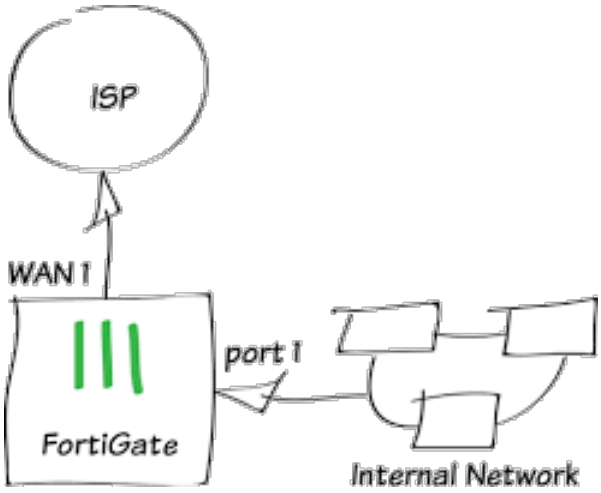

Some features of this functionality require a subscription to FortiGuard Web Filtering.


The following topics provide information about DNS filters:

- How to configure and apply a DNS filter profile on page 959
- FortiGuard category-based DNS domain filtering on page 961
- Botnet C&C domain blocking on page 965
- DNS safe search on page 968
- Local domain filter on page 970
- DNS translation on page 973
- Using a FortiGate as a DNS server on page 976
- Troubleshooting for DNS filter on page 977

How to configure and apply a DNS filter profile

To create or configure DNS Filter profile in the GUI:

1. Go to *Security Profiles* > *DNS Filter*.
2. You can modify the default DNS Filter and enable the options you want or you can click + at the top right to create a new DNS Filter.

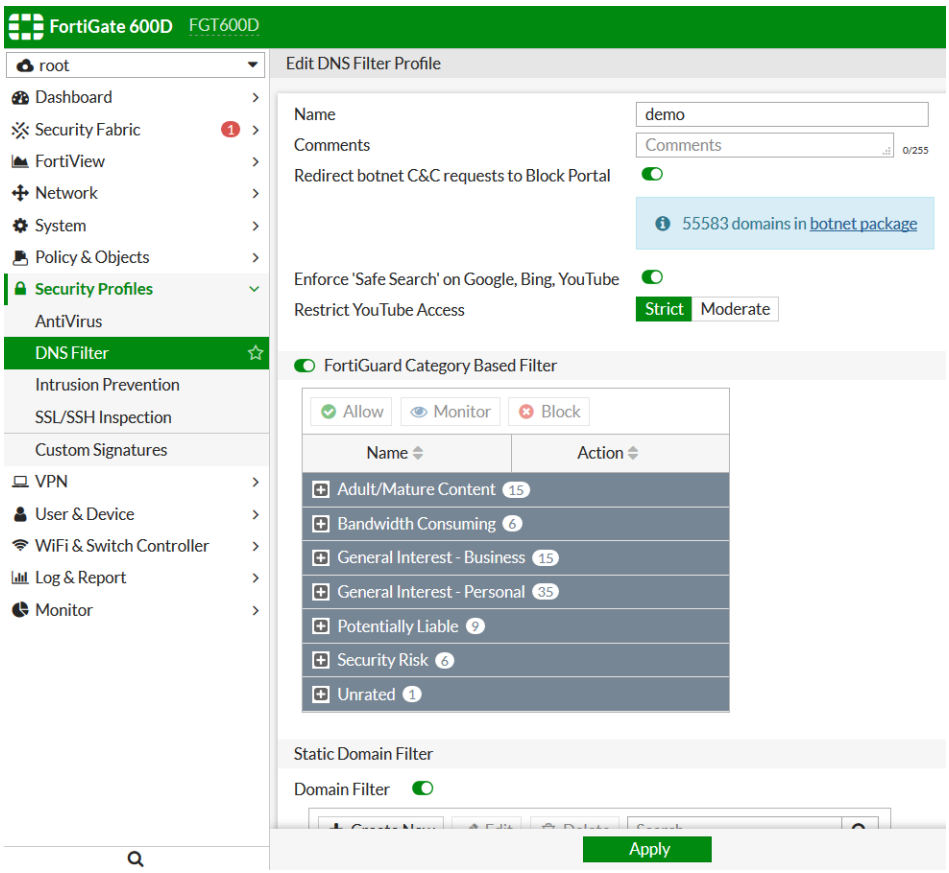

To create or configure DNS Filter profile in the CLI:


```
config dnsfilter profile
    edit "demo"
        set comment ''
        config domain-filter
            unset domain-filter-table
        end
        config ftgd-dns
            set options error-allow
            config filters
                edit 2
                    set category 2
                    set action monitor
                next
                edit 7
                    set category 7
                    set action block
```

```
                next
                ...
                edit 22
                    set category 0
                    set action monitor
                next
            end
        end
        set log-all-domain enable
        set sdns-ftgd-err-log enable
        set sdns-domain-log enable
        set block-action redirect
        set block-botnet enable
        set safe-search enable
        set redirect-portal 93.184.216.34
        set redirect-portal6 ::
        set youtube-restrict strict
    next
end
```

After you have created the DNS Filter profile, you can apply it to the policy. DNS filters also support IPv6 policies.

To apply DNS Filter profile to the policy in the GUI:

1. Go to *Policy & Objects IPv4 Policy* or *IPv6 Policy*.
2. In the *Security Profiles* section, enable *DNS Filter* and select the DNS filter.

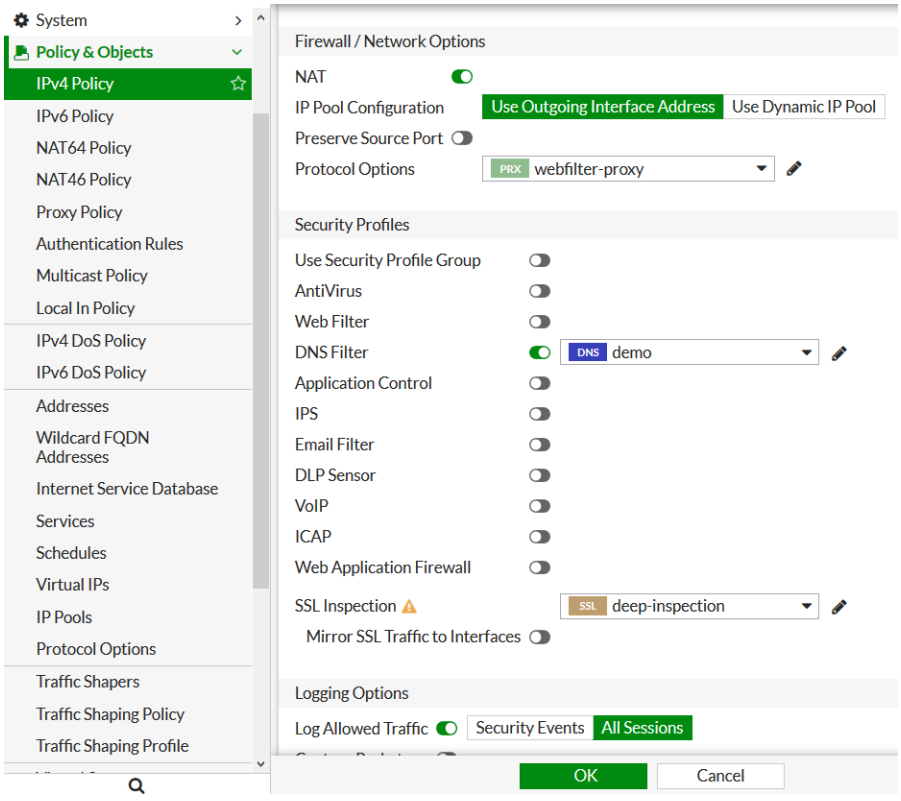

To apply DNS Filter profile to the policy in the CLI:

```
config firewall policy
    edit 1
        set name "Demo"
        set srcintf "port10"
        set dstintf "port9"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set inspection-mode proxy
        set logtraffic all
        set fsso disable
        set dnsfilter-profile "demo"  <<<====
        set profile-protocol-options "default"
        set ssl-ssh-profile "deep-inspection"
        set nat enable
    next
end
```

FortiGuard category-based DNS domain filtering




The FortiGate must have a FortiGuard Web Filter license to use FortiGuard Category Based Filter.

You can use the FortiGuard category-based DNS Domain Filter to inspect DNS traffic. This makes use of FortiGuard's continually updated domain rating database for more reliable protection.


To configure FortiGuard category-based DNS Domain Filter by GUI:

1. Go to *Security Profiles* > *DNS Filter* and edit or create a DNS Filter.
2. Enable *FortiGuard Category Based Filter*.

3. Select the category and then select *Allow*, *Monitor*, or *Block* for that category.

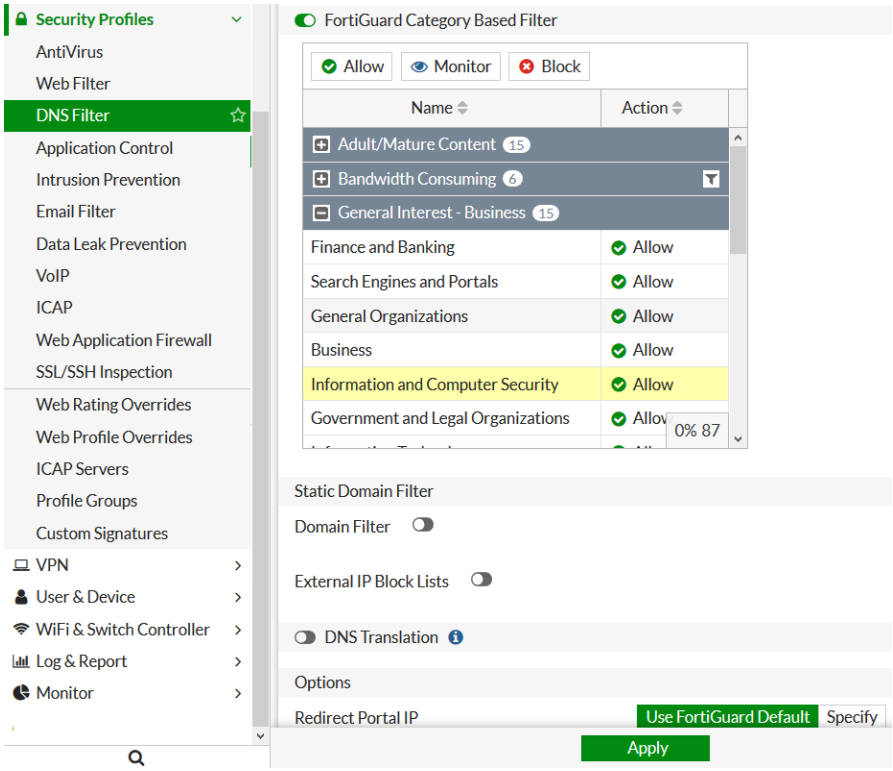

4. If you select *Block*, there are two options:
   - *Redirect Portal IP*. If the DNS query domain will be blocked, FortiGate will use portal IP to replace the resolved IP in DNS response packet. You can use the default portal IP 208.91.112.55 or click *Specify* to enter another portal IP.
   - *Block*. Blocked DNS query has no response return and the DNS query client will time out.

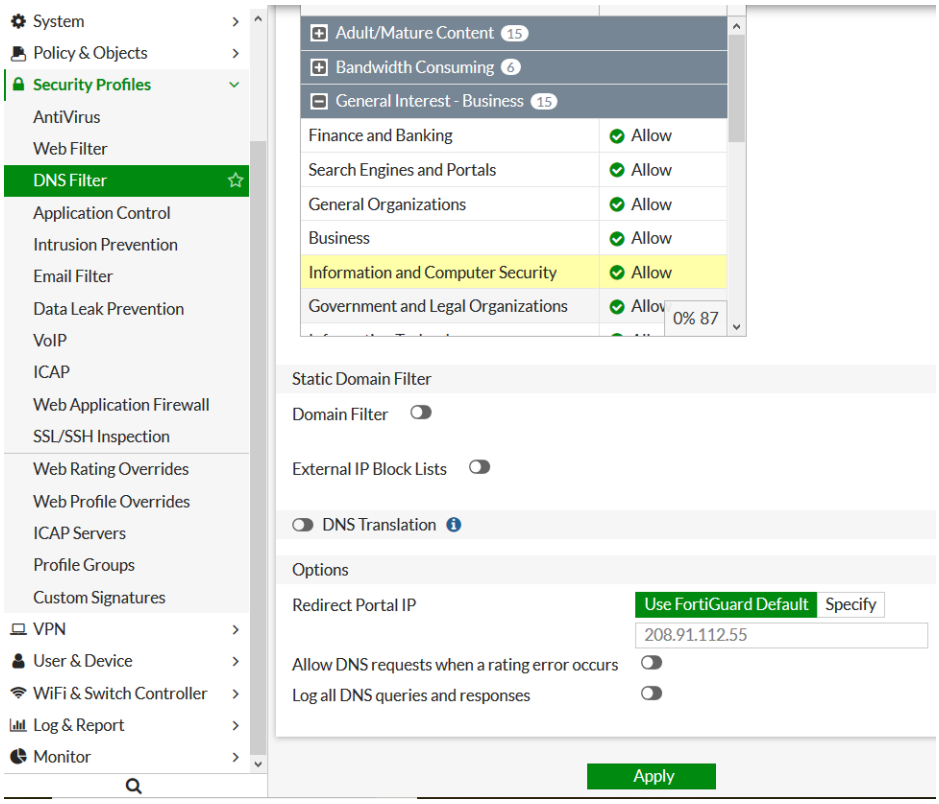

To configure FortiGuard category-based DNS Domain Filter by CLI:

```
config dnsfilter profile
   edit "demo"
      set comment ''
      config domain-filter
         unset domain-filter-table
      end
      config ftgd-dns
         set options error-allow
         config filters  <<<==== FortiGuard Category Based Filter
             edit 2
                 set category 2
                 set action monitor
             next
             edit 7
                 set category 7
                 set action monitor
             next
            ...
             edit 22
                 set category 0
                 set action monitor
             next
         end
      end
      set log-all-domain enable
      set sdns-ftgd-err-log enable
```

```
      set sdns-domain-log enable
      set block-action redirect/block  <<<==== You can specify Block or Redirect
      set block-botnet enable
      set safe-search enable
      set redirect-portal 93.184.216.34  <<<==== Specify Redirect portal-IP.
      set redirect-portal6 ::
      set youtube-restrict strict
   next
end
```

Sample

To see an example of how this works, from your internal network PC, use a command line tool such as dig or nslookup to do DNS query for some domains, for example:

```
#dig www.example.com
;; ->>HEADER<<- opcode: QUERY; status: NOERROR; id: 61252
;; Flags: qr rd ra; QUERY: 1; ANSWER: 1; AUTHORITY: 13; ADDITIONAL: 11

;; QUESTION SECTION:
;; www.example.com.             IN      A

;; ANSWER SECTION:
www.example.com.        17164   IN      A       93.184.216.34


;; AUTHORITY SECTION:
com.                    20027   IN      NS      h.gtld-servers.net.
com.                    20027   IN      NS      i.gtld-servers.net.
com.                    20027   IN      NS      f.gtld-servers.net.
com.                    20027   IN      NS      d.gtld-servers.net.
com.                    20027   IN      NS      j.gtld-servers.net.
com.                    20027   IN      NS      l.gtld-servers.net.
com.                    20027   IN      NS      e.gtld-servers.net.
com.                    20027   IN      NS      a.gtld-servers.net.
com.                    20027   IN      NS      k.gtld-servers.net.
com.                    20027   IN      NS      g.gtld-servers.net.
com.                    20027   IN      NS      m.gtld-servers.net.
com.                    20027   IN      NS      c.gtld-servers.net.
com.                    20027   IN      NS      b.gtld-servers.net.

;; ADDITIONAL SECTION:
a.gtld-servers.net.     21999   IN      A       192.5.6.30
a.gtld-servers.net.     21999   IN      AAAA    2001:503:a83e::2:30
b.gtld-servers.net.     21997   IN      A       192.33.14.30
b.gtld-servers.net.     21997   IN      AAAA    2001:503:231d::2:30
c.gtld-servers.net.     21987   IN      A       192.26.92.30
c.gtld-servers.net.     20929   IN      AAAA    2001:503:83eb::30
d.gtld-servers.net.     3340    IN      A       192.31.80.30
d.gtld-servers.net.     3340    IN      AAAA    2001:500:856e::30
e.gtld-servers.net.     19334   IN      A       192.12.94.30
e.gtld-servers.net.     19334   IN      AAAA    2001:502:1ca1::30
f.gtld-servers.net.     3340    IN      A       192.35.51.30

;; Received 509 B
;; Time 2019-04-05 09:39:33 PDT
;; From 172.16.95.16@53(UDP) in 3.8 ms
```

To check the DNS Filter log in the GUI:

1. Go to *Log & Report* > *DNS Query* to view the DNS traffic that just traverse the FortiGate and the FortiGuard rating for this domain name.

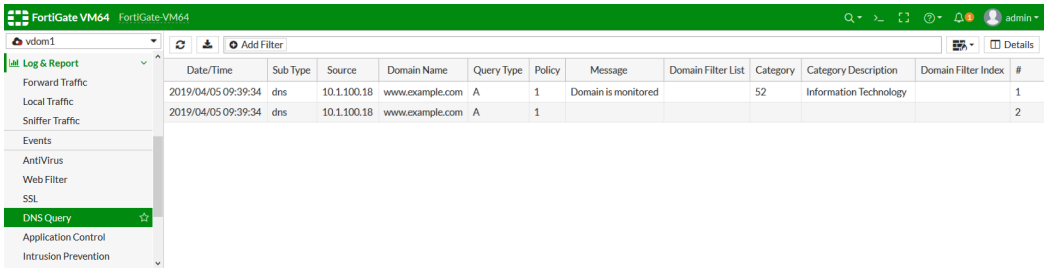

To check the DNS log in the CLI:

```
#execute log filter category utm-dns

# execute log display
2 logs found.
2 logs returned.

1: date=2019-04-05 time=09:39:34 logid="1501054802" type="utm" subtype="dns" eventtype="dns-
response" level="notice" vd="vdom1" eventtime=1554482373 policyid=1 sessionid=50868
srcip=10.1.100.18 srcport=34308 srcintf="port10" srcintfrole="undefined" dstip=172.16.95.16
dstport=53 dstintf="port9" dstintfrole="undefined" proto=17 profile="demo" xid=17647
qname="www.example.com" qtype="A" qtypeval=1 qclass="IN" ipaddr="93.184.216.34" msg="Domain
is monitored" action="pass" cat=52 catdesc="Information Technology"


2: date=2019-04-05 time=09:39:34 logid="1500054000" type="utm" subtype="dns" eventtype="dns-
query" level="information" vd="vdom1" eventtime=1554482373 policyid=1 sessionid=50868
srcip=10.1.100.18 srcport=34308 srcintf="port10" srcintfrole="undefined" dstip=172.16.95.16
dstport=53 dstintf="port9" dstintfrole="undefined" proto=17 profile="demo" xid=17647
qname="www.example.com" qtype="A" qtypeval=1 qclass="IN"
```

Botnet C&C domain blocking


FortiGuard Service continually updates the Botnet C&C domain list (Domain DB). The botnet C&C domain blocking feature can block the botnet website access at the DNS name resolving stage. This provides additional protection for your network.

To configure botnet C&C domain blocking in the GUI:

1. Go to *Security Profiles* > *DNS Filter* and edit or create a DNS Filter.
2. Enable *Redirect botnet C&C requests to Block Portal*.

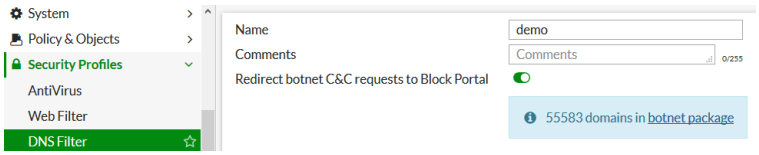

3. Click the *botnet package* link to see the latest botnet C&C domain list.

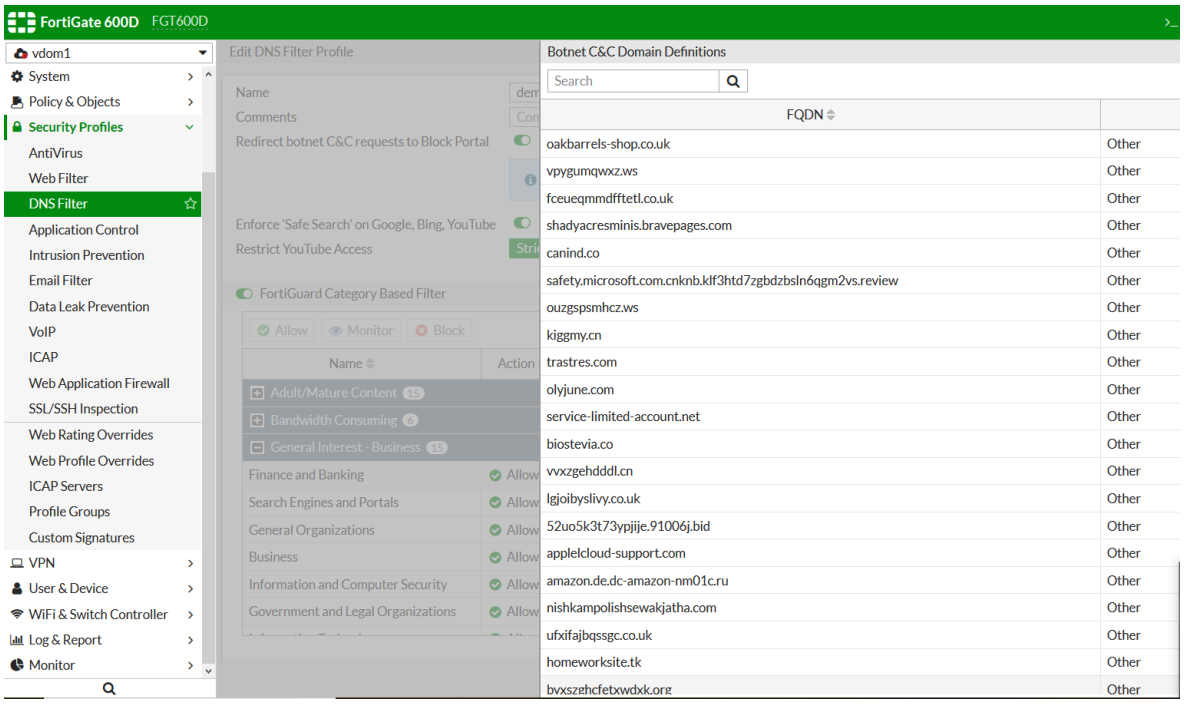

Sample

To see an example of how this works, select a botnet domain from that list. Then from your internal network PC, use a command line tool such as dig or nslookup to send a DNS query to traverse the FortiGate to see the query blocked as a botnet domain. For example:

```
#dig canind.co
;; ->>HEADER<<- opcode: QUERY; status: NOERROR; id: 997
;; Flags: qr rd; QUERY: 1; ANSWER: 1; AUTHORITY: 0; ADDITIONAL: 0


;; QUESTION SECTION:
;; canind.co.                   IN      A

;; ANSWER SECTION:
canind.co.              60      IN      A       208.91.112.55  <<<==== botnet domain query
blocked, redirect with portal-IP.

;; Received 43 B
;; Time 2019-04-05 09:55:21 PDT
;; From 172.16.95.16@53(UDP) in 0.3 ms
```

To check the DNS Filter log in the GUI:

1. Go to *Log & Report* > *DNS Query* to view the DNS query blocked as a botnet domain.



To check the DNS Filter log in the CLI:

```
(vdom1) # execute log filter category utm-dns

(vdom1) # execute log display
2 logs found.
2 logs returned.

1: date=2019-04-04 time=16:43:59 logid="1501054601" type="utm" subtype="dns" eventtype="dns-
response" level="warning" vd="vdom1" eventtime=1554421439 policyid=1 sessionid=14135
srcip=10.1.100.18 srcport=57447 srcintf="port10" srcintfrole="undefined" dstip=172.16.95.16
dstport=53 dstintf="port9" dstintfrole="undefined" proto=17 profile="demo" xid=24339
qname="canind.co" qtype="A" qtypeval=1 qclass="IN" msg="Domain was blocked by dns botnet
C&C" action="redirect" botnetdomain="canind.co"

2: date=2019-04-04 time=16:43:59 logid="1500054000" type="utm" subtype="dns" eventtype="dns-
query" level="information" vd="vdom1" eventtime=1554421439 policyid=1 sessionid=14135
srcip=10.1.100.18 srcport=57447 srcintf="port10" srcintfrole="undefined" dstip=172.16.95.16
dstport=53 dstintf="port9" dstintfrole="undefined" proto=17 profile="demo" xid=24339
qname="canind.co" qtype="A" qtypeval=1 qclass="IN"
```

Botnet C&C IPDB blocking

FortiGate also maintains a botnet C&C IP address database (botnet IPDB). If a DNS query response IP address (resolved IP address) matches an entry inside the botnet IPDB, this DNS query is also blocked by DNS Filter botnet C&C blocking.

To view the botnet IPDB list in the CLI:

```
(global) # diagnose sys botnet list 9000 10
9000. proto=TCP ip=103.228.28.166, port=80, rule_id=7630075, name_id=3, hits=0
9001. proto=TCP ip=5.9.32.166, port=481, rule_id=4146631, name_id=7, hits=0
9002. proto=TCP ip=91.89.44.166, port=80, rule_id=48, name_id=96, hits=0
9003. proto=TCP ip=46.211.46.166, port=80, rule_id=48, name_id=96, hits=0
9004. proto=TCP ip=77.52.52.166, port=80, rule_id=48, name_id=96, hits=0
9005. proto=TCP ip=98.25.53.166, port=80, rule_id=48, name_id=96, hits=0
9006. proto=TCP ip=70.120.67.166, port=80, rule_id=48, name_id=96, hits=0
9007. proto=TCP ip=85.253.77.166, port=80, rule_id=48, name_id=96, hits=0
9008. proto=TCP ip=193.106.81.166, port=80, rule_id=48, name_id=96, hits=0
9009. proto=TCP ip=58.13.84.166, port=80, rule_id=48, name_id=96, hits=0
```

To see an example of how DNS Filter botnet C&C IPDB blocking works, select an IP address from the IPDB list and use Internet reverse lookup service to find its corresponding domain name. Then from your internal network PC, use a command line tool such as dig or nslookup to query this domain and see that it's blocked by DNS Filter botnet C&C blocking. For example:

```
# dig cpe-98-25-53-166.sc.res.rr.com
;; ->>HEADER<<- opcode: QUERY; status: NOERROR; id: 35135
;; Flags: qr rd; QUERY: 1; ANSWER: 1; AUTHORITY: 0; ADDITIONAL: 0

;; QUESTION SECTION:
;; cpe-98-25-53-166.sc.res.rr.com.              IN      A

;; ANSWER SECTION:
cpe-98-25-53-166.sc.res.rr.com. 60      IN      A       208.91.112.55  <<<====  Since
```

```
resolved IP address match the botnet IPDB, dns query blocked with redirect portal IP.

;; Received 64 B
;; Time 2019-04-05 11:06:47 PDT
;; From 172.16.95.16@53(UDP) in 0.6 ms
```

To check the DNS Filter log in the GUI:

1. Go to *Log & Report* > *DNS Query* to view the DNS query blocked by botnet C&C IPDB blocking.

Date/Time	Sub Type	Source	Domain Name	Query Type	Policy	Message	Domain Filter List	Category	Category Description
2019/04/05 11:06:48	dns	10.1.100.18	cpe-98-25-53-166.sc.res.rr.com	A	1	Domain was blocked by dns botnet C&C			
2019/04/05 11:06:48	dns	10.1.100.18	cpe-98-25-53-166.sc.res.rr.com	A	1				


To check the DNS Filter log in the CLI:

```
1: date=2019-04-05 time=11:06:48 logid="1501054600" type="utm" subtype="dns" eventtype="dns-
response" level="warning" vd="vdom1" eventtime=1554487606 policyid=1 sessionid=55232
srcip=10.1.100.18 srcport=60510 srcintf="port10" srcintfrole="undefined" dstip=172.16.95.16
dstport=53 dstintf="port9" dstintfrole="undefined" proto=17 profile="demo" xid=16265
qname="cpe-98-25-53-166.sc.res.rr.com" qtype="A" qtypeval=1 qclass="IN"
ipaddr="93.184.216.34" msg="Domain was blocked by dns botnet C&C" action="redirect"
botnetip=98.25.53.166

2: date=2019-04-05 time=11:06:48 logid="1500054000" type="utm" subtype="dns" eventtype="dns-
query" level="information" vd="vdom1" eventtime=1554487606 policyid=1 sessionid=55232
srcip=10.1.100.18 srcport=60510 srcintf="port10" srcintfrole="undefined" dstip=172.16.95.16
dstport=53 dstintf="port9" dstintfrole="undefined" proto=17 profile="demo" xid=16265
qname="cpe-98-25-53-166.sc.res.rr.com" qtype="A" qtypeval=1 qclass="IN"
```

To check botnet activity:

1. Go to *Dashboard* > *Status* and see the *Botnet Activity* widget.
   If you cannot find the *Botnet Activity* widget, click the *Settings* button at the bottom right, select *Add Widget*, and add the *Botnet Activity* widget.

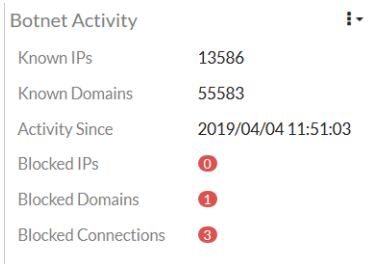


DNS safe search

Enable DNS Filter safe search so that FortiGate responds with the search engine's children and school safe domain or IP address. Users might not be aware of this filter. Explicit contents are filtered by the search engine itself. This feature isn't 100% accurate but it can help you avoid explicit and inappropriate search results.

This feature currently supports Google, Bing, and YouTube.

To configure DNS Filter Safe Search on GUI:

1. Go to *Security Profiles* > *DNS Filter* and edit or create a DNS Filter.
2. Enable *Enforce 'Safe search' on Google, Bing, YouTube*.
3. For *Restrict YouTube Access*, select *Strict* or *Moderate*.

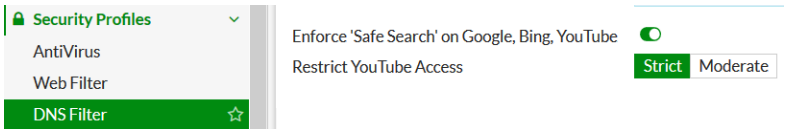

To configure DNS Filter Safe Search on CLI:

```
config dnsfilter profile
    edit "demo"
        config ftgd-dns
            set options error-allow
            config filters
                edit 2
                    set category 2
                next
               ...
            end
        end
        set log-all-domain enable
        set block-botnet enable
        set safe-search enable  <<<==== DNS Filter Safe Search option
    next
end
```

Sample

To see an example of how this works, enable this option. Then from your internal network PC, use a command line tool such as dig or nslookup to do a DNS query on www.bing.com. For example:

```
# dig www.bing.com
;; ->>HEADER<<- opcode: QUERY; status: NOERROR; id: 46568
;; Flags: qr rd ra; QUERY: 1; ANSWER: 2; AUTHORITY: 0; ADDITIONAL: 0

;; QUESTION SECTION:
;; www.bing.com.                IN      A

;; ANSWER SECTION:
www.bing.com.           103     IN      CNAME   strict.bing.com.  <<<====
strict.bing.com.        103     IN      A       204.79.197.220

;; Received 67 B
;; Time 2019-04-05 14:34:52 PDT
;; From 172.16.95.16@53(UDP) in 196.0 ms
```

The DNS query for www.bing.com returns with a CNAME strict.bing.com, and A record for the CNAME. The user's web browser then connects to this address with the same search engine UI but any explicit content search is filtered out. Check the DNS Filter log for the message *DNS Safe Search enforced*.

Date/Time	Sub Type	Source	Domain Name	Query Type	Policy	Message	Domain Filter List	Category	Category Description
2019/04/05 14:34:53	dns	10.1.100.18	www.bing.com	A	1	DNS Safe Search enforced		41	Search Engines and Portals
2019/04/05 14:34:53	dns	10.1.100.18	www.bing.com	A	1				

To check the DNS Filter Safe Search log in the CLI:

```
1: date=2019-04-05 time=14:34:53 logid="1501054804" type="utm" subtype="dns" eventtype="dns-
response" level="notice" vd="vdom1" eventtime=1554500093 policyid=1 sessionid=65955
srcip=10.1.100.18 srcport=36575 srcintf="port10" srcintfrole="undefined" dstip=172.16.95.16
dstport=53 dstintf="port9" dstintfrole="undefined" proto=17 profile="demo" xid=59573
qname="www.bing.com" qtype="A" qtypeval=1 qclass="IN" ipaddr="204.79.197.220" msg="DNS Safe
Search enforced" action="pass" sscname="strict.bing.com" cat=41 catdesc="Search Engines and
Portals"

2: date=2019-04-05 time=14:34:53 logid="1500054000" type="utm" subtype="dns" eventtype="dns-
query" level="information" vd="vdom1" eventtime=1554500092 policyid=1 sessionid=65955
srcip=10.1.100.18 srcport=36575 srcintf="port10" srcintfrole="undefined" dstip=172.16.95.16
dstport=53 dstintf="port9" dstintfrole="undefined" proto=17 profile="demo" xid=59573
qname="www.bing.com" qtype="A" qtypeval=1 qclass="IN"
```

Additional information

For each search engine's safe search specifications, see its specification page:


- https://help.bing.microsoft.com/#apex/18/en-US/10003/0
- https://support.google.com/websearch/answer/510?co=GENIE.Platform%3DDesktop&hl=en
- https://support.google.com/youtube/answer/174084?co=GENIE.Platform%3DDesktop&hl=en

Local domain filter

In addition to FortiGuard's category-based domain filter, you can also can define your own local static domain filter to allow or block specific domains.

To configure DNS local domain filter on GUI:

1. Go to *Security Profiles* > *DNS Filter* and edit or create a DNS Filter.
2. In the *Static Domain Filter* section, enable *Domain Filter*.
3. Click *Create New* to create your local domain filter entries.

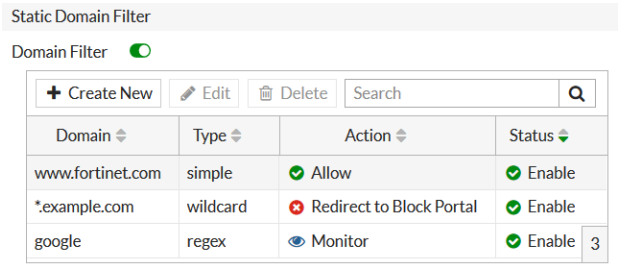

To configure DNS local domain filter on CLI:

```
config dnsfilter domain-filter
    edit 1
        set name "demo"
        set comment ''
        config entries
            edit 1
```

```
            set domain "www.fortinet.com"
            set type simple
            set action allow
            set status enable
        next
        edit 2
            set domain "*.example.com"
            set type wildcard
            set action block
            set status enable
        next
        edit 3
            set domain "google"
            set type regex
            set action monitor
            set status enable
        next
    end
next
end
```



Wildcard entries are converted to regular expressions by FortiOS. As a result of this conversion, wildcards will match any suffix, as long as there is a word boundary following the search term.

For example:

```
config entries
    edit 1
        set domain "*.host"
        set type wildcard
    next
end
```

will match `wp36.host` and `wp36.host.pressdns.com`, but not `wp36.host123.pressdnds.com`.

To avoid this, use an explicit regular expression search string:

```
config entries
    edit 1
        set domain "^.*\\.host$"
        set type regexp
    next
end
```

To check the DNS local domain filter log in the GUI:

1. Go to *Log & Report* > *DNS Query* to view the DNS query log.

Date/Time	Sub Type	Source	Domain Name	Query Type	Policy	Message	Domain Filter List	Category	Category Description
2019/04/05 15:37:06	dns	10.1.100.18	www.google.com	A	1	Domain belongs to a denied category in policy		41	Search Engines and Port
2019/04/05 15:37:06	dns	10.1.100.18	www.google.com	A	1				
2019/04/05 15:36:59	dns	10.1.100.18	www.example.com	A	1	Domain was blocked because it is in the domain-filter list	demo		
2019/04/05 15:36:59	dns	10.1.100.18	www.example.com	A	1				
2019/04/05 15:36:51	dns	10.1.100.18	www.fortinet.com	A	1	Domain was allowed because it is in the domain-filter list	demo		
2019/04/05 15:36:51	dns	10.1.100.18	www.fortinet.com	A	1				

Since the local domain list "google" action is Monitor, it's blocked by FortiGuard category-based domain filter.

To check the DNS local domain filter log in the CLI:

```
7: date=2019-04-05 time=15:37:06 logid="1501054803" type="utm" subtype="dns" eventtype="dns-
response" level="warning" vd="vdom1" eventtime=1554503826 policyid=1 sessionid=69132
srcip=10.1.100.18 srcport=49832 srcintf="port10" srcintfrole="undefined" dstip=172.16.95.16
dstport=53 dstintf="port9" dstintfrole="undefined" proto=17 profile="demo" xid=4612
qname="www.google.com" qtype="A" qtypeval=1 qclass="IN" ipaddr="208.91.112.55" msg="Domain
belongs to a denied category in policy" action="redirect" cat=41 catdesc="Search Engines and
Portals"

8: date=2019-04-05 time=15:37:06 logid="1500054000" type="utm" subtype="dns" eventtype="dns-
query" level="information" vd="vdom1" eventtime=1554503826 policyid=1 sessionid=69132
srcip=10.1.100.18 srcport=49832 srcintf="port10" srcintfrole="undefined" dstip=172.16.95.16
dstport=53 dstintf="port9" dstintfrole="undefined" proto=17 profile="demo" xid=4612
qname="www.google.com" qtype="A" qtypeval=1 qclass="IN"

9: date=2019-04-05 time=15:36:59 logid="1501054400" type="utm" subtype="dns" eventtype="dns-
response" level="warning" vd="vdom1" eventtime=1554503818 policyid=1 sessionid=69121
srcip=10.1.100.18 srcport=40659 srcintf="port10" srcintfrole="undefined" dstip=172.16.95.16
dstport=53 dstintf="port9" dstintfrole="undefined" proto=17 profile="demo" xid=24730
qname="www.example.com" qtype="A" qtypeval=1 qclass="IN" msg="Domain was blocked because it
is in the domain-filter list" action="redirect" domainfilteridx=1 domainfilterlist="demo"

10: date=2019-04-05 time=15:36:59 logid="1500054000" type="utm" subtype="dns"
eventtype="dns-query" level="information" vd="vdom1" eventtime=1554503818 policyid=1
sessionid=69121 srcip=10.1.100.18 srcport=40659 srcintf="port10" srcintfrole="undefined"
dstip=172.16.95.16 dstport=53 dstintf="port9" dstintfrole="undefined" proto=17
profile="demo" xid=24730 qname="www.example.com" qtype="A" qtypeval=1 qclass="IN"

11: date=2019-04-05 time=15:36:51 logid="1501054401" type="utm" subtype="dns"
eventtype="dns-response" level="information" vd="vdom1" eventtime=1554503810 policyid=1
sessionid=69118 srcip=10.1.100.18 srcport=33461 srcintf="port10" srcintfrole="undefined"
dstip=172.16.95.16 dstport=53 dstintf="port9" dstintfrole="undefined" proto=17
profile="demo" xid=53801 qname="www.fortinet.com" qtype="A" qtypeval=1 qclass="IN"
ipaddr="13.56.55.78, 54.183.57.55" msg="Domain was allowed because it is in the domain-
filter list" action="pass" domainfilteridx=1 domainfilterlist="demo"

12: date=2019-04-05 time=15:36:51 logid="1500054000" type="utm" subtype="dns"
eventtype="dns-query" level="information" vd="vdom1" eventtime=1554503810 policyid=1
sessionid=69118 srcip=10.1.100.18 srcport=33461 srcintf="port10" srcintfrole="undefined"
dstip=172.16.95.16 dstport=53 dstintf="port9" dstintfrole="undefined" proto=17
profile="demo" xid=53801 qname="www.fortinet.com" qtype="A" qtypeval=1 qclass="IN"
```

Sequence and priority

In DNS Filter, local domain filter has a higher priority than FortiGuard category-based domain filter.

A DNS query is scanned and matched with local domain filter first. If an entry matches and the local filter entry's action is block, then that DNS query is blocked or redirected.

If local domain filter list has no match, then the FortiGuard category-based domain filter is used. If a DNS query domain name rating belongs to the block category, this query is blocked or redirected. If the FortiGuard category-based filter has no match, then the original resolved IP address is returned to the client DNS resolver.

The local domain filter action can be Block, Allow, or Monitor. If the local domain filter action is Allow and an entry matches, it will skip the FortiGuard category-based domain filter and directly return to client DNS resolver. If the local domain filter action is Monitor and an entry matches, it will go to FortiGuard category-based domain filter scanning and matching.

DNS translation

Using this feature, you can translate a DNS resolved IP address to another IP address you specify on a per-policy basis.


For example, website A has a public address 1.2.3.4. However, when your internal network users visit this website, you want them to connect to an internal host, say, 192.168.3.4. In this case, you can use DNS translation to translate the DNS resolved address 1.2.3.4 to 192.168.3.4. Reverse use of DNS translation is also applicable, for example, if you want public DNS query of your internal server to get a public IP address, then you can translate a DNS resolved private IP to a public IP address.

Example


This example configuration forces the DNS Filter profile to translate 93.184.216.34 (www.example.com) to 192.168.3.4. When internal network users do a DNS query for www.example.com, they do not get the original www.example.com IP address of 93.184.216.34. Instead, it is replaced with 192.168.3.4.

To configure DNS translation in the GUI:

1. Go to *Security Profiles* > *DNS Filter* and edit or create a DNS Filter profile.
2. Enable *DNS Translation* and click *Create New*.
3. Enter the *Original Destination* (the domain's original IP address), the *Translated Destination* IP address, and the *Network Mask*, and set *Status* to *Enable*.

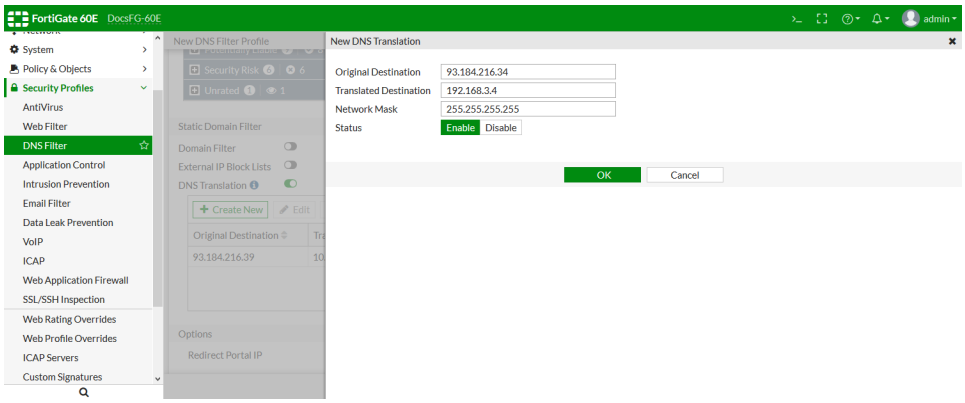

4. Click *OK*.

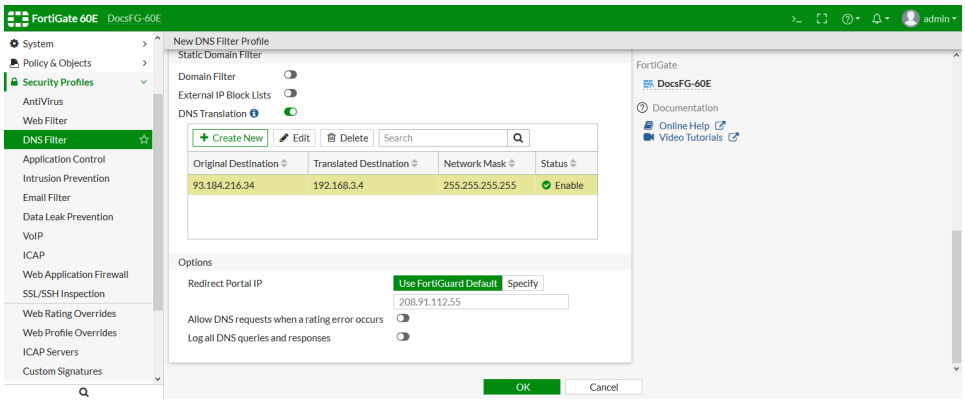

5. Click *OK* to create or edit the DNS profile.

To configure DNS translation in the CLI:

```
config dnsfilter profile
    edit "demo"
        set comment ''
        ...
        config dns-translation
            edit 1
                set src 93.184.216.34
                set dst 192.168.3.4
                set netmask 255.255.255.255
            next
        end
        set redirect-portal 0.0.0.0
        set redirect-portal6 ::
        set youtube-restrict strict
    next
end
```

To check DNS translation using a command line tool before DNS translation:

```
# dig www.example.com
;; ->>HEADER<<- opcode: QUERY; status: NOERROR; id: 27030
;; Flags: qr rd ra; QUERY: 1; ANSWER: 1; AUTHORITY: 2; ADDITIONAL: 0

;; QUESTION SECTION:
;; www.example.com.             IN      A

;; ANSWER SECTION:
www.example.com.        33946   IN      A       93.184.216.34

;; AUTHORITY SECTION:
example.com.            18578   IN      NS      b.iana-servers.net.
example.com.            18578   IN      NS      a.iana-servers.net.

;; Received 97 B
;; Time 2019-04-08 10:47:26 PDT
;; From 172.16.95.16@53(UDP) in 0.5 ms
```

To check DNS translation using a command line tool after DNS translation:

```
# dig www.example.com
;; ->>HEADER<<- opcode: QUERY; status: NOERROR; id: 62060
;; Flags: qr rd ra; QUERY: 1; ANSWER: 1; AUTHORITY: 2; ADDITIONAL: 0

;; QUESTION SECTION:
;; www.example.com.             IN      A

;; ANSWER SECTION:
www.example.com.        32491   IN      A       192.168.3.4   <<<==== resolved IP translated
into 192.168.3.4

;; AUTHORITY SECTION:
example.com.            17123   IN      NS      b.iana-servers.net.
example.com.            17123   IN      NS      a.iana-servers.net.

;; Received 97 B
;; Time 2019-04-08 11:11:41 PDT
;; From 172.16.95.16@53(UDP) in 0.5 ms
```

DNS translation network mask

The following is an example of DNS translation and result:

```
config dns-translation
        edit 1
           set src 93.184.216.34
           set dst 1.2.3.4
           set netmask 255.255.224.0
        next
    end
```

```
# dig www.example.com
;; ->>HEADER<<- opcode: QUERY; status: NOERROR; id: 6736
;; Flags: qr rd ra; QUERY: 1; ANSWER: 1; AUTHORITY: 2; ADDITIONAL: 0

;; QUESTION SECTION:
;; www.example.com.             IN      A

;; ANSWER SECTION:
www.example.com.        29322   IN      A       1.2.24.34

;; AUTHORITY SECTION:
example.com.            13954   IN      NS      a.iana-servers.net.
example.com.            13954   IN      NS      b.iana-servers.net.

;; Received 97 B
;; Time 2019-04-08 12:04:30 PDT
;; From 172.16.95.16@53(UDP) in 2.0 ms
```

1) **AND src(Orginal IP) with negative netmask (93.184.216.34 & ~255.255.224.0)**

```
01011101.10111000.11011000.00100010 93.184.216.34 <-- ip
00000000.00000000.00011111.11111111 ~255.255.224.0 <-- ~netmask
-------------------------------------------------------- &
00000000.00000000.00011000.00100010 0.0.24.34 <- right bits
```

```
2) AND dst(Translated IP) with netmask
00000001.00000010.00000011.00000100 1.2.3.4 <- dst
11111111.11111111.11100000.00000000 255.255.224.0 <- netmask
----------------------------------------------------- &
00000001.00000010.00000000.00000000 1.2.0.0 <- left bits

3) Final step 2 bitwise-OR 3:
00000000.00000000.00011000.00100010 0.0.24.34
00000001.00000010.00000000.00000000 1.2.0.0
----------------------------------------------------- |
00000001.00000010.00011000.00100010 1.2.24.34
```

Using a FortiGate as a DNS server


You can configure and use FortiGate as a DNS server in your network. When you enable DNS Service on a specific interface, FortiGate will listen for DNS Service on that interface.

Depending on the configuration, DNS Service on FortiGate can work in three modes: *Recursive*, *Non-Recursive*, or *Forward to System DNS* (server). For details on how to configure DNS Service on FortiGate, see the FortiGate System Configuration Guide.


You can apply a DNS Filter profile to Recursive Mode and Forward to System DNS Mode. This is the same as FortiGate working as a transparent DNS Proxy for DNS relay traffic.

To configure DNS Service on FortiGate using GUI:

1. Go to *Network* > *DNS Servers*.
2. In the *DNS Service on Interface*, click *Create New* and select an *Interface*.

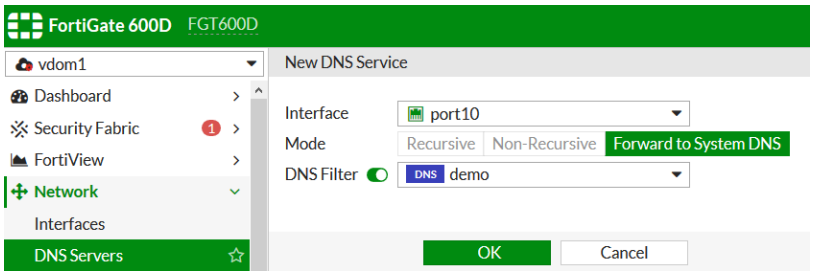

The *Recursive* and *Non-Recursive Mode* is available only after you configure the DNS database.

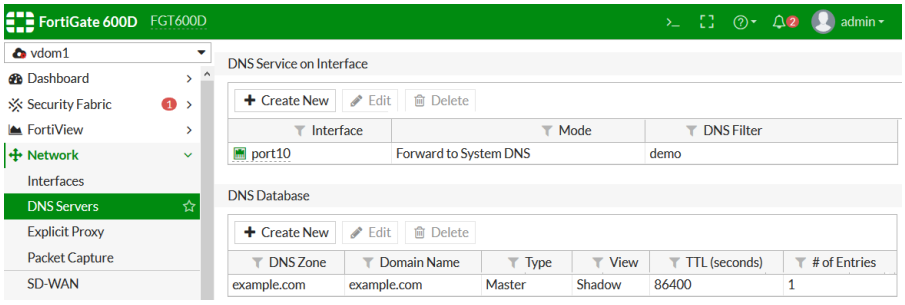

To configure DNS Service on FortiGate using CLI:

```
config system dns-server
    edit "port10"   <<<==== Enable DNS Serive on Interface
        set mode forward-only
        set dnsfilter-profile "demo"   <<<==== apply DNS Filter Profile for the service
    next
end
```

Sample configuration

In this example, FortiGate port 10 is enabled as a DNS Service with the DNS Filter profile "demo". Suppose port 10 has an IP address 10.1.100.5 and DNS Filter profile "demo" is set to block category 52 (Information Technology), then from your internal network PC, use a command line tool such as dig or nslookup to do a DNS query. For example:

```
# dig @10.1.100.5 www.fortinet.com    <<<====Specify FortiGate interface address as DNS
Server
;; ->>HEADER<<- opcode: QUERY; status: NOERROR; id: 52809
;; Flags: qr rd; QUERY: 1; ANSWER: 1; AUTHORITY: 0; ADDITIONAL: 0

;; QUESTION SECTION:
;; www.fortinet.com.            IN      A

;; ANSWER SECTION:
www.fortinet.com.       60      IN      A       208.91.112.55   <<<==== DNS Filter profile
will filter the relay DNS traffic based on profile configuration. It blocked with redirect
portal IP

;; Received 50 B
;; Time 2019-04-08 14:36:34 PDT
;; From 10.1.100.5@53(UDP) in 13.6 ms
```

Troubleshooting for DNS filter

If you have trouble with the DNS Filter profile in your policy, start with the following troubleshooting steps:

- Check the connection between FortiGate and FortiGuard DNS rating server (SDNS server).
- Check that FortiGate has a valid FortiGuard Web Filter license.
- Check the FortiGate DNS Filter configuration.

Troubleshooting connection between FortiGate and FortiGuard SDNS server

Ensure FortiGate can connect to the FortiGuard SDNS server. By default, FortiGate uses UDP port 53 to connect to the SDNS server.

To check the connection between FortiGate and the SDNS server in the CLI:

1. In the CLI Console, run the command `diagnose test application dnsproxy 3` to find the FortiGuard SDNS server.

   ```
   worker idx: 0
   vdom: root, index=0, is master, vdom dns is disabled, mip-169.254.0.1 dns_log=1
   ```

```
dns64 is disabled
vdom: vdom1, index=1, is master, vdom dns is enabled, mip-169.254.0.1 dns_log=1
dns64 is disabled
dns-server:208.91.112.220:53 tz=-480 req=0 to=0 res=0 rt=0 secure=1 ready=1 timer=0
probe=0 failure=0 last_failed=0
dns-server:208.91.112.53:53 tz=0 req=0 to=0 res=0 rt=0 secure=0 ready=1 timer=0 probe=0
failure=0 last_failed=0
dns-server:208.91.112.52:53 tz=0 req=0 to=0 res=0 rt=0 secure=0 ready=1 timer=0 probe=0
failure=0 last_failed=0
dns-server:62.209.40.75:53 tz=60 req=0 to=0 res=0 rt=0 secure=1 ready=1 timer=0 probe=0
failure=0 last_failed=0
dns-server:209.222.147.38:53 tz=-300 req=0 to=0 res=0 rt=0 secure=1 ready=1 timer=0
probe=0 failure=0 last_failed=0
dns-server:173.243.138.221:53 tz=-480 req=0 to=0 res=0 rt=0 secure=1 ready=1 timer=0
probe=0 failure=0 last_failed=0
dns-server:45.75.200.89:53 tz=0 req=0 to=0 res=0 rt=0 secure=1 ready=1 timer=0 probe=0
failure=0 last_failed=0
DNS_CACHE: hash-size=2048, ttl=1800, min-ttl=60, max-num=5000
DNS FD: udp_s=13 udp_c=16:17 ha_c=21 unix_s=22, unix_nb_s=23, unix_nc_s=24
        v6_udp_s=12, v6_udp_c=19:20, snmp=25, redir=14
DNS FD: tcp_s=27, tcp_s6=26, redir=28
FQDN: hash_size=1024, current_query=1024
DNS_DB: response_buf_sz=4096
LICENSE: expiry=2029-08-21, expired=0, type=2
FDG_SERVER:208.91.112.220:53
FGD_CATEGORY_VERSION:8
SERVER_LDB: gid=6f00, tz=-420, error_allow=0
FGD_REDIR:208.91.112.55
```

2. Check the `FDG_SERVER` line. The SDNS server IP address might be different depending on location. For this example, it is:

   ```
   FDG_SERVER:208.91.112.220:53
   ```

3. In the CLI Console under the management VDOM, run the command `execute ping 208.91.112.220` to check the communication between the FortiGate and the SDNS server.
4. Optionally, you can also check the communication using a PC on the internal network.
   a. Disable the DNS Filter profile so that it does not affect your connection check.
   b. Ping your ISP or a public DNS service provides's DNS server, for example, Google's public DNS server of 8.8.8.8:

      ```
      #dig @8.8.8.8 www.fortinet.com
      ```

      Or specify the SDNS server as DNS server:

      ```
      #dig @208.91.112.220 www.fortinet.com
      ```

   c. Check that you can get domain www.fortinet.com A record from the DNS server which shows that UDP port 53 connection path is not blocked.

      ```
      #dig @8.8.8.8 www.fortinet.com
      ;; ->>HEADER<<- opcode: QUERY; status: NOERROR; id: 35121
      ;; Flags: qr rd ra; QUERY: 1; ANSWER: 3; AUTHORITY: 0; ADDITIONAL: 0

      ;; QUESTION SECTION:
      ;; www.fortinet.com.            IN      A

      ;; ANSWER SECTION:
      ```

```
www.fortinet.com.       289     IN      CNAME   fortinet-prod4-858839915.us-west-
1.elb.amazonaws.com.
fortinet-prod4-858839915.us-west-1.elb.amazonaws.com. 51        IN      A
52.8.142.247
fortinet-prod4-858839915.us-west-1.elb.amazonaws.com. 51        IN      A
13.56.55.78

;; Received 129 B
;; Time 2019-04-29 14:13:18 PDT
;; From 8.8.8.8@53(UDP) in 13.2 ms
```

Checking FortiGuard DNS Rating Service license

The FortiGuard DNS Rating Service shares the license with FortiGuard Web Filter so you must have a valid Web Filter license for the DNS Rating Service to work. While the license is shared, the DNS Rating Service uses a separate connection mechanism from the Web Filter Rating.

To check the DNS Rating Service license in the CLI:

1. In the CLI Console, run the command `diagnose test application dnsproxy 3`.
2. Look for the `LICENSE` line and check that the license has not expired, for example:
   `LICENSE: expiry=2029-08-21, expired=0, type=2`
3. Check the `dns-server` lines. Some `dns-server` lines show `secure=1 ready=1`. These lines show the functioning SDNS servers. For example:
   `dns-server:208.91.112.220:53 tz=-480 req=7 to=0 res=7 rt=1` **`secure=1 ready=1`** `timer=0 probe=0 failure=0 last_failed=0`

Checking FortiGate DNS Filter profile configuration

To check the FortiGate DNS Filter profile configuration:

1. Create a local domain filter and set the *Action* to *Redirect to Block Portal*.
   See Local domain filter on page 970.
2. Apply this DNS Filter profile to the policy.
3. From the client PC, DNS query this domain.

If you get the profile's redirected portal address, that shows that the DNS Filter profile works as expected.

More troubleshooting steps

To reload the DNS proxy in the CLI:

```
(global)#diagnose test application dnsproxy 99
```

To debug DNS proxy details:

These commands might create more output in your console.

```
#diagnose debug application dnsproxy -1

#diagnose debug enable/disable
```


DNS proxy command reference

Use the following `diagnose test application dnsproxy` command line options to check DNS proxy status and help with troubleshooting.

```
(global) # diagnose test application dnsproxy ?
worker idx: 0
1. Clear DNS cache
2. Show stats
3. Dump DNS setting
4. Reload FQDN
5. Requery FQDN
6. Dump FQDN
7. Dump DNS cache
8. Dump DNS DB
9. Reload DNS DB
10. Dump secure DNS policy/profile
11. Dump Botnet domain
12. Reload Secure DNS setting
13. Show Hostname cache
14. Clear Hostname cache
15. Show SDNS rating cache
16. Clear SDNS rating cache
17. DNS debug bit mask
99. Restart dnsproxy worker
```

Application control

FortiGates can recognize network traffic generated by a large number of applications. Application control sensors specify what action to take with the application traffic. Application control uses IPS protocol decoders that can analyze network traffic to detect application traffic, even if the traffic uses non-standard ports or protocols. Application control supports traffic detection using the HTTP protocol (versions 1.0, 1.1, and 2.0).

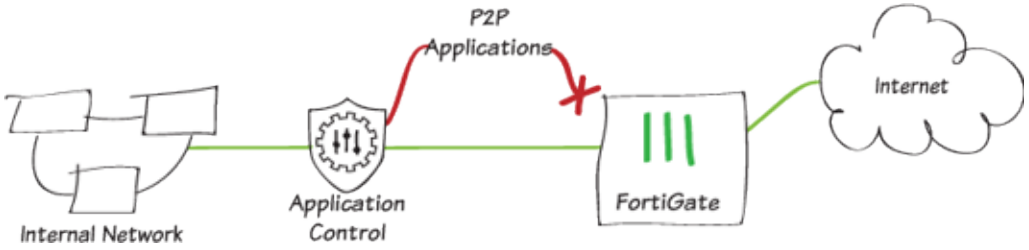

FortiOS includes three preloaded application sensors:

- *default* (monitors all applications)
- *wifi-default* (default configuration for offloading WiFi traffic)
- *block-high-risk*

You can customize these sensors, or you can create your own to log and manage the applications on your network.

Once configured, you can add the application sensor to a firewall policy.



This functionality requires a subscription to FortiGuard Application Control.

The following topics provide information about application control:

- Basic category filters and overrides on page 981
- Port enforcement check on page 984
- Protocol enforcement on page 985

Basic category filters and overrides

Once you have created an application sensor, you can define the applications that you want to control. You can add applications and filters using categories, application overrides, and/or filter overrides.

- **Categories**: Choose groups of signatures based on a category type.
- **Application overrides**: Choose individual applications.
- **Filter overrides**: Select groups of applications and override the application signature settings for them.

Categories

Categories allow you to choose groups of signatures based on a category type. Applications belonging to the category trigger the action that is set for the category.


To set category filters in the CLI:

```
config application list
    edit {id}
        config entries
            edit 1
                set category <id>
                    ID           Select Category ID
                    2            P2P
                    3            VoIP
                    5            Video/Audio
                    6            Proxy
                    7            Remote.Access
                    8            Game
                    12           General.Interest
                    15           Network.Service
                    17           Update
                    21           Email
                    22           Storage.Backup
                    23           Social.Media
                    25           Web.Client
                    26           Industrial
                    28           Collaboration
                    29           Business
                    30           Cloud.IT
                    31           Mobile
                set action {pass | block | reset}
                    pass     Pass or allow matching traffic.
```

```
                    block    Block or drop matching traffic.
                    reset    Reset sessions for matching traffic.
                set log {enable | disable}
            next
        end
    next
end
```

To set category filters in the GUI:

1. Go to *Security Profiles* > *Application Control*.
2. Under *Categories*, left click the icon next to the category name to view a dropdown of actions:
   - Allow
   - Monitor
   - Block
   - Quarantine
   - View signatures
3. Select *OK*.

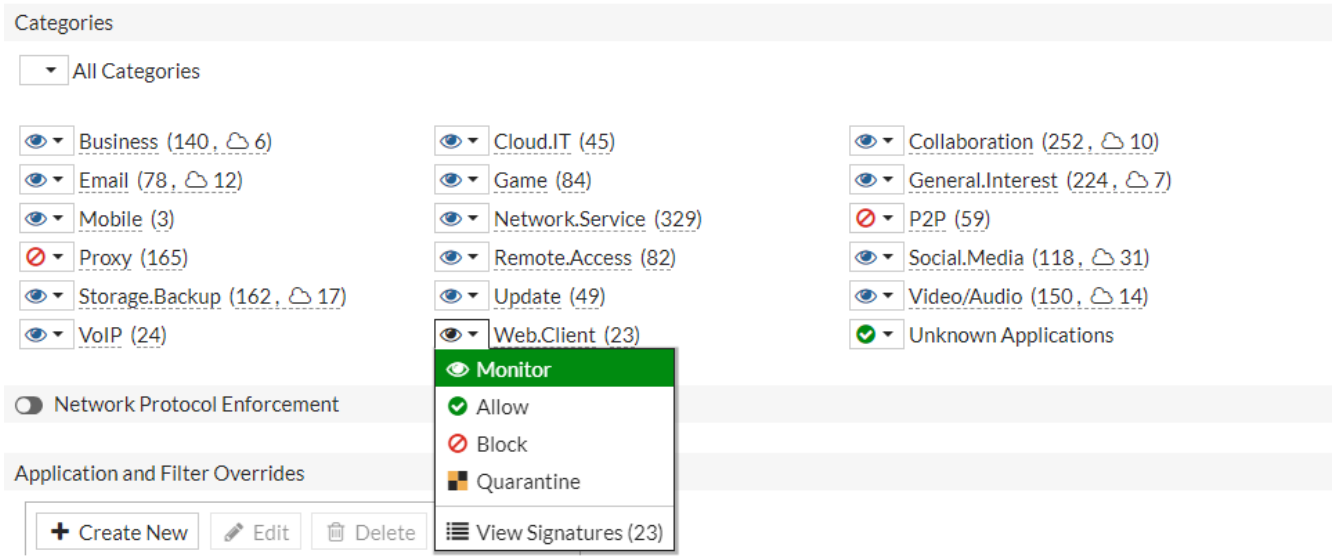

Application and filter overrides

Override type	Setting
Application	**Type**: Choose *Application* for application overrides.
	Action: Can be set to Monitor/Allow/Block/Quarantine.
	Application: Multiple app signatures can be added for one entry. A slide-in presenting an application list will be shown to select specific app signatures, and the search box can be used to filter matched signatures.
Filter	**Type**: Choose *Filter* for filter overrides.
	Action: Can be set to Monitor/Allow/Block/Quarantine.


Override type	Setting
	Filter: Filters can be selected by behavior, application category, technology, popularity, protocol, risk, or vendor subtypes.
	Search box: Can be used to determine if the input signature is included in selected filters, where matched applications are shown at the bottom.

To set overrides in the CLI:

```
config application list
    edit {id}
        config entries
            edit 1
                set protocols <0-47>    #network protocol ID
                set risk <id>
                    *level    Risk of allowing traffic from this application to occur (1 -
5; Low, Elevated, Medium, High, and Critical).
                set vendor <0-25>       #vendor ID
                set technology <id>
                    All          All
                    0            Network-Protocol
                    1            Browser-Based
                    2            Client-Server
                    4            Peer-to-Peer
                set behavior <id>
                    All          All
                    2            Botnet
                    3            Evasive
                    5            Excessive-Bandwidth
                    6            Tunneling
                    9            Cloud
                set popularity <1-5>    #Popularity level 1-5
                set action {pass | block | reset}
                    pass     Pass or allow matching traffic.
                    block    Block or drop matching traffic.
                    reset    Reset sessions for matching traffic.
                set log {enable | disable}
            next
        end
    next
end
```


To set overrides in the GUI:

1. Go to *Security Profiles* > *Application Control*.
2. Under the *Application and Filter Overrides* table, click *Create New*.
3. To add individual applications:
   a. Select *Application* as the *Type*.
   b. Choose an action to be associated with the application.
   c. Click the + button in the *Application* field and choose the specific applications from the list where app signatures are displayed. Multiple applications may be selected.

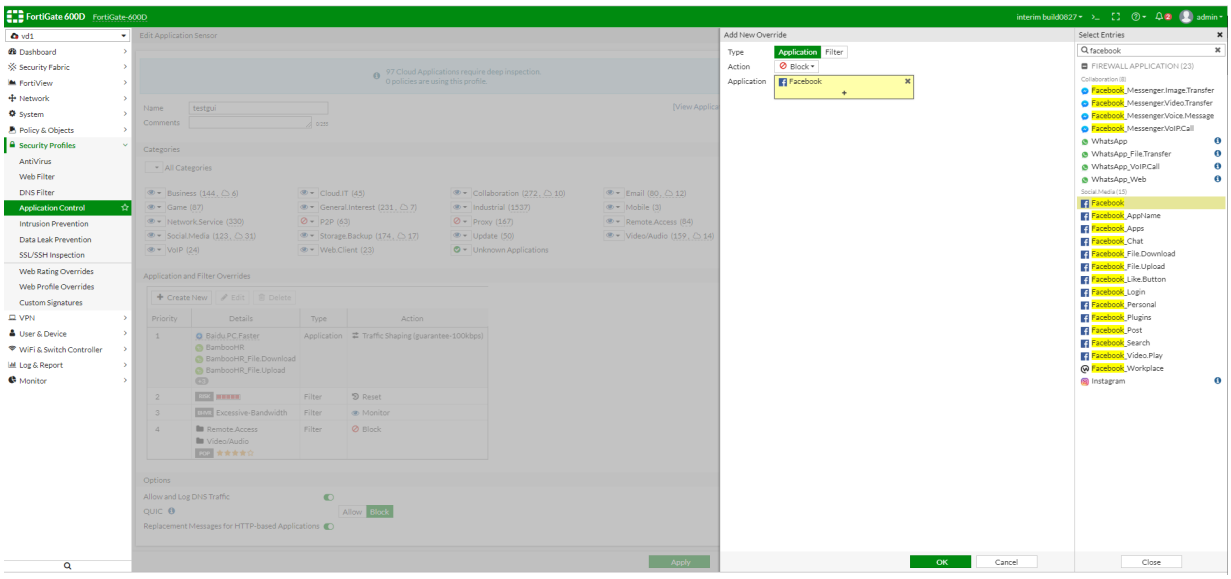

d. Click *OK*.

4. To add advanced filters:
   a. Create another entry in the *Application and Filter Overrides* table.
   b. Select *Filter* as the *Type*.
   c. Select *Cloud* under the behavior section from the *Select Entries* list.
   Matched signatures are shown along the bottom.

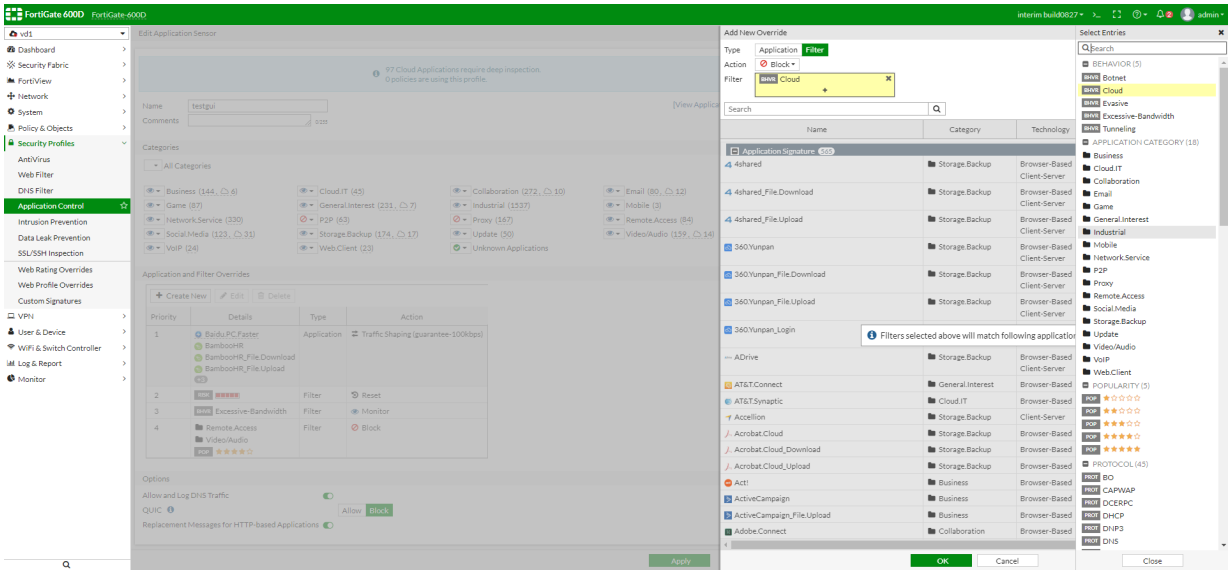

d. Click *OK*.

Port enforcement check

Most networking applications run on specific ports. For example, SSH runs on port 22, and Facebook runs on ports 80 and 443.

If the default network service is enabled in the Application Control profile, a port enforcement check is done at the application profile level, and any detected application signatures running on the non-standard TCP/IP port are blocked. This means that each application allowed by the app control sensor is only run on its default port.

To set port enforcement check in the CLI:

```
config application list
    edit "default_port"
        set enforce-default-app-port {enable | disable}
            disable        Disable default application port enforcement.
            enable         Enable default application port enforcement.
        config entries
            edit 1
                set application 15896
                set action pass
            next
        end
    next
end
```

For example, when applying the above appctrl sensor, FTP traffic with the standard port (port 21) is allowed, while the non-standard port (port 2121) is blocked.

Protocol enforcement

Protocol enforcement allows you to configure networking services (e.g. FTP, HTTP, HTTPS) on known ports (e.g. 21, 80, 443). For protocols that are not allowlisted under select ports, the IPS engine performs the violation action to block, allow, or monitor that traffic.

This feature can be used in the following scenarios::

- When one protocol dissector confirms the service of network traffic, protocol enforcement can check whether the confirmed service is allowlisted under the server port. If it is not Allowlisted, the traffic is considered a violation and IPS can take the action specified in the configuration (block or monitor it).
- When there is no confirmed service for the network traffic, the traffic is considered a service violation if IPS dissectors rule out all of the services enforced under its server port.

In an applicable profile, a default-network-service list can be created to associate well known ports with accepted services.


To setup protocol enforcement in the CLI:

```
config application list
   edit "protocol-GUI"
      set other-application-log enable
      set control-default-network-services {enable | disable}   # Enable/Disable enforcement
of protocols over select ports
      config default-network-services                           # Default network service
entries
         edit 1
           set port 80                        # Port number, enter an integer value from <0>
to <65535>
           set services http                  # Network protocols: http, ssh, ftp, dns,
smtp, pop3, imap, snmp, nntp, and https
```


```
        next
        edit 2
          set port 53
          set services dns
          set violation-action {pass | monitor | block}      # Pass, Log, or block when
non-DNS traffic run over port 53
        next
      end
   next
end
```

To setup protocol enforcement in the GUI:

1. Go to *Security Profiles* > *Application Control*.
2. Create a new application sensor or edit an existing one.
3. Enable *Network Protocol Enforcement*.
   Enforcement entries can be created, edited, or deleted to configure network services on certain ports and determine the violation action.

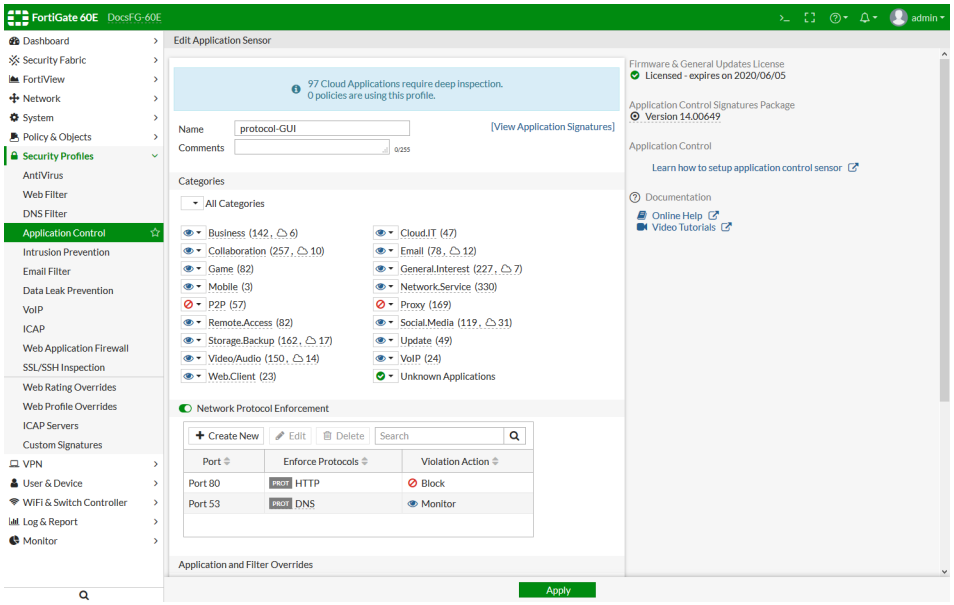

4. Click *Create New* in the *Network Protocol Enforcement* table.

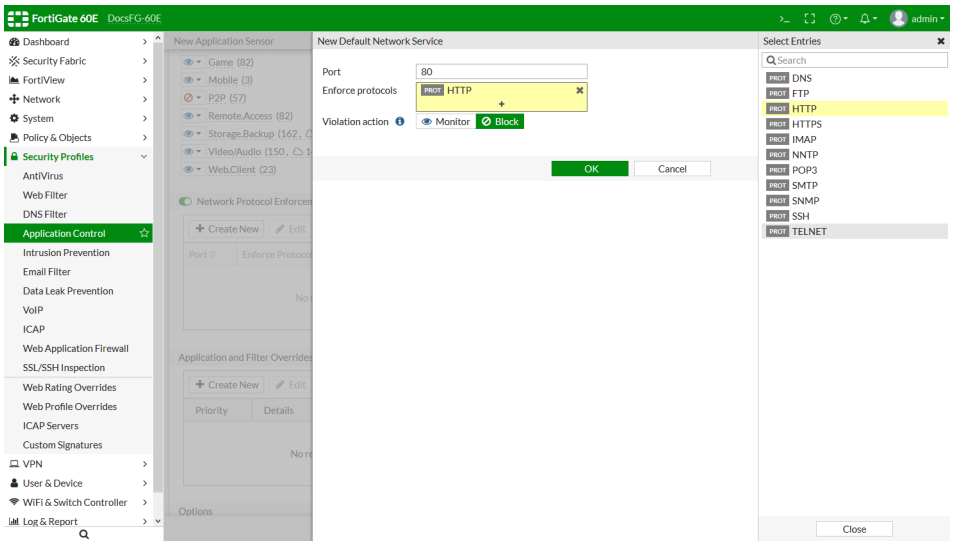

5. In the *New Default Network Service* pane:
   a. Enter a *Port* number.
   b. Select *Enforced protocols*.
   c. Choose the *Violation action*.
   d. Click *OK*.
6. Click *OK*.

Intrusion prevention

With the FortiOS intrusion prevention system (IPS), you can detect and block network-based attacks. You can configure IPS sensors based on IPS signatures, IPS filters, outgoing connections to botnet sites, and rate-based signatures.

FortiOS includes eight preloaded IPS sensors:

- *all_default*
- *all_default_pass*
- *default*
- *high_security*
- *protect_client*
- *protect_email_server*
- *protect_http_server*
- *wifi-default*

You can customize these sensors, or you can create your own and apply it to a firewall policy.



This functionality requires a subscription to FortiGuard IPS Service.

The following topic provides information about IPS sensors:


- Botnet C&C IP blocking on page 988

Botnet C&C IP blocking

The *Botnet C&C* section consolidates multiple botnet options in the IPS profile. This allows you to enable botnet blocking across all traffic that matches the policy by configuring one setting in the GUI, or by the `scan-botnet-connections` option in the CLI.

To configure botnet C&C IP blocking using the GUI:

1. Go to *Security Profiles* > *Intrusion Prevention*.
2. Edit an existing sensor, or create a new one.
3. Set *Scan Outgoing Connections to Botnet Sites* to *Block* or *Monitor*.

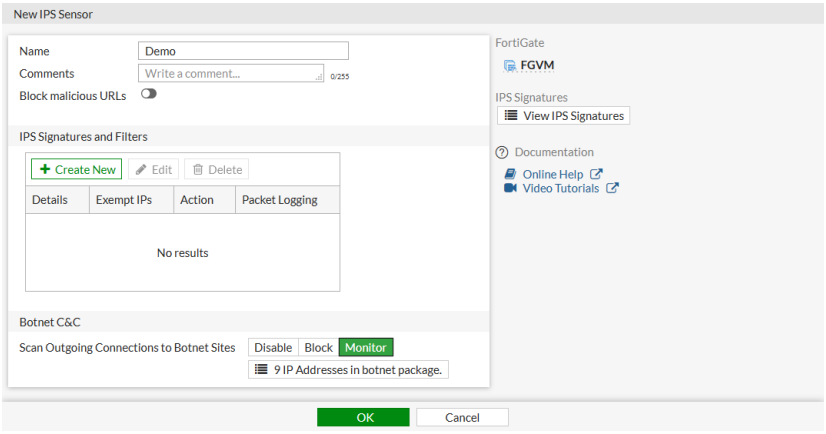

4. Configure other settings as required .
5. Click *Apply*. Botnet C&C is now enabled for the sensor.
6. Add this sensor to the firewall policy.
   The IPS engine will scan outgoing connections to botnet sites. If you access a botnet IP, an IPS log is generated for this attack.
7. Go to *Log & Report* > *Intrusion Prevention* to view the log.

To configure botnet C&C IP blocking using the CLI:

```
config ips sensor
   edit "Demo"
      set scan-botnet-connections {block | monitor}
   next
end
```


The `scan-botnet-connections` option is no longer available in the following CLI commands:

- `config firewall policy`
- `config firewall interface-policy`
- `config firewall proxy-policy`
- `config firewall sniffer`

Botnet IPs and domains lists

To view botnet IPs and domains lists using the GUI:

1. Go to *System* > *FortiGuard* . *Botnet IPs* and *Botnet Domains* are visible in the *Intrusion Prevention* section.

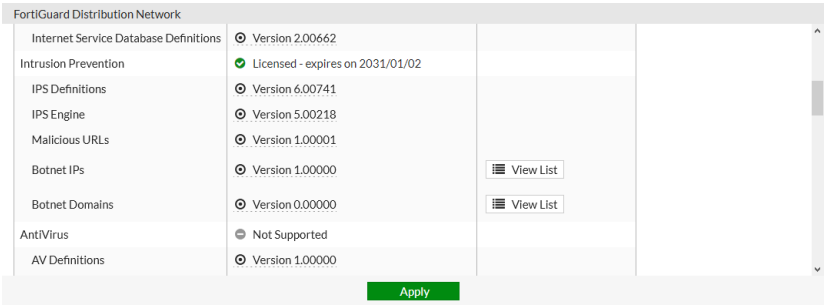


2. Click *View List* for more details.

Botnet C&C domain blocking

To block connections to botnet domains using the GUI:

1. Go to *Security Profiles* > *DNS Filter*.
2. Edit an existing filter, or create a new one.
3. Enable *Redirect botnet C&C requests to Block Portal*.

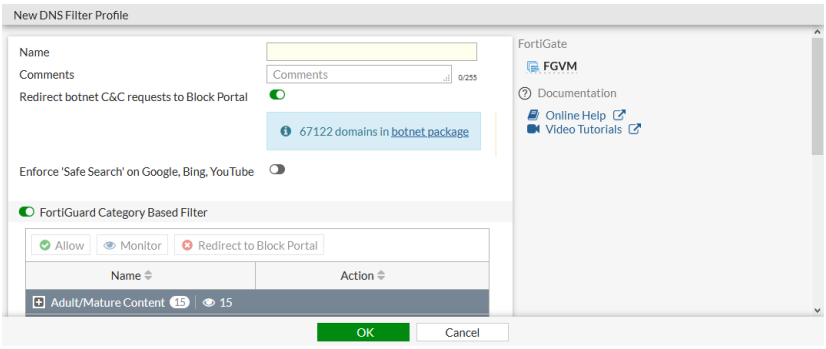

4. Configure other settings as required.
5. Click *OK*.
6. Add this filter profile to a firewall policy.

Botnet C&C URL blocking




Blocking malicious URLs is not supported on FortiGate 51E, 50E, or 30E models.

To block malicious URLs using the GUI:

1. Go to *Security Profiles* > *Intrusion Prevention*.
2. Edit an existing sensor, or create a new one.

3. Enable *Block malicious URLs*.

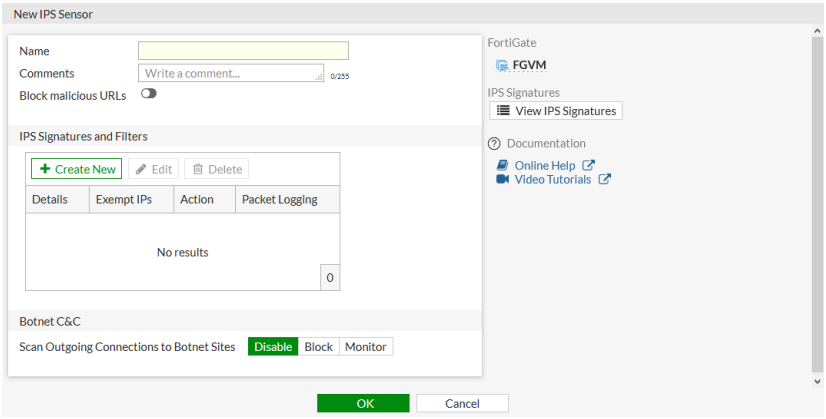


4. Configure other settings as needed.
5. Click *OK*.
6. Add this sensor to a firewall policy.

Botnet C&C signature blocking

To add IPS signatures to a sensor using the GUI:

1. Go to *Security Profiles* > *Intrusion Prevention*.
2. Edit an existing sensor, or create a new one.
3. In the and Filters*IPS Signatures* section, click *Create New*.
4. Set *Type* to *Signature*.
5. Select the signatures you want to include from the list.
6. Configure the other settings as required.

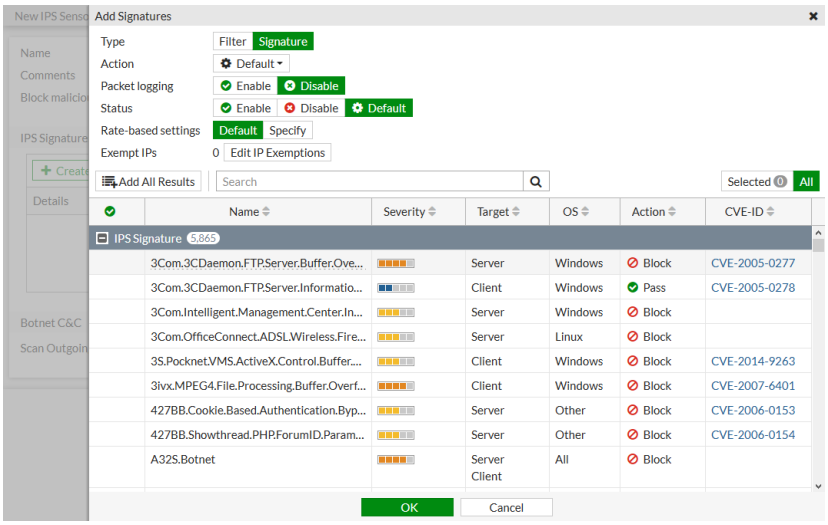

7. Click *OK*.
8. Configure other settings as required, then click *OK*.
9. Add this sensor to a firewall policy to detect or block attacks that match the IPS signatures.

Email filter

Email filters can be configured to perform spam detection and filtering. You can customize the default profile, or create your own and apply it to a firewall policy.



Two kinds of filtering can be defined in a single profile, and they will act independent of one another.

Filter options can be organized according to the source of the decision:

- Local options: the FortiGate qualifies the email based on local conditions, such as blocklists and allowlists, banned words, or DNS checks using FortiGuard Antispam.
- FortiGuard-based options: the FortiGate qualifies the email based on the score or verdict returned from FortiGuard Antispam.
- Third-party options: the FortiGate qualifies the email based on information from a third-party source (like an ORB list).

Local and FortiGuard block/allowlists can be enabled and combined in a single profile. When combined, the local block/allowlist has a higher priority than the FortiGuard blocklist during a decision making process. For example, if a client IP address is blocklisted in the FortiGuard server, but you want to override this decision and allow the IP to pass through the filter, you can define the IP address or subnet in a local block/allowlist with the *clear* action. Because the information coming from the local list has a higher priority than the FortiGuard service, the email will be considered clean.



Some features of this functionality require a subscription to FortiGuard Antispam.

The following topics provide information about email filter profiles:

- Local-based filters on page 991
- FortiGuard-based filters on page 996
- File type-based filters on page 997
- Protocols and actions on page 1003
- Configuring webmail filtering on page 1004

Local-based filters

You can make block/allowlists from emails or IP subnets to forbid or allow them to send or receive emails.

You can also define a list of banned words. Emails that contain any of these banned words are considered spam.

With the `spamhelodns` and `spamraddrdns` commands, the FortiGate performs a standard DNS check on the machine name used in the helo SMTP message, and/or the return-to field to determine if these names belong to a registered domain. The FortiGate does not check the FortiGuard service during these operations.

To configure a local-based email filter in the CLI:

1. Configure a BWL:

```
config emailfilter bwl
    edit 1
        set name "mtBWL"
        config entries
            edit 1
                set status enable
                set type ip
                set action spam
                set addr-type ipv4
                set ip4-subnet 10.1.100.0 255.255.255.0
            next
        end
    next
end
```

2. Configure an email filter profile:


```
config emailfilter profile
    edit "myLocalEmailFilter"
        set spam-filtering enable
        set options spambwl spamhelodns spamraddrdns
        config smtp
            set action tag
        end
        set spam-bwl-table 1
    next
end
```

3. Use the profile in a firewall policy:

```
config firewall policy
    edit 1
        .....
        set inspection-mode proxy
        set emailfilter-profile "myLocalEmailFilter"
    next
end
```


To configure a local-based email filter in the GUI:

1. Go to *Security Profiles* > *Email Filter*.
2. Click *Create New* or select an existing profile and click *Edit*.

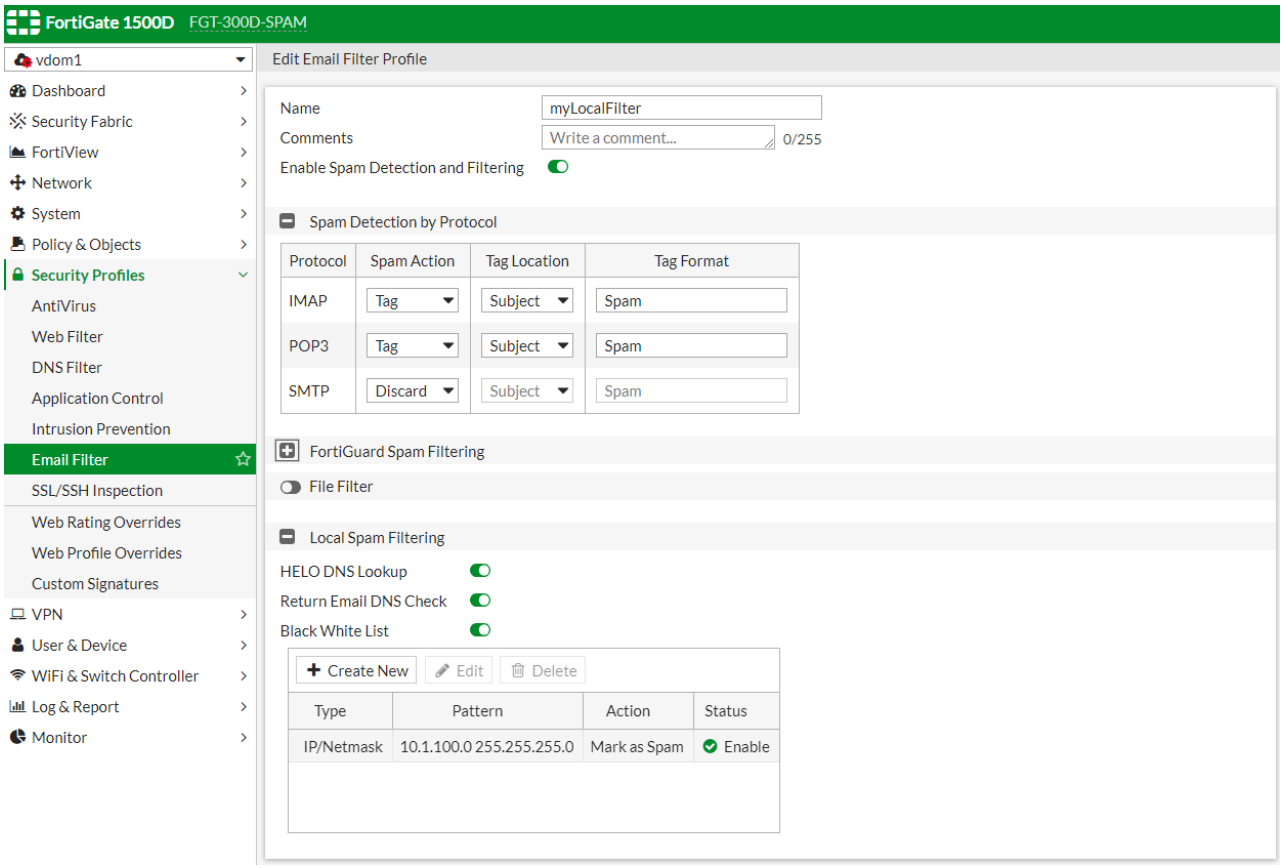


3. In the firewall policy, create or edit a rule.
4. Set the inspection-mode to *Proxy-based*.

5. Enable the *Email Filter* option and select the previously created profile.

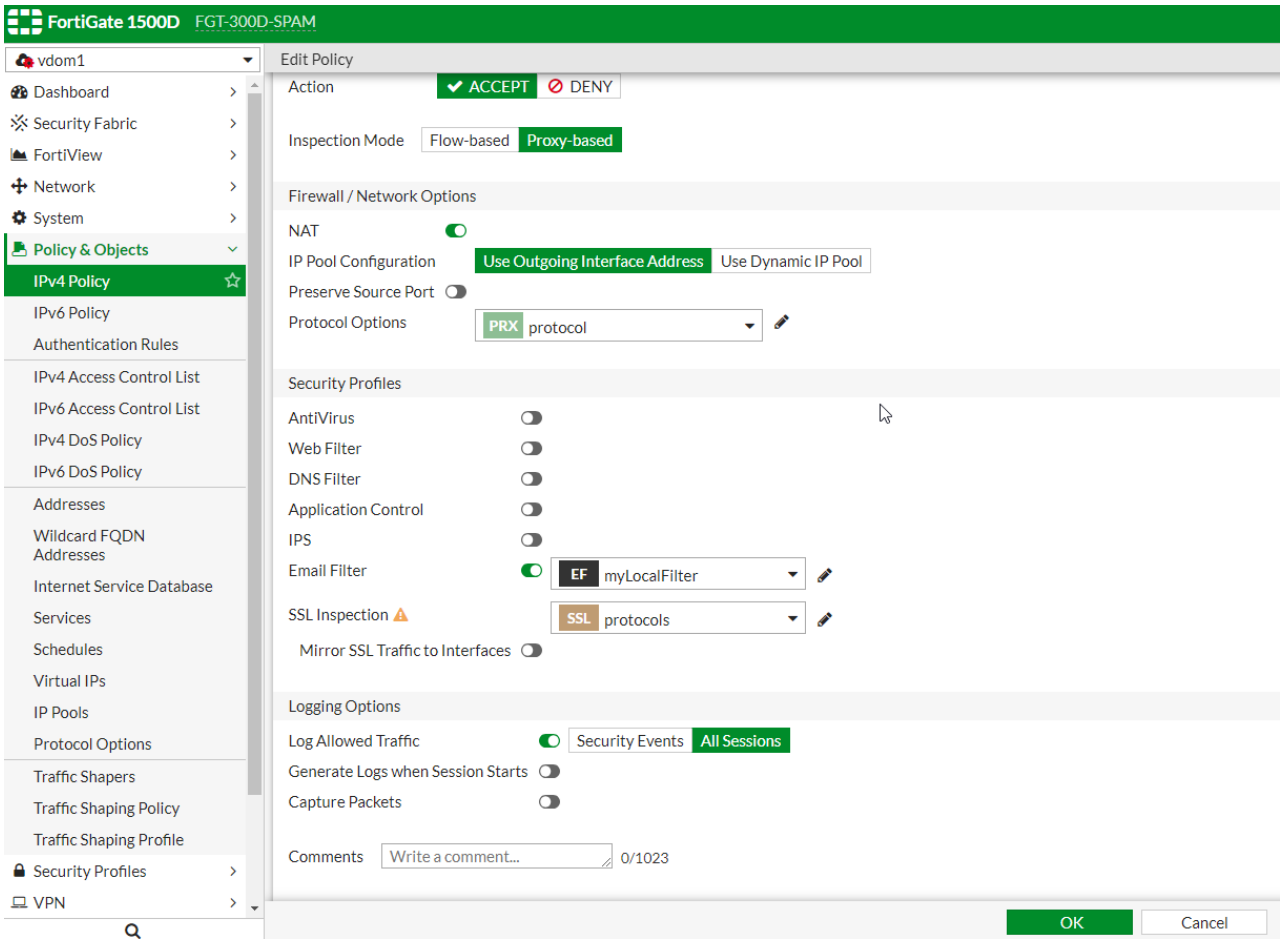

6. Set *SSL Inspection* to a profile that has deep SSL inspection enabled.
Deep inspection is required if you intend to filter SMTP, POP3, IMAP, or any SSL/TLS encapsulated protocol. The below SSL-inspection profile has deep inspection enabled:

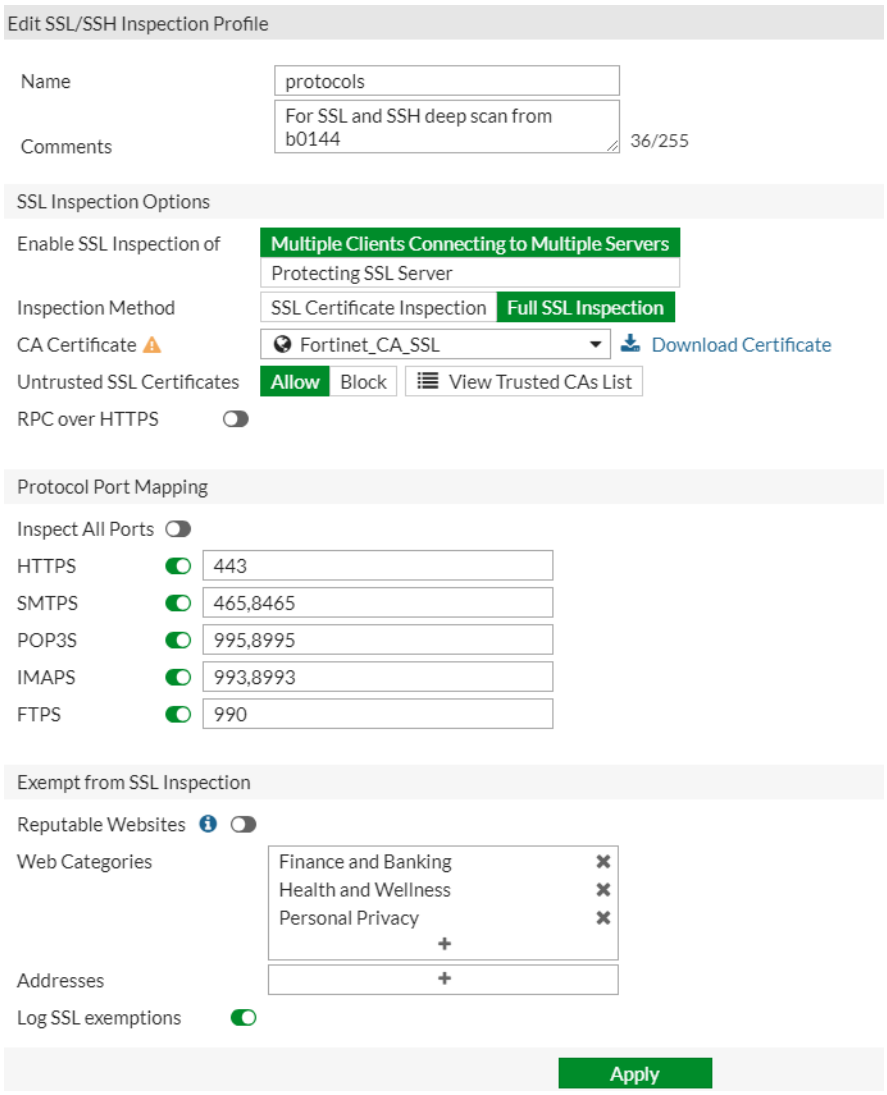

7. Click *OK*.

To configure bannedwords in the CLI:

1. Configure a bannedwords list:

```
config emailfilter bword
    edit 1
        set name "banned"
        config entries
            edit 1
                set pattern "undesired_word"
            next
        end
    next
end
```

2. Configure an email filter profile:

```
config emailfilter profile
    edit "myBannedWordsProfile"
        config file-filter
            set status disable
        end
        set spam-filtering enable
        set options bannedword
        set spam-bword-table 1
    next
end
```

3. Use the profile in a firewall policy:

```
config firewall policy
    edit 1
        .....
        set inspection-mode proxy
        set emailfilter-profile "myBannedWordsProfile"
    next
end
```

Once created, this profile should be set in the firewall policy.



Bannedwords can only be configured through the CLI.

FortiGuard-based filters

The FortiGate consults FortiGuard servers to help identify spammer IP address or emails, known phishing URLs, known spam URLs, known spam email checksums, and others.

FortiGuard servers have maintained databases that contain blocklists, which are fed from Fortinet sensors and labs distributed all over the world.


To configure the FortiGuard filters in the CLI:

```
config emailfilter profile
    edit "myEmailFilterProfile"
        set spam-filtering enable
        set options spamfsip spamfssubmit spamfschksum spamfsurl spamrbl spamhdrcheck
spamfsphish
    next
end
```

To configure the FortiGuard filters in the GUI:

1. Go to *Security Profiles* > *Email Filter*.
2. In the *FortiGuard Spam Filtering Spam Filtering* section, you can enable or disable the following filters:
   - IP Address Check
   - URL Check

- Detect Phising URLs in Email
- Email Checksum Check
- Spam Submission

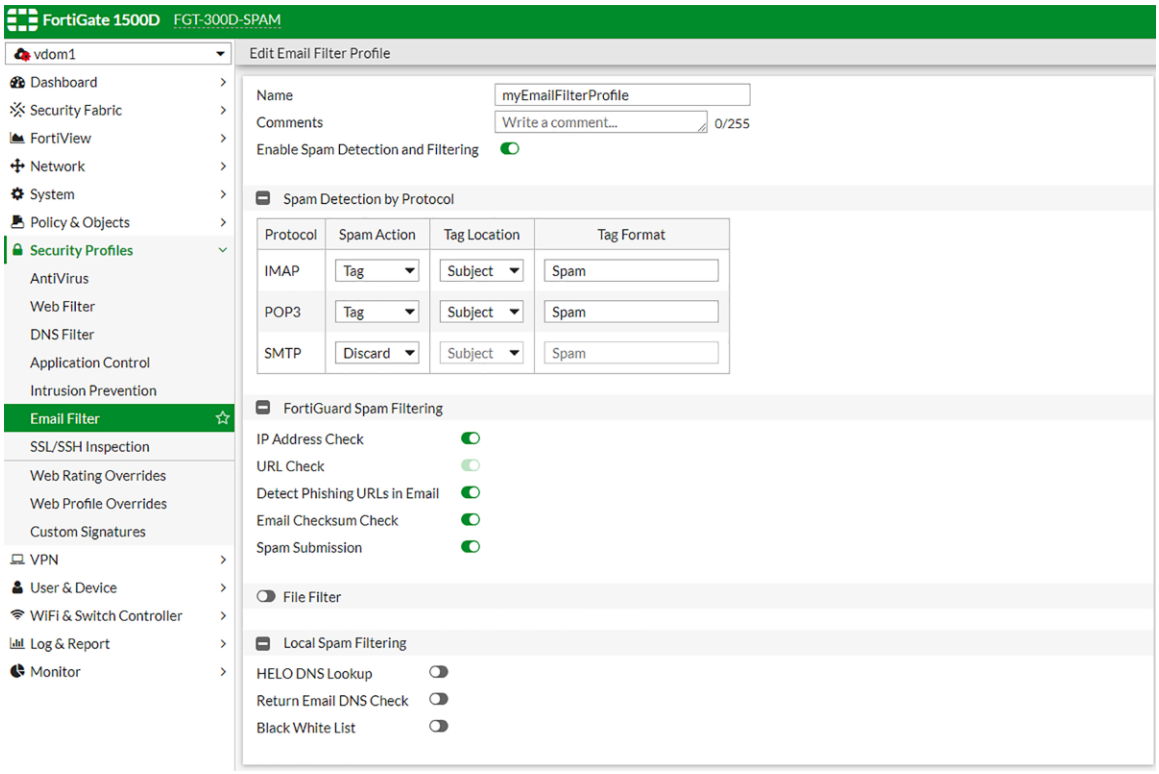

3. Click *OK*.

File type-based filters

With *File Filter*, you can define undesired file types within the email filter profile and associate an action to be taken for each file type, such as block or log.

For each entry, you can also specify the protocol to inspect (SMTP, POP3, or IMAP) and if only encrypted files should be matched. While file filter entries are ordered, the block action takes precedence over the log action.

File filtering in email filter profiles is based only on the file type (file meta data) and not on file size or content. You would need to configure a DLP sensor to block files based on size or content, such as SSN numbers, credit card numbers, or regexp.

File filtering only works in proxy mode policies. The traffic direction cannot be configured because it is implied by the protocol.

The following file types are supported:

File Type Name	Description
7z	Match 7-zip files
arj	Match arj compressed files

File Type Name	Description
cab	Match Windows cab files
lzh	Match lzh compressed files
rar	Match rar archives
tar	Match tar files
zip	Match zip files
bzip	Match bzip files
gzip	Match gzip files
bzip2	Match bzip2 files
xz	Match xz files
bat	Match Windows batch files
msc	Match msc files
uue	Match uue files
mime	Match mime files
base64	Match base64 files
binhex	Match binhex files
bin	Match bin files
elf	Match elf files
exe	Match Windows executable files
hta	Match hta files
html	Match html files
jad	Match jad files
class	Match class files
cod	Match cod files
javascript	Match javascript files
msoffice	Match MS-Office files. For example, doc, xls, ppt, and so on.
msofficex	Match MS-Office XML files. For example, docx, xlsx, pptx, and so on.
fsg	Match fsg files
upx	Match upx files
petite	Match petite files
aspack	Match aspack files

File Type Name	Description
prc	Match prc files
sis	Match sis files
hlp	Match Windows help files
activemime	Match activemime files
jpeg	Match jpeg files
gif	Match gif files
tiff	Match tiff files
png	Match png files
bmp	Match bmp files
unknown	Match unknown files
mpeg	Match mpeg files
mov	Match mov files
mp3	Match mp3 files
wma	Match wma files
wav	Match wav files
pdf	Match pdf files
avi	Match avi files
rm	Match rm files
torrent	Match torrent files
msi	Match Windows Installer msi bzip files
mach-o	Match Mach object files
dmg	Match Apple disk image files
.net	Match .NET files
xar	Match xar archive files
chm	Match Windows compiled HTML help files
iso	Match ISO archive files
crx	Match Chrome extension files

Example

In the following example, one file filter entry is created to block executable (exe) files from being sent or received, and a second entry logs any documents that are sent.

To configure a file-type based email filter in the CLI:

1. Configure an email filter profile:

```
config emailfilter profile
    edit "file-type-filter"
        config file-filter
            set status enable
            set log enable
            set scan-archive-contents enable
            config entries
                edit "filter1"
                    set comment "Block executable files"
                    set protocol smtp imap pop3
                    set action block
                    set encryption any
                    set file-type "exe"
                next
                edit "filter2"
                    set comment "Log document files"
                    set protocol smtp
                    set action log
                    set encryption any
                    set file-type "pdf" "msoffice" "msofficex"
                next
            end
        end
        set spam-filtering enable
    next
end
```

2. Use the profile in a firewall policy:

```
config firewall policy
    edit 1
        set name "client-to-internet"
        set srcintf "port2"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set utm-inspection-mode proxy
        set logtraffic all
        set emailfilter profile "file-type-filter"
        set profile-protocol-options "protocol"
        set ssl-ssh-profile "protocols"
        set nat enable
    next
end
```

To view the file filter logs:

```
# execute log filter category utm-file-filter
# execute log display
```

File filter block action:


```
1: date=2019-01-25 time=15:20:16 logid="0554020511" type="utm" subtype="file-filter"
eventtype="file-filter" level="warning" vd="vdom1" eventtime=1548458416 policyid=1
sessionid=2881 srcip=10.1.100.12 srcport=45974 srcintf="port2" srcintfrole="undefined"
dstip=172.16.200.56 dstport=143 dstintf="port1" dstintfrole="undefined" proto=6
service="IMAP" action="blocked" from="emailuser1@qa.fortinet.com"
to="emailuser2@qa.fortinet.com" recipient="emailuser2" direction="incoming" subject="EXE
file block" size="622346" attachment="yes" filename="putty.exe" filtername="filter1"
filetype="exe"
```

File filter log action:


```
1: date=2020-06-25 time=10:56:04 logid="1900064000" type="utm" subtype="file-filter"
eventtype="file-filter" level="warning" vd="root" eventtime=1593050164413818122 tz="+0900"
policyid=1 sessionid=202 srcip=10.0.0.20 srcport=38984 srcintf="port1" srcintfrole="lan"
dstip=10.0.10.20 dstport=110 dstintf="wan1" dstintfrole="wan" proto=6 service="POP3"
profile="default" direction="incoming" action="blocked" from="guest@client.com"
to="aki@fortitest.jp" recipient="aki@fortitest.jp" subject="Test mail" filtername="test"
filename="test.pdf" filesize=24205 filetype="pdf" msg="File was blocked by file filter."
```

To configure a file-type based email filter in the GUI:


1. Go to *Security Profiles* > *Email Filter*.
2. Click *Create New*, or select an existing profile and click *Edit*.
3. Enable *Enable Spam Detection and Filtering*.
4. Enable *File Filter*.
5. Enable *Log* and *Scan Archived Contents*.
6. In the *File Filter* table, click *Create New*.

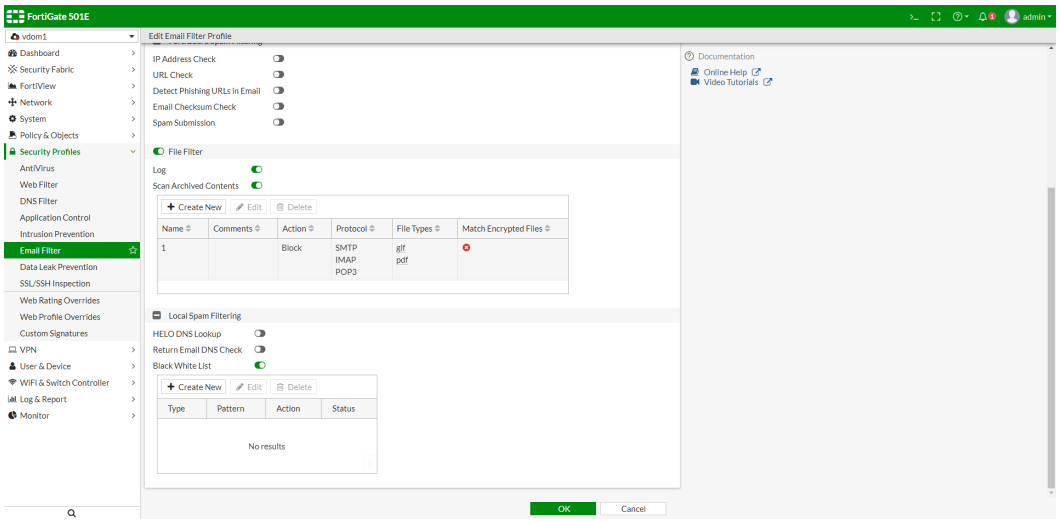


7. Configure the filters:
   a. *filter1* blocks all sent or received executable files.

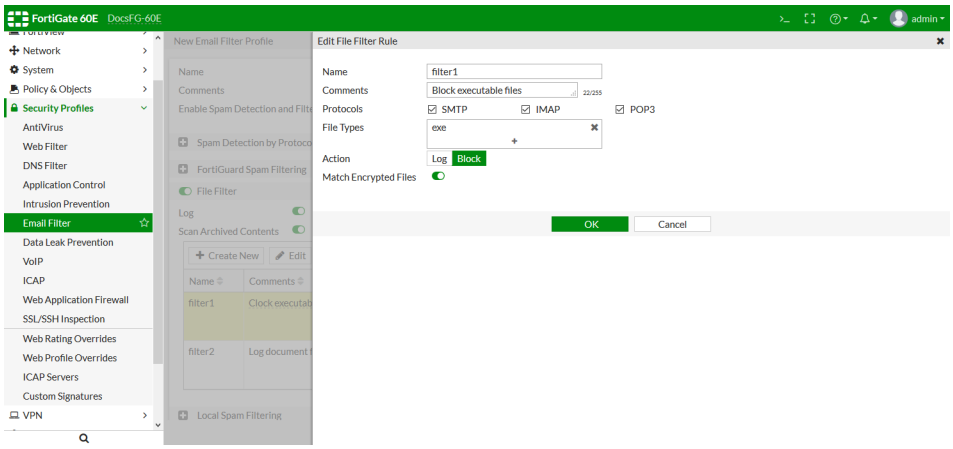

   b. *filter2* logs all sent documents.

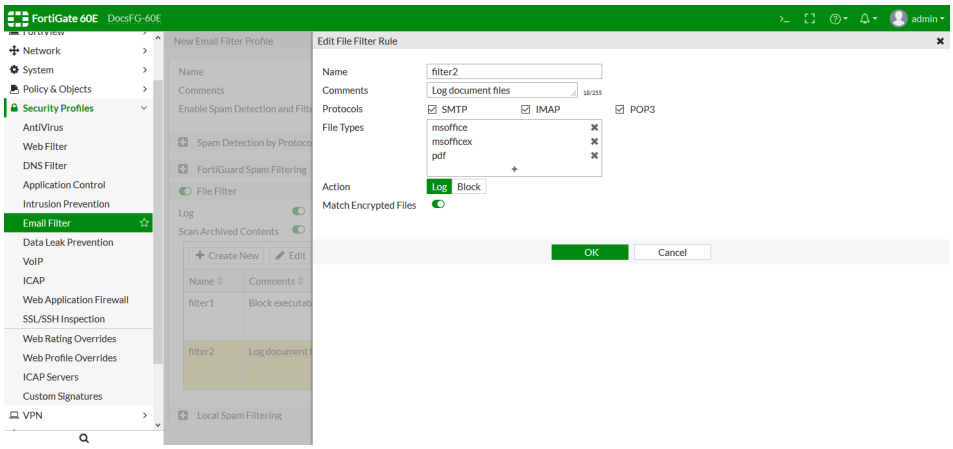

8. Click *OK*.
9. Add the new email filter profile to a firewall policy.
10. To see if there are file filter logs, go to *VDOM > Log & Report > Forward Traffic*. Select an entry and view the *Log Details*. The number of file filter logs for that entry is listed in the *Other* category.

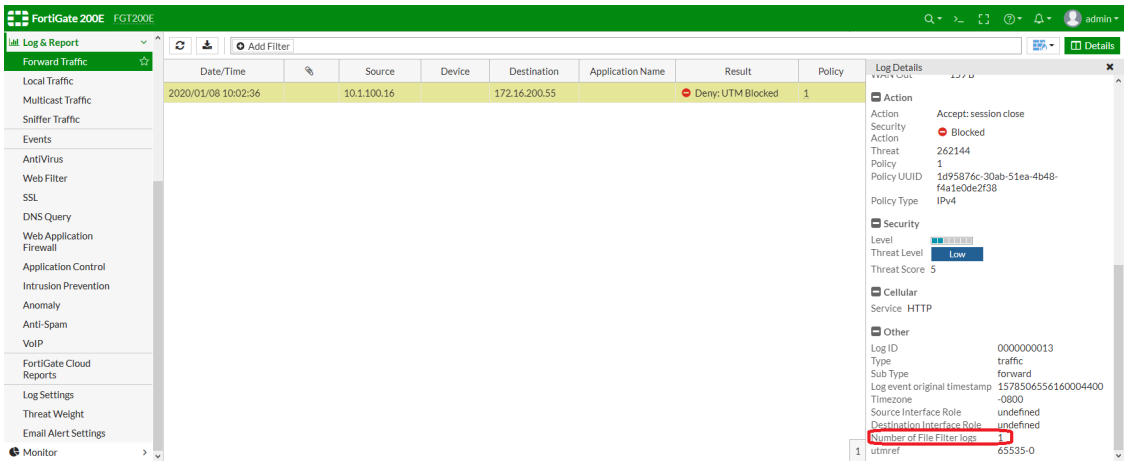



File filter logs can only be viewed in the CLI.

Protocols and actions

In an email filtering profile, there are sections for SMTP, POP3, and IMAP protocols. In each section, you can set an action to either discard, tag, or pass the log for that protocol.

Protocol	Available action
SMTP	**Pass**: Allow spam email to pass through.
	Tag: Tag spam email with configured text in the subject or header.
	Discard: Discards (blocks) spam email.
POP3 & IMAP	**Pass**: Allow spam email to pass through.
	Tag: Tag spam email with configured text in the subject or header.
MAPI:	**Pass**: Allow spam email to pass through.
	Discard: Discards (blocks) spam email.

For example, to tag spam SMTP email, use the following commands:

```
config emailfilter profile
    edit "smtpFilter"
        set spam-filtering enable
        set options <options>
        ...
        config smtp
            set log enable
            set action tag
        end
    next
end
```

MAPI email filtering

MAPI is a proprietary protocol from Microsoft. It uses HTTPS to encapsulate email requests and responses between Microsoft Outlook clients and Microsoft Exchange servers. The configuration of MAPI email filters are only possible through the CLI.

To configure the MAPI email filter in the CLI:

```
config emailfilter profile
    edit "myMapiFilter"
        set spam-filtering enable
        set options spamfsip spamfssubmit spamfsurl spamfsphish
        config mapi
            set log enable
```

```
            set action "discard or pass"
        end
    next
end
```

Configuring webmail filtering

You can configure an email filter to detect and log emails sent via Gmail and Hotmail. These interfaces do not use standard email protocols (SMTP, POP3, or IMAP) and instead use HTTPS. However, you can still configure the email filter to detect emails that pass through the FortiGate.



The FortiGate only detects and logs the emails, it does not discard or tag them.


To configure webmail filtering in the CLI:

```
config emailfilter profile
    edit "myWebMailDetector"
        set spam-filtering enable
        config msn-hotmail
            set log enable
        end
        config gmail
            set log enable
        end
    next
end
```

Data leak prevention

The FortiGate data leak prevention (DLP) system prevents sensitive data from leaving or entering your network. You can customize the default sensor or create your own by adding individual filters based on file type, file size, a regular expression, an advanced rule, or a compound rule. Once configured, you can apply the DLP sensor to a firewall policy. Data matching defined sensitive data patterns is blocked, logged, or allowed when it passes through the FortiGate.

DLP can only be configured in the CLI.

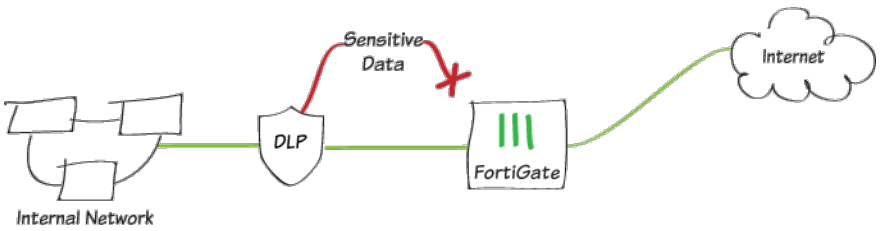

The filters in a DLP sensor can examine traffic for the following:

- Known files using DLP fingerprinting
- Known files using DLP watermarking

- Particular file types
- Particular file names
- Files larger than a specified size
- Data matching a specified regular expression
- Credit card and social security numbers



Filters are ordered, but there is no precedence between the possible actions

DLP is primarily used to stop sensitive data from leaving your network. DLP can also be used to prevent unwanted data from entering your network and to archive some or all of the content that passes through the FortiGate. DLP archiving is configured per filter, which allows a single sensor to archive only the required data. You can configure the DLP archiving protocol in the CLI (see Configure DLP sensors).

There are two forms of DLP archiving:

- Summary only: a summary of all the activity detected by the sensor is recorded. For example, when an email message is detected, the sender, recipient, message subject, and total size are recorded. When a user accesses the web, every URL that they visit is recorded.
- Full: detailed records of all the activity detected by the sensor is recorded. For example, when an email message is detected, the message itself, including any attachments, is recorded. When a user accesses the web, every page that they visit is archived.

The following topics provide information about DLP:

- Basic DLP filter types on page 1005
- DLP fingerprinting on page 1008
- DLP watermarking on page 1012

Basic DLP filter types

Basic filter types can be configured in the CLI and include:

- File type and name
- File size
- Regular expression
- Credit card and SSN

File type and name

A file type filter allows you to block, allow, log, or quarantine based on the file type specified in the file filter list (see File filter on page 927).

To configure file type and name filtering:

1. Create a file pattern to filter files based on the file name patter or file type:

```
config dlp filepattern
    edit <filepatern_entry_integer>
```

```
            set name <string>
            config entries
                edit <file pattern>
                    set filter-type <type | pattern>
                    set file-type <file type>
                next
            end
        next
    end
```

For example, to filter for GIFs and PDFs:

```
    config dlp filepattern
        edit 11
            set name "sample_config"
            config entries
                edit "*.gif"
                    set filter-type pattern
                next
                edit "pdf"
                    set filter-type type
                    set file-type pdf
                next
            end
        next
    end
```

2. Attach the file pattern to a DLP sensor, and specify the protocols and actions:

```
    config dlp sensor
       edit <string>
          config filter
             edit <integer>
                set name <string>
                set proto <smtp | pop3 | imap | http-get | http-post | ftp | nntp |
mapi>
                set filter-by file-type
                set file-type 11    <-- Previously configured filepattern
                set action <allow | log-only| block | quarantine-ip>
             next
          end
       next
    end
```

File size

A file size filter checks for files that exceed the specific size, and performs the DLP sensor's configured action on them.

To configure file size filtering:

```
config dlp sensor
   edit <string>
      config filter
         edit <integer>
            set name <string>
            set proto <smtp | pop3 | imap | http-get | http-post | ftp | nntp | mapi>
```

```
            set filter-by file-size  <-- Match any file over with a size over the
    threshold
            set file-type 11   <-- Previously configured filepattern
            set action <allow | log-only| block | quarantine-ip>
         next
      end
   next
    end
```

Regular expression

A regular expression filter is used to filter files or messages based on the configured regular expression pattern.

To configure regular expression filtering:

```
    config dlp sensor
       edit <string>
          config filter
             edit <integer>
                set name <string>
                set type <file | message>   <-- Check contents of a file or of messages, web
    pages, etc.
                set proto <smtp | pop3 | imap | http-get | http-post | ftp | nntp | mapi>
                set filter-by regexp   <-- Use a regular expression to match content
                set regexp <regexp>   <-- Input a regular expression pattern
                set action <allow | log-only| block | quarantine-ip>
             next
          end
       next
    end
```

Credit card and SSN

The credit card sensor can match the credit card number formats used by American Express, Mastercard, and Visa. It can be used to filter files or messages.

The SSN sensor can be used to filter files or messages for Social Security Numbers.

To configure credit card or SSN filtering:

```
config dlp sensor
   edit <string>
      config filter
         edit <integer>
            set name <string>
            set type <file | message>  <-- Check contents of a file, or of messages, web
pages, etc.
            set proto <smtp | pop3 | imap | http-get | http-post | ftp | nntp | mapi>
            set filter-by < credit-card | ssn >   <-- Match credit cards or social security
numbers
            set action <allow | log-only| block | quarantine-ip>
         next
      end
```

```
    next
end
```

DLP fingerprinting

DLP fingerprinting can be used to detect sensitive data. The file that the DLP sensor will filter for is uploaded and the FortiGate generates and stores a checksum fingerprint. The FortiGate unit generates a fingerprint for all of the files that are detected in network traffic, and compares all of the checksums stored in its database. If a match is found, the configured action is taken.

Any type of file can be detected by DLP fingerprinting, and fingerprints can be saved for each revision of a file as it is updated.

To use fingerprinting:

- Select the files to be fingerprinted by targeting a document source.
- Add fingerprinting filters to DLP sensors.
- Add the sensors to firewall policies that accept traffic that the fingerprinting will be applied on.



The document fingerprint feature requires a FortiGate device that has internal storage.

To configure a DLP fingerprint document:

```
config dlp fp-doc-source
    edit <name_str>
        set server-type smb
        set server <string>
        set period {none | daily | weekly | monthly}
        set vdom {mgmt | current}
        set scan-subdirectories {enable | disable}
        set remove-deleted {enable | disable}
        set keep-modified {enable | disable}
        set username <string>
        set password <password>
        set file-path <string>
        set file-pattern <string>
        set sensitivity <Critical | Private | Warning>
        set tod-hour <integer>
        set tod-min <integer>
        set weekday {sunday | monday | tuesday | wednesday | thursday | friday |
saturday}
        set date <integer>
    next
end
```

Command	Description
server-type smb	The protocol used to communicate with document server. Only Samba (SMB) servers are supported.

Command	Description
server <string>	IPv4 or IPv6 address of the server.
period {none | daily | weekly | monthly}	The frequency that the FortiGate checks the server for new or changed files.
vdom {mgmt | current}	The VDOM that can communicate with the file server.
scan-subdirectories {enable | disable}	Enable/disable scanning subdirectories to find files.
remove-deleted {enable | disable}	Enable/disable keeping the fingerprint database up to date when a file is deleted from the server.
keep-modified {enable | disable}	Enable/disable keeping the old fingerprint and adding a new one when a file is changed on the server.
username <string>	The user name required to log into the file server.
password <password>	The password required to log into the file server.
file-path <string>	The path on the server to the fingerprint files.
file-pattern <string>	Files matching this pattern on the server are fingerprinted.
sensitivity <Critical | Private | Warning>	The sensitivity or threat level for matches with this fingerprint database.
tod-hour <integer>	Set the hour of the day. This option is only available when `period` is not `none`.
tod-min <integer>	Set the minute of the hour. This option is only available when `period` is not `none`.
weekday {sunday | monday | tuesday | wednesday | thursday | friday | saturday}	Set the day of the week. This option is only available when `period` is `weekly`.
date <integer>	Set the day of the month. This option is only available when `period` is `monthly`.

To configure a DLP fingerprint sensor:

```
config dlp sensor
    edit <sensor name>
        config filter
            edit <id number of filter>
                set proto {smtp | pop3 | imap http-get | http-post | ftp | nntp | mapi}
                set filter-by fingerprint
                set sensitivity {Critical | Private | Warning}
                set match-percentage <integer>
                set action {allow | log-only | block | ban | quarantine-ip}
            next
        end
    next
end
```

Command	Description
proto {smtp | pop3 | imap http-get | http-post | ftp | nntp | mapi}	The protocol to inspect.
filter-by fingerprint	Match against a fingerprint sensitivity.
sensitivity {Critical | Private | Warning}	Select a DLP file pattern sensitivity to match.
match-percentage <integer>	The percentage of the checksum required to match before the sensor is triggered.
action {allow | log-only | block | ban | quarantine-ip}	The action to take with content that this DLP sensor matches.

View the DLP fingerprint database on the FortiGate

The CLI debug command `diagnose test application dlpfingerprint` can be used to display the fingerprint information that is on the FortiGate.

```
Fingerprint Daemon Test Usage;
-------------------------------------
  1 : This menu
  2 : Dump database
  3 : Dump all files
  5 : Dump all chunk
  6 : Refresh all doc sources in all VDOMs
  7 : Show the db file size and the limit
  9 : Display stats
 10 : Clear stats
 99 : Restart this daemon
```

For example, option 3 will dump all fingerprinted files:

```
DLP_WANOPT-CLT (global) # diagnose test application dlpfingerprint 3
DLPFP diag_test_handler called
File DB:
---------------------------------------
id, filename,                                vdom, archive, deleted, scanTime,   docSourceSrvr,
sensitivity, chunkCnt, reviseCnt,
1,  /fingerprint/upload/1.txt,               vdom1,  0,      0,      1494868196,   1,      2,
1,    0,
2,  /fingerprint/upload/30percentage.xls,    vdom1,  0,      0,      1356118250,   1,      2,
13,      0,
3,  /fingerprint/upload/50.pdf,              vdom1,  0,      0,      1356118250,   1,      2,
122,  0,
4,  /fingerprint/upload/50.pdf.tar.gz,       vdom1,  0,      0,      1356118250,   1,      2,
114,     0,
5,  /fingerprint/upload/check-list_AL-SIP_HA.xls,   vdom1,  0,      0,      1356118251,     1,
2,       32,     0,
6,  /fingerprint/upload/clean.zip,           vdom1,  0,      0,      1356118251,   1,      2,
1,    0,
7,  /fingerprint/upload/compare.doc,         vdom1,  0,      0,      1522097410,   1,      2,
18,      0,
8,  /fingerprint/upload/dlpsensor-watermark.pdf,    vdom1,  0,      0,      1356118250,     1,
2,       11,     0,
9,  /fingerprint/upload/eicar.com,           vdom1,  0,      0,      1356118250,   1,      2,
1,    0,
10, /fingerprint/upload/eicar.zip,           vdom1,  0,      0,      1356118250,   1,      2,
```

```
1,    0,
11, /fingerprint/upload/EMAIL-CONTENT-ARCHIVE.ppt,  vdom1,  0,      0,      1356118250,     1,
2,       11,     0,
12, /fingerprint/upload/encrypt.zip,        vdom1,  0,      0,      1356118250,   1,      2,
77,      0,
13, /fingerprint/upload/extension_7_8_1.crx,        vdom1,  0,      0,      1528751781,     1,
2,       2720,   0,
14, /fingerprint/upload/fingerprint.txt,    vdom1,  0,      0,      1498582679,   1,      2,
37,      0,
15, /fingerprint/upload/fingerprint90.txt,  vdom1,  0,      0,      1498582679,   1,      2,
37,      0,
16, /fingerprint/upload/fo2.pdf,            vdom1,  0,      0,      1450488049,   1,      2,
1,    0,
17, /fingerprint/upload/foo.doc,            vdom1,  0,      0,      1388538131,   1,      2,
9,    0,
18, /fingerprint/upload/fortiauto.pdf,      vdom1,  0,      0,      1356118251,   1,      2,
146,     0,
19, /fingerprint/upload/image.out,          vdom1,  0,      0,      1531802940,   1,      2,
5410, 0,
20, /fingerprint/upload/jon_file.txt,       vdom1,  0,      0,      1536596091,   1,      2,    1,
      0,
21, /fingerprint/upload/machotest,          vdom1,  0,      0,      1528751955,   1,      2,
19,   0,
22, /fingerprint/upload/nntp-server.doc,    vdom1,  0,      0,      1356118250,   1,      2,
17,      0,
23, /fingerprint/upload/notepad++.exe,      vdom1,  0,      0,      1456090734,   1,      2,
1061,    0,
24, /fingerprint/upload/nppIExplorerShell.exe,      vdom1,  0,      0,      1438559930,     1,
2,       5,      0,
25, /fingerprint/upload/NppShell_06.dll,    vdom1,  0,      0,      1456090736,   1,      2,
111,     0,
26, /fingerprint/upload/PowerCollections.chm,       vdom1,  0,      0,      1533336889,     1,
2,       728,    0,
27, /fingerprint/upload/reflector.dmg,      vdom1,  0,      0,      1533336857,   1,      2,
21117,   0,
28, /fingerprint/upload/roxio.iso,          vdom1,  0,      0,      1517531765,   1,      2,
49251,0,
29, /fingerprint/upload/SciLexer.dll,       vdom1,  0,      0,      1456090736,   1,      2,
541,     0,
30, /fingerprint/upload/screen.jpg,         vdom1,  0,      0,      1356118250,   1,      2,
55,   0,
31, /fingerprint/upload/Spec to integrate FASE into FortiOS.doc,    vdom1,  0,    0,
1356118251,    1,      2,      31,     0,
32, /fingerprint/upload/subdirectory1/subdirectory2/subdirectory3/hibun.aea,        vdom1,  0,
0,       1529019743,     1,      2,      1,      0,
33, /fingerprint/upload/test.pdf,           vdom1,  0,      0,      1356118250,   1,      2,
5,    0,
34, /fingerprint/upload/test.tar,           vdom1,  0,      0,      1356118251,   1,      2,
3,    0,
35, /fingerprint/upload/test.tar.gz,        vdom1,  0,      0,      1356118250,   1,      2,    1,
      0,
36, /fingerprint/upload/test1.txt,          vdom1,  0,      0,      1540317547,   1,      2,
1,    0,
37, /fingerprint/upload/thousand-files.zip, vdom1,  0,      0,      1536611774,   1,      2,
241,     0,
38, /fingerprint/upload/Thumbs.db,          vdom1,  0,      0,      1445878135,   1,      2,
3,    0,
39, /fingerprint/upload/widget.pdf,         vdom1,  0,      0,      1356118251,   1,      2,
18,   0,
40, /fingerprint/upload/xx00-xx01.tar,      vdom1,  0,      0,      1356118250,   1,      2,    5,
```

```
      0,
41, /fingerprint/upload/xx02-xx03.tar.gz,   vdom1,  0,      0,      1356118251,   1,      2,    1,
      0,
```

DLP watermarking

Watermarking marks files with a digital pattern to designate them as proprietary to a specific company. A small pattern is added to the file that is recognized by the DLP watermark filter, but is invisible to the end user (except for text files).

FortiExplorer client, or a Linux-based command line tool, can be used to add a watermark to the following file types:

- .txt
- .doc and .docx
- .pdf
- .ppt and .pptx
- .xls and .xlsx

The following information is covered in this section:

- Watermarking a file with FortiExplorer.
- Watermarking a file with the Linux tool.
- Configuring a DLP sensor to detect watermarked files.

FortiExplorer


In this example, a watermark will be added to small text file. The content of the file is:

```
This is to show how DLP watermarking is done using FortiExplorer.
```

FortiExplorer can also be used to watermark an entire directory.


To watermark the text file with FortiExplorer:

1. Open the FortiExplorer client.
2. Select DLP Watermark from the left side bar.

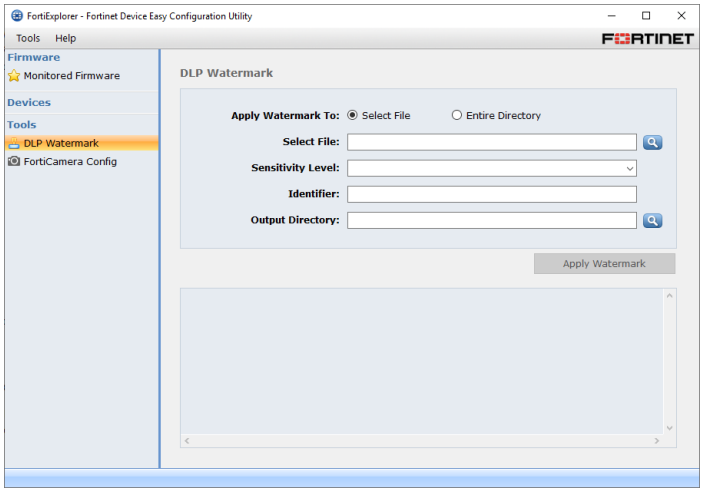

3. Set *Apply Watermark To* to *Select File*.
4. Browse for the file, copy the file's path into the *Select File* field.

5. Set the *Sensitivity Level*. The available options are: *Critical*, *Private*, and *Warning*.
6. Enter a company identifier in the *Identifier* field.
7. Select the *Output Directory* where the watermarked file will be saved.
8. Click *Apply Watermark*. The file is watermarked.

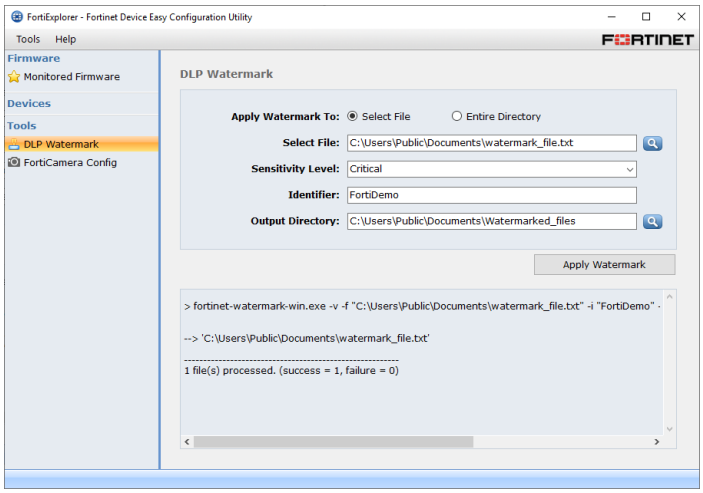

9. The watermarked file content is changed to:

```
This is to show how DLP watermarking is done using FortiExplorer.=-=-=-=-=-=-=-=-=-=-=-
=-=-=-=-=-=-=-=-=identifier=FortiDemo sensitivity=Critical=-=-=-=-=-=-=-=-=-=-=-=-=-=-=-
=-=-=-=-=-=-=-=-=
```



The watermark pattern is visible in text files. For all other supported file types, it is invisible.


Linux-based command line tool

A Linux-based command line tool can be used to watermark files. The tool can be executed is a Linux environment by passing in files or directories of files.

To download the tool:

1. Log in to Fortinet Service and Support. A valid support contract is required.
2. Go to *Download* > *Firmware Images*.

3. Select the *Download* tab, and go to *FortiGate/v5.00/5.0/5.0.0/WATERMARK*.

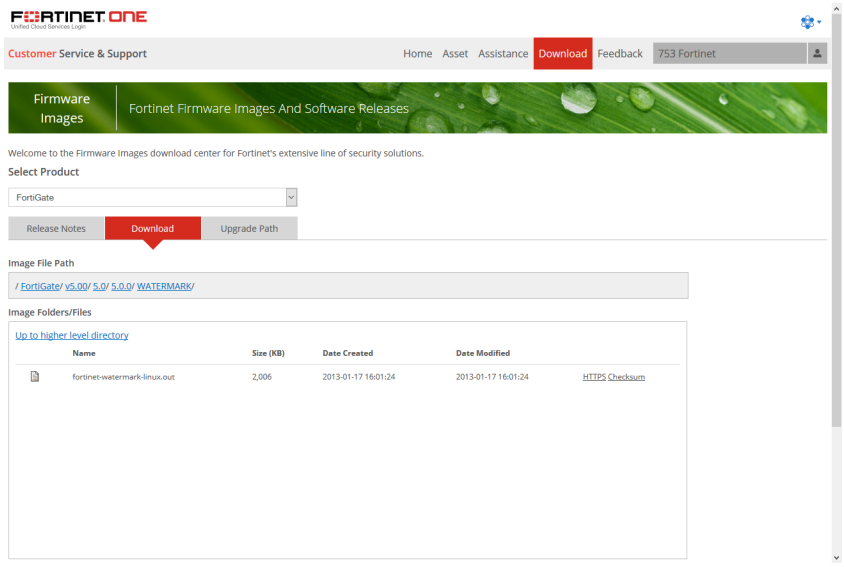

4. Download the *fortinet-watermark-linux.out* file.

To run the tool:

Enter the following to run the tool on a file:

```
watermark_linux_amd64 <options> -f <file name> -i <identifier> -l <sensitivity level>
```

Enter the following to run the tool on a directory:

```
watermark_linux_amd64 <options> -d <directory> -i <identifier> -l <sensitivity level>
```

The following options are available:

`-h`	Print this help.
`-I`	Watermark the file in place (don't make a copy of the file).
`-o`	The output file or directory.
`-e`	Encode <to non-readable>.
`-i`	Add a watermark identifier.
`-l`	Add a watermark sensitivity level.
`-D`	Delete a watermark identifier.
`-L`	Delete a watermark sensitivity level.

DLP watermark sensor

A DLP watermark sensor must be configured to detect watermarked files.

To configure a DLP watermark sensor:

```
config dlp sensor
   edit <sensor name>
      config filter
         edit <id number of filter>
           set proto {smtp | pop3 | imap http-get | http-post | ftp | nntp | mapi} <--
Protocol to inspect
           set filter-by watermark
           set sensitivity {Critical | Private | Warning}
           set company-identifier <string>
           set action {allow | log-only | block | ban | quarantine-ip}
         next
      end
   next
end
```

VoIP solutions

You can configure VoIP profiles to allow SIP and SCCP traffic and to protect your network from SIP- and SCCP-based attacks.

FortiOS includes two preloaded VoIP profiles:

- *default*
- *strict*

You can customize these profiles, or you can create your own and add them to firewall policies that allow VoIP.

The following topics provide information about VoIP profiles:

- General use cases on page 1015
- SIP message inspection and filtering on page 1019
- SIP pinholes on page 1021
- SIP over TLS on page 1022
- Custom SIP RTP port range support on page 1023
- Voice VLAN auto-assignment on page 1024

General use cases

There are three scenarios in which the FortiOS session initiation protocol (SIP) solution is usually deployed:


1. The SIP server is in a private network, protected from the internet by a FortiOS device.
2. The SIP clients are in a private network, protected from the internet by a FortiOS device.

3. The SIP server is in a private network, such as a corporation's internal network or an ISP's network, protected from the Internet by a FortiOS device. The SIP clients are in a remote private network, such as a SOHO network, and behind a NAT device that is not aware of SIP applications.

The following VIP, NAT, and HNT examples show configurations for each of the three common scenarios.

VIP

A FortiGate with SIP Application Layer Gateway (ALG) or SIP Session Helper protects the SIP server from the internet, while SIP phones from the internet need to register to the SIP server and establish calls through it.

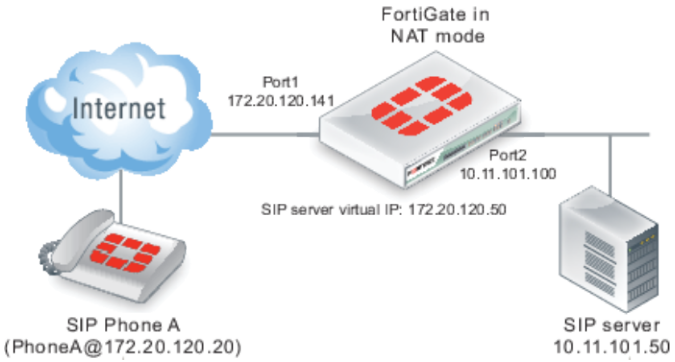

A VIP needs to be configured for the SIP server, and the VIP must be applied in a firewall policy for the phones to send REGISTER messages through the FortiGate from port1 to port2.

Only one firewall policy needs to be configured for all SIP phones on both the internet and private network to register to the SIP server through Port1 and set up SIP calls.

Assuming either SIP ALG or SIP Session Helper is enabled, configure the FortiGate with the following CLI commands:


```
config firewall vip
    edit "VIP_for_SIP_Server"
        set extip 172.20.120.50
        set extintf "port1"
        set mappedip "10.11.101.50"
    next
end
config firewall policy
    edit 1
        set srcintf "port1"
        set dstintf "port2"
        set srcaddr "all"
        set dstaddr "VIP_for_SIP_Server"
        set action accept
        set schedule "always"
        set service "SIP"
    next
end
```



Setting `service` to `SIP` and not `All` in the firewall policy can improve protection by restricting the data traffic passing through the FortiGate to the SIP call traffic only.

NAT

A FortiGate with SIP ALG or SIP Session Helper protects the SIP phones and the internal network from the internet, while SIP phones in the internal network need to register to the SIP server installed on the internet and establish calls through it.

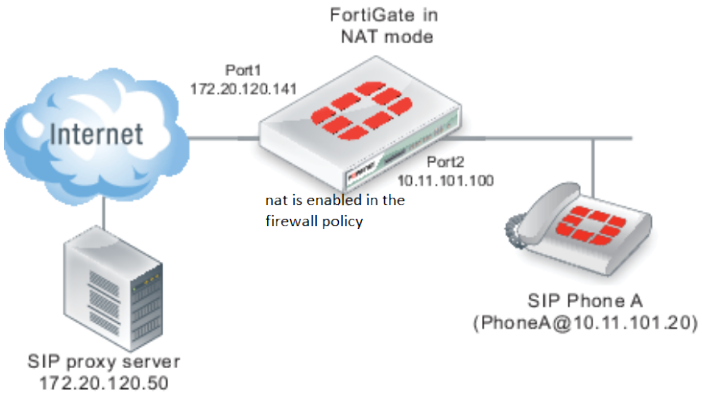

One firewall policy needs to be configured with NAT enabled for SIP phones to send REGISTER messages through the FortiGate from port2 to port1.


Assuming either SIP ALG or SIP Session Helper is enabled, configure the FortiGate with the following CLI commands:

```
config firewall policy
    edit 1
        set srcintf "port2"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "SIP"
        set nat enable
    next
end
```

HNT

A FortiGate with SIP ALG or SIP Session Helper protects the SIP server from the internet, while SIP phones are in remote private networks behind NAT devices that are not aware of the SIP application.

For example, the SIP server is located in an ISP's service cloud that is protected by the FortiGate SIP ALG, and the SIP phones are installed in the home networks of the ISP's customers.

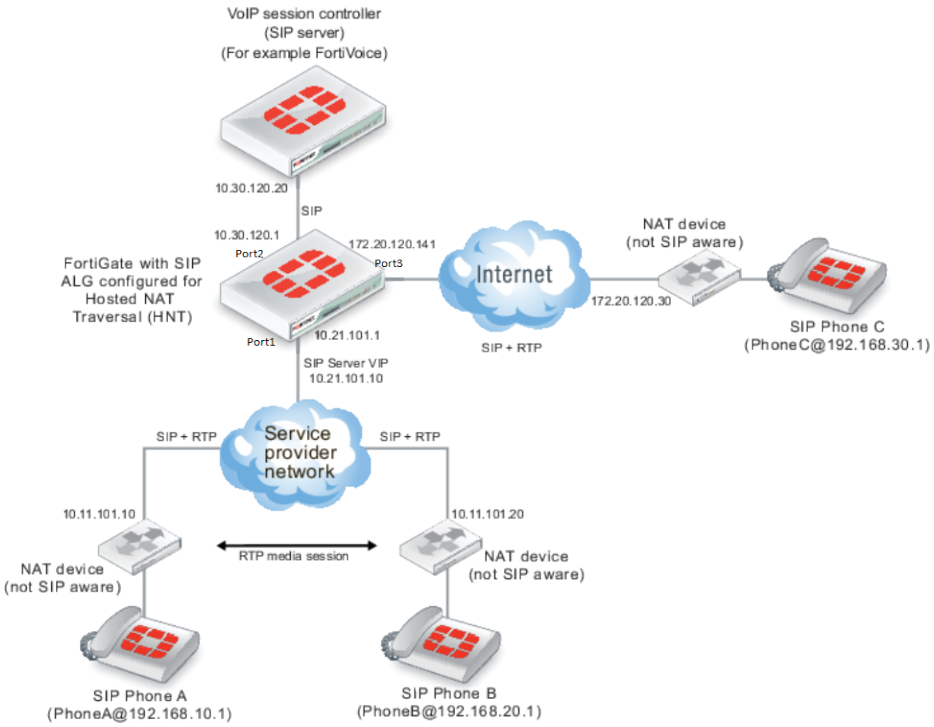

The SIP messages traversing the remote NAT devices might have their IP addresses translated by the NAT device at the network layer, but untranslated at the SIP application layer because those NAT devices are not aware of the SIP applications. This causes problems in a SIP session initiated process. Special configurations for the Hosted NAT Traversal (HNT) are required to resolve this issue.

To configure the FortiGate with HNT support for SIP phones A and B to set up calls with each other:

1. Identify port1 as the external interface:

```
config system interface
    edit "port1"
        set external enable
    next
end
```

2. Configure VIP for the SIP server:

```
config firewall vip
    edit "VIP_for_SIP_Server"
        set extip 10.21.101.10
        set extintf "port1"
        set mappedip "10.30.120.20"
    next
end
```

3. Configure a VoIP profile with HNT enabled:

```
config voip profile
    edit "hnt"
        config sip
            set hosted-nat-traversal enable
            set hnt-restrict-source-ip enable
```

```
        end
    next
end
```



`hosted-nat-traversal` must be enabled.

`hnt-restrict-source-ip` does not have to be enabled, but can be enabled to restrict the RTP packets' source IP to be the same as the SIP packets' source IP.

4. Apply the VoIP profile and VIP in a firewall policy for phone A and B to register and set up SIP calls through the FortiGate and SIP server:

```
config firewall policy
    edit 1
        set srcintf "port1"
        set dstintf "port2"
        set srcaddr "all"
        set dstaddr "VIP_for_SIP_Server"
        set action accept
        set schedule "always"
        set service "SIP"
        set utm-status enable
        set voip-profile "hnt"
        set nat enable
    next
end
```



`nat` must be enabled in the firewall policy.

SIP message inspection and filtering

SIP ALG provides users with security features to inspect and control SIP messages that are transported through FortiOS devices, including:

- Verifying the SIP message syntax.
- Blocking particular types of SIP requests.
- Restricting the rate of particular SIP requests.

These features are configured in the VoIP profile:

```
config voip profile
    edit <voip_profile_name>
        config sip set ...
```

The VoIP profile can then be applied to a firewall policy to process the SIP call traffic.

SIP message syntax inspection

For syntax verification, the following attributes are available for configuration in the VoIP profile to determine what action is taken when a specific syntax error or attack based on invalid syntax is detected. For example, the action can be set to pass or discard it.

```
malformed-request-line
malformed-header-via
malformed-header-from
malformed-header-to
malformed-header-call-id
malformed-header-cseq
malformed-header-rack
malformed-header-rseq
malformed-header-contact
malformed-header-record-route
malformed-header-route
malformed-header-expires
malformed-header-content-type
malformed-header-content-length
malformed-header-max-forwards
malformed-header-allow
malformed-header-p-asserted-identity
malformed-header-sdp-v
malformed-header-sdp-o
malformed-header-sdp-s
malformed-header-sdp-i
malformed-header-sdp-c
malformed-header-sdp-b
malformed-header-sdp-z
malformed-header-sdp-k
malformed-header-sdp-a
malformed-header-sdp-t
malformed-header-sdp-r
malformed-header-sdp-m
```

SIP message blocking

The following options are available in the VoIP profile to block SIP messages:

```
block-long-lines
block-unknown
block-ack
block-bye
block-cancel
block-info
block-invite
block-message
block-notify
block-options
block-prack
block-publish
block-refer
block-register
block-subscribe
block-update
block-geo-red-options
```

SIP message rate limiting

The rate of certain types of SIP requests that are passing through the SIP ALG can be restricted :

```
register-rate
invite-rate
subscribe-rate
message-rate
notify-rate
refer-rate
update-rate
options-rate
ack-rate
prack-rate
info-rate
publish-rate
bye-rate
cancel-rate
```

SIP pinholes

When SIP ALG processes a SIP call, it usually opens pinholes for SIP signaling and RTP/RTCP packets. NAT usually takes place during the process at both the network and SIP application layers. SIP ALG ensures that, with NAT happening, corresponding SIP and RTP/RTCP pinholes are created during the process when it is necessary for call sessions to be established through FortiOS devices.

By default, SIP ALG manages pinholes automatically, but some special configurations can be used to restrict the pinholes if required.

SIP pinhole restriction

By default, the *strict-register* attribute is enabled. When enabled, after a SIP endpoint registers to the SIP server through a firewall policy on the FortiOS device, only the SIP messages sent from the same IP address as the SIP server are allowed to pass through the SIP pinhole that is created in the FortiOS device to reach the SIP endpoints. If the attribute is disabled, SIP messages from any IP addresses can pass through the pinhole created after the registration.

```
config voip profile
    edit "voip-profile-name"
        config sip
            set strict-register [enable|disable]
            ...
        end
    next
end
```

RTP/RTCP pinhole restriction

In a SIP call through SIP ALG, the NATed RTP/RTCP port range is 5117 to 65533 by default. If required, the port range can be restricted.

```
config voip profile
    edit "voip-profile-name"
        config sip
            set nat-port-range <start_port_number>-<end_port_number>
            ...
        end
```

```
        next
    end
```

In a SIP call session, the RTP port number is usually an even number and the RTCP port number is an odd number that is one more than the RTP port number. It is best practice to configure `start_port_number` to an even number, and `end_port_number` to an odd number, for example:

```
config voip profile
    edit "voip-profile-name"
        conf sip
            set nat-port-range 30000-39999
        end
    next
end
```

SIP over TLS

Some SIP phones and servers can communicate using TLS to encrypt the SIP signaling traffic. To allow SIP over TLS calls to pass through the FortiGate, the encrypted signaling traffic must be unencrypted and inspected. The FortiGate SIP ALG intercepts, unencrypts , and inspects the SIP packets, which are then re-encrypted and forwarded to their destination.

The SIP ALG only supports full mode TLS. This means that the SIP traffic between SIP phones and the FortiGate, and between the FortiGate and the SIP server, is always encrypted. The highest TLS version supported by SIP ALG is TLS 1.2.

To enable SIP over TLS support, the SSL mode in the VoIP profile must be set to `full`. The SSL server and client certificates can be provisioned so that the FortiGate can use them to establish connections to SIP phones and servers, respectively.

To configure SIP over TLS:

1. Configure a VoIP profile with SSL enabled:

```
config voip profile
    edit "tls"
        config sip
            set ssl-mode full
            set ssl-client-certificate "ssl_client_cert"
            set ssl-server-certificate "ssl_server_cert"
        end
    next
end
```

The `ssl_server_cert`, `ssl_client_cert`, and key files can be generated using a certification tool, such as OpenSLL, and imported to the local certificate store of the FortiGate from *System* > *Certificates* in the GUI. Existing local certificates in the certificate store can also be used. As always for TLS connections, the certificates used must be verified and trusted at the other end of the connection when required.

For example, the CA certificate of the SIP server's certificate should be imported to the FortiGate as an external CA certification, such that the FortiGate can use it to verify the SIP server's certificate when setting up the TLS connection. The CA certificate configured as the `ssl_server_cert` should be installed as the trusted certificate on the SIP phones. The deployment of the certificates across the network depends on the SIP client and server devices that are used in the system.

2. Apply the profile to the firewall policy:

```
config firewall policy
    edit 1
        set srcintf "port1"
        set dstintf "port2"
        set srcaddr "all"
        set dstaddr "vip_sip_server"
        set action accept
        set schedule "always"
        set service "SIP"
        set utm-status enable
        set voip-profile "tls"
    next
end
```

Custom SIP RTP port range support

The `nat-port-range` variable is used to specify a port range in the VoIP profile to restrict the NAT port range for real-time transport protocol/real-time transport control protocol (RTP/RTCP) packets in a session initiation protocol (SIP) call session that is handled by the SIP application layer gateway (ALG) in a FortiGate device.

When NAT is enabled, or VIP is used in a firewall policy for SIP ALG to handle a SIP call session established through a FortiGate device, the SIP ALG can perform NAT to translate the ports used for the RTP/RTCP packets when they are flowing through the device between the external and internal networks.

You can control the translated port range for RTP/RTCP packets using the CLI:


```
config voip profile
   edit <profile-name>
      config sip
         set nat-port-range <port range>
      end
   next
end
```

Command	Description
nat-port-range <port range>	The NAT port range (minimum port number = 5117, default = 5117-65535).

Example

In this example, Phone1 is in subnet_1, and the SIP server and phone are in subnet_2. All SIP signaling messages and RTP/RTCP packets go through the SIP Server. The RTP/RTCP ports on Phone1 are configured as 17078/17079.

The FortiGate administrator wants to use NAT for the port 17078/17079 to 30000/30001. As a result, all RTP/RTCP packets going out of port2 have source ports of 30000/30001, and all RTP/RTCP packets going into port2 also have destination ports of 30000/30001, which is specified in `nat-port-range`.

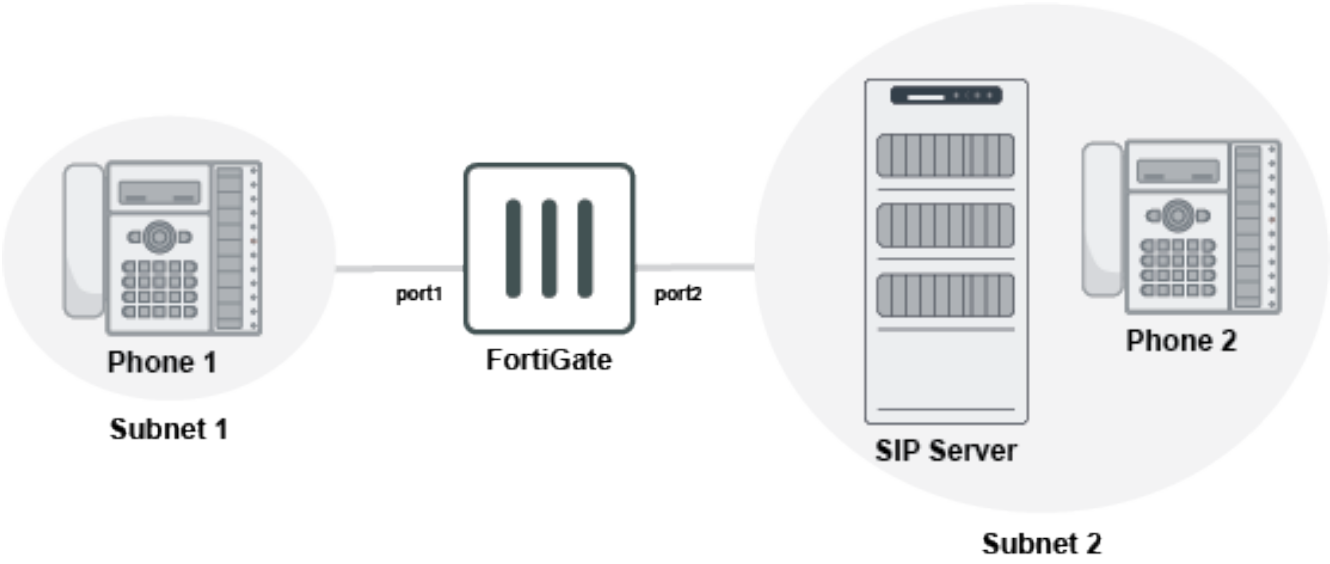

To configure the custom port range:

```
config voip profile
   edit "natPortRange"
        config sip
           set nat-port-range 30000-30001
        end
   next
end
configure firewall policy
   edit 1
        set srcintf port1
        set  dstintf port2
        set srcaddr all
        set dstaddr all
        set service SIP
        set action accept
        set schedule always
        set voip-profile natPortRange
        set nat enable
end
```

If phone1 and phone2 are registered to the SIP server, and they establish a call session between them through the FortiGate and the SIP server, then the RTP/RTCP ports 17078/17079 of phone1 will be translated to ports 30000/30001 at the FortiGate unit based on the NAT port range setting. That is, the RTP/RTCP packets egressing port2 of the Fortigate will have source ports of 30000/30001, and the RTP/RTCP packets ingressing port2 will have destination ports of 30000/30001.

Voice VLAN auto-assignment

You can leverage LLDP-MED to assign voice traffic to the desired voice VLAN. After detection and setup, the IP phone on the network is segmented to its own VLAN for policy, prioritization, and reporting. The LLDP reception capabilities in FortiOS have been extended to support LLDP-MED assignment for voice, voice signaling, guest, guest voice signaling, softphone, video conferencing, streaming video, and video signaling.

You can configure this feature using the following steps:

1. Setting up the VLAN for the voice device
2. Setting up the DHCP server for the voice VLAN
3. Setting up the LLDP network policy
4. Enabling LLDP on the physical interface that the VLAN belongs to
5. Applying the LLDP network policy on the physical interface
6. Confirming that the VLAN was assigned

To set up the VLAN for the voice device:

```
config system interface
    edit "vlan_100"
        set vdom "root"
        set ip 192.168.1.99 255.255.255.0
        set alias "voice_vlan"
        set device-identification enable
        set role lan
        set snmp-index 25
        set interface "port10"
        set vlanid 100
    next
end
```

To set up the DHCP server for the voice VLAN:

```
config system dhcp server
    edit 1
        set dns-service default
        set default-gateway 192.168.1.99
        set netmask 255.255.255.0
        set interface "vlan_100"
        config ip-range
            edit 1
                set start-ip 192.168.1.110
                set end-ip 192.168.1.210
            next
        end
    next
end
```

To set up the LLDP network policy:

```
config system lldp network-policy
    edit "1"
        config voice
            set status enable
            set tag dot1q
            set vlan 100
        end
    next
end
```

To enable LLDP on the physical interface that the VLAN belongs to:

```
config system interface
    edit "port10"
        set vdom "root"
        set type physical
        set lldp-reception enable
        set lldp-transmission enable
        set snmp-index 14
    next
end
```

To apply the LLDP network policy on the physical interface:

```
config system interface
    edit "port10"
        set lldp-network-policy "1"
    next
end
```

To confirm that the VLAN was assigned as expected:

1. Connect an IP phone to the network.
2. Check the IP address on the phone.
   The IP address should belong to the voice VLAN.
3. Sniff on the FortiGate incoming interface to see if traffic from the IP phone has the desired VLAN tag.
   In the example commands above, the voice VLAN was configured as VLAN 100. Therefore, voice traffic from the IP phone should be in VLAN 100.

ICAP

Internet Content Adaptation Protocol (ICAP) is an application layer protocol that is used to offload tasks from the firewall to separate, specialized servers. For more information see RFC 3507.

ICAP profiles can only be applied to policies that use proxy-based inspection. If you enable ICAP in a policy, HTTP and HTTPS (if HTTPS inspection is supported) traffic that is intercepted by the policy is transferred to the ICAP server specified by the selected ICAP profile. Responses from the ICAP server are returned to the FortiGate, and then forwarded to their destination.



By default, *ICAP* is not visible in the GUI. See Feature visibility on page 716 for instructions on making it visible.

To configure ICAP:


1. Set up your ICAP server.
2. On the FortiGate, add an ICAP server.
3. Create an ICAP profile.
4. Use the ICAP profile in a firewall policy that covers the traffic that needs to be offloaded to the ICAP server.

ICAP configuration example

In this example, the ICAP server performs proprietary content filtering on HTTP and HTTPS requests. If the content filter is unable to process a request, then the request is blocked. Streaming media is not considered by the filter, so it is allowed through and is not processed.

To add the ICAP server to the FortiGate in the GUI:

1. Go to *Security Profiles* > *ICAP Servers*.
2. Click *Create New*.
3. In the *Name* field, enter a name for the ICAP server, such as *content-filtration-server4*.
4. Select the *IP Version*.
5. In the *IP Address* field, enter the IP address of the ICAP server.
6. In the *Port* field, enter a new port number if required. The default value is *1344*.

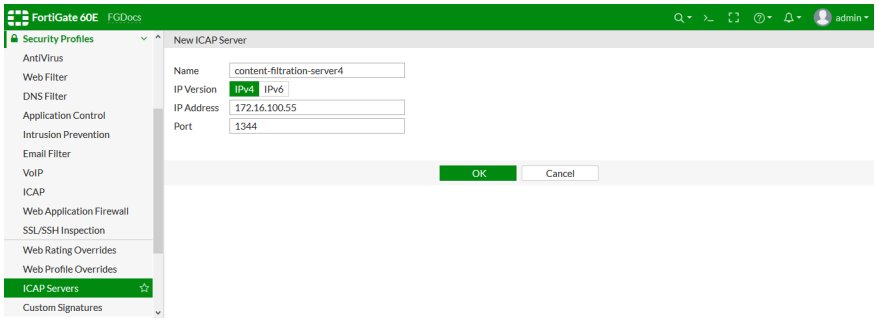


7. Click *OK*.

The maximum number of concurrent connections to ICAP server can be configured in the CLI. The default setting is 100 connections.

To create an ICAP profile in the GUI:

1. Go to *Security Profiles* > *ICAP*.
2. Click *Create New*.
3. In the *Name* field, enter a name for the ICAP profile, such as *Prop-Content-Filtration*.
4. Enable *Request Processing* then set the following:
   - *Server* - Select the ICAP server. In this example, select *content-filtration-server4*
   - *Path* - The path to the processing component on the server, such as */proprietary_code/content-filter/*.
   - *On Failure* - Select *Error* to block the request. If the message cannot be processed, it will not be blocked.
5. Enable *Response Processing* then set the following:
   - *Server* - Select the ICAP server: *content-filtration-server4*
   - *Path* - The path to the processing component on the server, such as */proprietary_code/content-filter/*.
   - *On Failure* - Select *Error* to block the request. If the message cannot be processed, it will not be blocked.


6. Enable *Streaming Media Bypass* to not offload streaming media to the ICAP server.

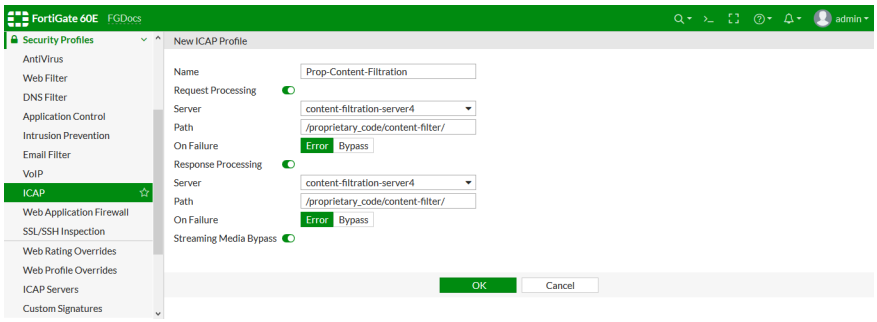

7. Click *OK*.

To add the ICAP profile to a policy in the GUI:

1. Go to *Policy & Objects* > *IPv4 Policy*.
2. Click *Create New*.
3. Configure the policy as needed to apply to the required traffic.
4. Set *Inspection Mode* to *Proxy-based*.
5. Under *Security Profiles*, enable *ICAP* and select the ICAP server.

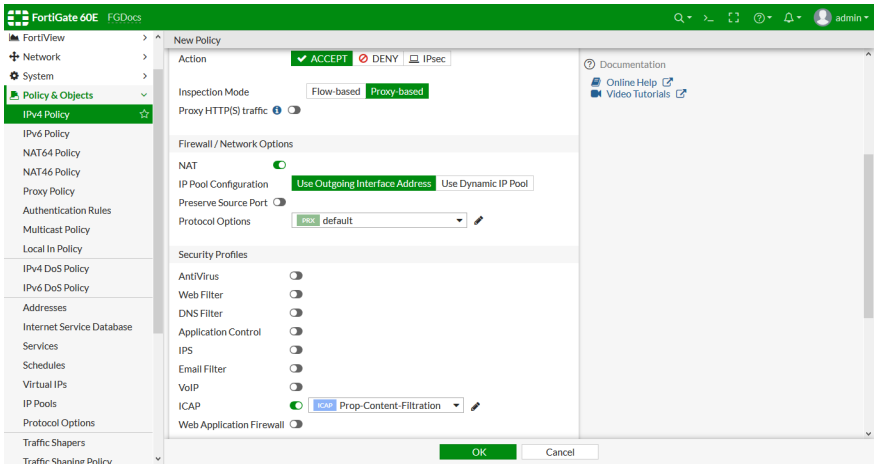

6. Click *OK*.

To configure the ICAP setup in the CLI:

1. Add the ICAP server:

```
config icap server
    edit "content-filtration-server4"
        set ip-version 4
        set ip-address 172.16.100.55
        set port 1344
        set max-connections 200
    next
end
```

2. Create the ICAP profile:

```
config icap profile
    edit "Prop-Content-Filtration"
        set request enable
        set response enable
        set streaming-content-bypass enable
        set request-server "content-filtration-server4"
        set response-server "content-filtration-server4"
        set request-failure error
        set response-failure error
        set request-path "/proprietary_code/content-filter/"
        set response-path "/proprietary_code/content-filter/"
        set methods delete get head options post put trace other
    next
end
```

3. Add the ICAP profile to a policy:

```
config firewall policy
    edit 5
        set name "icap_filter3"
        set srcintf "virtual-wan-link"
        set dstintf "virtual-wan-link"
        set srcaddr "FABRIC_DEVICE"
        set dstaddr "FABRIC_DEVICE"
        set dstaddr-negate enable
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set inspection-mode proxy
        set ssl-ssh-profile "certificate-inspection"
        set icap-profile "Prop-Content-Filtration"
        set logtraffic disable
        set fsso disable
        set nat enable
    next
end
```

Web application firewall

Web application firewall (WAF) profiles can detect and block known web application attacks. You can configure WAF profiles to use signatures and constraints to examine web traffic. You can also enforce an HTTP method policy, which controls the HTTP method that matches the specified pattern.


You can customize the default profile, or you can create your own profile to apply access rules and HTTP protocol constraints to traffic. You can apply WAF profiles to firewall policies when the inspection mode is set to proxy-based.

The following topic provides information about WAF profiles:

- Protecting a server running web applications on page 1030

Protecting a server running web applications

You can use a web application firewall profile to protect a server that is running a web application, such as webmail.

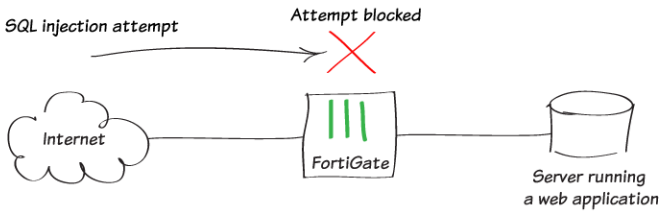


Web application firewall profiles are created with a variety of options called signatures and constraints. Once these options are enabled, the action can be set to allow, monitor, or block. The severity can be set to high, medium, or low.

In the following example, the default profile will be targeted to block SQL injection attempts and generic attacks.


The web application firewall feature is only available when the policy inspection mode is proxy-based.

To protect a server running web applications:

1. Enable the web application firewall:
   a. Go to *System* > *Feature Visibility*.
   b. Under *Security Features*, enable *Web Application Firewall*.
   c. Under *Additional Features*, click *Show More* and enable *Multiple Security Profiles*.
   d. Click *Apply*.

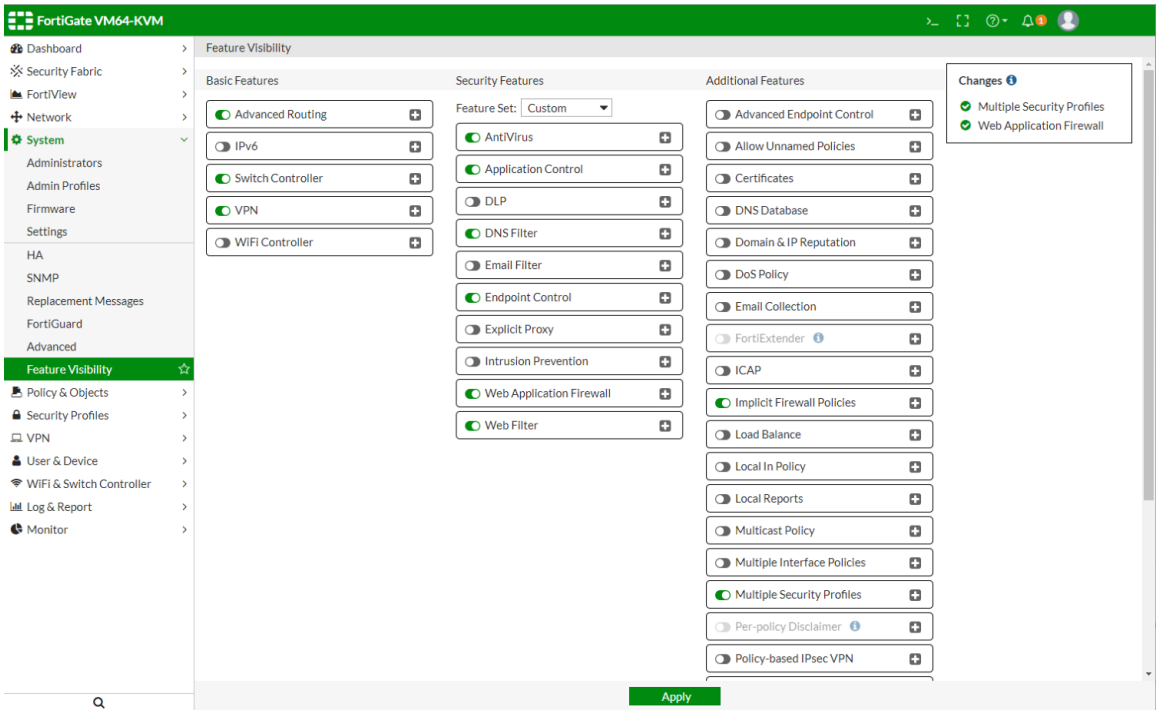


2. Edit the default web application firewall profile:
   Trojans and *Known Exploits* are blocked by default.
   a. Go to *Security Profiles* > *Web Application Firewall*.
   b. Edit the *default* profile signature:
      i. Enable *SQL Injection (Extended)* and *Generic Attacks (Extended)*.
      ii. For both signatures, set the *Action* to *Block* and the *Severity* to *High*.
      iii. Click *Apply*.

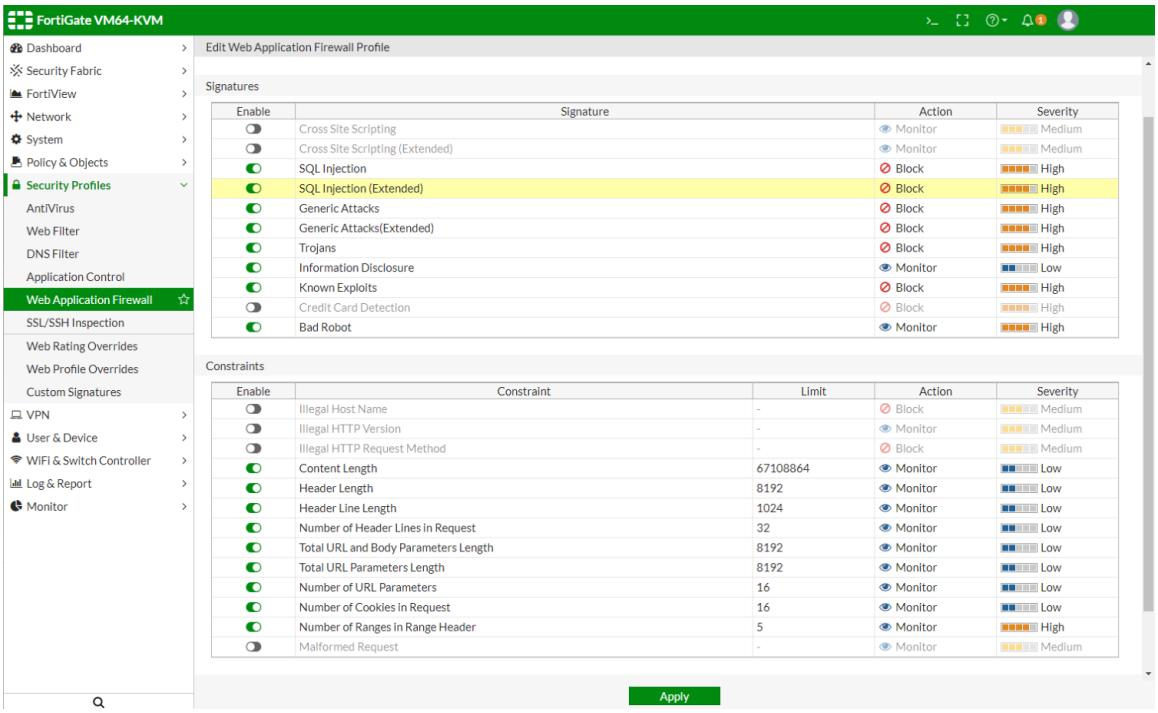

3. Apply the profile to a security policy:
   a. Go to *Policy & Objects* > *IPv4 Policy*.
   b. Edit the policy that allows access to the web server:
      i. Under *Firewall / Network Options*, select the appropriate *Protocol Option*.
      ii. Under *Security Profiles*, enable *Web Application Firewall* and set it to use the *default* profile.
      iii. Set the *SSL Inspection* to use the *deep-inspection* profile.

iv. Click *OK*.

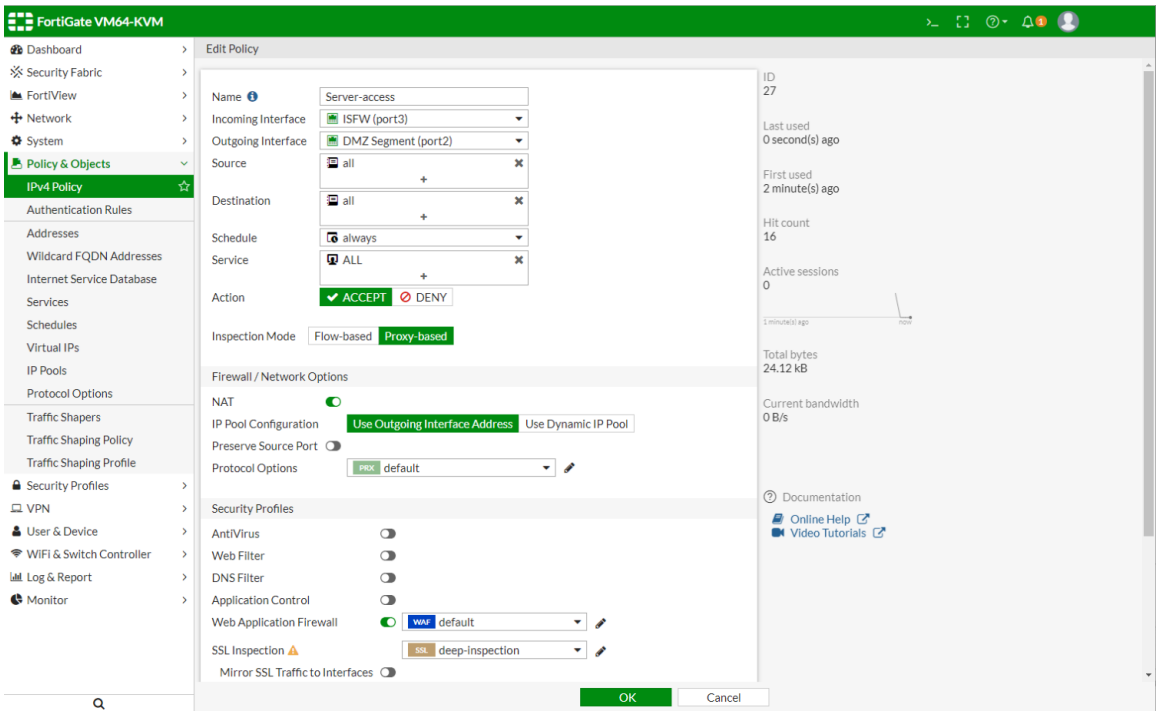

4. Verify that the web application firewall blocks traffic:
   a. Use the following URL to simulate an attack on your web server and substitute the IP address of your server:
   `http://<server IP>/index.php?username=1'%20or%20'1'%20=%20'1&password=1'%20or%20'1'%20=%20'1`
   An error message appears, stating that the web application firewall has blocked the traffic:




Offloading to a FortiWeb

If you have a FortiWeb, you may be able to offload the functions of the web application control to your FortiWeb. To find out if this option is available, refer to the FortiOS or FortiWeb Release Notes for information about device compatibility.

To offload to a FortiWeb:

1. Go to *Security Fabric* > *Settings*.
2. Enable *Fabric Devices*.
3. Enter the following for the device:
   a. Name (`FortiWeb`)
   b. FortiWeb IP address

c. HTTPS service port

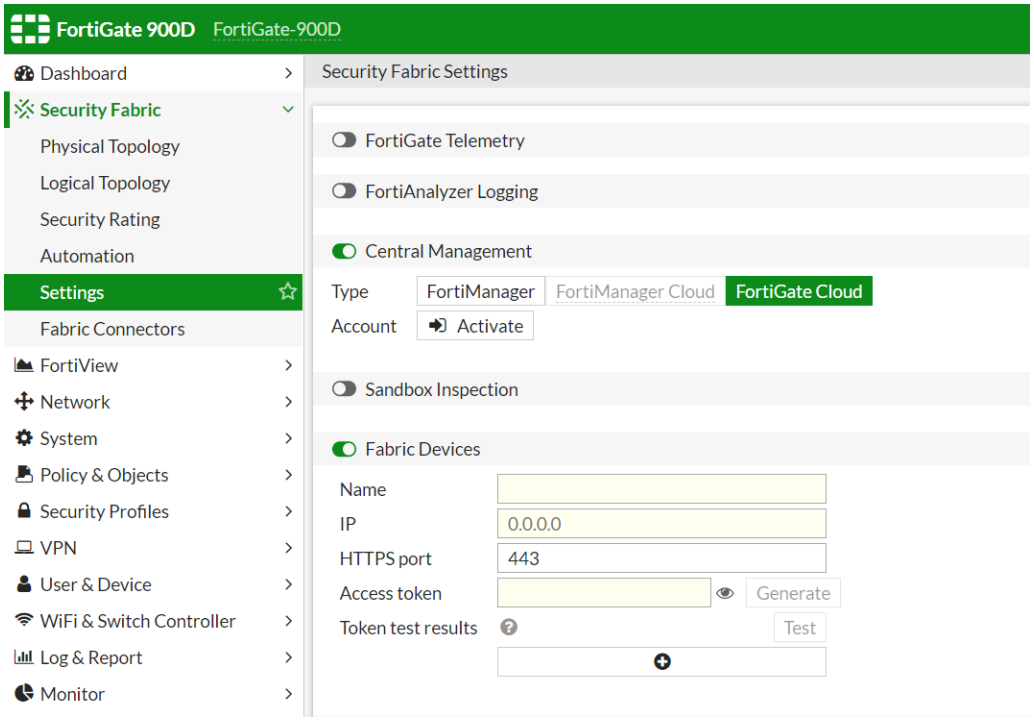

4. Click *Generate*.
5. Enter your credentials to generate the access token.
6. Click *OK*.

Inspection modes

This section contains the following topics:

- About inspection modes on page 1033
- SSL Inspection on page 1040
- SSH traffic file scanning on page 1047

About inspection modes

FortiOS supports flow-based and proxy-based inspection in firewall policies. You can select the inspection mode when configuring a policy.

Flow-based inspection takes a snapshot of content packets and uses pattern matching to identify security threats in the content.

Proxy-based inspection reconstructs content that passes through the FortiGate and inspects the content for security threats.

Each inspection mode plays a role in processing traffic en route to its destination. While both modes offer significant security, proxy-based provides more feature configuration options, while flow-based is designed to optimize performance.

This following topics provide information about inspection modes for various security profile features:

- Flow mode inspection (default mode) on page 1034
- Proxy mode inspection on page 1035
- Inspection mode feature comparison on page 1036
- Inspection mode differences for antivirus on page 1037
- Inspection mode differences for data leak prevention on page 1038
- Inspection mode differences for email filter on page 1039
- Inspection mode differences for web filter on page 1040

Flow mode inspection (default mode)

When a firewall policy's inspection mode is set to *flow*, traffic flowing through the policy will not be buffered by the FortiGate. Unlike proxy mode, the content payload passing through the policy will be inspected on a packet by packet basis with the very last packet held by the FortiGate until the scan returns a verdict. If a violation is detected in the traffic, a reset packet is issued to the receiver, which terminates the connection, and prevents the payload from being sent successfully.


Because of this method, flow mode inspection cannot be as thorough as proxy mode inspection and will have some feature limitations. For example, flow mode inspection determines a file's size by identifying the file size information in the protocol exchange. If a file's size is not present in the protocol exchange, the file's size cannot be identified. The flow-based policy will automatically block or pass the file (based on the configuration) despite the file meeting the file size requirements.

The objective of flow-based policy is to optimize performance and increase throughput. Although it is not as thorough as a proxy-based policy, flow mode inspection is still very reliable.

Use case

It is recommended that flow inspection is applied to policies that prioritize traffic throughput, such as allowing connections to be made towards a streaming or file server.

You have an application server which accepts connections from users for the daily quiz show app, HQ. Each HQ session sees 500,000+ participants, and speed is very important because participants have less than 10 seconds to answer the quiz show questions.

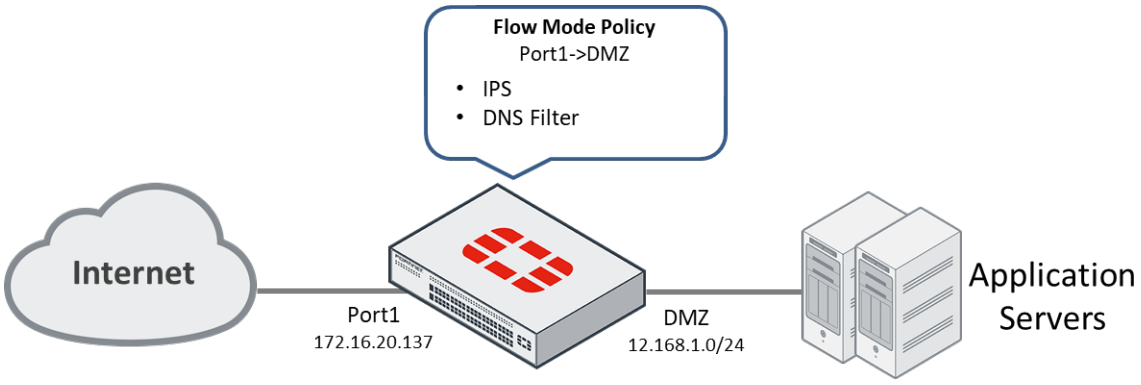

In this scenario, a flow inspection policy is recommended to prioritize throughput. The success of the application depends on providing reliable service for large numbers of concurrent users. We will apply an IPS sensor to this policy to protect the server from external DOS attacks.

Proxy mode inspection

When a firewall policy's inspection mode is set to *proxy*, traffic flowing through the policy will be buffered by the FortiGate for inspection. This means that the packets for a file, email message, or web page will be held by the FortiGate until the entire payload is inspected for violations (virus, spam, or malicious web links). After FortiOS has finished the inspection, the payload is either released to the destination (if traffic is clean) or dropped and replaced with a replacement message (if traffic contains violations).

To optimize inspection, the policy can be configured to block or ignore files or messages that exceed a certain size. To prevent the receiving end user from timing out, client comforting can be applied, which allows small portions of the payload to be sent while it is undergoing inspection.

Proxy mode provides the most thorough inspection of the traffic; however, its thoroughness sacrifices performance, making its throughput slower than that of a flow-mode policy. Under normal traffic circumstances, the throughput difference between a proxy-based and flow-based policy is not significant.


Use case

Because proxy mode provides the most thorough inspection, it is recommended that you apply proxy inspection to policies where preventing a data leak or malicious content is critical.

The following scenarios demonstrate common use cases for proxy inspection.

Scenario 1


Your organization deals with sensitive data on a regular basis and a data leak would significantly harm your business. At the same time, you wish to protect your employees from malicious content, such as viruses and phishing emails, which could be used to gain access to your network and the sensitive data on your systems.

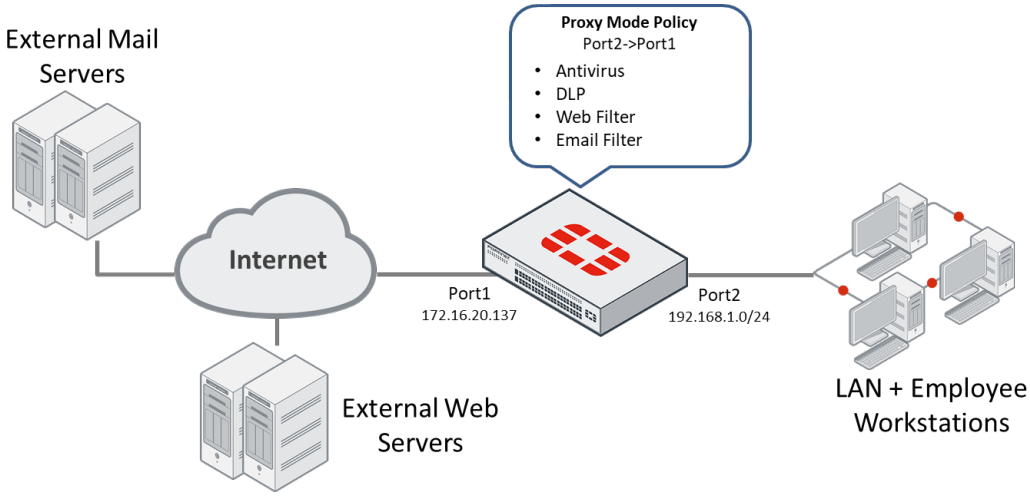

In this scenario, a proxy inspection policy is recommended to prioritize network security. We want traffic inspection to be as thorough as possible to avoid any data leaks from exiting the LAN and any malicious content from entering it. On this policy, we will apply the virus filter, DLP filter, Web Filter, and email filter all operating in proxy mode.

Scenario 2

You have a corporate mail server in your domain, which is used by your employees for everyday business activities. You want to protect your employees from phishing emails and viruses. At the same time, you want to also protect your web servers from external attacks.

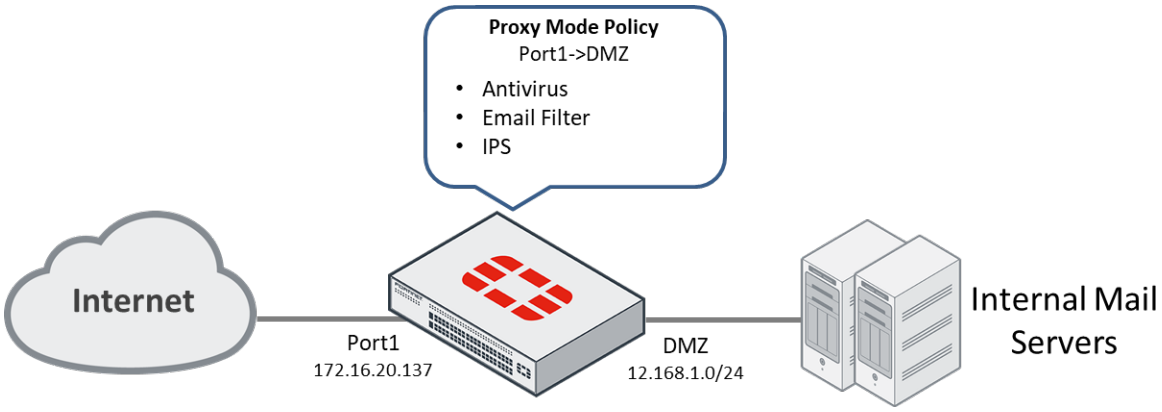

In this scenario, a proxy inspection policy is recommended to prioritize the safety of employee emails. Applying the antivirus and email filter in this mode allows us to most reliably filter out any malware and spam emails received by the mail servers via SMTP or MAPI. The IPS sensor can be used to prevent DOS attacks on the mail servers.

Inspection mode feature comparison

The following table shows which UTM profile can be configured on a flow mode or proxy mode inspection policy. Some UTM profiles are hidden in the GUI, but can be configured using the CLI.

	Flow Mode Inspection Policy		Proxy Mode Inspection Policy	
UTM Profile	**GUI**	**CLI**	**GUI**	**CLI**
Antivirus	Yes (2)	Yes (2)	Yes	Yes
Application Control	Yes	Yes	Yes	Yes
CIFS Inspection	No	No	No (1)	Yes
Data Leak Prevention	No	Yes (3)	No	Yes
DNS Filter	Yes	Yes	Yes	Yes
Email Filter	No	Yes (4)	Yes	Yes
ICAP	No	No	Yes	Yes
Intrusion Prevention System	Yes	Yes	Yes	Yes
SSL/SSH Inspection	Yes	Yes	Yes	Yes
VoIP	Yes	Yes	Yes	Yes
Web Filter	Yes (5)	Yes (5)	Yes	Yes
Web Application Firewall	No	No	Yes	Yes

1. CIFS inspection cannot be configured via GUI.
2. Some Antivirus features are not supported in flow mode inspection. See Inspection mode differences for antivirus on page 1037.
3. Some Data Leak Prevention features are not supported in Flow mode inspection. See Inspection mode differences for data leak prevention on page 1038.
4. Some Email filter features are not supported in Flow mode inspection. See Inspection mode differences for email filter on page 1039.
5. Some Web Filter features are not supported in Flow mode inspection. See Inspection mode differences for web filter on page 1040.

Inspection mode differences for antivirus

This section identifies the behavioral differences between antivirus operating in flow and proxy inspection.

Feature comparison between antivirus inspection modes

The following table indicates which antivirus features are supported by their designated scan modes.

Part1	Replacement Message	Content Disarm	Mobile Malware	Virus Out-break	Sandbox Inspection	NAC Quar-antine
Proxy	Yes	Yes	Yes	Yes	Yes	Yes
Flow default mode	Yes*	No	No	No	Yes	Yes
Flow legacy mode	Yes*	No	Yes	Yes	Yes	Yes

*IPS engine caches the URL and a replacement message will be presented after the second attempt.

Part 2	Archive Blocking	Emulator	Client Com-forting	Infection Quarantine	Heuristics	Treat EXE as Virus
Proxy	Yes	Yes	Yes	Yes (1)	Yes	Yes (2)
Flow default mode	No	No	No	No	No	No
Flow legacy mode	Yes	Yes	No	Yes (1)	Yes	Yes (2)

1. Only available on FortiGate models with HDD, or when FortiAnalyzer or FortiGate Cloud is connected and enabled.
2. Only applies to inspection on IMAP, POP3, SMTP, and MAPI protocols.

Protocol comparison between antivirus inspection modes

The following table indicates which protocols can be inspected by the designated antivirus scan modes.

	HTTP	FTP	IMAP	POP3	SMTP	NNTP	MAPI	CIFS
Proxy	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes*
Flow	Yes	Yes	Yes	Yes	Yes	No	No	Yes

* Proxy mode antivirus inspection on CIFS protocol has the following limitations:

- Cannot detect infections within archive files
- Cannot detect oversized files
- Will block special archive types by default
- IPv6 is not supported

Other antivirus differences between inspection modes

Flow default mode uses a hybrid scanning approach: it may use a pre-filtering database for malware detection in some circumstances as opposed to the full AV signature database in others. The scan method is determined by the AV engine algorithm that is based on the type of file being scanned. When a full AV scan is needed, the file is forwarded from the IPS engine to the scanunit daemon for processing.

Flow and proxy legacy modes use the full AV signature database, and the scanunit daemon scans the traffic.

Proxy mode uses pre-scanning and stream-based scanning for HTTP traffic. In default mode, the WAD daemon uses a stream-based approach, while legacy mode disables this stream-based approach.

Stream-based scanning provides the following AV improvements:

- Archive files (ZIP, GZIP, BZIP2, TAR, ISO) that exceed the oversize limit are uncompressed and scanned for infections.
- The contents of large archive files are scanned without having to buffer the entire file.
- Small files are scanned locally by the WAD daemon if only AV scanning is needed in the policy.
- File filtering on HTTP/HTTPS is handled locally by the WAD daemon.

This means that the overall memory usage is optimized when an archive file is scanned, and better security is achieved by scanning archives that would otherwise be bypassed.

However, stream-based scanning has limitations on the more complex features that it can scan. For the following features, traffic will be automatically handed off to the scanunit daemon for scanning (as in the case of legacy mode):

- Heuristic AV scan
- DLP
- Quarantine
- FortiGuard outbreak prevention and external block list
- Content disarm

To configure the scan mode:

```
config antivirus profile
    edit <name>
        ...
        set scan-mode {default | legacy}
    next
end
```

Inspection mode differences for data leak prevention

This section identifies the behavioral differences between data leak prevention (DLP) operating in flow and proxy inspection.

Feature comparison between DLP inspection modes

The following table indicates which DLP filters are supported by their designated inspection modes.

	Credit Card Filter	SSN Filter	Regex Filter	File-Type Filter	File-Pattern Filter	Fingerprint Filter	Watermark Filter	Encrypted Filter	File-Size Filter
Proxy	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Flow	Yes	Yes	Yes	No	Yes	No	No	Yes	Yes*

*File-size filtering will only work if file size is present in the protocol exchange.

Protocol comparison between DLP inspection modes

The following table indicates which protocols can be inspected by DLP based on the specified inspection modes.

	HTTP	FTP	IMAP	POP3	SMTP	NNTP	MAPI	CIFS
Proxy	Yes	Yes	Yes	Yes	Yes	Yes	Yes	No
Flow	Yes	Yes	Yes	Yes	Yes	No	No	No

Inspection mode differences for email filter

This section identifies the behavioral differences between Email Filter operating in flow and proxy inspection.

Feature comparison between Email Filter inspection modes

The following table indicates which Email Filters are supported by their designated inspection modes.

	SMTP	POP3	IMAP	MAPI
Proxy	Yes	Yes	Yes	Yes
Flow	Yes	Yes	Yes	No

Feature comparison between Email Filter inspection modes

The following tables indicate which Email Filters are supported by the specified inspection modes for local filtering and FortiGuard-assisted filtering.

Local Filtering	Banned Word Check	Block/Allowlist	HELO/ EHLO DNS Check	Return Address DNS Check	DNSBL/ ORBL Check	MIME Header Check	File Filter
Proxy	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Flow	Yes	No	No	No	No	Yes	No

FortiGuard-Assisted Filtering	Phishing URL Check	Anti-Spam Blocklist Check	Submit Spam to FortiGuard	Spam Email Checksum Check	Spam URL Check
Proxy	Yes	Yes	Yes	Yes	Yes
Flow	No	No	No	No	No

Inspection mode differences for web filter

This section identifies the behavioral differences between Web Filter operating in flow and proxy inspection.

Feature comparison between Web Filter inspection modes

The following table indicates which Web Filter features are supported by their designated inspection modes.

	FortiGuard Category-Based Filter	Category Usage Quota	Override Blocked Categories	File Filter	Search Engines	Static URL Filter	Rating Option	Proxy Option
Proxy	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Flow	Yes (1)	No	Yes (2)	No	No	Yes	Yes	No

1. Local Category and Remote Category filters do not support the warning and authenticate actions.
2. Local Category and Remote Category filters cannot be overridden.

SSL Inspection

Secure sockets layer (SSL) content scanning and inspection allows you to apply antivirus scanning, web filtering, and email filtering to encrypted traffic. You can apply SSL inspection profiles to firewall policies.

FortiOS includes four preloaded SSL/SSH inspection profiles, three of which are read-only and can be cloned:

- *certificate-inspection*
- *deep-inspection*
- *no-inspection*

The *custom-deep-inspection* profile can be edited, or you can create your own SSL/SSH inspection profiles.

Deep inspection (also known as SSL/SSH inspection) is typically applied to outbound policies where destinations are unknown. Depending on your policy requirements, you can configure the following:

- Which CA certificate will be used to decrypt the SSL encrypted traffic
- Which SSL protocols will be inspected
- Which ports will be associated with which SSL protocols for inspection
- Whether or not to allow invalid SSL certificates
- Whether or not SSH traffic will be inspected
- Which addresses or web category allowlists can bypass SSL inspection

The following topics provide information about SSL inspection:

- Certificate inspection on page 1041
- Deep inspection on page 1042
- Protecting an SSL server on page 1045
- Ignoring the AUTH TLS command on page 1046

Certificate inspection


FortiGate supports certificate inspection. The default configuration has a built-in *certificate-inspection* profile which you can use directly. When you use certificate inspection, the FortiGate only inspects the headers up to the SSL/TLS layer.

If you do not want to deep scan for privacy reasons but you want to control web site access, you can use *certificate-inspection*.


Inspect non-standard HTTPS ports

The built-in *certificate-inspection* profile is read-only and only listens on port 443. If you want to make changes, you must create a new certificate inspection profile.

If you know the non-standard port that the web server uses, such as port 8443, you can add this port to the *HTTPS* field.

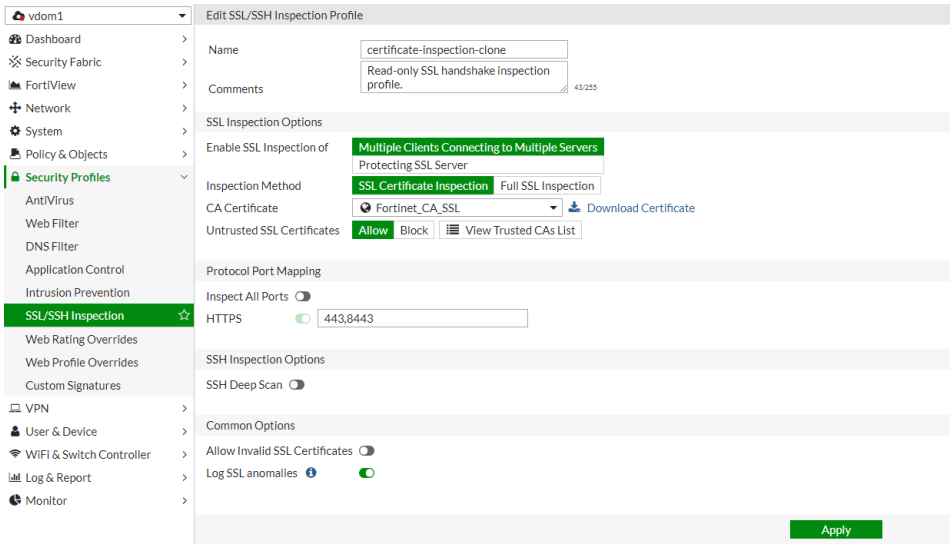


If you do not know which port is used in the HTTPS web server, you can select *Inspect All Ports*.

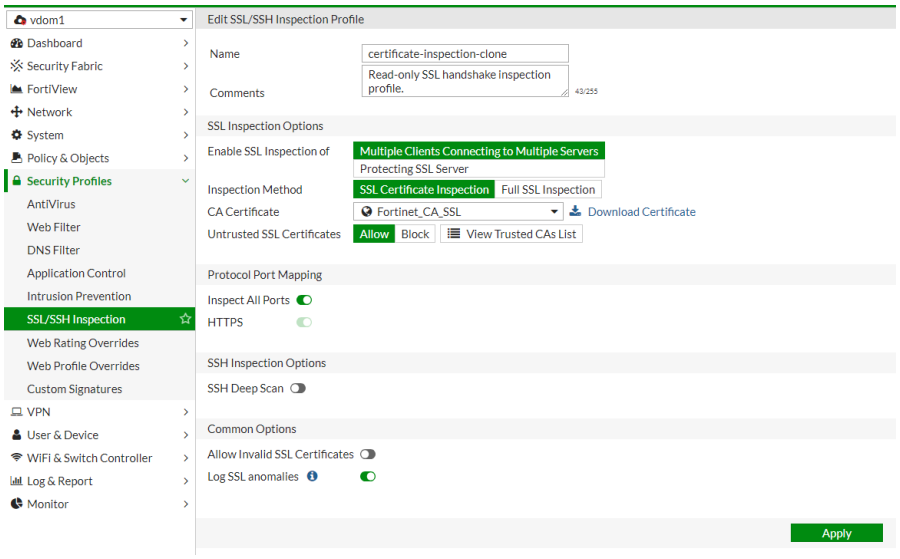

Block untrusted or allow invalid certificate

The default setting in the *certificate-inspection* profile is to block invalid certificates and allow untrusted certificates.

For example, the server certificate has expired but you still want to access this server until you have a new server certificate. But because certificate inspection cannot do an exemption, you have to allow the invalid certificate in your SSL profile. This means you need to create a new certificate inspection profile using the built-in read-only *certificate-inspection*.

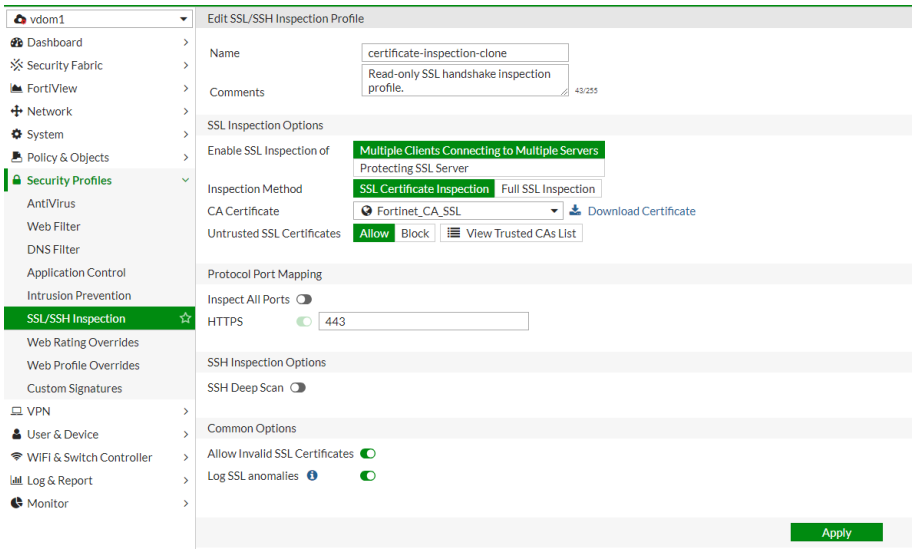

Deep inspection

You can configure address and web category allowlists to bypass SSL deep inspection.


Reasons for using deep inspection

While Hypertext Transfer Protocol Secure (HTTPS) offers protection on the Internet by applying Secure Sockets Layer (SSL) encryption to web traffic, encrypted traffic can be used to get around your network's normal defenses.

For example, you might download a file containing a virus during an e-commerce session, or you might receive a phishing email containing a seemingly harmless download that, when launched, creates an encrypted session to a command and control (C&C) server and downloads malware onto your computer. Because the sessions in these attacks are encrypted, they might get past your network's security measures.

When you use deep inspection, the FortiGate impersonates the recipient of the originating SSL session, then decrypts and inspects the content to find threats and block them. It then re-encrypts the content and sends it to the real recipient.

Deep inspection not only protects you from attacks that use HTTPS, it also protects you from other commonly-used SSL-encrypted protocols such as SMTPS, POP3S, IMAPS, and FTPS.

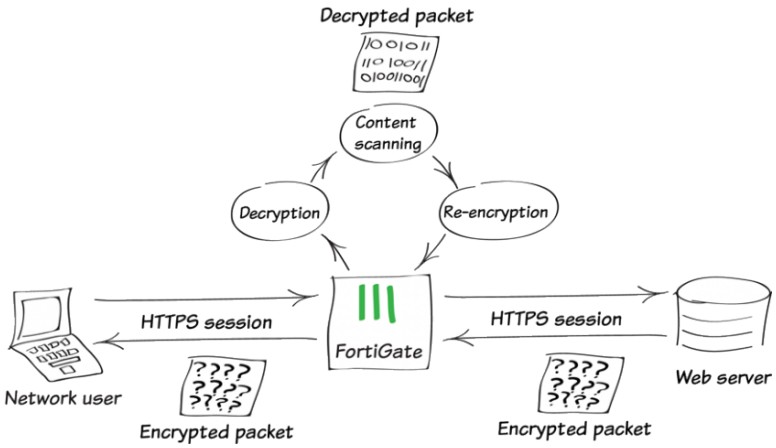

Browser messages when using deep inspection

When FortiGate re-encrypts the content, it uses a certificate stored on the FortiGate such as *Fortinet_CA_SSL*, *Fortinet_CA_Untrusted*, or your own CA certificate that you uploaded.


Because there is no *Fortinet_CA_SSL* in the browser trusted CA list, the browser displays an untrusted certificate warning when it receives a FortiGate re-signed server certificate. To stop the warning messages, trust the FortiGate-trusted CA *Fortinet_CA_SSL* and import it into your browser.

After importing *Fortinet_CA_SSL* into your browser, if you still get messages about untrusted certificate, it must be due to *Fortinet_CA_Untrusted*. **Never** import the *Fortinet_CA_Untrusted* certificate into your browser.

To import *Fortinet_CA_SSL* into your browser:

1. On the FortiGate, go to *Security Profiles* > *SSL/SSH Inspection* and select *deep-inspection*.
2. The default *CA Certificate* is *Fortinet_CA_SSL*.

3. Select *Download Certificate*.

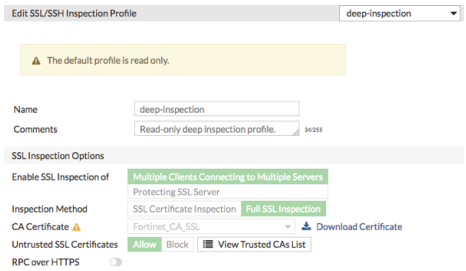


4. On the client PC, double-click the certificate file and select *Open*.
5. Select *Install Certificate* to launch the *Certificate Import Wizard* and use the wizard to install the certificate into the *Trusted Root Certificate Authorities* store.
   If a security warning appears, select *Yes* to install the certificate.


Exempt web sites from deep inspection

If you do not want to apply deep inspection for privacy or other reasons, you can exempt the session by address, category, or allowlist.


If you know the address of the server you want to exempt, you can exempt that address. You can exempt specific address type including IP address, IP address range, IP subnet, FQDN, wildcard-FQDN, and geography.

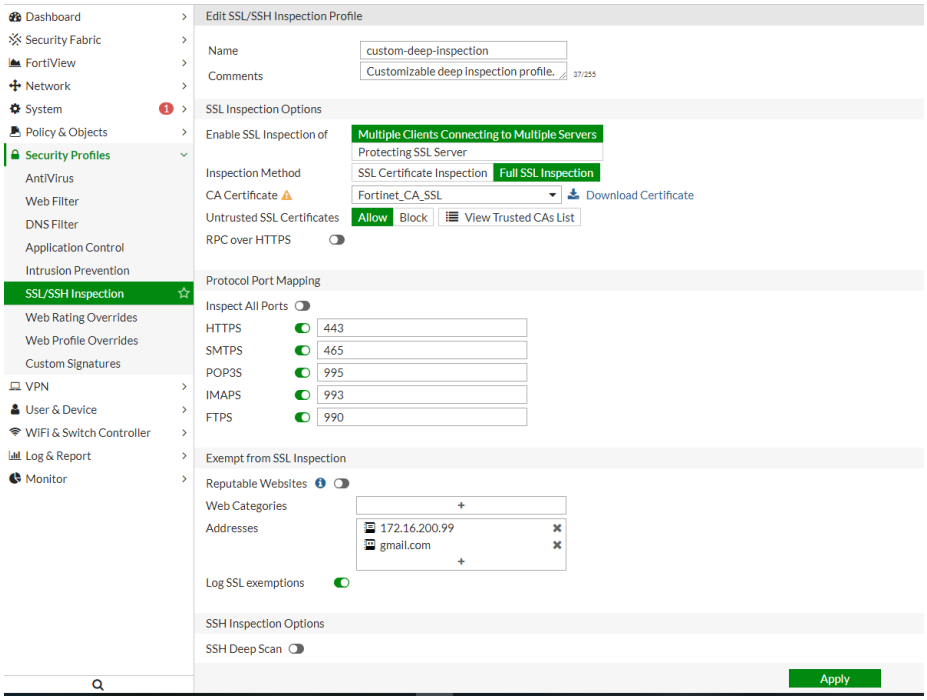

If you want to exempt all bank web sites, an easy way is to exempt the *Finance and Banking* category which includes all finance and bank web sites identified in FortiGuard.

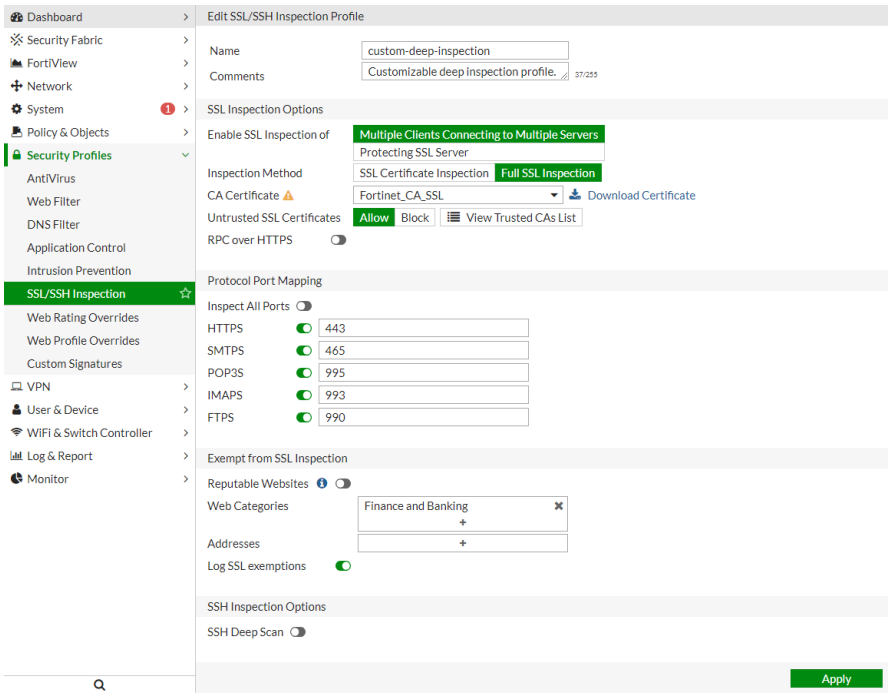

If you want to exempt commonly trusted web sites, you can bypass the SSL allowlist in the SSL/SSH profile. The allowlist includes common web sites trusted by FortiGuard. Simply enable *Reputable Websites*.

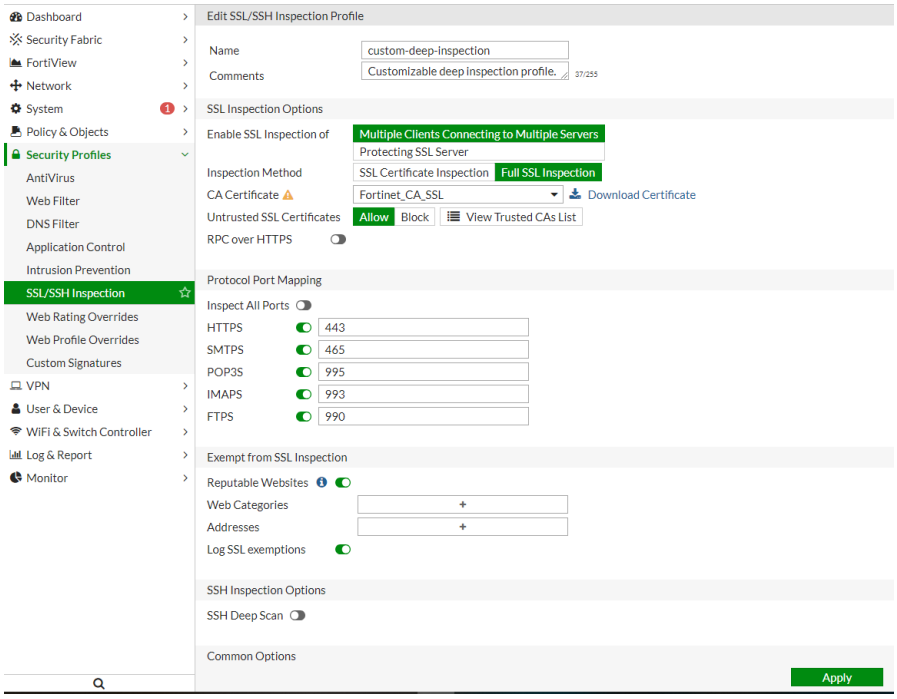

Protecting an SSL server


You typically use the FortiGate *Protecting SSL Server* profile as an inbound policy for clients on the internet that access the server through the internal side of the FortiGate.

Protecting SSL Server uses a server certificate to protect a single server.

You can use *Protecting SSL Server* if you do not want a client on the internet to directly access your internal server, and you want the FortiGate to simulate your real server.

To upload a server certificate into FortiGate and use that certificate in the SSL/SSH inspection profile:

1. Go to *System* > *Certificates*.
2. Select *Import* > *Local Certificate* and upload the certificate.
3. Go to *Security Profiles* > *SSL/SSH Inspection* and edit or create a new profile.
4. For *Enable SSL Inspection of*, select *Protecting SSL Server*.
5. For *Server Certificate*, select the local certificate you imported.
6. Click *Apply*.

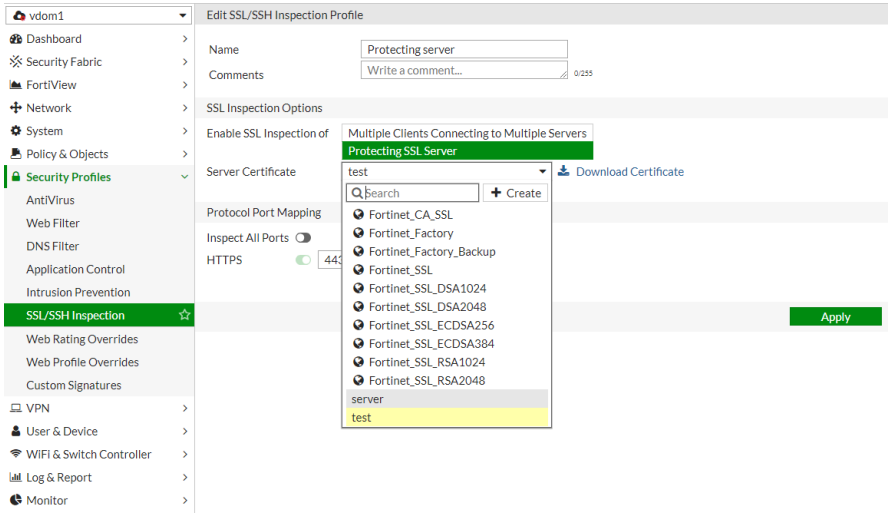

When you apply the *Protecting SSL Server* profile in a policy, the FortiGate will send the server certificate to the client as your server does.

Ignoring the AUTH TLS command

If the FortiGate receives an AUTH TLS (PBSZ and PROT) command before receiving plain text traffic from a decrypted device, by default, it will expect encrypted traffic, determine that the traffic belongs to an abnormal protocol, and bypass the traffic.

When the `ssl-offloaded` command is enabled, the AUTH TLS command is ignored, and the traffic is treated as plain text rather than encrypted data. SSL decryption and encryption are performed by an external device.

To enable SSL offloading:

```
config firewall profile-protocol-options
    edit "test"
        config ftp
            set ssl-offloaded yes
        end
        config imap
            set ssl-offloaded yes
        end
```

```
        config pop3
            set ssl-offloaded yes
        end
        config smtp
            set ssl-offloaded yes
        end
    next
end
```

SSH traffic file scanning

FortiGates can buffer, scan, log, or block files sent over SSH traffic (SCP and SFTP) depending on the file size, type, or contents (such as viruses or sensitive content).



This feature is supported in proxy-based inspection mode. It is currently not supported in flow-based inspection mode.

You can configure the following SSH traffic settings in the CLI:

- Protocol options
- Filter profile (SCP block/log options and file filter)
- DLP sensor
- Antivirus (profile and quarantine options)

To configure SSH protocol options:

```
config firewall profile-protocol-options
    edit "protocol"
        config ssh
           set options [oversize | clientcomfort | servercomfort]
           set comfort-interval [1 - 900]
           set comfort-amount [1 - 65535]
           set oversize-limit [1 - 798]
           set uncompressed-oversize-limit [0 - 798]
           set uncompressed-nest-limit [2 - 100]
           set scan-bzip2 [enable | disable]
        end
    next
end
```

To configure SCP block and log options:

```
config ssh-filter profile
    edit "ssh-test"
        set block scp
        set log scp
    next
end
```

To configure the SSH file filter:

```
config ssh-filter profile
    edit "ssh-test"
        config file-filter
            set status [enable | disable]
            set log [enable | disable]
            set scan-archive-contents [enable | disable]
            config entries
                edit "1"
                    set comment ''
                    set action [block | log]
                    set direction [incoming | outgoing | any]
                    set password-protected [yes | any]
                    set file-type "msoffice"
                next
            end
        end
    next
end
```

To configure the DLP sensor:

```
config dlp sensor
    edit "test"
        set full-archive-proto ssh
        set summary-proto ssh
        config filter
            edit 1
                set proto ssh
            next
        end
    next
end
```

To configure the antivirus profile options:

```
config antivirus profile
    edit "av"
        config ssh
            set options [scan | avmonitor | quarantine]
            set archive-block [encrypted | corrupted | partiallycorrupted | multipart |
nested | mailbomb | fileslimit | timeout | unhandled]
            set archive-log [encrypted | corrupted | partiallycorrupted | multipart | nested
| mailbomb | fileslimit | timeout | unhandled]
            set emulator [enable | disable]
            set outbreak-prevention [disabled | files | full-archive]
        end
    next
end
```

To configure the antivirus quarantine options:

```
config antivirus quarantine
    set drop-infected ssh
```

```
    set store-infected ssh
    set drop-blocked ssh
    set store-blocked ssh
    set drop-heuristic ssh
    set store-heuristic ssh
end
```

Sample logs

SCP traffic blocked by `ssh-filter profile`:

```
1: date=2019-07-24 time=10:34:42 logid="1601061010" type="utm" subtype="ssh" eventtype="ssh-
channel" level="warning" vd="vdom1" eventtime=1563989682560488314 tz="-0700" policyid=1
sessionid=2693 profile="ssh-test" srcip=10.1.100.11 srcport=33044 dstip=172.16.200.44
dstport=22 srcintf="port1" srcintfrole="undefined" dstintf="port3" dstintfrole="undefined"
proto=6 action="blocked" direction="outgoing" login="root" channeltype="scp"
```

SCP traffic blocked by `file-filter`:

```
1: date=2019-07-24 time=10:36:44 logid="1900064000" type="utm" subtype="file-filter"
eventtype="file-filter" level="warning" vd="vdom1" eventtime=1563989804387444023 tz="-0700"
policyid=1 sessionid=2732 srcip=10.1.100.11 srcport=33048 srcintf="port1"
srcintfrole="undefined" dstip=172.16.200.44 dstport=22 dstintf="port3"
dstintfrole="undefined" proto=6 service="SSH" subservice="SCP" profile="ssh-test"
direction="incoming" action="blocked" filtername="1" filename="test.xls" filesize=13824
filetype="msoffice" msg="File was blocked by file filter."
```

SFTP traffic blocked by `file-filter`:

```
1: date=2019-07-24 time=10:43:58 logid="1900064000" type="utm" subtype="file-filter"
eventtype="file-filter" level="warning" vd="vdom1" eventtime=1563990238339440605 tz="-0700"
policyid=1 sessionid=2849 srcip=10.1.100.11 srcport=33056 srcintf="port1"
srcintfrole="undefined" dstip=172.16.200.44 dstport=22 dstintf="port3"
dstintfrole="undefined" proto=6 service="SSH" subservice="SFTP" profile="ssh-test"
direction="incoming" action="blocked" filtername="1" filename="test.xls" filesize=13824
filetype="msoffice" msg="File was blocked by file filter."
```

SCP traffic blocked by `dlp sensor`:

```
1: date=2019-07-24 time=10:42:42 logid="0954024576" type="utm" subtype="dlp" eventtype="dlp"
level="warning" vd="vdom1" eventtime=1563990162266253784 tz="-0700" filteridx=1
filtername="test" dlpextra="builtin-patterns" filtertype="file-type" filtercat="file"
severity="medium" policyid=1 sessionid=2838 epoch=1425775843 eventid=0 srcip=10.1.100.11
srcport=33054 srcintf="port1" srcintfrole="undefined" dstip=172.16.200.44 dstport=22
dstintf="port3" dstintfrole="undefined" proto=6 service="SSH" subservice="SFTP"
filetype="msoffice" direction="incoming" action="block" filename="test.xls" filesize=13824
profile="test"
```

SFTP traffic blocked by `dlp sensor`:

```
1: date=2019-07-24 time=10:41:23 logid="0954024576" type="utm" subtype="dlp" eventtype="dlp"
level="warning" vd="vdom1" eventtime=1563990083875731367 tz="-0700" filteridx=1
filtername="test" dlpextra="builtin-patterns" filtertype="file-type" filtercat="file"
severity="medium" policyid=1 sessionid=2809 epoch=1425775842 eventid=0 srcip=10.1.100.11
```

```
srcport=33052 srcintf="port1" srcintfrole="undefined" dstip=172.16.200.44 dstport=22
dstintf="port3" dstintfrole="undefined" proto=6 service="SSH" subservice="SCP"
filetype="msoffice" direction="incoming" action="block" filename="test.xls" filesize=13824
profile="test"
```

SCP traffic blocked by `antivirus profile`:

```
1: date=2019-07-24 time=10:45:57 logid="0211008192" type="utm" subtype="virus"
eventtype="infected" level="warning" vd="vdom1" eventtime=1563990357330463670 tz="-0700"
msg="File is infected." action="blocked" service="SSH" subservice="SCP" sessionid=2875
srcip=10.1.100.11 dstip=172.16.200.44 srcport=33064 dstport=22 srcintf="port1"
srcintfrole="undefined" dstintf="port3" dstintfrole="undefined" policyid=1 proto=6
direction="incoming" filename="eicar.exe" checksum="53badd68" quarskip="No-skip"
virus="EICAR_TEST_FILE" dtype="Virus" ref="http://www.fortinet.com/ve?vn=EICAR_TEST_FILE"
virusid=2172 profile="av"
analyticscksum="7fc2dfc5a2247d743556ef59abe3e03569a6241e2b1e44b9614fc764847fb637"
analyticssubmit="false" crscore=50 craction=2 crlevel="critical"
```

SFTP traffic blocked by `antivirus profile`:

```
2: date=2019-07-24 time=10:45:46 logid="0211008192" type="utm" subtype="virus"
eventtype="infected" level="warning" vd="vdom1" eventtime=1563990346334781409 tz="-0700"
msg="File is infected." action="blocked" service="SSH" subservice="SFTP" sessionid=2874
srcip=10.1.100.11 dstip=172.16.200.44 srcport=33062 dstport=22 srcintf="port1"
srcintfrole="undefined" dstintf="port3" dstintfrole="undefined" policyid=1 proto=6
direction="incoming" filename="eicar.exe" checksum="53badd68" quarskip="No-skip"
virus="EICAR_TEST_FILE" dtype="Virus" ref="http://www.fortinet.com/ve?vn=EICAR_TEST_FILE"
virusid=2172 profile="av"
analyticscksum="7fc2dfc5a2247d743556ef59abe3e03569a6241e2b1e44b9614fc764847fb637"
analyticssubmit="false" crscore=50 craction=2 crlevel="critical"
```

Antivirus quarantine list triggered by infected files sent over SCP/SFTP:

```
CHECKSUM SIZE     FIRST-TIMESTAMP  LAST-TIMESTAMP   SERVICE STATUS     DC       TTL
 FILENAME DESCRIPTION
53badd68 12939    2019-07-24 10:45 2019-07-24 10:45 SSH     Infected    1   FOREVER
'eicar.exe' 'EICAR_TEST_FILE'
```

Overrides

Web filter configuration can be separated into profile configuration and profile overrides.

You can also override web filter behavior based on the FortiGuard website categorization:

- Use alternate categories (web rating overrides): this method manually assigns a specific website to a different Fortinet category or a locally-created category.
- Use alternate profiles: configured users or IP addresses can use an alternative web filter profile when attempting to access blocked websites.



Some features of this functionality require a subscription to FortiGuard Web Filtering.

The following topics provide information about web overrides:

- Web rating override on page 1051
- Web profile override on page 1056

Web rating override

Web rating overrides allow you to add specific URLs to both FortiGuard and custom web ratings categories. The action for each category can be configured in a web filter profile. See FortiGuard filter on page 914 for more information.

If a URL is in multiple enabled categories, the order of precedence is local categories, then remote categories, and then FortiGuard categories.



The custom category *Allow* action will have different effects depending on the inspection mode in the policy that the web profile is used in:

- In flow-based inspection mode: The category is disabled and has no impact on the web filter. The action of the next category in the order of preference is applied.
- In proxy-based inspection mode: The category is allowed.

In SSL/SSH inspection profiles, custom categories must be explicitly selected to be exempt from SSL inspection. In proxy addresses, custom categories must be explicitly selected as URL categories for them to apply. In both settings, if a URL is in multiple selected categories, the order of precedence is local categories, then remote categories, and then FortiGuard categories.




Web rating override requires a FortiGuard license.

Web filter profiles

In this example, *www.fortinet.com* is added to both a custom, or local, category (*Seriously*) and an external threat feed, or remote, category (*OnAworkComputer*). The local category action is set to *Monitor*, while the remote category action is set to *Block*. When a user browses to *www.fortinet.com*, the local category action takes precedence over both the remote category and the FortiGuard category (*Information Technology*), so the *Monitor* action is taken.

To create a custom category in the GUI:


1. Go to *Security Profiles* > *Web Rating Overrides*.
2. Click *Custom Categories*, then click *Create New*.
3. Enter a name for the category, and adjust the *Status* as needed.

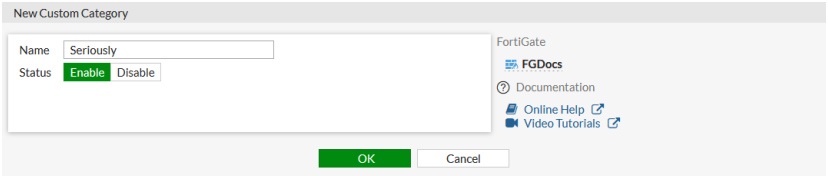

4. Click *OK*.

To create a web rating override in the GUI:


1. Go to *Security Profiles* > *Web Rating Overrides* and click *Create New*.
2. Enter the URL to override.
3. Optionally, click *Lookup rating* to see what its current rating is, if it has one.
4. Select the new *Category* and *Sub-Category* for the override.

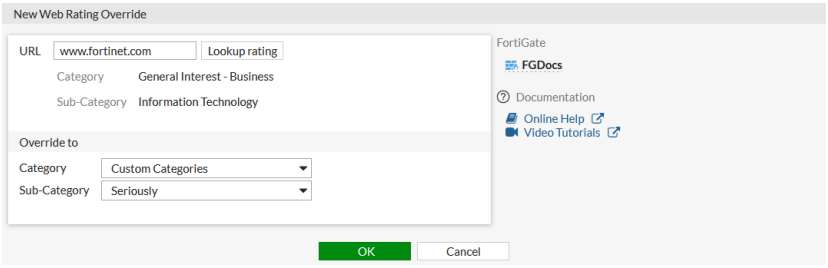

5. Click *OK*.

To create a new FortiGuard category threat feed in the GUI:


1. Go to *Security Fabric* > *External Connectors* and click *Create New*.
2. In the *Threat Feeds* section, click *FortiGuard Category*.
3. Enter a name for the threat feed, such as *OnAworkComputer*.
4. Enter the *URI of external resource*.

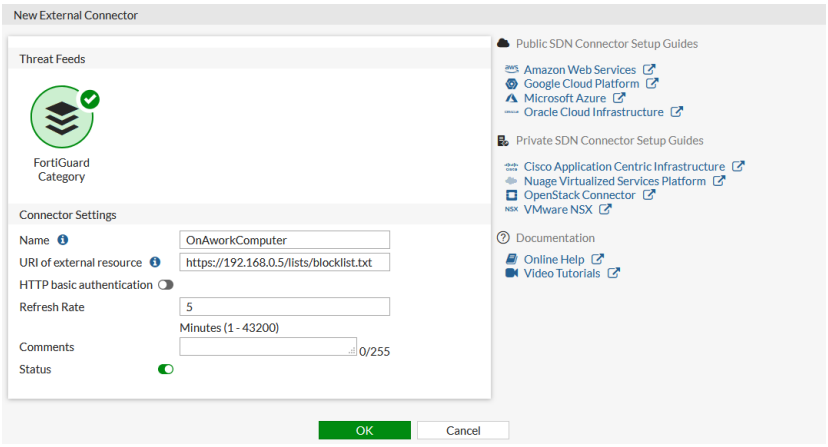

5. Configure the remaining settings as needed, then click *OK*.

To use the new categories in a web filter profile in the GUI:

1. Go to *Security Profiles* > *Web Filter* and create or edit a web filter profile. See FortiGuard filter on page 914 for more information.
2. Enable *FortiGuard category based filter*
3. Set the action for the *Seriously* category in the *Local Categories* group to *Monitor*.
4. Set the action for the *OnAworkComputer* category in the *Remote Categories* group to *Block*.

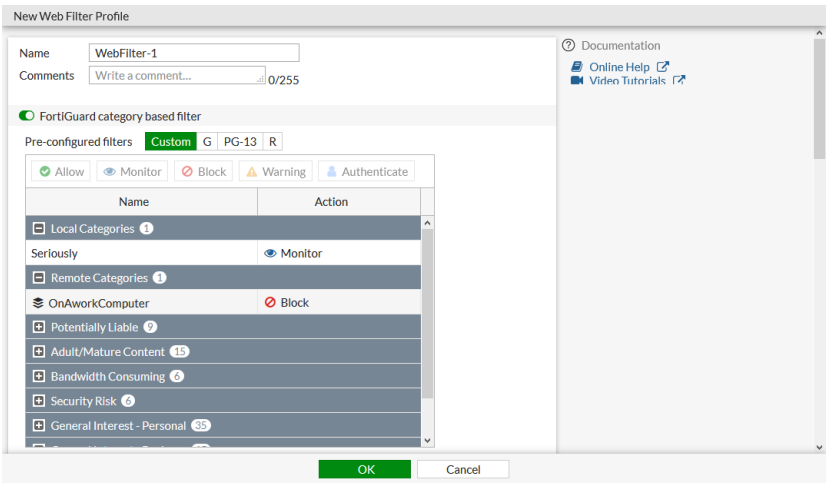

5. Configure the remaining settings are required, then click *OK*.

To use local and remote categories in a web filter profile in the CLI:

1. Create the custom category and add a URL to it:

```
config vdom
    edit root
        config webfilter ftgd-local-cat
            edit "Seriously"
                set id 140
            next
        end
        config webfilter ftgd-local-rating
            edit "www.fortinet.com"
                set rating 140
            next
        end
    next
end
```

2. Create a *FortiGuard Category Threat Feed* external connector to import an external blocklist.

```
config global
    config system external-resource
        edit "OnAworkComputer"
            set category 192
            set resource "https://192.168.0.5/lists/blocklist.txt"
        next
    end
end
```

3. Enable the new category in a web filter profile. See FortiGuard filter on page 914 for details.
Custom local categories have an ID range of 140 to 191. Remote categories have an ID range of 192 to 221.

```
config vdom
    edit root
        config webfilter profile
            edit "WebFilter-1"
                config ftgd-wf
                    unset options
```


```
                    config filters
                        edit 12
                            set category 12
                            set action warning
                        next
                        ...
                        edit 23
                            set action warning
                        next
                        edit 140
                            set category 140
                        next
                        edit 192
                            set category 192
                            set action block
                        next
                    end
                end
            next
        end
    next
end
```

When a filter is added for the local and remote categories (140 and 192 in this example), the default action is `monitor`.

SSL/SSH inspection profiles

To use local and remote categories in an SSL/SSH inspection profile to exempt them from SSL inspection in the GUI:

1. Go to *Security Profiles* > *SSL/SSH Inspection*.
2. Create a new profile or edit an existing one.
3. Ensure that *Inspection method* is *Full SSL Inspection*.
4. In the *Exempt from SSL Inspection* section, add the local and remote categories to the *Web categories* list .

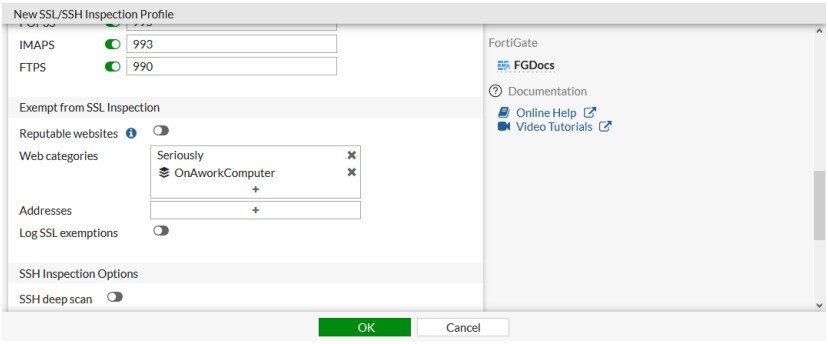

5. Configure the remaining settings as required, then click *OK*.

To use local and remote categories in an SSL/SSH inspection profile to exempt them from SSL inspection in the CLI:


```
config vdom
    edit root
```

```
        config firewall ssl-ssh-profile
            edit "SSL_Inspection"
                config https
                    set ports 443
                    set status deep-inspection
                end
                ...
                config ssl-exempt
                    edit 1
                        set fortiguard-category 140
                    next
                    edit 2
                        set fortiguard-category 192
                    next
                end
            next
        end
    next
end
```

Proxy addresses

To use local and remote categories in a proxy address in the GUI:

1. Go to *Policy & Objects* > *Addresses* and click *Create New* > *Address*, or edit an existing proxy address.
2. Set *Category* to *Proxy Address*.
3. Set *Type* to *URL Category*.
4. In the *URL Category*, add the local and remote categories.

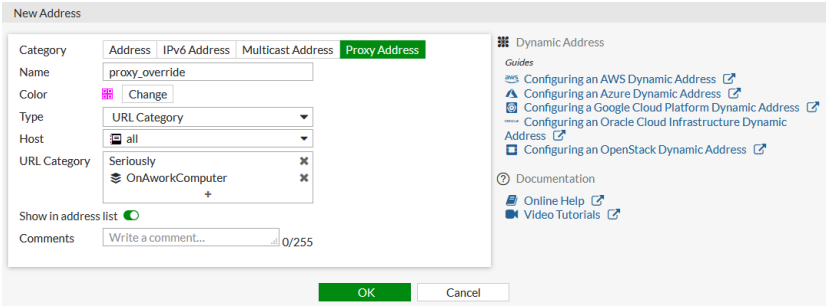

5. Configure the remaining settings as required, then click *OK*.

To use local and remote categories in a proxy address in the CLI:


```
config vdom
    edit root
        config firewall proxy-address
            edit "proxy_override"
                set type category
                set host "all"
                set category 140 192
                set color 23
            next
        end
```

```
    next
end
```

Web profile override

You can use the following profile override methods:

- Administrative override
- Allow users to override blocked categories

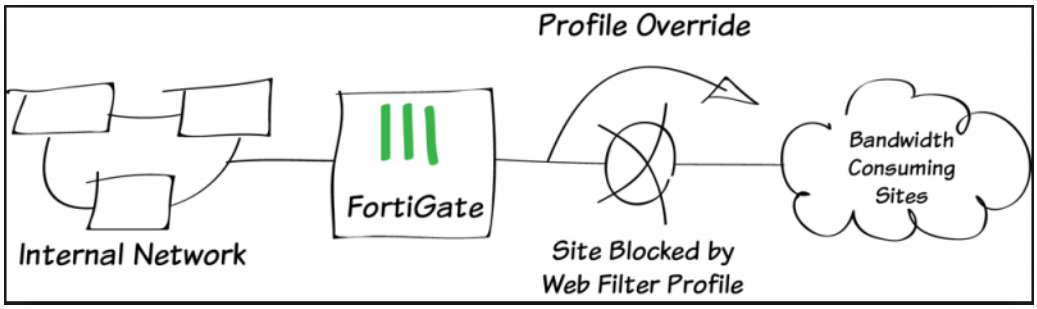

Administrative override

Administrators can grant temporary access to sites that are otherwise blocked by a web filter profile. You can grant temporary access to a user, user group, or source IP address. You can set the time limit for days, hours, or minutes. The default is 15 minutes.

When the administrative web profile override is enabled, a blocked access page or replacement message does not appear, and authentication is not required.

Scope range

You can choose one of the following scope ranges:

- User: authentication for permission to override is based on whether or not the user is using a specific user account.
- User group: authentication for permission to override is based on whether or not the user account supplied as a credential is a member of the specified user group.
- Source IP: authentication for permission to override is based on the IP address of the computer that was used to authenticate. This would be used for computers that have multiple users. For example, if a user logs on to the computer, engages the override by using their credentials, and then logs off, anyone who logs on with an account on that computer would be using the alternate override web filter profile.



When you enter an IP address in the administrative override method, only individual IP addresses are allowed.

Differences between IP and identity-based scope

Using the IP scope does not require using an identity-based policy.


When using the administrative override method and IP scope, you might not see a warning message when you change from using the original web filter profile to using the alternate profile. There is no requirement for credentials from the user so, if allowed, the page will just appear in the browser.

Example of configuring a web profile administrative override


This example describes how to override a *webfilter* profile with a *webfilter_new* profile.

To configure web profile administrative override using the GUI:


1. Go to *Security Profiles* > *Web Profile Overrides*.
2. Click *Create New*.



   The *New Administrative Override* pane opens.
3. Configure the administrative override:
   a. For *Scope Range*, click *Source IP*.
   b. In the *Source IP* field, enter the IP address for the client computer (`10.1.100.11` in this example).
   c. In the *Original Profile* dropdown, select *webfilter*.
   d. In the *New Profile* dropdown, select *webfilter_new*.
   In the *Minutes* field, the default *15* minutes appears, which is the desired duration for this example.

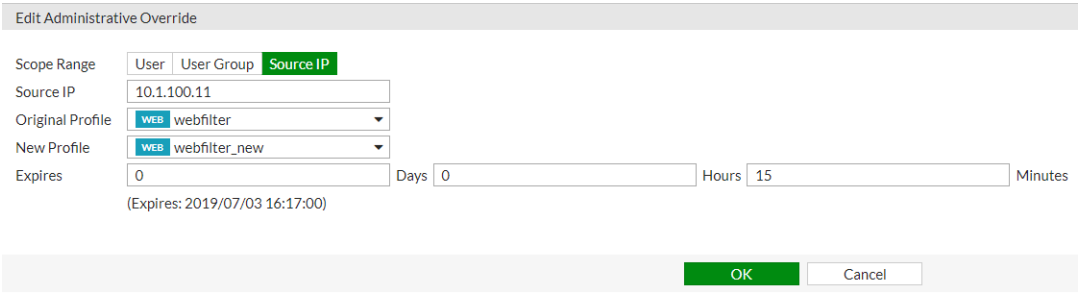

4. Click *OK*. The list of web profile overrides appears.
   The actual expiration time displays instead of the number of minutes.




To configure web profile administrative override using the CLI:

```
config webfilter override
   edit 1
      set status enable
      set scope ip
      set old-profile "webfilter"
      set new-profile "webfilter_new"
      set expires 2019/04/10 14:33:00
      set initiator "admin"
      set ip 10.1.100.11
   next
end
```

Allow users to override blocked categories

For both override methods, the scope ranges (for specified users, user groups, or IP addresses) allow sites blocked by web filtering profiles to be overridden for a specified length of time.


But there is a difference between the override methods when the users or user group scope ranges are selected. In both cases, you would need to apply the user or user group as source in the firewall policy. With administrative override, if you do not apply the source in the firewall policy, the traffic will not match the override and will be blocked by the original profile. With *Allow users to override blocked categories*, the traffic will also be blocked, but instead of displaying a blocking page, the following message appears:

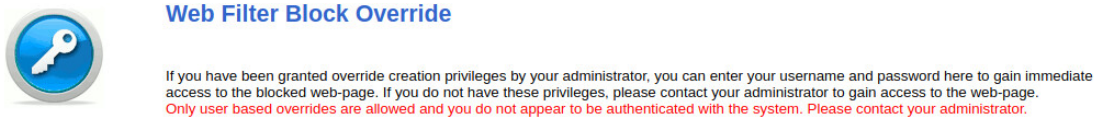

When you choose the user group scope, once one user overrides, it will affect the other users in the group when they attempt to override. For example, user1 and user2 both belong to the local_user group. Once user1 successfully overrides, this will generate an override entry for the local_user group instead of one specific user. This means that if user2 logs in from another PC, they can override transparently.


Ask feature

This option is only available in the *Allow users to override blocked categories* method. It configures the message page to have the user choose which scope they want to use. Normally on the message page, the scope options are greyed out and not editable. In the following example, the *Scope* is predefined with *IP*.

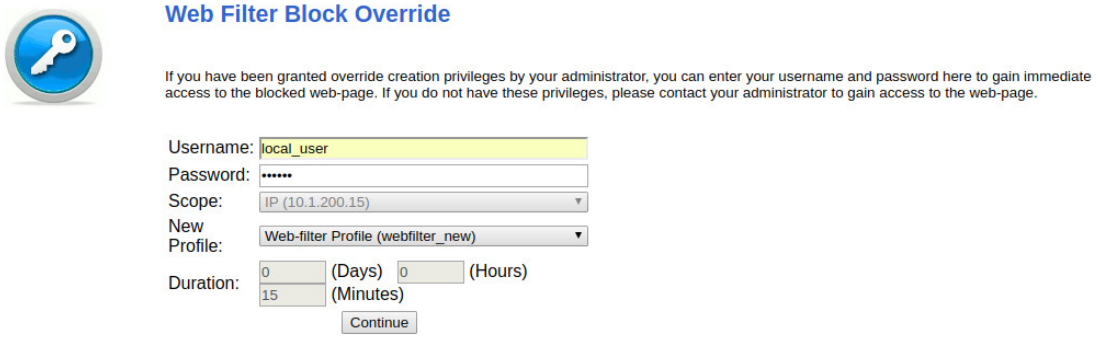

When the ask option is enabled (through the *Switch applies to* field in the GUI), the *Scope* dropdown is editable. Users can choose one of the following:

- User
- User Group
- IP

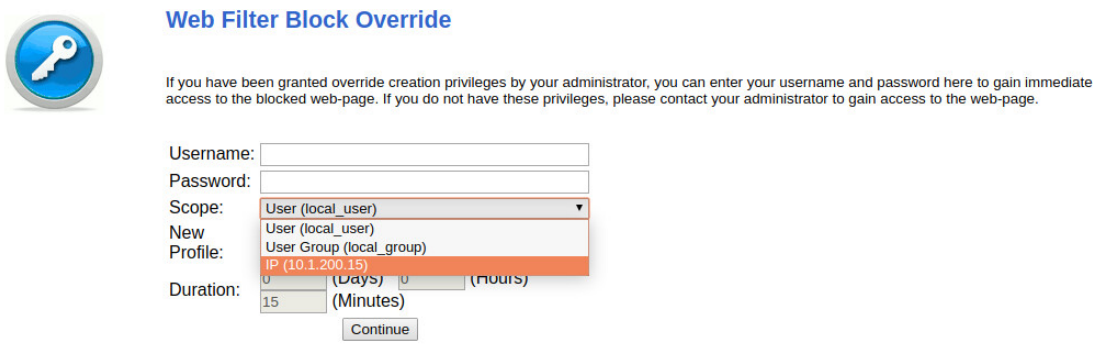

User and *User Group* are only available when there is a user group in the firewall policy. You must specify a user group as a source in the firewall policy so the scope includes *User* and *User Group*; otherwise, only the IP option will be available.

Other features

Besides the scope, there are some other features in *Allow users to override blocked categories*.

Apply to group(s)

Individual users can not be selected. You can select one or more of the user groups recognized by the FortiGate. They can be local to the system or from a third party authentication device, such as an AD server through FSSO.

Switch duration

Administrative override sets a specified time frame that is always used for that override. The available options in *Allow users to override blocked categories* are:

- *Predefined*: the value entered is the set duration (length of time in days, hours, or minutes) that the override will be in effect. If the duration variable is set to 15 minutes, the length of the override will always be 15 minutes. The option will be visible in the override message page, but the setting will be greyed out.
- *Ask*: the user has the option to set the override duration once it is engaged. The user can set the duration in terms of days, hours, or minutes.


Example of creating a web profile users override

This example describes how to allow users in the *local_group* to override the *webfilter_new* profile.


To allow users to override blocked categories using the GUI:

1. Go to *Security Profiles* > *Web Filter*.
2. Click *Create New*.

3. Under the *Category Usage Quota* section, toggle on *Allow users to override blocked categories*.

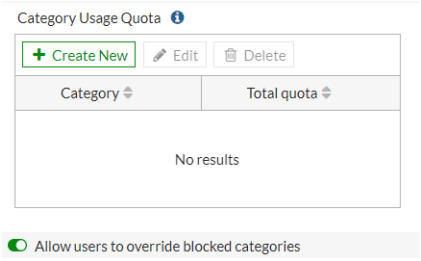

4. Configure the web filter profile:
   a. Click the *Groups that can override* field, and select a group (*local_group* in this example).
   b. Click the *Profile Name* field, and select the *webfilter_new* profile.
   c. For the *Switch applies to* field, click *IP*.
   d. For the *Switch Duration* field, click *Predefined*. The default *15* minutes appears, which is the desired duration for this example.
   e. Configure the rest of the profile as needed.

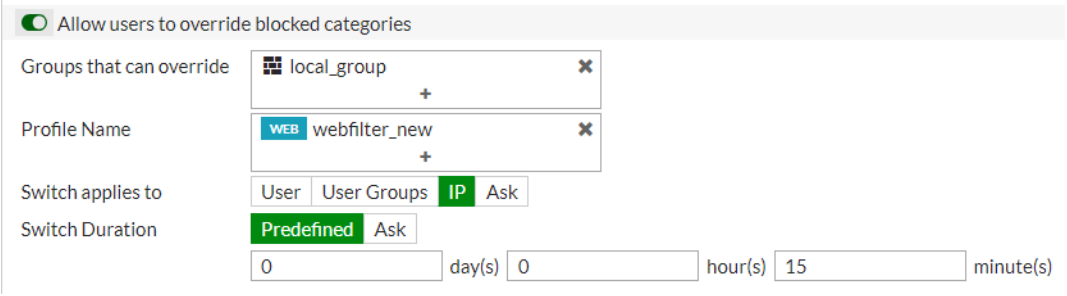

5. Click *OK*.

Custom signatures

You can create the following custom signatures and apply them to firewall policies:

- IPS signature
- Application signature
- Application group

The following topic provides information about custom signatures:

- Application groups in policies on page 1060

Application groups in policies

This feature provides an application group command for firewall shaping policies.

The following CLI command is used:

```
config firewall shaping-policy
  edit 1
    set app-group <application group>...
    ......
```

```
    next
end
```


Example

In this example, there are two traffic shaping policies:


- Policy 1 is for traffic related to cloud applications that has high priority.
- Policy 2 is for other traffic and has low priority.

To create the shaping policies using the GUI:

1. Configure an application group for cloud applications:
   a. Go to *Security Profiles* > *Application Signatures*.
   b. Click *Create New* > *Application Group*. The *New Application Group* page opens.

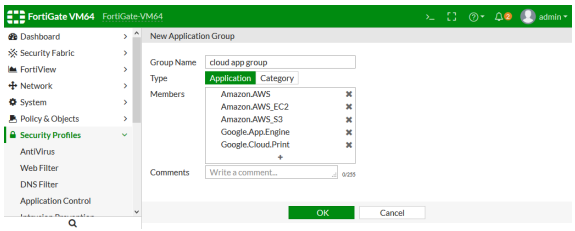

   c. Enter a name for the group, select the type, and then add the group the members.
   d. Click *OK*.
2. Create the shaping policy for the high priority cloud application traffic:
   a. Go to *Policy & Objects* > *Traffic Shaping Policy*.
   b. Click *Create New*. The *New Shaping Policy* page opens.

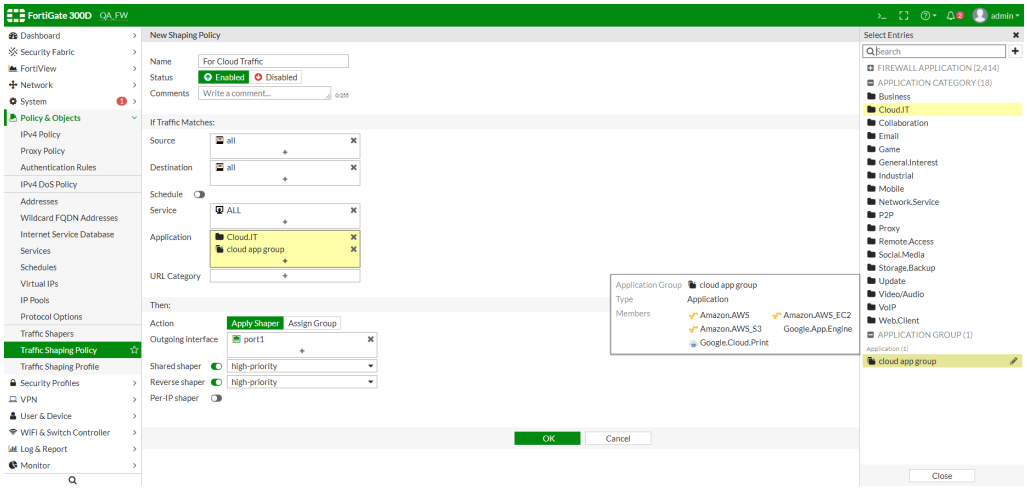


   c. Configure the shaping policy, selecting the previously created cloud application group, and setting both the *Shared shaper* and *Reverse shaper* to *high-priority*.
   d. Click *OK*.



At least one firewall policy must have application control enabled for the applications to match any policy traffic.

3. Create the shaping policy for all other traffic, setting both the *Shared shaper* and *Reverse shaper* to *low-priority*.

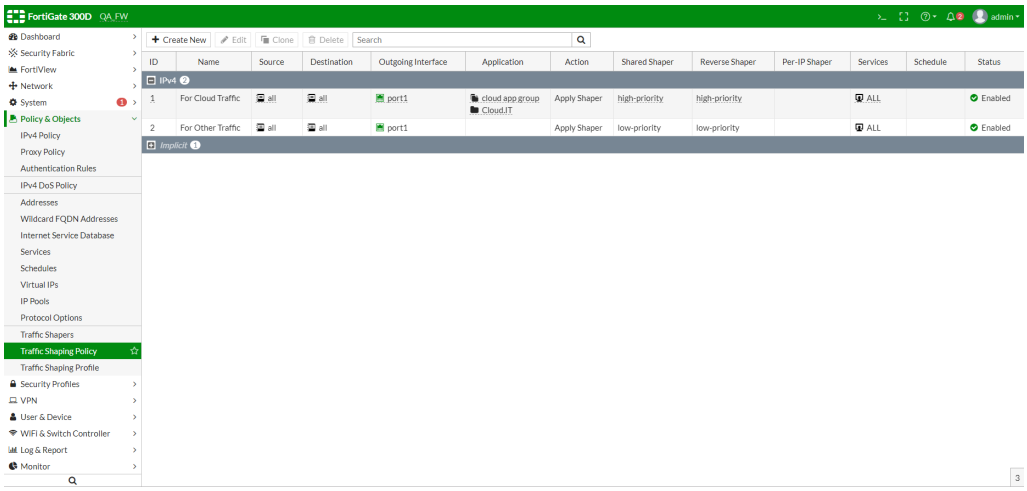

To create the shaping policies using the CLI:

1. Configure an application group for cloud applications:

```
config application group
    edit "cloud app group"
        set application 27210 36740 35944 24467 33048
    next
end
```

2. Create the shaping policies for the high priority cloud application traffic and the other, low priority traffic:

```
config firewall shaping-policy
    edit 1
        set name "For Cloud Traffic"
        set service "ALL"
        set app-category 30
        set app-group "cloud app group"
        set dstintf "port1"
        set traffic-shaper "high-priority"
        set traffic-shaper-reverse "high-priority"
        set srcaddr "all"
        set dstaddr "all"
    next
    edit 2
        set name "For Other Traffic"
        set service "ALL"
        set dstintf "port1"
        set traffic-shaper "low-priority"
        set traffic-shaper-reverse "low-priority"
        set srcaddr "all"
        set dstaddr "all"
    next
end
```

VPN

Virtual Private Network (VPN) technology lets remote users connect to private computer networks to gain access to their resources in a secure way. For example, an employee traveling or working at home can use a VPN to securely access the office network through the Internet.

Instead of remotely logging into a private network using an unencrypted and unsecured Internet connection, using a VPN ensures that unauthorized parties cannot access the office network and cannot intercept information going between the employee and the office. Another common use of a VPN is to connect the private networks of multiple offices.

Fortinet offers VPN capabilities in the FortiGate Unified Threat Management (UTM) appliance and in the FortiClient Endpoint Security suite of applications. You can install a FortiGate unit on a private network and install FortiClient software on the user's computer. You can also use a FortiGate unit to connect to the private network instead of using FortiClient software.

The following sections provide information about VPN:

- IPsec VPNs on page 1063
- SSL VPN on page 1308

IPsec VPNs

The following sections provide instructions on configuring IPsec VPN connections in FortiOS 6.2.6.

- General IPsec VPN configuration on page 1063
- Site-to-site VPN on page 1088
- Remote access on page 1146
- Aggregate and redundant VPN on page 1183
- Overlay Controller VPN (OCVPN) on page 1220
- ADVPN on page 1248
- Other VPN topics on page 1278
- VPN IPsec troubleshooting on page 1300

General IPsec VPN configuration

The following sections provide instructions on general IPsec VPN configurations:

- Network topologies on page 1064
- Phase 1 configuration on page 1064
- Phase 2 configuration on page 1079
- VPN security policies on page 1083
- Blocking unwanted IKE negotiations and ESP packets with a local-in policy on page 1087

Network topologies

The topology of your network will determine how remote peers and clients connect to the VPN and how VPN traffic is routed.

Topology	Description
Site-to-Site	Standard one-to-one VPN between two FortiGates. See Site-to-site VPN on page 1088.
Hub and spoke/ADVPN	One central FortiGate (hub) has multiple VPNs to other remote FortiGates (spokes). In ADVPN, shortcuts can be created between spokes for direct communication. See ADVPN on page 1248.
OCVPN	Fortinet's cloud based solution for automating VPN setup between devices registered to the same account. See Overlay Controller VPN (OCVPN) on page 1220.
FortiClient dialup	Typically remote FortiClient dialup clients use dynamic IP addresses through NAT devices. The FortiGate acts as a dialup server allowing dialup VPN connections from multiple sources. See FortiClient as dialup client on page 1153.
FortiGate dialup	Similar to site-to-site except one end is a dialup server and the other end is a dialup client. This facilitates scenarios in which the remote dialup end has a dynamic address, or does not have a public IP, possibly because it is behind NAT. See FortiGate as dialup client on page 1147.
Aggregate VPN	Natively support aggregating multiple VPN tunnels to increase performance and provide redundancy over multiple links. SeeIPsec aggregate for redundancy and traffic load-balancing on page 1200.
Redundant VPN	Options for supporting redundant and partially redundant IPsec VPNs, using route-based approaches. See Redundant hub and spoke VPN on page 1215.
L2TP over IPsec	Configure VPN for Microsoft Windows dialup clients using the built in L2TP software. Users do not have to install any Fortinet software. See L2TP over IPsec on page 1173.
GRE over IPsec	Legacy support for routers requiring point-to-point GRE over IPsec for tunneling. See GRE over IPsec on page 1108.

Phase 1 configuration

Phase 1 configuration primarily defines the parameters used in IKE (Internet Key Exchange) negotiation between the ends of the IPsec tunnel. The local end is the FortiGate interface that initiates the IKE negotiations. The remote end is the remote gateway that responds and exchanges messages with the initiator. Hence, they are sometimes referred to as the initiator and responder. The purpose of phase 1 is to secure a tunnel with one bi-directional IKE SA (security association) for negotiating IKE phase 2 parameters.

The `auto-negotiate` and `negotiation-timeout` commands control how the IKE negotiation is processed when there is no traffic, and the length of time that the FortiGate waits for negotiations to occur.

IPsec tunnels can be configured in the GUI using the *VPN Creation Wizard*. Go to *VPN* > *IPsec Wizard*. The wizard includes several templates (site-to-site, hub and spoke, remote access), but a custom tunnel can be configured with the following settings:

Name		Phase 1 definition name. The maximum length is 15 characters for an interface mode VPN and 35 characters for a policy-based VPN. For a policy-based VPN, the name normally reflects where the remote connection originates. For a route-based tunnel, the FortiGate also uses the name for the virtual IPsec interface that it creates automatically.
Network		
	IP Version	Protocol, either IPv4 or IPv6.
	Remote Gateway	Category of the remote connection: • *Static IP Address*: the remote peer has a static IP address. • *Dialup User*: one or more FortiClient or FortiGate dialup clients with dynamic IP addresses will connect to the FortiGate. • *Dynamic DNS*: a remote peer that has a domain name and subscribes to a dynamic DNS service will connect to the FortiGate.
	IP Address	The IP address of the remote peer. This option is only available when the *Remote Gateway* is *Static IP Address*.
	Dynamic DNS	The domain name of the remote peer. This option is only available when the *Remote Gateway* is *Dynamic DNS*.
	Interface	The interface through which remote peers or dialup clients connect to the FortiGate. This option is only available in NAT mode. By default, the local VPN gateway IP address is the IP address of the interface that was selected (*Primary IP* in the *Local Gateway* field).
	Local Gateway	IP address for the local end of the VPN tunnel (*Primary IP* is used by default): • *Secondary IP*: secondary address of the interface selected in the *Interface* field. • *Specify*: manually enter an address. Interface mode cannot be configured in a transparent mode VDOM.
	Mode Config	This option is only available when the *Remote Gateway* is *Dialup User*. Configure the client IP address range, subnet mask/prefix length, DNS server, and split tunnel capability to automate remote client addressing.
	NAT Traversal	This option is only available when the *Remote Gateway* is *Static IP Address* or *Dynamic DNS*. ESP (encapsulating security payload), the protocol for encrypting data in the VPN session, uses IP protocol 50 by default. However, it does not use any port numbers so when traversing a NAT device, the packets cannot be demultiplexed. Enabling NAT traversal encapsulates the ESP packet inside a UDP packet, thereby adding a unique source port to the packet. This allows the NAT device to map the packets to the correct session. • *Enable*: a NAT device exists between the local FortiGate and the VPN

		peer or client. Outbound encrypted packets are wrapped inside a UDP IP header that contains a port number. The local FortiGate and the VPN peer or client must have the same NAT traversal setting (both selected or both cleared) to connect reliably. When in doubt, enable NAT traversal. • *Disable*: disable the NAT traversal setting. • *Forced*: the FortiGate will use a port value of zero when constructing the NAT discovery hash for the peer. This causes the peer to think it is behind a NAT device, and it will use UDP encapsulation for IPsec, even if no NAT is present. This approach maintains interoperability with any IPsec implementation that supports the NAT-T RFC.
	Keepalive Frequency	Keepalive frequency setting. This option is only available when *NAT Traversal* is set to *Enable* or *Forced*. The NAT device between the VPN peers may remove the session when the VPN connection remains idle for too long. The value represents an interval in seconds where the connection will be maintained with periodic keepalive packets. The keepalive interval must be smaller than the session lifetime value used by the NAT device. The keepalive packet is a 138-byte ISAKMP exchange.
	Dead Peer Detection	Reestablishes VPN tunnels on idle connections and cleans up dead IKE peers if required. This feature minimizes the traffic required to check if a VPN peer is available or unavailable (dead). The available options are: • *Disable*: disable dead peer detection (DPD). • *On Idle*: triggers DPD when IPsec is idle. • *On Demand*: Passively sends DPD to reduce load on the firewall. Only triggers DPD when IPsec outbound packets are sent, but no reply is received from the peer. When there is no traffic and the last DPD-ACK has been received, IKE will not send DPDs periodically. Notifications are received whenever a tunnel goes up or down, or to keep the tunnel connection open when no traffic is being generated inside the tunnel. For example, in scenarios where a dialup client or dynamic DNS peer connects from an IP address that changes periodically, traffic may be suspended while the IP address changes. When *Dead Peer Detection* is selected, optionally specify a retry count and a retry interval using `dpd-retrycount` and `dpd-retryinterval`. See Dead peer detection on page 1070.
	Forward Error Correction	Enable on both ends of the tunnel to correct errors in data transmission by sending redundant data across the VPN.
	Device creation	Advanced option. When enabled, a dynamic interface (network device) is created for each dialup tunnel. See Dynamic tunnel interface creation on page 1077.
	Aggregate member	Advanced option. When enabled, the tunnel can be used as an aggregate member candidate.
Authentication		

Method	Either *Pre-shared Key* or *Signature*.
Pre-shared Key	The pre-shared key that the FortiGate will use to authenticate itself to the remote peer or dialup client during phase 1 negotiations. The same key must be defined at the remote peer or client. See Pre-shared key.
Certificate Name	The server certificate that the FortiGate will use to authenticate itself to the remote peer or dialup client during phase 1 negotiations. See Digital certificates.
IKE Version	Either *1* or *2*. See Choosing IKE version 1 and 2 on page 1072.
Mode	This option is only available when IKEv1 is selected. The two available options are: • *Aggressive*: the phase 1 parameters are exchanged in a single message with unencrypted authentication information. • *Main (ID protection)*: the phase 1 parameters are exchanged in multiple rounds with encrypted authentication information. When the remote VPN peer has a dynamic IP address and is authenticated by a pre-shared key, you must select *Aggressive* mode if there is more than one dialup phase 1 configuration for the interface IP address. When the remote VPN peer has a dynamic IP address and is authenticated by a certificate, you must select *Aggressive* mode if there is more than one phase 1 configuration for the interface IP address and these phase 1 configurations use different proposals.
Peer Options	Options to authenticate VPN peers or clients depending on the *Remote Gateway* and *Authentication Method* settings.
Any peer ID	Accepts the local ID of any remote VPN peer or client. The FortiGate does not check identifiers (local IDs). *Mode* can be set to *Aggressive* or *Main*. This option can be used with digital certificate authentication, but for higher security, use *Peer certificate*.
Specific peer ID	This option is only available when *Aggressive Mode* is enabled. Enter the identifier that is used to authenticate the remote peer. The identifier must match the local ID configured by the remote peer's administrator. If the remote peer is a FortiGate, the identifier is specified in the *Local ID* field of the *Phase 1 Proposal* settings. If the remote peer is a FortiClient user, the identifier is specified in the *Local ID* field. In circumstances where multiple remote dialup VPN tunnels exist, each tunnel must have a peer ID set.
Peer certificate	Define the CA certificate used to authenticate the remote peer when the authentication mode is *Signature*. If the FortiGate will act as a VPN client, and you are using security certificates for authentication, set the *Local ID* to the distinguished name (DN) of the local server certificate that the FortiGate unit will use for authentication purposes.

	Peer ID from dialup group	Authenticate multiple FortiGate or FortiClient dialup clients that use unique identifiers and unique pre-shared keys (or unique pre-shared keys only) through the same VPN tunnel. You must create a dialup user group for authentication purposes. Select the group from the list next to the *Peer ID from dialup group* option. You must set *Mode* to *Aggressive* when the dialup clients use unique identifiers and unique pre-shared keys. If the dialup clients use unique pre-shared keys only, you can set *Mode* to *Main* if there is only one dialup Phase 1 configuration for this interface IP address.
Phase 1 Proposal		The encryption and authentication algorithms used to generate keys for the IKE SA. There must be a minimum of one combination. The remote peer or client must be configured to use at least one of the proposals that you define.
	Encryption	The following symmetric-key encryption algorithms are available: • *DES*: Digital Encryption Standard, a 64-bit block algorithm that uses a 56-bit key. • *3DES*: triple-DES; plain text is encrypted three times by three keys. • *AES128*: Advanced Encryption Standard, a 128-bit block algorithm that uses a 128-bit key. • *AES128GCM*: AES in Galois/Counter Mode, a 128-bit block algorithm that uses a 128-bit key. Only available for IKEv2. • *AES192*: a 128-bit block algorithm that uses a 192-bit key. • *AES256*: a 128-bit block algorithm that uses a 256-bit key. • *AES256GCM*: AES in Galois/Counter Mode, a 128-bit block algorithm that uses a 256-bit key. Only available for IKEv2. • *CHACHA20POLY1305*: a 128-bit block algorithm that uses a 128-bit key and a symmetric cipher. Only available for IKEv2. See also HMAC settings.
	Authentication	The following message digests that check the message authenticity during an encrypted session are available: • *MD5*: message digest 5. • *SHA1*: secure hash algorithm 1; a 160-bit message digest. • *SHA256*: a 256-bit message digest. • *SHA384*: a 384-bit message digest. • *SHA512*: a 512-bit message digest. In IKEv2, encryption algorithms include authentication, but a PRF (pseudo random function) is still required (*PRFSHA1*, *PRFSHA256*, *PRFSHA384*, *PRFSHA512*). See also HMAC settings.
	Diffie-Hellman Groups	Asymmetric key algorithms used for public key cryptography. Select one or more from groups 1, 2, 5, and 14 through 32. At least one of the *Diffie-Hellman Groups* (DH) settings on the remote peer or client must match one the selections on the FortiGate. Failure to match one or more DH groups will result in failed negotiations.

	Key Lifetime	The time (in seconds) that must pass before the IKE encryption key expires. When the key expires, a new key is generated without interrupting service. The keylife can be from 120 to 172 800 seconds.
	Local ID	Optional setting. This value must match the peer ID value given for the remote VPN peer's *Peer Options*. • If the FortiGate will act as a VPN client and you are using peer IDs for authentication purposes, enter the identifier that the FortiGate will supply to the VPN server during the phase 1 exchange. • If the FortiGate will act as a VPN client and you are using security certificates for authentication, select the distinguished name (DN) of the local server certificate that the FortiGate will use for authentication purposes.
XAUTH		This option supports the authentication of dialup clients. It is only available for IKE version 1. • *Disable*: do not use XAuth. • *Client*: available only if the *Remote Gateway* is set to *Static IP Address* or *Dynamic DNS*. If the FortiGate is a dialup client, enter the user name and password for the FortiGate to authenticate itself to the remote XAuth server. • *PAP Server*, *CHAP Server*, *Auto Server*: available only if *Remote Gateway* is set to *Dialup User*. Dialup clients authenticate as members of a dialup user group. A user group must be created first for the dialup clients that need access to the network behind the FortiGate. The FortiGate must be configured to forward authentication requests to an external RADIUS or LDAP authentication server. Select the server type based on the encryption method used between the FortiGate, the XAuth client, and the external authentication server. Then select the user group (*Inherit from policy* or *Choose*). See Using XAuth authentication on page 1075.
	Username	User name used for authentication.
	Password	Password used for authentication.

Additional CLI configurations

The following phase 1 settings can be configured in the CLI:

VXLAN over IPsec	Packets with a VXLAN header are encapsulated within IPsec tunnel mode.
	
	To configure VXLAN over IPsec:
	
	`config vpn ipsec phase1-interface/phase1`
	`  edit ipsec`
	`  set interface <name>`
	`  set encapsulation vxlan/gre`
	`  set encapsulation-address ike/ipv4/ipv6`
	`  set encap-local-gw4 xxx.xxx.xxx.xxx`

	set encap-remote-gw xxx.xxx.xxx.xxx next end
IPsec tunnel idle timer	Define an idle timer for IPsec tunnels. When no traffic has passed through the tunnel for the configured `idle-timeout` value, the IPsec tunnel will be flushed. **To configure IPsec tunnel idle timeout:** config vpn ipsec phase1-interface edit p1 set idle-timeout [enable | disable] set idle-timeoutinterval <integer> *IPsec tunnel idle timeout in minutes (10 - 43200).* next end
Monitor tunnel for failover	Monitor a site-to-site tunnel to guarantee operational continuity if the primary tunnel fails. Configure the secondary phase 1 interface to monitor the primary interface. **To configure the monitor:** config vpn ipsec phase1-interface edit <secondary phase1-interface> set monitor <primary phase1-interface> next end
Passive mode	Passive mode turns one side of the tunnel to be a responder only. It does not initiate VPN tunnels either by auto-negotiation, rekey, or traffic initiated behind the FortiGate. **To configure passive mode:** config vpn ipsec phase1-interface edit <example> set rekey {enable | disable} set passive-mode {enable | disable} set passive-tunnel-interface {enable | disable} next end

Dead peer detection

By default, dead peer detection (DPD) sends probe messages every five seconds. If you are experiencing high network traffic, you can experiment with increasing the ping interval. However, longer intervals will require more traffic to detect dead peers, which will result in more traffic.



In a dynamic (dialup) connection, the *On Idle* option encourages dialup server configurations to more proactively delete tunnels if the peer is unavailable.

In the GUI, the dead peer detection option can be configured in the GUI when defining phase 1 options. The following CLI commands support additional options for specifying a retry count and a retry interval.

For example, enter the following to configure DPD on the existing IPsec phase 1 configuration to use 15-second intervals and to wait for three missed attempts before declaring the peer dead and taking action.

To configure DPD:

```
config vpn ipsec phase1-interface
    edit <value>
        set dpd [disable | on-idle | on-demand]
        set dpd-retryinveral 15
        set dpd-retrycount 3
    next
end
```

DPD scalability

On a dialup server, if many VPN connections are idle, the increased DPD exchange could negatively impact the performance/load of the daemon. The `on-demand` option in the CLI triggers DPD when IPsec traffic is sent, but no reply is received from the peer.

When there is no traffic and the last DPD-ACK had been received, IKE will not send DPDs periodically. IKE will only send out DPDs if there are outgoing packets to send, but no inbound packets have since been received.

HMAC settings

The FortiGate uses the HMAC based on the authentication proposal that is chosen in phase 1 or phase 2 of the IPsec configuration. Each proposal consists of the encryption-hash pair (such as `3des-sha256`). The FortiGate matches the most secure proposal to negotiate with the peer.

To view the chosen proposal and the HMAC hash used:

```
# diagnose vpn ike gateway list

vd: root/0
name: MPLS
version: 1
interface: port1 3
addr: 192.168.2.5:500 -> 10.10.10.1:500
virtual-interface-addr: 172.31.0.2 -> 172.31.0.1
created: 1015820s ago
IKE SA: created 1/13 established 1/13 time 10/1626/21010 ms
IPsec SA: created 1/24 established 1/24 time 0/11/30 ms

  id/spi: 124 43b087dae99f7733/6a8473e58cd8990a
  direction: responder
  status: established 68693-68693s ago = 10ms
  proposal: 3des-sha256
```

```
key: e0fa6ab8dc509b33-aa2cc549999b1823-c3cb9c337432646e
lifetime/rekey: 86400/17436
DPD sent/recv: 000001e1/00000000
```

Choosing IKE version 1 and 2

If you create a route-based VPN, you have the option of selecting IKE version 2. Otherwise, IKE version 1 is used.

IKEv2, defined in RFC 4306, simplifies the negotiation process that creates the security association (SA).

If you select IKEv2:

- There is no choice in phase 1 of aggressive or main mode.
- Extended authentication (XAUTH) is not available.
- You can utilize EAP and MOBIKE.

Repeated authentication in IKEv2

This feature provides the option to control whether a device requires its peer to re-authenticate or whether re-key is sufficient. It does not influence the re-authentication or re-key behavior of the device itself, which is controlled by the peer (the default being to re-key). This solution is in response to RFC 4478. As described by the IETF, "the purpose of this is to limit the time that security associations (SAs) can be used by a third party who has gained control of the IPsec peer".

To configure IKE SA re-authentication:

```
config vpn ipsec phase1-interface
    edit p1
        set reauth [enable | disable]
    next
end
```

IKEv2 quick crash detection

There is support for IKEv2 quick crash detection (QCD) as described in RFC 6290.

RFC 6290 describes a method in which an IKE peer can quickly detect that the gateway peer it has and established an IKE session with has rebooted, crashed, or otherwise lost IKE state. When the gateway receives IKE messages or ESP packets with unknown IKE or IPsec SPIs, the IKEv2 protocol allows the gateway to send the peer an unprotected IKE message containing INVALID_IKE_SPI or INVALID_SPI notification payloads.

RFC 6290 introduces the concept of a QCD token, which is generated from the IKE SPIs and a private QCD secret, and exchanged between peers during the protected IKE AUTH exchange.

To configure QCD:

```
config system settings
    set ike-quick-crash-detect [enable | disable]
end
```

IKEv1 quick crash detection

Based on the IKEv2 QCD feature previously described, IKEv1 QCD is implemented using a new IKE vendor ID (Fortinet Quick Crash Detection) so both endpoints must be FortiGates. The QCD token is sent in the phase 1 exchange and must be encrypted, so this is only implemented for IKEv1 in main mode (aggressive mode is not supported as there is no available AUTH message to include the token). Otherwise, the feature works the same as in IKEv2 (RFC 6290).

IKEv1 fragmentation

UDP fragmentation can cause issues in IPsec when either the ISP or perimeter firewall(s) cannot pass or fragment the oversized UDP packets that occur when using a very large public security key (PSK). The result is that IPsec tunnels do not come up. The solution is IKE fragmentation.

For most configurations, enabling IKE fragmentation allows connections to automatically establish when they otherwise might have failed due to intermediate nodes dropping IKE messages containing large certificates, which typically push the packet size over 1500 bytes.

FortiOS will fragment a packet on sending if only all the following are true:

- Phase 1 contains `set fragmentation enable`.
- The packet is larger than the minimum MTU (576 for IPv4, 1280 for IPv6).
- The packet is being re-transmitted.

By default, IKE fragmentation is enabled.

To configure IKEv1 fragmentation:

```
config vpn ipsec phase1-interface
    edit 1
        set fragmentation [enable | disable]
    next
end
```

IKEv2 fragmentation

RFC 7383 requires each fragment to be individually encrypted and authenticated. With IKEv2, a copy of the unencrypted payloads around for each outgoing packet would need to be kept in case the original single packet was never answered and would retry with fragments. With the following implementation, if the IKE payloads are greater than a configured threshold, the IKE packets are preemptively fragmented and encrypted.

To configure IKEv2 fragmentation:

```
config vpn ipsec phase1-interface
    edit ike
        set ike-version 2
        set fragmentation [enable|disable]
        set fragmentation-mtu [500-16000]
    next
end
```

Pre-shared key vs digital certificates

A FortiGate can authenticate itself to remote peers or dialup clients using either a pre-shared key or a digital certificate.

Pre-shared key

Using a pre-shared key is less secure than using certificates, especially if it is used alone, without requiring peer IDs or extended authentication (XAuth). There also needs to be a secure way to distribute the pre-shared key to the peers.

If you use pre-shared key authentication alone, all remote peers and dialup clients must be configured with the same pre-shared key. Optionally, you can configure remote peers and dialup clients with unique pre-shared keys. On the FortiGate, these are configured in user accounts, not in the phase 1 settings.

The pre-shared key must contain at least six printable characters and should be known by network administrators. For optimum protection against currently known attacks, the key must consist of a minimum of 16 randomly chosen alphanumeric characters. The limit is 128 characters.

If you authenticate the FortiGate using a pre-shared key, you can require remote peers or dialup clients to authenticate using peer IDs, but not client certificates.

To authenticate the FortiGate using a pre-shared key:

1. Go to *VPN* > *IPsec Tunnels* and create a new tunnel, or edit an existing one.
2. Configure or edit the *Network* section as needed.
3. Configure or edit the *Authentication* settings as follows:

Method	*Pre-shared Key*
Pre-shared Key	<string>
IKE Version	*1* or *2*
Mode	*Aggressive* or *Main*
Peer Options	Select an *Accept Type* and the corresponding peer. Options vary based on the *Remote Gateway* and *Authentication Method* settings in the *Network* section. *Peer Options* are only available in *Aggressive* mode.

4. For the *Phase 1 Proposal* section, keep the default settings unless changes are needed to meet your requirements.
5. Optionally, for authentication parameters for a dialup user group, define *XAUTH* parameters.
6. Click *OK*.

Digital certificates

To authenticate the FortiGate using digital certificates, you must have the required certificates installed on the remote peer and on the FortiGate. The signed server certificate on one peer is validated by the presence of the root certificate installed on the other peer. If you use certificates to authenticate the FortiGate, you can also require the remote peers or dialup clients to authenticate using certificates. See Site-to-site VPN with digital certificate on page 1093 for a detailed example.

To authenticate the FortiGate using a digital certificate:

1. Go to *VPN* > *IPsec Tunnels* and create a new tunnel, or edit an existing one.
2. Configure or edit the *Network* section as needed.
3. Configure or edit the *Authentication* settings as follows:

Method	*Signature*
Certificate Name	Select the certificate used to identify this FortiGate. If there are no imported certificates, use *Fortinet_Factory*.
IKE Version	*1* or *2*

Mode	*Aggressive* is recommended.
Peer Options	For *Accept Type*, select *Peer certificate* and select the peer and the CA certificate used to authenticate the peer. If the other end is using the Fortinet_Factory certificate, then use the *Fortinet_CA* certificate here.

4. For the *Phase 1 Proposal* section, keep the default settings unless changes are needed to meet your requirements.
5. Optionally, for authentication parameters for a dialup user group, define *XAUTH* parameters.
6. Click *OK*.

Using XAuth authentication

Extended authentication (XAuth) increases security by requiring remote dialup client users to authenticate in a separate exchange at the end of phase 1. XAuth draws on existing FortiGate user group definitions and uses established authentication mechanisms such as PAP, CHAP, RADIUS, and LDAP to authenticate dialup clients. You can configure a FortiGate to function either as an XAuth server or client. If the server or client is attempting a connection using XAuth and the other end is not using XAuth, the failed connection attempts that are logged will not specify XAuth as the reason.

XAuth server

A FortiGate can act as an XAuth server for dialup clients. When the phase 1 negotiation completes, the FortiGate challenges the user for a user name and password. It then forwards the user's credentials to an external RADIUS or LDAP server for verification.

If the user records on the RADIUS server have suitably configured Framed-IP-Address fields, you can assign client virtual IP addresses by XAuth instead of from a DHCP address range.

The authentication protocol you use for XAuth depends on the capabilities of the authentication server and the XAuth client:

- Select *PAP Server* whenever possible.
- You must select *PAP Server* for all implementations of LDAP and some implementations of Microsoft RADIUS.
- Select *Auto Server* when the authentication server supports *CHAP Server* but the XAuth client does not. The FortiGate will use PAP to communicate with the XAuth client and CHAP to communicate with the authentication server. You can also use *Auto Server* to allow multiple source interfaces to be defined in an IPsec/IKE policy.

Before you begin, create user accounts and user groups to identify the dialup clients that need to access the network behind the FortiGate dialup server. If password protection will be provided through an external RADIUS or LDAP server, you must configure the FortiGate dialup server to forward authentication requests to the authentication server.

To configure XAuth to authenticate a dialup user group:

1. On the FortiGate dialup server, go to *VPN* > *IPsec Tunnels* and create a new tunnel, or edit an existing one.
2. Configure or edit the *Network*, *Authentication*, and *Phase 1 Proposal* sections as needed.
3. In the *XAUTH* section, select the encryption method *Type* to use between the XAuth client, the FortiGate, and the authentication server.
4. For *User Group*:
   a. Click *Inherit from policy* for multiple user groups defined in the IPsec/IKE policy, or
   b. Click *Choose* and in the dropdown, select the user group that needs to access the private network behind the FortiGate.



Only one user group may be defined for *Auto Server*.

5. Click *OK*.
6. Create as many policies as needed, specifying the source user(s) and destination address.

XAuth client

If the FortiGate acts as a dialup client, the remote peer, acting as an XAuth server, might require a username and password. You can configure the FortiGate as an XAuth client with its own username and password, which it provides when challenged.

To configure the FortiGate dialup client as an XAuth client:

1. On the FortiGate dialup client, go to *VPN* > *IPsec Tunnels* and create a new tunnel, or edit an existing one.
2. Configure or edit the *Network*, *Authentication*, and *Phase 1 Proposal* sections as needed.
3. In the *XAUTH* section, for *Type*, select *Client*.
4. For *Username*, enter the FortiGate PAP, CHAP, RADIUS, or LDAP user name that the FortiGate XAuth server will compare to its records when the FortiGate XAuth client attempts to connect.
5. Enter the *Password* for the user name.
6. Click *OK*.

Dynamic IPsec route control

You can add a route to a peer destination selector by using the `add-route` option, which is available for all dynamic IPsec phases 1 and 2, for both policy-based and route-based IPsec VPNs.

The `add-route` option adds a route to the FortiGate routing information base when the dynamic tunnel is negotiated. You can use the distance and priority options to set the distance and priority of this route. If this results in a route with the lowest distance, it is added to the FortiGate forwarding information base.

You can also enable `add-route` in any policy-based or route-based phase 2 configuration that is associated with a dynamic (dialup) phase 1. In phase 2, `add-route` can be enabled, disabled, or set to use the same route as phase 1.

The `add-route` option is enabled by default.

To configure add-route in phase 1:

```
config vpn ipsec
    edit <name>
        set type dynamic
        set add-route {enable | disable}
    next
end
```

To configure add-route in phase 2:

```
config vpn ipsec {phase2 | phase2-interface}
    edit <name>
        set add-route {phase1 | enable | disable}
```

```
    next
end
```

Blocking IPsec SA negotiation

For interface-based IPsec, IPsec SA negotiation blocking can only be removed if the peer offers a wildcard selector. If a wildcard selector is offered, then the wildcard route will be added to the routing table with the distance/priority value configured in phase 1. If that is the route with the lowest distance, it will be installed into the forwarding information base.

In this scenario, it is important to ensure that the distance value configured for phase 1 is set appropriately.

Dynamic tunnel interface creation

When configuring route-based IPsec dialup tunnels, the `net-device` setting controls how traffic is routed on the hub:

```
config vpn ipsec phase1-interface
    edit "Spoke"
        set type dynamic
        set net-device {disable | enable}
        set tunnel-search {selectors | nexthop}
    next
end
```

The key settings are `net-device` and `tunnel-search`. When `net-device` is disabled, all dialup tunnels share an interface on the hub. The tunnel selection process is based on the tunnel search method. Using a shared interface eliminates the time needed for dynamic interface creation and tear-down. When `net-device` is enabled, dynamic interfaces are created on the hub for each dialup tunnel. This means that potentially many dynamic interfaces could be created at start-up in a large scale deployment.

Behavior with net-device disabled

After a successful dial-in negotiation, the following occurs on the hub:

1. A dialup tunnel is created for each successful dial-in.
2. The tunnel name takes the form of `<phase1Name_index>`.
   a. For example, the first dialup tunnel to connect is Spoke_1, the second is Spoke_2, and so on.
   To view the tunnel name and the phase 1 parent:

```
Hub # diagnose vpn tunnel list name Spoke_3
list ipsec tunnel by names in vd 0
------------------------------------------------------
name=Spoke_3 ver=1 serial=8 198.51.100.1:0->198.51.100.4:0
bound_if=4 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/320 options
[0140]=search-nexthop rgwy_chg parent=Spoke index=3
```

3. No dynamic interface is created.
4. The networks accessible over dialup tunnels are all bound to the same shared phase 1 interface.
   a. To view the routing table:

```
Hub # get router info routing-table bgp
Routing table for VRF=0
B       192.168.2.0/24 [200/0] via 10.10.10.2, Spoke, 01:04:49
B       192.168.3.0/24 [200/0] via 10.10.10.3, Spoke, 01:04:47
B       192.168.4.0/24 [200/0] via 10.10.10.4, Spoke, 00:35:01
B       192.168.5.0/24 [200/0] via 10.10.10.5, Spoke, 01:04:51
```

When forwarding a packet to the spoke shared interface:

1. The cleartext packet is first sent to the IPsec engine.
2. The IPsec engine finds which tunnel's IPsec security association (SA) is used for protecting this packet.
3. The search logic is based on `set tunnel-search {selectors | nexthop}`.

Tunnel search selectors

This is the default setting, which dictates that IPsec routes are learned from the traffic selectors of the IPsec SA negotiation. These routes are also called IKE routes, and can be displayed using `diagnose vpn ike routes list`.

Tunnel search next hop

This setting is used when you want IPsec routes to be learned from a dynamic routing protocol. The IPsec engine checks the search method associated with the shared interface spoke, and searches the tunnel index associated with the next hop. In this example, while searching for the index associated with next hop 10.10.10.4, index 3 is found corresponding to the Spoke_3 tunnel.

```
Hub # diagnose vpn tunnel list name Spoke
list ipsec tunnel by names in vd 0
------------------------------------------------------
name=Spoke ver=1 serial=1 198.51.100.1:0->0.0.0.0:0
bound_if=4 lgwy=static/1 tun=intf/0 mode=dialup/2 encap=none/64 options[0040]=search-nexthop
proxyid_num=0 child_num=4 refcnt=26 ilast=4159 olast=4159 ad=/0 itn-status=7b
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-demand on=0 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
run_tally=4
ipv4 route tree:
10.10.10.2 2
10.10.10.3 0
10.10.10.4 3
10.10.10.5 1
198.51.100.2 2
198.51.100.3 0
198.51.100.4 3
198.51.100.5 1
```

Behavior with net-device enabled

After a successful dial-in negotiation, the following occurs on the hub:

1. A dialup tunnel is created for each successful dial-in.
2. The tunnel name takes the form of `<phase1Name_index>`.
   a. For example, the first dialup tunnel to connect is Spoke_1, the second is Spoke_2, and so on.
   To view the tunnel name and the phase 1 parent:

   ```
   Hub # diagnose vpn tunnel list name Spoke_3
   list ipsec tunnel by names in vd 0
   ------------------------------------------------------
   name=Spoke_3 ver=1 serial=6 198.51.100.1:0->198.51.100.4:0
   bound_if=4 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/0 parent=Spoke
   index=3
   ```

3. A dynamic interface is created for each dialup tunnel.
   a. To view the interface list:

```
Hub # diagnose netlink interface list | grep "Spoke_"
if=Spoke_0 family=00 type=768 index=22 mtu=1438 link=16 master=0
if=Spoke_1 family=00 type=768 index=23 mtu=1438 link=16 master=0
if=Spoke_2 family=00 type=768 index=24 mtu=1438 link=16 master=0
if=Spoke_3 family=00 type=768 index=26 mtu=1438 link=16 master=0
```

4. The networks accessible over dialup tunnels are bound to the corresponding tunnel interface.
   a. To view the routing table:

```
Hub # get router info routing-table bgp
Routing table for VRF=0
B       192.168.2.0/24 [200/0] via 10.10.10.2, Spoke_0, 01:04:49
B       192.168.3.0/24 [200/0] via 10.10.10.3, Spoke_1, 01:04:47
B       192.168.4.0/24 [200/0] via 10.10.10.4, Spoke_3, 00:35:01
B       192.168.5.0/24 [200/0] via 10.10.10.5, Spoke_2, 01:04:51
```

When forwarding a packet to the dialup IPsec interface:

1. The cleartext packet sent to the dynamic interface is sent to the IPsec engine.
2. The IPsec engine protects the cleartext packets with the IPsec security association (SA) of the corresponding tunnel.
3. The ESP packet is then sent on the wire.

Phase 2 configuration

After phase 1 negotiations end successfully, phase 2 begins. In Phase 2, the VPN peer or client and the FortiGate exchange keys again to establish a secure communication channel. The phase 2 proposal parameters select the encryption and authentication algorithms needed to generate keys for protecting the implementation details of security associations (SAs). The keys are generated automatically using a Diffie-Hellman algorithm.

The basic phase 2 settings associate IPsec phase 2 parameters with the phase 1 configuration that specifies the remote end point of the VPN tunnel. In most cases, you need to configure only basic Phase 2 settings.

Some settings can be configured in the CLI. The following options are available in the *VPN Creation Wizard* after the tunnel is created:

New Phase 2	
Name	Phase 2 definition name.
Local Address	A value of `0.0.0.0/0` means all IP addresses behind the local VPN peer. Add a specific address or range to allow traffic from and to only this local address. See Quick mode selectors on page 1081.
Remote Address	Enter the destination IP address that corresponds to the recipients or network behind the remote VPN peer. A value of `0.0.0.0/0` means all IP addresses behind the remote VPN peer. See Quick mode selectors on page 1081.

Advanced		Select the encryption and authentication algorithms that will be proposed to the remote VPN peer. To establish a VPN connection, at least one of the proposals specified must match the configuration on the remote peer.
	Encryption	The following symmetric-key encryption algorithms are available: • *NULL*: do not use an encryption algorithm. • *DES*: Digital Encryption Standard, a 64-bit block algorithm that uses a 56-bit key. • *3DES*: triple-DES; plain text is encrypted three times by three keys. • *AES128*: Advanced Encryption Standard, a 128-bit block algorithm that uses a 128-bit key. • *AES128GCM*: AES in Galois/Counter Mode, a 128-bit block algorithm that uses a 128-bit key. Only available for IKEv2. • *AES192*: a 128-bit block algorithm that uses a 192-bit key. • *AES256*: a 128-bit block algorithm that uses a 256-bit key. • *AES256GCM*: AES in Galois/Counter Mode, a 128-bit block algorithm that uses a 256-bit key. Only available for IKEv2. • *CHACHA20POLY1305*: a 128-bit block algorithm that uses a 128-bit key and a symmetric cipher. Only available for IKEv2. See ChaCha20 and Poly1305 AEAD cipher on page 1083, AES-GCM for IKEv2 phase 1 on page 1083, and HMAC settings.
	Authentication	The following message digests that check the message authenticity during an encrypted session are available: • NULL: do not use a message digest. • *MD5*: message digest 5. • *SHA1*: secure hash algorithm 1; a 160-bit message digest. • *SHA256*: a 256-bit message digest. • *SHA384*: a 384-bit message digest. • *SHA512*: a 512-bit message digest. See also HMAC settings.
	Enable Replay Detection	Replay attacks occur when an unauthorized party intercepts a series of IPsec packets and replays them back into the tunnel. Replay detection allows the FortiGate to check all IPsec packets to see if they have been received before. If any encrypted packets arrive out of order, the FortiGate discards them. Note that 64-bit extended sequence numbers (as described in RFC 4303, RFC 4304 as an addition to IKEv1, and RFC 5996 for IKEv2) are supported for IPsec when replay detection is enabled.
	Enable Perfect Forward Secrecy (PFS)	Perfect forward secrecy (PFS) improves security by forcing a new Diffie-Hellman exchange whenever keylife expires.
	Diffie-Hellman Group	Asymmetric key algorithms used for public key cryptography.

		Select one or more from groups 1, 2, 5, and 14 through 32. At least one of the *Diffie-Hellman Groups* (DH) settings on the remote peer or client must match one the selections on the FortiGate. Failure to match one or more DH groups will result in failed negotiations.
	Local Port	Enter the port number that the local VPN peer uses to transport traffic related to the specified service (protocol number). The range is from 0 to 65535. To specify all ports, select *All*, or enter `0`.
	Remote Port	Enter the port number that the remote VPN peer uses to transport traffic related to the specified service (protocol number). To specify all ports, select *All*, or enter `0`.
	Protocol	Enter the IP protocol number of the service. To specify all services, select *All*, or enter `0`.
	Auto-negotiate	Select this option for the tunnel to be automatically renegotiated when the it expires. See Auto-negotiate on page 1082.
	Autokey Keep Alive	Select this option for the tunnel to remain active when no data is being processed.
	Key Lifetime	Select the method for determining when the phase 2 key expires: • *Seconds* • *Kilobytes* • *Both* Enter a corresponding value for *Seconds* and/or *Kilobytes* in the text boxes. If *Both* is selected, the key expires when either the time has passed or the number of kilobytes have been processed.

Quick mode selectors

Quick mode selectors determine which IP addresses can perform IKE negotiations to establish a tunnel. By only allowing authorized IP addresses access to the VPN tunnel, the network is more secure.

The default settings are as broad as possible: any IP address or configured address object using any protocol on any port.

When configuring a quick mode selector for *Local Address* and *Remote Address*, valid options include IPv4 and IPv6 single addresses, subnets, or ranges.

There are some configurations that require specific selectors:

- The VPN peer is a third-party device that uses specific phase2 selectors.
- The FortiGate connects as a dialup client to another FortiGate, in which case (usually) you must specify a local IP address, IP address range, or subnet. However, this is not required if you are using dynamic routing and `mode-cfg`.

With FortiOS VPNs, your network has multiple layers of security, with quick mode selectors being an important line of defense:

- Routes guide traffic from one IP address to another.
- Phase 1 and phase 2 connection settings ensure there is a valid remote end point for the VPN tunnel that agrees on the encryption and parameters.
- Quick mode selectors allow IKE negotiations only for allowed peers.

- Security policies control which IP addresses can connect to the VPN.
- Security policies also control what protocols are allowed over the VPN along with any bandwidth limiting.



FortiOS is limited with IKEv2 selector matching. When using IKEv2 with a named traffic selector, no more than 32 subnets per traffic selector are added, since FortiOS does not fully implement the IKEv2 selector matching rules.

The workaround is to use multiple phase 2s. If the configuration is FortiGate <--> FortiGate, then the better alternative is to just use `0.0.0.0 <-> 0.0.0.0` and use the firewall policy for enforcement.

If you are editing an existing phase 2 configuration, the local address and remote address fields are unavailable if the tunnel has been configured to use firewall addresses as selectors. This option exists only in the CLI.

Using the add-route option

Consider using the `add-route` option to add a route to a peer destination selector in phase 2 to automatically match the settings in phase 1.

To configure add-route:

```
config vpn ipsec {phase2 | phase2-interface}
    edit <name>
        set add-route {phase1 | enable | disable}
    next
end
```

Auto-negotiate

By default, the phase 2 security association (SA) is not negotiated until a peer attempts to send data. The triggering packet and some subsequent packets are dropped until the SA is established. Applications normally resend this data, so there is no loss, but there might be a noticeable delay in response to the user.

If the tunnel goes down, the auto-negotiate feature (when enabled) attempts to re-establish the tunnel. Auto-negotiate initiates the phase 2 SA negotiation automatically, repeating every five seconds until the SA is established.

Automatically establishing the SA can be important for a dialup peer. It ensures that the VPN tunnel is available for peers at the server end to initiate traffic to the dialup peer. Otherwise, the VPN tunnel does not exist until the dialup peer initiates traffic.

To configure auto-negotiate:

```
config vpn ipsec phase2
    edit <phase2_name>
        set auto-negotiate enable
    next
end
```

Installing dynamic selectors via auto-negotiate

The IPsec SA connect message generated is used to install dynamic selectors. These selectors can be installed via the auto-negotiate mechanism. When phase 2 has `auto-negotiate` enabled, and phase 1 has `mesh-selector-type` set to `subnet`, a new dynamic selector will be installed for each combination of source and destination subnets. Each

dynamic selector will inherit the auto-negotiate option from the template selector and begin SA negotiation. Phase 2 selector sources from dialup clients will all establish SAs without traffic being initiated from the client subnets to the hub.

DHCP

The `dhcp-ipsec` option lets the FortiGate assign VIP addresses to FortiClient dialup clients through a DHCP server or relay. This option is only available if the remote gateway in the phase 1 configuration is set to dialup user, and it only works in policy-based VPNs.

With `dhcp-ipsec`, the FortiGate dialup server acts as a proxy for FortiClient dialup clients that have VIP addresses on the subnet of the private network behind the FortiGate. In this case, the FortiGate dialup server acts as a proxy on the local private network for the FortiClient dialup client. A host on the network behind the dialup server issues an ARP request, corresponding to the device MAC address of the FortiClient host (when a remote server sends an ARP to the local FortiClient dialup client). The FortiGate then answers the ARP request on behalf of the FortiClient host, and then forwards the associated traffic to the FortiClient host through the tunnel.

Acting as a proxy prevents the VIP address assigned to the FortiClient dialup client from causing possible ARP broadcast problems—the normal and VIP addresses can confuse some network switches when two addresses have the same MAC address.

ChaCha20 and Poly1305 AEAD cipher

In IKEv2 to support RFC 7634, the ChaCha20 and Poly1305 crypto algorithms can be used together as a combined mode AEAD cipher (like AES-GCM) in the `crypto_ftnt` cipher in `cipher_chacha20poly1305.c`:

```
config vpn ipsec phase2-interface
    edit <name>
        set phase1name <name>
        set proposal chacha20poly1305
    next
end
```

AES-GCM for IKEv2 phase 1


In IKEv2 to support RFC 5282, the AEAD algorithm AES-GCM supports 128- and 256-bit variants:

```
config vpn ipsec phase2-interface
    edit <name>
        set phase1name <name>
        set proposal [aes128gcm | aes256gcm]
    next
end
```

VPN security policies

This section explains how to specify the source and destination IP addresses of traffic transmitted through an IPsec VPN, and how to define appropriate security policies.

Topology

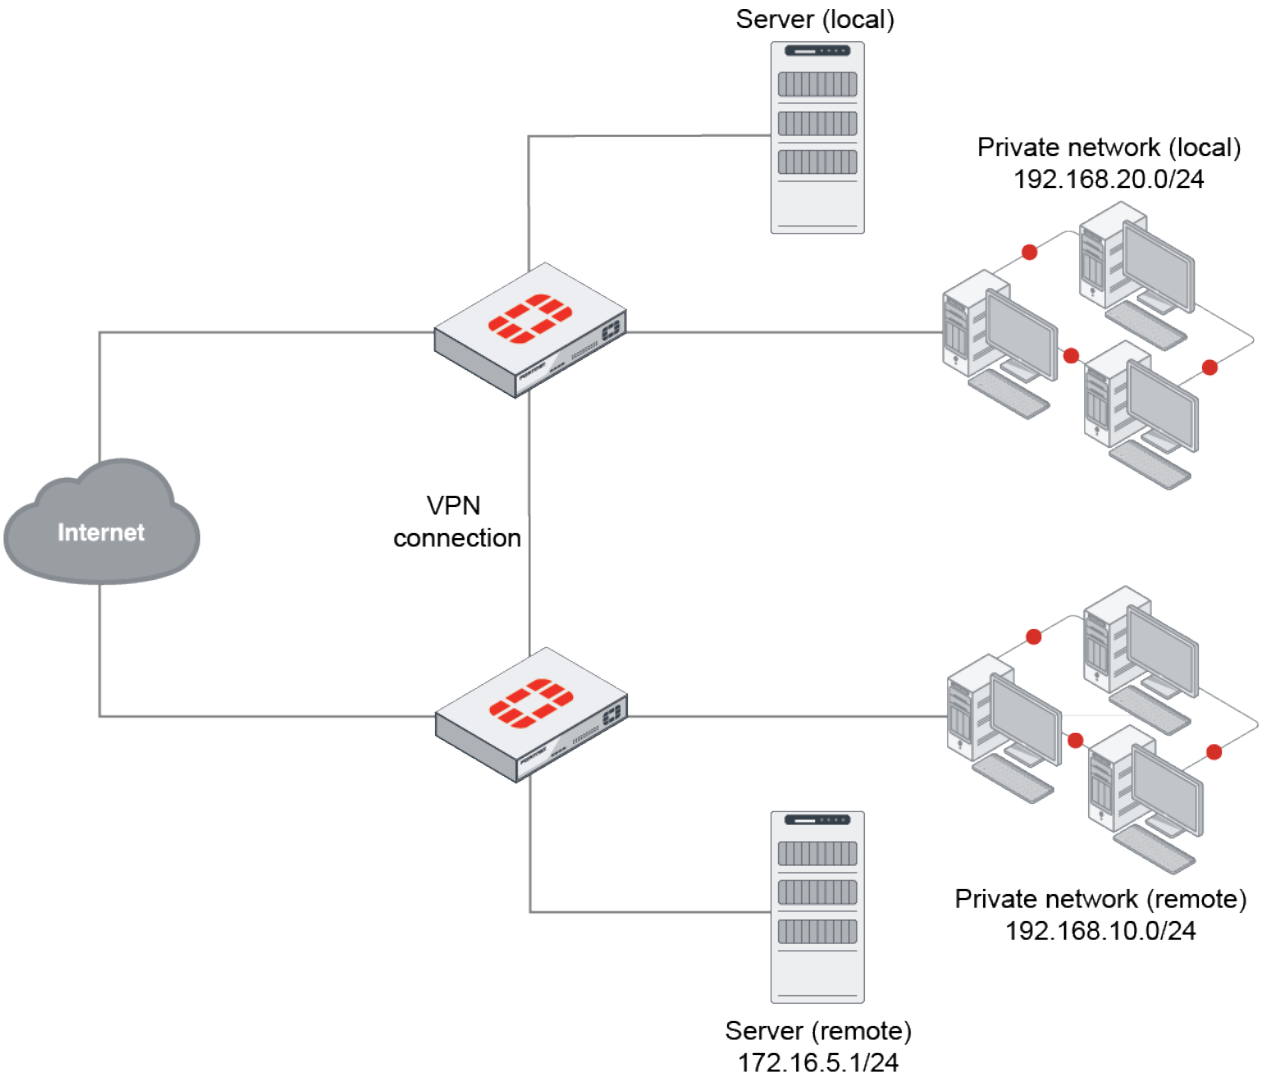

Defining policy addresses

In a gateway-to-gateway, hub-and-spoke, dynamic DNS, redundant tunnel, or transparent configuration, you need to define a policy address for the private IP address of the network behind the remote VPN peer (for example, `192.168.10.0/255.255.255.0` or `192.168.10.0/24`).

In a peer-to-peer configuration, you need to define a policy address for the private IP address of a server or host behind the remote VPN peer (for example, `172.16.5.1/255.255.255.255`, `172.16.5.1/32`, or `172.16.5.1`).

For a FortiGate dialup server in a dialup-client or internet-browsing configuration, the source IP should reflect the IP addresses of the dialup clients:

Defining security policies

Policy-based and route-based VPNs require different security policies.

- A policy-based VPN requires an IPsec policy. You specify the interface to the private network, the interface to the remote peer and the VPN tunnel. A single policy can enable traffic inbound, outbound, or in both directions.
- A route-based VPN requires an accept policy for each direction. For the source and destination interfaces, you specify the interface to the private network and the virtual IPsec interface (phase 1 configuration) of the VPN. The IPsec interface is the destination interface for the outbound policy and the source interface for the inbound policy. One security policy must be configured for each direction of each VPN interface.



If the policy that grants the VPN connection is limited to certain services, DHCP must be included, otherwise the client will not be able to retrieve a lease from the FortiGate's (IPsec) DHCP server because the DHCP request (coming out of the tunnel) will be blocked.

Policy-based VPN

An IPsec policy enables the transmission and reception of encrypted packets, specifies the permitted direction of VPN traffic, and selects the VPN tunnel. In most cases, a single policy is needed to control both inbound and outbound IP traffic through a VPN tunnel. For a detailed example, see Policy-based IPsec tunnel on page 1113. Be aware of the following before creating an IPsec policy.

Allow traffic to be initiated from the remote site

Policies specify which IP addresses can initiate a tunnel. By default, traffic from the local private network initiates the tunnel. When the *Allow traffic to be initiated form the remote site* option is selected, traffic from a dialup client, or a computer on a remote network, initiates the tunnel. Both can be enabled at the same time for bi-directional initiation of the tunnel.

Outbound and inbound NAT

When a FortiGate operates in NAT mode, you can enable inbound or outbound NAT. Outbound NAT may be performed on outbound encrypted packets or IP packets in order to change their source address before they are sent through the tunnel. Inbound NAT is performed to intercept and decrypt emerging IP packets from the tunnel.

By default, these options are not selected in security policies and can only be set through the CLI.

Defining multiple IPsec policies for the same tunnel

You must define at least one IPsec policy for each VPN tunnel. If the same remote server or client requires access to more than one network behind a local FortiGate, the FortiGate must be configured with an IPsec policy for each network. Multiple policies may be required to configure redundant connections to a remote destination or control access to different services at different times.

To ensure a secure connection, the FortiGate must evaluate policies with *Action* set to *IPsec* before *ACCEPT* and *DENY*. Because the FortiGate unit reads policies starting at the top of the list, you must move all IPsec policies to the top of the list, and be sure to reorder your multiple IPsec policies that apply to the tunnel so that specific constraints can be evaluated before general constraints. If you create two equivalent IPsec policies for two different tunnels, the system will select the correct policy based on the specified source and destination addresses.



Adding multiple IPsec policies for the same VPN tunnel can cause conflicts if the policies specify similar source and destination addresses, but have different settings for the same service. When policies overlap in this manner, the system may apply the wrong IPsec policy or the tunnel may fail.

Route-based VPN

When you define a route-based VPN, you create a virtual IPsec interface on the physical interface that connects to the remote peer. You create ordinary accept policies to enable traffic between the IPsec interface and the interface that connects to the private network. This makes configuration simpler than for policy-based VPNs.

To configure policies for a route-based VPN:

1. Go to *Policy & Objects* > *Firewall Policy*.
2. Click *Create New* and define an *ACCEPT* policy to permit communication between the local private network and the private network behind the remote peer and enter these settings in particular:

Name	Enter a name for the security policy.
Incoming Interface	Select the interface that connects to the private network behind this FortiGate.
Outgoing Interface	Select the IPsec interface you configured.
Source	Select the address name you defined for the private network behind this FortiGate.
Destination	Select the address name you defined for the private network behind the remote peer.
Action	Select *ACCEPT*.
NAT	Disable *NAT*.

3. Click *OK*.
   To permit the remote client to initiate communication, you need to define a security policy for communication in that direction.
4. Click *Create New* and enter these settings in particular:

Name	Enter a name for the security policy.
Incoming Interface	Select the IPsec interface you configured.
Outgoing Interface	Select the interface that connects to the private network behind this FortiGate.
Source	Select the address name you defined for the private network behind the remote peer.
Destination	Select the address name you defined for the private network behind this FortiGate.
Action	Select *ACCEPT*.
NAT	Disable *NAT*.

5. Click *OK*.

Blocking unwanted IKE negotiations and ESP packets with a local-in policy

It is not unusual to receive IPsec connection attempts or malicious IKE packets from all over the internet. Malicious parties use these probes to try to establish an IPsec tunnel in order to gain access to your private network. A good way to prevent this is to use local-in policies to deny such traffic.

Sometimes there are malicious attempts using crafted invalid ESP packets. These invalid attempts are automatically blocked by the FOS IPsec local-in handler when it checks the SPI value against the SAs of existing tunnels. The IPsec local-in handler processes the packet instead of the firewall's local-in handler. So when these attempts are blocked, you will notice an `unknown SPI` message in your VPN logs instead of being silently blocked by your local-in policy. These log messages are rate limited.

Sample log and alert email

```
Message meets Alert condition
```

```
date=2020-08-11 time=09:28:40 devname=toSite1 devid=FGT60Fxxxxxxxxxx logid="0101037131"
type="event" subtype="vpn" level="error" vd="root" eventtime=1597163320747963100 tz="-0700"
logdesc="IPsec ESP" msg="IPsec ESP" action="error" remip=131.62.25.102 locip=192.157.116.88
remport=40601 locport=500 outintf="wan1" cookies="N/A" user="N/A" group="N/A"
xauthuser="N/A" xauthgroup="N/A" assignip=N/A vpntunnel="N/A" status="esp_error" error_
num="Received ESP packet with unknown SPI." spi="f6c9e2x1" seq="02000400"
```

Note that invalid SPIs may not always indicate malicious activity. For example, the SPI may not match during rekey, or when one unit flushes its tunnel SAs. Administrators should collect as much information as possible before making a conclusion.

To block undesirable IPsec connection attempts and IKE packets using a local-in policy:

1. Configure an address group that excludes legitimate IPs:

```
config firewall addrgrp
    edit "All_exceptions"
        set member "all"
        set exclude enable
        set exclude-member "remote-vpn"
    next
end
```

2. Create a local-in policy that blocks IKE traffic from the address group:

```
config firewall local-in-policy
    edit 1
        set intf "wan1"
        set srcaddr "All_exceptions"
        set dstaddr "all"
        set service "IKE"
        set schedule "always"
    next
end
```



The default action is deny.

3. Verify the traffic blocked by the local-in policy:

```
# diagnose debug flow filter dport 500
# diagnose debug flow trace start 10
# diagnose debug enable

id=20085 trace_id=290 func=print_pkt_detail line=5588 msg="vd-root:0 received a packet
(proto=17, 10.10.10.13:500->10.10.10.1:500) from wan1. "
id=20085 trace_id=290 func=init_ip_session_common line=5760 msg="allocate a new session-
003442e7"
id=20085 trace_id=290 func=vf_ip_route_input_common line=2598 msg="find a route:
flag=84000000 gw-10.10.10.1 via root"
id=20085 trace_id=290 func=fw_local_in_handler line=430 msg="iprope_in_check() check
failed on policy 1, drop"
```

Site-to-site VPN

A site-to-site VPN connection lets branch offices use the Internet to access the main office's intranet. A site-to-site VPN allows offices in multiple, fixed locations to establish secure connections with each other over a public network such as the Internet.

The following sections provide instructions for configuring site-to-site VPNs:

- FortiGate-to-FortiGate on page 1088
- FortiGate-to-third-party on page 1119


FortiGate-to-FortiGate

This section contains the following topics about FortiGate-to-FortiGate VPN configurations:

- Basic site-to-site VPN with pre-shared key on page 1088
- Site-to-site VPN with digital certificate on page 1093
- Site-to-site VPN with overlapping subnets on page 1100
- GRE over IPsec on page 1108
- Policy-based IPsec tunnel on page 1113

Basic site-to-site VPN with pre-shared key

This is a sample configuration of IPsec VPN authenticating a remote FortiGate peer with a pre-shared key.

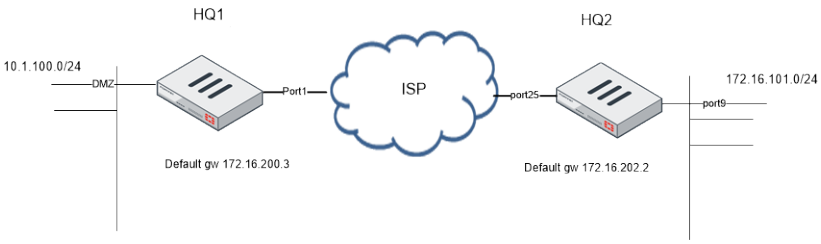

To configure IPsec VPN authenticating a remote FortiGate peer with a pre-shared key in the GUI:

1. Configure the HQ1 FortiGate.
   a. Go to *VPN* > *IPsec Wizard* and configure the following settings for *VPN Setup*:
      i. Enter a VPN name.
      ii. For *Template Type*, select *Site to Site*.
      iii. For *Remote Device Type*, select *FortiGate*.
      iv. For *NAT Configuration*, select *No NAT Between Sites*.
      v. Click *Next*.
   b. Configure the following settings for *Authentication*:
      i. For *Remote Device*, select *IP Address*.
      ii. For the IP address, enter *172.16.202.1*.
      iii. For *Outgoing interface*, enter *port1*.
      iv. For *Authentication Method*, select *Pre-shared Key*.
      v. In the *Pre-shared Key* field, enter *sample* as the key.
      vi. Click *Next*.
   c. Configure the following settings for *Policy & Routing*:
      i. From the *Local Interface* dropdown menu, select the local interface.
      ii. Configure the *Local Subnets* as *10.1.100.0*.
      iii. Configure the *Remote Subnets* as *172.16.101.0*.
      iv. Click *Create*.
2. Configure the HQ2 FortiGate.
   a. Go to *VPN* > *IPsec Wizard* and configure the following settings for *VPN Setup*:
      i. Enter a VPN name.
      ii. For *Template Type*, select *Site to Site*.
      iii. For *Remote Device Type*, select *FortiGate*.
      iv. For *NAT Configuration*, select *No NAT Between Sites*.
      v. Click *Next*.
   b. Configure the following settings for *Authentication*:
      i. For *Remote Device*, select *IP Address*.
      ii. For the IP address, enter *172.16.2001*.
      iii. For *Outgoing interface*, enter *port25*.
      iv. For *Authentication Method*, select *Pre-shared Key*.
      v. In the *Pre-shared Key* field, enter *sample* as the key.
      vi. Click *Next*.
   c. Configure the following settings for *Policy & Routing*:
      i. From the *Local Interface* dropdown menu, select the local interface.
      ii. Configure *Local Subnets* as *172.16.101.0*.
      iii. Configure the *Remote Subnets* as *10.1.100.0*.
      iv. Click *Create*.

To configure IPsec VPN authenticating a remote FortiGate peer with a pre-shared key using the CLI:

1. Configure the WAN interface and default route. The WAN interface is the interface connected to the ISP. The IPsec tunnel is established over the WAN interface.

a. Configure HQ1.

```
config system interface
    edit "port1"
        set vdom "root"
        set ip 172.16.200.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 172.16.200.3
        set device "port1"
    next
end
```

b. Configure HQ2.

```
config system interface
    edit "port25"
        set vdom "root"
        set ip 172.16.202.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 172.16.202.2
        set device "port25"
    next
end
```

2. Configure the internal (protected subnet) interface. The internal interface connects to the corporate internal network. Traffic from this interface routes out the IPsec VPN tunnel.

a. Configure HQ1.

```
config system interface
    edit "dmz"
        set vdom "root"
        set ip 10.1.100.1 255.255.255.0
    next
end
```

b. Configure HQ2.

```
config system interface
    edit "port9"
        set vdom "root"
        set ip 172.16.101.1 255.255.255.0
    next
end
```

3. Configure the IPsec phase1-interface.

a. Configure HQ1.

```
config vpn ipsec phase1-interface
    edit "to_HQ2"
        set interface "port1"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
```

```
        set remote-gw 172.16.202.1
        set psksecret sample
    next
end
```

b. Configure HQ2.

```
config vpn ipsec phase1-interface
    edit "to_HQ1"
        set interface "port25"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set remote-gw 172.16.200.1
        set psksecret  sample
    next
end
```

4. Configure the IPsec phase2-interface.

a. Configure HQ1.

```
config vpn ipsec phase2-interface
    edit "to_HQ2"
        set phase1name "to_HQ2"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
        set auto-negotiate enable
    next
end
```

b. Configure HQ2.

```
config vpn ipsec phase2-interface
    edit "to_HQ2"
        set phase1name "to_HQ1"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
        set auto-negotiate enable
    next
end
```

5. Configure the static routes. Two static routes are added to reach the remote protected subnet. The blackhole route is important to ensure that IPsec traffic does not match the default route when the IPsec tunnel is down.

a. Configure HQ1.

```
config router static
    edit 2
        set dst 172.16.101.0 255.255.255.0
        set device "to_HQ2"
    next
    edit 3
        set dst 172.16.101.0 255.255.255.0
        set blackhole enable
        set distance 254
    next
end
```

b. Configure HQ2.

```
config router static
    edit 2
        set dst 10.1.100.0 255.255.255.0
        set device "to_HQ1"
    next
    edit 3
        set dst 10.1.100.0 255.255.255.0
        set blackhole enable
        set distance 254
     next
end
```

6. Configure two firewall policies to allow bidirectional IPsec traffic flow over the IPsec VPN tunnel.

a. Configure HQ1.

```
config firewall policy
    edit 1
        set name "inbound"
        set srcintf "to_HQ2"
        set dstintf "dmz"
        set srcaddr "172.16.101.0"
        set dstaddr "10.1.100.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "outbound"
        set srcintf "dmz"
        set dstintf "to_HQ2"
        set srcaddr "10.1.100.0"
        set dstaddr "172.16.101.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

b. Configure HQ2.

```
config firewall policy
    edit 1
        set name "inbound"
        set srcintf "to_HQ1"
        set dstintf "port9"
        set srcaddr "10.1.100.0"
        set dstaddr "172.16.101.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "outbound"
        set srcintf "port9"
        set dstintf "to_HQ1"
        set srcaddr "172.16.101.0"
```

```
            set dstaddr "10.1.100.0"
            set action accept
            set schedule "always"
            set service "ALL"
        next
    end
```

7. Run `diagnose` commands. The `diagnose debug application ike -1` command is the key to troubleshoot why the IPsec tunnel failed to establish. If the PSK failed to match, the following error shows up in the debug output:

```
ike 0:to_HQ2:15037: parse error
ike 0:to_HQ2:15037: probable pre-shared secret mismatch'
```

The following commands are useful to check IPsec phase1/phase2 interface status.

a. Run the `diagnose vpn ike gateway list` command on HQ1. The system should return the following:


```
vd: root/0
name: to_HQ2
version: 1
interface: port1 11
addr: 172.16.200.1:500 -> 172.16.202.1:500
created: 5s ago
IKE SA: created 1/1 established 1/1 time 0/0/0 ms
IPsec SA: created 2/2 established 2/2 time 0/0/0 ms
id/spi: 12 6e8d0532e7fe8d84/3694ac323138a024
direction: responder
status: established 5-5s ago = 0ms
proposal: aes128-sha256
key: b3efb46d0d385aff-7bb9ee241362ee8d
lifetime/rekey: 86400/86124
DPD sent/recv: 00000000/00000000
```

b. Run the `diagnose vpn tunnel list` command on HQ1. The system should return the following:

```
list all ipsec tunnel in vd 0
name=to_HQ2 ver=1 serial=1 172.16.200.1:0->172.16.202.1:0
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_
dev frag-rfcaccept_traffic=1
proxyid_num=1 child_num=0 refcnt=11 ilast=7 olast=87 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=to_HQ2 proto=0 sa=1 ref=2 serial=1 auto-negotiate
src: 0:0.0.0.0/0.0.0.0:0
dst: 0:0.0.0.0/0.0.0.0:0
SA: ref=3 options=18227 type=00 soft=0 mtu=1438 expire=42927/0B replaywin=2048
seqno=1 esn=0 replaywin_lastseq=00000000 itn=0
life: type=01 bytes=0/0 timeout=42930/43200
dec: spi=ef9ca700 esp=aes key=16 a2c6584bf654d4f956497b3436f1cfc7
ah=sha1 key=20 82c5e734bce81e6f18418328e2a11aeb7baa021b
enc: spi=791e898e esp=aes key=16 0dbb4588ba2665c6962491e85a4a8d5a
ah=sha1 key=20 2054b318d2568a8b12119120f20ecac97ab730b3
dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
```

Site-to-site VPN with digital certificate

This is a sample configuration of IPsec VPN authenticating a remote FortiGate peer with a certificate. The certificate on one peer is validated by the presence of the CA certificate installed on the other peer.

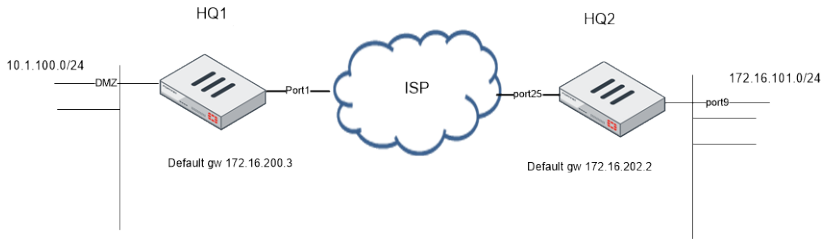

To configure IPsec VPN authenticating a remote FortiGate peer with a digital certificate in the GUI:

1. Import the certificate.
2. Configure user peers.
3. Configure the HQ1 FortiGate.
   a. Go to *VPN* > *IPsec Wizard* and configure the following settings for *VPN Setup*:
      i. Enter a VPN name.
      ii. For *Template Type*, select *Site to Site*.
      iii. For *Remote Device Type*, select *FortiGate*.
      iv. For *NAT Configuration*, select *No NAT Between Sites*.
      v. Click *Next*.
   b. Configure the following settings for *Authentication*:
      i. For *Remote Device*, select *IP Address*.
      ii. For the IP address, enter *172.16.202.1*.
      iii. For *Outgoing interface*, enter *port1*.
      iv. For *Authentication Method*, select *Signature*.
      v. In the *Certificate name* field, select the imported certificate.
      vi. From the *Peer Certificate CA* dropdown list, select the desired peer CA certificate.
      vii. Click *Next*.
   c. Configure the following settings for *Policy & Routing*:
      i. From the *Local Interface* dropdown menu, select the local interface.
      ii. Configure the *Local Subnets* as *10.1.100.0*.
      iii. Configure the *Remote Subnets* as *172.16.101.0*.
      iv. Click *Create*.
4. Configure the HQ2 FortiGate.
   a. Go to *VPN* > *IPsec Wizard* and configure the following settings for *VPN Setup*:
      i. Enter a VPN name.
      ii. For *Template Type*, select *Site to Site*.
      iii. For *Remote Device Type*, select *FortiGate*.
      iv. For *NAT Configuration*, select *No NAT Between Sites*.
      v. Click *Next*.
   b. Configure the following settings for *Authentication*:
      i. For *Remote Device*, select *IP Address*.
      ii. For the IP address, enter *172.16.2001*.
      iii. For *Outgoing interface*, enter *port25*.
      iv. For *Authentication Method*, select *Signature*.
      v. In the *Certificate name* field, select the imported certificate.

vi. From the *Peer Certificate CA* dropdown list, select the peer CA certificate.
vii. Click *Next*.

c. Configure the following settings for *Policy & Routing*:
i. From the *Local Interface* dropdown menu, select the local interface.
ii. Configure *Local Subnets* as *172.16.101.0*.
iii. Configure the *Remote Subnets* as *10.1.100.0*.
iv. Click *Create*.

To configure IPsec VPN authenticating a remote FortiGate peer with a digital certificate using the CLI:

1. Configure the WAN interface and default route. The WAN interface is the interface connected to the ISP. The IPsec tunnel is established over the WAN interface.
   a. Configure HQ1.

```
config system interface
    edit "port1"
        set vdom "root"
        set ip 172.16.200.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 172.16.200.3
        set device "port1"
    next
end
```

   b. Configure HQ2.

```
config system interface
    edit "port25"
        set vdom "root"
        set ip 172.16.202.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 172.16.202.2
        set device "port25"
    next
end
```

2. Configure the internal (protected subnet) interface. The internal interface connects to the corporate internal network. Traffic from this interface routes out the IPsec VPN tunnel.
   a. Configure HQ1.

```
config system interface
    edit "dmz"
        set vdom "root"
        set ip 10.1.100.1 255.255.255.0
    next
end
```

b. Configure HQ2.

```
config system interface
    edit "port9"
        set vdom "root"
        set ip 172.16.101.1 255.255.255.0
    next
end
```

3. Configure the import certificate and its CA certificate information. The certificate and its CA certificate must be imported on the remote peer FortiGate and on the primary FortiGate before configuring IPsec VPN tunnels. If the built-in Fortinet_Factory certificate and the Fortinet_CA CA certificate are used for authentication, you can skip this step.
   a. Configure HQ1.

```
config vpn certificate local
    edit "test1"
        ...
        set range global
    next
end
config vpn certificate ca
    edit "CA_Cert_1"
        ...
        set range global
    next
end
```

   b. Configure HQ2.

```
config vpn certificate local
    edit "test2"
        ...
        set range global
    next
end
config vpn certificate ca
    edit "CA_Cert_1"
        ...
        set range global
    next
end
```

4. Configure the peer user. The peer user is used in the IPsec VPN tunnel peer setting to authenticate the remote peer FortiGate.
   a. If not using the built-in Fortinet_Factory certificate and Fortinet_CA CA certificate, do the following:
      i. Configure HQ1.

```
config user peer
    edit "peer1"
        set ca "CA_Cert_1"
    next
end
```

      ii. Configure HQ2.

```
config user peer
    edit "peer2"
        set ca "CA_Cert_1"
```

```
        next
    end
```

b. If the built-in Fortinet_Factory certificate and Fortinet_CA CA certificate are used for authentication, the peer user must be configured based on Fortinet_CA.

i. Configure HQ1.

```
config user peer
    edit "peer1"
        set ca "Fortinet_CA"
    next
end
```

ii. Configure HQ2.

```
config user peer
    edit "peer2"
        set ca "Fortinet_CA"
    next
end
```

5. Configure the IPsec phase1-interface.

a. Configure HQ1.

```
config vpn ipsec phase1-interface
    edit "to_HQ2"
        set interface "port1"
        set authmethod signature
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set remote-gw 172.16.202.1
        set certificate "test1"
        set peer "peer1"
    next
end
```

b. Configure HQ2.

```
config vpn ipsec phase1-interface
    edit "to_HQ1"
        set interface "port25"
        set authmethod signature
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set remote-gw 172.16.200.1
        set certificate "test2"
        set peer "peer2"
    next
end
```

6. Configure the IPsec phase2-interface.

a. Configure HQ1.

```
config vpn ipsec phase2-interface
    edit "to_HQ2"
        set phase1name "to_HQ2"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
        set auto-negotiate enable
```

```
    next
end
```

b. Configure HQ2.

```
config vpn ipsec phase2-interface
    edit "to_HQ2"
        set phase1name "to_HQ1"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
        set auto-negotiate enable
    next
end
```

7. Configure the static routes. Two static routes are added to reach the remote protected subnet. The blackhole route is important to ensure that IPsec traffic does not match the default route when the IPsec tunnel is down.

a. Configure HQ1.

```
config router static
    edit 2
        set dst 172.16.101.0 255.255.255.0
        set device "to_HQ2"
    next
    edit 3
        set dst 172.16.101.0 255.255.255.0
        set blackhole enable
        set distance 254
    next
end
```

b. Configure HQ2.

```
config router static
    edit 2
        set dst 10.1.100.0 255.255.255.0
        set device "to_HQ1"
    next
    edit 3
        set dst 10.1.100.0 255.255.255.0
        set blackhole enable
        set distance 254
     next
end
```

8. Configure two firewall policies to allow bidirectional IPsec traffic flow over the IPsec VPN tunnel.

a. Configure HQ1.

```
config firewall policy
    edit 1
        set name "inbound"
        set srcintf "to_HQ2"
        set dstintf "dmz"
        set srcaddr "172.16.101.0"
        set dstaddr "10.1.100.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
```

```
    edit 2
        set name "outbound"
        set srcintf "dmz"
        set dstintf "to_HQ2"
        set srcaddr "10.1.100.0"
        set dstaddr "172.16.101.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

b. Configure HQ2.

```
config firewall policy
    edit 1
        set name "inbound"
        set srcintf "to_HQ1"
        set dstintf "port9"
        set srcaddr "10.1.100.0"
        set dstaddr "172.16.101.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "outbound"
        set srcintf "port9"
        set dstintf "to_HQ1"
        set srcaddr "172.16.101.0"
        set dstaddr "10.1.100.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

9. Run `diagnose` commands. The `diagnose debug application ike -1` command is the key to troubleshoot why the IPsec tunnel failed to establish. If the remote FortiGate certificate cannot be validated, the following error shows up in the debug output:

```
ike 0: to_HQ2:15314: certificate validation failed
```

The following commands are useful to check IPsec phase1/phase2 interface status.

a. Run the `diagnose vpn ike gateway list` command on HQ1. The system should return the following:

```
vd: root/0
name: to_HQ2
version: 1
interface: port1 11
addr: 172.16.200.1:500 -> 172.16.202.1:500
created: 7s ago
peer-id: C = CA, ST = BC, L = Burnaby, O = Fortinet, OU = QA, CN = test2
peer-id-auth: yes
IKE SA: created 1/1 established 1/1 time 70/70/70 ms
IPsec SA: created 1/1 established 1/1 time 80/80/80 ms
id/spi: 15326 295be407fbddfc13/7a5a52afa56adf14 direction: initiator status:
```

```
established 7-7s ago = 70ms proposal: aes128-sha256 key: 4aa06dbee359a4c7-
43570710864bcf7b lifetime/rekey: 86400/86092 DPD sent/recv: 00000000/00000000 peer-
id: C = CA, ST = BC, L = Burnaby, O = Fortinet, OU = QA, CN = test2
```

b. Run the `diagnose vpn tunnel list` command on HQ1. The system should return the following:


```
list all ipsec tunnel in vd 0
name=to_HQ2 ver=1 serial=1 172.16.200.1:0->172.16.202.1:0
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_
dev frag-rfcaccept_traffic=1
proxyid_num=1 child_num=0 refcnt=14 ilast=19 olast=179 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=vpn-f proto=0 sa=1 ref=2 serial=1 auto-negotiate
src: 0:0.0.0.0/0.0.0.0:0
dst: 0:0.0.0.0/0.0.0.0:0
SA: ref=3 options=18227 type=00 soft=0 mtu=1438 expire=42717/0B replaywin=2048
seqno=1 esn=0 replaywin_lastseq=00000000 itn=0
life: type=01 bytes=0/0 timeout=42897/43200
dec: spi=72e87de7 esp=aes key=16 8b2b93e0c149d6f22b1c0b96ea450e6c
ah=sha1 key=20 facc655e5f33beb7c2b12e718a6d55413ce3efa2
enc: spi=5c52c865 esp=aes key=16 8d0c4e4adbf2338beed569b2b3205ece
ah=sha1 key=20 553331628612480ab6d7d563a00e2a967ebabcdd
dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
```

Site-to-site VPN with overlapping subnets

This is a sample configuration of IPsec VPN to allow transparent communication between two overlapping networks that are located behind different FortiGates using a route-based tunnel with source and destination NAT.

In the following topology, both FortiGates (HQ and Branch) use 192.168.1.0/24 as their internal network, but both networks need to be able to communicate to each other through the IPsec tunnel.


New virtual subnets of equal size must be configured and used for all communication between the two overlapping subnets. The devices on both local networks do not need to change their IP addresses. However, the devices and users must use the new subnet range of the remote network to communicate across the tunnel.

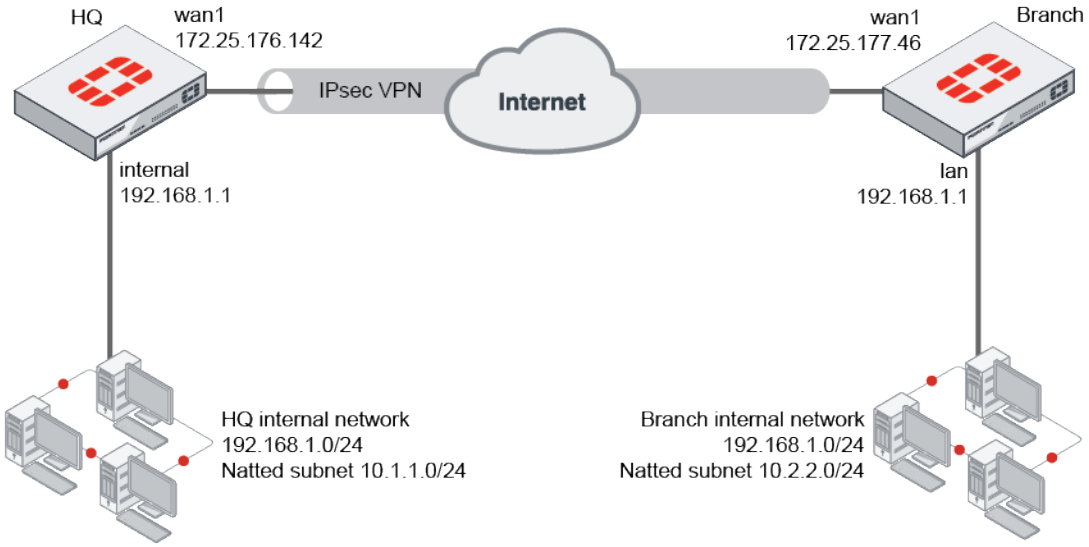


Configuring the HQ FortiGate

To configure IPsec VPN:


1. Go to *VPN* > *IPsec Wizard* and select the *Custom* template.
2. Enter the name *VPN-to-Branch* and click *Next*.
3. For the *IP Address*, enter the Branch public IP address (*172.25.177.46*), and for *Interface*, select the HQ WAN interface (*wan1*).

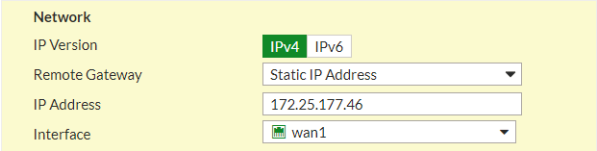


4. For *Pre-shared Key*, enter a secure key. You will use the same key when configuring IPsec VPN on the Branch FortiGate.



5. In the *Phase 2 Selectors* section, enter the subnets for the *Local Address* (*10.1.1.0/24*) and *Remote Address* (*10.2.2.0/24*).

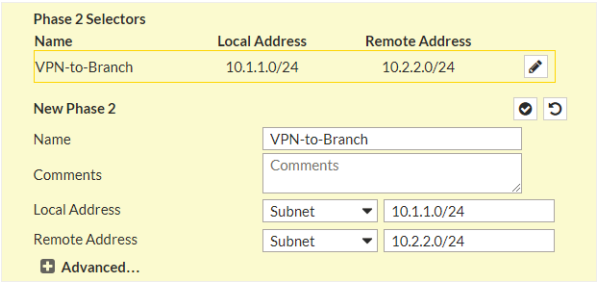


6. Optionally, expand *Advanced* and enable *Auto-negotiate*.



7. Click *OK*.


To configure the static routes:

1. Go to *Network* > *Static Routes* and click *Create New*.
2. In the *Destination* field, enter the remote address subnet (*10.2.2.0/24*).
3. For *Interface*, select the VPN tunnel you just created, *VPN-to-Branch*.




4. Click *OK*.
5. Create another route with the same *Destination*, but change the *Administrative Distance* to *200* and for *Interface*, select *Blackhole*. This is a best practice for route-based IPsec VPN tunnels because it ensures traffic for the remote

FortiGate's subnet is not sent using the default route in the event that the IPsec tunnel goes down.




To configure the address objects:

1. Go to *Policy & Objects* > *Addresses* and click *Create New* > *Address*.
2. For *Name*, enter *HQ-original*.
3. For *IP/Netmask*, enter the original LAN subnet of HQ (*192.168.1.0/24*).
4. For *Interface*, select the LAN-side interface (*internal*).

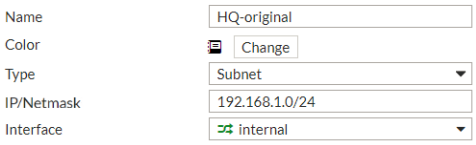


5. Click *OK*
6. Create another address object named *Branch-new*, but for *IP/Netmask*, enter the new LAN subnet of Branch (*10.2.2.0/24*), and select the VPN interface (*VPN-to-Branch*).

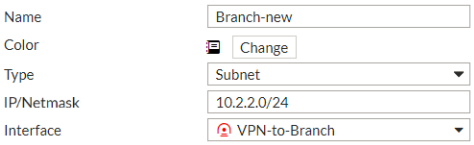

To configure the IP pool:


1. Go to *Policy & Objects* > *IP Pools* and click *Create New*.
2. For *Name*, enter *HQ-new*.
3. For *Type*, select *Fixed Port Range*.
4. Enter the *External IP address/range* (*10.1.1.1 – 10.1.1.254*, the new HQ subnet) and *Internal IP Range* (*192.168.1.1 – 192.168.1.254*, the original HQ subnet).

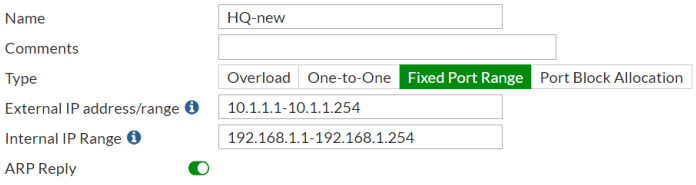

5. Click *OK*.

To configure the VIP:


1. Go to *Policy & Objects* > *Virtual IPs* and click *Create New* > *Virtual IP*.
2. For *Name*, enter *HQ-new-to-original*.
3. For *Interface*, select the VPN interface (*VPN-to-Branch*).
4. Enter the *External IP address/range* (*10.1.1.1 – 10.1.1.254*, the new HQ subnet) and *Mapped IP address/range* (*192.168.1.1 – 192.168.1.254*, the original HQ subnet).

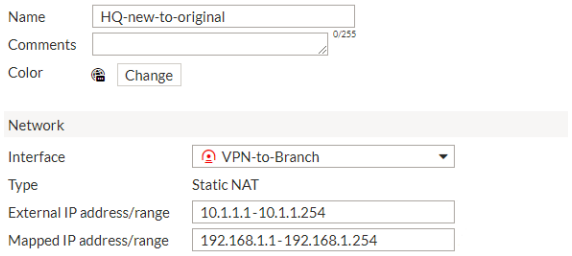

5. Click *OK*.

To configure the firewall policy for traffic from HQ to Branch:

1. Go to *Policy & Objects* > *Firewall Policy* and click *Create New*.
2. For *Name*, enter *From-HQ-to-Branch*.
3. For *Incoming Interface*, select the LAN-side interface (*internal*).
4. For *Outgoing Interface*, select the VPN tunnel interface (*VPN-to-Branch*).
5. For *Source*, select *HQ-original*.
6. For *Destination*, select *Branch-new*.
7. For *Service*, select *ALL*.
8. Enable *NAT*.
9. Select *Use Dynamic IP Pool* and select the *HQ-new* IP pool.

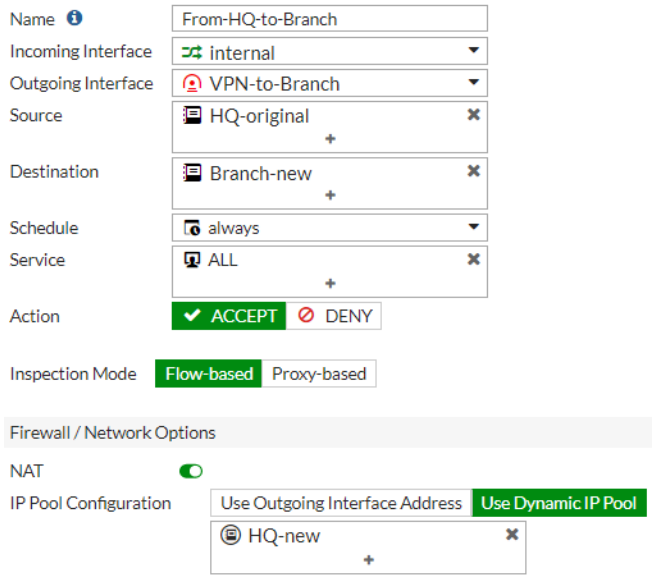


10. Click *OK*.

To configure the firewall policy for traffic from Branch to HQ:

1. Click *Create New* and for *Name*, enter *From-Branch-to HQ*.
2. For *Incoming Interface*, select the VPN tunnel interface (*VPN-to-Branch*).
3. For *Outgoing Interface*, select the LAN-side interface (*internal*).
4. For *Source*, select *Branch-new*.
5. For *Destination*, select the *HQ-new-to-original* VIP.
6. For *Service*, select *ALL*.

7. Disable *NAT*.

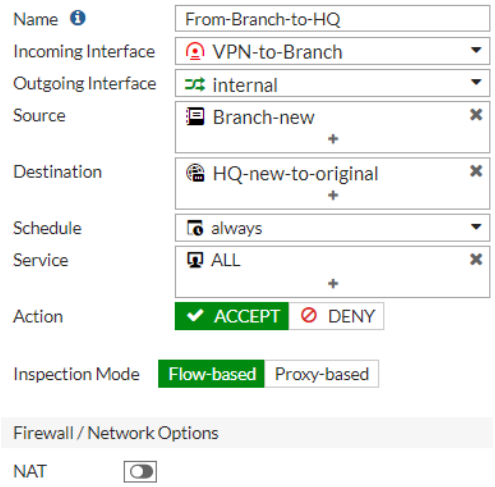


8. Click *OK*.


Configuring the Branch FortiGate

To configure IPsec VPN:


1. Go to *VPN* > *IPsec Wizard* and select the *Custom* template.
2. Enter the name *VPN-to-HQ* and click *Next*.
3. For the *IP Address*, enter the HQ public IP address (*172.25.176.142*), and for *Interface*, select the Branch WAN interface (*wan1*).

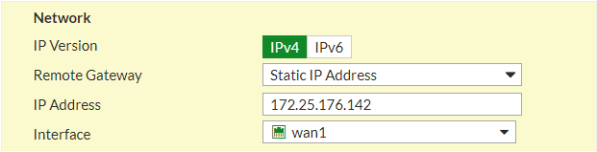


4. For *Pre-shared Key*, enter the matching secure key used in the *VPN-to-Branch* tunnel.



5. In the *Phase 2 Selectors* section, enter the subnets for the *Local Address* (*10.2.2.0/24*) and *Remote Address* (*10.1.1.0/24*).

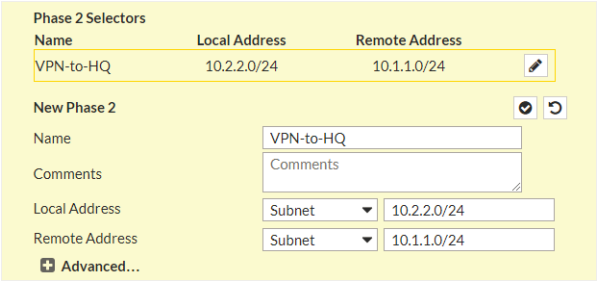


6. Optionally, expand *Advanced* and enable *Auto-negotiate*.




7. Click *OK*.

To configure the static routes:

1. Go to *Network* > *Static Routes* and click *Create New*.
2. In the *Destination* field, enter the remote address subnet (*10.1.1.0/24*).
3. For *Interface*, select the VPN tunnel you just created, *VPN-to-HQ*.




4. Click *OK*.
5. Create another route with the same *Destination*, but change the *Administrative Distance* to *200* and for *Interface*, select *Blackhole*.




To configure the address objects:

1. Go to *Policy & Objects* > *Addresses* and click *Create New* > *Address*.
2. For *Name*, enter *Branch-original*.
3. For *IP/Netmask*, enter the original LAN subnet of Branch (*192.168.1.0/24*).
4. For *Interface*, select the LAN-side interface (*lan*).

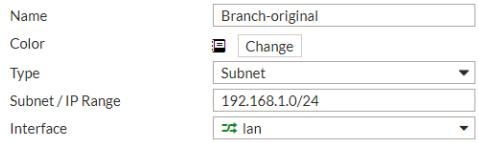


5. Click *OK*
6. Create another address object named *HQ-new*, but for *IP/Netmask*, enter the new LAN subnet of HQ (*10.1.1.0/24*), and select the VPN interface (*VPN-to-HQ*).

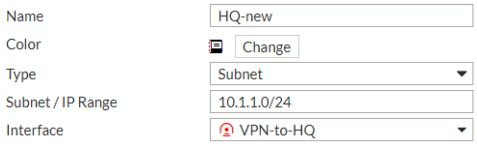

To configure the IP pool:


1. Go to *Policy & Objects* > *IP Pools* and click *Create New*.
2. For *Name*, enter *Branch-new*.
3. For *Type*, select *Fixed Port Range*.
4. Enter the *External IP address/range* (*10.2.2.1 – 10.2.2.254*, the new Branch subnet) and *Internal IP Range* (*192.168.1.1 – 192.168.1.254*, the original Branch subnet).

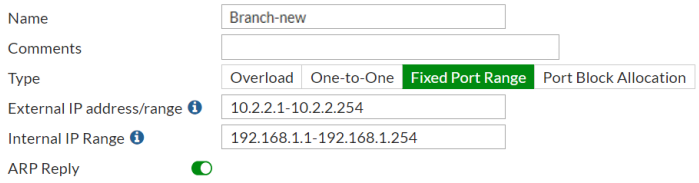

5. Click *OK*.

To configure the VIP:


1. Go to *Policy & Objects* > *Virtual IPs* and click *Create New* > *Virtual IP*.
2. For *Name*, enter *Branch-new-to-original*.
3. For *Interface*, select the VPN interface (*VPN-to-HQ*).
4. Enter the *External IP address/range* (*10.2.2.1 – 10.2.2.254*, the new Branch subnet) and *Mapped IP address/range* (*192.168.1.1 – 192.168.1.254*, the original Branch subnet).

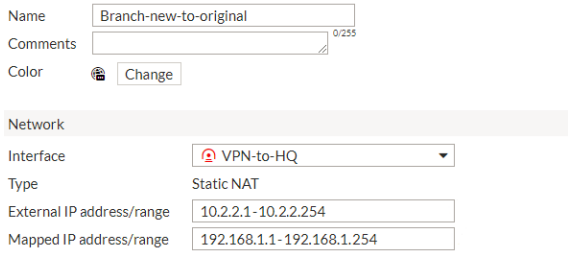

5. Click *OK*.

To configure the firewall policy for traffic from Branch to HQ:


1. Go to *Policy & Objects* > *Firewall Policy* and click *Create New*.
2. For *Name*, enter *From-Branch-to-HQ*.
3. For *Incoming Interface*, select the LAN-side interface (*lan*).
4. For *Outgoing Interface*, select the VPN tunnel interface (*VPN-to-HQ*).
5. For *Source*, select *Branch-original*.
6. For *Destination*, select *HQ-new*.
7. For *Service*, select *ALL*.
8. Enable *NAT*.
9. Select *Use Dynamic IP Pool* and select the *Branch-new* IP pool.

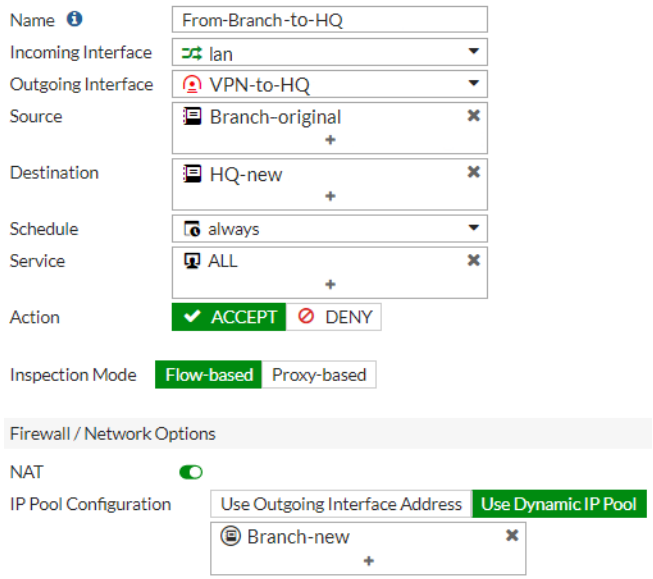

10. Click *OK*.

To configure the firewall policy for traffic from HQ to Branch:

1. Click *Create New* and for *Name*, enter *From-HQ-to-Branch*.
2. For *Incoming Interface*, select the VPN tunnel interface (*VPN-to-HQ*).
3. For *Outgoing Interface*, select the LAN-side interface (*lan*).
4. For *Source*, select *HQ-new*.
5. For *Destination*, select the *Branch-new-to-original* VIP.
6. For *Service*, select *ALL*.
7. Disable *NAT*.

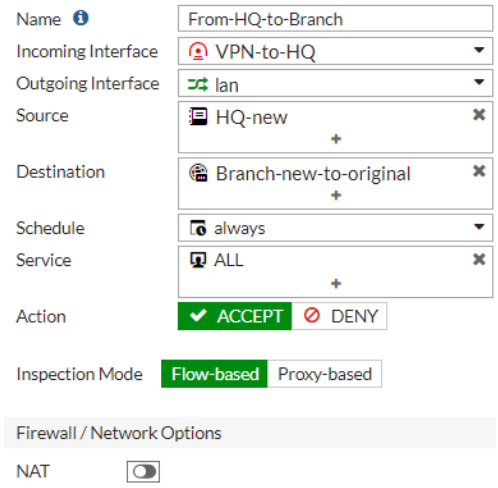

8. Click *OK*.

To verify the communication across the tunnel:

1. Go to *Dashboard* > *Network* and click the *IPsec* widget to expand to full screen view. The tunnels should be up on both FortiGates. If you did not enable *Auto-negotiate* in the IPsec VPN settings, you may have to select the tunnel and click *Bring Up*.
2. From a PC on the HQ network, ping a PC on the Branch network using the new IP for the Branch PC. The ping should be successful.

```
C:\Users\jheadley>ping 10.2.2.98

Pinging 10.2.2.98 with 32 bytes of data:
Reply from 10.2.2.98: bytes=32 time=7ms TTL=62
Reply from 10.2.2.98: bytes=32 time=1ms TTL=62
Reply from 10.2.2.98: bytes=32 time=1ms TTL=62
Reply from 10.2.2.98: bytes=32 time=1ms TTL=62

Ping statistics for 10.2.2.98:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
Approximate round trip times in milli-seconds:
    Minimum = 1ms, Maximum = 7ms, Average = 2ms
```


3. From a PC on the Branch network, ping a PC on the HQ network using the new IP for the HQ PC. The ping should

be successful.

```
Johns-MacBook-Air:~ John$ ping 10.1.1.12
PING 10.1.1.12 (10.1.1.12): 56 data bytes
64 bytes from 10.1.1.12: icmp_seq=0 ttl=126 time=1.912 ms
64 bytes from 10.1.1.12: icmp_seq=1 ttl=126 time=1.743 ms
64 bytes from 10.1.1.12: icmp_seq=2 ttl=126 time=1.403 ms
64 bytes from 10.1.1.12: icmp_seq=3 ttl=126 time=1.425 ms
^C
--- 10.1.1.12 ping statistics ---
4 packets transmitted, 4 packets received, 0.0% packet loss
round-trip min/avg/max/stddev = 1.403/1.621/1.912/0.215 ms
```

GRE over IPsec

This is an example of GRE over an IPsec tunnel using a static route over GRE tunnel and `tunnel-mode` in the `phase2-interface` settings.

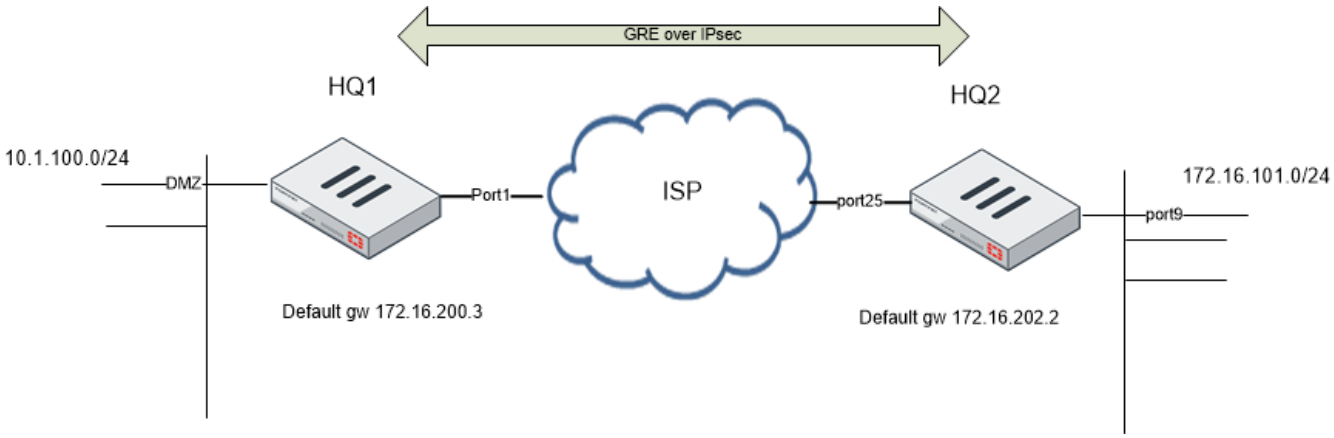

To configure GRE over an IPsec tunnel:

1. Enable subnet overlapping at both HQ1 and HQ2.

```
config system settings
    set allow-subnet-overlap enable
end
```

2. Configure the WAN interface and static route.
   a. HQ1.

```
config system interface
    edit "port1"
        set ip 172.16.200.1 255.255.255.0
    next
    edit "dmz"
        set ip 10.1.100.1 255.255.255.0
    next
end
config router static
    edit 1
```

```
        set gateway 172.16.200.3
        set device "port1"
    next
end
```

b. HQ2.

```
config system interface
    edit "port25"
        set ip 172.16.202.1 255.255.255.0
    next
    edit "port9"
        set ip 172.16.101.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 172.16.202.2
        set device "port25"
    next
end
```

3. Configure IPsec phase1-interface and phase2-interface.

a. HQ1.

```
config vpn ipsec phase1-interface
    edit "greipsec"
        set interface "port1"
        set peertype any
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set remote-gw 172.16.202.1
        set psksecret sample
        next
end
config vpn ipsec phase2-interface
    edit "greipsec"
        set phase1name "greipsec"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
        set protocol 47
    next
end
```

b. HQ2.

```
config vpn ipsec phase1-interface
    edit "greipsec"
        set interface "port25"
        set peertype any
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set remote-gw 172.16.200.1
        set psksecret sample
        next
end
config vpn ipsec phase2-interface
    edit "greipsec"
        set phase1name "greipsec"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
```

```
aes256gcm chacha20poly1305
        set protocol 47
    next
end
```

4. Configure IPsec tunnel interface IP address.
   a. HQ1.

```
config system interface
    edit "greipsec"
        set ip 10.10.10.1 255.255.255.255
        set remote-ip 10.10.10.2 255.255.255.255
    next
end
```

   b. HQ2.

```
config system interface
    edit "greipsec"
        set ip 10.10.10.2 255.255.255.255
        set remote-ip 10.10.10.1 255.255.255.255
    next
end
```

5. Configure the GRE tunnel.
   a. HQ1.

```
config system gre-tunnel
    edit "gre_to_HQ2"
        set interface "greipsec"
        set remote-gw 10.10.10.2
        set local-gw 10.10.10.1
    next
end
```

   b. HQ2.

```
config system gre-tunnel
    edit "gre_to_HQ1"
        set interface "greipsec"
        set remote-gw 10.10.10.1
        set local-gw 10.10.10.2
    next
end
```

6. Configure the firewall policy.
   a. HQ1.

```
config firewall policy
    edit 1
        set srcintf "dmz"
        set dstintf "gre_to_HQ2"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
```

```
        set srcintf "gre_to_HQ2"
        set dstintf "dmz"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 3
        set srcintf "greipsec"
        set dstintf "greipsec"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

b. HQ2.

```
config firewall policy
    edit 1
        set srcintf "port9"
        set dstintf "gre_to_HQ1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set srcintf "gre_to_HQ1"
        set dstintf "port9"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 3
        set srcintf "greipsec"
        set dstintf "greipsec"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

7. Configure the static route.

a. HQ1.

```
config router static
    edit 2
        set dst 172.16.101.0 255.255.255.0
```

```
            set device "gre_to_HQ2"
        next
    end
```

b. HQ2.

```
config router static
    edit 2
        set dst 10.1.100.0 255.255.255.0
        set device "gre_to_HQ1"
    next
end
```

To view the VPN tunnel list on HQ1:

```
diagnose vpn tunnel list
list all ipsec tunnel in vd 0
----
name=greipsec ver=1 serial=1 172.16.200.1:0->172.16.202.1:0
bound_if=5 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/16 options[0010]=create_dev
proxyid_num=1 child_num=0 refcnt=12 ilast=19 olast=861 ad=/0
stat: rxp=347 txp=476 rxb=58296 txb=51408
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=8
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=greipsec proto=47 sa=1 ref=2 serial=2
  src: 47:0.0.0.0/0.0.0.0:0
  dst: 47:0.0.0.0/0.0.0.0:0
  SA:  ref=3 options=10226 type=00 soft=0 mtu=1438 expire=41689/0B replaywin=2048
       seqno=15c esn=0 replaywin_lastseq=0000015c itn=0
  life: type=01 bytes=0/0 timeout=42898/43200
  dec: spi=9897bd09 esp=aes key=16 5a60e67bf68379309715bd83931680bf
       ah=sha1 key=20 ff35a329056d0d506c0bfc17ef269978a4a57dd3
  enc: spi=e362f336 esp=aes key=16 5574acd8587c5751a88950e1bf8fbf57
       ah=sha1 key=20 d57ec76ac3c543ac89b2e4d0545518aa2d06669b
  dec:pkts/bytes=347/37476, enc:pkts/bytes=347/58296
```


To view the static routing table on HQ1:

```
get router info routing-table static
Routing table for VRF=0
S*      0.0.0.0/0 [10/0] via 172.16.200.3, port1
S       172.16.101.0/24 [10/0] is directly connected, gre_to_HQ2
```

Policy-based IPsec tunnel

This is an example of policy-based IPsec tunnel using site-to-site VPN between branch and HQ. HQ is the IPsec concentrator.

Sample topology

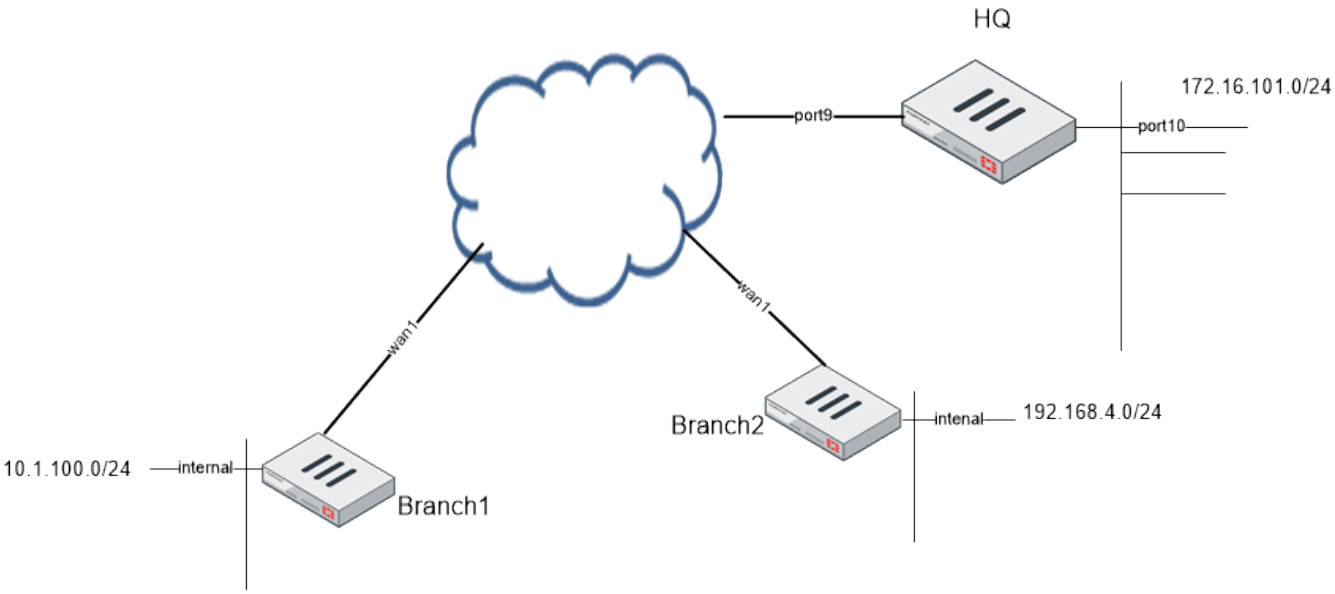

Sample configuration

To configure a policy-based IPsec tunnel using the GUI:

- Configure the IPsec VPN at HQ.
- Configure the IPsec concentrator at HQ.
- Configure the firewall policy at HQ.
- Configure IPsec VPN at branch 1.
- Configure the firewall policy at branch 1.
- Configure IPsec VPN at branch 2.
- Configure the firewall policy at branch 2.

To configure the IPsec VPN at HQ:

1. Go to *VPN* > *IPsec Wizard* to set up branch 1.
   a. Enter a VPN *Name*. In this example, *to_branch1*.
   b. For *Template Type*, click *Custom*. Click *Next*.
   c. Uncheck *Enable IPsec Interface Mode*.
   d. For *Remote Gateway*, select *Static IP Address*.
   e. Enter IP address, in this example, *15.1.1.2*.
   f. For *Interface*, select *port9*.
   g. In the *Authentication* section, for *Method*, select *Pre-shared Key* and enter the *Pre-shared Key*.
   h. Click *OK*.

2. Go to *VPN* > *IPsec Wizard* to set up branch 2.
   a. Enter a VPN *Name*. In this example, *to_branch2*.
   b. For *Template Type*, click *Custom*. Click *Next*.
   c. Uncheck *Enable IPsec Interface Mode*.
   d. For *Remote Gateway*, select *Static IP Address*.
   e. Enter IP address, in this example, *13.1.1.2*.
   f. For *Interface*, select *port9*.
   g. In the *Authentication* section, for *Method*, select *Pre-shared Key* and enter the *Pre-shared Key*.
   h. Click *OK*.

To configure the IPsec concentrator at HQ:

1. Go to *VPN* > *IPsec Concentrator* and click *Create New*.
2. Enter a name. In this example, *branch*.
3. Add the *Members to_branch1* and *to_branch2*.
4. Click *OK*.

To configure the firewall policy at HQ:

1. Go to *Policy & Objects* > *IPv4 Policy* and click *Create New*.
2. Enter a policy *Name*.
3. For *Incoming Interface*, select *port10*.
4. For *Outgoing Interface*, select *port9*.
5. Select the *Source*, *Destination*, *Schedule*, *Service*, and set *Action* to *IPsec*.
6. Select the *VPN Tunnel*, in this example, *Branch1/Branch2*.
7. In this example, enable *Allow traffic to be initiated from the remote site*.
8. Click *OK*.

To configure IPsec VPN at branch 1:

1. Go to *VPN* > *IPsec Wizard* to set up branch 1.
2. Enter a VPN name. In this example, *to_HQ*.
3. For *Template Type*, click *Custom*. Click *Next*.
4. Uncheck *Enable IPsec Interface Mode*.
5. For *Remote Gateway*, select *Static IP Address*.
6. Enter IP address, in this example, *22.1.1.1*.
7. For *Interface*, select *wan1*.
8. In the *Authentication* section, for *Method*, select *Pre-shared Key* and enter the *Pre-shared Key*.
9. Click *OK*.

To configure the firewall policy at branch 1:

1. Go to *Policy & Objects* > *IPv4 Policy* and click *Create New*.
2. Enter a policy *Name*.
3. Choose the *Incoming Interface*, in this example, *internal*.
4. Choose the *Outgoing Interface*, in this example, *wan1*.
5. Select the *Source*, *Destination*, *Schedule*, *Service*, and set *Action* to *IPsec*.

6. Select the *VPN Tunnel*, in this example, *Branch1/Branch2*.
7. In this example, enable *Allow traffic to be initiated from the remote site*.
8. Click *OK*.

To configure IPsec VPN at branch 2:

1. Go to *VPN* > *IPsec Wizard* to set up branch 1.
2. Enter a VPN name. In this example, *to_HQ*.
3. For *Template Type*, click *Custom*. Click *Next*.
4. Uncheck *Enable IPsec Interface Mode*.
5. For *Remote Gateway*, select *Static IP Address*.
6. Enter IP address, in this example, *22.1.1.1*.
7. For *Interface*, select *wan1*.
8. In the *Authentication* section, for *Method*, select *Pre-shared Key* and enter the *Pre-shared Key*.
9. Click *OK*.

To configure the firewall policy at branch 2:

1. Go to *Policy & Objects* > *IPv4 Policy* and click *Create New*.
2. Enter a policy *Name*.
3. Choose the *Incoming Interface*, in this example, *internal*.
4. Choose the *Outgoing Interface*, in this example, *wan1*.
5. Select the *Source*, *Destination*, *Schedule*, *Service*, and set *Action* to *IPsec*.
6. Select the *VPN Tunnel*, in this example, *to_HQ*.
7. In this example, enable *Allow traffic to be initiated from the remote site*.
8. Click *OK*.

To configure a policy-based IPsec tunnel using the CLI:

1. Configure the HQ WAN interface and static route.

```
config system interface
    edit "port9"
        set alias "WAN"
        set ip 22.1.1.1 255.255.255.0
    next
    edit "port10"
        set alias "Internal"
        set ip 172.16.101.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 22.1.1.2
        set device "port9"
    next
end
```

2. Configure the HQ IPsec phase1 and phase2.

```
config vpn ipsec phase1
    edit "to_branch1"
```

```
        set interface "port9"
        set peertype any
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set remote-gw 15.1.1.2
        set psksecret sample
        next
    edit "to_branch2"
        set interface "port9"
        set peertype any
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set remote-gw 13.1.1.2
        set psksecret sample
        next
end
config vpn ipsec phase2
    edit "to_branch1"
        set phase1name "to_branch1"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
    next
    edit "to_branch2"
        set phase1name "to_branch2"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
    next
end
```

3. Configure the firewall policy at HQ.

```
config firewall policy
    edit 1
        set srcintf "port10"
        set dstintf "port9"
        set srcaddr "all"
        set dstaddr "10.1.100.0"
        set action ipsec
        set schedule "always"
        set service "ALL"
        set inbound enable
        set vpntunnel "to_branch1"
    next
    edit 2
        set srcintf "port10"
        set dstintf "port9"
        set srcaddr "all"
        set dstaddr "192.168.4.0"
        set action ipsec
        set schedule "always"
        set service "ALL"
        set inbound enable
        set vpntunnel "to_branch2"
    next
end
```

4. Configure the IPsec concentrator at HQ.

```
config vpn ipsec concentrator
    edit "branch"
        set member "to_branch1" "to_branch2"
    next
end
```

5. Configure the branch WAN interface and static route.
   a. For branch 1.

```
config system interface
    edit "wan1"
        set alias "primary_WAN"
        set ip 15.1.1.2 255.255.255.0
    next
    edit "internal"
        set ip 10.1.100.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 15.1.1.1
        set device "wan1"
    next
end
```

   b. For branch 2.

```
config system interface
    edit "wan1"
        set alias "primary_WAN"
        set ip 13.1.1.2 255.255.255.0
    next
    edit "internal"
        set ip 192.168.4.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 13.1.1.1
        set device "wan1"
    next
end
```

6. Configure the branch IPsec phase1 and phase2.
   a. For branch 1.

```
config vpn ipsec phase1
    edit "to_HQ"
        set interface "wan1"
        set peertype any
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set remote-gw 22.1.1.1
        set psksecret sample
        next
end
config vpn ipsec phase2
```

```
    edit "to_HQ"
        set phase1name "to_HQ"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
    next
end
```

b. For branch 2.

```
config vpn ipsec phase1
    edit "to_HQ"
        set interface "wan1"
        set peertype any
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set remote-gw 22.1.1.1
        set psksecret sample
        next
end
config vpn ipsec phase2
    edit "to_HQ"
        set phase1name "to_HQ"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
    next
end
```

7. Configure the branch firewall policy.

a. For branch 1.

```
config firewall policy
    edit 1
        set srcintf "internal"
        set dstintf "wan1"
        set srcaddr "10.1.100.0"
        set dstaddr "all"
        set action ipsec
        set schedule "always"
        set service "ALL"
        set inbound enable
        set vpntunnel "to_HQ"
    next
end
```

b. For branch 2.

```
config firewall policy
    edit 1
        set srcintf "internal"
        set dstintf "wan1"
        set srcaddr "192.168.4.0"
        set dstaddr "all"
        set action ipsec
        set schedule "always"
        set service "ALL"
        set inbound enable
        set vpntunnel "to_HQ"
    next
end
```

To view the IPsec VPN tunnel list at HQ:

```
diagnose vpn tunnel list
```

```
list all ipsec tunnel in vd 0
----
name=to_branch1 ver=1 serial=4 22.1.1.1:0->15.1.1.2:0
bound_if=42 lgwy=static/1 tun=tunnel/1 mode=auto/1 encap=none/8 options[0008]=npu
proxyid_num=1 child_num=0 refcnt=8 ilast=0 olast=0 ad=/0
stat: rxp=305409 txp=41985 rxb=47218630 txb=2130108
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=to_branch1 proto=0 sa=1 ref=3 serial=1
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=6 options=10226 type=00 soft=0 mtu=1438 expire=42604/0B replaywin=2048
       seqno=1 esn=0 replaywin_lastseq=00000680 itn=0
  life: type=01 bytes=0/0 timeout=42932/43200
  dec: spi=ca646442 esp=aes key=16 58c91d4463968dddccc4fd97de90a4b8
       ah=sha1 key=20 c9176fe2fbc82ef7e726be9ad4af83eb1b55580a
  enc: spi=747c10c4 esp=aes key=16 7cf0f75b784f697bc7f6d8b4bb8a83c1
       ah=sha1 key=20 cdddc376a86f5ca0149346604a59af07a33b11c5
  dec:pkts/bytes=1664/16310, enc:pkts/bytes=0/16354
  npu_flag=03 npu_rgwy=15.1.1.2 npu_lgwy=22.1.1.1 npu_selid=3 dec_npuid=2 enc_npuid=2
----
name=to_branch2 ver=1 serial=5 22.1.1.1:0->13.1.1.2:0
bound_if=42 lgwy=static/1 tun=tunnel/1 mode=auto/1 encap=none/8 options[0008]=npu
proxyid_num=1 child_num=0 refcnt=7 ilast=2 olast=43228 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=to_branch2 proto=0 sa=1 ref=2 serial=1
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=3 options=10226 type=00 soft=0 mtu=1280 expire=40489/0B replaywin=2048
       seqno=1 esn=0 replaywin_lastseq=00000000 itn=0
  life: type=01 bytes=0/0 timeout=42931/43200
  dec: spi=ca646441 esp=aes key=16 57ab680d29d4aad4e373579fb50e9909
       ah=sha1 key=20 12a2bc703d2615d917ff544eaff75a6d2c17f1fe
  enc: spi=f9cffb61 esp=aes key=16 3d64da9feb893874e007babce0229259
       ah=sha1 key=20 f92a3ad5e56cb8e89c47af4dac10bf4b4bebff16
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
  npu_flag=00 npu_rgwy=13.1.1.2 npu_lgwy=22.1.1.1 npu_selid=4 dec_npuid=0 enc_npuid=0
```

To view the IPsec VPN concentrator at HQ:

```
diagnose vpn concentrator list
```

```
list all ipsec concentrator in vd 0
name=branch              ref=3          tuns=2 flags=0
```

FortiGate-to-third-party

This section contains the following topics about FortiGate-to-third-party VPN configurations:

- IKEv2 IPsec site-to-site VPN to an AWS VPN gateway on page 1120
- IPsec VPN to Azure with virtual network gateway on page 1126
- IPsec VPN to an Azure with virtual WAN on page 1136
- IPSec VPN between a FortiGate and a Cisco ASA with multiple subnets on page 1140
- Cisco GRE-over-IPsec VPN on page 1141

IKEv2 IPsec site-to-site VPN to an AWS VPN gateway

This is a sample configuration of an IPsec site-to-site VPN connection between an on-premise FortiGate and an AWS virtual private cloud (VPC).

AWS uses unique identifiers to manipulate a VPN connection's configuration. Each VPN connection is assigned an identifier and is associated with two other identifiers: the customer gateway ID for the FortiGate and virtual private gateway ID.

This example includes the following IDs:

- VPN connection ID: vpn-07e988ccc1d46f749
- Customer gateway ID: cgw-0440c1aebed2f418a
- Virtual private gateway ID

This example assumes that you have configured VPC-related settings in the AWS management portal as described in Create and configure your VPC.

This example includes creating and configuring two tunnels. You must configure both tunnels on your FortiGate.

To configure IKEv2 IPsec site-to-site VPN to an AWS VPN gateway:

1. Configure the first VPN tunnel:
   a. Configure Internet Key Exchange (IKE).
   b. Configure IPsec.
   c. Configure the tunnel interface.
   d. Configure border gateway protocol (BGP).
   e. Configure firewall policies.
2. Configure the second VPN tunnel:
   a. Configure Internet Key Exchange (IKE).
   b. Configure IPsec.
   c. Configure the tunnel interface.
   d. Configure BGP.
   e. Configure firewall policies.

To configure IKE for the first VPN tunnel:

A policy is established for the supported ISAKMP encryption, authentication, Diffie-Hellman (DH), lifetime, and key parameters. These sample configurations fulfill the minimum requirements for AES128, SHA1, and DH Group 2. Category VPN connections in the GovCloud AWS region have a minimum requirement of AES128, SHA2, and DH Group 14. To take advantage of AES256, SHA256, or other DH groups such as 14-18, 22, 23, and 24, you must modify these sample configuration files. Higher parameters are only available for VPNs of category "VPN", not for "VPN-Classic".

Your FortiGate's external interface's address must be static. Your FortiGate may reside behind a device performing NAT. To ensure NAT traversal can function, you must adjust your firewall rules to unblock UDP port 4500. If not behind NAT, it is recommended to disable NAT traversal.

Begin configuration in the root VDOM. The interface name must be shorter than 15 characters. It is best if the name is shorter than 12 characters. IPsec dead peer detection (DPD) causes periodic messages to be sent to ensure a security association remains operational.

```
config vpn ipsec phase1-interface
   edit vpn-07e988ccc1d46f749-0
      set interface "wan1"
      set dpd enable
      set local-gw 35.170.66.108
      set dhgrp 2
      set proposal aes128-sha1
      set keylife 28800
      set remote-gw 3.214.239.164
      set psksecret iCelks0UOob8z4SYMRM6zlx.rU2C3jth
      set dpd-retryinterval 10
   next
end
```

To configure IPsec for the first VPN tunnel:

The IPsec transform set defines the encryption, authentication, and IPsec mode parameters.

```
config vpn ipsec phase2-interface
   edit "vpn-07e988ccc1d46f749-0"
      set phase1name "vpn-07e988ccc1d46f749-0"
      set proposal aes128-sha1
      set dhgrp 2
      set pfs enable
      set keylifeseconds 3600
   next
end
```

To configure the tunnel interface for the first VPN tunnel:

You must configure a tunnel interface as the logical interface associated with the tunnel. All traffic routed to the tunnel interface must be encrypted and transmitted to the VPC. Similarly, traffic from the VPC will be logically received on this interface.

You must configure the interface's address with your FortiGate's address. If the address changes, you must recreate the FortiGate and VPN connection with Amazon VPC.

The `tcp-mss` option causes the router to reduce the TCP packets' maximum segment size to prevent packet fragmentation.

```
config system interface
   edit "vpn-07e988ccc1d46f749-0"
      set vdom "root"
      set ip 169.254.45.90 255.255.255.255
      set allowaccess ping
      set type tunnel
      set tcp-mss 1379
      set remote-ip 169.254.45.89
      set mtu 1427
      set interface "wan1"
```

```
   next
end
```

To configure BGP for the first VPN tunnel:

BGP is used within the tunnel to exchange prefixes between the virtual private gateway and your FortiGate. The virtual private gateway announces the prefix according to your VPC.

The local BGP autonomous system number (ASN) (65000) is configured as part of your FortiGate. If you must change the ASN, you must recreate the FortiGate and VPN connection with AWS.

Your FortiGate may announce a default route (0.0.0.0/0) to AWS. This is done using a prefix list and route map in FortiOS.

```
config router bgp
   set as 65000
   config neighbor
      edit 169.254.45.89
         set remote-as 64512
      end
   end
end
config router bgp
   config neighbor
      edit 169.254.45.89
         set capability-default-originate enable
      end
   end
end
config router prefix-list
   edit "default_route"
      config rule
         edit 1
            set prefix 0.0.0.0 0.0.0.0
         next
      end
   end
end
config router route-map
   edit "routemap1"
      config rule
         edit 1
            set match-ip-address "default_route"
         next
      end
   next
end
```

To advertise additional prefixes to the Amazon VPC, add these prefixes to the network statement and identify the prefix you want to advertise. Ensure that the prefix is present in the routing table of the device with a valid next-hop. If you want to advertise 192.168.0.0/16 to Amazon, you would do the following:

```
config router bgp
config network
   edit 1
      set prefix 192.168.0.0 255.255.0.0
   next
end
```

To configure firewall policies for the first VPN tunnel:

Create a firewall policy permitting traffic from your local subnet to the VPC subnet, and vice-versa.

This example policy permits all traffic from the local subnet to the VPC. First, view all existing policies using the `show firewall policy` command. Then, create a new firewall policy starting with the next available policy ID. In this example, running `show firewall policy` displayed policies 1, 2, 3, and 4, so you would proceed to create policy 5.

```
config firewall policy
   edit 5
      set srcintf "vpn-07e988ccc1d46f749-0"
      set dstintf internal
      set srcaddr all
      set dstaddr all
      set action accept
      set schedule always
      set service ANY
   next
end
config firewall policy
   edit 5
      set srcintf internal
      set dstintf "vpn-07e988ccc1d46f749-0"
      set srcaddr all
      set dstaddr all
      set action accept
      set schedule always
      set service ANY
   next
end
```

To configure IKE for the second VPN tunnel:

A policy is established for the supported ISAKMP encryption, authentication, DH, lifetime, and key parameters. These sample configurations fulfill the minimum requirements for AES128, SHA1, and DH Group 2. Category VPN connections in the GovCloud AWS region have a minimum requirement of AES128, SHA2, and DH Group 14. To take advantage of AES256, SHA256, or other DH groups such as 14-18, 22, 23, and 24, you must modify these sample configuration files. Higher parameters are only available for VPNs of category "VPN", not for "VPN-Classic".

Your FortiGate's external interface's address must be static. Your FortiGate may reside behind a device performing NAT. To ensure NAT traversal can function, you must adjust your firewall rules to unblock UDP port 4500. If not behind NAT, it is recommended to disable NAT traversal.

Begin configuration in the root VDOM. The interface name must be shorter than 15 characters. It is best if the name is shorter than 12 characters. IPsec DPD causes periodic messages to be sent to ensure a security association remains operational.

```
config vpn ipsec phase1-interface
   edit vpn-07e988ccc1d46f749-1
      set interface "wan1"
      set dpd enable
      set local-gw 35.170.66.108
      set dhgrp 2
      set proposal aes128-sha1
      set keylife 28800
      set remote-gw 100.25.187.58
      set psksecret IjFzyDneUtDdAT4RNmQ85apUG3y4Akre
```

```
      set dpd-retryinterval 10
   next
end
```

To configure IPsec for the second VPN tunnel:

The IPsec transform set defines the encryption, authentication, and IPsec mode parameters.

```
config vpn ipsec phase2-interface
   edit "vpn-07e988ccc1d46f749-1"
      set phase1name "vpn-07e988ccc1d46f749-1"
      set proposal aes128-sha1
      set dhgrp 2
      set pfs enable
      set keylifeseconds 3600
   next
end
```

To configure the tunnel interface for the second VPN tunnel:

You must configure a tunnel interface as the logical interface associated with the tunnel. All traffic routed to the tunnel interface must be encrypted and transmitted to the VPC. Similarly, traffic from the VPC will be logically received on this interface.

You must configure the interface's address with your FortiGate's address. If the address changes, you must recreate the FortiGate and VPN connection with Amazon VPC.

The `tcp-mss` option causes the router to reduce the TCP packets' maximum segment size to prevent packet fragmentation.

```
config system interface
   edit "vpn-07e988ccc1d46f749-1"
      set vdom "root"
      set ip 169.254.44.162 255.255.255.255
      set allowaccess ping
      set type tunnel
      set tcp-mss 1379
      set remote-ip 169.254.44.161
      set mtu 1427
      set interface "wan1"
   next
end
```

To configure BGP for the second VPN tunnel:

BGP is used within the tunnel to exchange prefixes between the virtual private gateway and your FortiGate. The virtual private gateway announces the prefix according to your VPC.

The local BGP ASN (65000) is configured as part of your FortiGate. If you must change the ASN, you must recreate the FortiGate and VPN connection with AWS.

Your FortiGate may announce a default route (0.0.0.0/0) to AWS. This is done using a prefix list and route map in FortiOS.

```
config router bgp
   set as 65000
   config neighbor
      edit 169.254.44.161
```

```
        set remote-as 64512
      end
config router bgp
   config neighbor
      edit 169.254.44.161
         set capability-default-originate enable
      end
   end
config router prefix-list
   edit "default_route"
      config rule
         edit 1
            set prefix 0.0.0.0 0.0.0.0
         next
      end
   end
end
config router route-map
   edit "routemap1"
      config rule
         edit 1
            set match-ip-address "default_route"
         next
      end
   next
end
```

To advertise additional prefixes to the Amazon VPC, add these prefixes to the network statement and identify the prefix you want to advertise. Ensure that the prefix is present in the routing table of the device with a valid next-hop. If you want to advertise 192.168.0.0/16 to Amazon, you would do the following:

```
config router bgp
config network
   edit 1
      set prefix 192.168.0.0 255.255.0.0
   next
end
```

To configure firewall policies for the second VPN tunnel:

Create a firewall policy permitting traffic from your local subnet to the VPC subnet, and vice-versa.

This example policy permits all traffic from the local subnet to the VPC. First, view all existing policies using the `show firewall policy` command. Then, create a new firewall policy starting with the next available policy ID. In this example, running `show firewall policy` displayed policies 1, 2, 3, 4, and 5, so you would proceed to create policy 6.

```
config firewall policy
   edit 6
      set srcintf "vpn-07e988ccc1d46f749-1"
      set dstintf internal
      set srcaddr all
      set dstaddr all
      set action accept
      set schedule always
      set service ANY
   next
end
```

```
config firewall policy
   edit 6
        set srcintf internal
        set dstintf "vpn-07e988ccc1d46f749-1"
        set srcaddr all
        set dstaddr all
        set action accept
        set schedule always
        set service ANY
   next
end
```


IPsec VPN to Azure with virtual network gateway

This example shows how to configure a site-to-site IPsec VPN tunnel to Microsoft Azure. It shows how to configure a tunnel between each site, avoiding overlapping subnets, so that a secure tunnel can be established.

Prerequisites

- A FortiGate with an Internet-facing IP address
- A valid Microsoft Azure account

Sample topology

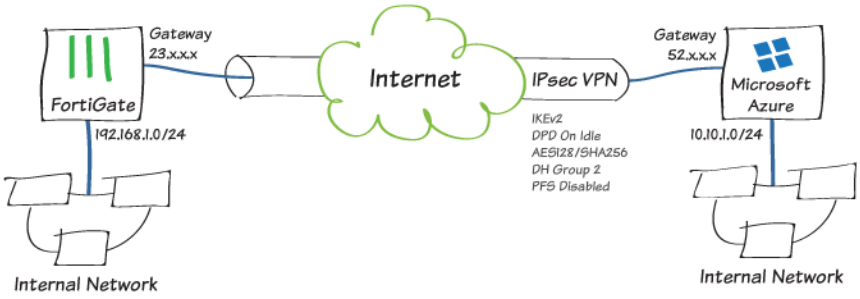


Sample configuration

This sample configuration shows how to:


1. Configure an Azure virtual network.
2. Specify the Azure DNS server.
3. Configure the Azure virtual network gateway.
4. Configure the Azure local network gateway.
5. Configure the FortiGate tunnel.
6. Create the Azure firewall object.
7. Create the FortiGate firewall policies.
8. Create the FortiGate static route.
9. Create the Azure site-to-site VPN connection.
10. Check the results.

To configure an Azure virtual network:


1. Log in to Azure and click *New*.
2. In *Search the Marketplace*, type *Virtual network*.
3. Click *Virtual network* to open the *Virtual network* pane.

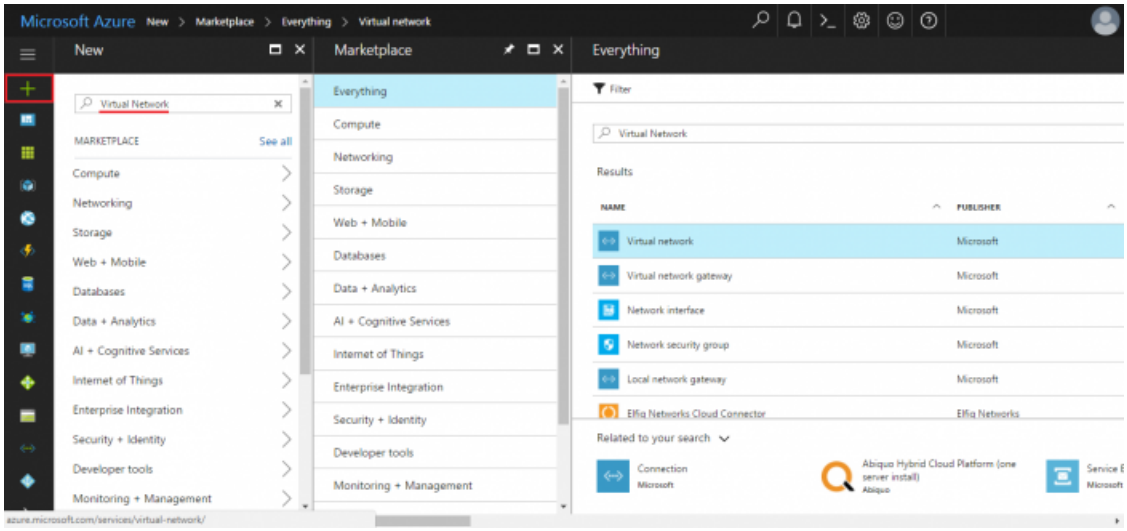

4. At the bottom of the *Virtual network* pane, click the *Select a deployment model* dropdown list and select *Resource Manager*.
5. Click *Create*.

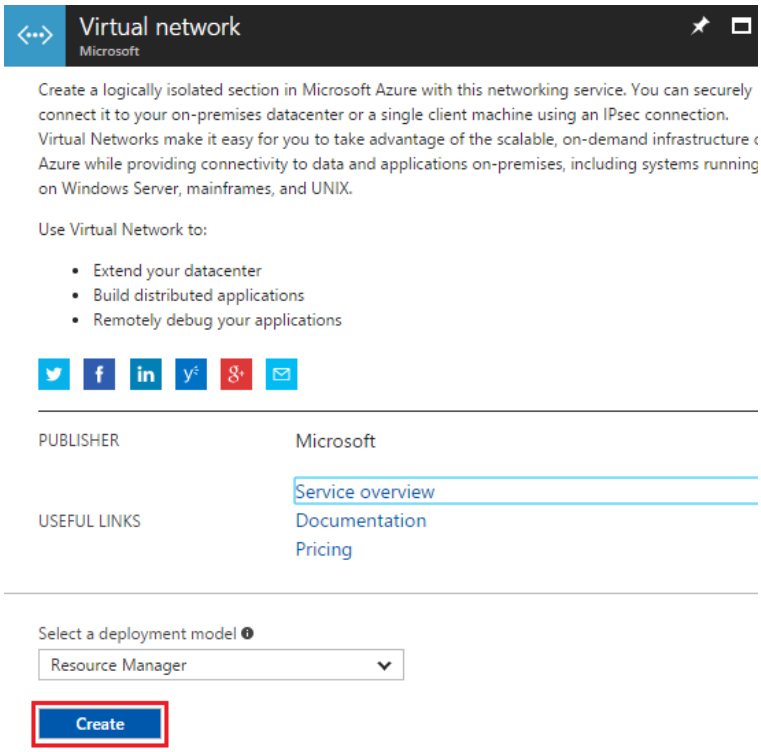


6. On the *Create virtual network* pane, enter you virtual network settings, and click *Create*.

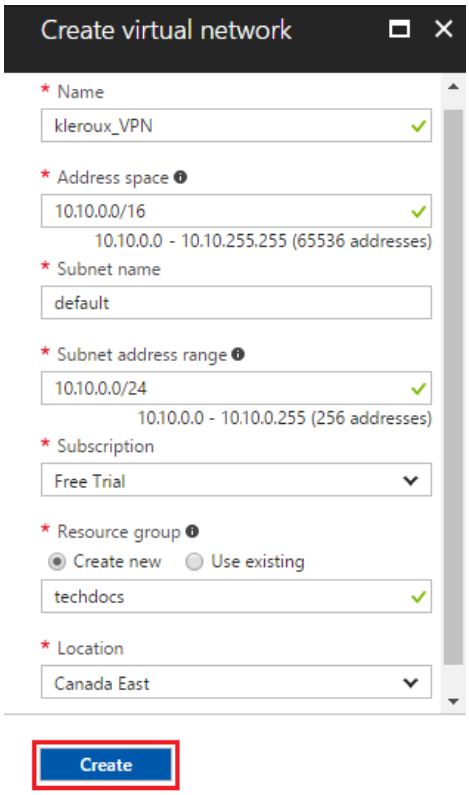


To specify the Azure DNS server:

1. Open the virtual network you just created.
2. Click *DNS servers* to open the *DNS servers* pane.
3. Enter the IP address of the DNS server and click *Save*.

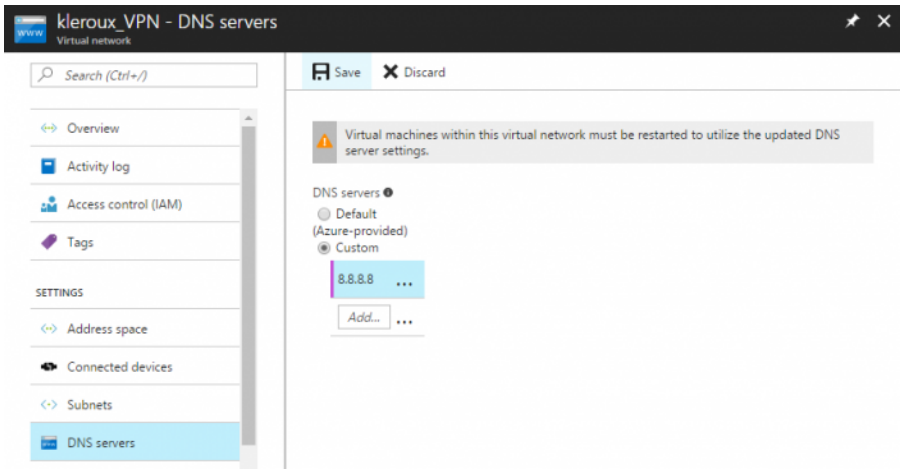


To configure the Azure virtual network gateway:


1. In the portal dashboard, go to *New*.
2. Search for *Virtual Network Gateway* and click it to open the *Virtual network gateway* pane.

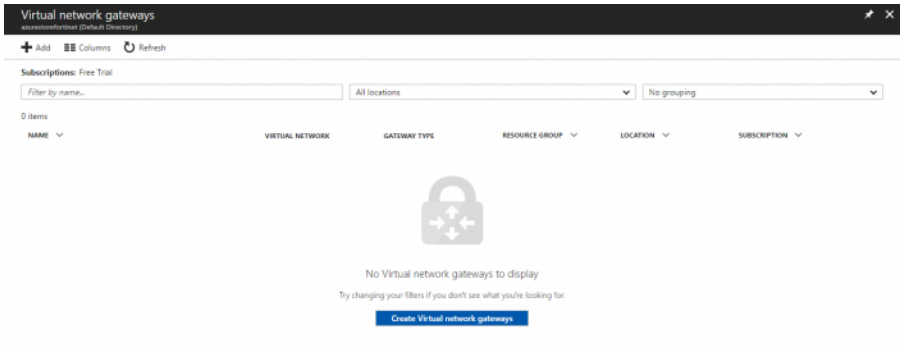


3. Click *Create Virtual network gateways* and enter the settings for your virtual network gateway.

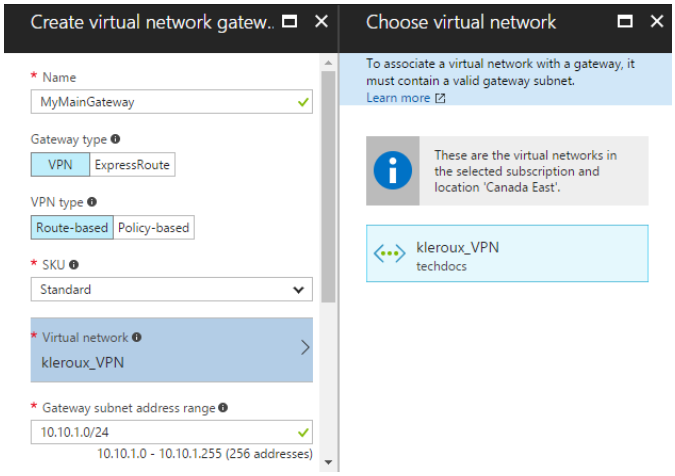

4. If needed, create a Public IP address.

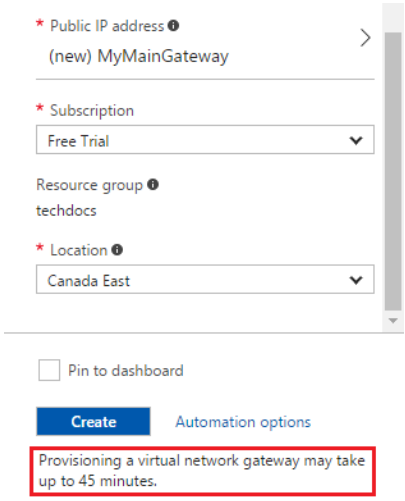


5. Click *Create*.
   Creating the virtual network gateway might take some time. When the provisioning is done, you'll receive a notification.

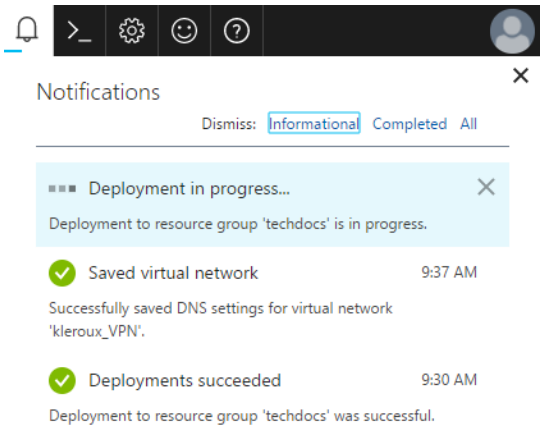


To configure the Azure local network gateway:


1. In the portal dashboard, click *All resources*.
2. Click *Add* and then click *See all*.

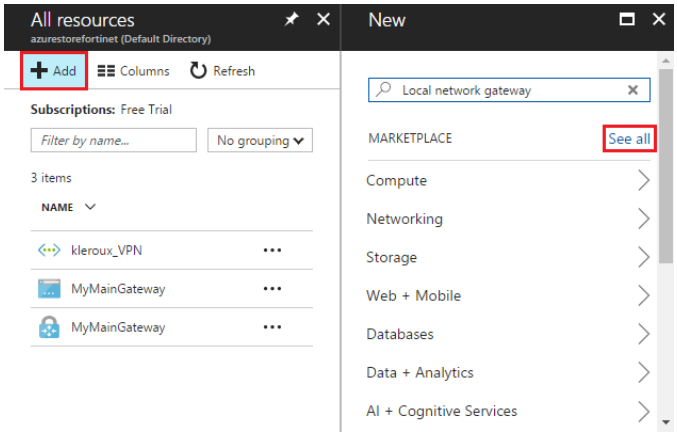

3. In the *Everything* pane, search for *Local network gateway* and then click *Create local network gateway*.

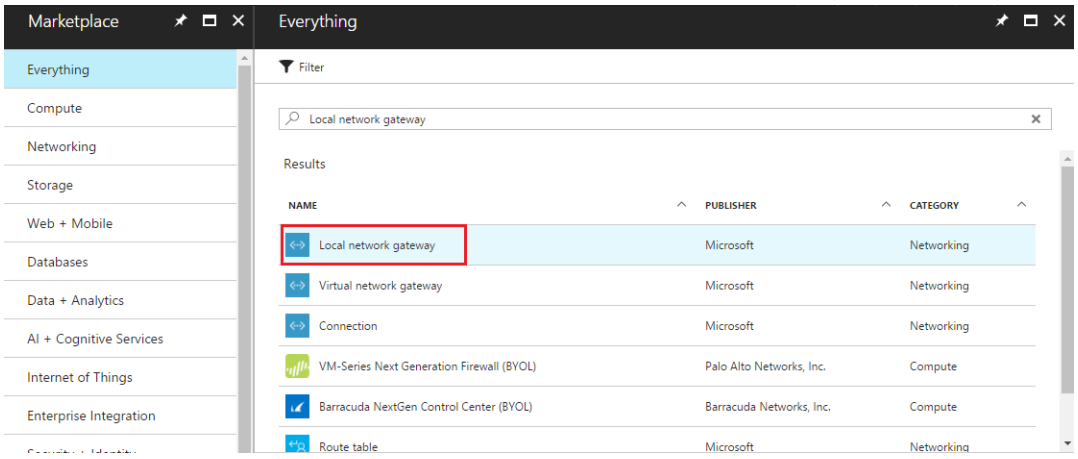


4. For the *IP address*, enter the local network gateway IP address, that is, the FortiGate's external IP address.

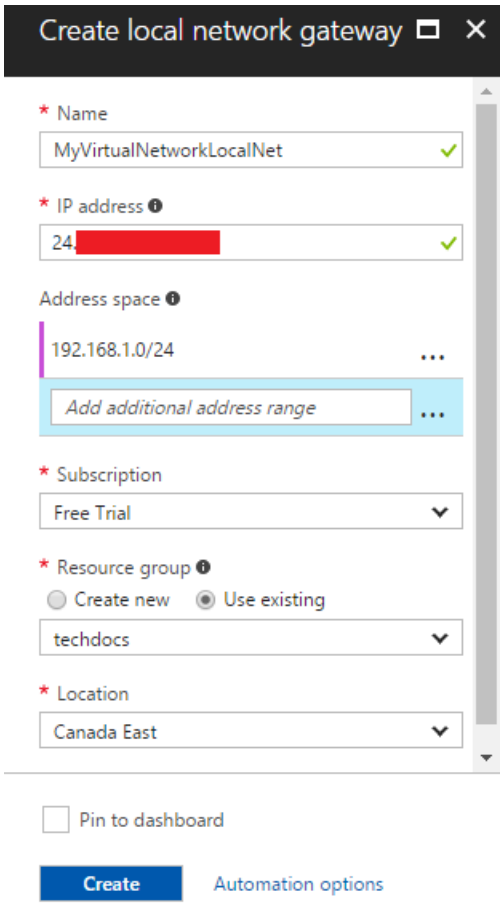


5. Set the remaining values for your local network gateway and click *Create*.

To configure the FortiGate tunnel:


1. In the FortiGate, go to *VPN* > *IP Wizard*.
2. Enter a *Name* for the tunnel, click *Custom*, and then click *Next*.

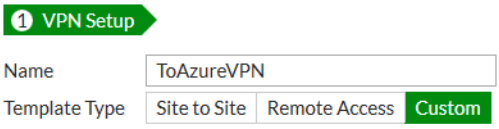


3. Configure the *Network* settings.
   - For *Remote Gateway*, select *Static IP Address* and enter the IP address provided by Azure.
   - For *Interface*, select *wan1*.
   - For *NAT Traversal*, select *Disable*,
   - For *Dead Peer Detection*, select *On Idle*.
   - In the Authentication section, select
4. Configure the *Authentication* settings.
   - For *Method*, select *Pre-shared Key* and enter the *Pre-shared Key*.
   - For *IKE*, select *2*.

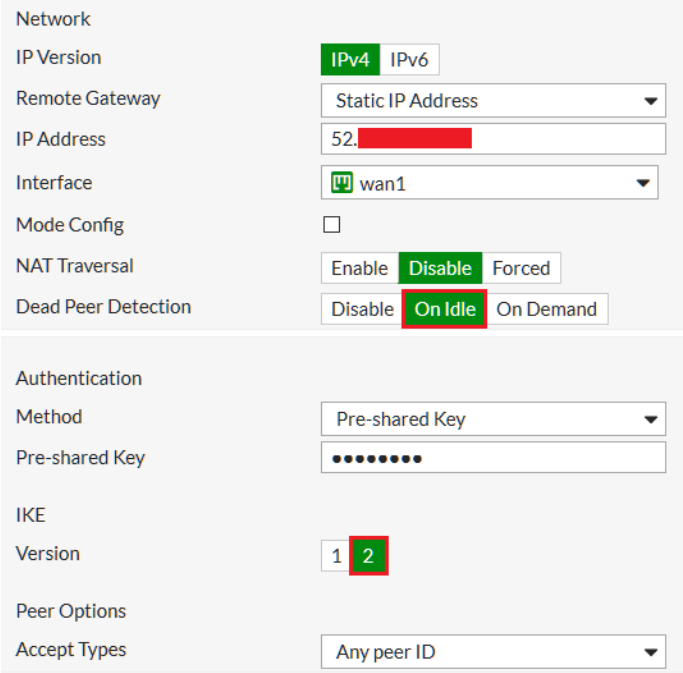

5. Configure the *Phase 1 Proposal* settings.
   - Set the Encryption and Authentication combination to the three supported encryption algorithm combinations accepted by Azure.
     - AES256 and SHA1
     - 3DES and SHA1
     - AES256 and SHA256
   - For *Diffie-Hellman Groups*, select *2*.
   - Set *Key Lifetime (seconds)* to *28800*.

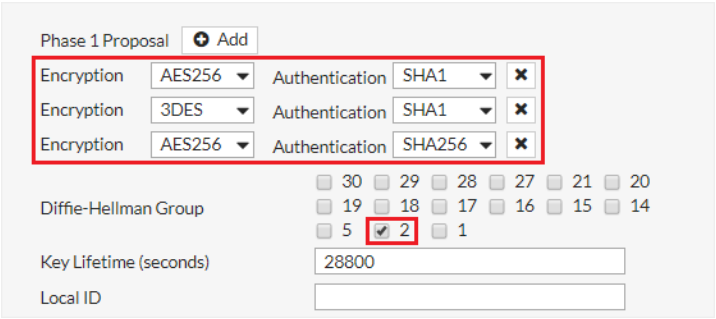

6. In *Phase 2 Selectors*, expand the *Advanced* section to configure the *Phase 2 Proposal* settings.
   - Set the Encryption and Authentication combinations.
     - AES256 and SHA1
     - 3DES and SHA1
     - AES256 and SHA256
   - Uncheck *Enable Perfect Forward Secrecy (PFS)*.
   - Set *Key Lifetime (seconds)* to *27000*.

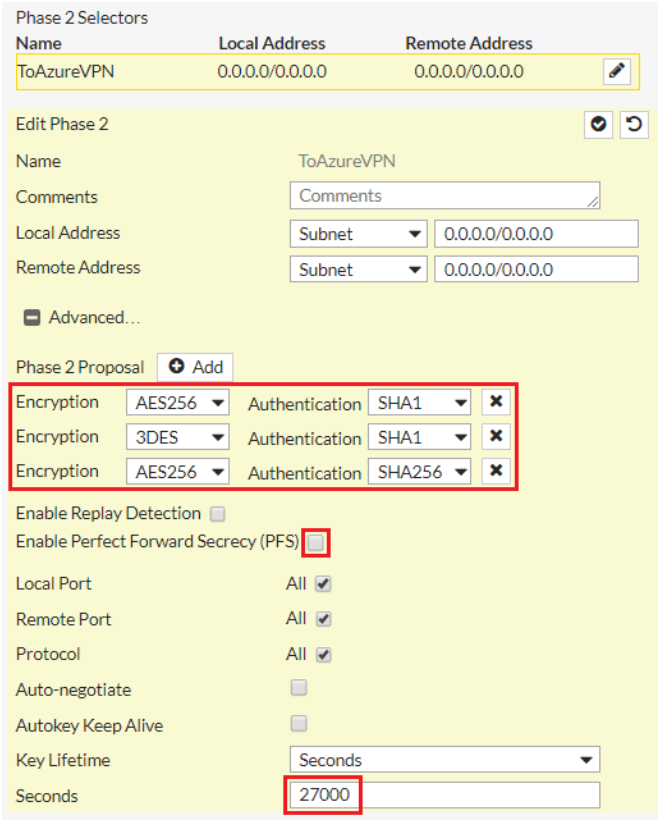


7. Click *OK*.

To create the Azure firewall object:


1. In the FortiGate, go to *Policy & Objects* > *Addresses*.
2. Create a firewall object for the Azure VPN tunnel.

To create the FortiGate firewall policies:

1. In the FortiGate, go to *Policy & Objects* > *IPv4 Policy*.
2. Create a policy for the site-to-site connection that allows outgoing traffic.
   - Set the *Source* address and *Destination* address using the firewall objects you just created.
   - Disable *NAT*.

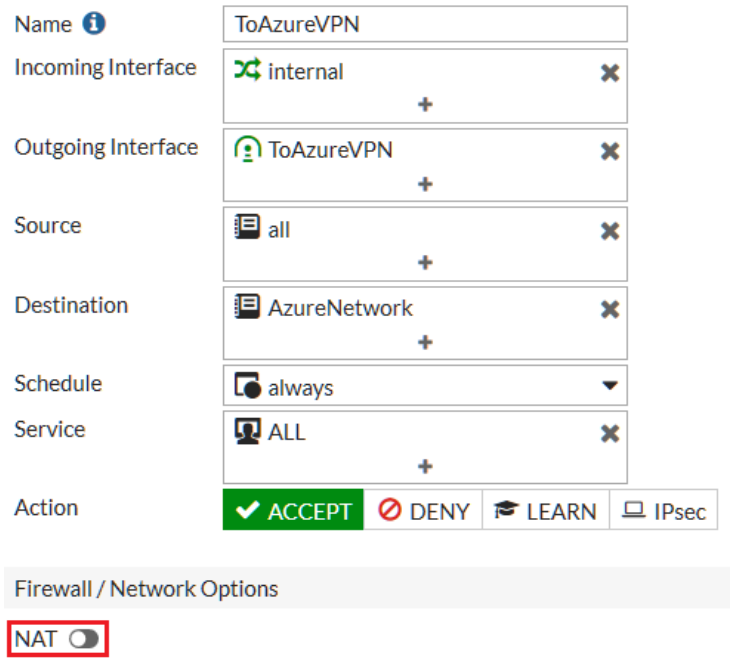

3. Create another policy that allows incoming traffic.
   - For this policy, reverse the *Source* address and *Destination* address.

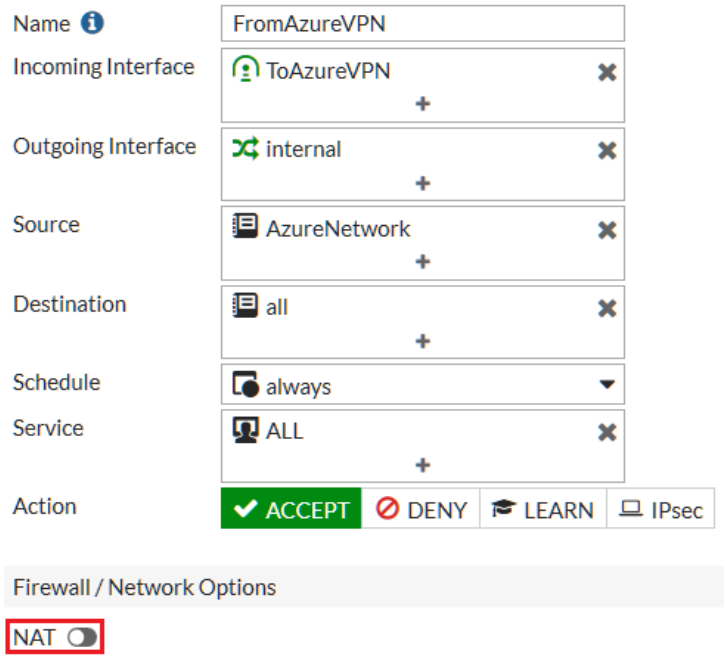


4. We recommend limiting the TCP maximum segment size (MSS) being sent and received so as to avoid packet drops and fragmentation.

To do this, use the following CLI commands on both policies.

```
config firewall policy
   edit <policy-id>
      set tcp-mss-sender 1350
      set tcp-mss-receiver 1350
   next
end
```


To create the FortiGate static route:

1. In the FortiGate, go to *Network* > *Static Routes*.
2. Create an IPv4 Static Route that forces outgoing traffic going to Azure to go through the route-based tunnel.
3. Set the *Administrative Distance* to a value lower than the existing default route value.

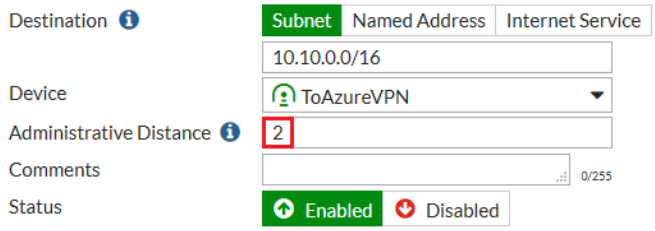

To create the Azure site-to-site VPN connection:


1. In the Azure portal, locate and select your virtual network gateway.
2. In the *Settings* pane, click *Connections* and then click *Add*.

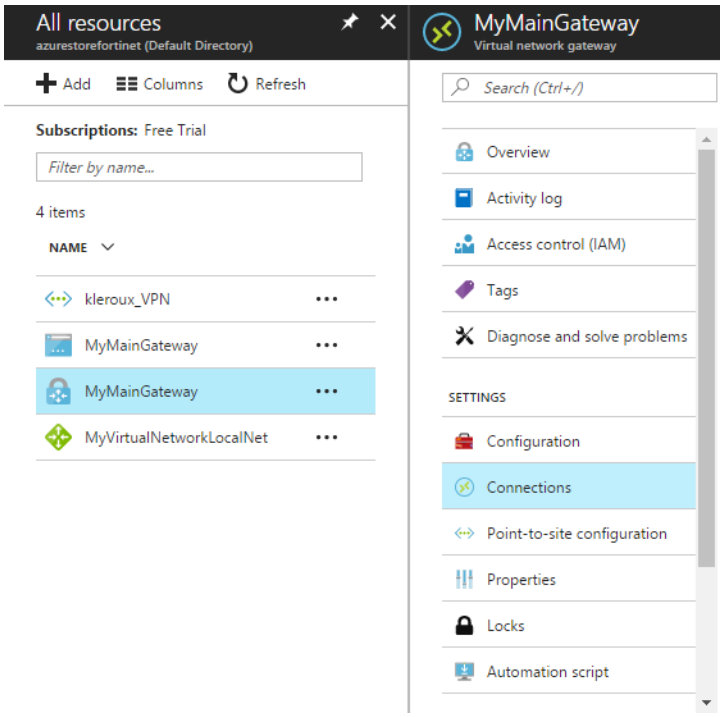


3. Enter the settings for your connection. Ensure the *Shared Key (PSK)* matches the *Pre-shared Key* for the FortiGate tunnel.

To check the results:


1. In the FortiGate, go to *Monitor* > *IPsec Monitor*.
   - Check that the tunnel is up.



   - If the tunnel is down, right-click the tunnel and select *Bring Up*.

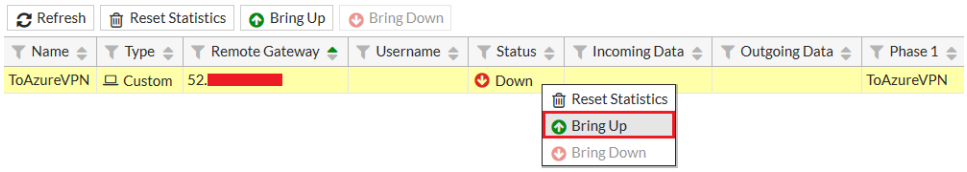

2. In the FortiGate, go to *Log & Report* > *Events*.
   - Select an event to view more information and verify the connection.
3. In the Azure portal dashboard, click *All resources* and locate your virtual network gateway.
   a. In your virtual network gateway pane, click *Connections* to see the status of each connection.

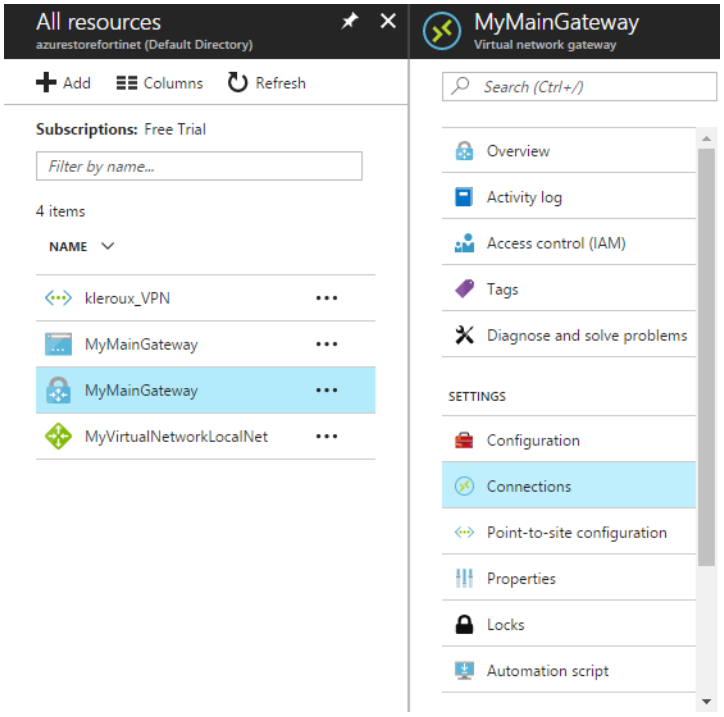

   b. Click a connection to open the *Essentials* pane to view more information about that connection.
      - If the connection is successful, the *Status* shows *Connected*.
      - See the *ingress* and *egress* bytes to confirm traffic flowing through the tunnel.

IPsec VPN to an Azure with virtual WAN

This is a sample configuration of an IPsec site-to-site VPN connection between an on-premise FortiGate and an Azure virtual network (VNet). This example uses Azure virtual WAN (vWAN) to establish the VPN connection.



- Azure must use IPsec v2 for this configuration.
- Azure uses overlapped subnet IP addresses for the IPsec interfaces.

To configure IKEv2 IPsec site-to-site VPN to an Azure VPN gateway:

1. In the Azure management portal, configure vWAN-related settings as described in Tutorial: Create a Site-to-Site connection using Azure Virtual WAN.
2. Download the VPN configuration. The following shows an example VPN configuration:

```
[ {"configurationVersion":{"LastUpdatedTime":"2019-07-
    16T22:16:28.0409002Z","Version":"be5c5787-b903-43b1-a237-
    49eae1b373e4"},"vpnSiteConfiguration":
    {"Name":"toaws","IPAddress":"3.220.252.93","BgpSetting":
    {"Asn":7225,"BgpPeeringAddress":"169.254.24.25","PeerWeight":32768},"LinkName":"toa
    ws"},"vpnSiteConnections":[{"hubConfiguration":
    {"AddressSpace":"10.1.0.0/16","Region":"West US","ConnectedSubnets":
    ["10.2.0.0/16"]},"gatewayConfiguration":{"IpAddresses":
    {"Instance0":"52.180.90.47","Instance1":"52.180.89.94"},"BgpSetting":
    {"Asn":65515,"BgpPeeringAddresses":
    {"Instance0":"10.1.0.7","Instance1":"10.1.0.6"},"PeerWeight":0}},"connectionConfigu
    ration":{"IsBgpEnabled":true,"PSK":"Fortinet123#","IPsecParameters":
    {"SADataSizeInKilobytes":102400000,"SALifeTimeInSeconds":3600}}}]} ]
```

3. Configure the following on the FortiGate. Note for `set proposal`, you can select from several proposals.

```
config vpn ipsec phase1-interface
   edit "toazure1"
      set interface "port1"
      set ike-version 2
      set keylife 28800
      set peertype any
      set proposal aes256-sha1
      set dhgrp 2
      set remote-gw 52.180.90.47
      set psksecret ENC
           BJeE+CnBFbdepvvMMfXmb1QlWmB/QfxAvSuj0/Ol3KI3LgP0ac1Rc80YJRHN2Q7ocGpF96/7F0MCN
           RjAEk62wQHeHNi8zQKc0DGTffRIyf/ln6l3JMp+r2hVFTv41HlzfKlE5L+rOuSPj4y941rJVPjIx9
           aID7dAYUMUh/D1elTB/PqAXAt
      0JU+9gDbki4br5Zq8tQ==
   next
   edit "toazure2"
      set interface "port1"
      set ike-version 2
      set keylife 28800
      set peertype any
      set proposal aes256-sha1
      set dhgrp 2
      set remote-gw 52.180.89.94
      set psksecret ENC
           sNVpQEGX79oH3u57I6AjipdPALYIERj7CMDSJY7RG39g0yUmPVJVcq1+u5v3gA6URhzaD3NjqUoIf
           JD3yOE34mIWFo9Q6skowGnQURlQxukENC8kTpEl3YqYESCKULoRc3/sVKDZItyjWcZ/0iHsqkCyWv
           m/jDJuy3UPxI7uOktkDtZPho8
      wjnMYeKmMR5EaG28oSA==
   next
end
config vpn ipsec phase2-interface
   edit "toazure1"
```

```
      set phase1name "toazure1"
      set proposal aes256-sha1
      set dhgrp 2
      set keylifeseconds 3600
   next
   edit "toazure2"
      set phase1name "toazure2"
      set proposal aes256-sha1
      set dhgrp 2
      set keylifeseconds 3600
   next
end
config system settings
   set allow-subnet-overlap enable
end
config system interface
   edit "toazure1"
      set vdom "root"
      set ip 169.254.24.25 255.255.255.255
      set type tunnel
      set remote-ip 10.1.0.7 255.255.255.255
      set snmp-index 4
      set interface "port1"
   next
   edit "toazure2"
      set vdom "root"
      set ip 169.254.24.25 255.255.255.255
      set type tunnel
      set remote-ip 10.1.0.6 255.255.255.255
      set snmp-index 5
      set interface "port1"
   next
end
config router bgp
   set as 7225
   set router-id 169.254.24.25
   config neighbor
      edit "10.1.0.7"
         set remote-as 65515
      next
      edit "10.1.0.6"
         set remote-as 65515
      next
   end
   config network
      edit 1
         set prefix 172.30.101.0 255.255.255.0
      next
   end
   config redistribute "connected"
      set status enable
   end
   config redistribute "rip"
   end
   config redistribute "ospf"
   end
   config redistribute "static"
```

```
    end
    config redistribute "isis"
    end
    config redistribute6 "connected"
    end
    config redistribute6 "rip"
    end
    config redistribute6 "ospf"
    end
    config redistribute6 "static"
    end
    config redistribute6 "isis"
    end
end
```

4. Run `diagnose vpn tunnel list`. If the configuration was successful, the output should resemble the following:

```
name=toazure1 ver=2 serial=3 172.30.1.83:4500->52.180.90.47:4500
bound_if=3 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/0
proxyid_num=1 child_num=0 refcnt=15 ilast=16 olast=36 ad=/0
stat: rxp=41 txp=41 rxb=5104 txb=2209
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=1
natt: mode=keepalive draft=0 interval=10 remote_port=4500
proxyid=toazure1 proto=0 sa=1 ref=2 serial=4
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=3 options=10226 type=00 soft=0 mtu=8926 expire=2463/0B replaywin=2048
       seqno=2a esn=0 replaywin_lastseq=00000029 itn=0
  life: type=01 bytes=0/0 timeout=3300/3600
  dec: spi=c13f7928 esp=aes key=32
009a86bb0d6f5fee66af7b8232c8c0f22e6ec5c61ba19c93569bd0cd115910a9
       ah=sha1 key=20 f05bfeb0060afa89d4afdfac35960a8a7a4d4856
  enc: spi=b40a6c70 esp=aes key=32
a1e361075267ba72b39924c5e6c766fd0b08e0548476de2792ee72057fe60d1d
       ah=sha1 key=20 b1d24bedb0eb8fbd26de3e7c0b0a3a799548f52f
  dec:pkts/bytes=41/2186, enc:pkts/bytes=41/5120
----------------------------------------------------
name=toazure2 ver=2 serial=4 172.30.1.83:4500->52.180.89.94:4500
bound_if=3 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/0
proxyid_num=1 child_num=0 refcnt=16 ilast=16 olast=16 ad=/0
stat: rxp=40 txp=40 rxb=4928 txb=2135
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=1
natt: mode=keepalive draft=0 interval=10 remote_port=4500
proxyid=toazure2 proto=0 sa=1 ref=2 serial=4
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=3 options=10626 type=00 soft=0 mtu=8926 expire=2427/0B replaywin=2048
       seqno=29 esn=0 replaywin_lastseq=00000028 itn=0
  life: type=01 bytes=0/0 timeout=3299/3600
  dec: spi=c13f791d esp=aes key=32
759898cbb7fafe448116b1fb0fb6d2f0eb99621ea6ed8dd4417ffdb901eb82be
       ah=sha1 key=20 533ec5dc8a1910221e7742b12f9de1b41205622c
  enc: spi=67934bfe esp=aes key=32
9b5710bfb4ba784722241ec371ba8066629febcd75da6f8471915bdeb874ca80
       ah=sha1 key=20 5099fed7edac2b960294094f1a8188ab42f34d7b
  dec:pkts/bytes=40/2087, enc:pkts/bytes=40/4976
```

```
Routing table for VRF=0
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
       O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
       * - candidate default

S*      0.0.0.0/0 [5/0] via 172.30.1.1, port1
B       10.1.0.0/16 [20/0] via 10.1.0.6, toazure2, 00:15:01
C       10.1.0.6/32 is directly connected, toazure2
C       10.1.0.7/32 is directly connected, toazure1
B       10.2.0.0/16 [20/0] via 10.1.0.6, toazure2, 00:15:01
C       169.254.24.25/32 is directly connected, toazure1
                         is directly connected, toazure2
C       172.30.1.0/24 is directly connected, port1
C       172.30.101.0/24 is directly connected, port2
```

IPSec VPN between a FortiGate and a Cisco ASA with multiple subnets

When a Cisco ASA unit has mutiple subnets configured, multiple phase 2's must be created on the FortiGate, and not just multiple subnets.

This is because the FortiGate uses the same SPI value to bring up the phase 2 for all of the subnets, while the Cisco ASA expects different SPI values for each of its configured subnets. Using multiple phase 2's on the FortiGate creates different SPI values for each subnet.

To configure multiple phase 2 interfaces in route-based mode:

```
config vpn ipsec phase2-interface
    edit "First subnet"
        set phase1name "VPN to Cisco"
        set src-subnet 192.168.227.253 255.255.255.255
        set dst-subnet 10.142.0.0 255.255.254.0
    next
    edit "Second subnet"
        set phase1name "VPN to Cisco"
        set src-subnet 192.168.227.253 255.255.255.255
        set dst-subnet 10.143.0.0 255.255.254.0
    next
end
```

To configure multiple phase 2 interfaces in policy-based mode:

```
config vpn ipsec phase2
    edit "First subnet"
        set phase1name "VPN to Cisco"
        set src-subnet 192.168.227.253 255.255.255.255
        set dst-subnet 10.142.0.0 255.255.254.0
    next
    edit "Second subnet"
        set phase1name "VPN to Cisco"
```


```
        set src-subnet 192.168.227.253 255.255.255.255
        set dst-subnet 10.143.0.0 255.255.254.0
    next
end
```

Cisco GRE-over-IPsec VPN

This is a sample configuration of a FortiGate VPN that is compatible with Cisco-style VPNs that use GRE in an IPsec tunnel. Cisco products with VPN support often use the GRE protocol tunnel over IPsec encryption. Cisco VPNs can use either transport mode or tunnel mode IPsec.

Topology

In this example, LAN1 users are provided with access to LAN2.

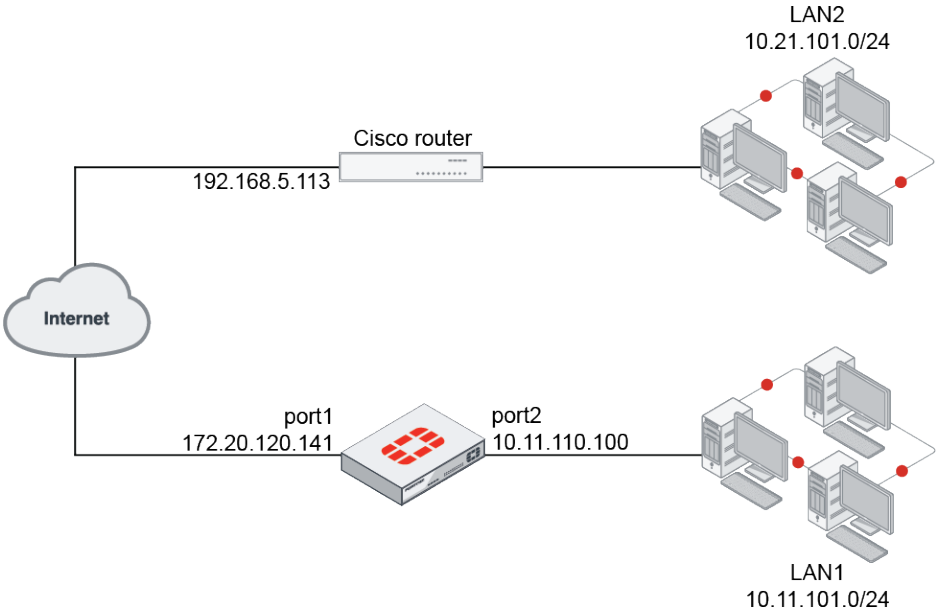

Configuring the FortiGate

There are five steps to configure GRE-over-IPsec with a FortiGate and Cisco router:

1. Enable overlapping subnets.
2. Configure a route-based IPsec VPN on the external interface.
3. Configure a GRE tunnel on the virtual IPsec interface.
4. Configure security policies.
5. Configure the static route.

Enabling overlapping subnets

Overlapping subnets are required because the IPsec and GRE tunnels will use the same addresses. By default, each FortiGate network interface must be on a separate network. This configuration assigns an IPsec tunnel endpoint and the external interface to the same network.

To enable overlapping subnets:

```
config system settings
    set allow-subnet-overlap enable
    next
end
```

Configuring a route-based IPsec VPN

A route-based VPN that use encryption and authentication algorithms compatible with the Cisco router is required. Pre-shared key authentication is used in this configuration.

To configure route-based IPsec in the GUI:

1. Go to *VPN* > *IPsec Wizard* and select the *Custom* template.
2. Enter the tunnel name (*tocisco*) and click *Next*.
3. Enter the following:

Remote Gateway	Static IP Address
IP Address	Cisco router public interface (192.168.5.113)
Interface	FortiGate public interface (172.20.120.141)
Authentication Method	Pre-shared Key
Pre-shared Key	Entry must match the pre-shared key on the Cisco router
Mode	Main (ID Protection)
Phase 1 Proposal	3DES-SHA1, AES128-SHA1 (at least one proposal must match the settings on the Cisco router)
Local Address	GRE local tunnel endpoint IP address (172.20.120.141)
Remote Address	GRE remote tunnel endpoint IP address (192.168.5.113)
Phase 2 Proposal	3DES-MD5 (at least one proposal must match the settings on the Cisco router)
Local Port	0
Remote Port	0
Protocol	47

4. Click *OK*.
5. If the Cisco router is configured to use transport mode IPsec, configure transport mode on the FortiGate:

```
config vpn phase2-interface
    edit tocisco_p2
        set encapsulation transport-mode
    next
end
```

To configure route-based IPsec in the CLI:

```
config vpn ipsec phase1-interface
    edit tocisco
```

```
        set interface port1
        set proposal 3des-sha1 aes128-sha1
        set remote-gw 192.168.5.113
        set psksecret xxxxxxxxxxxxxxx
    next
end

config vpn ipsec phase2-interface
    edit tocisco_p2
        set phase1name tocisco
        set proposal 3des-md5
        set encapsulation [tunnel-mode | transport-mode]
        set protocol 47
        set src-addr-type ip
        set dst-start-ip 192.168.5.113
        set src-start-ip 172.20.120.141
    next
end
```

To add the IPsec tunnel end addresses:

```
config system interface
    edit tocisco
        set ip 172.20.120.141 255.255.255.255
        set remote-ip 192.168.5.113
    next
end
```

Configuring the GRE tunnel

The local gateway and remote gateway addresses must match the local and remote gateways of the IPsec tunnel. The GRE tunnel runs between the virtual IPsec public interface on the FortiGate unit and the Cisco router.

To configure the GRE tunnel:

```
config system gre-tunnel
    edit gre1
        set interface tocisco
        set local-gw 172.20.120.141
        set remote-gw 192.168.5.113
        set keepalive-interval <integer>
        set keepalive-failtimes <integer>
    next
end
```

The Cisco router configuration requires an address for its end of the GRE tunnel, so you need to add the tunnel end addresses.

To add the tunnel end addresses:

```
config system interface
    edit gre1
        set ip 10.0.1.1 255.255.255.255
        set remote-ip 10.0.1.2
```

```
    next
end
```

Configuring the security policies

Two sets of security policies are required:

- Policies to allow traffic to pass in both directions between the GRE virtual interface and the IPsec virtual interface.
- Policies to allow traffic to pass in both directions between the protected network interface and the GRE virtual interface.

To configure security policies in the GUI:

1. Go to *Policy & Objects* > *Firewall Policy* and click *Create New*.
2. Enter the following to allow traffic between the protected network and the GRE tunnel:

Name	LANtoGRE
Incoming Interface	Interface that connects to the private network behind the FortiGate (port2)
Outgoing Interface	GRE tunnel virtual interface (gre1)
Source	All
Destination	All
Action	ACCEPT
NAT	Disable

3. Click *OK*.
4. Create a new policy and enter the following to allow traffic between the GRE tunnel and the protected network:

Name	GREtoLAN
Incoming Interface	GRE tunnel virtual interface (gre1)
Outgoing Interface	Interface that connects to the private network behind the FortiGate (port2)
Source	All
Destination	All
Action	ACCEPT
NAT	Disable

5. Click *OK*.
6. Create a new policy and enter the following to allow traffic between the GRE virtual interface and the IPsec virtual interface:

Name	GREtoIPsec
Incoming Interface	GRE tunnel virtual interface (gre1)
Outgoing Interface	Virtual IPsec interface (tocisco)
Source	All

Destination	All
Action	ACCEPT
NAT	Disable

7. Click *OK*.
8. Create a new policy and enter the following to allow traffic between the IPsec virtual interface and the GRE virtual interface:

Name	IPsectoGRE
Incoming Interface	Virtual IPsec interface (tocisco)
Outgoing Interface	GRE tunnel virtual interface (gre1)
Source	All
Destination	All
Action	ACCEPT
NAT	Disable

9. Click *OK*.

To configure security policies in the CLI:

```
config firewall policy
    edit 1
        set name LANtoGRE
        set srcintf port2
        set dstintf gre1
        set srcaddr all
        set dstaddr all
        set action accept
        set schedule always
        set service ALL
    next
    edit 2
        set name GREtoLAN
        set srcintf gre1
        set dstintf port2
        set srcaddr all
        set dstaddr all
        set action accept
        set schedule always
        set service ALL
    next
    edit 3
        set name GREtoIPsec
        set srcintf gre1
        set dstintf tocisco
        set srcaddr all
        set dstaddr all
        set action accept
        set schedule always
        set service ALL
```

```
    next
    edit 4
        set name IPsectoGRE
        set srcintf tocisco
        set dstintf gre1
        set srcaddr all
        set dstaddr all
        set action accept
        set schedule always
        set service ALL
    next
end
```

Configuring routing

to direct traffic destined for the network behind the Cisco router into the GRE-over-IPsec tunnelTraffic destined for the network behind the Cisco router must be routed to the GRE tunnel. To do this, create a static route

To create the static route in the GUI:

1. Go to *Network* > *Static Routes* and click *Create New*.
2. Enter the following:

Destination	IP and netmask for the network behind the Cisco router (10.21.101.0 255.255.255.0)
Interface	GRE tunnel virtual interface (gre1)
Administrative Distance	Leave the default setting

3. Click *OK*.

To create the static route in the CLI:

```
config router static
    edit 0
        set device gre1
        set dst 10.21.101.0 255.255.255.0
    next
end
```

Configuring the Cisco router

For more information, refer to Configuring and verifying a GRE over IPsec tunnel in the Fortinet Knowledge Base.

Remote access

Remote access lets users connect to the Internet using a dialup connection over traditional POTS or ISDN telephone lines. Virtual private network (VPN) protocols are used to secure these private connections.


The following topics provide instructions on configuring remote access:

- FortiGate as dialup client on page 1147
- FortiClient as dialup client on page 1153

- Add FortiToken multi-factor authentication on page 1157
- Add LDAP user authentication on page 1158
- iOS device as dialup client on page 1159
- IKE Mode Config clients on page 1163
- IPsec VPN with external DHCP service on page 1167
- L2TP over IPsec on page 1173
- Tunneled Internet browsing on page 1177

FortiGate as dialup client

This is a sample configuration of dialup IPsec VPN and the dialup client. In this example, a branch office FortiGate connects via dialup IPsec VPN to the HQ FortiGate.

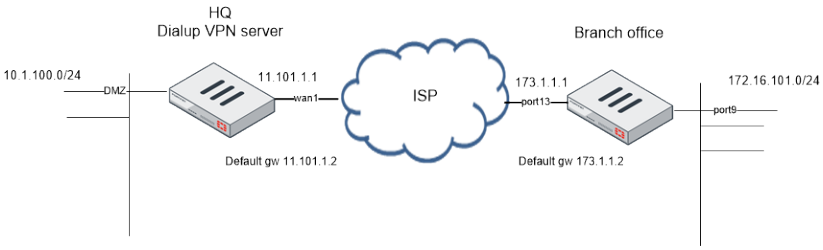

You can configure dialup IPsec VPN with FortiGate as the dialup client using the GUI or CLI.

To configure IPsec VPN with FortiGate as the dialup client in the GUI:

1. Configure the dialup VPN server FortiGate:
   a. Go to *VPN* > *IPsec Wizard* and configure the following settings for *VPN Setup*:
      i. Enter a VPN name.
      ii. For *Template Type*, select *Site to Site*.
      iii. For *Remote Device Type*, select *FortiGate*.
      iv. For *NAT Configuration*, select *The remote site is behind NAT*.
      v. Click *Next*.
   b. Configure the following settings for *Authentication*:
      i. For *Incoming Interface*, select the incoming interface.
      ii. For *Authentication Method*, select *Pre-shared Key*.
      iii. In the *Pre-shared Key* field, enter *your-psk* as the key.
      iv. Click *Next*.
   c. Configure the following settings for *Policy & Routing*:
      i. From the *Local Interface* dropdown menu, select the local interface.
      ii. Configure the *Local Subnets* as *10.1.100.0/24*.
      iii. Configure the *Remote Subnets* as *172.16.101.0/24*.
      iv. Click *Create*.
2. Configure the dialup VPN client FortiGate:
   a. Go to *VPN* > *IPsec Wizard* and configure the following settings for *VPN Setup*:
      i. Enter a VPN name.
      ii. For *Template Type*, select *Site to Site*.
      iii. For *Remote Device Type*, select *FortiGate*.

iv. For *NAT Configuration*, select *This site is behind NAT*.
v. Click *Next*.

b. Configure the following settings for *Authentication*:
i. For *IP Address*, enter *11.101.1.1*.
ii. For *Outgoing Interface*, select *port13*.
iii. For *Authentication Method*, select *Pre-shared Key*.
iv. In the *Pre-shared Key* field, enter *your-psk* as the key.
v. Click *Next*.

c. Configure the following settings for *Policy & Routing*:
i. From the *Local Interface* dropdown menu, select the local interface. In this example, it is *port9*.
ii. Configure the *Local Subnets* as *172.16.101.0*.
iii. Configure the *Remote Subnets* as *10.1.100.0*.
iv. Click *Create*.

To configure IPsec VPN with FortiGate as the dialup client in the CLI:

1. In the CLI, configure the user, user group, and firewall address. Only the HQ dialup server FortiGate needs this configuration. The address is an IP pool to assign an IP address for the dialup client FortiGate.

```
config user local
    edit "vpnuser1"
        set type password
        set passwd your-password
    next
end
config user group
    edit "vpngroup"
        set member "vpnuser1"
    next
end
config firewall address
    edit "client_range"
        set type iprange
        set start-ip 10.10.10.1
        set end-ip 10.10.10.200
    next
end
```

2. Configure the WAN interface and default route. The WAN interface is the interface connected to the ISP. It can work in static mode (as shown in this example), DHCP, or PPPoE mode. The IPsec tunnel is established over the WAN interface.
   a. Configure the HQ FortiGate.

```
config system interface
    edit "wan1"
        set vdom "root"
        set ip 11.101.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 11.101.1.2
        set device "wan1"
```

```
    next
end
```

b. Configure the branch office FortiGate.

```
config system interface
    edit "port13"
        set vdom "root"
        set ip 173.1.1.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 173.1.1.2
        set device "port13"
    next
end
```

3. Configure the internal interface and protected subnet. The internal interface connects to the internal network. Traffic from this interface will route out the IPsec VPN tunnel.

a. Configure the HQ FortiGate.

```
config system interface
    edit "dmz"
        set vdom "root"
        set ip 10.1.100.1 255.255.255.0
    next
end
config firewall address
    edit "10.1.100.0"
        set subnet 10.1.100.0 255.255.255.0
    next
end
```

b. Configure the branch office FortiGate.

```
config system interface
    edit "port9"
        set vdom "root"
        set ip 172.16.101.1 255.255.255.0
    next
end
config firewall address
    edit "172.16.101.0"
        set subnet 172.16.101.0 255.255.255.0
    next
end
```

4. Configure the IPsec phase1-interface. In this example, PSK is used as the authentication method. Signature authentication is also an option.

a. Configure the HQ FortiGate.

```
config vpn ipsec phase1-interface
    edit "for_Branch"
        set type dynamic
        set interface "wan1"
        set mode aggressive
        set peertype any
```

```
        set mode-cfg enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
        set dpd on-idle
        set xauthtype auto
        set authusrgrp "vpngroup"
        set net-device enable
        set assign-ip-from name
        set dns-mode auto
        set ipv4-split-include "10.1.100.0"
        set ipv4-name "client_range"
        set save-password enable
        set psksecret sample
        set dpd-retryinterval 60
    next
end
```

b. Configure the branch office FortiGate.

```
config vpn ipsec phase1-interface
    edit "to_HQ"
        set interface "port13"
        set mode aggressive
        set peertype any
        set mode-cfg enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
        set xauthtype client
        set authusr "vpnuser1"
        set authpasswd vpnuser1-password
        set remote-gw 11.101.1.1
        set psksecret sample
    next
end
```

5. Configure the IPsec phase2-interface.

a. Configure the HQ FortiGate:

```
config vpn ipsec phase2-interface
    edit "for_Branch_p2"
        set phase1 name "for_Branch"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
    next
end
```

b. Configure the branch office FortiGate.

```
config vpn ipsec phase2-interface
    edit "to_HQ_p2"
        set phase1name "to_HQ"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
    next
end
```

6. Configure the static routes on the branch office FortiGate. The blackhole route is important to ensure that IPsec traffic does not match the default route when the IPsec tunnel is down.

```
config router static
    edit 2
        set dst 10.1.100.0 255.255.255.0
        set device "to_HQ"
    next
    edit 3
        set dst 10.1.100.0 255.255.255.0
        set blackhole enable
        set distance 254
    next
end
```

7. Configure the firewall policy to allow the branch office to HQ network flow over the IPsec tunnel. This configuration only supports traffic from the branch office FortiGate to the HQ FortiGate. Traffic is dropped from the HQ FortiGate to the branch office FortiGate.
   a. Configure the HQ FortiGate.

```
config firewall policy
    edit 1
        set name "inbound"
        set srcintf "for_Branch"
        set dstintf "dmz"
        set srcaddr "172.16.101.0"
        set dstaddr "10.1.100.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

   b. Configure the branch office FortiGate.

```
config firewall policy
    edit 1
        set name "outbound"
        set srcintf "port9"
        set dstintf "to_HQ"
        set srcaddr "172.16.101.0"
        set dstaddr "10.1.100.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

8. Run `diagnose` commands to check the IPsec phase1/phase2 interface status. The `diagnose debug application ike -1` command is the key to troubleshoot why the IPsec tunnel failed to establish.
   a. Run the `diagnose vpn ike gateway list` command on the HQ FortiGate. The system should return the following:

```
vd: root/0
name: for_Branch_0
version: 1
interface: wan1 5
addr: 11.101.1.1:500 -> 173.1.1.1:500
created: 1972s ago
xauth-user: vpnuser1
```

```
assigned IPv4 address: 10.10.10.1/255.255.255.252
IKE SA: created 1/1 established 1/1 time 10/10/10 ms
IPsec SA: created 1/1 established 1/1 time 0/0/0 ms
id/spi: 184 5b1c59fab2029e43/bf517e686d3943d2
direction: responder
status: established 1972-1972s ago = 10ms
proposal: aes128-sha256
key: 8046488e92499247-fbbb4f6dfa4952d0
lifetime/rekey: 86400/84157
DPD sent/recv: 00000020/00000000
```

b. Run the `diagnose vpn tunnel list` command on the HQ FortiGate. The system should return the following:

```
list all ipsec tunnel in vd 0
name=for_Branch_0 ver=1 serial=9 11.101.1.1:0->173.1.1.1:0
bound_if=5 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/208 options
[00d0]=create_dev no-sysctlrgwy-chg
parent=for_Branch index=0
proxyid_num=1 child_num=0 refcnt=12 ilast=8 olast=8 ad=/0
stat: rxp=8 txp=8 rxb=1216 txb=672
dpd: mode=on-idle on=1 idle=60000ms retry=3 count=0 seqno=31
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=for_Branch_p2 proto=0 sa=1 ref=2 serial=1
src: 0:0.0.0.0-255.255.255.255:0
dst: 0:0.0.0.0-255.255.255.255:0
SA: ref=3 options=226 type=00 soft=0 mtu=1438 expire=41297/0B replaywin=2048 seqno=9
esn=0 replaywin_lastseq=00000009 itn=0
life: type=01 bytes=0/0 timeout=43190/43200
dec: spi=747c10c6 esp=aes key=16 278c2430e09e74f1e229108f906603b0
ah=sha1 key=20 21dad76b008d1e8b8e53148a2fcbd013a277974a
enc: spi=ca646448 esp=aes key=16 b7801d125804e3610a556da7caefd765
ah=sha1 key=20 a70164c3094327058bd84c1a0c954ca439709206
dec:pkts/bytes=8/672, enc:pkts/bytes=8/1216

name=for_Branchver=1 serial=6 11.101.1.1:0->0.0.0.0:0
bound_if=5 lgwy=static/1 tun=intf/0 mode=dialup/2 encap=none/16 options[0010]=create_
dev
proxyid_num=0 child_num=1 refcnt=14 ilast=8523 olast=8523 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=60000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
run_tally=0
```

c. Run the `diagnose vpn ike gateway list` command on the branch office FortiGate. The system should return the following:

```
vd: root/0
name: to_HQ
version: 1
interface: port13 42
addr: 173.1.1.1:500 -> 11.101.1.1:500
created: 2016s ago
assigned IPv4 address: 10.10.10.1/255.255.255.252
IKE SA: created 1/1 established 1/1 time 0/0/0 ms
IPsec SA: created 1/1 established 1/1 time 0/0/0 ms
id/spi: 93 5b1c59fab2029e43/bf517e686d3943d2
direction: initiator
```


```
status: established 2016-2016s ago = 0ms
proposal: aes128-sha256
key: 8046488e92499247-fbbb4f6dfa4952d0
lifetime/rekey: 86400/84083
DPD sent/recv: 00000000/00000020
```

d. Run the `diagnose vpn tunnel list` command on the branch office FortiGate. The system should return the following:

```
list all ipsec tunnel in vd 0
name=to_HQver=1 serial=7 173.1.1.1:0->11.101.1.1:0
bound_if=42 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/8 options[0008]=npu
proxyid_num=1 child_num=0 refcnt=13 ilast=18 olast=58 ad=/0
stat: rxp=1 txp=2 rxb=152 txb=168
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=to_HQ proto=0 sa=1 ref=2 serial=1
src: 0:0.0.0.0/0.0.0.0:0
dst: 0:0.0.0.0/0.0.0.0:0
SA: ref=6 options=10226 type=00 soft=0 mtu=1438 expire=41015/0B replaywin=2048
seqno=3 esn=0 replaywin_lastseq=00000002 itn=0
life: type=01 bytes=0/0 timeout=42898/43200
dec: spi=ca646448 esp=aes key=16 b7801d125804e3610a556da7caefd765
ah=sha1 key=20 a70164c3094327058bd84c1a0c954ca439709206
enc: spi=747c10c6 esp=aes key=16 278c2430e09e74f1e229108f906603b0
ah=sha1 key=20 21dad76b008d1e8b8e53148a2fcbd013a277974a
dec:pkts/bytes=1/84, enc:pkts/bytes=2/304
npu_flag=03 npu_rgwy=11.101.1.1 npu_lgwy=173.1.1.1 npu_selid=5 dec_npuid=2 enc_
npuid=2
```

FortiClient as dialup client

This is a sample configuration of dialup IPsec VPN with FortiClient as the dialup client.

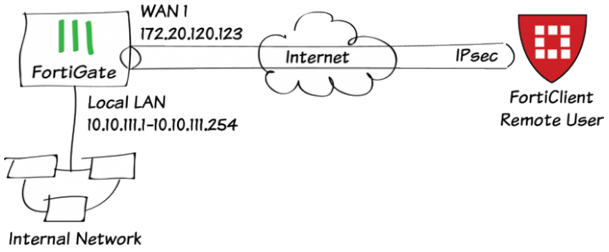

You can configure dialup IPsec VPN with FortiClient as the dialup client using the GUI or CLI.

If multiple dialup IPsec VPNs are defined for the same dialup server interface, each phase1 configuration must define a unique peer ID to distinguish the tunnel that the remote client is connecting to. When a client connects, the first IKE message that is in aggressive mode contains the client's local ID. FortiGate matches the local ID to the dialup tunnel referencing the same Peer ID, and the connection continues with that tunnel.

To configure IPsec VPN with FortiClient as the dialup client on the GUI:

1. Configure a user and user group.
   a. Go to *User & Device* > *User Definition* to create a local user *vpnuser1*.
   b. Go to *User & Device* > *User Groups* to create a group *vpngroup* with the member *vpnuser1*.

2. Go to *VPN* > *IPsec Wizard* and configure the following settings for *VPN Setup*:
   a. Enter a VPN name.
   b. For *Template Type*, select *Remote Access*.
   c. For *Remote Device Type*, select *Client-based* > *FortiClient*.
   d. Click *Next*.
3. Configure the following settings for *Authentication*:
   a. For *Incoming Interface*, select *wan1*.
   b. For *Authentication Method*, select *Pre-shared Key*.
   c. In the *Pre-shared Key* field, enter *your-psk* as the key.
   d. From the *User Group* dropdown list, select *vpngroup*.
   e. Click *Next*.
4. Configure the following settings for *Policy & Routing*:
   a. From the *Local Interface* dropdown menu, select *lan*.
   b. Configure the *Local Address* as *local_network*.
   c. Configure the *Client Address Range* as *10.10.2.1-10.10.2.200*.
   d. Keep the default values for the *Subnet Mask*, *DNS Server*, *Enable IPv4 Split tunnel*, and *Allow Endpoint Registration*.
   e. Click *Next*.
5. Adjust the *Client Options* as needed, then click *Create*.
6. Optionally, define a unique Peer ID in the phase1 configuration:
   a. Go to *VPN* > *IPsec Tunnels* and edit the just created tunnel.
   b. Click *Convert To Custom Tunnel*.
   c. In the *Authentication* section, click *Edit*.
   d. Under *Peer Options*, set *Accept Types* to *Specific peer ID*.
   e. In the *Peer ID* field, enter a unique ID, such as *dialup1*.
   f. Click *OK*.

To configure IPsec VPN with FortiClient as the dialup client using the CLI:

1. In the CLI, configure the user and group.

```
config user local
    edit "vpnuser1"
        set type password
        set passwd your-password
    next
end
config user group
    edit "vpngroup"
        set member "vpnuser1"
    next
end
```

2. Configure the internal interface. The LAN interface connects to the corporate internal network. Traffic from this interface routes out the IPsec VPN tunnel. Creating an address group for the protected network behind this FortiGate causes traffic to this network group to go through the IPsec tunnel.

```
config system interface
    edit "lan"
        set vdom "root"
```

```
        set ip 10.10.111.1 255.255.255.0
    next
end
config firewall address
    edit "local_subnet_1"
        set subnet 10.10.111.0 255.255.255.0
    next
    edit "local_subnet_2"
        set subnet 10.10.112.0 255.255.255.0
    next
end
config firewall addrgrp
    edit "local_network"
        set member "local_subnet_1" "local_subnet_2"
    next
end
```

3. Configure the WAN interface. The WAN interface is the interface connected to the ISP. It can work in static mode (as shown in this example), DHCP, or PPPoE mode. The IPsec tunnel is established over the WAN interface.

```
config system interface
    edit "wan1"
        set vdom "root"
        set ip 172.20.120.123 255.255.255.0
    next
end
```

4. Configure the client address pool. You must create a firewall address to assign an IP address to a client from the address pool.

```
config firewall address
    edit "client_range"
        set type iprange
        set comment "VPN client range"
        set start-ip 10.10.2.1
        set end-ip 10.10.2.200
    next
end
```

5. Configure the IPsec phase1-interface. In this example, PSK is used as the authentication method. Signature authentication is also an option.

```
config vpn ipsec phase1-interface
    edit "for_client"
        set type dynamic
        set interface "wan1"
        set mode aggressive
        set peertype one
        set peerid "dialup1"
        set net-device enable
        set mode-cfg enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set dpd on-idle
        set xauthtype auto
        set authusrgrp "vpngroup"
        set assign-ip-from name
        set ipv4-name "client_range"
        set dns-mode auto
```

```
        set ipv4-split-include "local_network"
        set save-password enable
        set psksecret your-psk
        set dpd-retryinterval 60
    next
end
```

6. Configure the IPsec phase2-interface.

```
config vpn ipsec phase2-interface
    edit "for_client"
        set phase1name "for_client"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
    next
end
```

7. Configure the firewall policy to allow client traffic flow over the IPsec VPN tunnel.

```
config firewall policy
    edit 1
        set name "inbound"
        set srcintf "for_client"
        set dstintf "lan"
        set srcaddr "client_range"
        set dstaddr "local_network"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

To configure FortiClient:

1. In FortiClient, go to *Remote Access* and click *Add a new connection*.
2. Set the *VPN* to *IPsec VPN* and the *Remote Gateway* to the FortiGate IP address.
3. Set the *Authentication Method* to *Pre-Shared Key* and enter the key.
4. Expand *Advanced Settings* > *Phase 1* and in the *Local ID* field, enter *dialup1*.
5. Configure remaining settings as needed, then click *Save*.
6. Select the VPN, enter the username and password, then select *Connect*.

Diagnose the connection

Run `diagnose` commands to check the IPsec phase1/phase2 interface status. The `diagnose debug application ike -1` command is the key to troubleshoot why the IPsec tunnel failed to establish.

1. Run the `diagnose vpn ike gateway list` command. The system should return the following:

```
vd: root/0
name: for_client_0
version: 1
interface: port1 15
addr: 172.20.120.123:4500 ->172.20.120.254:64916
created: 37s ago
xauth-user: vpnuser1
assigned IPv4 address: 10.10.1.1/255.255.255.255
```

```
nat: me peer
IKE SA: created 1/1 established 1/1 time 10/10/10 ms
IPsec SA: created 1/1 established 1/1 time 0/0/0 ms
id/spi: 1 b40a32d878d5e262/8bba553563a498f4
direction: responder
status: established 37-37s ago = 10ms
proposal: aes256-sha256
key: f4ad7ec3a4fcfd09-787e2e9b7bceb9a7-0dfa183240d838ba-41539863e5378381
lifetime/rekey: 86400/86092
DPD sent/recv: 00000000/00000a0e
```

2. Run the `diagnose vpn tunnel list` command. The system should return the following:

```
list all ipsec tunnel in vd 0
=
=
name=for_client_0 ver=1 serial=3 172.20.120.123:4500->172.20.120.254:64916
bound_if=15 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/984 options
[03d8]=npucreate_dev no-sysctlrgwy-chgrport-chg frag-rfcaccept_traffic=1
parent=for_client index=0
proxyid_num=1 child_num=0 refcnt=12 ilast=3 olast=3 ad=/0
stat: rxp=1 txp=0 rxb=16402 txb=0
dpd: mode=on-idle on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=keepalive draft=32 interval=10 remote_port=64916
proxyid=for_client proto=0 sa=1 ref=2 serial=1 add-route
src: 0:0.0.0.0-255.255.255.255:0
dst: 0:10.10.1.1-10.10.1.1:0
SA: ref=4 options=2a6 type=00 soft=0 mtu=1422 expire=42867/0B replaywin=2048
seqno=1 esn=0 replaywin_lastseq=00000001 itn=0
life: type=01 bytes=0/0 timeout=43189/43200
dec: spi=36274d14 esp=aes key=16 e518b84b3c3b667b79f2e61c64a225a6
ah=sha1 key=20 9cceaa544ed042fda800c4fe5d3fd9d8b811984a
enc: spi=8b154deb esp=aes key=16 9d50f004b45c122e4e9fb7af085c457c
ah=sha1 key=20 f1d90b2a311049e23be34967008239637b50a328
dec:pkts/bytes=1/16330, enc:pkts/bytes=0/0
npu_flag=02 npu_rgwy=172.20.120.254 npu_lgwy=172.20.120.123npu_selid=0 dec_npuid=2 enc_
npuid=0
name=for_clientver=1 serial=2 172.20.120.123:0->0.0.0.0:0
bound_if=15 lgwy=static/1 tun=intf/0 mode=dialup/2 encap=none/536 options
[0218]=npucreate_dev frag-rfcaccept_traffic=1
proxyid_num=0 child_num=1 refcnt=11 ilast=350 olast=350 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
```

Add FortiToken multi-factor authentication

This configuration adds multi-factor authentication (MFA) to the FortiClient dialup VPN configuration (FortiClient as dialup client on page 1153). It uses one of the two free mobile FortiTokens that is already installed on the FortiGate.

To configure MFA using the GUI:

1. Edit the user:
   a. Go to *User & Device* > *User Definition* and edit local user *vpnuser1*.
   b. Enter the user's *Email Address*.

c. Enable *Two-factor Authentication* and select one mobile *Token* from the list,
d. Enable *Send Activation Code* and select *Email*.
e. Click *Next* and click *Submit*.

2. Activate the mobile token.
   a. When a FortiToken is added to user *vpnuser1*, an email is sent to the user's email address. Follow the instructions to install your FortiToken mobile application on your device and activate your token.

To configure MFA using the CLI:

1. Edit the user and user group:

```
config user local
    edit "vpnuser1"
        set type password
        set two-factor fortitoken
        set fortitoken <select mobile token for the option list>
        set email-to <user's email address>
        set passwd <user's password>
    next
end
```

2. Activate the mobile token.
   a. When a FortiToken is added to user *vpnuser1*, an email is sent to the user's email address. Follow the instructions to install your FortiToken mobile application on your device and activate your token.

Add LDAP user authentication

This configuration adds LDAP user authentication to the FortiClient dialup VPN configuration (FortiClient as dialup client on page 1153). You must have already generated and exported a CA certificate from your AD server.

To configure LDAP user authentication using the GUI:

1. Import the CA certificate into FortiGate:
   a. Go to *System* > *Certificates*.
   If the *Certificates* option is not visible, enable it in *Feature Visibility*. See Feature visibility on page 716 for details.
   b. Click *Import* > *CA Certificate*.
   c. Set *Type* to *File*.
   d. Click *Upload* then find and select the certificate file.
   e. Click *OK*.
   The CA certificate now appears in the list of *External CA Certificates*. In this example, it is called *CA_Cert_1*.
   f. Optionally, rename the system generated *CA_Cert_1* to something more descriptive:

```
config vpn certificate ca
    rename CA_Cert_1 to LDAPS-CA
end
```

2. Configure the LDAP user:
   a. Go to *User & Device* > *LDAP Servers* and click *Create New*.
   b. Set *Name* to *ldaps-server* and specify *Server IP/Name*.
   c. Specify *Common Name Identifier* and *Distinguished Name*.

d. Set *Bind Type* to *Regular*.
e. Specify *Username* and *Password*.
f. Enable *Secure Connection* and set *Protocol* to *LDAPS*.
g. For *Certificate*, select *LDAP server CA LDAPS-CA* from the list.
h. Click *OK*.

3. Add the LDAP user to the user group:
   a. Go to *User & Device* > *User Groups* and edit the *vpngroup* group.
   b. In *Remote Groups*, click *Add* to add the *ldaps-server* remote server.
   c. Click *OK*.

To configure LDAP user authentication using the CLI:

1. Import the CA certificate using the GUI.
2. Configure the LDAP user:


```
config user ldap
    edit "ldaps-server"
        set server "172.20.120.161"
        set cnid "cn"
        set dn "cn=Users,dc=qa,dc=fortinet,dc=com"
        set type regular
        set username "CN=Administrator,cn=users,DC=qa,DC=fortinet,DC=com"
        set password **********
        set group-member-check group-object
        set secure ldaps
        set ca-cert "LDAPS-CA"
        set port 636
    next
end
```

3. Add the LDAP user to the user group:

```
config user group
    edit "vpngroup"
        append member "ldaps-server"
    next
end
```

iOS device as dialup client

This is a sample configuration of dialup IPsec VPN with an iPhone or iPad as the dialup client.

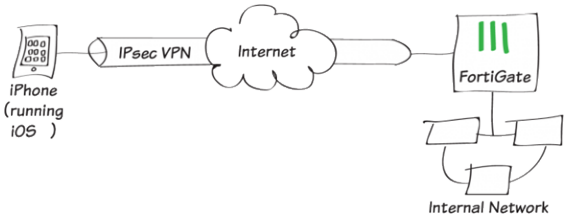

You can configure dialup IPsec VPN with an iOS device as the dialup client using the GUI or CLI.

To configure IPsec VPN with an iOS device as the dialup client on the GUI:

1. Go to *VPN* > *IPsec Wizard* and configure the following settings for *VPN Setup*:
   a. Enter a VPN name.
   b. For *Template Type*, select *Remote Access*.
   c. For *Remote Device Type*, select *Native* > *iOS Native*.
   d. For *NAT Configuration*, set *No NAT Between Sites*.
   e. Click *Next*.
2. Configure the following settings for *Authentication*:
   a. For *Incoming Interface*, select *wan1*.
   b. For *Authentication Method*, select *Pre-shared Key*.
   c. In the *Pre-shared Key* field, enter *your-psk* as the key.
   d. From the *User Group* dropdown list, select *vpngroup*.
   e. Deselect *Require 'Group Name' on VPN client*.
   f. Click *Next*.
3. Configure the following settings for *Policy & Routing*:
   a. From the *Local Interface* dropdown menu, select *lan*.
   b. Configure the *Local Address* as *local_network*.
   c. Configure the *Client Address Range* as *10.10.2.1-10.10.2.200*.
   d. Keep the default values for the *Subnet Mask*, *DNS Server*, and *Enable IPv4 Split tunnel*.
   e. Click *Create*.

To configure IPsec VPN with an iOS device as the dialup client using the CLI:

1. In the CLI, configure the user and group.

```
config user local
    edit "vpnuser1"
        set type password
        set passwd your-password
    next
end
config user group
    edit "vpngroup"
        set member "vpnuser1"
    next
end
```

2. Configure the internal interface. The LAN interface connects to the corporate internal network. Traffic from this interface routes out the IPsec VPN tunnel. Creating an address group for the protected network behind this FortiGate causes traffic to this network group to go through the IPsec tunnel.

```
config system interface
    edit "lan"
        set vdom "root"
        set ip 10.10.111.1 255.255.255.0
    next
end
config firewall address
    edit "local_subnet_1"
        set subnet 10.10.111.0 255.255.255.0
    next
```

```
    edit "local_subnet_2"
        set subnet 10.10.112.0 255.255.255.0
    next
end
config firewall addrgrp
    edit "local_network"
        set member "local_subnet_1" "local_subnet_2"
    next
end
```

3. Configure the WAN interface. The WAN interface is the interface connected to the ISP. It can work in static mode (as shown in this example), DHCP, or PPPoE mode. The IPsec tunnel is established over the WAN interface.

```
config system interface
    edit "wan1"
        set vdom "root"
        set ip 172.20.120.123 255.255.255.0
    next
end
```

4. Configure the client address pool. You must create a firewall address to assign an IP address to a client from the address pool.

```
config firewall address
    edit "client_range"
        set type iprange
        set comment "VPN client range"
        set start-ip 10.10.2.1
        set end-ip 10.10.2.200
    next
end
```

5. Configure the IPsec phase1-interface. In this example, PSK is used as the authentication method. Signature authentication is also an option.

```
config vpn ipsec phase1-interface
    edit "for_ios_p1"
        set type dynamic
        set interface "wan1"
        set peertype any
        set net-device enable
        set mode-cfg enable
        set proposal aes256-sha256 aes256-md5 aes256-sha1
        set dpd on-idle
        set dhgrp 14 5 2
        set xauthtype auto
        set authusrgrp "vpngroup"
        set assign-ip-from name
        set ipv4-name "client_range"
        set dns-mode auto
        set ipv4-split-include "local_network"
        set psksecret your-psk
        set dpd-retryinterval 60
    next
end
```

6. Configure the IPsec phase2-interface.

```
config vpn ipsec phase2-interface
    edit "for_ios_p2"
        set phase1name "for_ios_p1"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
        set pfs disable
        set keepalive enable
    next
end
```

7. Configure the firewall policy to allow client traffic flow over the IPsec VPN tunnel.

```
config firewall policy
    edit 1
        set name "ios_vpn"
        set srcintf "for_ios_p1"
        set dstintf "lan"
        set srcaddr "ios_range"
        set dstaddr "local_network"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

8. Configure the iOS device.
   a. In the iOS device, go to *Settings* > *General* > *VPN* and select *Add VPN Configuration*.
   b. Set the *Type* to *IPsec* and enter a *Description*. Set the *Server* to the FortiGate's Internet-facing interface, and enter the username in *Account*. Enter the user password, the preshared IPsec VPN secret, then select *Done*.
   c. Ensure that the IPsec VPN configuration is highlighted (indicated by a checkmark), and select the *Not Connected* button. The IPsec VPN connects with the user's credentials and secret. The status changes to *Connected*, and a VPN icon appears at the top of the screen.
9. Run `diagnose` commands to check the IPsec phase1/phase2 interface status. The `diagnose debug application ike -1` command is the key to troubleshoot why the IPsec tunnel failed to establish.
   a. Run the `diagnose vpn ike gateway list` command. The system should return the following:

```
vd: root/0
name: for_ios_p1_0
version: 1
interface: port1 15
addr: 172.20.120.123:4500 -> 172.20.120.254:64916
created: 17s ago
xauth-user: u1
assigned IPv4 address: 10.10.2.1/255.255.255.255
nat: me peer
IKE SA: created 1/1 established 1/1 time 150/150/150 ms
IPsec SA: created 1/1 established 1/1 time 10/10/10 ms
id/spi: 2 3c844e13c75591bf/80c2db92c8d3f602 direction: responder status: established
17-17s ago = 150ms proposal: aes256-sha256 key: 0032ea5ee160d775-51f3bf1f9909101b-
b89c7b5a77a07784-2c92cf9c921801ac lifetime/rekey: 3600/3312 DPD sent/recv:
00000000/00000000
```

b. Run the `diagnose vpn tunnel list` command. The system should return the following:

```
list all ipsec tunnel in vd 0
=
=
name=for_ios_p1_0 ver=1 serial=172.20.120.123:4500->172.20.120.254:64916
bound_if=15 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/984 options
[03d8]=npu create_dev no-sysctl rgwy-chg rport-chg frag-rfc accept_traffic=1
parent=for_ios_p1 index=0
proxyid_num=1 child_num=0 refcnt=12 ilast=23 olast=23 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=1 idle=60000ms retry=3 count=0 seqno=0
natt: mode=keepalive draft=32 interval=10 remote_port=64916
proxyid=for_ios_p1 proto=0 sa=1 ref=2 serial=1 add-route
src: 0:10.10.111.0-10.10.111.255:0 dst: 0:10.10.2.1-10.10.2.1:0 SA: ref=3 options=a7
type=00 soft=0 mtu=1422 expire=3564/0B replaywin=2048
seqno=1 esn=0 replaywin_lastseq=00000000 itn=0
life: type=01 bytes=0/0 timeout=3587/3600 dec: spi=36274d15 esp=aes key=32
5a599d796f8114c83d6589284f036fc33bdf4456541e2154b4ac2217b6aec869
ah=sha1 key=20 f1efdeb77d6f856a8dd3a30cbc23cb0f8a3e0340
enc: spi=00b0d9ab esp=aes key=32
e9232d7a1c4f390fd09f8409c2d85f80362d940c08c73f245908ab1ac3af322f
ah=sha1 key=20 a3890d6c5320756291cad85026d3a78fd42a1b42
dec:pkts/bytes=0/0, enc:pkts/bytes=0/0 npu_flag=00 npu_rgwy=172.20.120.254 npu_
lgwy=172.20.120.123 npu_selid=1 dec_npuid=0 enc_npuid=0
```

IKE Mode Config clients

IKE Mode Config is an alternative to DHCP over IPsec. It allows dialup VPN clients to obtain virtual IP address, network, and DNS configurations amongst others from the VPN server. A FortiGate can be configured as either an IKE Mode Config server or client.

IKE Mode Config can configure the host IP address, domain, DNS addresses ,and WINS addresses. IPsec parameters such as gateway address, encryption, and authentication algorithms must be configured. Several network equipment vendors support IKE Mode Config.

An IKE Mode Config server or client is configured using `config vpn ipsec phase1-interface` and involves the following parameters:

Parameter	Description
ike-version {1 | 2}	IKE v1 is the default for FortiGate IPsec VPNs. IKE Mode Config is also compatible with IKE v2.
mode-cfg {enable | disable}	Enable/disable IKE Mode Config.
type {static | dynamic | ddns}	If you set `type` to `dynamic`, an IKE Mode Config server is created. The other settings create an IKE Mode Config client.
assign-ip {enable | disable}	Enable to request an IP address from the server. This configuration is for IKE Mode Config clients only.
interface <interface_name>	Specify the physical, aggregate, or VLAN interface to which the IPsec tunnel will be bound.

Parameter	Description
proposal <encryption_ combination>	The encryption and authentication settings that the client will accept.
ip-version {4 | 6}	By default, IPsec VPNs use IPv4 addressing.
ipv4-split-exclude <string> ipv6-split-exclude <string>	Specify the subnets that should not be sent over the IPsec tunnel. This configuration is for IKE Mode Config clients only (see Split-exclude in IKEv1).

Creating an IKE Mode Config client

In this example, the FortiGate connects to a VPN gateway with a static IP address that can be reached through port 1. Only the port, gateway, and proposal information needs to be configured. All other configuration information will come from the IKE Mode Config server.

To configure an IKE Mode Config client:

```
config vpn ipsec phase1-interface
    edit vpn1
        set ip-version 4
        set type static
        set remote-gw <gw_address>
        set interface port1
        set proposal 3des-sha1 aes128-sha1
        set mode-cfg enable
        set assign-ip enable
    next
end
```

Split-exclude in IKEv1

The `split-exclude` option specifies that default traffic flows over the IPsec tunnel except for specified subnets. This is the opposite of `split-include`, which specifies that default traffic should not flow over the IPsec tunnel except for specified subnets. The `split-include` and `split-exclude` options can be specified at the same time.

To configure split-exclude:

```
config vpn ipsec phase1-interface
    edit <name>
        set ike-version 1
        set type dynamic
        set mode-cfg enable
        set ipv4-split-exclude <string>
        set ipv6-split-exclude <string>
    next
end
```

Creating an IKE Mode Config server

In this example, the FortiGate assigns IKE Mode Config clients addresses in the range of 10.11.101.160 - 10.11.101.180. DNS and WINS server addresses are also provided. The public interface of the FortiGate unit is port1.

When IKE Mode-Configuration is enabled, multiple server IPs can be defined in IPsec phase 1.

The `ipv4-split-include` parameter specifies a firewall address (`OfficeLAN`), which represents the networks that the clients will have access to. This destination IP address information is sent to the clients.

To configure an IKE Mode Config server:

```
config vpn ipsec phase1-interface
    edit "vpn-p1"
        set type dynamic
        set interface "wan1"
        set xauthtype auto
        set mode aggressive
        set mode-cfg enable
        set proposal 3des-sha1 aes128-sha1
        set dpd disable
        set dhgrp 2
        set authusrgrp "FG-Group1"
        set ipv4-start-ip 10.10.10.10
        set ipv4-end-ip 10.10.10.20
        set ipv4-dns-server1 1.1.1.1
        set ipv4-dns-server2 2.2.2.2
        set ipv4-dns-server3 3.3.3.3
        set ipv4-wins-server1 4.4.4.4
        set ipv4-wins-server2 5.5.5.5
        set domain "fgt1c-domain"
        set banner "fgt111C-banner"
        set backup-gateway "100.100.100.1" "host1.com" "host2"
        set ipv4-split-include OfficeLAN
    next
end
```

Assigning IP addresses

Once the basic configuration is enabled, you can configure IP address assignment for clients, as well as DNS and WINS server assignments. Usually you will want to assign IP addresses to clients. The easiest way is to assign addresses from a specific range, similar to a DHCP server.

To assign an IP from an address range:

```
config vpn ipsec phase1-interface
    edit vpn1
        set ip-version 4
        set assign-ip enable
        set assign-ip-from range
        set ipv4-start-ip <range_start>
        set ipv4-end-ip <range_end>
        set ipv4-netmask <netmask>
    next
end
```

To assign an IP from a named firewall address or group:

```
config vpn ipsec phase1-interface
    edit vpn1
```

```
        set type dynamic
        set assign-ip-from name
        set ipv4-name <name>
        set ipv6-name <name>
    next
end
```

RADIUS server

If the client is authenticated by a RADIUS server, you can obtain the user's IP address assignment from the Framed-IP-Address attribute. The user must be authenticated using XAuth.

The users must be authenticated by a RADIUS server and assigned to the FortiGate user group `<grp_name>`. Since the IP address is not static, type is set to dynamic and `mode-cfg` is enabled. With IKE Mode Config, compatible clients can configure themselves with settings provided by the FortiGate.

To assign an IP from a RADIUS server:

```
config vpn ipsec phase1-interface
    edit vpn1
        set type dynamic
        set mode-cfg enable
        set assign-ip enable
        set assign-ip-from usrgrp
        set xauthtype auto
        set authusrgrp <grp_name>
    next
end
```

DHCP server

IKE Mode Config can use a remote DHCP server to assign the client IP addresses. Up to eight server addresses can be selected for either IPv4 or IPv6. The DHCP proxy must be enabled first.

To assign an IP from a DHCP server:

```
config system settings
    set dhcp-proxy enable
    set dhcp-server-ip <address>
    set dhcp6-server-ip <address>
end
```

```
config vpn ipsec phase1-interface
    edit vpn1
        set mode-cfg enable
        set assign-ip-from dhcp
    next
end
```

Certificate groups

IKE certificate groups consisting of up to four RSA certificates can be used in IKE phase 1. Since CA and local certificates are global, the IKE daemon loads them once for all VDOMs and indexes them into trees based on subject and public key hash (for CA certificates), or certificate name (for local certificates). Certificates are linked together based

on the issuer, and certificate chains are built by traversing these links. This reduces the need to keep multiple copies of certificates that could exist in multiple chains.


To configure the IKE local ID:

```
config vpn certificate local
    edit <name>
        set ike-localid <string>
        set ike-localid-type {asnldn | fqdn}
    next
end
```

IPsec VPN with external DHCP service


You can use an external DHCP server to assign IP addresses to your IPsec VPN clients. This is a common scenario found in enterprises where all DHCP leases need to be managed centrally.

In this example, the DHCP server assigns IP addresses in the range of 172.16.6.100 to 172.16.6.120. The server is attached to internal2 on the FortiGate and has an IP address of 192.168.3.70.

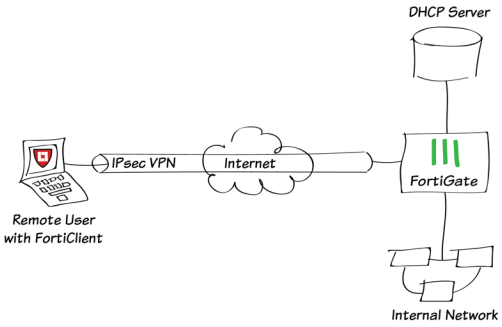


To configure a DHCP server to assign IP addresses to IPsec VPN clients:

1. Create a user group for remote users:
   a. Go to *User & Device* > *User Definition* > *Create New*.
   b. For *User Type*, select *Local User*.

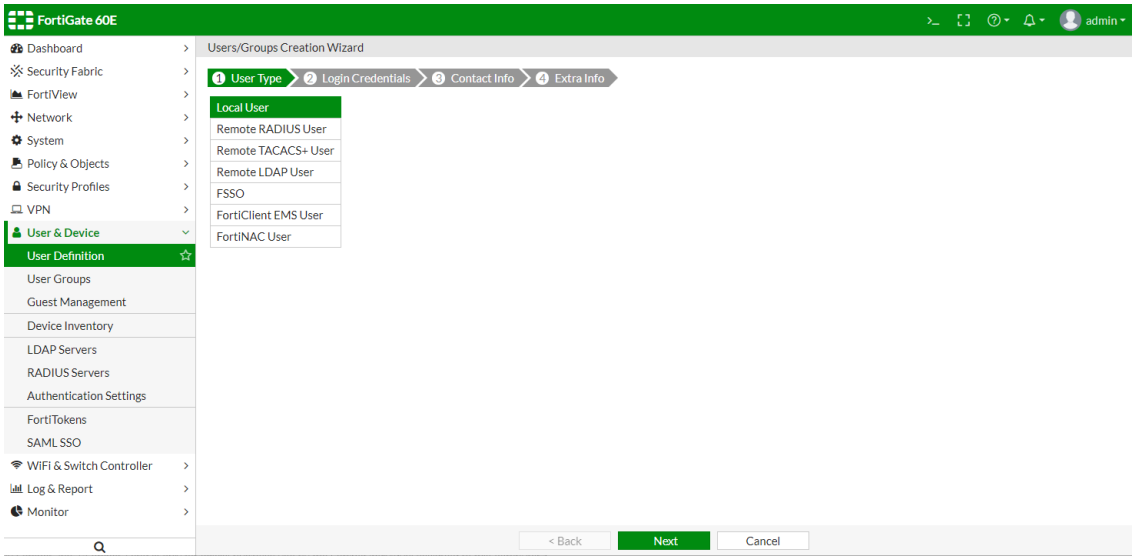


   c. Complete the wizard, and click *Submit*.
   d. Go to *User & Device* > *User Groups* > *Create New*.
   e. Create a *Firewall* user group for your remote users.
   f. For *Members*, add the user you just created.
   g. Click *OK*.

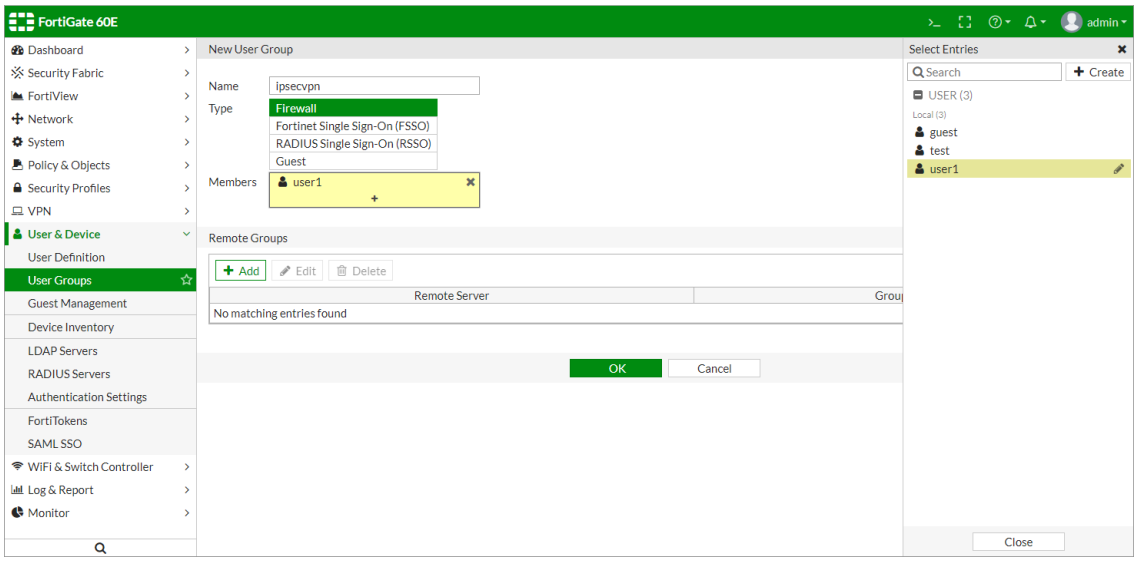


2. Add a firewall address for the local network and IPsec VPN client range:
   a. Go to *Policy & Objects* > *Addresses*.
   b. Create a new *Subnet* address for the LAN, including the IP mask and local interface (*internal2*).

c. Click *OK*.

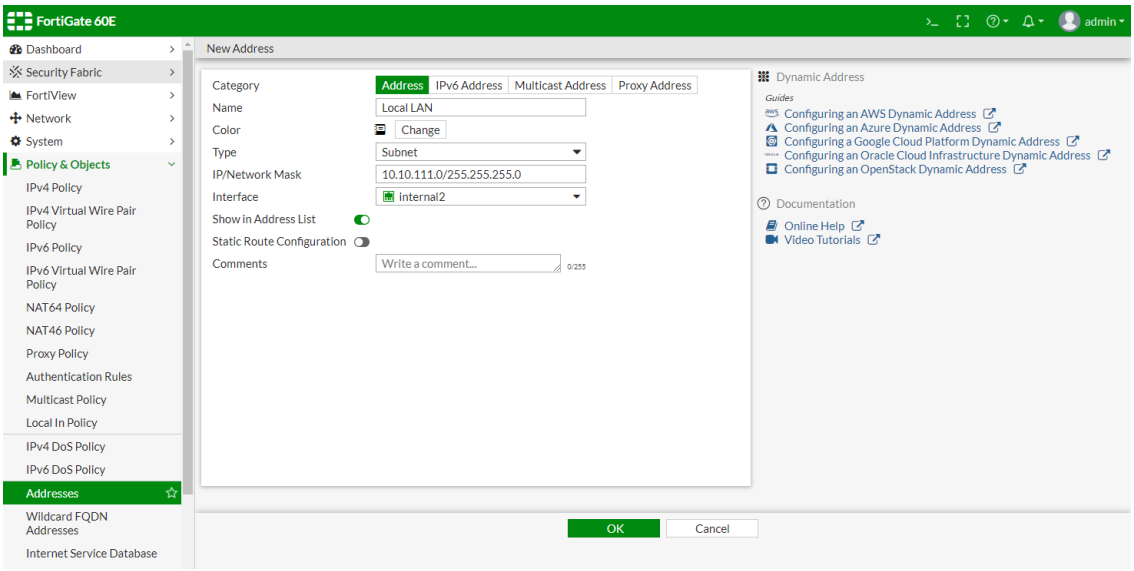

d. Create a new *IP Range* address for the IPsec VPN client range (`172.16.6.100–172.16.6.120`).

e. Click *OK*.

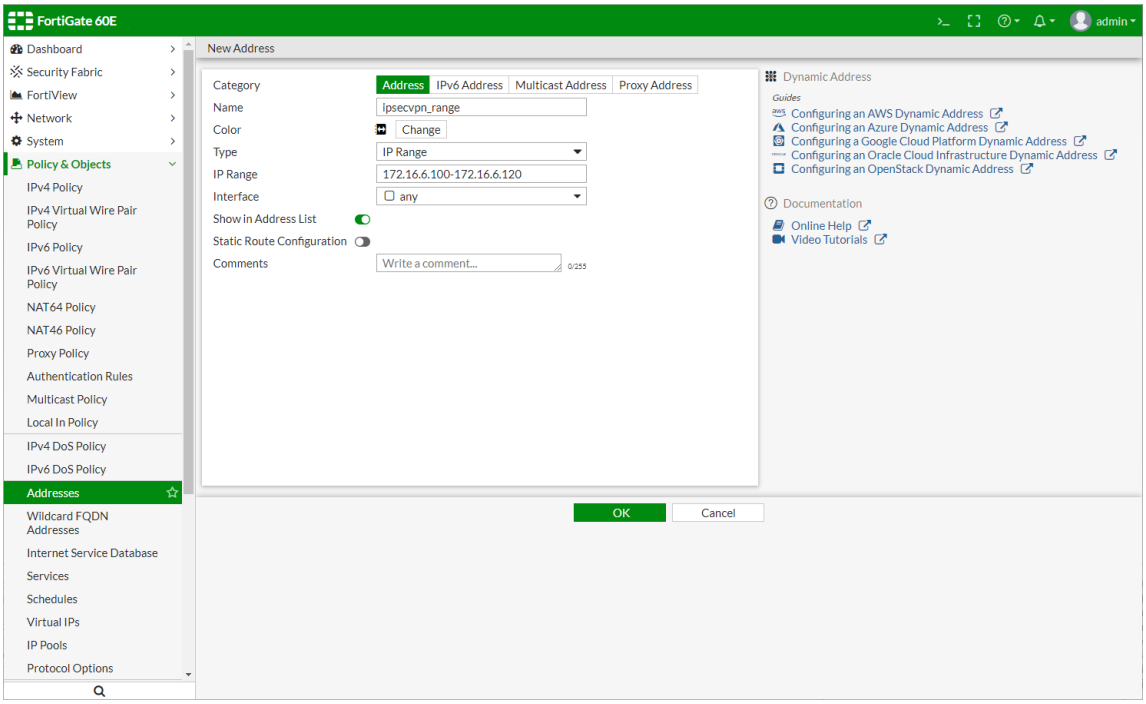


3. Configure the IPsec VPN using a VPN tunnel in the CLI:

```
config vpn ipsec phase1-interface
    edit "dhcp_vpn"
        set type dynamic
        set interface "wan1"
        set mode aggressive
        set peertype any
        set net-device disable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
```

```
        set dpd on-idle
        set dhgrp 5
        set xauthtype auto
        set authusrgrp "ipsecvpn"
        set psksecret <xxxxxx>
        set dpd-retryinterval 60
    next
end


config vpn ipsec phase2-interface
    edit "toclient"
        set phase1name "dhcp_vpn"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
        set dhgrp 5
        set dhcp-ipsec enable
    next
end
```

4. Configure the IPsec VPN interface:
   a. Go to *Network* > *Interfaces* and edit the newly created IPsec VPN interface.
   b. Enable the *DHCP Server*.
   c. Expand *Advanced* and change the *Mode* to *Relay*.
   d. Enter the external DHCP server IP address (`192.168.3.70`).
   e. Change the *Type* to *IPsec*.
   f. Click *OK*.

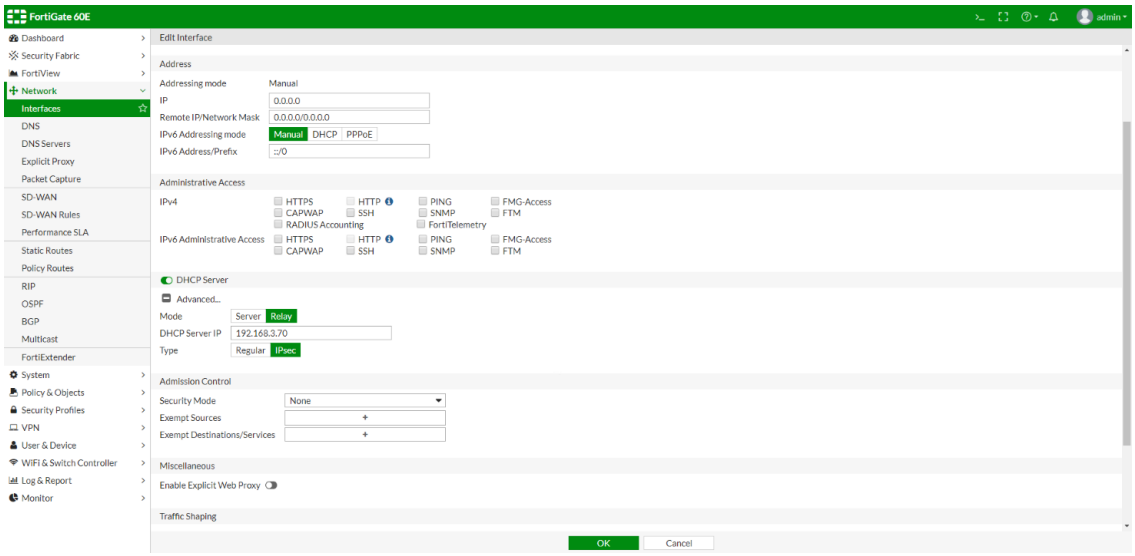


5. Create a security policy for access to the local network:
   a. Go to *Policy & Objects* > *IPv4 Policy* > *Create New*.
   b. Configure the following parameters:
      i. Set the *Incoming Interface* to the tunnel interface created in step 3 (*dhcp_vpn*).
      ii. Set the *Outgoing Interface* (*internal2*).
      iii. Set the *Source* to the IPsec VPN client range defined in step 2 (*ipsecvpn_range*).
      iv. Set the *Destination* to the subnet address defined in step 2 (*Local LAN*).
      v. Set the *Service* to *ALL*.

c. Click *OK*.

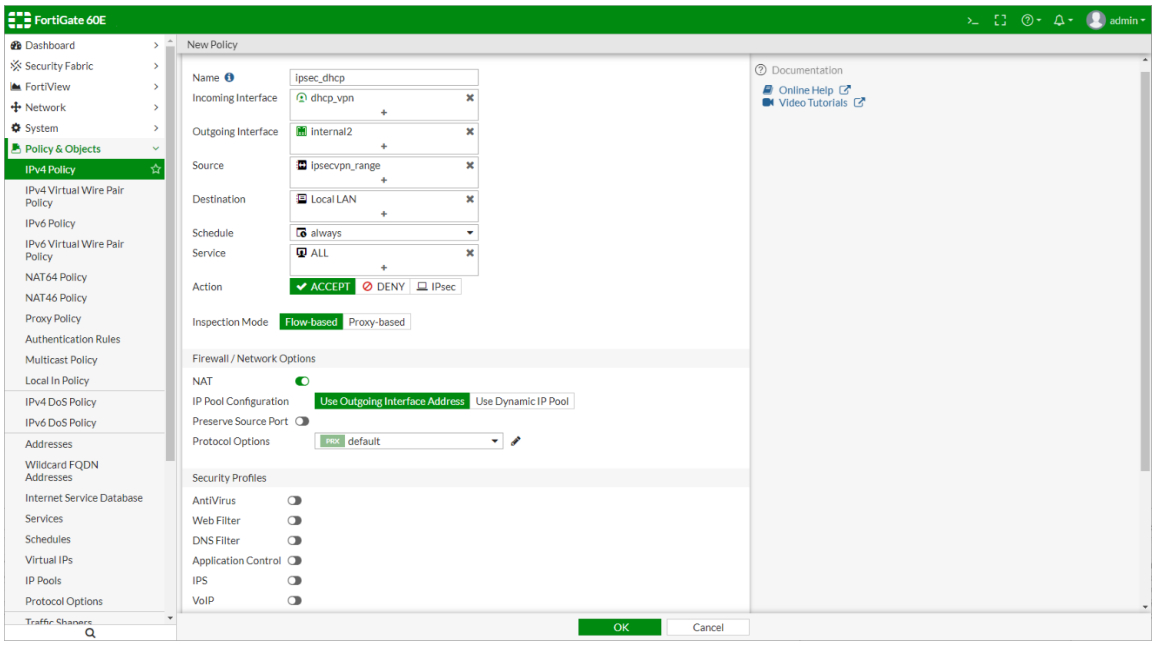

6. Configure FortiClient:

a. In FortiClient, go to *REMOTE ACCESS* > *Add a new connection*.

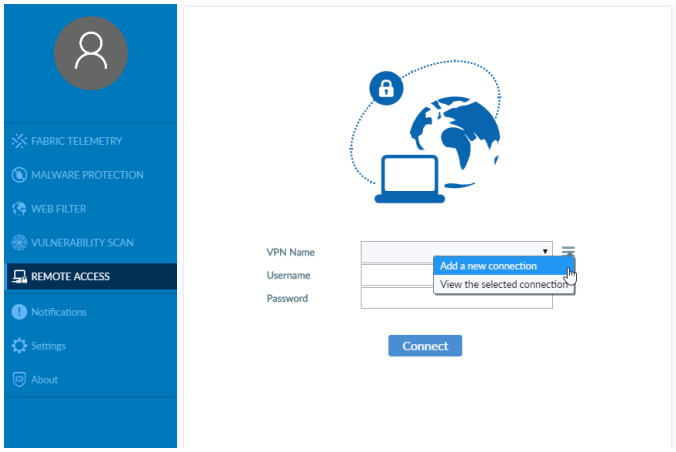

b. Configure the following parameters:

i. Set the *VPN* type to *IPsec VPN*.


ii. Enter a connection name.

iii. Set the *Remote Gateway* to the FortiGate external IP address.

iv. Set the *Authentication Method* to *Pre-shared key* and enter the key below.


v. Expand the *Advanced Settings* > *VPN Settings* and for *Options*, select *DHCP over IPsec*.

vi. Click *Save*.

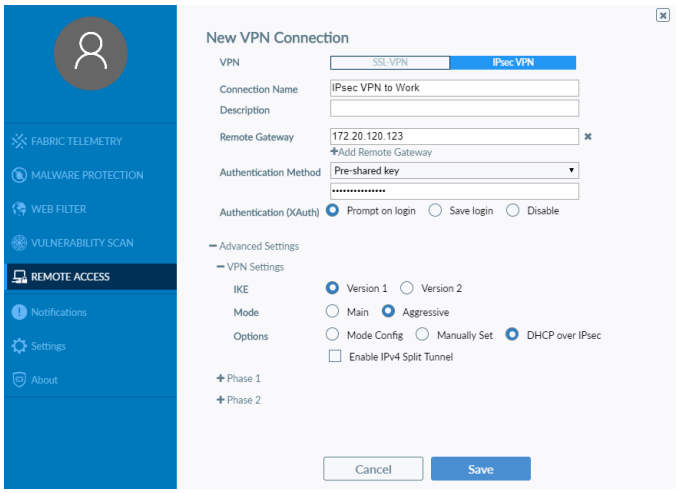

c. Select the new connection, and enter the user name and password.

d. Click *Connect*.

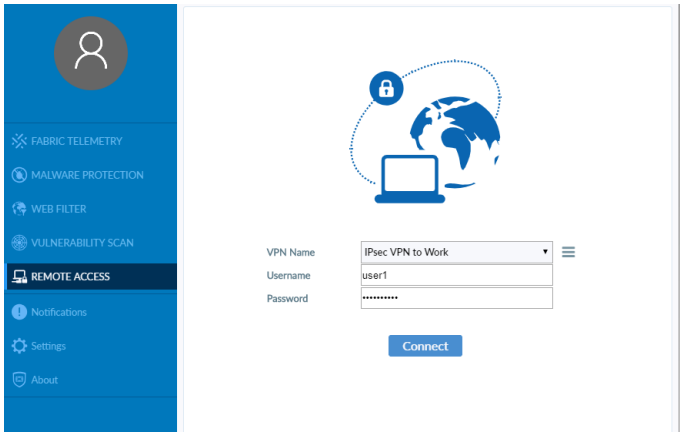

Once the connection is established, the external DHCP server assigns the user an IP address and FortiClient displays the connection status, including the IP address, connection duration, and bytes sent and received.


Verification

1. In FortiOS, go to *Monitor* > *IPsec Monitor* and verify that the tunnel *Status* is *Up*.
2. Go to *Log & Report* > *Forward Traffic* and verify the *Sent / Received* column displays the traffic flow through the tunnel.

L2TP over IPsec


This is an example of L2TP over IPsec.

This example uses a locally defined user for authentication, a Windows PC or Android tablet as the client, and `net-device` is set to `enable` in the `phase1-interface` settings. If `net-device` is set to `disable`, only one device can establish an L2TP over IPsec tunnel behind the same NAT device.

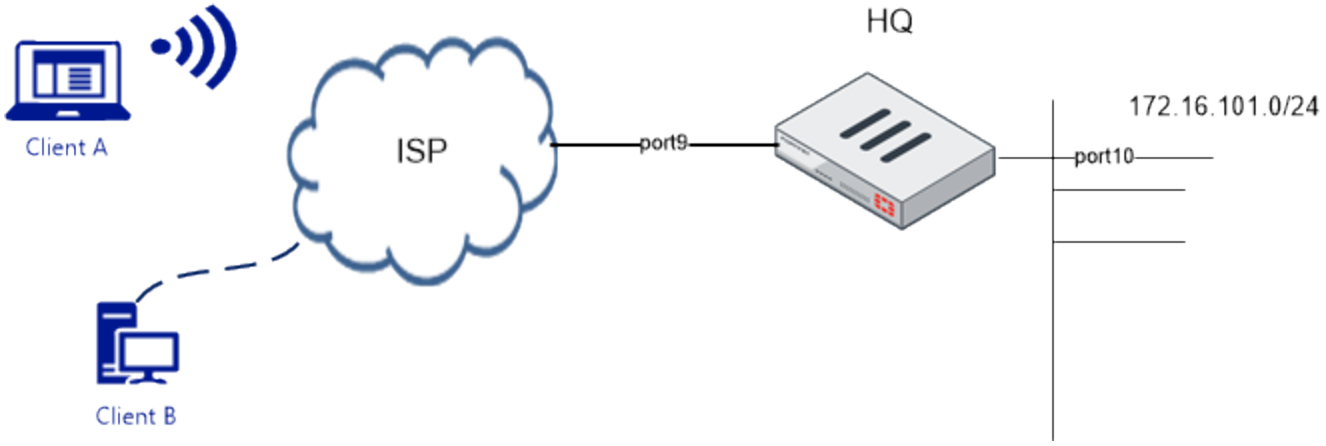

To configure L2TP over an IPsec tunnel using the GUI:

1. Go to *VPN* > *IPsec Wizard*.

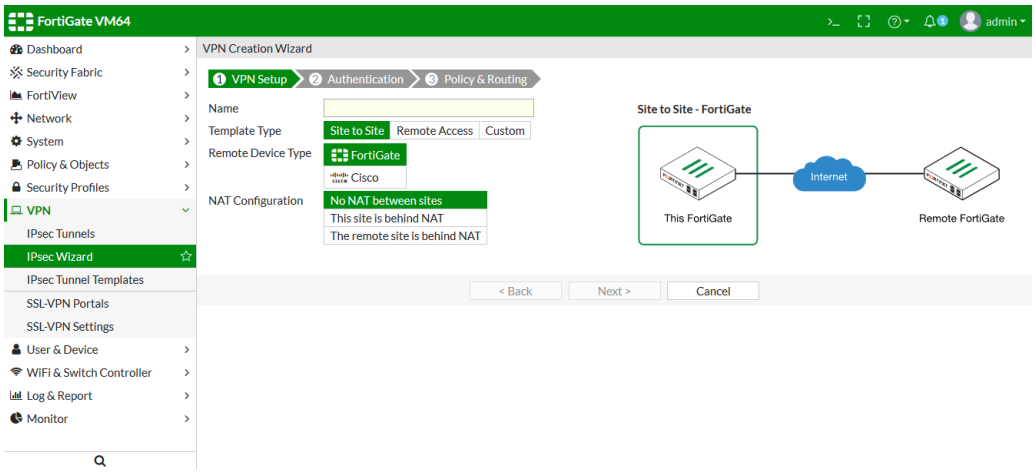

2. Enter a VPN *Name*. In this example, *L2tpoIPsec*.
3. configure the following settings for *VPN Setup*:
   a. For *Template Type*, select *Remote Access*.
   b. For *Remote Device Type*, select *Native* and *Windows Native*.
   c. Click *Next*.
4. Configure the following settings for *Authentication*:
   a. For *Incoming Interface*, select *port9*.
   b. For *Authentication Method*, select *Pre-shared Key*.
   c. In the *Pre-shared Key* field, enter *your-psk* as the key.

   d. For *User Group*, select *L2tpusergroup*
   e. Click *Next*.
5. Configure the following settings for *Policy & Routing*:
   a. From the *Local Interface* dropdown menu, select *port10*.
   b. Configure the *Local Address* as *172.16.101.0*.
   c. Configure the *Client Address Range* as *10.10.10.1-10.10.10.100*.
   d. Leave the *Subnet Mask* at its default value.
   e. Click *Create*.

To configure L2TP over an IPsec tunnel using the CLI:

1. Configure the WAN interface and static route on HQ.

```
config system interface
    edit "port9"
        set alias "WAN"
        set ip 22.1.1.1 255.255.255.0
    next
    edit "port10"
        set alias "Internal"
        set ip 172.16.101.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 22.1.1.2
        set device "port9"
    next
end
```

2. Configure IPsec phase1-interface and phase2-interface on HQ.

```
config vpn ipsec phase1-interface
    edit "L2tpoIPsec"
        set type dynamic
        set interface "port9"
        set peertype any
        set proposal aes256-md5 3des-sha1 aes192-sha1
        set dpd on-idle
        set dhgrp 2
        set net-device enable
        set psksecret sample
        set dpd-retryinterval 60
    next
end
config vpn ipsec phase2-interface
    edit "L2tpoIPsec"
        set phase1name "L2tpoIPsec"
        set proposal aes256-md5 3des-sha1 aes192-sha1
        set pfs disable
        set encapsulation transport-mode
        set l2tp enable
    next
end
```

3. Configure a user and user group on HQ.

```
config user local
    edit "usera"
        set type password
        set passwd usera
        next
end
config user group
    edit "L2tpusergroup"
        set member "usera"
    next
end
```

4. Configure L2TP on HQ.

```
config vpn l2tp
    set status enable
    set eip 10.10.10.100
    set sip 10.10.10.1
    set usrgrp "L2tpusergroup"
end
```

5. Configure a firewall address that is applied in L2TP settings to assign IP addresses to clients once the L2TP tunnel is established.

```
config firewall address
    edit "L2TPclients"
        set type iprange
        set start-ip 10.10.10.1
        set end-ip 10.10.10.100
    next
end
```

6. Configure a firewall policy.

```
config firewall policy
    edit 1
        set name "Bridge_IPsec_port9_for_l2tp negotiation"
        set srcintf "L2tpoIPsec"
        set dstintf "port9"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "L2TP"
    next
    edit 2
        set srcintf "L2tpoIPsec"
        set dstintf "port10"
        set srcaddr "L2TPclients"
        set dstaddr "172.16.101.0"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end
```

To view the VPN tunnel list on HQ:

```
diagnose vpn tunnel list

list all ipsec tunnel in vd 0
----
name=L2tpoIPsec_0 ver=1 serial=8 22.1.1.1:0->10.1.100.15:0
bound_if=4 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/216 options[00d8]=npu
create_dev no-sysctl rgwy-chg
 parent=L2tpoIPsec index=0
proxyid_num=1 child_num=0 refcnt=13 ilast=0 olast=0 ad=/0
stat: rxp=470 txp=267 rxb=57192 txb=12679
dpd: mode=on-idle on=1 idle=60000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=L2tpoIPsec proto=17 sa=1 ref=3 serial=1 transport-mode add-route
  src: 17:22.1.1.1-22.1.1.1:1701
  dst: 17:10.1.100.15-10.1.100.15:0
  SA:  ref=3 options=1a6 type=00 soft=0 mtu=1470 expire=2339/0B replaywin=2048
       seqno=10c esn=0 replaywin_lastseq=000001d6 itn=0
  life: type=01 bytes=0/0 timeout=3585/3600
  dec: spi=ca646443 esp=3des key=24 af62a0fffe85d3d534b5bfba29307aafc8bfda5c3f4650dc
       ah=sha1 key=20 89b4b67688bed9be49fb86449bb83f8c8d8d7432
  enc: spi=700d28a0 esp=3des key=24 5f68906eca8d37d853814188b9e29ac4913420a9c87362c9
       ah=sha1 key=20 d37f901ffd0e6ee1e4fdccebc7fdcc7ad44f0a0a
  dec:pkts/bytes=470/31698, enc:pkts/bytes=267/21744
  npu_flag=00 npu_rgwy=10.1.100.15 npu_lgwy=22.1.1.1 npu_selid=6 dec_npuid=0 enc_npuid=0
----
name=L2tpoIPsec_1 ver=1 serial=a 22.1.1.1:4500->22.1.1.2:64916
bound_if=4 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/472 options[01d8]=npu
create_dev no-sysctl rgwy-chg rport-chg
 parent=L2tpoIPsec index=1
proxyid_num=1 child_num=0 refcnt=17 ilast=2 olast=2 ad=/0
stat: rxp=5 txp=4 rxb=592 txb=249
dpd: mode=on-idle on=1 idle=60000ms retry=3 count=0 seqno=0
natt: mode=keepalive draft=32 interval=10 remote_port=64916
proxyid=L2tpoIPsec proto=17 sa=1 ref=3 serial=1 transport-mode add-route
  src: 17:22.1.1.1-22.1.1.1:1701
  dst: 17:22.1.1.2-22.1.1.2:0
  SA:  ref=3 options=1a6 type=00 soft=0 mtu=1454 expire=28786/0B replaywin=2048
       seqno=5 esn=0 replaywin_lastseq=00000005 itn=0
  life: type=01 bytes=0/0 timeout=28790/28800
  dec: spi=ca646446 esp=aes key=32
ea60dfbad709b3c63917c3b7299520ff7606756ca15d2eb7cbff349b6562172e
       ah=md5 key=16 2f2acfff0b556935d0aab8fc5725c8ec
  enc: spi=0b514df2 esp=aes key=32
a8a92c2ed0e1fd7b6e405d8a6b9eb3be5eff573d80be3f830ce694917d634196
       ah=md5 key=16 e426c33a7fe9041bdc5ce802760e8a3d
  dec:pkts/bytes=5/245, enc:pkts/bytes=4/464
  npu_flag=00 npu_rgwy=22.1.1.2 npu_lgwy=22.1.1.1 npu_selid=8 dec_npuid=0 enc_npuid=0
```


To view the L2TP VPN status:

```
diagnose debug enable
diagnose vpn l2tp status
----
----
```

```
HQ # Num of tunnels: 2
----
Tunnel ID = 1 (local id), 42 (remote id)  to 10.1.100.15:1701
   control_seq_num = 2, control_rec_seq_num = 4,
   last recv pkt = 2
Call ID = 1 (local id), 1 (remote id), serno = 0, dev=ppp1,
      assigned ip = 10.10.10.2
      data_seq_num = 0,
      tx = 152 bytes (2), rx= 21179 bytes (205)
Tunnel ID = 3 (local id), 34183 (remote id)  to 22.1.1.2:58825
   control_seq_num = 2, control_rec_seq_num = 4,
   last recv pkt = 2
Call ID = 3 (local id), 18820 (remote id), serno = 2032472593, dev=ppp2,
      assigned ip = 10.10.10.3
      data_seq_num = 0,
      tx = 152 bytes (2), rx= 0 bytes (0)
----
--VD 0: Startip = 10.10.10.1, Endip = 10.10.10.100
        enforece-ipsec = false
----
```

Tunneled Internet browsing

This is a sample configuration of tunneled internet browsing using a dialup VPN. To centralize network management and control, all branch office traffic is tunneled to HQ, including Internet browsing.

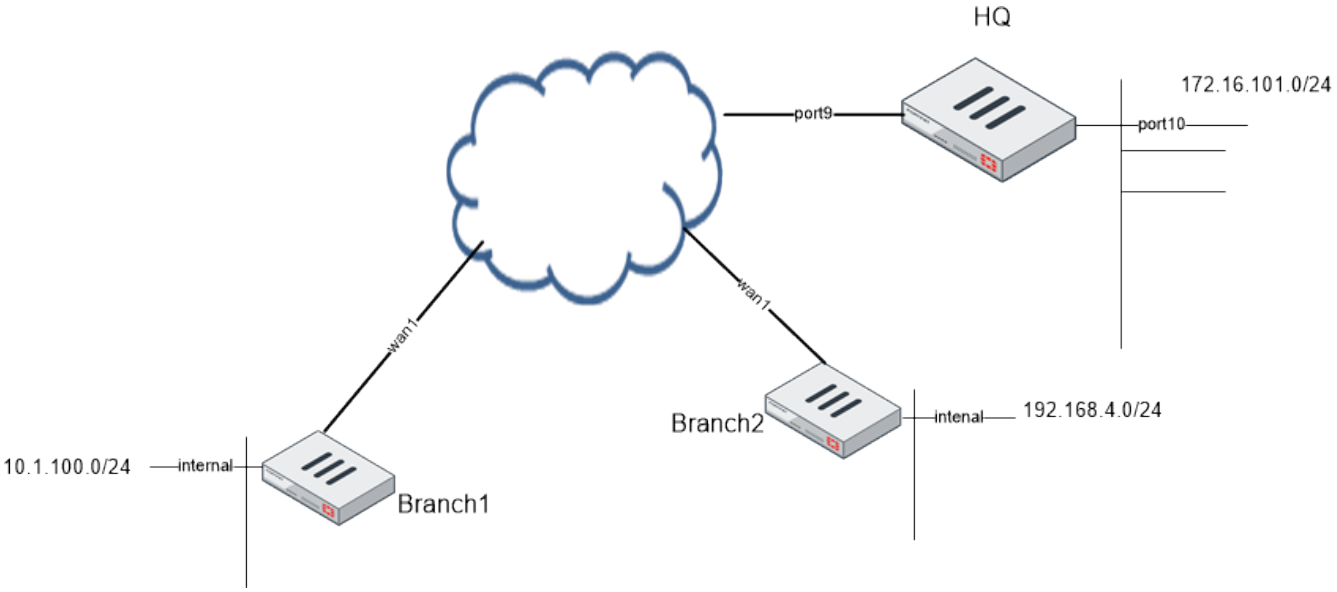

To configure a dialup VPN to tunnel Internet browsing using the GUI:

1. Configure the dialup VPN server FortiGate at HQ:
   a. Go to *VPN* > *IPsec Wizard* and configure the following settings for *VPN Setup*:
      i. Enter a VPN name, in this example, *HQ*.
      ii. For *Template Type*, select *Site to Site*.
      iii. For *Remote Device Type*, select *FortiGate*.

iv. For *NAT Configuration*, select *The remote site is behind NAT*.
v. Click *Next*.

b. Configure the following settings for *Authentication*:
i. For *Incoming Interface*, select *port9*.
ii. For *Authentication Method*, select *Pre-shared Key*.
iii. In the *Pre-shared Key* field, enter *sample* as the key.
iv. Click *Next*.

c. Configure the following settings for *Policy & Routing*:
i. From the *Local Interface* dropdown menu, select *port10*.
ii. Configure the *Local Subnets* as *172.16.101.0*.
iii. Configure the *Remote Subnets* as *0.0.0.0/0*.
iv. For *Internet Access*, select *Share Local*.
v. For *Shared WAN*, select *port9*.
vi. Click *Create*.

2. Configure the dialup VPN client FortiGate at a branch:

a. Go to *VPN* > *IPsec Wizard* and configure the following settings for *VPN Setup*:
i. Enter a VPN name, in this example, *Branch1* or *Branch2*.
ii. For *Template Type*, select *Site to Site*.
iii. For *Remote Device Type*, select *FortiGate*.
iv. For *NAT Configuration*, select *The remote site is behind NAT*.
v. Click *Next*.

b. Configure the following settings for *Authentication*:
i. For *IP Address*, select *Remote Device* and enter *22.1.1.1*.
ii. For *Outgoing Interface*, select *wan1*.
iii. For *Authentication Method*, select *Pre-shared Key*.
iv. In the *Pre-shared Key* field, enter *sample* as the key.
v. Click *Next*.

c. Configure the following settings for *Policy & Routing*:
i. From the *Local Interface* dropdown menu, select *internal*.
ii. Configure the *Local Subnets* as *10.1.100.0/192.1684.0*.
iii. Configure the *Remote Subnets* as *0.0.0.0/0*.
iv. For *Internet Access*, select *Use Remote*.
v. Configure the *Local Gateway* to *15.1.1.1/13.1.1.1*.
vi. Click *Create*.

To configure a dialup VPN to tunnel Internet browsing using the CLI:

1. Configure the WAN interface and static route on the FortiGate at HQ.

```
config system interface
    edit "port9"
        set alias "WAN"
        set ip 22.1.1.1 255.255.255.0
    next
    edit "port10"
        set alias "Internal"
        set ip 172.16.101.1 255.255.255.0
```

```
    next
end
config router static
    edit 1
        set gateway 22.1.1.2
        set device "port9"
    next
end
```

2. Configure IPsec phase1-interface and phase2-interface configuration at HQ.

```
config vpn ipsec phase1-interface
    edit "HQ"
        set type dynamic
        set interface "port9"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set dpd on-idle
        set psksecret sample
        set dpd-retryinterval 60
    next
end
config vpn ipsec phase2-interface
    edit "HQ"
        set phase1name "HQ"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
    next
end
```

3. Configure the firewall policy at HQ.

```
config firewall policy
    edit 1
        set srcintf "HQ"
        set dstintf "port9" "port10"
        set srcaddr "10.1.100.0" "192.168.4.0"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end
```

4. Configure the WAN interface and static route on the FortiGate at the branches.
   a. Branch1.

```
config system interface
    edit "wan1"
        set ip 15.1.1.2 255.255.255.0
    next
    edit "internal"
        set ip 10.1.100.1 255.255.255.0
    next
end
config router static
```

```
    edit 1
        set gateway 15.1.1.1
        set device "wan1"
    next
end
```

b. Branch2.

```
config system interface
    edit "wan1"
        set ip 13.1.1.2 255.255.255.0
    next
    edit "internal"
        set ip 192.168.4.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 13.1.1.1
        set device "wan1"
    next
end
```

5. Configure IPsec phase1-interface and phase2-interface configuration at the branches.

a. Branch1.

```
config vpn ipsec phase1-interface
    edit "branch1"
        set interface "wan1"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set dpd on-idle
        set remote-gw 22.1.1.1
        set psksecret sample
        set dpd-retryinterval 5
    next
end
config vpn ipsec phase2-interface
    edit "branch1"
        set phase1name "branch1"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
        set auto-negotiate enable
        set src-subnet 10.1.100.0 255.255.255.0
    next
end
```

b. Branch2.

```
config vpn ipsec phase1-interface
    edit "branch2"
        set interface "wan1"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set dpd on-idle
        set remote-gw 22.1.1.1
```

```
        set psksecret sample
        set dpd-retryinterval 5
    next
end
config vpn ipsec phase2-interface
    edit "branch2"
        set phase1name "branch2"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
        set auto-negotiate enable
        set src-subnet 192.168.4.0 255.255.255.0
    next
end
```

6. Configure the firewall policy at the branches.
   a. Branch1.

```
config firewall policy
    edit 1
        set name "outbound"
        set srcintf "internal"
        set dstintf "branch1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "inbound"
        set srcintf "branch1"
        set dstintf "internal"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

   b. Branch2.

```
config firewall policy
    edit 1
        set name "outbound"
        set srcintf "internal"
        set dstintf "branch2"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "inbound"
        set srcintf "branch2"
        set dstintf "internal"
```

```
            set srcaddr "all"
            set dstaddr "all"
            set action accept
            set schedule "always"
            set service "ALL"
        next
    end
```

7. Configure the static routes at the branches.
   a. Branch1.

```
config router static
    edit 2
        set dst 22.1.1.1/32
        set gateway 15.1.1.1
        set device "wan1"
        set distance 1
    next
    edit 3
        set device "branch1"
        set distance 5
    next
end
```

   b. Branch2.

```
config router static
    edit 2
        set dst 22.1.1.1/32
        set gateway 13.1.1.1
        set device "wan1"
        set distance 1
    next
    edit 3
        set device "branch2"
        set distance 5
    next
end
```

8. Optionally, view the VPN tunnel list on a branch with the `diagnose vpn tunnel list` command:

```
list all ipsec tunnel in vd 0
----
name=branch1 ver=1 serial=2 15.1.1.2:0->22.1.1.1:0
bound_if=7 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu create_
dev frag-rfc  accept_traffic=1

proxyid_num=1 child_num=1 refcnt=19 ilast=0 olast=0 ad=r/2
stat: rxp=1 txp=1661 rxb=65470 txb=167314
dpd: mode=on-idle on=1 idle=5000ms retry=3 count=0 seqno=2986
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=branch1 proto=0 sa=1 ref=5 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=6 options=1a227 type=00 soft=0 mtu=1438 expire=697/0B replaywin=1024
       seqno=13a esn=0 replaywin_lastseq=00000000 itn=0
  life: type=01 bytes=0/0 timeout=2368/2400
  dec: spi=c53a8f7e esp=aes key=16 ecee0cd48664d903d3d6822b1f902fd2
```

```
      ah=sha1 key=20 2440a189126c222093ca9acd8b37127285f1f8a7
  enc: spi=6e3636fe esp=aes key=16 fdaa20bcc96f74ae9885e824d3efa29d
      ah=sha1 key=20 70c0891c769ad8007ea1f31a39978ffbc73242d0
  dec:pkts/bytes=0/16348, enc:pkts/bytes=313/55962
  npu_flag=03 npu_rgwy=22.1.1.1 npu_lgwy=15.1.1.2 npu_selid=1 dec_npuid=1 enc_npuid=1
```

9. Optionally, view static routing table on a branch with the `get router info routing-table static` command:

```
Routing table for VRF=0
S*      0.0.0.0/0 [5/0] is directly connected, branch1
S*      22.1.1.1/32 [1/0] via 15.1.1.1, wan1
```

Aggregate and redundant VPN


The following topics provide instructions on configuring aggregate and redundant VPNs:

- Manual redundant VPN configuration on page 1183
- OSPF with IPsec VPN for network redundancy on page 1187
- IPsec VPN in an HA environment on page 1194
- IPsec aggregate for redundancy and traffic load-balancing on page 1200
- Per packet distribution and tunnel aggregation on page 1211
- Redundant hub and spoke VPN on page 1215

Manual redundant VPN configuration

A FortiGate with two interfaces connected to the internet can be configured to support redundant VPNs to the same remote peer. Four distinct paths are possible for VPN traffic from end to end. If the primary connection fails, the FortiGate can establish a VPN using the other connection.

Topology

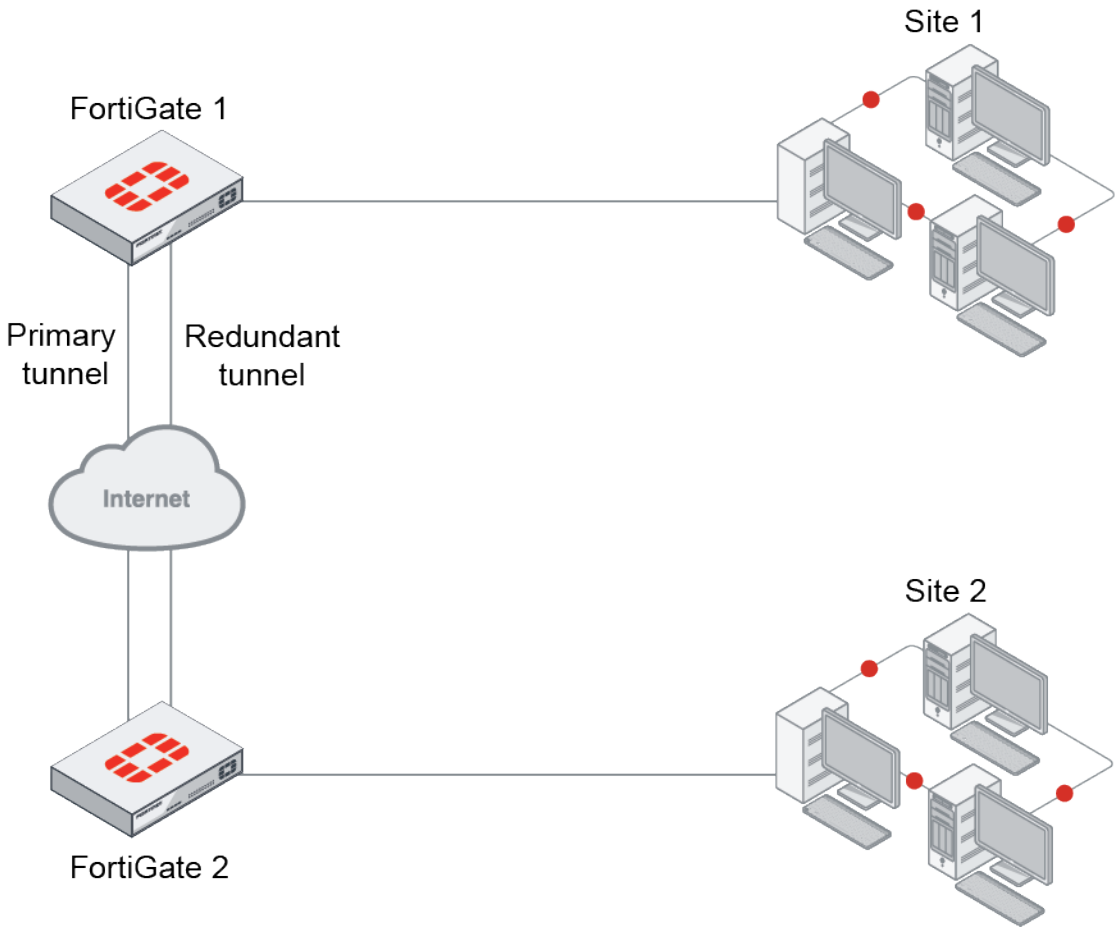

The redundant configuration in this example uses route-based VPNs. The FortiGates must operate in NAT mode and use auto-keying.

This example assumes the redundant VPNs are essentially equal in cost and capability. When the original VPN returns to service, traffic continues to use the replacement VPN until the replacement VPN fails. If the redundant VPN uses more expensive facilities, only use it as a backup while the main VPN is down.

A redundant configuration for each VPN peer includes:

- One phase 1 configuration for each path between the two peers with dead peer detection enabled
- One phase 2 definition for each phase 1 configuration
- One static route for each IPsec interface with different distance values to prioritize the routes
- Two firewall policies per IPsec interface, one for each direction of traffic

To configure the phase 1 and phase 2 VPN settings:

1. Go to *VPN* > *IPsec Wizard* and select the *Custom* template.
2. Enter the tunnel name and click *Next*.

3. Enter the following phase 1 settings for path 1:

Remote Gateway	Static IP Address
IP Address	Enter the IP address of the primary interface of the remote peer.
Interface	Select the primary public interface of this peer.
Dead Peer Detection	On-Demand

4. Configure the remaining phase 1 and phase 2 settings as needed.
5. Click *OK*.
6. Repeat these steps for the remaining paths.
   a. Path 2:

Remote Gateway	Static IP Address
IP Address	Enter the IP address of the secondary interface of the remote peer.
Interface	Select the primary public interface of this peer.
Dead Peer Detection	On-Demand

   b. Path 3:

Remote Gateway	Static IP Address
IP Address	Enter the IP address of the primary interface of the remote peer.
Interface	Select the secondary public interface of this peer.
Dead Peer Detection	On-Demand

   c. Path 4:

Remote Gateway	Static IP Address
IP Address	Enter the IP address of the secondary interface of the remote peer.
Interface	Select the secondary public interface of this peer.
Dead Peer Detection	On-Demand

To configure the static routes:

1. Go to *Network* > *Static Routes* and click *Create New*.
2. In the *Destination* field, enter the subnet of the private network.
3. For *Interface*, select one of the IPsec interfaces on the local peer.
4. Enter a value for *Administrative Distance*.
5. Click *OK*.
6. Repeat these steps for the three remaining paths, and enter different values for *Administrative Distance* to prioritize the paths.

To configure the firewall policies:

1. Create the policies for the local primary interface:
   a. Go to *Policy & Objects* > *Firewall Policy* and click *Create New*.
   b. Enter the following:

Name	Enter a name for the policy.
Incoming Interface	Select the local interface to the internal (private) network.
Outgoing Interface	Select one of the virtual IPsec interfaces.
Source	All
Destination	All
Schedule	Always
Service	All
Action	ACCEPT

   c. Click *OK*.
   d. Click *Create New* and configure the policy for the other direction of traffic:

Name	Enter a name for the policy.
Incoming Interface	Select one of the virtual IPsec interfaces.
Outgoing Interface	Select the local interface to the internal (private) network.
Source	All
Destination	All
Schedule	Always
Service	All
Action	ACCEPT

   e. In the policy list, drag the VPN policies above any other policies with similar source and destination addresses.
2. Repeat these steps to create the policies for the three remaining paths.

Creating a backup IPsec interface

A route-based VPN can be configured to act as a backup IPsec interface when the main VPN is out of service. This can only be configured in the CLI.

The backup feature works on interfaces with static addresses that have dead peer detection enabled. The `monitor` option creates a backup VPN for the specified phase 1 configuration.


To create a backup IPsec interface:

```
config vpn ipsec phase1-interface
    edit main_vpn
        set dpd on-demand
        set interface port1
```

```
        set nattraversal enable
        set psksecret ********
        set remote-gw 192.168.10.8
        set type static
    next
    edit backup_vpn
        set dpd on-demand
        set interface port2
        set monitor main_vpn
        set nattraversal enable
        set psksecret ********
        set remote-gw 192.168.10.8
        set type static
    next
end
```

OSPF with IPsec VPN for network redundancy

This is a sample configuration of using OSPF with IPsec VPN to set up network redundancy. Route selection is based on OSPF cost calculation. You can configure ECMP or primary/secondary routes by adjusting OSPF path cost.

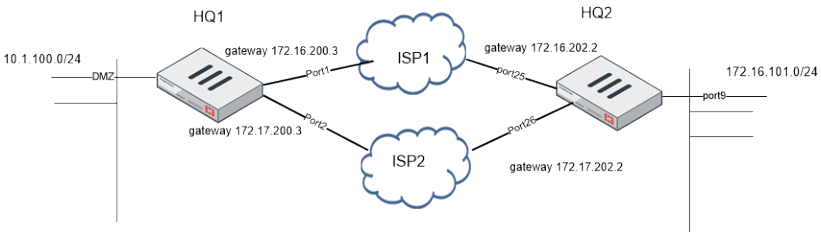

Because the GUI can only complete part of the configuration, we recommend using the CLI.

To configure OSPF with IPsec VPN to achieve network redundancy using the CLI:

1. Configure the WAN interface and static route.
   Each FortiGate has two WAN interfaces connected to different ISPs. The ISP1 link is for the primary FortiGate and the IPS2 link is for the secondary FortiGate.
   a. Configure HQ1.

```
config system interface
   edit "port1"
      set alias to_ISP1
      set ip 172.16.200.1 255.255.255.0
   next
   edit "port2"
      set alias to_ISP2
      set ip 172.17.200.1 255.255.255.0
   next
end
config router static
   edit 1
      set gateway 172.16.200.3
      set device "port1"
   next
   edit 2
      set gateway 172.17.200.3
```

```
      set device "port2"
      set priority 100
   next
end
```

b. Configure HQ2.

```
config system interface
   edit "port25"
      set alias to_ISP1
      set ip 172.16.202.1 255.255.255.0
   next
   edit "port26"
      set alias to_ISP2
      set ip 172.17.202.1 255.255.255.0
   next
end
config router static
   edit 1
      set gateway 172.16.202.2
      set device "port25"
   next
   edit 2
      set gateway 172.17.202.2
      set device "port26"
      set priority 100
   next
end
```

2. Configure the internal (protected subnet) interface.

a. Configure HQ1.

```
config system interface
   edit "dmz"
      set ip 10.1.100.1 255.255.255.0
   next
end
```

b. Configure HQ2.

```
config system interface
   edit "port9"
      set ip 172.16.101.1 255.255.255.0
   next
end
```

3. Configure IPsec phase1-interface and phase-2 interface. On each FortiGate, configure two IPsec tunnels: a primary and a secondary.

a. Configure HQ1.

```
config vpn ipsec phase1-interface
   edit "pri_HQ2"
      set interface "port1"
      set peertype any
      set net-device enable
      set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
      set remote-gw 172.16.202.1
      set psksecret sample1
   next
   edit "sec_HQ2"
      set interface "port2"
      set peertype any
      set net-device enable
```

```
      set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
      set remote-gw 172.17.202.1
      set psksecret sample2
    next
    end
  config vpn ipsec phase2-interface
    edit "pri_HQ2"
      set phase1name "pri_HQ2"
      set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
           aes256gcm chacha20poly1305
      set auto-negotiate enable
    next
    edit "sec_HQ2"
      set phase1name "sec_HQ2"
      set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
           aes256gcm chacha20poly1305
      set auto-negotiate enable
    next
  end
```

b. Configure HQ2.

```
config vpn ipsec phase1-interface
  edit "pri_HQ1"
    set interface "port25"
    set peertype any
    set net-device enable
    set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
    set remote-gw 172.16.200.1
    set psksecret sample1
  next
  edit "sec_HQ1"
    set interface "port26"
    set peertype any
    set net-device enable
    set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
    set remote-gw 172.17.200.1
    set psksecret sample2
  next
end
config vpn ipsec phase2-interface
  edit "pri_HQ1"
    set phase1name "pri_HQ1"
    set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
         aes256gcm chacha20poly1305
    set auto-negotiate enable
  next
  edit "sec_HQ1"
    set phase1name "sec_HQ1"
    set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
         aes256gcm chacha20poly1305
    set auto-negotiate enable
  next
end
```

4. Configure an inbound and outbound firewall policy for each IPsec tunnel.

a. Configure HQ1.

```
config firewall policy
  edit 1
```

```
        set name "pri_inbound"
        set srcintf "pri_HQ2"
        set dstintf "dmz"
        set srcaddr "172.16.101.0"
        set dstaddr "10.1.100.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "pri_outbound"
        set srcintf "dmz"
        set dstintf "pri_HQ2"
        set srcaddr "10.1.100.0"
        set dstaddr "172.16.101.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 3
        set name "sec_inbound"
        set srcintf "sec_HQ2"
        set dstintf "dmz"
        set srcaddr "172.16.101.0"
        set dstaddr "10.1.100.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 4
        set name "sec_outbound"
        set srcintf "dmz"
        set dstintf "sec_HQ2"
        set srcaddr "10.1.100.0"
        set dstaddr "172.16.101.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

b. Configure HQ2.

```
config firewall policy
    edit 1
        set name "pri_inbound"
        set srcintf "pri_HQ1"
        set dstintf "port9"
        set srcaddr "10.1.100.0"
        set dstaddr "172.16.101.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "pri_outbound"
        set srcintf "port9"
        set dstintf "pri_HQ1"
        set srcaddr "10.1.100.0"
```

```
      set dstaddr "172.16.101.0"
      set action accept
      set schedule "always"
      set service "ALL"
    next
    edit 3
      set name "sec_inbound"
      set srcintf "sec_HQ1"
      set dstintf "port9"
      set srcaddr "10.1.100.0"
      set dstaddr "172.16.101.0"
      set action accept
      set schedule "always"
      set service "ALL"
    next
    edit 4
      set name "sec_outbound"
      set srcintf "port9"
      set dstintf "sec_HQ1"
      set srcaddr "172.16.101.0"
      set dstaddr "10.1.100.0"
      set action accept
      set schedule "always"
      set service "ALL"
    next
  end
```

5. Assign an IP address to the IPsec tunnel interface.
   a. Configure HQ1.

```
config system interface
  edit "pri_HQ2"
    set ip 10.10.10.1 255.255.255.255
    set remote-ip 10.10.10.2 255.255.255.255
  next
  edit "sec_HQ2"
    set ip 10.10.11.1 255.255.255.255
    set remote-ip 10.10.11.2 255.255.255.255
  next
end
```

   b. Configure HQ2.

```
config system interface
  edit "pri_HQ1"
    set ip 10.10.10.2 255.255.255.255
    set remote-ip 10.10.10.1 255.255.255.255
  next
  edit "sec_HQ1"
    set ip 10.10.11.2 255.255.255.255
    set remote-ip 10.10.11.1 255.255.255.255
  next
end
```

6. Configure OSPF.
   a. Configure HQ1.

```
config router ospf
  set router-id 1.1.1.1
  config area
    edit 0.0.0.0
    next
```

```
    end
    config ospf-interface
      edit "pri_HQ2"
        set interface "pri_HQ2"
        set cost 10
        set network-type point-to-point
      next
      edit "sec_HQ2"
        set interface "sec_HQ2"
        set cost 20
        set network-type point-to-point
      next
    end
    config network
      edit 1
        set prefix 10.10.10.0 255.255.255.0
      next
      edit 2
        set prefix 10.10.11.0 255.255.255.0
      next
      edit 3
        set prefix 10.1.100.0 255.255.255.0
      next
    end
  end
```

b. Configure HQ2.

```
  config router ospf
    set router-id 2.2.2.2
    config area
      edit 0.0.0.0
      next
    end
    config ospf-interface
      edit "pri_HQ1"
        set interface "pri_HQ1"
        set cost 10
        set network-type point-to-point
      next
      edit "sec_HQ1"
        set interface "sec_HQ1"
        set cost 20
        set network-type point-to-point
      next
    end
    config network
      edit 1
        set prefix 10.10.10.0 255.255.255.0
      next
      edit 2
        set prefix 10.10.11.0 255.255.255.0
      next
      edit 3
        set prefix 172.16.101.0 255.255.255.0
      next
    end
  end
```

To check VPN and OSPF states using diagnose and get commands:

1. Run the `HQ1 # diagnose vpn ike gateway list` command. The system should return the following:

```
vd: root/0
name: pri_HQ2
version: 1
interface: port1 11
addr: 172.16.200.1:500 -> 172.16.202.1:500
virtual-interface-addr: 10.10.10.1 -> 10.10.10.2
created: 1024s ago
IKE SA: created 1/1 established 1/1 time 0/0/0 ms
IPsec SA: created 1/3 established 1/2 time 0/5/10 ms
  id/spi: 45 d184777257b4e692/e2432f834aaf5658 direction: responder status: established
       1024-1024s ago = 0ms proposal: aes128-sha256 key: 9ed41fb06c983344-
       189538046f5ad204 lifetime/rekey: 86400/85105 DPD sent/recv: 00000003/00000000
       vd: root/0
name: sec_HQ2
version: 1
interface: port2 12
addr: 172.17.200.1:500 -> 172.17.202.1:500
virtual-interface-addr: 10.10.11.1 -> 10.10.11.2
created: 346s ago
IKE SA: created 1/1 established 1/1 time 0/0/0 ms
IPsec SA: created 1/1 established 1/1 time 0/10/15 ms
  id/spi: 48 d909ed68636b1ea5/163015e73ea050b8 direction: initiator status: established
       0-0s ago = 0ms proposal: aes128-sha256 key: b9e93c156bdf4562-29db9fbafa256152
       lifetime/rekey: 86400/86099 DPD sent/recv: 00000000/00000000
```

2. Run the `HQ1 # diagnose vpn tunnel list` command. The system should return the following:

```
list all ipsec tunnel in vd 0
name=pri_HQ2 ver=1 serial=1 172.16.200.1:0->172.16.202.1:0
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
     frag-rfc accept_traffic=1
proxyid_num=1 child_num=0 refcnt=14 ilast=2 olast=2 ad=/0
stat: rxp=102 txp=105 rxb=14064 txb=7816
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=3
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=pri_HQ2 proto=0 sa=1 ref=2 serial=1 auto-negotiate
  src: 0:0.0.0.0/0.0.0.0:0 dst: 0:0.0.0.0/0.0.0.0:0 SA: ref=3 options=18227 type=00
       soft=0 mtu=1438 expire=42254/0B replaywin=2048
    seqno=6a esn=0 replaywin_lastseq=00000067 itn=0
  life: type=01 bytes=0/0 timeout=42932/43200 dec: spi=1071b4ee esp=aes key=16
       032036b24a4ec88da63896b86f3a01db
    ah=sha1 key=20 3962933e24c8da21c65c13bc2c6345d643199cdf
  enc: spi=ec89b7e3 esp=aes key=16 92b1d85ef91faf695fca05843dd91626
    ah=sha1 key=20 2de99d1376506313d9f32df6873902cf6c08e454
  dec:pkts/bytes=102/7164, enc:pkts/bytes=105/14936
name=sec_HQ2 ver=1 serial=2 172.17.200.1:0->172.17.202.1:0
bound_if=12 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
     frag-rfc accept_traffic=1
proxyid_num=1 child_num=0 refcnt=14 ilast=3 olast=0 ad=/0
stat: rxp=110 txp=114 rxb=15152 txb=8428
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=3
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=sec_HQ2 proto=0 sa=1 ref=2 serial=1 auto-negotiate
  src: 0:0.0.0.0/0.0.0.0:0 dst: 0:0.0.0.0/0.0.0.0:0 SA: ref=3 options=18227 type=00
       soft=0 mtu=1438 expire=42927/0B replaywin=2048
    seqno=2 esn=0 replaywin_lastseq=00000002 itn=0
```

```
life: type=01 bytes=0/0 timeout=42931/43200 dec: spi=1071b4ef esp=aes key=16
     bcdcabdb7d1c7c695d1f2e0f5441700a
   ah=sha1 key=20 e7a0034589f82eb1af41efd59d0b2565fef8d5da
enc: spi=ec89b7e4 esp=aes key=16 234240b69e61f6bdee2b4cdec0f33bea
   ah=sha1 key=20 f9d4744a84d91e5ce05f5984737c2a691a3627e8
dec:pkts/bytes=1/68, enc:pkts/bytes=1/136
```


3. Run the `HQ1 # get router info ospf neighbor` command. The system should return the following:
```
OSPF process 0, VRF 0:
Neighbor ID Pri State Dead Time Address Interface
2.2.2.2 1. Full/ - 00:00:37 10.10.10.2 pri_HQ2
2.2.2.2 1. Full/ - 00:00:32 10.10.11.2 sec_HQ2
```
4. Run the `HQ1 # get router info routing-table ospf` command. The system should return the following:
```
Routing table for VRF=0
O 172.16.101.0/24 [110/20] via 10.10.10.2, pri_HQ2 , 00:03:21
```
In case the primary tunnel is down after route convergence.
5. Run the `HQ1 # get router info routing-table ospf` command. The system should return the following:
```
Routing table for VRF=0
O 172.16.101.0/24 [110/110] via 10.10.11.2, sec_HQ2 , 00:00:01
```

IPsec VPN in an HA environment

This is a sample configuration of site-to-site IPsec VPN in an HA environment.

For this example, set up HA as described in the HA topics. When setting up HA, enable the following options to ensure IPsec VPN traffic is not interrupted during an HA failover:

- `session-pickup` under HA settings.
- `ha-sync-esp-seqno` under IPsec phase1-interface settings.

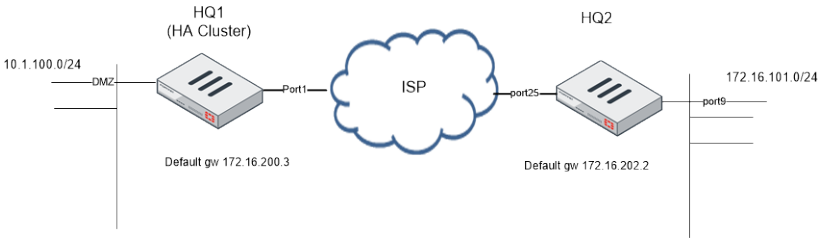

You can configure IPsec VPN in an HA environment using the GUI or CLI.

In this example, the VPN name for HQ1 is "to_HQ2", and the VPN name for HQ2 is "to_HQ1".

To configure IPsec VPN in an HA environment in the GUI:

1. Set up IPsec VPN on HQ1 (the HA cluster):
   a. Go to *VPN* > *IPsec Wizard* and configure the following settings for *VPN Setup*:
      i. Enter a VPN name.
      ii. For *Template Type*, select *Site to Site*.
      iii. For *Remote Device Type*, select *FortiGate*.
      iv. For *NAT Configuration*, set *No NAT between sites*.
      v. Click *Next*.

b. Configure the following settings for *Authentication*:
   i. For *Remote Device*, select *IP Address*.
   ii. In the *IP address* field, enter *172.16.202.1*.
   iii. For *Outgoing Interface*, select port1.
   iv. For *Authentication Method*, select *Pre-shared Key*.
   v. In the *Pre-shared Key* field, enter an example key.
   vi. Click *Next*.
c. Configure the following settings for *Policy & Routing*:
   i. From the *Local Interface* dropdown menu, select the local interface.
   ii. Configure the *Local Subnets* as *10.1.100.0/24*.
   iii. Configure the *Remote Subnets* as *172.16.101.0/24*.
   iv. Click *Create*.

2. Set up IPsec VPN on HQ2:
a. Go to *VPN* > *IPsec Wizard* and configure the following settings for *VPN Setup*:
   i. Enter a VPN name.
   ii. For *Template Type*, select *Site to Site*.
   iii. For *Remote Device Type*, select *FortiGate*.
   iv. For *NAT Configuration*, set *No NAT between sites*.
   v. Click *Next*.
b. Configure the following settings for *Authentication*:
   i. For *Remote Device*, select *IP Address*.
   ii. In the *IP address* field, enter 172.16.200.1.
   iii. For *Outgoing Interface*, select port13.
   iv. For *Authentication Method*, select *Pre-shared Key*.
   v. In the *Pre-shared Key* field, enter an example key.
   vi. Click *Next*.
c. Configure the following settings for *Policy & Routing*:
   i. From the *Local Interface* dropdown menu, select the desired local interface. In this example, it is port9.
   ii. Configure the *Local Subnets* as 172.16.101.0.
   iii. Configure the *Remote Subnets* as 10.1.100.0
   iv. Click *Create*.

To configure IPsec VPN in an HA environment using the CLI:

1. Configure HA. In this example, two FortiGates work in active-passive mode. The HA heartbeat interfaces are WAN1 and WAN2:

```
config system ha
   set group-name "FGT-HA"
   set mode a-p
   set password sample
   set hbdev "wan1" 50 "wan2" 50
   set session-pickup enable
   set priority 200
   set override-wait-time 10
end
```

2. Configure the WAN interface and default route. The WAN interface is the interface connected to the ISP. It can work in static mode (as shown in this example), DHCP, or PPPoE mode. The IPsec tunnel is established over the WAN interface.

a. Configure HQ1:

```
config system interface
   edit "port1"
      set vdom "root"
      set ip 172.16.200.1 255.255.255.0
   next
end
config router static
   edit 1
      set gateway 172.16.200.3
      set device "port1"
   next
end
```

b. Configure HQ2:

```
config system interface
   edit "port25"
      set vdom "root"
      set ip 172.16.202.1 255.255.255.0
   next
end
config router static
   edit 1
      set gateway 172.16.202.2
      set device "port25"
   next
end
```

3. Configure the internal (protected subnet) interface. The internal interface connects to the corporate internal network. Traffic from this interface routes out the IPsec VPN tunnel.

a. Configure HQ1:

```
config system interface
   edit "dmz"
      set vdom "root"
      set ip 10.1.100.1 255.255.255.0
   next
end
```

b. Configure HQ2:

```
config system interface
   edit "port9"
      set vdom "root"
      set ip 172.16.101.1 255.255.255.0
   next
end
```

4. Configure the IPsec phase1-interface. This example uses PSK as the authentication method. You can also use signature authentication.

a. Configure HQ1:

```
config vpn ipsec phase1-interface
   edit "to_HQ2"
      set interface "port1"
      set peertype any
      set net-device enable
      set ha-sync-esp-seqno enable
      set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
      set remote-gw 172.16.202.1
      set psksecret sample
   next
```

```
end
```

b. Configure HQ2:

```
config vpn ipsec phase1-interface
   edit "to_HQ1"
      set interface "port25"
      set peertype any
      set net-device enable
      set ha-sync-esp-seqno enable
      set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
      set remote-gw 172.16.200.1
      set psksecret sample
   next
```

5. Configure the IPsec phase2-interface:

a. Configure HQ1:

```
config vpn ipsec phase2-interface
   edit "to_HQ2"
      set phase1name "to_HQ2"
      set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
           aes256gcm chacha20poly1305
      set auto-negotiate enable
   next
end
```

b. Configure HQ2:

```
config vpn ipsec phase2-interface
   edit "to_HQ1"
      set phase1name "to_HQ1"
      set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
           aes256gcm chacha20poly1305
      set auto-negotiate enable
   next
end
```

6. Configure static routes. Two static routes are added to reach the remote protected subnet. The blackhole route is important to ensure IPsec traffic does not match the default route when the IPsec tunnel is down.

a. Configure HQ1:

```
config router static
   edit 2
      set dst 172.16.101.0 255.255.255.0
      set device "to_HQ2"
   next
   edit 3
      set dst 172.16.101.0 255.255.255.0
      set blackhole enable
      set distance 254
   next
end
```

b. Configure HQ2:

```
config router static
   edit 2
      set dst 10.1.100.0 255.255.255.0
      set device "to_HQ1"
   next
   edit 3
      set dst 10.1.100.0 255.255.255.0
      set blackhole enable
      set distance 254
```

```
    next
  end
```

7. Configure two firewall policies to allow bi-directional IPsec traffic flow over the IPsec tunnel:
   a. Configure HQ1:

```
config firewall policy
  edit 1
    set name "inbound"
    set srcintf "to_HQ2"
    set dstintf "dmz"
    set srcaddr "172.16.101.0"
    set dstaddr "10.1.100.0"
    set action accept
    set schedule "always"
    set service "ALL"
  next
  edit 2
    set name "outbound"
    set srcintf "dmz"
    set dstintf "to_HQ2"
    set srcaddr "10.1.100.0"
    set dstaddr "172.16.101.0"
    set action accept
    set schedule "always"
    set service "ALL"
  next
end
```

   b. Configure HQ2:

```
config firewall policy
  edit 1
    set name "inbound"
    set srcintf "to_HQ1"
    set dstintf "port9"
    set srcaddr "10.1.100.0"
    set dstaddr "172.16.101.0"
    set action accept
    set schedule "always"
    set service "ALL"
  next
  edit 2
    set name "outbound"
    set srcintf "port9"
    set dstintf "to_HQ1"
    set srcaddr "172.16.101.0"
    set dstaddr "10.1.100.0"
    set action accept
    set schedule "always"
    set service "ALL"
  next
end
```

8. Use the following `diagnose` commands to check IPsec phase1/phase2 interface status including the sequence number on the secondary FortiGate. The `diagnose debug application ike -1` command is the key to troubleshoot why the IPsec tunnel failed to establish.
   a. Run the `HQ1 # diagnose vpn ike gateway list` command. The system should return the following:

```
vd: root/0
name: to_HQ2
```

```
version: 1
interface: port1 11
addr: 172.16.200.1:500 -> 172.16.202.1:500
created: 5s ago
IKE SA: created 1/1 established 1/1 time 0/0/0 ms
IPsec SA: created 2/2 established 2/2 time 0/0/0 ms
   id/spi: 12 6e8d0532e7fe8d84/3694ac323138a024 direction: responder status:
        established 5-5s ago = 0ms proposal: aes128-sha256 key: b3efb46d0d385aff-
        7bb9ee241362ee8d lifetime/rekey: 86400/86124 DPD sent/recv: 00000000/00000000
```

b. Run the `HQ1 # diagnose vpn tunnel list` command. The system should return the following:

```
list all ipsec tunnel in vd 0

name=to_HQ2 ver=1 serial=1 172.16.200.1:0->172.16.202.1:0
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_
     dev frag-rfc accept_traffic=1
proxyid_num=1 child_num=0 refcnt=11 ilast=7 olast=87 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=to_HQ2 proto=0 sa=1 ref=2 serial=1 auto-negotiate
   src: 0:0.0.0.0/0.0.0.0:0 dst: 0:0.0.0.0/0.0.0.0:0 SA: ref=3 options=18227 type=00
        soft=0 mtu=1438 expire=42927/0B replaywin=2048
      seqno=1 esn=0 replaywin_lastseq=00000000 itn=0
   life: type=01 bytes=0/0 timeout=42930/43200 dec: spi=ef9ca700 esp=aes key=16
        a2c6584bf654d4f956497b3436f1cfc7
      ah=sha1 key=20 82c5e734bce81e6f18418328e2a11aeb7baa021b
   enc: spi=791e898e esp=aes key=16 0dbb4588ba2665c6962491e85a4a8d5a
      ah=sha1 key=20 2054b318d2568a8b12119120f20ecac97ab730b3
   dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
```

ESP seqno synced to primary FortiGate every five minutes, and big gap between primary and secondary to ensure that no packet is dropped after HA failover caused by tcp-replay. Check ESP sequence number synced on secondary FortiGate.

c. Run the `HQ1 # execute ha manage 0 admin` command.

d. Run the `HQ1-Secondary # diagnose vpn tunnel list` command. The system should return the following:

```
list all ipsec tunnel in vd 0

name=to_HQ2 ver=1 serial=1 172.16.200.1:0->172.16.202.1:0
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_
     dev frag-rfc accept_traffic=1
proxyid_num=1 child_num=0 refcnt=11 ilast=13 olast=274 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=to_HQ2 proto=0 sa=1 ref=2 serial=1 auto-negotiate
   src: 0:0.0.0.0/0.0.0.0:0 dst: 0:0.0.0.0/0.0.0.0:0 SA: ref=3 options=27 type=00
        soft=0 mtu=1280 expire=42740/0B replaywin=2048
      seqno=47868c01 esn=0 replaywin_lastseq=00000000 itn=0
   life: type=01 bytes=0/0 timeout=42930/43200 dec: spi=ef9ca700 esp=aes key=16
        a2c6584bf654d4f956497b3436f1cfc7
      ah=sha1 key=20 82c5e734bce81e6f18418328e2a11aeb7baa021b
   enc: spi=791e898e esp=aes key=16 0dbb4588ba2665c6962491e85a4a8d5a
      ah=sha1 key=20 2054b318d2568a8b12119120f20ecac97ab730b3
   dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
```


IPsec aggregate for redundancy and traffic load-balancing

This is a sample configuration of a multiple site-to-site IPsec VPN that uses an IPsec aggregate interface to set up redundancy and traffic load-balancing. The VPN tunnel interfaces must have `net-device` disabled in order to be members of the IPsec aggregate.

Each FortiGate has two WAN interfaces connected to different ISPs. OSPF runs over the IPsec aggregate in this configuration.

The supported load balancing algorithms are: L3, L4, round-robin (default), and redundant. The first three options allow traffic to be load-balanced, while the last option (redundant) uses the first tunnel that is up for all traffic.

Dynamic routing can run on the aggregate interface, and it can be a member interface in SD-WAN (not shown in this configuration).

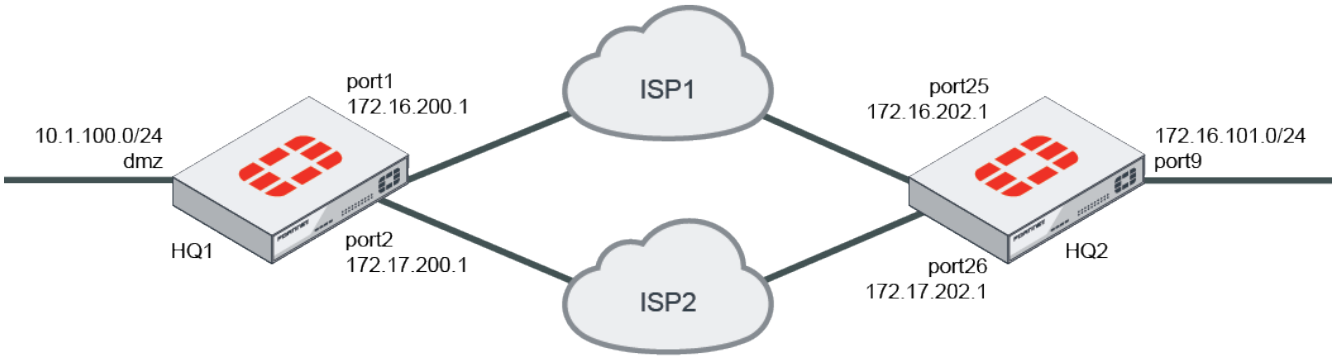

Configuring the HQ1 FortiGate in the GUI

There are five steps to configure the FortiGate:

1. Create the IPsec tunnels.
2. Create the IPsec aggregate.
3. Configure the firewall policies.
4. Configure the aggregate VPN interface IPs.
5. Configure OSPF.

To create the IPsec tunnels:

1. Go to *VPN* > *IPsec Wizard* and select the *Custom* template.
2. For *Name*, enter pri_HQ2 and click *Next*.
3. Enter the following:

Phase 1	
IP Address	172.16.202.1
Interface	port1
Device creation	Disabled
Aggregate member	Enabled
Authentication Method	Pre-shared Key

Pre-shared Key	Enter the secure key
IKE Mode	Aggressive
Peer Options Accept Types	Any peer ID
Phase 2	
Auto-negotiate	Enable

4. Configure the other settings as needed.
5. Click *OK*.
6. Create another tunnel named sec_HQ2 with the following settings:

Phase 1	
IP Address	172.17.202.1
Interface	port2
Device creation	Disabled
Aggregate member	Enabled
Authentication Method	Pre-shared Key
Pre-shared Key	Enter the secure key
IKE Mode	Aggressive
Peer Options Accept Types	Any peer ID
Phase 2	
Auto-negotiate	Enable

To create the IPsec aggregate:

1. Go to *VPN* > *IPsec Tunnels* and click *Create New* > *IPsec Aggregate*.
2. For *Name*, enter agg_HQ2.
3. Select a load balancing algorithm.
4. From the *Tunnel* dropdown, select the tunnels that you created previously (*pri_HQ2* and *sec_HQ2*). If required, enter weights for each tunnel.
5. Click *OK*.

To configure the firewall policies:

1. Go to *Policy & Objects* > *Firewall Policy*.
2. Create an inbound traffic policy with the following settings:

Name	inbound
Incoming Interface	agg_HQ2
Outgoing Interface	dmz
Source	172.16.101.0

Destination	10.1.100.0
Schedule	always
Action	ACCEPT
Service	ALL

3. Click *OK*.
4. Create an outbound traffic policy with the following settings:

Name	outbound
Incoming Interface	dmz
Outgoing Interface	agg_HQ2
Source	10.1.100.0
Destination	172.16.101.0
Schedule	always
Action	ACCEPT
Service	ALL

To configure the aggregate VPN interface IPs:

1. Go to *Network* > *Interfaces* and edit agg_HQ2.
2. For *IP*, enter 10.10.10.1.
3. For *Remote IP/Netmask*, enter 10.10.10.2 255.255.255.255.
4. Click *OK*.

To configure OSPF:

1. Go to *Network* > *OSPF*.
2. For *Router ID*, enter 1.1.1.1.
3. In the *Areas* table, click *Create New*.
   a. For *Area ID*, enter 0.0.0.0.
   b. Click *OK*.
4. In the *Networks* table, click *Create New*.
   a. Set the *Area* to *0.0.0.0*.
   b. For *IP/Netmask*, enter 10.1.100.0/24.
   c. Click *OK*.
   d. Click *Create New*.
   e. For *IP/Netmask*, enter 10.10.10.0/24.
   f. Click *OK*.
5. Click *Apply*.

Configuring the HQ2 FortiGate in the GUI

There are five steps to configure the FortiGate:

1. Create the IPsec tunnels.
2. Create the IPsec aggregate.
3. Configure the firewall policies.
4. Configure the aggregate VPN interface IPs.
5. Configure OSPF.

To create the IPsec tunnels:

1. Go to *VPN* > *IPsec Wizard* and select the *Custom* template.
2. For *Name*, enter pri_HQ1 and click *Next*.
3. Enter the following:

Phase 1	
IP Address	172.16.200.1
Interface	port25
Device creation	Disabled
Aggregate member	Enabled
Authentication Method	Pre-shared Key
Pre-shared Key	Enter the secure key
IKE Mode	Aggressive
Peer Options Accept Types	Any peer ID
Phase 2	
Auto-negotiate	Enable

4. Configure the other settings as needed.
5. Click *OK*.
6. Create another tunnel named sec_HQ1 with the following settings:

Phase 1	
IP Address	172.17.200.1
Interface	port26
Device creation	Disabled
Aggregate member	Enabled
Authentication Method	Pre-shared Key
Pre-shared Key	Enter the secure key
IKE Mode	Aggressive
Peer Options Accept Types	Any peer ID
Phase 2	
Auto-negotiate	Enable

To create the IPsec aggregate:

1. Go to *VPN* > *IPsec Tunnels* and click *Create New* > *IPsec Aggregate*.
2. For *Name*, enter agg_HQ1.
3. Select a load balancing algorithm.
4. From the *Tunnel* dropdown, select the tunnels that you created previously (*pri_HQ1* and *sec_HQ1*). If required, enter weights for each tunnel.
5. Click *OK*.

To configure the firewall policies:

1. Go to *Policy & Objects* > *Firewall Policy*.
2. Create an inbound traffic policy with the following settings:

Name	inbound
Incoming Interface	agg_HQ1
Outgoing Interface	port9
Source	10.1.100.0
Destination	172.16.101.0
Schedule	always
Action	ACCEPT
Service	ALL

3. Click *OK*.
4. Create an outbound traffic policy with the following settings:

Name	outbound
Incoming Interface	port9
Outgoing Interface	agg_HQ1
Source	172.16.101.0
Destination	10.1.100.0
Schedule	always
Action	ACCEPT
Service	ALL

To configure the aggregate VPN interface IPs:

1. Go to *Network* > *Interfaces* and edit agg_HQ1.
2. For *IP*, enter 10.10.10.2.
3. For *Remote IP/Netmask*, enter 10.10.10.1 255.255.255.255.
4. Click *OK*.

To configure OSPF:

1. Go to *Network* > *OSPF*.
2. For *Router ID*, enter 2.2.2.2.
3. In the *Areas* table, click *Create New*.
   a. For *Area ID*, enter 0.0.0.0.
   b. Click *OK*.
4. In the *Networks* table, click *Create New*.
   a. Set the *Area* to *0.0.0.0*.
   b. For *IP/Netmask*, enter 172.16.101.0/24.
   c. Click *OK*.
   d. Click *Create New*.
   e. For *IP/Netmask*, enter 10.10.10.0/24.
   f. Click *OK*.
5. Click *Apply*.

Monitoring the traffic in the GUI

To monitor the traffic:

1. Go to *Dashboard* > *Network* , hover over the *IPsec* widget, then click *Expand to Full Screen*.
2. Expand the aggregate tunnel in the table to view statistics for each aggregate member.

Configuring the HQ1 FortiGate in the CLI

There are six steps to configure the FortiGate:

1. Configure the interfaces.
2. Configure two IPsec phase 1 and phase 2 interfaces.
3. Configure the IPsec aggregate.
4. Configure the firewall policies.
5. Configure the aggregate VPN interface IPs.
6. Configure OSPF.

To configure the interfaces:

1. Configure port1, port2, and dmz as shown in the topology diagram.

To configure two IPsec phase 1 and phase 2 interfaces:

```
config vpn ipsec phase1-interface
   edit "pri_HQ2"
      set interface "port1"
      set peertype any
      set net-device disable
      set aggregate-member enable
      set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
      set remote-gw 172.16.202.1
      set psksecret sample1
   next
   edit "sec_HQ2"
```

```
      set interface "port2"
      set peertype any
      set net-device disable
      set aggregate-member enable
      set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
      set remote-gw 172.17.202.1
      set psksecret sample2
   next
   end
config vpn ipsec phase2-interface
   edit "pri_HQ2"
      set phase1name "pri_HQ2"
      set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm aes256gcm
           chacha20poly1305
      set auto-negotiate enable
   next
   edit "sec_HQ2"
      set phase1name "sec_HQ2"
      set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm aes256gcm
           chacha20poly1305
      set auto-negotiate enable
   next
end
```

To configure the IPsec aggregate:

```
config system ipsec-aggregate
   edit "agg_HQ2"
      set member "pri_HQ2" "sec_HQ2"
   next
end
```

To configure the firewall policies:

```
config firewall policy
   edit 1
      set name "inbound"
      set srcintf "agg_HQ2"
      set dstintf "dmz"
      set srcaddr "172.16.101.0"
      set dstaddr "10.1.100.0"
      set action accept
      set schedule "always"
      set service "ALL"
   next
   edit 2
      set name "outbound"
      set srcintf "dmz"
      set dstintf "agg_HQ2"
      set srcaddr "10.1.100.0"
      set dstaddr "172.16.101.0"
      set action accept
      set schedule "always"
      set service "ALL"
   next
end
```

To configure the aggregate VPN interface IPs:

```
config system interface
   edit "agg_HQ2"
      set ip 10.10.10.1 255.255.255.255
      set remote-ip 10.10.10.2 255.255.255.255
   next
end
```

To configure OSPF:

```
config router ospf
   set router-id 1.1.1.1
   config area
      edit 0.0.0.0
      next
   end
   config network
      edit 1
         set prefix 10.1.100.0 255.255.255.0
      next
      edit 2
         set prefix 10.10.10.0 255.255.255.0
      next
   end
end
```

Configuring the HQ2 FortiGate in the CLI

There are six steps to configure the FortiGate:

1. Configure the interfaces.
2. Configure two IPsec phase 1 and phase 2 interfaces.
3. Configure the IPsec aggregate.
4. Configure the firewall policies.
5. Configure the aggregate VPN interface IPs.
6. Configure OSPF.

To configure the interfaces:

1. Configure port25, port26, and port9 as shown in the topology diagram.

To configure two IPsec phase 1 and phase 2 interfaces:

```
config vpn ipsec phase1-interface
   edit "pri_HQ1"
      set interface "port25"
      set peertype any
      set net-device disable
      set aggregate-member enable
      set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
      set remote-gw 172.16.200.1
      set psksecret sample1
   next
   edit "sec_HQ1"
```

```
      set interface "port26"
      set peertype any
      set net-device disable
      set aggregate-member enable
      set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
      set remote-gw 172.17.200.1
      set psksecret sample2
   next
end
config vpn ipsec phase2-interface
   edit "pri_HQ1"
      set phase1name "pri_HQ1"
      set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm aes256gcm
           chacha20poly1305
      set auto-negotiate enable
   next
   edit "sec_HQ1"
      set phase1name "sec_HQ1"
      set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm aes256gcm
           chacha20poly1305
      set auto-negotiate enable
   next
end
```

To configure the IPsec aggregate:

```
config system ipsec-aggregate
   edit "agg_HQ1"
      set member "pri_HQ1" "sec_HQ1"
   next
end
```

To configure the firewall policies:

```
config firewall policy
   edit 1
      set name "inbound"
      set srcintf "agg_HQ1"
      set dstintf "port9"
      set srcaddr "10.1.100.0"
      set dstaddr "172.16.101.0"
      set action accept
      set schedule "always"
      set service "ALL"
   next
   edit 2
      set name "outbound"
      set srcintf "port9"
      set dstintf "agg_HQ1"
      set srcaddr "172.16.101.0"
      set dstaddr "10.1.100.0"
      set action accept
      set schedule "always"
      set service "ALL"
   next
end
```

To configure the aggregate VPN interface IPs:

```
config system interface
   edit "agg_HQ1"
      set ip 10.10.10.2 255.255.255.255
      set remote-ip 10.10.10.1 255.255.255.255
   next
end
```

To configure OSPF:

```
config router ospf
   set router-id 2.2.2.2
   config area
      edit 0.0.0.0
      next
   end
   config network
      edit 1
         set prefix 172.16.101.0 255.255.255.0
      next
      edit 2
         set prefix 10.10.10.0 255.255.255.0
      next
   end
end
```

Monitoring the traffic in the CLI

To view debugging information:

1. Verify the status of the phase 1 IKE SAs:

```
# diagnose vpn ike gateway list
vd: root/0
name: pri_HQ2
version: 1
interface: port1 11
addr: 172.16.200.1:500 -> 172.16.202.1:500
created: 1520s ago
IKE SA: created 1/2 established 1/1 time 10/10/10 ms
IPsec SA: created 2/2 established 1/1 time 0/0/0 ms
   id/spi: 173 dcdede154681579b/e32f4c48c4349fc0 direction: responder status: established
        1498-1498s ago = 10ms proposal: aes128-sha256 key: d7230a68d7b83def-
        588b94495cfa9d38 lifetime/rekey: 86400/84631 DPD sent/recv: 0000000d/00000006
vd: root/0
name: sec_HQ2
version: 1
interface: port2 12
addr: 172.17.200.1:500 -> 172.17.202.1:500
created: 1520s ago
IKE SA: created 1/2 established 1/1 time 10/10/10 ms
IPsec SA: created 2/2 established 1/1 time 0/0/0 ms
   id/spi: 174 a567bd7bf02a04b5/4251b6254660aee2 direction: responder status: established
        1498-1498s ago = 10ms proposal: aes128-sha256 key: 9f44f500c28d8de6-
        febaae9d1e6a164c lifetime/rekey: 86400/84631 DPD sent/recv: 00000008/0000000c
```

2. Verify the phase 2 IPsec tunnel SAs:

```
# diagnose vpn tunnel list
list all ipsec tunnel in vd 0
name=sec_HQ2 ver=1 serial=2 172.17.200.1:0->172.17.202.1:0
bound_if=5 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/512 options[0200]=frag-rfc
     run_state=1 accept_traffic=1
proxyid_num=1 child_num=0 refcnt=7 ilast=5 olast=5 ad=/0
stat: rxp=39 txp=40 rxb=5448 txb=2732
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=15
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=sec_HQ2 proto=0 sa=1 ref=2 serial=2 auto-negotiate
   src: 0:0.0.0.0/0.0.0.0:0 dst: 0:0.0.0.0/0.0.0.0:0 SA: ref=3 options=18227 type=00
        soft=0 mtu=1438 expire=41230/0B replaywin=2048
      seqno=29 esn=0 replaywin_lastseq=00000028 itn=0
   life: type=01 bytes=0/0 timeout=42899/43200 dec: spi=1071b4f9 esp=aes key=16
        1f4dbb78bea8e97650b52d8170b5ece7
      ah=sha1 key=20 cd9bf2de0f49296cf489dd915d7baf6d78bc8f12
   enc: spi=ec89b7ee esp=aes key=16 0546efecd0d1b9ba5944f635896e4404
      ah=sha1 key=20 34599bc7dc25e1ce63ac9615bd50928ce0667dc8
   dec:pkts/bytes=39/2796, enc:pkts/bytes=40/5456
name=pri_HQ2 ver=1 serial=1 172.16.200.1:0->172.16.202.1:0
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/512 options[0200]=frag-rfc
     run_state=1 accept_traffic=1
proxyid_num=1 child_num=0 refcnt=5 ilast=15 olast=15 ad=/0
stat: rxp=38 txp=39 rxb=5152 txb=2768
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=20
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=pri_HQ2 proto=0 sa=1 ref=2 serial=2 auto-negotiate
   src: 0:0.0.0.0/0.0.0.0:0 dst: 0:0.0.0.0/0.0.0.0:0 SA: ref=3 options=18227 type=00
        soft=0 mtu=1438 expire=41231/0B replaywin=2048
      seqno=28 esn=0 replaywin_lastseq=00000027 itn=0
   life: type=01 bytes=0/0 timeout=42900/43200 dec: spi=1071b4f8 esp=aes key=16
        142cce377b3432ba41e64128ade6848c
      ah=sha1 key=20 20e64947e2397123f561584321adc0e7aa0c342d
   enc: spi=ec89b7ed esp=aes key=16 2ec13622fd60dacce3d28ebe5fe7ab14
      ah=sha1 key=20 c1787497508a87f40c73c0db0e835c70b3c3f42d
   dec:pkts/bytes=38/2568, enc:pkts/bytes=39/5432
```

3. Debug the IPsec aggregation list:

```
# diagnose sys ipsec-aggregate list
agg_HQ2 algo=RR member=2 run_tally=2
members:
   pri_HQ2
   sec_HQ2
```

4. Verify the OSPF neighbor information:

```
# get router info ospf neighbor
OSPF process 0, VRF 0:
Neighbor ID Pri State Dead Time Address Interface
2.2.2.2 1. Full/ - 00:00:34 10.10.10.2 agg1_HQ2
```

5. Verify the OSPF routing table:

```
# get router info routing-table ospf
Routing table for VRF=0
O 172.16.101.0/24 [110/20] via 10.10.10.2, agg1_HQ2 , 00:18:43
```

Per packet distribution and tunnel aggregation


This example shows how to aggregate IPsec tunnels by using per-packet load-balancing among IPsec tunnels.

For example, a customer has two ISP connections, wan1 and wan2. Using these two connections, we create two VPN interfaces and configure traffic for per-packet load-balancing among IPsec tunnels.

This feature only allows static/DDNS tunnels to be members.

Dynamic (dialup) tunnels are not allowed because dialup instances tend to have different locations and hence different routing. This conflicts with the rule that all the members of an aggregate must have the same routing.

Sample topology

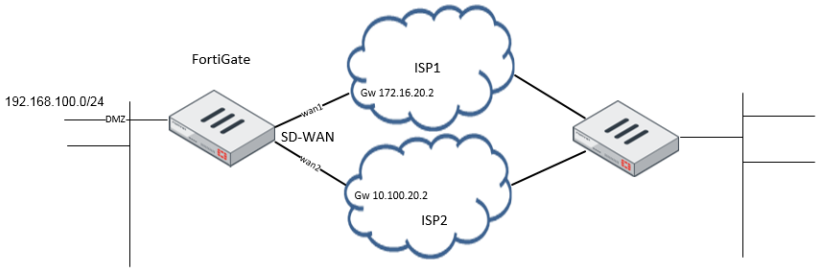

Sample configuration

On the FortiGate, first create two IPsec VPN interfaces. Then create an `ipsec-aggregate` interface and add this interface as an SD-WAN member.

FortiGate 1 configuration

To create two IPsec VPN interfaces on FortiGate 1:

```
config vpn ipsec phase1-interface
    edit "vd1-p1"
        set interface "wan1"
        set peertype any
        set net-device disable
        set aggregate-member enable
        set proposal aes256-sha256
        set dhgrp 14
        set remote-gw 172.16.201.2
        set psksecret ftnt1234
    next
    edit "vd1-p2"
        set interface "wan2"
        set peertype any
        set net-device disable
        set aggregate-member enable
        set proposal aes256-sha256
        set dhgrp 14
        set remote-gw 172.16.202.2
```

```
        set psksecret ftnt1234
    next
end
config vpn ipsec phase2-interface
    edit "vd1-p1"
        set phase1name "vd1-p1"
    next
    edit "vd1-p2"
        set phase1name "vd1-p2"
    next
end
```

To create an ipsec-aggregate interface on FortiGate 1:

```
config system ipsec-aggregate
    edit "agg1"
        set member "vd1-p1" "vd1-p2"
        set algorithm L3
    next
end
config system interface
    edit "agg1"
        set vdom "root"
        set ip 172.16.11.1 255.255.255.255
        set allowaccess ping
        set remote-ip 172.16.11.2 255.255.255.255
end
```

To configure the firewall policy on FortiGate 1:

```
config firewall policy
    edit 1
        set name "1"
        set srcintf "dmz"
        set dstintf ""virtual-wan-link""
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end
```

To configure SD-WAN on FortiGate 1:

```
config system virtual-wan-link
    set status enable
    config members
        edit 1
            set interface "agg1"
            set gateway 172.16.11.2
        next
    end
end
```

FortiGate 2 configuration

To create two IPsec VPN interfaces on FortiGate 2:

```
config vpn ipsec phase1-interface
    edit "vd2-p1"
        set interface "wan1"
        set peertype any
        set net-device disable
        set proposal aes256-sha256
        set dhgrp 14
        set remote-gw 172.16.200.1
        set psksecret ftnt1234
    next
    edit "vd2-p2"
        set interface "wan2"
        set peertype any
        set net-device disable
        set proposal aes256-sha256
        set dhgrp 14
        set remote-gw 172.16.203.1
        set psksecret ftnt1234
    next
end
config vpn ipsec phase2-interface
    edit "vd2-p1"
        set phase1name "vd2-p1"
    next
    edit "vd2-p2"
        set phase1name "vd2-p2"
    next
end
```

To create an ipsec-aggregate interface on FortiGate 2:

```
config system ipsec-aggregate
    edit "agg2"
        set member "vd2-p1" "vd2-p2"
        set algorithm L3
    next
end
config system interface
    edit "agg2"
        set vdom "root"
        set ip 172.16.11.2 255.255.255.255
        set allowaccess ping
        set remote-ip 172.16.11.1 255.255.255.255
    next
end
```

To configure the firewall policy on FortiGate 2:

```
config firewall policy
    edit 1
        set name "1"
```

```
        set srcintf "dmz"
        set dstintf ""virtual-wan-link""
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end
```

To configure SD-WAN on FortiGate 2:

```
config system virtual-wan-link
    set status enable
    config members
        edit 1
            set interface "agg2"
            set gateway 172.16.11.1
        next
    end
end
```

To use the diagnose command to display aggregate IPsec members:

```
# diagnose sys ipsec-aggregate list
agg1 algo=L3 member=2 run_tally=2
members:
        vd1-p1
        vd1-p2
```

To use the diagnose command to check VPN status:

```
# diagnose vpn tunnel list
list all ipsec tunnel in vd 0
------------------------------------------------------
name=vd1-p1 ver=1 serial=2 172.16.200.1:0->172.16.201.2:0 dst_mtu=0
bound_if=10 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/520 options[0208]=npu frag-rfc
run_state=1 accept_traffic=0

proxyid_num=1 child_num=0 refcnt=5 ilast=15 olast=676 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=vd1-p1 proto=0 sa=0 ref=1 serial=1
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
------------------------------------------------------
name=vd1-p2 ver=1 serial=3 172.16.203.1:0->172.16.202.2:0 dst_mtu=1500
bound_if=28 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/520 options[0208]=npu frag-rfc
run_state=1 accept_traffic=1

proxyid_num=1 child_num=0 refcnt=12 ilast=1 olast=1 ad=/0
stat: rxp=1 txp=1686 rxb=16602 txb=111717
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
```


```
proxyid=vd1-p2 proto=0 sa=1 ref=9 serial=1
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=4 options=10226 type=00 soft=0 mtu=1438 expire=42164/0B replaywin=2048
       seqno=697 esn=0 replaywin_lastseq=00000002 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42902/43200
  dec: spi=f6ae9f83 esp=aes key=16 f6855c72295e3c5c49646530e6b96002
       ah=sha1 key=20 f983430d6c161d0a4cd9007c7ae057f1ff011334
  enc: spi=8c72ba1a esp=aes key=16 6330f8c532a6ca5c5765f6a9a6034427
       ah=sha1 key=20 e5fe385ed5f0f6a33f1d507601b15743a8c70187
  dec:pkts/bytes=1/16536, enc:pkts/bytes=1686/223872
  npu_flag=02 npu_rgwy=172.16.202.2 npu_lgwy=172.16.203.1 npu_selid=2 dec_npuid=1 enc_
npuid=0
```

Redundant hub and spoke VPN

A redundant hub and spoke configuration allows VPN connections to radiate from a central FortiGate unit (the hub) to multiple remote peers (the spokes). Traffic can pass between private networks behind the hub and private networks behind the remote peers. Traffic can also pass between remote peer private networks through the hub.

This is a sample configuration of hub and spoke IPsec VPN. The following applies for this scenario:

- The spokes have two WAN interfaces and two IPsec VPN tunnels for redundancy.
- The secondary VPN tunnel is up only when the primary tunnel is down by dead peer detection.

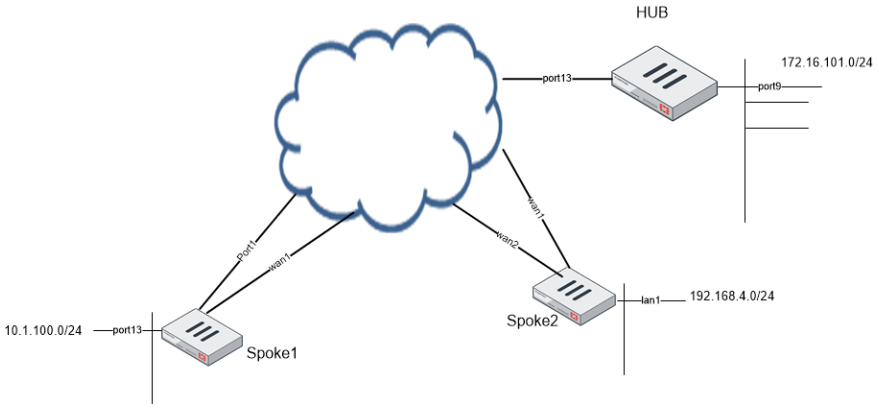

Because the GUI can only complete part of the configuration, we recommend using the CLI.

To configure redundant hub and spoke VPN using the FortiOS CLI:

1. Configure the hub.
   a. Configure the WAN, internal interface, and static route.

```
config system interface
   edit "port13"
      set alias "WAN"
      set ip 172.16.202.1 255.255.255.0
   next
   edit "port9"
      set alias "Internal"
      set ip 172.16.101.1 255.255.255.0
   next
end
```

```
config router static
   edit 1
      set gateway 172.16.202.2
      set device "port13"
   next
end
```

b. Configure the IPsec phase1-interface and phase2-interface.

```
config vpn ipsec phase1-interface
   edit "hub"
      set type dynamic
      set interface "port13"
      set peertype any
      set net-device enable
      set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
      set dpd on-idle
      set psksecret sample
      set dpd-retryinterval 60
   next
end
config vpn ipsec phase2-interface
   edit "hub"
      set phase1name "hub"
      set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
           aes256gcm chacha20poly1305
   next
end
```

c. Configure the firewall policy.

```
config firewall policy
   edit 1
      set name "spoke-hub"
      set srcintf "hub"
      set dstintf "port9"
      set srcaddr "all"
      set dstaddr "172.16.101.0"
      set action accept
      set schedule "always"
      set service "ALL"
   next
   edit 2
      set name "spoke-spoke"
      set srcintf "hub"
      set dstintf "hub"
      set srcaddr "all"
      set dstaddr "all"
      set action accept
      set schedule "always"
      set service "ALL"
   next
end
```

2. Configure the spokes.

a. Configure the WAN, internal interface, and static route.

i. Configure Spoke1.

```
config system interface
   edit "port1"
      set ip 172.16.200.1 255.255.255.0
   next
```

```
    edit "wan1"
      set mode dhcp
      set distance 10
      set priority 100
    next
    edit "dmz"
      set ip 10.1.100.1 255.255.255.0
    next
  end
  config router static
    edit 1
      set gateway 172.16.200.2
      set device "port1"
    next
  end
```

ii. Configure Spoke2.

```
config system interface
  edit "wan1"
    set ip 172.16.200.3 255.255.255.0
  next
  edit "wan2"
    set mode dhcp
    set distance 10
    set priority 100
  next
  edit "lan1"
    set ip 192.168.4.1 255.255.255.0
  next
end
config router static
  edit 1
    set gateway 172.16.200.2
    set device "wan1"
  next
end
```

b. Configure IPsec phase1-interface and phase2-interface.

i. Configure Spoke1.

```
config vpn ipsec phase1-interface
  edit "primary"
    set interface "port1"
    set peertype any
    set net-device enable
    set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
    set remote-gw 172.16.202.1
    set psksecret sample
    next
  edit "secondary"
    set interface "wan1"
    set peertype any
    set net-device enable
    set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
    set remote-gw 172.16.202.1
    set monitor "primary"
    set psksecret sample
    next
end
```

```
config vpn ipsec phase2-interface
   edit "primary"
      set phase1name "primary"
      set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
           aes256gcm chacha20poly1305
      set auto-negotiate enable
      set src-subnet 10.1.100.0 255.255.255.0
   next
   edit "secondary"
      set phase1name "secondary"
      set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
           aes256gcm chacha20poly1305
      set auto-negotiate enable
      set src-subnet 10.1.100.0 255.255.255.0
   next
end
```

ii. Configure Spoke2.

```
config vpn ipsec phase1-interface
   edit "primary"
      set interface "wan1"
      set peertype any
      set net-device enable
      set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
      set remote-gw 172.16.202.1
      set psksecret sample
      next
   edit "secondary"
      set interface "wan2"
      set peertype any
      set net-device enable
      set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
      set remote-gw 172.16.202.1
      set monitor "primary"
      set psksecret sample
      next
end
config vpn ipsec phase2-interface
   edit "primary"
      set phase1name "primary"
      set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
           aes256gcm chacha20poly1305
      set auto-negotiate enable
      set src-subnet 192.168.4.0 255.255.255.0
   next
   edit "secondary"
      set phase1name "secondary"
      set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
           aes256gcm chacha20poly1305
      set auto-negotiate enable
      set src-subnet 192.168.4.0 255.255.255.0
   next
end
```

c. Configure the firewall policy.

i. Configure Spoke1.

```
config firewall policy
   edit 1
```

```
        set srcintf "dmz"
        set dstintf "primary" "secondary"
        set srcaddr "10.1.100.0"
        set dstaddr "172.16.101.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

ii. Configure Spoke2.

```
config firewall policy
    edit 1
        set srcintf "lan1"
        set dstintf "primary" "secondary"
        set srcaddr "192.168.4.0"
        set dstaddr "172.16.101.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

d. Configure the static route.

i. Configure Spoke1.

```
config router static
    edit 3
        set dst 172.16.101.0 255.255.255.0
        set distance 1
        set device "primary"
    next
    edit 4
        set dst 172.16.101.0 255.255.255.0
        set distance 3
        set device "secondary"
    next
end
```

ii. Configure Spoke2.

```
config router static
    edit 3
        set dst 172.16.101.0 255.255.255.0
        set distance 1
        set device "primary"
    next
    edit 4
        set dst 172.16.101.0 255.255.255.0
        set distance 3
        set device "secondary"
    next
end
```

3. Run `diagnose` and `get` commands.

a. Run the `Spoke1 # diagnose vpn tunnel list` command. The system should return the following:

```
name=primary ver=1 serial=1 172.16.200.1:0->172.16.202.1:0
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_
     dev frag-rfc accept_traffic=1
proxyid_num=1 child_num=0 refcnt=15 ilast=0 olast=0 ad=/0
stat: rxp=1879 txp=1881 rxb=225480 txb=112860
```

```
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=1
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=primary proto=0 sa=1 ref=2 serial=2 auto-negotiate
   src: 0:10.1.100.0/255.255.255.0:0 dst: 0:0.0.0.0/0.0.0.0:0 SA: ref=3 options=18227
        type=00 soft=0 mtu=1438 expire=41002/0B replaywin=2048
      seqno=758 esn=0 replaywin_lastseq=00000758 itn=0
   life: type=01 bytes=0/0 timeout=42901/43200 dec: spi=0908732f esp=aes key=16
        20770dfe67ea22dd8ec32c44d84ef4d5
      ah=sha1 key=20 edc89fc2ec06309ba13de95e7e486f9b795b8707
   enc: spi=a1d9eed1 esp=aes key=16 8eeea2526fba062e680d941083c8b5d1
      ah=sha1 key=20 f0f5deaf88b2a69046c3154e9f751739b3f411f5
   dec:pkts/bytes=1879/112740, enc:pkts/bytes=1879/225480
name=secondary ver=1 serial=2 172.17.200.1:0->172.16.202.1:0
bound_if=5 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_
     dev frag-rfc accept_traffic=0
proxyid_num=1 child_num=0 refcnt=10 ilast=1892 olast=1892 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-demand on=0 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=secondary proto=0 sa=0 ref=2 serial=2 auto-negotiate
   src: 0:10.1.100.0/255.255.255.0:0 dst: 0:0.0.0.0/0.0.0.0:0
```

b. Run the `Spoke1 # get router info routing-table static` command. The system should return the following:

```
Routing table for VRF=0
..............
S 172.16.101.0/24 [1/0] is directly connected, primary
```

Overlay Controller VPN (OCVPN)

Overlay Controller VPN (OCVPN) is a cloud based solution to simplify IPsec VPN setup. When OCVPN is enabled, IPsec phase1-interfaces, phase2-interfaces, static routes, and firewall policies are generated automatically on all FortiGates that belong to the same community network. A community network is defined as all FortiGates registered to FortiCare using the same FortiCare account.

If the network topology changes on any FortiGates in the community (such as changing a public IP address in DHCP mode, adding or removing protected subnets, failing over in dual WAN), the IPsec-related configuration for all devices is updated with Cloud assistance in self-learning mode. No intervention is required.



OCVPN with SD-WAN is not currently supported.

The following topics provide instructions on configuring OCVPN:

- Full mesh OCVPN on page 1221
- Hub-spoke OCVPN with ADVPN shortcut on page 1225
- Hub-spoke OCVPN with inter-overlay source NAT on page 1230
- OCVPN portal on page 1234
- Troubleshooting OCVPN on page 1235

Full mesh OCVPN

This example shows how to configure a full mesh Overlay Controller VPN (OCVPN), establishing full mesh IPsec tunnels between all of the FortiGates.

License

- Free license: Three devices full mesh, 10 overlays, 16 subnets per overlay.
- Full License: Maximum of 16 devices, 10 overlays, 16 subnets per overlay.

Prerequisites

- All FortiGates must be running FortiOS 6.2.0 or later.
- All FortiGates must have Internet access.
- All FortiGates must be registered on FortiCare using the same FortiCare account.

Restrictions


- Non-root VDOMs do not support OCVPN.
- FortiOS 6.2.x is not compatible with FortiOS 6.0.x.

Terminology

Poll-interval	How often FortiGate tries to fetch OCVPN-related data from OCVPN Cloud.
Role	The device OCVPN role of spoke, primary-hub, or secondary-hub.
Overlay	Defines network overlays and bind to subnets.
Subnet	Internal network subnet (IPsec protected subnet). Traffic to or from this subnet enters the IPsec tunnel encrypted by IPsec SA.

Sample topology

The following example shows three FortiGate units registered on FortiCare using the same FortiCare account. Each FortiGate unit has one internal subnet, and no NAT exists between the units.

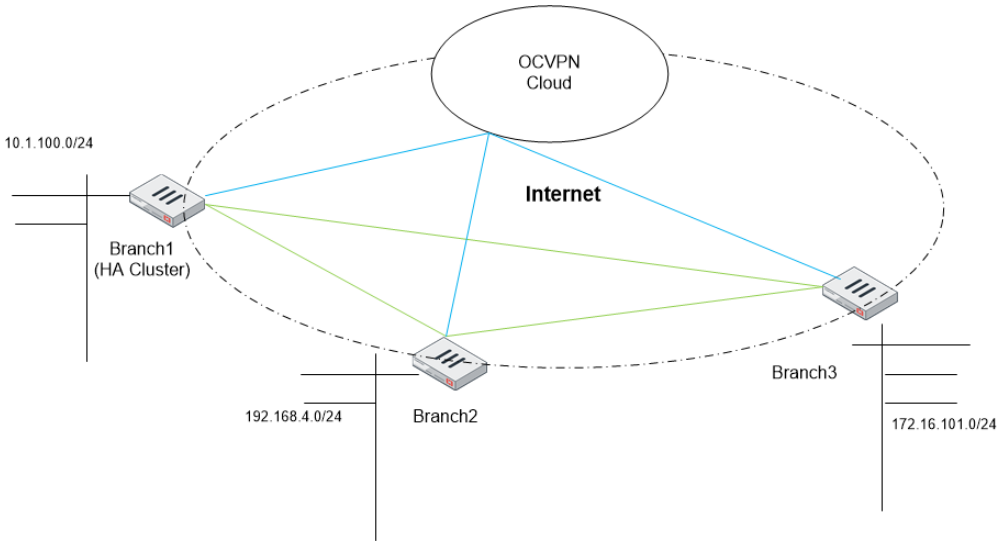

Sample configuration

The following overlays and subnets are used:

- Branch1:
  - Overlay name: QA. Local subnets: 10.1.100.0/24
  - Overlay name: PM. Local subnets: 10.2.100.0/24
- Branch2:
  - Overlay name: QA. Local interfaces: lan1
  - Overlay name: PM. Local interfaces: lan2
- Branch3:
  - Overlay name: QA. Local subnets: 172.16.101.0/24
  - Overlay name: PM. Local subnets: 172.16.102.0/24




The overlay names on each device must be the same for local and remote selector pairs to be negotiated.

To register FortiGates on FortiCare:

1. Go to *System* > *FortiGuard* > *License Information* > *FortiCare Support*.
2. To register, click *Register* or *Launch Portal*.
3. Complete the options to register FortiGate on FortiCare.


To enable OCVPN using the GUI:

1. Go to *VPN* > *Overlay Controller VPN*.
2. Create the first overlay by setting the following options:
   a. For *Status*, click *Enabled*.
   b. For *Role*, click *Spoke*.
   c. In the *Overlays* section, click *Create New* to create a network overlay.

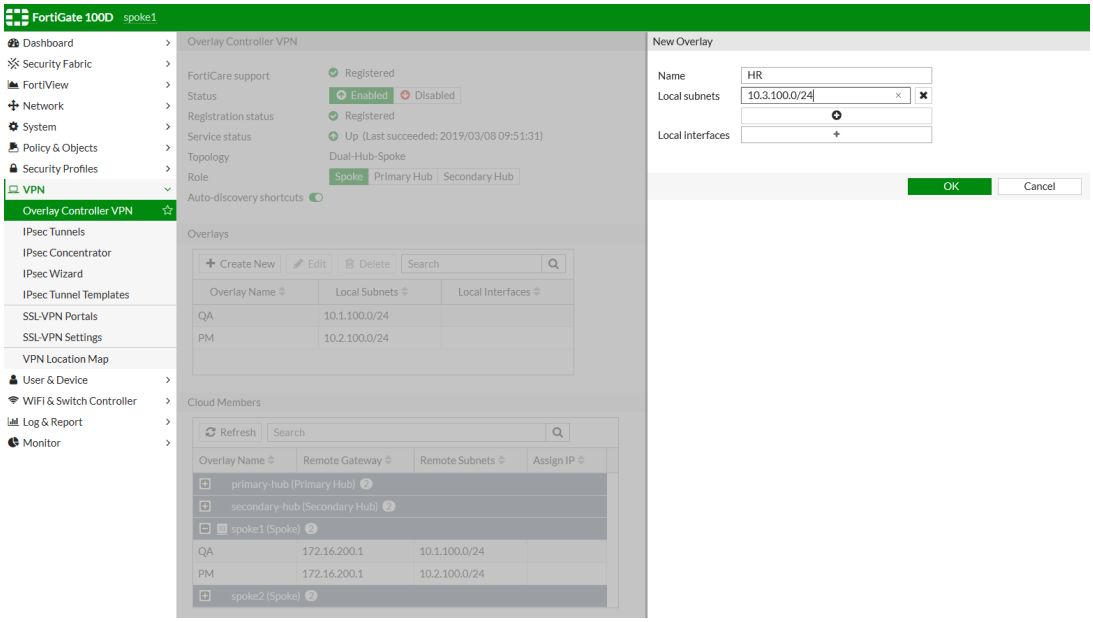

3. Specify the *Name*, *Local subnets*, and/or *Local interfaces*.
   The local subnet must be routable and interfaces must have IP addresses.

4. Click *OK*.

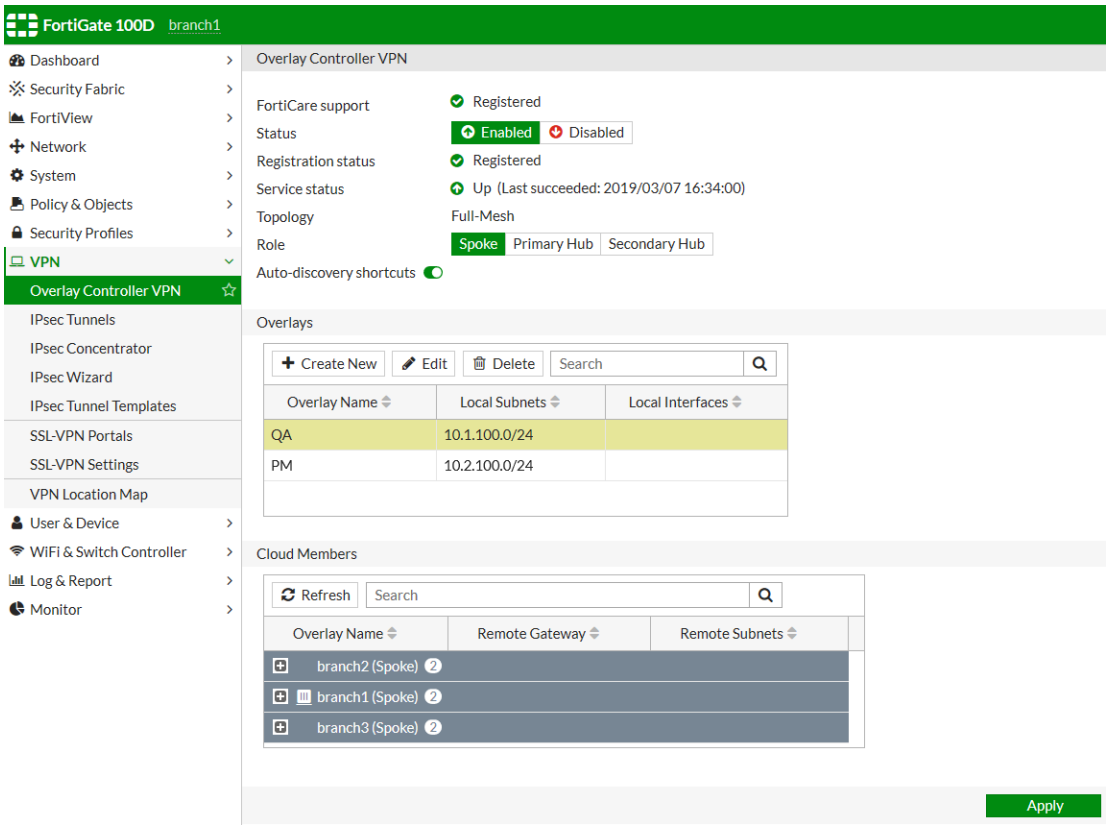

5. Click *Apply* to commit the configuration.
6. Repeat this procedure to create all the overlays.

To enable OCVPN using the CLI:

1. Configure Branch1:

```
config vpn ocvpn
   set status enable
   config overlays
      edit 1
          set name "QA"
          config subnets
             edit 1
                set subnet 10.1.100.0 255.255.255.0
             next
          end
      next
      edit 2
          set name "PM"
          config subnets
             edit 1
                set subnet 10.2.100.0 255.255.255.0
             next
          end
      next
```

```
    end
end
```

2. Configure Branch2:

```
config vpn ocvpn
    set status enable
    config overlays
        edit 1
            set name "QA"
            config subnets
                edit 1
                    set type interface
                    set interface "lan1"
                next
            end
        next
        edit 2
            set name "PM"
            config subnets
                edit 1
                    set type interface
                    set interface "lan2"
                next
            end
        next
    end
end
```

3. Configure Branch3:

```
config vpn ocvpn
    set status enable
    config overlays
        edit 1
            set name "QA"
            config subnets
               edit 1
                  set subnet 172.16.101.0 255.255.255.0
               next
            end
        next
        edit 1
            set name "PM"
            config subnets
               edit 1
                  set subnet 172.16.102.0 255.255.255.0
               next
            end
        next
    end
end
```

Hub-spoke OCVPN with ADVPN shortcut

This topic shows a sample configuration of a hub-spoke One-Click VPN (OCVPN) with an Auto Discovery VPN (ADVPN) shortcut. OCVPN automatically detects the network topology based on members' information. To form a hub-spoke

OCVPN, at least one device must announce its role as the primary hub, another device can work as the secondary hub (for redundancy), while others function as spokes.

License

- Free license: Hub-spoke network topology not supported.
- Full license: Maximum of 2 hubs, 10 overlays, 64 subnets per overlay; 512 spokes, 10 overlays, 16 subnets per overlay.

Prerequisites

- All FortiGates must be running FortiOS 6.2.0 or later.
- All FortiGates must have Internet access.
- All FortiGates must be registered on FortiCare using the same FortiCare account.


Restrictions

- Non-root VDOMs do not support OCVPN.
- FortiOS 6.2.x is not compatible with FortiOS 6.0.x.

OCVPN device roles

- Primary hub.
- Secondary hub.
- Spoke (OCVPN default role).

Sample topology

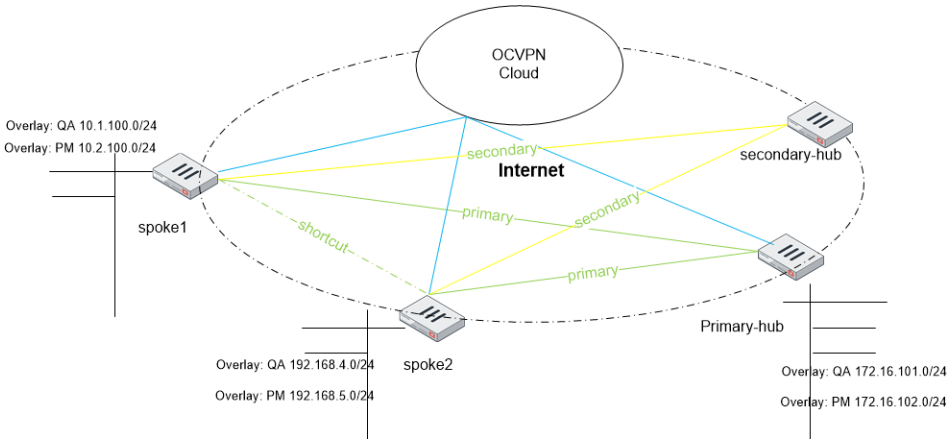

Sample configuration

The steps below use the following overlays and subnets for the sample configuration:

- Primary hub:
  - Overlay name: QA. Local subnets: 172.16.101.0/24
  - Overlay name: PM. Local subnets: 172.16.102.0/24

- Secondary hub:
  - Overlays are synced from primary hub.
- Spoke1:
  - Overlay name: QA. Local subnets: 10.1.100.0/24
  - Overlay name: PM. Local subnets: 10.2.100.0/24
- Spoke2:
  - Overlay name: QA. Local interfaces: lan1
  - Overlay name: PM. Local interfaces: lan2




The overlay names on each device must be the same for local and remote selector pairs to be negotiated.

To register FortiGates on FortiCare:

1. Go to *System* > *FortiGuard* > *License Information* > *FortiCare Support*.
2. To register, click *Register* or *Launch Portal*.
3. Complete the options to register FortiGate on FortiCare.


To enable hub-spoke OCVPN using the GUI:

1. Go to *VPN* > *Overlay Controller VPN*.
2. Configure the OCVPN primary hub by setting the following options:
   a. For *Status*, click *Enabled*.
   b. For *Role*, click *Primary Hub*.
   c. In the *Overlays* section, click *Create New* to create a network overlay.

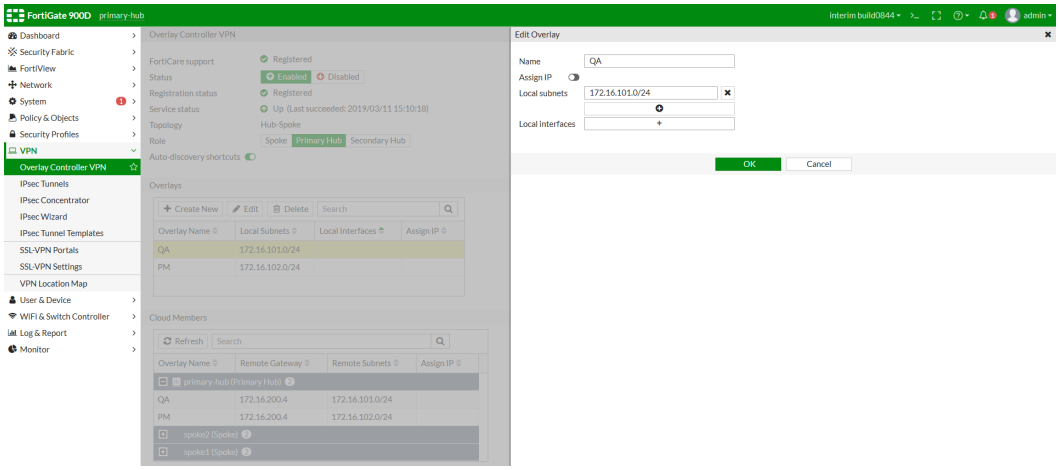


   d. Specify the *Name*, *Local subnets*, and/or *Local interfaces*. Then click *OK*.

e. Click *Apply* to commit the configuration.

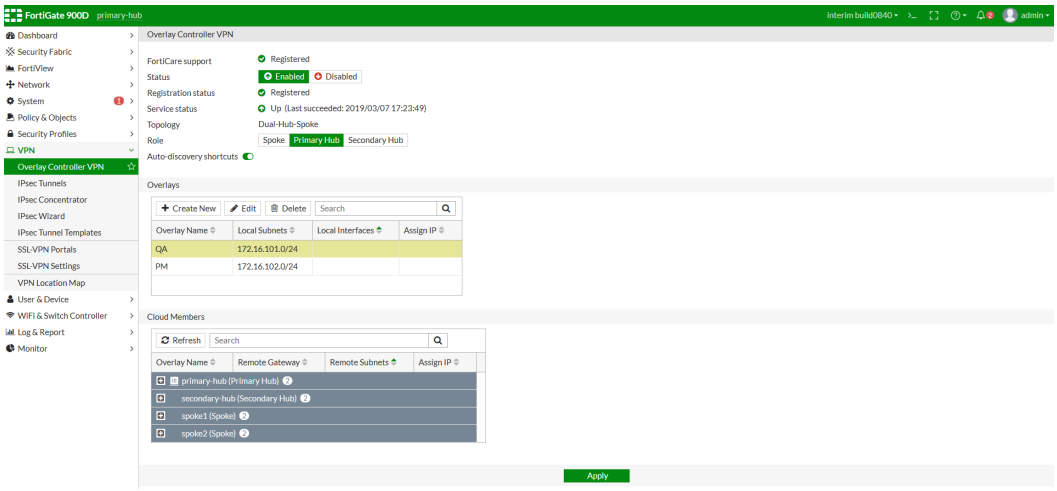


3. Configure the OCVPN secondary hub:
   Overlays are synced from the primary hub and cannot be defined in the secondary hub.
   a. In the *Overlay Controller VPN* pane, select *Secondary Hub* for the *Role*.
   b. Select *Apply* to commit the configuration.

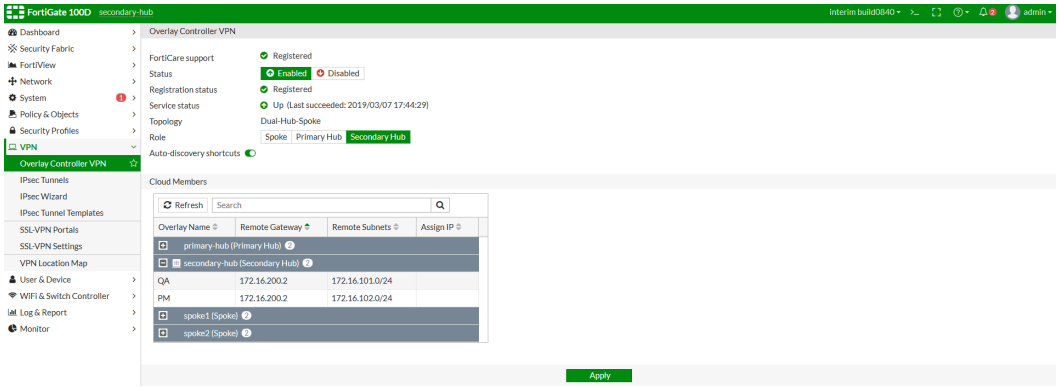

4. Configure the OCVPN spokes:
   a. In the *Overlay Controller VPN* pane, select *Spoke* for the *Role*.
   b. In the *Overlays* section, click *Create New* to create a network overlay.
   c. Specify the *Name*, *Local subnets*, and/or *Local interfaces*.
   The local subnet must be routable and interfaces must have IP addresses.

d. Click *OK* and then click *Apply* to commit the configuration.

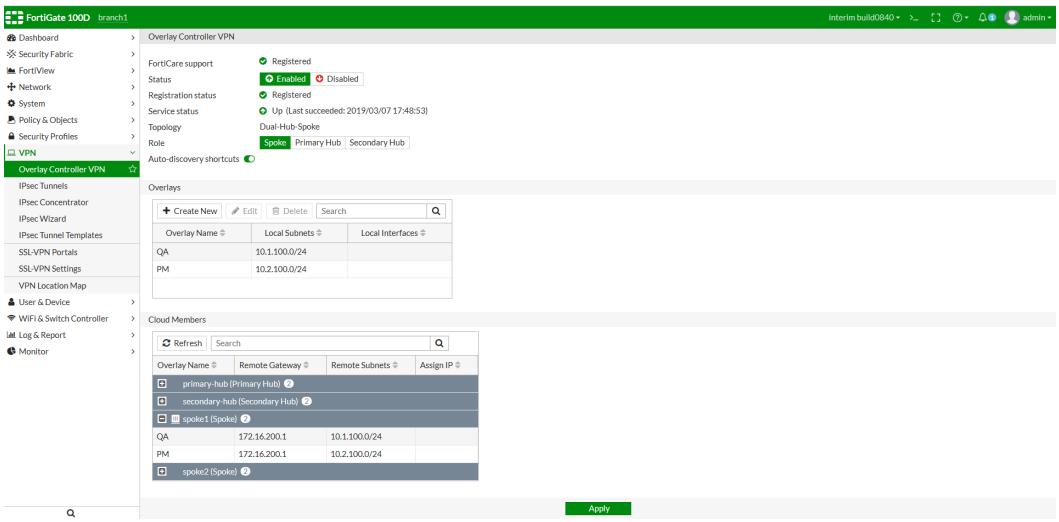

To enable hub-spoke OCVPN using the CLI:

1. Configure the OCVPN primary hub:

```
config vpn ocvpn
    set status enable
    set role primary-hub
    config overlays
        edit 1
            set name "QA"
            config subnets
                edit 1
                    set subnet 172.16.101.0 255.255.255.0
                next
            end
        next
        edit 2
            set name "PM"
            config subnets
                edit 1
                    set subnet 172.16.102.0 255.255.255.0
                next
            end
        next
    end
end
```

2. Configure the OCVPN secondary hub:

```
config vpn ocvpn
    set status enable
    set role secondary-hub
end
```

3. Configure the OCVPN spoke1:

```
config vpn ocvpn
    set status enable
```

```
        config overlays
            edit 1
                set name "QA"
                config subnets
                    edit 1
                        set subnet 10.1.100.0 255.255.255.0
                    next
                end
            next
            edit 2
                set name "PM"
                config subnets
                    edit 1
                        set subnet 10.2.100.0 255.255.255.0
                    next
                end
            next
        end
    end
```

4. Configure the OCVPN spoke2:

```
    config vpn ocvpn
        set status enable
        config overlays
            edit 1
                set name "QA"
                config subnets
                    edit 1
                        set subnet 192.168.4.0 255.255.255.0
                    next
                end
            next
            edit 2
                set name "PM"
                config subnets
                    edit 1
                        set subnet 192.168.5.0 255.255.255.0
                    next
                end
            next
        end
    end
```

Hub-spoke OCVPN with inter-overlay source NAT

This topic shows a sample configuration of hub-spoke OCVPN with inter-overlay source NAT. OCVPN isolates traffic between overlays by default. With NAT enabled on spokes and `assign-ip` enabled on hub, you can have inter-overlay communication.

Inter-overlay communication means devices from any source addresses and any source interfaces can communicate with any devices in overlays' subnets when the overlay option `assign-ip` is enabled.

You must first disable `auto-discovery` before you can enable NAT.

License

- Free license: Hub-spoke network topology not supported.
- Full License: Maximum of 2 hubs, 10 overlays, 64 subnets per overlay; 512 spokes, 10 overlays, 16 subnets per overlay.

Prerequisites

- All FortiGates must be running FortiOS 6.2.0 or later.
- All FortiGates must have Internet access.
- All FortiGates must be registered on FortiCare using the same FortiCare account.


Restrictions

- Non-root VDOMs do not support OCVPN.
- FortiOS 6.2.x is not compatible with FortiOS 6.0.x.

OCVPN device roles

- Primary hub.
- Secondary hub.
- Spoke (OCVPN default role).

Sample topology

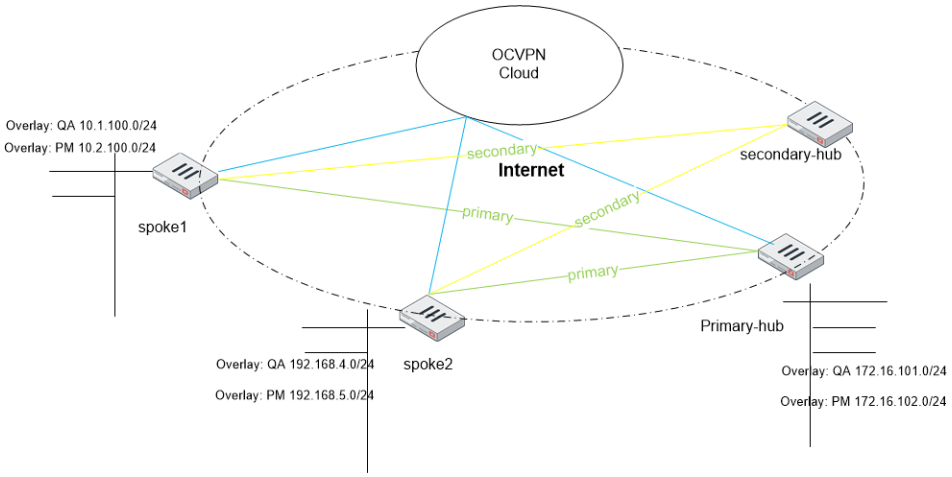

Sample configuration

You can only configure this feature using the CLI.



The overlay names on each device must be the same for local and remote selector pairs to be negotiated.

To enable inter-overlay source NAT using the CLI:

1. Configure the primary hub, enable overlay QA, and configure `assign-ip` and IP range:

```
config vpn ocvpn
    set status enable
    set role primary-hub
    config overlays
        edit 1
            set name "QA"
            set assign-ip enable
            set ipv4-start-ip 172.16.101.100
            set ipv4-end-ip 172.16.101.200
            config subnets
                edit 1
                    set subnet 172.16.101.0 255.255.255.0
                next
            end
        next
        edit 2
            set name "PM"
            set assign-ip enable
            config subnets
                edit 1
                    set subnet 172.16.102.0 255.255.255.0
                next
            end
        next
    end
end
```

2. Configure the secondary hub:

```
config vpn ocvpn
    set status enable
    set role secondary-hub
end
```

3. Configure spoke1 and enable NAT on the spoke:

```
config vpn ocvpn
    set status enable
    set auto-discovery disable
    set nat enable
    config overlays
        edit 1
            set name "QA"
            config subnets
                edit 1
                    set subnet 10.1.100.0 255.255.255.0
                next
            end
        next
        edit 2
            set name "PM"
            config subnets
                edit 1
                    set subnet 10.2.100.0 255.255.255.0
```

```
                next
            end
        next
    end
end
```

4. Configure spoke2 and enable NAT on the spoke:


```
config vpn ocvpn
    set status enable
    set auto-discovery disable
    set nat enable
    config overlays
        edit 1
            set name "QA"
            config subnets
                edit 1
                    set subnet 192.168.4.0 255.255.255.0
                next
            end
        next
        edit 2
            set name "PM"
            config subnets
                edit 1
                    set subnet 192.168.5.0 255.255.255.0
                next
            end
        next
    end
end
```

A firewall policy with NAT is generated on the spoke:


```
edit 9
   set name "_OCVPN2-1.1_nat"
   set uuid 3f7a84b8-3d36-51e9-ee97-8f418c91e666
   set srcintf "any"
   set dstintf "_OCVPN2-1.1"
   set srcaddr "all"
   set dstaddr "_OCVPN2-1.1_remote_networks"
   set action accept
   set schedule "always"
   set service "ALL"
   set comments "Generated by OCVPN Cloud Service."
   set nat enable
next
```

OCVPN portal


When you log into the OCVPN portal, the OCVPN license type and device information display. The device information includes the device serial number, OCVPN role, hostname, public IP address, port number, and overlays.

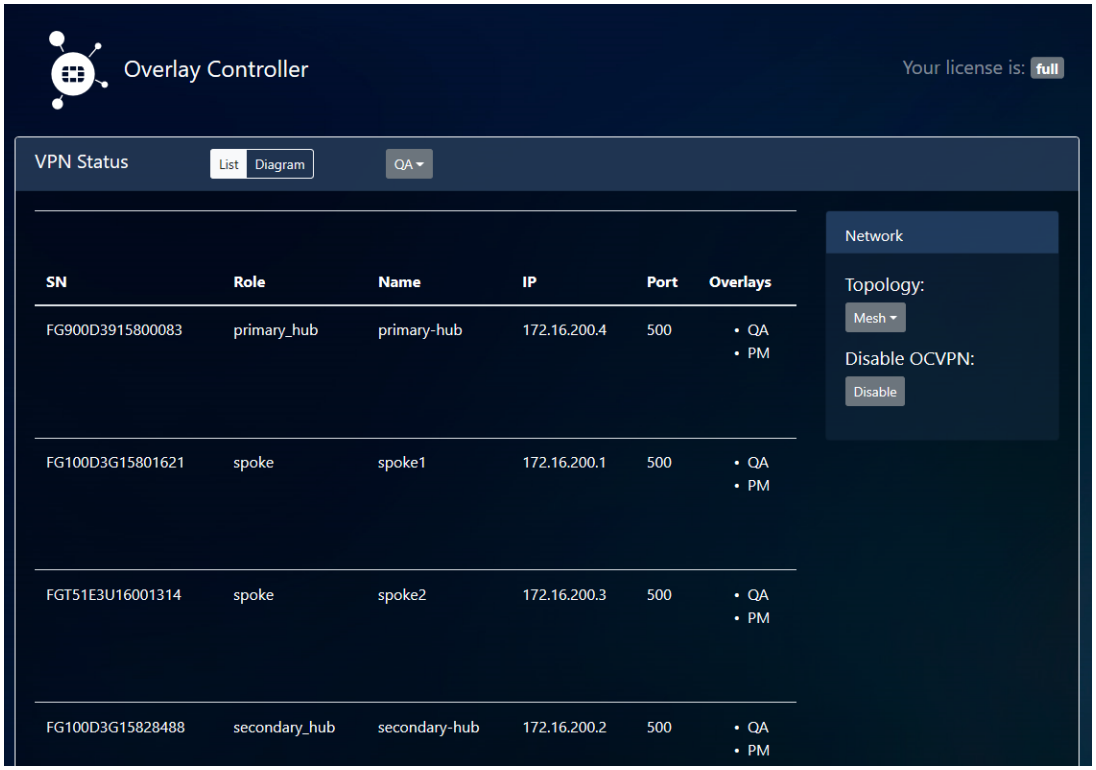

You can unregister an OCVPN device from the OCVPN portal under *Device* on the right pane.

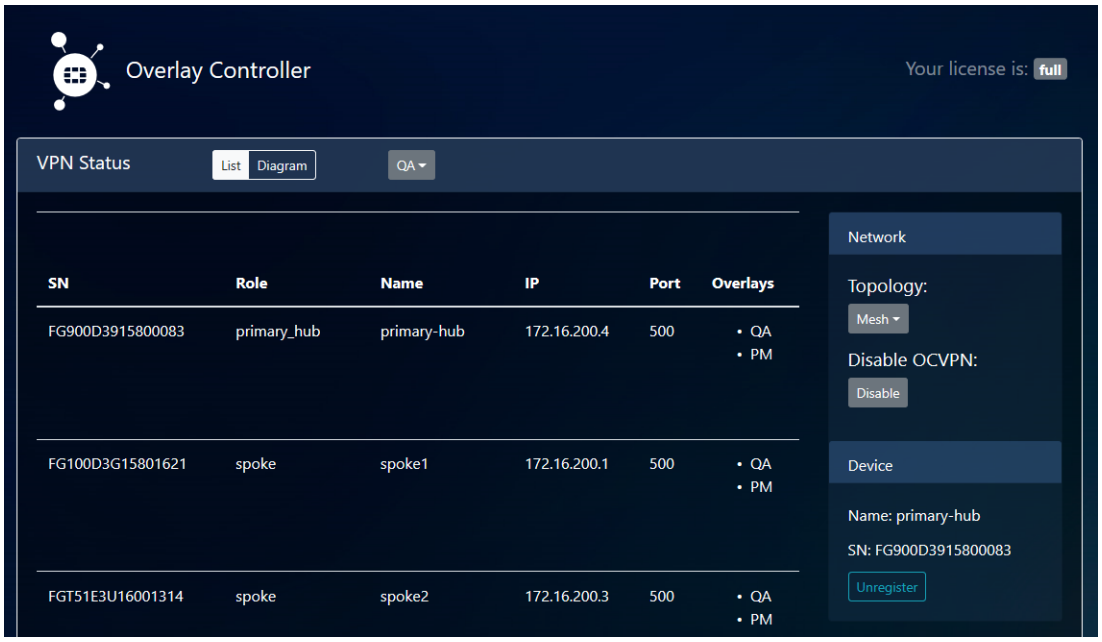

Use the OCVPN *Diagram* to show the OCVPN network topology.

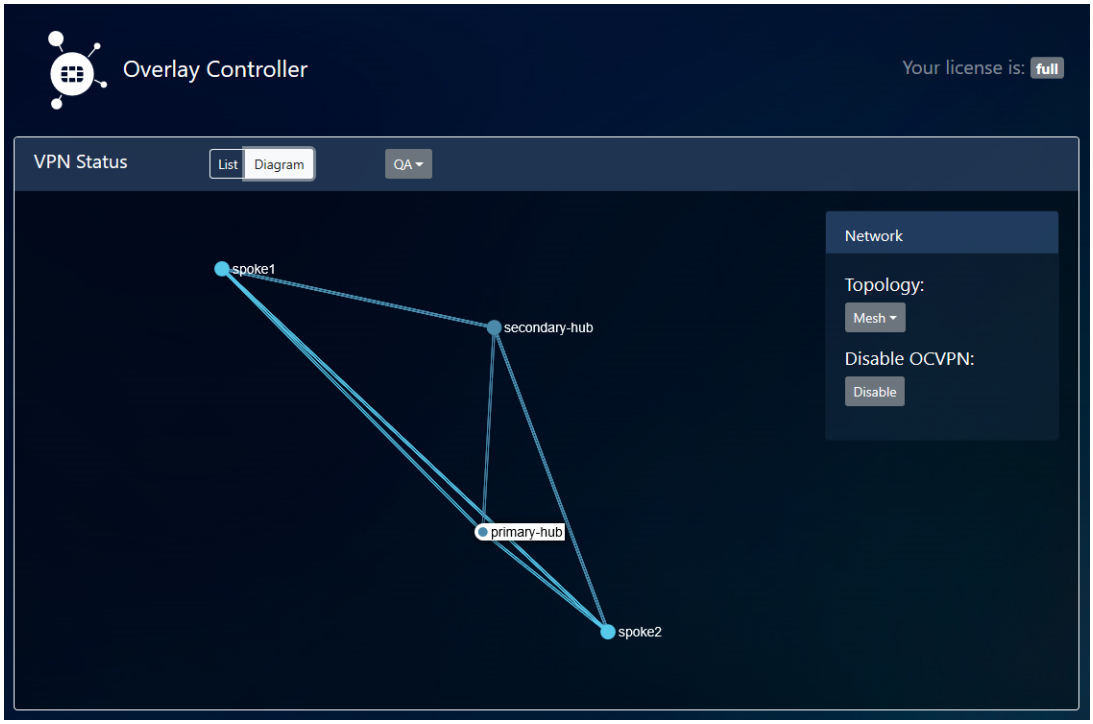

Troubleshooting OCVPN

This document includes troubleshooting steps for the following OCVPN network topologies:

- Full mesh OCVPN.
- Hub-spoke OCVPN with ADVPN shortcut.
- Hub-spoke OCVPN with inter-overlay source NAT.

For OCVPN configurations in other network topologies, see the other OCVPN topics.

Troubleshooting full mesh network topology

- Branch_1 # `diagnose vpn ocvpn status`

```
Current State        : Registered
Topology             : Full-Mesh
Role                 : Spoke
Server Status        : Up
Registration time    : Thu Feb 28 18:42:25 2019
Update time          : Thu Feb 28 15:57:18 2019
Poll time            : Fri Mar  1 15:02:28 2019
```

- Branch_1 # `diagnose vpn ocvpn show-meta`

```
Topology :: auto
License  :: full
Members  :: 3
Max-free :: 3
```

- Branch_1 # `diagnose vpn ocvpn show-overlays`

```
QA
PM
```

- Branch_1 # `diagnose vpn ocvpn show-members`

```
Member: { "SN": "FG100D3G15801621", "IPv4": "172.16.200.1", "port": "500", "slot": 1000,
"overlay": [ { "id": 0, "name": "QA", "subnets": [ "10.1.100.0\/255.255.255.0" ], "ip_
range": "0.0.0.0-0.0.0.0" }, { "id": 1, "name": "PM", "subnets": [
"10.2.100.0\/255.255.255.0" ], "ip_range": "0.0.0.0-0.0.0.0" } ], "Name": "FortiGate-
100D", "topology_role": "spoke" }
Member: { "SN": "FG900D3915800083", "IPv4": "172.16.200.4", "port": "500", "slot": 1001,
"overlay": [ { "id": 0, "name": "QA", "subnets": [ "172.16.101.0\/255.255.255.0" ], "ip_
range": "0.0.0.0-0.0.0.0" }, { "id": 1, "name": "PM", "subnets": [
"172.16.102.0\/255.255.255.0" ], "ip_range": "0.0.0.0-0.0.0.0" } ], "Name": "Branch3",
"topology_role": "spoke" }
Member: { "SN": "FGT51E3U16001314", "IPv4": "172.16.200.199", "port": "500", "slot":
1002, "overlay": [ { "id": 0, "name": "QA", "subnets": [ "192.168.4.0\/255.255.255.0" ],
"ip_range": "0.0.0.0-0.0.0.0" }, { "id": 1, "name": "PM", "subnets": [
"192.168.5.0\/255.255.255.0" ], "ip_range": "0.0.0.0-0.0.0.0" } ], "Name": "Branch2",
"topology_role": "spoke" }
```

- Branch_1 # `diagnose vpn tunnel list`

```
list all ipsec tunnel in vd 0
------------------------------------------------------
name=_OCVPN2-3.1 ver=2 serial=4 172.16.200.1:0->172.16.200.199:0 dst_mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc  accept_traffic=1

proxyid_num=2 child_num=0 refcnt=13 ilast=7 olast=0 ad=/0
stat: rxp=0 txp=7 rxb=0 txb=588
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=6
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-3.1 proto=0 sa=1 ref=2 serial=8 auto-negotiate
  src: 0:10.1.100.0-10.1.100.255:0
  dst: 0:192.168.4.0-192.168.4.255:0
  SA:  ref=3 options=18627 type=00 soft=0 mtu=1438 expire=42923/0B replaywin=2048
       seqno=8 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42931/43200
  dec: spi=c34bb752 esp=aes key=16 3c5ceeff3cac1eaa2702b5ccb713ab9b
       ah=sha1 key=20 5903e358b3d8938ee64f0412887a0fe741ccb105
  enc: spi=b5bd4fe1 esp=aes key=16 8ae97a8abe24dae725d614d2a6efdcb0
       ah=sha1 key=20 9ec200d9c0cef9e1b7cf76e05dbf344c70f53214
  dec:pkts/bytes=0/0, enc:pkts/bytes=7/1064
proxyid=_OCVPN2-3.1 proto=0 sa=0 ref=2 serial=1 auto-negotiate
  src: 0:10.1.100.0/255.255.255.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
------------------------------------------------------
name=_OCVPN2-4.1 ver=2 serial=6 172.16.200.1:0->172.16.200.4:0 dst_mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc  accept_traffic=1

proxyid_num=2 child_num=0 refcnt=11 ilast=19 olast=19 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
```

```
proxyid=_OCVPN2-4.1 proto=0 sa=1 ref=2 serial=7 auto-negotiate
  src: 0:10.1.100.0-10.1.100.255:0
  dst: 0:172.16.101.0-172.16.101.255:0
  SA:  ref=3 options=18627 type=00 soft=0 mtu=1438 expire=42911/0B replaywin=2048
       seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42931/43200
  dec: spi=c34bb750 esp=aes key=16 8c9844a8bcd3fda6c7bd8a4f2ec81ef1
       ah=sha1 key=20 680c7144346f5b52126cbad9f325821b048c7192
  enc: spi=f2d1f2d4 esp=aes key=16 f9625fc8590152829eb39eecab3a3999
       ah=sha1 key=20 5df8447416da541fa54dde9fa3e5c35fbfc4723f
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
proxyid=_OCVPN2-4.1 proto=0 sa=0 ref=2 serial=1 auto-negotiate
  src: 0:10.1.100.0/255.255.255.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
------------------------------------------------------
name=_OCVPN2-3.2 ver=2 serial=3 172.16.200.1:0->172.16.200.199:0 dst_mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc  accept_traffic=1

proxyid_num=2 child_num=0 refcnt=11 ilast=6 olast=6 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-3.2 proto=0 sa=1 ref=2 serial=8 auto-negotiate
  src: 0:10.2.100.0-10.2.100.255:0
  dst: 0:192.168.5.0-192.168.5.255:0
  SA:  ref=3 options=18627 type=00 soft=0 mtu=1438 expire=42923/0B replaywin=2048
       seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42930/43200
  dec: spi=c34bb753 esp=aes key=16 58ddfad9a3699f1c49f3a9f369145c28
       ah=sha1 key=20 e749c7e6a7aaff119707c792eb73cd975127873b
  enc: spi=b5bd4fe2 esp=aes key=16 8f2366e653f5f9ad6587be1ce1905764
       ah=sha1 key=20 5347bf24e51219d483c0f7b058eceab202026204
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
proxyid=_OCVPN2-3.2 proto=0 sa=0 ref=2 serial=1 auto-negotiate
  src: 0:10.2.100.0/255.255.255.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
------------------------------------------------------
name=_OCVPN2-4.2 ver=2 serial=5 172.16.200.1:0->172.16.200.4:0 dst_mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc  accept_traffic=1

proxyid_num=2 child_num=0 refcnt=11 ilast=17 olast=17 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-4.2 proto=0 sa=1 ref=2 serial=7 auto-negotiate
  src: 0:10.2.100.0-10.2.100.255:0
  dst: 0:172.16.102.0-172.16.102.255:0
  SA:  ref=3 options=18627 type=00 soft=0 mtu=1438 expire=42905/0B replaywin=2048
       seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42927/43200
  dec: spi=c34bb751 esp=aes key=16 41449ee5ea43d3e1f80df05fc632cd44
       ah=sha1 key=20 3ca2aea1c8764f35ccf987cdeca7cf6eb54331fb
  enc: spi=f2d1f2d5 esp=aes key=16 9010dd57e502c6296b27a4649a45a6ba
       ah=sha1 key=20 caf86a176ce04464221543f15fc3c63fc573b8ee
```

```
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
proxyid=_OCVPN2-4.2 proto=0 sa=0 ref=2 serial=1 auto-negotiate
  src: 0:10.2.100.0/255.255.255.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
```

- Branch_1 # `get router info routing-table all`

```
Routing table for VRF=0
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
       O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
       * - candidate default

S*      0.0.0.0/0 [10/0] via 172.16.200.254, port1
C       10.1.100.0/24 is directly connected, dmz
C       10.2.100.0/24 is directly connected, loop
C       11.101.1.0/24 is directly connected, wan1
C       11.102.1.0/24 is directly connected, wan2
S       192.168.5.0/24 [20/0] is directly connected, _OCVPN2-3.2
C       172.16.200.0/24 is directly connected, port1
S       172.16.101.0/24 [20/0] is directly connected, _OCVPN2-4.1
S       172.16.102.0/24 [20/0] is directly connected, _OCVPN2-4.2
S       192.168.4.0/24 [20/0] is directly connected, _OCVPN2-3.1
```

Troubleshooting hub-spoke with ADVPN shortcut

- Primary-Hub # `diagnose vpn ocvpn status`

```
Current State        : Registered
Topology             : Dual-Hub-Spoke
Role                 : Primary-Hub
Server Status        : Up
Registration time    : Sat Mar  2 11:31:54 2019
Poll time            : Sat Mar  2 11:46:02 2019
```

- Spoke1 # `diagnose vpn ocvpn status`

```
Current State        : Registered
Topology             : Dual-Hub-Spoke
Role                 : Spoke
Server Status        : Up
Registration time    : Sat Mar  2 11:41:22 2019
Poll time            : Sat Mar  2 11:46:44 2019
```

- Primary-Hub # `diagnose vpn ocvpn show-members`

```
Member: { "sn": "FG900D3915800083", "ip_v4": "172.16.200.4", "port": 500, "slot": 0,
"overlay": [ { "id": 0, "name": "QA", "subnets": [ "172.16.101.0\/255.255.255.0" ], "ip_
range": "0.0.0.0-0.0.0.0" }, { "id": 1, "name": "PM", "subnets": [
"172.16.102.0\/255.255.255.0" ], "ip_range": "0.0.0.0-0.0.0.0" } ], "name": "Primary-
Hub", "topology_role": "primary_hub", "eap": "disable", "auto_discovery": "enable" }
Member: { "sn": "FG100D3G15828488", "ip_v4": "172.16.200.2", "port": 500, "slot": 1,
"overlay": [ { "id": 0, "name": "QA", "subnets": [ "172.16.101.0\/255.255.255.0" ], "ip_
range": "0.0.0.0-0.0.0.0" }, { "id": 1, "name": "PM", "subnets": [
"172.16.102.0\/255.255.255.0" ], "ip_range": "0.0.0.0-0.0.0.0" } ], "name": "Secondary-
Hub", "topology_role": "secondary_hub", "eap": "disable", "auto_discovery": "enable" }
```

```
Member: { "sn": "FG100D3G15801621", "ip_v4": "172.16.200.1", "port": 500, "slot": 1000,
"overlay": [ { "id": 0, "name": "QA", "subnets": [ "10.1.100.0\/255.255.255.0" ], "ip_
range": "0.0.0.0-0.0.0.0" }, { "id": 1, "name": "PM", "subnets": [
"10.2.100.0\/255.255.255.0" ], "ip_range": "0.0.0.0-0.0.0.0" } ], "name": "Spoke1",
"topology_role": "spoke" }
Member: { "sn": "FGT51E3U16001314", "ip_v4": "172.16.200.3", "port": 500, "slot": 1001,
"overlay": [ { "id": 0, "name": "QA", "subnets": [ "192.168.4.0\/255.255.255.0" ], "ip_
range": "0.0.0.0-0.0.0.0" }, { "id": 1, "name": "PM", "subnets": [
"192.168.5.0\/255.255.255.0" ], "ip_range": "0.0.0.0-0.0.0.0" } ], "name": "Spoke2",
"topology_role": "spoke" }
```

- Primary-Hub # `diagnose vpn ocvpn show-meta`

```
Topology :: auto
License  :: full
Members  :: 4
Max-free :: 3
```

- Primary-Hub # `diagnose vpn ocvpn show-overlays`

```
QA
PM
```

- Spoke1 # `diagnose vpn tunnel list`

```
list all ipsec tunnel in vd 0
------------------------------------------------------
name=_OCVPN2-0.0 ver=2 serial=6 172.16.200.1:0->172.16.200.4:0 dst_mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc  accept_traffic=1

proxyid_num=1 child_num=0 refcnt=11 ilast=0 olast=0 ad=r/2
stat: rxp=1 txp=34 rxb=152 txb=2856
dpd: mode=on-idle on=1 idle=20000ms retry=3 count=0 seqno=46
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-0.0 proto=0 sa=1 ref=2 serial=1 auto-negotiate adr
  src: 0:10.1.100.0/255.255.255.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=3 options=1a227 type=00 soft=0 mtu=1438 expire=42895/0B replaywin=2048
       seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42901/43200
  dec: spi=048477c7 esp=aes key=16 240e064c0f1c980ca31980b9e7605c9d
       ah=sha1 key=20 6ff022cbebcaff4c5de62eefb2e6180c40a3adb2
  enc: spi=dfcffa86 esp=aes key=16 862208de164a02af377756c2bcabd588
       ah=sha1 key=20 af6e54781fd42d7a2ba2119ec95d0f95629c8448
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
------------------------------------------------------
name=_OCVPN2-1.0 ver=2 serial=8 172.16.200.1:0->172.16.200.2:0 dst_mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc  accept_traffic=0

proxyid_num=1 child_num=0 refcnt=10 ilast=934 olast=934 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=20000ms retry=3 count=0 seqno=1
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-1.0 proto=0 sa=0 ref=2 serial=1 auto-negotiate adr
  src: 0:10.1.100.0/255.255.255.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
```

```
---------------------------------------------------
name=_OCVPN2-0.1 ver=2 serial=5 172.16.200.1:0->172.16.200.4:0 dst_mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc  accept_traffic=1

proxyid_num=1 child_num=0 refcnt=11 ilast=12 olast=12 ad=r/2
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=1 idle=20000ms retry=3 count=0 seqno=46
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-0.1 proto=0 sa=1 ref=2 serial=1 auto-negotiate adr
  src: 0:10.2.100.0/255.255.255.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=3 options=1a227 type=00 soft=0 mtu=1438 expire=42895/0B replaywin=2048
       seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42901/43200
  dec: spi=048477c8 esp=aes key=16 701ec608767f4988b76c2f662464e654
       ah=sha1 key=20 93c65d106dc610d7ee3f04487f08601a9e00ffdd
  enc: spi=dfcffa87 esp=aes key=16 02b2d04dce3d81ebab69e128d45cb7ca
       ah=sha1 key=20 4a9283847f852c83a75691fad44d07d8409a2267
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
---------------------------------------------------
name=_OCVPN2-1.1 ver=2 serial=7 172.16.200.1:0->172.16.200.2:0 dst_mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc  accept_traffic=0

proxyid_num=1 child_num=0 refcnt=10 ilast=934 olast=934 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=20000ms retry=3 count=0 seqno=1
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-1.1 proto=0 sa=0 ref=2 serial=1 auto-negotiate adr
  src: 0:10.2.100.0/255.255.255.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
```

- Spoke1 # `get router info routing-table all`

```
Routing table for VRF=0
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
       O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
       * - candidate default

S*      0.0.0.0/0 [10/0] via 172.16.200.254, port1
C       10.1.100.0/24 is directly connected, dmz
C       10.2.100.0/24 is directly connected, loop
C       11.101.1.0/24 is directly connected, wan1
C       11.102.1.0/24 is directly connected, wan2
S       172.16.102.0/24 [20/0] is directly connected, _OCVPN2-0.1
C       172.16.200.0/24 is directly connected, port1
S       172.16.101.0/24 [20/0] is directly connected, _OCVPN2-0.0
S       192.168.4.0/24 [20/0] is directly connected, _OCVPN2-0.0
S       192.168.5.0/24 [20/0] is directly connected, _OCVPN2-0.1
```

- Generate traffic from spoke1 to spoke2 to trigger the ADVPN shortcut and check the VPN tunnel and routing-table again on spoke1.

```
branch1 # diagnose vpn tunnel list
list all ipsec tunnel in vd 0
------------------------------------------------------
name=_OCVPN2-0.0_0 ver=2 serial=a 172.16.200.1:0->172.16.200.3:0 dst_mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/720 options
[02d0]=create_dev no-sysctl rgwy-chg frag-rfc  accept_traffic=1

 parent=_OCVPN2-0.0 index=0
proxyid_num=1 child_num=0 refcnt=14 ilast=0 olast=0 ad=r/2
stat: rxp=7 txp=7 rxb=1064 txb=588
dpd: mode=on-idle on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-0.0 proto=0 sa=1 ref=2 serial=1 auto-negotiate add-route adr
  src: 0:10.1.100.0-10.1.100.255:0
  dst: 0:192.168.4.0-192.168.4.255:0
  SA:  ref=3 options=1a227 type=00 soft=0 mtu=1438 expire=43180/0B replaywin=2048
       seqno=8 esn=0 replaywin_lastseq=00000008 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=43187/43200
  dec: spi=048477c9 esp=aes key=16 27c35d53793013ef24cf887561e9f313
       ah=sha1 key=20 2c8cfd328c3b29104db0ca74a00c6063f46cafe4
  enc: spi=fb9e13fd esp=aes key=16 9d0d3bf6c84b7ddaf9d9196fe74002ed
       ah=sha1 key=20 d1f541db787dea384c6a4df16fc228abeb7ae334
  dec:pkts/bytes=7/588, enc:pkts/bytes=7/1064
------------------------------------------------------
name=_OCVPN2-0.0 ver=2 serial=6 172.16.200.1:0->172.16.200.4:0 dst_mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc  accept_traffic=1

proxyid_num=1 child_num=1 refcnt=12 ilast=7 olast=7 ad=r/2
stat: rxp=2 txp=35 rxb=304 txb=2940
dpd: mode=on-idle on=1 idle=20000ms retry=3 count=0 seqno=65
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-0.0 proto=0 sa=1 ref=2 serial=1 auto-negotiate adr
  src: 0:10.1.100.0/255.255.255.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=3 options=1a227 type=00 soft=0 mtu=1438 expire=42500/0B replaywin=2048
       seqno=2 esn=0 replaywin_lastseq=00000002 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42901/43200
  dec: spi=048477c7 esp=aes key=16 240e064c0f1c980ca31980b9e7605c9d
       ah=sha1 key=20 6ff022cbebcaff4c5de62eefb2e6180c40a3adb2
  enc: spi=dfcffa86 esp=aes key=16 862208de164a02af377756c2bcabd588
       ah=sha1 key=20 af6e54781fd42d7a2ba2119ec95d0f95629c8448
  dec:pkts/bytes=1/84, enc:pkts/bytes=1/152
------------------------------------------------------
name=_OCVPN2-1.0 ver=2 serial=8 172.16.200.1:0->172.16.200.2:0 dst_mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc  accept_traffic=0

proxyid_num=1 child_num=0 refcnt=10 ilast=1328 olast=1328 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=20000ms retry=3 count=0 seqno=1
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-1.0 proto=0 sa=0 ref=2 serial=1 auto-negotiate adr
  src: 0:10.1.100.0/255.255.255.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
------------------------------------------------------
```

```
name=_OCVPN2-0.1 ver=2 serial=5 172.16.200.1:0->172.16.200.4:0 dst_mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc  accept_traffic=1

proxyid_num=1 child_num=0 refcnt=11 ilast=5 olast=5 ad=r/2
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=1 idle=20000ms retry=3 count=0 seqno=66
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-0.1 proto=0 sa=1 ref=2 serial=1 auto-negotiate adr
  src: 0:10.2.100.0/255.255.255.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=3 options=1a227 type=00 soft=0 mtu=1438 expire=42500/0B replaywin=2048
       seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42901/43200
  dec: spi=048477c8 esp=aes key=16 701ec608767f4988b76c2f662464e654
       ah=sha1 key=20 93c65d106dc610d7ee3f04487f08601a9e00ffdd
  enc: spi=dfcffa87 esp=aes key=16 02b2d04dce3d81ebab69e128d45cb7ca
       ah=sha1 key=20 4a9283847f852c83a75691fad44d07d8409a2267
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
-----------------------------------------------------
name=_OCVPN2-1.1 ver=2 serial=7 172.16.200.1:0->172.16.200.2:0 dst_mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc  accept_traffic=0

proxyid_num=1 child_num=0 refcnt=10 ilast=1328 olast=1328 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=20000ms retry=3 count=0 seqno=1
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-1.1 proto=0 sa=0 ref=2 serial=1 auto-negotiate adr
  src: 0:10.2.100.0/255.255.255.0:0
  dst: 0:0.0.0.0/0.0.0.0:0


Routing table for VRF=0
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
       O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
       * - candidate default

S*      0.0.0.0/0 [10/0] via 172.16.200.254, port1
C       10.1.100.0/24 is directly connected, dmz
C       10.2.100.0/24 is directly connected, loop
C       11.101.1.0/24 is directly connected, wan1
C       11.102.1.0/24 is directly connected, wan2
S       172.16.102.0/24 [20/0] is directly connected, _OCVPN2-0.1
C       172.16.200.0/24 is directly connected, port1
S       172.16.101.0/24 [20/0] is directly connected, _OCVPN2-0.0
S       192.168.4.0/24 [15/0] via 172.16.200.3, _OCVPN2-0.0_0
S       192.168.5.0/24 [20/0] is directly connected, _OCVPN2-0.1
```

- Simulate the primary hub being unavailable where all spokes' dialup VPN tunnels will switch to the secondary hub, to check VPN tunnel status and routing-table.

```
list all ipsec tunnel in vd 0
-----------------------------------------------------
```

```
name=_OCVPN2-0.0 ver=2 serial=6 172.16.200.1:0->172.16.200.4:0 dst_mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc  accept_traffic=0

proxyid_num=1 child_num=0 refcnt=10 ilast=25 olast=25 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=20000ms retry=3 count=0 seqno=82
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-0.0 proto=0 sa=0 ref=2 serial=1 auto-negotiate adr
  src: 0:10.1.100.0/255.255.255.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
-----------------------------------------------------
name=_OCVPN2-1.0 ver=2 serial=8 172.16.200.1:0->172.16.200.2:0 dst_mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc  accept_traffic=1

proxyid_num=1 child_num=0 refcnt=11 ilast=14 olast=14 ad=r/2
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=1 idle=20000ms retry=3 count=0 seqno=9
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-1.0 proto=0 sa=1 ref=2 serial=1 auto-negotiate adr
  src: 0:10.1.100.0/255.255.255.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=3 options=1a227 type=00 soft=0 mtu=1438 expire=42723/0B replaywin=2048
       seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42898/43200
  dec: spi=048477cd esp=aes key=16 9bb363a32378b5897cd42890c92df811
       ah=sha1 key=20 2ed40583b9544e37867349b4adc7c013024d7e17
  enc: spi=f345fb42 esp=aes key=16 3ea31dff3310b245700a131db4565851
       ah=sha1 key=20 522862dfb232514b845e436133b148da0e67b7c4
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
-----------------------------------------------------
name=_OCVPN2-0.1 ver=2 serial=5 172.16.200.1:0->172.16.200.4:0 dst_mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc  accept_traffic=0

proxyid_num=1 child_num=0 refcnt=10 ilast=19 olast=19 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=20000ms retry=3 count=0 seqno=83
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-0.1 proto=0 sa=0 ref=2 serial=1 auto-negotiate adr
  src: 0:10.2.100.0/255.255.255.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
-----------------------------------------------------
name=_OCVPN2-1.1 ver=2 serial=7 172.16.200.1:0->172.16.200.2:0 dst_mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc  accept_traffic=1

proxyid_num=1 child_num=0 refcnt=11 ilast=12 olast=12 ad=r/2
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=1 idle=20000ms retry=3 count=0 seqno=9
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-1.1 proto=0 sa=1 ref=2 serial=1 auto-negotiate adr
  src: 0:10.2.100.0/255.255.255.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=3 options=1a227 type=00 soft=0 mtu=1438 expire=42728/0B replaywin=2048
```

```
      seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42902/43200
  dec: spi=048477cf esp=aes key=16 b6f0ca7564abcd8559b5b0ebb3fd04c1
       ah=sha1 key=20 4130d040554b39daca72adac7583b9cc83cce3c8
  enc: spi=f345fb43 esp=aes key=16 727582f20fcedff884ba693ed2164bcd
       ah=sha1 key=20 b0a625803fde701ed9d28d256079e908954b7fc8
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0


Routing table for VRF=0
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
       O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
       * - candidate default

S*      0.0.0.0/0 [10/0] via 172.16.200.254, port1
C       10.1.100.0/24 is directly connected, dmz
C       10.2.100.0/24 is directly connected, loop
C       11.101.1.0/24 is directly connected, wan1
C       11.102.1.0/24 is directly connected, wan2
S       172.16.102.0/24 [21/0] is directly connected, _OCVPN2-1.1
C       172.16.200.0/24 is directly connected, port1
S       172.16.101.0/24 [21/0] is directly connected, _OCVPN2-1.0
S       192.168.4.0/24 [21/0] is directly connected, _OCVPN2-1.0
S       192.168.5.0/24 [21/0] is directly connected, _OCVPN2-1.1
```

Troubleshooting hub-spoke with inter-overlay source NAT

- Primary-Hub # `diagnose vpn ocvpn status`

```
Current State        : Registered
Topology             : Dual-Hub-Spoke
Role                 : Primary-Hub
Server Status        : Up
Registration time    : Sat Mar  2 11:31:54 2019
Update time          : Sat Mar  2 13:57:05 2019
Poll time            : Sat Mar  2 14:03:31 2019
```

- Spoke1 # `diagnose vpn ocvpn status`

```
Current State        : Registered
Topology             : Dual-Hub-Spoke
Role                 : Spoke
Server Status        : Up
Registration time    : Sat Mar  2 13:58:01 2019
Poll time            : Sat Mar  2 14:04:22 2019
```

- Primary-Hub # `diagnose vpn ocvpn show-members`

```
Member: { "sn": "FG900D3915800083", "ip_v4": "172.16.200.4", "port": 500, "slot": 0,
"overlay": [ { "id": 0, "name": "QA", "subnets": [ "172.16.101.0\/255.255.255.0" ], "ip_
range": "172.16.101.100-172.16.101.200" }, { "id": 1, "name": "PM", "subnets": [
"172.16.102.0\/255.255.255.0" ], "ip_range": "172.16.102.100-172.16.102.200" } ],
"name": "Primary-Hub", "topology_role": "primary_hub", "eap": "disable", "auto_
discovery": "enable" }
Member: { "sn": "FG100D3G15828488", "ip_v4": "172.16.200.2", "port": 500, "slot": 1,
```

```
"overlay": [ { "id": 0, "name": "QA", "subnets": [ "172.16.101.0\/255.255.255.0" ], "ip_
range": "0.0.0.0-0.0.0.0" }, { "id": 1, "name": "PM", "subnets": [
"172.16.102.0\/255.255.255.0" ], "ip_range": "0.0.0.0-0.0.0.0" } ], "name": "Secondary-
Hub", "topology_role": "secondary_hub", "eap": "disable", "auto_discovery": "enable" }
Member: { "sn": "FGT51E3U16001314", "ip_v4": "172.16.200.3", "port": 500, "slot": 1001,
"overlay": [ { "id": 0, "name": "QA", "subnets": [ "192.168.4.0\/255.255.255.0" ], "ip_
range": "0.0.0.0-0.0.0.0" }, { "id": 1, "name": "PM", "subnets": [
"192.168.5.0\/255.255.255.0" ], "ip_range": "0.0.0.0-0.0.0.0" } ], "name": "Spoke2",
"topology_role": "spoke" }
Member: { "sn": "FG100D3G15801621", "ip_v4": "172.16.200.1", "port": 500, "slot": 1000,
"overlay": [ { "id": 0, "name": "QA", "subnets": [ "10.1.100.0\/255.255.255.0" ], "ip_
range": "0.0.0.0-0.0.0.0" }, { "id": 1, "name": "PM", "subnets": [
"10.2.100.0\/255.255.255.0" ], "ip_range": "0.0.0.0-0.0.0.0" } ], "name": "Spoke1",
"topology_role": "spoke" }
```

- Primary-Hub # `diagnose vpn ocvpn show-meta`

```
Topology :: auto
License  :: full
Members  :: 4
Max-free :: 3
```

- Primary-Hub # `diagnose vpn ocvpn show-overlays`

```
QA
PM
```

- Spoke1 # `diagnose vpn tunnel list`

```
list all ipsec tunnel in vd 0
------------------------------------------------------
name=_OCVPN2-0.0 ver=2 serial=c 172.16.200.1:0->172.16.200.4:0 dst_mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc  accept_traffic=1

proxyid_num=3 child_num=0 refcnt=13 ilast=17 olast=17 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=1 idle=20000ms retry=3 count=0 seqno=29
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-0.0 proto=0 sa=1 ref=2 serial=1 auto-negotiate
  src: 0:10.1.100.0/255.255.255.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=3 options=18227 type=00 soft=0 mtu=1438 expire=42299/0B replaywin=2048
       seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42899/43200
  dec: spi=0484795d esp=aes key=16 10eeb76fadd49f00c333350d83509095
       ah=sha1 key=20 971bde5dcfca7e52fd1573cb3489e9c855f6154e
  enc: spi=dfcffaaa esp=aes key=16 d07a4dd683ee093af2dca9485aa436eb
       ah=sha1 key=20 65369be35d5ecad8cae63557318419cd6005c230
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
proxyid=_OCVPN2-0.0_nat proto=0 sa=1 ref=2 serial=3 auto-negotiate
  src: 0:172.16.101.101-172.16.101.101:0
  dst: 0:0.0.0.0-255.255.255.255:0
  SA:  ref=3 options=18627 type=00 soft=0 mtu=1438 expire=42303/0B replaywin=2048
       seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42898/43200
  dec: spi=04847961 esp=aes key=16 ea181036b02e8bc8711fb520b3e98a60
       ah=sha1 key=20 b3c449d96d5d3f090975087a62447f6918ce7930
```

```
  enc: spi=dfcffaac esp=aes key=16 f7ea5e42e9443698e6b8b32161ace40e
       ah=sha1 key=20 a7e36dd1ec0bdb6eff0aa66e442707427400c700
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
proxyid=_OCVPN2-0.0_nat proto=0 sa=0 ref=2 serial=2 auto-negotiate
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
-----------------------------------------------------
name=_OCVPN2-1.0 ver=2 serial=e 172.16.200.1:0->172.16.200.2:0 dst_mtu=0
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc  accept_traffic=1

proxyid_num=2 child_num=0 refcnt=10 ilast=599 olast=599 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-1.0 proto=0 sa=0 ref=2 serial=1 auto-negotiate
  src: 0:10.1.100.0/255.255.255.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
proxyid=_OCVPN2-1.0_nat proto=0 sa=0 ref=2 serial=2 auto-negotiate
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
-----------------------------------------------------
name=_OCVPN2-0.1 ver=2 serial=b 172.16.200.1:0->172.16.200.4:0 dst_mtu=1500
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc  accept_traffic=1

proxyid_num=3 child_num=0 refcnt=13 ilast=17 olast=17 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=1 idle=20000ms retry=3 count=0 seqno=29
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-0.1 proto=0 sa=1 ref=2 serial=1 auto-negotiate
  src: 0:10.2.100.0/255.255.255.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=3 options=18227 type=00 soft=0 mtu=1438 expire=42297/0B replaywin=2048
       seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42897/43200
  dec: spi=0484795e esp=aes key=16 106eaa95a2be64b566e7d1ca0aa88f6a
       ah=sha1 key=20 5dddfba7070b03d5a31931d41db06ff96e7bc542
  enc: spi=dfcffaab esp=aes key=16 29c774dbd7e54464ee298c381e71a94e
       ah=sha1 key=20 c3da7372789c0a53b3752e69baaba1a42d798820
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
proxyid=_OCVPN2-0.1_nat proto=0 sa=1 ref=2 serial=3 auto-negotiate
  src: 0:172.16.102.101-172.16.102.101:0
  dst: 0:0.0.0.0-255.255.255.255:0
  SA:  ref=3 options=18627 type=00 soft=0 mtu=1438 expire=42307/0B replaywin=2048
       seqno=1 esn=0 replaywin_lastseq=00000000 itn=0 qat=0
  life: type=01 bytes=0/0 timeout=42902/43200
  dec: spi=04847962 esp=aes key=16 b7daa5807cfa86906592a012a9d2478f
       ah=sha1 key=20 39c8bb4c9e3f1e9e451f22c58a172ff01155055d
  enc: spi=dfcffaad esp=aes key=16 2ecc644def4cebe6b0c4b7729da43d8e
       ah=sha1 key=20 469c6f319e83bd73468f55d430566afcd6215138
  dec:pkts/bytes=0/0, enc:pkts/bytes=0/0
proxyid=_OCVPN2-0.1_nat proto=0 sa=0 ref=2 serial=2 auto-negotiate
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
-----------------------------------------------------
```

```
name=_OCVPN2-1.1 ver=2 serial=d 172.16.200.1:0->172.16.200.2:0 dst_mtu=0
bound_if=11 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/528 options[0210]=create_dev
frag-rfc  accept_traffic=1

proxyid_num=2 child_num=0 refcnt=10 ilast=599 olast=599 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=_OCVPN2-1.1 proto=0 sa=0 ref=2 serial=1 auto-negotiate
  src: 0:10.2.100.0/255.255.255.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
proxyid=_OCVPN2-1.1_nat proto=0 sa=0 ref=2 serial=2 auto-negotiate
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
```

- Spoke1 # `get router info routing-table all`

```
Routing table for VRF=0
Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
       O - OSPF, IA - OSPF inter area
       N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
       E1 - OSPF external type 1, E2 - OSPF external type 2
       i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
       * - candidate default

S*      0.0.0.0/0 [10/0] via 172.16.200.254, port1
C       10.1.100.0/24 is directly connected, dmz
C       10.2.100.0/24 is directly connected, loop
C       11.101.1.0/24 is directly connected, wan1
C       11.102.1.0/24 is directly connected, wan2
S       172.16.101.0/24 [20/0] is directly connected, _OCVPN2-0.1
C       172.16.101.101/32 is directly connected, _OCVPN2-0.1
C       172.16.200.0/24 is directly connected, port1
S       172.16.102.0/24 [20/0] is directly connected, _OCVPN2-0.0
C       172.16.102.101/32 is directly connected, _OCVPN2-0.0
S       192.168.4.0/24 [20/0] is directly connected, _OCVPN2-0.0
S       192.168.5.0/24 [20/0] is directly connected, _OCVPN2-0.1
```

- Spoke1 # `show firewall policy`

```
 ..............................

    edit 9
        set name "_OCVPN2-1.1_nat"
        set uuid 3f7a84b8-3d36-51e9-ee97-8f418c91e666
        set srcintf "any"
        set dstintf "_OCVPN2-1.1"
        set srcaddr "all"
        set dstaddr "_OCVPN2-1.1_remote_networks"
        set action accept
        set schedule "always"
        set service "ALL"
        set comments "Generated by OCVPN Cloud Service."
        set nat enable
    next
    edit 12
        set name "_OCVPN2-1.0_nat"
```

```
        set uuid 3fafec98-3d36-51e9-80c0-5d99325bad83
        set srcintf "any"
        set dstintf "_OCVPN2-1.0"
        set srcaddr "all"
        set dstaddr "_OCVPN2-1.0_remote_networks"
        set action accept
        set schedule "always"
        set service "ALL"
        set comments "Generated by OCVPN Cloud Service."
        set nat enable
    next
.................................
```

ADVPN

Auto-Discovery VPN (ADVPN) allows the central hub to dynamically inform spokes about a better path for traffic between two spokes.

The following topics provide instructions on configuring ADVPN:

- IPsec VPN wizard hub-and-spoke ADVPN support on page 1248
- ADVPN with BGP as the routing protocol on page 1252
- ADVPN with OSPF as the routing protocol on page 1261
- ADVPN with RIP as the routing protocol on page 1270


IPsec VPN wizard hub-and-spoke ADVPN support

The IPsec Wizard can be used to create hub-and-spoke VPNs, with ADVPN enabled to establish tunnels between spokes.

The following example shows the steps in the wizard for configuring a hub and a spoke.


To configure the hub:

1. On the hub FortiGate, go to *VPN* > *IPsec Wizard*.

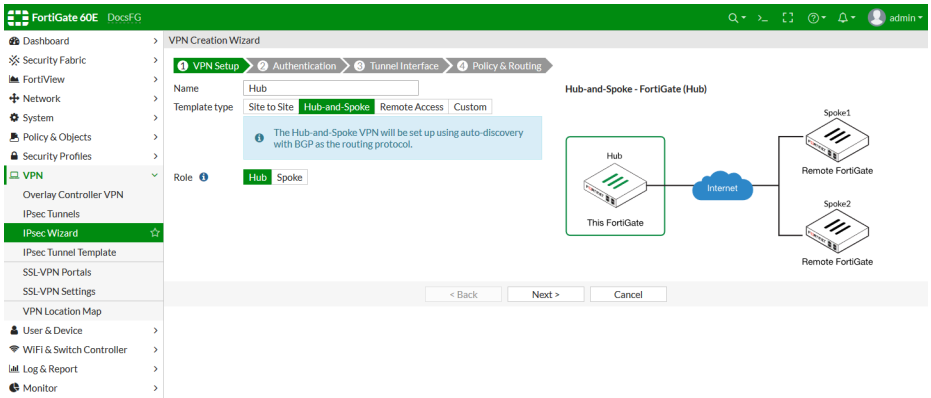


2. Enter a name, set the *Template Type* to *Hub-and-Spoke*, and set the *Role* to *Hub*.


3. Click *Next*.

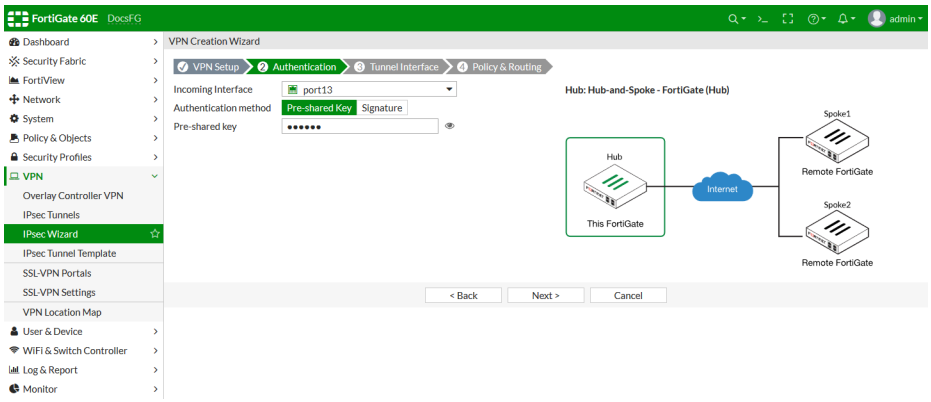

4. Select the *Incoming Interface* and configure the *Authentication method*.
5. Click *Next*.

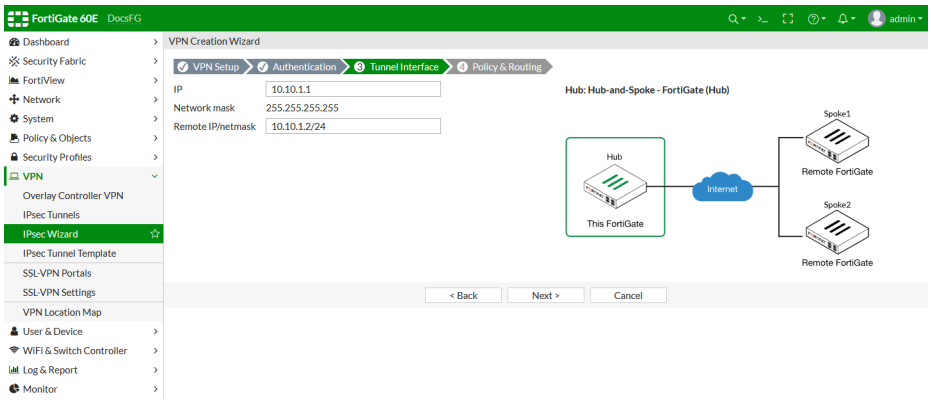


6. Set the *IP* address and *Remote IP/netmask*.
7. Click *Next*.

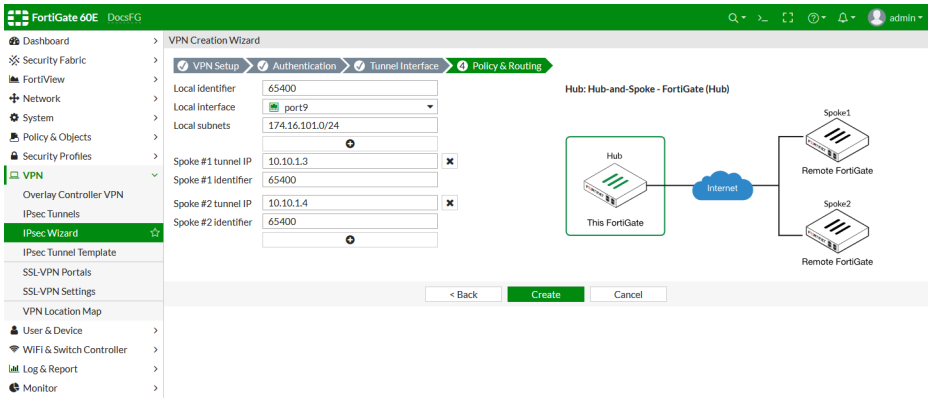

8. Configure the *Local identifier*, *Local interface*, and *Local subnets*, then configure the tunnel IP addresses and identifiers for the spokes.


9. Click *Create*.

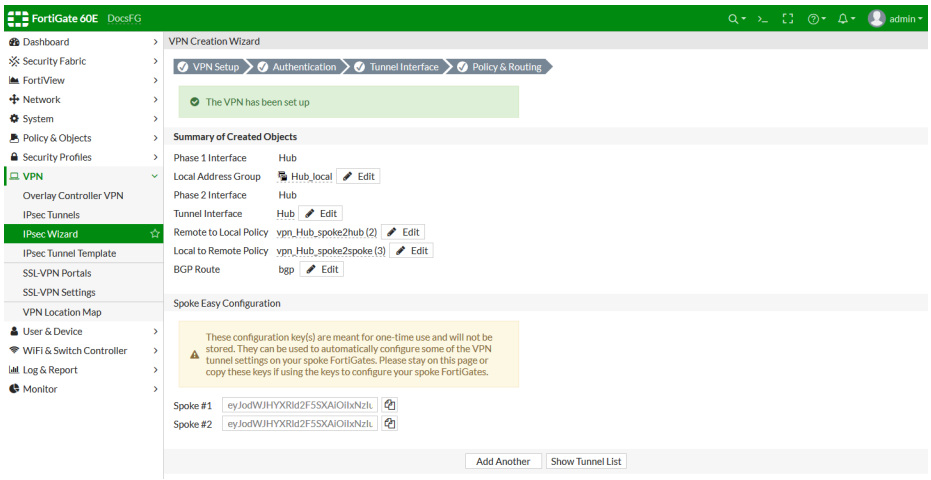


10. Review the summary to ensure that everything looks as expected.
11. Copy the spokes' easy configuration keys to a temporary location for use when configuring the spokes.

To configure a spoke:

1. On the spoke FortiGate, go to *VPN* > *IPsec Wizard*.

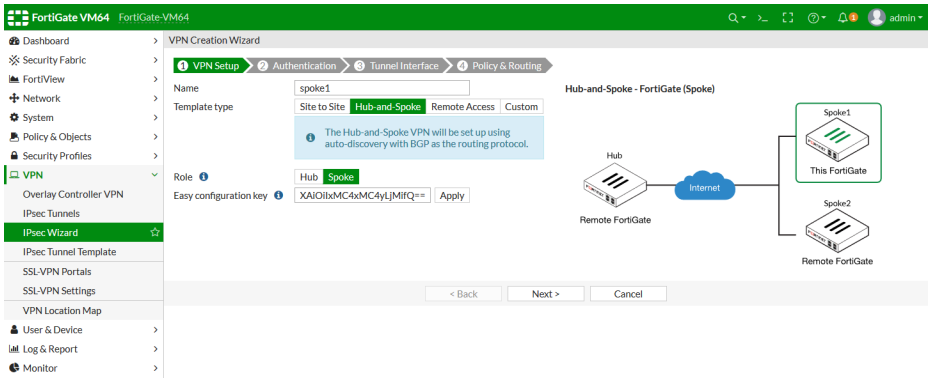


2. Enter a name, set the *Template Type* to *Hub-and-Spoke*, set the *Role* to *Spoke*, and paste in the requisite *Easy configuration key* that you saved when configuring the hub.
3. Click *Next*.

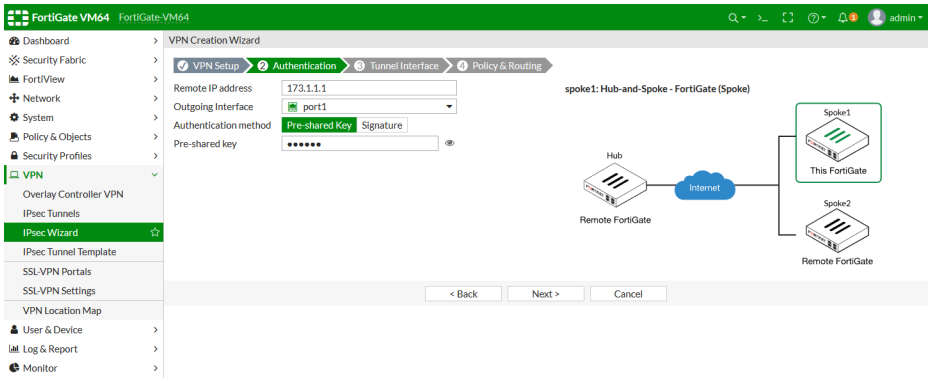


4. Set the *Remote IP address*, select the *Incoming Interface*, and configure the *Authentication method*.


5. Click *Next*.

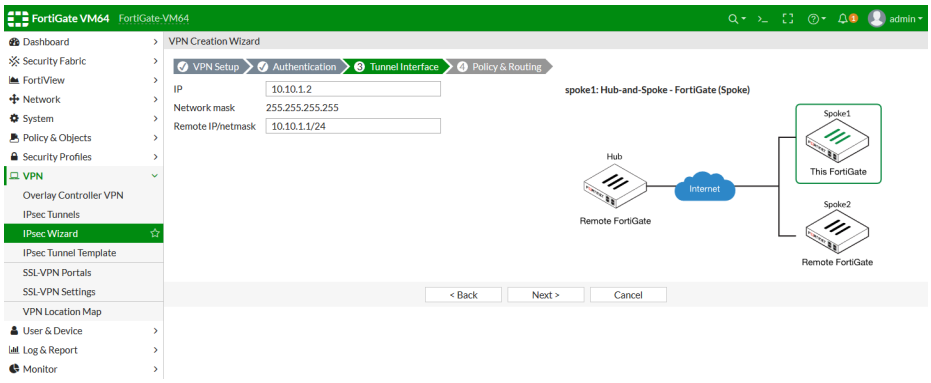

6. Set the *IP* address and *Remote IP/netmask*.
7. Click *Next*.

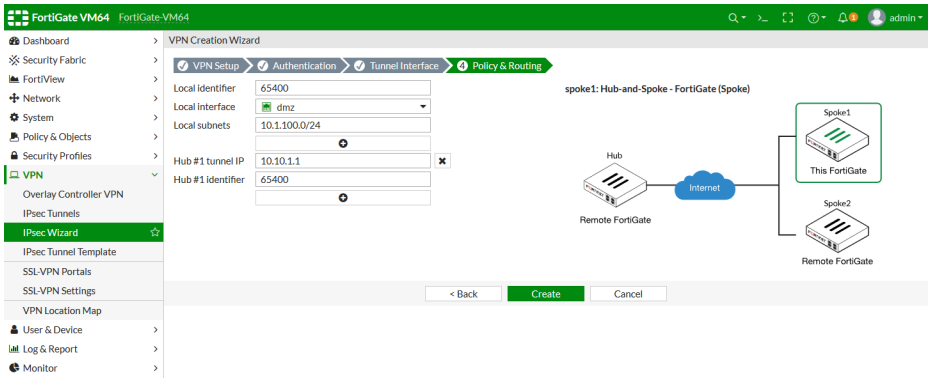


8. Configure the *Local identifier*, *Local interface*, and *Local subnets*, then configure the IP address and identifier of the hub FortiGate.
9. Click *Create*.

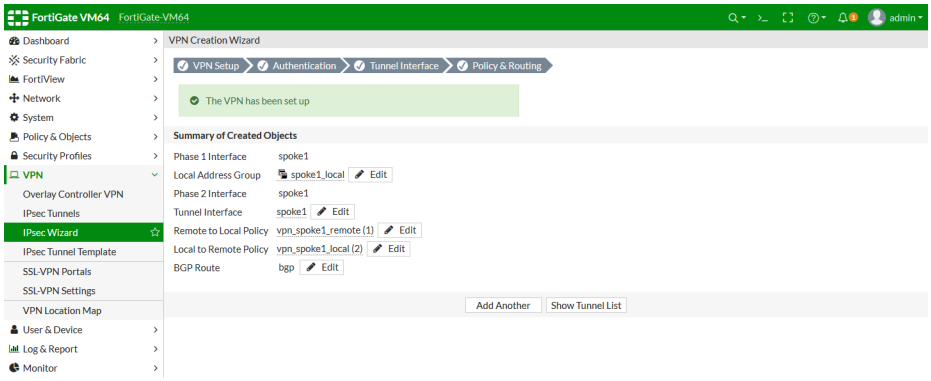

10. Review the summary to ensure that everything looks as expected.

To check the ADVPN shortcut with the IPsec monitor:


1. On either the hub or spoke FortiGate, go to *Monitor* > *IPsec Monitor*.

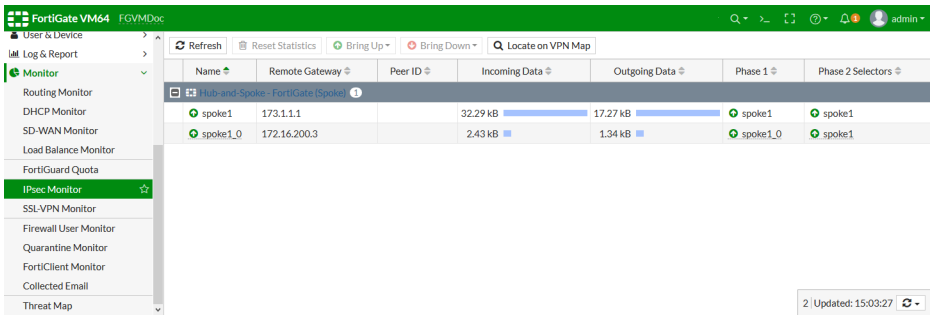

ADVPN with BGP as the routing protocol

This is a sample configuration of ADVPN with BGP as the routing protocol. The following options must be enabled for this configuration:

- On the hub FortiGate, IPsec phase1-interface `net-device disable` must be run.
- IBGP must be used between the hub and spoke FortiGates.
- `bgp neighbor-group/neighbor-range` must be reused.

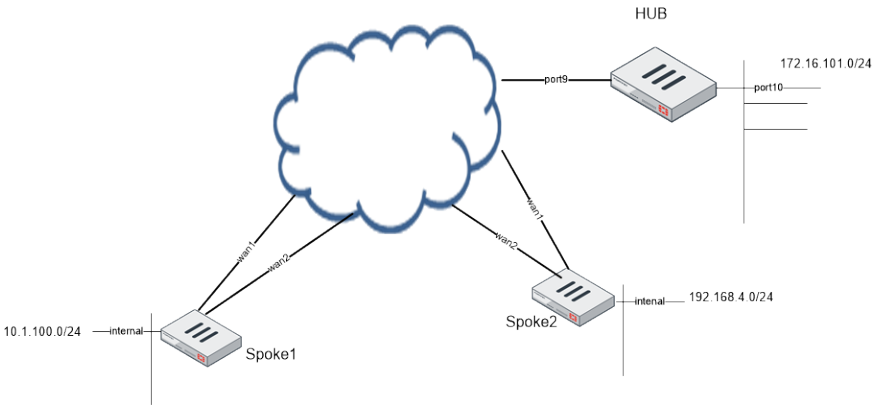

Because the GUI can only complete part of the configuration, we recommend using the CLI.

To configure ADVPN with BGP as the routing protocol using the CLI:

1. Configure hub FortiGate's WAN, internal interface, and static route.

```
config system interface
    edit "port9"
        set alias "WAN"
        set ip 22.1.1.1 255.255.255.0
    next
    edit "port10"
        set alias "Internal"
        set ip 172.16.101.1 255.255.255.0
    next
end
config router static
```

```
    edit 1
        set gateway 22.1.1.2
        set device "port9"
    next
end
```

2. Configure the hub FortiGate.
   a. Configure the hub FortiGate IPsec phase1-interface and phase2-interface.

```
config vpn ipsec phase1-interface
    edit "advpn-hub"
        set type dynamic
        set interface "port9"
        set peertype any
        set net-device disable
        set proposal aes128-sha256 aes256-sha256 3des-sha256 aes128-sha1 aes256-sha1
3des-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-sender enable
        set tunnel-search nexthop
        set psksecret sample
        set dpd-retryinterval 5
    next
end
config vpn ipsec phase2-interface
    edit "advpn-hub"
        set phase1name "advpn-hub"
        set proposal aes128-sha1 aes256-sha1 3des-sha1 aes128-sha256 aes256-sha256
3des-sha256
    next
end
```

   b. Configure the hub FortiGate firewall policy.

```
config firewall policy
    edit 1
        set name "spoke2hub"
        set srcintf "advpn-hub"
        set dstintf "port10"
        set srcaddr "all"
        set dstaddr "172.16.101.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "spoke2spoke"
        set srcintf "advpn-hub"
        set dstintf "advpn-hub"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

c. Configure the hub FortiGate's IPsec tunnel interface IP address.

```
config system interface
    edit "advpn-hub1"
        set ip 10.10.10.254 255.255.255.255
        set remote-ip 10.10.10.253 255.255.255.0
    next
end
```

d. Configure the hub FortiGate's BGP.

```
config router bgp
    set as 65412
    config neighbor-group
        edit "advpn"
            set link-down-failover enable
            set remote-as 65412
            set route-reflector-client enable
        next
    end
    config neighbor-range
        edit 1
            set prefix 10.10.10.0 255.255.255.0
            set neighbor-group "advpn"
        next
    end
    config network
        edit 1
            set prefix 172.16.101.0 255.255.255.0
        next
    end
end
```

3. Configure the spoke FortiGates.

a. Configure the spoke FortiGates' WAN, internal interfaces, and static routes.

i. Configure Spoke1.

```
config system interface
    edit "wan1"
        set alias "primary_WAN"
        set ip 15.1.1.2 255.255.255.0
    next
    edit "wan2"
        set alias "secondary_WAN"
        set ip 12.1.1.2 255.255.255.0
    next
    edit "internal"
        set ip 10.1.100.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 12.1.1.1
        set device "wan2"
        set distance 15
    next
    edit 2
        set gateway 15.1.1.1
```

```
        set device "wan1"
    next
end
```

ii. Configure the Spoke2.

```
config system interface
    edit "wan1"
        set alias "primary_WAN"
        set ip 13.1.1.2 255.255.255.0
    next
    edit "wan2"
        set alias "secondary_WAN"
        set ip 17.1.1.2 255.255.255.0
    next
    edit "internal"
        set ip 192.168.4.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 17.1.1.1
        set device "wan2"
        set distance 15
    next
    edit 2
        set gateway 13.1.1.1
        set device "wan1"
    next
end
```

b. Configure the spoke FortiGates' IPsec phase1-interface and phase2-interface.

i. Configure Spoke1.

```
config vpn ipsec phase1-interface
    edit "spoke1"
        set interface "wan1"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-receiver enable
        set remote-gw 22.1.1.1
        set psksecret sample
        set dpd-retryinterval 5
    next
    edit "spoke1_backup"
        set interface "wan2"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-receiver enable
        set remote-gw 22.1.1.1
        set monitor "spoke1"
        set psksecret sample
```

```
        set dpd-retryinterval 5
    next
end
config vpn ipsec phase2-interface
    edit "spoke1"
        set phase1name "spoke1"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256
aes128gcm aes256gcm chacha20poly1305
        set auto-negotiate enable
    next
    edit "spoke1_backup"
        set phase1name "spoke1_backup"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256
aes128gcm aes256gcm chacha20poly1305
        set auto-negotiate enable
    next
end
```

ii. Configure Spoke2.

```
config vpn ipsec phase1-interface
    edit "spoke2"
        set interface "wan1"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-receiver enable
        set remote-gw 22.1.1.1
        set psksecret sample
        set dpd-retryinterval 5
    next
    edit "spoke2_backup"
        set interface "wan2"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-receiver enable
        set remote-gw 22.1.1.1
        set monitor "spoke2"
        set psksecret sample
        set dpd-retryinterval 5
    next
end
config vpn ipsec phase2-interface
    edit "spoke2"
        set phase1name "spoke2"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256
aes128gcm aes256gcm chacha20poly1305
        set auto-negotiate enable
    next
    edit "spoke2_backup"
        set phase1name "spoke2_backup"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256
```

```
aes128gcm aes256gcm chacha20poly1305
        set auto-negotiate enable
    next
end
```

c. Configure the spoke FortiGates' firewall policies.

i. Configure Spoke1.

```
config firewall policy
    edit 1
        set name "outbound_advpn"
        set srcintf "internal"
        set dstintf "spoke1" "spoke1_backup"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "inbound_advpn"
        set srcintf "spoke1" "spoke1_backup"
        set dstintf "internal"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

ii. Configure Spoke2.

```
config firewall policy
    edit 1
        set name "outbound_advpn"
        set srcintf "internal"
        set dstintf "spoke2" "spoke2_backup"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "inbound_advpn"
        set srcintf "spoke2" "spoke2_backup"
        set dstintf "internal"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

d. Configure the spoke FortiGates' tunnel interface IP addresses.

i. Configure Spoke1.

```
config system interface
    edit "spoke1"
        set ip 10.10.10.1 255.255.255.255
        set remote-ip 10.10.10.254 255.255.255.0
    next
    edit "spoke1_backup"
        set ip 10.10.10.2 255.255.255.255
        set remote-ip 10.10.10.254 255.255.255.0
    next
end
```

ii. Configure Spoke2.

```
config system interface
    edit "spoke2"
        set ip 10.10.10.3 255.255.255.255
        set remote-ip 10.10.10.254 255.255.255.0
    next
    edit "spoke2_backup"
        set ip 10.10.10.4 255.255.255.255
        set remote-ip 10.10.10.254 255.255.255.0
    next
end
```

e. Configure the spoke FortiGates' BGP.

i. Configure Spoke1.

```
config router bgp
    set as 65412
    config neighbor
        edit "10.10.10.254"
            set advertisement-interval 1
            set link-down-failover enable
            set remote-as 65412
        next
    end
    config network
        edit 1
            set prefix 10.1.100.0 255.255.255.0
        next
    end
end
```

ii. Configure Spoke2.

```
config router bgp
    set as 65412
    config neighbor
        edit "10.10.10.254"
            set advertisement-interval 1
            set link-down-failover enable
            set remote-as 65412
        next
    end
    config network
        edit 1
```

```
            set prefix 192.168.4.0 255.255.255.0
        next
    end
end
```

4. Run `diagnose` and `get` commands run on Spoke1 to check VPN and BGP states.
   a. Run the `diagnose vpn tunnel list` command on Spoke1. The system should return the following:

```
list all ipsec tunnel in vd 0
----
name=spoke1 ver=1 serial=2 15.1.1.2:0->22.1.1.1:0
bound_if=7 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu
create_dev frag-rfc  accept_traffic=1

proxyid_num=1 child_num=1 refcnt=19 ilast=1 olast=1 ad=r/2
stat: rxp=1 txp=160 rxb=16428 txb=8969
dpd: mode=on-idle on=1 idle=5000ms retry=3 count=0 seqno=628
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=spoke1 proto=0 sa=1 ref=6 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=6 options=1a227 type=00 soft=0 mtu=1438 expire=1225/0B replaywin=1024
       seqno=a1 esn=0 replaywin_lastseq=00000002 itn=0
  life: type=01 bytes=0/0 timeout=2369/2400
  dec: spi=c53a8f5b esp=aes key=16 cbe88682ad896a69290027b6dd8f7162
       ah=sha1 key=20 7bb704b388f83783ac76c2ab0b6c9f7dcf78e93b
  enc: spi=6e3633fc esp=aes key=16 1a0da3f4deed3d16becc9dda57537355
       ah=sha1 key=20 368544044bd9b82592d72476ff93d5055056da8d
  dec:pkts/bytes=1/16364, enc:pkts/bytes=160/19168
  npu_flag=03 npu_rgwy=22.1.1.1 npu_lgwy=15.1.1.2 npu_selid=1 dec_npuid=1 enc_npuid=1
----
name=spoke1_backup ver=1 serial=1 12.1.1.2:0->22.1.1.1:0
bound_if=6 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu
create_dev frag-rfc  accept_traffic=0

proxyid_num=1 child_num=0 refcnt=11 ilast=0 olast=0 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=5000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=spoke1_backup proto=0 sa=0 ref=2 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
```

   b. Run the `get router info bgp summary` command on Spoke1. The system should return the following:

```
BGP router identifier 7.7.7.7, local AS number 65412
BGP table version is 2
1 BGP AS-PATH entries
0 BGP community entries

Neighbor             V         AS [[QualityAssurance62/MsgRcvd]]
[[QualityAssurance62/MsgSent]]   [[QualityAssurance62/TblVer]]  InQ OutQ Up/Down
State/PfxRcd
10.10.10.254       1.          65412     143     142         1.     1.     1.
00:24:45                    2

Total number of neighbors 1
```

c. Run the `get router info routing-table bgp` command on Spoke1. The system should return the following:

```
Routing table for VRF=0
B       172.16.101.0/24 [200/0] via 10.10.10.254, spoke1, 00:23:57
B       192.168.4.0/24 [200/0] via 10.10.10.254, spoke1, 00:22:03
```

d. Generate traffic between the spokes and check the shortcut tunnel and routing table. Run the `diagnose vpn tunnel list` command on Spoke1. The system should return the following:

```
list all ipsec tunnel in vd 0
----
name=spoke1 ver=1 serial=2 15.1.1.2:0->22.1.1.1:0
bound_if=7 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu
create_dev frag-rfc  accept_traffic=1

proxyid_num=1 child_num=1 refcnt=19 ilast=2 olast=2 ad=r/2
stat: rxp=1 txp=268 rxb=16428 txb=31243
dpd: mode=on-idle on=1 idle=5000ms retry=3 count=0 seqno=714
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=spoke1 proto=0 sa=1 ref=6 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=6 options=1a227 type=00 soft=0 mtu=1438 expire=345/0B replaywin=1024
       seqno=10d esn=0 replaywin_lastseq=00000002 itn=0
  life: type=01 bytes=0/0 timeout=2369/2400
  dec: spi=c53a8f5b esp=aes key=16 cbe88682ad896a69290027b6dd8f7162
       ah=sha1 key=20 7bb704b388f83783ac76c2ab0b6c9f7dcf78e93b
  enc: spi=6e3633fc esp=aes key=16 1a0da3f4deed3d16becc9dda57537355
       ah=sha1 key=20 368544044bd9b82592d72476ff93d5055056da8d
  dec:pkts/bytes=1/16364, enc:pkts/bytes=268/48320
  npu_flag=03 npu_rgwy=22.1.1.1 npu_lgwy=15.1.1.2 npu_selid=1 dec_npuid=1 enc_npuid=1
----
name=spoke1_backup ver=1 serial=1 12.1.1.2:0->22.1.1.1:0
bound_if=6 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu
create_dev frag-rfc  accept_traffic=0

proxyid_num=1 child_num=0 refcnt=11 ilast=8 olast=8 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=5000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=spoke1_backup proto=0 sa=0 ref=2 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
----
name=spoke1_0 ver=1 serial=9 15.1.1.2:4500->13.1.1.2:4500
bound_if=7 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/728 options[02d8]=npu
create_dev no-sysctl rgwy-chg frag-rfc  accept_traffic=1

 parent=spoke1 index=0
proxyid_num=1 child_num=0 refcnt=17 ilast=4 olast=4 ad=r/2
stat: rxp=1 txp=100 rxb=112 txb=4686
dpd: mode=on-idle on=1 idle=5000ms retry=3 count=0 seqno=231
natt: mode=keepalive draft=32 interval=10 remote_port=4500
proxyid=spoke1 proto=0 sa=1 ref=5 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
```

```
SA:  ref=6 options=1a227 type=00 soft=0 mtu=1422 expire=447/0B replaywin=1024
     seqno=65 esn=0 replaywin_lastseq=00000002 itn=0
life: type=01 bytes=0/0 timeout=2368/2400
dec: spi=c53a8f5c esp=aes key=16 73fd9869547475db78851e6c057ad9b7
     ah=sha1 key=20 6ad3a5b1028f6b33c82ba494a370f13c7f462635
enc: spi=79cb0f2b esp=aes key=16 52ab0acdc830d58c00e5956a6484654a
     ah=sha1 key=20 baa82aba4106dc60618f6fe95570728656799239
dec:pkts/bytes=1/46, enc:pkts/bytes=100/11568
npu_flag=03 npu_rgwy=13.1.1.2 npu_lgwy=15.1.1.2 npu_selid=5 dec_npuid=1 enc_npuid=1
```


e. Run the `get router info routing-tale bgp` command. The system should return the following:

```
Routing table for VRF=0
B       172.16.101.0/24 [200/0] via 10.10.10.254, spoke1, 00:23:57
B       192.168.4.0/24 [200/0] via 10.10.10.3, spoke1_0 , 00:22:03
```

ADVPN with OSPF as the routing protocol

This is a sample configuration of ADVPN with OSPF as the routing protocol. The following options must be enabled for this configuration:

- On the hub FortiGate, IPsec phase1-interface `net-device enable` must be run.
- OSPF must be used between the hub and spoke FortiGates.

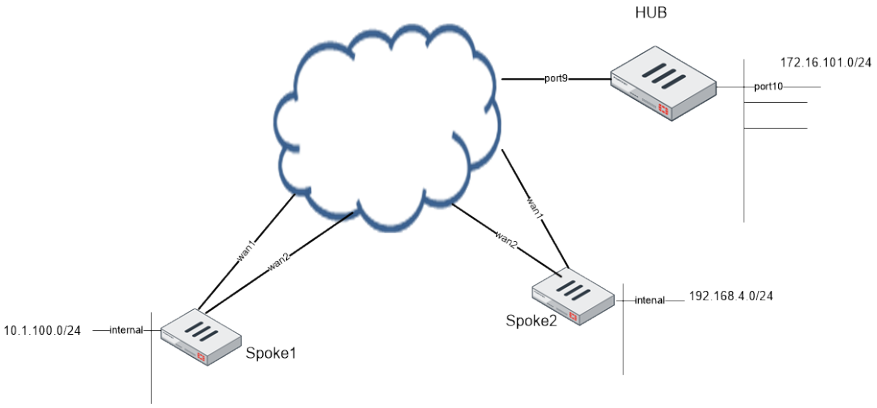

Because the GUI can only complete part of the configuration, we recommend using the CLI.

To configure ADVPN with OSPF as the routing protocol using the CLI:

1. Configure hub FortiGate's WAN, internal interface, and static route.

```
config system interface
    edit "port9"
        set alias "WAN"
        set ip 22.1.1.1 255.255.255.0
    next
    edit "port10"
        set alias "Internal"
        set ip 172.16.101.1 255.255.255.0
    next
end
config router static
    edit 1
```

```
        set gateway 22.1.1.2
        set device "port9"
    next
end
```

2. Configure the hub FortiGate.
   a. Configure the hub FortiGate IPsec phase1-interface and phase2-interface.

```
config vpn ipsec phase1-interface
    edit "advpn-hub"
        set type dynamic
        set interface "port9"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 3des-sha256 aes128-sha1 aes256-sha1
3des-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-sender enable
        set tunnel-search nexthop
        set psksecret sample
        set dpd-retryinterval 5
    next
end
config vpn ipsec phase2-interface
    edit "advpn-hub"
        set phase1name "advpn-hub"
        set proposal aes128-sha1 aes256-sha1 3des-sha1 aes128-sha256 aes256-sha256
3des-sha256
    next
end
```

   b. Configure the hub FortiGate firewall policy.

```
config firewall policy
    edit 1
        set name "spoke2hub"
        set srcintf "advpn-hub"
        set dstintf "port10"
        set srcaddr "all"
        set dstaddr "172.16.101.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "spoke2spoke"
        set srcintf "advpn-hub"
        set dstintf "advpn-hub"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

c. Configure the hub FortiGate's IPsec tunnel interface IP address.

```
config system interface
    edit "advpn-hub1"
        set ip 10.10.10.254 255.255.255.255
        set remote-ip 10.10.10.253 255.255.255.0
    next
end
```

d. Configure the hub FortiGate's OSPF.

```
config router ospf
    set router-id 1.1.1.1
    config area
        edit 0.0.0.0
        next
    end
    config network
        edit 1
            set prefix 10.10.10.0 255.255.255.0
        next
        edit 2
            set prefix 172.16.101.0 255.255.255.0
        next
    end
end
```

3. Configure the spoke FortiGates.

a. Configure the spoke FortiGates' WAN, internal interfaces, and static routes.

i. Configure Spoke1.

```
config system interface
    edit "wan1"
        set alias "primary_WAN"
        set ip 15.1.1.2 255.255.255.0
    next
    edit "wan2"
        set alias "secondary_WAN"
        set ip 12.1.1.2 255.255.255.0
    next
    edit "internal"
        set ip 10.1.100.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 12.1.1.1
        set device "wan2"
        set distance 15
    next
    edit 2
        set gateway 15.1.1.1
        set device "wan1"
    next
end
```

ii. Configure the Spoke2.

```
config system interface
    edit "wan1"
        set alias "primary_WAN"
        set ip 13.1.1.2 255.255.255.0
    next
    edit "wan2"
        set alias "secondary_WAN"
        set ip 17.1.1.2 255.255.255.0
    next
    edit "internal"
        set ip 192.168.4.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 17.1.1.1
        set device "wan2"
        set distance 15
    next
    edit 2
        set gateway 13.1.1.1
        set device "wan1"
    next
end
```

b. Configure the spoke FortiGates' IPsec phase1-interface and phase2-interface.

i. Configure Spoke1.

```
config vpn ipsec phase1-interface
    edit "spoke1"
        set interface "wan1"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-receiver enable
        set remote-gw 22.1.1.1
        set psksecret sample
        set dpd-retryinterval 5
    next
    edit "spoke1_backup"
        set interface "wan2"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-receiver enable
        set remote-gw 22.1.1.1
        set monitor "spoke1"
        set psksecret sample
        set dpd-retryinterval 5
    next
end
```

```
config vpn ipsec phase2-interface
    edit "spoke1"
        set phase1name "spoke1"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256
aes128gcm aes256gcm chacha20poly1305
        set auto-negotiate enable
    next
    edit "spoke1_backup"
        set phase1name "spoke1_backup"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256
aes128gcm aes256gcm chacha20poly1305
        set auto-negotiate enable
    next
end
```

ii. Configure Spoke2.

```
config vpn ipsec phase1-interface
    edit "spoke2"
        set interface "wan1"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-receiver enable
        set remote-gw 22.1.1.1
        set psksecret sample
        set dpd-retryinterval 5
    next
    edit "spoke2_backup"
        set interface "wan2"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-receiver enable
        set remote-gw 22.1.1.1
        set monitor "spoke2"
        set psksecret sample
        set dpd-retryinterval 5
    next
end
config vpn ipsec phase2-interface
    edit "spoke2"
        set phase1name "spoke2"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256
aes128gcm aes256gcm chacha20poly1305
        set auto-negotiate enable
    next
    edit "spoke2_backup"
        set phase1name "spoke2_backup"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256
aes128gcm aes256gcm chacha20poly1305
        set auto-negotiate enable
```

```
    next
end
```

c. Configure the spoke FortiGates' firewall policies.

i. Configure Spoke1.

```
config firewall policy
    edit 1
        set name "outbound_advpn"
        set srcintf "internal"
        set dstintf "spoke1" "spoke1_backup"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "inbound_advpn"
        set srcintf "spoke1" "spoke1_backup"
        set dstintf "internal"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

ii. Configure Spoke2.

```
config firewall policy
    edit 1
        set name "outbound_advpn"
        set srcintf "internal"
        set dstintf "spoke2" "spoke2_backup"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "inbound_advpn"
        set srcintf "spoke2" "spoke2_backup"
        set dstintf "internal"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

d. Configure the spoke FortiGates' tunnel interface IP addresses.

i. Configure Spoke1.

```
config system interface
    edit "spoke1"
        set ip 10.10.10.1 255.255.255.255
        set remote-ip 10.10.10.254 255.255.255.0
    next
    edit "spoke1_backup"
        set ip 10.10.10.2 255.255.255.255
        set remote-ip 10.10.10.254 255.255.255.0
    next
end
```

ii. Configure Spoke2.

```
config system interface
    edit "spoke2"
        set ip 10.10.10.3 255.255.255.255
        set remote-ip 10.10.10.254 255.255.255.0
    next
    edit "spoke2_backup"
        set ip 10.10.10.4 255.255.255.255
        set remote-ip 10.10.10.254 255.255.255.0
    next
end
```

e. Configure the spoke FortiGates' OSPF.

i. Configure Spoke1.

```
config router ospf
    set router-id 7.7.7.7
    config area
        edit 0.0.0.0
        next
    end
    config network
        edit 1
            set prefix 10.10.10.0 255.255.255.0
        next
        edit 2
            set prefix 10.1.100.0 255.255.255.0
        next
    end
end
```

ii. Configure Spoke2.

```
config router ospf
    set router-id 8.8.8.8
    config area
        edit 0.0.0.0
        next
    end
    config network
        edit 1
            set prefix 10.10.10.0 255.255.255.0
        next
        edit 2
```

```
            set prefix 192.168.4.0 255.255.255.0
        next
    end
end
```

4. Run `diagnose` and `get` commands on Spoke1 to check VPN and OSPF states.
   a. Run the `diagnose vpn tunnel list` command on Spoke1. The system should return the following:

```
list all ipsec tunnel in vd 0
----
name=spoke1 ver=1 serial=2 15.1.1.2:0->22.1.1.1:0
bound_if=7 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu
create_dev frag-rfc  accept_traffic=1

proxyid_num=1 child_num=1 refcnt=19 ilast=5 olast=2 ad=r/2
stat: rxp=1 txp=263 rxb=16452 txb=32854
dpd: mode=on-idle on=1 idle=5000ms retry=3 count=0 seqno=2283
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=spoke1 proto=0 sa=1 ref=5 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=6 options=1a227 type=00 soft=0 mtu=1438 expire=1057/0B replaywin=1024
       seqno=108 esn=0 replaywin_lastseq=00000003 itn=0
  life: type=01 bytes=0/0 timeout=2371/2400
  dec: spi=c53a8f78 esp=aes key=16 7cc50c5c9df1751f6497a4ad764c5e9a
       ah=sha1 key=20 269292ddbf7309a6fc05871e63ed8a5297b5c9a1
  enc: spi=6e363612 esp=aes key=16 42bd49bced1e85cf74a24d97f10eb601
       ah=sha1 key=20 13964f166aad48790c2e551d6df165d7489f524b
  dec:pkts/bytes=1/16394, enc:pkts/bytes=263/50096
  npu_flag=03 npu_rgwy=22.1.1.1 npu_lgwy=15.1.1.2 npu_selid=1 dec_npuid=1 enc_npuid=1
----
name=spoke1_backup ver=1 serial=1 12.1.1.2:0->22.1.1.1:0
bound_if=6 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu
create_dev frag-rfc  accept_traffic=0

proxyid_num=1 child_num=0 refcnt=11 ilast=8 olast=8 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=5000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=spoke1_backup proto=0 sa=0 ref=2 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
```

   b. Run the `get router info ospf neighbor` command on Spoke1. The system should return the following:

```
OSPF process 0, VRF 0: Neighbor ID Pri State Dead Time Address Interface 8.8.8.8 1.
Full/ - 00:00:35 10.10.10.254 spoke1 1.1.1.1 1. Full/ - 00:00:35 10.10.10.254 spoke1
```

   c. Run the `get router info routing-table ospf` command on Spoke1. The system should return the following:

```
Routing table for VRF=0
O       172.16.101.0/24 [110/110] via 10.10.10.254, spoke1, 00:23:23
O       192.168.4.0/24   [110/110] via 10.10.10.254, spoke1, 00:22:35
```

   d. Generate traffic between the spokes, then check the shortcut tunnel and routing table. Run the `diagnose vpn tunnel list` command on Spoke1. The system should return the following:

```
list all ipsec tunnel in vd 0
----
----
name=spoke1 ver=1 serial=2 15.1.1.2:0->22.1.1.1:0
bound_if=7 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu
create_dev frag-rfc  accept_traffic=1

proxyid_num=1 child_num=1 refcnt=19 ilast=2 olast=2 ad=r/2
stat: rxp=1 txp=313 rxb=16452 txb=35912
dpd: mode=on-idle on=1 idle=5000ms retry=3 count=0 seqno=2303
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=spoke1 proto=0 sa=1 ref=3 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=6 options=1a227 type=00 soft=0 mtu=1438 expire=782/0B replaywin=1024
       seqno=13a esn=0 replaywin_lastseq=00000003 itn=0
  life: type=01 bytes=0/0 timeout=2371/2400
  dec: spi=c53a8f78 esp=aes key=16 7cc50c5c9df1751f6497a4ad764c5e9a
       ah=sha1 key=20 269292ddbf7309a6fc05871e63ed8a5297b5c9a1
  enc: spi=6e363612 esp=aes key=16 42bd49bced1e85cf74a24d97f10eb601
       ah=sha1 key=20 13964f166aad48790c2e551d6df165d7489f524b
  dec:pkts/bytes=1/16394, enc:pkts/bytes=313/56432
  npu_flag=03 npu_rgwy=22.1.1.1 npu_lgwy=15.1.1.2 npu_selid=1 dec_npuid=1 enc_npuid=1
----
name=spoke1_backup ver=1 serial=1 12.1.1.2:0->22.1.1.1:0
bound_if=6 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu
create_dev frag-rfc  accept_traffic=0

proxyid_num=1 child_num=0 refcnt=11 ilast=13 olast=13 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=5000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=spoke1_backup proto=0 sa=0 ref=2 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
----
name=spoke1_0 ver=1 serial=e 15.1.1.2:4500->13.1.1.2:4500
bound_if=7 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/728 options[02d8]=npu
create_dev no-sysctl rgwy-chg frag-rfc  accept_traffic=1

 parent=spoke1 index=0
proxyid_num=1 child_num=0 refcnt=19 ilast=4 olast=2 ad=r/2
stat: rxp=641 txp=1254 rxb=278648 txb=161536
dpd: mode=on-idle on=1 idle=5000ms retry=3 count=0 seqno=184
natt: mode=keepalive draft=32 interval=10 remote_port=4500
proxyid=spoke1_backup proto=0 sa=1 ref=10 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=6 options=1a227 type=00 soft=0 mtu=1422 expire=922/0B replaywin=1024
       seqno=452 esn=0 replaywin_lastseq=00000280 itn=0
  life: type=01 bytes=0/0 timeout=2370/2400
  dec: spi=c53a8f79 esp=aes key=16 324f8cf840ba6722cc7abbba46b34e0e
       ah=sha1 key=20 a40e9aac596b95c4cd83a7f6372916a5ef5aa505
  enc: spi=ef3327b5 esp=aes key=16 5909d6066b303de4520d2b5ae2db1b61
       ah=sha1 key=20 1a42f5625b5a335d8d5282fe83b5d6c6ff26b2a4
```

```
dec:pkts/bytes=641/278568, enc:pkts/bytes=1254/178586
npu_flag=03 npu_rgwy=13.1.1.2 npu_lgwy=15.1.1.2 npu_selid=a dec_npuid=1 enc_npuid=1
```


e. Run the `get router info routing-tale ospf` command. The system should return the following:

```
Routing table for VRF=0
O       172.16.101.0/24 [110/110] via 10.10.10.254, spoke1, 00:27:14
O       192.168.4.0/24  [110/110] via  10.10.10.3, spoke1_0, 00:26:26
```

ADVPN with RIP as the routing protocol

This is a sample configuration of ADVPN with RIP as routing protocol. The following options must be enabled for this configuration:

- On the hub FortiGate, IPsec phase1-interface `net-device disable` must be run.
- RIP must be used between the hub and spoke FortiGates.
- `split-horizon-status enable` must be run on the hub FortiGate.

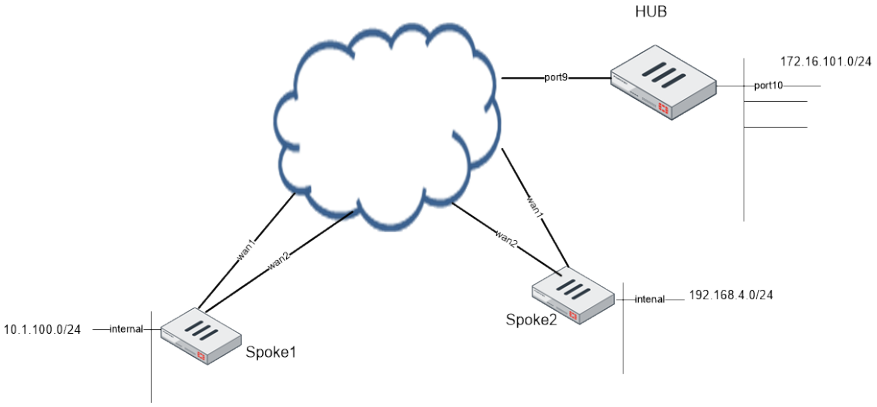

Because the GUI can only complete part of the configuration, we recommend using the CLI.

To configure ADVPN with RIP as the routing protocol using the CLI:

1. In the CLI, configure hub FortiGate's WAN, internal interface, and static route.

```
config system interface
    edit "port9"
        set alias "WAN"
        set ip 22.1.1.1 255.255.255.0
    next
    edit "port10"
        set alias "Internal"
        set ip 172.16.101.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 22.1.1.2
        set device "port9"
    next
end
```

2. Configure the hub FortiGate.
   a. Configure the hub FortiGate IPsec phase1-interface and phase2-interface.

```
config vpn ipsec phase1-interface
    edit "advpn-hub"
        set type dynamic
        set interface "port9"
        set peertype any
        set net-device disable
        set proposal aes128-sha256 aes256-sha256 3des-sha256 aes128-sha1 aes256-sha1
3des-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-sender enable
        set tunnel-search nexthop
        set psksecret sample
        set dpd-retryinterval 5
    next
end
config vpn ipsec phase2-interface
    edit "advpn-hub"
        set phase1name "advpn-hub"
        set proposal aes128-sha1 aes256-sha1 3des-sha1 aes128-sha256 aes256-sha256
3des-sha256
    next
end
```

   b. Configure the hub FortiGate firewall policy.

```
config firewall policy
    edit 1
        set name "spoke2hub"
        set srcintf "advpn-hub"
        set dstintf "port10"
        set srcaddr "all"
        set dstaddr "172.16.101.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "spoke2spoke"
        set srcintf "advpn-hub"
        set dstintf "advpn-hub"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

   c. Configure the hub FortiGate's IPsec tunnel interface IP address.

```
config system interface
    edit "advpn-hub1"
        set ip 10.10.10.254 255.255.255.255
        set remote-ip 10.10.10.253 255.255.255.0
```

```
    next
end
```

d. Configure the hub FortiGate's RIP.

```
config router rip
    set default-information-originate enable
    config network
        edit 1
            set prefix 10.10.10.0 255.255.255.0
        next
        edit 2
            set prefix 172.16.101.0 255.255.255.0
        next
    end
    config interface
        edit "advpn-hub"
            set split-horizon-status disable
        next
    end
end
```

3. Configure the spoke FortiGates.

a. Configure the spoke FortiGates' WAN, internal interfaces, and static routes.

i. Configure Spoke1.

```
config system interface
    edit "wan1"
        set alias "primary_WAN"
        set ip 15.1.1.2 255.255.255.0
    next
    edit "wan2"
        set alias "secondary_WAN"
        set ip 12.1.1.2 255.255.255.0
    next
    edit "internal"
        set ip 10.1.100.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 12.1.1.1
        set device "wan2"
        set distance 15
    next
    edit 2
        set gateway 15.1.1.1
        set device "wan1"
    next
end
```

ii. Configure the Spoke2.

```
config system interface
    edit "wan1"
        set alias "primary_WAN"
        set ip 13.1.1.2 255.255.255.0
    next
```

```
        edit "wan2"
            set alias "secondary_WAN"
            set ip 17.1.1.2 255.255.255.0
        next
        edit "internal"
            set ip 192.168.4.1 255.255.255.0
        next
    end
    config router static
        edit 1
            set gateway 17.1.1.1
            set device "wan2"
            set distance 15
        next
        edit 2
            set gateway 13.1.1.1
            set device "wan1"
        next
    end
```

b. Configure the spoke FortiGates' IPsec phase1-interface and phase2-interface.

i. Configure Spoke1.

```
config vpn ipsec phase1-interface
    edit "spoke1"
        set interface "wan1"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-receiver enable
        set remote-gw 22.1.1.1
        set psksecret sample
        set dpd-retryinterval 5
    next
    edit "spoke1_backup"
        set interface "wan2"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-receiver enable
        set remote-gw 22.1.1.1
        set monitor "spoke1"
        set psksecret sample
        set dpd-retryinterval 5
    next
end
config vpn ipsec phase2-interface
    edit "spoke1"
        set phase1name "spoke1"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256
aes128gcm aes256gcm chacha20poly1305
        set auto-negotiate enable
    next
```

```
    edit "spoke1_backup"
        set phase1name "spoke1_backup"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256
aes128gcm aes256gcm chacha20poly1305
        set auto-negotiate enable
    next
end
```

ii. Configure Spoke2.

```
config vpn ipsec phase1-interface
    edit "spoke2"
        set interface "wan1"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-receiver enable
        set remote-gw 22.1.1.1
        set psksecret sample
        set dpd-retryinterval 5
    next
    edit "spoke2_backup"
        set interface "wan2"
        set peertype any
        set net-device enable
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set add-route disable
        set dpd on-idle
        set auto-discovery-receiver enable
        set remote-gw 22.1.1.1
        set monitor "spoke2"
        set psksecret sample
        set dpd-retryinterval 5
    next
end
config vpn ipsec phase2-interface
    edit "spoke2"
        set phase1name "spoke2"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256
aes128gcm aes256gcm chacha20poly1305
        set auto-negotiate enable
    next
    edit "spoke2_backup"
        set phase1name "spoke2_backup"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256
aes128gcm aes256gcm chacha20poly1305
        set auto-negotiate enable
    next
end
```

c. Configure the spoke FortiGates' firewall policies.

i. Configure Spoke1.

```
config firewall policy
    edit 1
        set name "outbound_advpn"
```

```
            set srcintf "internal"
            set dstintf "spoke1" "spoke1_backup"
            set srcaddr "all"
            set dstaddr "all"
            set action accept
            set schedule "always"
            set service "ALL"
        next
        edit 2
            set name "inbound_advpn"
            set srcintf "spoke1" "spoke1_backup"
            set dstintf "internal"
            set srcaddr "all"
            set dstaddr "all"
            set action accept
            set schedule "always"
            set service "ALL"
        next
    end
```

ii. Configure Spoke2.

```
config firewall policy
    edit 1
        set name "outbound_advpn"
        set srcintf "internal"
        set dstintf "spoke2" "spoke2_backup"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "inbound_advpn"
        set srcintf "spoke2" "spoke2_backup"
        set dstintf "internal"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

d. Configure the spoke FortiGates' tunnel interface IP addresses.

i. Configure Spoke1.

```
config system interface
    edit "spoke1"
        set ip 10.10.10.1 255.255.255.255
        set remote-ip 10.10.10.254 255.255.255.0
    next
    edit "spoke1_backup"
        set ip 10.10.10.2 255.255.255.255
        set remote-ip 10.10.10.254 255.255.255.0
    next
end
```

ii. Configure Spoke2.

```
config system interface
    edit "spoke2"
        set ip 10.10.10.3 255.255.255.255
        set remote-ip 10.10.10.254 255.255.255.0
    next
    edit "spoke2_backup"
        set ip 10.10.10.4 255.255.255.255
        set remote-ip 10.10.10.254 255.255.255.0
    next
end
```

e. Configure the spoke FortiGates' RIP.

i. Configure Spoke1.

```
config router rip
    config network
        edit 1
            set prefix 10.10.10.0 255.255.255.0
        next
        edit 2
            set prefix 10.1.100.0 255.255.255.0
        next
    end
end
```

ii. Configure Spoke2.

```
config router rip
    config network
        edit 1
            set prefix 10.10.10.0 255.255.255.0
        next
        edit 2
            set prefix 192.168.4.0 255.255.255.0
        next
    end
end
```

4. Run `diagnose` and `get` commands on Spoke1.

a. Run the `diagnose vpn tunnel list` command on Spoke1. The system should return the following:

```
list all ipsec tunnel in vd 0
----
name=spoke1 ver=1 serial=2 15.1.1.2:0->22.1.1.1:0
bound_if=7 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu
create_dev frag-rfc  accept_traffic=1

proxyid_num=1 child_num=1 refcnt=17 ilast=2 olast=2 ad=r/2
stat: rxp=1 txp=87 rxb=200 txb=6208
dpd: mode=on-idle on=1 idle=5000ms retry=3 count=0 seqno=1040
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=spoke1 proto=0 sa=1 ref=4 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=7 options=1a227 type=00 soft=0 mtu=1438 expire=1793/0B replaywin=1024
       seqno=57 esn=0 replaywin_lastseq=00000002 itn=0
```

```
  life: type=01 bytes=0/0 timeout=2370/2400
  dec: spi=c53a8f60 esp=aes key=16 6b54e32d54d039196a74d96e96d1cf14
       ah=sha1 key=20 e4903474614eafc96eda6400a3a5e88bbcb26a7f
  enc: spi=6e36349d esp=aes key=16 914a40a7993eda75c4dea2f42905f27d
       ah=sha1 key=20 8040eb08342edea2dae5eee058fd054a46688267
  dec:pkts/bytes=1/132, enc:pkts/bytes=86/11696
  npu_flag=03 npu_rgwy=22.1.1.1 npu_lgwy=15.1.1.2 npu_selid=1 dec_npuid=1 enc_npuid=1
----
name=spoke1_backup ver=1 serial=1 12.1.1.2:0->22.1.1.1:0
bound_if=6 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu
create_dev frag-rfc  accept_traffic=0

proxyid_num=1 child_num=0 refcnt=11 ilast=0 olast=0 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=5000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=spoke1_backup proto=0 sa=0 ref=2 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
```

b. Run the `get router info rip database` command on Spoke1. The system should return the following:

```
Codes: R - RIP, Rc - RIP connected, Rs - RIP static, K - Kernel,
       C - Connected, S - Static, O - OSPF, I - IS-IS, B - BGP

   Network            Next Hop         Metric From            If     Time
Rc 10.1.100.0/24                           1.                 internal
Rc 10.10.10.2/32                             1.                 spoke1
R  172.16.101.0/24    10.10.10.254           1. 10.10.10.254      spoke1 02:28
R  192.168.4.0/24      10.10.10.254           1. 10.10.10.254       spoke1 02:44
```

c. Run the `get router info routing-table rip` command on Spoke1. The system should return the following:

```
Routing table for VRF=0
R       172.16.101.0/24 [120/2] via 10.10.10.254, spoke1, 00:08:38
R       192.168.4.0/24 [120/3] via 10.10.10.254, spoke1, 00:08:38
```

d. Generate traffic between the spokes, then check the shortcut tunnel and routing table. Run the `diagnose vpn tunnel list` command on Spoke1. The system should return the following:

```
list all ipsec tunnel in vd 0
----
name=spoke1 ver=1 serial=2 15.1.1.2:0->22.1.1.1:0
bound_if=7 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu
create_dev frag-rfc  accept_traffic=1

proxyid_num=1 child_num=0 refcnt=19 ilast=3 olast=3 ad=r/2
stat: rxp=1 txp=78 rxb=200 txb=5546
dpd: mode=on-idle on=1 idle=5000ms retry=3 count=0 seqno=1039
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=spoke1 proto=0 sa=1 ref=5 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=7 options=1a227 type=00 soft=0 mtu=1438 expire=1807/0B replaywin=1024
       seqno=4e esn=0 replaywin_lastseq=00000002 itn=0
  life: type=01 bytes=0/0 timeout=2370/2400
  dec: spi=c53a8f60 esp=aes key=16 6b54e32d54d039196a74d96e96d1cf14
```

```
        ah=sha1 key=20 e4903474614eafc96eda6400a3a5e88bbcb26a7f
    enc: spi=6e36349d esp=aes key=16 914a40a7993eda75c4dea2f42905f27d
        ah=sha1 key=20 8040eb08342edea2dae5eee058fd054a46688267
    dec:pkts/bytes=1/132, enc:pkts/bytes=77/10456
    npu_flag=03 npu_rgwy=22.1.1.1 npu_lgwy=15.1.1.2 npu_selid=1 dec_npuid=1 enc_npuid=1
----
name=spoke1_backup ver=1 serial=1 12.1.1.2:0->22.1.1.1:0
bound_if=6 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/536 options[0218]=npu
create_dev frag-rfc  accept_traffic=0

proxyid_num=1 child_num=0 refcnt=11 ilast=20 olast=20 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=5000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=spoke1_backup proto=0 sa=0 ref=2 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
----
name=spoke1_0 ver=1 serial=a 15.1.1.2:4500->13.1.1.2:4500
bound_if=7 lgwy=static/1 tun=intf/0 mode=dial_inst/3 encap=none/728 options[02d8]=npu
create_dev no-sysctl rgwy-chg frag-rfc  accept_traffic=1

 parent=spoke1 index=0
proxyid_num=1 child_num=0 refcnt=20 ilast=2 olast=0 ad=r/2
stat: rxp=1 txp=7 rxb=112 txb=480
dpd: mode=on-idle on=1 idle=5000ms retry=3 count=0 seqno=0
natt: mode=keepalive draft=32 interval=10 remote_port=4500
proxyid=spoke1 proto=0 sa=1 ref=8 serial=1 auto-negotiate adr
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=6 options=1a227 type=00 soft=0 mtu=1422 expire=2358/0B replaywin=1024
       seqno=8 esn=0 replaywin_lastseq=00000002 itn=0
  life: type=01 bytes=0/0 timeout=2367/2400
  dec: spi=c53a8f61 esp=aes key=16 c66aa7ae9657068108ed47c048ff56b6
       ah=sha1 key=20 60661c68e20bbc913c2564ade85e01ea3769e703
  enc: spi=79cb0f30 esp=aes key=16 bf6c898c2e1c64baaa679ed5d79c3b58
       ah=sha1 key=20 146ca78be6c34eedb9cd66cc328216e08682ecb1
  dec:pkts/bytes=1/46, enc:pkts/bytes=7/992
  npu_flag=03 npu_rgwy=13.1.1.2 npu_lgwy=15.1.1.2 npu_selid=6 dec_npuid=1 enc_npuid=1
```

e. Run the `get router info routing-tale rip` command. The system should return the following:

```
Routing table for VRF=0
R       172.16.101.0/24 [120/2] via 10.10.10.254, spoke1, 00:09:04
R       192.168.4.0/24 [120/2] via 10.10.10.3, spoke1_0, 00:00:02
```

Other VPN topics

The following topics provide instructions on configuring other VPN topics.

- VPN and ASIC offload on page 1279
- Encryption algorithms on page 1288
- Fragmenting IP packets before IPsec encapsulation on page 1296
- VXLAN over IPsec tunnel on page 1296

VPN and ASIC offload

This topic provides a brief introduction to VPN traffic offloading.

IPsec traffic processed by NPU

1. Check the device ASIC information. For example, a FortiGate 900D has an NP6 and a CP8.

```
# get hardware status
Model name: [[QualityAssurance62/FortiGate]]-900D
ASIC version: CP8
ASIC SRAM: 64M
CPU: Intel(R) Xeon(R) CPU E3-1225 v3 @ 3.20GHz
Number of CPUs: 4
RAM: 16065 MB
Compact Flash: 1925 MB /dev/sda
Hard disk: 244198 MB /dev/sdb
USB Flash: not available
Network Card chipset: [[QualityAssurance62/FortiASIC]] NP6 Adapter (rev.)
```

2. Check port to NPU mapping.

```
# diagnose npu np6 port-list
Chip   XAUI Ports            Max   Cross-chip
                             Speed offloading
----
np6_0  0
        1.    port17          1G    Yes
        1.    port18          1G    Yes
        1.    port19          1G    Yes
        1.    port20          1G    Yes
        1.    port21          1G    Yes
        1.    port22          1G    Yes
        1.    port23          1G    Yes
        1.    port24          1G    Yes
        1.    port27          1G    Yes
        1.    port28          1G    Yes
        1.    port25          1G    Yes
        1.    port26          1G    Yes
        1.    port31          1G    Yes
        1.    port32          1G    Yes
        1.    port29          1G    Yes
        1.    port30          1G    Yes
        1.    portB           10G   Yes
        1.
----
np6_1  0
        1.    port1           1G    Yes
        1.    port2           1G    Yes
        1.    port3           1G    Yes
        1.    port4           1G    Yes
        1.    port5           1G    Yes
        1.    port6           1G    Yes
        1.    port7           1G    Yes
        1.    port8           1G    Yes
        1.    port11          1G    Yes
```

```
        1.    port12          1G    Yes
        1.    port9           1G    Yes
        1.    port10          1G    Yes
        1.    port15          1G    Yes
        1.    port16          1G    Yes
        1.    port13          1G    Yes
        1.    port14          1G    Yes
        1.    portA           10G   Yes
        1.
----
```

3. Configure the option in IPsec phase1 settings to control NPU encrypt/decrypt IPsec packets (enabled by default).

```
config vpn ipsec phase1/phase1-interface
    edit "vpn_name"
        set npu-offload enable/disable
    next
end
```

4. Check NPU offloading. The NPU encrypted/decrypted counter should tick. The `npu_flag 03` flag means that the traffic processed by the NPU is bi-directional.

```
# diagnose vpn tunnel list
list all ipsec tunnel in vd 0
----
name=test ver=2 serial=1 173.1.1.1:0->11.101.1.1:0
bound_if=42 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/8 options[0008]=npu
proxyid_num=1 child_num=0 refcnt=14 ilast=2 olast=2 ad=/0
stat: rxp=12231 txp=12617 rxb=1316052 txb=674314
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=test proto=0 sa=1 ref=4 serial=7
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=6 options=10626 type=00 soft=0 mtu=1438 expire=42921/0B replaywin=2048
       seqno=802 esn=0 replaywin_lastseq=00000680 itn=0
  life: type=01 bytes=0/0 timeout=42930/43200
  dec: spi=e313ac46 esp=aes key=16 0dcb52642eed18b852b5c65a7dc62958
       ah=md5 key=16 c61d9fe60242b9a30e60b1d01da77660
  enc: spi=706ffe03 esp=aes key=16 6ad98c204fa70545dbf3d2e33fb7b529
       ah=md5 key=16 dcc3b866da155ef73c0aba15ec530e2e
  dec:pkts/bytes=1665/16352, enc:pkts/bytes=2051/16826
  npu_flag=03 npu_rgwy=11.101.1.1 npu_lgwy=173.1.1.1 npu_selid=6 dec_npuid=2 enc_npuid=2

FGT_900D # diagnose vpn ipsec st
All ipsec crypto devices in use:
NP6_0:
    Encryption (encrypted/decrypted)
        null             : 0                1.
        des              : 0                1.
        3des             : 0                1.
        aes              : 0                1.
        aes-gcm          : 0                1.
        aria             : 0                1.
        seed             : 0                1.
        chacha20poly1305 : 0                1.
    Integrity (generated/validated)
```

```
        null             : 0                1.
        md5              : 0                1.
        sha1             : 0                1.
        sha256           : 0                1.
        sha384           : 0                1.
        sha512           : 0                1.

NP6_1:
    Encryption (encrypted/decrypted)
        null             : 14976            15357
        des              : 0                1.
        3des             : 0                1.
        aes              : 1664             2047
        aes-gcm          : 0                1.
        aria             : 0                1.
        seed             : 0                1.
        chacha20poly1305 : 0                1.
    Integrity (generated/validated)
        null             : 0                1.
        md5              : 1664             2047
        sha1             : 14976            15357
        sha256           : 0                1.
        sha384           : 0                1.
        sha512           : 0                1.

NPU Host Offloading:
    Encryption (encrypted/decrypted)
        null             : 3                1.
        des              : 0                1.
        3des             : 0                1.
        aes              : 3                1.
        aes-gcm          : 0                1.
        aria             : 0                1.
        seed             : 0                1.
        chacha20poly1305 : 0                1.
    Integrity (generated/validated)
        null             : 0                1.
        md5              : 3                1.
        sha1             : 3                1.
        sha256           : 0                1.
        sha384           : 0                1.
        sha512           : 0                1.

CP8:
    Encryption (encrypted/decrypted)
        null             : 1                1.
        des              : 0                1.
        3des             : 0                1.
        aes              : 1                1.
        aes-gcm          : 0                1.
        aria             : 0                1.
        seed             : 0                1.
        chacha20poly1305 : 0                1.
    Integrity (generated/validated)
        null             : 0                1.
        md5              : 1                1.
```

```
        sha1              : 1                1.
        sha256            : 0                1.
        sha384            : 0                1.
        sha512            : 0                1.

SOFTWARE:
    Encryption (encrypted/decrypted)
        null              : 0                1.
        des               : 0                1.
        3des              : 0                1.
        aes               : 0                1.
        aes-gcm           : 29882            29882
        aria              : 21688            21688
        seed              : 153774           153774
        chacha20poly1305  : 29521            29521
    Integrity (generated/validated)
        null              : 59403            59403
        md5               : 0                1.
        sha1              : 175462           175462
        sha256            : 0                1.
        sha384            : 0                1.
        sha512            : 0                1.
```

5. If traffic cannot be offloaded by the NPU, the CP will try to encrypt/decrypt the IPsec packets.

IPsec traffic processed by CP

1. Check the NPU flag and CP counter.

```
# diagnose vpn tunnel list
list all ipsec tunnel in vd 0
----
name=test ver=2 serial=1 173.1.1.1:0->11.101.1.1:0
bound_if=42 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/0
proxyid_num=1 child_num=0 refcnt=13 ilast=0 olast=0 ad=/0
stat: rxp=8418 txp=8418 rxb=1251248 txb=685896
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=test proto=0 sa=1 ref=3 serial=7
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=3 options=10226 type=00 soft=0 mtu=1438 expire=42037/0B replaywin=2048
       seqno=20e3 esn=0 replaywin_lastseq=000020e3 itn=0
  life: type=01 bytes=0/0 timeout=42928/43200
  dec: spi=e313ac48 esp=aes key=16 393770842f926266530db6e43e21c4f8
       ah=md5 key=16 b2e4e025e8910e95c1745e7855479cca
  enc: spi=706ffe05 esp=aes key=16 7ef749610335f9f50e252023926de29e
       ah=md5 key=16 0b81e4d835919ab2b8ba8edbd01aec9d
  dec:pkts/bytes=8418/685896, enc:pkts/bytes=8418/1251248
  npu_flag=00 npu_rgwy=11.101.1.1 npu_lgwy=173.1.1.1 npu_selid=6 dec_npuid=0 enc_npuid=0

FGT-D # diagnose vpn ipsec status
All ipsec crypto devices in use:
NP6_0:
    Encryption (encrypted/decrypted)
        null              : 0                1.
        des               : 0                1.
```

```
        3des             : 0                1.
        aes              : 0                1.
        aes-gcm          : 0                1.
        aria             : 0                1.
        seed             : 0                1.
        chacha20poly1305 : 0                1.
    Integrity (generated/validated)
        null             : 0                1.
        md5              : 0                1.
        sha1             : 0                1.
        sha256           : 0                1.
        sha384           : 0                1.
        sha512           : 0                1.

NP6_1:
    Encryption (encrypted/decrypted)
        null             : 14976            15357
        des              : 0                1.
        3des             : 0                1.
        aes              : 1664             2047
        aes-gcm          : 0                1.
        aria             : 0                1.
        seed             : 0                1.
        chacha20poly1305 : 0                1.
    Integrity (generated/validated)
        null             : 0                1.
        md5              : 1664             2047
        sha1             : 14976            15357
        sha256           : 0                1.
        sha384           : 0                1.
        sha512           : 0                1.

NPU Host Offloading:
    Encryption (encrypted/decrypted)
        null             : 3                1.
        des              : 0                1.
        3des             : 0                1.
        aes              : 3                1.
        aes-gcm          : 0                1.
        aria             : 0                1.
        seed             : 0                1.
        chacha20poly1305 : 0                1.
    Integrity (generated/validated)
        null             : 0                1.
        md5              : 3                1.
        sha1             : 3                1.
        sha256           : 0                1.
        sha384           : 0                1.
        sha512           : 0                1.

CP8:
    Encryption (encrypted/decrypted)
        null             : 1                1.
        des              : 0                1.
        3des             : 0                1.
        aes              : 8499             8499
```

```
            aes-gcm          : 0                 1.
            aria             : 0                 1.
            seed             : 0                 1.
            chacha20poly1305 : 0                 1.
        Integrity (generated/validated)
            null             : 0                 1.
            md5              : 8499              8499
            sha1             : 1                 1.
            sha256           : 0                 1.
            sha384           : 0                 1.
            sha512           : 0                 1.

    SOFTWARE:
        Encryption (encrypted/decrypted)
            null             : 0                 1.
            des              : 0                 1.
            3des             : 0                 1.
            aes              : 0                 1.
            aes-gcm          : 29882             29882
            aria             : 21688             21688
            seed             : 153774            153774
            chacha20poly1305 : 29521             29521
        Integrity (generated/validated)
            null             : 59403             59403
            md5              : 0                 1.
            sha1             : 175462            175462
            sha256           : 0                 1.
            sha384           : 0                 1.
            sha512           : 0                 1.
```

2. Two options are used to control if the CP processes packets. If disabled, packets are processed by the CPU.

```
config system global
    set ipsec-asic-offload disable
    set ipsec-hmac-offload disable
end
```

IPsec traffic processed by CPU

IPsec traffic might be processed by the CPU for the following reasons:

- Some low end models do not have NPUs.
- NPU offloading and CP IPsec traffic processing manually disabled.
- Some types of proposals - SEED, ARIA, chacha20poly1305 - are not supported by the NPU or CP.
- NPU flag set to 00 and software encrypt/decrypt counter ticked.

```
# diagnose vpn tunnel list
list all ipsec tunnel in vd 0
----
name=test ver=2 serial=1 173.1.1.1:0->11.101.1.1:0
bound_if=42 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/0
proxyid_num=1 child_num=0 refcnt=14 ilast=0 olast=0 ad=/0
stat: rxp=12162 txp=12162 rxb=1691412 txb=1008216
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=test proto=0 sa=1 ref=4 serial=8
  src: 0:0.0.0.0/0.0.0.0:0
```

```
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=3 options=10602 type=00 soft=0 mtu=1453 expire=42903/0B replaywin=2048
       seqno=2d70 esn=0 replaywin_lastseq=00002d70 itn=0
  life: type=01 bytes=0/0 timeout=42931/43200
  dec: spi=e313ac4d esp=chacha20poly1305 key=36
812d1178784c1130d1586606e44e1b9ab157e31a09edbed583be1e9cc82e8c9f2655a2cf
       ah=null key=0
  enc: spi=706ffe0a esp=chacha20poly1305 key=36
f2727e001e2243549b140f1614ae3df82243adb070e60c33911f461b389b05a7a642e11a
       ah=null key=0
  dec:pkts/bytes=11631/976356, enc:pkts/bytes=11631/1627692
  npu_flag=00 npu_rgwy=11.101.1.1 npu_lgwy=173.1.1.1 npu_selid=7 dec_npuid=0 enc_npuid=0

FGT_900D # diagnose vpn ipsec status
All ipsec crypto devices in use:
NP6_0:
    Encryption (encrypted/decrypted)
        null             : 0                1.
        des              : 0                1.
        3des             : 0                1.
        aes              : 0                1.
        aes-gcm          : 0                1.
        aria             : 0                1.
        seed             : 0                1.
        chacha20poly1305 : 0                1.
    Integrity (generated/validated)
        null             : 0                1.
        md5              : 0                1.
        sha1             : 0                1.
        sha256           : 0                1.
        sha384           : 0                1.
        sha512           : 0                1.

NP6_1:
    Encryption (encrypted/decrypted)
        null             : 14976            15357
        des              : 0                1.
        3des             : 0                1.
        aes              : 1664             2047
        aes-gcm          : 0                1.
        aria             : 0                1.
        seed             : 0                1.
        chacha20poly1305 : 0                1.
    Integrity (generated/validated)
        null             : 0                1.
        md5              : 1664             2047
        sha1             : 14976            15357
        sha256           : 0                1.
        sha384           : 0                1.
        sha512           : 0                1.

NPU Host Offloading:
    Encryption (encrypted/decrypted)
        null             : 3                1.
        des              : 0                1.
        3des             : 0                1.
```

```
        aes              : 3                1.
        aes-gcm          : 0                1.
        aria             : 0                1.
        seed             : 0                1.
        chacha20poly1305 : 0                1.
    Integrity (generated/validated)
        null             : 0                1.
        md5              : 3                1.
        sha1             : 3                1.
        sha256           : 0                1.
        sha384           : 0                1.
        sha512           : 0                1.

CP8:
    Encryption (encrypted/decrypted)
        null             : 1                1.
        des              : 0                1.
        3des             : 0                1.
        aes              : 8865             8865
        aes-gcm          : 0                1.
        aria             : 0                1.
        seed             : 0                1.
        chacha20poly1305 : 0                1.
    Integrity (generated/validated)
        null             : 0                1.
        md5              : 8865             8865
        sha1             : 1                1.
        sha256           : 0                1.
        sha384           : 0                1.
        sha512           : 0                1.

SOFTWARE:
    Encryption (encrypted/decrypted)
        null             : 0                1.
        des              : 0                1.
        3des             : 0                1.
        aes              : 531              531
        aes-gcm          : 29882            29882
        aria             : 21688            21688
        seed             : 153774           153774
        chacha20poly1305 : 41156            41156
    Integrity (generated/validated)
        null             : 71038            71038
        md5              : 531              531
        sha1             : 175462           175462
        sha256           : 0                1.
        sha384           : 0                1.
        sha512           : 0                1.
```

Disable automatic ASIC offloading

When `auto-asic-offload` is set to `disable` in the firewall policy, traffic is not offloaded and the NPU hosting counter is ticked.

```
# diagnose vpn ipsec status
All ipsec crypto devices in use:
```

```
NP6_0:
    Encryption (encrypted/decrypted)
        null             : 0                1.
        des              : 0                1.
        3des             : 0                1.
        aes              : 0                1.
        aes-gcm          : 0                1.
        aria             : 0                1.
        seed             : 0                1.
        chacha20poly1305 : 0                1.
    Integrity (generated/validated)
        null             : 0                1.
        md5              : 0                1.
        sha1             : 0                1.
        sha256           : 0                1.
        sha384           : 0                1.
        sha512           : 0                1.

NP6_1:
    Encryption (encrypted/decrypted)
        null             : 14976            15357
        des              : 0                1.
        3des             : 0                1.
        aes              : 110080           2175
        aes-gcm          : 0                1.
        aria             : 0                1.
        seed             : 0                1.
        chacha20poly1305 : 0                1.
    Integrity (generated/validated)
        null             : 0                1.
        md5              : 110080           2175
        sha1             : 14976            15357
        sha256           : 0                1.
        sha384           : 0                1.
        sha512           : 0                1.

NPU Host Offloading:
    Encryption (encrypted/decrypted)
        null             : 3                1.
        des              : 0                1.
        3des             : 0                1.
        aes              : 111090           1.
        aes-gcm          : 0                1.
        aria             : 0                1.
        seed             : 0                1.
        chacha20poly1305 : 0                1.
    Integrity (generated/validated)
        null             : 0                1.
        md5              : 111090           1.
        sha1             : 3                1.
        sha256           : 0                1.
        sha384           : 0                1.
        sha512           : 0                1.

CP8:
    Encryption (encrypted/decrypted)
```

```
        null             : 1                1.
        des              : 0                1.
        3des             : 0                1.
        aes              : 8865             8865
        aes-gcm          : 0                1.
        aria             : 0                1.
        seed             : 0                1.
        chacha20poly1305 : 0                1.
    Integrity (generated/validated)
        null             : 0                1.
        md5              : 8865             8865
        sha1             : 1                1.
        sha256           : 0                1.
        sha384           : 0                1.
        sha512           : 0                1.

SOFTWARE:
    Encryption (encrypted/decrypted)
        null             : 0                1.
        des              : 0                1.
        3des             : 0                1.
        aes              : 539              539
        aes-gcm          : 29882            29882
        aria             : 21688            21688
        seed             : 153774           153774
        chacha20poly1305 : 41259            41259
    Integrity (generated/validated)
        null             : 71141            71141
        md5              : 539              539
        sha1             : 175462           175462
        sha256           : 0                1.
        sha384           : 0                1.
        sha512           : 0                1.
```

Encryption algorithms

This topic provides a brief introduction to IPsec phase 1 and phase 2 encryption algorithms and includes the following sections:

- IKEv1 phase 1 encryption algorithm
- IKEv1 phase 2 encryption algorithm
- IKEv2 phase 1 encryption algorithm
- IKEv2 phase 2 encryption algorithm
- HMAC settings

IKEv1 phase 1 encryption algorithm

The default encryption algorithm is:

```
aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
```

DES is a symmetric-key algorithm, which means the same key is used for encrypting and decrypting data. FortiOS supports:

- des-md5
- des-sha1
- des-sha256
- des-sha384
- des-sha512

3DES applies the DES algorithm three times to each data. FortiOS supports:

- 3des-md5
- 3des-sha1
- 3des-sha256
- 3des-sha384
- 3des-sha512

AES is a symmetric-key algorithm with different key lengths (128, 192, and 256 bits). FortiOS supports:

- aes128-md5
- aes128-sha1
- aes128-sha256
- aes128-sha384
- aes128-sha512
- aes192-md5
- aes192-sha1
- aes192-sha256
- aes192-sha384
- aes192-sha512
- aes256-md5
- aes256-sha1
- aes256-sha256
- aes256-sha384
- aes256-sha512

The ARIA algorithm is based on AES with different key lengths (128, 192, and 256 bits). FortiOS supports:

- aria128-md5
- aria128-sha1
- aria128-sha256
- aria128-sha384
- aria128-sha512
- aria192-md5
- aria192-sha1
- aria192-sha256
- aria192-sha384
- aria192-sha512
- aria256-md5
- aria256-sha1
- aria256-sha256

- aria256-sha384
- aria256-sha512

SEED is a symmetric-key algorithm. FortiOS supports:

- seed128-md5
- seed128-sha1
- seed128-sha256
- seed128-sha384
- seed128-sha512

Suite-B is a set of AES encryption with ICV in GCM mode. FortiOS supports Suite-B on new kernel platforms only. IPsec traffic **cannot** offload to NPU. CP9 supports Suite-B offloading, otherwise packets are encrypted and decrypted by software. FortiOS supports:

- suite-b-gcm-128
- suite-b-gcm-256

IKEv1 phase 2 encryption algorithm

The default encryption algorithm is:

```
aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm aes256gcm chacha20poly1305
```

With null encryption, IPsec traffic can offload NPU/CP. FortiOS supports:

- null-md5
- null-sha1
- null-sha256
- null-sha384
- null-sha512

With the DES encryption algorithm, IPsec traffic can offload NPU/CP. FortiOS supports:

- des-null
- des-md5
- des-sha1
- des-sha256
- des-sha384
- des-sha512

With the 3DES encryption algorithm, IPsec traffic can offload NPU/CP. FortiOS supports:

- 3des-null
- 3des-md5
- 3des-sha1
- 3des-sha256
- 3des-sha384
- 3des-sha512

With the AES encryption algorithm, IPsec traffic can offload NPU/CP. FortiOS supports:

- aes128-null
- aes128-md5
- aes128-sha1

- aes128-sha256
- aes128-sha384
- aes128-sha512
- aes192-null
- aes192-md5
- aes192-sha1
- aes192-sha256
- aes192-sha384
- aes192-sha512
- aes256-null
- aes256-md5
- aes256-sha1
- aes256-sha256
- aes256-sha384
- aes256-sha512

With the AESGCM encryption algorithm, IPsec traffic **cannot** offload NPU/CP. FortiOS supports:

- aes128gcm
- aes256gcm

With the chacha20poly1305 encryption algorithm, IPsec traffic **cannot** offload NPU/CP. FortiOS supports:

- chacha20poly1305

With the ARIA encryption algorithm, IPsec traffic **cannot** offload NPU/CP. FortiOS supports:

- aria128-null
- aria128-md5
- aria128-sha1
- aria128-sha256
- aria128-sha384
- aria128-sha512
- aria192-null
- aria192-md5
- aria192-sha1
- aria192-sha256
- aria192-sha384
- aria192-sha512
- aria256-null
- aria256-md5
- aria256-sha1
- aria256-sha256
- aria256-sha384
- aria256-sha512

With the SEED encryption algorithm, IPsec traffic **cannot** offload NPU/CP. FortiOS supports:

- seed-null
- seed-md5
- seed-sha1

- seed-sha256
- seed-sha384
- seed-sha512

IKEv2 phase 1 encryption algorithm

The default encryption algorithm is:

```
aes128-sha256 aes256-sha256 aes128gcm-prfsha256 aes256gcm-prfsha384 chacha20poly1305-
     prfsha256
```

DES is a symmetric-key algorithm, which means the same key is used for encrypting and decrypting data. FortiOS supports:

- des-md5
- des-sha1
- des-sha256
- des-sha384
- des-sha512

3DES applies the DES algorithm three times to each data. FortiOS supports:

- 3des-md5
- 3des-sha1
- 3des-sha256
- 3des-sha384
- 3des-sha512

AES is a symmetric-key algorithm with different key lengths (128, 192, and 256 bits). FortiOS supports:

- aes128-md5
- aes128-sha1
- aes128-sha256
- aes128-sha384
- aes128-sha512
- aes128gcm-prfsha1
- aes128gcm-prfsha256
- aes128gcm-prfsha384
- aes128gcm-prfsha512
- aes192-md5
- aes192-sha1
- aes192-sha256
- aes192-sha384
- aes192-sha512
- aes256-md5
- aes256-sha1
- aes256-sha256
- aes256-sha384
- aes256-sha512
- aes256gcm-prfsha1
- aes256gcm-prfsha256

- aes256gcm-prfsha384
- aes256gcm-prfsha512

The ARIA algorithm is based on AES with different key lengths (128, 192, and 256 bits). FortiOS supports:

- aria128-md5
- aria128-sha1
- aria128-sha256
- aria128-sha384
- aria128-sha512
- aria192-md5
- aria192-sha1
- aria192-sha256
- aria192-sha384
- aria192-sha512
- aria256-md5
- aria256-sha1
- aria256-sha256
- aria256-sha384
- aria256-sha512

With the chacha20poly1305 encryption algorithm, FortiOS supports:

- chacha20poly1305-prfsha1
- chacha20poly1305-prfsha256
- chacha20poly1305-prfsha384
- chacha20poly1305-prfsha512

SEED is a symmetric-key algorithm. FortiOS supports:

- seed128-md5
- seed128-sha1
- seed128-sha256
- seed128-sha384
- seed128-sha512

Suite-B is a set of AES encryption with ICV in GCM mode. FortiOS supports Suite-B on new kernel platforms only. IPsec traffic **cannot** offload to NPU. CP9 supports Suite-B offloading, otherwise packets are encrypted and decrypted by software. FortiOS supports:

- suite-b-gcm-128
- suite-b-gcm-256

IKEv2 phase 2 encryption algorithm

The default encryption algorithm is:

```
aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm aes256gcm chacha20poly1305
```

With null encryption, IPsec traffic can offload NPU/CP. FortiOS supports:

- null-md5
- null-sha1
- null-sha256

- null-sha384
- null-sha512

With the DES encryption algorithm, IPsec traffic can offload NPU/CP. FortiOS supports:

- des-null
- des-md5
- des-sha1
- des-sha256
- des-sha384
- des-sha512

With the 3DES encryption algorithm, IPsec traffic can offload NPU/CP. FortiOS supports:

- 3des-null
- 3des-md5
- 3des-sha1
- 3des-sha256
- 3des-sha384
- 3des-sha512

With the AES encryption algorithm, IPsec traffic can offload NPU/CP. FortiOS supports:

- aes128-null
- aes128-md5
- aes128-sha1
- aes128-sha256
- aes128-sha384
- aes128-sha512
- aes192-null
- aes192-md5
- aes192-sha1
- aes192-sha256
- aes192-sha384
- aes192-sha512
- aes256-null
- aes256-md5
- aes256-sha1
- aes256-sha256
- aes256-sha384
- aes256-sha512

With the AESGCM encryption algorithm, IPsec traffic **cannot** offload NPU. CP9 supports AESGCM offloading. FortiOS supports:

- aes128gcm
- aes256gcm

With the chacha20poly1305 encryption algorithm, IPsec traffic **cannot** offload NPU/CP. FortiOS supports:

- chacha20poly1305

With the ARIA encryption algorithm, IPsec traffic **cannot** offload NPU/CP. FortiOS supports:

- aria128-null
- aria128-md5
- aria128-sha1
- aria128-sha256
- aria128-sha384
- aria128-sha512
- aria192-null
- aria192-md5
- aria192-sha1
- aria192-sha256
- aria192-sha384
- aria192-sha512
- aria256-null
- aria256-md5
- aria256-sha1
- aria256-sha256
- aria256-sha384
- aria256-sha512

With the SEED encryption algorithm, IPsec traffic **cannot** offload NPU/CP. FortiOS supports:

- seed-null
- seed-md5
- seed-sha1
- seed-sha256
- seed-sha384
- seed-sha512

HMAC settings

The FortiGate uses the HMAC based on the authentication proposal that is chosen in phase 1 or phase 2 of the IPsec configuration. Each proposal consists of the encryption-hash pair (such as 3des-sha256). The FortiGate matches the most secure proposal to negotiate with the peer.

To view the chosen proposal and the HMAC hash used:

```
# diagnose vpn ike gateway list

vd: root/0
name: MPLS
version: 1
interface: port1 3
addr: 192.168.2.5:500 -> 10.10.10.1:500
virtual-interface-addr: 172.31.0.2 -> 172.31.0.1
created: 1015820s ago
IKE SA: created 1/13 established 1/13 time 10/1626/21010 ms
IPsec SA: created 1/24 established 1/24 time 0/11/30 ms

  id/spi: 124 43b087dae99f7733/6a8473e58cd8990a
```

```
  direction: responder
  status: established 68693-68693s ago = 10ms
  proposal: 3des-sha256
  key: e0fa6ab8dc509b33-aa2cc549999b1823-c3cb9c337432646e
  lifetime/rekey: 86400/17436
  DPD sent/recv: 000001e1/00000000
```

Fragmenting IP packets before IPsec encapsulation

The `ip-fragmentation` command controls packet fragmentation before IPsec encapsulation, which can benefit packet loss in some environments.

The following options are available for the `ip-fragmentation` variable.

Option	Description
pre-encapsulation	Fragment before IPsec encapsulation.
post-encapsulation (default value)	Fragment after IPsec encapsulation (RFC compliant).

To configure packet fragmentation using the CLI:


```
config vpn ipsec phase1-interface
   edit "demo"
      set interface "port1"
      set authmethod signature
      set peertype any
      set net-device enable
      set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
      set ip-fragmentation pre-encapsulation
      set remote-gw 172.16.200.4
      set certificate "Fortinet_Factory"
   next
end
```

VXLAN over IPsec tunnel

This is an example of VXLAN over IPsec tunnel. VXLAN encapsulation is used in the `phase1-interface` setting and virtual-switch is used to bridge the internal with VXLAN over IPsec tunnel.

For more information, see .

Sample topology

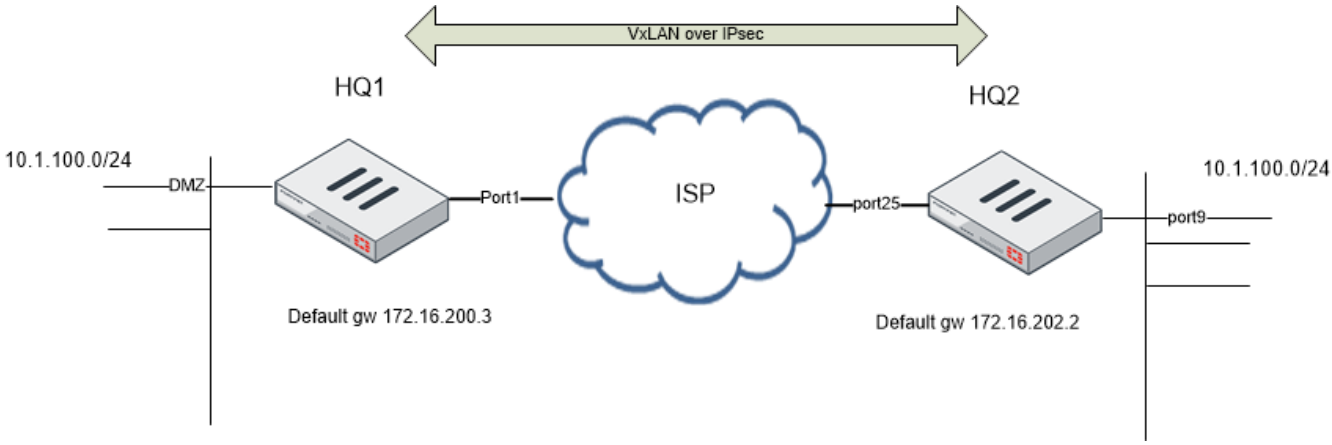

Sample configuration

To configure VXLAN over an IPsec tunnel:

1. Configure the WAN interface and default route:
   a. HQ1:

```
config system interface
    edit "port1"
        set ip 172.16.200.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 172.16.200.3
        set device "port1"
    next
end
```

   b. HQ2:

```
config system interface
    edit "port25"
        set ip 172.16.202.1 255.255.255.0
    next
end
config router static
    edit 1
        set gateway 172.16.202.2
        set device "port25"
    next
end
```

2. Configure IPsec phase1-interface:
   a. HQ1:

```
config vpn ipsec phase1-interface
    edit "to_HQ2"
        set interface "port1"
```

```
        set peertype any
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set encapsulation VXLAN
        set encapsulation-address ipv4
        set encap-local-gw4 172.16.200.1
        set encap-remote-gw4 172.16.202.1
        set remote-gw 172.16.202.1
        set psksecret sample
        next
end
config vpn ipsec phase2-interface
    edit "to_HQ2"
        set phase1name "to_HQ2"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
    next
end
```

b. HQ2:

```
config vpn ipsec phase1-interface
    edit "to_HQ1"
        set interface "port25"
        set peertype any
        set proposal aes128-sha256 aes256-sha256 aes128-sha1 aes256-sha1
        set encapsulation VXLAN
        set encapsulation-address ipv4
        set encap-local-gw4 172.16.202.1
        set encap-remote-gw4 172.16.200.1
        set remote-gw 172.16.200.1
        set psksecret sample
        next
end
config vpn ipsec phase2-interface
    edit "to_HQ1"
        set phase1name "to_HQ1"
        set proposal aes128-sha1 aes256-sha1 aes128-sha256 aes256-sha256 aes128gcm
aes256gcm chacha20poly1305
    next
end
```

3. Configure the virtual switch.

a. HQ1

```
config system switch-interface
    edit "VXLAN-HQ2"
        set member "dmz" "to_HQ2"
        set intra-switch-policy explicit
    next
end
```

b. HQ2

```
config system switch-interface
    edit "VXLAN-HQ1"
        set member "port9" "to_HQ1"
        set intra-switch-policy explicit
```

```
        next
    end
```

4. Configure the firewall policy:
   a. HQ1:

```
config firewall policy
    edit 1
        set srcintf "dmz"
        set dstintf "to_HQ2"
        set srcaddr "10.1.100.0"
        set dstaddr "10.1.100.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set srcintf "to_HQ2"
        set dstintf "dmz"
        set srcaddr "10.1.100.0"
        set dstaddr "10.1.100.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

   b. HQ2:

```
config firewall policy
    edit 1
        set srcintf "port9"
        set dstintf "to_HQ1"
        set srcaddr "10.1.100.0"
        set dstaddr "10.1.100.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set srcintf "to_HQ1"
        set dstintf "port9"
        set srcaddr "10.1.100.0"
        set dstaddr "10.1.100.0"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

5. Optionally, view the VPN tunnel list on HQ1 with the `diagnose vpn tunnel list` command:

```
list all ipsec tunnel in vd 0
----
name=to_HQ2 ver=1 serial=2 172.16.200.1:0->172.16.202.1:0
bound_if=5 lgwy=static/1 tun=intf/0 mode=auto/1 encap=VXLAN/2 options[0002]=
encap-addr: 172.16.200.1->172.16.202.1
proxyid_num=1 child_num=0 refcnt=11 ilast=8 olast=0 ad=/0
```

```
stat: rxp=13 txp=3693 rxb=5512 txb=224900
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=45
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=to_HQ2 proto=0 sa=1 ref=2 serial=1
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=3 options=10226 type=00 soft=0 mtu=1390 expire=41944/0B replaywin=2048
       seqno=e6e esn=0 replaywin_lastseq=0000000e itn=0
  life: type=01 bytes=0/0 timeout=42901/43200
  dec: spi=635e9bb1 esp=aes key=16 c8a374905ef9156e66504195f46a650c
       ah=sha1 key=20 a09265de7d3b0620b45441fb5af44dab125f2afe
  enc: spi=a4d0cd1e esp=aes key=16 e9d0f3f0bb7e15a833f80c42615a3b91
       ah=sha1 key=20 609a315c385471b8909b771c76e4fa7214996e50
  dec:pkts/bytes=13/4640, enc:pkts/bytes=3693/623240
```

6. Optionally, view the bridge control interface on HQ1 with the `diagnose netlink brctl name host VXLAN-HQ1` command:

```
show bridge control interface VXLAN-HQ1 host.
fdb: size=2048, used=17, num=17, depth=1
Bridge VXLAN-a host table
port no device  devname mac addr                ttl     attributes
  1      1.       dmz     00:0c:29:4e:33:c9        1.        Hit(1)
  1      1.       dmz     00:0c:29:a8:c3:ea      105      Hit(105)
  1      1.       dmz     90:6c:ac:53:76:29       18       Hit(18)
  1      1.       dmz     08:5b:0e:dd:69:cb        1.       Local Static
  1      1.       dmz     90:6c:ac:84:3e:5d        1.        Hit(5)
  1      1.       dmz     00:0b:fd:eb:21:d6        1.        Hit(0)
  2     38        to_HQ2  56:45:c3:3f:57:b4        1.       Local Static
  1      1.       dmz     00:0c:29:d2:66:40       78       Hit(78)
  2     38        to_HQ2  90:6c:ac:5b:a6:eb      124      Hit(124)
  1      1.       dmz     00:0c:29:a6:bc:e6       19       Hit(19)
  1      1.       dmz     00:0c:29:f0:a2:e7        1.        Hit(0)
  1      1.       dmz     00:0c:29:d6:c4:66      164      Hit(164)
  1      1.       dmz     00:0c:29:e7:68:19        1.        Hit(0)
  1      1.       dmz     00:0c:29:bf:79:30       19       Hit(19)
  1      1.       dmz     00:0c:29:e0:64:7d        1.        Hit(0)
  1      1.       dmz     36:ea:c7:30:c0:f1       25       Hit(25)
  1      1.       dmz     36:ea:c7:30:cc:71        1.        Hit(0)
```

VPN IPsec troubleshooting

See the following IPsec troubleshooting examples:

- Understanding VPN related logs
- IPsec related diagnose command on page 1302

Understanding VPN related logs

This section provides some IPsec log samples.

IPsec phase1 negotiating

```
logid="0101037127" type="event" subtype="vpn" level="notice" vd="root" eventtime=1544132571
logdesc="Progress IPsec phase 1" msg="progress IPsec phase 1" action="negotiate"
remip=11.101.1.1

    locip=173.1.1.1 remport=500 locport=500 outintf="port13"
    cookies="e41eeecb2c92b337/0000000000000000" user="N/A" group="N/A" xauthuser="N/A"
    xauthgroup="N/A" assignip=N/A vpntunnel="to_HQ" status="success" init="local"
    mode="aggressive" dir="outbound" stage=1 role="initiator" result="OK"
```

IPsec phase1 negotiated

```
logid="0101037127" type="event" subtype="vpn" level="notice" vd="root" eventtime=1544132571
logdesc="Progress IPsec phase 1" msg="progress IPsec phase 1" action="negotiate"
remip=11.101.1.1

    locip=173.1.1.1 remport=500 locport=500 outintf="port13"
    cookies="e41eeecb2c92b337/1230131a28eb4e73" user="N/A" group="N/A" xauthuser="N/A"
    xauthgroup="N/A" assignip=N/A vpntunnel="to_HQ" status="success" init="local"

mode="aggressive" dir="outbound" stage=2 role="initiator" result="DONE"
```

IPsec phase1 tunnel up

```
logid="0101037138" type="event" subtype="vpn" level="notice" vd="root" eventtime=1544132604
logdesc="IPsec connection status changed" msg="IPsec connection status change"
action="tunnel-up" remip=11.101.1.1 locip=173.1.1.1 remport=500 locport=500 outintf="port13"
cookies="5b1c59fab2029e43/bf517e686d3943d2" user="N/A" group="N/A" xauthuser="N/A"
xauthgroup="N/A" assignip=11.11.11.1 vpntunnel="to_HQ" tunnelip=N/A tunnelid=1530910918
tunneltype="ipsec" duration=0 sentbyte=0 rcvdbyte=0 nextstat=0
```

IPsec phase2 negotiate

```
logid="0101037129" type="event" subtype="vpn" level="notice" vd="root" eventtime=1544132604
logdesc="Progress IPsec phase 2" msg="progress IPsec phase 2" action="negotiate"
remip=11.101.1.1

locip=173.1.1.1 remport=500 locport=500 outintf="port13"
cookies="5b1c59fab2029e43/bf517e686d3943d2" user="N/A" group="N/A" xauthuser="N/A"
xauthgroup="N/A" assignip=11.11.11.1 vpntunnel="to_HQ" status="success" init="local"

mode="quick" dir="outbound" stage=1 role="initiator" result="OK"
```

IPsec phase2 tunnel up

```
logid="0101037139" type="event" subtype="vpn" level="notice" vd="root" eventtime=1544132604
logdesc="IPsec phase 2 status changed" msg="IPsec phase 2 status change" action="phase2-up"

    remip=11.101.1.1 locip=173.1.1.1 remport=500 locport=500 outintf="port13"
    cookies="5b1c59fab2029e43/bf517e686d3943d2" user="N/A" group="N/A" xauthuser="N/A"
    xauthgroup="N/A" assignip=11.11.11.1 vpntunnel="to_HQ"

phase2_name="to_HQ"
```

IPsec phase2 sa install

```
logid="0101037133" type="event" subtype="vpn" level="notice" vd="root" eventtime=1544132604
logdesc="IPsec SA installed" msg="install IPsec SA" action="install_sa" remip=11.101.1.1
locip=173.1.1.1

    remport=500 locport=500 outintf="port13" cookies="5b1c59fab2029e43/bf517e686d3943d2"
    user="N/A" group="N/A" xauthuser="N/A" xauthgroup="N/A" assignip=11.11.11.1
    vpntunnel="to_HQ" role="initiator" in_spi="ca646448" out_spi="747c10c6"
```

IPsec tunnel statistics

```
logid="0101037141" type="event" subtype="vpn" level="notice" vd="root" eventtime=1544131118
logdesc="IPsec tunnel statistics" msg="IPsec tunnel statistics" action="tunnel-stats"
remip=10.1.100.15 locip=172.16.200.4 remport=500 locport=500 outintf="mgmt1"
cookies="3539884dbd8f3567/c32e4c1beca91b36"

    user="N/A" group="N/A" xauthuser="N/A" xauthgroup="N/A" assignip=N/A
    vpntunnel="L2tpoIPsec_0" tunnelip=10.1.100.15 tunnelid=1530910802 tunneltype="ipsec"
    duration=6231 sentbyte=57343 rcvdbyte=142640 nextstat=60
```

IPsec phase2 tunnel down

```
logid="0101037138" type="event" subtype="vpn" level="notice" vd="root" eventtime=1544132571
logdesc="IPsec connection status changed" msg="IPsec connection status change"
action="tunnel-down" remip=11.101.1.1 locip=173.1.1.1 remport=500 locport=500
outintf="port13" cookies="30820aa390687e39/886e72bf5461fb8d" user="N/A" group="N/A"
xauthuser="N/A" xauthgroup="N/A" assignip=11.11.11.1 vpntunnel="to_HQ" tunnelip=N/A
tunnelid=1530910786 tunneltype="ipsec" duration=6425 sentbyte=504 rcvdbyte=152 nextstat=0
```

IPsec phase1 sa deleted

```
logid="0101037134" type="event" subtype="vpn" level="notice" vd="root" eventtime=1544132571
logdesc="IPsec phase 1 SA deleted" msg="delete IPsec phase 1 SA" action="delete_phase1_sa"
remip=11.101.1.1 locip=173.1.1.1 remport=500 locport=500 outintf="port13"
cookies="30820aa390687e39/886e72bf5461fb8d" user="N/A" group="N/A" xauthuser="N/A"
xauthgroup="N/A" assignip=11.11.11.1 vpntunnel="to_HQ"
```

IPsec related diagnose command

This section provides IPsec related diagnose commands.

- Daemon IKE summary information list: `diagnose vpn ike status`

  ```
  connection: 2/50
  IKE SA: created 2/51  established 2/9  times 0/13/40 ms
  IPsec SA: created 1/13  established 1/7  times 0/8/30 ms
  ```

- IPsec phase1 interface status: `diagnose vpn ike gateway list`

  ```
  vd: root/0
  name: tofgtc
  version: 1
  interface: port13 42
  addr: 173.1.1.1:500 -> 172.16.200.3:500
  created: 4313s ago
  ```

```
IKE SA: created 1/1  established 1/1  time 10/10/10 ms
IPsec SA: created 0/0

  id/spi: 92 5639f7f8a5dc54c0/809a6c9bbd266a4b
  direction: initiator
  status: established 4313-4313s ago = 10ms
  proposal: aes128-sha256
  key: 74aa3d63d88e10ea-8a1c73b296b06578
  lifetime/rekey: 86400/81786
  DPD sent/recv: 00000000/00000000

vd: root/0
name: to_HQ
version: 1
interface: port13 42
addr: 173.1.1.1:500 -> 11.101.1.1:500
created: 1013s ago
assigned IPv4 address: 11.11.11.1/255.255.255.252
IKE SA: created 1/1  established 1/1  time 0/0/0 ms
IPsec SA: created 1/1  established 1/1  time 0/0/0 ms

  id/spi: 95 255791bd30c749f4/c2505db65210258b
  direction: initiator
  status: established 1013-1013s ago = 0ms
  proposal: aes128-sha256
  key: bb101b9127ed5844-1582fd614d5a8a33
  lifetime/rekey: 86400/85086
  DPD sent/recv: 00000000/00000010
```

- IPsec phase2 tunnel status: `diagnose vpn tunnel list`

```
list all ipsec tunnel in vd 0
----
nname=L2tpoIPsec ver=1 serial=6 172.16.200.4:0->0.0.0.0:0
bound_if=4 lgwy=static/1 tun=intf/0 mode=dialup/2 encap=none/24 options[0018]=npu
create_dev
proxyid_num=0 child_num=0 refcnt=10 ilast=13544 olast=13544 ad=/0
stat: rxp=0 txp=0 rxb=0 txb=0
dpd: mode=on-idle on=0 idle=60000ms retry=3 count=0 seqno=0
natt: mode=none draft=0 interval=0 remote_port=0
run_tally=0
----
name=to_HQ ver=1 serial=7 173.1.1.1:0->11.101.1.1:0
bound_if=42 lgwy=static/1 tun=intf/0 mode=auto/1 encap=none/8 options[0008]=npu
proxyid_num=1 child_num=0 refcnt=13 ilast=10 olast=1112 ad=/0
stat: rxp=1 txp=4 rxb=152 txb=336
dpd: mode=on-demand on=1 idle=20000ms retry=3 count=0 seqno=5
natt: mode=none draft=0 interval=0 remote_port=0
proxyid=to_HQ proto=0 sa=1 ref=2 serial=1
  src: 0:0.0.0.0/0.0.0.0:0
  dst: 0:0.0.0.0/0.0.0.0:0
  SA:  ref=6 options=10226 type=00 soft=0 mtu=1438 expire=41773/0B replaywin=2048
       seqno=5 esn=0 replaywin_lastseq=00000002 itn=0
  life: type=01 bytes=0/0 timeout=42900/43200
  dec: spi=ca64644a esp=aes key=16 6cc873fdef91337a6cf9b6948972c90f
       ah=sha1 key=20 e576dbe3ff92605931e5670ad57763c50c7dc73a
  enc: spi=747c10c8 esp=aes key=16 5060ad8d0da6824204e3596c0bd762f4
```

```
        ah=sha1 key=20 52965cbd5b6ad95212fc825929d26c0401948abe
  dec:pkts/bytes=1/84, enc:pkts/bytes=4/608
  npu_flag=03 npu_rgwy=11.101.1.1 npu_lgwy=173.1.1.1 npu_selid=5 dec_npuid=2 enc_npuid=2
```

- Packets encrypted/decrypted counter: `diagnose vpn ipsec status`

```
All ipsec crypto devices in use:
NP6_0:
    Encryption (encrypted/decrypted)
        null             : 0                1.
        des              : 0                1.
        3des             : 0                1.
        aes              : 0                1.
        aes-gcm          : 0                1.
        aria             : 0                1.
        seed             : 0                1.
        chacha20poly1305 : 0                1.
    Integrity (generated/validated)
        null             : 0                1.
        md5              : 0                1.
        sha1             : 0                1.
        sha256           : 0                1.
        sha384           : 0                1.
        sha512           : 0                1.

NP6_1:
    Encryption (encrypted/decrypted)
        null             : 0                1.
        des              : 0                1.
        3des             : 0                1.
        aes              : 337152           46069
        aes-gcm          : 0                1.
        aria             : 0                1.
        seed             : 0                1.
        chacha20poly1305 : 0                1.
    Integrity (generated/validated)
        null             : 0                1.
        md5              : 0                1.
        sha1             : 337152           46069
        sha256           : 0                1.
        sha384           : 0                1.
        sha512           : 0                1.

NPU Host Offloading:
    Encryption (encrypted/decrypted)
        null             : 0                1.
        des              : 0                1.
        3des             : 0                1.
        aes              : 38               1.
        aes-gcm          : 0                1.
        aria             : 0                1.
        seed             : 0                1.
        chacha20poly1305 : 0                1.
    Integrity (generated/validated)
        null             : 0                1.
        md5              : 0                1.
        sha1             : 38               1.
```

```
        sha256           : 0                1.
        sha384           : 0                1.
        sha512           : 0                1.

CP8:
    Encryption (encrypted/decrypted)
        null             : 0                1.
        des              : 0                1.
        3des             : 1337             1582
        aes              : 71               11426
        aes-gcm          : 0                1.
        aria             : 0                1.
        seed             : 0                1.
        chacha20poly1305 : 0                1.
    Integrity (generated/validated)
        null             : 0                1.
        md5              : 48               28
        sha1             : 1360             12980
        sha256           : 0                1.
        sha384           : 0                1.
        sha512           : 0                1.

SOFTWARE:
    Encryption (encrypted/decrypted)
        null             : 0                1.
        des              : 0                1.
        3des             : 0                1.
        aes              : 0                1.
        aes-gcm          : 0                1.
        aria             : 0                1.
        seed             : 0                1.
        chacha20poly1305 : 0                1.
    Integrity (generated/validated)
        null             : 0                1.
        md5              : 0                1.
        sha1             : 0                1.
        sha256           : 0                1.
        sha384           : 0                1.
        sha512           : 0                1.
```

- diagnose debug application ike -1
  - diagnose vpn ike log-filter dst-addr4 11.101.1.1
  - diagnose vpn ike log-filter src-addr4 173.1.1.1

```
# ike 0:to_HQ:101: initiator: aggressive mode is sending 1st message...
ike 0:to_HQ:101: cookie dff03f1d4820222a/0000000000000000
ike 0:to_HQ:101: sent IKE msg (agg_i1send): 173.1.1.1:500->11.101.1.1:500, len=912,
id=dff03f1d4820222a/0000000000000000
ike 0: comes 11.101.1.1:500->173.1.1.1:500,ifindex=42....
ike 0: IKEv1 exchange=Aggressive id=dff03f1d4820222a/6c2caf4dcf5bab75 len=624
ike 0:to_HQ:101: initiator: aggressive mode get 1st response...
ike 0:to_HQ:101: VID RFC 3947 4A131C81070358455C5728F20E95452F
ike 0:to_HQ:101: VID DPD AFCAD71368A1F1C96B8696FC77570100
ike 0:to_HQ:101: DPD negotiated
ike 0:to_HQ:101: VID draft-ietf-ipsra-isakmp-xauth-06.txt 09002689DFD6B712
ike 0:to_HQ:101: VID CISCO-UNITY 12F5F28C457168A9702D9FE274CC0204
```

```
ike 0:to_HQ:101: peer supports UNITY
ike 0:to_HQ:101: VID FORTIGATE 8299031757A36082C6A621DE00000000
ike 0:to_HQ:101: peer is [[QualityAssurance62/FortiGate]]/FortiOS (v0 b0)
ike 0:to_HQ:101: VID FRAGMENTATION 4048B7D56EBCE88525E7DE7F00D6C2D3
ike 0:to_HQ:101: VID FRAGMENTATION 4048B7D56EBCE88525E7DE7F00D6C2D3C0000000
ike 0:to_HQ:101: peer identifier IPV4_ADDR 11.101.1.1
ike 0:to_HQ:101: negotiation result
ike 0:to_HQ:101: proposal id = 1:
ike 0:to_HQ:101:   protocol id = ISAKMP:
ike 0:to_HQ:101:      trans_id = KEY_IKE.
ike 0:to_HQ:101:      encapsulation = IKE/none
ike 0:to_HQ:101:         type=OAKLEY_ENCRYPT_ALG, val=AES_CBC, key-len=128
ike 0:to_HQ:101:         type=OAKLEY_HASH_ALG, val=SHA2_256.
ike 0:to_HQ:101:         type=AUTH_METHOD, val=PRESHARED_KEY_XAUTH_I.
ike 0:to_HQ:101:         type=OAKLEY_GROUP, val=MODP2048.
ike 0:to_HQ:101: ISAKMP SA lifetime=86400
ike 0:to_HQ:101: received NAT-D payload type 20
ike 0:to_HQ:101: received NAT-D payload type 20
ike 0:to_HQ:101: selected NAT-T version: RFC 3947
ike 0:to_HQ:101: NAT not detected
ike 0:to_HQ:101: ISAKMP SA dff03f1d4820222a/6c2caf4dcf5bab75 key
16:D81CAE6B2500435BFF195491E80148F3
ike 0:to_HQ:101: PSK authentication succeeded
ike 0:to_HQ:101: authentication OK
ike 0:to_HQ:101: add INITIAL-CONTACT
ike 0:to_HQ:101: sent IKE msg (agg_i2send): 173.1.1.1:500->11.101.1.1:500, len=172,
id=dff03f1d4820222a/6c2caf4dcf5bab75
ike 0:to_HQ:101: established IKE SA dff03f1d4820222a/6c2caf4dcf5bab75
ike 0: comes 11.101.1.1:500->173.1.1.1:500,ifindex=42....
ike 0: IKEv1 exchange=Mode config id=dff03f1d4820222a/6c2caf4dcf5bab75:97d88fb4 len=92
ike 0:to_HQ:101: mode-cfg type 16521 request 0:
ike 0:to_HQ:101: mode-cfg type 16522 request 0:
ike 0:to_HQ:101: sent IKE msg (cfg_send): 173.1.1.1:500->11.101.1.1:500, len=108,
id=dff03f1d4820222a/6c2caf4dcf5bab75:97d88fb4
ike 0: comes 11.101.1.1:500->173.1.1.1:500,ifindex=42....
ike 0: IKEv1 exchange=Mode config id=dff03f1d4820222a/6c2caf4dcf5bab75:3724f295 len=92
ike 0:to_HQ:101: sent IKE msg (cfg_send): 173.1.1.1:500->11.101.1.1:500, len=92,
id=dff03f1d4820222a/6c2caf4dcf5bab75:3724f295
ike 0:to_HQ:101: initiating mode-cfg pull from peer
ike 0:to_HQ:101: mode-cfg request APPLICATION_VERSION
ike 0:to_HQ:101: mode-cfg request INTERNAL_IP4_ADDRESS
ike 0:to_HQ:101: mode-cfg request INTERNAL_IP4_NETMASK
ike 0:to_HQ:101: mode-cfg request UNITY_SPLIT_INCLUDE
ike 0:to_HQ:101: mode-cfg request UNITY_PFS
ike 0:to_HQ:101: sent IKE msg (cfg_send): 173.1.1.1:500->11.101.1.1:500, len=140,
id=dff03f1d4820222a/6c2caf4dcf5bab75:3bca961f
ike 0: comes 11.101.1.1:500->173.1.1.1:500,ifindex=42....
ike 0: IKEv1 exchange=Mode config id=dff03f1d4820222a/6c2caf4dcf5bab75:3bca961f len=172
ike 0:to_HQ:101: mode-cfg type 1 response 4:0B0B0B01
ike 0:to_HQ:101: mode-cfg received INTERNAL_IP4_ADDRESS 11.11.11.1
ike 0:to_HQ:101: mode-cfg type 2 response 4:FFFFFFFC
ike 0:to_HQ:101: mode-cfg received INTERNAL_IP4_NETMASK 255.255.255.252
ike 0:to_HQ:101: mode-cfg received UNITY_PFS 1
ike 0:to_HQ:101: mode-cfg type 28676 response
28:0A016400FFFFFF000000000000000A016500FFFFFF00000000000000
```

```
ike 0:to_HQ:101: mode-cfg received UNITY_SPLIT_INCLUDE 0 10.1.100.0/255.255.255.0:0
local port 0
ike 0:to_HQ:101: mode-cfg received UNITY_SPLIT_INCLUDE 0 10.1.101.0/255.255.255.0:0
local port 0
ike 0:to_HQ:101: mode-cfg received APPLICATION_VERSION 'FortiGate-100D
v6.0.3,build0200,181009 (GA)'
ike 0:to_HQ: mode-cfg add 11.11.11.1/255.255.255.252 to 'to_HQ'/58
ike 0:to_HQ: set oper up
ike 0:to_HQ: schedule auto-negotiate
ike 0:to_HQ:101: no pending Quick-Mode negotiations
ike shrank heap by 159744 bytes
ike 0:to_HQ:to_HQ: IPsec SA connect 42 173.1.1.1->11.101.1.1:0
ike 0:to_HQ:to_HQ: using existing connection

# ike 0:to_HQ:to_HQ: config found
ike 0:to_HQ:to_HQ: IPsec SA connect 42 173.1.1.1->11.101.1.1:500 negotiating
ike 0:to_HQ:101: cookie dff03f1d4820222a/6c2caf4dcf5bab75:32f4cc01
ike 0:to_HQ:101:to_HQ:259: initiator selectors 0 0:0.0.0.0/0.0.0.0:0:0-
>0:0.0.0.0/0.0.0.0:0:0
ike 0:to_HQ:101: sent IKE msg (quick_i1send): 173.1.1.1:500->11.101.1.1:500, len=620,
id=dff03f1d4820222a/6c2caf4dcf5bab75:32f4cc01
ike 0: comes 11.101.1.1:500->173.1.1.1:500,ifindex=42....
ike 0: IKEv1 exchange=Quick id=dff03f1d4820222a/6c2caf4dcf5bab75:32f4cc01 len=444
ike 0:to_HQ:101:to_HQ:259: responder selectors 0:0.0.0.0/0.0.0.0:0->0:0.0.0.0/0.0.0.0:0
ike 0:to_HQ:101:to_HQ:259: my proposal:
ike 0:to_HQ:101:to_HQ:259: proposal id = 1:
ike 0:to_HQ:101:to_HQ:259:   protocol id = IPSEC_ESP:
ike 0:to_HQ:101:to_HQ:259:   PFS DH group = 14
ike 0:to_HQ:101:to_HQ:259:      trans_id = ESP_AES_CBC (key_len = 128)
ike 0:to_HQ:101:to_HQ:259:      encapsulation = ENCAPSULATION_MODE_TUNNEL
ike 0:to_HQ:101:to_HQ:259:         type = AUTH_ALG, val=SHA1
ike 0:to_HQ:101:to_HQ:259:      trans_id = ESP_AES_CBC (key_len = 256)
ike 0:to_HQ:101:to_HQ:259:      encapsulation = ENCAPSULATION_MODE_TUNNEL
ike 0:to_HQ:101:to_HQ:259:         type = AUTH_ALG, val=SHA1
ike 0:to_HQ:101:to_HQ:259:      trans_id = ESP_AES_CBC (key_len = 128)
ike 0:to_HQ:101:to_HQ:259:      encapsulation = ENCAPSULATION_MODE_TUNNEL
ike 0:to_HQ:101:to_HQ:259:         type = AUTH_ALG, val=SHA2_256
ike 0:to_HQ:101:to_HQ:259:      trans_id = ESP_AES_CBC (key_len = 256)
ike 0:to_HQ:101:to_HQ:259:      encapsulation = ENCAPSULATION_MODE_TUNNEL
ike 0:to_HQ:101:to_HQ:259:         type = AUTH_ALG, val=SHA2_256
ike 0:to_HQ:101:to_HQ:259:      trans_id = ESP_AES_GCM_16 (key_len = 128)
ike 0:to_HQ:101:to_HQ:259:      encapsulation = ENCAPSULATION_MODE_TUNNEL
ike 0:to_HQ:101:to_HQ:259:         type = AUTH_ALG, val=NULL
ike 0:to_HQ:101:to_HQ:259:      trans_id = ESP_AES_GCM_16 (key_len = 256)
ike 0:to_HQ:101:to_HQ:259:      encapsulation = ENCAPSULATION_MODE_TUNNEL
ike 0:to_HQ:101:to_HQ:259:         type = AUTH_ALG, val=NULL
ike 0:to_HQ:101:to_HQ:259:      trans_id = ESP_CHACHA20_POLY1305 (key_len = 256)
ike 0:to_HQ:101:to_HQ:259:      encapsulation = ENCAPSULATION_MODE_TUNNEL
ike 0:to_HQ:101:to_HQ:259:         type = AUTH_ALG, val=NULL
ike 0:to_HQ:101:to_HQ:259: incoming proposal:
ike 0:to_HQ:101:to_HQ:259: proposal id = 1:
ike 0:to_HQ:101:to_HQ:259:   protocol id = IPSEC_ESP:
ike 0:to_HQ:101:to_HQ:259:   PFS DH group = 14
ike 0:to_HQ:101:to_HQ:259:      trans_id = ESP_AES_CBC (key_len = 128)
ike 0:to_HQ:101:to_HQ:259:      encapsulation = ENCAPSULATION_MODE_TUNNEL
ike 0:to_HQ:101:to_HQ:259:         type = AUTH_ALG, val=SHA1
ike 0:to_HQ: schedule auto-negotiate
```

```
ike 0:to_HQ:101:to_HQ:259: replay protection enabled
ike 0:to_HQ:101:to_HQ:259: SA life soft seconds=42902.
ike 0:to_HQ:101:to_HQ:259: SA life hard seconds=43200.
ike 0:to_HQ:101:to_HQ:259: IPsec SA selectors #src=1 #dst=1
ike 0:to_HQ:101:to_HQ:259: src 0 4 0:0.0.0.0/0.0.0.0:0
ike 0:to_HQ:101:to_HQ:259: dst 0 4 0:0.0.0.0/0.0.0.0:0
ike 0:to_HQ:101:to_HQ:259: add IPsec SA: SPIs=ca64644b/747c10c9
ike 0:to_HQ:101:to_HQ:259: IPsec SA dec spi ca64644b key
16:D5C60F1A3951B288CE4DEC7E04D2119D auth 20:F872A7A26964208A9AA368A31AEFA3DB3F3780BC
ike 0:to_HQ:101:to_HQ:259: IPsec SA enc spi 747c10c9 key
16:97952E1594F718128D9D7B09400856EA auth 20:4D5E5BC45A9D5A9A4631E911932F5650A4639A37
ike 0:to_HQ:101:to_HQ:259: added IPsec SA: SPIs=ca64644b/747c10c9
ike 0:to_HQ:101:to_HQ:259: sending SNMP tunnel UP trap
ike 0:to_HQ:101: sent IKE msg (quick_i2send): 173.1.1.1:500->11.101.1.1:500, len=76,
id=dff03f1d4820222a/6c2caf4dcf5bab75:32f4cc01
```

SSL VPN

The following topics provide information about SSL VPN:

- SSL VPN best practices on page 1308
- SSL VPN quick start on page 1311
- SSL VPN tunnel mode on page 1317
- SSL VPN web mode for remote user on page 1324
- SSL VPN authentication on page 1328
- SSL VPN to IPsec VPN on page 1407
- SSL VPN protocols on page 1417
- SSL VPN troubleshooting on page 1418

SSL VPN best practices

Securing remote access to network resources is a critical part of security operations. SSL VPN allows administrators to configure, administer, and deploy a remote access strategy for their remote workers.

Choosing the correct mode of operation and applying the proper levels of security are integral to providing optimal performance and user experience, and keeping your user data safe.

The below guidelines outline selecting the correct SSL VPN mode for your deployment and employing best practices to ensure that your data are protected.

Information about SSL VPN throughput and maximum concurrent users is available on your device's datasheet; see Next-Generation Firewalls Models and Specifications.

Tunnel mode

In tunnel mode, the SSL VPN client encrypts all traffic from the remote client computer and sends it to the FortiGate through an SSL VPN tunnel over the HTTPS link between the user and the FortiGate.

The FortiGate establishes a tunnel with the client, and assigns a virtual IP (VIP) address to the client from a range reserved addresses. While the underlying protocols are different, the outcome is very similar to a IPsec VPN tunnel. All client traffic is encrypted, allowing the users and networks to exchange a wide range of traffic, regardless of the application or protocols.

Use this mode if you require:

- A wide range of applications and protocols to be accessed by the remote client.
- No proxying is done by the FortiGate.
- Straightforward configuration and administration, as traffic is controlled by firewall policies.
- A transparent experience for the end user. For example, a user that needs to RDP to their server only requires a tunnel connection; they can then use the usual client application, like Windows Remote Desktop, to connect.

Full tunneling forces all traffic to pass through the FortiGate (see SSL VPN full tunnel for remote user on page 1317). Split tunneling only routes traffic to the designated network through the FortiGate (see SSL VPN split tunnel for remote user on page 1311).

Limitations

Tunnel mode requires that the FortiClient VPN client be installed on the remote end. The standalone FortiClient VPN client is free to use, and can accommodate SSL VPN and IPsec VPN tunnels. For supported operating systems, see the FortiClient Technical Specifications.

Web mode

Web-only mode provides clientless network access using a web browser with built-in SSL encryption. Users authenticate to FortiGate's SSL VPN Web Portal, which provides access to network services and resources, including HTTP/HTTPS, Telnet, FTP, SMB/CIFS, VNC, RDP, and SSH. When a user starts a connection to a server from the web portal, FortiOS proxies this communication with the server. All communication between the FortiGate and the user continues to be over HTTPS, regardless of the service that is being accesssed.

Use this mode if you require:

- A clientless solution in which all remote services are access through a web portal.
- Tight control over the contents of the web portal.
- Limited services provided to the remote users.

Limitations

- Multiple applications and protocols are not supported.
- VNC and RDP access might have limitations, such as certain shortcut keys not being supported.
- In some configurations RDP can consume a significant amount of memory and CPU time.
- Firewall performance might decrease as remote usage increases.
- Highly customized web pages might not render correctly.

Security best practices

Integrate with authentication servers

For networks with many users, integrate your user configuration with existing authentication servers through LDAP, RADIUS, or FortiAuthenticator.

By integrating with existing authentication servers, such as Windows AD, there is a lower change of making mistakes when configuring local users and user groups. Your administration effort is also reduces.

See SSL VPN with LDAP user authentication on page 1329 for more information.

Use a non-factory SSL certificate for the SSL VPN portal

Your certificate should identify your domain so that a remote user can recognize the identity of the server or portal that they are accessing through a trusted CA.

The default Fortinet factory self-signed certificates are provided to simplify initial installation and testing. If you use these certificates you are vulnerable to man-in-the-middle attacks, where an attacker spoofs your certificate, compromises your connection, and steals your personal information. It is highly recommended that you purchase a server certificate from a trusted CA to allow remote users to connect to SSL VPN with confidence. See Purchase and import a signed SSL certificate on page 722 for more information.

Enabling the *Do not Warn Invalid Server Certificate* option on the client disables the certificate warning message, potentially allowing users to accidentally connect to untrusted servers. Disabling invalid server certificate warnings is not recommended.

Use multi-factor authentication

Multi-factor authentication (MFA) ensures that the end-user is who they claim to be by requiring at least two factors - a piece of information that the user knows (password), and an asset that the user has (OTP). A third factor, something a user is (fingerprint or face), may be enabled as well. FortiToken Mobile is typically used for MFA.

FortiGate comes with two free FortiTokens, and more can be purchased from the FortiToken Mobile iOS app or through Fortinet partners.

See SSL VPN with FortiToken mobile push authentication on page 1351 for more information.

2FA, a subset of MFA, can also be set up with email tokens. See Email Two-Factor Authentication on FortiGate for information.

Deploy user certificates for remote SSL VPN users

This method of 2FA uses a user certificate as the second authentication factor. This is more secure, as it identifies the end user using a certificate. The configuration and administration of this solution is significantly more complicated, and requires administrators with advanced knowledge of the FortiGate and certificate deployment.

See SSL VPN with certificate authentication on page 1388 for more information.

Define your minimum supported TLS version and cipher suites

Minimum and maximum supported TLS version can be configured in the FortiGate CLI. The cipher algorithm can also be customized.

See How to control the SSL version and cipher suite for SSL VPN for more information.

Properly administer firewall policies and profiles against only the access level required for the remote user

Users do not all require the same access. Access should only be granted after careful considerations. Typically, users are placed in groups, and each group is allowed access to limited resources.

Using SSL VPN realms simplifies defining the control structure for mapping users and groups to the appropriate resources.

See SSL VPN multi-realm on page 1402 for more information.

SSL VPN quick start


The following topics provide introductory instructions on configuring SSL VPN:

- SSL VPN split tunnel for remote user on page 1311
- Connecting from FortiClient VPN client on page 1314
- Set up FortiToken multi-factor authentication on page 1316
- Connecting from FortiClient with FortiToken on page 1317

SSL VPN split tunnel for remote user

This is a sample configuration of remote users accessing the corporate network and internet through an SSL VPN by tunnel mode using FortiClient but accessing the Internet without going through the SSL VPN tunnel.

Sample topology

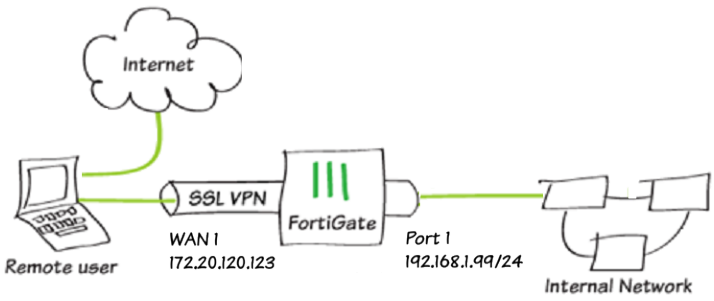

Sample configuration

WAN interface is the interface connected to ISP. This example shows static mode. You can also use DHCP or PPPoE mode. The SSL VPN connection is established over the WAN interface.



The split tunneling routing address cannot use an FQDN or an address group that includes an FQDN.

To configure SSL VPN using the GUI:

1. Configure the interface and firewall address. The port1 interface connects to the internal network.
   a. Go to *Network* > *Interfaces* and edit the *wan1* interface.
   b. Set *IP/Network Mask* to *172.20.120.123/255.255.255.0*.
   c. Edit *port1* interface and set *IP/Network Mask* to *192.168.1.99/255.255.255.0*.
   d. Click *OK*.
   e. Go to *Policy & Objects* > *Address* and create an address for internal subnet *192.168.1.0*.

2. Configure user and user group.
   a. Go to *User & Device* > *User Definition* to create a local user *sslvpnuser1*.
   b. Go to *User & Device* > *User Groups* to create a group *sslvpngroup* with the member *sslvpnuser1*.
3. Configure SSL VPN web portal.
   a. Go to *VPN* > *SSL-VPN Portals* to create a tunnel mode only portal *my-split-tunnel-portal*.
   b. Enable *Split Tunneling*.
   c. Select *Routing Address* to define the destination network that will be routed through the tunnel. Leave undefined to use the destination in the respective firewall policies.
4. Configure SSL VPN settings.
   a. Go to *VPN* > *SSL-VPN Settings*.
   b. For *Listen on Interface(s)*, select *wan1*.
   c. Set *Listen on Port* to *10443*.
   d. Optionally, set *Restrict Access* to *Limit access to specific hosts*, and specify the addresses of the hosts that are allowed to connect to this VPN.
   e. Choose a certificate for *Server Certificate*. The default is *Fortinet_Factory*.
   f. In *Authentication/Portal Mapping All Other Users/Groups*, set the *Portal* to *tunnel-access*.
   g. Create new *Authentication/Portal Mapping* for group *sslvpngroup* mapping portal *my-split-tunnel-portal*.
5. Configure SSL VPN firewall policy.
   a. Go to *Policy & Objects* > *IPv4 Policy*.
   b. Fill in the firewall policy name. In this example, *sslvpn split tunnel access*.
   c. Incoming interface must be *SSL-VPN tunnel interface(ssl.root)*.
   d. Choose an *Outgoing Interface*. In this example, *port1*.
   e. Set the *Source* to *SSLVPN_TUNNEL_ADDR1* and group to *sslvpngroup*. The source address references the tunnel IP addresses that the remote clients are using.
   f. In this example, the *Destination* is *192.168.1.0*.
   g. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
   h. Click *OK*.

To configure SSL VPN using the CLI:

1. Configure the interface and firewall address.

```
config system interface
    edit "wan1"
        set vdom "root"
        set ip 172.20.120.123 255.255.255.0
    next
end
```

2. Configure internal interface and protected subnet, then connect the port1 interface to the internal network.

```
config system interface
    edit "port1"
        set vdom "root"
        set ip 192.168.1.99 255.255.255.0
    next
end

config firewall address
    edit "192.168.1.0"
        set subnet 192.168.1.0 255.255.255.0
```

```
    next
end
```

3. Configure user and user group.

```
config user local
    edit "sslvpnuser1"
        set type password
        set passwd your-password
    next
end

config user group
    edit "sslvpngroup"
        append member "sslvpnuser1"
    next
end
```

4. Configure SSL VPN web portal.

```
config vpn ssl web portal
    edit "my-split-tunnel-portal"
        set tunnel-mode enable
        set split-tunneling  enable
        set split-tunneling-routing-address "192.168.1.0"
        set ip-pools "SSLVPN_TUNNEL_ADDR1"
    next
end
```

5. Configure SSL VPN settings.

```
config vpn ssl settings
    set servercert "Fortinet_Factory"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set tunnel-ipv6-pools "SSLVPN_TUNNEL_IPv6_ADDR1"
    set source-interface "wan1"
    set source-address "all"
    set source-address6 "all"
    set default-portal "full-access"
    config authentication-rule
        edit 1
            set groups "sslvpngroup"
            set portal "my-split-tunnel-portal"
        next
    next
end
```

Optionally, to restrict access to specific hosts:

```
config vpn ssl settings
    set source-address <address> <address> ... <address>
    set source-address6 <address> <address> ... <address>
end
```

6. Configure one SSL VPN firewall policy to allow remote user to access the internal network. Traffic is dropped from internal to remote client.

```
config firewall policy
    edit 1
        set name "sslvpn split tunnel access"
```

```
            set srcintf "ssl.root"
            set dstintf "port1"
            set srcaddr "SSLVPN_TUNNEL_ADDR1"
            set dstaddr "192.168.1.0"
            set groups "sslvpngroup"
            set action accept
            set schedule "always"
            set service "ALL"
        next
    end
```


Connecting from FortiClient VPN client

For FortiGate administrators, a free version of FortiClient VPN is available which supports basic IPsec and SSL VPN and does not require registration with EMS. This version does not include central management, technical support, or some advanced features.

Downloading and installing the standalone FortiClient VPN client

You can download the free VPN client from FNDN or FortiClient.com.


When the free VPN client is run for the first time, it displays a disclaimer. You cannot configure or create a VPN connection until you accept the disclaimer and click *I accept*:

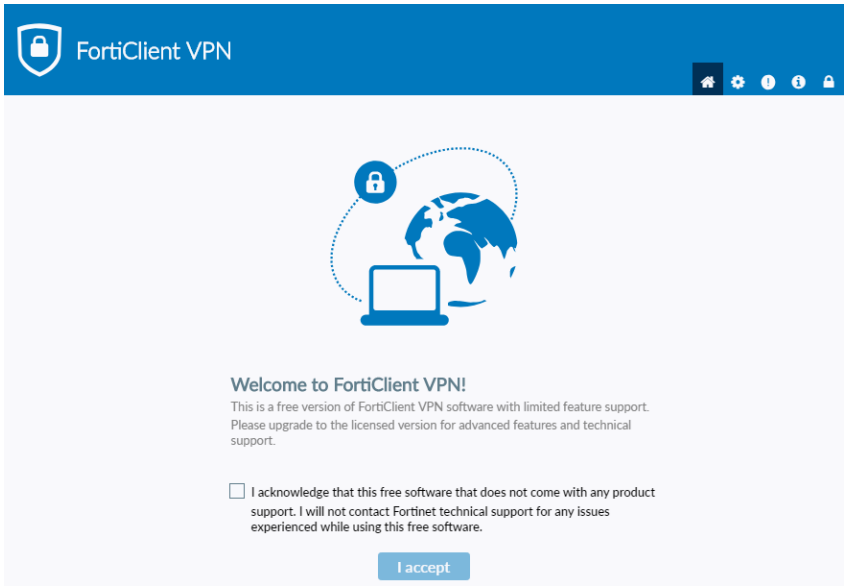

Configuring an SSL VPN connection

To configure an SSL VPN connection:

1. On the *Remote Access* tab, click on the settings icon and then *Add a New Connection*.

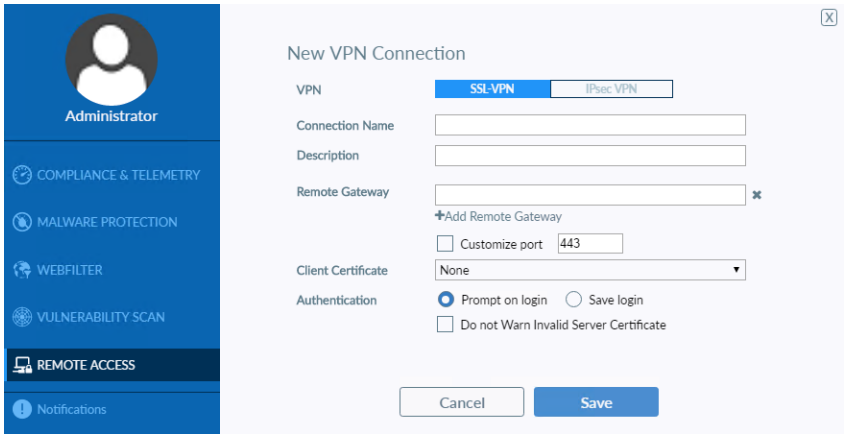

2. Select *SSL-VPN*, then configure the following settings:

Connection Name	SSLVPNtoHQ
Description	(Optional)
Remote Gateway	172.20.120.123
Customize port	10443
Client Certificate	Select *Prompt on connect* or the certificate from the dropdown list.
Authentication	Select *Prompt on login* for a prompt on the connection screen

3. Click *Save* to save the VPN connection.

Connecting to SSL VPN

To connect to SSL VPN:

1. On the *Remote Access* tab, select the VPN connection from the dropdown list.
   Optionally, you can right-click the FortiTray icon in the system tray and select a VPN configuration to connect.
2. Enter your username and password.
3. Click the *Connect* button.
4. After connecting, you can now browse your remote network. Traffic to 192.168.1.0 goes through the tunnel, while other traffic goes through the local gateway. FortiClient displays the connection status, duration, and other relevant information.
5. Click the *Disconnect* button when you are ready to terminate the VPN session.

Checking the SSL VPN connection

To check the SSL VPN connection using the GUI:

1. On the FortiGate, go to *VPN* > *Monitor* > *SSL-VPN Monitor* to verify the list of SSL users.
2. On the FortiGate, go to *Log & Report* > *Forward Traffic* to view the details of the SSL entry.

To check the tunnel log in using the CLI:

```
get vpn ssl monitor
SSL VPN Login Users:
 Index   User          Auth Type    Timeout   From           HTTP in/out  HTTPS in/out
 0       sslvpnuser1   1(1)         291       10.1.100.254   0/0          0/0

SSL VPN sessions:
 Index   User          Source IP      Duration   I/O Bytes      Tunnel/Dest IP
 0       sslvpnuser1   10.1.100.254   9          22099/43228    10.212.134.200
```

Set up FortiToken multi-factor authentication

This configuration adds multi-factor authentication (MFA) to the split tunnel configuration (SSL VPN split tunnel for remote user on page 1311). It uses one of the two free mobile FortiTokens that is already installed on the FortiGate.

To configure MFA using the GUI:

1. Configure the user:
   a. Go to *User & Device* > *User Definition* and edit local user *sslvpnuser1*.
   b. Enter the user's *Email Address*.
   c. Enable *Two-factor Authentication* and select one mobile *Token* from the list,
   d. Enable *Send Activation Code* and select *Email*.
   e. Click *Next* and click *Submit*.
2. Activate the mobile token:
   a. When a FortiToken is added to user *sslvpnuser1*, an email is sent to the user's email address. Follow the instructions to install your FortiToken mobile application on your device and activate your token.

To configure MFA using the CLI:

1. Configure the user:


```
config user local
    edit "sslvpnuser1"
        set type password
        set two-factor fortitoken
        set fortitoken <select mobile token for the option list>
        set email-to <user's email address>
        set passwd <user's password>
    next
end
```

2. Activate the mobile token:
   a. When a FortiToken is added to user *sslvpnuser1*, an email is sent to the user's email address. Follow the instructions to install your FortiToken mobile application on your device and activate your token.


Connecting from FortiClient with FortiToken

To activate your FortiToken:


1. On your device, open FortiToken Mobile. If this is your first time opening the application, it may prompt you to create a PIN for secure access to the application and tokens.

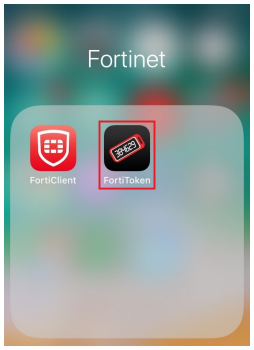

2. You should have received your notification via email, select + and use the device camera to scan the token QR code in your email.



3. FortiToken Mobile provisions and activates your token and generates token codes immediately. To view the OTP's digits, select the eye icon. After you open the application, FortiToken Mobile generates a new six-digit OTP every 30 seconds.

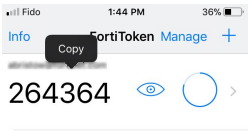

To connect to SSL VPN:

1. On the *Remote Access* tab, select the VPN connection from the dropdown list.
   Optionally, you can right-click the FortiTray icon in the system tray and select a VPN configuration to connect.
2. Enter your username and password.
3. Click the *Connect* button.
4. A Token field will appear, prompting you for the FortiToken code. Enter the FortiToken code from your Mobile device.
5. After connecting, you can now browse your remote network. Traffic to 192.168.1.0 goes through the tunnel, while other traffic goes through the local gateway. FortiClient displays the connection status, duration, and other relevant information.
6. Click the *Disconnect* button when you are ready to terminate the VPN session.

SSL VPN tunnel mode


The following topics provide instructions on configuring SSL VPN tunnel mode:

- SSL VPN full tunnel for remote user
- SSL VPN tunnel mode host check

SSL VPN full tunnel for remote user

This is a sample configuration of remote users accessing the corporate network and internet through an SSL VPN by tunnel mode using FortiClient.

Sample topology

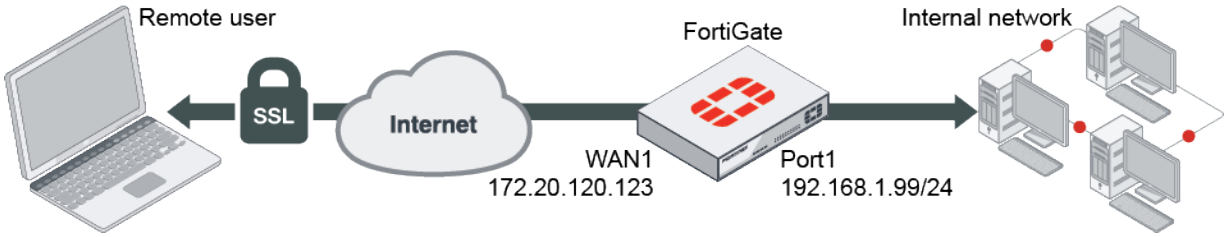

Sample configuration

WAN interface is the interface connected to ISP. This example shows static mode. You can also use DHCP or PPPoE mode. The SSL VPN connection is established over the WAN interface.

To configure SSL VPN using the GUI:

1. Configure the interface and firewall address:
   a. Go to *Network* > *Interfaces* and edit the *wan1* interface.
   b. Set *IP/Network Mask* to *172.20.120.123/255.255.255.0*.
   c. Edit *port1* interface and set *IP/Network Mask* to *192.168.1.99/255.255.255.0*.
   d. Click *OK*.
2. Configure user and user group:
   a. Go to *User & Device* > *User Definition* to create a local user *sslvpnuser1*.
   b. Go to *User & Device* > *User Groups* to create a group *sslvpngroup* with the member *sslvpnuser1*.
3. Configure SSL VPN web portal:
   a. Go to *VPN* > *SSL-VPN Portals* to create a tunnel mode only portal *my-full-tunnel-portal*.
   b. Disable *Split Tunneling*.
4. Configure SSL VPN settings:
   a. Go to *VPN* > *SSL-VPN Settings*.
   b. For *Listen on Interface(s)*, select *wan1*.
   c. Set *Listen on Port* to *10443*.
   d. Optionally, set *Restrict Access* to *Limit access to specific hosts*, and specify the addresses of the hosts that are allowed to connect to this VPN.
   e. Choose a certificate for *Server Certificate*. The default is *Fortinet_Factory*.
   f. In *Authentication/Portal Mapping All Other Users/Groups*, set the *Portal* to *tunnel-access*.
   g. Create new *Authentication/Portal Mapping* for group *sslvpngroup* mapping portal *my-full-tunnel-portal*.
5. Configure SSL VPN firewall policies to allow remote user to access the internal network:
   a. Go to *Policy & Objects* > *IPv4 Policy* and click *Create New*.
   b. Set *Name* to *sslvpn tunnel mode access*.
   c. Set *Incoming Interface* to *SSL-VPN tunnel interface(ssl.root)*.
   d. Set *Outgoing Interface* to *port1*.
   e. Set the *Source* Address to *SSLVPN_TUNNEL_ADDR1* and User to *sslvpngroup*. The source address references the tunnel IP addresses that the remote clients are using.

f. Set *Destination* to *all*, *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
g. Click *OK*.
h. Click *Create New*.
i. Set *Name* to *sslvpn tunnel mode outgoing*.
j. Configure the same settings as the previous policy, except set *Outgoing Interface* to *wan1*.
k. Click *OK*.

To configure SSL VPN using the CLI:

1. Configure the interface and firewall address:

```
config system interface
    edit "wan1"
        set vdom "root"
        set ip 172.20.120.123 255.255.255.0
    next
end
```

2. Configure the internal interface and protected subnet, then connect the port1 interface to the internal network:

```
config system interface
    edit "port1"
        set vdom "root"
        set ip 192.168.1.99 255.255.255.0
    next
end
```

3. Configure user and user group:

```
config user local
    edit "sslvpnuser1"
        set type password
        set passwd your-password
    next
end

config user group
    edit "sslvpngroup"
        set member "vpnuser1"
    next
end
```

4. Configure SSL VPN web portal and predefine RDP bookmark for windows server:

```
config vpn ssl web portal
    edit "my-full-tunnel-portal"
        set tunnel-mode enable
        set split-tunneling disable
        set ip-pools "SSLVPN_TUNNEL_ADDR1"
    next
end
```

5. Configure SSL VPN settings:

```
config vpn ssl settings
    set servercert "Fortinet_Factory"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set tunnel-ipv6-pools "SSLVPN_TUNNEL_IPv6_ADDR1"
```

```
        set source-interface "wan1"
        set source-address "all"
        set source-address6 "all"
        set default-portal "full-access"
        config authentication-rule
            edit 1
                set groups "sslvpngroup"
                set portal "my-full-tunnel-portal"
            next
        end
    end
```

Optionally, to restrict access to specific hosts:

```
config vpn ssl settings
    set source-address <address> <address> ... <address>
    set source-address6 <address> <address> ... <address>
end
```

6. Configure SSL VPN firewall policies to allow remote user to access the internal network. Traffic is dropped from internal to remote client.

```
config firewall policy
    edit 1
        set name "sslvpn tunnel mode access"
        set srcintf "ssl.root"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "all"
        set groups "sslvpngroup"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "sslvpn tunnel mode outgoing"
        set srcintf "ssl.root"
        set dstintf "wan1"
        set srcaddr "all"
        set dstaddr "all"
        set groups "sslvpngroup"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

To see the results:


1. Download FortiClient from www.forticlient.com.
2. Open the FortiClient Console and go to *Remote Access*.
3. Add a new connection.
   - Set *VPN Type* to *SSL VPN*.
   - Set *Remote Gateway* to the IP of the listening FortiGate interface, in this example, *172.20.120.123*.
4. Select *Customize Port* and set it to *10443*.
5. Save your settings.

6. Use the credentials you've set up to connect to the SSL VPN tunnel.
7. After connection, all traffic except the local subnet will go through the tunnel *FGT*.
8. Go to *VPN* > *Monitor* > *SSL-VPN Monitor* to verify the list of SSL users.
9. On the FortiGate, go to *Log & Report* > *Forward Traffic* and view the details for the SSL entry.

SSL VPN tunnel mode host check

This is a sample configuration of remote users accessing the corporate network through an SSL VPN by tunnel mode using FortiClient with AV host check.

Sample topology

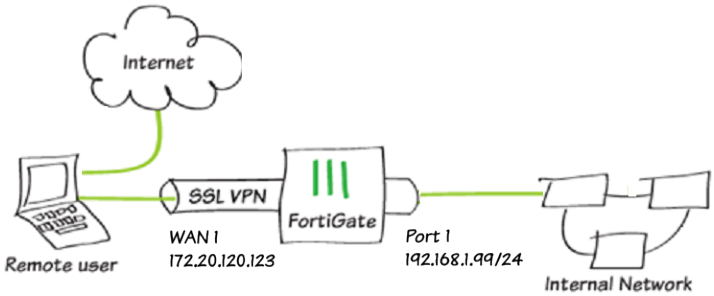

Sample configuration

WAN interface is the interface connected to ISP. This example shows static mode. You can also use DHCP or PPPoE mode. The SSL VPN connection is established over the WAN interface.



The split tunneling routing address cannot use an FQDN or an address group that includes an FQDN.

To configure SSL VPN using the GUI:

1. Configure the interface and firewall address. The port1 interface connects to the internal network.
   a. Go to *Network* > *Interfaces* and edit the *wan1* interface.
   b. Set *IP/Network Mask* to *172.20.120.123/255.255.255.0*.
   c. Edit *port1* interface and set *IP/Network Mask* to *192.168.1.99/255.255.255.0*.
   d. Click *OK*.
   e. Go to *Policy & Objects* > *Address* and create an address for internet subnet *192.168.1.0*.
2. Configure user and user group.
   a. Go to *User & Device* > *User Definition* to create a local user *sslvpnuser1*.
   b. Go to *User & Device* > *User Groups* to create a group *sslvpngroup* with the member *sslvpnuser1*.
3. Configure SSL VPN web portal.
   a. Go to *VPN* > *SSL-VPN Portals* to create a tunnel mode only portal *my-split-tunnel-portal*.
   b. Enable *Tunnel Mode* and *Enable Split Tunneling*.
   c. Select *Routing Address*.

4. Configure SSL VPN settings.
   a. Go to *VPN* > *SSL-VPN Settings*.
   b. For *Listen on Interface(s)*, select *wan1*.
   c. Set *Listen on Port* to *10443*.
   d. Choose a certificate for *Server Certificate*. The default is *Fortinet_Factory*.
   e. In *Authentication/Portal Mapping All Other Users/Groups*, set the *Portal* to *tunnel-access*.
   f. Create new *Authentication/Portal Mapping* for group *sslvpngroup* mapping portal *my-split-tunnel-portal*.
5. Configure SSL VPN firewall policy.
   a. Go to *Policy & Objects* > *IPv4 Policy*.
   b. Fill in the firewall policy name. In this example, *sslvpn tunnel access with av check*.
   c. Incoming interface must be *SSL-VPN tunnel interface(ssl.root)*.
   d. Choose an *Outgoing Interface*. In this example, *port1*.
   e. Set the *Source* to *all* and group to *sslvpngroup*.
   f. In this example, the *Destination* is *all*.
   g. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
   h. Click *OK*.
6. Use CLI to configure SSL VPN web portal to enable the host to check for compliant antivirus software on the user's computer.

```
config vpn ssl web portal
    edit my-split-tunnel-access
        set host-check av
    next
end
```

To configure SSL VPN using the CLI:

1. Configure the interface and firewall address.

```
config system interface
    edit "wan1"
        set vdom "root"
        set ip 172.20.120.123 255.255.255.0
    next
end
```

2. Configure internal interface and protected subnet, then connect the port1 interface to the internal network.

```
config system interface
    edit "port1"
        set vdom "root"
        set ip 192.168.1.99 255.255.255.0
    next
end

config firewall address
    edit "192.168.1.0"
        set subnet 192.168.1.0 255.255.255.0
    next
end
```

3. Configure user and user group.

```
config user local
    edit "sslvpnuser1"
        set type password
        set passwd your-password
    next
end

config user group
    edit "sslvpngroup"
        set member "vpnuser1"
    next
end
```

4. Configure SSL VPN web portal.

```
config vpn ssl web portal
    edit "my-split-tunnel-portal"
        set tunnel-mode enable
        set split-tunneling  enable
        set split-tunneling-routing-address "192.168.1.0"
        set ip-pools "SSLVPN_TUNNEL_ADDR1"
    next
end
```

5. Configure SSL VPN settings.

```
config vpn ssl settings
    set servercert "Fortinet_Factory"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set tunnel-ipv6-pools "SSLVPN_TUNNEL_IPv6_ADDR1"
    set source-interface "wan1"
    set source-address "all"
    set source-address6 "all"
    set default-portal "full-access"
    config authentication-rule
        edit 1
            set groups "sslvpngroup"
            set portal "my-split-tunnel-portal"
        next
    end
end
```

6. Configure one SSL VPN firewall policy to allow remote user to access the internal network. Traffic is dropped from internal to remote client.

```
config firewall policy
    edit 1
        set name "sslvpn web mode access"
        set srcintf "ssl.root"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "192.168.1.0"
        set groups "sslvpngroup"
        set action accept
        set schedule "always"
        set service "ALL"
```

```
    next
end
```

7. Configure SSL VPN web portal to enable the host to check for compliant antivirus software on the user's computer:

```
config vpn ssl web portal
    edit my-split-tunnel-access
        set host-check av
    next
end
```


To see the results:

1. Download FortiClient from www.forticlient.com.
2. Open the FortiClient Console and go to *Remote Access*.
3. Add a new connection:
   - Set *VPN Type* to *SSL VPN*.
   - Set *Remote Gateway* to the IP of the listening FortiGate interface, in this example, *172.20.120.123*.
4. Select *Customize Port* and set it to *10443*.
5. Save your settings.
6. Use the credentials you've set up to connect to the SSL VPN tunnel.
   If the user's computer has antivirus software, a connection is established; otherwise FortiClient shows a compliance warning.
7. After connection, traffic to *192.168.1.0* goes through the tunnel. Other traffic goes through local gateway.
8. On the FortiGate, go to *VPN* > *Monitor* > *SSL-VPN Monitor* to verify the list of SSL users.
9. On the FortiGate, go to *Log & Report* > *Forward Traffic* and view the details for the SSL entry.

SSL VPN web mode for remote user

This is a sample configuration of remote users accessing the corporate network through an SSL VPN by web mode using a web browser.

Sample topology

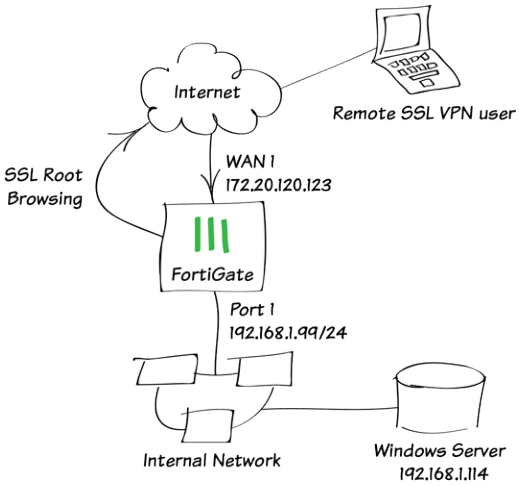

Sample configuration

WAN interface is the interface connected to ISP. This example shows static mode. You can also use DHCP or PPPoE mode. The SSL VPN connection is established over the WAN interface.

To configure SSL VPN using the GUI:

1. Configure the interface and firewall address. The port1 interface connects to the internal network.
   a. Go to *Network* > *Interfaces* and edit the *wan1* interface.
   b. Set *IP/Network Mask* to *172.20.120.123/255.255.255.0*.
   c. Edit *port1* interface and set *IP/Network Mask* to *192.168.1.99/255.255.255.0*.
   d. Click *OK*.
   e. Go to *Policy & Objects* > *Address* and create an address for internet subnet *192.168.1.0*.
2. Configure user and user group.
   a. Go to *User & Device* > *User Definition* to create a local user *sslvpnuser1*.
   b. Go to *User & Device* > *User Groups* to create a group *sslvpngroup* with the member *sslvpnuser1*.
3. Configure SSL VPN web portal.
   a. Go to *VPN* > *SSL-VPN Portals* to create a web mode only portal *my-web-portal*.
   b. Set *Predefined Bookmarks for Windows server* to type *RDP*.
4. Configure SSL VPN settings.
   a. Go to *VPN* > *SSL-VPN Settings*.
   b. For *Listen on Interface(s)*, select *wan1*.
   c. Set *Listen on Port* to *10443*.
   d. Choose a certificate for *Server Certificate*. The default is *Fortinet_Factory*.
   e. In *Authentication/Portal Mapping All Other Users/Groups*, set the *Portal* to *web-access*.
   f. Create new *Authentication/Portal Mapping* for group *sslvpngroup* mapping portal *my-Web-portal*.
5. Configure SSL VPN firewall policy.
   a. Go to *Policy & Objects* > *IPv4 Policy*.
   b. Fill in the firewall policy name. In this example, *sslvpn web mode access*.
   c. Incoming interface must be *SSL-VPN tunnel interface(ssl.root)*.
   d. Choose an *Outgoing Interface*. In this example, *port1*.
   e. Set the *Source* to *all* and group to *sslvpngroup*.
   f. In this example, the *Destination* is the internal protected subnet *192.168.1.0*.
   g. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
   h. Click *OK*.

To configure SSL VPN using the CLI:

1. Configure the interface and firewall address.

```
config system interface
    edit "wan1"
        set vdom "root"
        set ip 172.20.120.123 255.255.255.0
    next
end
```

2. Configure the internal interface and protected subnet, then connect the port1 interface to the internal network.

```
config system interface
    edit "port1"
        set vdom "root"
        set ip 192.168.1.99 255.255.255.0
    next
end

config firewall address
    edit "192.168.1.0"
        set subnet 192.168.1.0 255.255.255.0
    next
end
```

3. Configure user and user group.

```
config user local
    edit "sslvpnuser1"
        set type password
        set passwd your-password
    next
end

config user group
    edit "sslvpngroup"
        set member "vpnuser1"
    next
end
```

4. Configure SSL VPN web portal and predefine RDP bookmark for windows server.

```
config vpn ssl web portal
    edit "my-web-portal"
        set web-mode enable
        config bookmark-group
            edit "gui-bookmarks"
                config bookmarks
                    edit "Windows Server"
                        set apptype rdp
                        set host "192.168.1.114"
                        set port 3389
                        set logon-user "your-windows-server-user-name"
                        set logon-password your-windows-server-password
                    next
                end
            next
        end
    next
end
```

5. Configure SSL VPN settings.

```
config vpn ssl settings
    set servercert "Fortinet_Factory"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set tunnel-ipv6-pools "SSLVPN_TUNNEL_IPv6_ADDR1"
    set source-interface "wan1"
    set source-address "all"
    set source-address6 "all"
```

```
        set default-portal "full-access"
        config authentication-rule
            edit 1
                set groups "sslvpngroup"
                set portal "my-web-portal"
            next
        end
    end
```

6. Configure one SSL VPN firewall policy to allow remote user to access the internal network. Traffic is dropped from internal to remote client

```
config firewall policy
    edit 1
        set name "sslvpn web mode access"
        set srcintf "ssl.root"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "192.168.1.0"
        set groups "sslvpngroup"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

To see the results:

1. In a web browser, log into the portal *https://172.20.120.123:10443* using the credentials you've set up.
2. In the portal with the predefined bookmark, select the bookmark to begin an RDP session. If there are no predefined bookmarks, the Quick Connection tool can be used; see Quick Connection tool on page 1327 for more information.
3. Go to *VPN* > *Monitor* > *SSL-VPN Monitor* to verify the list of SSL users.
4. Go to *Log & Report* > *Forward Traffic* to view the details for the SSL entry.


Quick Connection tool

The Quick Connection tool allows a user to connect to a resource when it is not a predefined bookmark. The tool allows the user to specify the type of server and the URL or IP address of the host.

To connect to a resource:

1. Select the connection type.
2. Enter the required information, such as the IP address or URL of the host.

3. Click *Launch*.

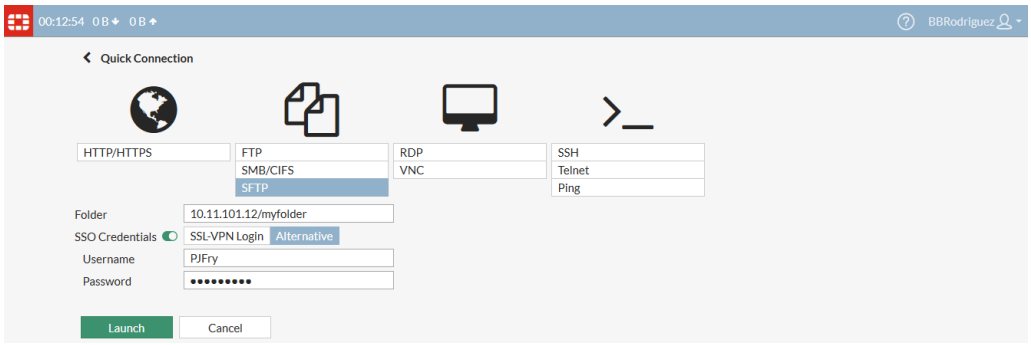

In a VNC session, to send Ctrl+Alt+Del, press *F8* then select *Send Ctrl-Alt-Delete*.

RDP sessions

Some Windows servers require that a specific security be set for RDP sessions, as opposed to the standard RDP encryption security. For example, Windows 10 requires that TLS be used.

You can specify a location option if the remote computer does not use the same keyboard layout as your computer by appending it to the *Host* field using the following format: `<IP address> -m <locale>`

The available options are:

ar	Arabic	fr-be	Belgian French	no	Norwegian
da	Danish	fr-ca	Canadian French	pl	Polish
de	German	fr-ch	Swiss French	pt	Portuguese
de-ch	Swiss German	hr	Croatian	pt-br	Brazilian Portuguese
en-gb	British English	hu	Hungarian	ru	Russian
en-uk	UK English	it	Italian	sl	Slovenian
en-us	US English	ja	Japanese	sv	Sudanese
es	Spanish	lt	Lithuanian	tk	Turkmen
fi	Finnish	lv	Latvian	tr	Turkish
fr	French	mk	Macedonian		

SSL VPN authentication

The following topics provide instructions on configuring SSL VPN authentication:


- SSL VPN with LDAP user authentication on page 1329
- SSL VPN with LDAP user password renew on page 1333
- SSL VPN with LDAP-integrated certificate authentication on page 1338
- SSL VPN for remote users with MFA and user case sensitivity on page 1343
- SSL VPN with FortiToken mobile push authentication on page 1351
- SSL VPN with RADIUS on FortiAuthenticator on page 1356
- SSL VPN with RADIUS and FortiToken mobile push on FortiAuthenticator on page 1361
- SSL VPN with RADIUS password renew on FortiAuthenticator on page 1365
- SSL VPN with RADIUS on Windows NPS on page 1369
- SSL VPN with multiple RADIUS servers on page 1374
- SSL VPN with local user password policy on page 1383
- SSL VPN with certificate authentication on page 1388
- Dynamic address support for SSL VPN policies on page 1393
- SSL VPN multi-realm on page 1402

SSL VPN with LDAP user authentication

This is a sample configuration of SSL VPN for LDAP users. In this example, the LDAP server is a Windows 2012 AD server. A user *ldu1* is configured on Windows 2012 AD server.

You must have generated and exported a CA certificate from the AD server and then have imported it as an external CA certificate into the FortiGate.

Sample topology

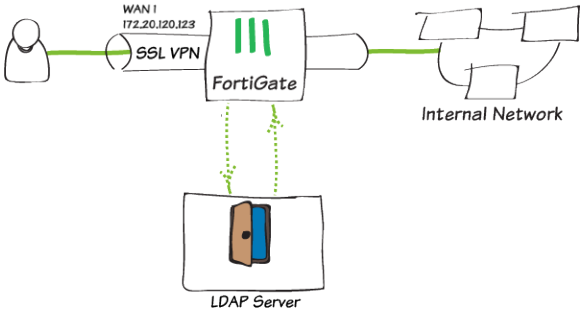

Sample configuration

WAN interface is the interface connected to ISP. This example shows static mode. You can also use DHCP or PPPoE mode. The SSL VPN connection is established over the WAN interface.

To configure SSL VPN using the GUI:

1. Configure the interface and firewall address. The port1 interface connects to the internal network:
   a. Go to *Network* > *Interfaces* and edit the *wan1* interface.
   b. Set *IP/Network Mask* to *172.20.120.123/255.255.255.0*.
   c. Edit *port1* interface and set *IP/Network Mask* to *192.168.1.99/255.255.255.0*.

   d. Click *OK*.
   e. Go to *Policy & Objects* > *Address* and create an address for internet subnet *192.168.1.0*.
2. Import CA certificate into FortiGate:
   a. Go to *System* > *Features Visibility* and ensure *Certificates* is enabled.
   b. Go to *System* > *Certificates* and select *Import* > *CA Certificate*.
   c. Select *Local PC* and then select the certificate file.
   The CA certificate now appears in the list of *External CA Certificates*. In this example, it is called *CA_Cert_1*.
   d. If you want, you can use CLI commands to rename the system-generated *CA_Cert_1* to be more descriptive:

```
config vpn certificate ca
    rename CA_Cert_1 to LDAPS-CA
end
```

3. Configure the LDAP user:
   a. Go to *User & Device* > *LDAP Servers* and click *Create New*.
   b. Specify *Name* and *Server IP/Name*.
   c. Specify *Common Name Identifier* and *Distinguished Name*.
   d. Set *Bind Type* to *Regular*.
   e. Specify *Username* and *Password*.
   f. Enable *Secure Connection* and set *Protocol* to *LDAPS*.
   g. For *Certificate*, select *LDAP server CA LDAPS-CA* from the list.
   h. Click *OK*.
4. Configure user group:
   a. Go to *User & Device* > *User Groups* to create a user group.
   b. Enter a *Name*.
   c. In *Remote Groups*, click *Add* to add *ldaps-server*.
5. Configure SSL VPN web portal:
   a. Go to *VPN* > *SSL-VPN Portals* to edit the *full-access* portal.
   This portal supports both web and tunnel mode.
   b. Disable *Enable Split Tunneling* so that all SSL VPN traffic goes through the FortiGate.
6. Configure SSL VPN settings:
   a. Go to *VPN* > *SSL-VPN Settings*.
   b. Select the *Listen on Interface(s)*, in this example, *wan1*.
   c. Set *Listen on Port* to *10443*.
   d. Set *Server Certificate* to the authentication certificate.
   e. Under *Authentication/Portal Mapping*, set default Portal *web-access* for *All Other Users/Groups*.
   f. Create new *Authentication/Portal Mapping* for group *ldaps-group* mapping portal *full-access*.
7. Configure SSL VPN firewall policy:
   a. Go to *Policy & Objects* > *IPv4 Policy*.
   b. Fill in the firewall policy name, in this example, *sslvpn certificate auth*.
   c. Incoming interface must be *SSL-VPN tunnel interface(ssl.root)*.
   d. Set the *Source Address* to *all* and *Source User* to *ldaps-group*.
   e. Set the *Outgoing Interface* to the local network interface so that the remote user can access the internal network, in this example, *port1*.
   f. Set *Destination Address* to the internal protected subnet *192.168.1.0*.
   g. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
   h. Enable *NAT*.

i. Configure any remaining firewall and security options as desired.
j. Click *OK*.

To configure SSL VPN using the CLI:

1. Configure the interface and firewall address:

```
config system interface
    edit "wan1"
        set vdom "root"
        set ip 172.20.120.123 255.255.255.0
    next
end
```

2. Configure internal interface and protected subnet, then connect the port1 interface to the internal network:

```
config system interface
    edit "port1"
        set vdom "root"
        set ip 192.168.1.99 255.255.255.0
    next
end

config firewall address
    edit "192.168.1.0"
        set subnet 192.168.1.0 255.255.255.0
    next
end
```

3. Import CA certificate into FortiGate:
   a. Go to *System* > *Features Visibility* and ensure *Certificates* is enabled.
   b. Go to *System* > *Certificates* and select *Import* > *CA Certificate*.
   c. Set *Type* to *File*.
   d. Click *Upload* and find and select the certificate file.
   e. Click *OK*.
   The CA certificate now appears in the list of *External CA Certificates*. In this example, it is called *CA_Cert_1*.
   f. If you want, you can use CLI commands to rename the system-generated *CA_Cert_1* to be more descriptive:

```
config vpn certificate ca
    rename CA_Cert_1 to LDAPS-CA
end
```

4. Configure the LDAP server:

```
config user ldap
    edit "ldaps-server"
        set server "172.20.120.161"
        set cnid "cn"
        set dn "cn=Users,dc=qa,dc=fortinet,dc=com"
        set type regular
        set username "CN=Administrator,cn=users,DC=qa,DC=fortinet,DC=com"
        set password **********
        set group-member-check group-object
        set secure ldaps
        set ca-cert "LDAPS-CA"
        set port 636
```

```
    next
end
```

5. Add the LDAP user to the user group:

```
config user group
    edit "ldaps-group"
        append member "ldaps-server"
    next
end
```

6. Configure SSL VPN web portal:

```
config vpn ssl web portal
    edit "full-access"
        set tunnel-mode enable
        set web-mode enable
        set ip-pools "SSLVPN_TUNNEL_ADDR1"
        set split-tunneling disable
     next
end
```

7. Configure SSL VPN settings:

```
config vpn ssl settings
    set servercert "server_certificate"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set source-interface "wan1"
    set source-address "all"
    set default-portal "web-access"
    config authentication-rule
        edit 1
            set groups "ldaps-group"
            set portal "full-access"
        next
    end
end
```

8. Configure one SSL VPN firewall policy to allow remote user to access the internal network:

```
config firewall policy
    edit 1
        set name "sslvpn web mode access"
        set srcintf "ssl.root"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "192.168.1.0"
        set groups "ldaps-group"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end
```

To see the results of web portal:

1. From a remote device, use a web browser to log into the SSL VPN web portal *http://172.20.120.123:10443*.
2. Enter the *ldu1* user credentials, then click *Login*.

3. Go to *VPN* > *Monitor* > *SSL-VPN Monitor* to verify the user's connection.

To see the results of tunnel connection:

1. Download FortiClient from www.forticlient.com.
2. Open the FortiClient Console and go to *Remote Access* > *Configure VPN*.
3. Add a new connection:
   a. Set the connection name.
   b. Set *Remote Gateway* to the IP of the listening FortiGate interface, in this example, *172.20.120.123*.
4. Select *Customize Port* and set it to *10443*.
5. Save your settings.
6. Log in using the *ldu1* credentials.

To check the SSL VPN connection using the GUI:

1. Go to *VPN* > *Monitor* > *SSL-VPN Monitor* to verify the user's connection.
2. Go to *Log & Report* > *Events* and select *VPN Events* from the event type dropdown list to view the details of the SSL VPN connection event log.
3. Go to *Log & Report* > *Forward Traffic* to view the details of the SSL VPN traffic.

To check the web portal login using the CLI:

```
# get vpn ssl monitor
SSL VPN Login Users:
 Index   User    Auth Type    Timeout    From           HTTP in/out  HTTPS in/out
 0       ldu1    1(1)         229        10.1.100.254   0/0          0/0

SSL VPN sessions:
 Index   User    Source IP      Duration        I/O Bytes       Tunnel/Dest IP
```

To check the tunnel login using the CLI:

```
# get vpn ssl monitor
SSL VPN Login Users:
 Index   User    Auth Type    Timeout    From           HTTP in/out  HTTPS in/out
 0       ldu1    1(1)         291        10.1.100.254   0/0          0/0


SSL VPN sessions:
 Index   User    Source IP      Duration    I/O Bytes      Tunnel/Dest IP
 0       ldu1    10.1.100.254   9           22099/43228    10.212.134.200
```

SSL VPN with LDAP user password renew

This is a sample configuration of SSL VPN for LDAP users with *Force Password Change on next logon*. In this example, the LDAP server is a Windows 2012 AD server. A user *ldu1* is configured on Windows 2012 AD server with *Force password change on next logon*.

You must have generated and exported a CA certificate from the AD server and then have imported it as an external CA certificate into the FortiGate.

Sample topology

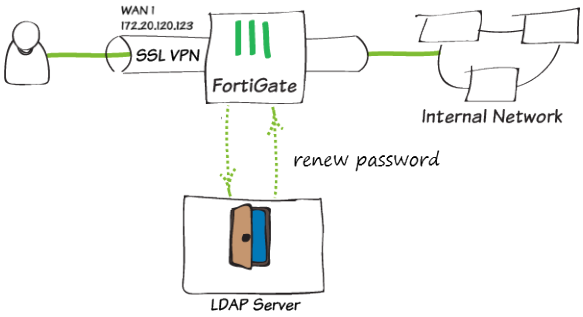

Sample configuration

WAN interface is the interface connected to ISP. This example shows static mode. You can also use DHCP or PPPoE mode. The SSL VPN connection is established over the WAN interface.

To configure SSL VPN using the GUI:

1. Configure the interface and firewall address. The port1 interface connects to the internal network.
   a. Go to *Network* > *Interfaces* and edit the *wan1* interface.
   b. Set *IP/Network Mask* to *172.20.120.123/255.255.255.0*.
   c. Edit *port1* interface and set *IP/Network Mask* to *192.168.1.99/255.255.255.0*.
   d. Click *OK*.
   e. Go to *Policy & Objects* > *Address* and create an address for internet subnet *192.168.1.0*.
2. Import CA certificate into FortiGate.
   a. Go to *System* > *Features Visibility* and ensure *Certificates* is enabled.
   b. Go to *System* > *Certificates* and select *Import* > *CA Certificate*.
   c. Select *Local PC* and then select the certificate file.
   The CA certificate now appears in the list of *External CA Certificates*. In this example, it is called *CA_Cert_1*.
   d. If you want, you can use CLI commands to rename the system-generated *CA_Cert_1* to be more descriptive:

```
config vpn certificate ca
    rename CA_Cert_1 to LDAPS-CA
end
```

3. Configure the LDAP user.
   a. Go to *User & Device* > *LDAP Servers* > *Create New*.
   b. Specify *Name* and *Server IP/Name*.
   c. Specify *Common Name Identifier* and *Distinguished Name*.
   d. Set *Bind Type* to *Regular*.
   e. Specify *Username* and *Password*.
   f. Enable *Secure Connection* and set *Protocol* to *LDAPS*.
   g. For *Certificate*, select *LDAP server CA LDAPS-CA* from the list.
   h. To enable the `password-renew` option, use these CLI commands.

```
config user ldap
    edit "ldaps-server"
        set password-expiry-warning enable
        set password-renewal enable
```

```
        next
    end
```

4. Configure user group.
   a. Go to *User & Device* > *User Groups* to create a user group.
   b. Enter a *Name*.
   c. In *Remote Groups*, click *Add* to add *ldaps-server*.
5. Configure SSL VPN web portal.
   a. Go to *VPN* > *SSL-VPN Portals* to edit the *full-access* portal.
      This portal supports both web and tunnel mode.
   b. Disable *Enable Split Tunneling* so that all SSL VPN traffic goes through the FortiGate.
6. Configure SSL VPN settings.
   a. Go to *VPN* > *SSL-VPN Settings*.
   b. Select the *Listen on Interface(s)*, in this example, *wan1*.
   c. Set *Listen on Port* to *10443*.
   d. Set *Server Certificate* to the authentication certificate.
   e. Under *Authentication/Portal Mapping*, set default Portal *web-access* for *All Other Users/Groups*.
   f. Create new *Authentication/Portal Mapping* for group *ldaps-group* mapping portal *full-access*.
7. Configure SSL VPN firewall policy.
   a. Go to *Policy & Objects* > *IPv4 Policy*.
   b. Fill in the firewall policy name, in this example, *sslvpn certificate auth*.
   c. Incoming interface must be *SSL-VPN tunnel interface(ssl.root)*.
   d. Set the *Source Address* to *all* and *Source User* to *ldaps-group*.
   e. Set the *Outgoing Interface* to the local network interface so that the remote user can access the internal network, in this example, *port1*.
   f. Set *Destination Address* to the internal protected subnet *192.168.1.0*.
   g. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
   h. Enable *NAT*.
   i. Configure any remaining firewall and security options as desired.
   j. Click *OK*.

To configure SSL VPN using the CLI:

1. Configure the interface and firewall address.

```
config system interface
    edit "wan1"
        set vdom "root"
        set ip 172.20.120.123 255.255.255.0
    next
end
```

2. Configure internal interface and protected subnet, then connect the port1 interface to the internal network.

```
config system interface
    edit "port1"
        set vdom "root"
        set ip 192.168.1.99 255.255.255.0
    next
end
```

```
config firewall address
    edit "192.168.1.0"
        set subnet 192.168.1.0 255.255.255.0
    next
end
```

3. Import CA certificate into FortiGate.
   a. Go to *System* > *Features Visibility* and ensure *Certificates* is enabled.
   b. Go to *System* > *Certificates* and select *Import* > *CA Certificate*.
   c. Select *Local PC* and then select the certificate file.
   The CA certificate now appears in the list of *External CA Certificates*. In the example, it is called *CA_Cert_1*.
   d. If you want, you can use CLI commands to rename the system-generated *CA_Cert_1* to be more descriptive:

```
config vpn certificate ca
    rename CA_Cert_1 to LDAPS-CA
end
```

4. Configure the LDAP server.

```
config user ldap
    edit "ldaps-server"
        set server "172.20.120.161"
        set cnid "cn"
        set dn "cn=Users,dc=qa,dc=fortinet,dc=com"
        set type regular
        set username "CN=Administrator,cn=users,DC=qa,DC=fortinet,DC=com"
        set password **********
        set group-member-check group-object
        set secure ldaps
        set ca-cert "LDAPS-CA"
        set port 636
        set password-expiry-warning enable
        set password-renewal enable
    next
end
```

5. Configure user group.

```
config user group
    edit "ldaps-group"
        set member "ldaps-server"
    next
end
```

6. Configure SSL VPN web portal.

```
config vpn ssl web portal
    edit "full-access"
        set tunnel-mode enable
        set web-mode enable
        set ip-pools "SSLVPN_TUNNEL_ADDR1"
        set split-tunneling disable
     next
end
```

7. Configure SSL VPN settings.

```
config vpn ssl settings
    set servercert "server_certificate"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set source-interface "wan1"
    set source-address "all"
    set default-portal "web-access"
    config authentication-rule
        edit 1
            set groups "ldaps-group"
            set portal "full-access"
        next
    end
end
```

8. Configure one SSL VPN firewall policy to allow remote user to access the internal network.

```
config firewall policy
    edit 1
        set name "sslvpn web mode access"
        set srcintf "ssl.root"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "192.168.1.0"
        set groups "ldaps-group"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end
```

To see the results of web portal:

1. From a remote device, use a web browser to log into the SSL VPN web portal *http://172.20.120.123:10443*.
2. Log in using the *ldu1* credentials.
   Use a user which is configured on FortiAuthenticator with *Force password change on next logon*.
3. Click *Login*. You are prompted to enter a new password.
4. Go to *VPN* > *Monitor* > *SSL-VPN Monitor* to verify the user's connection.

To see the results of tunnel connection:

1. Download FortiClient from www.forticlient.com.
2. Open the FortiClient Console and go to *Remote Access* > *Configure VPN*.
3. Add a new connection.
   - Set the connection name.
   - Set *Remote Gateway* to the IP of the listening FortiGate interface, in this example, *172.20.120.123*.
4. Select *Customize Port* and set it to *10443*.
5. Save your settings.
6. Log in using the *ldu1* credentials.
   You are prompted to enter a new password.

To check the SSL VPN connection using the GUI:

1. Go to *VPN* > *Monitor* > *SSL-VPN Monitor* to verify the user's connection.
2. Go to *Log & Report* > *Events* and select *VPN Events* from the event type dropdown list to view the details of the SSL VPN connection event log.
3. Go to *Log & Report* > *Forward Traffic* to view the details of the SSL VPN traffic.

To check the web portal login using the CLI:

```
# get vpn ssl monitor
SSL VPN Login Users:
 Index   User    Auth Type    Timeout    From           HTTP in/out  HTTPS in/out
 0       ldu1    1(1)         229        10.1.100.254   0/0          0/0

SSL VPN sessions:
 Index   User    Source IP      Duration        I/O Bytes       Tunnel/Dest IP
```

To check the tunnel login using the CLI:

```
# get vpn ssl monitor
SSL VPN Login Users:
 Index   User    Auth Type    Timeout    From           HTTP in/out  HTTPS in/out
 0       ldu1    1(1)         291        10.1.100.254   0/0          0/0


SSL VPN sessions:
 Index   User    Source IP      Duration    I/O Bytes      Tunnel/Dest IP
 0       ldu1    10.1.100.254   9           22099/43228    10.212.134.200
```

SSL VPN with LDAP-integrated certificate authentication

This is a sample configuration of SSL VPN that requires users to authenticate using a certificate with LDAP `UserPrincipalName` checking.

This sample uses Windows 2012R2 Active Directory acting as both the user certificate issuer, the certificate authority, and the LDAP server.

Sample topology

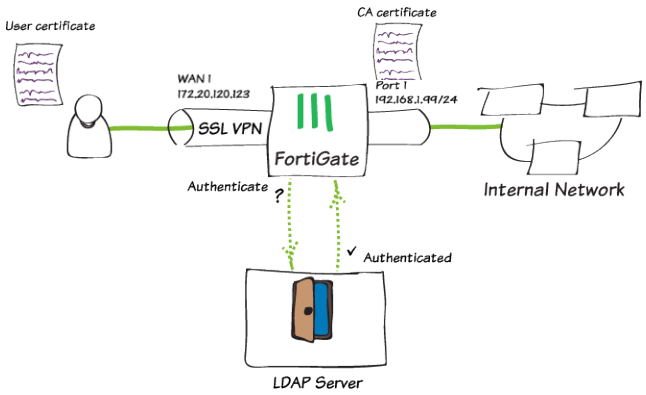

Sample configuration

WAN interface is the interface connected to ISP. This example shows static mode. You can also use DHCP or PPPoE mode. The SSL VPN connection is established over the WAN interface.

In this sample, the *User Principal Name* is included in the subject name of the issued certificate. This is the user field we use to search LDAP in the connection attempt.

To use the user certificate, you must first install it on the user's PC. When the user tries to authenticate, the user certificate is checked against the CA certificate to verify that they match.

Every user should have a unique user certificate. This allows you to distinguish each user and revoke a specific user's certificate, such as if a user no longer has VPN access.

To install the server certificate:

The server certificate is used for authentication and for encrypting SSL VPN traffic.

1. Go to *System* > *Feature Visibility* and ensure *Certificates* is enabled.
2. Go to *System* > *Certificates* and select *Import* > *Local Certificate*.
   - Set *Type* to *Certificate*.
   - Choose the *Certificate file* and the *Key file* for your certificate, and enter the *Password*.
   - If desired, you can change the *Certificate Name*.

   The server certificate now appears in the list of *Certificates*.

To install the CA certificate:

The CA certificate is the certificate that signed both the server certificate and the user certificate. In this example, it is used to authenticate SSL VPN users.

1. Go to *System* > *Certificates* and select *Import* > *CA Certificate*.
2. Select *Local PC* and then select the certificate file.
   The CA certificate now appears in the list of *External CA Certificates*. In this example, it is called *CA_Cert_1*.

To configure SSL VPN using the GUI:

1. Configure the interface and firewall address. The port1 interface connects to the internal network.
   a. Go to *Network* > *Interfaces* and edit the *wan1* interface.
   b. Set *IP/Network Mask* to *172.20.120.123/255.255.255.0*.
   c. Edit *port1* interface and set *IP/Network Mask* to *192.168.1.99/255.255.255.0*.
   d. Click *OK*.
   e. Go to *Policy & Objects* > *Address* and create an address for internet subnet *192.168.1.0*.
2. Configure the LDAP server.
   a. Go to *User & Device* > *LDAP Servers* > *Create New*.
      - Specify *Name* and *Server IP/Name*.
      - Set *Distinguished Name* to *dc=fortinet-fsso,dc=com*.
      - Set *Bind Type* to *Regular*.
      - Set *Username* to *cn=admin,ou=testing,dc=fortinet-fsso,dc=com*.
      - Set *Password*.
3. Configure PKI users and a user group.
   To use certificate authentication, use the CLI to create PKI users.

```
config user peer
    edit user1
        set ca CA_Cert_1
        set ldap-server "ldap-AD"
        set ldap-mode principal-name
    next
end
```

When you have create a PKI user, a new menu is added to the GUI.

a. Go to *User & Device* > *PKI* to see the new user.
b. Go to *User & Device* > *User* > *User Groups* and create a group *sslvpn-group*.
c. Add the PKI peer object you created as a local member of the group.
d. Add a remote group on the LDAP server and select the group of interest.
You need these users to be members using the LDAP browser window.

4. Configure SSL VPN web portal.
   a. Go to *VPN* > *SSL-VPN Portals* to edit the *full-access* portal.
   This portal supports both web and tunnel mode.
   b. Disable *Enable Split Tunneling* so that all SSL VPN traffic goes through the FortiGate.
5. Configure SSL VPN settings.
   a. Go to *VPN* > *SSL-VPN Settings*.
   b. Select the *Listen on Interface(s)*, in this example, *wan1*.
   c. Set *Listen on Port* to *10443*.
   d. Set *Server Certificate* to the authentication certificate.
   e. Enable *Require Client Certificate*.
   f. Under *Authentication/Portal Mapping*, set default Portal *web-access* for *All Other Users/Groups*.
   g. Create new *Authentication/Portal Mapping* for group *sslvpn-group* mapping portal *full-access*.
6. Configure SSL VPN firewall policy.
   a. Go to *Policy & Objects* > *IPv4 Policy*.
   b. Fill in the firewall policy name. In this example, *sslvpn certificate auth*.
   c. Incoming interface must be *SSL-VPN tunnel interface(ssl.root)*.
   d. Set the *Source Address* to *all* and *Source User* to *sslvpn-group*.
   e. Set the *Outgoing Interface* to the local network interface so that the remote user can access the internal network. In this example, *port1*.
   f. Set *Destination Address* to the internal protected subnet *192.168.1.0*.
   g. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
   h. Enable *NAT*.
   i. Configure any remaining firewall and security options as desired.
   j. Click *OK*.

To configure SSL VPN using the CLI:

1. Configure the interface and firewall address.

```
config system interface
    edit "wan1"
        set vdom "root"
        set ip 172.20.120.123 255.255.255.0
    next
end
```

2. Configure internal interface and protected subnet, then connect the port1 interface to the internal network.

```
config system interface
    edit "port1"
        set vdom "root"
        set ip 192.168.1.99 255.255.255.0
    next
end

config firewall address
    edit "192.168.1.0"
        set subnet 192.168.1.0 255.255.255.0
    next
end
```

3. Configure the LDAP server.

```
config user ldap
    edit "ldap-AD"
        set server "172.18.60.206"
        set cnid "cn"
        set dn "dc=fortinet-fsso,dc=com"
        set type regular
        set username "cn=admin,ou=testing,dc=fortinet-fsso,dc=com"
        set password ldap-server-password
    next
end
```

4. Configure PKI users and a user group.

```
config user peer
    edit user1
        set ca CA_Cert_1
        set ldap-server "ldap-AD"
        set ldap-mode principal-name
    next
end

config user group
    edit "sslvpn-group"
        set member "ldap-AD" "user1"
        config match
            edit 1
                set server-name "ldap-AD"
                set group-name "CN=group3,OU=Testing,DC=Fortinet-FSSO,DC=COM"
            next
        end
    next
end
```

5. Configure SSL VPN web portal.

```
config vpn ssl web portal
    edit "full-access"
        set tunnel-mode enable
        set web-mode enable
        set ip-pools "SSLVPN_TUNNEL_ADDR1"
        set split-tunneling disable
    next
end
```

6. Configure SSL VPN settings.

```
config vpn ssl settings
    set servercert "server_certificate"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set source-interface "wan1"
    set source-address "all"
    set default-portal "web-access"
    set reqclientcert enable
    config authentication-rule
        edit 1
            set groups "sslvpn-group"
            set portal "full-access"
        next
    end
end
```

7. Configure one SSL VPN firewall policy to allow remote user to access the internal network.

```
config firewall policy
    edit 1
        set name "sslvpn web mode access"
        set srcintf "ssl.root"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "192.168.1.0"
        set groups "sslvpn-group"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end
```

To see the results of tunnel connection:

1. Download FortiClient from www.forticlient.com.
2. Open the FortiClient Console and go to *Remote Access* > *Configure VPN*.
3. Add a new connection.
   - Set the connection name.
   - Set *Remote Gateway* to the IP of the listening FortiGate interface, in this example, *172.20.120.123*.
4. Select *Customize Port* and set it to *10443*.
5. Enable *Client Certificate* and select the authentication certificate.
6. Save your settings.
   Connecting to the VPN only requires the user's certificate. It does not require username or password.

To see the results of web portal:

1. In a web browser, log into the portal *http://172.20.120.123:10443*.
   A message requests a certificate for authentication.
2. Select the user certificate.
   You can connect to the SSL VPN web portal.

To check the SSL VPN connection using the GUI:

1. Go to *VPN* > *Monitor* > *SSL-VPN Monitor* to verify the list of SSL users.
2. Go to *Log & Report* > *VPN Events* to view the details of the SSL VPN connection event log.
3. Go to *Log & Report* > *Forward Traffic* to view the details of the SSL VPN traffic.

To check the SSL VPN connection using the CLI:

Below is a sample output of `diagnose debug application fnbamd -1` while the user connects. This is a shortened output sample of a few locations to show the important parts. This sample shows lookups to find the group memberships (three groups total) of the user and that the correct group being found results in a match.

```
[1148] fnbamd_ldap_recv-Response len: 16, svr: 172.18.60.206
[829] fnbamd_ldap_parse_response-Got one MESSAGE. ID:4, type:search-result
[864] fnbamd_ldap_parse_response-ret=0
[1386] __fnbamd_ldap_primary_grp_next-Auth accepted
[910] __ldap_rxtx-Change state to 'Done'
[843] __ldap_rxtx-state 23(Done)
[925] fnbamd_ldap_send-sending 7 bytes to 172.18.60.206
[937] fnbamd_ldap_send-Request is sent. ID 5
[753] __ldap_stop-svr 'ldap-AD'
[53] ldap_dn_list_del_all-Del CN=test3,OU=Testing,DC=Fortinet-FSSO,DC=COM
[399] ldap_copy_grp_list-copied CN=group3,OU=Testing,DC=Fortinet-FSSO,DC=COM
[399] ldap_copy_grp_list-copied CN=Domain Users,CN=Users,DC=Fortinet-FSSO,DC=COM
[2088] fnbamd_auth_cert_check-Matching group 'sslvpn-group'
[2007] __match_ldap_group-Matching server 'ldap-AD' - 'ldap-AD'
[2015] __match_ldap_group-Matching group 'CN=group3,OU=Testing,DC=Fortinet-FSSO,DC=COM' -
'CN=group3,OU=Testing,DC=Fortinet-FSSO,DC=COM'
[2091] fnbamd_auth_cert_check-Group 'sslvpn-group' matched
[2120] fnbamd_auth_cert_result-Result for ldap svr[0] 'ldap-AD' is SUCCESS
[2126] fnbamd_auth_cert_result-matched user 'test3', matched group 'sslvpn-group'
```

You can also use `diagnose firewall auth list` to validate that a firewall user entry exists for the SSL VPN user and is part of the right groups.


SSL VPN for remote users with MFA and user case sensitivity

By default, remote LDAP and RADIUS user names are case sensitive. When a remote user object is applied to SSL VPN authentication, the user must type the exact case that is used in the user definition on the FortiGate.

Case sensitivity can be disabled by disabling the `username-case-sensitivity` CLI command, allowing the remote user object to match any case that the end user types in.

In this example, a remote user is configured with multi-factor authentication (MFA). The user group includes the LDAP user and server, and is applied to SSL VPN authentication and the policy.

Topology

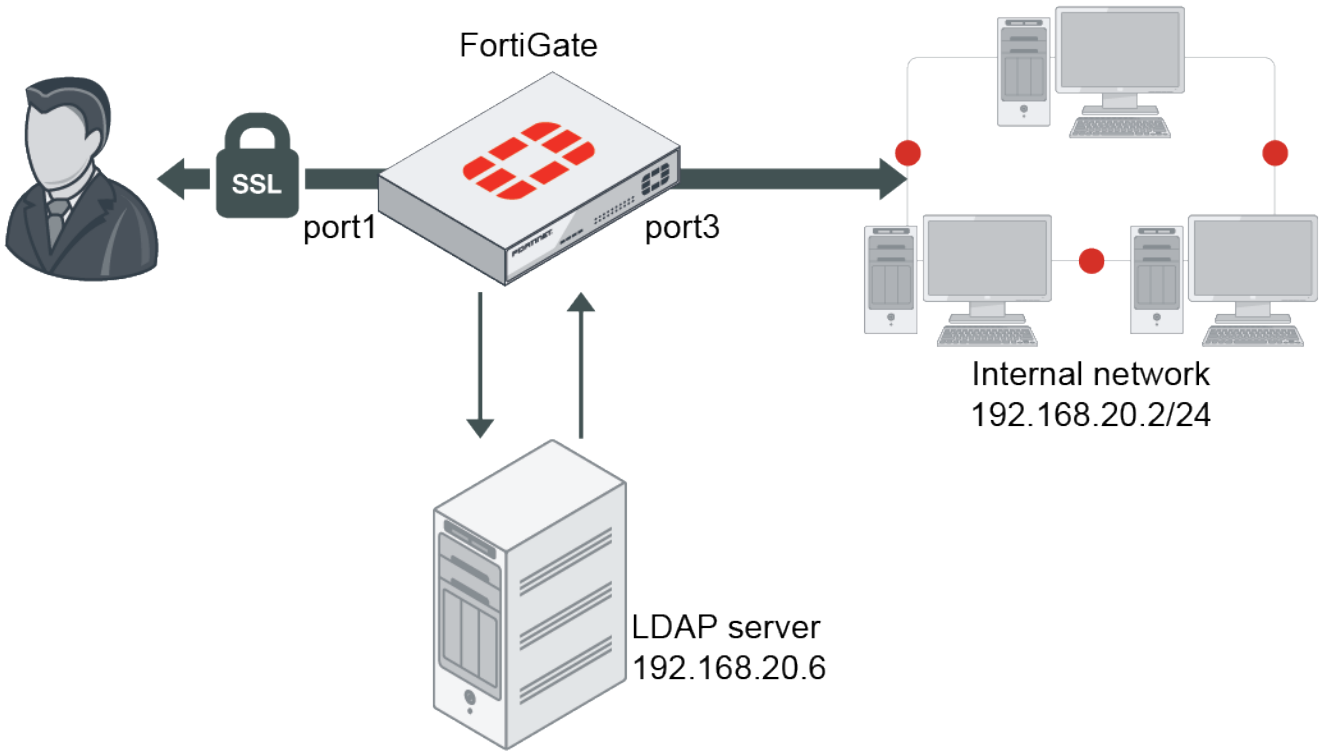

Example configuration

To configure the LDAP server:


1. Generate and export a CA certificate from the AD server .
2. Import the CA certificate into FortiGate:
   a. Go to *System* > *Features Visibility* and ensure *Certificates* is enabled.
   b. Go to *System* > *Certificates* and select *Import* > *CA Certificate*.
   c. Select *Local PC* and then select the certificate file.
   The CA certificate now appears in the list of *External CA Certificates*. In this example, it is called *CA_Cert_1*.
   d. If you want, you can use CLI commands to rename the system-generated *CA_Cert_1* to be more descriptive:

```
config vpn certificate ca
    rename CA_Cert_1 to LDAPS-CA
end
```

3. Configure the LDAP user:
   a. Go to *User & Device* > *LDAP Servers* and click *Create New*.
   b. Configure the following options for this example:

Name	WIN2K16-KLHOME
Server IP/Name	192.168.20.6
Server Port	636


Common Name Identifier	sAMAccountName
Distinguished Name	dc=KLHOME,dc=local
Bind Type	Regular
Username	KLHOME\\Administrator
Password	*********
Secure Connection	Enable
Protocol	LDAPS
Certificate	CA_Cert_1 This is the CA certificate that you imported in step 2.

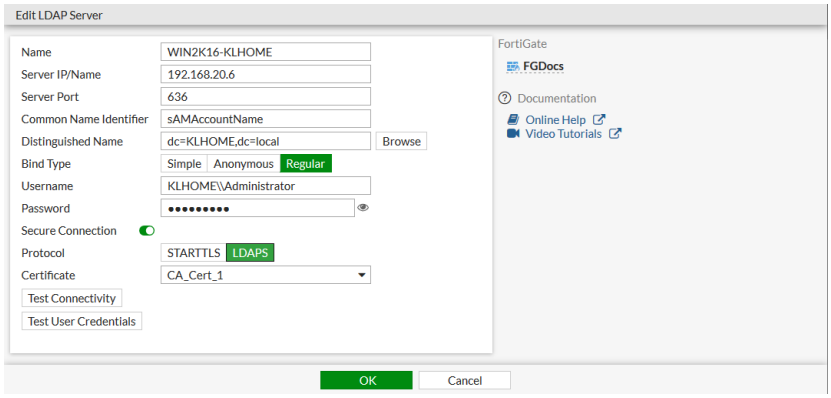

c. Click *OK*.


To configure an LDAP user with MFA:

1. Go to *User & Device* > *User Definition* and click *Create New*.
2. Select *Remote LDAP User*, then click *Next*.
3. Select the just created LDAP server, then click *Next*.

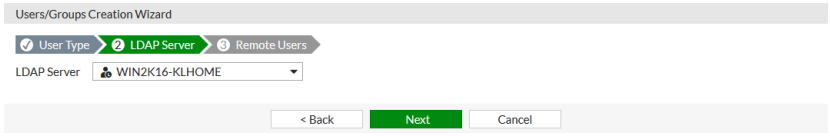

4. Right click to add the selected user, then click *Submit*.
5. Edit the user that you just created.
   The username will be pulled from the LDAP server with the same case as it has on the server.
6. Set the *Email Address* to the address that FortiGate will send the FortiToken to.
7. Enable *Two-factor Authentication*.
8. Set *Authentication Type* to *FortiToken*.

9. Set *Token* to a FortiToken device. See for more information.

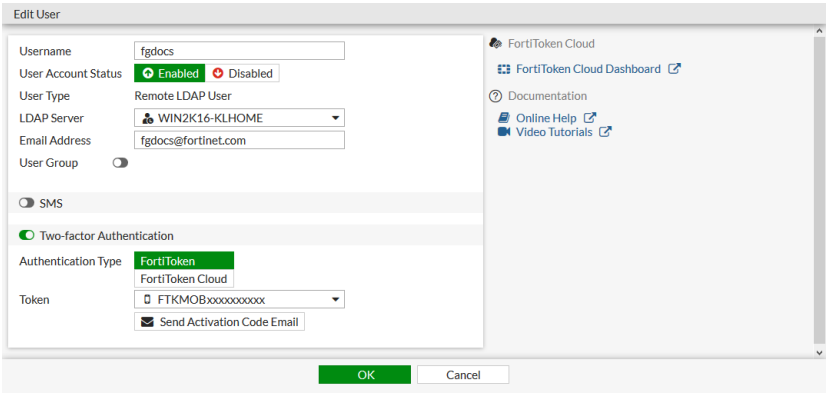

10. Click *OK*.


To disable case sensitivity on the remote user:

This can only be configured in the CLI.

```
config user local
    edit "fgdocs"
        set type ldap
        set two-factor fortitoken
        set fortitoken "FTKMOBxxxxxxxxxx"
        set email-to "fgdocs@fortinet.com"
        set username-case-sensitivity disable
        set ldap-server "WIN2K16-KLHOME"
    next
end
```

To configure a user group with the remote user and the LDAP server:


1. Go to *User & Device* > *User Groups* and click *Create New*.
2. Set the *Name* to *LDAP-USERGRP*.
3. Set *Members* to the just created remote user.
4. In the *Remote Groups* table, click *Add*:
   a. Set *Remote Server* to the LDAP server.
   b. Set the group or groups that apply, and right click to add them.
   c. Click *OK*.

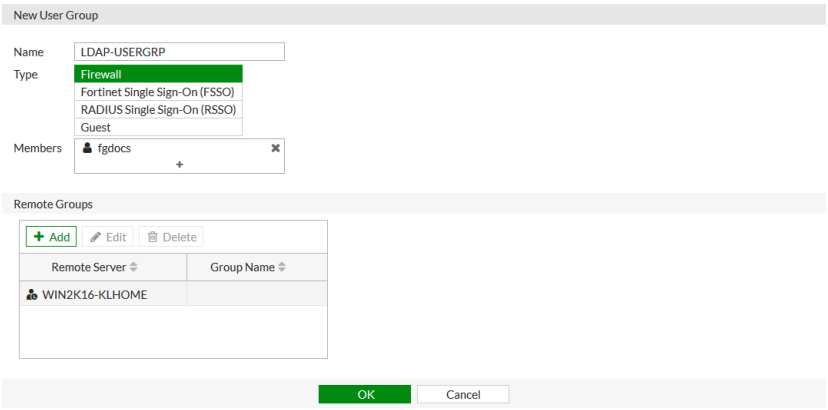

5. Click *OK*.

To apply the user group to the SSL VPN portal:

1. Go to *VPN* > *SSL-VPN Settings*.
2. In the *Authentication/Portal Mapping* table, click *Create New*.
   a. Set *Users/Groups* to the just created user group.
   b. Configure the remaining settings as required.
   c. Click *OK*.

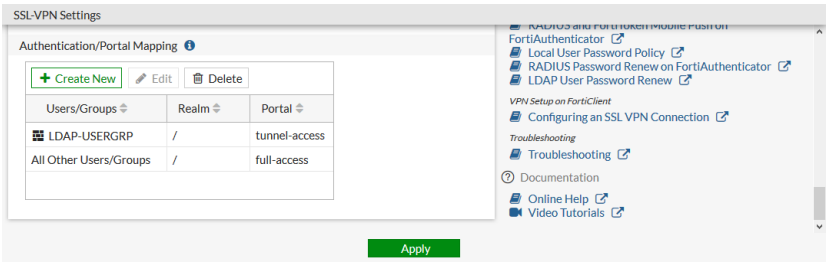


3. Click *Apply*.

To apply the user group to a firewall policy:

1. Go to *Policy & Objects* > *IPv4 Policy* and click *Create New*.
2. Configure the following:

Name	SSLVPNtoInteral
Incoming Interface	SSL-VPN tunnel interface (ssl.root)
Outgoing Interface	port3
Source	Address - SSLVPN_TUNNEL_ADDR1 User - LDAP-USERGRP
Destination	The address of the internal network. In this case: 192.168.20.0.
Schedule	always
Service	ALL
Action	ACCEPT
NAT	Enabled

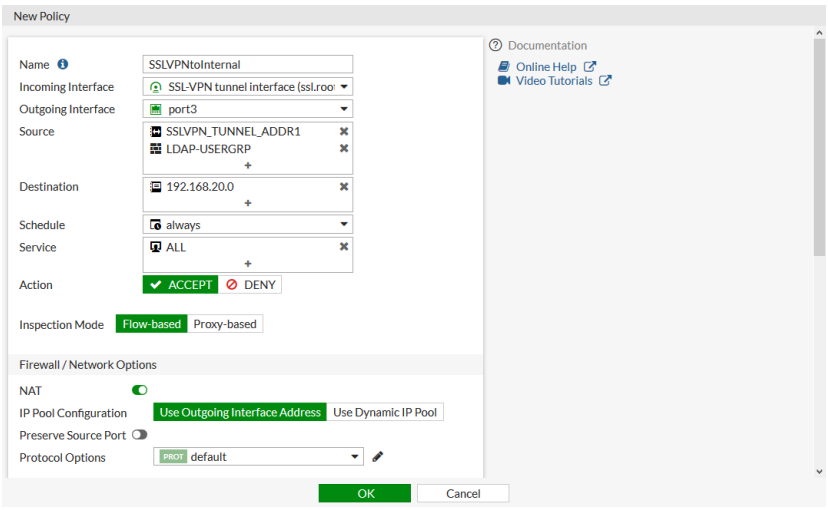

3. Configuring the remaining settings as required.
4. Click *OK*.

To configure this example in the CLI:

1. Configure the LDAP server:

```
config user ldap
    edit "WIN2K16-KLHOME"
        set server "192.168.20.6"
        set cnid "sAMAccountName"
        set dn "dc=KLHOME,dc=local"
        set type regular
        set username "KLHOME\\Administrator"
        set password *********
        set secure ldaps
        set ca-cert "CA_Cert_1"
        set port 636
    next
end
```

2. Configure an LDAP user with MFA:

```
config user local
    edit "fgdocs"
        set type ldap
        set two-factor fortitoken
        set fortitoken "FTKMOBxxxxxxxxxx"
        set email-to "fgdocs@fortinet.com"
        set username-case-sensitivity disable
        set ldap-server "WIN2K16-KLHOME"
    next
end
```

3. Disable case sensitivity on the remote user:

```
config user local
    edit "fgdocs"
        set type ldap
        set two-factor fortitoken
```

```
        set fortitoken "FTKMOBxxxxxxxxxx"
        set email-to "fgdocs@fortinet.com"
        set username-case-sensitivity disable
        set ldap-server "WIN2K16-KLHOME"
    next
end
```

4. Configure a user group with the remote user and the LDAP server:

```
config user group
    edit "LDAP-USERGRP"
        set member "fgdocs" "WIN2K16-KLHOME"
    next
end
```

5. Apply the user group to the SSL VPN portal:

```
config vpn ssl settings
    set servercert <server certificate>
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set source-interface "port1"
    set source-address "all"
    set default-portal "web-access"
    config authentication-rule
        edit 1
            set groups "LDAP-USERGRP"
            set portal "full-access"
        next
    end
end
```

6. Apply the user group to a firewall policy:

```
config firewall policy
    edit 5
        set name "SSLVPNtoInternal"
        set srcintf "ssl.root"
        set dstintf "port3"
        set srcaddr "SSLVPN_TUNNEL_ADDR1"
        set dstaddr "192.168.20.0"
        set action accept
        set schedule "always"
        set service "ALL"
        set groups "LDAP-USERGRP"
        set nat enable
    next
end
```

Verification

To setup the VPN connection:

1. Download FortiClient from www.forticlient.com.
2. Open the FortiClient Console and go to *Remote Access*.
3. Add a new connection:
   a. Set the connection name.
   b. Set *Remote Gateway* to the IP of the listening FortiGate interface.

   c. If required, set the *Customize Port*.
4. Save your settings.

To test the connection with case sensitivity disabled:

1. Connect to the VPN:
   a. Log in to the tunnel with the username, using the same case that it is on the FortiGate.
   b. When prompted, enter your FortiToken code.
   You should now be connected.
2. Check the web portal log in using the CLI:

```
# get vpn ssl monitor
SSL VPN Login Users:
 Index   User    Group   Auth Type      Timeout         From     HTTP in/out   HTTPS
in/out
 0       fgdocs          LDAP-USERGRP    16(1)           289     192.168.2.202 0/0
0/0

SSL VPN sessions:
 Index   User    Group   Source IP      Duration        I/O Bytes       Tunnel/Dest IP
 0       fgdocs          LDAP-USERGRP    192.168.2.202   45      99883/5572
10.212.134.200
```

3. Disconnect from the VPN connection.
4. Reconnect to the VPN:
   a. Log in to the tunnel with the username, using a different case than on the FortiGate.
   b. When prompted, enter your FortiToken code.
   You should now be connected.
5. Check the web portal log in using the CLI:

```
# get vpn ssl monitor
SSL VPN Login Users:
 Index   User    Group   Auth Type      Timeout         From     HTTP in/out   HTTPS
in/out
 0       FGDOCS          LDAP-USERGRP    16(1)           289     192.168.2.202 0/0
0/0

SSL VPN sessions:
 Index   User    Group   Source IP      Duration        I/O Bytes       Tunnel/Dest IP
 0       FGDOCS          LDAP-USERGRP    192.168.2.202   45      99883/5572
10.212.134.200
```

In both cases, the remote user is matched against the remote LDAP user object and prompted for multi-factor authentication.

To test the connection with case sensitivity enabled:

1. Enable case sensitivity for the user:

```
config user local
    edit "fgdocs"
        set username-case-sensitivity enable
    next
end
```

2. Connect to the VPN
   a. Log in to the tunnel with the username, using the same case that it is on the FortiGate.
   b. When prompted, enter your FortiToken code.
   You should now be connected.
3. Check the web portal log in using the CLI:

```
# get vpn ssl monitor
SSL VPN Login Users:
 Index   User    Group   Auth Type      Timeout         From     HTTP in/out   HTTPS
in/out
 0       fgdocs          LDAP-USERGRP    16(1)           289     192.168.2.202 0/0
0/0

SSL VPN sessions:
 Index   User    Group   Source IP      Duration        I/O Bytes       Tunnel/Dest IP
 0       fgdocs          LDAP-USERGRP    192.168.2.202   45      99883/5572
10.212.134.200
```

1. Disconnect from the VPN connection.
2. Reconnect to the VPN:
   a. Log in to the tunnel with the username, using a different case than on the FortiGate.
   You will not be prompted for your FortiToken code. You should now be connected.
3. Check the web portal log in using the CLI:

```
# get vpn ssl monitor
SSL VPN Login Users:
 Index   User    Group   Auth Type      Timeout         From     HTTP in/out   HTTPS
in/out
 0       FGdocs          LDAP-USERGRP    16(1)           289     192.168.2.202 0/0
0/0


SSL VPN sessions:
 Index   User    Group   Source IP      Duration        I/O Bytes       Tunnel/Dest IP
 0       FGdocs          LDAP-USERGRP    192.168.2.202   45      99883/5572
10.212.134.200
```

In this case, the user is allowed to log in without a FortiToken code because the entered user name did not match the name defined on the remote LDAP user object. Authentication continues to be evaluated against the LDAP server though, which is not case sensitive.

SSL VPN with FortiToken mobile push authentication

This is a sample configuration of SSL VPN that uses FortiToken mobile push two-factor authentication. If you enable push notifications, users can accept or deny the authentication request.

Sample topology

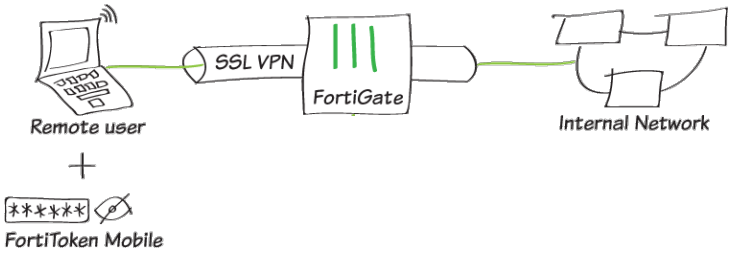

Sample configuration

WAN interface is the interface connected to ISP. This example shows static mode. You can also use DHCP or PPPoE mode. The SSL VPN connection is established over the WAN interface.

To configure SSL VPN using the GUI:

1. Configure the interface and firewall address. The port1 interface connects to the internal network.
   a. Go to *Network* > *Interfaces* and edit the *wan1* interface.
   b. Set *IP/Network Mask* to *172.20.120.123/255.255.255.0*.
   c. Edit *port1* interface and set *IP/Network Mask* to *192.168.1.99/255.255.255.0*.
   d. Click *OK*.
   e. Go to *Policy & Objects* > *Address* and create an address for internet subnet *192.168.1.0*.
2. Register FortiGate for FortiCare Support.
   To add or download a mobile token on FortiGate, FortiGate must be registered for FortiCare Support. If your FortiGate is registered, skip this step.
   a. Go to *Dashboard* > *Licenses*.
   b. Hover the pointer on *FortiCare Support* to check if FortiCare registered. If not, click it and select *Register*.
3. Add FortiToken mobile to FortiGate.
   If your FortiGate has FortiToken installed, skip this step.
   a. Go to *User & Device* > *FortiTokens* and click *Create New*.
   b. Select *Mobile Token* and type in *Activation Code*.
   c. Every FortiGate has two free mobile tokens. Go to *User & Device* > *FortiTokens* and click *Import Free Trial Tokens*.
4. Enable FortiToken mobile push.
   To use FTM-push authentication, use CLI to enable FTM-Push on the FortiGate.
   a. Ensure `server-ip` is reachable from the Internet and enter the following CLI commands:

```
config system ftm-push
    set server-ip 172.20.120.123
    set status enable
end
```

   b. Go to *Network* > *Interfaces*.
   c. Edit the *wan1* interface.
   d. Under *Administrative Access* > *IPv4*, select *FTM*.
   e. Click *OK*.

5. Configure user and user group.
   a. Go to *User & Device* > *User Definition* to create a local user *sslvpnuser1*.
   b. Enter the user's *Email Address*.
   c. Enable *Two-factor Authentication* and select one mobile *Token* from the list,
   d. Enable *Send Activation Code* and select *Email*.
   e. Click *Next* and click *Submit*.
   f. Go to *User & Device* > *User Groups* to create a group *sslvpngroup* with the member *sslvpnuser1*.
6. Activate the mobile token.
   a. When the user *sslvpnuser1* is created, an email is sent to the user's email address. Follow the instructions to install your FortiToken mobile application on your device and activate your token.
7. Configure SSL VPN web portal.
   a. Go to *VPN* > *SSL-VPN Portals* to edit the *full-access* portal.
   This portal supports both web and tunnel mode.
   b. Disable *Enable Split Tunneling* so that all SSL VPN traffic goes through the FortiGate.
8. Configure SSL VPN settings.
   a. Go to *VPN* > *SSL-VPN Settings*.
   b. Select the *Listen on Interface(s)*, in this example, *wan1*.
   c. Set *Listen on Port* to *10443*.
   d. Set *Server Certificate* to the authentication certificate.
   e. Under *Authentication/Portal Mapping*, set default Portal *web-access* for *All Other Users/Groups*.
   f. Create new *Authentication/Portal Mapping* for group *sslvpngroup* mapping portal *full-access*.
9. Configure SSL VPN firewall policy.
   a. Go to *Policy & Objects* > *IPv4 Policy*.
   b. Fill in the firewall policy name. In this example, *sslvpn certificate auth*.
   c. Incoming interface must be *SSL-VPN tunnel interface(ssl.root)*.
   d. Set the *Source Address* to *all* and *Source User* to *sslvpngroup*.
   e. Set the *Outgoing Interface* to the local network interface so that the remote user can access the internal network. In this example, *port1*.
   f. Set *Destination Address* to the internal protected subnet *192.168.1.0*.
   g. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
   h. Enable *NAT*.
   i. Configure any remaining firewall and security options as desired.
   j. Click *OK*.

To configure SSL VPN using the CLI:

1. Configure the interface and firewall address.

```
config system interface
    edit "wan1"
        set vdom "root"
        set ip 172.20.120.123 255.255.255.0
    next
end
```

2. Configure internal interface and protected subnet, then connect the port1 interface to the internal network.

```
config system interface
    edit "port1"
```

```
        set vdom "root"
        set ip 192.168.1.99 255.255.255.0
    next
end

config firewall address
    edit "192.168.1.0"
        set subnet 192.168.1.0 255.255.255.0
    next
end
```

3. Register FortiGate for FortiCare Support.
   To add or download a mobile token on FortiGate, FortiGate must be registered for FortiCare Support. If your FortiGate is registered, skip this step.

   ```
   diagnose forticare direct-registration product-registration -a "your account@xxx.com" -p
   "your password" -T "Your Country/Region" -R "Your Reseller" -e 1
   ```

4. Add FortiToken mobile to FortiGate.
   a. If your FortiGate has FortiToken installed, skip this step.

      ```
      execute fortitoken-mobile import <your FTM code>
      ```

   b. Every FortiGate has two free mobile Tokens. You can download the free token.

      ```
      execute fortitoken-mobile import 0000-0000-0000-0000-0000
      ```

5. Enable FortiToken mobile push.
   a. To use FTM-push authentication, ensure `server-ip` is reachable from the Internet and enable FTM-push in the FortiGate.

      ```
      config system ftm-push
          set server-ip 172.20.120.123
          set status enable
      end
      ```

   b. Enable FTM service on WAN interface.

      ```
      config system interface
          edit "wan1"
              append allowaccess ftm
          next
      end
      ```

6. Configure user and user group.

   ```
   config user local
       edit "sslvpnuser1"
           set type password
           set two-factor fortitoken
           set fortitoken <select mobile token for the option list>
           set email-to <user's email address>
           set passwd <user's password>
       next
   end
   config user group
       edit "sslvpngroup"
           set member "sslvpnuser1"
       next
   end
   ```

7. Activate the mobile token.
   a. When the user *sslvpnuser1* is created, an email is sent to the user's email address. Follow the instructions to install your FortiToken mobile application on your device and activate your token.
8. Configure SSL VPN web portal.

```
config vpn ssl web portal
    edit "full-access"
        set tunnel-mode enable
        set web-mode enable
        set ip-pools "SSLVPN_TUNNEL_ADDR1"
        set split-tunneling disable
    next
end
```

9. Configure SSL VPN settings.

```
config vpn ssl settings
    set servercert "server_certificate"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set source-interface "wan1"
    set source-address "all"
    set default-portal "web-access"
    config authentication-rule
        edit 1
            set groups "sslvpngroup"
            set portal "full-access"
        next
    end
end
```

10. Configure one SSL VPN firewall policy to allow remote user to access the internal network.

```
config firewall policy
    edit 1
        set name "sslvpn web mode access"
        set srcintf "ssl.root"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "192.168.1.0"
        set groups "sslvpngroup"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end
```

To see the results of web portal:

1. From a remote device, use a web browser to log into the SSL VPN web portal *http://172.20.120.123:10443*.
2. Log in using the *sslvpnuser1* credentials.
   The FortiGate pushes a login request notification through the FortiToken mobile application.
3. Check your mobile device and select *Approve*.
   When the authentication is approved, *sslvpnuser1* is logged into the SSL VPN portal.
4. On the FortiGate, go to *Monitor* > *SSL-VPN Monitor* to confirm the user connection.

To see the results of tunnel connection:

1. Download FortiClient from www.forticlient.com.
2. Open the FortiClient Console and go to *Remote Access* > *Configure VPN*.
3. Add a new connection.
   - Set the connection name.
   - Set *Remote Gateway* to the IP of the listening FortiGate interface, in this example, *172.20.120.123*.
4. Select *Customize Port* and set it to *10443*.
5. Save your settings.
6. Log in using the *sslvpnuser1* credentials and click *FTM Push*.
   The FortiGate pushes a login request notification through the FortiToken mobile application.
7. Check your mobile device and select *Approve*.
   When the authentication is approved, *sslvpnuser1* is logged into the SSL VPN tunnel.

To check the SSL VPN connection using the GUI:

1. Go to *VPN* > *Monitor* > *SSL-VPN Monitor* to verify the user's connection.
2. Go to *Log & Report* > *Forward Traffic* to view the details of the SSL VPN traffic.

To check the web portal login using the CLI:

```
get vpn ssl monitor
SSL VPN Login Users:
 Index   User           Auth Type    Timeout   From           HTTP in/out   HTTPS in/out
 0       sslvpnuser1    1(1)         229       10.1.100.254   0/0           0/0

SSL VPN sessions:
 Index   User    Source IP      Duration        I/O Bytes       Tunnel/Dest IP
```

To check the tunnel login using the CLI:


```
get vpn ssl monitor
SSL VPN Login Users:
 Index   User           Auth Type    Timeout   From           HTTP in/out  HTTPS in/out
 0       sslvpnuser1    1(1)         291       10.1.100.254   0/0          0/0

SSL VPN sessions:
 Index   User           Source IP      Duration   I/O Bytes      Tunnel/Dest IP
 0       sslvpnuser1    10.1.100.254   9          22099/43228    10.212.134.200
```

SSL VPN with RADIUS on FortiAuthenticator

This is a sample configuration of SSL VPN that uses FortiAuthenticator as a RADIUS authentication server.

Sample topology

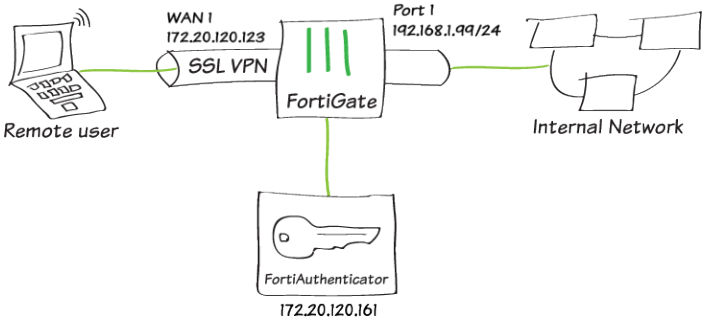

Sample configuration

WAN interface is the interface connected to ISP. This example shows static mode. You can also use DHCP or PPPoE mode. The SSL VPN connection is established over the WAN interface.

To configure FortiAuthenticator using the GUI:

1. Create a user on the FortiAuthenticator.
   a. On the FortiAuthenticator, go to *Authentication* > *User Management* > *Local Users* to create a user *sslvpnuser1*.
   b. Enable *Allow RADIUS authentication* and click *OK* to access additional settings.
   c. Go to *Authentication* > *User Management* > *User Groups* to create a group *sslvpngroup*.
   d. Add *sslvpnuser1* to the group by moving the user from *Available users* to *Selected users*.
2. Create the RADIUS client (FortiGate) on the FortiAuthenticator.
   a. On the FortiAuthenticator, go to *Authentication* > *RADIUS Service* > *Clients* to add the FortiGate as a RADIUS client *OfficeServer*).
   b. Enter the FortiGate IP address and set a *Secret*.
   The secret is a pre-shared secure password that the FortiGate uses to authenticate to the FortiAuthenticator.
   c. Set *Realms* to *local* | *Local users*.

To configure SSL VPN using the GUI:

1. Configure the interface and firewall address. The port1 interface connects to the internal network.
   a. Go to *Network* > *Interfaces* and edit the *wan1* interface.
   b. Set *IP/Network Mask* to *172.20.120.123/255.255.255.0*.
   c. Edit *port1* interface and set *IP/Network Mask* to *192.168.1.99/255.255.255.0*.
   d. Click *OK*.
   e. Go to *Policy & Objects* > *Address* and create an address for internet subnet *192.168.1.0*.
2. Create a RADIUS user and user group .
   a. On the FortiGate, go to *User & Device* > *RADIUS Servers* to create a user to connect to the RADIUS server (FortiAuthenticator).
   b. For *Name*, use *FAC-RADIUS*.
   c. Enter the IP address of the FortiAuthenticator, and enter the *Secret* created above.
   d. Click *Test Connectivity* to ensure you can connect to the RADIUS server.
   e. Select *Test User Credentials* and enter the credentials for *sslvpnuser1*.
   The FortiGate can now connect to the FortiAuthenticator as the RADIUS client.

   f. Go to *User & Device* > *User Groups* and click *Create New* to map authenticated remote users to a user group on the FortiGate.
   g. For *Name*, use *SSLVPNGroup*.
   h. In *Remote Groups*, click *Add*.
   i. In the *Remote Server* dropdown list, select *FAC-RADIUS*.
   j. Leave the *Groups* field blank.
3. Configure SSL VPN web portal.
   a. Go to *VPN* > *SSL-VPN Portals* to edit the *full-access* portal.
   This portal supports both web and tunnel mode.
   b. Disable *Enable Split Tunneling* so that all SSL VPN traffic goes through the FortiGate.
4. Configure SSL VPN settings.
   a. Go to *VPN* > *SSL-VPN Settings*.
   b. Select the *Listen on Interface(s)*, in this example, *wan1*.
   c. Set *Listen on Port* to *10443*.
   d. Set *Server Certificate* to the authentication certificate.
   e. Under *Authentication/Portal Mapping*, set default Portal *web-access* for *All Other Users/Groups*.
   f. Create new *Authentication/Portal Mapping* for group *sslvpngroup* mapping portal *full-access*.
5. Configure SSL VPN firewall policy.
   a. Go to *Policy & Objects* > *IPv4 Policy*.
   b. Fill in the firewall policy name. In this example, *sslvpn certificate auth*.
   c. Incoming interface must be *SSL-VPN tunnel interface(ssl.root)*.
   d. Set the *Source Address* to *all* and *Source User* to *sslvpngroup*.
   e. Set the *Outgoing Interface* to the local network interface so that the remote user can access the internal network. In this example: *port1*.
   f. Set *Destination Address* to the internal protected subnet *192.168.1.0*.
   g. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
   h. Enable *NAT*.
   i. Configure any remaining firewall and security options as desired.
   j. Click *OK*.

To configure SSL VPN using the CLI:

1. Configure the interface and firewall address.

```
config system interface
    edit "wan1"
        set vdom "root"
        set ip 172.20.120.123 255.255.255.0
    next
end
```

2. Configure internal interface and protected subnet, then connect the port1 interface to the internal network.

```
config system interface
    edit "port1"
        set vdom "root"
        set ip 192.168.1.99 255.255.255.0
    next
end
```

```
config firewall address
    edit "192.168.1.0"
        set subnet 192.168.1.0 255.255.255.0
    next
end
```

3. Create a RADIUS user and user group.

```
config user radius
    edit "FAC-RADIUS"
        set server "172.20.120.161"
        set secret <FAC client secret>
    next
end
```

```
config user group
    edit "sslvpngroup"
        set member "FAC-RADIUS"
    next
end
```

4. Configure SSL VPN web portal.

```
config vpn ssl web portal
    edit "full-access"
        set tunnel-mode enable
        set web-mode enable
        set ip-pools "SSLVPN_TUNNEL_ADDR1"
        set split-tunneling disable
    next
end
```

5. Configure SSL VPN settings.

```
config vpn ssl settings
    set servercert "server_certificate"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set source-interface "wan1"
    set source-address "all"
    set default-portal "web-access"
    config authentication-rule
        edit 1
            set groups "sslvpngroup"
            set portal "full-access"
        next
    end
end
```

6. Configure one SSL VPN firewall policy to allow remote user to access the internal network.

```
config firewall policy
    edit 1
        set name "sslvpn web mode access"
        set srcintf "ssl.root"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "192.168.1.0"
        set groups “sslvpngroup”
        set action accept
```

```
            set schedule "always"
            set service "ALL"
            set nat enable
        next
    end
```

To see the results of web portal:

1. From a remote device, use a web browser to log into the SSL VPN web portal *http://172.20.120.123:10443*.
2. Log in using the *sslvpnuser1* credentials.
3. On the FortiGate, go to *Monitor* > *SSL-VPN Monitor* to confirm the user connection.

To see the results of tunnel connection:

1. Download FortiClient from www.forticlient.com.
2. Open the FortiClient Console and go to *Remote Access* > *Configure VPN*.
3. Add a new connection.
   - Set the connection name.
   - Set *Remote Gateway* to *172.20.120.123*.
4. Select *Customize Port* and set it to *10443*.
5. Save your settings.
6. Log in using the *sslvpnuser1* credentials and check that you are logged into the SSL VPN tunnel.

To check the SSL VPN connection using the GUI:

1. Go to *VPN* > *Monitor* > *SSL-VPN Monitor* to verify the user's connection.
2. Go to *Log & Report* > *Forward Traffic* to view the details of the SSL VPN traffic.

To check the web portal login using the CLI:

```
get vpn ssl monitor
SSL VPN Login Users:
 Index   User          Auth Type    Timeout    From           HTTP in/out  HTTPS in/out
 0       sslvpnuser1   1(1)         229        10.1.100.254   0/0          0/0

SSL VPN sessions:
 Index   User    Source IP      Duration        I/O Bytes       Tunnel/Dest IP
```

To check the tunnel login using the CLI:


```
get vpn ssl monitor
SSL VPN Login Users:
 Index   User          Auth Type   Timeout    From           HTTP in/out  HTTPS in/out
 0       sslvpnuser1   1(1)        291        10.1.100.254   0/0          0/0

SSL VPN sessions:
 Index   User          Source IP      Duration     I/O Bytes      Tunnel/Dest IP
 0       sslvpnuser1   10.1.100.254   9            22099/43228    10.212.134.200
```

SSL VPN with RADIUS and FortiToken mobile push on FortiAuthenticator

This is a sample configuration of SSL VPN that uses FortiAuthenticator as a RADIUS authentication server and FortiToken mobile push two-factor authentication. If you enable push notifications, users can accept or deny the authentication request.

Sample topology

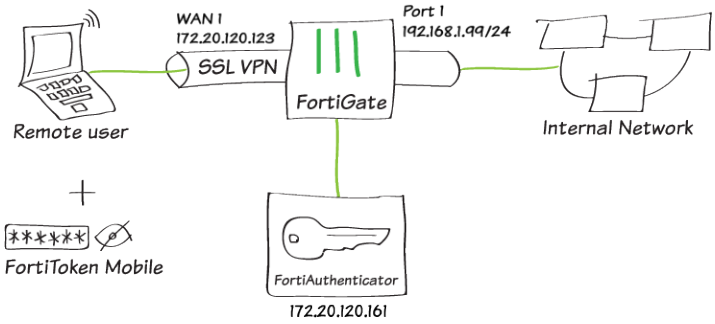

Sample configuration

WAN interface is the interface connected to ISP. This example shows static mode. You can also use DHCP or PPPoE mode. The SSL VPN connection is established over the WAN interface.

To configure FortiAuthenticator using the GUI:

1. Add a FortiToken mobile license on the FortiAuthenticator.
   a. On the FortiAuthenticator, go to *Authentication* > *User Management* > *FortiTokens*.
   b. Click *Create New*.
   c. Set *Token type* to *FortiToken Mobile* and enter the *FortiToken Activation codes*.
2. Create the RADIUS client (FortiGate) on the FortiAuthenticator.
   a. On the FortiAuthenticator, go to *Authentication* > *RADIUS Service* > *Clients* to add the FortiGate as a RADIUS client *OfficeServer*).
   b. Enter the FortiGate IP address and set a *Secret*.
   The secret is a pre-shared secure password that the FortiGate uses to authenticate to the FortiAuthenticator.
   c. Set *Authentication method* to *Enforce two-factor authentication*.
   d. Select *Enable FortiToken Mobile push notifications authentication*.
   e. Set *Realms* to *local | Local users*.
3. Create a user and assign FortiToken mobile to the user on the FortiAuthenticator.
   a. On the FortiAuthenticator, go to *Authentication* > *User Management* > *Local Users* to create a user *sslvpnuser1*.
   b. Enable *Allow RADIUS authentication* and click *OK* to access additional settings.
   c. Enable *Token-based authentication* and select to deliver the token code by *FortiToken*.
   d. Select the FortiToken added from the FortiToken Mobile dropdown menu.
   e. Set *Delivery method* to *Email* and fill in the *User Information* section.
   f. Go to *Authentication* > *User Management* > *User Groups* to create a group *sslvpngroup*.
   g. Add *sslvpnuser1* to the group by moving the user from *Available users* to *Selected users*.

4. Install the FortiToken mobile application on your Android or iOS smartphone.
   The FortiAuthenticator sends the FortiToken mobile activation to the user's email address.
5. Activate the FortiToken mobile through the FortiToken mobile application by entering the activation code or scanning the QR code.

To configure SSL VPN using the GUI:

1. Configure the interface and firewall address. The port1 interface connects to the internal network.
   a. Go to *Network* > *Interfaces* and edit the *wan1* interface.
   b. Set *IP/Network Mask* to *172.20.120.123/255.255.255.0*.
   c. Edit *port1* interface and set *IP/Network Mask* to *192.168.1.99/255.255.255.0*.
   d. Click *OK*.
   e. Go to *Policy & Objects* > *Address* and create an address for internet subnet *192.168.1.0*.
2. Create a RADIUS user and user group.
   a. On the FortiGate, go to *User & Device* > *RADIUS Servers* to create a user to connect to the RADIUS server (FortiAuthenticator).
   b. For *Name*, use *FAC-RADIUS*.
   c. Enter the IP address of the FortiAuthenticator, and enter the *Secret* created above.
   d. Click *Test Connectivity* to ensure you can connect to the RADIUS server.
   e. Select *Test User Credentials* and enter the credentials for *sslvpnuser1*.
      The FortiGate can now connect to the FortiAuthenticator as the RADIUS client.
   f. Go to *User & Device* > *User Groups* and click *Create New* to map authenticated remote users to a user group on the FortiGate.
   g. For *Name*, use *SSLVPNGroup*.
   h. In *Remote Groups*, click *Add*.
   i. In the *Remote Server* dropdown list, select *FAC-RADIUS*.
   j. Leave the *Groups* field blank.
3. Configure SSL VPN web portal.
   a. Go to *VPN* > *SSL-VPN Portals* to edit the *full-access* portal.
      This portal supports both web and tunnel mode.
   b. Disable *Enable Split Tunneling* so that all SSL VPN traffic goes through the FortiGate.
4. Configure SSL VPN settings.
   a. Go to *VPN* > *SSL-VPN Settings*.
   b. Select the *Listen on Interface(s)*, in this example, *wan1*.
   c. Set *Listen on Port* to *10443*.
   d. Set *Server Certificate* to the authentication certificate.
   e. Under *Authentication/Portal Mapping*, set default Portal *web-access* for *All Other Users/Groups*.
   f. Create new *Authentication/Portal Mapping* for group *sslvpngroup* mapping portal *full-access*.
5. Configure SSL VPN firewall policy.
   a. Go to *Policy & Objects* > *IPv4 Policy*.
   b. Fill in the firewall policy name. In this example, *sslvpn certificate auth*.
   c. Incoming interface must be *SSL-VPN tunnel interface(ssl.root)*.
   d. Set the *Source Address* to *all* and *Source User* to *sslvpngroup*.
   e. Set the *Outgoing Interface* to the local network interface so that the remote user can access the internal network. In this example: *port1*.
   f. Set *Destination Address* to the internal protected subnet *192.168.1.0*.

g. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
h. Enable *NAT*.
i. Configure any remaining firewall and security options as desired.
j. Click *OK*.

To configure SSL VPN using the CLI:

1. Configure the interface and firewall address.

```
config system interface
    edit "wan1"
        set vdom "root"
        set ip 172.20.120.123 255.255.255.0
    next
end
```

2. Configure internal interface and protected subnet, then connect the port1 interface to the internal network.

```
config system interface
    edit "port1"
        set vdom "root"
        set ip 192.168.1.99 255.255.255.0
    next
end

config firewall address
    edit "192.168.1.0"
        set subnet 192.168.1.0 255.255.255.0
    next
end
```

3. Create a RADIUS user and user group.

```
config user radius
    edit "FAC-RADIUS"
        set server "172.20.120.161"
        set secret <FAC client secret>
    next
end

config user group
    edit "sslvpngroup"
        set member "FAC-RADIUS"
    next
end
```

4. Configure SSL VPN web portal.

```
config vpn ssl web portal
    edit "full-access"
        set tunnel-mode enable
        set web-mode enable
        set ip-pools "SSLVPN_TUNNEL_ADDR1"
        set split-tunneling disable
     next
end
```

5. Configure SSL VPN settings.

```
config vpn ssl settings
    set servercert "server_certificate"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set source-interface "wan1"
    set source-address "all"
    set default-portal "web-access"
    config authentication-rule
        edit 1
            set groups "sslvpngroup"
            set portal "full-access"
        next
    end
end
```

6. Configure one SSL VPN firewall policy to allow remote user to access the internal network.

```
config firewall policy
    edit 1
        set name "sslvpn web mode access"
        set srcintf "ssl.root"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "192.168.1.0"
        set groups "sslvpngroup"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end
```

To see the results of web portal:

1. From a remote device, use a web browser to log into the SSL VPN web portal *http://172.20.120.123:10443*.
2. Log in using the *sslvpnuser1* credentials.
   The FortiAuthenticator pushes a login request notification through the FortiToken Mobile application.
3. Check your mobile device and select *Approve*.
   When the authentication is approved, *sslvpnuser1* is logged into the SSL VPN portal.
4. On the FortiGate, go to *Monitor* > *SSL-VPN Monitor* to confirm the user connection.

To see the results of tunnel connection:

1. Download FortiClient from www.forticlient.com.
2. Open the FortiClient Console and go to *Remote Access* > *Configure VPN*.
3. Add a new connection.
   - Set the connection name.
   - Set *Remote Gateway* to the IP of the listening FortiGate interface, in this example: *172.20.120.123*.
4. Select *Customize Port* and set it to *10443*.
5. Save your settings.
6. Log in using the *sslvpnuser1* credentials and click *FTM Push*.
   The FortiAuthenticator pushes a login request notification through the FortiToken Mobile application.

7. Check your mobile device and select *Approve*.
   When the authentication is approved, *sslvpnuser1* is logged into the SSL VPN tunnel.

To check the SSL VPN connection using the GUI:

1. Go to *VPN* > *Monitor* > *SSL-VPN Monitor* to verify the user's connection.
2. Go to *Log & Report* > *Forward Traffic* to view the details of the SSL VPN traffic.

To check the web portal login using the CLI:

```
get vpn ssl monitor
SSL VPN Login Users:
 Index   User          Auth Type   Timeout   From          HTTP in/out   HTTPS in/out
 0       sslvpnuser1   1(1)        229       10.1.100.254  0/0           0/0

SSL VPN sessions:
 Index   User    Source IP      Duration        I/O Bytes       Tunnel/Dest IP
```

To check the tunnel login on CLI:


```
get vpn ssl monitor
SSL VPN Login Users:
 Index   User          Auth Type    Timeout   From          HTTP in/out  HTTPS in/out
 0       sslvpnuser1   1(1)         291       10.1.100.254  0/0          0/0

SSL VPN sessions:
 Index   User          Source IP      Duration    I/O Bytes      Tunnel/Dest IP
 0       sslvpnuser1   10.1.100.254   9           22099/43228    10.212.134.200
```

SSL VPN with RADIUS password renew on FortiAuthenticator

This is a sample configuration of SSL VPN for RADIUS users with *Force Password Change on next logon*. In this example, the RADIUS server is a FortiAuthenticator. A user *test1* is configured on FortiAuthenticator with *Force password change on next logon*.

Sample topology

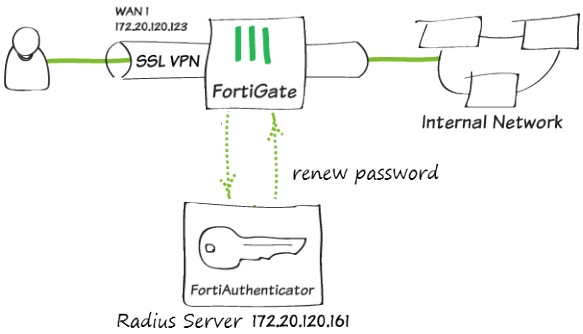

Sample configuration

WAN interface is the interface connected to ISP. This example shows static mode. You can also use DHCP or PPPoE mode. The SSL VPN connection is established over the WAN interface.

To configure SSL VPN using the GUI:

1. Configure the interface and firewall address. The port1 interface connects to the internal network.
   a. Go to *Network* > *Interfaces* and edit the *wan1* interface.
   b. Set *IP/Network Mask* to *172.20.120.123/255.255.255.0*.
   c. Edit *port1* interface and set *IP/Network Mask* to *192.168.1.99/255.255.255.0*.
   d. Click *OK*.
   e. Go to *Policy & Objects* > *Address* and create an address for internet subnet *192.168.1.0*.
2. Create a RADIUS user.
   a. Go to *User & Device* > *RADIUS Servers* to create a user.
   b. Set *Authentication method* to *MS-CHAP-v2*.
   c. Enter the *IP/Name* and *Secret*.
   d. Click *Create*.
   Password renewal only works with the MS-CHAP-v2 authentication method.
   e. To enable the `password-renew` option, use these CLI commands.

```
config user radius
    edit "fac"
        set server "172.20.120.161"
        set secret <fac radius password>
        set auth-type ms_chap_v2
        set password-renewal enable
    next
end
```

3. Configure user group.
   a. Go to *User & Device* > *User Groups* to create a user group.
   b. For the *Name*, enter *fac-group*.
   c. In *Remote Groups*, click *Add* to add *Remote Server* you just created.
4. Configure SSL VPN web portal.
   a. Go to *VPN* > *SSL-VPN Portals* to edit the *full-access* portal.
   This portal supports both web and tunnel mode.
   b. Disable *Enable Split Tunneling* so that all SSL VPN traffic goes through the FortiGate.
5. Configure SSL VPN settings.
   a. Go to *VPN* > *SSL-VPN Settings*.
   b. Select the *Listen on Interface(s)*, in this example, *wan1*.
   c. Set *Listen on Port* to *10443*.
   d. Set *Server Certificate* to the authentication certificate.
   e. Under *Authentication/Portal Mapping*, set default Portal *web-access* for *All Other Users/Groups*.
   f. Create new *Authentication/Portal Mapping* for group *fac-group* mapping portal *full-access*.
6. Configure SSL VPN firewall policy.
   a. Go to *Policy & Objects* > *IPv4 Policy*.
   b. Fill in the firewall policy name, in this example, *sslvpn certificate auth*.
   c. Incoming interface must be *SSL-VPN tunnel interface(ssl.root)*.

d. Set the *Source Address* to *all* and *Source User* to *fac-group*.
e. Set the *Outgoing Interface* to the local network interface so that the remote user can access the internal network, in this example, *port1*.
f. Set *Destination Address* to the internal protected subnet *192.168.1.0*.
g. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
h. Enable *NAT*.
i. Configure any remaining firewall and security options as desired.
j. Click *OK*.

To configure SSL VPN using the CLI:

1. Configure the interface and firewall address.

```
config system interface
    edit "wan1"
        set vdom "root"
        set ip 172.20.120.123 255.255.255.0
    next
end
```

2. Configure internal interface and protected subnet, then connect the port1 interface to the internal network.

```
config system interface
    edit "port1"
        set vdom "root"
        set ip 192.168.1.99 255.255.255.0
    next
end
```

```
config firewall address
    edit "192.168.1.0"
        set subnet 192.168.1.0 255.255.255.0
    next
end
```

3. Configure the RADIUS server.

```
config user radius
    edit "fac"
        set server "172.18.58.107"
        set secret <fac radius password>
        set auth-type ms_chap_v2
        set password-renewal enable
    next
end
```

4. Configure user group.

```
config user group
    edit "fac-group"
        set member "fac"
    next
end
```

5. Configure SSL VPN web portal.

```
config vpn ssl web portal
    edit "full-access"
```

```
        set tunnel-mode enable
        set web-mode enable
        set ip-pools "SSLVPN_TUNNEL_ADDR1"
        set split-tunneling disable
    next
end
```

6. Configure SSL VPN settings.

```
config vpn ssl settings
    set servercert "server_certificate"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set source-interface "wan1"
    set source-address "all"
    set default-portal "web-access"
    config authentication-rule
        edit 1
            set groups "fac-group"
            set portal "full-access"
        next
    end
end
```

7. Configure one SSL VPN firewall policy to allow remote user to access the internal network.

```
config firewall policy
    edit 1
        set name "sslvpn web mode access"
        set srcintf "ssl.root"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "192.168.1.0"
        set groups "fac-group"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end
```

To see the results of web portal:

1. From a remote device, use a web browser to log into the SSL VPN web portal *http://172.20.120.123:10443*.
2. Log in using the *test1* credentials.
   Use a user which is configured on FortiAuthenticator with *Force password change on next logon*.
3. Click *Login*. You are prompted to enter a new password.
4. Go to *VPN* > *Monitor* > *SSL-VPN Monitor* to verify the user's connection.

To see the results of tunnel connection:

1. Download FortiClient from www.forticlient.com.
2. Open the FortiClient Console and go to *Remote Access* > *Configure VPN*.
3. Add a new connection.
   - Set the connection name.
   - Set *Remote Gateway* to the IP of the listening FortiGate interface, in this example, *172.20.120.123*.

4. Select *Customize Port* and set it to *10443*.
5. Save your settings.
6. Log in using the *test1* credentials.
   You are prompted to enter a new password.

To check the SSL VPN connection using the GUI:

1. Go to *VPN* > *Monitor* > *SSL-VPN Monitor* to verify the user's connection.
2. Go to *Log & Report* > *Events* and select *VPN Events* from the event type dropdown list to view the details of the SSL VPN connection event log.
3. Go to *Log & Report* > *Forward Traffic* to view the details of the SSL VPN traffic.

To check the web portal login using the CLI:

```
get vpn ssl monitor
SSL VPN Login Users:
 Index   User    Auth Type    Timeout    From           HTTP in/out   HTTPS in/out
 0       test1   1(1)         229        10.1.100.254   0/0           0/0

SSL VPN sessions:
 Index   User    Source IP      Duration        I/O Bytes       Tunnel/Dest IP
```

To check the tunnel login using the CLI:

```
get vpn ssl monitor
SSL VPN Login Users:
 Index   User    Auth Type    Timeout   From           HTTP in/out  HTTPS in/out
 0       test1   1(1)         291       10.1.100.254   0/0          0/0


SSL VPN sessions:
 Index   User    Source IP      Duration   I/O Bytes      Tunnel/Dest IP
 0       test1   10.1.100.254   9          22099/43228    10.212.134.200
```

SSL VPN with RADIUS on Windows NPS

This is an example configuration of SSL VPN that uses Windows Network Policy Server (NPS) as a RADIUS authentication server.

The NPS must already be configured to accept the FortiGate as a RADIUS client and the choice of authentication method, such as MS-CHAPv2. A shared key must also have been created.

Example

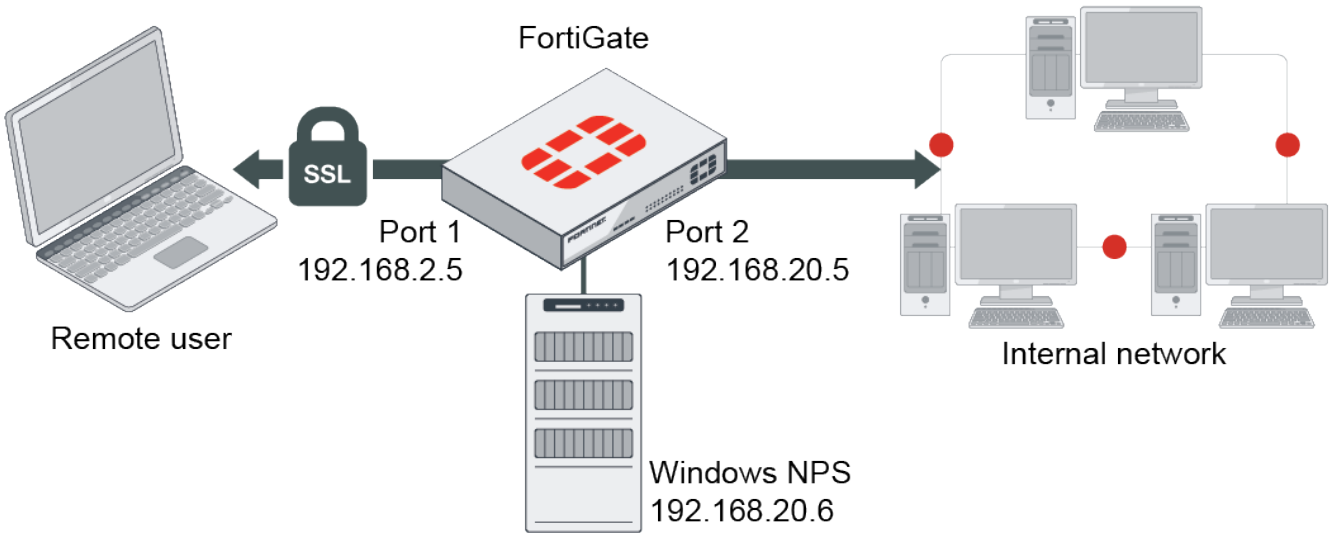

The user is connecting from their PC to the FortiGate's port1 interface. RADIUS authentication occurs between the FortiGate and the Windows NPS, and the SSL-VPN connection is established once the authentication is successful.

Configure SSL-VPN with RADIUS on Windows NPS in the GUI

To configure the internal and external interfaces:

1. Go to *Network* > *Interfaces*
2. Edit the *port1* interface and set *IP/Network Mask* to *192.168.2.5/24*.
3. Edit the *port2* interface and set *IP/Network Mask* to *192.168.20.5/24*.
4. Click *OK*.


To create a firewall address:

1. Go to *Policy & Objects* > *Addresses* and click *Create New* > *Address*.
2. Set *Name* to *192.168.20.0*.
3. Leave *Type* as *Subnet*
4. Set *Subnet / IP Range* to *192.168.20.0*.
5. Click *OK*.

To add the RADIUS server:

1. Go to *User & Device* > *RADIUS Servers* and click *Create New*.
2. Set *Name* to *rad-server*.
3. Leave *Authentication method* set to *Default*. The PAP, MS-CHAPv2, and CHAP methods will be tried in order.
4. Under *Primary Server*, set *IP/Name* to *192.168.20.6* and *Secret* to the shared secret configured on the RADIUS server.
5. Click *Test Connectivity* to test the connection to the server, and ensure that *Connection status* is *Successful*.


6. Optionally, click *Test User Credentials* to test user credentials. Testing from the GUI is limited to PAP.

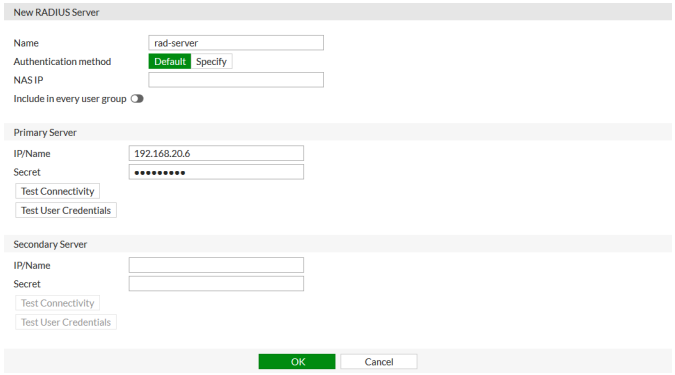

7. Click *OK*.

To configure a user group:


1. Go to *User & Device* > *User Groups* and click *Create New*.
2. Set *Name* to *rad-group*.
3. Under *Remote Groups*, click *Add* and add the *rad-server*.

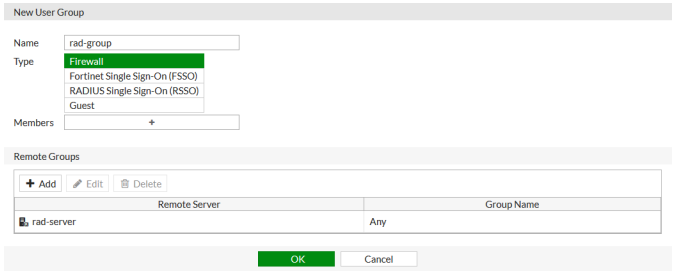

4. Click *OK*.

To configure SSL VPN settings:


1. Go to *VPN* > *SSL-VPN Settings*.
2. Select the *Listen on Interface(s)*, in this example, *port1*.
3. Set *Listen on Port* to *10443*.
4. If you have a server certificate, set *Server Certificate* to the authentication certificate.
5. Under *Authentication/Portal Mapping*:
   a. Edit *All Other Users/Groups* and set *Portal* to *web-access*.
   b. Click *Create New* and create a mapping for the *rad-group* user group with *Portal* set to *full-access*.

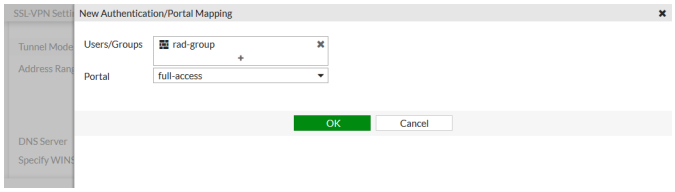

   c. Click *OK*.
6. Configure other settings as required.
7. Click *Apply*.

To configure an SSL VPN firewall policy:

1. Go to *Policy & Objects* > *IPv4 Policy* and click *Create New*.
2. Set the policy name, in this example, *sslvpn-radius*.
3. Set *Incoming Interface* to *SSL-VPN tunnel interface(ssl.root)*.
4. Set *Outgoing Interface* to the local network interface so that the remote user can access the internal network. In this example, *port2*.
5. Set the *Source* > *Address* to *all* and *Source* > *User* to *rad-group*.
6. Set *Destination* > *Address* to the internal protected subnet *192.168.20.0*.
7. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
8. Enable *NAT*.

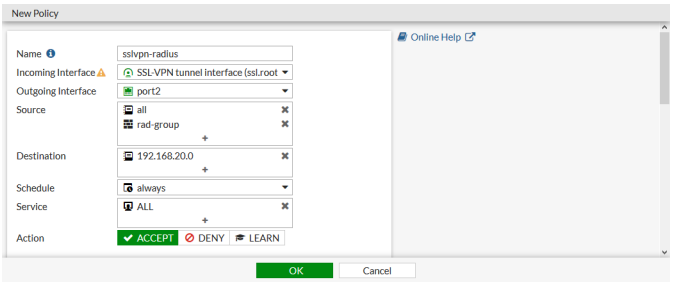

9. Configure the remaining options as required.
10. Click *OK*.

Configure SSL-VPN with RADIUS on Windows NPS in the CLI

To configure SSL VPN using the CLI:

1. Configure the internal and external interfaces:

```
config system interface
    edit "port1"
        set vdom "root"
        set ip 192.168.2.5 255.255.255.0
        set alias internal
    next
    edit "port2"
        set vdom "root"
        set ip 192.168.20.5 255.255.255.0
        set alias external
    next
end
```

2. Configure the firewall address:

```
config firewall address
    edit "192.168.20.0"
        set subnet 192.168.20.0 255.255.255.0
    next
end
```

3. Add the RADIUS server:

```
config user radius
    edit "rad-server"
```

```
        set server "192.168.20.6"
        set secret *********
    next
end
```

4. Create a user group and add the RADIUS server to it:.

```
config user group
    edit "rad-group"
        set member "rad-server"
    next
end
```

5. Configure SSL VPN settings:

```
config vpn ssl settings
    set servercert "server_certificate"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set source-interface "port1"
    set source-address "all"
    set default-portal "web-access"
    config authentication-rule
        edit 1
            set groups "rad-group"
            set portal "full-access"
        next
    end
end
```

6. Configure an SSL VPN firewall policy to allow remote user to access the internal network.

```
config firewall policy
    edit 1
        set name "sslvpn-radius"
        set srcintf "ssl.root"
        set dstintf "port2"
        set srcaddr "all"
        set dstaddr "192.168.20.0"
        set groups "rad-group"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end
```

Results

To connect with FortiClient in tunnel mode:

1. Download FortiClient from www.forticlient.com.
2. Open the FortiClient Console and go to *Remote Access* > *Configure VPN*.
3. Add a new connection:
   a. Set the connection name.
   b. Set *Remote Gateway* to *192.168.2.5*.
   c. Select *Customize Port* and set it to *10443*.

4. Save your settings.
5. Log in using the RADIUS user credentials.

To check the SSL VPN connection using the GUI:

1. Go to *Monitor* > *SSL-VPN* to verify the user's connection.
2. Go to *Log & Report* > *Events* and select *VPN Events* from the event type drop-down list to view the details of the SSL VPN connection event log.
3. Go to *Log & Report* > *Forward Traffic* to view the details of the SSL VPN traffic.

To check the login using the CLI:

```
# get vpn ssl monitor
SSL VPN Login Users:
 Index   User    Group   Auth Type      Timeout         From     HTTP in/out    HTTPS in/out
 0       radkeith        rad-group        2(1)            295     192.168.2.202  0/0     0/0


SSL VPN sessions:
 Index   User    Group   Source IP      Duration        I/O Bytes       Tunnel/Dest IP
 0       radkeith        rad-group        192.168.2.202   18      28502/4966
10.212.134.200
```

SSL VPN with multiple RADIUS servers

When configuring two or more RADIUS servers, you can configure a Primary and Secondary server within the same RADIUS server configurations for backup purposes. You can also configure multiple RADIUS servers within the same User Group to service the access request at the same time.

A tertiary server can be configured in the CLI.

Sample topology

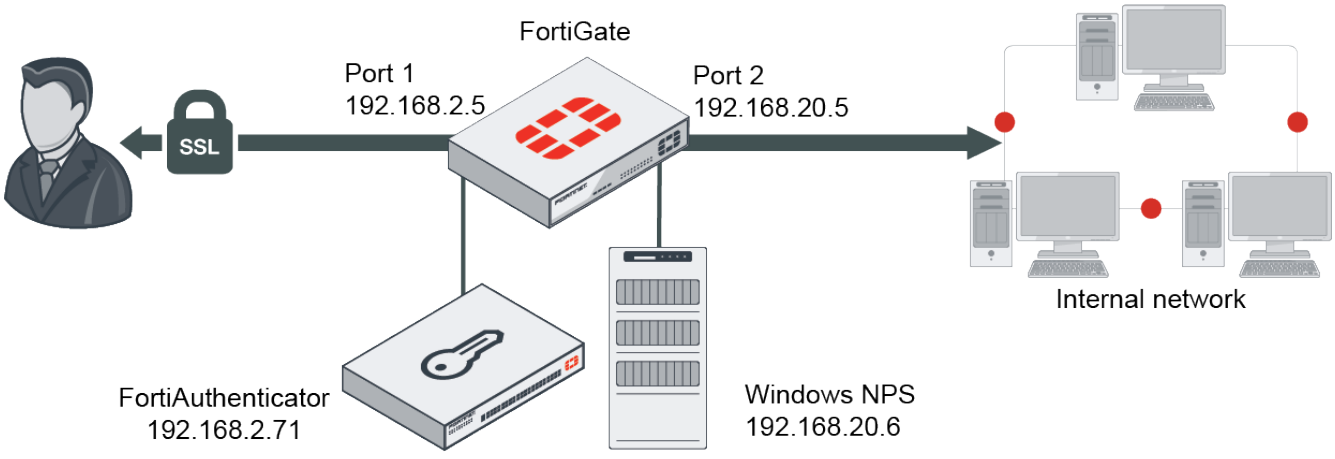

Sample configurations

- Configure a Primary and Secondary server for backup on page 1375
- Authenticating to two RADIUS servers concurrently on page 1379

Configure a Primary and Secondary server for backup

When you define a Primary and Secondary RADIUS server, the access request will always be sent to the Primary server first. If the request is denied with an Access-Reject, then the user authentication fails. However, if there is no response from the Primary server after another attempt, the access request will be sent to the Secondary server.

In this example, you will use a Windows NPS server as the Primary server and a FortiAuthenticator as the Secondary server. It is assumed that users are synchronized between the two servers.

To configure the internal and external interfaces:

1. Go to *Network* > *Interfaces*.
2. Edit the *port1* interface and set *IP/Network Mask* to *192.168.2.5/24*.
3. Edit the *port2* interface and set *IP/Network Mask* to *192.168.20.5/24*.
4. Click *OK*.

To create a firewall address:

1. Go to *Policy & Objects* > *Addresses* and click *Create New* > *Address*.
2. Set *Name* to *192.168.20.0*.
3. Leave *Type* as *Subnet*
4. Set IP/*Netmask* to *192.168.20.0/24*.
5. Click *OK*.

To add the RADIUS server:

1. Go to *User & Device* > *RADIUS Servers* and click *Create New*.
2. Set *Name* to *PrimarySecondary*.
3. Leave *Authentication method* set to *Default*. The PAP, MS-CHAPv2, and CHAP methods will be tried in order.
4. Under *Primary Server*, set *IP/Name* to *192.168.20.6* and *Secret* to the shared secret configured on the RADIUS server.
5. Click *Test Connectivity* to test the connection to the server, and ensure that *Connection status* is *Successful*.
6. Under *Secondary Server*, set *IP/Name* to *192.168.2.71* and *Secret* to the shared secret configured on the RADIUS server.
7. Click *Test Connectivity* to test the connection to the server, and ensure that *Connection status* is *Successful*.
8. *Click OK.*

To configure the user group:

1. Go to *User & Authentication* > *User Groups* and click *Create New*.
2. In the *Name* field, enter *PrimarySecondaryGroup*.
3. In the *Remote Groups* area, click *Add*, and from the *Remote Server* dropdown, select *PrimarySecondary*.
4. Click *OK*, and then click *OK* again.

To configure the SSL VPN settings:

1. Go to *VPN* > *SSL-VPN Settings*.
2. From the *Listen on Interface(s)* dropdown select *port1*.
3. In the *Listen on Port* field enter *10443*.
4. Optionally, from the *Server Certificate* dropdown, select the authentication certificate if you have one for this SSL VPN portal.
5. Under *Authentication/Portal Mapping*, set the default portal web-access.
   a. Select *All Other Users/Groups* and click *Edit*.
   b. From the *Portal* dropdown, select *web-access*.
   c. Click *OK*.
6. Create a web portal for *PrimarySecondaryGroup*.
   a. Under *Authentication/Portal Mapping*, click *Create New*.
   b. Click *Users/Groups* and select *PrimarySecondaryGroup*.
   c. From the *Portal* dropdown, select *full-access*.
   d. Click *OK*.

To configure SSL VPN firewall policy:

1. Go to *Policy & Objects* > *IPv4 Policy*.
2. Click *Create New* to create a new policy, or double-click an existing policy to edit it and configure settings.

Name	Enter the firewall policy name.
Incoming Interface	Select *SSL-VPN tunnel interface (ssl.root)*.
Outgoing interface	Set to the local network interface so that the remote user can access the internal network. For this example, select *port3*.
Source	In the *Address* tab select *SSLVPN_TUNNEL_ADDR1*. In the *User* tab, select *PrimarySecondaryGroup*.
Destination	Select the internal protected subnet *192.168.20.0*.
Schedule	Select *always*.
Service	Select *All*.
Action	Select *Accept*.
NAT	Set to *Enable*.

3. Configure any remaining firewall and security options as desired.
4. Click *OK*.

To configure SSL VPN using the CLI:

1. Configure the internal interface and firewall address.

```
config system interface
   edit "port3"
      set vdom "root"
      set ip 192.168.20.5 255.255.255.0
      set alias "internal"
   next
```

```
end
config firewall address
   edit "192.168.20.0"
      set uuid cc41eec2-9645-51ea-d481-5c5317f865d0
      set subnet 192.168.20.0 255.255.255.0
   next
end
```

2. Configure the RADIUS server.

```
config user radius
   edit "PrimarySecondary"
      set server "192.168.20.6"
      set secret <secret>
      set secondary-server "192.168.2.71"
      set secondary-secret <secret>
   next
end
```

3. Add the RADIUS user to the user group.

```
config user group
   edit "PrimarySecondaryGroup"
      set member "PrimarySecondary "
   next
end
```

4. Configure SSL VPN settings.

```
config vpn ssl settings
   set servercert "server_certificate"
   set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
   set source-interface "port1"
   set source-address "all"
   set default-portal "web-access"
   config authentication-rule
      edit 1
         set groups "PrimarySecondaryGroup "
         set portal "full-access"
      next
   end
end
```

5. Configure one SSL VPN firewall policy to allow remote users to access the internal network.

```
config firewall policy
   edit 1
      set name "sslvpn-radius"
      set srcintf "ssl.root"
      set dstintf "port3"
      set srcaddr "all"
      set dstaddr "192.168.20.0"
      set groups "PrimarySecondaryGroup"
      set action accept
      set schedule "always"
      set service "ALL"
      set nat enable
   next
end
```

To verify the connection:

User *radkeith* is a member of both the NPS server and the FAC server.

When the Primary server is up, it will connect to the SSL VPN tunnel using FortiClient.

```
# diag sniffer packet any 'port 1812' 4 0 l
interfaces=[any]
filters=[port 1812]
2020-05-15 16:26:50.838453 port3 out 192.168.20.5.2374 -> 192.168.20.6.1812: udp 118
2020-05-15 16:26:50.883166 port3 in 192.168.20.6.1812 -> 192.168.20.5.2374: udp 20
2020-05-15 16:26:50.883374 port3 out 192.168.20.5.2374 -> 192.168.20.6.1812: udp 182
2020-05-15 16:26:50.884683 port3 in 192.168.20.6.1812 -> 192.168.20.5.2374: udp 228
```

The access request is sent to the Primary NPS server 192.168.20.6, and the connection is successful.

```
# get vpn ssl monitor
SSL VPN Login Users:

Index   User            Group                   Auth Type      Timeout         From     HTTP
in/out    HTTPS in/out

0       radkeith       PrimarySecondaryGroup   2(1)            285     192.168.2.202
 0/0     0/0

SSL VPN sessions:

Index   User       Group                   Source IP      Duration        I/O Bytes
Tunnel/Dest IP

0       radkeith   PrimarySecondaryGroup   192.168.2.202   62              132477/4966
10.212.134.200
```

When the Primary server is down, and the Secondary server is up, the connection is made to the SSLVPN tunnel again:

```
# diag sniffer packet any 'port 1812' 4 0 l
interfaces=[any]
filters=[port 1812]
2020-05-15 16:31:23.016875 port3 out 192.168.20.5.7989 -> 192.168.20.6.1812: udp 118
2020-05-15 16:31:28.019470 port3 out 192.168.20.5.7989 -> 192.168.20.6.1812: udp 118
2020-05-15 16:31:30.011874 port1 out 192.168.2.5.23848 -> 192.168.2.71.1812: udp 118
2020-05-15 16:31:30.087564 port1 in 192.168.2.71.1812 -> 192.168.2.5.23848: udp 20
```

Access request is sent to the Primary NPS server 192.168.20.6, but there was no response. RADIUS authentication falls through to the Secondary FortiAuthenticator 192.168.2.71, and the authentication was accepted. The VPN connection is established.

```
   # get vpn ssl monitor
SSL VPN Login Users:

Index   User            Group                  Auth Type      Timeout         From     HTTP
in/out    HTTPS in/out

0       radkeith        PrimarySecondaryGroup   2(1)            287     192.168.2.202
0/0        0/0

SSL VPN sessions:

Index   User            Group                    Source IP      Duration        I/O Bytes
   Tunnel/Dest IP

0       radkeith        PrimarySecondaryGroup   192.168.2.202   48              53544/4966
  10.212.134.200
```

Authenticating to two RADIUS servers concurrently

There are times where users are located on separate RADIUS servers. This may be the case when migrating from an old server to a new one for example. In this scenario, a Windows NPS server and a FortiAuthenticator are configured in the same User Group. The access-request is sent to both servers concurrently. If FortiGate receives an access-accept from either server, authentication is successful.

To configure the internal and external interfaces:

1. Go to *Network* > *Interfaces*.
2. Edit the *port1* interface and set *IP/Network Mask* to *192.168.2.5/24*.
3. Edit the *port2* interface and set *IP/Network Mask* to *192.168.20.5/24*.
4. Click *OK*.

To create a firewall address:

1. Go to *Policy & Objects* > *Addresses* and click *Create New* > *Address*.
2. Set *Name* to *192.168.20.0*.
3. Leave *Type* as *Subnet*
4. Set IP/*Netmask* to *192.168.20.0/24*.
5. Click *OK*.

To configure the first RADIUS server:

1. Go to *User & Device* > *RADIUS Servers* and click *Create New*.
2. Set *Name* to *win2k16*.
3. Leave *Authentication method* set to *Default*. The PAP, MS-CHAPv2, and CHAP methods will be tried in order.
4. Under *Primary Server*, set *IP/Name* to *192.168.20.6* and *Secret* to the shared secret configured on the RADIUS server.
5. Click *Test Connectivity* to test the connection to the server, and ensure that *Connection status* is *Successful*.
6. *Click OK.*

To configure the second RADIUS server:

1. Go to *User & Authentication* > *RADIUS Servers* and click *Create New*.
2. Set *Name* to *fac*.
3. Leave *Authentication method* set to *Default*. The PAP, MS-CHAPv2, and CHAP methods will be tried in order.
4. Under *Primary Server*, set *IP/Name* to *192.168.2.71* and *Secret* to the shared secret configured on the RADIUS server.
5. Click *Test Connectivity* to test the connection to the server, and ensure that *Connection status* is *Successful*.
6. *Click OK.*

To configure the user group:

1. Go to *User & Authentication* > *User Groups* and click *Create New*.
2. In the *Name* field, enter *dualPrimaryGroup.*.
3. In the *Remote Groups* area, click *Add*, and from the *Remote Server* dropdown, select *fac*.
4. Click *Add* again. From the *Remote Server* dropdown select *win2k16* and click *OK*.
5. Click *OK*, and then click *OK* again.

To configure the SSL VPN settings:

1. Go to *VPN* > *SSL-VPN Settings*.
2. From the *Listen on Interface(s)* dropdown select *port1*.
3. In the *Listen on Port* field enter *10443*.
4. Optionally, from the *Server Certificate* dropdown, select the authentication certificate if you have one for this SSL VPN portal.
5. Under *Authentication/Portal Mapping*, set the default portal web-access.
   a. Select *All Other Users/Groups* and click Edit.
   b. From the *Portal* dropdown, select *web-access*.
   c. Click *OK*.
6. Create a web portal for *PrimarySecondaryGroup*.
   a. Under *Authentication/Portal Mapping*, click *Create New*.
   b. Click *Users/Groups* and select *dualPrimaryGroup*.
   c. From the *Portal* dropdown, select *full-access*.
   d. Click *OK*.

To configure SSL VPN firewall policy:

1. Go to *Policy & Objects* > *IPv4 Policy*.
2. Click *Create New* to create a new policy, or double-click an existing policy to edit it.

Name	Enter the firewall policy name.
Incoming Interface	Select *SSL-VPN tunnel interface (ssl.root)*.
Outgoing interface	Set to the local network interface so that the remote user can access the internal network. For this example, select port3.
Source	1. In the *Address* tab select *SSLVPN_TUNNEL_ADDR1*. 2. In the *User* tab, select *dualPrimaryGroup*.
Destination	Select the internal protected subnet *192.168.20.0*.
Schedule	Select *always*.
Service	Select *All*.
Action	Select *Accept*.
NAT	Set to *Enable*.

3. Configure any remaining firewall and security options as desired.
4. Click *OK*.

To configure SSL VPN using the CLI:

1. Configure the internal interface and firewall address.

```
config system interface
   edit "port3"
      set vdom "root"
      set ip 192.168.20.5 255.255.255.0
      set alias "internal"
   next
```

```
end
config firewall address
   edit "192.168.20.0"
      set uuid cc41eec2-9645-51ea-d481-5c5317f865d0
      set subnet 192.168.20.0 255.255.255.0
   next
end
```

2. Configure the RADIUS server.

```
config user radius
   edit "win2k16"
      set server "192.168.20.6"
      set secret <secret>
   next
   edit "fac"
      set server "192.168.2.71"
      set secret <secret>
   next
end
```

3. Add the RADIUS user to the user group.

```
config user group
   edit "dualPrimaryGroup"
      set member "win2k16" "fac"
   next
end
```

4. Configure SSL VPN settings.

```
config vpn ssl settings
   set servercert "server_certificate"
   set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
   set source-interface "port1"
   set source-address "all"
   set default-portal "web-access"
   config authentication-rule
      edit 1
         set groups "dualPrimaryGroup"
         set portal "full-access"
      next
   end
end
```

5. Configure one SSL VPN firewall policy to allow remote users to access the internal network.

```
config firewall policy
   edit 1
      set name "sslvpn-radius"
      set srcintf "ssl.root"
      set dstintf "port3"
      set srcaddr "all"
      set dstaddr "192.168.20.0"
      set groups "dualPrimaryGroup"
      set action accept
      set schedule "always"
      set service "ALL"
      set nat enable
   next
end
```

To verify the connection:

User *fackeith* is a member of the FortiAuthenticator server only.

User *radkeith* is a member of both the NPS server and the FortiAuthenticator server, but has different passwords on each server.

Case 1: Connect to the SSLVPN tunnel using FortiClient with user FacAdmin:

```
# diag sniffer packet any 'port 1812' 4 0 l
interfaces=[any]
filters=[port 1812]
2020-05-15 17:21:31.217985 port3 out 192.168.20.5.11490 -> 192.168.20.6.1812: udp 118
2020-05-15 17:21:31.218091 port1 out 192.168.2.5.11490 -> 192.168.2.71.1812: udp 118
2020-05-15 17:21:31.219314 port3 in 192.168.20.6.1812 -> 192.168.20.5.11490: udp 20 <--
     access-reject
2020-05-15 17:21:31.219519 port3 out 192.168.20.5.11490 -> 192.168.20.6.1812: udp 182
2020-05-15 17:21:31.220219 port3 in 192.168.20.6.1812 -> 192.168.20.5.11490: udp 42
2020-05-15 17:21:31.220325 port3 out 192.168.20.5.11490 -> 192.168.20.6.1812: udp 119
2020-05-15 17:21:31.220801 port3 in 192.168.20.6.1812 -> 192.168.20.5.11490: udp 20
2020-05-15 17:21:31.236009 port1 in 192.168.2.71.1812 -> 192.168.2.5.11490: udp 20 <--
     access-accept
```

Access is denied by the NPS server because the user does not exist. However, access is accepted by FortiAuthenticator. The end result is the authentication is successful.

```
# get vpn ssl monitor
SSL VPN Login Users:

Index   User       Group             Auth Type      Timeout          From       HTTP
in/out    HTTPS in/out

0       fackeith  dualPrimaryGroup   2(1)            292        192.168.2.202      0/0
      0/0

SSL VPN sessions:

Index   User       Group                  Source IP      Duration        I/O Bytes
Tunnel/Dest IP

0       fackeith  dualPrimaryGroup        192.168.2.202   149              70236/4966
 10.212.134.200
```

Case 2: Connect to the SSLVPN tunnel using FortiClient with user radkeith:

```
# diag sniffer packet any 'port 1812' 4 0 l
interfaces=[any]
filters=[port 1812]
2020-05-15 17:26:07.335791 port1 out 192.168.2.5.17988 -> 192.168.2.71.1812: udp 118
2020-05-15 17:26:07.335911 port3 out 192.168.20.5.17988 -> 192.168.20.6.1812: udp 118
2020-05-15 17:26:07.337659 port3 in 192.168.20.6.1812 -> 192.168.20.5.17988: udp 20 <--
     access-accept
2020-05-15 17:26:07.337914 port3 out 192.168.20.5.17988 -> 192.168.20.6.1812: udp 182
2020-05-15 17:26:07.339451 port3 in 192.168.20.6.1812 -> 192.168.20.5.17988: udp 228
2020-05-15 17:26:08.352597 port1 in 192.168.2.71.1812 -> 192.168.2.5.17988: udp 20 <--
     access-reject
```

There is a password mismatch for this user on the Secondary RADIUS server. However, even though the authentication was rejected by FortiAuthenticator, it was accepted by Windows NPS. Therefore, the end result is authentication successful.

```
# get vpn ssl monitor
```

```
SSL VPN Login Users:

Index   User       Group            Auth Type      Timeout         From        HTTP
in/out    HTTPS in/out

0       radkeith  dualPrimaryGroup   2(1)            290        192.168.2.202    0/0
      0/0

SSL VPN sessions:

Index   User      Group               Source IP      Duration        I/O Bytes
Tunnel/Dest IP

0       radkeith dualPrimaryGroup   192.168.2.202   142             64875/4966
10.212.134.200
```


SSL VPN with local user password policy

This is a sample configuration of SSL VPN for users with passwords that expire after two days. Users are warned after one day about the password expiring. The password policy can be applied to any local user password. The password policy cannot be applied to a user group or a local remote user such as LDAP/RADIUS/TACACS+.

In FortiOS 6.2, users are warned after one day about the password expiring and have one day to renew it. If the password expires, the user cannot renew the password and must contact the administrator for assistance.

In FortiOS 6.0/5.6, users are warned after one day about the password expiring and have to renew it. If the password expires, the user can still renew the password.

Sample topology

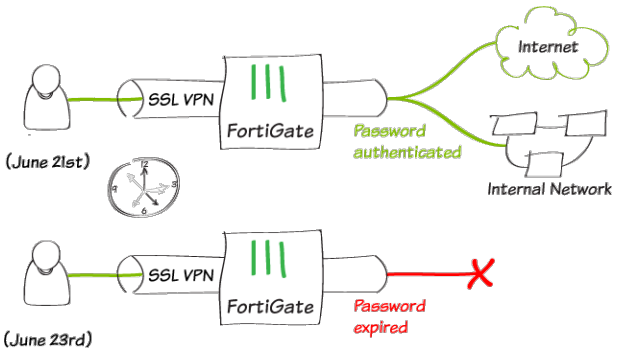

Sample configuration

WAN interface is the interface connected to ISP. This example shows static mode. You can also use DHCP or PPPoE mode. The SSL VPN connection is established over the WAN interface.

To configure SSL VPN using the GUI:

1. Configure the interface and firewall address. The port1 interface connects to the internal network.
   a. Go to *Network* > *Interfaces* and edit the *wan1* interface.
   b. Set *IP/Network Mask* to *172.20.120.123/255.255.255.0*.
   c. Edit *port1* interface and set *IP/Network Mask* to *192.168.1.99/255.255.255.0*.

   d. Click *OK*.
   e. Go to *Policy & Objects* > *Address* and create an address for internet subnet *192.168.1.0*.
2. Configure user and user group.
   a. Go to *User & Device* > *User Definition* to create a local user.
   b. Go to *User & Device* > *User Groups* to create a user group and add that local user to it.
3. Configure and assign the password policy using the CLI.
   a. Configure a password policy that includes an expiry date and warning time. The default start time for the password is the time the user was created.

```
config user password-policy
    edit "pwpolicy1"
        set expire-days 2
        set warn-days 1
    next
end
```

   b. Assign the password policy to the user you just created.

```
config user local
    edit "sslvpnuser1"
        set type password
        set passwd-policy "pwpolicy1"
    next
end
```

4. Configure SSL VPN web portal.
   a. Go to *VPN* > *SSL-VPN Portals* to edit the *full-access* portal.
   This portal supports both web and tunnel mode.
   b. Disable *Enable Split Tunneling* so that all SSL VPN traffic goes through the FortiGate.
5. Configure SSL VPN settings.
   a. Go to *VPN* > *SSL-VPN Settings*.
   b. Select the *Listen on Interface(s)*, in this example, *wan1*.
   c. Set *Listen on Port* to *10443*.
   d. Set *Server Certificate* to the authentication certificate.
   e. Under *Authentication/Portal Mapping*, set default Portal *web-access* for *All Other Users/Groups*.
   f. Create new *Authentication/Portal Mapping* for group *sslvpngroup* mapping portal *full-access*.
6. Configure SSL VPN firewall policy.
   a. Go to *Policy & Objects* > *IPv4 Policy*.
   b. Fill in the firewall policy name. In this example, *sslvpn certificate auth*.
   c. Incoming interface must be *SSL-VPN tunnel interface(ssl.root)*.
   d. Set the *Source Address* to *all* and *Source User* to *sslvpngroup*.
   e. Set the *Outgoing Interface* to the local network interface so that the remote user can access the internal network. In this example, *port1*.
   f. Set *Destination Address* to the internal protected subnet *192.168.1.0*.
   g. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
   h. Enable *NAT*.
   i. Configure any remaining firewall and security options as desired.
   j. Click *OK*.

To configure SSL VPN using the CLI:

1. Configure the interface and firewall address.

```
config system interface
    edit "wan1"
        set vdom "root"
        set ip 172.20.120.123 255.255.255.0
    next
end
```

2. Configure internal interface and protected subnet, then connect the port1 interface to the internal network.

```
config system interface
    edit "port1"
        set vdom "root"
        set ip 192.168.1.99 255.255.255.0
    next
end

config firewall address
    edit "192.168.1.0"
        set subnet 192.168.1.0 255.255.255.0
    next
end
```

3. Configure user and user group.

```
config user local
    edit "sslvpnuser1"
        set type password
        set passwd your-password
    next
end
config user group
    edit "sslvpngroup"
        set member "vpnuser1"
    next
end
```

4. Configure and assign the password policy.
   a. Configure a password policy that includes an expiry date and warning time. The default start time for the password is the time the user was created.

```
config user password-policy
    edit "pwpolicy1"
        set expire-days 2
        set warn-days 1
    next
end
```

   b. Assign the password policy to the user you just created.

```
config user local
    edit "sslvpnuser1"
        set type password
        set passwd-policy "pwpolicy1"
    next
end
```

5. Configure SSL VPN web portal.

```
config vpn ssl web portal
    edit "full-access"
        set tunnel-mode enable
        set web-mode enable
        set ip-pools "SSLVPN_TUNNEL_ADDR1"
        set split-tunneling disable
     next
end
```

6. Configure SSL VPN settings.

```
config vpn ssl settings
    set servercert "server_certificate"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set source-interface "wan1"
    set source-address "all"
    set default-portal "web-access"
    config authentication-rule
        edit 1
            set groups "sslvpngroup"
            set portal "full-access"
        next
    end
end
```

7. Configure one SSL VPN firewall policy to allow remote user to access the internal network.

```
config firewall policy
    edit 1
        set name "sslvpn web mode access"
        set srcintf "ssl.root"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "192.168.1.0"
        set groups "sslvpngroup"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end
```

To see the results of web portal:

1. From a remote device, use a web browser to log into the SSL VPN web portal *http://172.20.120.123:10443*.
2. Log in using the *sslvpnuser1* credentials.
   When the warning time is reached, the user is prompted to enter a new password.
   In FortiOS 6.2, when the password expires, the user cannot renew the password and must contact the administrator.
   In FortiOS 6.0/5.6, when the password expires, the user can still renew the password.
3. On the FortiGate, go to *Monitor* > *SSL-VPN Monitor* to confirm the user connection.

To see the results of tunnel connection:

1. Download FortiClient from www.forticlient.com.
2. Open the FortiClient Console and go to *Remote Access* > *Configure VPN*.
3. Add a new connection.
   - Set the connection name.
   - Set *Remote Gateway* to the IP of the listening FortiGate interface, in this example, *172.20.120.123*.
4. Select *Customize Port* and set it to *10443*.
5. Save your settings.
6. Log in using the *sslvpnuser1* credentials.
   When the warning time is reached, the user is prompted to enter a new password.

To check the SSL VPN connection using the GUI:

1. Go to *VPN* > *Monitor* > *SSL-VPN Monitor* to verify the user's connection.
2. Go to *Log & Report* > *Forward Traffic* to view the details of the SSL VPN traffic.

To check that login failed due to password expired on GUI:

1. Go to *Log & Report* > *Events* and select *VPN Events* from the event type dropdown list to see the SSL VPN alert labeled `ssl-login-fail`.
2. Click *Details* to see the log details about the *Reason* `sslvpn_login_password_expired`.

To check the web portal login using the CLI:

```
get vpn ssl monitor
SSL VPN Login Users:
 Index   User         Auth Type   Timeout    From           HTTP in/out   HTTPS in/out
 0       sslvpnuser1  1(1)        229        10.1.100.254   0/0           0/0

SSL VPN sessions:
 Index   User    Source IP      Duration        I/O Bytes       Tunnel/Dest IP
```

To check the tunnel login using the CLI:

```
get vpn ssl monitor
SSL VPN Login Users:
 Index   User          Auth Type   Timeout    From           HTTP in/out   HTTPS in/out
 0       sslvpnuser1   1(1)        291        10.1.100.254   0/0           0/0

SSL VPN sessions:
 Index   User          Source IP      Duration   I/O Bytes      Tunnel/Dest IP
 0       sslvpnuser1   10.1.100.254   9          22099/43228    10.212.134.200
```

To check the FortiOS 6.2 login password expired event log:

```
FG201E4Q17901354 # execute log  filter category event

FG201E4Q17901354 # execute log  filter field subtype vpn

FG201E4Q17901354 # execute log  filter field action ssl-login-fail
```

```
FG201E4Q17901354 # execute log  display
1: date=2019-02-15 time=10:57:56 logid="0101039426" type="event" subtype="vpn" level="alert"
vd="root" eventtime=1550257076 logdesc="SSL VPN login fail" action="ssl-login-fail"
tunneltype="ssl-web" tunnelid=0 remip=10.1.100.254 user="u1" group="g1" dst_host="N/A"
reason="sslvpn_login_password_expired" msg="SSL user failed to logged in"
```


SSL VPN with certificate authentication

This is an example configuration of SSL VPN that requires users to authenticate using a client certificate. In this example, the server and client certificates are signed by the same Certificate Authority (CA).

Self-signed certificates are provided by default to simplify initial installation and testing. It is **HIGHLY** recommended that you acquire a signed certificate for your installation.

Continuing to use these certificates can result in your connection being compromised, allowing attackers to steal your information, such as credit card details.

For more information, please review the Use a non-factory SSL certificate for the SSL VPN portal on page 1310 and learn how to Purchase and import a signed SSL certificate on page 722.

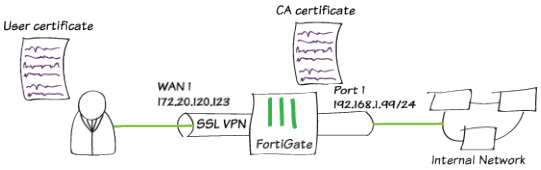

Configuration

WAN interface is the interface connected to ISP. This example shows static mode. You can also use DHCP or PPPoE mode. The SSL VPN connection is established over the WAN interface.

To configure SSL VPN using the GUI:

1. Configure the interface and firewall address. The port1 interface connects to the internal network.
   a. Go to *Network* > *Interfaces* and edit the *wan1* interface.
   b. Set *IP/Network Mask* to *172.20.120.123/255.255.255.0*.
   c. Edit *port1* interface and set *IP/Network Mask* to *192.168.1.99/255.255.255.0*.
   d. Click *OK*.
   e. Go to *Policy & Objects* > *Address* and create an address for internet subnet *192.168.1.0*.
2. Install the server certificate. The server certificate is used for authentication and for encrypting SSL VPN traffic.
   a. Go to *System* > *Feature Visibility* and ensure *Certificates* is enabled.
   b. Go to *System* > *Certificates* and select *Import* > *Local Certificate*.
      - Set *Type* to *Certificate*.
      - Choose the *Certificate file* and the *Key file* for your certificate, and enter the *Password*.
      - If required, you can change the *Certificate Name*.

   The server certificate now appears in the list of *Certificates*.
3. Install the CA certificate.
   The CA certificate is the certificate that signed both the server certificate and the user certificate. In this example, it is used to authenticate SSL VPN users.

a. Go to *System* > *Certificates* and select *Import* > *CA Certificate*.
b. Select *Local PC* and then select the certificate file.

The CA certificate now appears in the list of *External CA Certificates*. In this example, it is called *CA_Cert_1*.

4. Configure PKI users and a user group.
To use certificate authentication, use the CLI to create PKI users.

```
config user peer
    edit pki01
        set ca CA_Cert_1
        set subject User01
    next
end
```

Ensure that the subject matches the name of the user certificate. In this example, *User01*.

When you have create a PKI user, a new menu is added to the GUI.

a. Go to *User & Device* > *PKI* to see the new user.
b. Edit the user account and expand *Two-factor authentication*.
c. Enable *Require two-factor authentication* and set a password for the account.
d. Go to *User & Device* > *User* > *User Groups* and create a group *sslvpngroup*.
e. Add the PKI user *pki01* to the group.

5. Configure SSL VPN web portal.
a. Go to *VPN* > *SSL-VPN Portals* to edit the *full-access* portal.
This portal supports both web and tunnel mode.
b. Disable *Enable Split Tunneling* so that all SSL VPN traffic goes through the FortiGate.

6. Configure SSL VPN settings.
a. Go to *VPN* > *SSL-VPN Settings*.
b. Select the *Listen on Interface(s)*, in this example, *wan1*.
c. Set *Listen on Port* to *10443*.
d. Set *Server Certificate* to the authentication certificate.
e. Enable *Require Client Certificate*.
f. Under *Authentication/Portal Mapping*, set default Portal *web-access* for *All Other Users/Groups*.
g. Create new *Authentication/Portal Mapping* for group *sslvpngroup* mapping portal *full-access*.

7. Configure SSL VPN firewall policy.
a. Go to *Policy & Objects* > *IPv4 Policy*.
b. Fill in the firewall policy name. In this example, *sslvpn certificate auth*.
c. Incoming interface must be *SSL-VPN tunnel interface(ssl.root)*.
d. Set the *Source Address* to *all* and *Source User* to *sslvpngroup*.
e. Set the *Outgoing Interface* to the local network interface so that the remote user can access the internal network. In this example, *port1*.
f. Set *Destination Address* to the internal protected subnet *192.168.1.0*.
g. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
h. Enable *NAT*.
i. Configure any remaining firewall and security options as desired.
j. Click *OK*.

To configure SSL VPN using the CLI:

1. Configure the interface and firewall address.

```
config system interface
    edit "wan1"
        set vdom "root"
        set ip 172.20.120.123 255.255.255.0
    next
end
```

2. Configure internal interface and protected subnet., then connect the port1 interface to the internal network.

```
config system interface
    edit "port1"
        set vdom "root"
        set ip 192.168.1.99 255.255.255.0
    next
end
config firewall address
    edit "192.168.1.0"
        set subnet 192.168.1.0 255.255.255.0
    next
end
```

3. Install the CA certificate.
   The server certificate is used for encrypting SSL VPN traffic and will be used for authentication. It is easier to install the server certificate from GUI. However, CLI can import a p12 certificate from a tftp server.
   If you want to import a p12 certificate, put the certificate *server_certificate.p12* on your tftp server, then run following command on the FortiGate.

```
execute vpn certificate local import tftp server_certificate.p12 <your tftp_server> p12
<your password for PKCS12 file>
```

   To check server certificate is installed:

```
show vpn certificate local server_certificate
```

4. Install the CA certificate.
   The CA certificate is the certificate that signed both the server certificate and the user certificate. In this example, it is used to authenticate SSL VPN users.
   It is easier to install the server certificate from GUI. However, CLI can import a CA certificates from a tftp server.
   If you want to import a CA certificate, put the CA certificate on your tftp server, then run following command on the FortiGate.

```
execute vpn certificate ca import tftp <your CA certificate name> <your tftp server>
```

   To check that a new CA certificate is installed:

```
show vpn certificate ca
```

5. Configure PKI users and a user group.

```
config user peer
    edit pki01
        set ca CA_Cert_1
        set subject User01
        set two-factor enable
        set passwd <your-password>
```

```
    next
end
config user group
    edit "sslvpngroup"
        set member "pki01"
    next
end
```

6. Configure SSL VPN web portal.

```
config vpn ssl web portal
    edit "full-access"
        set tunnel-mode enable
        set web-mode enable
        set ip-pools "SSLVPN_TUNNEL_ADDR1"
        set split-tunneling disable
     next
end
```

7. Configure SSL VPN settings.

```
config vpn ssl settings
    set servercert "server_certificate"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set source-interface "wan1"
    set source-address "all"
    set default-portal "web-access"
    set reqclientcert enable
    config authentication-rule
        edit 1
            set groups "sslvpngroup"
            set portal "full-access"
        next
    end
end
```

8. Configure one SSL VPN firewall policy to allow remote user to access the internal network.

```
config firewall policy
    edit 1
        set name "sslvpn web mode access"
        set srcintf "ssl.root"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "192.168.1.0"
        set groups "sslvpngroup"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
    next
end
```

Installation

To use the user certificate, you must first install it on the user's PC. When the user tries to authenticate, the user certificate is checked against the CA certificate to verify that they match.

Every user should have a unique user certificate. This allows you to distinguish each user and revoke a specific user's certificate, such as if a user no longer has VPN access.

To install the user certificate on Windows 7, 8, and 10:

1. Double-click the certificate file to open the *Import Wizard*.
2. Use the *Import Wizard* to import the certificate into the *Personal store* of the current user.

To install the user certificate on Mac OS X:

1. Open the certificate file, to open *Keychain Access*.
2. Double-click the certificate.
3. Expand *Trust* and select *Always Trust*.

To see the results of tunnel connection:

1. Download FortiClient from www.forticlient.com.
2. Open the FortiClient Console and go to *Remote Access* > *Configure VPN*.
3. Add a new connection.
   - Set *VPN Type* to *SSL VPN*.
   - Set *Remote Gateway* to the IP of the listening FortiGate interface, in this example, *172.20.120.123*.
4. Select *Customize Port* and set it to *10443*.
5. Enable *Client Certificate* and select the authentication certificate.
6. Save your settings.
7. Use the credentials you've set up to connect to the SSL VPN tunnel.
   If the certificate is correct, you can connect.

To see the results of web portal:

1. In a web browser, log into the portal *http://172.20.120.123:10443*.
   A message requests a certificate for authentication.
2. Select the user certificate.
3. Enter your user credentials.
   If the certificate is correct, you can connect to the SSL VPN web portal.

To check the SSL VPN connection using the GUI:

1. Go to *VPN* > *Monitor* > *SSL-VPN Monitor* to verify the list of SSL users.
2. Go to *Log & Report* > *Events* and select *VPN Events* from the event type dropdown list to view the details for the SSL connection log.

To check the SSL VPN connection using the CLI:

```
get vpn ssl monitor
SSL VPN Login Users:
 Index   User    Auth Type      Timeout         From     HTTP in/out    HTTPS in/out
 0       pki01,cn=User01          1(1)            229     10.1.100.254   0/0     0/0
 1       pki01,cn=User01          1(1)            291     10.1.100.254   0/0     0/0


SSL VPN sessions:
```

```
Index   User     Source IP       Duration        I/O Bytes       Tunnel/Dest IP
0       pki01,cn=User01           10.1.100.254    9       22099/43228     10.212.134.200
```


Dynamic address support for SSL VPN policies

Dynamic SSO user groups can be used in place of address objects when configuring SSL VPN policies. This allows dynamic IP addresses to be used in SSL VPN policies. A remote user group can be used for authentication while an FSSO group is separately used for authorization. Using a dummy policy for remote user authentication and a policy for FSSO group authorization, FSSO can be used with SSL VPN tunnels

This image shows the authentication and authorization flow:

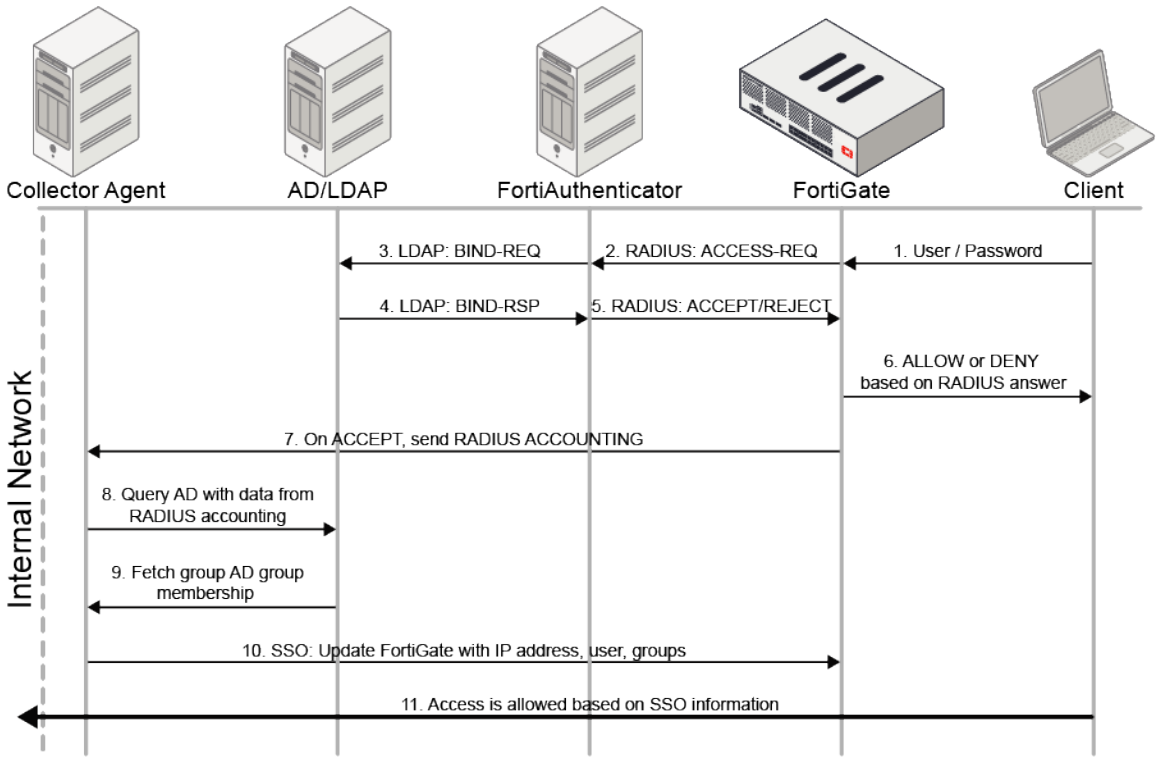

In this example, FortiAuthenticator is used as a RADIUS server. It uses a remote AD/LDAP server for authentication, then returns the authentication results to the FortiGate. This allows the client to have a dynamic IP address after successful authentication.

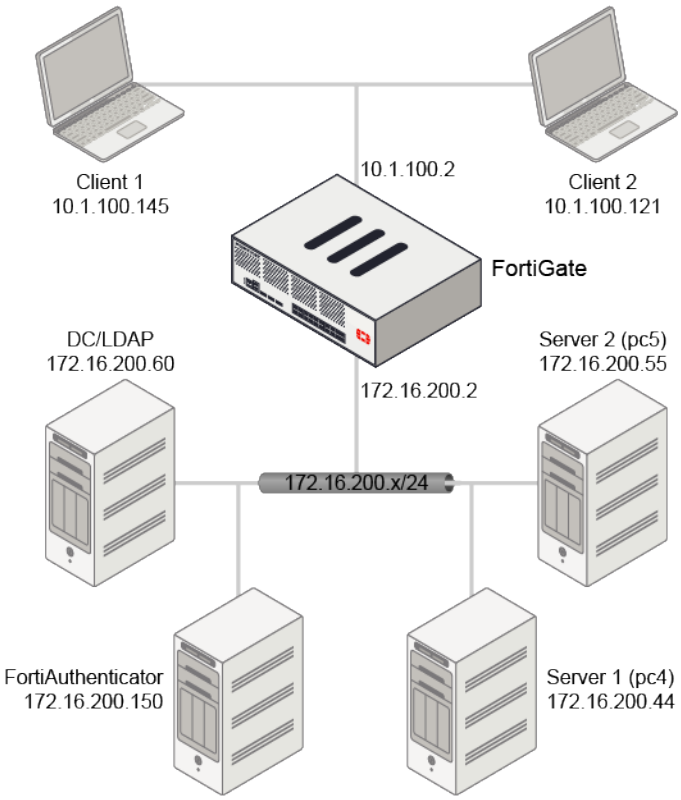


First, on the LDAP server, create two users each in their own group, *user142* in group *pc_group1*, and *user143* in group *pc_group2*.

Configure the FortiAuthenticator

To add a remote LDAP server and users on the FortiAuthenticator:

1. Go to *Authentication* > *Remote Auth. Servers* > *LDAP*.
2. Click *Create New*.
3. Set the following:
   - *Name*: *ad_ldap_60*
   - *Primary server name/IP*: *172.16.200.60*
   - *Base distinguished name*: *dc=fsso-qa,dc=com*
   - *Bind type*: Regular
   - *Username*: *cn=administrator,cn=User*
   - *Password*: <enter a password>
4. Click *OK*.
5. Edit the new LDAP server.
6. Import the remote LDAP users.
7. Edit each user to confirm that they have the RADIUS attribute *Acct-Interim-Interval*. This attribute is used by

FortiGate to send interim update account messages to the RADIUS server.

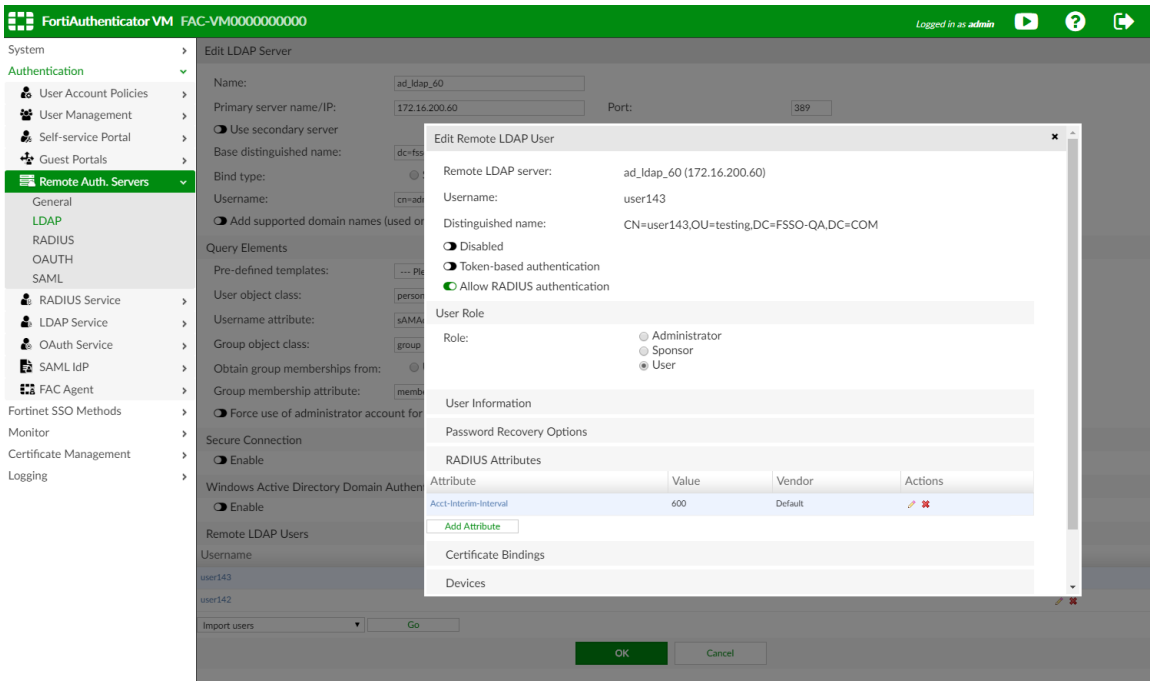

To create a RADIUS client for FortiGate as a remote authentication server:


1. Go to *Authentication* > *RADIUS Service* > *Clients*.
2. Click *Create New*.
3. Set the following:
   - *Name*: *fsso_ldap*
   - *Client address*: *Range 172.16.200.1~172.16.200.10*
   - *Secret*: <enter a password>
4. In the *Realms* table, set the realm to the LDAP server that was just added: *ad_ldap_60*.
5. Click *OK*.
   FortiAuthenticator can now be used as a RADIUS server, and the authentication credentials all come from the DC/LDAP server.

Fortinet Single Sign-On Collector Agent

To configure the Fortinet Single Sign-On Collector Agent:

1. Select *Require authenticated connection from FortiGate* and enter a *Password*.
2. Click *Advanced Settings*.
3. Select the *RADIUS Accounting* tab.

4. Select *Enable RADIUS accounting server* and set the *Shared secret*.

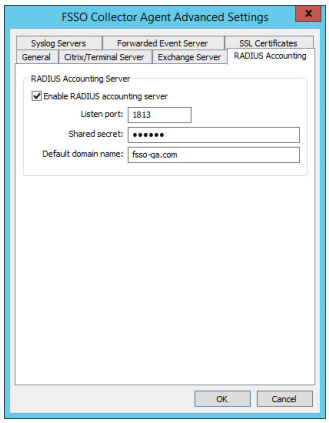

5. Click *OK*, then click *Save&close*.
   The collector agent can now accept accounting requests from FortiGate, and retrieve the IP addresses and usernames of SSL VPN client from the FortiGate with accounting request messages.

Configure the FortiGate

To configure the FortiGate in the CLI:

1. Create a Fortinet Single Sign-On Agent fabric connector:

```
config user fsso
    edit "AD_CollectAgent"
        set server "172.16.200.60"
        set password 123456
    next
end
```

2. Add the RADIUS server:

```
config user radius
    edit "rad150"
        set server "172.16.200.150"
        set secret 123456
        set acct-interim-interval 600
        config accounting-server
            edit 1
                set status enable
                set server "172.16.200.60"
                set secret 123456
            next
        end
    next
end
```

3. Create a user group for the RADIUS server:

```
config user group
    edit "rad_group"
        set member "rad150"
    next
end
```

4. Create user groups for each of the FSSO groups:

```
config user group
    edit "fsso_group1"
        set group-type fsso-service
        set member "CN=PC_GROUP1,OU=TESTING,DC=FSSO-QA,DC=COM"
    next
    edit "fsso_group2"
        set group-type fsso-service
        set member "CN=PC_GROUP2,OU=TESTING,DC=FSSO-QA,DC=COM"
    next
end
```

5. Create an SSL VPN portal and assign the RADIUS user group to it:

```
config vpn ssl web portal
    edit "testportal"
        set tunnel-mode enable
        set ipv6-tunnel-mode enable
        set web-mode enable
        ...
    next
end
config vpn ssl settings
    ...
    set default-portal "full-access"
    config authentication-rule
        edit 1
            set groups "rad_group"
            set portal "testportal"
        next
    end
end
```

6. Create firewall addresses:

```
config firewall address
    edit "none"
        set subnet 0.0.0.0 255.255.255.255
    next
    edit "pc4"
        set subnet 172.16.200.44 255.255.255.255
    next
    edit "pc5"
        set subnet 172.16.200.55 255.255.255.255
    next
end
```


7. Create one dummy policy for authentication only, and two normal policies for authorization:

```
config firewall policy
    edit 1
        set name "sslvpn_authentication"
        set srcintf "ssl.vdom1"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "none"
        set action accept
        set schedule "always"
```

```
        set service "ALL"
        set logtraffic all
        set groups "rad_group"
        set nat enable
    next
    edit 3
        set name "sslvpn_authorization1"
        set srcintf "ssl.vdom1"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "pc4"
        set action accept
        set schedule "always"
        set service "ALL"
        set logtraffic all
        set groups "fsso_group1"
        set nat enable
    next
    edit 4
        set name "sslvpn_authorization2"
        set srcintf "ssl.vdom1"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "pc5"
        set action accept
        set schedule "always"
        set service "ALL"
        set logtraffic all
        set groups "fsso_group2"
        set nat enable
    next
end
```

To create an FSSO agent fabric connector in the GUI:


1. Go to *Security Fabric* > *Fabric Connectors*.
2. Click *Create New*.
3. Click *Fortinet Single Sign-On Agent*.
4. Enter the name and *Primary FSSO agent* information.

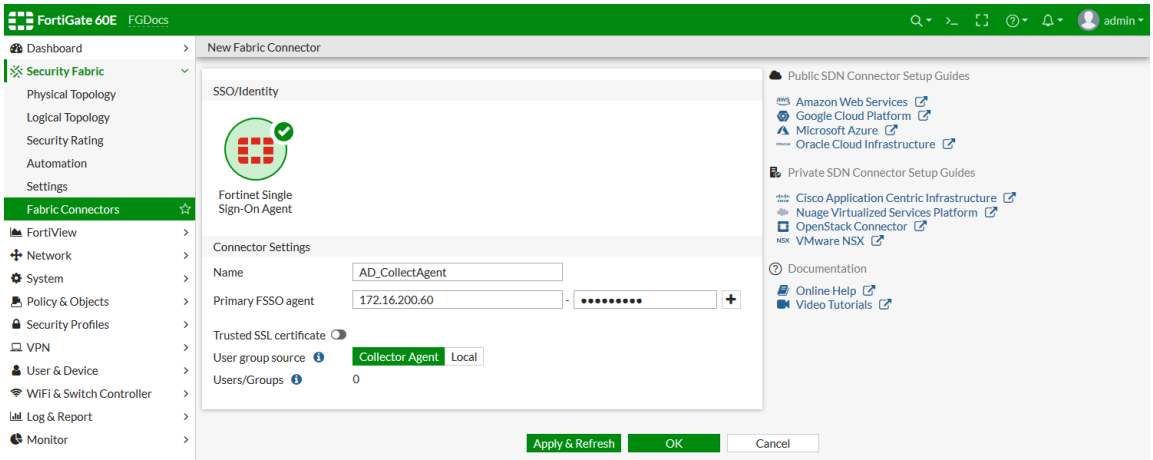

5. Click *Apply & Refresh*.
   The FSSO groups are retrieved from the collector agent.

To add the RADIUS server in the GUI:

1. Go to *User & Device* > *RADIUS Servers*.
2. Click *Create New*.
3. Enter a name for the server.
4. Enter the *IP/Name* and *Secret* for the primary server.
5. Click *Test Connectivity* to ensure that there is a successful connection.

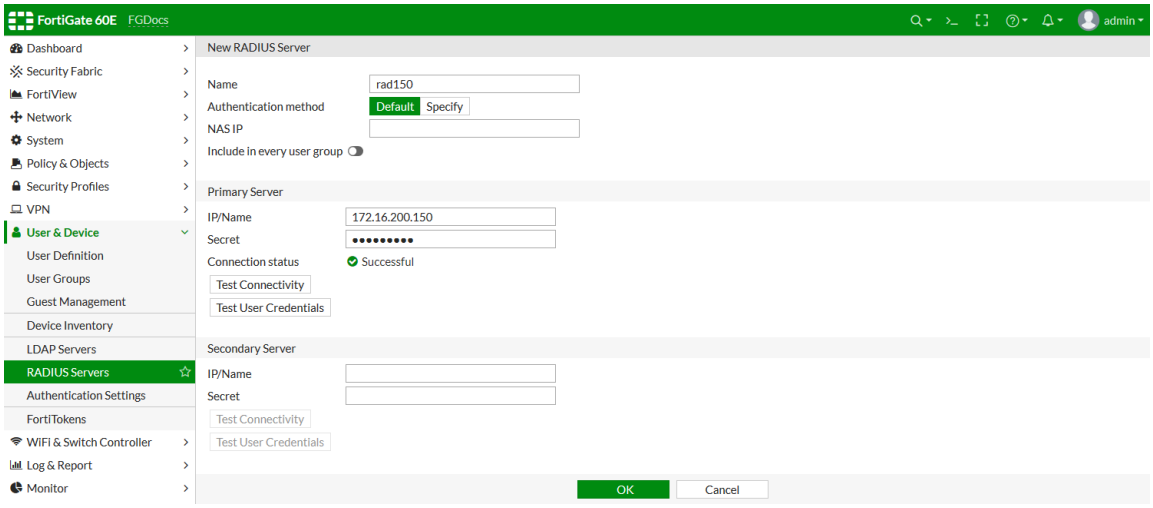


6. Click *OK*.
7. Configure an accounting server with the following CLI command:

```
config user radius
    edit rad150
        set acct-interim-interval 600
        config accounting-server
            edit 1
                set status enable
                set server 172.16.200.60
                set secret *********
            next
        end
    next
end
```

To create a user group for the RADIUS server in the GUI:

1. Go to *User & Device* > *User Groups*.
2. Click *Create New*.
3. Enter a name for the group and set the *Type* to *Firewall*.


4. Add the RADIUS server as a remote group.

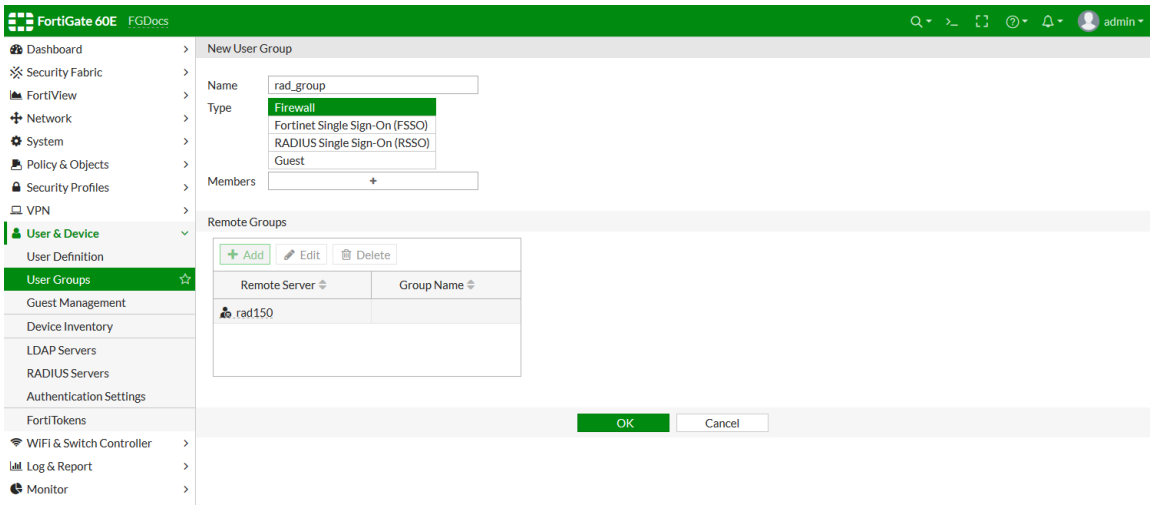


5. Click *OK*.

To create user groups for each of the FSSO groups in the GUI:

1. Go to *User & Device* > *User Groups*.
2. Click *Create New*.
3. Enter a name for the group and set the *Type* to *Fortinet Single Sign-On (FSSO)*.
4. Add PC_GROUP1 as a member:
   `CN=PC_GROUP1,OU=TESTING,DC=FSSO-QA,DC=COM`

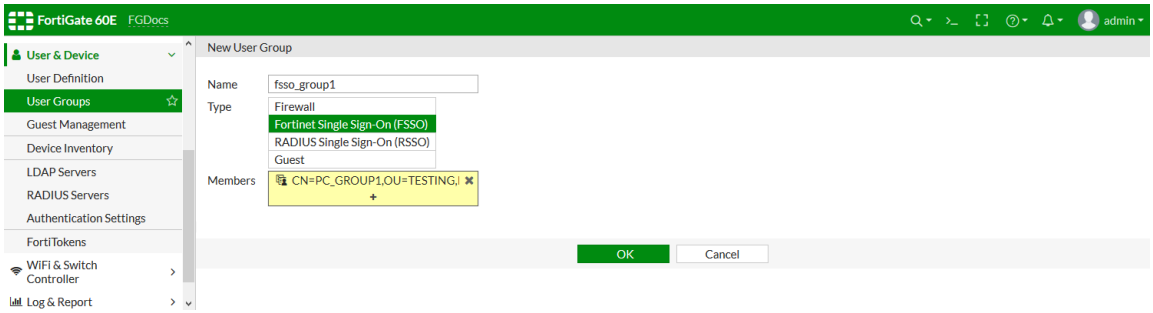

5. Click *OK*.
6. Add a second user group with PC_GROUP2 as a member:
   `CN=PC_GROUP1,OU=TESTING,DC=FSSO-QA,DC=COM`

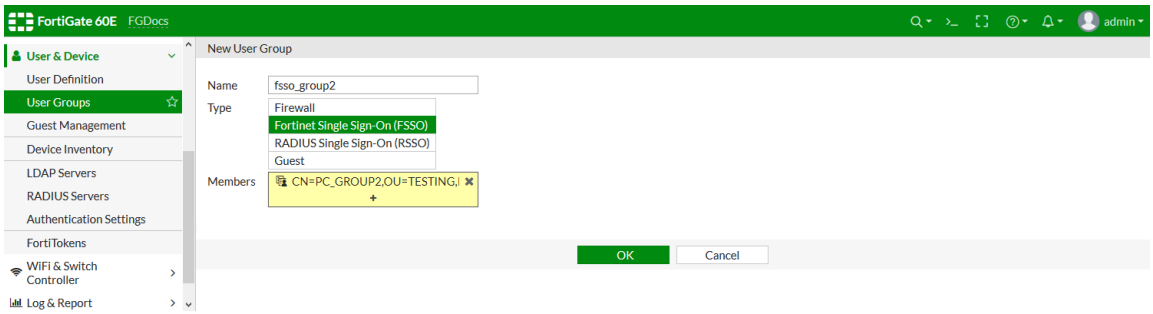


7. Click *OK*.

To create an SSL VPN portal and assign the RADIUS user group to it in the GUI:

1. Go to *VPN* > *SSL VPN Portals*.
2. Click *Create New*.
3. Configure the portal, then click *OK*.
4. Go to *VPN* > *SSL VPN Settings*.
5. Configure the required settings.
6. Create an *Authentication/Portal Mapping* table entry:
   a. Click *Create New*.
   b. Set *User/Groups* to *rad_group*.
   c. Set *Portal* to *testportal*.
   d. Click *OK*.
7. Click *OK*.

To create policies for authentication and authorization in the GUI:

1. Go to *Policy & Object* > *IPv4 Policy*.
2. Configure a dummy policy for authentication. Set the destination to *none* so that traffic is not allowed through the FortiGate, and add *rad_group* as a source.
3. Configure two authorization policies, with the FSSO groups as sources.

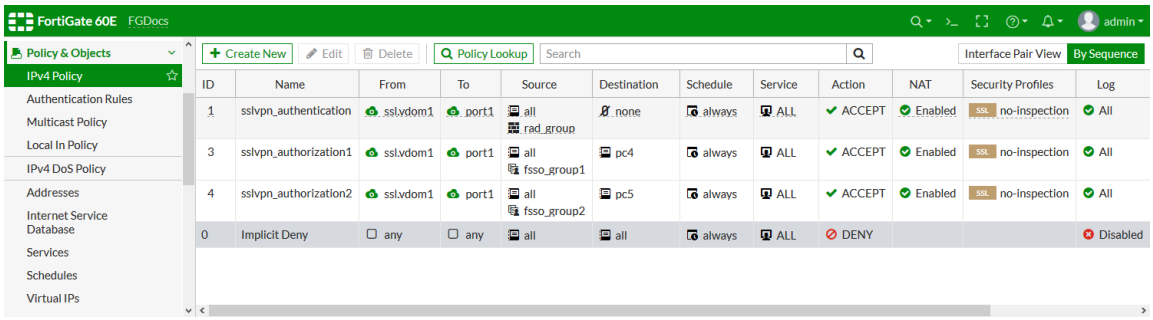

Confirmation

On *Client 1*, log in to FortiClient using *user142*. Traffic can go to *pc4* (172.16.200.44), but cannot go to *pc5* (172.16.200.55).

On *Client 2*, log in to FortiClient using *user143*. Traffic can go to *pc5* (172.16.200.55), but cannot go to *pc4* (172.16.200.44).

On the FortiGate, check the authenticated users list and the SSL VPN status:

```
# diagnose firewall auth list

10.212.134.200, USER142
        type: fsso, id: 0, duration: 173, idled: 173
        server: AD_CollectAgent
        packets: in 0 out 0, bytes: in 0 out 0
        user_id: 16777229
        group_id: 3 33554434
        group_name: fsso_group1 CN=PC_GROUP1,OU=TESTING,DC=FSSO-QA,DC=COM

10.212.134.200, user142
```

```
        type: fw, id: 0, duration: 174, idled: 174
        expire: 259026, allow-idle: 259200
        flag(80): sslvpn
        server: rad150
        packets: in 0 out 0, bytes: in 0 out 0
        group_id: 4
        group_name: rad_group

10.212.134.201, USER143
        type: fsso, id: 0, duration: 78, idled: 78
        server: AD_CollectAgent
        packets: in 0 out 0, bytes: in 0 out 0
        group_id: 1 33554435
        group_name: fsso_group2 CN=PC_GROUP2,OU=TESTING,DC=FSSO-QA,DC=COM

10.212.134.201, user143
        type: fw, id: 0, duration: 79, idled: 79
        expire: 259121, allow-idle: 259200
        flag(80): sslvpn
        server: rad150
        packets: in 0 out 0, bytes: in 0 out 0
        group_id: 4
        group_name: rad_group

----- 4 listed, 0 filtered ------


# get vpn ssl monitor
SSL VPN Login Users:
 Index   User    Auth Type      Timeout         From     HTTP in/out    HTTPS in/out
 0       user142         2(1)            600     10.1.100.145   0/0     0/0
 1       user143         2(1)            592     10.1.100.254   0/0     0/0

SSL VPN sessions:
 Index   User    Source IP      Duration        I/O Bytes       Tunnel/Dest IP
 0       user142         10.1.100.145    104     32190/16480    10.212.134.200
 1       user143         10.1.100.254    11      4007/4966      10.212.134.201
```

SSL VPN multi-realm

This sample shows how to create a multi-realm SSL VPN that provides different portals for different user groups.

Sample topology

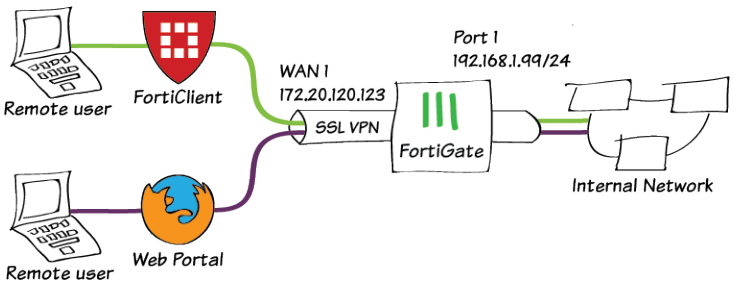

Sample configuration

WAN interface is the interface connected to ISP. This example shows static mode. You can also use DHCP or PPPoE mode. The SSL VPN connection is established over the WAN interface.



The split tunneling routing address cannot use an FQDN or an address group that includes an FQDN.

To configure SSL VPN using the GUI:

1. Configure the interface and firewall address. The port1 interface connects to the internal network.
   a. Go to *Network* > *Interfaces* and edit the *wan1* interface.
   b. Set *IP/Network Mask* to *172.20.120.123/255.255.255.0*.
   c. Edit *port1* interface and set *IP/Network Mask* to *192.168.1.99/255.255.255.0*.
   d. Click *OK*.
   e. Go to *Policy & Objects* > *Address* and create an address for internet *QA_subnet* with subnet *192.168.1.0/24* and *HR_subnet* with subnet *10.1.100.0/24*.
2. Configure user and user group.
   a. Go to *User & Device* > *User Definition* to create local users *qa-user1* and *hr-user1*.
   b. Go to *User & Device* > *User Groups* to create separate user groups for web-only and full-access portals:
      - *QA_group* with member *qa-user1*.
      - *HR_group* with the member *hr-user1*.
3. Configure SSL VPN web portal.
   a. Go to *VPN* > *SSL-VPN Portals* to create portal *qa-tunnel*.
   b. Enable *Tunnel Mode*.
   c. Create a portal *hr-web* with *Web Mode* enabled.
4. Configure SSL VPN realms.
   a. Go to *System* > *Feature Visibility* to enable *SSL-VPN Realms*.
   b. Go to *VPN* > *SSL-VPN Realms* to create realms for *qa* and *hr*.
   c. (Optional) To access each realm with FQDN instead of the default URLs *https://172.20.120.123:10443/hr* and *https://172.20.120.123:10443/qa*, you can configure a virtual-host for the realm in the CLI.

```
config vpn ssl web realm
   edit hr
      set virtual-host hr.mydomain.com
   next
   edit qa
      set virtual-host qa.mydomain.com
   next
end
```

   Where `mydomain.com` is the name of your domain. Ensure FQDN resolves to the FortiGate wan1 interface and that your certificate is a wildcard certificate.
5. Configure SSL VPN settings.
   a. Go to *VPN* > *SSL-VPN Settings*.
   b. For *Listen on Interface(s)*, select *wan1*.
   c. Set *Listen on Port* to *10443*.
   d. Choose a certificate for *Server Certificate*. The default is *Fortinet_Factory*.

e. In *Authentication/Portal Mapping All Other Users/Groups*, set the *Portal* to *web-access*.
f. Create new *Authentication/Portal Mapping* for group *QA_group* mapping portal *qa-tunnel*.
g. Specify the realm *qa*.
h. Add another entry for group *HR_group* mapping portal *hr-web*.
i. Specify the realm *hr*.

6. Configure SSL VPN firewall policy.
   a. Go to *Policy & Objects* > *IPv4 Policy*.
   b. Create a firewall policy for QA access.
   c. Fill in the firewall policy name. In this example, *QA sslvpn tunnel mode access*.
   d. Incoming interface must be *SSL-VPN tunnel interface(ssl.root)*.
   e. Choose an *Outgoing Interface*. In this example, *port1*.
   f. Set the *Source* to *all* and group to *QA_group*.
   g. In this example, the *Destination* is the internal protected subnet *QA_subnet*.
   h. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
   i. Click *OK*.
   j. Create a firewall policy for HR access.
   k. Fill in the firewall policy name. In this example, *HR sslvpn web mode access*.
   l. Incoming interface must be *SSL-VPN tunnel interface(ssl.root)*.
   m. Choose an *Outgoing Interface*. In this example, *port1*.
   n. Set the *Source* to *all* and group to *HR_group*.
   o. In this example, the *Destination* is the internal protected subnet *HR_subnet*.
   p. Set *Schedule* to *always*, *Service* to *ALL*, and *Action* to *Accept*.
   q. Click *OK*.

To configure SSL VPN using the CLI:

1. Configure the interface and firewall address.

```
config system interface
    edit "wan1"
        set vdom "root"
        set ip 172.20.120.123 255.255.255.0
    next
end
```

2. Configure internal interface and protected subnet, then connect the port1 interface to the internal network.

```
config system interface
    edit "port1"
        set vdom "root"
        set ip 192.168.1.99 255.255.255.0
    next
end

config firewall address
    edit "QA_subnet"
        set subnet 192.168.1.0 255.255.255.0
    next
    edit "HR_subnet"
        set subnet 10.1.100.0 255.255.255.0
```

```
    next
end
```

3. Configure user and user group.

```
config user local
    edit "qa_user1"
        set type password
        set passwd your-password
    next
end
config user group
    edit "QA_group"
        set member "qa_user1"
    next
end
```

```
config user local
    edit "hr_user1"
        set type password
        set passwd your-password
    next
end
config user group
    edit "HR_group"
        set member "hr_user1"
    next
end
```

4. Configure SSL VPN web portal.

```
config vpn ssl web portal
    edit "qa-tunnel"
        set tunnel-mode enable
        set ip-pools "SSLVPN_TUNNEL_ADDR1"
        set split-tunneling enable
        set split-tunneling-routing-address "QA_subnet"
    next
end
```

```
config vpn ssl web portal
    edit "hr-web"
        set web-mode enable
    next
end
```

5. Configure SSL VPN realms.

```
config vpn ssl web realm
   edit hr
      set virtual-host hr.mydomain.com
   next
   edit qa
        set virtual-host qa.mydomain.com
   next
end
```

The `set virtual-host` setting is optional. For example:

```
config vpn ssl web realm
   edit hr
   next
```

```
    edit qa
    next
end
```

6. Configure SSL VPN settings.

```
config vpn ssl settings
    set servercert "Fortinet_Factory"
    set tunnel-ip-pools "SSLVPN_TUNNEL_ADDR1"
    set tunnel-ipv6-pools "SSLVPN_TUNNEL_IPv6_ADDR1"
    set source-interface "wan1"
    set source-address "all"
    set source-address6 "all"
    set default-portal "full-access"
    config authentication-rule
        edit 1
            set groups "QA_group"
            set portal "qa-tunnel"
            set realm qa
        next
        edit 2
            set groups "HR_group"
            set portal "hr-web"
            set realm hr
        next
    end
end
```

7. Configure two SSL VPN firewall policies to allow remote QA user to access internal QA network and HR user to access HR network.

```
config firewall policy
    edit 1
        set name "QA sslvnpn tunnel access"
        set srcintf "ssl.root"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "QA_subnet"
        set groups "QA_group"
        set action accept
        set schedule "always"
        set service "ALL"
    next
    edit 2
        set name "HR sslvpn web access"
        set srcintf "ssl.root"
        set dstintf "port1"
        set srcaddr "all"
        set dstaddr "HR_subnet"
        set groups "HR_group"
        set action accept
        set schedule "always"
        set service "ALL"
    next
end
```

To see the results for QA user:

1. Download FortiClient from www.forticlient.com.
2. Open the FortiClient Console and go to *Remote Access*.
3. Add a new connection.
   - Set *VPN Type* to *SSL VPN*.
   - Set *Remote Gateway* to *https://172.20.120.123:10443/qa.*.
   - If a virtual-host is specified, use the FQDN defined for the realm (*qa.mydomain.com*).
4. Select *Customize Port* and set it to *10443*.
5. Save your settings.
6. Use the credentials you've set up to connect to the SSL VPN tunnel.
   If the user's computer has antivirus software, a connection is established; otherwise FortiClient shows a compliance warning.
7. After connection, traffic to subnet *192.168.1.0* goes through the tunnel.
8. On the FortiGate, go to *VPN > Monitor > SSL-VPN Monitor* to verify the list of SSL users.
9. On the FortiGate, go to *Log & Report > Forward Traffic* and view the details of the traffic.

To see the results for HR user:

1. In a web browser, log into the portal *https://172.20.120.123:10443/hr* using the credentials you've set up.
2. Alternatively, if a virtual-host is specified, use the FQDN defined for the realm (*hr.mydomain.com*).
3. Go to *VPN > Monitor > SSL-VPN Monitor* to verify the list of SSL users.
4. Go to *Log & Report > Forward Traffic* and view the details of the traffic.


SSL VPN to IPsec VPN

This is a sample configuration of site-to-site IPsec VPN that allows access to the remote endpoint via SSL VPN.

This example uses a pre-existing user group, a tunnel mode SSL VPN with split tunneling, and a route-based IPsec VPN between two FortiGates. All sessions must start from the SSL VPN interface.

If you want sessions to start from the FGT_2 subnet, you need more policies. Also, if the remote subnet is beyond FGT_2 (if there are multiple hops), you need to include the SSL VPN subnet in those routers as well.


Sample topology

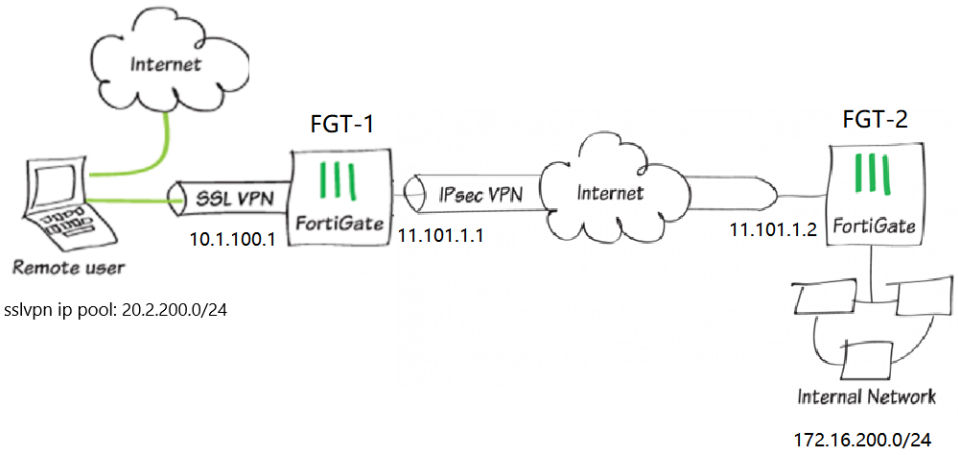

Sample configuration


To configure the site-to-site IPsec VPN on FGT_1:

1. Go to *VPN* > *IPsec Wizard*.
2. In the *VPN Setup* pane:
   a. Specify the VPN connection *Name* as *to_FGT_2*.
   b. Select *Site to Site*.
   c. Click *Next*.

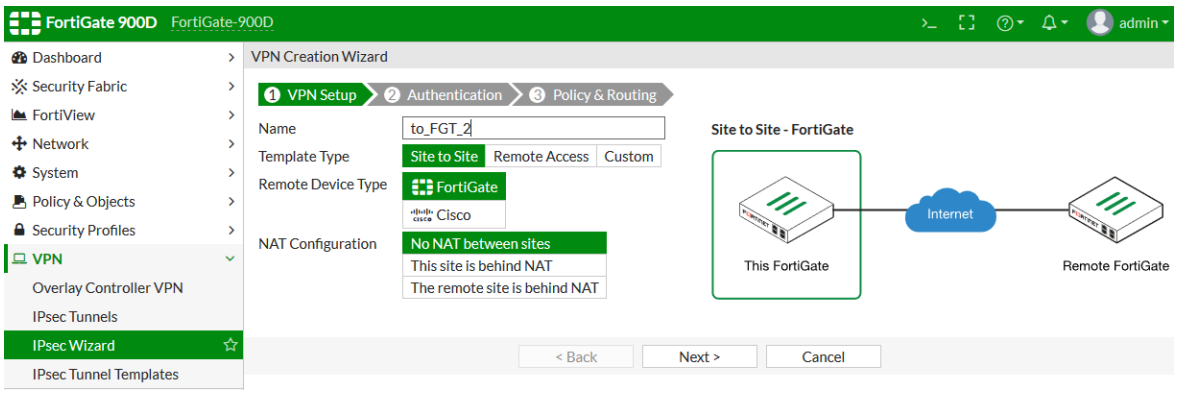


3. In the *Authentication* pane:
   a. Enter the *IP Address* to the Internet-facing interface.
   b. For *Authentication Method*, click *Pre-shared Key* and enter the *Pre-shared Key*.


c. Click *Next*.

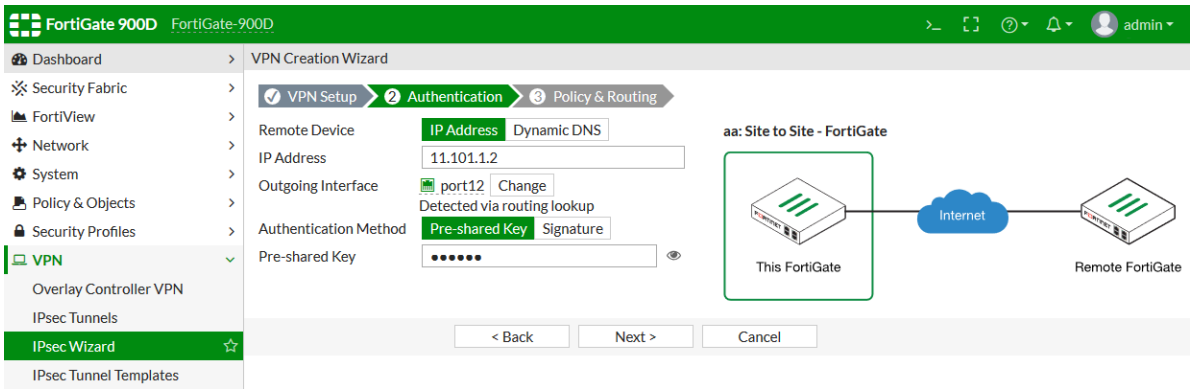

4. In the *Policy & Routing* pane:
   a. Set the *Local Interface* to the internal interface.
   b. Set the *Local Subnets* to include the internal and SSL VPN subnets for FGT_1.
   c. Set *Remote Subnets* to include the internal subnet for FGT_2.
   d. Click *Create*.

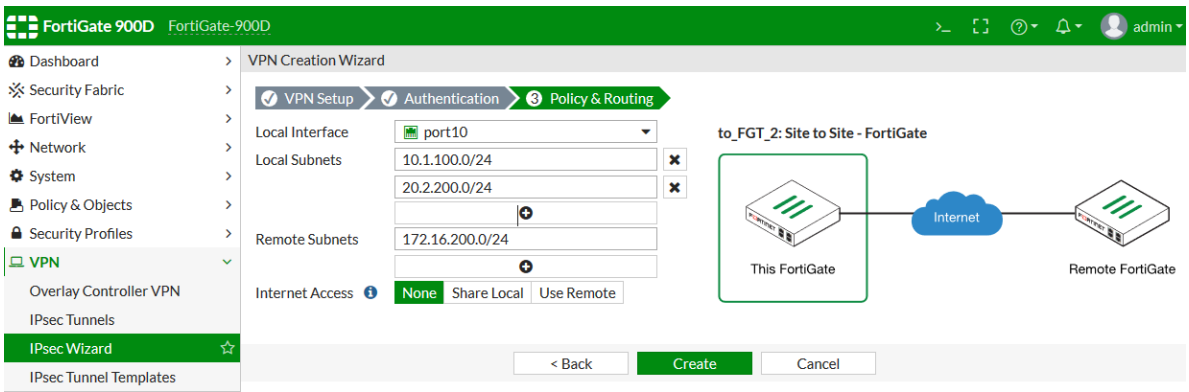


A confirmation screen shows a summary of the configuration including the firewall address groups for both the local and remote subnets, static routes, and security policies.

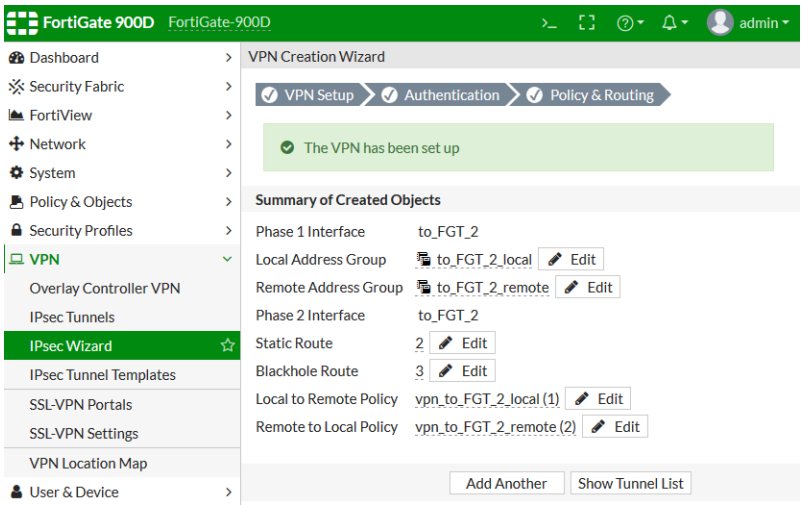

To configure SSL VPN settings:

1. Go to *VPN* > *SSL-VPN Settings*.
2. Set *Listen on Interface(s)* to *wan1*.
3. To avoid port conflicts, set *Listen on Port* to *10443*.
4. For *Restrict Access*, select *Allow access from any host*.
5. In the Tunnel Mode Client Settings section, select *Specify custom IP ranges* and include the SSL VPN subnet range created by the *IPsec Wizard*.
6. In the *Authentication/Portal Mapping* section, add the *VPN user group* to the *tunnel-access Portal*. Set *All Other Users/Groups* to the *web-access Portal*.

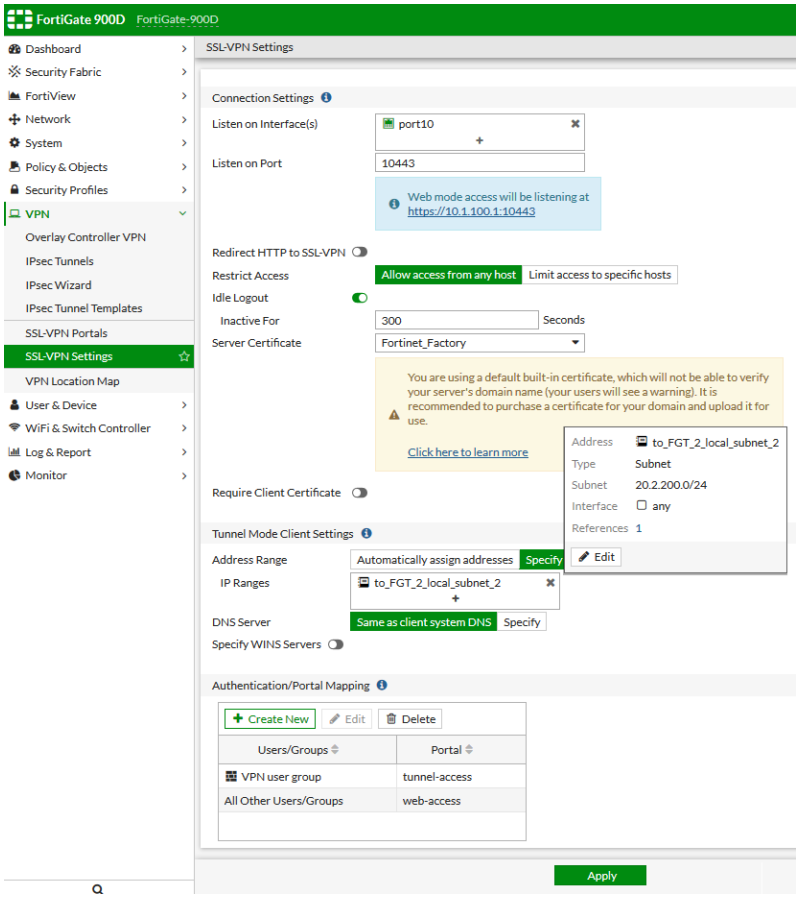


7. Click *Apply*.

To configure SSL VPN portal:

1. Go to *VPN* > *SSL-VPN Portals*.
2. Select *tunnel-access* and click *Edit*.
3. Turn on *Enable Split Tunneling* so that only traffic intended for the local or remote networks flow through FGT_1 and follows corporate security profiles.
4. For *Routing Address*, add the local and remote IPsec VPN subnets created by the *IPsec Wizard*.

5. For *Source IP Pools*, add the SSL VPN subnet range created by the *IPsec Wizard*.

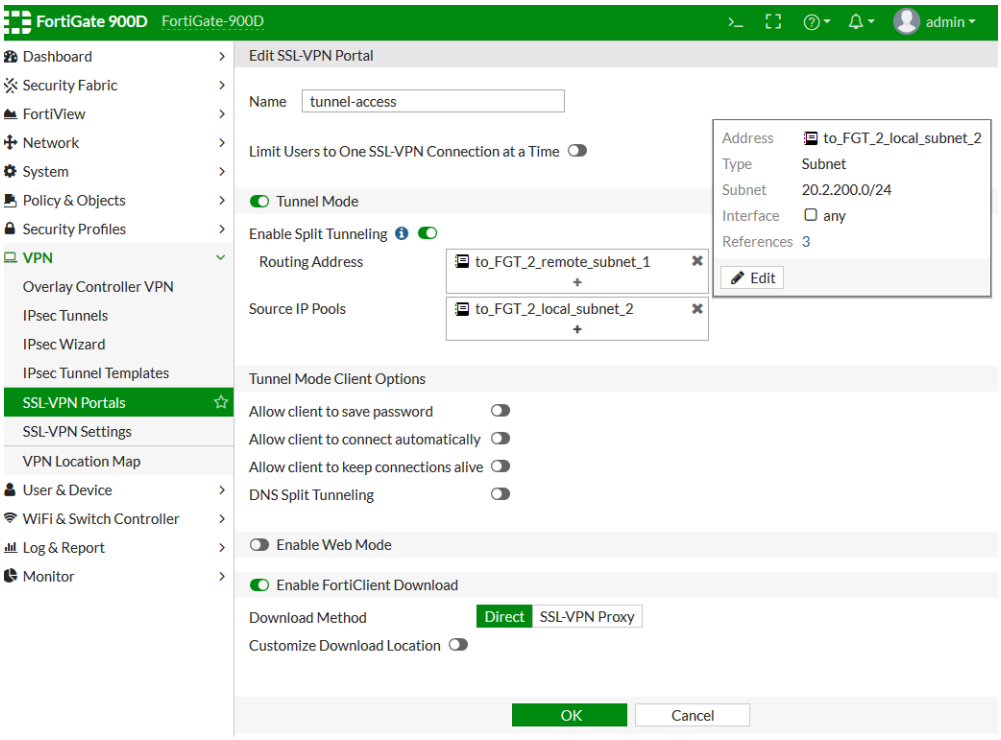


6. Click *OK*.

To add policies to FGT_1:

1. Go to *Policy & Objects* > *IPv4 Policy*.
2. Click *Create New* to create a policy that allows SSL VPN users access to the IPsec VPN tunnel.
3. For *Incoming Interface*, select *ssl.root*.
4. For *Outgoing Interface*, select the IPsec tunnel interface *to_FGT_2*.
5. Set the *Source* to *all* and the *VPN user group*.
6. Set *Destination* to the remote IPsec VPN subnet.
7. Specify the *Schedule*.
8. Set the *Service* to *ALL*.


9. In the *Firewall/Network Options* section, disable *NAT*.

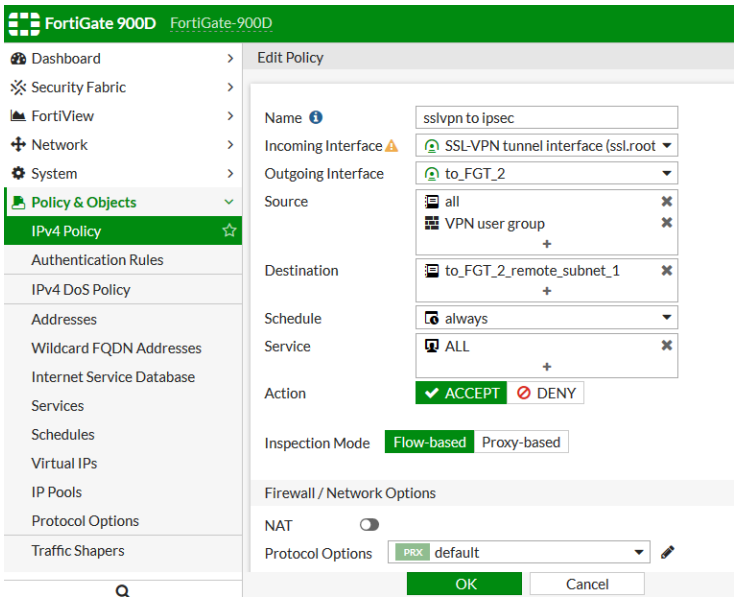

10. Click *OK*.


To configure the site-to-site IPsec VPN on FGT_2:

1. Go to *VPN* > *IPsec Wizard*.
2. In the *VPN Setup* pane:
   a. Specify the VPN connection *Name* as *to FGT_1*.
   b. Select *Site to Site*.
   c. Click *Next*.

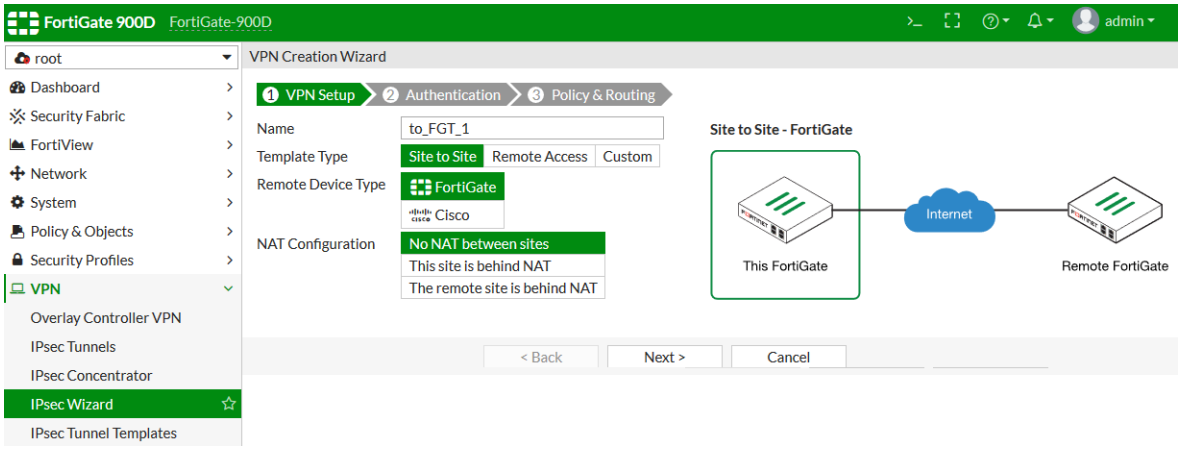


3. In the *Authentication* pane:
   a. Enter the *IP Address* to the Internet-facing interface.
   b. For *Authentication Method*, click *Pre-shared Key* and enter the *Pre-shared Key* of the FGT_1.


c. Click *Next*.

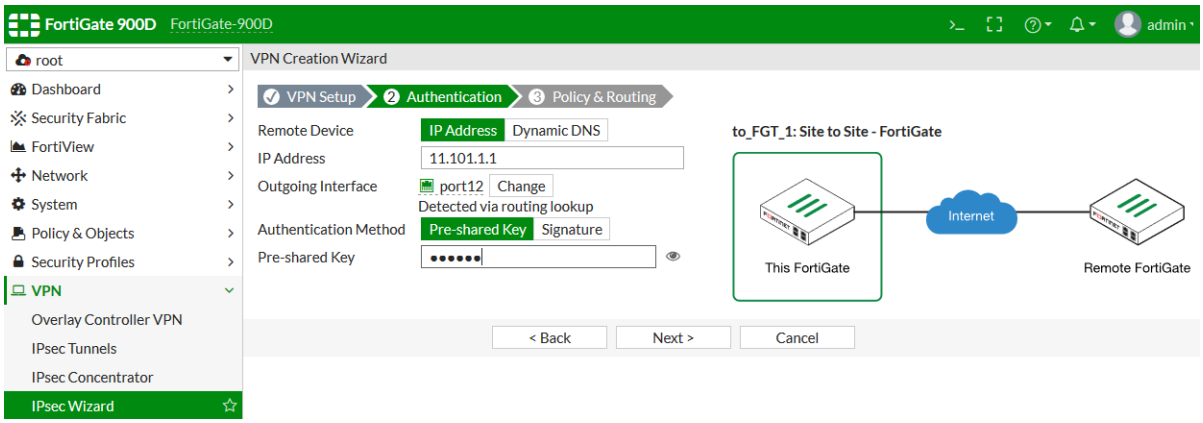

4. In the *Policy & Routing* pane:
   a. Set the *Local Interface* to the internal interface.
   b. Set the *Local Subnets* to include the internal and SSL VPN subnets for FGT_2.
   c. Set *Remote Subnets* to include the internal subnet for FGT_1.
   d. Click *Create*.

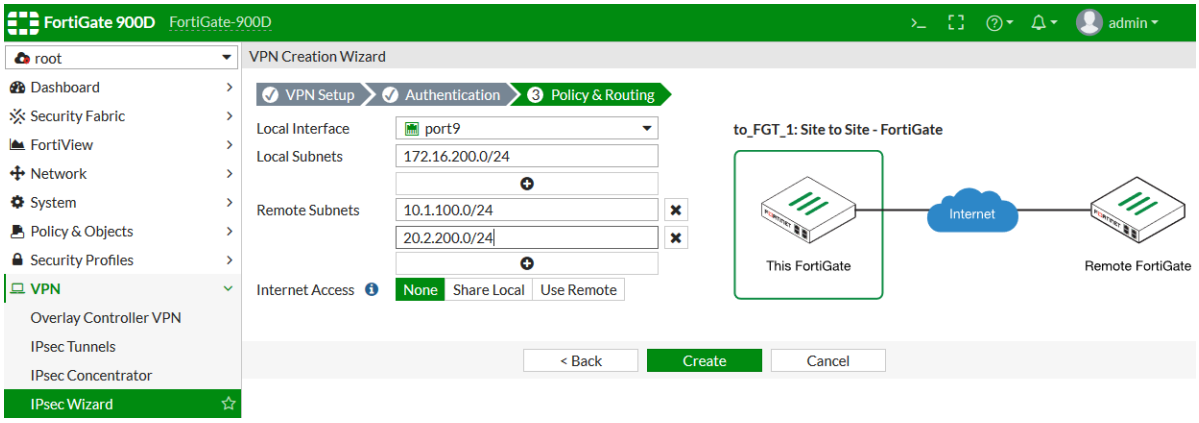


A confirmation screen shows a summary of the configuration including the firewall address groups for both the local and remote subnets, static routes, and security policies.

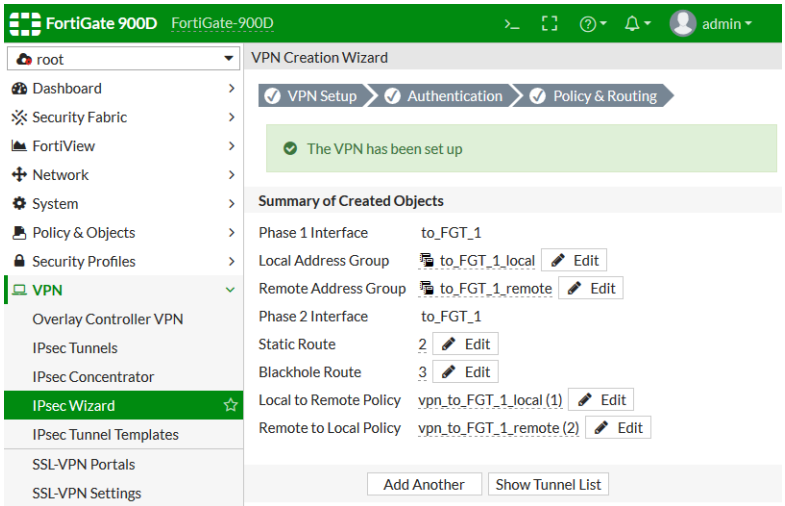


To check the results:


1. Go to *Monitor* > *IPsec Monitor*.
2. Select the tunnel and click *Bring Up*.

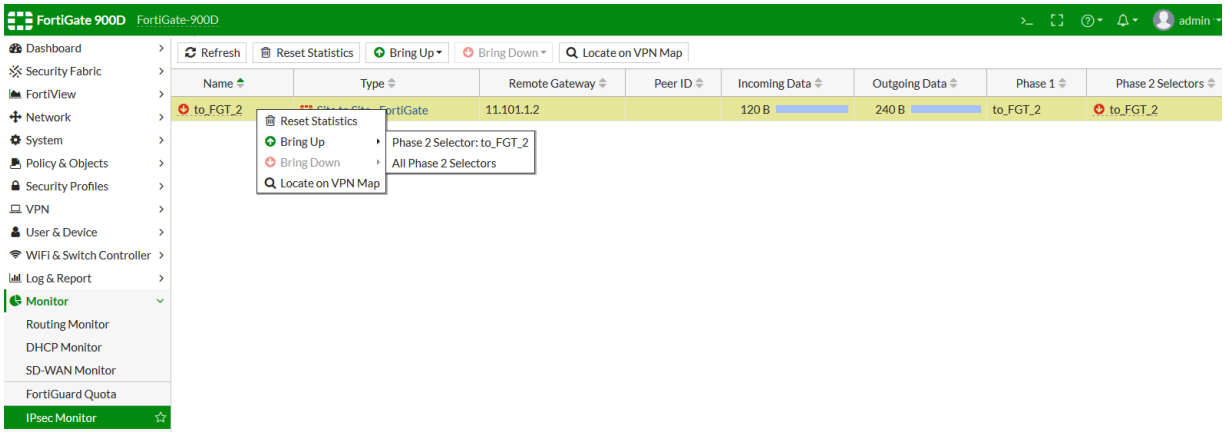


3. Verify that the *Status* changes to *Up*.




4. Configure the SSL VPN connection on the user's FortiClient and connect to the tunnel.

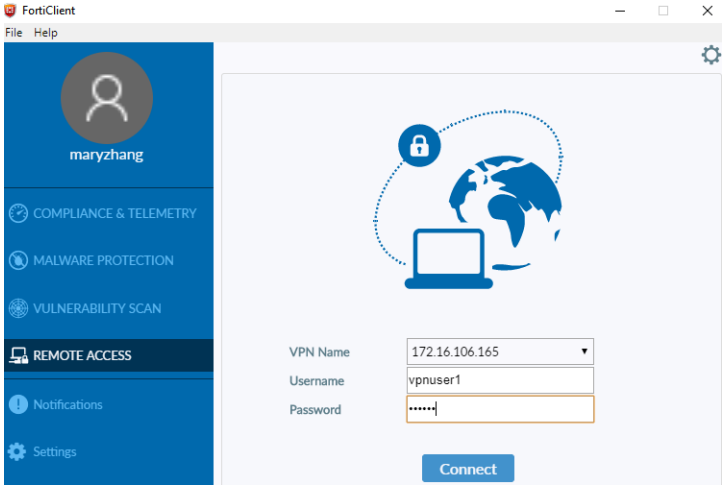


5. On the user's computer, use CLI to send a ping though the tunnel to the remote endpoint to confirm access.

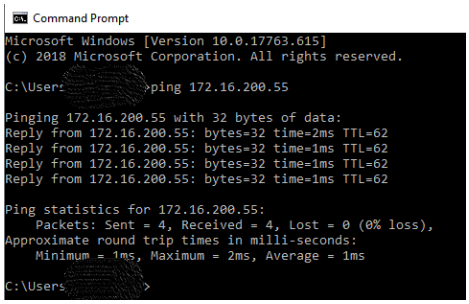


6. Go to *Monitor* > *Routing Monitor* and verify that the routes for the IPsec and SSL VPNs are added.

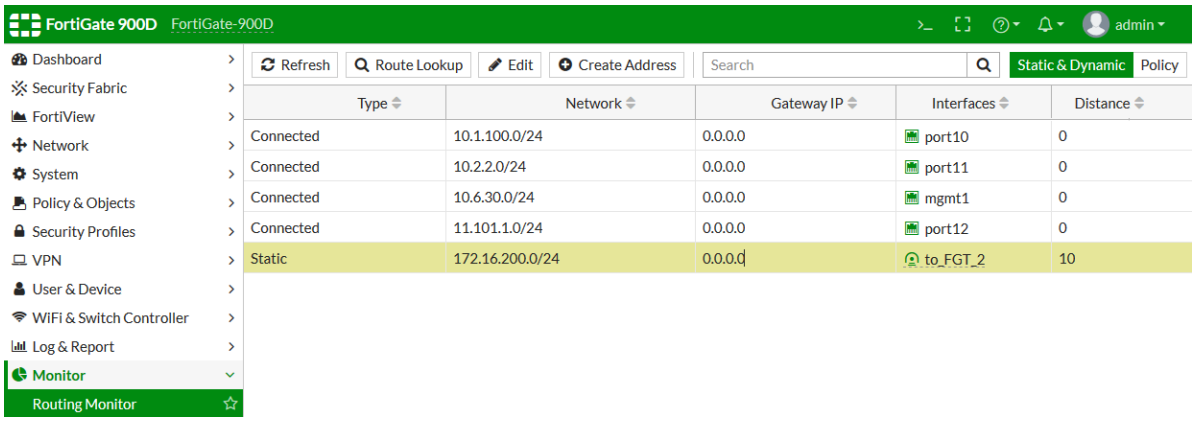


7. Go to *Monitor* > *SSL-VPN Monitor* and verify user connectivity.

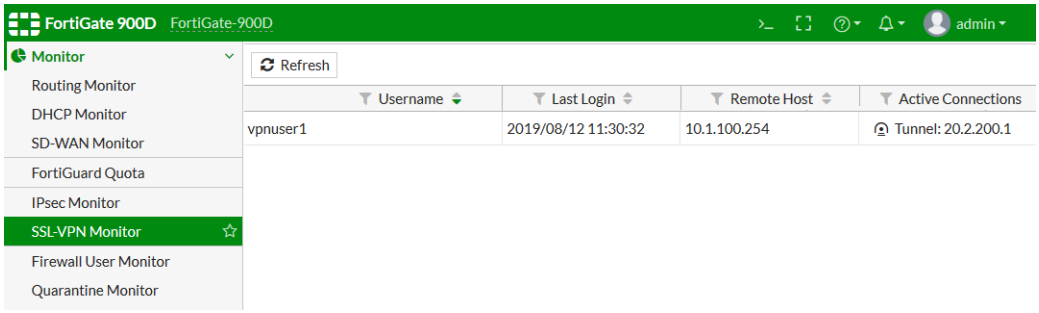


8. Go to *Log & Report* > *Events*, select *VPN Events* from the event type dropdown list, and view the IPsec and SSL tunnel statistics.

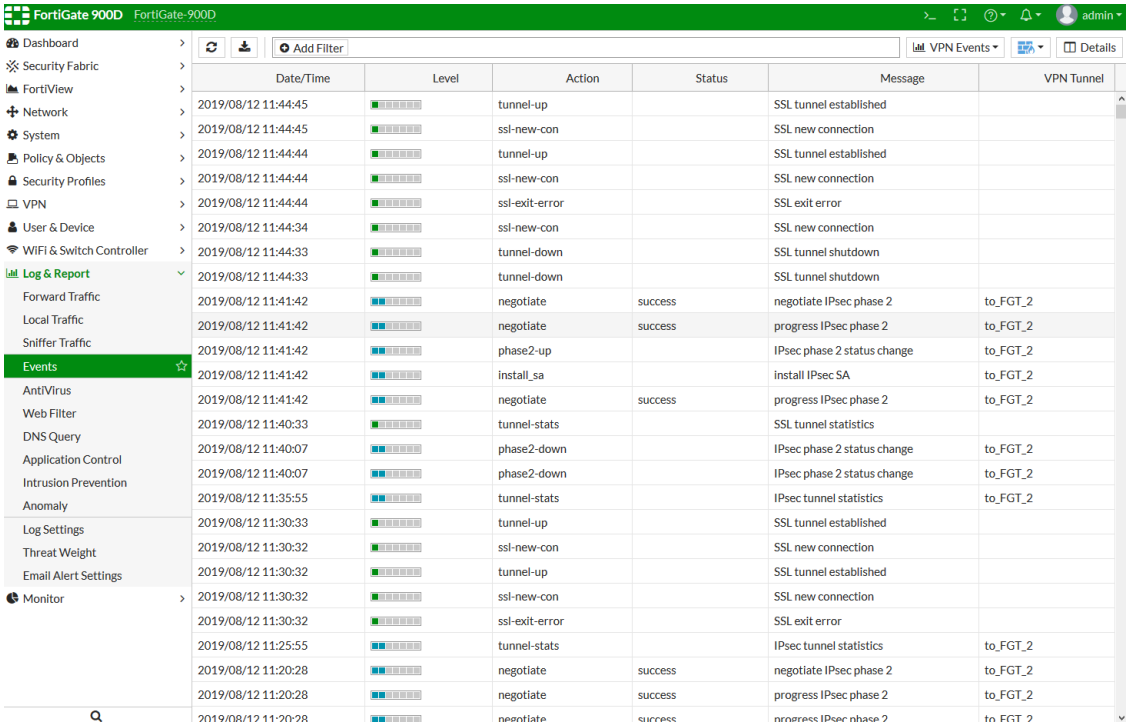

9. Go to *VPN* > *VPN Location Map* and view VPN connection activity.

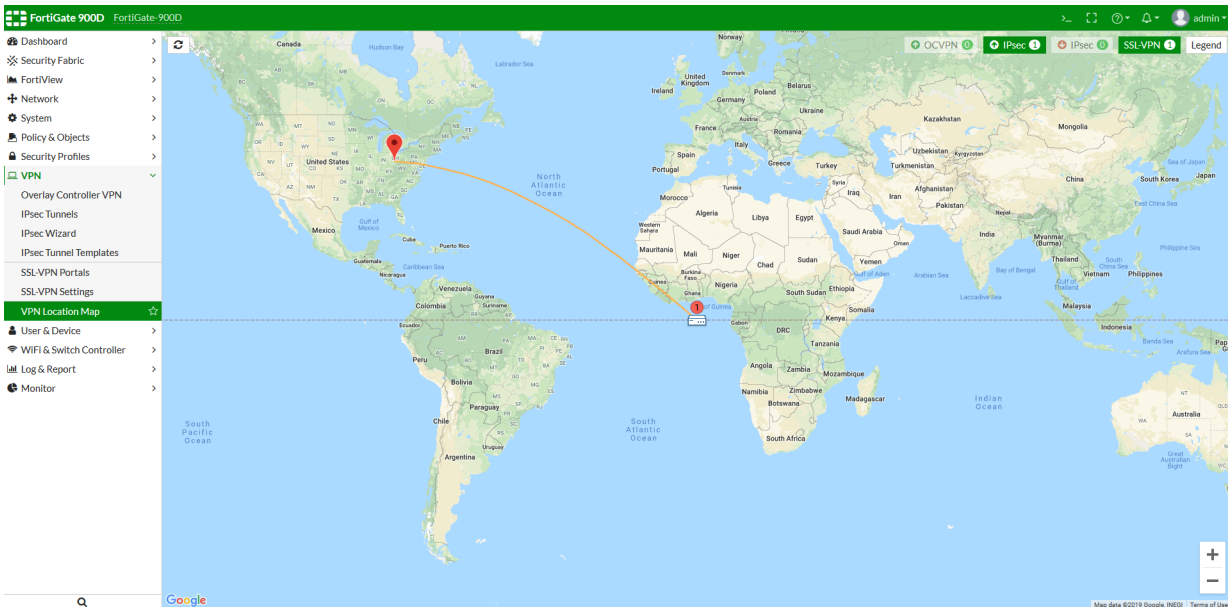

10. Go to *FortiView* > *Policies* and view policy usage.

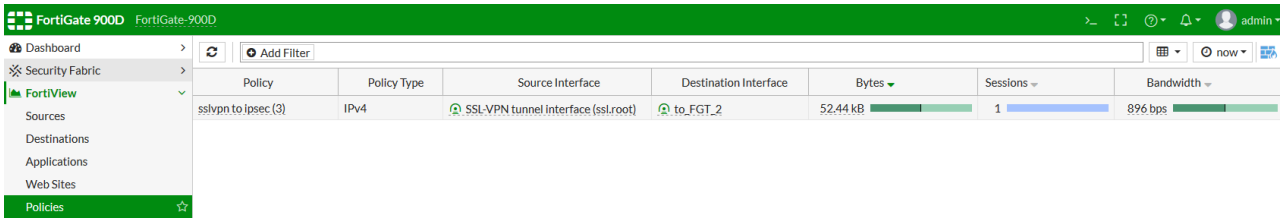

Troubleshooting

To troubleshoot on FGT_1, use the following CLI commands:

```
diagnose debug reset
diagnose debug flow show function-name enable
diagnose debug flow show iprope enable
diagnose debug flow filter addr 172.16.200.55
diagnose debug flow filter proto 1
diagnose debug flow trace start 2
diagnose debug enable
```

To troubleshoot using ping:

1. Send a ping through the SSL VPN tunnel to 172.16.200.55 and analyze the output of the debug.
2. Disable the debug output with this command: `diagnose debug disable`.

If traffic is entering the correct VPN tunnel on FGT_1, then run the same commands on FGT_2 to check whether the traffic is reaching the correct tunnel. If it is reaching the correct tunnel, confirm that the SSL VPN tunnel range is configured in the remote side quick mode selectors.

To troubleshoot using a sniffer command:

```
diagnose sniff packet any "host 172.16.200.44 and icmp" 4
```

To troubleshoot IPsec VPN issues, use the following commands on either FortiGate:

```
diagnose debug reset
diagnose vpn ike gateway clear
diagnose debug application ike -1
diagnose debug enable
```

SSL VPN protocols

The following topics provide information about SSL VPN protocols:

- TLS 1.3 support on page 1417
- SMBv2 support on page 1418

TLS 1.3 support

SSL VPN

FortiOS supports TLS 1.3 for SSL VPN.



TLS 1.3 support requires IPS engine 4.205 or later and endpoints running FortiClient 6.2.0 or later.

To establish a client SSL VPN connection with TLS 1.3 to the FortiGate:

1. Enable TLS 1.3 support using the CLI:
   ```
   config vpn ssl setting
      set ssl-max-proto-ver tls1-3
      set ssl-min-proto-ver tls1-3
   end
   ```
2. Configure the SSL VPN and firewall policy:
   a. Configure the SSL VPN settings and firewall policy as needed.
3. For Linux clients, ensure OpenSSL 1.1.1a is installed:
   a. Run the following commands in the Linux client terminal:
      ```
      root@PC1:~/tools# openssl
      OpenSSL> version
      ```
      If OpenSSL 1.1.1a is installed, the system displays a response like the following:
      ```
      OpenSSL 1.1.1a 20 Nov 2018
      ```
4. For Linux clients, use OpenSSL with the TLS 1.3 option to connect to SSL VPN:
   a. Run the following command in the Linux client terminal:
      ```
      #openssl s_client -connect 10.1.100.10:10443 -tls1_3
      ```
5. Ensure the SSL VPN connection is established with TLS 1.3 using the CLI:
   ```
   # diagnose debug application sslvpn -1
   # diagnose debug enable
   ```

The system displays a response like the following:

```
[207:root:1d]SSL established: TLSv1.3 TLS_AES_256_GCM_SHA384
```

Deep inspection (flow-based)

FortiOS supports TLS 1.3 for policies that have the following security profiles applied:

- Web filter profile with flow-based inspection mode enabled.
- Deep inspection SSL/SSH inspection profile.

For example, when a client attempts to access a website that supports TLS 1.3, FortiOS sends the traffic to the IPS engine. The IPS engine then decodes TLS 1.3 and the client is able to access the website.

SMBv2 support

On all FortiGate models, SMBv2 is enabled by default for SSL VPN. Client PCs can access the SMBv2 server using SSL VPN web-only mode.

To configure SMBv2:

1. Set the minimum and maximum SMB versions.

```
config vpn ssl web portal
    edit portal-name
       set smb-min-version smbv2
       set smb-max-version smbv3
    next
end
```

2. Configure SSL VPN and firewall policies as usual.
3. Connect to the SSL VPN web portal and create an SMB bookmark for the SMBv2 server.
4. Click the bookmark to connect to the SMBv2 server.
5. On the FortiGate, use package capture to verify that SMBv2 works:

```
8 -440785802.3… 172.16.200.10   172.16.200.44   SMB2   252 Negotiate Protocol Request
9 -440785802.3… 172.16.200.44   172.16.200.10   SMB2   338 Negotiate Protocol Response
```

SSL VPN troubleshooting

The following topics provide information about SSL VPN troubleshooting:

- Debug commands on page 1418
- Troubleshooting common scenarios on page 1419

Debug commands

SSL VPN debug command

Use the following diagnose commands to identify SSL VPN issues. These commands enable debugging of SSL VPN with a debug level of -1 for detailed results.

```
diagnose debug application sslvpn -1
diagnose debug enable
```

The CLI displays debug output similar to the following:

```
FGT60C3G10002814 # [282:root]SSL state:before/accept initialization (172.20.120.12)
[282:root]SSL state:SSLv3 read client hello A (172.20.120.12)
[282:root]SSL state:SSLv3 write server hello A (172.20.120.12)
[282:root]SSL state:SSLv3 write change cipher spec A (172.20.120.12)
[282:root]SSL state:SSLv3 write finished B (172.20.120.12)
[282:root]SSL state:SSLv3 flush data (172.20.120.12)
[282:root]SSL state:SSLv3 read finished A:system lib(172.20.120.12)
[282:root]SSL state:SSLv3 read finished A (172.20.120.12)
[282:root]SSL state:SSL negotiation finished successfully (172.20.120.12)
[282:root]SSL established: DHE-RSA-AES256-SHA SSLv3 Kx=DH Au=RSA Enc=AES(256) Mac=SHA1
```

To disable the debug:

```
diagnose debug disable
diagnose debug reset
```

Remote user authentication debug command

Use the following diagnose commands to identify remote user authentication issues.

```
diagnose debug application fnbamd -1
diagnose debug reset
```

Troubleshooting common scenarios

To troubleshoot getting no response from the SSL VPN URL:

1. Go to *VPN* > *SSL-VPN Settings*.
   a. Check the SSL VPN port assignment.
   b. Check the *Restrict Access* setting to ensure the host you are connecting from is allowed.
2. Go to *Policy* > *IPv4 Policy* or *Policy* > *IPv6 policy*.
   a. Check that the policy for SSL VPN traffic is configured correctly.
   b. Check the URL you are attempting to connect to. It should follow this pattern:

      ```
      https://<FortiGate IP>:<Port>
      ```

   c. Check that you are using the correct port number in the URL. Ensure FortiGate is reachable from the computer.

      ```
      ping <FortiGate IP>
      ```

   d. Check the browser has *TLS 1.1*, *TLS 1.2*, and *TLS 1.3* enabled.

To troubleshoot FortiGate connection issues:

1. Check the Release Notes to ensure that the FortiClient version is compatible with your version of FortiOS.
2. FortiClient uses IE security setting, In IE *Internet options* > *Advanced* > *Security*, check that *Use TLS 1.1* and *Use TLS 1.2* are enabled.
3. Check that SSL VPN *ip-pools* has free IPs to sign out. The default *ip-poolsSSLVPN_TUNNEL_ADDR1* has 10 IP addresses.
4. Export and check FortiClient debug logs.
   a. Go to *File* > *Settings*.
   b. In the *Logging* section, enable *Export logs*.

c. Set the *Log Level* to *Debug* and select *Clear logs*.
d. Try to connect to the VPN.
e. When you get a connection error, select *Export logs*.

To troubleshoot SSL VPN hanging or disconnecting at 98%:

1. A new SSL VPN driver was added to FortiClient 5.6.0 and later to resolve SSL VPN connection issues. If your FortiOS version is compatible, upgrade to use one of these versions.
2. Latency or poor network connectivity can cause the login timeout on the FortiGate. In FortiOS 5.6.0 and later, use the following commands to allow a user to increase the SSL VPN login timeout setting.

```
config vpn ssl settings
  set login-timeout 180 (default is 30)
  set dtls-hello-timeout 60 (default is 10)
end
```

To troubleshoot tunnel mode connections shutting down after a few seconds:

This might occur if there are multiple interfaces connected to the Internet, for example, SD-WAN. This can cause the session to become “dirty”. To allow multiple interfaces to connect, use the following CLI commands.

If you are using a FortiOS 6.0.1 or later:

```
config system interface
  edit <name>
    set preserve-session-route enable
  next
end
```

If you are using a FortiOS 6.0.0 or earlier:

```
config vpn ssl settings
   set route-source-interface enable
end
```

To troubleshoot users being assigned to the wrong IP range:

1. Go to *VPN* > *SSL-VPN Portals* and *VPN* > *SSL-VPN Settings* and ensure the same *IP Pool* is used in both places. Using the same *IP Pool* prevents conflicts. If there is a conflict, the portal settings are used.

To troubleshoot slow SSL VPN throughput:

Many factors can contribute to slow throughput.

This recommendation tries to improve throughput by using the FortiOS Datagram Transport Layer Security (DTLS) tunnel option, available in FortiOS 5.4 and above.

DTLS allows SSL VPN to encrypt traffic using TLS and uses UDP as the transport layer instead of TCP. This avoids retransmission problems that can occur with TCP-in-TCP.

FortiClient 5.4.0 to 5.4.3 uses DTLS by default. FortiClient 5.4.4 and later uses normal TLS, regardless of the DTLS setting on the FortiGate.

To use DTLS with FortiClient:

1. Go to *File* > *Settings* and enable *Preferred DTLS Tunnel*.

To enable DTLS tunnel on FortiGate, use the following CLI commands:

```
config vpn ssl settings
  set dtls-tunnel enable
end
```

User & Device

In *User & Device*, you can control network access for different users and devices in your network. FortiGate authentication controls system access by user group. By assigning individual users to the appropriate user groups you can control each user's access to network resources. You can define local users and peer users on the FortiGate unit. You can also define user accounts on remote authentication servers and connect them to FortiOS.

You can control network access for different device types in your network by doing the following:

- Identifying and monitoring the types of devices connecting to your network
- Using MAC address based access control to allow or deny individual devices
- Using Telemetry data received from FortiClient endpoints to construct a policy to deny access to endpoints with known vulnerabilities or to quarantine compromised endpoints

The following sections provide information about users and devices:

- Endpoint control and compliance on page 1422
- User Definition on page 1432
- User Groups on page 1433
- Guest Management on page 1440
- Device Inventory on page 1444
- LDAP Servers on page 1448
- RADIUS Servers on page 1458
- TACACS+ Servers on page 1469
- Authentication Settings on page 1470
- FortiTokens on page 1472
- Configuring the maximum log in attempts and lockout period on page 1494
- Creating a PKI/peer user on page 1495
- Configuring firewall authentication on page 1495

Endpoint control and compliance

Per-policy disclaimer messages

FortiOS supports a customizable captive portal to direct users to install or enable required software.

Per-policy custom disclaimers in each VDOM are supported. For example, you may want to configure three firewall policies, each of which matches traffic from endpoints with different FortiClient statuses:

Endpoint status	FortiOS behavior
Endpoint does not have FortiClient installed.	Traffic matches a firewall policy that displays an in-browser warning to install FortiClient from the provided link.


Endpoint status	FortiOS behavior
Endpoint has FortiClient installed, registered to EMS, and connected to the FortiGate.	Traffic matches a dynamic firewall policy which allows the endpoint to reach its destination via this policy.
Endpoint is deregistered from EMS and disconnected from the FortiGate.	Traffic matches another dynamic firewall policy that displays warning to register FortiClient to EMS.

To enable per-policy disclaimer messages:

```
config user setting
    set auth-cert "Fortinet_Factory"
    set per-policy-disclaimer enable
end
```

To configure per-policy disclaimers in the GUI:

1. Ensure the per-policy disclaimer messages option is enabled.
2. Go to *Policy & Objects* > *IPv4 Policy*.
3. Edit the policy that applies when an endpoint does not have FortiClient installed.
4. Under *Disclaimer Options*, enable *Display Disclaimer*.
5. Enable *Customize Messages* then click *Edit Disclaimer Message*. The default disclaimer message is shown.
6. Edit the message to warn users to install FortiClient, and provide the FortiClient download link.

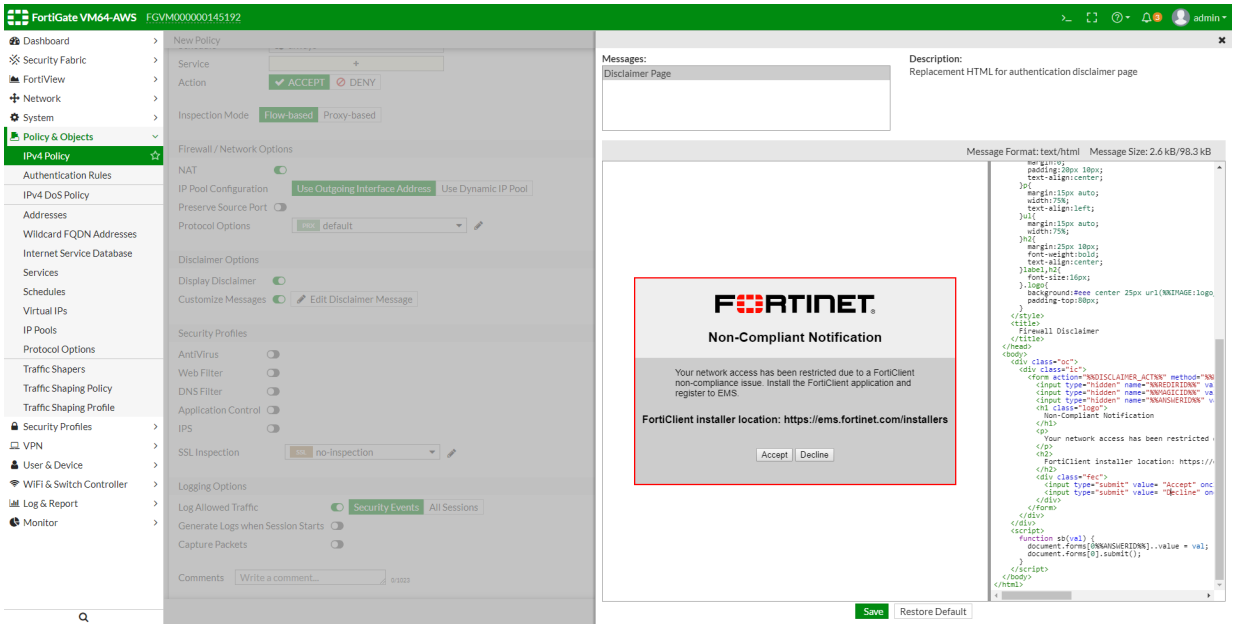

7. Click *Save*.
8. Repeat the above steps for each policy that requires a custom disclaimer message.

To configure per-policy disclaimers in the CLI:

```
config firewall policy
    edit 1
        set name "111"
        set uuid c3ad8da0-bd7c-51e8-c0da-fe9053bf35ae
```


```
            set srcintf "port12"
            set dstintf "port11"
            set srcaddr "all"
            set dstaddr "pc155_address"
            set action accept
            set schedule "always"
            set service "ALL"
            set wsso disable
            set groups "ems_03_group"
            set disclaimer enable
            set replacemsg-override-group "test"
            set nat enable
        next
        edit 4
            set name "44"
            set uuid 686ea2ca-348d-51e9-9dca-b2b4b4aabbe2
            set srcintf "port12"
            set dstintf "port11"
            set srcaddr "all"
            set dstaddr "pc5-address"
            set action accept
            set schedule "always"
            set service "ALL"
            set wsso disable
            set groups "ems_03_group"
            set disclaimer enable
            set replacemsg-override-group "test2"
            set nat enable
        next
        edit 6
            set name "66"
            set uuid f1034e52-36d5-51e9-fbae-da21922ccd10
            set srcintf "port12"
            set dstintf "port11"
            set srcaddr "all"
            set dstaddr "all"
            set status disable
            set schedule "always"
            set service "ALL"
            set logtraffic all
            set fsso disable
            set block-notification enable
            set replacemsg-override-group "endpoint-override"
        next
    end
```

Compliance

FortiSandbox Cloud region selection


In FortiOS, FortiSandbox Cloud services are decoupled from the FortiGate Cloud license. This allows you to specify a FortiSandbox Cloud region and take advantage of FortiSandbox features without a FortiGate Cloud account.

The following topology demonstrates how FortiGate Cloud Logs and FortiSandbox Cloud are separated in FortiOS:

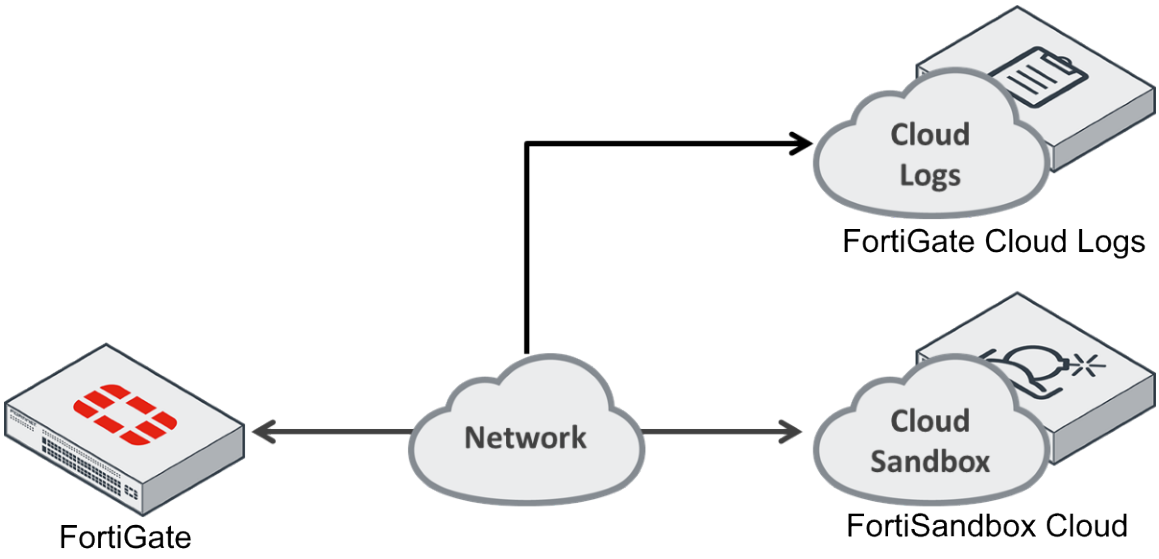

To view the FortiGate Cloud Log and FortiSandbox licenses:


1. Go to *Dashboard* > *Status*.
2. The *FortiGate Cloud* widget shows separate license statuses for *Log Retention* and *FortiSandbox Cloud*.
   In the following example, the FortiGate Cloud account is using a free license, and FortiSandbox Cloud is using a paid license:

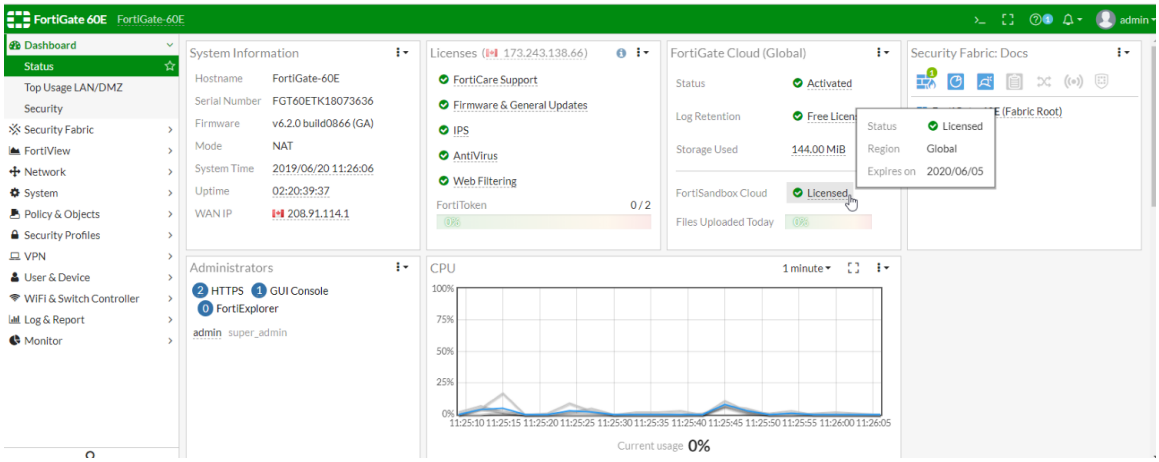

To obtain a FortiSandbox Cloud license:

1. Go to *System* > *FortiGuard*.
2. Under *License Information* > *FortiSandbox Cloud*, click *Activate*.


3. Complete the prompts to obtain your license.

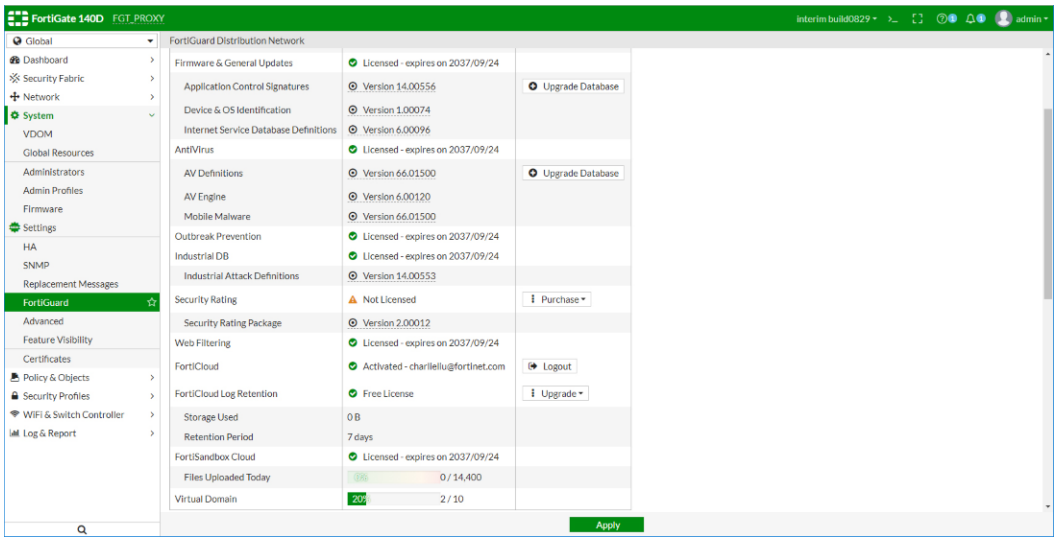



The FortiSandbox Cloud license is linked to your antivirus license, so they will expire at the same time.

- If the FortiGate is not registered with a paid antivirus license, the FortiGate will use the free FortiGate Cloud license. This license limits the FortiGate to 100 FortiSandbox Cloud submissions per day.

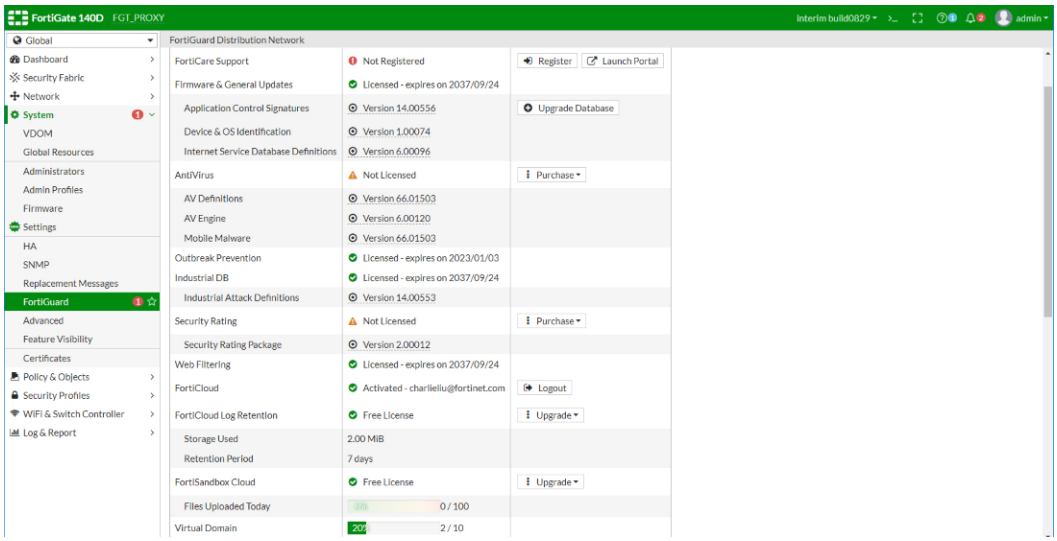


To set the FortiSandbox Cloud region in the GUI:

1. Go to *Security Fabric* > *Settings*.
2. In the *Sandbox Inspection* section, click *FortiSandbox Cloud*.
3. Select a region from the *FortiSandbox cloud region* dropdown.
   The following regions are available:
   - Europe
   - Global

- Japan
- US

4. Click *Apply*.

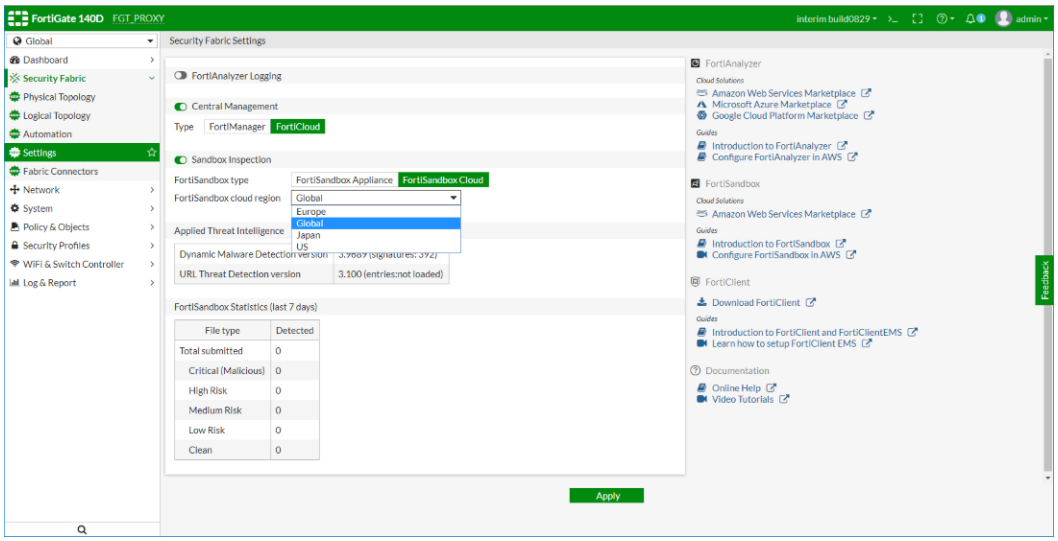

To set the FortiSandbox Cloud region in the CLI:

```
FGT_PROXY (global) # execute forticloud-sandbox region
0  Europe
1  Global
2  Japan
3  US
Please select cloud sandbox region[0-3]:3
Cloud sandbox region is selected: US
```

The separation of the FortiGate Cloud Log and FortiSandbox services are visible in the following example:

```
FGT_PROXY (global) # diagnose test application forticldd 3
Debug zone info:
    Domain:FortiCloud ReleaseQA Global - 172.16.95.16
    Home log server: 172.16.95.93:514
    Alt log server: 172.16.95.27:514
    Active Server IP:      172.16.95.93
    Active Server status:  up
    Log quota:      102400MB
    Log used:       0MB
    Daily volume:   20480MB
    fams archive pause: 0
    APTContract : 1
    APT server: 172.16.102.52:514
    APT Altserver: 172.16.102.51:514
    Active APTServer IP:      172.16.102.52
    Active APTServer status:  up
```

FortiGate VM unique certificate

To safeguard against certificate compromise, FortiGate VM and FortiAnalyzer VM use the same deployment model as FortiManager VM where the license file contains a unique certificate tied to the serial number of the virtual device.

A hardware appliance usually comes with a BIOS certificate with a unique serial number that identifies the hardware appliance. This built-in BIOS certificate is different from a firmware certificate. A firmware certificate is distributed in all appliances with the same firmware version.

Using a BIOS certificate with a built-in serial number provides a high trust level for the other side in X.509 authentication.

Since a VM appliance has no BIOS certificate, a signed VM license can provide an equivalent of a BIOS certificate. The VM license assigns a serial number in the BIOS equivalent certificate. This gives the certificate an abstract access ability, which is similar to a BIOS certificate with the same high trust level.

This feature is only supported in new, registered VM licenses.


Sample configurations

Depending on the firmware version and VM license, the common name (CN) on the certificate will be configured differently.


To view validated certificates:

1. Go to *System* > *Certificates*.
2. Double-click on a VM certificate. There are two VM certificates:
   - *Fortinet_Factory*
   - *Fortinet_Factory_Backup*


   The *Certificate Detail Information* window displays.
   - If you are using new firmware (6.2.0 and later) with a new VM license, the *CN* becomes the FortiGate VM serial number.

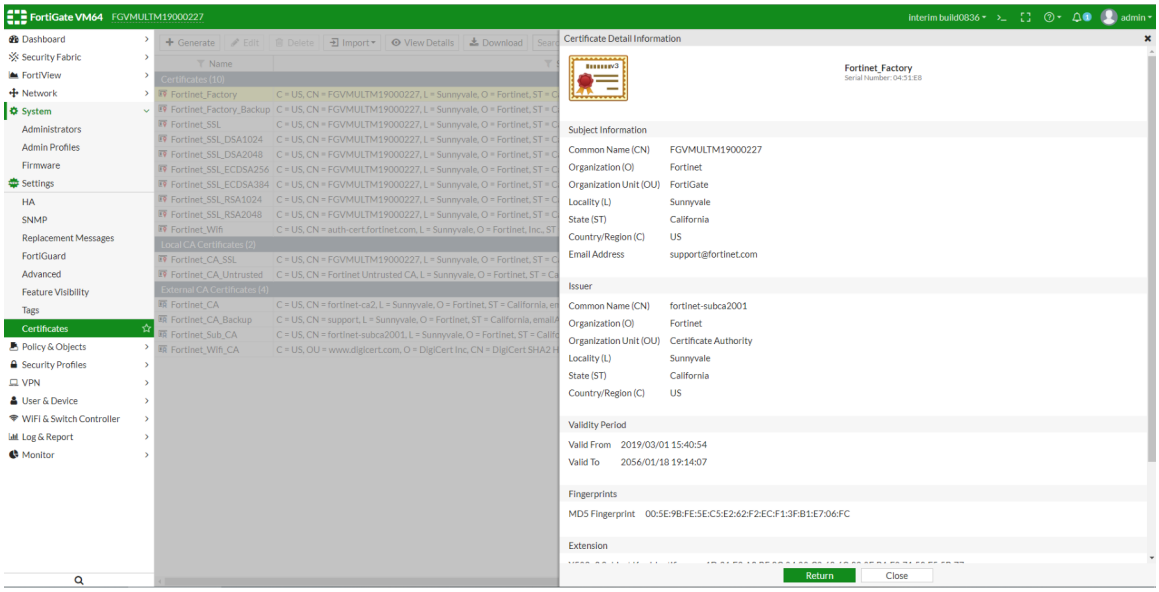

   - If you are using new firmware (6.2.0) with an old VM license, the *CN* remains as *FortiGate*. It does not change to the VM serial number.

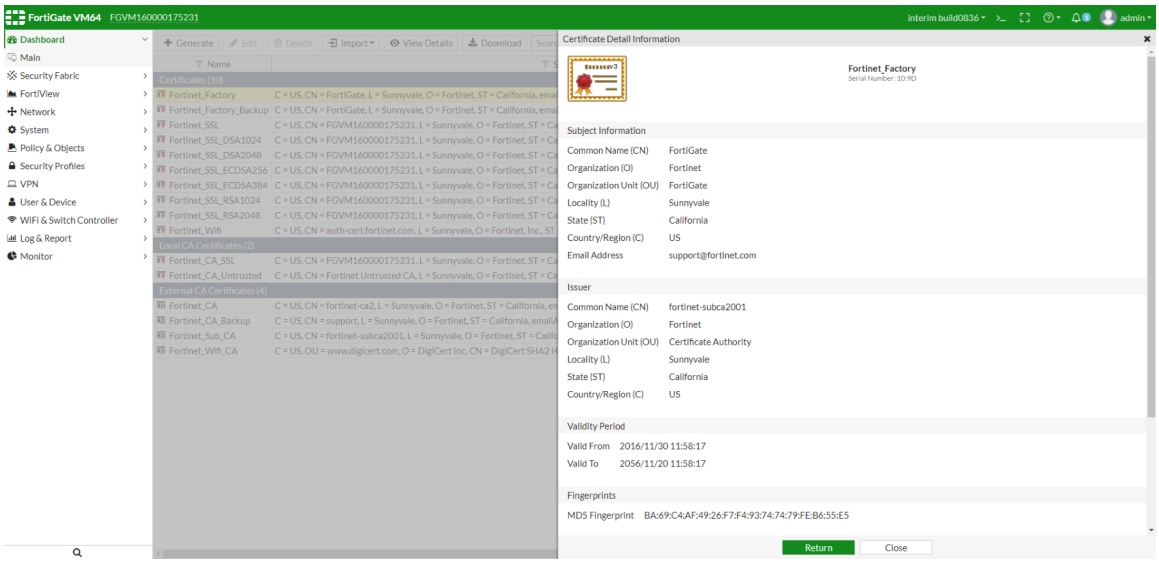

- If you are using old firmware (6.0.2) with a new VM license, the *CN* remains as *FortiGate*.

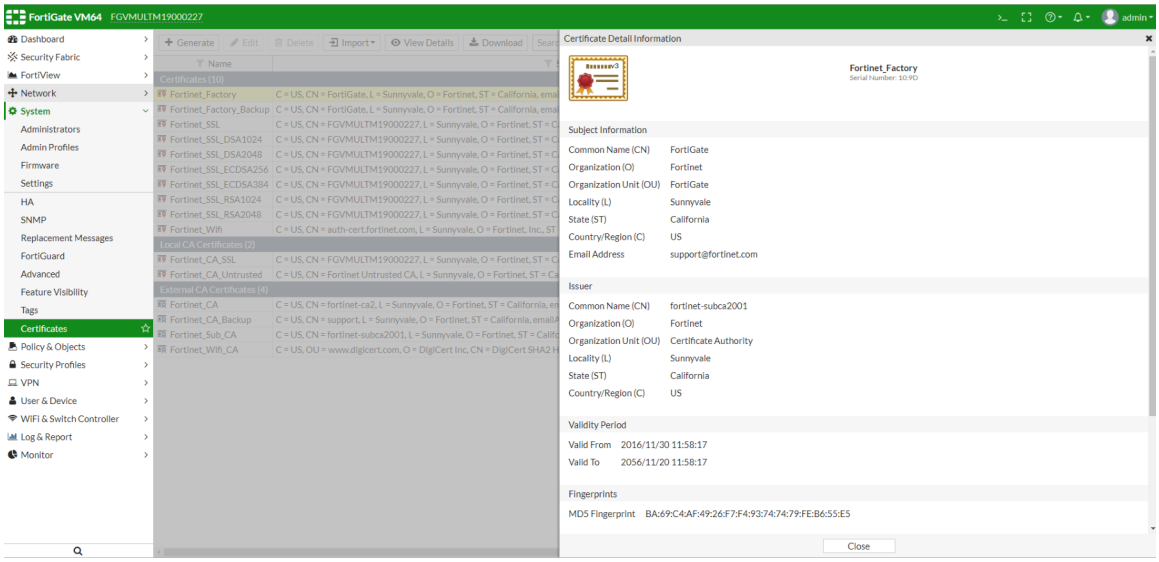


Running a file system check automatically

There is an option in FortiOS to enable automatic file system checks if the FortiGate shuts down ungracefully.

By default, the automatic file system check is disabled. When an administrator logs in after an ungraceful shutdown, a warning message appears advising them to manually run a file system check.

GUI warning:

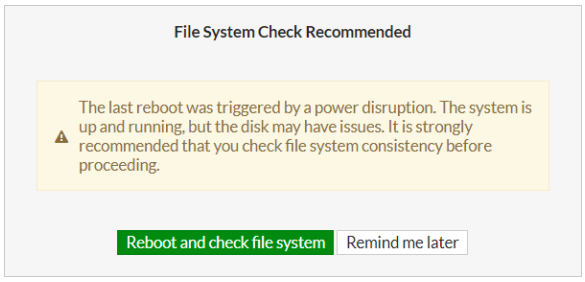

CLI warning:


```
WARNING: File System Check Recommended! Unsafe reboot may have caused inconsistency in disk drive.
It is strongly recommended that you check file system consistency before proceeding.
Please run 'execute disk scan 17'
Note: The device will reboot and scan during startup. This may take up to an hour
```

Enabling automatic file system checks

You can enable automatic file system checks in both the GUI and CLI.

To enable automatic file system checks in the GUI:

1. Go to *System* > *Settings*.
2. In the *Start Up Settings* section, enable *Auto file system check*.
3. Click *Apply*.

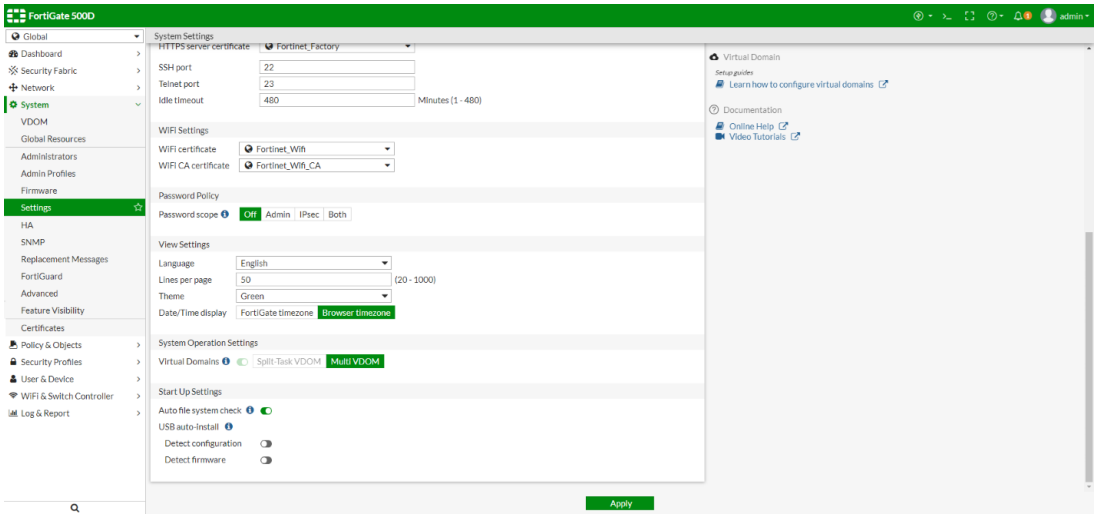

To enable automatic file system checks using the CLI:

```
config system global
   set autorun-log-fsck enable
end
```

FortiGuard distribution of updated Apple certificates

Push notifications for iPhone (for the purpose of two-factor authentication) require a TLS server certificate to authenticate to Apple. As this certificate is only valid for one year, a service extension allows FortiGuard to distribute updated TLS server certificates to FortiGate when needed.

FortiGuard update service updates local Apple push notification TLS server certificates when the local certificate is expired. FortiGuard update service also reinstalls certificates when the certificates are lost.

You can verify that the feature is working on the FortiGate by using the CLI shell.

To verify certificate updates:

1. Using FortiOS CLI shell, verify that all certificates are installed:

```
/data/etc/apns # ls -al
drwxr-xr-x    2 0        0       Tue Jan 15 08:42:39 2019          1024 .
drwxr-xr-x   12 0        0       Tue Jan 15 08:45:00 2019          2048 ..
-rw-r--r--    1 0        0       Sat Jan 12 00:06:30 2019          2377 apn-dev-cert.pem
-rw-r--r--    1 0        0       Sat Jan 12 00:06:30 2019          1859 apn-dev-key.pem
-rw-r--r--    1 0        0       Sat Jan 12 00:06:30 2019          8964 apn-dis-cert.pem
-rw-r--r--    1 0        0       Sat Jan 12 00:06:30 2019          4482 apn-dis-key.pem
```

2. Rename all current Apple certificates.
   Apple push notification no longer works after you rename the certificates.

```
/data/etc/apns # mv apn-dis-cert.pem apn-dis-cert.pem.save
/data/etc/apns # mv apn-dev-key.pem apn-dev-key.pem.save
/data/etc/apns # mv apn-dev-cert.pem apn-dev-cert.pem.save
/data/etc/apns # mv apn-dis-key.pem apn-dis-key.pem.save
/data/etc/apns # ls -al
drwxr-xr-x   2 0  0   Tue Jan 15 08:51:15 2019   1024 .
drwxr-xr-x  12 0  0   Tue Jan 15 08:45:00 2019   2048 ..
-rw-r--r--   1 0  0   Sat Jan 12 00:06:30 2019   2377 apn-dev-cert.pem.save
-rw-r--r--   1 0  0   Sat Jan 12 00:06:30 2019   1859 apn-dev-key.pem.save
-rw-r--r--   1 0  0   Sat Jan 12 00:06:30 2019   8964 apn-dis-cert.pem.save
-rw-r--r--   1 0  0   Sat Jan 12 00:06:30 2019   4482 apn-dis-key.pem.save
```

3. Run a FortiGuard update, and verify that all certificates are installed again:

```
/data/etc/apns # ls -al
drwxr-xr-x   2 0  0   Tue Jan 15 08:56:20 2019   1024 .
drwxr-xr-x  12 0  0   Tue Jan 15 08:56:15 2019   2048 ..
-rw-r--r--   1 0  0   Sat Jan 12 00:06:30 2019   2377 apn-dev-cert.pem.save
-rw-r--r--   1 0  0   Sat Jan 12 00:06:30 2019   1859 apn-dev-key.pem.save
-rw-r--r--   1 0  0   Tue Jan 15 08:56:20 2019   2167 apn-dis-cert.pem  <-- downloaded
from FortiGuard
-rw-r--r--   1 0  0   Sat Jan 12 00:06:30 2019   8964 apn-dis-cert.pem.save
-rw-r--r--   1 0  0   Tue Jan 15 08:56:20 2019   1704 apn-dis-key.pem   <-- downloaded
from FortiGuard
-rw-r--r--   1 0  0   Sat Jan 12 00:06:30 2019   4482 apn-dis-key.pem.save
-rw-r--r--   1 0  0   Tue Jan 15 08:56:20 2019     41 apn-version.dat   <-- downloaded
from FortiGuard
/data/etc/apns #
```

User Definition

The following topics provide information about user definition:

- User types on page 1432
- Removing a user on page 1432

User types

You can configure FortiOS users in FortiOS or on an external authentication server. The following summarizes user account types and authentication in FortiOS:

User type	Authentication
Local	Username and password must match a user account stored in FortiOS. Authentication by FortiOS security policy.
Remote	Username and password must match a user account stored in FortiOS and on the remote authentication server. FortiOS supports LDAP, RADIUS, and TACACS+ servers.
Authentication server	A FortiOS user group can include user accounts or groups that exist on a remote authentication server.
FSSO	Microsoft Windows or Novell network users can use their network credentials to access resources through FortiOS. You can control access using FSSO user groups that contain Windows or Novell user groups as members.
PKI/peer	Digital certificate holder who authenticates using a client certificate. No password is required unless two-factor authentication is enabled.
IM	FortiOS does not authenticate IM users. FortiOS allows or blocks each IM user from accessing IM protocols. A global policy for each IM protocol governs unknown users' access to these protocols.
Guest	Guest user accounts are temporary. The account expires after a selected period of time. See Guest Management on page 1440.

Removing a user

When a user account is no longer in use, you should delete it. If any configuration objects, such as a user group, reference the user account, you must remove the references before deleting the user.

To remove references to a user:

1. Go to *User & Device* > *User Definition*.
2. If the value in the *Ref.* column is not 0, click it.
3. FortiOS displays a list of object references to the user. Use this information to remove these references.

To remove a user using the GUI:

1. Go to *User & Device* > *User Definition*.
2. Select the desired user.
3. Click *Delete*, then *OK*.

To remove a user using the CLI:

```
config user local
   delete exampleuser
end
```

User Groups

A user group is a list of users. Security policies and some VPN configurations only allow access to specified user groups. This restricted access enforces role-based access control (RBAC) to your organization's network and resources. Users must be in a group and that group must be part of the security policy.

In most cases, FortiOS authenticates a user by requesting their username and password. FortiOS checks local user accounts first. Then, if it does not find a match, FortiOS checks the RADIUS, LDAP, and TACACS+ servers that belong to the user group. Authentication succeeds when FortiOS finds a matching username and password. If the user belongs to multiple groups on a server, FortiOS matches those groups as well.



FortiOS does not allow username overlap between RADIUS, LDAP, and TACACS+ servers.

Configuring POP3 authentication

FortiOS can authenticate users who have accounts on POP3 or POP3s email servers.

To configure POP3 authentication:

```
config user pop3
   edit pop3_server1
      set server pop3.fortinet.com
      set secure starttls
      set port 110
   next
end
```

To configure a POP3 user group:

A user group can list up to six POP3 servers as members.

```
config user group
   edit pop3_grp
      set member pop3_server1
   next
```

```
end
```

Dynamic policies - FortiClient EMS

The FortiClient EMS FSSO connector allows objects to be defined in FortiOS that map to tags and groups on EMS. EMS dynamically updates these endpoint groups when host compliance or other events occur, causing FortiOS to dynamically adjust its security policies based on the group definitions.

EMS supports creating compliance verification rules based on various criteria. When a FortiClient endpoint registers to EMS, EMS dynamically groups them based on these rules. FortiOS can receive the dynamic endpoint groups from EMS as tags via the FSSO protocol using an FSSO agent that supports SSL and imports trusted certificates.

After FortiOS pulls the tags from EMS, they can be used as members in user groups that can have dynamic firewall policies applied to them. When an event occur, EMS sends an update to FortiOS, and the dynamic policies are updated.

The following instructions assume EMS is installed, configured, and has endpoints connected. For information on configuring EMS, see the FortiClient EMS Administration Guide.

The following steps provide an example of configuring a dynamic policy:

1. Add a compliance verification rule in EMS on page 1434
2. Configure an EMS FSSO agent on page 1435
3. Configure user groups on page 1436
4. Create a dynamic firewall policy on page 1437


Add a compliance verification rule in EMS

This example creates a compliance verification rule that applies to endpoints that have Windows 10 installed.

For more information see Compliance verification in the FortiClient EMS Administration Guide.

To create a compliance verification rule in EMS:

1. In EMS, go to *Compliance Verification* > *Compliance Verification Rules*.
2. Click *Add*.
3. In the *Name* field, enter the desired rule name.
   EMS uses the tag name to dynamically group endpoints, not the rule name configured in this field.
4. Turn *Status* on to enable the rule.
5. For *Type*, select *Windows*, *Mac*, or *Linux*. This affects what rule types are available. In this example, *Windows* is selected.
6. From the *Rule* dropdown list, select the rule type and configure the related options. Ensure you click the + button after entering each criterion.
   In this example, *OS Version* is selected from the *Rule* dropdown list, and *Windows 10* is selected from the *OS Version* dropdown list.
7. Under *Assign to*, select *All*.
8. In the *Tag endpoint as* dropdown list, select an existing tag or enter a new tag. In this example, a new tag, WIN10_EMS134, is created. EMS uses this tag to dynamically group together endpoints that satisfy the rule, as well as any other rules that are configured to use this tag.

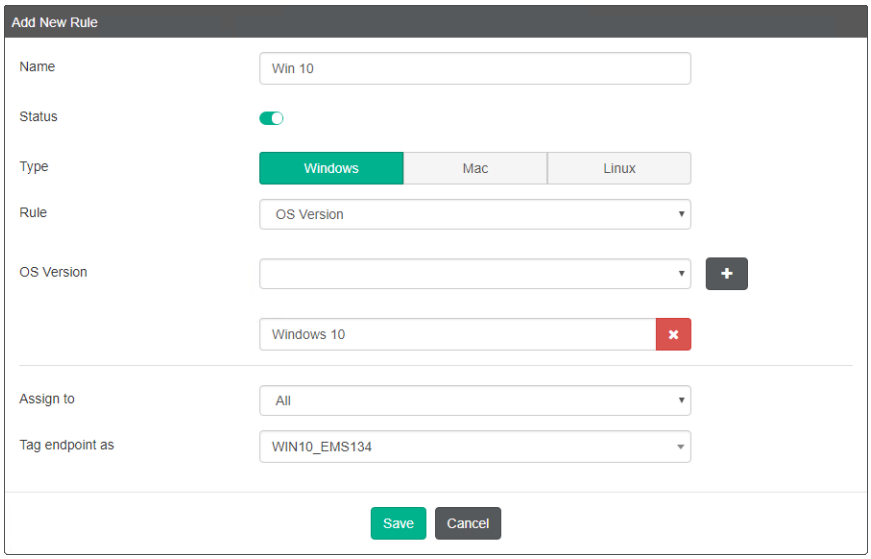


9. Click *Save*.
10. Go to *Compliance Verification* > *Host Tag Monitor*. All endpoints that have Windows 10 installed are shown grouped by the WIN10_EMS134 tag.

Configure an EMS FSSO agent


In this example, the FSSO agent name is EMS_FSSO_connector, and the EMS server is located at 172.18.64.7.

To configure the EMS FSSO agent in FortiOS in the GUI:

1. Go to *Security Fabric* > *Fabric Connectors*.
2. Click *Create New*.
3. In the *SSO/Identity* section, click *Fortinet Single Sign-On Agent*.

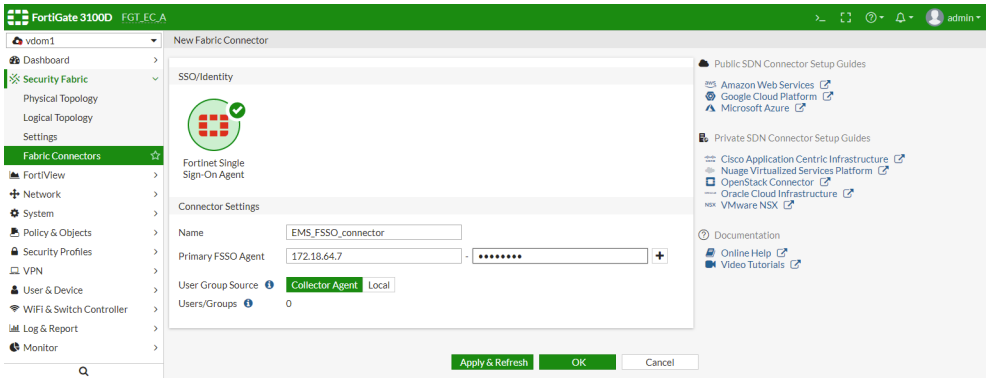

4. Fill in the *Name*, and *Primary FSSO Agent* server IP address or name and *Password*.
5. Set the *User Group Source* to *Collector Agent*.
   User groups will be pushed to the FortiGate from the collector agent. Click *Apply & Refresh* to fetch group filters from the collector agent.

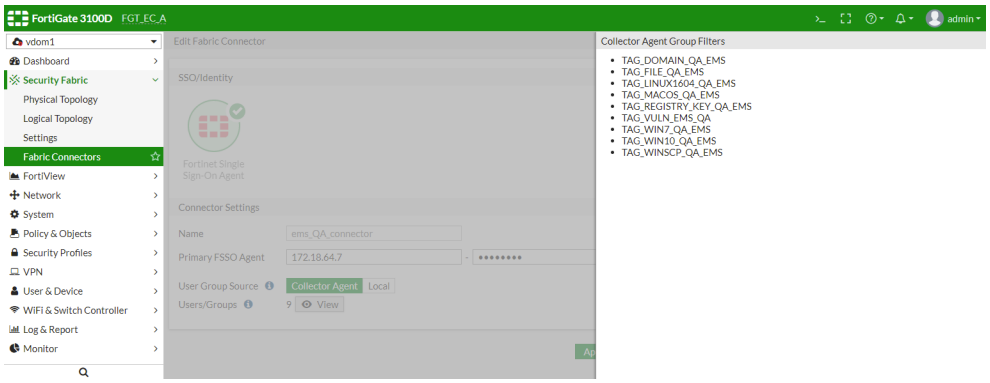

6. Click *OK*.

To configure the EMS FSSO agent in FortiOS in the CLI:


```
config user fsso
    edit "ems_QA_connector"
        set server "172.18.64.7"
        set password  ******
        set type fortiems
        set ssl enable
    next
end
```

Configure user groups

In this example, the user group is named ems_QA_group, and includes six dynamic endpoint groups that were pulled from EMS as members.

To configure a user group based on EMS tags in the GUI:

1. Go to *User & Device* > *User Groups*.
2. Click *Create New*.
3. In the *Name* field, enter *ems_QA_group*.
4. For *Type*, select *Fortinet Single Sign-On (FSSO)*.
5. In the *Members* field, click +. The *Select Entries* pane appears. The dynamic endpoint groups pulled from EMS have names that begin with TAG_, followed by the tag name in EMS.
6. Select the desired dynamic endpoint groups. Endpoints that currently belong to these groups in EMS will be members of this FortiOS user group.

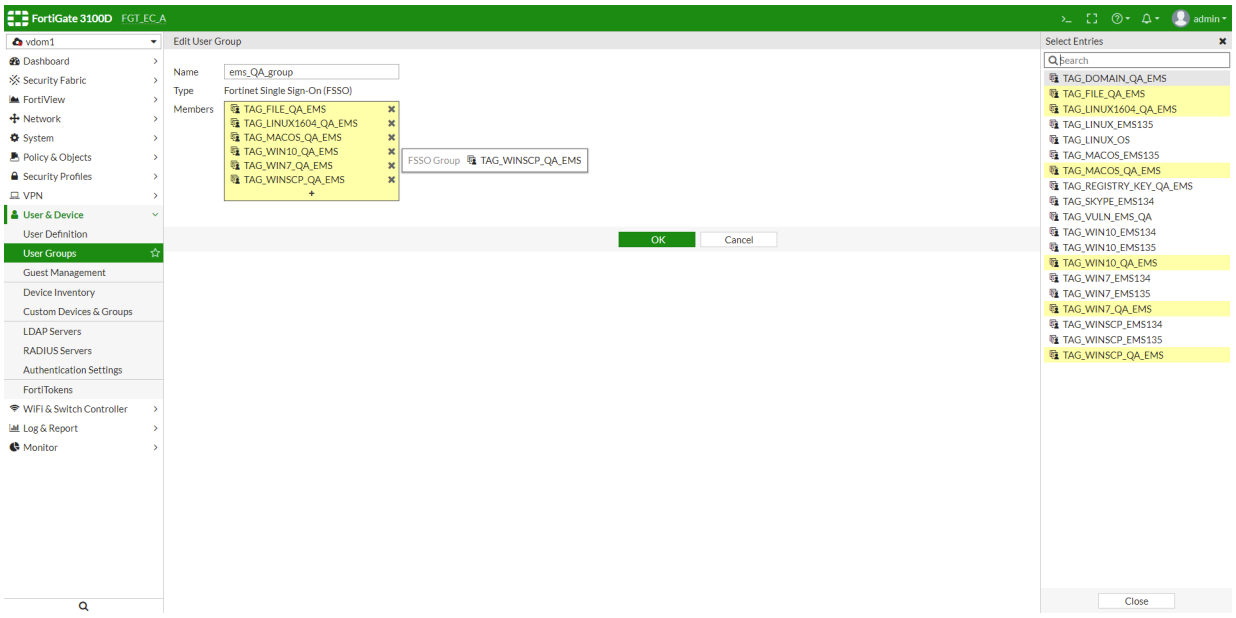

7. Click *OK*.

To configure a user group based on EMS tags in the CLI:

```
config user group
    edit "ems_QA_group"
        set group-type fsso-service
        set authtimeout 0
        set http-digest-realm ''
        set member "TAG_FILE_QA_EMS" "TAG_LINUX1604_QA_EMS" "TAG_MACOS_QA_EMS" "TAG_WIN10_
QA_EMS" "TAG_WIN7_QA_EMS" "TAG_WINSCP_QA_EMS"
    next
end
```


Create a dynamic firewall policy

You can create a dynamic firewall policy for the user group. This example shows how to create an IPv4 policy for the user group.

To create a dynamic firewall policy for the user group in the GUI:

1. Go to *Policy & Objects* > *IPv4 Policy*.
2. Click *Create New*.
3. In the *Source* field, click +. The *Select Entries* pane opens.
   a. On the *User* tab, select the *ems_QA_group* group.
   b. Click *Close*.

4. Configure the other policy settings options as required.

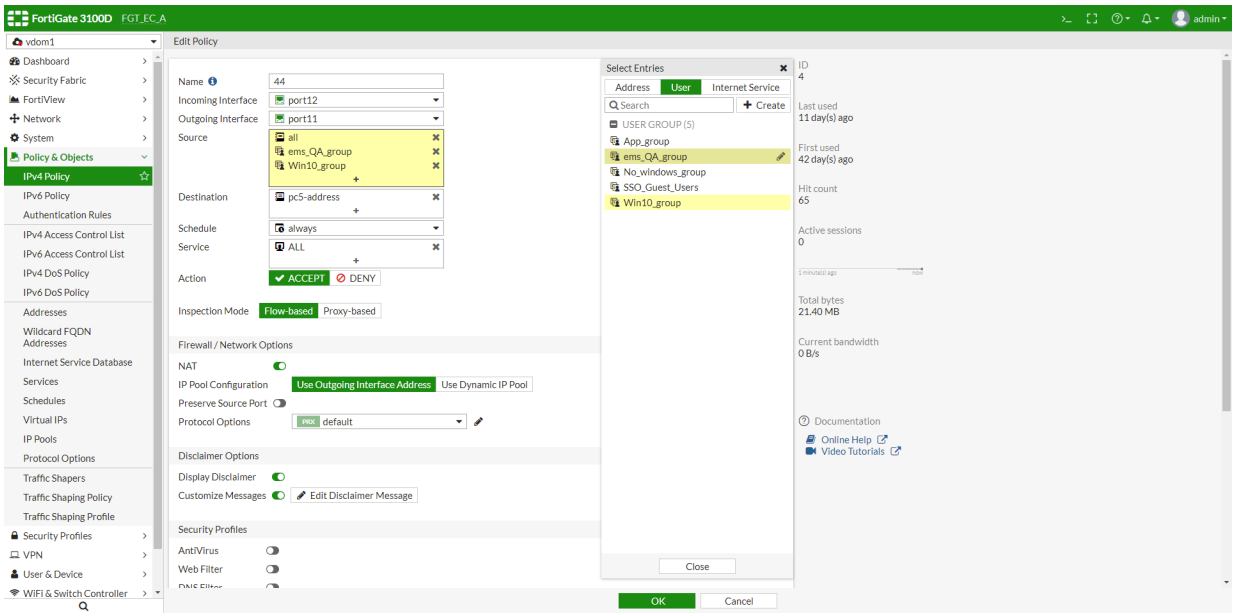

5. Click *OK*.
6. Go to *Policy & Objects* > *IPv4 Policy* to ensure the policy was created and applied to the desired user group. FortiOS will update this policy when it receives updates from EMS.

To create a dynamic firewall policy for the user group in the CLI:

```
config firewall policy
    edit 4
        set name 44
        set srcintf port12
        set dstintf port11
        set srcaddr "all" "ems_QA_group" "Win10_group"
        set dstaddr pc5-address
        set action accept
        set schedule always
        set service ALL
    next
end
```

Diagnostics

To list endpoint records, use the following CLI command:

```
diagnose endpoint record-list
    Record #1:
        IP_Address = 10.1.100.120(3)
        MAC_Address = 00:0c:29:36:4e:61
        Host MAC_Address = 00:0c:29:36:4e:61
        MAC list = 00-0c-29-36-4e-57;00-0c-29-36-4e-61;
        VDOM = vdom1
        EMS serial number: FCTEMS3688727941
        Quarantined: no
        Online status: online
```

```
        On-net status: on-net
        FortiClient connection route: Direct
        FortiClient communication interface index: 19
        DHCP server:
        Dirty_onnet_addr: yes
        FortiClient version: 6.2.0
        AVDB version: 67.558
        FortiClient app signature version: 14.586
        FortiClient vulnerability scan engine version: 2.28
        FortiClient feature version status: 0
        FortiClient UID: FA4AFAF6F92442E69DC7D67ABE64BDBA (0)
        FortiClient KA interval dirty: 0
        FortiClient Full KA interval dirty: 0
        Auth_AD_groups:
        Auth_group: ems_QA_group
        Auth_user: FRANK
        Host_Name: DESKTOP-FJEVH8U
        OS_Version: Microsoft Windows 10 Professional Edition, 64-bit (build 17763)
        Host_Description: AT/AT COMPATIBLE
        Domain:
        Last_Login_User: frank
        Host_Model: VMware Virtual Platform
        Host_Manufacturer: VMware, Inc.
        CPU_Model: Intel(R) Xeon(R) CPU E5-2630 v4 @ 2.20GHz
        Memory_Size: 4096
        Installed features: 375
        Enabled features: 177
        Last vul message received time: N/A
        Last vul scanned time: N/A
        Last vul statistic: critical=0, high=0, medium=0, low=0, info=0
        Avatar source username: frank
        Avatar source email:
        Avatar source: Client Operating System
        Phone number:
    online records: 1; offline records: 0; quarantined records: 0
```

To list authenticated IPv4 users, use the following CLI command:

```
diagnose firewall auth list
    2.2.2.1, JONATHANWONG
        type: fsso, id: 0, duration: 18955, idled: 18955
        server: ems_QA_connector
        packets: in 0 out 0, bytes: in 0 out 0
    10.1.100.111, FRANK111
        type: fsso, id: 0, duration: 18955, idled: 18955
        server: ems_QA_connector
        packets: in 0 out 0, bytes: in 0 out 0
        group_id: 5
        group_name: ems_QA_group
    10.1.100.120, FRANK
        type: fsso, id: 0, duration: 18955, idled: 4
        server: ems_QA_connector
        packets: in 10643 out 11379, bytes: in 6014568 out 3224342
        group_id: 5
        group_name: ems_QA_group
    10.1.100.141, ADMINISTRATOR
        type: fsso, id: 0, duration: 18955, idled: 1
```

```
        server: ems_QA_connector
        packets: in 9669 out 10433, bytes: in 5043948 out 2823319
        group_id: 5
        group_name: ems_QA_group
    ...
    ...

    ----- 23 listed, 0 filtered ------

    FGT_EC_A (vdom1) # diagnose debug authd fsso list
    ----FSSO logons----
    IP: 2.2.2.1  User: JONATHANWONG  Groups: 6B8028751BF3457BA172EE3795A2BDA8  Workstation:
VAN-201740-PC
    IP: 10.1.100.111  User: FRANK111  Groups: ECF57781AE384D6A9A4D2D72CB5169C6+TAG_
LINUX1604_QA_EMS  Workstation: FRANK111-    VIRTUAL-MACHINE MemberOf: ems_QA_group
    IP: 10.1.100.120  User: FRANK  Groups: FA4AFAF6F92442E69DC7D67ABE64BDBA+TAG_WIN10_QA_EMS
 Workstation: DESKTOP-FJEVH8U MemberOf: ems_QA_group
    IP: 10.1.100.141  User: ADMINISTRATOR  Groups: 6D21827915CE445F8A85F9E6BAA0C57A+TAG_
VULN_EMS_QA+TAG_WIN7_QA_EMS  Workstation: LHWIN7A MemberOf: ems_QA_group
    ....
    ....

    Total number of logons listed: 23, filtered: 0
    ----end of FSSO logons----
```

Guest Management

Configuring guest access

A visitor to your premises may need a user account on your network during their stay. If you are hosting a large event, such as a conference, you may need to create many temporary accounts for the attendees. You can create many guest accounts simultaneously using randomly generated user IDs and passwords to reduce your workload for these large events.

The following describes managing guest access:

1. Create one or more guest user groups. All members of a group have the same user ID type, password type, information fields used, and type and time of expiry.
2. Create guest accounts.
3. Use captive portal authentication and select the appropriate guest group.
4. The guest receives an email, SMS message, or printout containing their user ID and password from the FortiOS administrator.
5. The guest logs onto the network using the provided credentials.
6. After the configured expiry time, the credentials are no longer valid.

This configuration consists of the following steps:

1. Add an SMS service.
2. Create a guest management administrator.
3. Create a guest user group.
4. Create guest user accounts.

To add an SMS service:

To send SMS notifications to guest users, add an email to SMS service to your FortiGate using the following commands:

```
config system sms-server
   edit <server-name>
      set mail-server <server-name>
   next
end
```

To create a guest management administrator:

1. Go to *System* > *Administrators*.
2. Click *Create New* > *Administrator*.
3. Enable *Restrict admin to guest account provisioning only*.
4. For *Guest Group*, select the desired guest groups.

To create a guest user group:

The guest group configuration determines the provided fields when you create a guest user account.

1. Go to *User & Device* > *User Groups*.
2. Click *Create New*.
3. For *Type*, select *Guest*.
4. If desired, enable *Batch Guest Account Creation*. When this is enabled, the following is true:
   - User IDs and passwords are auto-generated.
   - User accounts only have the *User ID*, *Password*, and *Expiration* fields. You can only edit the *Expiration* field. If the expiry time is a duration, such as eight hours, the countdown starts at initial login.
   - You can print the account information to provide to the guest. Guests do not receive email or SMS notifications.
5. For *User ID*, select one of the following:

Option	Description
Email	Guest's email address.
Auto Generated	FortiOS creates a random user ID for the guest.
Specify	The administrator assigns a user ID to the guest.

6. For *Password*, select one of the following:

Option	Description
Disable	No password.
Auto Generated	FortiOS creates a random password for the guest.
Specify	The administrator assigns a password to the guest.

7. For *Start Countdown*, select one of the following:

Option	Description
On Account Creation	FortiOS counts expiry time from time of account creation.

Option	Description
After First Login	FortiOS counts expiry time from the guest's first login.

8. For *Time*, configure the expiry time. You can change this for individual users.
9. Configure any other field as required, then click *OK*.

Creating guest user accounts

To create a guest user account:

1. Go to *User & Device* > *Guest Management*.
2. Select the desired guest group.
3. Click *Create New*.
4. Configure the guest as desired.
5. Click *OK*.

To create multiple guest user accounts automatically:

1. Go to *User & Device* > *Guest Management*.
2. Select the desired guest group. This group must have *Batch Guest Account Creation* enabled.
3. Click *Create New* > *Multiple Users*.
4. Enter the *Number of Accounts*.
5. If desired, change the expiry.
6. Click *OK*.

Retail environment guest access

Businesses such as coffee shops provide free Internet access for customers. In this scenario, you do not need to configure guest management, as customers can access the WiFi access point without logon credentials.

However, consider that the business wants to contact customers with promotional offers to encourage future patronage. You can configure an email collection portal to collect customer email addresses for this purpose. You can configure a security policy to grant network access only to users who provide a valid email address. The first time a customer's device attempts WiFi connection, FortiOS requests an email address, which it validates. The customers' subsequent connections go directly to the Internet without interruption.

This configuration consists of the following steps:

1. Creating an email collection portal on page 1442
2. Creating a security policy on page 1443
3. Checking for harvested emails on page 1443

Creating an email collection portal

The customer's first contact with your network is a captive portal that presents a webpage requesting an email address. When FortiOS has validated the email address, the customer's device MAC address is added to the Collected Emails device group.

This example modifies the `freewifi` WiFi interface to present an email collection captive portal.

To create an email collection portal:

```
config wireless-controller vap
    edit freewifi
        set security captive-portal
        set portal-type email-collect
    next
end
```

Creating a security policy

You must configure a security policy that allows traffic to flow from the WiFi SSID to the internet interface only for members of the Collected Emails device group. This policy must be listed first. Unknown devices are not members of the Collected Emails device group, so they do not match the policy.

To create a security policy:

```
config firewall policy
    edit 3
        set srcintf "freewifi"
        set dstintf "wan1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set nat enable
        set email-collect enable
    next
end
```

Checking for harvested emails

To check for harvested emails in the GUI:

1. Go to *Dashboard* > *Users & Devices*.
2. Hover over the *Device Inventory* widget and click *Expand to Full Screen*.

To check for harvested emails in the CLI:

```
# diagnose user device list
    hosts
      vd 0 d8:d1:aa:aa:69:0f gen 35 req 30 redir 1 last 43634s 7-11_2-int
        ip 10.0.2.101 ip6 fe80::dad2:cbff:feab:610f
        type 2 'iPhone' src http c 1 gen 29
        os 'iPhone' version 'iOS 6.0.1' src http id 358 c 1
        email 'yo@yourdomain.com'
      vd 0 74:e1:bb:bb:69:f9 gen 36 req 20 redir 0 last 39369s 7-11_2-int
        ip 10.0.2.100 ip6 fe80::76e2:b6ff:fedd:69f9
        type 1 'iPad' src http c 1 gen 5
        os 'iPad' version 'iOS 6.0' src http id 293 c 1
        host 'Joes's-iPad' src dhcp
        email 'you@fortinet.com'
```

Device Inventory

You can enable device detection to allow FortiOS to monitor your networks and gather information about devices operating on those networks, including:

- MAC address
- IP address
- Operating system
- Hostname
- Username
- When FortiOS detected the device and on which interface

You can enable device detection separately on each interface in *Network* > *Interfaces*. Device detection is intended for devices directly connected to your LAN ports. If enabled on a WAN port, device detection may be unable to determine the OS on some devices. You can enable active scanning on the interface to find hosts whose device types FortiOS cannot determine passively.

You can also manually add devices to Device Inventory to ensure that a device with multiple interfaces displays as a single device.

The following topics provide information about Device Inventory:


- Device summary and filtering on page 1444
- Adding MAC-based addresses to devices on page 1446

Device summary and filtering

The *Device Inventory* pane contains three summary charts that provide an overview of the device type, status, and interfaces. You can use these clickable charts to simplify filtering among your devices.

To view the device summary and apply a filter:

1. Go to *User & Device* > *Device Inventory*.
   The *Device Inventory* pane appears with the three charts:

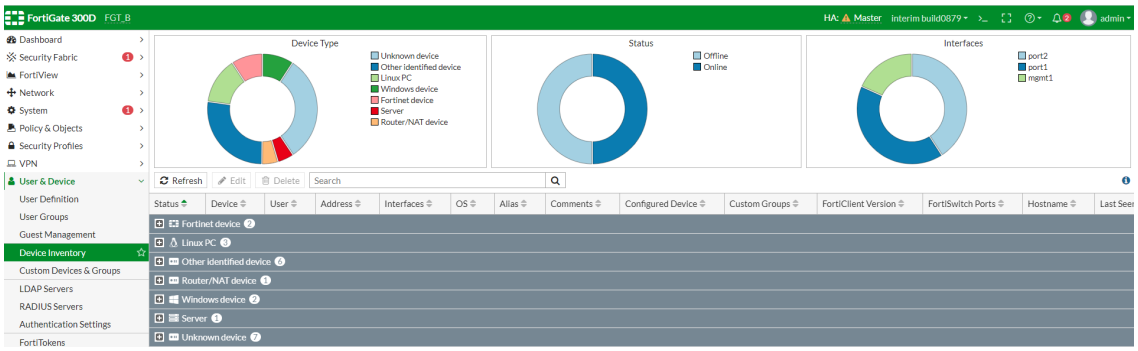


2. Click one item in the chart (in the legend or chart area) to apply a filter.
   Once the filter is applied, the list of results displays beneath the charts.

You can combine filters by clicking one item in another chart.

Filter examples


To filter all Linux devices:

1. In the *Device Type* chart, click *Linux PC*.

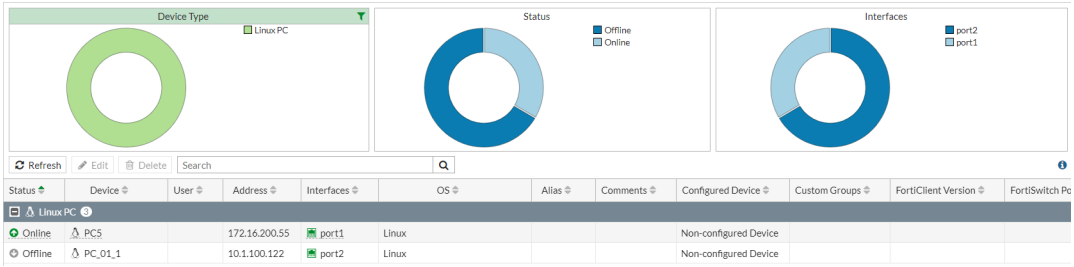


To filter all offline devices:

1. In the *Status* chart, click *Offline*.

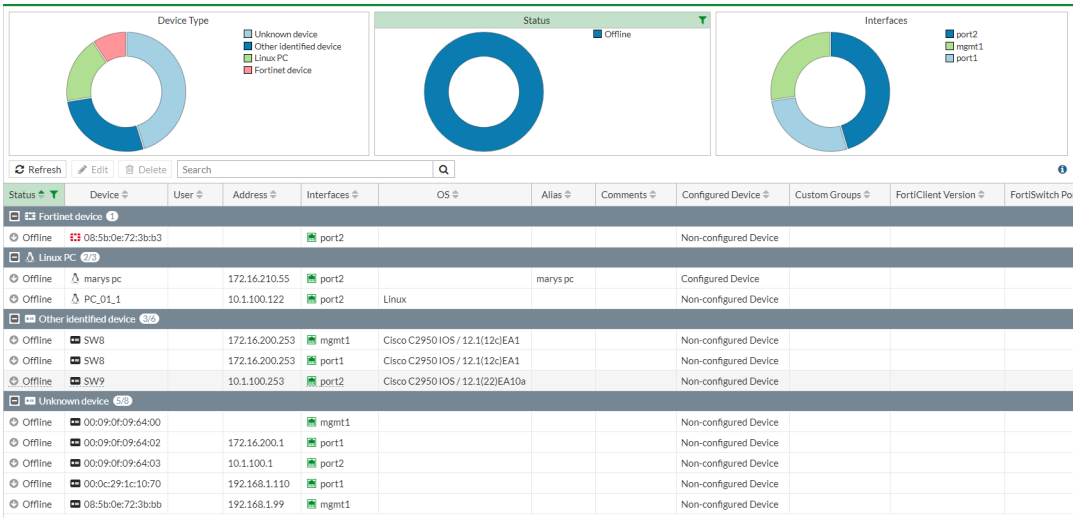

To filter all devices discovered on port1:

1. In the *Interfaces* chart, click *port1*.

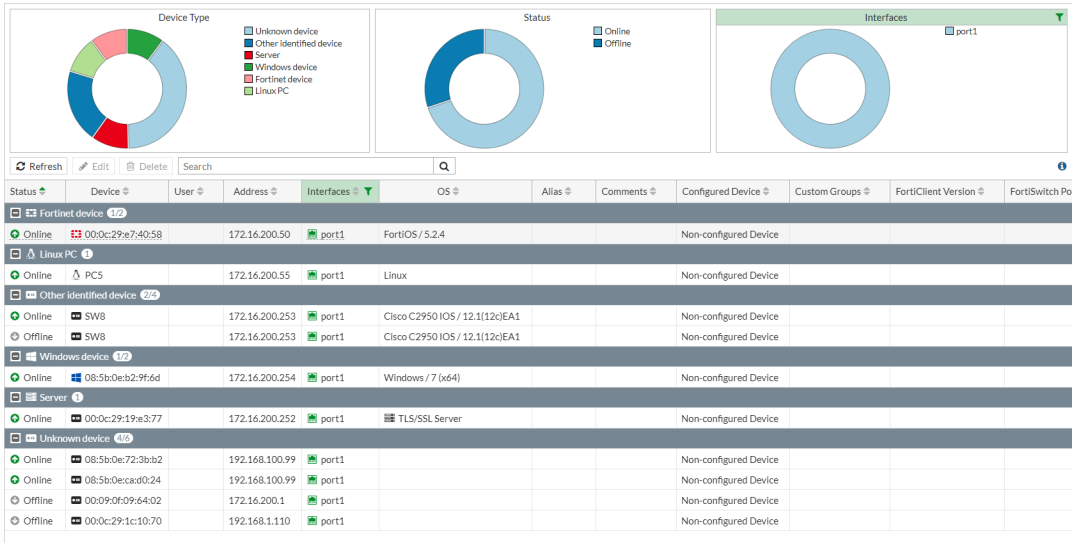




Click the filter icon in the top-right corner of the chart to remove the filter.

Adding MAC-based addresses to devices


Assets detected by device detection appear in the *User & Device* > *Device Inventory* list. You can manage policies around devices by adding a new device object (MAC-based address) to a device. Once you add the MAC-based address, the device can be used in address groups or directly in policies.

To add a MAC-based address to a device:


1. Go to *User & Device* > *Device Inventory*.
2. Right-click a device and select *Create Firewall Address* > *MAC Address*.

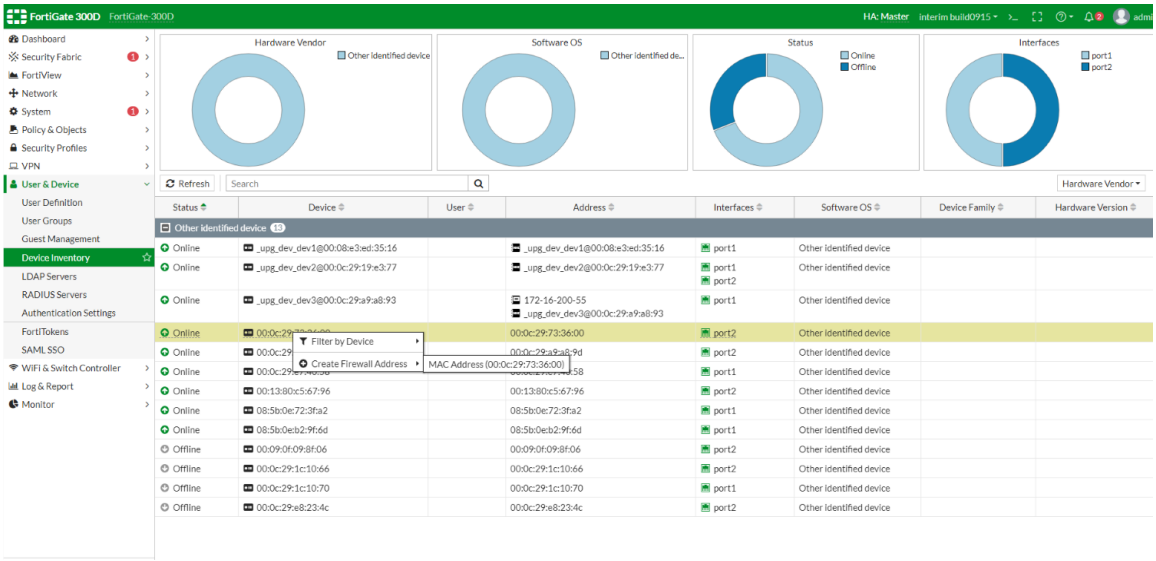

3. In the *New Address* pane, enter an address name.

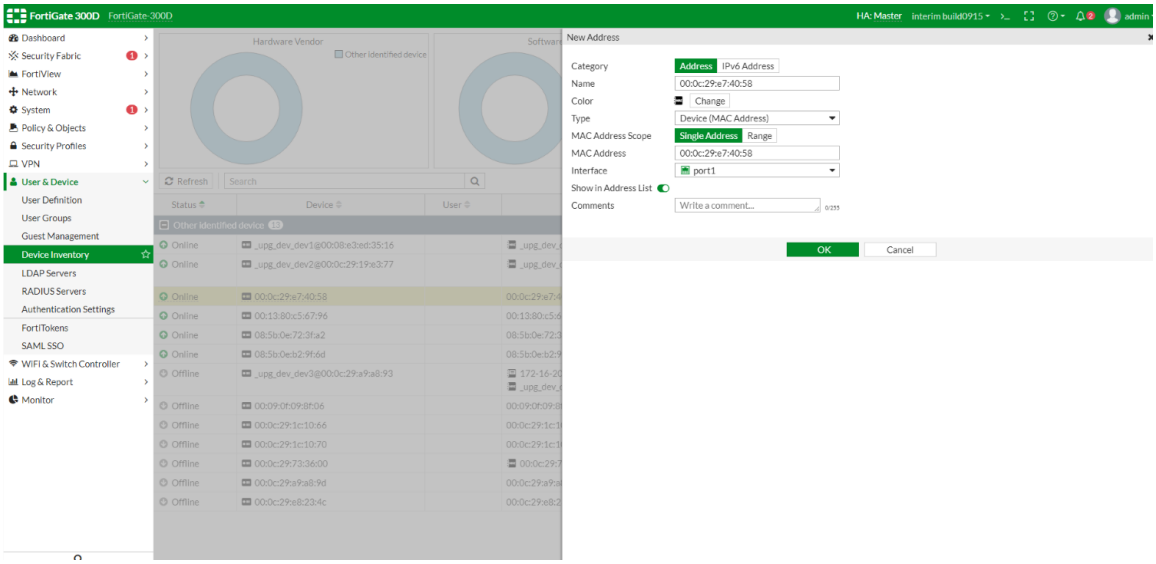

4. Click *OK*. The MAC address icon is now displayed in the *Address* column for the device.

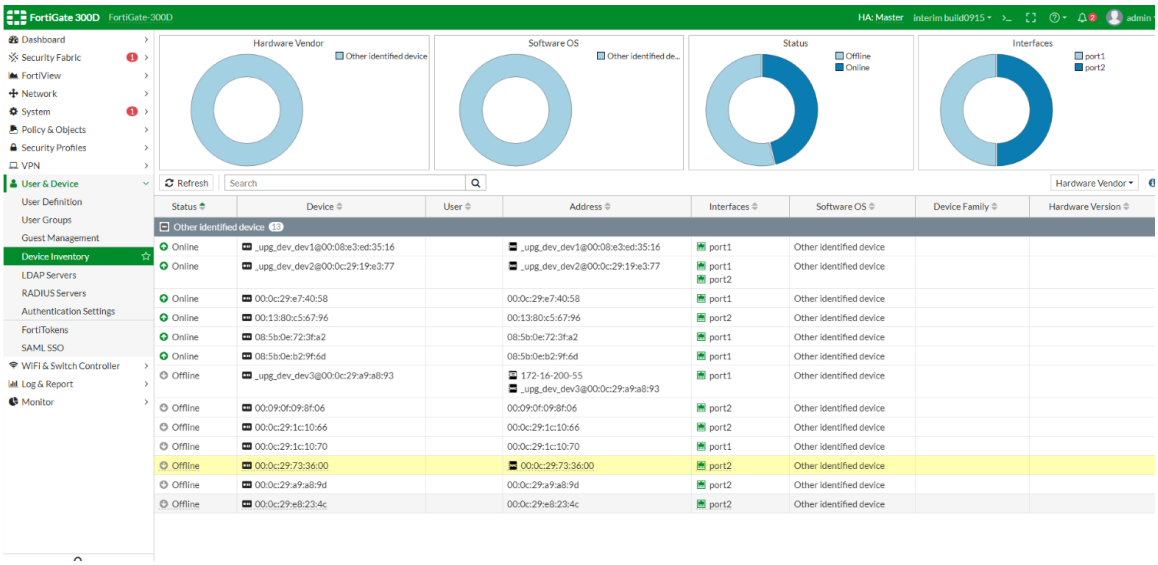

LDAP Servers

FSSO polling connector agent installation

This topic gives an example of configuring a local FSSO agent on the FortiGate. The agent actively pools Windows Security Event log entries on Windows Domain Controller (DC) for user log in information. The FSSO user groups can then be used in a firewall policy.

This method does not require any additional software components, and all the configuration can be done on the FortiGate.

To configure a local FSSO agent on the FortiGate:


1. Configure an LDAP server on the FortiGate on page 1448
2. Configure a local FSSO polling connector on page 1449
3. Add the FSSO groups to a policy on page 1451

Configure an LDAP server on the FortiGate

To configure an LDAP server on the FortiGate:

1. Go to *User & Device* > *LDAP Servers*.
2. Click *Create New*.

3. Fill in the required information:

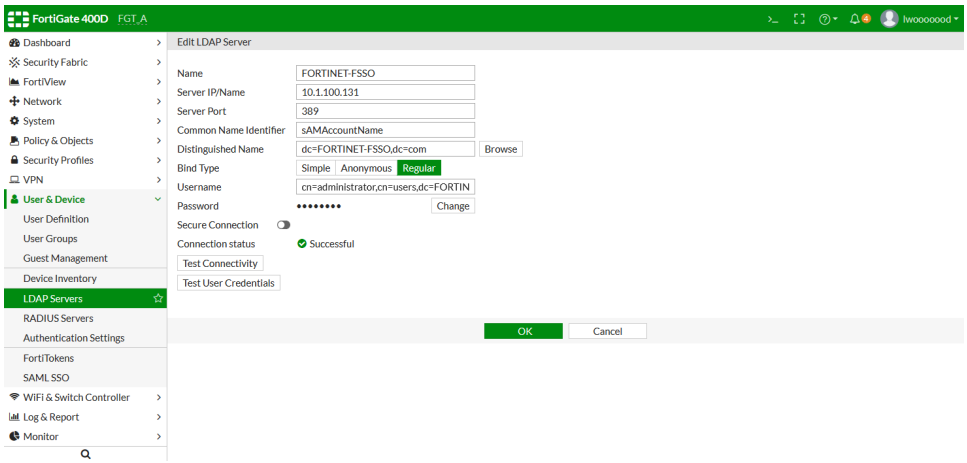


   - *Common Name Identifier* must be changed from the default value because, in a Windows environment, sAMAccountName must be unique, and *cn* must not be unique.
   - *Distinguished Name* is the location in the LDAP tree where the FortiGate will start searching for user and group objects.
   - *Active Directory* requires authentication by default, so the *Bind Type* is *Regular*, and the user account log in information is entered in the requisite fields. Optionally, click *Test User Credentials* to ensure that the account has sufficient access rights.
4. Click *OK*.
   The FortiGate checks the connection, and updates the *Connection Status*. The connection must be successful before configuring the FSSO polling connector.

Configure a local FSSO polling connector

To configure a local FSSO polling connector:


1. Go to *Security Fabric* > *Fabric Connectors*.
2. Click *Create New*.
3. In the *SSO/Identity* section, select *Poll Active Directory Server*.

4. Fill in the required information.

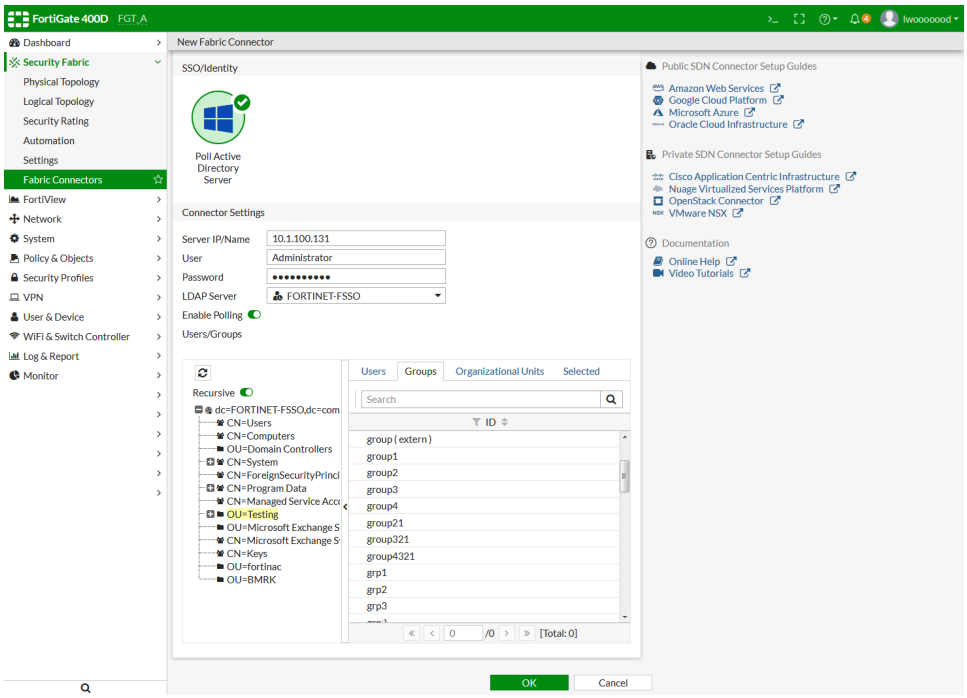


5. Select the just created LDAP server from the *LDAP Server* dropdown list.
   The structure of the LDAP tree will be shown in the *Users/Groups* section.
6. Go to the *Groups* tab.
7. Select the required groups, right click on them, and select *Add Selected*. Multiple groups can be selected at one time by holding the CTRL or SHIFT keys. The groups list can be filtered or searched to limit the number of groups that are displayed.


Users/Groups

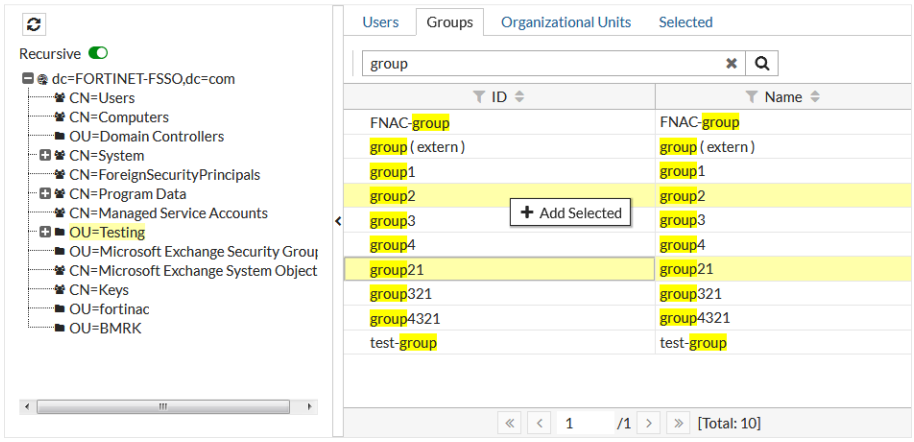

8. Go to the *Selected* tab and verify that all the required groups are listed. Unneeded groups can be removed by right clicking and selecting *Remove Selected*.

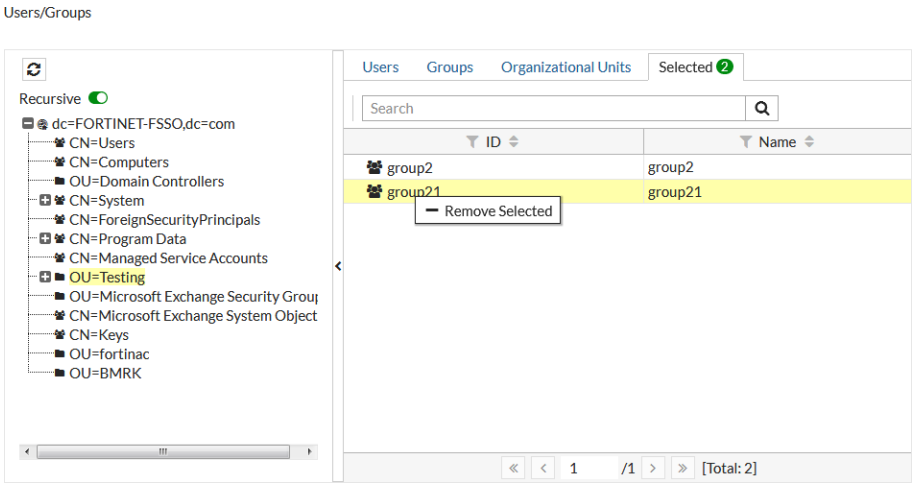

9. Click *OK*.
10. Go back to *Security Fabric* > *Fabric Connectors*.
11. There should be two new connectors:

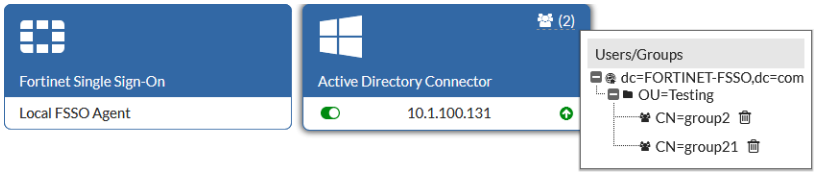

- The *Local FSSO Agent* is the backend process that is automatically created when the first FSSO polling connector is created.
- The *Active Directory Connector* is the front end connector that can be configured by FortiGate administrators.

To verify the configuration, hover the cursor over the top right corner of the connector; a popup window will show the currently selected groups. A successful connection is also shown by a green up arrow in the lower right corner of the connector.

If you need to get log in information from multiple DCs, then you must configure other Active Directory connectors for each additional DC to be monitored.


Add the FSSO groups to a policy

FSSO groups can be used in a policy by either adding them to the policy directly, or by adding them to a local user group and then adding the group to a policy.

To add the FSSO groups to a local user group:

1. Go to *User & Device* > *User Groups*.
2. Click *Create New*.
3. Enter a name for the group in the *Name* field.
4. Set the *Type* to *Fortinet Single Sign-On (FSSO)*.


5. Add the FSSO groups as members.

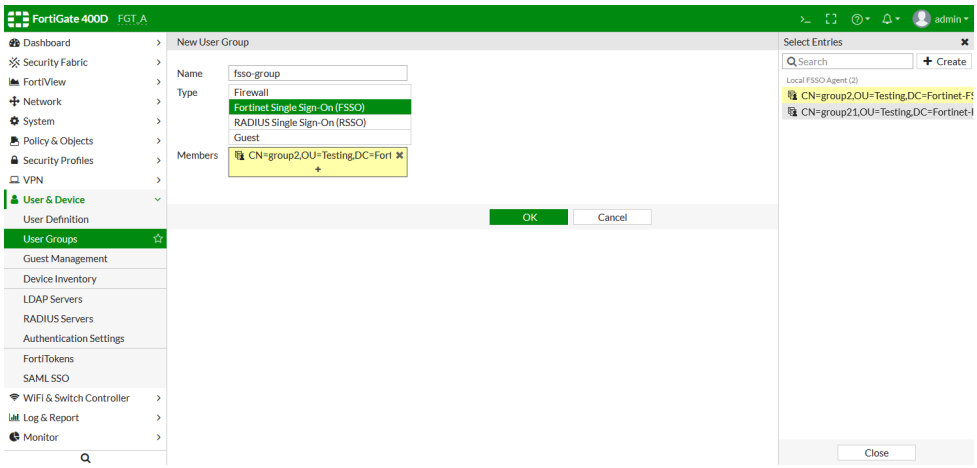

6. Click *OK*.
7. Add the local FSSO group to a policy.

To add the FSSO groups directly to a firewall policy:

1. Go to *Policy & Objects* > *IPv4 Policy*.
2. Click *Create New*.
3. Click in the *Source* field.
4. In the *Select Entries* pane, select the *User* tab.
5. Select the FSSO groups.

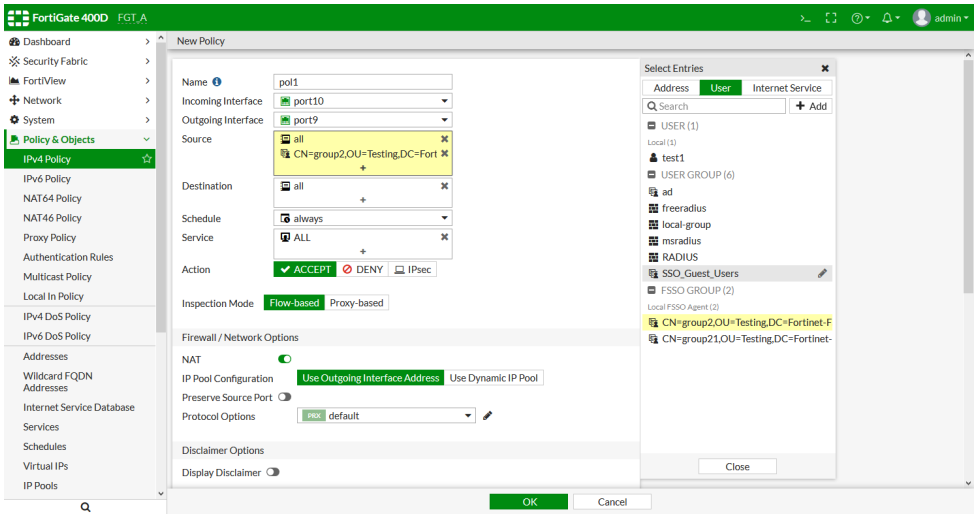

6. Configure the remaining settings as required.
7. Click *OK*.

Troubleshooting

If an authenticated AD user cannot access the internet or pass the firewall policy, verify the local FSSO user list:

```
# diagnose debug authd fsso list
----FSSO logons----
IP: 10.1.100.188 User: test2 Groups: CN=group2,OU=Testing,DC=Fortinet-FSSO,DC=COM
Workstation: MemberOf: CN=group2,OU=Testing,DC=Fortinet-FSSO,DC=COM
Total number of logons listed: 1, filtered: 0
----end of FSSO logons----
```

1. Check that the group in *MemberOf* is allowed by the policy.
2. If the expected AD user is not in list, but other users are, it means that either:
   - The FortiGate missed the log in event, which can happen if many users log in at the same time, or
   - The user's workstation is unable to connect to the DC, and is currently logged in with cached credentials, so there is no entry in the DC security event log.
3. If there are no users in the local FSSO user list:
   a. Ensure that the local FSSO agent is working correctly:

   ```
   # diagnose debug enable
   # diagnose debug authd fsso server-status

   Server Name                          Connection Status    Version            Address
   -----------                          -----------------    -------            -------
   FGT_A (vdom1) # Local FSSO Agent     connected            FSAE server 1.1    127.0.0.1
   ```

   The connection status must be `connected`.

   b. Verify the Active Directory connection status:

   ```
   # diagnose debug fsso-polling detail 1
   AD Server Status (connected):
   ID=1, name(10.1.100.131),ip=10.1.100.131,source(security),users(0)
   port=auto username=Administrator
   read log eof=1, latest logon timestamp: Fri Jul 26 10:36:20 2019

   polling frequency: every 10 second(s) success(274), fail(0)
   LDAP query: success(0), fail(0)
   LDAP max group query period(seconds): 0
   LDAP status: connected

   Group Filter: CN=group2,OU=Testing,DC=Fortinet-
   FSSO,DC=com+CN=group21,OU=Testing,DC=Fortinet-FSSO,DC=COM
   ```

   If the polling frequency shows successes and failures, that indicates sporadic network problems or a very busy DC. If it indicates no successes or failures, then incorrect credentials could be the issue.

   If the LDAP status is connected, then the FortiGate can access the configured LDAP server. This is required for AD group membership lookup of authenticated users because the Windows Security Event log does not include group membership information. The FortiGate sends an LDAP search for group membership of authenticated users to the configure LDAP server.

   FortiGate adds authenticated users to the local FSSO user list only if the group membership is one of the groups in `Group Filter`.
4. If necessary, capture the output of the local FortiGate daemon that polls Windows Security Event logs:

   ```
   # diagnose debug application fssod -1
   ```

This output contains a lot of detailed information which can be captured to a text file.

Limitations

- NTLM based authentication is not supported.
- If there are a large number of user log ins at the same time, the FSSO daemon may miss some. Consider using FSSO agent mode if this will be an issue. See Fabric connectors on page 140 for information.
- The FSSO daemon does not support all of the security log events that are supported by other FSSO scenarios. For example, only Kerberos log in events 4768 and 4769 are supported.

Enabling Active Directory recursive search

By default, nested groups (groups that are members or other groups) are not searched in Windows Active Directory (AD) LDAP servers because this can slow down the group membership search. There is an option in FortiOS to enable the searching of nested groups for user group memberships on AD LDAP servers.



This option is not available for other LDAP servers, such as OpenLDAP-based servers.

The default behavior does not include nested groups:

```
config user ldap
    edit "ldap-ad"
        set server "10.1.100.131"
        set cnid "cn"
        set dn "dc=fortinet-fsso,dc=com"
        set type regular
        set username "cn=Administrator,cn=users,dc=fortinet-fsso,dc=com"
        set password XXXXXXXXXXXXXXXXXXXXXXXX
    next
end
```

The default search results only show groups that have the user as member, and no groups that have groups as members:

```
diagnose test authserver ldap ldap-ad nuser nuser
    authenticate 'nuser' against 'ldap-ad' succeeded!
    Group membership(s) - CN=nested3,OU=Testing,DC=Fortinet-FSSO,DC=COM
                          CN=Domain Users,CN=Users,DC=Fortinet-FSSO,DC=COM
```

To enable recursive search to include nested groups in the results:

```
config user ldap
    edit "ldap-ad"
        set server "10.1.100.131"
        set cnid "cn"
        set dn "dc=fortinet-fsso,dc=com"
        set type regular
        set username "cn=Administrator,cn=users,dc=fortinet-fsso,dc=com"
        set password XXXXXXXXXXXXXXXXXXXXXXXX
        set search-type recursive
```

```
    next
end
```

The search results now include groups that have other groups as members:

```
diagnose test authserver ldap ldap-ad nuser nuser
    authenticate 'nuser' against 'ldap-ad' succeeded!
    Group membership(s) - CN=nested3,OU=Testing,DC=Fortinet-FSSO,DC=COM
                          CN=Domain Users,CN=Users,DC=Fortinet-FSSO,DC=COM
                          CN=nested2,OU=Testing,DC=Fortinet-FSSO,DC=COM
                          CN=nested1,OU=Testing,DC=Fortinet-FSSO,DC=COM
```

The group nested3 is a member of the group nested2, which is a member of the group nested1.

Configuring LDAP dial-in using a member attribute

In this configuration, users defined in Microsoft AD can set up a VPN connection based on an attribute that is set to `TRUE`, instead of their user group. You can activate the *Allow Dialin* property in AD user properties, which sets the `msNPAllowDialin` attribute to *TRUE*. You can use this procedure for other member attributes as your system requires.

This configuration consists of the following steps:

1. Ensure that the AD server has the `msNPAllowDialin` attribute set to *TRUE* for the desired users.
2. Configure user LDAP member attribute settings.
3. Configure LDAP group settings.
4. Ensure that you configured the settings correctly.

To configure user LDAP member attribute settings:

```
config user ldap
   edit "ldap_server"
      set server "192.168.201.3"
      set cnid "sAMAccountName"
      set dn "DC=fortilabanz,DC=com,DC=au"
      set type regular
      set username "fortigate@sample.com"
      set password ******
      set member-attr "msNPAllowDialin"
   next
end
```

To configure LDAP group settings:

```
config user group
   edit "ldap_grp"
      set member "ldap_server"
      config match
         edit 1
            set server-name "ldap_server"
            set group-name "TRUE"
         next
      end
   next
end
```

To ensure that you configured the settings correctly:

Users that are members of the `ldap_grp` user group should be able to authenticate. The following shows sample `diagnose debug` output when the `Allow Dial-in` attribute is set to `TRUE`:

```
get_member_of_groups-Get the memberOf groups.
get_member_of_groups- attr='msNPAllowDialin', found 1 values
get_member_of_groups-val[0]='TRUE'
fnbamd_ldap_get_result-Auth accepted
fnbamd_ldap_get_result-Going to DONE state res=0
fnbamd_auth_poll_ldap-Result for ldap svr 192.168.201.3 is SUCCESS
fnbamd_auth_poll_ldap-Passed group matching
```

If the attribute is not set to `TRUE` but is expected, you may see the following output:

```
get_member_of_groups-Get the memberOf groups.
get_member_of_groups- attr='msNPAllowDialin', found 1 values
get_member_of_groups-val[0]='FALSE'
fnbamd_ldap_get_result-Auth accepted
fnbamd_ldap_get_result-Going to DONE state res=0
fnbamd_auth_poll_ldap-Result for ldap svr 192.168.201.3 is SUCCESS
fnbamd_auth_poll_ldap-Failed group matching
```

The difference between the two outputs is the last line, which shows passed or failed depending on whether the member attribute is set to the expected value.

Configuring wildcard admin accounts

To avoid setting up individual admin accounts in FortiOS, you can configure an admin account with the wildcard option enabled, allowing multiple remote admin accounts to match one local admin account. This way, multiple LDAP admin accounts can use one FortiOS admin account.

Benefits include:

- Fast configuration of the FortiOS admin account to work with your LDAP network, saving effort and avoiding potential errors incurred when setting up multiple admin accounts
- Reduced ongoing maintenance. As long as LDAP users belong to the same group and you do not modify the wildcard admin account in FortiOS, you do not need to configure changes on the LDAP accounts. If you add or remove a user from the LDAP group, you do not need to perform changes in FortiOS.

Potential issues include:

- Multiple users may be logged in to the same account simultaneously. This may cause issues if both users make changes simultaneously.
- Security is reduced since multiple users have login access to the same account, as opposed to an account for each user.

Wildcard admin configuration also applies to RADIUS. If configuring for RADIUS, configure the RADIUS server and RADIUS user group instead of LDAP. When using the GUI, wildcard admin is the only remote admin account that does not require you to enter a password on account creation. That password is normally used when the remote authentication server is unavailable during authentication.

This example uses default values where possible. If a specific value is not mentioned, the example sets it to its default value.



You can configure an admin account in Active Directory for LDAP authentication to allow an admin to perform lookups and reset passwords without being a member of the Account Operators or Domain Administrators built-in groups. See Configuring least privileges for LDAP admin account authentication in Active Directory on page 1458.

To configure the LDAP server:

The important parts of this configuration are the username and group lines. The username is the domain administrator account. The group binding allows only the GRP group access.

This example uses an example domain name. Configure as appropriate for your own network.

```
config user ldap
   edit "ldap_server"
      set server "192.168.201.3"
      set cnid "sAMAccountName"
      set dn "DC=example,DC=com,DC=au"
      set type regular
      set username "CN=Administrator,CN=Users,DC=example,DC=COM”
      set password *
      set group-member-check group-object
      set group-object-filter (&
           (objectcategory=group)member="CN=GRP,OU=training,DC=example,DC=COM"))
   next
end
```

To configure the user group and add the LDAP server:

```
config user group
   edit "ldap_grp"
      set member "ldap_server"
         config match
                 edit 1
                    set server-name "ldap_server"
                    set group-name "CN=GRP,OU=training,DC=example,DC=COM"
                 next
              end
           next
         end
      end
   end
end
```

To configure the wildcard admin account:

```
config system admin
   edit "test"
      set remote-auth enable
      set accprofile "super_admin"
      set wildcard enable
      set remote-group "ldap_grp"
   next
end
```

Configuring least privileges for LDAP admin account authentication in Active Directory

An administrator should only have sufficient privileges for their role. In the case of LDAP admin bind, you can configure an admin account in Active Directory for LDAP authentication to allow an admin to perform lookups and reset passwords without being a member of the Account Operators or Domain Administrators built-in groups.

For information about Active Directory, see the product documentation.

To configure account privileges for LDAP authentication in Active Directory:

1. In the *Active Directory Users and Computers* administrative console, right-click the Organizational Unit (OU) or the top-level domain you want to configure and select *Delegate Control*.
2. In the *Delegation of Control Wizard* dialog, click *Next*.
3. In the *Users or Groups* dialog, click *Add...* and search Active Directory for the users or groups.
4. Click *OK* and then click *Next*.
5. In the *Tasks to Delegate* dialog, select *Create a custom task to delegate* and click *Next*.
6. Select *Only the following objects in the folder* and scroll to the bottom of the list. Select *User objects* and click *Next*.
7. In the *Permissions* dialog, select *General*.
8. From the *Permissions* list, select the following:
   - *Change password*
   - *Reset password*
9. Clear the *General* checkbox and select *Property-specific*.
10. From the *Permissions* list, select the following:
    - *Write lockoutTime*
    - *Read lockoutTime*
    - *Write pwdLastSet*
    - *Read pwdLastSet*
    - *Write UserAccountControl*
    - *Read UserAccountControl*
11. Click *Next* and click *Finish*.

RADIUS Servers


Configuring RADIUS SSO authentication

A common RADIUS SSO (RSSO) topology involves a medium-sized company network of users connecting to the Internet through the FortiGate and authenticating with a RADIUS server. The following describes how to configure FortiOS for this scenario. The example makes the following assumptions:

- VDOMs are not enabled.
- The super_admin account is used for all FortiGate configuration.
- A RADIUS server is installed on a server or FortiAuthenticator and uses default attributes.
- BGP is used for any dynamic routing.
- You have configured authentication event logging under *Log & Report*.

Example.com has an office with 20 users on the internal network who need access to the Internet. The office network is protected by a FortiGate-60C with access to the Internet through the wan1 interface, the user network on the internal interface, and all servers are on the DMZ interface. This includes an Ubuntu sever running FreeRADIUS. This example configures two users:

User	Account
Pat Lee	plee@example.com
Kelly Green	kgreen@example.com

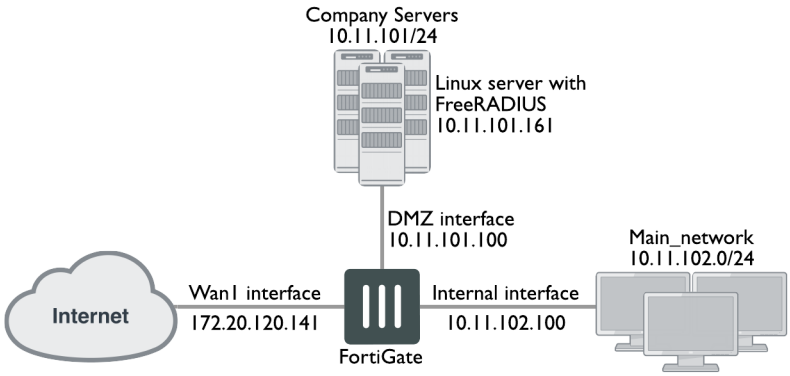

Configuring this example consists of the following steps:

1. Configure RADIUS.
2. Configure FortiGate interfaces.
3. Configure a RSSO agent.
4. Create a RSSO user group.
5. Configure security policies.
6. Test the configuration.

To configure RADIUS:

Configuring RADIUS includes configuring a RADIUS server such as FreeRADIUS on user's computers and configuring users in the system. In this example, Pat and Kelly belong to the exampledotcom_employees group. After completing the configuration, you must start the RADIUS daemon. The users have a RADIUS client installed on their PCs that allow them to authenticate through the RADIUS server.

For any problems installing FreeRADIUS, see the FreeRADIUS documentation.

To configure FortiGate interfaces:

You must define a DHCP server for the internal network, as this network type typically uses DHCP. The wan1 and dmz interfaces are assigned static IP addresses and do not need a DHCP server. The following table shows the FortiGate interfaces used in this example:

Interface	Subnet	Act as DHCP server	Devices
wan1	172.20.120.141	No	Internet service provider
dmz	10.11.101.100	No	Servers including

Interface	Subnet	Act as DHCP server	Devices
			RADIUS server
internal	10.11.102.100	Yes: x.x.x.110-250	Internal user network

1. Go to *Network* > *Interfaces*.
2. Edit wan1:

Alias	Internet
Addressing Mode	Manual
IP/Network Mask	172.20.120.141/255.255.255.0
Administrative Access	HTTPS, SSH
Enable DHCP Server	Not selected
Comments	Internet
Administrative Status	Up

3. Click *OK*.
4. Edit dmz:

Alias	Servers
Addressing Mode	Manual
IP/Network Mask	10.11.101.100/255.255.255.0
Administrative Access	HTTPS, SSH, PING, SNMP
Enable DHCP Server	Not selected
Listen for RADIUS Accounting Messages	Select
Comments	Servers
Administrative Status	Up

5. Click *OK*.
6. Edit internal:

Alias	Internal network
Addressing Mode	Manual
IP/Network Mask	10.11.102.100/255.255.255.0
Administrative Access	HTTPS, SSH, PING
Enable DHCP Server	Select
Address Range	10.11.102.110 - 10.11.102.250
Netmask	255.255.255.0

Default Gateway	Same as Interface IP
Comments	Internal network
Administrative Status	Up

To create a RADIUS SSO agent:

1. Go to *Security Fabric* > *Fabric Connectors*.
2. Click *Create New*.
3. Under *SSO/Identity*, select *RADIUS Single Sign-On Agent*.
4. Enable *Use RADIUS Shared Secret*. Enter the RADIUS server's shared secret.
5. Enable *Send RADIUS Responses*. Click *OK*.

To create a RADIUS SSO user group:

1. Go to *User & Device* > *User Groups*.
2. Click *Create New*.
3. For *Type*, select *RADIUS Single Sign-On (RSSO)*.
4. In *RADIUS Attribute Value*, enter the name of the RADIUS user group that this local user group represents.
5. Click *OK*.

Configuring security policies

The following security policies are required for RADIUS SSO:

Sequence Number	From	To	Type	Schedule	Description
1	internal	wan1	RADIUS SSO	Business hours	Authenticate outgoing user traffic
2	internal	wan1	Regular	Always	Allow essential network services and VoIP
3	dmz	wan1	Regular	Always	Allow servers to access the Internet
4	internal	dmz	Regular	Always	Allow users to access servers
5	any	any	Deny	Always	Implicit policy denying all traffic that has not been matched

You must place the RADIUS SSO policy at the top of the policy list so that it is matched first. The only exception to this is if you have a policy to deny access to a list of banned users. In this case, you must put that policy at the top so that the RADIUS SSO does not mistakenly match a banned user or IP address.

You must configure lists before creating security policies.

Schedule

You must configure a business_hours schedule. You can configure a standard Monday to Friday 8 AM to 5 PM schedule, or whatever days and hours covers standard work hours at the company.

Address groups

You must configure the following address groups:

Name	Interface	Address range included
internal_network	internal	10.11.102.110 to 10.11.102.250
company_servers	dmz	10.11.101.110 to 10.11.101.250

Service groups

You must configure the service groups. The services listed are suggestions and you may include more or less as required:

Name	Interface	Description of services to be included
essential_network_services	internal	Any network protocols required for normal network operation such as DNS, NTP, BGP
essential_server_services	dmz	All the protocols required by the company servers such as BGP, HTTP, HTTPS, FTP, IMAP, POP3, SMTP, IKE, SQL, MYSQL, NTP, TRACEROUTE, SOCKs, and SNMP
user_services	internal	Any protocols required by users such as HTTP, HTTPS, FTP

The following security policy configurations are basic and only include logging and default AV and IPS. These policies allow or deny access to non-RADIUS SSO traffic. These are essential as network services including DNS, NTP, and FortiGuard require access to the Internet.

To configure security policies:

1. Go to *Policy & Objects* > *IPv4 Policy*.
2. Click *Create New*.
3. Configure the policy as follows, then click *OK*:

Incoming Interface	Internal
Source Address	internal_network
Outgoing Interface	wan1
Destination Address	all
Schedule	always

Service	essential_network_services
Action	ACCEPT
NAT	ON
Security Profiles	ON: AntiVirus, IPS
Log Allowed Traffic	ON
Comments	Essential network services

4. Click *Create New*, and configure the new policy as follows, then click *OK*:

Incoming Interface	dmz
Source Address	company_servers
Outgoing Interface	wan1
Destination Address	all
Schedule	always
Service	essential_server_services
Action	ACCEPT
NAT	ON
Security Profiles	ON: AntiVirus, IPS
Log Allowed Traffic	enable
Comments	Company servers accessing the Internet

5. Click *Create New*, and configure the new policy as follows, then click *OK*:

Incoming Interface	Internal
Source Address	internal_network
Outgoing Interface	dmz
Destination Address	company_servers
Schedule	always
Service	all
Action	ACCEPT
NAT	ON
Security Profiles	ON: AntiVirus, IPS
Log Allowed Traffic	enable
Comments	Access company servers

6. Click *Create New*, and configure the RADIUS SSO policy as follows, then click *OK*. This policy allows access for members of specific RADIUS groups.


Incoming Interface	Internal
Source Address	internal_network
Source User(s)	Select the user groups that you created for RSSO.
Outgoing Interface	wan1
Destination Address	all
Schedule	business_hours
Service	ALL
Action	ACCEPT
NAT	ON
Security Profiles	ON: AntiVirus, Web Filter, IPS, and Email Filter. In each case, select the default profile.

7. Place the RSSO policy higher in the security policy list than more general policies for the same interfaces. Click *OK*.

To test the configuration:

Once configured, a user only needs to log in to their PC using their RADIUS account. After that, when they attempt to access the Internet, the FortiGate uses their session information to get their RADIUS information. Once the user is verified, they can access the website.

1. The user logs on to their PC and tries to access the Internet.
2. The FortiGate contacts the RADIUS server for the user's information. Once confirmed, the user can access the Internet. Each step generates logs that enable you to verify that each step succeeded.
3. If a step does not succeed, confirm that your configuration is correct.

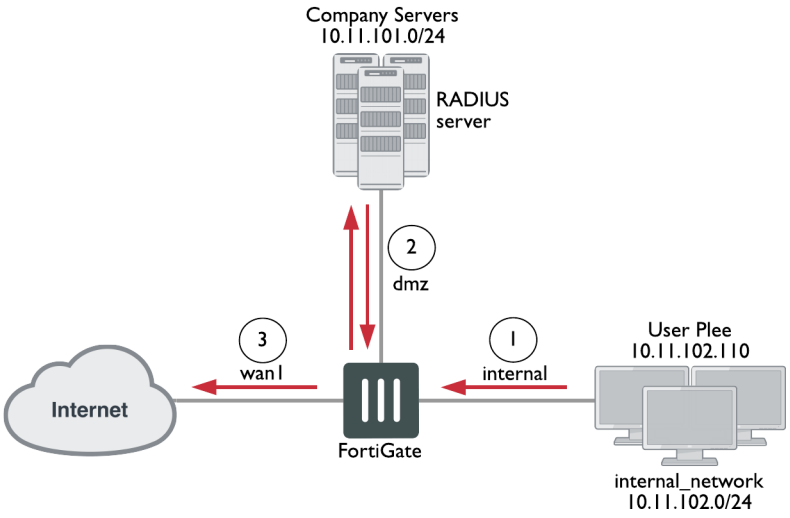

RSA ACE (SecurID) servers

SecurID is a two-factor system produced by the company RSA that uses one-time password (OTP) authentication. This system consists of the following:

- Portable tokens that users carry
- RSA ACE/Server
- Agent host (the FortiGate)

When using SecurID, users carry a small device or "token" that generates and displays a pseudo-random password. According to RSA, each SecurID authenticator token has a unique 64-bit symmetric key that is combined with a powerful algorithm to generate a new code every 60 seconds. The token is time-synchronized with the SecurID RSA ACE/Server.

The RSA ACE/Server is the SecurID system's management component. It stores and validates the information about the SecurID tokens allowed on your network. Alternately, the server can be an RSA SecurID 130 appliance.

The agent host is the server on your network. In this case, this is the FortiGate, which intercepts user logon attempts. The agent host gathers the user ID and password entered from the SecurID token and sends the information to the RSA ACE/Server for validation. If valid, the RSA ACE/Server returns a reply indicating that it is a valid logon and FortiOS allows the user access to the network resources specified in the associated security policy.

Configuring SecurID with FortiOS consists of the following:

1. Configure the RSA and RADIUS servers to work with each other. See RSA server documentation.
2. Do one of the following:
   a. Configure the RSA SecurID 130 appliance.
   b. Configure the FortiGate as an agent host on the RSA ACE/Server.
3. Configure the RADIUS server in FortiOS.
4. Create a SecurID user group.
5. Create a SecurID user.
6. Configure authentication with SecurID.

The following instructions are based on RSA ACE/Server 5.1 and RSA SecurID 130 appliance. They assume that you have successfully completed all external RSA and RADIUS server configuration.

In this example, the RSA server is on the internal network and has an IP address of 192.128.100.000. The FortiOS internal interface address is 192.168.100.3. The RADIUS shared secret is fortinet123, and the RADIUS server is at IP address 192.168.100.202.

To configure the RSA SecurID 130 appliance:

1. Log on to the SecurID IMS console.
2. Go to *RADIUS* > *RADIUS clients*, then select *Add New*.

Setting	Description
RADIUS Client Basics	
Client Name	FortiGate
Associated RSA Agent	FortiGate
RADIUS Client Settings	
IP Address	Enter the FortiOS internal interface. In this example, it is 192.168.100.3.
Make / Model	Select *Standard Radius*.
Shared Secret	Enter the RADIUS shared secret. In this example, it is fortinet123.

Setting	Description
Accounting	Leave unselected.
Client Status	Leave unselected.

3. Configure your FortiGate as a SecurID client:
4. Click *Save*.

To configure the FortiGate as an agent host on the RSA ACE/Server:

1. On the RSA ACE/Server, go to *Start* > *Programs* > *RSA ACE/Server*, then *Database Administration - Host Mode*.
2. From the *Agent Host* menu, select *Add Agent Host*.
3. Configure the following:

Setting	Description
Name	FortiGate
Network Address	Enter the FortiOS internal interface. In this example, it is 192.168.100.3.
Secondary Nodes	You can optionally enter other IP addresses that resolve to the FortiGate.

For more information, see the RSA ACE/Server documentation.

To configure the RADIUS server in FortiOS:

1. Go to *User & Device* > *RADIUS Servers*, then click *Create New*.
2. Configure the following:

Setting	Description
Name	RSA
Authentication method	Select *Default*.
Primary Server	
IP/Name	192.168.100.102. You can click *Test* to ensure the IP address is correct and that FortiOS can contact the RADIUS server.
Secret	fortinet123

3. Click *OK*.

To create a SecurID user group:

1. Go to *User & Device* > *User Groups*. Click *Create New*.
2. Configure the following:

Setting	Description
Name	RSA_group
Type	Firewall

3. In *Remote Groups*, click *Add*, then select the RSA server.
4. Click *OK*.

To create a SecurID user:

1. Go to *User & Device* > *User Definition*. Click *Create New*.
2. Configure the following:

Setting	Description
User Type	Remote RADIUS User
Type	wloman
RADIUS Server	RSA
Contact Info	(Optional) Enter email or SMS information.
User Group	RSA_group

3. Click *Create*.

You can test the configuration by entering the `diagnose test authserver radius RSA auto wloman 11111111` command. The series of 1s is the OTP that your RSA SecurID token generates that you enter for access.

Configuring authentication with SecurID

You can use the SecurID user group in several FortiOS features that authenticate by user group:

- Security policy on page 1467
- IPsec VPN XAuth on page 1468
- PPTP VPN on page 1468
- SSL VPN

Unless stated otherwise, the following examples use default values.

Security policy

The example creates a security policy that allows HTTP, FTP, and POP3 traffic from the internal interface to WAN1. If these interfaces are not available in FortiOS, substitute other similar interfaces.

To configure a security policy with SecurID authentication:

1. Go to *Policy & Objects* > *IPv4 Policy*.
2. Click *Create New*.

3. Configure the following:

Setting	Description
Incoming Interface	internal
Source Address	all
Source User(s)	RSA_group
Outgoing Interface	wan1
Destination Address	all
Schedule	always
Service	HTTP, FTP, POP3
Action	ACCEPT
NAT	On
Shared Shaper	If you want to limit traffic or guarantee minimum bandwidth for traffic that uses the SecurID security policy, enable and use the default shaper, guarantee-100kbps.
Log Allowed Traffic	Enable if you want to generate usage reports on traffic that this policy has authenticated.

4. Click *OK*.

IPsec VPN XAuth

In *VPN* > *IPsec Wizard*, select the SecurID user group on the *Authentication* page. The SecurID user group members must enter their SecurID code to authenticate.

PPTP VPN

When configuring PPTP in the CLI, set `usrgrp` to the SecurID user group.

SSL VPN

You must map the SecurID user group to the portal that will serve SecurID users and include the SecurID user group in the security policy's *Source User(s)* field.

To map the SecurID group to an SSL VPN portal:

1. Go to *VPN* > *SSL-VPN Settings*.
2. Under *Authentication/Portal Mapping*, click *Create New*.

3. Configure the following:

Setting	Description
Users/Groups	RSA_group
Portal	Select the desired portal.

4. Click *OK*.

TACACS+ Servers

TACACS+ is a remote authentication protocol that provides access control for routers, network access servers, and other network devices through one or more centralized servers.

FortiOS sends the following proprietary TACACS+ attributes to the TACACS+ server during authorization requests:

Attribute	Description
`service=<name>`	User must be authorized to access the specified service.
`memberof`	Group that the user belongs to.
`admin_prof`	Administrator profile (admin access only).



Only `memberof` and `admin_prof` attributes are parsed in authentication replies.

You can configure up to ten remote TACACS+ servers in FortiOS. You must configure at least one server before you can configure remote users.



A TACACS+ server must first be added in the CLI to make the option visible in the GUI.

To configure TACACS+ authentication in the CLI:

1. Configure the TACACS+ server entry:

```
config user tacacs+
    edit "TACACS-SERVER"
        set server <IP address>
        set key <string>
        set authen-type ascii
        set source-ip <IP address>
    next
end
```

2. Configure the remote user group:

```
config user group
    edit "TACACS-GROUP"
        set group-type firewall
        set member "TACACS-SERVER"
    next
end
```

3. Configure the remote user:

```
config system admin
    edit TACACS-USER
        set remote-auth enable
        set accprofile "super_admin"
        set vdom "root"
        set wildcard enable
        set remote-group "TACACS-GROUP"
    next
end
```

To configure a TACACS+ server in the GUI:

1. Go to *User & Device* > *TACACS+ Servers*.
2. Click *Create New*.
3. Configure the following settings:

Name	Enter the TACACS+ server name.
Authentication Type	Select the authentication type used for the TACACS+ server. Selecting *Auto* tries PAP, MSCHAP, and CHAP, in that order.
Server IP/Name	Enter the domain name or IP address for the primary server.
Server Secret	Enter the key to access the primary server.

4. Click *OK*.

Authentication Settings

You can configure general authentication settings, including timeout, protocol support, and certificates.



You cannot customize FTP and Telnet authentication replacement messages.

To configure authentication settings using the GUI:

1. Go to *User & Device* > *Authentication Settings*.
2. Configure the following settings:

Setting	Description
Authentication Timeout	Enter the desired timeout in minutes. You can enter a number between 1 and 1440 (24 hours). The authentication timeout controls how long an authenticated connection can be idle before the user must reauthenticate. The default value is 5.
Protocol Support	Select the protocols to challenge during firewall user authentication. When you enable user authentication within a security policy, the authentication challenge is normally issued for any of four protocols, depending on the connection protocol: • HTTP (you can set this to redirect to HTTPS) • HTTPS • FTP • Telnet The protocols selected here control which protocols support the authentication challenge. Users must connect with a supported protocol first so they can subsequently connect with other protocols. If HTTPS is selected as a protocol support method, it allows the user to authenticate with a customized local certificate. When you enable user authentication within a security policy, FortiOS challenges the security policy user to authenticate. For user ID and password authentication, the user must provide their username and password. For certificate authentication (HTTPS or HTTP redirected to HTTPS only), you can install customized certificates on the unit and the user can also install customized certificates on their browser. Otherwise, users see a warning message and must accept a default Fortinet certificate. The network user's web browser may deem the default certificate invalid.
Certificate	If using HTTPS protocol support, select the local certificate to use for authentication. This is available only if *HTTPS* and/or *Redirect HTTP Challenge to a Secure Channel (HTTPS)* are selected.

To configure authentication settings using the CLI:

```
config user setting
   set auth-timeout 5
   set auth-type ftp http https telnet
   set auth-cert Fortinet_Factory
end
```

FortiTokens

FortiTokens are security tokens used as part of a multi-factor authentication (MFA) system on FortiGate and FortiAuthenticator. A security token is a 6-digit or 8-digit (configurable) one-time password (OTP) that is used to authenticate one's identity electronically as a prerequisite for accessing network resources. FortiToken is available as either a mobile or a physical (hard) token. Mobile tokens can be purchased as a license, or consumed with points as part of the FortiToken Cloud service.

FortiToken Mobile and physical FortiTokens store their encryption seeds on the cloud. FortiToken Mobile seeds are generated dynamically when the token is provisioned. They are always encrypted whether in motion or at rest.

You can only register FortiTokens to a single FortiGate or FortiAuthenticator for security purposes. This prevents malicious third parties from making fraudulent requests to hijack your FortiTokens by registering them on another FortiGate or FortiAuthenticator. If re-registering a FortiToken Mobile or Hard Token on another FortiGate is required, you must contact Fortinet Customer Support.

Common usage for FortiTokens includes:

- Applying MFA to a VPN dialup user connecting to the corporate network
- Applying MFA to FortiGate administrators
- Applying MFA to firewall authentication and captive portal authentication

---



The MFA process commonly involves:

- **Something you know**: User password
- **Something you have**: The FortiToken OTP

A third factor of authentication is added to the authentication process:

- **Something you are**: Your fingerprint or face


To enable the third factor, refer to the Activating FortiToken Mobile on a Mobile Phone on page 1477 section.

The following illustrates the FortiToken MFA process:

1. The user attempts to access a network resource.
2. FortiOS matches the traffic to an authentication security policy and prompts the user for their username and password.
3. The user enters their username and password.
4. FortiOS verifies their credentials. If valid, it prompts the user for the FortiToken code.
5. The user views the current code on their FortiToken. They enter the code at the prompt.
6. FortiOS verifies the FortiToken code. If valid, it allows the user access to network resources.

If the FortiToken has drifted, the following must take place for the FortiToken to resynchronize with FortiOS:

1. FortiOS prompts the user to enter a second code to confirm.
2. The user gets the next code from the FortiToken. They enter the code at the prompt.
3. FortiOS uses both codes to update its clock to match the FortiToken.

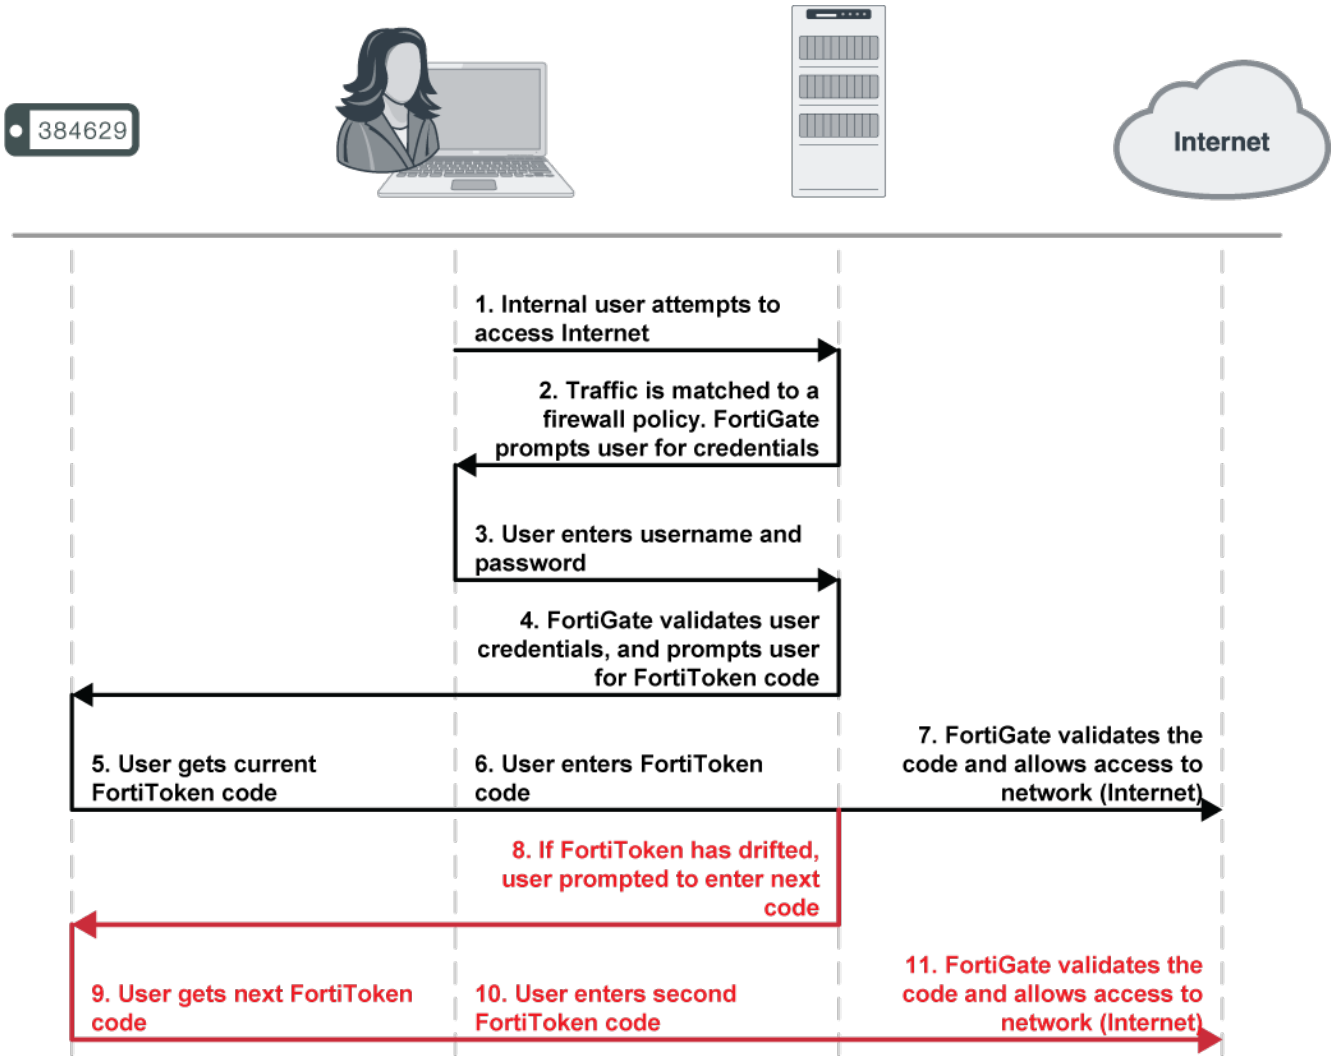

This section includes the following topics to quickly get started with FortiTokens:

- FortiToken Mobile Quick Start Guide on page 1473
- FortiToken Cloud on page 1484
- Registering hard tokens on page 1485
- Managing FortiTokens on page 1487
- FortiToken Mobile Push on page 1489
- Troubleshooting and diagnosis on page 1491

FortiToken Mobile Quick Start Guide

FortiToken Mobile is an OATH compliant, event- and time-based one-time password (OTP) generator for mobile devices. It provides an easy and flexible way to deploy and provision FortiTokens to your end users through mobile devices. FortiToken Mobile produces its OTP codes in an application that you can download onto your Android or iOS mobile device without the need for a physical token.

You can download the free FortiToken Mobile application for Android from the Google Play Store, and for iOS from the Apple App Store.

This section focuses on quickly getting started and setting up FortiToken Mobile for use on a FortiGate:

- Registering FortiToken Mobile on page 1474
- Provisioning FortiToken Mobile on page 1475
- Activating FortiToken Mobile on a Mobile Phone on page 1477
- Applying Multi-Factor Authentication on page 1484

Registering FortiToken Mobile

To deploy FortiToken Mobile for your end users, you must first register the tokens on your FortiGate. After registering the tokens, you can assign them to your end users.

Each FortiGate comes with two free FortiToken Mobile tokens. These tokens should appear under *User & Device* > *FortiTokens*. If no tokens appear, you may import them. Ensure that your FortiGate is registered and has internet access to connect to the FortiToken servers to import the tokens.

To import FortiTokens from the FortiGate GUI:

1. Go to *User & Device* > *FortiTokens*.
2. Click the *Import Free Trial Tokens* icon at the top. The two free tokens are imported.

To import FortiTokens from the FortiGate CLI:

```
# exec fortitoken-mobile import 0000-0000-0000-0000-0000
# show user fortitoken
```



If only one free token appears, you can first delete that token and then follow the procedure to import the two free tokens from either the GUI or the CLI.

If you have the FortiToken Mobile redemption certificate, you can register FortiToken Mobile on a FortiGate.

To register FortiToken Mobile from the FortiGate GUI:

1. Go to *User & Device* > *FortiTokens* and click *Create New*. The *New FortiToken* dialog appears.
2. For the *Type* field, select *Mobile Token*.
3. Locate the 20-digit code on the redemption certificate and type it in the *Activation Code* field.
4. Click *OK*. The token is successfully registered.



If you attempt to add invalid FortiToken serial numbers, there is no error message. FortiOS does not add invalid serial numbers to the list.

To register FortiToken Mobile from the FortiGate CLI:

```
# exec fortitoken-mobile import <20-digit activation code>
# show user fortitoken
```


FortiToken Mobile stores its encryption seeds on the cloud. You can only register it to a single FortiGate or FortiAuthenticator.

Provisioning FortiToken Mobile


Once registered, FortiTokens need to be provisioned for users before they can be activated. In this example, you will provision a Mobile token for a local user. Similar steps can be taken to assign FortiTokens to other types of users.

To create a local user and assign a FortiToken in the FortiGate GUI:


1. Go to *User & Device* > *User Definition*, and click *Create New*. The *Users/Groups Creation Wizard* appears.
2. In the *User Type* tab, select *Local User*, and click *Next*.

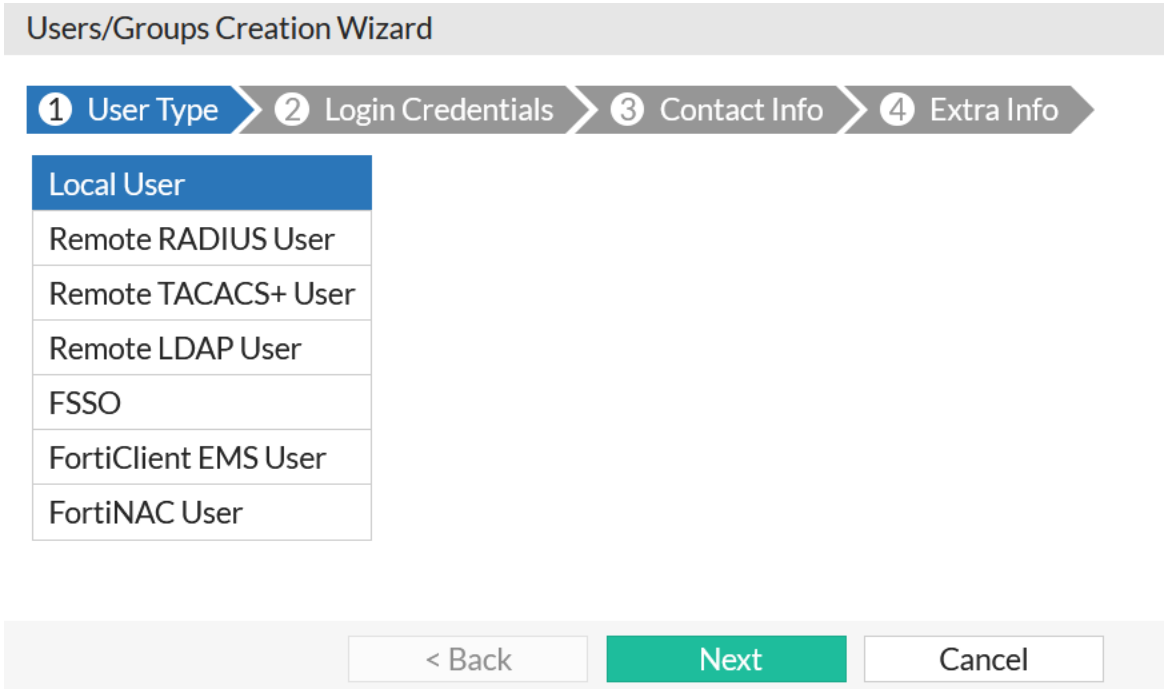


3. In the *Login Credentials* tab, enter a *Username* and *Password* for the user, and click *Next*.

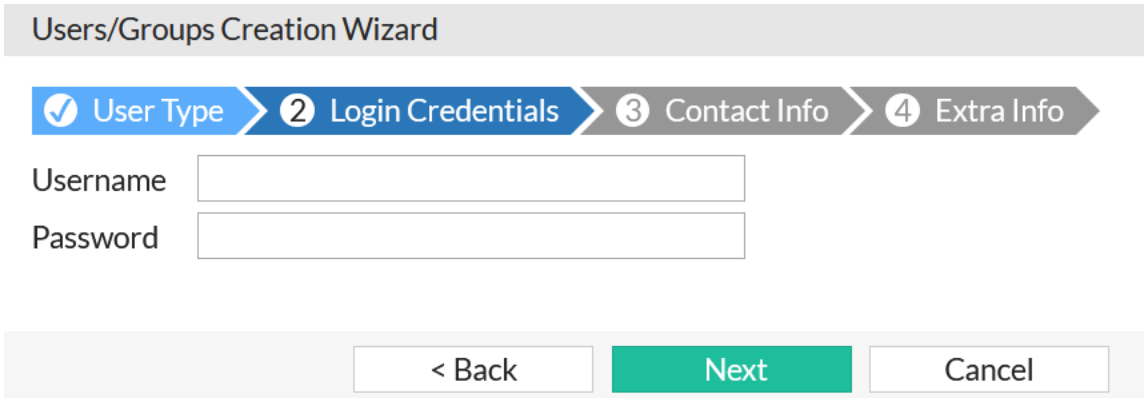

4. In the *Contact Info* tab:
   a. Enter the user's email address in the *Email Address* field. This is the email where the user will receive the QR code for activation of the FortiToken.
   b. Enable the *Two-factor Authentication* toggle.
   c. Select *FortiToken* for *Authentication Type*.
   d. Select a *Token* to assign to the user from the drop-down list.
   e. Click *Next*.

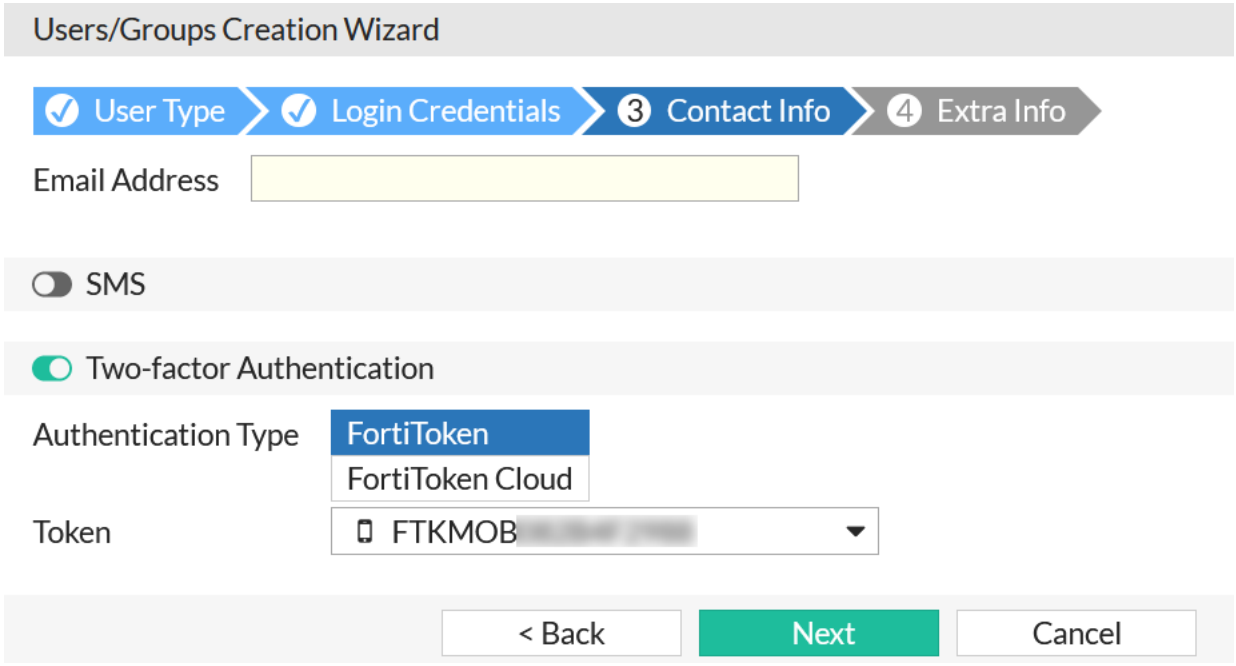

5. In the *Extra Info* tab, make sure the *User Account Status* field is set to Enabled. You can also optionally assign the user to a user group by enabling the *User Group* toggle.

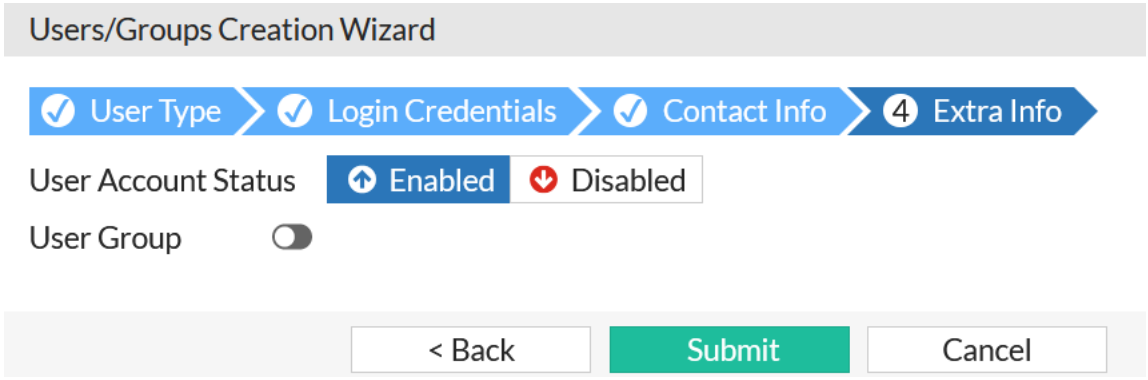

6. Click *Submit*. An activation code should be sent to the created user by email or SMS, depending upon the delivery method configured above.

FortiGate has the *Email Service* setting configured using the server *notifications.fortinet.net* by default. To see configuration, go to *System* > *Settings* > *Email Service*.

The activation code expires if not activated within the 3-day time period by default. However, the expiry time period is configurable.

To configure the time period (in hours) for FortiToken Mobile, using the CLI:

```
config system global
   set two-factor-ftm-expiry <1-168>
end
```



To resend the email or SMS with the activation code, refer to the Managing FortiTokens on page 1487 section.

Activating FortiToken Mobile on a Mobile Phone

After your system administrator provisions your token, you receive a notification with an activation code and expiry date via SMS or email. If you do not activate your token by the expiry date, you must contact your system administrator so that they can reassign your token for activation.

Platforms that support FortiToken Mobile:

Platform	Device and firmware support
iOS	iPhone, iPad, and iPod Touch with iOS 6.0 and later.
Android	Phones and tablets with Android Jellybean 4.1 and later.
Windows	Windows 10 (desktop and mobile), Windows Phone 8.1, and Windows Phone 8.  FortiToken is a Windows Universal Platform (UWP) application. To download FortiToken for Windows 10 desktop and mobile platforms, see FortiToken for Windows on the Microsoft Store.

The following instructions describe procedures when using FortiToken Mobile for iOS on an iPhone. Procedures may vary depending on your device and firmware.

To activate FortiToken Mobile on iOS:


1. On your iOS device, tap on the FortiToken application icon to open the application. If this is your first time opening the application, it may prompt you to create a PIN for secure access to the application and tokens.




2. Tap on the + icon. The *Scan Barcode* screen appears.




3. If you received the QR code via email, locate and scan the QR code in your email.
OR
If you received the activation key via SMS, tap on *Enter Manually* at the bottom of the screen, and tap on *Fortinet*.

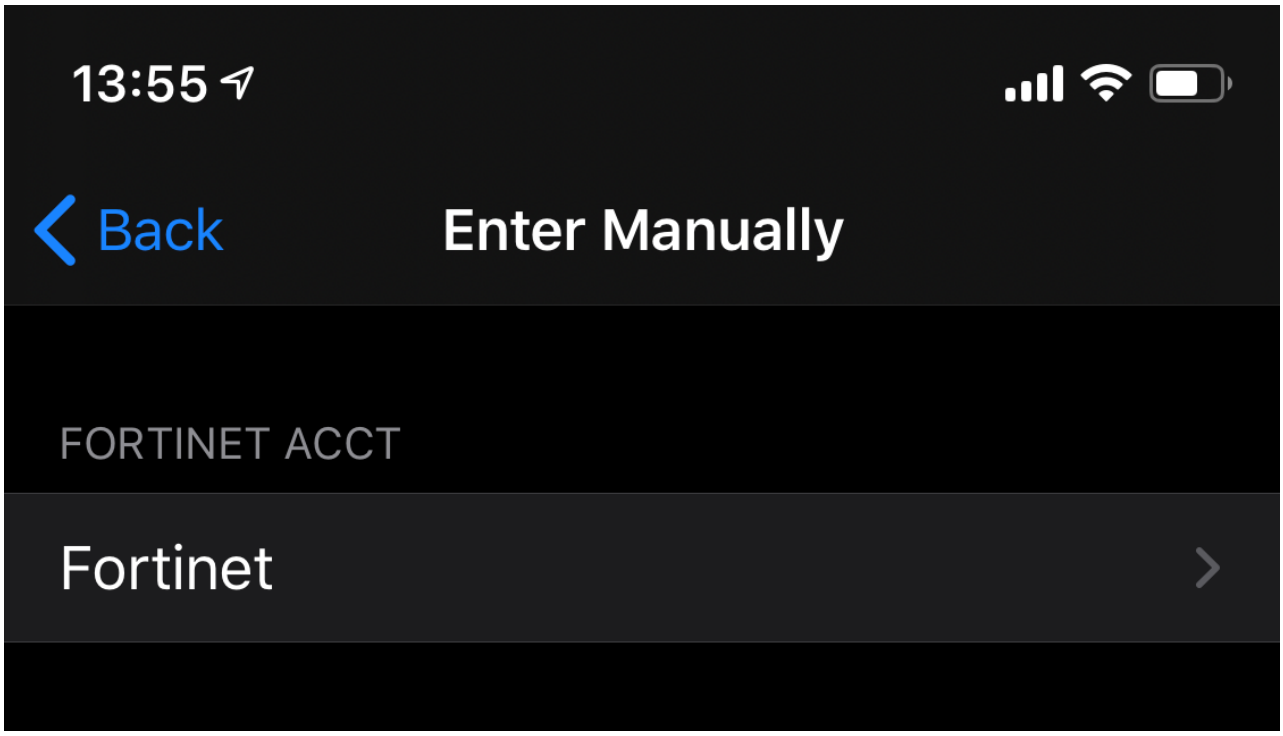

Enter your email address in the *Name* field, the activation key in the *Key* field, and tap *Done*.

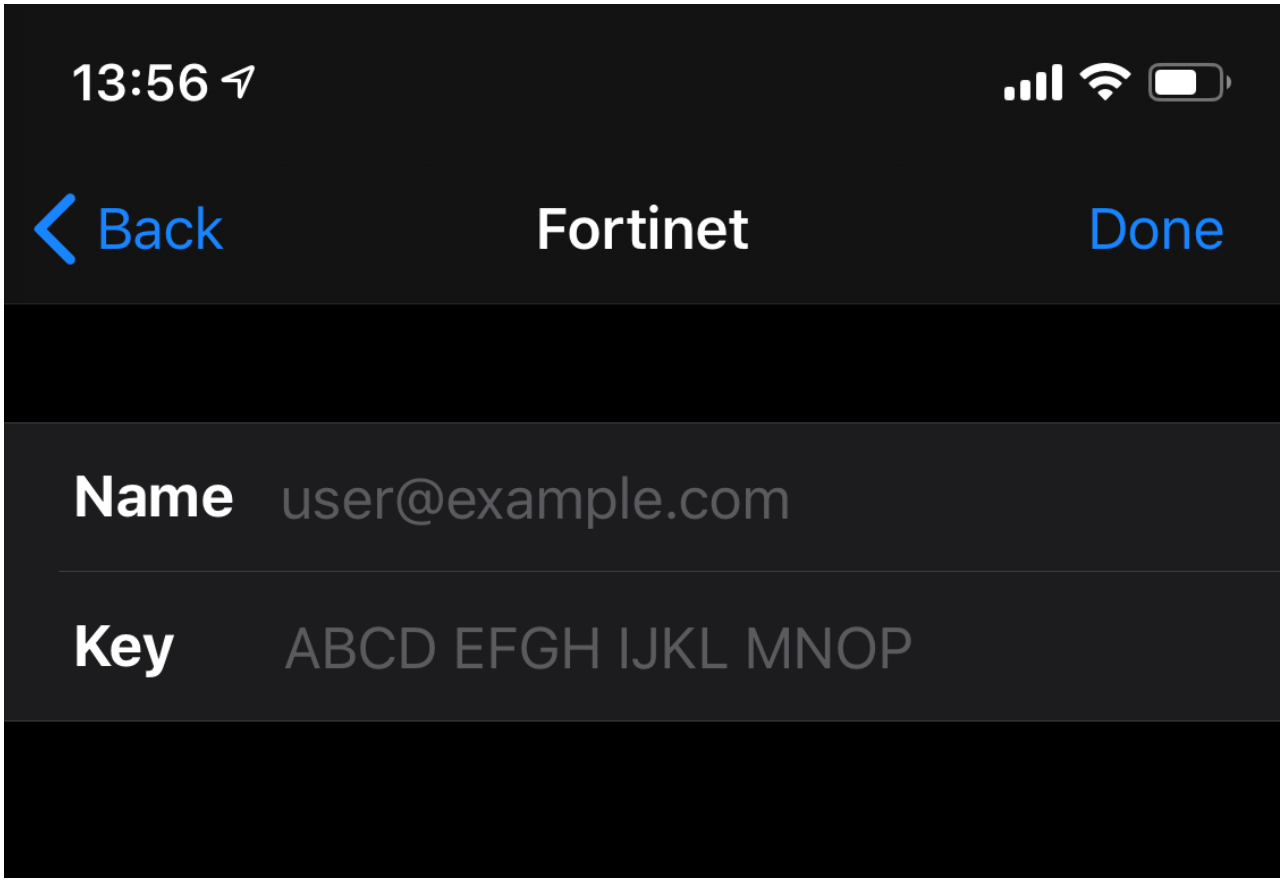

4. FortiToken Mobile activates your token, and starts generating OTP digits immediately. To view or hide the OTP digits, tap the eye icon.

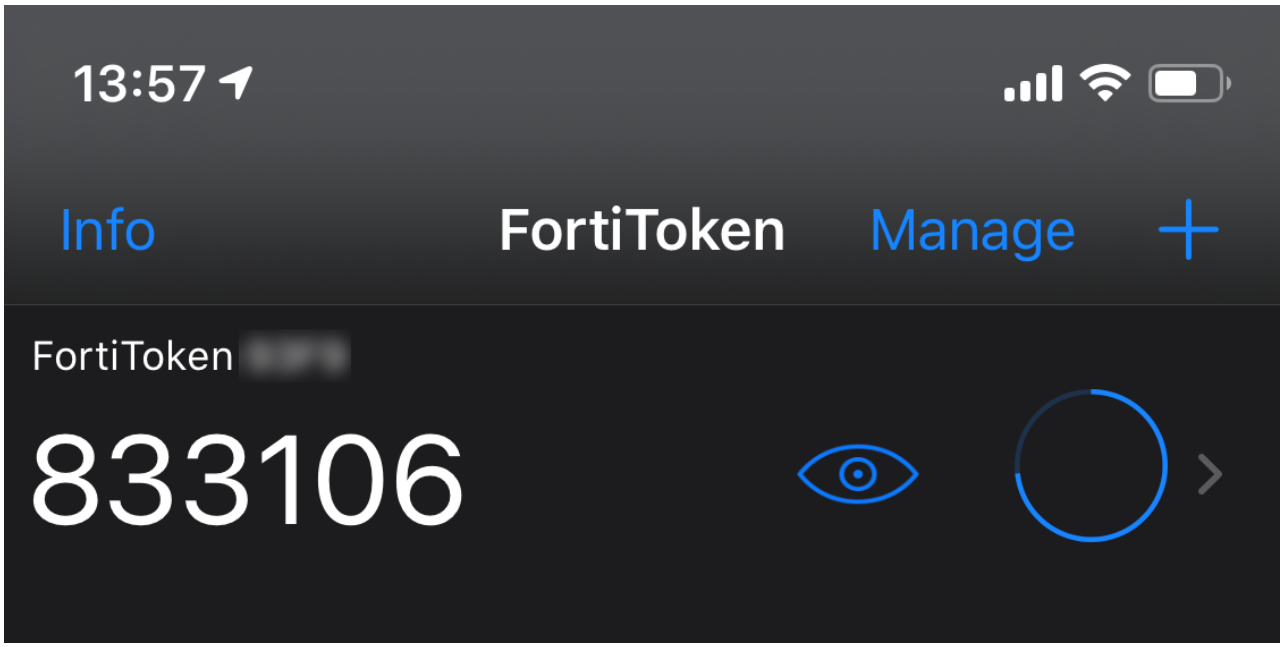

After you open the application, FortiToken Mobile generates a new 6-digit OTP every 30 seconds. All configured tokens display on the application homescreen.


The FortiToken Mobile activation process described above caters to the MFA process that involves two factors (password and OTP) of the authentication process. A third factor (fingerprint or face) can be enabled as well.

To enable *Touch/Face ID* on iOS for FortiToken Mobile:


1. Open the FortiToken application and tap on *Info*.




2. Tap on *Touch/Face ID & PIN*.

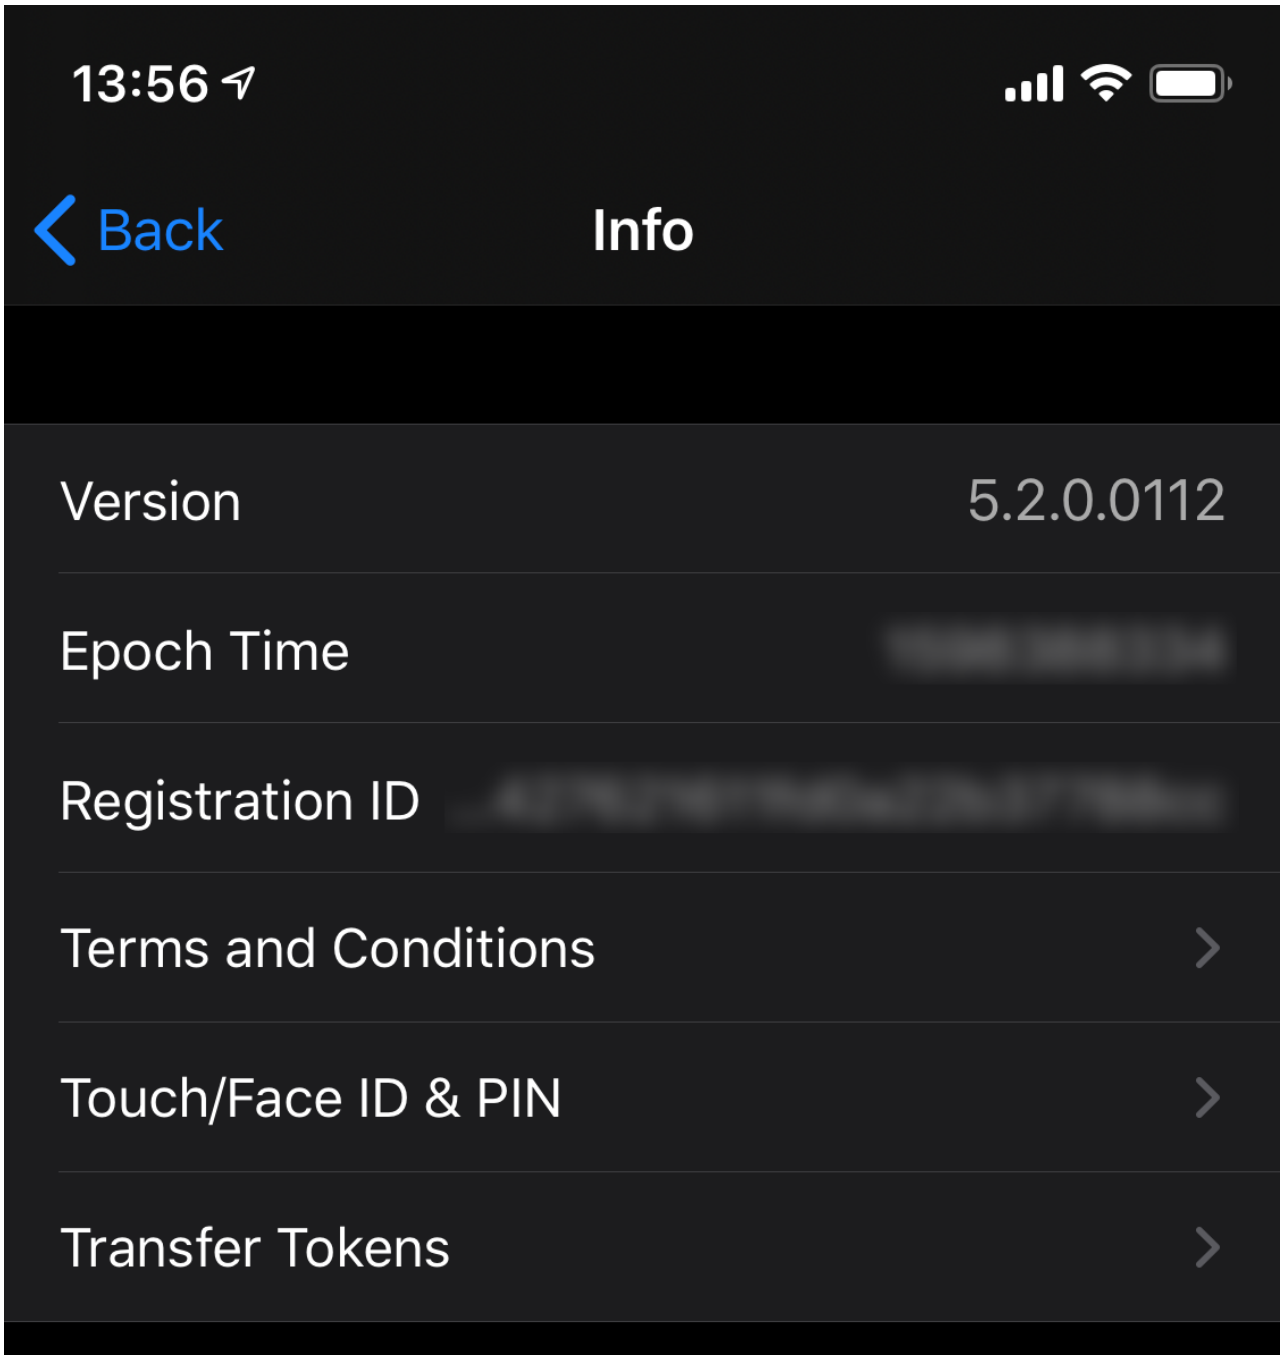

3. Enable and set up a 4-digit *PIN* for the application. The *PIN* is required to be enabled before you can enable *Touch/Face ID*.

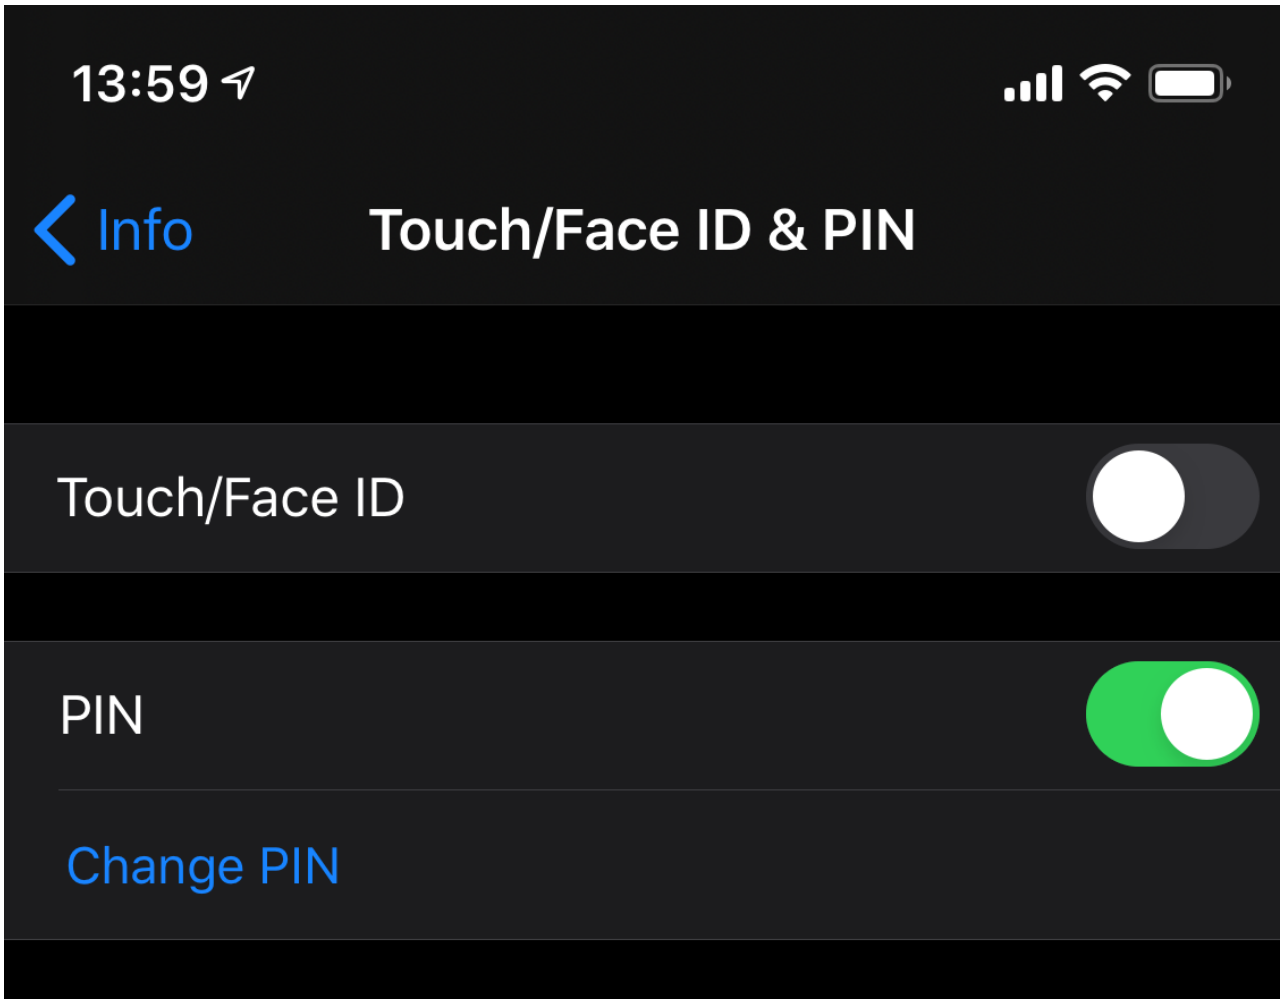

13:59
Info
Touch/Face ID & PIN
Touch/Face ID
PIN
Change PIN

4. Enable *Touch/Face ID*.

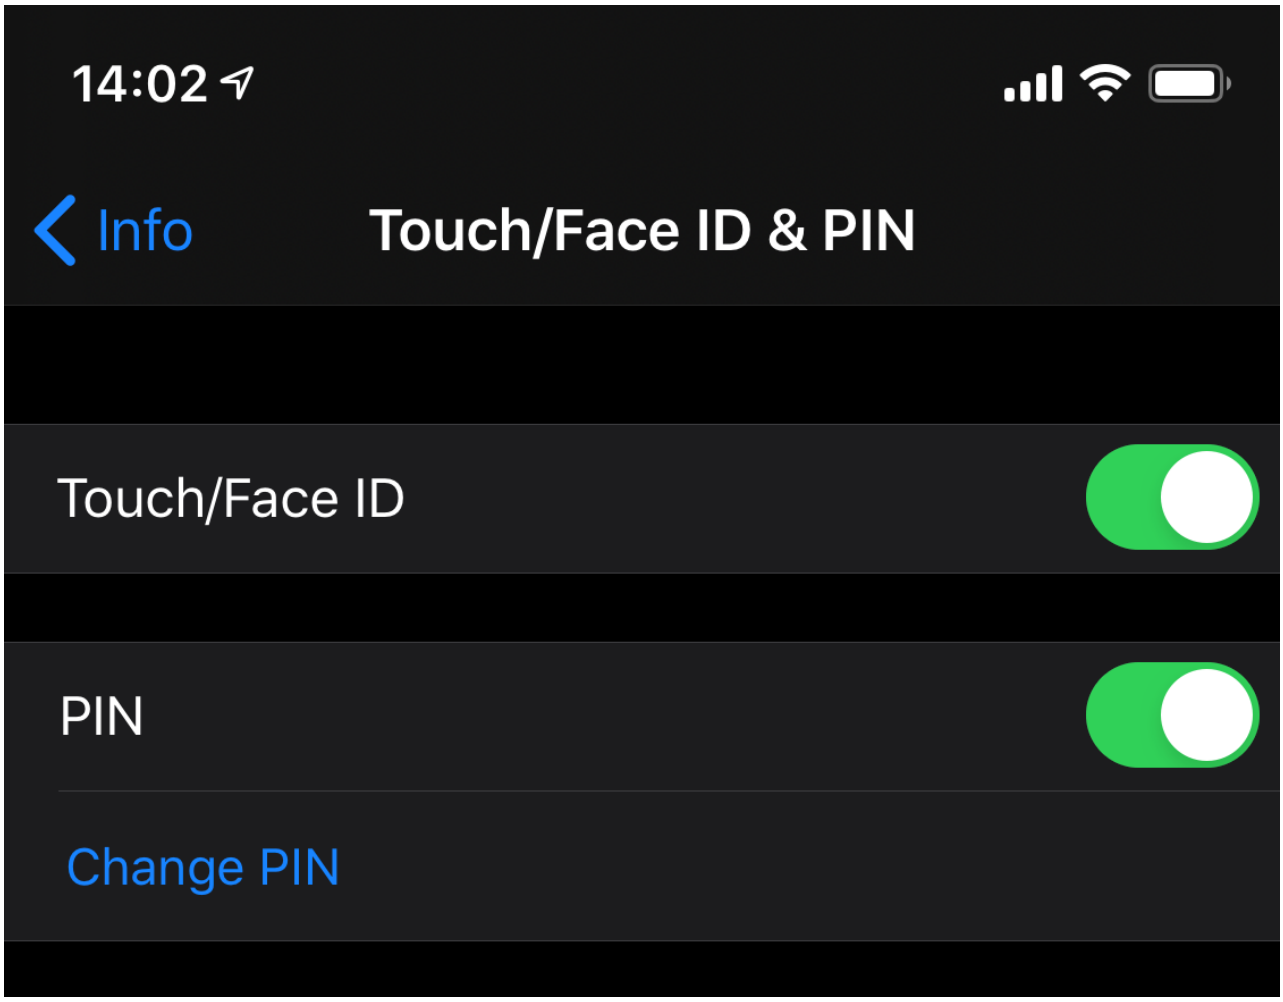

You cannot enable *Touch/Face ID* for FortiToken if *Touch/Face ID* is not set up and enabled for device unlock (*iPhone Unlock* in this case) on iOS. You must first set up and enable *Touch/Face ID* from *Settings* on your iOS device.

5. When prompted by iOS, allow the FortiToken application to use *Touch/Face ID* by tapping on *OK* in the prompt.

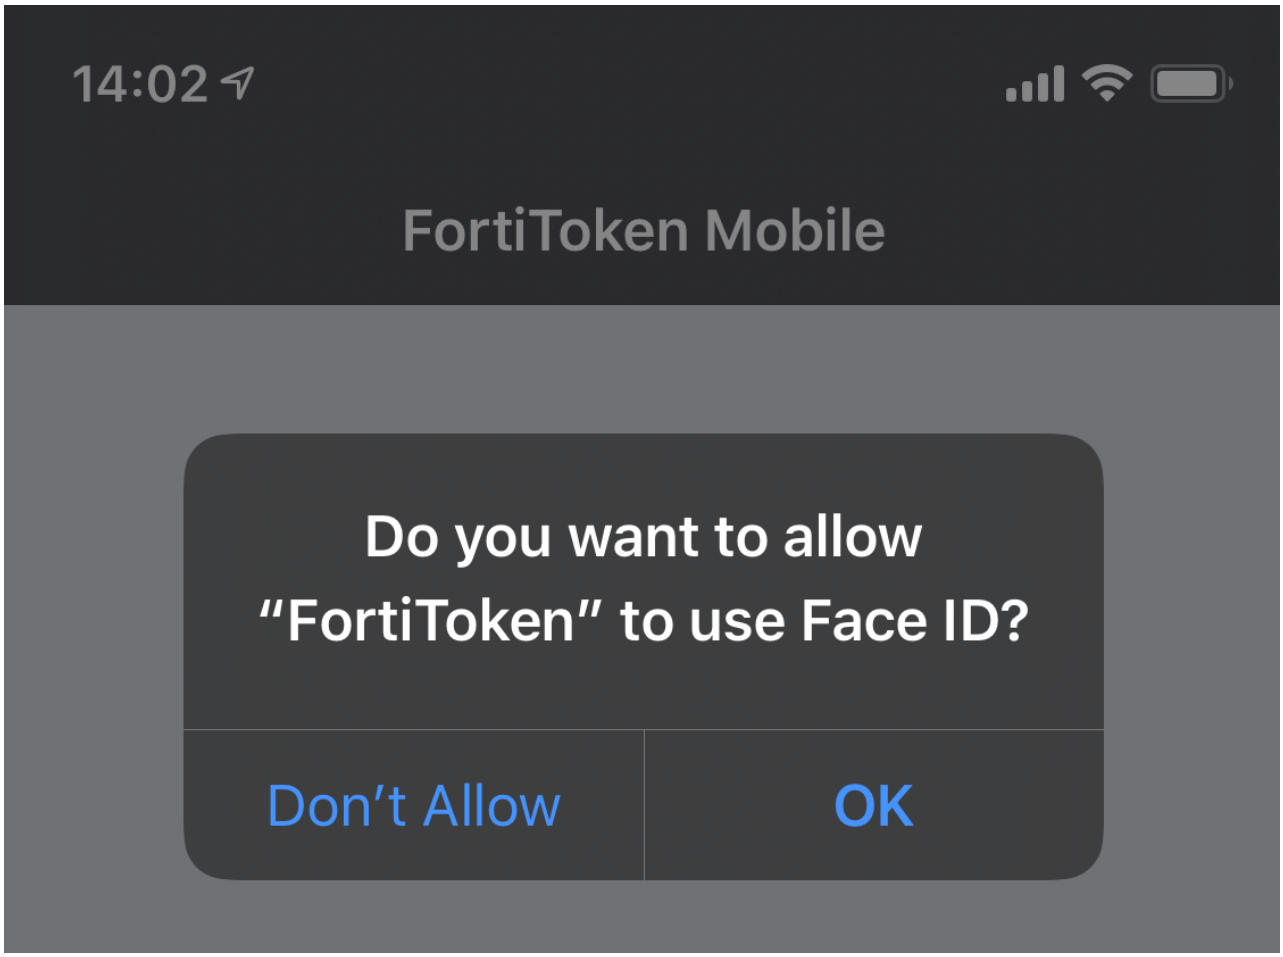

Applying Multi-Factor Authentication

Multi-factor authentication may also be set up for SSL VPN users, administrators, firewall policy, wireless users, and so on. The following topics explain more about how you may use the newly created user in such scenarios:

- MFA for SSL VPN: Set up FortiToken multi-factor authentication on page 1316
- MFA for IPsec VPN: Add FortiToken multi-factor authentication on page 1157
- MFA for Administrators: Associating a FortiToken to an administrator account on page 625
- MFA with Captive Portal
- MFA for wireless users via Captive Portal
- Configuring firewall authentication on page 1495

FortiToken Cloud

FortiToken Cloud is an Identity and Access Management as a Service (IDaaS) cloud service offering by Fortinet. It enables FortiGate and FortiAuthenticator customers to add MFA for their respective users, through the use of Mobile tokens or Hard tokens. It protects local and remote administrators as well as firewall and VPN users.

For information, see Getting started—FGT-FTC users in the FortiToken Cloud Administration Guide.

Registering hard tokens

Registering FortiTokens consists of the following steps:

1. Adding FortiTokens to FortiOS.
2. Activating FortiTokens.
3. Associating FortiTokens with user accounts.


Adding FortiTokens to FortiOS

You can add FortiTokens to FortiOS in the following ways:

- Add FortiToken serial numbers using the GUI
- Add FortiToken serial numbers using the CLI
- Import FortiTokens using a serial number or seed file using the GUI

To manually add single hard token to FortiOS using the GUI:

1. Go to *User & Device* > *FortiTokens*.
2. Click *Create New*.
3. For *Type*, select *Hard Token*.
4. In the *Serial Number* field, enter one or more FortiToken serial numbers.
5. Click *OK*.

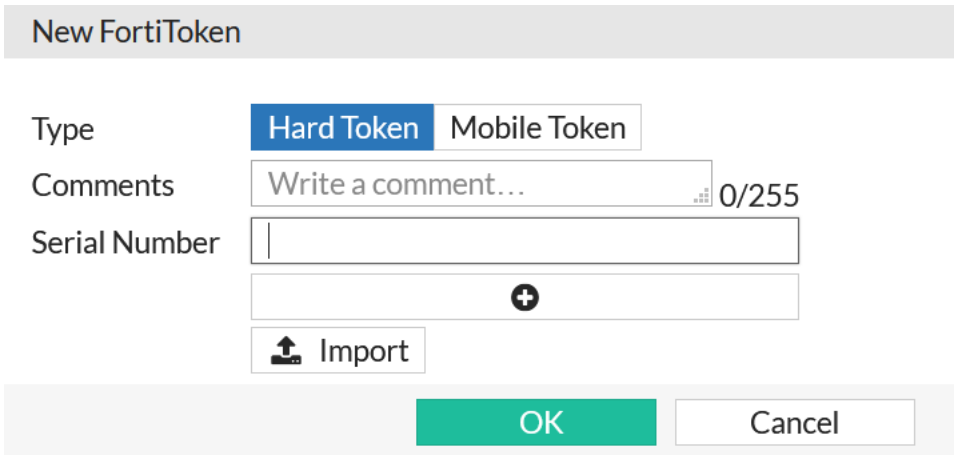


To add multiple FortiTokens to FortiOS using the CLI:

```
config user fortitoken
   edit <serial_number>
   next
   edit <serial_number2>
   next
end
```

To import multiple FortiTokens to FortiOS using the GUI:

1. Go to *User & Device* > *FortiTokens*.
2. Click *Create New*.

3. For *Type*, select *Hard Token*.
4. Click *Import*. The *Import Tokens* section slides in on the screen.

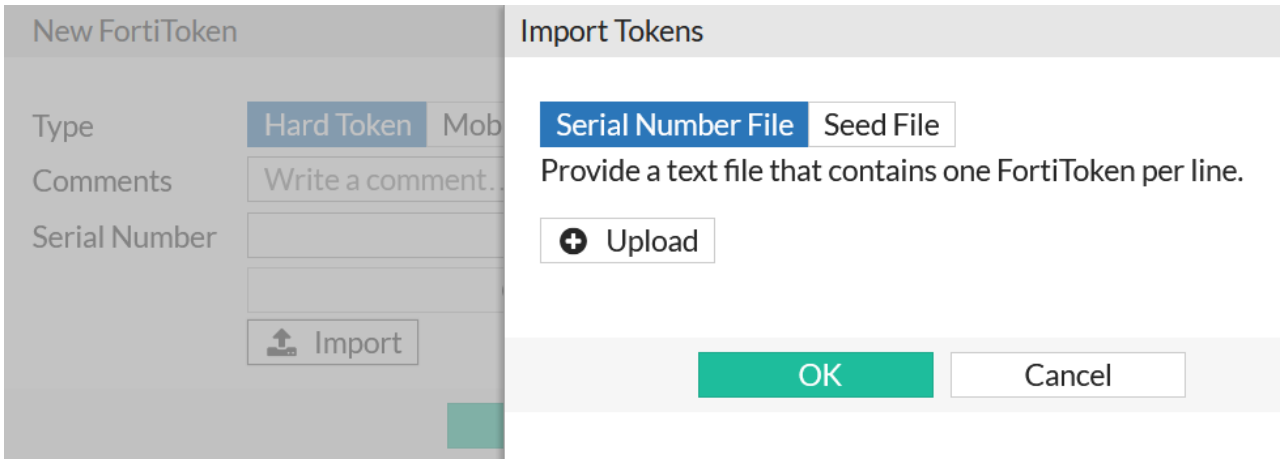

5. Select *Serial Number File*.

Seed files are only used with FortiToken-200CD. These are special hardware tokens that come with FortiToken seeds on a CD. See the FortiToken Comprehensive Guide for details.

6. Click *Upload*.
7. Browse to the file's location on your local machine, select the file, then click *OK*.
8. Click *OK*.

Activating FortiTokens

You must activate the FortiTokens before starting to use them. FortiOS requires connection to FortiGuard servers for FortiToken activation. During activation, FortiOS queries FortiGuard servers about each token's validity. Each token can only be used on a single FortiGate or FortiAuthenticator. If tokens are already registered, they are deemed invalid for re-activation on another device. FortiOS encrypts the serial number and information before sending for added security.

To activate a FortiToken using the GUI:

1. Go to *User & Device* > *FortiTokens*.
2. Select the desired FortiTokens that have an *Available* status.
3. Click *Activate* from the menu above.
4. Click *Refresh*. The selected FortiTokens are activated.

To activate a FortiToken using the CLI:

```
config user fortitoken
   edit <token_serial_num>
      set status activate
   next
end
```

Associating FortiTokens with user accounts

You can associate FortiTokens with local user or administrator accounts.

To associate a FortiToken to a local user account using the GUI:

1. Ensure that you have successfully added your FortiToken serial number to FortiOS and that its status is *Available*.
2. Go to *User & Device* > *User Definition*. Edit the desired user account.
3. In the *Email Address* field, enter the user's email address.
4. Enable *Two-factor Authentication*.
5. From the *Token* dropdown list, select the desired FortiToken serial number.
6. Click *OK*.

To associate a FortiToken to a local user account using the CLI:

```
config user local
   edit <username>
      set type password
      set passwd "myPassword"
      set two-factor fortitoken
      set fortitoken <serial_number>
      set email-to "username@example.com"
      set status enable
   next
end
```



Before you can use a new FortiToken, you may need to synchronize it due to clock drift.

To associate a FortiToken to an administrator account, refer to the Associating a FortiToken to an administrator account on page 625 section.

Managing FortiTokens

This section focuses on the following:

- Resending an activation email on page 1487
- Locking/unlocking FortiTokens on page 1488
- Managing FortiTokens drift on page 1488
- Deactivating FortiTokens on page 1489
- Moving FortiTokens to another device on page 1489

Resending an activation email

To resend an activation email/SMS for a mobile token on a FortiGate:

1. Go to *User & Device* > *User Definition*.
2. Double-click on the user to edit.

3. Click *Send Activation Code Email* from the *Two-factor Authentication* section.

Locking/unlocking FortiTokens

To change FortiToken status to active or to lock using the CLI:

```
config user fortitoken
   edit <token_serial_num>
      set status <active | lock>
   next
end
```

A user attempting to log in using a locked FortiToken cannot successfully authenticate.

Managing drift

Managing FortiTokens drift

If the FortiToken has drifted, the following must take place for the FortiToken to resynchronize with FortiOS:

1. FortiOS prompts the user to enter a second code to confirm.
2. The user gets the next code from the FortiToken. They enter the code at the prompt.
3. FortiOS uses both codes to update its clock to match the FortiToken.

If you still experience clock drift, it may be the result of incorrect time settings on your mobile device. If so, make sure that the mobile device clock is accurate by confirming the network time and the correct timezone.

If the device clock is set correctly, the issue could be the result of the FortiGate and FortiTokens being initialized prior to setting an NTP server. This will result in a time difference that is too large to correct with the synchronize function. To avoid this, selected Tokens can be manually drift adjusted.

To show current drift and status for each FortiToken from the CLI:

```
diagnose fortitoken info
FORTITOKEN DRIFT STATUS
FTK200XXXXXXXXXC 0 token already activated, and seed won't be returned
FTK200XXXXXXXXXE 0 token already activated, and seed won't be returned
FTKMOBXXXXXXXXXA 0 provisioned
FTKMOBXXXXXXXXX4 0 new
Total activated token: 0
Total global activated token: 0
Token server status: reachable
```

This command lists the serial number and drift for each configured FortiToken. You can check if it is necessary to synchronize the FortiGate and any particular FortiTokens.

To adjust Mobile FortiToken for drift from the CLI:

```
exec fortitoken sync <FortiToken_ID> <token_code1> <next_token_code2>
```

Deactivating FortiTokens

To deactivate FortiToken on a FortiGate:

1. Go to *User & Device* > *User Definition*.
2. Select and edit the user for which you want to deactivate the token.
3. Disable the *Two-factor Authentication* toggle.
4. Click *OK*. The token will be removed from the user's *Two-factor Authentication* column. The user will also be removed from the token's *User* column under *User & Device* > *FortiTokens*.

Moving FortiTokens to another device

FortiTokens can only be activated on a single FortiGate or FortiAuthenticator. To move FortiTokens to another device, you would first have to reset the registered FortiTokens on a device and then reactivate them on another device.

To reset Hard tokens registered to a FortiGate appliance (non-VM model), you can reset all hardware FTK200 tokens from the Support Portal, or during RMA transfer. See the Migrating users and FortiTokens to another FortiGate KB article, for more information.



The above process will reset all Hard tokens and you cannot select individual tokens to reset.

To reset FortiToken Mobile, a single Hard token, a Hard token registered to a VM, and so on, an administrator must contact Customer Support and/or open a ticket on the Support Portal.

Once reset, the FortiTokens can be activated on another FortiGate or FortiAuthenticator.


FortiToken Mobile Push

FortiToken Mobile Push allows authentication requests to be sent as push notifications to the end user's FortiToken Mobile application.

The FortiToken Mobile push service operates as follows:

1. FortiGate sends a notification request by making a TLS connection with either Apple (for iOS) or Google (for Android) notification servers. Notification data may include the recipient, session, FortiGate callback IP and port, and so on.
2. The notification service from either Apple or Google notifies the user's mobile device of the push request.
3. The FortiToken Mobile application on the user's mobile displays a prompt for the user to either *Approve* or *Deny* the

request.

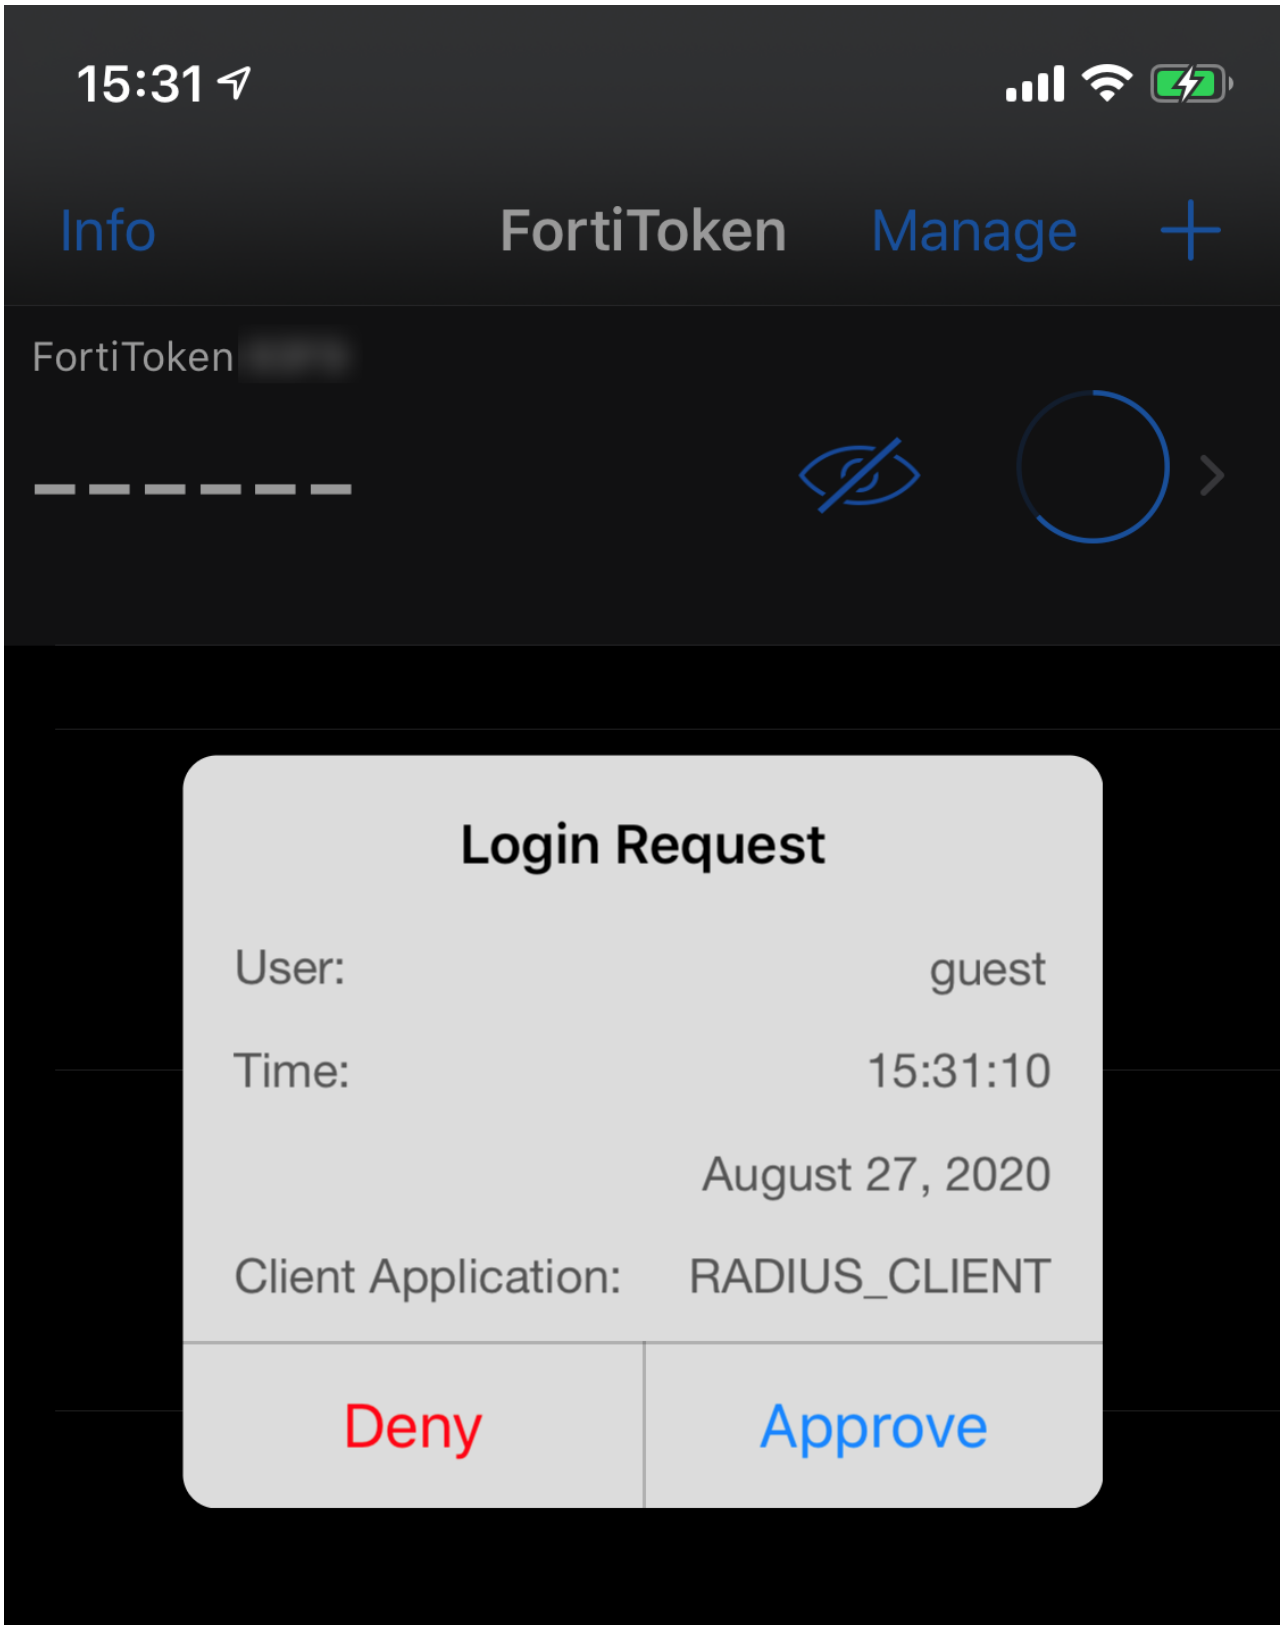
15:31
Info
FortiToken
Manage
FortiToken
Login Request
User:
guest
Time:
15:31:10
August 27, 2020
Client Application:
RADIUS_CLIENT
Deny
Approve

To configure FortiToken Mobile push services using the CLI:

```
config system ftm-push
   set status enable
   set server-ip <ip-address>
   set server-port [1-65535]
end
```

The default server port is `4433`.

The server IP address is the public IP address of the FortiOS interface that FortiToken Mobile calls back to. FortiOS uses this IP address for incoming FortiToken Mobile calls.

If an SSL VPN user authenticates with their token, then logs out and attempts to reauthenticate within a minute, a *Please wait `x` seconds to login again* message displays. This replaces a previous error/permission denied message. The `x` value depends on the calculation of how much time is left in the current time step.

```
config system interface
   edit "guest"
      set allowaccess ftm
   next
end
```



FortiOS supports FortiAuthenticator-initiated FortiToken Mobile Push notifications for users attempting to authenticate through an SSL VPN and/or RADIUS server (with FortiAuthenticator as the RADIUS server).

Troubleshooting and diagnosis

This section contains some common scenarios for FortiTokens troubleshooting and diagnosis:

- FortiToken Statuses on page 1491
- Recovering trial FortiTokens on page 1492
- Recovering lost Administrator FortiTokens on page 1493
- SSL VPN with multi-factor authentication expiry timers on page 1494

FortiToken Statuses

When troubleshooting FortiToken issues, it is important to understand different FortiToken statuses. FortiToken status may be retrieved either from the CLI or the GUI, with a slightly different naming convention.

Before you begin, verify that the FortiGate has Internet connectivity and is also connected to both the FortiGuard and registration servers:

```
# exec ping fds1.fortinet.com
# exec ping directregistration.fortinet.com
# exec ping globalftm.fortinet.net
```



The `globalftm.fortinet.net` server is the Fortinet Anycast server added in FortiOS 6.4.2.

If there are connectivity issues, retrieving FortiToken statuses or performing FortiToken activation could fail. Therefore, troubleshoot connectivity issues before continuing.

To retrieve FortiToken statuses:

- From the CLI:
  ```
  # diagnose fortitoken info
  ```
- From the GUI:
  Go to *User & Authentication* > *FortiTokens*.

Various FortiToken statuses in either the CLI or the GUI may be described as follows:

CLI	GUI	Description
`new`	*Available*	Newly added, not pending, not activated, not yet assigned.
`active`	*Assigned*	Assigned to a user, hardware token.
`provisioning`	*Pending*	Assigned to a user and waiting for activation on the FortiToken Mobile app.
`provisioned`	*Assigned*	Assigned to user and activated on the FortiToken Mobile app.
`provision timeout`		Token provided to user but not activated on the FortiToken Mobile app. To fix, the token needs to be re-provisioned and activated in time.
`token already activated, and seed won't be returned`	*Error*	Token is locked by FortiGuard FDS. The hardware token was already activated on another device and locked by FDS.
`locked`		Either manually locked by an Administrator (`set status lock`), or locked automatically, for example, when the token is unassigned and the FortiCare FTM provisioning server was unreachable to process that change.

Recovering trial FortiTokens

You can recover trial FortiTokens if deleted from a FortiGate, or if stuck in a state where it is not possible to provision to a user.

When a token is stuck in an unusual state or with errors, delete the FortiTokens from the unit and proceed to recover trial FortiTokens.

To recover trial tokens via the GUI:

1. Go to *User & Authentication* > *FortiTokens*.
2. Click the *Import Free Trial Tokens* button at the top. The two free trial tokens are recovered.

To recover trial tokens via the CLI:

```
# execute fortitoken-mobile import 0000-0000-0000-0000-0000
```



- Before attempting to recover the trial tokens, both the tokens should be deleted from the unit first.
- If VDOMs are enabled, trial tokens are in the management VDOM (`root` by default).

Following error codes might come up in the CLI:

- If the device is not registered:
```
# exec fortitoken-mobile import 0000-0000-0000-0000-0000
import fortitoken license error: -7571
```
- If the serial number format is incorrect:
```
# exec fortitoken-mobile import 0000-0000-0000-0000-00
import fortitoken license error: -7566
```

Recovering lost Administrator FortiTokens

If an Administrator loses their FortiToken or the FortiToken is not working, they will not be able to log into the admin console through the GUI or the CLI. If there is another Administrator that can log into the device, they may be able to reset the two-factor settings configured for the first Administrator, or create a new Admin user for them. Note that a *super_admin* user will be able to edit other admin user settings, but a *prof_admin* user will not be able to edit *super_admin* settings.

In the case where there are no other administrators configured, the only option is to flash format the device and reload a backup config file. You must have console access to the device in order to format and flash the device. It is recommended to be physically on site to perform this operation.



The process of resetting an Admin user password using the maintainer account cannot be used to reset or disable two-factor authentication.

Before formatting the device, verify that you have a backup config file. You may or may not have the latest config file backed up, though you should consider using a backed up config file, and reconfigure the rest of the recent changes manually. Otherwise, you may need to configure your device starting from the default factory settings.

To recover lost Administrator FortiTokens:

1. If you have a backed up config file:
   a. Open the config file and search for the specific admin user. For representational purposes we will use `Test` in our example.
```
# edit "Test"
   set accprofile "super_admin"
   set vdom "root"
   set two-factor fortitoken
   set fortitoken "FTKXXXXXXXXXX"
   set email-to "admin@email.com"
   set password ENC
        SH2BsE7VSvHKynpoY1nOupdfaefe/n+JaPrCMPFADY2U5kLUPnZwuitOpNz35YI=
   next
end
```
   b. Once you find the settings for the `Test` user, delete the `fortitoken`-related settings:
```
# edit "Test"
   set accprofile "super_admin"
   set vdom "root"
   set password ENC
        SH2BsE7VSvHKynpoY1nOupdfaefe/n+JaPrCMPFADY2U5kLUPnZwuitOpNz35YI=
   next
end
```

2. Format the boot device during a maintenance window and reload the firmware image using instructions in the Formatting and loading FortiGate firmware image using TFTP KB article.
3. Once the reload is complete, log into the admin console from the GUI using the default admin user credentials, and go to *Configuration* > *Restore* from the top right corner to reload your config file created in Step 1 above.
4. Once the FortiGate reboots and your configuration is restored, you can log in with your admin user credentials.

SSL VPN with multi-factor authentication expiry timers

When SSL VPN is configured with multi-factor authentication (MFA), sometimes you may require a longer token expiry time than the default 60 seconds.

To configure token expiry timers using the CLI:

```
# config system global
   set two-factor-ftk-expiry <number of seconds>
   set two-factor-ftm-expiry <number of seconds>
   set two-factor-sms-expiry <number of seconds>
   set two-factor-fac-expiry <number of seconds>
   set two-factor-email-expiry <number of seconds>
end
```

These timers apply to the tokens themselves and remain valid for as long as configured above. However, SSL VPN does not necessarily accept tokens for the entire duration they are valid. To ensure SSLVPN accepts the token for longer durations, you need to configure the remote authentication timeout setting accordingly.

To configure the remote authentication timeout:

```
# config system global
   set remoteauthtimeout <1-300 seconds>
end
```

SSL VPN waits for a maximum of five minutes for a valid token code to be provided before closing down the connection, even if the token code is valid for longer.



The `remoteauthtimout` setting shows how long SSL VPN waits not only for a valid token to be provided before closing down the connection, but also for other remote authentication like LDAP, RADIUS, and so on.

Configuring the maximum log in attempts and lockout period

Failed log in attempts can indicate malicious attempts to gain access to your network. To prevent this security risk, you can limit the number of failed log in attempts. After the configured maximum number of failed log in attempts is reached, access to the account is blocked for the configured lockout period.

To configure number of maximum log in attempts:

This example sets the maximum number of log in attempts to five.

```
config user setting
   set auth-lockout-threshold 5
```

```
end
```

To configure the lockout period in seconds:

This example sets the lockout period to five minutes (300 seconds).

```
config user setting
   set auth-lockout-duration 300
end
```

Creating a PKI/peer user

A PKI/peer user is a digital certificate holder. A FortiOS PKI user account contains the information required to determine which CA certificate to use to validate the user's certificate. You can include a peer user in a firewall user group or peer certificate group used in IPsec VPN.

To define a peer user, you need the following:


- Peer username
- Text from the user's certificate's subject field, or the name of the CA certificate used to validate the user's certificate

To create a peer user for PKI authentication:

```
config user peer
   edit peer1
      set subject peer1@mail.example.com
      set ca CA_Cert_1
   next
end
```

You can add or modify other configuration settings for PKI authentication, including configuring using an LDAP server to check client certificate access rights. See the *FortiOS CLI Reference*.

Configuring firewall authentication

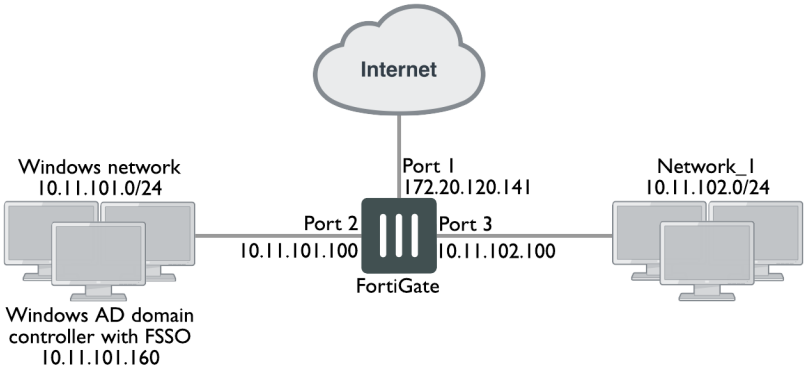

In this example, a Windows network is connected to the FortiGate on port 2, and another LAN, Network_1, is connected on port 3.

All Windows network users authenticate when they log on to their network. Engineering and Sales groups members can access the Internet without reentering their authentication credentials. The example assumes that you have already installed and configured FSSO on the domain controller.

LAN users who belong to the Internet_users group can access the Internet after entering their username and password. The example shows two users: User1, authenticated by a password stored in FortiOS; and User 2, authenticated on an external authentication server. Both users are local users since you create the user accounts in FortiOS.

1. Create a locally authenticated user account.
2. Create a RADIUS-authenticated user account.
3. Create an FSSO user group.
4. Create a firewall user group.
5. Define policy addresses.
6. Create security policies.

Creating a locally authenticated user account

User1 is authenticated by a password stored in FortiOS.

To create a locally authenticated user account in the GUI:

1. Go to *User & Device* > *User Definition*. Click *Create New*.
2. Configure the following settings:

Setting	Configuration
User Type	Local User
User Name	User1
Password	hardtoguess1@@1
User Account Status	Enabled

3. Click *Submit*.

To create a locally authenticated user account in the CLI:

```
config user local
   edit user1
      set type password
      set passwd hardtoguess1@@1
   next
end
```

Creating a RADIUS-authenticated user account

You must first configure FortiOS to access the external authentication server, then create the user account.

To create a RADIUS-authenticated user account in the GUI:

1. Go to *User & Device* > *RADIUS Servers*. Click *Create New*.
2. Configure the following settings:

Setting	Configuration
Name	OurRADIUSsrv
Authentication method	Default
Primary Server	
IP/Name	10.11.101.15
Secret	OurSecret

3. Click *OK*.
4. Go to *User & Device* > *User Definition*. Click *Create New*.
5. Configure the following settings:

Setting	Configuration
User Type	Remote RADIUS User
User Name	User2
RADIUS Server	OurRADIUSsrv
User Account Status	Enabled

6. Click *Submit*.

To create a RADIUS-authenticated user account in the CLI:

```
   config user radius
   edit OurRADIUSsrv
      set server 10.11.102.15
      set secret OurSecret
      set auth-type auto
   next
end
config user local
   edit User2
      set name User2
      set type radius
      set radius-server OurRADIUSsrv
   next
end
```

Creating an FSSO user group

This example assumes that you have already set up FSSO on the Windows network and that it used advanced mode, meaning that it uses LDAP to access user group information. You must do the following:

- Configure LDAP access to the Windows AD global catalog
- Specify the collector agent that sends user logon information to FortiOS
- Select Windows user groups to monitor
- Select and add the Engineering and Sales groups to an FSSO user group

To create an FSSO user group in the GUI:

1. Configure LDAP for FSSO:
   a. Go to *User & Device* > *LDAP Servers*. Click *Create New*.
   b. Configure the following settings:

Setting	Configuration
Name	ADserver
Server Name / IP	10.11.101.160
Distinguished Name	dc=office,dc=example,dc=com
Bind Type	Regular
Username	cn=FSSO_Admin,cn=users,dc=office,dc=example,dc=com
Password	Enter a secure password.

   c. Leave other fields as-is. Click *OK*.
2. Specify the collector agent for FSSO;
   a. Go to *Security Fabric* > *Fabric Connectors*. Click *Create New*.
   b. Under *SSO/Identity*, select *Fortinet Single Sign-On Agent*.

c. Configure the following settings:

Setting	Configuration
Name	Enter the Windows AD server name. This name appears in the Windows AD server list when you create user groups. In this example, the name is WinGroups.
Server IP/Name	Enter the IP address or name of the server where the agent is installed. The maximum name length is 63 characters. In this example, the IP address is 10.11.101.160.
Password	Enter the password of the server where the agent is installed. You only need to enter a password for the collector agent if you configured the agent to require authenticated access. If the TCP port used for FSSO is not the default, 8000, you can run the `config user fsso` command to change the setting in the CLI.
Collector Agent AD access mode	Advanced
LDAP Server	Select the previously configured LDAP server. In this example, it is ADserver.
User/Groups/Organization Units	Select the users, groups, and OUs to monitor.

d. Click *OK*.

3. Create the FSSO_Internet_users user group:
   a. Go to *User & Device* > *User Groups*. Click *Create New*.
   b. Configure the following settings:

Setting	Configuration
Name	FSSO_Internet_users
Type	Fortinet Single Sign-On (FSSO)
Members	Engineering, Sales

   c. Click *OK*.

To create an FSSO user group in the CLI:

```
config user ldap
   edit "ADserver"
      set server "10.11.101.160"
      set dn "cn=users,dc=office,dc=example,dc=com"
      set type regular
      set username "cn=administrator,cn=users,dc=office,dc=example,dc=com"
      set password set_a_secure_password
   next
end
config user fsso
   edit "WinGroups"
      set ldap-server "ADserver"
      set password **********
```

```
      set server "10.11.101.160"
   next
end
config user group
   edit FSSO_Internet_users
      set group-type fsso-service
      set member CN=Engineering,cn=users,dc=office,dc=example,dc=com
           CN=Sales,cn=users,dc=office,dc=example,dc=com
   next
end
```

Creating a firewall user group

This example shows a firewall user group with only two users. You can add additional members.

To create a firewall user group in the GUI:

1. Go to *User & Device* > *User Groups*. Click *Create New*.
2. Configure the following settings:

Setting	Configuration
Name	Internet_users
Type	Firewall
Members	User1, User2

3. Click OK.

To create a firewall user group in the CLI:

```
config user group
   edit Internet_users
        set group-type firewall
        set member User1 User2
   next
end
```

Defining policy addresses

To define policy addresses:

1. Go to *Policy & Objects* > *Addresses*.
2. Click *Create New* > *Address*.
3. Configure the following settings:

Setting	Configuration
Name	Internal_net

Setting	Configuration
Type	Subnet
IP/Netmask	10.11.102.0/24
Interface	Port 3

4. Click *OK*.
5. Create another new address by repeating steps 2-4 using the following settings:

Setting	Configuration
Name	Windows_net
Type	Subnet
IP/Netmask	10.11.101.0/24
Interface	Port 2

Creating security policies

You must create two security policies: one for the firewall group connecting through port 3, and one for the FSSO group connecting through port 2.

To create security policies using the GUI:

1. Go to *Policy & Objects* > *IPv4 Policy*.
2. Click *Create New*.
3. Configure the following settings:

Setting	Configuration
Incoming Interface	Port2
Source Address	Windows_net
Source User(s)	FSSO_Internet_users
Outgoing Interface	Port1
Destination Address	all
Schedule	always
Service	ALL
NAT	Enabled.
Security Profiles	You can enable security profiles as desired.

4. Click *OK*.

5. Create another new policy by repeating steps 2-4 using the following settings:

Setting	Configuration
Incoming Interface	Port3
Source Address	Internal_net
Source User(s)	Internet_users
Outgoing Interface	Port1
Destination Address	all
Schedule	always
Service	ALL
NAT	Enabled.
Security Profiles	You can enable security profiles as desired.

6. Click *OK*.

To create security policies using the CLI:

```
config firewall policy
     edit 0
     set srcintf port2
     set dstintf port1
     set srcaddr Windows_net
     set dstaddr all
     set action accept
     set groups FSSO_Internet_users
     set schedule always
     set service ANY
     set nat enable
   next
end
config firewall policy
   edit 0
     set srcintf port3
     set dstintf port1
     set srcaddr internal_net
     set dstaddr all
     set action accept
     set schedule always
     set groups Internet_users
     set service ANY
     set nat enable
   next
end
```

Wireless configuration

See the FortiWiFi and FortiAP Cookbook.

Switch Controller

Use the Switch Controller function, also known as FortiLink, to remotely manage FortiSwitch units. In the commonly-used layer 2 scenario, the FortiGate that is acting as a switch controller is connected to distribution FortiSwitch units. The distribution FortiSwitch units are in the top tier of stacks of FortiSwitch units and connected downwards with Convergent or Access layer FortiSwitch units. To leverage CAPWAP and the Fortinet proprietary FortiLink protocol, set up data and control planes between the FortiGate and FortiSwitch units.

FortiLink allows administrators to create and manage different VLANs, and apply the full-fledged security functions of FortiOS to them, such as 802.1X authentication and firewall policies. Most of the security control capabilities on the FortiGate are extended to the edge of the entire network, combining FortiGate, FortiSwitch, and FortiAP devices, and providing secure, seamless, and unified access control to users.


FortiLink setup

Go to *WiFI & Switch Controller* > *FortiLink Interface* to create or edit FortiLink interfaces. The available options depend on the FortiGate model.

By automatically creating FortiLink interfaces as a logical aggregate or hard/soft switch, you can modify the FortiLink interfaces. If the physical port in use changes, you don't need to migrate existing policies.

To configure FortiLink interfaces:

1. Go to *WiFi & Switch Controller* > *FortiLink Interface*.

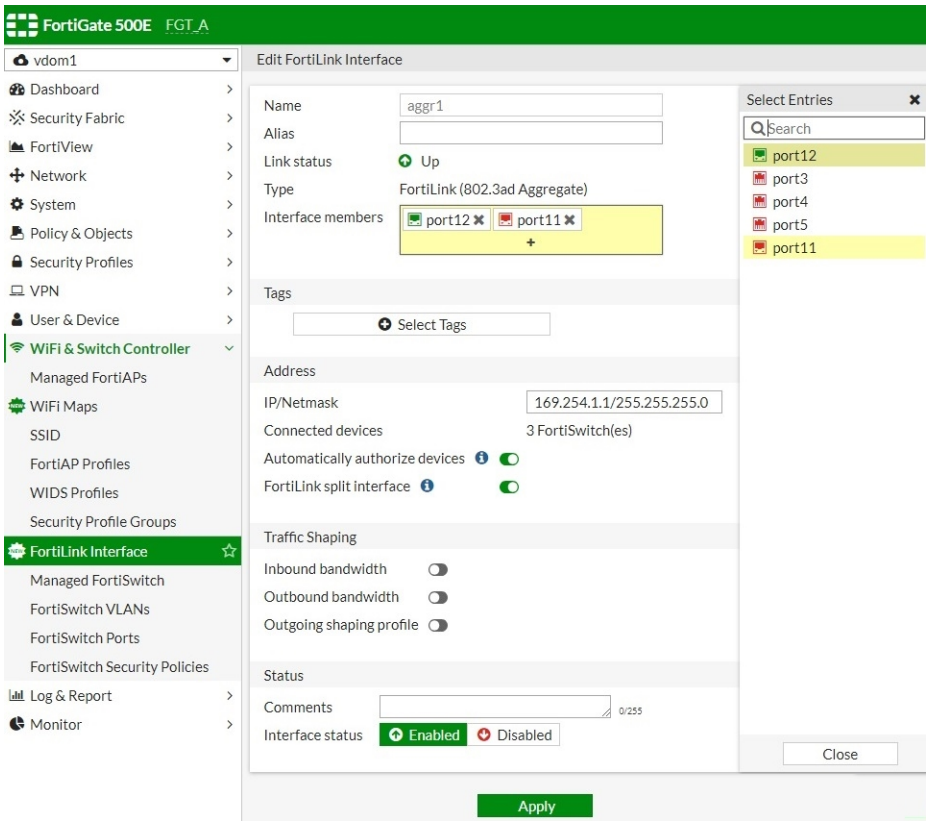

2. Configure the interface settings and click *Apply*.

FortiLink auto network configuration policy

The switch controller has a network `auto-config` option which contains configurable defaults, policy customization, and an individual interface override. This gives administrators simple and flexible control.

Following is a description of these options:

`auto-config default`	Provides the default actions for the first hop (`fgt-policy`) and lower-tier devices (`isl-policy`).
`auto-config policy`	A database containing policies that can be applied as a system-wide default or to a specific interface.
`auto-config custom`	Allows for the override of the `auto-config default` on a specific interface. This information is retained and is reapplied if an interface leaves and then is rediscovered.

To configure automatic network detection:

1. Create or modify an auto-config policy:

```
config switch-controller auto-config  policy
   edit test123
      get
         name                : test123
         qos-policy          : default     <== leverage the default qos-policy
         storm-control-policy: auto-config <== leverage auto-config storm-control-policy
by default
         poe-status          : enable      <== If target of auto-config is poe port,
keep poe-status enabled by default
   next
end
```

2. Designate an auto-config policy to FortiLink, ISL, or ICL on managed FortiSwitches.

```
config switch-controller auto-config default
    get
        fgt-policy          : test123
        isl-policy          : test123
        icl-policy          : test123
    set  ?
        fgt-policy    Default FortiLink auto-config policy.
        isl-policy    Default ISL auto-config policy.
        icl-policy    Default ICL auto-config policy.
end
```

3. Customize an auto-config policy for a specific FGT, ICL, or ISL interface.

```
config switch-controller auto-config custom
    edit ?
      *name    Auto-Config FortiLink or ISL/ICL interface name.
    edit G5H0E391790XXXX
      new entry 'G5H0E391790XXXX' added
        config switch-binding
            edit ?
              *switch-id    Switch name.
            edit S524DN4K1500XXXX
              new entry 'S524DN4K1500XXXX' added
                get
                    switch-id           : S524DN4K1500XXXX
                    policy              : default
            next
        end
    next
end
```

FortiLink network sniffer extension


The switch controller has a `traffic-sniffer` option to provide a targeted approach where mirrored traffic is always directed towards the FortiGate on a dedicated VLAN. This allows for easy sniffing by using the CLI or GUI. Also, the traffic can be routed through the FortiGate using Encapsulated Remote Switched Port Analyzer (ERSPAN) for external analysis and storage.

Use this option to define targeted sniffers by IP or MAC address. Traffic matching is replicated to the FortiGate, which is helpful when you know what device you are looking for but don't know where it is located.

FortiLink networks can have multiple switches and traffic typically traverses several switches. If each switch mirrors any match, the sniffer would see multiple copies of traffic. To reduce this, the targets are applied at the perimeter of the FortiSwitch network. Traffic entering by a user port or traffic from FortiGate is considered eligible for mirroring.

You can also enable traditional port-based sniffers in the ingress or egress direction.

All sniffer traffic arrives at the FortiGate using ERSPAN and the traffic is encapsulated in generic routing encapsulation (GRE).

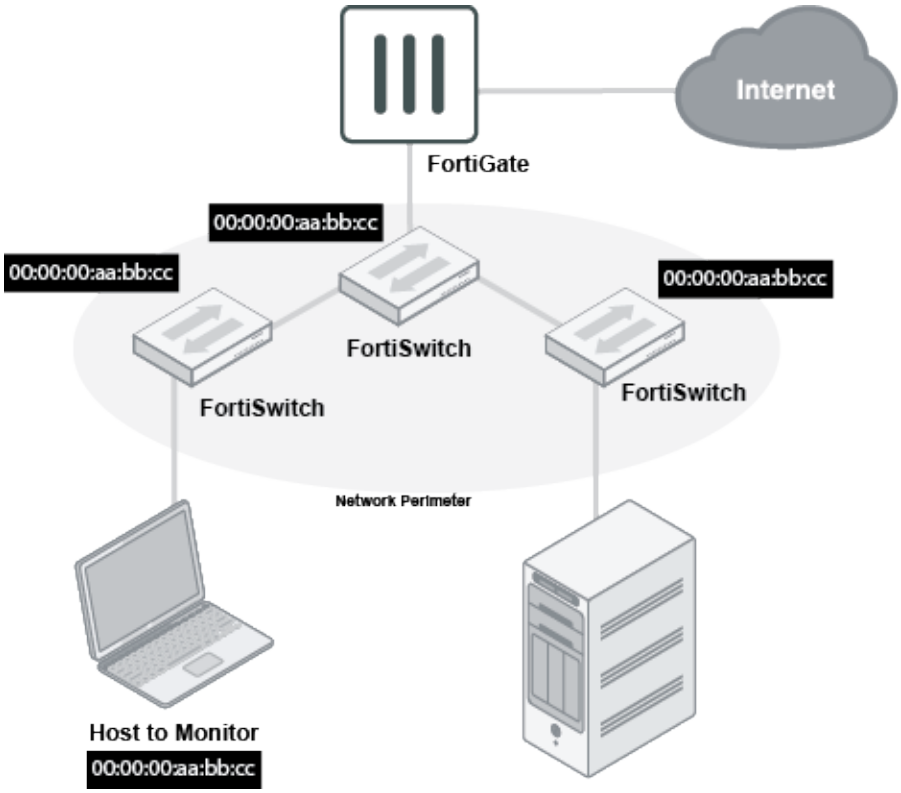

You can only configure this feature using the CLI.

To use predefined sniffer-used switch VLAN interface:

```
config system interface
    edit "snf.aggr1"     <---- Newly added pre-defined switch vlan interface. Created
automatically, once first FSW discovered and authorized.
        set vdom "root"
        set ip 10.254.253.254 255.255.254.0
        set allowaccess ping
        set description "Sniffer VLAN"
        set snmp-index 33
        set switch-controller-traffic-policy "sniffer"
        set color 6
        set interface "aggr1"
        set vlanid 4092
    next
end
```

To enable traffic sniffer based on target IP or MAC address on target ports of managed FortiSwitch units:

```
config switch-controller traffic-sniffer  <---- newly added CLI stanza in FOS
    set erspan-ip 2.2.2.2                 <---- Designate ERSPAN collector
    config target-mac
        edit 11:11:11:11:11:11
        next
    end
    config target-ip
        edit 4.4.4.4
        next
    end
    config target-port
        edit "S524DN4K1500XXXX"
            set in-ports "port2" "port4" "port6"
            set out-ports "port3" "port5" "port7"
        next
    end
end
```

To use troubleshooting tools:

```
(root) # diagnose switch-controller  switch-info mirror status S524DN4K1500XXXX


Managed Switch : S524DN4K1500XXXX
flink.sniffer
    Mode                  : ERSPAN-auto
    Status                : Active
    Source-Ports:
        Ingress: port2, port4, port6
        Egress : port3, port5, port7
    Used-by-ACLs          : True
    Auto-config-state     : Resolved/Running
        Last-update  : 1464 seconds ago
        Issues       : None
        Collector-IP : 2.2.2.2
        Source-IP    : 10.254.252.208
        Source-MAC   : 08:5b:0e:ff:40:27
        Next-Hop     :
            IP                  : 10.254.253.254
            MAC                 : 00:09:0f:09:00:0c
            Via-System-Interface : sniffer
            VLAN                : 4092(tagged)
            Via-Switch-Interface : G5H0E391790XXXX
```

FortiLink MCLAG configuration


In *WiFi & Switch Controller > FortiSwitch Ports*, you can enable MCLAG and view ports grouped by trunks. You need to configure ports from two switches, that is, two MCLAG peer switches to be included in one MCLAG.

Sample configuration

In *WiFi & Switch Controller* > *FortiSwitch Ports*, there is an *MC-LAG* option.

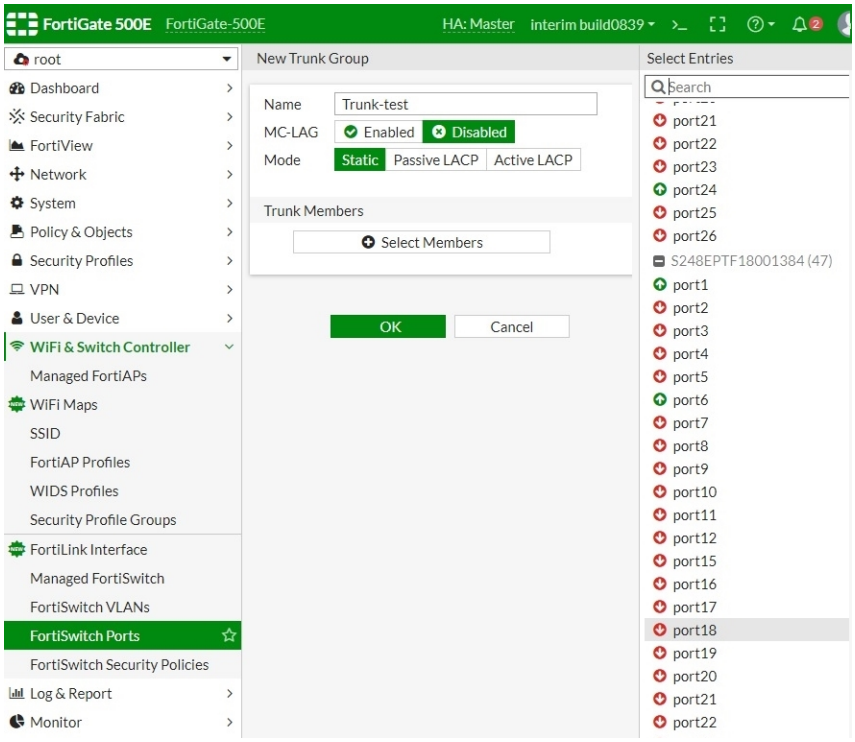

In *WiFi & Switch Controller* > *FortiSwitch Ports*, there is a *Trunk* view.

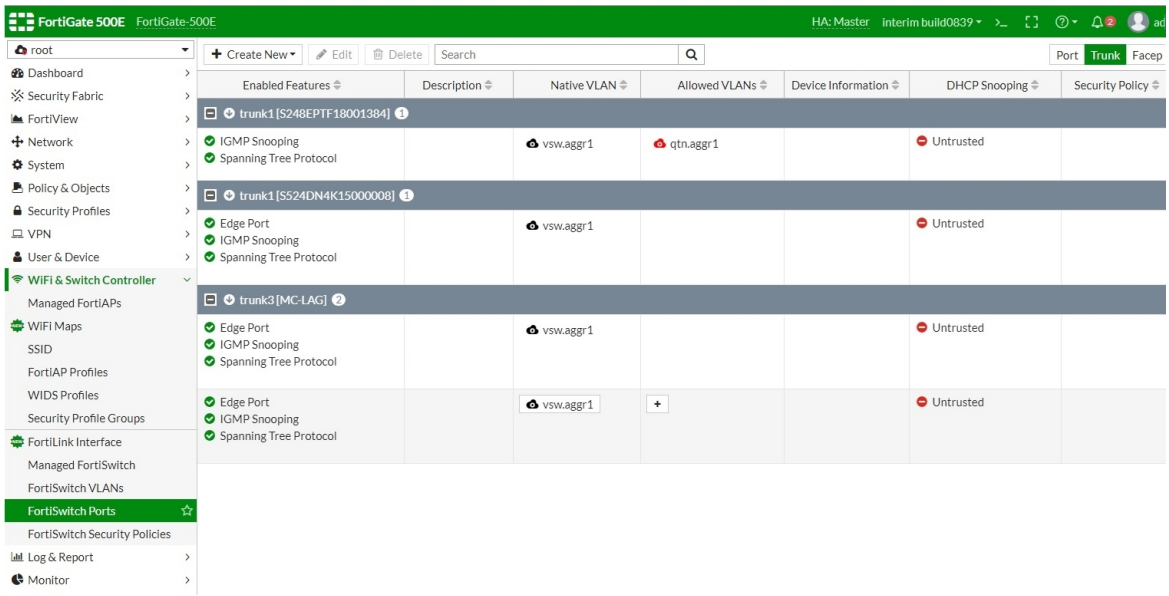

Standalone FortiGate as switch controller

The following recipes provide instructions on configuring a standalone FortiGate as a switch controller:


- Standalone FortiGate as switch controller
- Multiple FortiSwitches managed via hardware/software switch on page 1513
- Multiple FortiSwitches in tiers via aggregate interface with redundant link enabled on page 1517
- Multiple FortiSwitches in tiers via aggregate interface with MCLAG enabled only on distribution on page 1520

Standalone FortiGate as switch controller

In this example, one FortiSwitch is managed by a standalone FortiGate. The FortiGate uses an aggregate interface to operate as a switch controller. This configuration might be used in branch office. It might also be used before increasing the number of connected FortiSwitch units and evolving to a multi-tier structure.

Prerequisites:

- The FortiGate model supports an aggregate interface.
- FortiSwitch units have been upgraded to latest released software version.
- Layer-3 path/route in the management VDOM is available to Internet so that the FortiSwitch units can synchronize NTP.

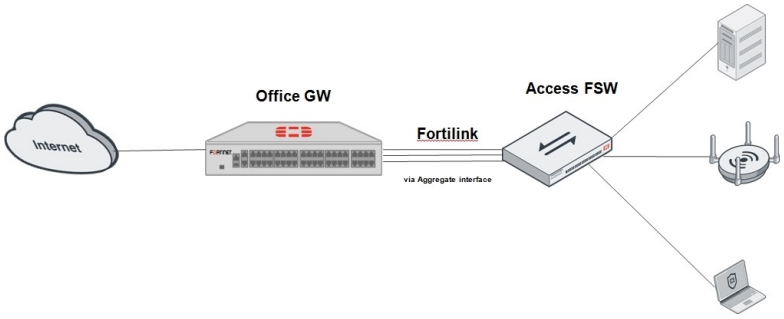

Change the FortiSwitch management mode to FortiLink:

Enter the following CLI commands on the FortiSwitch:

```
config system global
   set switch-mgmt-mode fortilink
end
This operation will cleanup all of the configuration and reboot the system!
Do you want to continue? (y/n)y
Backing up local mode config before entering FortiLink mode....
```

If the FortiSwitch ports used for the FortiLink connection have `auto-discovery-fortilink` enabled, executing authorization on FortiGate will trigger the transformation to FortiLink mode automatically.

```
config switch interface
  edit "port1"
       set auto-discovery-fortilink enable
       ……
```

```
  next
end
```

Create an aggregate interface and designate it as Fortilink interface on the FortiGate:

Using the CLI:

```
config system interface
    edit "aggr1"
        set vdom "vdom1"
        set fortilink enable
        set type aggregate
        set member "port11" "port12"
    next
end
```

Using the GUI:

1. Go to *WiFi & Switch Controller* > *FortiLink Interface*.
2. In *Interface members*, select an existing aggregate interface (if there is one) or select one or more physical ports to create an aggregate interface.
3. Configure other fields as necessary.
4. Click *OK*.

Discover and authorize the FortiSwitch:

Using the CLI:

```
config switch-controller managed-switch
    edit "FSWSerialNum"
        set fsw-wan1-admin enable
        ……
    next
end
```

Check the CLI output for `Connection: Connected` to show that FortiLink is up:

```
execute switch-controller get-conn-status FSWSerialNum

Get managed-switch S248EPTF18001384 connection status:
Admin Status: Authorized
Connection: Connected
Image Version: S248EP-v6.2.0-build143,190107 (Interim)
Remote Address: 2.2.2.2
Join Time: Fri Jan 11 15:22:32 2019

   interface   status   duplex    speed fortilink stacking       poe status
       port1       up     full  1000Mbps       no       no  Delivering Power
       port2     down      N/A     0           no       no         Searching
        ……
```

Using the GUI:

1. Go to *WiFi & Switch Controller* > *Managed FortiSwitch*.
2. Click *Authorize* and wait for a few minutes for the connection to be established.
   When FortiLink between the FortiGate and FortiSwitch is established, the Link-up ports change to green and the POE port that is supplying power changes to blue. The dotted line between the FortiGate and FortiSwitch changes

to a solid line. The Connection status shows that FortiLink is up.

Extend the security perimeter to the edge of FortiSwitch:

1. Configure the VLAN arrangement.
   a. On the FortiGate, go to *WiFi & Switch Controller* > *FortiSwitch VLANs*.
   b. Configure the VLAN interfaces that are applied on FortiSwitch.
   On FortiGate, these switch VLAN interfaces are treated as layer-3 interfaces and are available to be applied by firewall policy and other security controls in FortiOS. This means that security boundary is extended to FortiSwitch.
2. Configure FortiSwitch ports.
   a. On the FortiGate, go to *WiFi & Switch Controller* > *FortiSwitch Ports*.
   b. Select one or more FortiSwitch ports and assign them to the switch VLAN.
   c. You can also select *POE/DHCP Snooping*, *STP*, and other parameters for the FortiSwitch ports to show their real-time status such as link status, data statistics, etc.
3. Configure access authentication.
   a. On the FortiGate, go to *WiFi & Switch Controller* > *FortiSwitch Security Policies*.
   b. Configure the *802.1X* security policies.
   c. Select *Port-based* or *MAC-based* mode and select *User groups* from the existing VDOM.
   d. Configure other fields as necessary.
   e. Go to *WiFi & Switch Controller* > *FortiSwitch Ports*.
   f. Select one or more FortiSwitch ports, click + in the *Security Policy* column, then make a selection from the pane.

Troubleshooting

Authorized FortiSwitch always offline

If an authorized FortiSwitch is always offline, go to the FortiGate CLI and use the command below to see all the checkpoints. Inspect each checkpoint to find the cause of the problem.

```
execute switch-controller diagnose-connection  S248EPTF18001384

Fortilink interface ... OK
aggr1  enabled

DHCP server ... OK
aggr1  enabled

NTP server ... OK
aggr1  enabled
NTP server sync ... OK
synchronized: yes, ntpsync: enabled, server-mode: enabled

ipv4 server(ntp1.fortiguard.com) 208.91.113.70 -- reachable(0x80) S:2 T:128
         no data
ipv4 server(ntp2.fortiguard.com) 208.91.113.71 -- reachable(0x80) S:2 T:128
         no data
ipv4 server(ntp2.fortiguard.com) 208.91.112.51 -- reachable(0xff) S:2 T:66 selected
        server-version=4, stratum=2
        reference time is dfe3aec5.744404e6 -- UTC Sat Jan 12 00:09:41 2019
```

```
        clock offset is -0.320411 sec, root delay is 0.054535 sec
        root dispersion is 0.533081 sec, peer dispersion is 11495 msec

ipv4 server(ntp1.fortiguard.com) 208.91.112.50 -- reachable(0xff) S:2 T:66
        server-version=4, stratum=2
        reference time is dfe3aec5.744404e6 -- UTC Sat Jan 12 00:09:41 2019
        clock offset is -0.448087 sec, root delay is 0.054535 sec
        root dispersion is 0.533081 sec, peer dispersion is 12542 msec

HA mode ... disabled

Fortilink
Status ... SWITCH_AUTHORIZED_READY
Last keepalive ... 1 seconds ago

CAPWAP
Remote Address: 2.2.2.2
Status ... CONNECTED
Last keepalive ... 26 seconds ago

PING 2.2.2.2 (2.2.2.2): 56 data bytes
64 bytes from 2.2.2.2: icmp_seq=0 ttl=64 time=1.1 ms
64 bytes from 2.2.2.2: icmp_seq=1 ttl=64 time=13.9 ms
64 bytes from 2.2.2.2: icmp_seq=2 ttl=64 time=12.7 ms
64 bytes from 2.2.2.2: icmp_seq=3 ttl=64 time=2.9 ms
64 bytes from 2.2.2.2: icmp_seq=4 ttl=64 time=1.2 ms


--- 2.2.2.2 ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max = 1.1/6.3/13.9 ms
```

Multiple FortiSwitches managed via hardware/software switch

This example provides a recommended configuration of FortiLink where multiple FortiSwitches are managed by a standalone FortiGate as switch controller via hardware or software switch interface; such as when you need multiple distribution FortiSwitches but lack supporting aggregate on FortiGate.

Prerequisites:

- The FortiGate model supports hardware or software switch interface.
- FortiSwitch units have been upgraded to latest released software version.
- Layer-3 path/route in the management VDOM is available to Internet so that the FortiSwitch units can synchronize NTP.

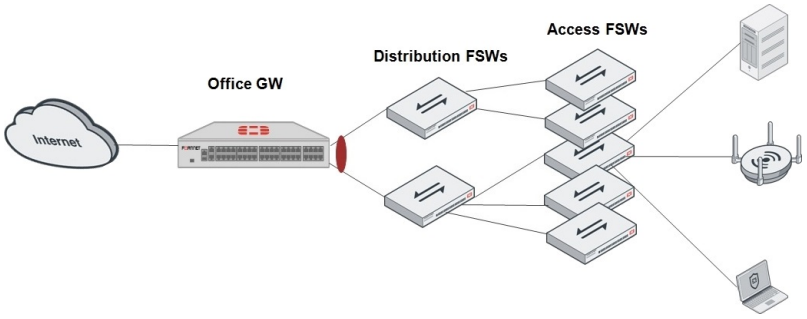

Change the FortiSwitch management mode to FortiLink:

Enter the following CLI commands on the FortiSwitch:

```
config system global
   set switch-mgmt-mode fortilink
end
This operation will cleanup all of the configuration and reboot the system!
Do you want to continue? (y/n)y
Backing up local mode config before entering FortiLink mode....
```

If the FortiSwitch ports used for the FortiLink connection have `auto-discovery-fortilink` enabled, executing authorization on FortiGate will trigger the transformation to FortiLink mode automatically.

```
config switch interface
  edit "port1"
       set auto-discovery-fortilink enable
       ……
  next
end
```

Create hardware or software switch interface and designate it as FortiLink interface on the FortiGate:

Create a hardware switch using the CLI:

```
config system virtual-switch
    edit "hardswitch1"
        set physical-switch "sw0"
        config port
            edit "port11"
            next
            edit "port12"
            next
        end
    next
end
```

Create a software switch using the CLI:

```
config system switch-interface
    edit "softswitch1"
        set vdom "vdom1"
        set member "port11"  "port12"
    next
end
```

Using the GUI:

1. Go to *WiFi & Switch Controller* > *FortiLink Interface*.
2. In *Interface members*, select an existing hardware/software switch interface (if there is one) or select one or more physical ports to create a hardware/software switch interface.
3. Configure other fields as necessary.
4. Click *OK*.

Discover and authorize the FortiSwitch:

Using the CLI:

```
config switch-controller managed-switch
    edit "FSWSerialNum"
        set fsw-wan1-admin enable
        ……
    next
end
```

Check the CLI output for `Connection: Connected` to show that FortiLink is up:

```
execute switch-controller get-conn-status FSWSerialNum

Get managed-switch S248EPTF18001384 connection status:
Admin Status: Authorized
Connection: Connected
Image Version: S248EP-v6.2.0-build143,190107 (Interim)
Remote Address: 2.2.2.2
Join Time: Fri Jan 11 15:22:32 2019

   interface   status   duplex    speed fortilink stacking       poe status
       port1       up     full  1000Mbps       no       no  Delivering Power
       port2     down      N/A     0           no       no         Searching
        ……
```

Using the GUI:

1. Go to *WiFi & Switch Controller* > *Managed FortiSwitch*.
2. Click *Authorize* and wait for a few minutes for the connection to be established.
   When FortiLink between the FortiGate and FortiSwitch is established, the Link-up ports change to green and the POE port that is supplying power changes to blue. The dotted line between the FortiGate and FortiSwitch changes to a solid line. The Connection status shows that FortiLink is up.

Extend the security perimeter to the edge of FortiSwitch:

1. Configure the VLAN arrangement.
   a. On the FortiGate, go to *WiFi & Switch Controller* > *FortiSwitch VLANs*.
   b. Configure the VLAN interfaces that are applied on FortiSwitch.
      On FortiGate, these switch VLAN interfaces are treated as layer-3 interfaces and are available to be applied by firewall policy and other security controls in FortiOS. This means that security boundary is extended to FortiSwitch.
2. Configure FortiSwitch ports.
   a. On the FortiGate, go to *WiFi & Switch Controller* > *FortiSwitch Ports*.
   b. Select one or more FortiSwitch ports and assign them to the switch VLAN.
   c. You can also select *POE/DHCP Snooping*, *STP*, and other parameters for the FortiSwitch ports to show their real-time status such as link status, data statistics, etc.
3. Configure access authentication.
   a. On the FortiGate, go to *WiFi & Switch Controller* > *FortiSwitch Security Policies*.
   b. Configure the *802.1X* security policies.
   c. Select *Port-based* or *MAC-based* mode and select *User groups* from the existing VDOM.
   d. Configure other fields as necessary.
   e. Go to *WiFi & Switch Controller* > *FortiSwitch Ports*.
   f. Select one or more FortiSwitch ports, click + in the *Security Policy* column, then make a selection from the pane.

Troubleshooting

Bind FortiLink on hardware switch interface

Fortinet recommends binding FortiLink on the hardware switch interface. Since the hardware switch interface can leverage hardware chips to forward traffic, it does not consume CPU capacity, unlike a software switch.

Authorized FortiSwitch always offline

If an authorized FortiSwitch is always offline, go to the FortiGate CLI and use the command below to see all the checkpoints. Inspect each checkpoint to find the cause of the problem.

```
execute switch-controller diagnose-connection  S248EPTF18001384

Fortilink interface ... OK
hardswitch1 enabled

DHCP server ... OK
hardswitch1  enabled

NTP server ... OK
hardswitch1  enabled
NTP server sync ... OK
synchronized: yes, ntpsync: enabled, server-mode: enabled

ipv4 server(ntp1.fortiguard.com) 208.91.113.70 -- reachable(0x80) S:2 T:128
         no data
ipv4 server(ntp2.fortiguard.com) 208.91.113.71 -- reachable(0x80) S:2 T:128
         no data
ipv4 server(ntp2.fortiguard.com) 208.91.112.51 -- reachable(0xff) S:2 T:66 selected
        server-version=4, stratum=2
        reference time is dfe3aec5.744404e6 -- UTC Sat Jan 12 00:09:41 2019
        clock offset is -0.320411 sec, root delay is 0.054535 sec
        root dispersion is 0.533081 sec, peer dispersion is 11495 msec

ipv4 server(ntp1.fortiguard.com) 208.91.112.50 -- reachable(0xff) S:2 T:66
        server-version=4, stratum=2
        reference time is dfe3aec5.744404e6 -- UTC Sat Jan 12 00:09:41 2019
        clock offset is -0.448087 sec, root delay is 0.054535 sec
        root dispersion is 0.533081 sec, peer dispersion is 12542 msec

HA mode ... disabled

Fortilink
Status ... SWITCH_AUTHORIZED_READY
Last keepalive ... 1 seconds ago

CAPWAP
Remote Address: 2.2.2.2
Status ... CONNECTED
Last keepalive ... 26 seconds ago

PING 2.2.2.2 (2.2.2.2): 56 data bytes
64 bytes from 2.2.2.2: icmp_seq=0 ttl=64 time=1.1 ms
64 bytes from 2.2.2.2: icmp_seq=1 ttl=64 time=13.9 ms
64 bytes from 2.2.2.2: icmp_seq=2 ttl=64 time=12.7 ms
```

```
64 bytes from 2.2.2.2: icmp_seq=3 ttl=64 time=2.9 ms
64 bytes from 2.2.2.2: icmp_seq=4 ttl=64 time=1.2 ms


--- 2.2.2.2 ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max = 1.1/6.3/13.9 ms
```

Multiple FortiSwitches in tiers via aggregate interface with redundant link enabled

This example provides a recommended configuration of FortiLink where multi-tier FortiSwitches are managed by a standalone FortiGate as switch controller via aggregate interface, where the FortiGate can provide redundant links to multiple distribution FortiSwitches.

Prerequisites:

- The FortiGate model supports an aggregate interface.
- FortiSwitch units have been upgraded to latest released software version.
- Layer-3 path/route in the management VDOM is available to Internet so that the FortiSwitch units can synchronize NTP.

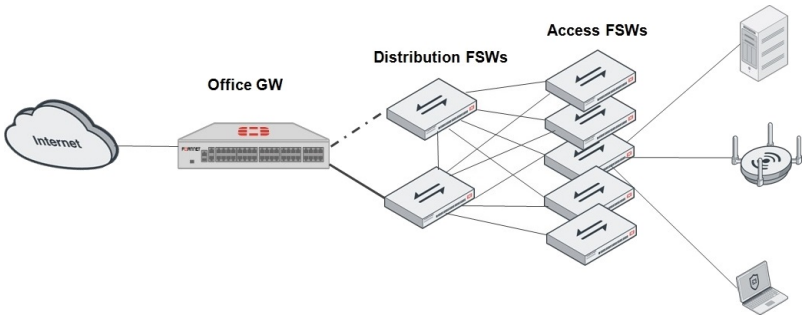

Change the FortiSwitch management mode to FortiLink:

Enter the following CLI commands on the FortiSwitch:

```
config system global
   set switch-mgmt-mode fortilink
end
This operation will cleanup all of the configuration and reboot the system!
Do you want to continue? (y/n)y
Backing up local mode config before entering FortiLink mode....
```

If the FortiSwitch ports used for the FortiLink connection have `auto-discovery-fortilink` enabled, executing authorization on FortiGate will trigger the transformation to FortiLink mode automatically.

```
config switch interface
  edit "port1"
       set auto-discovery-fortilink enable
       ……
  next
end
```

Create an aggregate interface and designate it as Fortilink interface on the FortiGate:

Using the CLI:

```
config system interface
    edit "aggr1"
        set vdom "vdom1"
        set fortilink enable
        set type aggregate
        set member "port11" "port12"
        set fortilink-split-interface enable
    next
end
```

Using the GUI:

1. Go to *WiFi & Switch Controller* > *FortiLink Interface*.
2. In *Interface members*, select one or more physical ports that are connected to different distribution FortiSwitches to create an aggregate interface.
3. Enable *FortiLink split interface*.
4. Configure other fields as necessary.
5. Click *OK*.

Discover and authorize the FortiSwitch:

Using the CLI:

```
config switch-controller managed-switch
    edit "FSWSerialNum"
        set fsw-wan1-admin enable
        ……
    next
end
```

Check the CLI output for `Connection: Connected` to show that FortiLink is up:

```
execute switch-controller get-conn-status FSWSerialNum

Get managed-switch S248EPTF18001384 connection status:
Admin Status: Authorized
Connection: Connected
Image Version: S248EP-v6.2.0-build143,190107 (Interim)
Remote Address: 2.2.2.2
Join Time: Fri Jan 11 15:22:32 2019

   interface   status   duplex    speed fortilink stacking       poe status
       port1       up     full  1000Mbps       no       no  Delivering Power
       port2     down      N/A     0           no       no         Searching
        ……
```

Using the GUI:

1. Go to *WiFi & Switch Controller* > *Managed FortiSwitch*.
2. Click *Authorize* and wait for a few minutes for the connection to be established.
   When FortiLink between the FortiGate and FortiSwitch is established, the Link-up ports change to green and the POE port that is supplying power changes to blue. The dotted line between the FortiGate and FortiSwitch changes to a solid line. The Connection status shows that FortiLink is up.

Extend the security perimeter to the edge of FortiSwitch:

1. Configure the VLAN arrangement.
   a. On the FortiGate, go to *WiFi & Switch Controller* > *FortiSwitch VLANs*.
   b. Configure the VLAN interfaces that are applied on FortiSwitch.
   On FortiGate, these switch VLAN interfaces are treated as layer-3 interfaces and are available to be applied by firewall policy and other security controls in FortiOS. This means that security boundary is extended to FortiSwitch.
2. Configure FortiSwitch ports.
   a. On the FortiGate, go to *WiFi & Switch Controller* > *FortiSwitch Ports*.
   b. Select one or more FortiSwitch ports and assign them to the switch VLAN.
   c. You can also select *POE/DHCP Snooping*, *STP*, and other parameters for the FortiSwitch ports to show their real-time status such as link status, data statistics, etc.
3. Configure access authentication.
   a. On the FortiGate, go to *WiFi & Switch Controller* > *FortiSwitch Security Policies*.
   b. Configure the *802.1X* security policies.
   c. Select *Port-based* or *MAC-based* mode and select *User groups* from the existing VDOM.
   d. Configure other fields as necessary.
   e. Go to *WiFi & Switch Controller* > *FortiSwitch Ports*.
   f. Select one or more FortiSwitch ports, click + in the *Security Policy* column, then make a selection from the pane.

Troubleshooting

Authorized FortiSwitch always offline

If an authorized FortiSwitch is always offline, go to the FortiGate CLI and use the command below to see all the checkpoints. Inspect each checkpoint to find the cause of the problem.

```
execute switch-controller diagnose-connection  S248EPTF18001384

Fortilink interface ... OK
aggr1  enabled

DHCP server ... OK
aggr1  enabled

NTP server ... OK
aggr1  enabled
NTP server sync ... OK
synchronized: yes, ntpsync: enabled, server-mode: enabled

ipv4 server(ntp1.fortiguard.com) 208.91.113.70 -- reachable(0x80) S:2 T:128
         no data
ipv4 server(ntp2.fortiguard.com) 208.91.113.71 -- reachable(0x80) S:2 T:128
         no data
ipv4 server(ntp2.fortiguard.com) 208.91.112.51 -- reachable(0xff) S:2 T:66 selected
        server-version=4, stratum=2
        reference time is dfe3aec5.744404e6 -- UTC Sat Jan 12 00:09:41 2019
        clock offset is -0.320411 sec, root delay is 0.054535 sec
        root dispersion is 0.533081 sec, peer dispersion is 11495 msec
```

```
ipv4 server(ntp1.fortiguard.com) 208.91.112.50 -- reachable(0xff) S:2 T:66
        server-version=4, stratum=2
        reference time is dfe3aec5.744404e6 -- UTC Sat Jan 12 00:09:41 2019
        clock offset is -0.448087 sec, root delay is 0.054535 sec
        root dispersion is 0.533081 sec, peer dispersion is 12542 msec

HA mode ... disabled

Fortilink
Status ... SWITCH_AUTHORIZED_READY
Last keepalive ... 1 seconds ago

CAPWAP
Remote Address: 2.2.2.2
Status ... CONNECTED
Last keepalive ... 26 seconds ago

PING 2.2.2.2 (2.2.2.2): 56 data bytes
64 bytes from 2.2.2.2: icmp_seq=0 ttl=64 time=1.1 ms
64 bytes from 2.2.2.2: icmp_seq=1 ttl=64 time=13.9 ms
64 bytes from 2.2.2.2: icmp_seq=2 ttl=64 time=12.7 ms
64 bytes from 2.2.2.2: icmp_seq=3 ttl=64 time=2.9 ms
64 bytes from 2.2.2.2: icmp_seq=4 ttl=64 time=1.2 ms


--- 2.2.2.2 ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max = 1.1/6.3/13.9 ms
```

Multiple FortiSwitches in tiers via aggregate interface with MCLAG enabled only on distribution

This example provides a recommended configuration of FortiLink where multi-tier FortiSwitches are managed by a standalone FortiGate as switch controller via aggregate interface, where the FortiGate can provide active-active links to two distribution FortiSwitches connected to each other by MCLAG.

Prerequisites:

- The FortiGate model supports an aggregate interface.
- FortiSwitch units have been upgraded to latest released software version.
- Layer-3 path/route in the management VDOM is available to Internet so that the FortiSwitch units can synchronize NTP.
- For the FortiSwitch D series, the models above 4 just support MCLAG. For the FortiSwitch E series, the models above 2 just support MCLAG.

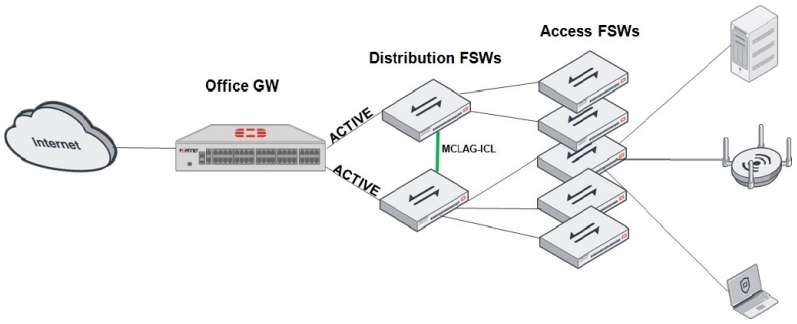

Change the FortiSwitch management mode to FortiLink:

Enter the following CLI commands on the FortiSwitch:

```
config system global
   set switch-mgmt-mode fortilink
end
This operation will cleanup all of the configuration and reboot the system!
Do you want to continue? (y/n)y
Backing up local mode config before entering FortiLink mode....
```

If the FortiSwitch ports used for the FortiLink connection have `auto-discovery-fortilink` enabled, executing authorization on FortiGate will trigger the transformation to FortiLink mode automatically.

```
config switch interface
  edit "port1"
       set auto-discovery-fortilink enable
       ……
  next
end
```

Create an aggregate interface and designate it as Fortilink interface on the FortiGate:

Using the CLI:

```
config system interface
    edit "aggr1"
        set vdom "vdom1"
        set fortilink enable
        set type aggregate
        set member "port11" "port12"
        set fortilink-split-interface disable
    next
end
```

`fortilink-split-interface` must be disabled for MCLAG to work.

Using the GUI:

1. Go to *WiFi & Switch Controller* > *FortiLink Interface*.
2. In *Interface members*, select one or more physical ports that are connected to different distribution FortiSwitches to create an aggregate interface.
3. Disable *FortiLink split interface*.
4. Configure other fields as necessary.
5. Click *OK*.

Discover and authorize the FortiSwitch:

Using the CLI:

```
config switch-controller managed-switch
    edit "FSWSerialNum"
        set fsw-wan1-admin enable
        ……
    next
end
```

Check the CLI output for `Connection: Connected` to show that FortiLink is up:

```
execute switch-controller get-conn-status FSWSerialNum

Get managed-switch S248EPTF18001384 connection status:
Admin Status: Authorized
Connection: Connected
Image Version: S248EP-v6.2.0-build143,190107 (Interim)
Remote Address: 2.2.2.2
Join Time: Fri Jan 11 15:22:32 2019

   interface   status   duplex    speed fortilink stacking       poe status
       port1       up     full  1000Mbps       no       no  Delivering Power
       port2     down      N/A     0           no       no         Searching
        ……
```

Using the GUI:

1. Go to *WiFi & Switch Controller* > *Managed FortiSwitch*.
2. Click *Authorize* and wait for a few minutes for the connection to be established.
   When FortiLink between the FortiGate and FortiSwitch is established, the Link-up ports change to green and the POE port that is supplying power changes to blue. The dotted line between the FortiGate and FortiSwitch changes to a solid line. The Connection status shows that FortiLink is up.

Enable MCLAG on the ICL link between the distribution FortiSwitch devices:

```
conf switch trunk
    edit "4DN4K15000008-0"
        set mclag-icl enable
    next
end
```

When you enable `mclag-icl`, MCLAG on the FortiLink interface is enabled automatically and active-active backup links between the distribution FortiSwitches are established.

Extend the security perimeter to the edge of FortiSwitch:

1. Configure the VLAN arrangement.
   a. On the FortiGate, go to *WiFi & Switch Controller* > *FortiSwitch VLANs*.
   b. Configure the VLAN interfaces that are applied on FortiSwitch.
      On FortiGate, these switch VLAN interfaces are treated as layer-3 interfaces and are available to be applied by firewall policy and other security controls in FortiOS. This means that security boundary is extended to FortiSwitch.

2. Configure FortiSwitch ports.
   a. On the FortiGate, go to *WiFi & Switch Controller* > *FortiSwitch Ports*.
   b. Select one or more FortiSwitch ports and assign them to the switch VLAN.
   c. You can also select *POE/DHCP Snooping*, *STP*, and other parameters for the FortiSwitch ports to show their real-time status such as link status, data statistics, etc.
3. Configure access authentication.
   a. On the FortiGate, go to *WiFi & Switch Controller* > *FortiSwitch Security Policies*.
   b. Configure the *802.1X* security policies.
   c. Select *Port-based* or *MAC-based* mode and select *User groups* from the existing VDOM.
   d. Configure other fields as necessary.
   e. Go to *WiFi & Switch Controller* > *FortiSwitch Ports*.
   f. Select one or more FortiSwitch ports, click + in the *Security Policy* column, then make a selection from the pane.

Troubleshooting

Authorized FortiSwitch always offline

If an authorized FortiSwitch is always offline, go to the FortiGate CLI and use the command below to see all the checkpoints. Inspect each checkpoint to find the cause of the problem.

```
execute switch-controller diagnose-connection  S248EPTF18001384

Fortilink interface ... OK
aggr1  enabled

DHCP server ... OK
aggr1  enabled

NTP server ... OK
aggr1  enabled
NTP server sync ... OK
synchronized: yes, ntpsync: enabled, server-mode: enabled

ipv4 server(ntp1.fortiguard.com) 208.91.113.70 -- reachable(0x80) S:2 T:128
         no data
ipv4 server(ntp2.fortiguard.com) 208.91.113.71 -- reachable(0x80) S:2 T:128
         no data
ipv4 server(ntp2.fortiguard.com) 208.91.112.51 -- reachable(0xff) S:2 T:66 selected
        server-version=4, stratum=2
        reference time is dfe3aec5.744404e6 -- UTC Sat Jan 12 00:09:41 2019
        clock offset is -0.320411 sec, root delay is 0.054535 sec
        root dispersion is 0.533081 sec, peer dispersion is 11495 msec

ipv4 server(ntp1.fortiguard.com) 208.91.112.50 -- reachable(0xff) S:2 T:66
        server-version=4, stratum=2
        reference time is dfe3aec5.744404e6 -- UTC Sat Jan 12 00:09:41 2019
        clock offset is -0.448087 sec, root delay is 0.054535 sec
        root dispersion is 0.533081 sec, peer dispersion is 12542 msec

HA mode ... disabled

Fortilink
```

```
Status ... SWITCH_AUTHORIZED_READY
Last keepalive ... 1 seconds ago

CAPWAP
Remote Address: 2.2.2.2
Status ... CONNECTED
Last keepalive ... 26 seconds ago

PING 2.2.2.2 (2.2.2.2): 56 data bytes
64 bytes from 2.2.2.2: icmp_seq=0 ttl=64 time=1.1 ms
64 bytes from 2.2.2.2: icmp_seq=1 ttl=64 time=13.9 ms
64 bytes from 2.2.2.2: icmp_seq=2 ttl=64 time=12.7 ms
64 bytes from 2.2.2.2: icmp_seq=3 ttl=64 time=2.9 ms
64 bytes from 2.2.2.2: icmp_seq=4 ttl=64 time=1.2 ms

--- 2.2.2.2 ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max = 1.1/6.3/13.9 ms
```

HA (A-P) mode FortiGate pairs as switch controller

The following recipes provide instructions on configuring a FortiGate HA in Active-Passive (A-P) mode as a switch controller:


- Multiple FortiSwitches managed via hardware/software switch on page 1524
- Multiple FortiSwitches in tiers via aggregate interface with redundant link enabled on page 1528
- Multiple FortiSwitches in tiers via aggregate interface with MCLAG enabled only on distribution on page 1532

Multiple FortiSwitches managed via hardware/software switch

This example provides a recommended configuration of FortiLink where multiple FortiSwitches are managed by an A-P mode HA cluster of FortiGates as switch controller via hardware or software switch interface. An example of common usage is when you need multiple distribution FortiSwitches but lack supporting aggregate on the FortiGate pairs.

Prerequisites:

- The FortiGate model supports hardware or software switch interface.
- FortiSwitch units have been upgraded to latest released software version.
- Layer-3 path/route in the management VDOM is available to Internet so that the FortiSwitch units can synchronize NTP.

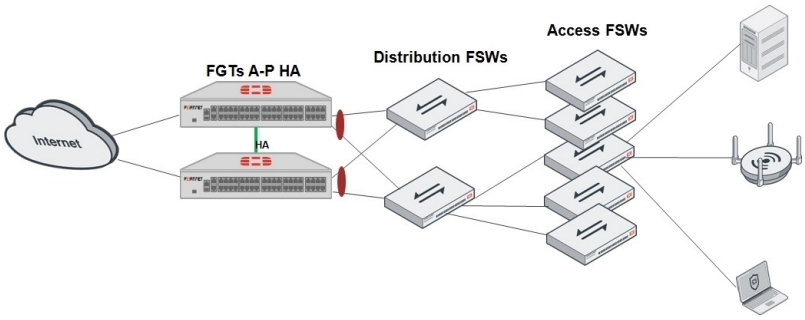

Change the FortiSwitch management mode to FortiLink:

Enter the following CLI commands on the FortiSwitch:

```
config system global
   set switch-mgmt-mode fortilink
end
This operation will cleanup all of the configuration and reboot the system!
Do you want to continue? (y/n)y
Backing up local mode config before entering FortiLink mode....
```

If the FortiSwitch ports used for the FortiLink connection have `auto-discovery-fortilink` enabled, executing authorization on FortiGate will trigger the transformation to FortiLink mode automatically.

```
config switch interface
  edit "port1"
       set auto-discovery-fortilink enable
       ……
  next
end
```

Set up an A-P mode HA cluster:

See HA active-passive cluster setup on page 683.

Create hardware or software switch interface and designate it as FortiLink interface on the FortiGate:

Create a hardware switch using the CLI:

```
config system virtual-switch
    edit "hardswitch1"
        set physical-switch "sw0"
        config port
            edit "port11"
            next
            edit "port12"
            next
        end
    next
end
```

Create a software switch using the CLI:

```
config system switch-interface
    edit "softswitch1"
```

```
        set vdom "vdom1"
        set member "port11"  "port12"
    next
end
```

Using the GUI:

1. Go to *WiFi & Switch Controller* > *FortiLink Interface*.
2. In *Interface members*, select an existing hardware/software switch interface (if there is one) or select one or more physical ports to create a hardware/software switch interface.
3. Configure other fields as necessary.
4. Click *OK*.

Discover and authorize the FortiSwitch:

Using the CLI:

```
config switch-controller managed-switch
    edit "FSWSerialNum"
        set fsw-wan1-admin enable
        ……
    next
end
```

Check the CLI output for `Connection: Connected` to show that FortiLink is up:

```
execute switch-controller get-conn-status FSWSerialNum

Get managed-switch S248EPTF18001384 connection status:
Admin Status: Authorized
Connection: Connected
Image Version: S248EP-v6.2.0-build143,190107 (Interim)
Remote Address: 2.2.2.2
Join Time: Fri Jan 11 15:22:32 2019

   interface   status   duplex    speed fortilink stacking       poe status
       port1       up     full  1000Mbps       no       no  Delivering Power
       port2     down      N/A     0           no       no         Searching
        ……
```

Using the GUI:

1. Go to *WiFi & Switch Controller* > *Managed FortiSwitch*.
2. Click *Authorize* and wait for a few minutes for the connection to be established.
   When FortiLink between the FortiGate and FortiSwitch is established, the Link-up ports change to green and the POE port that is supplying power changes to blue. The dotted line between the FortiGate and FortiSwitch changes to a solid line. The Connection status shows that FortiLink is up.

Extend the security perimeter to the edge of FortiSwitch:

1. Configure the VLAN arrangement.
   a. On the FortiGate, go to *WiFi & Switch Controller* > *FortiSwitch VLANs*.
   b. Configure the VLAN interfaces that are applied on FortiSwitch.
      On FortiGate, these switch VLAN interfaces are treated as layer-3 interfaces and are available to be applied by firewall policy and other security controls in FortiOS. This means that security boundary is extended to FortiSwitch.

2. Configure FortiSwitch ports.
   a. On the FortiGate, go to *WiFi & Switch Controller* > *FortiSwitch Ports*.
   b. Select one or more FortiSwitch ports and assign them to the switch VLAN.
   c. You can also select *POE/DHCP Snooping*, *STP*, and other parameters for the FortiSwitch ports to show their real-time status such as link status, data statistics, etc.
3. Configure access authentication.
   a. On the FortiGate, go to *WiFi & Switch Controller* > *FortiSwitch Security Policies*.
   b. Configure the *802.1X* security policies.
   c. Select *Port-based* or *MAC-based* mode and select *User groups* from the existing VDOM.
   d. Configure other fields as necessary.
   e. Go to *WiFi & Switch Controller* > *FortiSwitch Ports*.
   f. Select one or more FortiSwitch ports, click + in the *Security Policy* column, then make a selection from the pane.

Troubleshooting

Bind FortiLink on hardware switch interface

Fortinet recommends binding FortiLink on the hardware switch interface. Since the hardware switch interface can leverage hardware chips to forward traffic, it does not consume CPU capacity, unlike a software switch.

Authorized FortiSwitch always offline

If an authorized FortiSwitch is always offline, go to the FortiGate CLI and use the command below to see all the checkpoints. Inspect each checkpoint to find the cause of the problem.

```
execute switch-controller diagnose-connection  S248EPTF18001384


Fortilink interface ... OK
hardswitch1 enabled

DHCP server ... OK
hardswitch1  enabled

NTP server ... OK
hardswitch1  enabled
NTP server sync ... OK
synchronized: yes, ntpsync: enabled, server-mode: enabled

ipv4 server(ntp1.fortiguard.com) 208.91.113.70 -- reachable(0x80) S:2 T:128
         no data
ipv4 server(ntp2.fortiguard.com) 208.91.113.71 -- reachable(0x80) S:2 T:128
         no data
ipv4 server(ntp2.fortiguard.com) 208.91.112.51 -- reachable(0xff) S:2 T:66 selected
        server-version=4, stratum=2
        reference time is dfe3aec5.744404e6 -- UTC Sat Jan 12 00:09:41 2019
        clock offset is -0.320411 sec, root delay is 0.054535 sec
        root dispersion is 0.533081 sec, peer dispersion is 11495 msec

ipv4 server(ntp1.fortiguard.com) 208.91.112.50 -- reachable(0xff) S:2 T:66
        server-version=4, stratum=2
```

```
        reference time is dfe3aec5.744404e6 -- UTC Sat Jan 12 00:09:41 2019
        clock offset is -0.448087 sec, root delay is 0.054535 sec
        root dispersion is 0.533081 sec, peer dispersion is 12542 msec

HA mode ... disabled

Fortilink
Status ... SWITCH_AUTHORIZED_READY
Last keepalive ... 1 seconds ago

CAPWAP
Remote Address: 2.2.2.2
Status ... CONNECTED
Last keepalive ... 26 seconds ago


PING 2.2.2.2 (2.2.2.2): 56 data bytes
64 bytes from 2.2.2.2: icmp_seq=0 ttl=64 time=1.1 ms
64 bytes from 2.2.2.2: icmp_seq=1 ttl=64 time=13.9 ms
64 bytes from 2.2.2.2: icmp_seq=2 ttl=64 time=12.7 ms
64 bytes from 2.2.2.2: icmp_seq=3 ttl=64 time=2.9 ms
64 bytes from 2.2.2.2: icmp_seq=4 ttl=64 time=1.2 ms

--- 2.2.2.2 ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max = 1.1/6.3/13.9 ms
```

HA sync fails

If HA sync fails, use the command below to diagnose and locate the cause.


```
# diagnose sys ha checksum cluster
```

Multiple FortiSwitches in tiers via aggregate interface with redundant link enabled

This example provides a recommended configuration of FortiLink where multi-tier FortiSwitches are managed by an A-P mode HA cluster of FortiGates as switch controller via aggregate interface, where each FortiGate cluster member can provide redundant links to multiple (>=2) distribution FortiSwitches.

Prerequisites:

- The FortiGate model supports an aggregate interface.
- FortiSwitch units have been upgraded to latest released software version.
- Layer-3 path/route in the management VDOM is available to Internet so that the FortiSwitch units can synchronize NTP.

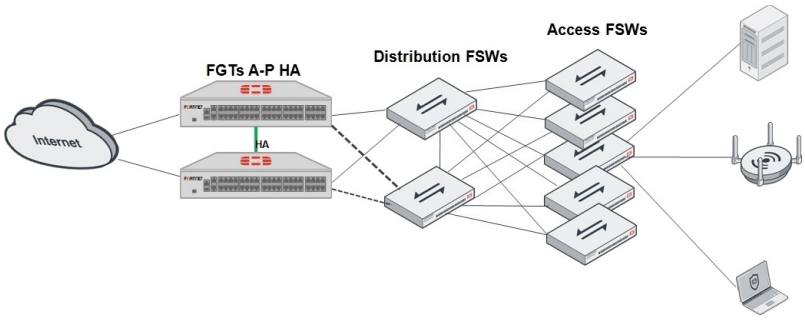

Change the FortiSwitch management mode to FortiLink:

Enter the following CLI commands on the FortiSwitch:

```
config system global
   set switch-mgmt-mode fortilink
end
This operation will cleanup all of the configuration and reboot the system!
Do you want to continue? (y/n)y
Backing up local mode config before entering FortiLink mode....
```

If the FortiSwitch ports used for the FortiLink connection have `auto-discovery-fortilink` enabled, executing authorization on FortiGate will trigger the transformation to FortiLink mode automatically.

```
config switch interface
  edit "port1"
       set auto-discovery-fortilink enable
       ……
  next
end
```

Set up an A-P mode HA cluster:

See HA active-passive cluster setup on page 683.

Create an aggregate interface and designate it as Fortilink interface on the FortiGate:

Using the CLI:

```
config system interface
    edit "aggr1"
        set vdom "vdom1"
        set fortilink enable
        set type aggregate
        set member "port11" "port12"
        set fortilink-split-interface enable
    next
end
```

Using the GUI:

1. Go to *WiFi & Switch Controller* > *FortiLink Interface*.
2. In *Interface members*, select one or more physical ports that are connected to different distribution FortiSwitches to create an aggregate interface.
3. Enable *FortiLink split interface*.

4. Configure other fields as necessary.
5. Click *OK*.

Discover and authorize the FortiSwitch:

Using the CLI:

```
config switch-controller managed-switch
    edit "FSWSerialNum"
        set fsw-wan1-admin enable
        ……
    next
end
```

Check the CLI output for `Connection: Connected` to show that FortiLink is up:

```
execute switch-controller get-conn-status FSWSerialNum

Get managed-switch S248EPTF18001384 connection status:
Admin Status: Authorized
Connection: Connected
Image Version: S248EP-v6.2.0-build143,190107 (Interim)
Remote Address: 2.2.2.2
Join Time: Fri Jan 11 15:22:32 2019

   interface   status   duplex    speed fortilink stacking       poe status
       port1       up     full  1000Mbps       no       no  Delivering Power
       port2     down      N/A     0           no       no         Searching
        ……
```

Using the GUI:

1. Go to *WiFi & Switch Controller* > *Managed FortiSwitch*.
2. Click *Authorize* and wait for a few minutes for the connection to be established.
   When FortiLink between the FortiGate and FortiSwitch is established, the Link-up ports change to green and the POE port that is supplying power changes to blue. The dotted line between the FortiGate and FortiSwitch changes to a solid line. The Connection status shows that FortiLink is up.

Extend the security perimeter to the edge of FortiSwitch:

1. Configure the VLAN arrangement.
   a. On the FortiGate, go to *WiFi & Switch Controller* > *FortiSwitch VLANs*.
   b. Configure the VLAN interfaces that are applied on FortiSwitch.
      On FortiGate, these switch VLAN interfaces are treated as layer-3 interfaces and are available to be applied by firewall policy and other security controls in FortiOS. This means that security boundary is extended to FortiSwitch.
2. Configure FortiSwitch ports.
   a. On the FortiGate, go to *WiFi & Switch Controller* > *FortiSwitch Ports*.
   b. Select one or more FortiSwitch ports and assign them to the switch VLAN.
   c. You can also select *POE/DHCP Snooping*, *STP*, and other parameters for the FortiSwitch ports to show their real-time status such as link status, data statistics, etc.
3. Configure access authentication.
   a. On the FortiGate, go to *WiFi & Switch Controller* > *FortiSwitch Security Policies*.
   b. Configure the *802.1X* security policies.

c. Select *Port-based* or *MAC-based* mode and select *User groups* from the existing VDOM.
d. Configure other fields as necessary.
e. Go to *WiFi & Switch Controller > FortiSwitch Ports*.
f. Select one or more FortiSwitch ports, click + in the *Security Policy* column, then make a selection from the pane.

Troubleshooting

Authorized FortiSwitch always offline

If an authorized FortiSwitch is always offline, go to the FortiGate CLI and use the command below to see all the checkpoints. Inspect each checkpoint to find the cause of the problem.

```
execute switch-controller diagnose-connection  S248EPTF18001384


Fortilink interface ... OK
aggr1  enabled

DHCP server ... OK
aggr1  enabled

NTP server ... OK
aggr1  enabled
NTP server sync ... OK
synchronized: yes, ntpsync: enabled, server-mode: enabled

ipv4 server(ntp1.fortiguard.com) 208.91.113.70 -- reachable(0x80) S:2 T:128
        no data
ipv4 server(ntp2.fortiguard.com) 208.91.113.71 -- reachable(0x80) S:2 T:128
        no data
ipv4 server(ntp2.fortiguard.com) 208.91.112.51 -- reachable(0xff) S:2 T:66 selected
       server-version=4, stratum=2
       reference time is dfe3aec5.744404e6 -- UTC Sat Jan 12 00:09:41 2019
       clock offset is -0.320411 sec, root delay is 0.054535 sec
       root dispersion is 0.533081 sec, peer dispersion is 11495 msec

ipv4 server(ntp1.fortiguard.com) 208.91.112.50 -- reachable(0xff) S:2 T:66
       server-version=4, stratum=2
       reference time is dfe3aec5.744404e6 -- UTC Sat Jan 12 00:09:41 2019
       clock offset is -0.448087 sec, root delay is 0.054535 sec
       root dispersion is 0.533081 sec, peer dispersion is 12542 msec

HA mode ... disabled

Fortilink
Status ... SWITCH_AUTHORIZED_READY
Last keepalive ... 1 seconds ago

CAPWAP
Remote Address: 2.2.2.2
Status ... CONNECTED
Last keepalive ... 26 seconds ago
```

```
PING 2.2.2.2 (2.2.2.2): 56 data bytes
64 bytes from 2.2.2.2: icmp_seq=0 ttl=64 time=1.1 ms
64 bytes from 2.2.2.2: icmp_seq=1 ttl=64 time=13.9 ms
64 bytes from 2.2.2.2: icmp_seq=2 ttl=64 time=12.7 ms
64 bytes from 2.2.2.2: icmp_seq=3 ttl=64 time=2.9 ms
64 bytes from 2.2.2.2: icmp_seq=4 ttl=64 time=1.2 ms

--- 2.2.2.2 ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max = 1.1/6.3/13.9 ms
```

HA sync fails

If HA sync fails, use the command below to diagnose and locate the cause.


```
# diagnose sys ha checksum cluster
```

Multiple FortiSwitches in tiers via aggregate interface with MCLAG enabled only on distribution

This example provides a recommended configuration of FortiLink where multi-tier FortiSwitches are managed by an A-P mode HA cluster of FortiGates as switch controller via aggregate interface, where FortiGates provide active-active links to two distribution FortiSwitches connected to each other by MCLAG.

Prerequisites:

- The FortiGate model supports an aggregate interface.
- FortiSwitch units have been upgraded to latest released software version.
- Layer-3 path/route in the management VDOM is available to Internet so that the FortiSwitch units can synchronize NTP.
- For the FortiSwitch D series, the models above 4 just support MCLAG. For the FortiSwitch E series, the models above 2 just support MCLAG.

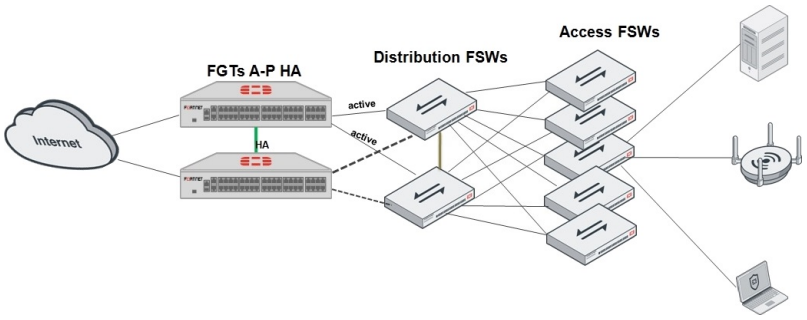

Change the FortiSwitch management mode to FortiLink:

Enter the following CLI commands on the FortiSwitch:

```
config system global
   set switch-mgmt-mode fortilink
end
This operation will cleanup all of the configuration and reboot the system!
```

```
Do you want to continue? (y/n)y
Backing up local mode config before entering FortiLink mode....
```

If the FortiSwitch ports used for the FortiLink connection have `auto-discovery-fortilink` enabled, executing authorization on FortiGate will trigger the transformation to FortiLink mode automatically.

```
config switch interface
  edit "port1"
       set auto-discovery-fortilink enable
       ……
  next
end
```

Set up an A-P mode HA cluster:

See HA active-passive cluster setup on page 683.

Create an aggregate interface and designate it as Fortilink interface on the FortiGate:

Using the CLI:

```
config system interface
    edit "aggr1"
        set vdom "vdom1"
        set fortilink enable
        set type aggregate
        set member "port11" "port12"
        set fortilink-split-interface disable
    next
end
```

`fortilink-split-interface` must be disabled for MCLAG to work.

Using the GUI:

1. Go to *WiFi & Switch Controller* > *FortiLink Interface*.
2. In *Interface members*, select one or more physical ports that are connected to different distribution FortiSwitches to create an aggregate interface.
3. Disable *FortiLink split interface*.
4. Configure other fields as necessary.
5. Click *OK*.

Discover and authorize the FortiSwitch:

Using the CLI:

```
config switch-controller managed-switch
    edit "FSWSerialNum"
        set fsw-wan1-admin enable
        ……
    next
end
```

Check the CLI output for `Connection: Connected` to show that FortiLink is up:

```
execute switch-controller get-conn-status FSWSerialNum
```

```
Get managed-switch S248EPTF18001384 connection status:
Admin Status: Authorized
Connection: Connected
Image Version: S248EP-v6.2.0-build143,190107 (Interim)
Remote Address: 2.2.2.2
Join Time: Fri Jan 11 15:22:32 2019

   interface   status   duplex    speed fortilink stacking       poe status
       port1       up     full  1000Mbps       no       no  Delivering Power
       port2     down      N/A     0           no       no          Searching
         ……
```

Using the GUI:

1. Go to *WiFi & Switch Controller* > *Managed FortiSwitch*.
2. Click *Authorize* and wait for a few minutes for the connection to be established.
   When FortiLink between the FortiGate and FortiSwitch is established, the Link-up ports change to green and the POE port that is supplying power changes to blue. The dotted line between the FortiGate and FortiSwitch changes to a solid line. The Connection status shows that FortiLink is up.

Enable MCLAG on the ICL link between the distribution FortiSwitch devices:

```
conf switch trunk
    edit "4DN4K15000008-0"
        set mclag-icl enable
    next
end
```

When you enable `mclag-icl`, MCLAG on the FortiLink interface is enabled automatically and active-active backup links between the distribution FortiSwitches are established.

Extend the security perimeter to the edge of FortiSwitch:

1. Configure the VLAN arrangement.
   a. On the FortiGate, go to *WiFi & Switch Controller* > *FortiSwitch VLANs*.
   b. Configure the VLAN interfaces that are applied on FortiSwitch.
      On FortiGate, these switch VLAN interfaces are treated as layer-3 interfaces and are available to be applied by firewall policy and other security controls in FortiOS. This means that security boundary is extended to FortiSwitch.
2. Configure FortiSwitch ports.
   a. On the FortiGate, go to *WiFi & Switch Controller* > *FortiSwitch Ports*.
   b. Select one or more FortiSwitch ports and assign them to the switch VLAN.
   c. You can also select *POE/DHCP Snooping*, *STP*, and other parameters for the FortiSwitch ports to show their real-time status such as link status, data statistics, etc.
3. Configure access authentication.
   a. On the FortiGate, go to *WiFi & Switch Controller* > *FortiSwitch Security Policies*.
   b. Configure the *802.1X* security policies.
   c. Select *Port-based* or *MAC-based* mode and select *User groups* from the existing VDOM.
   d. Configure other fields as necessary.
   e. Go to *WiFi & Switch Controller* > *FortiSwitch Ports*.
   f. Select one or more FortiSwitch ports, click + in the *Security Policy* column, then make a selection from the pane.

Troubleshooting

Authorized FortiSwitch always offline

If an authorized FortiSwitch is always offline, go to the FortiGate CLI and use the command below to see all the checkpoints. Inspect each checkpoint to find the cause of the problem.

```
execute switch-controller diagnose-connection  S248EPTF18001384


Fortilink interface ... OK
aggr1  enabled

DHCP server ... OK
aggr1  enabled

NTP server ... OK
aggr1  enabled
NTP server sync ... OK
synchronized: yes, ntpsync: enabled, server-mode: enabled

ipv4 server(ntp1.fortiguard.com) 208.91.113.70 -- reachable(0x80) S:2 T:128
         no data
ipv4 server(ntp2.fortiguard.com) 208.91.113.71 -- reachable(0x80) S:2 T:128
         no data
ipv4 server(ntp2.fortiguard.com) 208.91.112.51 -- reachable(0xff) S:2 T:66 selected
        server-version=4, stratum=2
        reference time is dfe3aec5.744404e6 -- UTC Sat Jan 12 00:09:41 2019
        clock offset is -0.320411 sec, root delay is 0.054535 sec
        root dispersion is 0.533081 sec, peer dispersion is 11495 msec

ipv4 server(ntp1.fortiguard.com) 208.91.112.50 -- reachable(0xff) S:2 T:66
        server-version=4, stratum=2
        reference time is dfe3aec5.744404e6 -- UTC Sat Jan 12 00:09:41 2019
        clock offset is -0.448087 sec, root delay is 0.054535 sec
        root dispersion is 0.533081 sec, peer dispersion is 12542 msec

HA mode ... disabled

Fortilink
Status ... SWITCH_AUTHORIZED_READY
Last keepalive ... 1 seconds ago

CAPWAP
Remote Address: 2.2.2.2
Status ... CONNECTED
Last keepalive ... 26 seconds ago


PING 2.2.2.2 (2.2.2.2): 56 data bytes
64 bytes from 2.2.2.2: icmp_seq=0 ttl=64 time=1.1 ms
64 bytes from 2.2.2.2: icmp_seq=1 ttl=64 time=13.9 ms
64 bytes from 2.2.2.2: icmp_seq=2 ttl=64 time=12.7 ms
64 bytes from 2.2.2.2: icmp_seq=3 ttl=64 time=2.9 ms
64 bytes from 2.2.2.2: icmp_seq=4 ttl=64 time=1.2 ms
```

```
--- 2.2.2.2 ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max = 1.1/6.3/13.9 ms
```

HA sync fails

If HA sync fails, use the command below to diagnose and locate the cause.


```
# diagnose sys ha checksum cluster
```

Multiple FortiSwitches in tiers via aggregate interface with MCLAG enabled on all tiers

This example provides a recommended configuration of FortiLink where multi-tier FortiSwitch devices are managed by an A-P mode HA cluster of FortiGates acting as a switch controller via an aggregate interface. The FortiGates provide A-A links to two distribution FortiSwitches that are connected to each other by MCLAG. All access FortiSwitch devices have A-A links with two upper tier FortiSwitches, as long as the MCLAG-ICL has been enabled between the upper tiers.

Prerequisites:

- The FortiGate model supports an aggregate interface.
- FortiSwitch units have been upgraded to latest released software version.
- Layer-3 path/route in the management VDOM is available to Internet so that the FortiSwitch units can synchronize NTP.
- For the FortiSwitch D series, the models above 4 just support MCLAG. For the FortiSwitch E series, the models above 2 just support MCLAG.

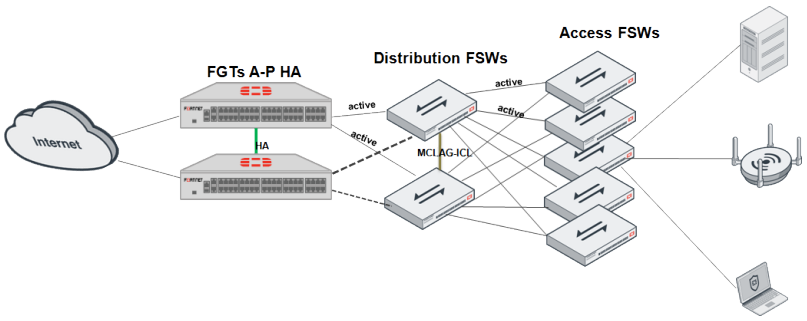

Change the FortiSwitch management mode to FortiLink:

Enter the following CLI commands on the FortiSwitch:

```
config system global
   set switch-mgmt-mode fortilink
end
This operation will cleanup all of the configuration and reboot the system!
Do you want to continue? (y/n)y
Backing up local mode config before entering FortiLink mode....
```

If the FortiSwitch ports used for the FortiLink connection have `auto-discovery-fortilink` enabled, executing authorization on FortiGate will trigger the transformation to FortiLink mode automatically.

```
config switch interface
  edit "port1"
       set auto-discovery-fortilink enable
       ……
  next
end
```

Set up an A-P mode HA cluster:

See HA active-passive cluster setup on page 683.

Create an aggregate interface and designate it as Fortilink interface on the FortiGate:

Using the CLI:

```
config system interface
    edit "aggr1"
        set vdom "vdom1"
        set fortilink enable
        set type aggregate
        set member "port11" "port12"
        set fortilink-split-interface disable
    next
end
```

`fortilink-split-interface` must be disabled for MCLAG to work.

Using the GUI:

1. Go to *WiFi & Switch Controller* > *FortiLink Interface*.
2. In *Interface members*, select one or more physical ports that are connected to different distribution FortiSwitches to create an aggregate interface.
3. Disable *FortiLink split interface*.
4. Configure other fields as necessary.
5. Click *OK*.

Discover and authorize the FortiSwitch:

Using the CLI:

```
config switch-controller managed-switch
    edit "FSWSerialNum"
        set fsw-wan1-admin enable
        ……
    next
end
```

Check the CLI output for `Connection: Connected` to show that FortiLink is up:

```
execute switch-controller get-conn-status FSWSerialNum

Get managed-switch S248EPTF18001384 connection status:
Admin Status: Authorized
Connection: Connected
Image Version: S248EP-v6.2.0-build143,190107 (Interim)
Remote Address: 2.2.2.2
```

```
Join Time: Fri Jan 11 15:22:32 2019

   interface   status   duplex    speed fortilink stacking       poe status
       port1       up     full  1000Mbps       no       no  Delivering Power
       port2     down      N/A     0           no       no          Searching
         ……
```

Using the GUI:

1. Go to *WiFi & Switch Controller* > *Managed FortiSwitch*.
2. Click *Authorize* and wait for a few minutes for the connection to be established.
   When FortiLink between the FortiGate and FortiSwitch is established, the Link-up ports change to green and the POE port that is supplying power changes to blue. The dotted line between the FortiGate and FortiSwitch changes to a solid line. The Connection status shows that FortiLink is up.

Enable MCLAG on the ICL link between the distribution FortiSwitch devices:

```
conf switch trunk
    edit "4DN4K15000008-0"
        set mclag-icl enable
    next
end
```

When you enable `mclag-icl`, MCLAG on the FortiLink interface is enabled automatically and active-active backup links between the distribution FortiSwitches are established.

Extend the security perimeter to the edge of FortiSwitch:

1. Configure the VLAN arrangement.
   a. On the FortiGate, go to *WiFi & Switch Controller* > *FortiSwitch VLANs*.
   b. Configure the VLAN interfaces that are applied on FortiSwitch.
      On FortiGate, these switch VLAN interfaces are treated as layer-3 interfaces and are available to be applied by firewall policy and other security controls in FortiOS. This means that security boundary is extended to FortiSwitch.
2. Configure FortiSwitch ports.
   a. On the FortiGate, go to *WiFi & Switch Controller* > *FortiSwitch Ports*.
   b. Select one or more FortiSwitch ports and assign them to the switch VLAN.
   c. You can also select *POE/DHCP Snooping*, *STP*, and other parameters for the FortiSwitch ports to show their real-time status such as link status, data statistics, etc.
3. Configure access authentication.
   a. On the FortiGate, go to *WiFi & Switch Controller* > *FortiSwitch Security Policies*.
   b. Configure the *802.1X* security policies.
   c. Select *Port-based* or *MAC-based* mode and select *User groups* from the existing VDOM.
   d. Configure other fields as necessary.
   e. Go to *WiFi & Switch Controller* > *FortiSwitch Ports*.
   f. Select one or more FortiSwitch ports, click + in the *Security Policy* column, then make a selection from the pane.

Troubleshooting

Authorized FortiSwitch always offline

If an authorized FortiSwitch is always offline, go to the FortiGate CLI and use the command below to see all the checkpoints. Inspect each checkpoint to find the cause of the problem.

```
execute switch-controller diagnose-connection  S248EPTF18001384


Fortilink interface ... OK
aggr1  enabled

DHCP server ... OK
aggr1  enabled

NTP server ... OK
aggr1  enabled
NTP server sync ... OK
synchronized: yes, ntpsync: enabled, server-mode: enabled

ipv4 server(ntp1.fortiguard.com) 208.91.113.70 -- reachable(0x80) S:2 T:128
         no data
ipv4 server(ntp2.fortiguard.com) 208.91.113.71 -- reachable(0x80) S:2 T:128
         no data
ipv4 server(ntp2.fortiguard.com) 208.91.112.51 -- reachable(0xff) S:2 T:66 selected
        server-version=4, stratum=2
        reference time is dfe3aec5.744404e6 -- UTC Sat Jan 12 00:09:41 2019
        clock offset is -0.320411 sec, root delay is 0.054535 sec
        root dispersion is 0.533081 sec, peer dispersion is 11495 msec

ipv4 server(ntp1.fortiguard.com) 208.91.112.50 -- reachable(0xff) S:2 T:66
        server-version=4, stratum=2
        reference time is dfe3aec5.744404e6 -- UTC Sat Jan 12 00:09:41 2019
        clock offset is -0.448087 sec, root delay is 0.054535 sec
        root dispersion is 0.533081 sec, peer dispersion is 12542 msec

HA mode ... disabled

Fortilink
Status ... SWITCH_AUTHORIZED_READY
Last keepalive ... 1 seconds ago

CAPWAP
Remote Address: 2.2.2.2
Status ... CONNECTED
Last keepalive ... 26 seconds ago


PING 2.2.2.2 (2.2.2.2): 56 data bytes
64 bytes from 2.2.2.2: icmp_seq=0 ttl=64 time=1.1 ms
64 bytes from 2.2.2.2: icmp_seq=1 ttl=64 time=13.9 ms
64 bytes from 2.2.2.2: icmp_seq=2 ttl=64 time=12.7 ms
64 bytes from 2.2.2.2: icmp_seq=3 ttl=64 time=2.9 ms
64 bytes from 2.2.2.2: icmp_seq=4 ttl=64 time=1.2 ms
```

```
--- 2.2.2.2 ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max = 1.1/6.3/13.9 ms
```

HA sync fails

If HA sync fails, use the command below to diagnose and locate the cause.

```
# diagnose sys ha checksum cluster
```

Authentication and security

The following recipes provide instructions on configuring switch related authentication and security:


- MAC-based 802.1X authentication on page 1540
- Port-based 802.1X authentication on page 1543
- MAC layer control - Sticky MAC and MAC Learning-limit on page 1546
- Quarantine on page 1548

MAC-based 802.1X authentication

This example show how to configure MAC-based 802.1X authentication to managed FortiSwitch ports when using FortiLink. Managed FortiSwitch devices will authenticate and record the MAC addresses of user devices. If there is a hub after the FortiSwitch that connects multiple user devices, each device can access the network after passing authentication.

Prerequisites:

- The certificates and authentication protocol supported by the supplicant software and RADIUS server are compatible.
- The managed FortiSwitches using FortiLink act as authenticators.

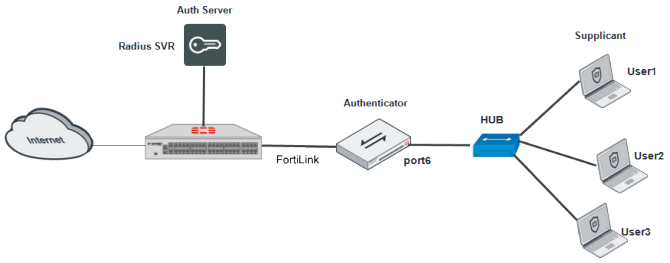

Create a firewall policy to allow the RADIUS authentication related traffic from the Fortilink interface to the outbound interface on the FortiGate:

```
config firewall policy
    edit 0
        set srcintf "fortilink-interface"
        set dstintf "outbound-interface-to-RadiusSVR"
        set srcaddr "all"
```

```
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "RADIUS"
        set nat enable
    next
end
```


Designate a RADIUS server and create a user group:

Using the CLI:

```
config user radius
     edit "Radius1"
         set server "172.18.60.203"
         set secret ENC 1dddddd
     next
end
config user group
     edit "Radius-Grp1"
        set member "Radius1"
     next
end
```

Using the GUI:

1. On the FortiGate, go to *User & Device* > *RADIUS Servers*.
2. Edit an existing server, or create a new one.
3. If necessary, add a *Name* for the server.
4. Set the *IP/Name* to *172.18.60.203* and *Secret* to *1dddddd* .
5. Configure other fields as necessary.
6. Click *OK*.
7. Go to *User & Device* > *User Groups*.
8. Create a new group, and add the RADIUS server to the *Remote Groups* list.

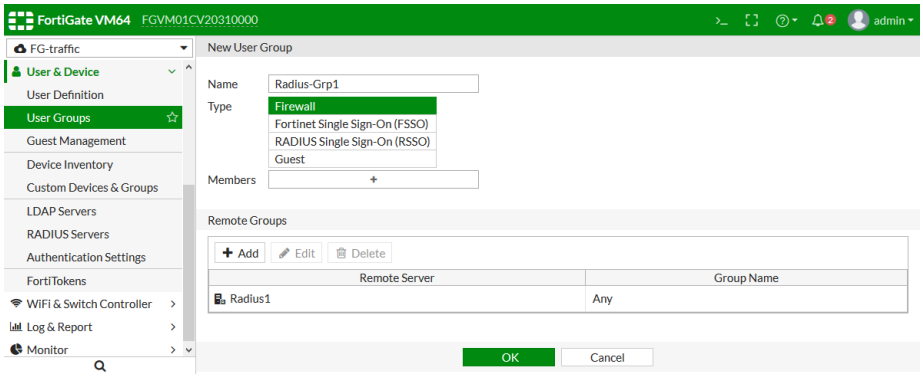

9. Click *OK*.

Use the new user group in a security policy:

Using the CLI:

```
config switch-controller security-policy 802-1X
    edit "802-1X-policy-default"
```

```
        set security-mode 802.1X-mac-based
        set user-group "Radius-Grp1"
        set mac-auth-bypass disable
        set open-auth disable
        set eap-passthru enable
        set guest-vlan disable
        set auth-fail-vlan disable
        set framevid-apply enable
        set radius-timeout-overwrite disable
    next
end
```

Configure the guest VLAN, authentication fail VLAN, and other parameters as needed.

Using the GUI:

1. Go to *WiFi & Switch Controller > FortiSwitch Security Policies*
2. Use the default *802-1X-policy-default*, or create a new security policy.
3. Use the RADIUS server group in the policy.
4. Set the *Security mode* to *MAC-based*.
5. Configure other fields as necessary.
6. Click *OK*.

Apply the security policy to the ports of the managed FortiSwitches:

Using the CLI:

```
config switch-controller  managed-switch
    edit S248EPTF1800XXXX
        config ports
            edit "port6"
                set port-security-policy "802-1X-policy-default"
            next
        end
    next
end
```

On the FortiSwitch, check the configuration:

```
config switch interface
    edit "port6"
        set allowed-vlans 4093
        set untagged-vlans 4093
        set security-groups "Radius-Grp1"
        set snmp-index 6
        config port-security
            set auth-fail-vlan disable
            set eap-passthru enable
            set framevid-apply enable
            set guest-auth-delay 30
            set guest-vlan disable
            set mac-auth-bypass disable
            set open-auth disable
            set port-security-mode 802.1X-mac-based
            set radius-timeout-overwrite disable
            set auth-fail-vlanid 200
            set guest-vlanid 100
```

```
        end
    next
end
```

Using the GUI:

1. On the FortiGate, go to *WiFi & Switch Controller* > *FortiSwitch VLANs*.
2. Configure the VLAN interfaces that are applied on FortiSwitch.
   On FortiGate, these switch VLAN interfaces are treated as layer-3 interfaces and are available to be applied by firewall policy and other security controls in FortiOS. This means that security boundary is extended to FortiSwitch.

Execute 802.1X authentication on a user device:

On Linux, run wpa_supplicant:

```
wpa_supplicant -c /etc/wpa_supplicant/local_supplicant.conf  -D wired -i eth2 -dd
```

On the FortiGate, view the status of the 802.1X authentication:

```
diagnose switch-controller switch-info 802.1X
Managed Switch : S248EPTF1800XXXX

   port6 : Mode: mac-based (mac-by-pass disable)     -----> MAC-based
           Link: Link up
           Port State: authorized: (  )              -----> Showing authorized means
auth passed. Otherwise, shown  failed
           EAP pass-through mode : Enable
           Native Vlan : 1
           Allowed Vlan list: 1,4093
           Untagged Vlan list: 1,4093
           Guest VLAN :
           Auth-Fail Vlan :

           Switch sessions 1/240,     Local port sessions:1/20
           Client    MAC          Type    Vlan  Dynamic-Vlan
           00:0c:29:d4:4f:3c     802.1x      1      0           -----> User device of
auth passed can access the network. Its MAC address is recored, while other User Devices
under same FSW ports still not allowed to access.


           Sessions info:
           00:0c:29:d4:4f:3c     Type=802.1x,MD5,state=AUTHENTICATED,etime=6,eap_cnt=3
params:reAuth=3600
```

Port-based 802.1X authentication

This example show how to configure Port-based 802.1X authentication to managed FortiSwitch ports when using FortiLink. Managed FortiSwitch devices will authenticate user devices per each FortiSwitch port. If there is a hub after the FortiSwitch that connects multiple user devices to the same port, they can all access the network after authentication, which is not recommended from a security perspective.

Prerequisites:

- The certificates and authentication protocol supported by the supplicant software and RADIUS server are compatible.
- The managed FortiSwitches using FortiLink act as authenticators.

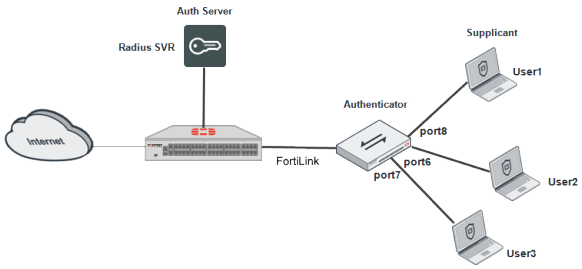

Create a firewall policy to allow the RADIUS authentication related traffic from the Fortilink interface to the outbound interface on the FortiGate:

```
config firewall policy
    edit 0
        set srcintf "fortilink-interface"
        set dstintf "outbound-interface-to-RadiusSVR"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "RADIUS"
        set nat enable
    next
end
```

Designate a RADIUS server and create a user group:


Using the CLI:

```
config user radius
      edit "Radius1"
          set server "172.18.60.203"
          set secret ENC 1dddddd
     next
end
config user group
     edit "Radius-Grp1"
         set member "Radius1"
     next
end
```

Using the GUI:

1. On the FortiGate, go to *User & Device* > *RADIUS Servers*.
2. Edit an existing server, or create a new one.
3. If necessary, add a *Name* for the server.
4. Set the *IP/Name* to *172.18.60.203* and *Secret* to *1dddddd* .
5. Configure other fields as necessary.
6. Click *OK*.
7. Go to *User & Device* > *User Groups*.

8. Create a new group, and add the RADIUS server to the *Remote Groups* list.

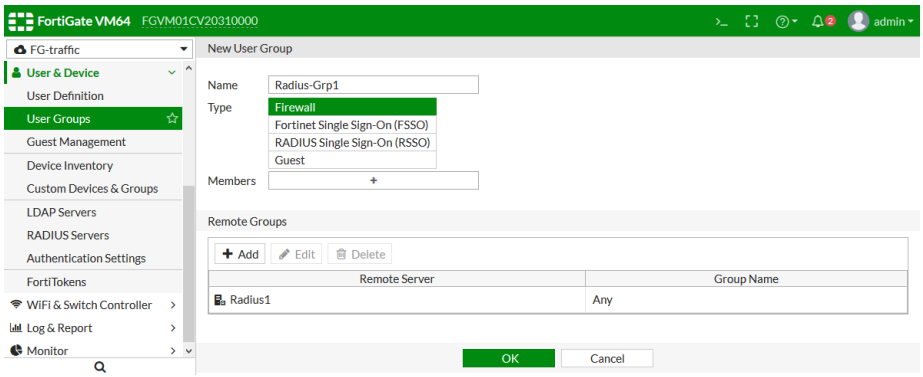

9. Click *OK*.

Use the new user group in a security policy:

Using the CLI:

```
config switch-controller security-policy 802-1X
    edit "802-1X-policy-default"
        set security-mode 802.1X
        set user-group "Radius-Grp1"
        set mac-auth-bypass disable
        set open-auth disable
        set eap-passthru enable
        set guest-vlan disable
        set auth-fail-vlan disable
        set framevid-apply enable
        set radius-timeout-overwrite disable
    next
end
```

Configure the guest VLAN, authentication fail VLAN, and other parameters as needed.

Using the GUI:

1. Go to *WiFi & Switch Controller* > *FortiSwitch Security Policies*
2. Use the default *802-1X-policy-default*, or create a new security policy.
3. Use the RADIUS server group in the policy.
4. Set the *Security mode* to *Port-based*.
5. Configure other fields as necessary.
6. Click *OK*.

Apply the security policy to the ports of the managed FortiSwitches:

Using the CLI:

```
config switch-controller  managed-switch
    edit S248EPTF1800XXXX
        config ports
            edit "port6"
                set port-security-policy "802-1X-policy-default"
            next
        end
```

```
    next
end
```

Using the GUI:

1. On the FortiGate, go to *WiFi & Switch Controller* > *FortiSwitch VLANs*.
2. Configure the VLAN interfaces that are applied on FortiSwitch.
   On FortiGate, these switch VLAN interfaces are treated as layer-3 interfaces and are available to be applied by firewall policy and other security controls in FortiOS. This means that security boundary is extended to FortiSwitch.

Execute 802.1X authentication on a user device:

On Linux, run wpa_supplicant:

```
wpa_supplicant -c /etc/wpa_supplicant/local_supplicant.conf  -D wired -i eth2 -dd
```

On the FortiGate, view the status of the 802.1X authentication:

```
diagnose switch-controller switch-info 802.1X Managed Switch : S248EPTF18001384

   port6 : Mode: port-based (mac-by-pass disable)
           Link: Link up
           Port State: authorized: (  )
           Dynamic Authorized Vlan : 0
           EAP pass-through mode : Enable
           Native Vlan : 1
           Allowed Vlan list: 1,4093
           Untagged Vlan list: 4093
           Guest VLAN :
           Auth-Fail Vlan :

           Sessions info:
           00:0c:29:d4:4f:3c     Type=802.1x,MD5,state=AUTHENTICATED,etime=0,eap_cnt=6
params:reAuth=3600
```


MAC layer control - Sticky MAC and MAC Learning-limit

Persistent MAC learning, or Sticky MAC, is a port security feature that lets an interface retain dynamically learned MAC addresses when a switch is restarted, or an interface goes down and then is brought back online.

Enabling Sticky MAC along with MAC Learning-limit restricts the number of MAC addresses that are learned. This prevents layer 2 Denial of Service (DoS) attacks, overflow attacks on the Ethernet switching table, and DHCP starvation attacks by limiting the number of MAC addresses that are allowed while still allowing the interface to learn a specified number of MAC addresses. The interface is secured because, after the specified limit has been reached, additional devices cannot connect to the port. Interfaces can be allowed to learn the MAC address of trusted workstations and servers from the time that the interfaces are connected to the network, until the MAC address limit is reached.

Prerequisites

- Sticky MAC save is hardware and CPU intensive if there are too many entries.
- Dual chip device models (X48 and XX48 FortiSwitch models) do not support MAC Learning-limit on VLANs, but still support it on FortiSwitch ports.

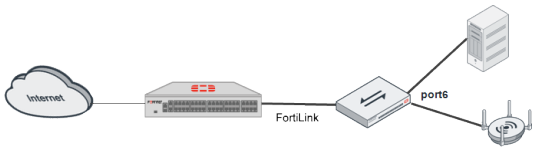

Enable Sticky MAC on the FortiSwitch ports view:

```
config switch-controller managed-switch
    edit S248EPTF18001384
        config ports
            edit port6
                set sticky-mac enable
            next
        end
    next
end
```

Check the MAC-table on the FortiSwitch to see that the status of related MAC items on the Sticky MAC enabled ports has changed from dynamic to static:

Before Sticky-MAC is enabled:

```
diagnose switch mac-address list
   MAC: 08:5b:0e:06:6a:d4 VLAN: 1 Port: port1(port-id 1) Flags: 0x00030440 [ hit
        dynamic src-hit native move ]
```

After Sticky-MAC is enabled:

```
diagnose switch mac-address list
   MAC: 00:0c:29:d4:4f:3c VLAN: 1 Port: port6(port-id 6) Flags: 0x00000020 [ static ]
```

Save Sticky-MAC items into the database and delete others:

Saving Sticky-MAC items from the running memory into the database, and deleting unsaved items, will ensure that, even after the FortiSwitch is rebooted, the trusted MAC addresses will be kept and will not need to be relearned.

```
execute switch-controller switch-action sticky-mac save all S248EPTF1800XXXX
   S248EPTF1800XXXX: Save started...
   Warning: Please wait save will take longer time upto 30 seconds...
   Collecting config data....Done
   Collecting hardware data....Done
   Saving....Done
   Sticky MAC entries saved = 1 ----------------> Number of saved Sticky MAC items is
        shown

execute switch-controller switch-action sticky-mac delete-unsaved all S248EPTF1800XXXX
```

Configure the MAC Learning-limit under the VLAN or managed FortiSwitch ports view:

VLAN view:


```
config system  interface
    edit vsw.aggr1
        set switch-controller-learning-limit 10
    next
end
```

Ports view:

```
config switch-controller managed-switch
    edit S248EPTF1800XXXX
        config ports
            edit port6
                set learning-limit  11
            next
        end
    next
end
```

Quarantine

When the FortiGate detects devices that have lower trust scores, lack mandatory installed software, or are sending out malicious traffic, an administrator can quarantine the device from the normal switch VLAN to the quarantine VLAN. This can limit the device's access, or provide them specific information on the quarantine portal page.

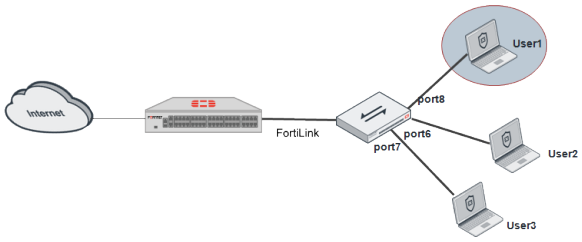

To quarantine an active device:

Using the CLI, based on the device's MAC address:

```
config user quarantine
    config targets
        edit "manual-qtn-1"
            set description "Manually quarantined"
            config macs
                edit 00:0c:29:d4:4f:3c
                    set description "manual-qtn "
                next
            end
        next
    end
end
```

Using the GUI:

1. On the FortiGate, go to *Security Fabric* > *Physical Topology*, or *Security Fabric* > *Logical Topology*.
2. Mouse over the bubble of an active device, and select *Quarantine Host* from the right-click menu.
3. Click *OK* in the *Quarantine Host* page to quarantine the device.

The quarantined device is moved to the quarantine VLAN, and the configuration of the FortiSwitch port does not change.

The quarantined device gets its IP address from the DHCP server on the quarantine VLAN interface. The network locations that the device can access depends on the firewall policies that are configured for the quarantine VLAN interface. By default, the device must acknowledge and accept the information on the Quarantine Portal before it can access any part of the network.

Release or clear the quarantine targets:

Using the CLI:

```
config user quarantine
    config targets
        delete "manual-qtn-1"
        ...
    end
end
```

```
config user quarantine
    config targets
        purge
    end
end
```

Using the GUI:

1. Go to *Monitor* > *Quarantine Monitor*.
2. Delete the quarantine targets as needed, or click *Remove All* to delete all the targets.

Flow and Device Detection


The following recipes provide information on flow and device detection:

- Data statistic on page 1549
- Security Fabric showing on page 1550

Data statistic

This example shows a FortiLink scenario where the FortiGate acts as the switch controller that collects the data statistics of managed FortiSwitch ports. This is counted by each FortiSwitch and concentrated in the controller.

Sample topology

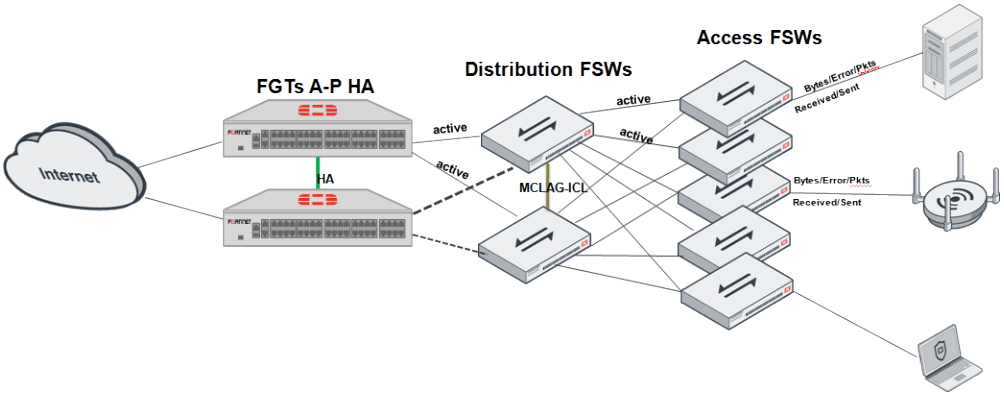

To show data statistics using the GUI:

1. Go to *WiFi & Switch Controller* > *FortiSwitch Ports*.
2. Select *Configure Table*.
3. Select *Bytes, Errors and Packets* to make them visible.

The related data statistic of each managed FortiSwitch port is shown.

To show data statistics using the CLI:


```
# diagnose switch-controller switch-info port-stats S248EPTF180XXXX
    ......

    Port(port50) is Admin up, line protocol is down
    Interface Type is Gigabit Media Independent Interface(GMII)
    Address is 70:4C:A5:E0:F3:8D, loopback is not set
    MTU 9216 bytes, Encapsulation IEEE 802.3/Ethernet-II
    full-duplex, 1000 Mb/s, link type is manual
    input  : 0 bytes, 0 packets, 0 errors, 0 drops, 0 oversizes
        0 unicasts, 0 multicasts, 0 broadcasts, 0 unknowns
    output : 0 bytes, 0 packets, 0 errors, 0 drops, 0 oversizes
        0 unicasts, 0 multicasts, 0 broadcasts
        0 fragments, 0 undersizes, 0 collisions, 0 jabbers
    ......
```

Security Fabric showing

This example shows one of the key components in the concept of Security Fabric: FortiSwitches in FortiLink. In the FortiGate GUI, you can see the whole picture of the Security Fabric working for your network security.


Sample topology

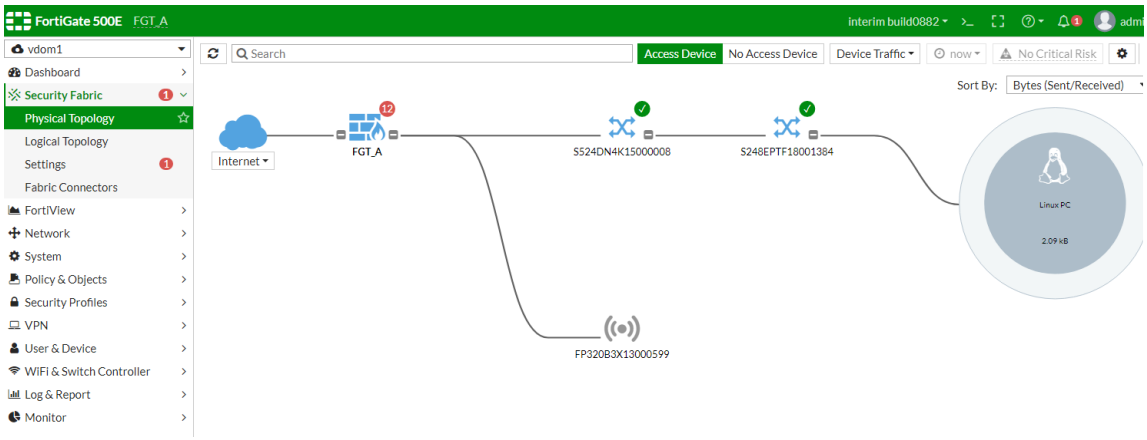

To show Security Fabric information:

1. Go to *Security Fabric* > *Physical Topology*.
2. To see the connection between FortiGates and managed FortiSwitches, hover the pointer over the icons to see

information about each network element.

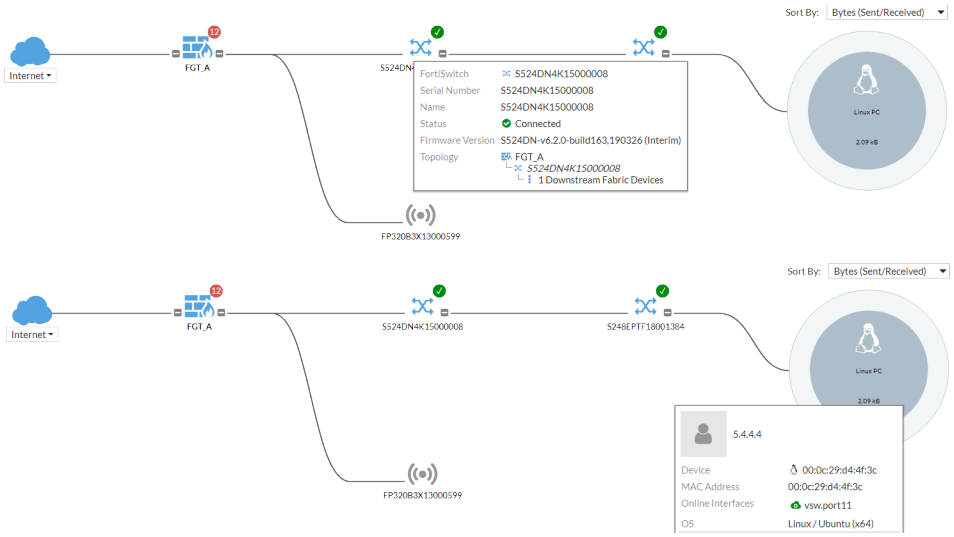

FortiSwitch multi-tenant support

A virtual switch provides a container for physical ports to be loaned to other VDOMs, allowing local management of the resource.

The following example shows how to export managed FortiSwitch ports to multitenant VDOMs. In this example, the owner VDOM is `vdom1`, and the tenant VDOM is `root`.

To export managed FortiSwitch ports to multitenant VDOMs:

1. Configure the switch VLAN interface, and assign it to the tenant VDOM:

```
(vdom1) # config system interface
    edit "fsw_vlan"
        set vdom "root"
        set device-identification enable
        set role lan
        set snmp-index 32
        set interface "fsw"
        set vlanid 100
    next
end
```

2. In the tenant VDOM, designate the `default-virtual-switch-vlan`, which is used to set the native VLAN of ports leased from the owner VDOM:

```
(root) # config switch-controller global
    set default-virtual-switch-vlan "fsw_vlan"
end
```

3. On `vdom1`, export the managed switch ports to the `root`:

```
(vdom1) # config switch-controller managed-switch
    edit S248EPTF1800XXXX
```

```
        set fsw-wan1-peer "fsw"
        set fsw-wan1-admin enable
        set version 1
        set dynamic-capability 100531703
        config ports
            edit "port1"
                set export-to "root"
            next
            ...
        end
    next
end
```

The lease port is now available under the tenant VDOM:

```
(root) # config switch-controller managed-switch
show
    config switch-controller managed-switch
        edit "S248EPTF1800XXXX"
            set type virtual
            set owner-vdom "vdom1"
            config ports
                edit "port1"
                    set vlan "fsw_vlan"
                next
            end
        next
    end
```

4. Export the managed FortiSwitch port to a virtual port pool for the tenant VDOM to choose from:

```
(vdom1) # config switch-controller virtual-port-pool
    edit "tenant-monthly"
    next
end
```

```
(vdom1) # config switch-controller managed-switch
    edit "S248EPTF1800XXXX"
        set fsw-wan1-peer "fsw"
        set fsw-wan1-admin enable
        set version 1
        set dynamic-capability 100531703
        config ports
            edit "port2"
                set vlan "vsw.fsw"
                set allowed-vlans "qtn.fsw"
                set untagged-vlans "qtn.fsw"
                set export-to-pool "tenant-monthly"
                set export-to "vdom1"
            next
            ...
        end
    next
end
```

5. Request the available port in the virtual port pool to use the switch port:

```
(root) # execute switch-controller virtual-port-pool request S248EPTF1800XXXX port2
```

```
(root) # config switch-controller managed-switch
    edit "S248EPTF1800XXXX"
        set type virtual
        set owner-vdom "vdom1"
        config ports
            edit "port2"
                set vlan "fsw_vlan"
            next
        end
    next
end
```

6. Return the port after use:

```
(root) # execute switch-controller virtual-port-pool return S248EPTF1800XXXX port2
```

7. Configure tags for the switch ports so the tags can be exported to virtual port pools

```
(vdom1) # config switch-controller switch-interface-tag
    edit "vip"
    next
    edit "gold"
    next
    edit "silver"
    next
end
```

```
(vdom1) # config switch-controller managed-switch
    edit "S248EPTF1800XXXX"
        set fsw-wan1-peer "fsw"
        set fsw-wan1-admin enable
        set version 1
        set dynamic-capability 100531703
        config ports
            edit "port2"
                set export-to-pool "tenant-monthly"
                set export-tags "silver"
                set export-to "root"
            next
            edit "port3"
                set vlan "vsw.fsw"
                set allowed-vlans "qtn.fsw"
                set untagged-vlans "qtn.fsw"
                set export-to-pool "tenant-monthly"
                set export-tags "vip"
                set export-to "vdom1"
            next
            edit "port4"
                set vlan "vsw.fsw"
                set allowed-vlans "qtn.fsw"
                set untagged-vlans "qtn.fsw"
                set export-to-pool "tenant-monthly"
                set export-tags "vip" "silver"
                set export-to "vdom1"
            next
        end
    next
end
```

8. Search for ports using tag filters:

```
(vdom1) # execute switch-controller virtual-port-pool show-by-tag silver
        Switch      Port                  Properties            Tags
-------------------------------------------------------------------------------------
tenant-monthly(vdom.vdom1)
  S248EPTF1800XXXX port2  (root)          10M/100M/1G/          silver
  S248EPTF1800XXXX port4                  10M/100M/1G/          vip,silver

(vdom1) # exe switch-controller virtual-port-pool show-by-tag vip
        Switch      Port                  Properties            Tags
-------------------------------------------------------------------------------------
tenant-monthly(vdom.vdom1)
  S248EPTF1800XXXX port3                  10M/100M/1G/          vip
  S248EPTF1800XXXX port4                  10M/100M/1G/          vip,silver
```

Persistent MAC learning

Persistent MAC learning or sticky MAC is a port security feature where dynamically learned MAC addresses are retained when a switch or interface comes back online. The benefits of this feature include:

- Prevent traffic loss from trusted workstations and servers since there is no need to relearn MAC address after a restart.
- Protect the switch and the whole network when combined with MAC-learning-limit against security attacks such as Layer 2 DoS and overflow attacks.

Persistent MAC learning is configured in FortiGate and implemented in FortiSwitch.

This feature is disabled by default. You can use persistent MAC learning together with MAC limiting to restrict the number of persistent MAC addresses.

This feature is hardware and CPU intensive and can take several minutes depending on the number of entries.

You can only use CLI to configure this feature.



This feature is supported on all FortiSwitch models in FSW 6.0.

This feature is supported on models in FSW 3.6 higher than the 124D series.

To enable sticky MAC on FortiGate:

```
config switch-controller managed-switch
   edit <switch-serial-number>
      conf ports
         edit <port-number>
            set sticky-mac enable
         next
      end
   next
end
```

Before saving sticky Mac entries into CMDB, you might want to delete the unsaved sticky MAC items so that only the items you want are saved.

Saving sticky MAC items copies the sticky MAC items from memory to CMDB on FortiSwitches and FortiGates.

To delete unsaved sticky MAC items:

```
execute switch-controller switch-action sticky-mac delete-unsaved <all | interface><switch-
    serial-number>
```

To save sticky MAC items into CMDB:

```
execute switch-controller switch-action sticky-mac save <all | interface><switch-serial-
    number>
```

Split port mode (for QSFP / QSFP28)

The quad, small, form-factor pluggable plus (QSFP/QSPF28) is a transceiver module that offers high-density 40/100 Gigabit Ethernet connectivity options for data center and high-performance computing networks. The QSFP transceiver module is a hot-swappable, parallel fiber-optic/copper module with four independent optical transmit and receive channels. These channels can terminate in another Ethernet QSFP transceiver, or the channels can be broken out to four separate physical ports.

Configuration of which FortiSwitch ports are split is controlled directly on the FortiSwitch. An administrator needs to manually log into the FortiSwitch and set the desired split port configuration. After a split port configuration change is made on the FortiSwitch, it will automatically reboot. If the FortiSwitch was previously discovered or authorized, it should be deleted to allow the switch to be newly discovery again.



This feature requires a FortiSwitch model with SFP+ 40G ports, and FortiSwitch must be in Fortlink mode when changing the split configuration.

To use previously discovered FortiSwitch with split ports with the switch controller:

1. On FortiSwitch, change the split mode:
   This change requires a reboot.
   ```
   config switch phy-mode
      set port29-phy-mode 4x10G
      set port30-phy-mode 4x10G
   end
   ```
2. Delete the FortiSwitch from `managed-switch` stanza.
3. Discover and authorize.

To use FortiSwitch with factory defaults with split ports with the switch controller:

1. Discover and Authorize.
   This change requires a reboot.
2. On FortiSwitch, change split mode.
   This change requires a reboot.
3. Delete switch from `managed-switch` stanza.
4. Discover and authorize.

```
config switch-controller managed-switch
    edit S524DN4K15000008
        config ports
            edit "port29.1"
                set speed 10000
                set vlan "vsw.port11"
                set allowed-vlans "qtn.port11"
                set untagged-vlans "qtn.port11"
                set export-to "root"
            next
            ......
            edit "port29.4"
                set speed 10000
                set vlan "vsw.port11"
                set allowed-vlans "qtn.port11"
                set untagged-vlans "qtn.port11"
                set export-to "root"
            next
            edit "port30.1"
                set speed 10000
                set vlan "vsw.port11"
                set allowed-vlans "qtn.port11"
                set untagged-vlans "qtn.port11"
                set export-to "root"
            next
            ......
            edit "port30.4"
                set speed 10000
                set vlan "vsw.port11"
                set allowed-vlans "qtn.port11"
                set untagged-vlans "qtn.port11"
                set export-to "root"
            next
        end
    next
end
```

Dynamic VLAN name assignment from RADIUS attribute

On the FortiGate, all VLANs are specified as a system interface. Each system interface has a well-defined and unique name. When running FortiLink, the switch has no knowledge of the name association. The switch communicates directly with the RADIUS server and needs to know the mapping to make the proper selection. This information must be provided to the switch.

In order to make the feature generic and applicable to the switch in standalone mode, the system interface description field is leveraged. The switch-controller synchronizes this field to the switch for information purposes. All descriptions on the FortiGate remain on the FortiGate. The switch-controller synchronizes the FortiGate system interface name to the switch VLAN description.

When FortiSwitch receives a VLAN assignment from a RADIUS server, it determines if the data is an integer or string representation. If the representation is an integer, FortiSwitch assigns the VLAN. If the representation is a string, the 802.1x agent searches each FortiGate VLAN description field and, if a match is found, synchronizes the FortiGate

interface name to the switch's VLAN description. If no match is found, it will generate a syslog error stating that the VLAN string was not found, the assingment could not be made, and the result is treated as in unauthorized or a failure.

To configure dynamic VLAN name assignment:

1. Configure a RADIUS server:
   - Set Tunnel-Type to "VLAN"
   - Set Tunnel-Medium-Type to "IEEE-802"
   - Set Tunnel-Private-Group-Id to "my.vlan.10"
     Designate the VLAN name instead of VLAN ID.
2. Configure the FortiGate:

```
config system interface
    edit "my.vlan.10"
        set vdom "root"
        set ip 1.1.1.254 255.255.255.0
        set allowaccess ping
        set interface "my.fortlink"
        set vlanid 10
    next
end
```

3. Configure the FortiSwitch:

```
config switch vlan
    edit 10
        set description "my.vlan.10"
    next
end
```

MSTI support

Administrators can control multiple spanning tree instances (MSTI) one to 14, and allocate VLANs to specific instances. VLANs that are not added to a specific interface are in MSTI-0. FortiLink controls MSTI-0 (CST) and MSTI-15 for FortiLink management (VLAN 4094).

Each instance is a full and complete spanning tree. Any VLAN can be mapped to any instance, allowing the trees to have different topologies for each MSTI. Various parameters can be configured in each instance, such as cost and priority.

To configure MSTI support:

1. Create a spanning tree protocol (STP) instance between 1 to 14:

```
config switch-controller  stp-instance
    edit 1
        set vlan-range tenant-vlan3 vsw.aggr1
    next
end
```


2. Configure a specific STP priority on different managed FortiSwitch units:

```
config switch-controller managed-switch
    edit S248EPTF1800XXXX
```

```
            config stp-instance
                edit 1
                    set priority  8192
                next
            end
        next
    end
```

Netflow and IPFIX support

You can configure Netflow (v1, v5, and v9) and IP Flow Information Export (IPFIX) on managed FortiSwitch units on switch controller. The resulting data are available in FortiView and to FortiAnalyzer for traffic statistics and topology views. Traffic sampling data can be used to show which users and device behind a switch are generating the most traffic.

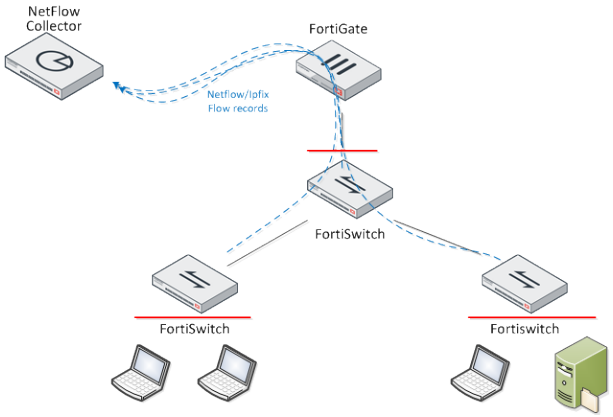

The following CLI can be used to configure flow-tracking parameters:

```
config system flow-tracking
    set sample-mode {local | perimeter | device-ingress}
    set sample-rate <integer>
    set format {netflow1 | netflow5 | netflow9 | ipfix}
    set collector-ip <ip_address>
    set collector-port <integer>
    set transport {udp | tcp | sctp}
    set level {vlan | ip | port | proto}
    set max-export-pkt-size <integer>
    set timeout-general <integer>
    set timeout-icmp <integer>
    set timeout-max <integer>
    set timeout-tcp <integer>
    set timeout-tcp-fin <integer>
    set timeout-tcp-rst <integer>
    set timeout-udp <integer>
    config aggregates
        edit <id>
            set ip <ip_address>
        next
    end
end
```

Variable	Description
sample-mode {local | perimeter | device-ingress}	Sample mode for flow tracking. • `local`: Sample on the specific FortiSwitch port. Sampling must be enabled on the specific FortiSwitch ports using the `config switch-controller managed-switch` and `config ports` commands. • `perimeter`: Sample on all non-fabric FortiSwitch ports, including the access and FortiLink ports, but not the FortiLink ISL port. • `device-ingress`: Sample on all FortiSwitch ports.
sample-rate <integer>	Sample rate for the perimeter and device-ingress sampling (0 - 99999, default = 512).
format {netflow1 | netflow5 | netflow9 | ipfix}	Flow tracking protocol (default = netflow9).
collector-ip <ip_address>	Collector IP address. An all-zero IP address implies the feature is disabled
collector-port <integer>	Collector port number (0 - 65535, default=0).
transport {udp | tcp | sctp}	L4 transport protocol for exporting packets (default = udp).
level {vlan | ip | port | proto}	Flow tracking level. • `vlan`: Collect srcip/dstip/srcport/dstport/protocol/tos/vlan from the sample packet. • `ip`: Collect srcip/dstip from the sample packet (default). • `port`: Collect srcip/dstip/srcport/dstport/protocol from the sample packet. • `proto`: Collect srcip/dstip/protocol from the sample packet.
max-export-pkt-size <integer>	Flow maximum export packet size, in bytes (512 - 9216, default = 512).
timeout-general <integer>	Flow session general timeout, in seconds (60 - 604800, default = 3600).
timeout-icmp <integer>	Flow session ICMP timeout, in seconds (60 - 604800, default = 300).
timeout-max <integer>	Flow session maximum timeout, in seconds (60 - 604800, default = 604800).
timeout-tcp <integer>	Flow session TCP timeout, in seconds (60 - 604800, default = 3600).
timeout-tcp-fin <integer>	Flow session TCP FIN timeout, in seconds (60 - 604800, default = 300).
timeout-tcp-rst <integer>	Flow session TCP RST timeout, in seconds (60 - 604800, default = 120).
timeout-udp <integer>	Flow session UDP timeout, in seconds (60 - 604800, default = 300).
`config aggregates` **subcommand**: Aggregates in which all traffic sessions matching the IP address will be grouped into the same flow.	
ip <ip_address>	IP address to group all matching traffic sessions to a flow.

Log and Report

Logging and reporting are useful components to help you understand what is happening on your network, and to inform you about certain network activities, such as the detection of a virus, a visit to an invalid website, an intrusion, a failed log in attempt, and myriad others.

Logging records the traffic that passes through, starts from, or ends on the FortiGate, and records the actions the FortiGate took during the traffic scanning process. After this information is recorded in a log message, it is stored in a log file that is stored on a log device (a central storage location for log messages). FortiGates support several log devices, such as FortiAnalyzer, FortiGate Cloud, and syslog servers. Approximately 5% of memory is used for buffering logs sent to FortiAnalyzer. The FortiGate system memory and local disk can also be configured to store logs, so it is also considered a log device.

Reports show the recorded activity in a more readable format. A report gathers all the log information that it needs, then presents it in a graphical format with a customizable design and automatically generated charts showing what is happening on the network. Reports can be generated on FortiGate devices with disk logging and on FortiAnalyzer devices.

FortiView is a more comprehensive network reporting and monitoring tool. It integrates real-time and historical data into a single view in FortiOS. For more information, see FortiView on page 277.




Performance statistics are not logged to disk. Performance statistics can be received by a syslog server or by FortiAnalyzer.

The following topics provide information about logging and reporting:

- Viewing event logs on page 1560
- Sample logs by log type on page 1561
- Checking the email filter log on page 1581
- Supported log types to FortiAnalyzer, syslog, and FortiAnalyzer Cloud on page 1582
- Configuring multiple FortiAnalyzers on a multi-VDOM FortiGate on page 1583
- Configuring multiple FortiAnalyzers (or syslog servers) per VDOM on page 1585
- Source and destination UUID logging on page 1587
- Troubleshooting on page 1589

Viewing event logs

All event log subtypes are available from the event log subtype dropdown list on the *Log & Report* > *Events* page. Not all of the event log subtypes are available by default.

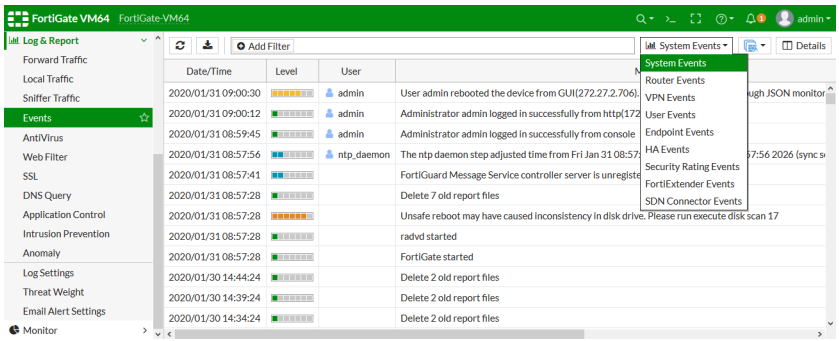

System Events	Always available.
Router Events	Always available.
VPN Events	Available when *VPN* is enabled in *System* > *Feature Visibility*.
User Events	Always available.
Endpoint Events	Available when *Endpoint Control* is enabled in *System* > *Feature Visibility*.
HA Events	Always available.
Security Rating Events	Always available, but logs are only generated when a Security Rating License is registered.
WAN Opt. & Cache Events	Available on devices with two hard disks by default. On devices with one hard disk, the disk usage must be set to `wanopt` and then *WAN Opt. & Cache* must be enabled in *System* > *Feature Visibility*.
WiFi Events	Available on hardware devices when *WiFi Controller* is enabled in *System* > *Feature Visibility*.
FortiExtender Events	Available when *FortiExtender* is enabled in *System* > *Feature Visibility*.
SDN Connector Events	Always available.

Sample logs by log type

This topic provides a sample raw log for each subtype and the configuration requirements.

Type and Subtype

Traffic Logs > *Forward Traffic*

Log configuration requirements

```
config firewall policy
    edit 1
        set srcintf "port12"
        set dstintf "port11"
        set srcaddr "all"
```

```
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set logtraffic all
        set application-list "g-default"
        set ssl-ssh-profile "certificate-inspection"
        set nat enable
    next
end
```

Sample log

```
date=2019-05-10 time=11:37:47 logid="0000000013" type="traffic" subtype="forward"
level="notice" vd="vdom1" eventtime=1557513467369913239 srcip=10.1.100.11 srcport=58012
srcintf="port12" srcintfrole="undefined" dstip=23.59.154.35 dstport=80 dstintf="port11"
dstintfrole="undefined" srcuuid="ae28f494-5735-51e9-f247-d1d2ce663f4b" dstuuid="ae28f494-
5735-51e9-f247-d1d2ce663f4b" poluuid="ccb269e0-5735-51e9-a218-a397dd08b7eb" sessionid=105048
proto=6 action="close" policyid=1 policytype="policy" service="HTTP" dstcountry="Canada"
srccountry="Reserved" trandisp="snat" transip=172.16.200.2 transport=58012 appid=34050
app="HTTP.BROWSER_Firefox" appcat="Web.Client" apprisk="elevated" applist="g-default"
duration=116 sentbyte=1188 rcvdbyte=1224 sentpkt=17 rcvdpkt=16 utmaction="allow" countapp=1
osname="Ubuntu" mastersrcmac="a2:e9:00:ec:40:01" srcmac="a2:e9:00:ec:40:01" srcserver=0
utmref=65500-742
```

Type and Subtype

Traffic Logs > Local Traffic

Log configuration requirements

```
config log setting
    set local-in-allow enable
    set local-in-deny-unicast enable
    set local-in-deny-broadcast enable
    set local-out enable
end
```

Sample log

```
date=2019-05-10 time=11:50:48 logid="0001000014" type="traffic" subtype="local"
level="notice" vd="vdom1" eventtime=1557514248379911176 srcip=172.16.200.254 srcport=62024
srcintf="port11" srcintfrole="undefined" dstip=172.16.200.2 dstport=443 dstintf="vdom1"
dstintfrole="undefined" sessionid=107478 proto=6 action="server-rst" policyid=0
policytype="local-in-policy" service="HTTPS" dstcountry="Reserved" srccountry="Reserved"
trandisp="noop" app="Web Management(HTTPS)" duration=5 sentbyte=1247 rcvdbyte=1719 sentpkt=5
rcvdpkt=6 appcat="unscanned"
```

Type and Subtype

Traffic Logs > Multicast Traffic

Log configuration requirements

```
config firewall multicast-policy
    edit 1
           set dstaddr 230-1-0-0
           set dstintf port3
           set srcaddr 172-16-200-0
           set srcintf port25
           set action accept
           set log enable
        next
    end
    config sys setting
        set multicast-forward enable
    end
```

Sample log

```
date=2019-03-31 time=06:42:54 logid="0002000012" type="traffic" subtype="multicast"
level="notice" vd="vdom1" eventtime=1554039772 srcip=172.16.200.55 srcport=60660
srcintf="port25" srcintfrole="undefined" dstip=230.1.1.2 dstport=7878 dstintf="port3"
dstintfrole="undefined" sessionid=1162 proto=17 action="accept" policyid=1
policytype="multicast-policy" service="udp/7878" dstcountry="Reserved" srccountry="Reserved"
trandisp="noop" duration=22 sentbyte=5940 rcvdbyte=0 sentpkt=11 rcvdpkt=0 appcat="unscanned"
```

Type and Subtype

Traffic Logs > Sniffer Traffic

Log configuration requirements

```
config firewall sniffer
    edit 3
        set logtraffic all
        set interface "port1"
        set ips-sensor-status enable
        set ips-sensor "sniffer-profile"
    next
end
```

Sample log

```
date=2019-05-10 time=14:18:54 logid="0004000017" type="traffic" subtype="sniffer"
level="notice" vd="root" eventtime=1557523134021045897 srcip=208.91.114.4 srcport=50463
srcintf="port1" srcintfrole="undefined" dstip=104.80.88.154 dstport=443 dstintf="port1"
dstintfrole="undefined" sessionid=2193276 proto=6 action="accept" policyid=3
policytype="sniffer" service="HTTPS" dstcountry="United States" srccountry="Canada"
trandisp="snat" transip=0.0.0.0 transport=0 duration=10 sentbyte=0 rcvdbyte=0 sentpkt=0
rcvdpkt=0 appcat="unscanned" utmaction="allow" countips=1 crscore=5 craction=32768
sentdelta=0 rcvddelta=0 utmref=65162-7772
```

Type and Subtype

Event Logs > System Events

Log configuration requirements

```
config log eventfilter
    set event enable
    set system enable
end
```

Sample log

```
date=2019-05-13 time=11:20:54 logid="0100032001" type="event" subtype="system"
level="information" vd="vdom1" eventtime=1557771654587081441 logdesc="Admin login
successful" sn="1557771654" user="admin" ui="ssh(172.16.200.254)" method="ssh"
srcip=172.16.200.254 dstip=172.16.200.2 action="login" status="success" reason="none"
profile="super_admin" msg="Administrator admin logged in successfully from ssh
(172.16.200.254)"
```

Type and Subtype

Event Logs > *Router Events*

Log configuration requirements

```
config log eventfilter
    set event enable
    set router enable
end
```

```
config router bgp
    set log-neighbour-changes enable
end
```

```
config router ospf
    set log-neighbour-changes enable
end
```

Sample log

```
date=2019-05-13 time=14:12:26 logid="0103020301" type="event" subtype="router"
level="warning" vd="root" eventtime=1557781946677737955 logdesc="Routing log" msg="OSPF:
RECV[Hello]: From 31.1.1.1 via port9:172.16.200.1: Invalid Area ID 0.0.0.0"
```

Type and Subtype

Event Logs > *VPN Events*

Log configuration requirements

```
config log eventfilter
    set event enable
    set vpn enable
end
```

Sample log

```
date=2019-05-13 time=14:21:42 logid="0101037127" type="event" subtype="vpn" level="notice"
vd="root" eventtime=1557782502722231889 logdesc="Progress IPsec phase 1" msg="progress IPsec
phase 1" action="negotiate" remip=50.1.1.101 locip=50.1.1.100 remport=500 locport=500
outintf="port14" cookies="9091f4d4837ea71c/0000000000000000" user="N/A" group="N/A"
xauthuser="N/A" xauthgroup="N/A" assignip=N/A vpntunnel="test" status="success" init="local"
mode="main" dir="outbound" stage=1 role="initiator" result="OK"
```

Type and Subtype

Event Logs > User Events

Log configuration requirements

```
config log eventfilter
    set event enable
    set user enable
end
```

Sample log

```
date=2019-05-13 time=15:55:56 logid="0102043008" type="event" subtype="user" level="notice"
vd="root" eventtime=1557788156913809277 logdesc="Authentication success" srcip=10.1.100.11
dstip=172.16.200.55 policyid=1 interface="port10" user="bob" group="local-group1"
authproto="TELNET(10.1.100.11)" action="authentication" status="success" reason="N/A"
msg="User bob succeeded in authentication"
```

Type and Subtype

Event Logs > Endpoint Events

Log configuration requirements

```
config log eventfilter
    set event enable
    set endpoint enable
end
```

Sample log

```
date=2019-05-14 time=08:32:13 logid="0107045057" type="event" subtype="endpoint"
level="information" vd="root" eventtime=1557847933900764210 logdesc="FortiClient connection
added" action="add" status="success" license_limit="unlimited" used_for_type=4 connection_
type="sslvpn" count=1 user="skubas" ip=172.18.64.250 name="VAN-200957-PC"
fctuid="52C66FE08F724FE0B116DAD5062C96CD" msg="Add a FortiClient Connection."
```

```
date=2019-05-14 time=08:19:38 logid="0107045058" type="event" subtype="endpoint"
level="information" vd="root" eventtime=1557847179037488154 logdesc="FortiClient connection
closed" action="close" status="success" license_limit="unlimited" used_for_type=5
connection_type="sslvpn" count=1 user="skubas" ip=172.18.64.250 name="VAN-200957-PC"
fctuid="52C66FE08F724FE0B116DAD5062C96CD" msg="Close a FortiClient Connection."
```

Type and Subtype

Event Logs > HA Events

Log configuration requirements

```
config log eventfilter
    set event enable
    set ha enable
end
```

Sample log

```
date=2019-05-10 time=09:53:21 logid="0108037892" type="event" subtype="ha" level="notice"
vd="root" eventtime=1557507201608871077 logdesc="Virtual cluster member state moved"
msg="Virtual cluster's member state moved" ha_role="master" vcluster=1 vcluster_state="work"
vcluster_member=0 hostname="FW_QA4" sn="FG2K5E3916900348"
```

```
date=2019-05-10 time=09:53:18 logid="0108037894" type="event" subtype="ha" level="critical"
vd="root" eventtime=1557507199208575235 logdesc="Virtual cluster member joined" msg="Virtual
cluster detected member join" vcluster=1 ha_group=0 sn="FG2K5E3916900286"
```

Type and Subtype

Event Logs > Security Rating Events

Log configuration requirements

```
config log eventfilter
    set event enable
    set security-rating enable
end
```

Sample log

```
date=2019-05-13 time=14:40:59 logid="0110052000" type="event" subtype="security-rating"
level="notice" vd="root" eventtime=1557783659536252389 logdesc="Security Rating summary"
auditid=1557783648 audittime=1557783659 auditscore="5.0" criticalcount=1 highcount=6
mediumcount=8 lowcount=0 passedcount=38
```

Type and Subtype

Event Logs > WAN Opt & Cache Events

Log configuration requirements

```
config log eventfilter
    set event enable
    set wan-opt enable
end
```

Sample log

```
date=2019-05-14 time=09:37:46 logid="0105048039" type="event" subtype="wad" level="error"
vd="root" eventtime=1557851867382676560 logdesc="SSL fatal alert sent" session_id=0
policyid=0 srcip=0.0.0.0 srcport=0 dstip=208.91.113.83 dstport=636 action="send" alert="2"
desc="certificate unknown" msg="SSL Alert sent"
```

```
date=2019-05-10 time=15:48:31 logid="0105048038" type="event" subtype="wad" level="error"
vd="root" eventtime=1557528511221374615 logdesc="SSL Fatal Alert received" session_
id=5f88ddd1 policyid=0 srcip=172.18.70.15 srcport=59880 dstip=91.189.89.223 dstport=443
action="receive" alert="2" desc="unknown ca" msg="SSL Alert received"
```

Type and Subtype

Event Logs > *Wireless*

Log configuration requirements

```
config log eventfilter
    set event enable
    set wireless-activity enable
end

config wireless-controller log
    set status enable
end
```

Sample log

```
date=2019-05-13 time=11:30:08 logid="0104043568" type="event" subtype="wireless"
level="warning" vd="vdom1" eventtime=1557772208134721423 logdesc="Fake AP on air"
ssid="fortinet" bssid="90:6c:ac:89:e1:fa" aptype=0 rate=130 radioband="802.11n" channel=6
action="fake-ap-on-air" manuf="Fortinet, Inc." security="WPA2 Personal" encryption="AES"
signal=-93 noise=-95 live=353938 age=505 onwire="no" detectionmethod="N/A" stamac="N/A"
apscan="N/A" sndetected="N/A" radioiddetected=0 stacount=0 snclosest="FP320C3X17001909"
radioidclosest=0 apstatus=0 msg="Fake AP On-air fortinet 90:6c:ac:89:e1:fa chan 6 live
353938 age 505"
```

Type and Subtype

Event Logs > *SDN Connector*

Log configuration requirements

```
config log eventfilter
    set event enable
    set connector enable
end
```

Sample log

```
date=2019-05-13 time=16:09:43 logid="0112053200" type="event" subtype="connector"
level="information" vd="root" eventtime=1557788982 logdesc="IP address added" cfgobj="aws1"
```

```
action="object-add" addr="54.210.36.196" cldobjid="i-0fe5a1ef16bb94796" netid="vpc-97e81cee"
msg="connector object discovered in addr-obj aws1, 54.210.36.196"

date=2019-05-13 time=16:09:43 logid="0112053201" type="event" subtype="connector"
level="information" vd="root" eventtime=1557788982 logdesc="IP address removed"
cfgobj="aws1" action="object-remove" addr="172.31.31.101" cldobjid="i-0fe5a1ef16bb94796"
netid="vpc-97e81cee" msg="connector object removed in addr-obj aws1, 172.31.31.101"
```

Type and Subtype

Event Logs > FortiExtender Events

Log configuration requirements

```
config log eventfilter
    set event enable
    set fortiextender enable
end
```

Sample log

```
date=2019-02-20 time=09:57:22 logid="0111046400" type="event" subtype="fortiextender"
level="notice" vd="root" eventtime=1550685442 logdesc="FortiExtender system activity"
action="FortiExtender Authorized"    msg="ext SN:FX04DN4N16002352 authorized"

date=2019-02-20 time=09:51:42 logid="0111046401" type="event" subtype="fortiextender"
level="notice" vd="root" eventtime=1550685102 logdesc="FortiExtender controller activity"
sn="FX04DN4N16002352" ip=11.11.11.2 action="ext session-deauthed" msg="ext
SN:FX04DN4N16002352 deauthorized"

date=2019-02-20 time=10:02:26 logid="0111046409" type="event" subtype="fortiextender"
level="information" vd="root" eventtime=1550685746 logdesc="Remote FortiExtender info
activity" sn="FX04DN4N16002352" ip=11.11.11.2 action="Cellular Connected"
imei="359376060442770" imsi="302720502331361" iccid="89302720403038146410"
phonenumber="+16045067526" carrier="Rogers" plan="Rogers-plan" apn="N/A" service="LTE"
msg="FX04DN4N16002352 STATE: sim with imsi:302720502331361 in slot:2 on carrier:Rogers
connected"

date=2019-02-20 time=10:33:57 logid="0111046407" type="event" subtype="fortiextender"
level="warning" vd="root" eventtime=1550687636 logdesc="Remote FortiExtender warning
activity" sn="FX04DN4N16002352" ip=11.11.11.2 action="Cellular Disconnected"
imei="359376060442770" imsi="N/A" iccid="N/A" phonenumber="N/A" carrier="N/A" plan="N/A"
apn="N/A" service="LTE" msg="FX04DN4N16002352 STATE: sim with imsi: in slot:2 on carrier:N/A
disconnected"

date=2019-02-20 time=10:02:24 logid="0111046409" type="event" subtype="fortiextender"
level="information" vd="root" eventtime=1550685744 logdesc="Remote FortiExtender info
activity" sn="FX04DN4N16002352" ip=11.11.11.2 action="Cellular Connecting"
imei="359376060442770" imsi="302720502331361" iccid="89302720403038146410"
phonenumber="+16045067526" carrier="Rogers" plan="Rogers-plan" apn="N/A" service="N/A"
msg="FX04DN4N16002352 STATE: sim with imsi:302720502331361 in slot:2 on carrier:Rogers
connecting

date=2019-02-20 time=10:47:19 logid="0111046407" type="event" subtype="fortiextender"
level="warning" vd="root" eventtime=1550688438 logdesc="Remote FortiExtender warning
activity" sn="FX04DN4N16002352" ip=11.11.11.2 action="SIM Change" imei="N/A" slot=2
msg="FX04DN4N16002352 SIM: SIM2 is inserted"
```

```
date=2019-02-20 time=10:57:50 logid="0111046407" type="event" subtype="fortiextender"
level="warning" vd="root" eventtime=1550689069 logdesc="Remote FortiExtender warning
activity" sn="FX04DN4N16002352" ip=11.11.11.2 action="SIM Change" imei="359376060442770"
slot=1 msg="FX04DN4N16002352 SIM: SIM2 is plucked out"

date=2019-02-20 time=12:02:24 logid="0111046407" type="event" subtype="fortiextender"
level="warning" vd="root" eventtime=1550692942 logdesc="Remote FortiExtender warning
activity" sn="FX04DN4N16002352" ip=11.11.11.2 action="SIM Switch" imei="359376060442770"
reason="sim-switch can't take effect due to unavailability of 2 sim cards"
msg="FX04DN4N16002352 SIM: sim-switch can't take effect due to unavailability of 2 sim
cards"

date=2019-02-19 time=18:08:46 logid="0111046409" type="event" subtype="fortiextender"
level="information" vd="root" eventtime=1550628524 logdesc="Remote FortiExtender info
activity" sn="FX04DN4N16002352" ip=11.11.11.2 action="Cellular Signal Statistics"
imei="359376060442770" imsi="302720502331361" iccid="89302720403038146410"
phonenumber="+16045067526" carrier="Rogers" plan="Rogers-plan" service="LTE" sinr="7.0 dB"
rsrp="-89 dBm" rsrq="-16 dB" signalstrength="92 dBm" rssi="-54" temperature="40 C" apn="N/A"
msg="FX04DN4N16002352 INFO:  LTE RSSI=-54dBm,RSRP=-89dBm,RSRQ=-
16dB,SINR=7.0dB,BAND=B2,CELLID=061C700F,BW=15MHz,RXCH=1025,TXCH=19025,TAC=8AAC,TEMPERATURE=4
0 C"

date=2019-02-19 time=18:09:46 logid="0111046409" type="event" subtype="fortiextender"
level="information" vd="root" eventtime=1550628585 logdesc="Remote FortiExtender info
activity" sn="FX04DN4N16002352" ip=11.11.11.2 action="Cellular Data Statistics"
imei="359376060442770" imsi="302720502331361" iccid="89302720403038146410"
phonenumber="+16045067526" carrier="Rogers" plan="Rogers-plan" service="LTE" rcvdbyte=7760
sentbyte=3315 msg="FX04DN4N16002352 INFO: SIM2 LTE, rx=7760, tx=3315, rx_diff=2538, tx_
diff=567"
```

Type and Subtype

Security Logs > Antivirus

Log configuration requirements

```
config antivirus profile
    edit "test-av"
        config http
            set options scan
        end
        set av-virus-log enable
        set av-block-log enable
    next
end

config firewall policy
    edit 1
        set srcintf "port12"
        set dstintf "port11"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set av-profile "test-av"
```

```
        set logtraffic utm
        set nat enable
    next
end
```

Sample log

```
date=2019-05-13 time=11:45:03 logid="0211008192" type="utm" subtype="virus"
eventtype="infected" level="warning" vd="vdom1" eventtime=1557773103767393505 msg="File is
infected." action="blocked" service="HTTP" sessionid=359260 srcip=10.1.100.11
dstip=172.16.200.55 srcport=60446 dstport=80 srcintf="port12" srcintfrole="undefined"
dstintf="port11" dstintfrole="undefined" policyid=4 proto=6 direction="incoming"
filename="eicar.com" quarskip="File-was-not-quarantined." virus="EICAR_TEST_FILE"
dtype="Virus" ref="http://www.fortinet.com/ve?vn=EICAR_TEST_FILE" virusid=2172
url="http://172.16.200.55/virus/eicar.com" profile="g-default" agent="curl/7.47.0"
analyticscksum="275a021bbfb6489e54d471899f7db9d1663fc695ec2fe2a2c4538aabf651fd0f"
analyticssubmit="false" crscore=50 craction=2 crlevel="critical"

# Corresponding Traffic Log #
date=2019-05-13 time=11:45:04 logid="0000000013" type="traffic" subtype="forward"
level="notice" vd="vdom1" eventtime=1557773104815101919 srcip=10.1.100.11 srcport=60446
srcintf="port12" srcintfrole="undefined" dstip=172.16.200.55 dstport=80 dstintf="port11"
dstintfrole="undefined" srcuuid="48420c8a-5c88-51e9-0424-a37f9e74621e" dstuuid="187d6f46-
5c86-51e9-70a0-fadcfc349c3e" poluuid="3888b41a-5c88-51e9-cb32-1c32c66b4edf" sessionid=359260
proto=6 action="close" policyid=4 policytype="policy" service="HTTP" dstcountry="Reserved"
srccountry="Reserved" trandisp="snat" transip=172.16.200.2 transport=60446 appid=15893
app="HTTP.BROWSER" appcat="Web.Client" apprisk="medium" applist="g-default" duration=1
sentbyte=412 rcvdbyte=2286 sentpkt=6 rcvdpkt=6 wanin=313 wanout=92 lanin=92 lanout=92
utmaction="block" countav=1 countapp=1 crscore=50 craction=2 osname="Ubuntu"
mastersrcmac="a2:e9:00:ec:40:01" srcmac="a2:e9:00:ec:40:01" srcserver=0 utmref=65497-770
```

Type and Subtype

Security Logs > *Web Filter*

Log configuration requirements

```
config webfilter profile
    edit "test-webfilter"
        set web-content-log enable
        set web-filter-activex-log enable
        set web-filter-command-block-log enable
        set web-filter-cookie-log enable
        set web-filter-applet-log enable
        set web-filter-jscript-log enable
        set web-filter-js-log enable
        set web-filter-vbs-log enable
        set web-filter-unknown-log enable
        set web-filter-referer-log enable
        set web-filter-cookie-removal-log enable
        set web-url-log enable
        set web-invalid-domain-log enable
        set web-ftgd-err-log enable
        set web-ftgd-quota-usage enable
    next
end
```

```
config firewall policy
    edit 1
        set name "v4-out"
        set srcintf "port12"
        set dstintf "port11"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set logtraffic utm
        set utm-status enable
        set webfilter-profile "test-webfilter"
        set nat enable
    next
end
```

Sample log

```
date=2019-05-13 time=16:29:45 logid="0316013056" type="utm" subtype="webfilter"
eventtype="ftgd_blk" level="warning" vd="vdom1" eventtime=1557790184975119738 policyid=1
sessionid=381780 srcip=10.1.100.11 srcport=44258 srcintf="port12" srcintfrole="undefined"
dstip=185.244.31.158 dstport=80 dstintf="port11" dstintfrole="undefined" proto=6
service="HTTP" hostname="morrishittu.ddns.net" profile="test-webfilter" action="blocked"
reqtype="direct" url="/" sentbyte=84 rcvdbyte=0 direction="outgoing" msg="URL belongs to a
denied category in policy" method="domain" cat=26 catdesc="Malicious Websites" crscore=30
craction=4194304 crlevel="high"

# Corresponding traffic log #
date=2019-05-13 time=16:29:50 logid="0000000013" type="traffic" subtype="forward"
level="notice" vd="vdom1" eventtime=1557790190452146185 srcip=10.1.100.11 srcport=44258
srcintf="port12" srcintfrole="undefined" dstip=185.244.31.158 dstport=80 dstintf="port11"
dstintfrole="undefined" srcuuid="ae28f494-5735-51e9-f247-d1d2ce663f4b" dstuuid="ae28f494-
5735-51e9-f247-d1d2ce663f4b" poluuid="ccb269e0-5735-51e9-a218-a397dd08b7eb" sessionid=381780
proto=6 action="close" policyid=1 policytype="policy" service="HTTP" dstcountry="Germany"
srccountry="Reserved" trandisp="snat" transip=172.16.200.2 transport=44258 duration=5
sentbyte=736 rcvdbyte=3138 sentpkt=14 rcvdpkt=5 appcat="unscanned" utmaction="block"
countweb=1 crscore=30 craction=4194304 osname="Ubuntu" mastersrcmac="a2:e9:00:ec:40:01"
srcmac="a2:e9:00:ec:40:01" srcserver=0 utmref=65497-796
```

Type and Subtype

Security Logs > DNS Query

Log configuration requirements

```
config dnsfilter profile
    edit "dnsfilter_fgd"
        config ftgd-dns
            set options error-allow
          end
        set log-all-domain enable
        set block-botnet enable
    next
end
```

```
config firewall policy
    edit 1
        set srcintf "port12"
        set dstintf "port11"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set dnsfilter-profile "dnsfilter_fgd"
        set logtraffic utm
        set nat enable
    next
end
```

Sample log

```
date=2019-05-15 time=15:05:49 logid="1501054802" type="utm" subtype="dns" eventtype="dns-
response" level="notice" vd="vdom1" eventtime=1557957949740931155 policyid=1 sessionid=6887
srcip=10.1.100.22 srcport=50002 srcintf="port12" srcintfrole="undefined"
dstip=172.16.100.100 dstport=53 dstintf="port11" dstintfrole="undefined" proto=17
profile="dnsfilter_fgd" srcmac="a2:e9:00:ec:40:41" xid=57945 qname="changelogs.ubuntu.com"
qtype="AAAA" qtypeval=28 qclass="IN" ipaddr="2001:67c:1560:8008::11" msg="Domain is
monitored" action="pass" cat=52 catdesc="Information Technology"

date=2019-05-15 time=15:05:49 logid="1500054000" type="utm" subtype="dns" eventtype="dns-
query" level="information" vd="vdom1" eventtime=1557957949653103543 policyid=1
sessionid=6887 srcip=10.1.100.22 srcport=50002 srcintf="port12" srcintfrole="undefined"
dstip=172.16.100.100 dstport=53 dstintf="port11" dstintfrole="undefined" proto=17
profile="dnsfilter_fgd" srcmac="a2:e9:00:ec:40:41" xid=57945 qname="changelogs.ubuntu.com"
qtype="AAAA" qtypeval=28 qclass="IN"

# Corresponding traffic log #
date=2019-05-15 time=15:08:49 logid="0000000013" type="traffic" subtype="forward"
level="notice" vd="vdom1" eventtime=1557958129950003945 srcip=10.1.100.22 srcport=50002
srcintf="port12" srcintfrole="undefined" dstip=172.16.100.100 dstport=53 dstintf="port11"
dstintfrole="undefined" srcuuid="ae28f494-5735-51e9-f247-d1d2ce663f4b" dstuuid="ae28f494-
5735-51e9-f247-d1d2ce663f4b" poluuid="ccb269e0-5735-51e9-a218-a397dd08b7eb" sessionid=6887
proto=17 action="accept" policyid=1 policytype="policy" service="DNS" dstcountry="Reserved"
srccountry="Reserved" trandisp="snat" transip=172.16.200.2 transport=50002 duration=180
sentbyte=67 rcvdbyte=207 sentpkt=1 rcvdpkt=1 appcat="unscanned" utmaction="allow" countdns=1
osname="Linux" mastersrcmac="a2:e9:00:ec:40:41" srcmac="a2:e9:00:ec:40:41" srcserver=0
utmref=65495-306
```

Type and Subtype

Security Logs > Application Control

Log configuration requirements

```
# log enabled by default in application profile entry

config application list
    edit "block-social.media"
```

```
        set other-application-log enable
        config entries
            edit 1
                set category 2 5 6 23
                set log enable
            next
        end
    next
end

config firewall policy
    edit 1
        set name "to_Internet"
        set srcintf "port10"
        set dstintf "port9"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set logtraffic utm
        set application-list "block-social.media"
        set ssl-ssh-profile "deep-inspection"
        set nat enable
    next
end
```

Sample log

```
date=2019-05-15 time=18:03:36 logid="1059028704" type="utm" subtype="app-ctrl"
eventtype="app-ctrl-all" level="information" vd="root" eventtime=1557968615 appid=40568
srcip=10.1.100.22 dstip=195.8.215.136 srcport=50798 dstport=443 srcintf="port10"
srcintfrole="lan" dstintf="port9" dstintfrole="wan" proto=6 service="HTTPS"
direction="outgoing" policyid=1 sessionid=4414 applist="block-social.media"
appcat="Web.Client" app="HTTPS.BROWSER" action="pass" hostname="www.dailymotion.com"
incidentserialno=1962906680 url="/" msg="Web.Client: HTTPS.BROWSER," apprisk="medium"
scertcname="*.dailymotion.com" scertissuer="DigiCert SHA2 High Assurance Server CA"

date=2019-05-15 time=18:03:35 logid="1059028705" type="utm" subtype="app-ctrl"
eventtype="app-ctrl-all" level="warning" vd="root" eventtime=1557968615 appid=16072
srcip=10.1.100.22 dstip=195.8.215.136 srcport=50798 dstport=443 srcintf="port10"
srcintfrole="lan" dstintf="port9" dstintfrole="wan" proto=6 service="HTTPS"
direction="incoming" policyid=1 sessionid=4414 applist="block-social.media"
appcat="Video/Audio" app="Dailymotion" action="block" hostname="www.dailymotion.com"
incidentserialno=1962906682 url="/" msg="Video/Audio: Dailymotion," apprisk="elevated"

date=2019-05-15 time=18:03:35 logid="1059028705" type="utm" subtype="app-ctrl"
eventtype="app-ctrl-all" level="warning" vd="root" eventtime=1557968615 appid=16072
srcip=10.1.100.22 dstip=195.8.215.136 srcport=50798 dstport=443 srcintf="port10"
srcintfrole="lan" dstintf="port9" dstintfrole="wan" proto=6 service="HTTPS"
direction="incoming" policyid=1 sessionid=4414 applist="block-social.media"
appcat="Video/Audio" app="Dailymotion" action="block" hostname="www.dailymotion.com"
incidentserialno=1962906681 url="/" msg="Video/Audio: Dailymotion," apprisk="elevated"

# Corresponding Traffic Log #
date=2019-05-15 time=18:03:41 logid="0000000013" type="traffic" subtype="forward"
```

```
level="notice" vd="root" eventtime=1557968619 srcip=10.1.100.22 srcport=50798
srcintf="port10" srcintfrole="lan" dstip=195.8.215.136 dstport=443 dstintf="port9"
dstintfrole="wan" poluuid="d8ce7a90-7763-51e9-e2be-741294c96f31" sessionid=4414 proto=6
action="client-rst" policyid=1 policytype="policy" service="HTTPS" dstcountry="France"
srccountry="Reserved" trandisp="snat" transip=172.16.200.10 transport=50798 appid=16072
app="Dailymotion" appcat="Video/Audio" apprisk="elevated" applist="block-social.media"
appact="drop-session" duration=5 sentbyte=1150 rcvdbyte=7039 sentpkt=13 utmaction="block"
countapp=3 devtype="Unknown" devcategory="None" mastersrcmac="00:0c:29:51:38:5e"
srcmac="00:0c:29:51:38:5e" srcserver=0 utmref=0-330
```

Type and Subtype

Security Logs > Intrusion Prevention

Log configuration requirements

```
# log enabled by default in ips sensor

config ips sensor
    edit "block-critical-ips"
        config entries
            edit 1
                set severity critical
                set status enable
                set action block
                set log enable
            next
        end
    next
end

config firewall policy
    edit 1
        set name "to_Internet"
        set srcintf "port10"
        set dstintf "port9"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set logtraffic utm
        set ips-sensor "block-critical-ips"
        set nat enable
    next
end
```

Sample log

```
date=2019-05-15 time=17:56:41 logid="0419016384" type="utm" subtype="ips"
eventtype="signature" level="alert" vd="root" eventtime=1557968201 severity="critical"
srcip=10.1.100.22 srccountry="Reserved" dstip=172.16.200.55 srcintf="port10"
srcintfrole="lan" dstintf="port9" dstintfrole="wan" sessionid=4017 action="dropped" proto=6
service="HTTP" policyid=1 attack="Adobe.Flash.newfunction.Handling.Code.Execution"
```

```
srcport=46810 dstport=80 hostname="172.16.200.55" url="/ips/sig1.pdf" direction="incoming"
attackid=23305 profile="block-critical-ips" ref="http://www.fortinet.com/ids/VID23305"
incidentserialno=582633933 msg="applications3:
Adobe.Flash.newfunction.Handling.Code.Execution," crscore=50 craction=4096
crlevel="critical"

# Corresponding Traffic Log #
date=2019-05-15 time=17:58:10 logid="0000000013" type="traffic" subtype="forward"
level="notice" vd="root" eventtime=1557968289 srcip=10.1.100.22 srcport=46810
srcintf="port10" srcintfrole="lan" dstip=172.16.200.55 dstport=80 dstintf="port9"
dstintfrole="wan" poluuid="d8ce7a90-7763-51e9-e2be-741294c96f31" sessionid=4017 proto=6
action="close" policyid=1 policytype="policy" service="HTTP" dstcountry="Reserved"
srccountry="Reserved" trandisp="snat" transip=172.16.200.10 transport=46810 duration=89
sentbyte=565 rcvdbyte=9112 sentpkt=9 rcvdpkt=8 appcat="unscanned" utmaction="block"
countips=1 crscore=50 craction=4096 devtype="Unknown" devcategory="None"
mastersrcmac="00:0c:29:51:38:5e" srcmac="00:0c:29:51:38:5e" srcserver=0 utmref=0-302
```

Type and Subtype

Security Logs > Anomaly

Log configuration requirements

```
config firewall DoS-policy
    edit 1
        set interface "port12"
        set srcaddr "all"
        set dstaddr "all"
        set service "ALL"
        config anomaly
            edit "icmp_flood"
                set status enable
                set log enable
                set action block
                set threshold 50
            next
        end
    next
end
```

Sample log

```
date=2019-05-13 time=17:05:59 logid="0720018433" type="utm" subtype="anomaly"
eventtype="anomaly" level="alert" vd="vdom1" eventtime=1557792359461869329
severity="critical" srcip=10.1.100.11 srccountry="Reserved" dstip=172.16.200.55
srcintf="port12" srcintfrole="undefined" sessionid=0 action="clear_session" proto=1
service="PING" count=1 attack="icmp_flood" icmpid="0x1474" icmptype="0x08" icmpcode="0x00"
attackid=16777316 policyid=1 policytype="DoS-policy"
ref="http://www.fortinet.com/ids/VID16777316" msg="anomaly: icmp_flood, 51 > threshold 50"
crscore=50 craction=4096 crlevel="critical"
```

Type and Subtype

Security Logs > Data Leak Prevention

Log configuration requirements

```
config dlp sensor
    edit "dlp-file-type-test"
        set comment ''
        set replacemsg-group ''
        config filter
            edit 1
                set name ''
                set severity medium
                set type file
                set proto http-get http-post ftp
                set filter-by file-type
                set file-type 1
                set archive enable
                set action block
            next
        end
        set dlp-log enable
    next
end

config firewall policy
    edit 1
        set name "to_Internet"
        set srcintf "port10"
        set dstintf "port9"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set inspection-mode proxy
        set logtraffic utm
        set dlp-sensor "dlp-file-type-test"
        set ssl-ssh-profile "deep-inspection"
        set nat enable
    next
end
```

Sample log

```
date=2019-05-15 time=17:45:30 logid="0954024576" type="utm" subtype="dlp" eventtype="dlp"
level="warning" vd="root" eventtime=1557967528 filteridx=1 dlpextra="dlp-file-size11"
filtertype="file-type" filtercat="file" severity="medium" policyid=1 sessionid=3423
epoch=1740880646 eventid=0 srcip=10.1.100.22 srcport=50354 srcintf="port10"
srcintfrole="lan" dstip=52.216.177.83 dstport=443 dstintf="port9" dstintfrole="wan" proto=6
service="HTTPS" filetype="pdf" direction="incoming" action="block"
hostname="fortinetweb.s3.amazonaws.com" url="/docs.fortinet.com/v2/attachments/be3d0e3d-
4b62-11e9-94bf-00505692583a/FortiOS_6.2.0_Log_Reference.pdf" agent="Wget/1.17.1"
filename="FortiOS_6.2.0_Log_Reference.pdf" filesize=16360 profile="dlp-file-type-test"

# Corresponding Traffic Log #
date=2019-05-15 time=17:45:34 logid="0000000013" type="traffic" subtype="forward"
level="notice" vd="root" eventtime=1557967534 srcip=10.1.100.22 srcport=50354
srcintf="port10" srcintfrole="lan" dstip=52.216.177.83 dstport=443 dstintf="port9"
```

```
dstintfrole="wan" poluuid="d8ce7a90-7763-51e9-e2be-741294c96f31" sessionid=3423 proto=6
action="server-rst" policyid=1 policytype="policy" service="HTTPS" dstcountry="United
States" srccountry="Reserved" trandisp="snat" transip=172.16.200.10 transport=50354
duration=5 sentbyte=2314 rcvdbyte=5266 sentpkt=33 rcvdpkt=12 appcat="unscanned" wanin=43936
wanout=710 lanin=753 lanout=753 utmaction="block" countdlp=1 crscore=5 craction=262144
crlevel="low" devtype="Unknown" devcategory="None" mastersrcmac="00:0c:29:51:38:5e"
srcmac="00:0c:29:51:38:5e" srcserver=0 utmref=0-152
```

Type and Subtype

Security Logs > *SSH*

Security Logs > *SSL*

Log configuration requirements

```
config ssh-filter profile
    edit "ssh-deepscan"
        set block shell
        set log shell
        set default-command-log disable
    next
end

config firewall policy
    edit 1
        set srcintf "port21"
        set dstintf "port23"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set inspection-mode proxy
        set ssh-filter-profile "ssh-deepscan"
        set profile-protocol-options "protocol"
        set ssl-ssh-profile "ssl"
        set nat enable
    next
end
```

For SSL-Traffic-log, enable `logtraffic all`

```
config firewall policy
    edit 1
        set srcintf "dmz"
        set dstintf "wan1"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
        set inspection-mode proxy
        set logtraffic all
```

```
        set ssl-ssh-profile "deep-inspection"
        set nat enable
    next
end
```

For SSL-UTM-log

```
#EVENTTYPE="SSL-ANOMALIES"
```

By default, `ssl-anomalies-log` is enabled.

```
config firewall ssl-ssh-profile
    edit "deep-inspection"
        set comment "Read-only deep inspection profile."
        set server-cert-mode re-sign
        set caname "Fortinet_CA_SSL"
        set untrusted-caname "Fortinet_CA_Untrusted"
        set ssl-anomalies-log enable
        set ssl-exemptions-log disable
        set rpc-over-https disable
        set mapi-over-https disable
        set use-ssl-server disable
    next
end
```

```
# EVENTTYPE="SSL-EXEMPT"
```

Need to enable `ssl-exemptions-log` to generate ssl-utm-exempt log.

```
config firewall ssl-ssh-profile
    edit "deep-inspection"
        set comment "Read-only deep inspection profile."
        set server-cert-mode re-sign
        set caname "Fortinet_CA_SSL"
        set untrusted-caname "Fortinet_CA_Untrusted"
        set ssl-anomalies-log enable
        set ssl-exemptions-log enable
        set rpc-over-https disable
        set mapi-over-https disable
        set use-ssl-server disable
    next
end
```

Sample log for SSH

```
date=2019-05-15 time=16:18:17 logid="1601061010" type="utm" subtype="ssh" eventtype="ssh-
channel" level="warning" vd="vdom1" eventtime=1557962296 policyid=1 sessionid=344
profile="ssh-deepscan" srcip=10.1.100.11 srcport=43580 dstip=172.16.200.44 dstport=22
srcintf="port21" srcintfrole="undefined" dstintf="port23" dstintfrole="undefined" proto=6
action="blocked" direction="outgoing" login="root" channeltype="shell"
```

```
# Corresponding Traffic Log #
date=2019-05-15 time=16:18:18 logid="0000000013" type="traffic" subtype="forward"
level="notice" vd="vdom1" eventtime=1557962298 srcip=10.1.100.11 srcport=43580
srcintf="port21" srcintfrole="undefined" dstip=172.16.200.44 dstport=22 dstintf="port23"
dstintfrole="undefined" poluuid="49871fae-7371-51e9-17b4-43c7ff119195" sessionid=344 proto=6
action="close" policyid=1 policytype="policy" service="SSH" dstcountry="Reserved"
srccountry="Reserved" trandisp="snat" transip=172.16.200.171 transport=43580 duration=8
```

```
sentbyte=3093 rcvdbyte=2973 sentpkt=18 rcvdpkt=16 appcat="unscanned" utmaction="block"
countssh=1 utmref=65535-0
```

Sample log for SSL

For SSL-Traffic-log

```
date=2019-05-16 time=10:08:26 logid="0000000013" type="traffic" subtype="forward"
level="notice" vd="root" eventtime=1558026506763925658 srcip=10.1.100.66 srcport=38572
srcintf="dmz" srcintfrole="dmz" dstip=104.154.89.105 dstport=443 dstintf="wan1"
dstintfrole="wan" poluuid="a17c0a38-75c6-51e9-4c0d-d547347b63e5" sessionid=100 proto=6
action="server-rst" policyid=1 policytype="policy" service="HTTPS" dstcountry="United
States" srccountry="Reserved" trandisp="snat" transip=172.16.200.11 transport=38572
duration=5 sentbyte=930 rcvdbyte=6832 sentpkt=11 rcvdpkt=19 appcat="unscanned" wanin=1779
wanout=350 lanin=754 lanout=754 utmaction="block"  countssl=1 crscore=5 craction=262144
crlevel="low" utmref=65467-0
```

For SSL-UTM-log

```
#EVENTTYPE="SSL-ANOMALIES"

date=2019-03-28 time=10:44:53 logid="1700062002" type="utm" subtype="ssl" eventtype="ssl-
anomalies" level="warning" vd="vdom1" eventtime=1553795092 policyid=1 sessionid=10796
service="HTTPS" srcip=10.1.100.66 srcport=43602 dstip=104.154.89.105 dstport=443
srcintf="port2" srcintfrole="undefined" dstintf="port3" dstintfrole="undefined" proto=6
action="blocked" msg="Server certificate blocked" reason="block-cert-invalid"

date=2019-03-28 time=10:51:17 logid="1700062002" type="utm" subtype="ssl" eventtype="ssl-
anomalies" level="warning" vd="vdom1" eventtime=1553795476 policyid=1 sessionid=11110
service="HTTPS" srcip=10.1.100.66 srcport=49076 dstip=172.16.200.99 dstport=443
srcintf="port2" srcintfrole="undefined" dstintf="port3" dstintfrole="undefined" proto=6
action="blocked" msg="Server certificate blocked" reason="block-cert-untrusted"

date=2019-03-28 time=10:55:43 logid="1700062002" type="utm" subtype="ssl" eventtype="ssl-
anomalies" level="warning" vd="vdom1" eventtime=1553795742 policyid=1 sessionid=11334
service="HTTPS" srcip=10.1.100.66 srcport=49082 dstip=172.16.200.99 dstport=443
srcintf="port2" srcintfrole="undefined" dstintf="port3" dstintfrole="undefined" proto=6
action="blocked" msg="Server certificate blocked" reason="block-cert-req"

date=2019-03-28 time=10:57:42 logid="1700062053" type="utm" subtype="ssl" eventtype="ssl-
anomalies" level="warning" vd="vdom1" eventtime=1553795861 policyid=1 sessionid=11424
service="SMTPS" profile="block-unsupported-ssl" srcip=10.1.100.66 srcport=41296
dstip=172.16.200.99 dstport=8080 srcintf="port2" srcintfrole="undefined" dstintf=unknown-0
dstintfrole="undefined" proto=6 action="blocked" msg="Connection is blocked due to
unsupported SSL traffic" reason="malformed input"

date=2019-03-28 time=11:00:17 logid="1700062002" type="utm" subtype="ssl" eventtype="ssl-
anomalies" level="warning" vd="vdom1" eventtime=1553796016 policyid=1 sessionid=11554
service="HTTPS" srcip=10.1.100.66 srcport=49088 dstip=172.16.200.99 dstport=443
srcintf="port2" srcintfrole="undefined" dstintf="port3" dstintfrole="undefined" proto=6
action="blocked" msg="Server certificate blocked" reason="block-cert-sni-mismatch"

date=2019-03-28 time=11:02:07 logid="1700062000" type="utm" subtype="ssl" eventtype="ssl-
anomalies" level="warning" vd="vdom1" eventtime=1553796126 policyid=1 sessionid=11667
service="HTTPS" srcip=10.1.100.66 srcport=49096 dstip=172.16.200.99 dstport=443
srcintf="port2" srcintfrole="undefined" dstintf="port3" dstintfrole="undefined" proto=6
```

```
action="blocked" msg="Certificate blocklisted"
certhash="1115ec1857ed7f937301ff5e02f6b0681cf2ec4e" reason="Other"

# EVENTTYPE="SSL-EXEMPT"

date=2019-03-28 time=11:06:05 logid="1701062003" type="utm" subtype="ssl" eventtype="ssl-
exempt" level="notice" vd="vdom1" eventtime=1553796363 policyid=1 sessionid=11871
service="HTTPS" srcip=10.1.100.66 srcport=47384 dstip=50.18.221.132 dstport=443
srcintf="port2" srcintfrole="undefined" dstintf="port3" dstintfrole="undefined" proto=6
action="exempt" msg="SSL connection exempted" reason="exempt-whitelist"

date=2019-03-28 time=11:09:14 logid="1701062003" type="utm" subtype="ssl" eventtype="ssl-
exempt" level="notice" vd="vdom1" eventtime=1553796553 policyid=1 sessionid=12079
service="HTTPS" srcip=10.1.100.66 srcport=49102 dstip=172.16.200.99 dstport=443
srcintf="port2" srcintfrole="undefined" dstintf="port3" dstintfrole="undefined" proto=6
action="exempt" msg="SSL connection exempted" reason="exempt-addr"

date=2019-03-28 time=11:10:55 logid="1701062003" type="utm" subtype="ssl" eventtype="ssl-
exempt" level="notice" vd="vdom1" eventtime=1553796654 policyid=1 sessionid=12171
service="HTTPS" srcip=10.1.100.66 srcport=47390 dstip=50.18.221.132 dstport=443
srcintf="port2" srcintfrole="undefined" dstintf="port3" dstintfrole="undefined" proto=6
action="exempt" msg="SSL connection exempted" reason="exempt-ftgd-cat"
```

Type and Subtype

Security Logs > CIFS

Log configuration requirements

```
config cifs profile
    edit "cifs"
        set server-credential-type none
        config file-filter
            set status enable
            set log enable
            config entries
                edit "1"
                    set comment ''
                    set action block
                    set direction any
                    set file-type "msoffice"
                next
            end
        end
    next
end

config firewall policy
    edit 1
        set srcintf "port21"
        set dstintf "port23"
        set srcaddr "all"
        set dstaddr "all"
        set action accept
        set schedule "always"
        set service "ALL"
        set utm-status enable
```

```
        set inspection-mode proxy
        set cifs-profile "cifs"
        set profile-protocol-options "protocol"
        set ssl-ssh-profile "ssl"
        set nat enable
    next
end
```

Sample log

```
date=2019-05-15 time=16:28:17 logid="1800063000" type="utm" subtype="cifs" eventtype="cifs-
filefilter" level="warning" vd="vdom1" eventtime=1557962895 msg="File was blocked by file
filter." direction="incoming" action="blocked" service="CIFS" srcip=10.1.100.11
dstip=172.16.200.44 srcport=56348 dstport=445 srcintf="port21" srcintfrole="undefined"
dstintf="port23" dstintfrole="undefined" policyid=1 proto=16 profile="cifs" filesize="13824"
filename="sample\\test.xls" filtername="1" filetype="msoffice"
```

Checking the email filter log

To check the email filter log in the CLI:


```
execute log filter category 5

execute log display
1 logs found.
1 logs returned.

1: date=2019-04-09 time=03:41:18 logid="0510020491" type="utm" subtype="emailfilter"
eventtype="imap" level="notice" vd="vdom1" eventtime=1554806478647415130 policyid=1
sessionid=439 srcip=10.1.100.22 srcport=39937 srcintf="port21" srcintfrole="undefined"
dstip=172.16.200.45 dstport=143 dstintf="port17" dstintfrole="undefined" proto=6
service="IMAPS" profile="822881" action="blocked" from="testpc3@qa.fortinet.com"
to="testpc3@qa.fortinet.com" recipient="testpc3" direction="incoming" msg="from ip is in ip
blocklist.(path block ip 172.16.200.9)" subject="testcase822881" size="525" attachment="no"
```

To check the email filter log in the GUI:

1. Go to *Log & Report* > *Anti-Spam*.

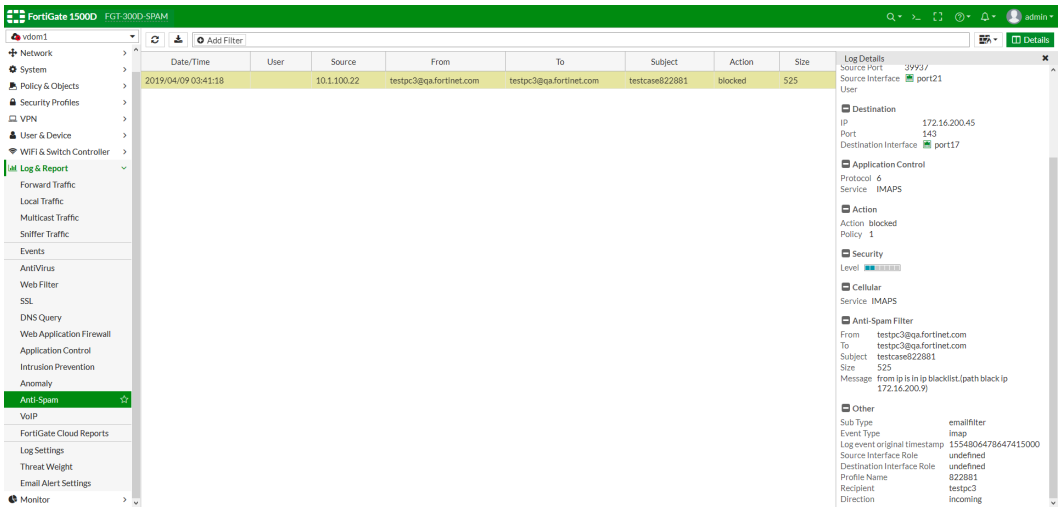

Supported log types to FortiAnalyzer, syslog, and FortiAnalyzer Cloud

This topic describes which log messages are supported by each logging destination:

Log Type	FortiAnalyzer	Syslog	FortiAnalyzer Cloud
Traffic	Yes	Yes	No
Event	Yes	Yes	Yes
Virus	Yes	Yes	No
Webfilter	Yes	Yes	No
IPS	Yes	Yes	No
Emailfilter	Yes	Yes	No
Anomaly	Yes	Yes	No
VOIP	Yes	Yes	No
DLP	Yes	Yes	No
App-Ctrl	Yes	Yes	No
WAF	Yes	Yes	No
GTP	Yes	Yes	No
DNS	Yes	Yes	No

Log Type	FortiAnalyzer	Syslog	FortiAnalyzer Cloud
SSH	Yes	Yes	No
SSL	Yes	Yes	No
CIFS	No	Yes	No

Configuring multiple FortiAnalyzers on a multi-VDOM FortiGate

This topic shows a sample configuration of multiple FortiAnalyzers on a multi-VDOM FortiGate.

In this example:

- The FortiGate has three VDOMs:
  - Root (management VDOM)
  - VDOM1
  - VDOM2
- There are four FortiAnalyzers.
  These IP addresses are used as examples in the instructions below.
  - FAZ1: `172.16.200.55`
  - FAZ2: `172.18.60.25`
  - FAZ3: `192.168.1.253`
  - FAZ4: `192.168.1.254`
- Set up FAZ1 and FAZ2 under global.
  - These two collect logs from the root VDOM and VDOM2.
  - FAZ1 and FAZ2 must be accessible from management VDOM root.
- Set up FAZ3 and FAZ4 under VDOM1.
  - These two collect logs from VDOM1.
  - FAZ3 and FAZ4 must be accessible from VDOM1.

To set up FAZ1 as global FortiAnalyzer 1 from the GUI:

Prerequisite: FAZ1 must be reachable from the management root VDOM.

1. Go to *Global* > *Log & Report* > *Log Settings*.
2. Enable *Send logs to FortiAnalyzer/FortiManager*.
3. Enter the FortiAnalyzer IP.
   In this example: `172.16.200.55`.
4. For *Upload option*, select *Real Time*.
5. Click *Apply*.

To set up FAZ2 as global FortiAnalyzer 2 from the CLI:

Prerequisite: FAZ2 must be reachable from the management root VDOM.

```
config log fortianalyzer2 setting
    set status enable
```

```
    set server "172.18.60.25"
    set upload-option realtime
end
```

To set up FAZ3 and FAZ4 as VDOM1 FortiAnalyzer 1 and FortiAnalyzer 2:

Prerequisite: FAZ3 and FAZ4 must be reachable from VDOM1.

```
config log setting
   set faz-override enable
end

config log fortianalyzer override-setting
   set status enable
   set server "192.168.1.253"
   set upload-option realtime
end

config log fortianalyzer2 override-setting
   set status enable
   set server "192.168.1.254"
   set upload-option realtime
end
```

Checking FortiAnalyzer connectivity

To use the diagnose command to check FortiAnalyzer connectivity:

1. Check the global FortiAnalyzer status:

```
FGTA(global) # diagnose test application miglogd 1
faz: global , enabled
        server=172.16.200.55, realtime=3, ssl=1, state=connected, src=, mgmt_name=FGh_
Log_root_172.16.200.55, reliable=1
                status: ver=6, used_disk=0, total_disk=0, global=0, vfid=0 conn_
verified=N
                SNs: last sn update:1369 seconds ago.
                        Sn list:

                queue: qlen=0.
filter: severity=6, sz_exclude_list=0
         voip dns ssh ssl
subcategory:
        traffic: forward local multicast sniffer
        anomaly: anomaly

        server: global, id=0, fd=90, ready=1, ipv6=0, 172.16.200.55/514
        oftp-state=5
faz2: global , enabled
        server=172.18.60.25, realtime=1, ssl=1, state=connected, src=, mgmt_name=FGh_
Log_root_172.18.60.25, reliable=0
                status: ver=6, used_disk=0, total_disk=0, global=0, vfid=0 conn_
verified=N
                SNs: last sn update:1369 seconds ago.
                        Sn list:
```

```
                queue: qlen=0.
filter: severity=6, sz_exclude_list=0
         voip dns ssh ssl
subcategory:
        traffic: forward local multicast sniffer
        anomaly: anomaly

        server: global, id=1, fd=95, ready=1, ipv6=0, 172.18.60.25/514
        oftp-state=5
```

2. Check the VDOM1 override FortiAnalyzer status:

```
FGTA(global) # diagnose test application miglogd 3101
faz: vdom, enabled, override
        server=192.168.1.253, realtime=1, ssl=1, state=connected, src=, mgmt_name=FGh_
Log_root_192.168.1.253, reliable=1
                status: ver=6, used_disk=0, total_disk=0, global=0, vfid=0 conn_
verified=N
                SNs: last sn update:1369 seconds ago.
                        Sn list:
                        (FAZ-VM0000000001,age=17s)
                queue: qlen=0.
filter: severity=6, sz_exclude_list=0
         voip dns ssh ssl
subcategory:
        traffic: forward local multicast sniffer
        anomaly: anomaly

        server: vdom, id=0, fd=72, ready=1, ipv6=0, 192.168.1.253/514
        oftp-state=5
faz2: vdom, enabled, override
        server=192.168.1.254, realtime=1, ssl=1, state=connected, src=, mgmt_name=FGh_
Log_root_192.168.1.254, reliable=0
                status: ver=6, used_disk=0, total_disk=0, global=0, vfid=0 conn_
verified=N
                SNs: last sn update:1369 seconds ago.
                        Sn list:
                        (FL-1KET318000008,age=17s)
                queue: qlen=0.
filter: severity=6, sz_exclude_list=0
         voip dns ssh ssl
subcategory:
        traffic: forward local multicast sniffer
        anomaly: anomaly

        server: vdom, id=1, fd=97, ready=1, ipv6=0, 192.168.1.254/514
        oftp-state=5
faz3: vdom, disabled, override
```

Configuring multiple FortiAnalyzers (or syslog servers) per VDOM

In a VDOM, multiple FortiAnalyzer and syslog servers can be configured as follows:

- Up to three override FortiAnalyzer servers
- Up to four override syslog servers

If the VDOM `faz-override` and/or `syslog-override` setting is enabled or disabled (default) before upgrading, the setting remains the same after upgrading.

If the override setting is disabled, the GUI displays the global FortiAnalyzer1 or syslog1 setting. If the override setting is enabled, the GUI displays the VDOM override FortiAnalyzer1 or syslog1 setting.

You can only use CLI to enable the override to support multiple log servers.

To enable FortiAnalyzer and syslog server override under VDOM:

```
config log setting
    set faz-override enable
    set syslog-override enable
end
```

When `faz-override` and/or `syslog-override` is enabled, the following CLI commands are available for configuring VDOM override:

To configure VDOM override for FortiAnalyzer:

1. Configure the FortiAnalyzer override settings:

```
config log fortianalyzer/fortianalyzer2/fortianalyzer3 override-setting
    set status enable
    set server "123.12.123.123"
    set reliable enable
end
```

2. Configure the override filters:

```
config log fortianalyzer/fortianalyzer2/fortianalyzer3 override-filter
    set severity information
    set forward-traffic enable
    set local-traffic enable
    set multicast-traffic enable
    set sniffer-traffic enable
    set anomaly enable
    set voip enable
    set dlp-archive enable
    set dns enable
    set ssh enable
    set ssl enable
end
```

To configure VDOM override for a syslog server:

1. Configure the syslog override settings:

```
config log syslogd/syslogd2/syslogd3/syslogd4 override-setting
    set status enable
    set server "123.12.123.12"
    set facility local1
end
```

2. Configure the override filters:

```
config log syslogd/syslogd2/syslogd3/syslogd4 override-filter
    set severity information
    set forward-traffic enable
    set local-traffic enable
    set multicast-traffic enable
    set sniffer-traffic enable
    set anomaly enable
    set voip enable
    set dns enable
    set ssh enable
    set ssl enable
end
```

Source and destination UUID logging

The `log-uuid` setting in `system global` is split into two settings: `log-uuid-address` and `log-uuid policy`.

The traffic log includes two `internet-service` name fields: *Source Internet Service* (`srcinetsvc`) and *Destination Internet Service* (`dstinetsvc`).


Log UUIDs

UUIDs can be matched for each source and destination that match a policy that is added to the traffic log. This allows the address objects to be referenced in log analysis and reporting.

As this may consume a significant amount of storage space, this feature is optional. By default, policy UUID insertion is enabled and address UUID insertion is disabled.

To enable address and policy UUID insertion in traffic logs using the GUI:

1. Go to *Log & Report* > *Log Settings*.
2. Under *UUIDs in Traffic Log*, enable *Policy* and/or *Address*.
3. Click *Apply*.

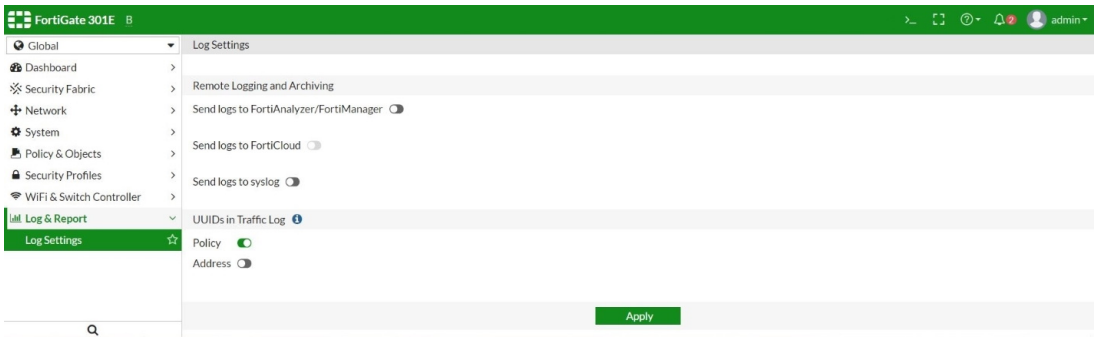

To enable address and policy UUID insertion in traffic logs using the CLI:

```
config system global
   set log-uuid-address enable
```

```
   set log-uuid-policy enable
end
```

Sample forward traffic log:


```
# date=2019-01-25 time=11:32:55 logid="0000000013" type="traffic" subtype="forward"
      level="notice" vd="vdom1" eventtime=1528223575 srcip=192.168.1.183 srcname="PC24"
      srcport=33709 srcintf="lan" srcintfrole="lan" dstip=192.168.70.184 dstport=80
      dstintf="wan1" dstintfrole="wan" srcuuid="27dd503e-883c-51e7-ade1-7e015d46494f"
      dstuuid="27dd503e-883c-51e7-ade1-7e015d46494f"
      poluuid="9e0fe24c-1808-51e8-1257-68ce4245572c" sessionid=5181 proto=6
      action="client-rst" policyid=4 policytype="policy" service="HTTP" trandisp="snat"
      transip=192.168.70.228 transport=33709 appid=38783 app="Wget"
      appcat="General.Interest" apprisk="low" applist="default" duration=5 sentbyte=450
      rcvdbyte=2305 sentpkt=6 wanin=368 wanout=130 lanin=130 lanout=130 utmaction="block"
      countav=2 countapp=1 crscore=50 craction=2 devtype="Linux PC" devcategory="None"
      osname="Linux" mastersrcmac="00:0c:29:36:5c:c3" srcmac="00:0c:29:36:5c:c3"
      srcserver=0 utmref=65523-1018
```

Internet service name fields

Traffic logs for `internet-service` include two fields: *Source Internet Service* and *Destination Internet Service*.

To view the internet-service fields using the GUI:

1. Go to *Log & Report* > *Forward Traffic*.
2. Double-click on an entry to view the *Log Details*. The *Source Internet Service* and *Destination Internet Service* fields are visible in the *Log Details* pane.

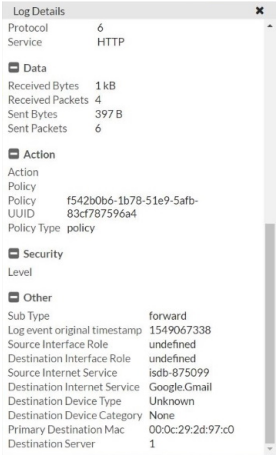

Sample `internet-service` name fields in a forward traffic log:

```
# date=2019-01-25 time=14:17:04 logid="0000000013" type="traffic" subtype="forward"
      level="notice" vd="vdom1" eventtime=1548454622 srcip=10.1.100.11 srcport=51112
      srcintf="port3" srcintfrole="undefined" dstip=172.217.14.228 dstport=80
      dstintf="port1" dstintfrole="undefined" poluuid="af519380-2094-51e9-391c-
      b78e8edbddfc" srcinetsvc="isdb-875099" dstinetsvc="Google.Gmail" sessionid=6930
      proto=6 action="close" policyid=2 policytype="policy" service="HTTP"
      dstcountry="United States" srccountry="Reserved" trandisp="snat"
      transip=172.16.200.2 transport=51112 duration=11 sentbyte=398 rcvdbyte=756 sentpkt=6
      rcvdpkt=4 appcat="unscanned" devtype="Router/NAT Device" devcategory="Fortinet
      Device" mastersrcmac="90:6c:ac:41:7a:24" srcmac="90:6c:ac:41:7a:24" srcserver=0
      dstdevtype="Unknown" dstdevcategory="Fortinet Device"
      masterdstmac="08:5b:0e:1f:ed:ed" dstmac="08:5b:0e:1f:ed:ed" dstserver=0
```

Troubleshooting

The following topics provide information about troubleshooting logging and reporting:

- Log-related diagnose commands on page 1589
- Backing up log files or dumping log messages on page 1594
- SNMP OID for logs that failed to send on page 1596

Log-related diagnose commands

This topic shows commonly used examples of log-related diagnose commands.

Use the following diagnose commands to identify log issues:

- The following commands enable debugging log daemon (`miglogd`) at the proper debug level:

```
diagnose debug application miglogd x
diagnose debug enable
```

- The following commands display different status/statistics of `miglogd` at the proper level:

```
diagnose test application miglogd x
diagnose debug enable
```

To get the list of available levels, press `Enter` after `diagnose test/debug application miglogd`. The following are some examples of commonly use levels.

If the debug log display does not return correct entries when log filter is set:

```
diagnose debug application miglogd 0x1000
```

For example, use the following command to display all login system event logs:

```
execute log filter device disk
execute log filter category event
execute log filter field action login

execute log display

Files to be searched:
file_no=65523, start line=0, end_line=237
file_no=65524, start line=0, end_line=429
file_no=65525, start line=0, end_line=411
file_no=65526, start line=0, end_line=381
file_no=65527, start line=0, end_line=395
file_no=65528, start line=0, end_line=458
file_no=65529, start line=0, end_line=604
file_no=65530, start line=0, end_line=389
file_no=65531, start line=0, end_line=384
session ID=1, total logs=3697
back ground search. process ID=26240, session_id=1
 start line=1  view line=10
( action "login" )
ID=1, total=3697, checked=238, found=5
ID=1, total=3697, checked=668, found=13
ID=1, total=3697, checked=1080, found=23
```

```
ID=1, total=3697, checked=1462, found=23
ID=1, total=3697, checked=1858, found=23
ID=1, total=3697, checked=2317, found=54
ID=1, total=3697, checked=2922, found=106
ID=1, total=3697, checked=3312, found=111
ID=1, total=3697, checked=3697, found=114
```

You can check and/or debug the FortiGate to FortiAnalyzer connection status.

To show connect status with detailed information:

```
diagnose test application miglogd 1

faz: global , enabled
        server=172.18.64.234, realtime=3, ssl=1, state=connected, src=, mgmt_name=FGh_Log_
vdom1_172.18.64.234, reliable=0, sni_prefix_type=none, required_entitlement=none
                status: ver=6, used_disk=0, total_disk=0, global=0, vfid=0 conn_verified=Y
                SNs: last sn update:107 seconds ago.
                        Sn list:
                        (FL-8HFT718900132,age=107s)
                queue: qlen=0.
filter: severity=6, sz_exclude_list=0
         voip dns ssh ssl cifs
subcategory:
        traffic: forward local multicast sniffer
        anomaly: anomaly

        server: global, id=0, fd=132, ready=1, ipv6=0, 172.18.64.234/514
        oftp-state=5
```

To collect debug information when FortiAnalyzer is enabled:

```
diagnose debug application miglogd 0x100

FGT-B-LOG (global) # <16208> miglog_start_rmt_conn()-1552: setting epoll_hd:0x7fc364e125e0
to _rmt_connect
<16209> miglog_start_rmt_conn()-1552: setting epoll_hd:0x7f72647715e0 to _rmt_connect
<16206> miglog_start_rmt_conn()-1552: setting epoll_hd:0x141f69e0 to _rmt_connect
<16209> _rmt_connect()-1433: oftp is ready.
<16209> _rmt_connect()-1435: xfer_status changed from 2 to 2 for global-faz
<16209> _rmt_connect()-1439: setting epoll_hd:0x7f72647715e0 to _rmt_recv
<16209> _check_oftp_certificate()-248: checking sn:FL-8HFT718900132 vs cert sn:FL-
8HFT718900132
<16209> _check_oftp_certificate()-252: Verified the certificate of peer (172.18.64.234) to
match sn=FL-8HFT718900132
<16209> _faz_post_connection()-292: Certificate verification:enabled, Faz verified:1
<16209> _send_queue_item()-518: xfer_status changed from 2 to 1 for global-faz
<16209> _send_queue_item()-523: type=0, cat=0, logcount=0, len=0
<16209> _oftp_send()-487: dev=global-faz type=17 pkt_len=34

<16209> _oftp_send()-487: opt=253, opt_len=10
<16209> _oftp_send()-487: opt=81, opt_len=12
<16208> _rmt_connect()-1433: oftp is ready.
<16208> _rmt_connect()-1435: xfer_status changed from 2 to 2 for global-faz
<16208> _rmt_connect()-1439: setting epoll_hd:0x7fc364e125e0 to _rmt_recv
<16208> _check_oftp_certificate()-248: checking sn:FL-8HFT718900132 vs cert sn:FL-
```

```
8HFT718900132
<16208> _check_oftp_certificate()-252: Verified the certificate of peer (172.18.64.234) to
match sn=FL-8HFT718900132
<16208> _faz_post_connection()-292: Certificate verification:enabled, Faz verified:1
<16208> _send_queue_item()-518: xfer_status changed from 2 to 1 for global-faz
<16208> _send_queue_item()-523: type=0, cat=0, logcount=0, len=0
<16208> _oftp_send()-487: dev=global-faz type=17 pkt_len=34

<16208> _oftp_send()-487: opt=253, opt_len=10
<16209> _oftp_recv()-1348: opt=252, opt_len=996
<16208> _oftp_send()-487: opt=81, opt_len=12
<16209> _process_response()-960: checking opt code=252
<16209> _faz_process_oftp_resp()-488: ha nmember:1 nvcluster:0 mode:1
<16209> __is_sn_known()-356: MATCHED: idx:0 sn:FL-8HFT718900132
<16209> _faz_process_oftp_resp()-494: Received SN:FL-8HFT718900132 should update:0

<16208> _oftp_recv()-1348: dev=global-faz type=252 pkt_len=1008

<16208> _oftp_recv()-1348: opt=252, opt_len=996
<16208> _process_response()-960: checking opt code=252
<16208> _faz_process_oftp_resp()-488: ha nmember:1 nvcluster:0 mode:1
<16208> __is_sn_known()-356: MATCHED: idx:0 sn:FL-8HFT718900132
<16208> _faz_process_oftp_resp()-494: Received SN:FL-8HFT718900132 should update:0

<16206> _rmt_connect()-1433: oftp is ready.
<16206> _rmt_connect()-1435: xfer_status changed from 2 to 2 for global-faz
<16206> _rmt_connect()-1439: setting epoll_hd:0x141f69e0 to _rmt_recv
<16206> _check_oftp_certificate()-248: checking sn:FL-8HFT718900132 vs cert sn:FL-
8HFT718900132
<16206> _check_oftp_certificate()-252: Verified the certificate of peer (172.18.64.234) to
match sn=FL-8HFT718900132
<16206> _faz_post_connection()-292: Certificate verification:enabled, Faz verified:1
<16206> _send_queue_item()-518: xfer_status changed from 2 to 1 for global-faz
<16206> _send_queue_item()-523: type=0, cat=0, logcount=0, len=0
<16206> _oftp_send()-487: dev=global-faz type=17 pkt_len=34

<16206> _oftp_send()-487: opt=253, opt_len=10
<16206> _oftp_send()-487: opt=81, opt_len=12
<16206> _oftp_recv()-1348: dev=global-faz type=252 pkt_len=1008

<16206> _oftp_recv()-1348: opt=252, opt_len=996
<16206> _process_response()-960: checking opt code=252
<16206> _faz_process_oftp_resp()-488: ha nmember:1 nvcluster:0 mode:1
<16206> __is_sn_known()-356: MATCHED: idx:0 sn:FL-8HFT718900132
<16206> _faz_process_oftp_resp()-494: Received SN:FL-8HFT718900132 should update:0

<16209> _oftp_recv()-1348: dev=global-faz type=1 pkt_len=985

<16209> _oftp_recv()-1348: opt=12, opt_len=16
......
<16209> _build_ack()-784: xfer_status changed from 1 to 2 for global-faz
<16209> _process_response()-960: checking opt code=81
......
<16209> _send_queue_item()-523: type=1, cat=0, logcount=0, len=0
<16209> _oftp_send()-487: dev=global-faz type=1 pkt_len=24
```

```
<16209> _oftp_send()-487: opt=1, opt_len=12
<16209> _send_queue_item()-523: type=7, cat=0, logcount=0, len=988
<16209> _oftp_send()-487: dev=global-faz type=252 pkt_len=1008

<16209> _oftp_send()-487: opt=252, opt_len=996
<16208> _oftp_recv()-1348: dev=global-faz type=1 pkt_len=58

<16208> _oftp_recv()-1348: opt=12, opt_len=16
<16208> _oftp_recv()-1348: opt=51, opt_len=9
<16208> _oftp_recv()-1348: opt=49, opt_len=12
<16208> _oftp_recv()-1348: opt=52, opt_len=9
<16208> _build_ack()-784: xfer_status changed from 1 to 2 for global-faz
<16208> _process_response()-960: checking opt code=52
<16208> _send_queue_item()-523: type=1, cat=0, logcount=0, len=0
<16208> _oftp_send()-487: dev=global-faz type=1 pkt_len=24

<16208> _oftp_send()-487: opt=1, opt_len=12
<16206> _oftp_recv()-1348: dev=global-faz type=1 pkt_len=985

......
<16208> _send_queue_item()-523: type=3, cat=1, logcount=1, len=301
<16206> _oftp_recv()-1348: opt=78, opt_len=55
......
<16206> _build_ack()-784: xfer_status changed from 1 to 2 for global-faz
<16206> _process_response()-960: checking opt code=81
......
<16206> _send_queue_item()-523: type=1, cat=0, logcount=0, len=0
<16206> _oftp_send()-487: dev=global-faz type=1 pkt_len=24

<16206> _oftp_send()-487: opt=1, opt_len=12
<16206> _send_queue_item()-523: type=7, cat=0, logcount=0, len=988
<16206> _oftp_send()-487: dev=global-faz type=252 pkt_len=1008

<16206> _oftp_send()-487: opt=252, opt_len=996
<16206> _add_change_notice_queue_item()-269: Change notice packect added to queue. len=145
......
<16206> _send_queue_item()-523: type=2, cat=0, logcount=0, len=300
<16206> _oftp_send()-487: dev=global-faz type=37 pkt_len=300

......

<16206> _oftp_send()-487: opt=152, opt_len=40
<16206> _oftp_send()-487: opt=74, opt_len=40
<16206> _oftp_send()-487: opt=82, opt_len=93
<16206> _oftp_recv()-1348: dev=global-faz type=1 pkt_len=24

<16206> _oftp_recv()-1348: opt=1, opt_len=12
<16206> _process_response()-960: checking opt code=1
```

To check the FortiGate to FortiGate Cloud log server connection status:

```
diagnose test application miglogd 20

FGT-B-LOG# diagnose test application miglogd 20
Home log server:
    Address: 172.16.95.92:514
```

```
Alternative log server:
    Address: 172.16.95.26:514
    oftp status: established
Debug zone info:
    Server IP:      172.16.95.92
    Server port:    514
    Server status:  up
    Log quota:      102400MB
    Log used:       673MB
    Daily volume:   20480MB
    FDS arch pause: 0
    fams archive pause: 0
```

To check real-time log statistics by log type since the miglogd daemon start:

```
diagnose test application miglogd 4
```

```
FGT-B-LOG (global) # diagnose test application miglogd 4
info for vdom: root
disk
event: logs=1238 len=262534, Sun=246 Mon=247 Tue=197 Wed=0 Thu=55 Fri=246 Sat=247
compressed=163038
dns: logs=4 len=1734, Sun=0 Mon=0 Tue=0 Wed=0 Thu=4 Fri=0 Sat=0 compressed=453

report
event: logs=1244 len=225453, Sun=246 Mon=247 Tue=197 Wed=0 Thu=61 Fri=246 Sat=247

faz
event: logs=6 len=1548, Sun=0 Mon=0 Tue=6 Wed=0 Thu=0 Fri=0 Sat=0 compressed=5446

info for vdom: vdom1
memory
traffic: logs=462 len=389648, Sun=93 Mon=88 Tue=77 Wed=0 Thu=13 Fri=116 Sat=75
event: logs=3724 len=1170237, Sun=670 Mon=700 Tue=531 Wed=0 Thu=392 Fri=747 Sat=684
app-ctrl: logs=16 len=9613, Sun=3 Mon=3 Tue=3 Wed=0 Thu=0 Fri=5 Sat=2
dns: logs=71 len=29833, Sun=0 Mon=0 Tue=0 Wed=0 Thu=71 Fri=0 Sat=0

disk
traffic: logs=462 len=389648, Sun=93 Mon=88 Tue=77 Wed=0 Thu=13 Fri=116 Sat=75
compressed=134638
event: logs=2262 len=550957, Sun=382 Mon=412 Tue=307 Wed=0 Thu=306 Fri=459 Sat=396
compressed=244606
app-ctrl: logs=16 len=9613, Sun=3 Mon=3 Tue=3 Wed=0 Thu=0 Fri=5 Sat=2 compressed=3966
dns: logs=71 len=29833, Sun=0 Mon=0 Tue=0 Wed=0 Thu=71 Fri=0 Sat=0 compressed=1499

report
traffic: logs=462 len=375326, Sun=93 Mon=88 Tue=77 Wed=0 Thu=13 Fri=116 Sat=75
event: logs=3733 len=1057123, Sun=670 Mon=700 Tue=531 Wed=0 Thu=401 Fri=747 Sat=684
app-ctrl: logs=16 len=9117, Sun=3 Mon=3 Tue=3 Wed=0 Thu=0 Fri=5 Sat=2

faz
traffic: logs=462 len=411362, Sun=93 Mon=88 Tue=77 Wed=0 Thu=13 Fri=116 Sat=75
compressed=307610
event: logs=3733 len=1348297, Sun=670 Mon=700 Tue=531 Wed=0 Thu=401 Fri=747 Sat=684
compressed=816636
```

```
app-ctrl: logs=16 len=10365, Sun=3 Mon=3 Tue=3 Wed=0 Thu=0 Fri=5 Sat=2 compressed=8193
dns: logs=71 len=33170, Sun=0 Mon=0 Tue=0 Wed=0 Thu=71 Fri=0 Sat=0 compressed=0
```

To check log statistics to the local/remote log device since the miglogd daemon start:

```
diagnose test application miglogd 6 1     <<<  1 means the first child daemon

diagnose test application miglogd 6 2     <<<  2 means the second child daemon

FGT-B-LOG (global) # diagnose test application miglogd 6 1
mem=4288, disk=4070, alert=0, alarm=0, sys=5513, faz=4307, webt=0, fds=0
interface-missed=208
Queues in all miglogds: cur:0  total-so-far:36974
global log dev statistics:
syslog 0: sent=6585, failed=152, relayed=0
faz 0: sent=13, failed=0, cached=0, dropped=0 , relayed=0
```

To check the miglogd daemon number and increase/decrease miglogd daemon:

```
diagnose test application miglogd 15     <<<  Show miglog ID

diagnose test application miglogd 13     <<<  Increase one miglogd child

diagnose test application miglogd 14     <<<  Decrease one miglogd child

FGT-B-LOG (global) # diagnose test application miglogd 15
Main miglogd: ID=0, children=2, active-children=2
        ID=1, duration=70465.
        ID=2, duration=70465.

FGT-B-LOG (global) # diagnose test application miglogd 13

FGT-B-LOG (global) # diagnose test application miglogd 15
Main miglogd: ID=0, children=3, active-children=3
        ID=1, duration=70486.
        ID=2, duration=70486.
        ID=3, duration=1.

FGT-B-LOG (global) # diagnose test application miglogd 14

FGT-B-LOG (global) # diagnose test application miglogd 15
Main miglogd: ID=0, children=2, active-children=2
        ID=1, duration=70604.
        ID=2, duration=70604.
```

Backing up log files or dumping log messages

When a log issue is caused by a particular log message, it is very help to get logs from that FortiGate. This topic provides steps for using `execute log backup` or dumping log messages to a USB drive.

Backing up full logs using execute log backup

This command backs up all disk log files and is only available on FortiGates with an SSD disk.

Before running `execute log backup`, we recommend temporarily stopping `miglogd` and `reportd`.

To stop and kill miglogd and reportd:

```
diagnose sys process daemon-auto-restart disable miglogd
diagnose sys process daemon-auto-restart disable reportd
```

Or

1. Determine the process, or thread, ID (PID) of `miglogd` and `reportd`:

   ```
   # diagnose sys top 10 99
   ```

2. Kill each process:

   ```
   # diagnose sys kill 9 <PID>
   ```

To store the log file on a USB drive:

1. Plug in a USB drive into the FortiGate.
2. Run this command:

   ```
   exec log backup /usb/log.tar
   ```

To restart `miglogd` and `reportd`:

```
diagnose sys process daemon-auto-restart enable miglogd
diagnose sys process daemon-auto-restart enable reportd
```

Dumping log messages

To dump log messages:

1. Enable log dumping for `miglogd` daemon:

   ```
   (global) # diagnose test application miglogd 26 1
   miglogd(1) log dumping is enabled
   ```

2. Display all `miglogd` dumping status:

   ```
   global) # diagnose test application miglogd 26 0 255
   miglogd(0) log dumping is disabled
   miglogd(1) log dumping is enabled
   miglogd(2) log dumping is disabled
   ```

   ```
   (global) # diagnose test application miglogd 26 2
   miglogd(2) log dumping is enabled
   ```

   ```
   (global) # diagnose test application miglogd 26 0
   miglogd(0) log dumping is enabled
   ```

   ```
   (global) # diagnose test application miglogd 26 0 255
   miglogd(0) log dumping is enabled
   miglogd(1) log dumping is enabled
   miglogd(2) log dumping is enabled
   ```

3. Let the FortiGate run and collect log messages.

4. List the log dump files:

```
(global) # diagnose test application miglogd 33
2019-04-17 15:50:02          20828      log-1-0.dat
2019-04-17 15:48:31           4892      log-2-0.dat
```

5. Back up log dump files to the USB drive:

```
(global) # diagnose test application miglogd 34

Dumping file miglog1_index0.dat copied to USB disk OK.

Dumping file miglog2_index0.dat copied to USB disk OK.
```

6. Disable log dumping for `miglogd` daemon:

```
(global) # diagnose test application miglogd 26 0
miglogd(0) log dumping is disabled

(global) # diagnose test application miglogd 26 1
miglogd(1) log dumping is disabled

(global) # diagnose test application miglogd 26 2
miglogd(2) log dumping is disabled

(global) # diagnose test application miglogd 26 0 255
miglogd(0) log dumping is disabled
miglogd(1) log dumping is disabled
miglogd(2) log dumping is disabled
```

SNMP OID for logs that failed to send

When a syslog server encounters low-performance conditions and slows down to respond, the buffered syslog messages in the kernel might overflow after a certain number of retransmissions, causing the overflowed messages to be lost. OIDs track the lost messages or failed logs.

SNMP query OIDs include log statistics for global log devices:

- FORTINET-FORTIGATE-MIB:fortinet.fnFortiGateMib.fgLog.fgLogDeviceNumber 1.3.6.1.4.1.12356.101.21.1.1
- FORTINET-FORTIGATE-MIB:fortinet.fnFortiGateMib.fgLog.fgLogDevices.fgLogDeviceTable.fgLogDeviceEntry.fgLogDeviceEntryIndex 1.3.6.1.4.1.12356.101.21.2.1.1.1
- FORTINET-FORTIGATE-MIB:fortinet.fnFortiGateMib.fgLog.fgLogDevices.fgLogDeviceTable.fgLogDeviceEntry.fgLogDeviceEnabled 1.3.6.1.4.1.12356.101.21.2.1.1.2
- FORTINET-FORTIGATE-MIB:fortinet.fnFortiGateMib.fgLog.fgLogDevices.fgLogDeviceTable.fgLogDeviceEntry.fgLogDeviceName 1.3.6.1.4.1.12356.101.21.2.1.1.3
- FORTINET-FORTIGATE-MIB:fortinet.fnFortiGateMib.fgLog.fgLogDevices.fgLogDeviceTable.fgLogDeviceEntry.fgLogDeviceSentCount 1.3.6.1.4.1.12356.101.21.2.1.1.4
- FORTINET-FORTIGATE-MIB:fortinet.fnFortiGateMib.fgLog.fgLogDevices.fgLogDeviceTable.fgLogDeviceEntry.fgLogDeviceRelayedCount 1.3.6.1.4.1.12356.101.21.2.1.1.5

- FORTINET-FORTIGATE-MIB:fortinet.fnFortiGateMib.fgLog.fgLogDevices.fgLogDeviceTable.fgLogDeviceEntry.fgLogDeviceCachedCount 1.3.6.1.4.1.12356.101.21.2.1.1.6
- FORTINET-FORTIGATE-MIB:fortinet.fnFortiGateMib.fgLog.fgLogDevices.fgLogDeviceTable.fgLogDeviceEntry.fgLogDeviceFailedCount 1.3.6.1.4.1.12356.101.21.2.1.1.7
- FORTINET-FORTIGATE-MIB:fortinet.fnFortiGateMib.fgLog.fgLogDevices.fgLogDeviceTable.fgLogDeviceEntry.fgLogDeviceDroppedCount 1.3.6.1.4.1.12356.101.21.2.1.1.8

Where:

- fgLogDeviceNumber is the number of devices in the table.
- fgLogDeviceEnabled is either 1 or 0, indicating whether the device is enabled.
- fgLogDeviceName is the name of the device.

A FortiGate connected to a syslog server or FortiAnalyzer generates statistics that can be seen using the `diagnose test application miglogd` command:

```
(global) # diagnose test application miglogd 6
    mem=404, disk=657, alert=0, alarm=0, sys=920, faz=555, webt=0, fds=0
    interface-missed=460
    Queues in all miglogds: cur:0 total-so-far:526
    global log dev statistics:
    syslog 0: sent=254, failed=139, relayed=0
    syslog 1: sent=220, failed=139, relayed=0
    syslog 2: sent=95, failed=73, relayed=0
    faz 0: sent=282, failed=0, cached=0, dropped=0 , relayed=0
    Num of REST URLs: 3
    /api/v2/monitor/system/csf/ : 0 : 300
    /api/v2/cmdb/system/interface/ : 394.0.673.15877729363538323653.1547149763 : 1200
    /api/v2/monitor/system/ha-checksums/ : 0 : 1200
    faz 1: sent=272, failed=0, cached=0, dropped=0 , relayed=0
    Num of REST URLs: 2
    /api/v2/monitor/system/csf/ : 0 : 300
    /api/v2/cmdb/system/interface/ : 394.0.673.15877729363538323653.1547149763 : 1200
```

The same statistics are also available in `snmpwalk/snmpget` on the OID 1.3.6.1.4.1.12356.101.21.

```
snmpwalk -v2c -c REGR-SYS 172.16.200.1 1.3.6.1.4.1.12356.101.21
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.1.1.0 = INTEGER: 9
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.1.0 = INTEGER: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.1.1 = INTEGER: 1
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.1.2 = INTEGER: 2
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.1.3 = INTEGER: 3
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.1.4 = INTEGER: 4
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.1.5 = INTEGER: 5
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.1.6 = INTEGER: 6
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.1.7 = INTEGER: 7
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.1.8 = INTEGER: 8
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.0 = INTEGER: 1
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.1 = INTEGER: 1
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.2 = INTEGER: 1
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.3 = INTEGER: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.4 = INTEGER: 1
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.5 = INTEGER: 1
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.6 = INTEGER: 0
```

```
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.7 = INTEGER: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.8 = INTEGER: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.0 = STRING: "syslog"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.1 = STRING: "syslog2"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.2 = STRING: "syslog3"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.3 = STRING: "syslog4"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.4 = STRING: "faz"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.5 = STRING: "faz2"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.6 = STRING: "faz3"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.7 = STRING: "webtrends"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.8 = STRING: "fds"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.4.0 = Counter32: 254
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.4.1 = Counter32: 220
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.4.2 = Counter32: 95
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.4.3 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.4.4 = Counter32: 282
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.4.5 = Counter32: 272
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.4.6 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.4.7 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.4.8 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.5.0 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.5.1 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.5.2 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.5.3 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.5.4 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.5.5 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.5.6 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.5.7 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.5.8 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.6.0 = Gauge32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.6.1 = Gauge32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.6.2 = Gauge32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.6.3 = Gauge32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.6.4 = Gauge32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.6.5 = Gauge32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.6.6 = Gauge32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.6.7 = Gauge32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.6.8 = Gauge32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.0 = Counter32: 139
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.1 = Counter32: 139
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.2 = Counter32: 73
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.3 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.4 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.5 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.6 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.7 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.8 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.8.0 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.8.1 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.8.2 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.8.3 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.8.4 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.8.5 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.8.6 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.8.7 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.8.8 = Counter32: 0
```

To get the type of logging device that is attached to the FortiGate:

```
root@PC05:/home/tester/autolib/trunk# snmpwalk -v2c -c REGR-SYS 172.16.200.1
1.3.6.1.4.1.12356.101.21.2.1.1.3
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.0 = STRING: "syslog"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.1 = STRING: "syslog2"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.2 = STRING: "syslog3"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.3 = STRING: "syslog4"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.4 = STRING: "faz"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.5 = STRING: "faz2"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.6 = STRING: "faz3"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.7 = STRING: "webtrends"
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.3.8 = STRING: "fds"
```

To get the present state of the logging device that is attached to the FortiGate:

```
root@PC05:/home/tester/autolib/trunk# snmpwalk -v2c -c REGR-SYS 172.16.200.1
1.3.6.1.4.1.12356.101.21.2.1.1.2
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.0 = INTEGER: 1
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.1 = INTEGER: 1
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.2 = INTEGER: 1
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.3 = INTEGER: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.4 = INTEGER: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.5 = INTEGER: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.6 = INTEGER: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.7 = INTEGER: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.2.8 = INTEGER: 0
```

To get the failed log count value:

```
root@PC05:/home/tester/autolib/trunk# snmpwalk -v2c -c REGR-SYS 172.16.200.1
1.3.6.1.4.1.12356.101.21.2.1.1.7
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.0 = Counter32: 139
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.1 = Counter32: 139
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.2 = Counter32: 73
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.3 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.4 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.5 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.6 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.7 = Counter32: 0
FORTINET-FORTIGATE-MIB::fnFortiGateMib.21.2.1.1.7.8 = Counter32: 0
```

Monitor

The following sections provide information about monitoring:


- Policy and route checks on page 1600
- WiFi client monitor on page 1602
- WiFi health monitor on page 1603
- Running processes on page 1604
- Aggregate processes information on page 1606

Policy and route checks


Policy route look up is prioritized over static and dynamic routes when doing a route look up in the GUI.

To look up an IPv4 route in the GUI:

1. Go to *Monitor* > *Routing Monitor*.
2. Click *Route Lookup*.

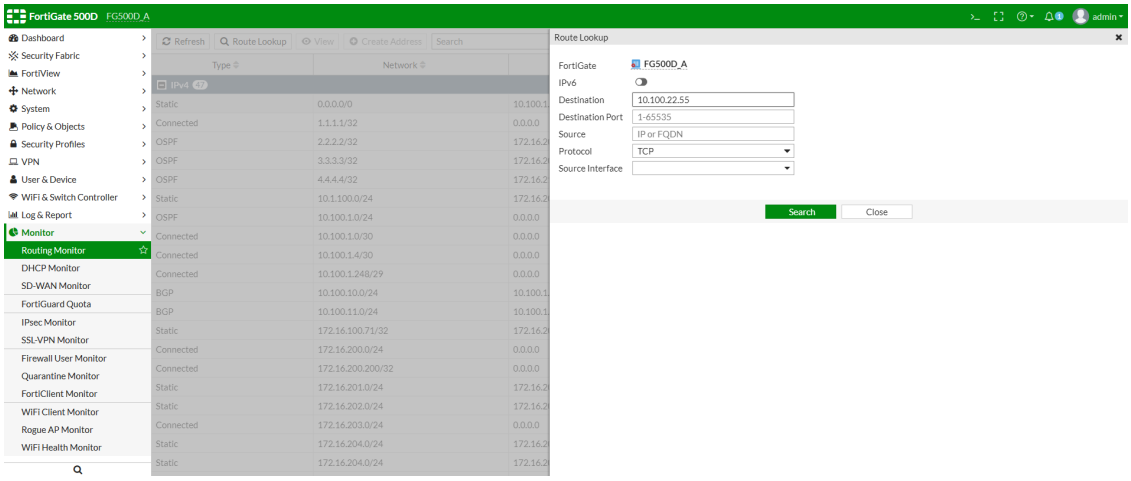


3. Enter an IP address in the *Destination* field, then click *Search*.
   The matching IPv4 route is highlighted on the *Route Monitor* page.

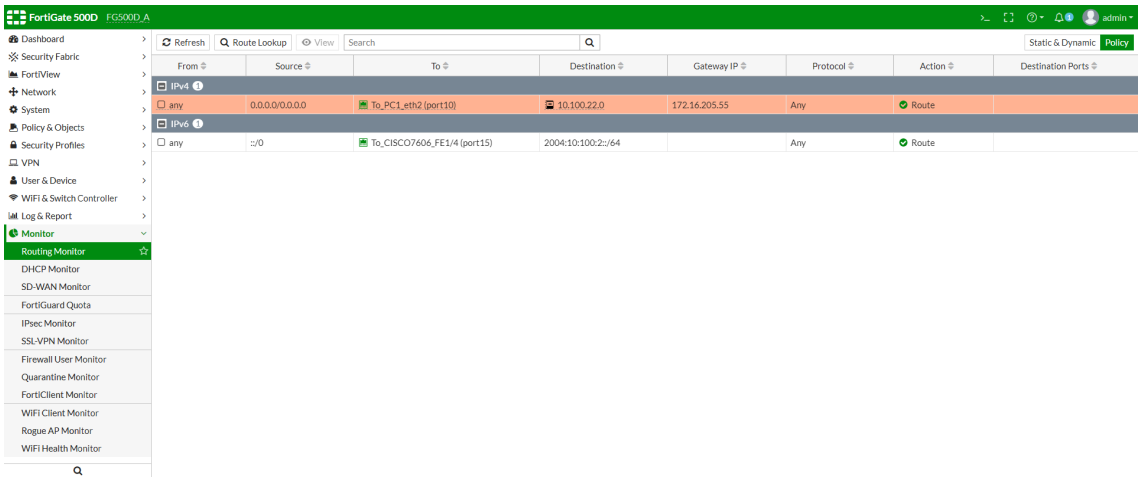


To look up an IPv6 route in the GUI:

1. Go to *Monitor* > *Routing Monitor*.
2. Click *Route Lookup*.

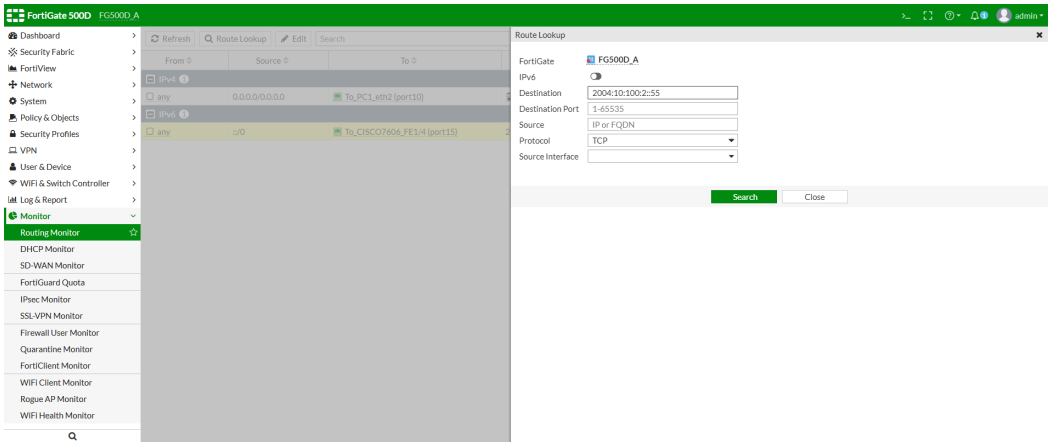

3. Enter an IPv6 address in the *Destination* field, then click *Search*.
   The matching IPv6 route is highlighted on the *Route Monitor* page.

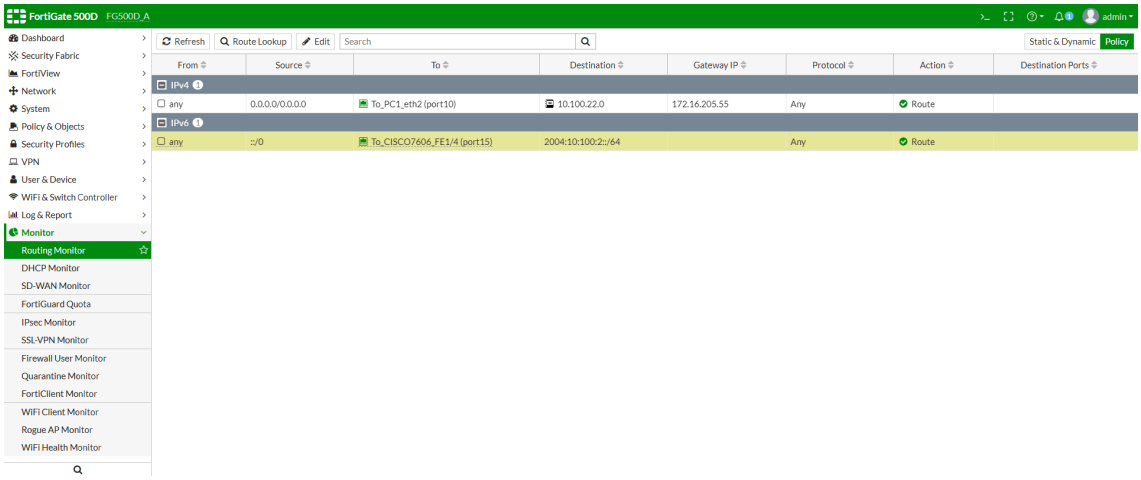

To look up an IPv4 route in the CLI:

```
diagnose ip proute match <destination_ip_address> <source_ip_address> <interface_name>
<protocol> <destination_port>
```

For example:

```
# diagnose ip proute match 10.100.21.44 2.2.2.2 port2 6 2
dst=10.100.21.44 src=2.2.2.2 iif=24 protocol=6 dport=2
id=7f00000c type=VWL
seq-num=12
```


```
# diagnose ip proute match 10.100.20.44 2.2.2.2 port2 6 2
dst=10.100.20.44 src=2.2.2.2 iif=24 protocol=6 dport=2
id=00000016 type=Policy Route
seq-num=22
```

To look up an IPv6 route in the CLI:

```
diagnose ipv6 proute match <destination_ipv6_address> <source_ipv6_address> <interface_name>
<protocol> <destination_port>
```

WiFi client monitor


The following shows a simple network topology when using FortiAPs with FortiGate:

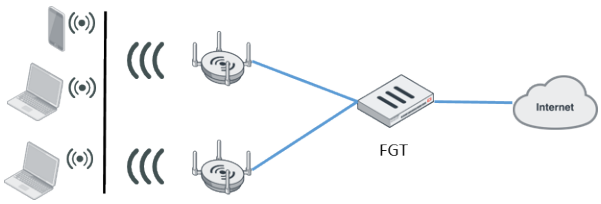

To view connected WiFi clients on the FortiGate unit, go to *Monitor* > *WiFi Client Monitor*. The following columns display:

Column	Description
SSID	SSID that the client connected to, such as the tunnel, bridge, or mesh.
FortiAP	Serial number of the FortiAP unit that the client connected to.
User	Username if using WPA enterprise authentication.
IP	IP address assigned to the wireless client.
Device	Wireless client device type.
Channel	FortiAP operation channel.
Auth	Authentication type used.
Channel	WiFi radio channel in use.
Bandwidth Tx/Rx	Client received and transmitted bandwidth in Kbps.


Column	Description
Signal Strength/Noise	Signal-to-noise ratio in decibels calculated from signal strength and noise level.
Association Time	How long the client has been connected to this AP.
Device OS	Wireless device OS.
Manufacturer	Wireless device manufacturer.
MIMO	Wireless device MIMO information.

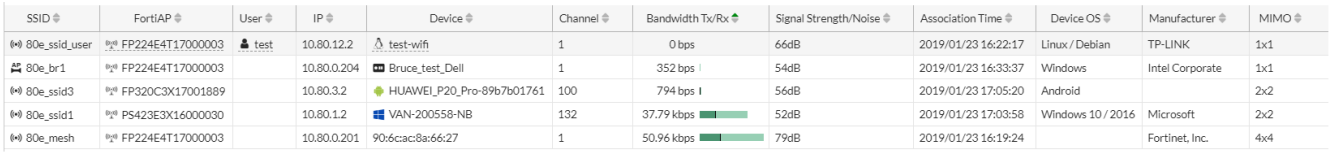

SSID	FortiAP	User	IP	Device	Channel	Bandwidth Tx/Rx	Signal Strength/Noise	Association Time	Device OS	Manufacturer	MIMO
80e_ssid_user	FP224E4T17000003	test	10.80.12.2	test-wifi	1	0 bps	66dB	2019/01/23 16:22:17	Linux / Debian	TP-LINK	1x1
80e_br1	FP224E4T17000003		10.80.0.204	Bruce_test_Dell	1	352 bps	54dB	2019/01/23 16:33:37	Windows	Intel Corporate	1x1
80e_ssid3	FP320C3X17001889		10.80.3.2	HUAWEI_P20_Pro-89b7b01761	100	794 bps	56dB	2019/01/23 17:05:20	Android		2x2
80e_ssid1	PS423E3X16000030		10.80.1.2	VAN-200558-NB	132	37.79 kbps	52dB	2019/01/23 17:03:58	Windows 10 / 2016	Microsoft	2x2
80e_mesh	FP224E4T17000003		10.80.0.201	90:6c:ac:8a:66:27	1	50.96 kbps	79dB	2019/01/23 16:19:24		Fortinet, Inc.	4x4


WiFi health monitor

The following shows a simple network topology when using FortiAPs with FortiGate:

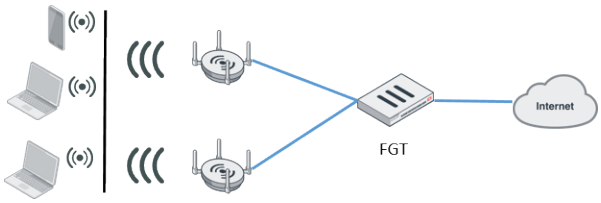


The *Monitor* > *WiFi Health Monitor* page displays the following charts:


- *Active Clients*: Currently active clients on each FortiAP

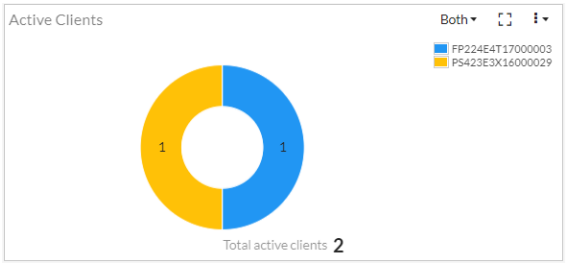


- *AP Status*: APs by status, sorted by those that have been up for over 24 hours, rebooted in the past 24 hours, and down/missing

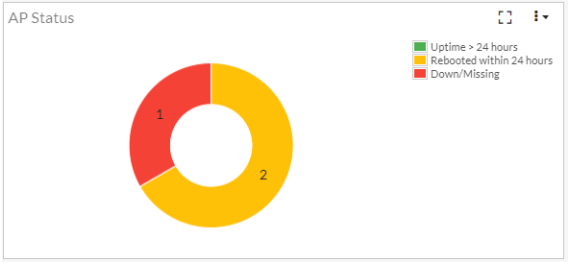


- *Channel Utilization*: Allow users to view 10-20 most and least utilized channels for each AP radio and a third histogram view showing utilization counts

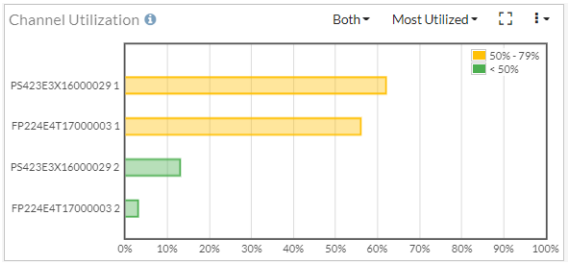


- *Client Count*: Shows client count over time. Can view for the past hour, day, or 30 days.

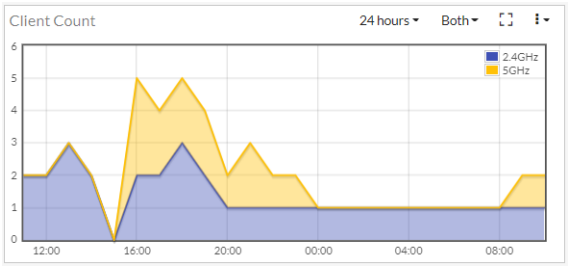

- *Login Failures*: Time, SSID, hostname, and username for failed login attempts. The widget also displays the AP name and group of FortiAP units with failed login attempts.

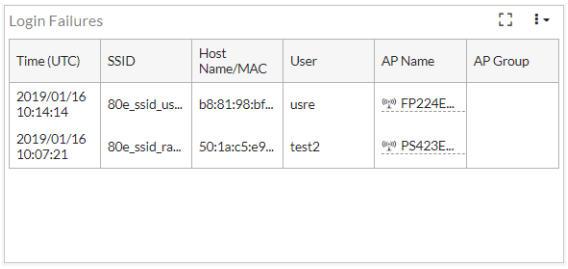

- *Top Wireless Interference*: Separate widgets for 2.4 GHz and 5 GHz bands. This requires spectrum analysis to be enabled on the radios.

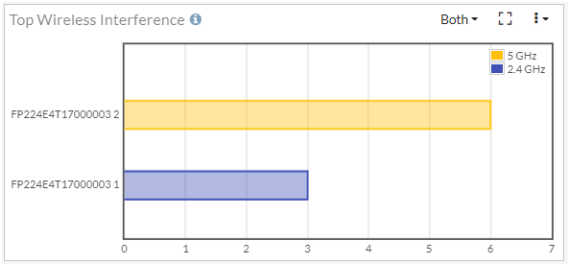

Running processes

The `diagnose sys top` CLI command displays a list of processes that are running on the FortiGate device, as well as information about each process.

The following commands can be used while the command is running:

q	Quit, and return to the command prompt.
c	Sort the process list by the amount of CPU that each process is using.
m	Sort the process list by the amount of memory that each process is using.

The `get system performance top` command also performs the same function.

Syntax

```
diagnose sys top [<delay>] [<lines>]
```

Variable	Description
<delay>	The delay between updates of the process list, in seconds (default = 5).
<lines>	The maximum number of processes that are displayed in the output (default = 20).

Example output

```
# diagnose sys top 5 5
Run Time:  4 days, 5 hours and 29 minutes
1U, 0N, 0S, 99I, 0WA, 0HI, 0SI, 0ST; 1866T, 1113F
         miglogd      191      S       0.3     6.3
          newcli    18391      R       0.1     0.3
         cmdbsvr       99      S       0.3     1.4
         pyfcgid    15628      S       0.0     1.3
       ipshelper      164      S <     0.3     1.2
```

Keyword / Variable / Column	Description
Run Time	How long the FortiOS has been running, as a string.
U	The percentage of user space applications using the CPU. In the example, `1U` means that 1% of user space applications are using the CPU.
N	Nice, or higher priority, processes, as a percentage.
S	System, or kernel, processes that are using the CPU, as a percentage.
I	The idle CPU usage, as a percentage.
WA	The IO wait, as a percentage.
HI	The hardware interrupts, as a percentage of CPU time used.
SI	The software interrupts, as a percentage of CPU time used.
ST	The steal time, as a percentage.
T	The total FortiOS system memory, in MB. In the example, 1866T means that there is 1866 MB of system memory.
F	The total free memory, in MB. In the example 1113F means that there are 1113 MB of free memory.

Keyword / Variable / Column	Description
Column 1	The process name, such as `miglogd`, or `newcli`.
Column 2	The process ID number (PID).
Column 3	The process status: • `R`: running • `S`: sleeping • `Z`: zombie • `D`: disk sleep A < on a process means that it is high priority.
Column 4	The CPU usage.
Column 5	The memory usage.

Stop a running process

The `diagnose sys kill` command can be used to stop a running process.

Syntax

```
diagnose sys kill <signal> <PID>
```

Variable	Description
`<signal>`	A number between 1 and 32. Each number represents a signal sent to kill the process. Signal 11 is commonly used to send the SIGEGV signal, causing the process to generate a Segmentation Fault crashlog. Signal 9, SIGKILL, forces the process to terminate immediate. For more information about kill commands and signals, see https://www.linux.org/threads/kill-commands-and-signals.8881.
`<PID>`	The process ID of the process to be killed.

Example

To kill the `newcli` process from the previous example and generate a Segmentation Fault crashlog, enter the following:

```
diagnose sys kill 11 18391
```

Aggregate processes information

The `diagnose sys top-summary` CLI command shows the top aggregate processes information.

The following commands can be used while the command is running:

h or ?	Show the list of available commands
q or <Ctrl> C	Quit, and return to the command prompt.
m	Sort by memory consumption.
c	Sort by CPU percentage.
f	Sort by the number of open file descriptors.
p	Sort by PID.
k or <Up>	Go up in the list of processes.
j or <Down>	Go down in the list of processes.
<Enter> or <Space>	Toggle the process tree.

Syntax

```
diagnose sys top-summary <options>
```

Options	Description
-n LINES or --num=LINES	The number of top processes to show (default = 20).
-i INTERVAL or --interval=INTERVAL	The update interval, in seconds (default = 1).
-s SORT or --sort=SORT	The sort mode: • cpu_percent: Sort by CPU percentage (default). • mem: Sort be memory consumption, • fds: Sort by the number of open file descriptors. • pid: Sort by PID.
-h or --help	Show the help message and exit.

Example output

```
# diagnose sys top-summary '-n 5 --sort=mem'
   CPU [|                                        ]   4.8%
   Mem [||||||||||||||||||||                     ]  54.0%  1100M/2012M
   Processes: 5 (running=1 sleeping=106)
   PID      RSS    CPU% ^MEM%    FDS     TIME+  NAME
 * 150      67M     0.0  3.4     22  01:11.84  httpsd [x4]
   171      57M     0.0  2.8    100  00:21.99  wad [x6]
   8050     46M     0.0  2.3     12  00:00.38  pyfcgid [x4]
   168      45M     0.0  2.3     16  00:05.57  reportd
   159      41M     0.0  2.1     26  00:48.88  forticron
```

The output shows five lines, sorted in descending order by memory consumption.

- ^ indicates the parameter that the information is sorted by.
- * indicates the currently active line.

Press `c` to sort the processes by CPU utilization, then press `<Down>` four times to select the miglogd parent instance, and then press `<Enter>` to see details about the child instance:

```
  CPU [|                                          ]   4.8%
  Mem [||||||||||||||||||||                       ]  54.0%  1099M/2012M
  Processes: 5 (running=1 sleeping=106)
  PID      RSS  ^CPU% MEM%   FDS     TIME+  NAME
  180      35M    4.8  1.8    12  00:01.51  sshd [x4]
  134       9M    0.0  0.5    88  00:09.99  zebos_launcher [x12]
  135       6M    0.0  0.3    12  00:01.45  bfdd
  147       6M    0.0  0.3    12  00:00.70  uploadd
* 148      22M    0.0  1.1   103  01:29.71  miglogd [x2]
   203      22M    0.0  1.1    42  00:44.53  miglogd
```

VM

Amazon Web Services

See the *FortiOS 6.2.6 AWS Cookbook*.

Microsoft Azure

See the *FortiOS 6.2.6 Azure Cookbook*.

Google Cloud Platform

See the *FortiOS 6.2.6 GCP Cookbook*.

Oracle OCI

See the *FortiOS 6.2.6 OCI Cookbook*.

AliCloud

See the *FortiOS 6.2.6 AliCloud Cookbook*.

Private cloud


See the *FortiOS 6.2.6 VMware ESXi Cookbook*.

FortiGate multiple connector support

This guide shows how to configure Fabric connectors and resolve dynamic firewall addresses through the configured Fabric connector in FortiOS.

FortiOS supports multiple Fabric connectors including public connectors (AWS, Azure, GCP, OCI, AliCloud) and private connectors (Kubernetes, VMware ESXi, VMware NSX, OpenStack, Cisco ACI, Nuage). FortiOS also supports multiple instances for each type of Fabric connector.

This guide uses an Azure Fabric connector as an example. The configuration procedure for all supported Fabric connectors is the same. In the following topology, the FortiGate accesses the Azure public cloud through the Internet:

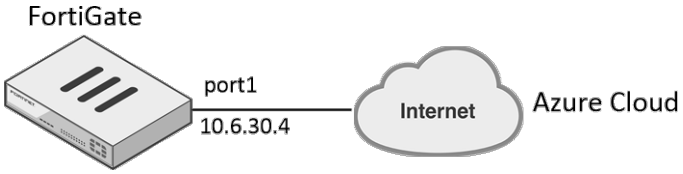

This process consists of the following:

1. Configure the interface.
2. Configure a static route to connect to the Internet.
3. Configure two Azure Fabric connectors with different client IDs.
4. Check the configured Fabric connectors.
5. Create two firewall addresses.
6. Check the resolved firewall addresses after the update interval.
7. Run diagnose commands.

To configure the interface:

1. In FortiOS, go to *Network* > *Interfaces*.
2. Edit port1:
   a. From the *Role* dropdown list, select *WAN*.
   b. In the *IP/Network Mask* field, enter 10.6.30.4/255.255.255.0 for the interface connected to the Internet.

To configure a static route to connect to the Internet:

1. Go to *Network* > *Static Routes*. Click *Create New*.
2. In the *Destination* field, enter 0.0.0.0/0.0.0.0.
3. From the *Interface* dropdown list, select *port1*.
4. In the *Gateway Address* field, enter 10.60.30.254.

To configure two Azure Fabric connectors with different client IDs:

1. Go to *Security Fabric* > *Fabric Connectors*.
2. Click *Create New*. Configure the first Fabric connector:
   a. Select *Microsoft Azure*.
   b. In the *Name* field, enter azure1.
   c. In the *Status* field, select *Enabled*.
   d. From the *Server* region dropdown list, select *Global*.
   e. In the *Tenant ID* field, enter the tenant ID. In this example, it is 942b80cd-1b14-42a1-8dcf-4b21dece61ba.
   f. In the *Client ID* field, enter the client ID. In this example, it is 14dbd5c5-307e-4ea4-8133-68738141feb1.
   g. In the *Client secret* field, enter the client secret.
   h. Leave the *Resource path* disabled.
   i. Click *OK*.

3. Click *Create New*. Configure the second Fabric connector:
   a. Select *Microsoft Azure*.
   b. In the *Name* field, enter azure2.
   c. In the *Status* field, select *Enabled*.
   d. From the *Server* region dropdown list, select *Global*.
   e. In the *Tenant ID* field, enter the tenant ID. In this example, it is 942b80cd-1b14-42a1-8dcf-4b21dece61ba.
   f. In the *Client ID* field, enter the client ID. In this example, it is 3baf0a6c-44ff-4f94-b292-07f7a2c36be6.
   g. In the *Client secret* field, enter the client secret.
   h. Leave the *Resource path* disabled.
   i. Click *OK*.

To check the configured Fabric connectors:

1. Go to *Security Fabric* > *Fabric Connectors*.
2. Click the *Refresh* icon in the upper right corner of each configured Fabric connector. A green up arrow appears in the lower right corner, meaning that both Fabric connectors are connected to the Azure cloud using different client IDs.

To create two firewall addresses:


This process creates two Fabric connector firewall addresses to associate with the configured Fabric connectors.

1. Go to *Policy & Objects* > *Addresses*.
2. Click *Create New* > *Address*. Configure the first Fabric connector firewall address:
   a. In the *Name* field, enter azure-address-1.
   b. From the *Type* dropdown list, select *Fabric Connector address*.
   c. From the *SDN Connector* dropdown list, select *azure1*.
   d. For *SDN address type*, select *Private*.
   e. From the *Filter* dropdown list, select the desired filter.
   f. For *Interface*, select *any*.
   g. Click *OK*.
3. Click *Create New* > *Address*. Configure the second Fabric connector firewall address:
   a. In the *Name* field, enter azure-address-1.
   b. From the *Type* dropdown list, select *Fabric Connector address*.
   c. From the *SDN Connector* dropdown list, select *azure2*.
   d. For *SDN address type*, select *Private*.
   e. From the *Filter* dropdown list, select the desired filter.
   f. For *Interface*, select *any*.
   g. Click *OK*.

To check the resolved firewall addresses after the update interval:

By default, the update interval is 60 seconds.

1. Go to *Policy & Objects* > *Addresses*.
2. Hover over the created addresses. The firewall address that the configured Fabric connectors resolved display.

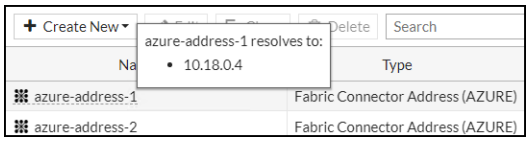

To run diagnose commands:

Run the `show sdn connector status` command. Both Fabric connectors should appear with a status of connected.

Run the `diagnose debug application azd -1` command. The output should look like the following:

```
Level2-downstream-D # diagnose debug application azd -1
...
azd sdn connector azure1 start updating IP addresses
azd checking firewall address object azure-address-1, vd 0
IP address change, new list:
10.18.0.4
...
```

To restart the Azure Fabric connector daemon, run the `diagnose test application azd 99` command.

Adding VDOMs with FortiGate v-series

Each FortiGate-VM base license type allows a default number of VDOMs. This recipe provides sample procedures to add VDOMs beyond the default number using separately purchased VDOM licenses.

This recipe consists of the following steps:

1. Activate the FortiGate-VM with the base license.
2. Add more VDOMs to the FortiGate-VM.

To activate the FortiGate-VM with the base license:

1. Purchase and register the FortiGate-VM base license in FortiCare:
   a. Purchase the FortiGate-VM base license from Fortinet or a Fortinet reseller.
   b. You receive a license certification with a registration code. Open the certification.
   c. Log in to Fortinet Customer Service & Support.
   d. Go to *Asset* > *Register/Activate* and enter the provided registration code.
   e. Follow the registration process. The serial number generates and displays on the *Registration Completion* page.
   f. Go to *Asset* > *Manage/View Products*. Click the serial number to download the license file.
2. Upload the FortiGate-VM base license file to FortiOS:
   a. Log in to the FortiGate-VM GUI.
   b. In *Dashboard* > *Status*, in the *Virtual Machine* widget, click *FortiGate VM License*.
   c. Click the *Upload* button.
   d. Select the FortiGate-VM base license file, then click *OK*. The FortiGate-VM reboots after applying the base license.


3. Verify the FortiGate-VM base license status and VDOM information:
   a. Log in to the FortiGate-VM GUI.
   b. In *Dashboard* > *Status*, in the *Virtual Machine* widget, ensure that there is a checkmark in front of the FortiGate-VM base license name. The checkmark indicates that the base license is valid.
   c. You can check VDOM information using the CLI. The following output shows that the maximum number of VDOMs is currently one. This is correct since the FortiGate-VM base license only supports the default root VDOM that the system uses.

```
FGVM4VTM19000476 # get system status
Version: FortiGate-VM64 v6.2.0,build0866,190328 (GA)
Virus-DB: 69.00091(2019-06-07 12:19)
Extended DB: 1.00000(2018-04-09 18:07)
Extreme DB: 1.00000(2018-04-09 18:07)
IPS-DB: 14.00610(2019-05-09 00:14)
IPS-ETDB: 0.00000(2001-01-01 00:00)
APP-DB: 14.00610(2019-05-09 00:14)
INDUSTRIAL-DB: 14.00610(2019-05-09 00:14)
Serial-Number: FGVM4VTM19000476
IPS Malicious URL Database: 2.00325(2019-06-07 03:56)
Botnet DB: 4.00490(2019-05-30 10:00)
License Status: Valid
License Expires: 2020-04-30
VM Resources: 2 CPU/4 allowed, 3022 MB RAM/6144 MB allowed
Log hard disk: Available
Hostname: FGVM4VTM19000476
Operation Mode: NAT
Current virtual domain: root
Max number of virtual domains: 1
Virtual domains status: 1 in NAT mode, 0 in TP mode
Virtual domain configuration: disable
FIPS-CC mode: disable
Current HA mode: standalone
Branch point: 0866
Release Version Information: GA
FortiOS x86-64: Yes
System time: Fri Jun 7 14:04:55 2019
```

To add more VDOMs to the FortiGate-VM:


You can repeat this procedure multiple times to stack multiple VDOM licenses on the same FortiGate-VM.

1. Purchase and register the FortiGate-VM upgrade license in FortiCare. This example adds 15 VDOMs:
   a. Purchase the FortiGate-VM upgrade license from Fortinet or a Fortinet reseller.
   b. You receive a license certification with a registration code. Open the certification.
   c. Log in to Fortinet Customer Service & Support.
   d. Go to *Asset* > *Register/Activate* and enter the provided registration code.
   e. On the *Specify License Confirmation Information* screen, enter the FortiGate-VM serial number to apply the VDOM upgrade license to the FortiGate-VM. In this example, the FortiGate-VM serial number is *FGVM4VTM19000476*.

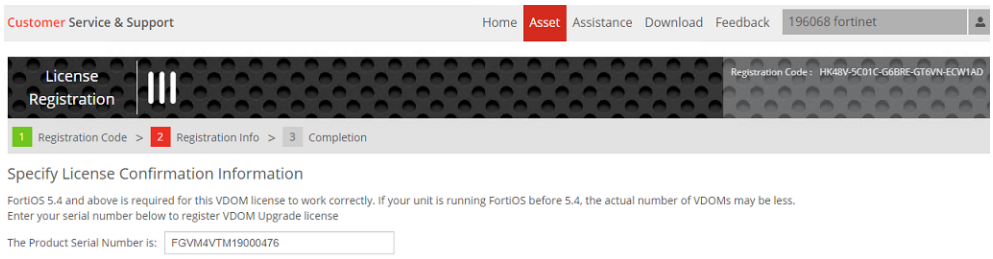

f. Follow the registration process.

g. Go to *Asset* > *Manage/View Products* > . Select the desired product, then click *License & Key*. The VDOM upgrade license displays under *Registered License(s)*, and a key for adding 15 VDOMs (in this example *M6JSD-8EE32-VHIJB-N*) displays under *Available Key(s)*.

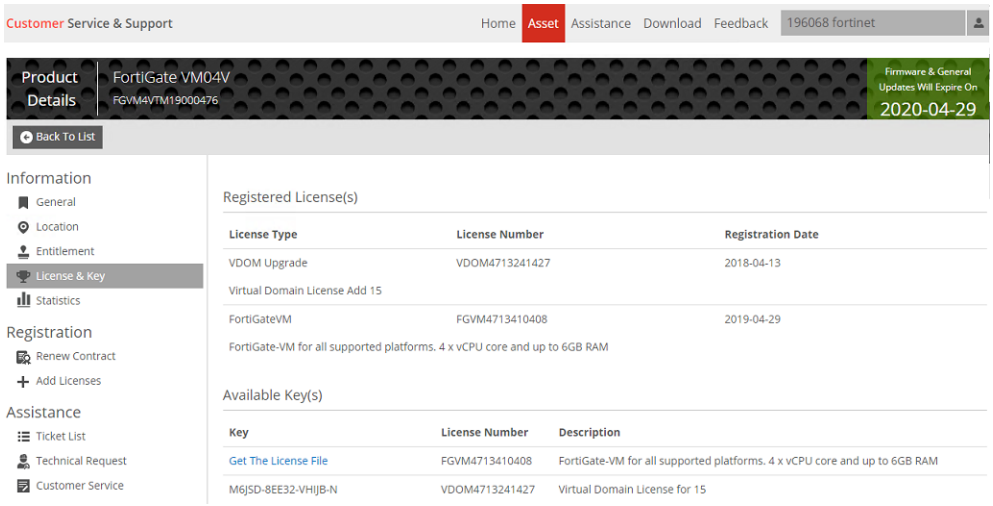

2. Apply the FortiGate-VM upgrade license key to FortiOS:
   a. Log in to the FortiGate-VM CLI in the local console or using SSH.
   b. Apply the VDOM upgrade license key:
   ```
   FGVM4VTM19000476 # execute upd-vd-license M6JSD-8EE32-VHIJB-N
   update vdom license succeeded
   ```
3. Verify the FortiGate-VM VDOM information:
   a. Log in to the FortiGate-VM CLI in the local console or using SSH.
   b. Check VDOM information using the CLI. The following output shows that the maximum number of VDOMs is currently 15. When you add VDOMs for the first time on a FortiGate-VM v-series instance, FortiOS does not count the default VDOM, as the default VDOM is the so-called root VDOM that the system uses and FortiOS does not treat it as a countable VDOM in terms of VDOM addition. Therefore, as in this example, if your FortiGate-VM had the default VDOM configuration, then you add 15 VDOMs, FortiOS displays the maximum VDOM number as 15, not 16.
   ```
   FGVM4VTM19000476 # get system status
   Version: FortiGate-VM64 v6.2.0,build0866,190328 (GA)
   Virus-DB: 69.00091(2019-06-07 12:19)
   Extended DB: 1.00000(2018-04-09 18:07)
   Extreme DB: 1.00000(2018-04-09 18:07)
   IPS-DB: 14.00610(2019-05-09 00:14)
   IPS-ETDB: 0.00000(2001-01-01 00:00)
   APP-DB: 14.00610(2019-05-09 00:14)
   INDUSTRIAL-DB: 14.00610(2019-05-09 00:14)
   Serial-Number: FGVM4VTM19000476
   IPS Malicious URL Database: 2.00325(2019-06-07 03:56)
   ```

```
Botnet DB: 4.00490(2019-05-30 10:00)
License Status: Valid
License Expires: 2020-04-30
VM Resources: 2 CPU/4 allowed, 3022 MB RAM/6144 MB allowed
Log hard disk: Available
Hostname: FGVM4VTM19000476
Operation Mode: NAT
Current virtual domain: root
Max number of virtual domains: 15
Virtual domains status: 1 in NAT mode, 0 in TP mode
Virtual domain configuration: disable
FIPS-CC mode: disable
Current HA mode: standalone
Branch point: 0866
Release Version Information: GA
FortiOS x86-64: Yes
System time: Fri Jun 7 14:39:27 2019
```

Terraform: FortiOS as a provider

Fortinet's Terraform support provides customers with more ways to efficiently deploy, manage, and automate security across physical FortiGate appliances and virtual environments. You can use Terraform to automate various IT infrastructure needs, thereby diminishing mistakes from repetitive manual configurations.

For example, if Fortinet is releasing a new FortiOS version, your organization may require you to test a new functionality to determine how it may impact the environment before globally deploying the new version. In this case, the ability to rapidly stand up environments and test these functions prior to production environment integration provides a resource-efficient and fault-tolerant approach.

The following example demonstrates how to use the Terraform FortiOS provider to perform simple configuration changes on a FortiGate unit. It requires the following:

- FortiOS 6.0 or later
- FortiOS Provider: This example uses terraform-provider-fortios 1.0.0.
- Terraform: This example uses Terraform 0.11.14.
- REST API administrator created on the FortiGate with the API key

For more information, see the Terraform FortiOS Provider at https://www.terraform.io/docs/providers/fortios/index.html.

To create a REST API administrator:

1. On the FortiGate, go to *System* > *Administrators* and click *Create New* > *REST API Admin*.
2. Enter the *Username* and, optionally, enter *Comments*.
3. Select an *Administrator Profile*.
4. We recommend that you create a new profile with minimal privileges for this terraform script:
   a. In the *Administrator Profile* drop down click *Create New*.
   b. Enter a name for the profile.
   c. Configure the *Access Permissions*:
      - *None*: The REST API is not permitted access to the resource.
      - *Read*: The REST API can send read requests (`HTTP GET`) to the resource.

- *Read/Write*: The REST API can send read and write requests (`HTTP GET/POST/PUT/DELETE`) to the resource.

d. Click *OK*.

5. Enter *Trusted Hosts* to specify the devices that are allowed to access this FortiGate.
6. Click *OK*.
   An API key is displayed. This key is only shown once, so you must copy and store it securely.

To configure FortiGate with Terraform Provider module support:

1. Download the terraform-provider-fortios file to a directory on the management computer.
2. Create a new file with the .tf extension for configuring your FortiGate:
```
root@mail:/home/terraform# ls
terraform-provider-fortios_v1.0.0_x4 test.tf
```
3. Edit the test.tf Terraform configuration file:
   In this example, the FortiGate's IP address is 10.6.30.5, and the API user token is 17b**********63ck. Your provider information must also be changed.

```
# Configure the FortiOS Provider
provider "fortios" {
hostname = "10.6.30.5"
token = "17b**********63ck"
}
```

4. Create the resources for configuring your DNS object and adding a static route:

```
resource "fortios_system_setting_dns" "test1" {
primary = "172.16.95.16"
secondary = "8.8.8.8"
}
resource "fortios_networking_route_static" "test1" {
dst = "110.2.2.122/32"
gateway = "2.2.2.2"
blackhole = "disable"
distance = "22"
weight = "3"
priority = "3"
device = "port2"
comment = "Terraform test"
}
```

5. Save your Terraform configuration file.
6. In the terminal, enter `terraform init` to initialize the working directory.
   It reads the provider if the name follows the convention `terraform-provider-[name]`:

```
root@mail:/home/terraform# terraform init
Initializing the backend...
Terraform has been successfully initialized!
You may now begin working with Terraform. Try running "terraform plan" to see
any changes that are required for your infrastructure. All Terraform commands
should now work.
If you ever set or change modules or backend configuration for Terraform,
rerun this command to reinitialize your working directory. If you forget, other
commands will detect it and remind you to do so if necessary.
```

7. Run `terraform -v` to verify the version of loaded provider module:

```
root@mail:/home/terraform# terraform -v
Terraform v0. 11.14
+ provider.fortios v1.0.0
```

8. Enter `terraform plan` to parse the configuration file and read from the FortiGate configuration to see what Terraform changes:
   This example create a static route and updates the DNS address. You can see that Terraform reads the DNS addresses from the FortiGate and then lists them.

```
root@mail:/home/terraform# terraform plan
Refreshing Terraform state in-memory prior to plan...
The refreshed state will be used to calculate this plan, but will not be
persisted to local or remote state storage.
fortios_networking_route_static.test1: Refreshing state... (ID: 2)
fortios_system_setting_dns.test1: Refreshing state... (ID: 208.91.112.53)
------------------------------------------------------------------------
An execution plan has been generated and is shown below.
Resource actions are indicated with the following symbols:
+ create
~ update in-place
Terraform will perform the following actions:
+ fortios_networking_route_static.test1
id: <computed>
blackhole: "disable"
comment: "Terraform test"
device: "port2"
distance: "22"
dst: "110.2.2.122/32"
gateway: "2.2.2.2"
priority: "3"
weight: "3"
~ fortios_system_setting_dns.test1
primary: "208.91.112.53" => "172.16.95.16"
secondary: "208.91.112.22" => "8.8.8.8"
Plan: 1 to add, 1 to change, 0 to destroy.
------------------------------------------------------------------------
Note: You didn't specify an "-out" parameter to save this plan, so Terraform
can't guarantee that exactly these actions will be performed if
"terraform apply" is subsequently run.
```



If you are running terraform-provider-fortios 1.1.0, you may see the following error:

```
Error: Error getting CA Bundle, CA Bundle should be set when
     insecure is false.
```

In this case, add the following line to the FortiOS provider configuration in the test.tf file:

```
insecure = "true"
```

9. Enter `terraform apply` to continue the configuration:

```
root@mail:/home/terraform# terraform apply
fortios_system_setting_dns.test1: Refreshing state... (ID: 208.91.112.53)
fortios_networking_route_static.test1: Refreshing state... (ID: 2)
An execution plan has been generated and is shown below.
Resource actions are indicated with the following symbols:
+ create
```

```
~ update in-place
Terraform will perform the following actions:
+ fortios_networking_route_static.test1
id: <computed>
blackhole: "disable"
comment: "Terraform test"
device: "port2"
distance: "22"
dst: "110.2.2.122/32"
gateway: "2.2.2.2"
priority: "3"
weight: "3"
~ fortios_system_setting_dns.test1
primary: "208.91.112.53" => "172.16.95.16"
secondary: "208.91.112.22" => "8.8.8.8"
Plan: 1 to add, 1 to change, 0 to destroy.
Do you want to perform these actions?
Terraform will perform the actions described above.
Only 'yes' will be accepted to approve.
Enter a value: yes
fortios_networking_route_static.test1: Creating...
blackhole: "" => "disable"
comment: "" => "Terraform test"
device: "" => "port2"
distance: "" => "22"
dst: "" => "110.2.2.122/32"
gateway: "" => "2.2.2.2"
priority: "" => "3"
weight: "" => "3"
fortios_system_setting_dns.test1: Modifying... (ID: 208.91.112.53)
primary: "208.91.112.53" => "172.16.95.16"
secondary: "208.91.112.22" => "8.8.8.8"
fortios_networking_route_static.test1: Creation complete after 0s (ID: 2)
fortios_system_setting_dns.test1: Modifications complete after 0s (ID: 172.16.95.16)
Apply complete! Resources: 1 added, 1 changed, 0 destroyed.
```

The FortiGate is now configured according to the configuration file.

10. To change or delete something in the future, edit the configuration file and then apply it again. In supported cases, it deletes, adds, or updates new entries as configured. For instance, in this example you can remove the static route and revert the DNS address to its original configuration by changing the .tf file:
    a. Edit the configuration file:

```
# Configure the FortiOS Provider
provider "fortios" {
hostname = "10.6.30.5"
token = "17b********************63ck"
}
resource "fortios_system_setting_dns" "test1" {
primary = "208.91.112.53"
secondary = "208.91.112.22"
}
#resource "fortios_networking_route_static" "test1" {
# dst = "110.2.2.122/32"
# gateway = "2.2.2.2"
# blackhole = "disable"
# distance = "22"
```

```
# weight = "3"
# priority = "3"
# device = "port2"
# comment = "Terraform test"
#}
```

b. Entering `terraform apply` deletes the static route that is commented out of the configuration file, and reverts the DNS address to the old address:

```
root@mail:/home/terraform# terraform apply
fortios_system_setting_dns.test1: Refreshing state... (ID: 172.16.95.16)
fortios_networking_route_static.test1: Refreshing state... (ID: 2)
An execution plan has been generated and is shown below.
Resource actions are indicated with the following symbols:
~ update in-place
- destroy
Terraform will perform the following actions:
- fortios_networking_route_static.test1
~ fortios_system_setting_dns.test1
primary: "172.16.95.16" => "208.91.112.53"
secondary: "8.8.8.8" => "208.91.112.22"
Plan: 0 to add, 1 to change, 1 to destroy.
Do you want to perform these actions?
Terraform will perform the actions described above.
Only 'yes' will be accepted to approve.
Enter a value: yes
fortios_networking_route_static.test1: Destroying... (ID: 2)
fortios_system_setting_dns.test1: Modifying... (ID: 172.16.95.16)
primary: "172.16.95.16" => "208.91.112.53"
secondary: "8.8.8.8" => "208.91.112.22"
fortios_networking_route_static.test1: Destruction complete after 0s
fortios_system_setting_dns.test1: Modifications complete after 0s (ID: 208.91.112.53)
Apply complete! Resources: 0 added, 1 changed, 1 destroyed.
```

Troubleshooting

Use the HTTPS daemon debug to begin troubleshooting why a configuration was not accepted:

```
# diagnose debug enable
# diagnose debug application httpsd -1
[httpsd 333 - 1560376452 info] ap_invoke_handler[569] -- new request (handler='api_cmdb_v2-
handler', uri='/api/v2/cmdb/router/static/2', method='GET')
[httpsd 23616 - 1560376452 info] handle_cli_req_v2_vdom[2034] -- new CMDB API request
(vdom='root',user='test')
[httpsd 333 - 1560376452 info] ap_invoke_handler[573] -- User-Agent: Go-http-client/1.1
[httpsd 23616 - 1560376452 info] api_cmdb_request_init_by_path[1438] -- new CMDB query
(path='system',name='dns')
[httpsd 333 - 1560376452 info] ap_invoke_handler[576] -- Source: 10.6.30.55:49666
Destination: 10.6.30.5:443
[httpsd 333 - 1560376452 info] api_cmdb_v2_handler[2132] -- received api_cmdb_v2_request
from '10.6.30.55'
[httpsd 23616 - 1560376452 info] api_cmdb_select_etag[2146] -- ETag check for system.dns
[httpsd 23616 - 1560376452 info] api_return_cmdb_revision[837] -- ETag check for system.dns
[httpsd 23616 - 1560376452 info] api_add_etag[918] -- no If-None-Match header
[httpsd 333 - 1560376452 warning] api_access_check_for_api_key[965] -- API Key request
authorized for test from 10.6.30.55.
```

```
[httpsd 23616 - 1560376452 info] api_return_cmdb_revision[837] -- ETag check for system.dns
[httpsd 333 - 1560376452 info] api_store_parameter[239] -- add API parameter 'access_token'
(type=string)
[httpsd 333 - 1560376452 info] handle_cli_req_v2_vdom[2034] -- new CMDB API request
(vdom='root',user='test')
[httpsd 333 - 1560376452 info] api_cmdb_request_init_by_path[1438] -- new CMDB query
(path='router',name='static')
[httpsd 333 - 1560376452 info] api_cmdb_request_init_by_path[1467] -- querying CMDB entry
(mkey='2')
[httpsd 333 - 1560376452 info] api_cmdb_select_etag[2146] -- ETag check for router.static
[httpsd 333 - 1560376452 info] api_return_cmdb_revision[837] -- ETag check for router.static
[httpsd 333 - 1560376452 info] api_add_etag[918] -- no If-None-Match header
[httpsd 333 - 1560376452 info] api_cmdb_v2_object_select[843] -- filter by master key (seq-
num)
[httpsd 23616 - 1560376452 info] ap_invoke_handler[592] -- request completed (handler='api_
cmdb_v2-handler' result==0)
```



The REST API 403 error means that your administrator profile does not have sufficient permissions.

The REST API 401 error means that you do not have the correct token or trusted host.

PF SR-IOV driver support

Physical Function (PF) SR-IOV drivers for i40e and ixgbe interfaces in virtual environments are supported.

PF provides the ability for PCI Passthrough, but requires an entire Network Interface Card (NIC) for a VM. It can usually achieve greater performance than a Virtual Function (VF) based SR-IOV. PF is also expensive; while VF allows one NIC to be shared among multiple guests VMs, PF is allocated to one port on a VM.

The supported driver versions are:

- ixgbe: 5.3.7
- ixgbevf: 4.3.5
- i40e: 2.4.10
- i40evfL 3.5.13



All tools and software utilities for UEFI 1.X have been removed from 6.2.0 and later releases. Update to UEFI 2.x to use the UEFI tools or software utilities.

Configuration to use PF or VF is done on the hypervisor, and is not configured on the FortiGate.

To check what driver is being used on the FortiGate:

```
# diagnose hardware deviceinfo nic port2
Name:        port2
Driver:      i40e
Version:     2.4.10
Bus:         0000:03:00.0
Hwaddr:      3c:fd:fe:1e:98:02
Permanent Hwaddr:3c:fd:fe:1e:98:02
```

```
State:       up
Link:        up
Mtu:         1500
Supported:   auto 1000full 10000full
Advertised:  auto 1000full 10000full
Auto:        disabled
Rx packets:      0
Rx bytes:        0
Rx compressed:       0
...
```

Troubleshooting

This section is intended for administrators with super_admin permissions who require assistance with basic and advanced troubleshooting. Admins with other types of permissions may not be able to perform all of the tasks in this section.

This section contains the following troubleshooting topics:

- Troubleshooting methodologies on page 1622
- Troubleshooting scenarios on page 1626
  - Checking the system date and time on page 1627
  - Checking the hardware connections on page 1628
  - Checking FortiOS network settings on page 1629
  - Troubleshooting CPU and network resources on page 1632
  - FortiGuard server settings on page 1670
  - Troubleshooting high CPU usage on page 1633
  - Checking the modem status on page 1637
  - Running ping and traceroute on page 1638
  - Checking the logs on page 1642
  - Verifying routing table contents in NAT mode on page 1642
  - Verifying the correct route is being used on page 1643
  - Verifying the correct firewall policy is being used on page 1643
  - Checking the bridging information in transparent mode on page 1644
  - Checking the number of sessions that UTM proxy uses on page 1645
  - Checking wireless information on page 1650
  - Performing a sniffer trace (CLI and packet capture) on page 1650
  - Debugging the packet flow on page 1653
  - Testing a proxy operation on page 1656
  - Displaying detail Hardware NIC information on page 1657
  - Performing a traffic trace on page 1659
  - Using a session table on page 1660
  - Finding object dependencies on page 1663
  - Diagnosing NPU-based interfaces on page 1664
  - Running the TAC report on page 1665
  - Other commands on page 1665
  - FortiGuard troubleshooting on page 1668
- Additional resources on page 1672

Troubleshooting methodologies

The sections in this topic provide an overview of how to prepare to troubleshoot problems in FortiGate. They include verifiying your user permissions, establishing a baseline, defining the problem, and creating a plan.

Verify user permissions

Before you begin troubleshooting, verify the following:

- You have administrator privileges for the FortiGate.
- The FortiGate is integrated into your network.
- The operation mode is configured.
- The system time, DNS settings, administrator password, and network interfaces are configured.
- Firmware, FortiGuard AntiVirus, FortiGuard Application Control, and FortiGuard IPS are up to date.



If you are using a FortiGate that has virtual domains (VDOMs) enabled, you can often troubleshoot within your own VDOM. However, you should inform the super_admin for the FortiGate that you willl be performing troubleshooting tasks.

You may also need access to other networking equipment, such as switches, routers, and servers, to carry out tests. If you do not have access to this equipment, contact your network administrator for assistance.

Establish a baseline

FortiGate operates at all layers of the OSI model. For this reason, troubleshooting can be complex. Establishing baseline parameters for your system before a problem occurs helps to reduce the complexity when you need to troubleshoot.

A best practice is to establish and record the normal operating status. Regular operation data shows trends, and allows you to see where changes occur when problems arise. You can gather this data by using logs and SNMP tools to monitor the system performance or by regularly running information gathering commands and saving the output.



You should back up your FortiOS configuration on a regular basis even when you are not troubleshooting. You can restore the backed up configuration as needed to save time recreating it from the factory default settings.

Use the following CLI commands to obtain normal operating data for a FortiGate:

`get system status`	Displays firmware versions and FortiGuard engine versions, and other system information.
`get system performance status`	Displays CPU and memory states, average network usage, average sessions and session setup rate, viruses caught, IPS attacks blocked, and uptime.
`get hardware memory`	Displays information about memory.
`get system session status`	Displays total number of sessions.
`get router info routing-table all`	Displays all the routes in the routing table, including their type, source, and other useful data.
`get ips session`	Displays memory used and maximum amount available to IPS as well as counts

`get webfilter ftgd-statistics`	Displays a list of FortiGuard related counts of status, errors, and other data.
`diagnose sys session list`	Displays the list of current detailed sessions.
`show sys dns`	Displays the configured DNS servers.
`diagnose sys ntp status`	Displays information about NTP servers.

You can run any commands that apply to your system for information gathering. For example, if you have active VPN connections, use the `get vpn` series of commands to get more information about them.

Use `execute tac report` to get an extensive snapshot of your system. This command runs many diagnostic commands for specific configurations. It also records the current state of each feature regardless of the features deployed on your FortiGate. If you need to troubleshoot later, you can run the same command again and compare the differences to identify any suspicious output.

Define the problem

The following questions are intended to compare the current behavior of the FortiGate with normal operations to help you define the problem. Be specific with your answers. After you define the problem, search for a solution in the troubleshooting scenarios section, and then create a plan to resolve it.

What is the problem?	The problem being observed may not be the actual problem. You should determine where the problem lies before starting to troubleshoot the FortiGate.
Was the device working before?	If the device never worked, it might be defective. For more information, see Troubleshooting your installation on page 50.
Can the problem be reproduced?	If the problem is intermittent, it may be dependent on system load. Intermittent problems are challenging to troubleshoot because they are difficult to reproduce.
What has changed?	Use the FortiGate event log to identify possible configuration changes. There may be changes in the operating environment. For example, there might be a gradual increase in load as more sites are forwarded through the firewall. If something has changed, roll back the change and assess the impact.
What is the scope of the problem?	After you isolate the problem, determine what applications, users, devices, and operating systems the problem affects. The following questions are intended to narrow the scope of the problem and identify what to check during troubleshooting. The more factors you can eliminate, the less you need to check. For this reason, be as specific and accurate as possible when gathering information. • What is not working? • Is more than one thing not working? • Is it partly working? If so, what parts are working? • Is it a connectivity issue for the entire device, or is there an application that isn't reaching the Internet? • Where did the problem occur? • When did the problem occur and to which users or groups of users?

	• What components are involved? • What applications are affected? • Can you use a packet sniffer to trace the problem? • Can you use system debugging or look in the session table to trace the problem? • Do any of the log files indicate a failure has occurred?

Create a troubleshooting plan

After you define the problem and its scope, develop a troubleshooting plan.

Create checklist	Make a list all the possible causes of the problem and how you can test for each cause. Create a checklist to keep track of what has been tried and what is left to test. Checklists are useful when more than one person is performing troubleshooting tasks.
Obtain the required equipment	Testing your solution may require additional networking equipment, computers, or other devices. Network administrators usually have additional networking equipment available to loan you, or a lab where you can bring the FortiGate unit to test. If you do not have access to equipment, check for shareware applications that can perform the same tasks. Often, there are software solutions you can use when hardware is too expensive.
Consult Fortinet troubleshooting resources	After the checklist is created, refer to the troubleshooting scenarios sections to assist with implementing your plan. See Troubleshooting scenarios on page 1626.
Gather information for technical support	If you still require technical assistance after the plan is implemented, be prepared to provide Fortinet technical support with following information: • Firmware build version (use the `get system status` command) • Network topology diagram • Recent configuration file • Recent debug log (optional) • Summary of troubleshooting steps you have taken and the results.  Do not provide the output from the `exec tac` report unless the support team requests it. The output from this command is very large and is not required in many cases.
Contact technical support	Before contacting technical support, ensure you have login access (preferably with full read/write privileges) to all networking devices that could be relevant to troubleshooting. If you are using VMs, be prepared to have someone who can log in to the virtual hosting platform in case it is necessary to check and possibly modify resource allocation.

For information about contacting technical support, go to FortiCare Support Service page.

Troubleshooting scenarios

The following table is intended to help you diagnose common problems and provides links to the corresponding troubleshooting topics:

Problem	Probable cause	Recommended action
Hardware connections	• Are all of the cables and interfaces connected properly? • Is the LED for the interface green?	Checking the hardware connections on page 1628
FortiOS network settings	• If you are having problems connecting to the management interface, is your protocol enabled on the interface for administrative access? • Does the interface have an IP address?	Checking FortiOS network settings on page 1629
CPU and memory resources	• Is the CPU running at almost 100 percent usage? • Is your FortiGate running low on memory?	Troubleshooting CPU and network resources on page 1632
Modem status	• Is the modem connected? • Are there PPP issues?	Checking the modem status on page 1637
Ping and traceroute	Is the FortiGate experiencing complete packet loss?	Running ping and traceroute on page 1638
Logs	Do you need to identify a problem?	Checking the logs on page 1642
Contents of the routing table (in NAT mode)	• Are there routes in the routing table for default and static routes? • Do all connected subnets have a route in the routing table? • Does a route have a higher priority than it should?	Verifying routing table contents in NAT mode on page 1642
Traffic routes	Is the traffic routed correctly?	Verifying the correct route is being used on page 1643
Firewall policies	Is the correct firewall policy applied to the expected traffic?	Verifying the correct firewall policy is being used on page 1643
Bridging information in transparent mode	Are you having problems in transparent mode?	Checking the bridging information in transparent mode on page 1644
Number of	• Have you reached the maximum number	Checking the number of sessions that UTM

Problem	Probable cause	Recommended action
sessions used by UTM proxy	of sessions for a protocol? • Are new sessions failing to start for a certain protocol?	proxy uses on page 1645
Firewall session list	• Are there active firewall sessions?	Using a session table on page 1660
Wireless Network	Is the wireless network working properly?	Checking wireless information on page 1650
FortiGuard connectivity	Is the FortiGate communicating properly with FortiGuard?	Verifying connectivity to FortiGuard on page 1668
Sniffer trace	• Is traffic entering the FortiGate? Does the traffic arrive on the expected interface? • Is the ARP resolution correct for the next-hop destination? • Is the traffic exiting the FortiGate to the destination as expected? • Is the FortiGate sending traffic back to the originator?	Performing a sniffer trace (CLI and packet capture) on page 1650
Packet flow	Is traffic entering or leaving the FortiGate as expected?	Debugging the packet flow on page 1653

Checking the system date and time

The system date and time are important for FortiGuard services, logging events, and sending alerts. The wrong time makes the log entries confusing and difficult to use.

When possible, use Network Time Protocol (NTP) to set the date and time. This is an automatic method that does not require manual intervention. However, you must ensure that the port is allowed through the firewalls on your network. FortiToken synchronization requires NTP in many situations.

For information about setting the system date and time, see Setting the system time on page 634.

To view and configure the date and time in the GUI:

1. Go to *Dashboard* > *Status*. The date and time are displayed in the *System Information* widget, next to *System Time*.
2. Go to *System* > *Settings*.
3. In the *System Time* section, select *NTP*, and then configure the *Time Zone*, and *Set Time* settings as required.

To view the date and time in the CLI:

```
execute date
execute time
```

To configure the date and time in the CLI:

Use the `set timezone ?` command to display a list of timezones and the integers that represent them.

```
config system global
   set timezone <integer>
end
config system ntp
   set type custom
      config ntpserver
         edit 1
            set server "ntp1.fortinet.net"
         next
         edit 2
            set server "ntp2.fortinet.net"
         next
      end
   set ntpsync enable
   set syncinterval 60
end
```

Checking the hardware connections

If traffic is not flowing from the FortiGate, there may be a problem with the hardware connection.

To check hardware connections:

1. Ensure the network cables are plugged into the interfaces.
2. Verify the LED connection lights for the network cables indicate there is a connection. The lights are typically green when there is a connection.
3. Change the cable when:
   - The cable or its connector are damaged.
   - You are unsure of the type or quality of the cable, such as straight through or crossover.
   - You see exposed wires at the connector.
4. Connect the FortiGate to different hardware.
5. Go to *Network* > *Interfaces* to ensure the link status for the interface is set to *Up*.
   The link status is based on the physical connection and cannot be set in FortiOS.

To enable an interface in the GUI:

You should still perform basic software connectivity tests to ensure complete connectivity even if there was problem with the hardware connection. The interface might also be disabled, or its *Status* might be set to *Down*. See Interfaces on page 316.

1. Go to *Network* > *Interfaces*.
2. Select an interface, such as *Port1*, and click *Edit*.
3. In the *Miscellaneous* area, next to *Status*, click *Enabled*.
4. Click *OK*.

To enable an interface in the CLI:

```
config system interface
   edit port1
      set status up
   next
end
```

Checking FortiOS network settings

Check the FortiOS network settings if you have problems connecting to the management interface. FortiOS network settings include, interface settings, DNS Settings, and DHCP settings.

Interface settings

If you can access the FortiGate with the management cable only, you can view the interface settings in the GUI.

To view the interface settings in the GUI:

1. Go to *Network* > *Interfaces*.
2. Select an interface and click *Edit*.
3. Check the following interfaces to ensure they are not blocking traffic.

Setting	Description
Link Status	The status is *Up* when a valid cable is plugged in. The status is *Down* when an invalid cable is plugged in. The Link Status is shown physically by the connection LED for the interface. If the LED is green, the connection is good. If Link Status is *Down*, the interface does not work. Link status also appears in the *Network* > *Interfaces* page by default.
Addressing mode	Do not use *DHCP* if you do not have a DHCP server. You will not be able to log into an interface in DHCP mode as it will not have an IP address.
IP/Network Mask	An interface requires an IP address to connect to other devices. Ensure there is a valid IP address in this field. The one exception is when *DHCP* is enabled for this interface to get its IP address from an external DHCP server.
IPv6 address	The same protocol must be used by both ends to complete the connection. Ensure this interface and the remote connection are both using IPv4 or both are using IPv6 addresses.
Administrative access	If no protocols are selected, you will have to use the local management cable to connect to the unit. If you are using IPv6, configure the IPv6 administrative access protocols.
Status	Ensure the status is set to *Up* or the interface will not work.

To display the internal interface settings in the CLI:

```
FGT# show system interface <interface_name>
```

To view the list of possible interface settings:

```
config system interface
   edit <interface_name>
      get
end
```

DNS settings

To view DNS settings in the GUI:

Go to *Network* > *DNS*.

You can trace many networking problems back to DNS issues. Check the following items:

1. Are there values for both the *Primary DNS server* and *Secondary DNS server* fields.
2. Is the *Local Domain Name* correct?
3. Are you using IPv6 addressing? If so, are the IPv6 DNS settings correct?
4. Are you using Dynamic DNS (DDNS)? If so, is it using the correct server, credentials, and interface?
5. Can you contact both DNS servers to verify the servers are operational?
6. If an interface addressing mode is set to DHCP and is set to override the internal DNS, is that interface receiving a valid DNS entry from the DHCP server? Is it a reasonable address and can it be contacted to verify it is operational?
7. Are there any DENY security policies that need to allow DNS?
8. Can any internal device perform a successful traceroute to a location using the FQDN?

DHCP server settings

DHCP servers are common on internal and wireless networks. The DHCP server will cause problems if it is not configured correctly.

To view DHCP server settings in the GUI:

1. Go to *Network* > *Interfaces*.
2. Select an interface, and click *Edit*.

Check the following items:

1. Is the DHCP server enabled?
2. Is the DHCP server entry set to *Relay*? If so, verify there is another DHCP server to which requests can be relayed. Otherwise, set it to *Server*.
3. Does the DHCP server use a valid IP address range? Are other devices using the addresses? If one or more devices are using IP addresses in this range, you can use the IP reservation feature to ensure the DHCP server does not use these addresses. See DHCP server on page 401
4. Is there a gateway entry? If not, add a gateway entry to ensure that the server's clients have a default route.
5. Is the system DNS setting being used? A best practice is to avoid confusion by using the system DNS whenever possible. However, you can specify up to three custom DNS servers, and you should use all three entries for redundancy.



There are some situations, such as a new wireless interface, or during the initial FortiGate configuration, where interfaces override the system DNS entries. When this happens, it often shows up as intermittent Internet connectivity.

To fix the problem, go to *Network* > *DNS*, and enable *Use FortiGuard Servers*.

Checking CPU and memory resources

Check the CPU and memory resources when the FortiGate is not working, the network is slow, or there is a reduced firewall session setup rate. All processes share the system resources in FortiOS, including CPU and memory.

To view system resources in the GUI:

Go to *Dashboard* > *Status*.

The resource information is located in the *CPU* and *Memory* widgets. For information, see Dashboard on page 57.

To view system resources in the CLI:

```
get system performance status
```

Sample output:

```
FGT# get system performance status
CPU states: 0% user 0% system 0% nice 100% idle 0% iowait 0% irq 0% softirq
CPU0 states: 0% user 0% system 0% nice 100% idle 0% iowait 0% irq 0% softirq
CPU1 states: 0% user 0% system 0% nice 100% idle 0% iowait 0% irq 0% softirq
CPU2 states: 0% user 0% system 0% nice 100% idle 0% iowait 0% irq 0% softirq
CPU3 states: 0% user 0% system 0% nice 100% idle 0% iowait 0% irq 0% softirq
Memory: 4050332k total, 527148k used (13%), 3381312k free (83%), 141872k freeable (3%)
Average network usage: 41 / 28 kbps in 1 minute, 54 / 44 kbps in 10 minutes, 42 / 34 kbps
     in 30 minutes
Average sessions: 33 sessions in 1 minute, 48 sessions in 10 minutes, 38 sessions in 30
     minutes
Average session setup rate: 0 sessions per second in last 1 minute, 0 sessions per second
     in last 10 minutes, 0 sessions per second in last 30 minutes
Virus caught: 0 total in 1 minute
IPS attacks blocked: 0 total in 1 minute
Uptime: 0 days, 22 hours, 59 minutes
```

The first line of the output shows the CPU usage by category:

```
CPU states: 0% user 0% system 0% nice 100% idle 0% iowait 0% irq 0% softirq
```

The second line of the output shows the memory usage:

```
Memory: 4050332k total, 527148k used (13%), 3381312k free (83%), 141872k freeable (3%)
```

Memory usage should not exceed 90%. Using too much memory prevents some processes from functioning properly. For example, if the system is running low on memory, antivirus scanning enters into *failopen* mode where it drops connections or bypasses the antivirus system.

Other lines of output, such as `average network usage`, `average session setup rate`, `viruses caught`, and `IPS attacks blocked`, help determine why system resource usage is high.

For example:

- A high `average network usage` may indicate high traffic processing on the FortiGate,
- A very low or zero, `average session setup rate` may indicate the proxy is overloaded and unable to do its job.

Troubleshooting CPU and network resources

FortiGate has stopped working

If the FortiGate has stopped working, the first line of the output will look similar to this:

```
CPU states: 0% user 0% system 0% nice 100% idle
```

Network is slow

If your network is running slow, the first line of the output will look similar to this:

```
CPU states: 1% user 98% system 0% nice 1% idle
```

This example shows that all of the CPU is being used by system processes, and the FortiGate is overloaded. When overloading occurs, it is possible a process such as `scanunitid` is using all the resources to scan traffic. In this case you need to reduce the amount of traffic being scanned by blocking unwanted protocols, configuring more security policies to limit scanning to certain protocols, or similar actions.

It is also possible a hacker has accessed your network and is overloading it with malicious activity, such as running a spam server or using zombie PCs to attack other networks on the Internet.

You can use the following command to investigate the problem with the CPU:

```
get system performance top
```

This command shows all of the top processes that are running on the FortiGate and their CPU usage. The process names are on the left. If a process is using most of the CPU cycles, investigate it to determine whether the activity is normal.

Reduced firewall session setup rate

A reduced firewall session setup rate can be caused by a lack of system resources on the FortiGate, or reaching the session count limit for a VDOM.



As a best practice, administrators should record the session setup rate during normal operation to establish a baseline to help define a problem when your are troubleshooting.

The session setup rate appears in the `average sessions` section of the output.

A reduced firewall session setup rate will look similar to this:

```
Average sessions: 80 sessions in 1 minute, 30 sessions in 10 minutes, 42 sessions in 30
     minutes
Average session setup rate: 3 sessions per second in last 1 minute, 0 sessions per second in
     last 10 minutes, 0 sessions per second in last 30 minutes
```

In the example above, there were 80 sessions in 1 minute, or an average of 3 sessions per second.

The values for `10 minutes` and `30 minutes` allow you to take a longer average for a more reliable value if your FortiGate is working at maximum capacity. The smallest FortiGate can have 1,000 sessions established per second across the unit.



The session setup rate is a global command. If you have multiple VDOMs configured with many sessions in each VDOM, the session setup rate per VDOM will be slower than if there are no VDOMs configured.

High memory usage

As with any system, a FortiGate has limited hardware resources, such as memory, and all processes running on the FortiGate share the memory. Each process uses more or less memory, depending on its workload. For example, a process usually uses more memory in high traffic situations. If some processes use all of the available memory, other processes will not be able to run.

When high memory usage occurs, the services may freeze up, connections may be lost, or new connections may be refused.

If you see high memory usage in the *Memory* widget, the FotiGate may be handling high traffic volumes. Alternatively, the FortiGate may have problems with connection pool limits that are affecting a single proxy. If the FortiGate receives large volumes of traffic on a specific proxy, the unit may exceed the connection pool limit. If the number of free connections within a proxy connection pool reaches zero, issues may occur.

To view current memory usage information in the CLI:

```
diagnose hardware sysinfo memory
```

Sample output:

```
total: used: free: shared: buffers: cached: shm:
Mem: 2074185728 756936704 1317249024 0 20701184 194555904 161046528
Swap:       0       0       0
MemTotal:   2025572 kB
MemFree:    1286376 kB
MemShared:        0 kB
Buffers:      20216 kB
Cached:      189996 kB
SwapCached:       0 kB
Active:       56644 kB
Inactive:    153648 kB
HighTotal:        0 kB
HighFree:         0 kB
LowTotal:   2025572 kB
LowFree:    1286376 kB
SwapTotal:        0 kB
SwapFree:         0 kB
```

Troubleshooting high CPU usage

Connection-related problems may occur when FortiGate's CPU resources are over extended. This occurs when you deploy too many FortiOS features at the same time.

Examples of CPU intensive features:

- VPN high-level encryption
- Intensive scanning of all traffic
- Logging all traffic and packets
- Dashboard widgets that frequently perform data updates

See Execute a CLI script based on CPU and memory thresholds on page 265 for information on customizing the CPU use threshold.

Determining the current level of CPU usage

You can view CPU usage levels in the GUI or CLI. For precise usage values for both overall usage and specific processes, use the CLI.

To view CPU usage in the GUI:

Go to *Dashboard* > *Status*. Real-time CPU usage information is located in the *CPU* widget.

To view CPU usage in the CLI:

```
diagnose sys top
```

Sample output:

```
Run Time: 86 days, 0 hours and 10 minutes
0U, 0N, 0S, 100I, 0WA, 0HI, 0SI, 0ST; 3040T, 2437F
     bcm.user 93 S < 3.1 0.4
     httpsd 18922 S 1.5 0.5
     httpsd 19150 S 0.3 0.5
     newcli 20195 R 0.1 0.1
     cmdbsvr 115 S 0.0 0.8
     pyfcgid 20107 S 0.0 0.6
     forticron 146 S 0.0 0.5
     httpsd 139 S 0.0 0.5
     cw_acd 166 S 0.0 0.5
     miglogd 136 S 0.0 0.5
     pyfcgid 20110 S 0.0 0.4
     pyfcgid 20111 S 0.0 0.4
     pyfcgid 20109 S 0.0 0.4
     httpsd 20192 S 0.0 0.4
     miglogd 174 S 0.0 0.4
     miglogd 175 S 0.0 0.4
     fgfmd 165 S 0.0 0.3
     newcli 20191 S 0.0 0.3
     initXXXXXXXXXXX 1 S 0.0 0.3
     httpsd 184 s 0.0 0.3
```

The following table explains the codes in the second line of the output:

Code	Description
U	Percentage of user space applications that are currently using the CPU
N	Percentage of time that the CPU spent on low priority processes since the last shutdown
S	Percentage of system processes (or kernel processes) that are using the CPU
I	Percentage of idle CPU resources
WA	Percentage of time that the CPU spent waiting on IO peripherals since the last shutdown
HI	Percentage of time that the CPU spent handling hardware interrupt routines since the last shutdown
SI	Percentage of time that the CPU spent handling software interrupt routines since the last shutdown
ST	steal time Percentage of time a virtual CPU waits for the physical CPU when the hypervisor is servicing another virtual processor
T	Total FortiOS system memory in MB
F	Free memory in MB

Each additional line of the command output displays information specific to processes running on the FortiGate unit. For example, the sixth line of the output is: `newcli 20195 R 0.1 0.1`

The following table describes the data in the sixth line of the output:

Item	Description
newcli	The process name. Other process names can include `ipsengine`, `sshd`, `cmdbsrv`, `httpsd`, `scanunitd`, and `miglogd`. Duplicate process names indicate that separate instances of that process that are running.
20195	The process ID, which can be any number.
R	Current state of the process. The process state can be: • `R` - running • `S` - sleep • `Z` - zombie • `D` - disk sleep
0.1	The percentage of CPU capacity that the process is using. CPU usage can range from 0.0 for a process that is sleeping to higher values for a process that's taking a lot of CPU time.
0.1	The amount of memory that the process is using. Memory usage can range from 0.1 to 5.5 and higher.

You can use the following single-key commands when running `diagnose sys top`:

- `q` to quit and return to the normal CLI prompt.
- `p` to sort the processes by the amount of CPU that the processes are using.
- `m` to sort the processes by the amount of memory that the processes are using.

The output only displays the top processes that are running. For example, if 20 processes are listed, they are the top 20 processes currently running, sorted by either CPU or memory usage. You can configure the number of processes displayed, using the following CLI command:

```
diagnose sys top <integer_seconds> <integer_maximum_lines>
```

Where:

- `<integer_seconds>` is the delay in seconds (default is 5)
- `<integer_maximum_lines>` is the maximum number of lines (or processes) to list (default is 20)

Determining which features are using the most CPU resources

You can use the CLI to view the top few processes that are currently running and using the most CPU resources.

To view processes using the most CPU resources:

```
get system performance top
```

The entries at the top are using the most CPU resources. The second column from the right shows CPU usage by percentage. Note which processes are using the most resources and try to reduce their CPU load.

Processes you will see include:

- `ipsengine`: the IPS engine that scans traffic for intrusions
- `scanunitd`: antivirus scanner
- `httpsd`: secure HTTP
- `iked`: internet key exchange (IKE) in use with IPsec VPN tunnels
- `newcli`: active whenever you're accessing the CLI
- `sshd`: there are active secure socket connections
- `cmdbsrv`: the command database server application

Go to the features that are at the top of the list and look for evidence of CPU overuse. Generally, the monitor for a feature is a good place to start.

Checking for unnecessary CPU “wasters”

These are some best practices that will reduce your CPU usage, even if the FortiGate is not experiencing high CPU usage. Note that if the following information instructs you to turn off a feature that you require, disregard that part of the instructions.

- Use hardware acceleration wherever possible to offload tasks from the CPU. Offloading tasks, such as encryption, frees up the CPU for other tasks.
- Avoid the use of GUI widgets that require computing cycles, such as the *Top Sessions* widget. These widgets constantly pol the system for information, which uses CPU and other resources.
- Schedule antivirus, IPS, and firmware updates during off-peak hours. These updates do not usually consume CPU resources but they can disrupt normal operation.
- Check the log levels and which events are being logged. This is the severity of the messages that are recorded. Consider going up one level to reduce the amount of logging. Also, if there are events you do not need to monitor, remove them from the list.
- Log to FortiCloud instead of logging to memory or disk. Logging to memory quickly uses up resources and logging to local disk impacts overall performance and reduces the lifetime of the unit.

Fortinet recommends logging to FortiCloud to avoid using too much CPU.

- If the disk is almost full, transfer the logs or data off the disk to free up space. When a disk is almost full it consumes a lot of resources to find free space and organize the files.
- If packet logging is enabled on the FortiGate, consider disabling it. When packet logging is enabled, it records every packet that comes through that policy.
- Halt all sniffers and traces.
- Ensure the FortiGate isn't scanning traffic twice. Traffic does not need to be rescanned if it enters the FortiGate on one interface, goes out another, and then comes back in again. Doing so is a waste of resources. However, ensure that traffic truly is being scanned once.
- Reduce the session timers to close unused sessions faster. Enter the following CLI commands, which reduce the default values. Note that, by default, the system adds 10 seconds to `tcp-timewait`.

```
config system global
   set tcp-halfclose-timer 30
   set tcp-halfopen-timer 30
   set tcp-timewait-timer 0
   set udp-idle-timer 60
end
```

- Go to *System* > *Feature Visibility*, and enable only features that you need.

SNMP monitoring

When CPU usage is under control, use SNMP to monitor CPU usage. Alternatively, use logging to record CPU and memory usage every 5 minutes.

Once the system is back to normal, you should set up a warning system that sends alerts when CPU resources are used excessively. A common method to do this is using SNMP. SNMP monitors many values in FortiOS and allows you to set high water marks that generate events. You run an application on your computer to watch for and record these events.

To enable SNMP:

1. Go to *System* > *SNMP*.
2. Configure an SNMP community.

See SNMP on page 692.



You can use the *System Resources* widget to record CPU usage if SNMP is too complicated. However, the widget only records problems as they happen and will not send you alerts for problems.

Checking the modem status

You can use the CLI to troubleshoot a modem that is not working properly, or troubleshoot a FortiGate that does not detect the modem.

To diagnose modem issues in the CLI:

```
diagnose sys modem {cmd | com | detect | history | external-modem | query| reset}
```

You should always run the following command after you connect a USB modem to FortiGate:

```
diagnose sys modem detect
```

Use the following command to view the modem's configuration, vendor and custom product identification number:

```
get system modem
```

Use the following commands to resolve connectivity issues:

- `diagnose debug enable`: Activates the debug on the console
- `diagnose debug application modemd`: Dumps communication between the modem and the unit.
- `diagnose debug application ppp`: Dumps the PPP negotiating messages.
- `execute modem dial`: Displays modem debug output.

The modem diagnose output should not contain errors when initializing. You should also verify the number used to dial into your ISP.

Running ping and traceroute

Ping and traceroute are useful tools in network troubleshooting. Alone, either tool can determine network connectivity between two points. However, ping can be used to generate simple network traffic that you can view using `diagnose` commands in FortiGate. This combination can be very powerful when you are trying to locate network problems.

Ping and traceroute can also tell you if your computer or network device has access to a domain name server (DNS). Both tools can use IP addresses or device domain names to determine why particular services, such as email or web browsing, may not work properly.



If ping does not work, it may be disabled on at least one of the interface settings and security policies for that interface.

Both ping and traceroute require particular ports to be open on firewalls to function. Since you typically use these tools to troubleshoot, you can allow them in the security policies and on interfaces only when you need them. Otherwise, keep the ports disabled for added security.

Ping

The ping command sends a very small packet to a destination, and waits for a response. The response has a timer that expires when the destination is unreachable.

Ping is part of layer 3 on the OSI Networking Model. Ping sends Internet Control Message Protocol (ICMP) “echo request” packets to the destination, and listens for “echo response” packets in reply. However, many public networks block ICMP packets because ping can be used in a denial of service (DoS) attack (such as Ping of Death or a smurf attack), or by an attacker to find active locations on the network. By default, FortiGate units have ping enabled while broadcast-forward is disabled on the external interface.

What ping can tell you

Beyond the basic connectivity information, ping can tell you the amount of packet loss (if any), how long it takes the packet to make the round trip, and the variation in that time from packet to packet.

If packet loss is detected, you should investigate the following:

- Possible ECMP, split horizon, or network loops.
- Cabling, to ensure there are no loose connections.

- Verify which security policy was used. To do this:
  Go *to Policy & Objects* > *IPv4 Policy* or *Policy & Objects* > *IPv6 Policy* and view the packet count column.

If there is total packet loss, you should investigate the following:

1. Ensure cabling is correct, and all equipment between the two locations is accounted for.
2. Ensure all IP addresses and routing information along the route is configured as expected.
3. Ensure all firewalls, including FortiGate security policies allow PING to pass through.

How to use ping

Ping syntax is the same for nearly every type of system on a network.

To ping from a FortiGate unit:

1. Go to *Dashboad*, and connect to the CLI through either telnet or the CLI widget.
2. Enter `exec ping 10.11.101.101` to send 5 ping packets to the destination IP address. There are no options for this command.

   Sample output:

```
Head_Office_620b # exec ping 10.11.101.101
PING 10.11.101.101 (10.11.101.101): 56 data bytes
64 bytes from 10.11.101.101: icmp_seq=0 ttl=255 time=0.3 ms
64 bytes from 10.11.101.101: icmp_seq=1 ttl=255 time=0.2 ms
64 bytes from 10.11.101.101: icmp_seq=2 ttl=255 time=0.2 ms
64 bytes from 10.11.101.101: icmp_seq=3 ttl=255 time=0.2 ms
64 bytes from 10.11.101.101: icmp_seq=4 ttl=255 time=0.2 ms

--- 10.11.101.101 ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max = 0.2/0.2/0.3 ms
```

To ping from a Microsoft Windows PC:

1. Open a command window.
2. Enter `ping 10.11.101.100` to ping the default internal interface of the FortiGate with four packets.
   Other options include:
   - `-t` to send packets until you press `Ctrl+C`
   - `-a` to resolve addresses to domain names where possible
   - `-n X` to send X ping packets and stop

Sample output:

```
C:\>ping 10.11.101.101

Pinging 10.11.101.101 with 32 bytes of data:
Reply from 10.11.101.101: bytes=32 time=10ms TTL=255
Reply from 10.11.101.101: bytes=32 time<1ms TTL=255
Reply from 10.11.101.101: bytes=32 time=1ms TTL=255
Reply from 10.11.101.101: bytes=32 time=1ms TTL=255

Ping statistics for 10.11.101.101:
Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
```

```
Approximate round trip times in milli-seconds:
Minimum = 0ms, Maximum = 10ms, Average = 3ms
```

To ping from a Linux PC:

1. Go to a shell prompt.
2. Enter "`ping 10.11.101.101`".

Traceroute

Where ping will only tell you if it reached its destination and returned successfully, traceroute shows each step of the journey to its destination and how long each step takes. If ping finds an outage between two points, you can use traceroute to locate exactly where the problem is.

Traceroute works by sending ICMP packets to test each hop along the route. It sends three packets, and then increases the time to live (TTL) setting by one each time. This effectively allows the packets to go one hop farther along the route. This is why most traceroute commands display their maximum hop count before they start tracing the route, which is the maximum number of steps it takes before it declares the destination unreachable. Also, the TTL setting may result in steps along the route timing out due to slow responses. There are many possible reasons for this to occur.

By default, traceroute uses UDP datagrams with destination ports numbered from 33434 to 33534. The traceroute utility may also offer the option to select use of ICMP echo request (type 8) instead, which the Windows tracert utility uses. If you must, allow both protocols inbound through the FortiGate security policies (UDP with ports from 33434 to 33534 and ICMP type 8).

To track traceroute packets in the GUI:

Go to *Policy & Objects* > *IPv4 Policy* or *Policy & Objects* > *IPv6 Policy* (if applicable) and view the packet count column.

This allows you to verify the connection and confirm which security policy the traceroute packets are using.

What traceroute can tell you

Both ping and traceroute verify connectivity between two points. However, only traceroute shows you each step in the connection path. Also, ping and traceroute use different protocols and ports, so one may succeed where the other fails.

You can verify your DNS connection using traceroute. If you enter an FQDN instead of an IP address for the traceroute, DNS tries to resolve that domain name. If the name isn't resolved, you have DNS issues.

Using traceroute

The traceroute command varies slightly between operating systems. In Microsoft Windows, the command name is shortened to "`tracert`". Also, your output lists different domain names and IP addresses along your route.

To use traceroute on a Microsoft Windows PC:

1. Open a command window.
2. Enter `tracert fortinet.com` to trace the route from the PC to the Fortinet web site.

Sample output:

```
C:\>tracert fortinet.com
```

```
Tracing route to fortinet.com [208.70.202.225]
over a maximum of 30 hops:
1 <1 ms <1 ms <1 ms 172.20.120.2
2 66 ms 24 ms 31 ms 209-87-254-xxx.storm.ca [209.87.254.221]
3 52 ms 22 ms 18 ms core-2-g0-0-1104.storm.ca [209.87.239.129]
4 43 ms 36 ms 27 ms core-3-g0-0-1185.storm.ca [209.87.239.222]
5 46 ms 21 ms 16 ms te3-x.1156.mpd01.cogentco.com [38.104.158.69]
6 25 ms 45 ms 53 ms te8-7.mpd01.cogentco.com [154.54.27.249]
7 89 ms 70 ms 36 ms te3-x.mpd01.cogentco.com [154.54.6.206]
8 55 ms 77 ms 58 ms sl-st30-chi-.sprintlink.net [144.232.9.69]
9 53 ms 58 ms 46 ms sl-0-3-3-x.sprintlink.net [144.232.19.181]
10 82 ms 90 ms 75 ms sl-x-12-0-1.sprintlink.net [144.232.20.61]
11 122 ms 123 ms 132 ms sl-0-x-0-3.sprintlink.net [144.232.18.150]
12 129 ms 119 ms 139 ms 144.232.20.7
13 172 ms 164 ms 243 ms sl-321313-0.sprintlink.net [144.223.243.58]
14 99 ms 94 ms 93 ms 203.78.181.18
15 108 ms 102 ms 89 ms 203.78.176.2
16 98 ms 95 ms 97 ms 208.70.202.225
```

The first column on the left is the hop count, which can't exceed 30 hops. When that number is reached, the traceroute ends.

The second, third, and fourth columns display how much time each of the three packets takes to reach this stage of the route. These values are in milliseconds and normally vary quite a bit. Typically a value of `<1ms` indicates a local connection.

The fifth column (farthest to the right) shows the domain name of the device and its IP address, or possibly only the IP address.

To perform a traceroute on a Linux PC:

1. Go to a command line prompt.
2. Enter "`traceroute fortinet.com`".

The Linux traceroute output is very similar to the MicroSoft Windows `tracert` output.

To trace a route from a FortiGate to a destination IP address in the CLI:

```
# execute traceroute www.fortinet.com

traceroute to www.fortinet.com (66.171.121.34), 32 hops max, 84 byte packets
1 172.20.120.2 0.637 ms 0.653 ms 0.279 ms
2 209.87.254.221 <static-209-87-254-221.storm.ca> 2.448 ms 2.519 ms 2.458 ms
3 209.87.239.129 <core-2-g0-2.storm.ca> 2.917 ms 2.828 ms 9.324 ms
4 209.87.239.199 <core-3-bdi1739.storm.ca> 13.248 ms 12.401 ms 13.009 ms
5 216.66.41.113 <v502.core1.tor1.he.net> 17.181 ms 12.422 ms 12.268 ms
6 184.105.80.9 <100ge1-2.core1.nyc4.he.net> 21.355 ms 21.518 ms 21.597 ms
7 198.32.118.41 <ny-paix-gni.twgate.net> 83.297 ms 84.416 ms 83.782 ms
8 203.160.228.217 <217-228-160-203.TWGATE-IP.twgate.net> 82.579 ms 82.187 ms 82.066 ms
9 203.160.228.229 <229-228-160-203.TWGATE-IP.twgate.net> 82.055 ms 82.455 ms 81.808 ms
10 203.78.181.2 82.262 ms 81.572 ms 82.015 ms
11 203.78.186.70 83.283 ms 83.243 ms 83.293 ms
12 66.171.127.177 84.030 ms 84.229 ms 83.550 ms
13 66.171.121.34 <www.fortinet.com> 84.023 ms 83.903 ms 84.032 ms
14 66.171.121.34 <www.fortinet.com> 83.874 ms 84.084 ms 83.810 ms
```

Checking the logs

A log message records the traffic passing through FortiGate to your network and the action FortiGate takes when it scans the traffic. You should log as much information as possible when you first configure FortiOS. If FortiGate logs are too large, you can turn off or scale back the logging for features that are not in use.

It is difficult to troubleshoot logs without a baseline. Before you can determine if the logs indicate a problem, you need to know what logs result from normal operation.

When troubleshooting with log files

- Compare current logs to a recorded baseline of normal operation.
- If you need to, increase the level of logging (such as from Warning to Information) to obtain more information.

When increasing logging levels, ensure that you configure email alerts and select both disk usage and log quota. This ensures that you will be notified if the increase in logging causes problems.

To configure the log settings in the GUI:

1. Go to *Log & Report* > *Log Settings*.
2. Determine the activities that generate the most log entries:
   - Check all logs to ensure important information is not overlooked.
   - Filter or order log entries based on different fields, such as level, service, or IP address, to look for patterns that may indicate a specific problem, such as frequent blocked connections on a specific port for all IP addresses.

   Logs can help identify and locate any problems, but they do not solve them. The purpose of logs is to speed up your problem solving and save you time and effort.

   For more information about logging and log reports, see Log and Report on page 1560.

Verifying routing table contents in NAT mode

Verify the contents of the routing table when a FortiGate has limited or no connectivity.

The routing table stores the routes currently in use for both static and dynamic protocols. Storing a route in the routing table saves time and resources performing a lookup. To ensure the most recently used routes remain in the table, old routes are bumped to make room for new ones. You cannot perform this task when FortiGate is in transparent mode.

If FortiGate is running in NAT mode, verify that all desired routes are in the routing table, including local subnets, default routes, specific static routes, and dynamic routing protocols.

To view the routing table in the GUI:

1. Go to *Monitor* > *Routing Monitor*.

To view the routing table in the CLI:

```
get router info routing-table all
```

Sample output:

```
FGT# get router info routing-table all
Codes:
```

```
   K - kernel, C - connected, S - static, R - RIP, B - BGP
   O - OSPF, IA - OSPF inter area
   N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
   E1 - OSPF external type 1, E2 - OSPF external type 2
   i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
   * - candidate default
S* 0.0.0.0/0 [10/0] via 172.20.120.2, wan1
C 10.31.101.0/24 is directly connected, internal
C 172.20.120.0/24 is directly connected, wan1
```

Verifying the correct route is being used

Run a trace route from a machine in the local area network (LAN) to ensure traffic is flowing as expected through the correct route when there is more than one default route.

In the following example output:

- The first hop contains the IP address `10.10.1.99`, which is the internal interface of the FortiGate.
- The second hop contains the IP address `172.20.120.2`, to which the wan1 interface of the FortiGate is connected.

This means the route through the wan1 interface is being used for this traffic.

```
C:\>tracert www.fortinet.com
Tracing route to www.fortinet.com [66.171.121.34]
over a maximum of 30 hops:
1 <1 ms <1 ms <1 ms 10.10.1.99
2 1 ms <1 ms <1 ms 172.20.120.2
3 3 ms 3 ms 3 ms static-209-87-254-221.storm.ca [209.87.254.221]
4 3 ms 3 ms 3 ms core-2-g0-2.storm.ca [209.87.239.129]
5 13 ms 13 ms 13 ms core-3-bdi1739.storm.ca [209.87.239.199]
6 12 ms 19 ms 11 ms v502.core1.tor1.he.net [216.66.41.113]
7 22 ms 22 ms 21 ms 100ge1-2.core1.nyc4.he.net [184.105.80.9]
8 84 ms 84 ms 84 ms ny-paix-gni.twgate.net [198.32.118.41]
9 82 ms 84 ms 82 ms 217-228-160-203.TWGATE-IP.twgate.net [203.160.22
8.217]
10 82 ms 81 ms 82 ms 229-228-160-203.TWGATE-IP.twgate.net [203.160.22
8.229]
11 82 ms 82 ms 82 ms 203.78.181.2
12 84 ms 83 ms 83 ms 203.78.186.70
13 84 ms * 85 ms 66.171.127.177
14 84 ms 84 ms 84 ms fortinet.com [66.171.121.34]
15 84 ms 84 ms 83 ms fortinet.com [66.171.121.34]
```

You can also see the route taken for each session by debugging the packet flow in the CLI. For more information, see Debugging the packet flow on page 1653

Verifying the correct firewall policy is being used

If you have more than one firewall policy, you can check which policy is being used in the *Policy & Objects* module in the GUI.

To verify the firewall policy in the GUI:

1. Go to:
   - *Policy & Objects* > *IPv4 Policy*.

   or
   - *Policy & Objects* > *IPv6 Policy*.
2. Look in the *Count* column to see which policy is being used. The count must show traffic increasing.

Debugging the packet flow in the CLI shows the policy ID that's allowing the traffic. For information, see Debugging the packet flow on page 1653.

Checking the bridging information in transparent mode

Checking the bridging information is useful when you are experiencing connectivity problems. When FortiGate is set to transparent mode, it acts like a bridge and sends all incoming traffic out on the other interfaces. Each bridge is a link between interfaces.

When traffic is flowing between the interfaces, you can see the bridges listed in the CLI. If no bridges are listed, this is the likely cause of the connectivity issue. When investigating bridging information, check for the MAC address of the interface or device in question.

How to check the bridging information

To view the list of bridge instances in the CLI:

```
diagnose netlink brctl list
```

Sample output:

```
#diagnose netlink brctl list
list bridge information
1. root.b fdb: size=256 used=6 num=7 depth=2 simple=no
Total 1 bridges
```

How to display forwarding domain information

You can use forwarding domains, or collision domains, in routing to limit where packets are forwarded on the network. Layer 2 broadcasts are limited to the same group. By default, all interfaces are in group 0. For example, if the FortiGate has 12 interfaces, only two may be in the same forwarding domain, which limits packets that are broadcast to those two interfaces. This reduces traffic on the rest of the network.

Collision domains prevent the forwarding of ARP packets to all VLANs on an interface. Without collision domains, duplicate MAC addresses on VLANs may cause ARP packets to be duplicated. Duplicate ARP packets can cause some switches to reset. It's important to know what interfaces are part of which forwarding domains because this determines which interfaces can communicate with each other.

To manually configure forwarding domains in transparent mode in the CLI:

```
config system interface
   edit <interface_name>
      set forward-domain <integer>
```

```
end
```

To display the forward domains information in the CLI:

```
diagnose netlink brctl domain <name> <id>
```

Where <name> is the name of the forwarding domain to display and <id> is the domain ID.

Sample output:

```
diagnose netlink brctl domain ione 101
show bridge root.b ione forward domain.
id=101 dev=trunk_1 6
```

To list the existing bridge MAC table in the CLI:

```
diagnose netlink brctl name host <name>
```

Sample output:

```
show bridge control interface root.b host.
fdb: size=256, used=6, num=7, depth=2, simple=no
Bridge root.b host table
```

port no	device	devname	mac addr	ttl	attributes
2	7	wan2	02:09:0f:78:69:00	0	Local Static
5	6	vlan_1	02:09:0f:78:69:01	0	Local Static
3	8	dmz	02:09:0f:78:69:01	0	Local Static
4	9	internal	02:09:0f:78:69:02	0	Local Static
3	8	dmz	00:80:c8:39:87:5a	194	
4	9	internal	02:09:0f:78:67:68	8	
1	3	wan1	00:09:0f:78:69:fe	0	Local Static

To list the existing bridge port list in the CLI:

```
diagnose netlink brctl name port <name>
```

Sample output:

```
show bridge root.b data port.
trunk_1 peer_dev=0
internal peer_dev=0
dmz peer_dev=0
wan2 peer_dev=0
wan1 peer_dev=0
```

Checking the number of sessions that UTM proxy uses

Each FortiGate model has a maximum number of sessions that the UTM proxy supports. The UTM proxy handles all the traffic for the following protocols: HTTP, SMTP, POP3, IMAP, FTP, and NNTP. If the proxy for a protocol fills up its session table, FortiGate enters conserve mode until entries and memory free up again.

Conserve or failopen mode

Depending on the conserve mode configuration, no new sessions are created until old ones end, once the maximum is reached. You can configure this behavior when memory is running low or the proxy connection limit has been reached.

To configure failopen in the CLI:

```
config system global
   set av-failopen-session {enable | disable}
   set av-failopen {off | one-shot | pass}
end
```

To set the behavior for these conditions, you must enable `av-failopen-session`. When enabled, and a proxy for a protocol runs out of room in its session table, that protocol goes into failopen mode and behaves as defined in the `av-failopen` command.

`av-failopen` determines the behavior of the proxy until entries are free in the session table again for that proxy.

off	This option turns off accepting any new AV sessions, but continues to process any existing AV sessions that are currently active. All the protocols listed (HTTP, SMTP, POP3, IMAP, FTP, and NNTP) are scanned by FortiGate Antivirus. If AV scanning is enabled, `av-failopen off` is set, and the proxy session table fills up, which means that no new sessions of that type are accepted. For example, if the POP3 session table is full and email AV scanning is enabled, no additional POP3 connections are allowed until the session table has free space. This is a secure option because no unscanned traffic is allowed to pass.
one-shot	When memory is low, bypass the antivirus system. The term `one-shot` comes from the fact that once you are in `one-shot av-failopen` mode, you must set `av-failopen` to either `pass` or `off` to restart AV scanning. This is a very unsecure option because it allows all traffic without AV scanning, and it never reverts to normal without manual assistance.
pass	When memory is low, bypass the antivirus system. The difference between `pass` and `one-shot` options is that when memory is freed up, the system automatically starts AV scanning again. This is an unsecure option because it allows traffic to pass without AV scanning. However, it is better than `one-shot` because it automatically restarts AV scanning, when possible.

If the proxy session table is full for one or more protocols, and your FortiGate enters into conserve or failopen mode:

- It appears as though the FortiGate has lost the connection.
- Network services are intermittent or don't exist.
- Other services work normally until their sessions end, and then they join the queue of session-starved applications.

Checking sessions in use

Sessions are organized into sections according to the protocol they use. This provides statistics and errors specific to that protocol.



Due to the amount of output from this command, you should connect to the CLI with a terminal program, such as puTTY, that logs output. Otherwise, you may not be able to access all the output information from the command.

To check sessions in use and related errors in the CLI:

```
# get test proxyworker 4
```

Sample output

The following output only displays HTTP entries. The other protocols were removed to limit the output. There will be separate entries for each supported protocol (HTTP, SMTP, POP3, IMAP, FTP, and NNTP) in each section of the output. To view the session descriptions, scroll to the end of the output.

```
FGT# # get test proxyworker 4

Worker[0]
HTTP Common
Current Connections 8/8032
Max Concurrent Connections 76

Worker Stat
Running time (HH:MM:SS:usec) 29:06:27:369365
Time in loop scanning 2:08:000198
Error Count (accept) 0
Error Count (read) 0
Error Count (write) 0
Error Count (poll) 0
Error Count (alloc) 0
Last Error 0
Acceptor Read 6386
Acceptor Write 19621
Acceptor Close 0

HTTP Stat
Bytes sent 667012 (kb)
Bytes received 680347 (kb)
Error Count (alloc) 0
Error Count (accept) 0
Error Count (bind) 0
Error Count (connect) 0
Error Count (socket) 0
Error Count (read) 134
Error Count (write) 0
Error Count (retry) 40
Error Count (poll) 0
Error Count (scan reset) 2
Error Count (urlfilter wait) 3
Last Error 104
```

```
Web responses clean 17950
Web responses scan errors 23
Web responses detected 16
Web responses infected with worms 0
Web responses infected with viruses 0
Web responses infected with susp 0
Web responses file blocked 0
Web responses file exempt 0
Web responses bannedword detected 0
Web requests oversize pass 16
Web requests oversize block 0
Last Server Scan errors 102
URL requests exempt 0
URL requests blocked 0
URL requests passed 0
URL requests submit error 0
URL requests rating error 0
URL requests rating block 0
URL requests rating allow 10025
URL requests infected with worms 0
Web requests detected 0
Web requests file blocked 0
Web requests file exempt 0
POST requests clean 512
POST requests scan errors 0
POST requests infected with viruses 0
POST requests infected with susp 0
POST requests file blocked 0
POST requests bannedword detected 0
POST requests oversize pass 0
POST requests oversize block 0
Web request backlog drop 0
Web response backlog drop 0

Worker Accounting
poll=721392/649809/42 pollfail=0 cmdb=85 scan=19266 acceptor=25975

HTTP Accounting
setup_ok=8316 setup_fail=0 conn_ok=0 conn_inp=8316
urlfilter=16553/21491/20 uf_lookupf=0
scan=23786 clt=278876 srv=368557

SMTP Accounting
setup_ok=12 setup_fail=0 conn_ok=0 conn_inp=12
scan=12 suspend=0 resume=0 reject=0 spamadd=0 spamdel=0 clt=275 srv=279

POP3 Accounting
setup_ok=30 setup_fail=0 conn_ok=0 conn_inp=30
scan=3 clt=5690 srv=5836

IMAP Accounting
setup_ok=0 setup_fail=0 conn_ok=0 conn_inp=0
scan=0 clt=0 srv=0

FTP Accounting
setup_ok=0 setup_fail=0 conn_ok=0 conn_inp=0
scan=0 clt=0 srv=0 datalisten=0 dataclt=0 datasrv=0
```

```
NNTP Accounting
setup_ok=0 setup_fail=0 conn_ok=0 conn_inp=0
scan=0 clt=0 srv=0
```

Section descriptions:

Section	Description
HTTP Common current connections	This displays an entry for each protocol. Each protocol displays the connections currently used, and the maximum connections allowed. This maximum is for the UTM proxy, which means all of the protocol connections combined cannot be larger than this number. The maximum session count for each protocol is the same. You may also see `Max Concurrent Connections` for each protocol. This is the number of maximum connections of this type allowed at one time. If VDOMs are enabled, this value is defined either on the global or per-VDOM level at *VDOM > Global Resources*.
Worker Stat	This displays statistics about the UTM proxy including how long it has been running, and how many errors it has found.
HTTP Stat	This section includes statistics about the HTTP protocol proxy. This is a very extensive list that includes errors, web responses, and any UTM positive matches. There are similar sections for each protocol, but the specific entries for the protocol will vary based on what UTM scanning is looking for (spam control for email, file transfer blocking for FTP, and so on).
Worker Accounting	Lists accounting information about the UTM proxy such as polling statistics, how many sessions were scanned, and how many were accepted. This information can show you if expected AV scanning is taking place or not. Under normal operation there should not be errors or fails.
HTTP Accounting	The accounting sections for each protocol provide information about successful session creation, failures, how many sessions are being scanned or filtered, and how many are client or server originated. If `setup_fail` is larger than zero, run the command again to see if it's increasing quickly. If it is, your FortiGate may be in conserve mode.

Related commands

To dump memory usage:

```
# get test proxyworker 1
```

To display statistics per VDOM:

```
# get test proxyworker 4444
```

To restart the proxy:

```
# get test proxyworker 99
```

Checking wireless information

Check wireless connections, stations, and interfaces when the problem is not caused by a physical interface.

Troubleshooting station connection issues

To check if a station entry is created on access control in the CLI:

```
FG600B3909600253 # diagnose wireless-controller wlac -d sta
* vf=0 wtp=70 rId=2 wlan=open ip=0.0.0.0 mac=00:09:0f:db:c4:03 rssi=0 idle=148 bw=0 use=2
vf=0 wtp=70 rId=2 wlan=open ip=172.30.32.122 mac=00:25:9c:e0:47:88 rssi=-40 idle=0 bw=9
     use=2
```

Enabling diagnostics for a specific station

This example uses the station MAC address to find where it is failing:

```
FG600B3909600253 # diagnose wireless-controller wlac sta_filter 00:25:9c:e0:47:88 1
Set filter sta 00:25:9c:e0:47:88 level 1
FG600B3909600253 # 71419.245 <ih> IEEE 802.11 mgmt::disassoc <== 00:25:9c:e0:47:88 vap open
     rId 1 wId 0 00:09:0f:db:c4:03
71419.246 <dc> STA del 00:25:9c:e0:47:88 vap open rId 1 wId 0
71419.246 <cc> STA_CFG_REQ(34) sta 00:25:9c:e0:47:88 del ==> ws (0-192.168.35.1:5246) rId 1
     wId 0
71419.246 <cc> STA del 00:25:9c:e0:47:88 vap open ws (0-192.168.35.1:5246) rId 1 wId 0
     00:09:0f:db:c4:03 sec open reason I2C_STA_DEL
71419.247 <cc> STA_CFG_RESP(34) 00:25:9c:e0:47:88 <== ws (0-192.168.35.1:5246) rc 0
     (Success).
```

Performing a sniffer trace (CLI and packet capture)

When you troubleshoot networks and routing in particular, it helps to look inside the headers of packets to determine if they are traveling the route that you expect them to take. Packet sniffing is also known as network tap, packet capture, or logic analyzing.



For FortiGates with NP2, NP4, or NP6 interfaces that are offloading traffic, disable offloading on these interfaces before you perform a trace or it will change the sniffer trace.

Sniffing packets

To perform a sniffer trace in the CLI:

Before you start sniffing packets, you should prepare to capture the output to a file. A large amount of data may scroll by and you will not be able to see it without saving it first. One method is to use a terminal program like puTTY to connect to the FortiGate CLI. Once the packet sniffing count is reached, you can end the session and analyze the output in the file.

The general form of the internal FortiOS packet sniffer command is:

```
diagnose sniffer packet <interface_name> <'filter'> <verbose> <count> <tsformat>
```

To stop the sniffer, type `CTRL+C`.

<interface_name>	The name of the interface to sniff, such as `port1` or `internal`. This can also be `any` to sniff all interfaces.
<'filter'>	What to look for in the information the sniffer reads. `none` indicates no filtering, and all packets are displayed as the other arguments indicate. The filter must be inside single quotes (‘).
<verbose>	The level of verbosity as one of: **1 -** print header of packets **2 -** print header and data from IP of packets **3 -** print header and data from Ethernet of packets **4 -** print header of packets with interface name
<count>	The number of packets the sniffer reads before stopping. If you don't put a number here, the sniffer will run until you stop it with <`CTRL+C`>.
<tsformat>	The timestamp format. • `a`: absolute UTC time, yyyy-mm-dd hh:mm:ss.ms • `l`: absolute LOCAL time, yyyy-mm-dd hh:mm:ss.ms • `otherwise`: relative to the start of sniffing, ss.ms

Simple sniffing example:

```
diagnose sniffer packet port1 none 1 3.
```

This displays the next three packets on the port1 interface using no filtering, and verbose level 1. At this verbosity level, you can see the source IP and port, the destination IP and port, action (such as ack), and sequence numbers.

In the output below, port 443 indicates these are HTTPS packets and that 172.20.120.17 is both sending and receiving traffic.

```
Head_Office_620b # diagnose sniffer packet port1 none 1 3
interfaces=[port1]
filters=[none]
0.545306 172.20.120.17.52989 -> 172.20.120.141.443: psh 3177924955 ack 1854307757
0.545963 172.20.120.141.443 -> 172.20.120.17.52989: psh 1854307757 ack 3177925808
0.562409 172.20.120.17.52988 -> 172.20.120.141.443: psh 4225311614 ack 3314279933
```

Advanced sniffing example:

The following commands will report packets on any interface that are traveling between a computer with the host name of “PC1” and a computer with the host name of “PC2”. With verbosity 4 and above, the sniffer trace displays the interface names where traffic enters or leaves the FortiGate unit. To stop the sniffer, type `CTRL+C`.

```
FGT# diagnose sniffer packet any "host <PC1> or host <PC2>" 4
or
FGT# diagnose sniffer packet any "(host <PC1> or host <PC2>) and icmp" 4
```

The following CLI command for a sniffer includes the ARP protocol in the filter which may be useful to troubleshoot a failure in the ARP resolution. For example, PC2 may be down and not responding to the FortiGate ARP requests.

```
FGT# diagnose sniffer packet any "host <PC1> or host <PC2> or arp" 4
```

Using packet capture

To use packet capture, the FortiGate must have a disk. You can enable the `capture-packet` in the firewall policy.

To enable packet capture in the CLI:

```
config firewall policy
   edit <id>
      set capture-packet enable
end
```

To configure packet capture filters in the GUI:

Go to *Network* > *Packet Capture*.

When you add a packet capture filter, enter the following information and click *OK*.

Interface	Select the interface to sniff from the drop-down menu. You must select one interface. You cannot change the interface without deleting the filter and creating a new one, unlike the other fields.
Max Packets to Save	Enter the number of packets to capture before the filter stops. This number cannot be zero. You can halt the capturing before this number is reached.
Enable Filters	Select this option to specify filter fields.
Host(s)	Enter the IP address of one or more hosts. Separate multiple hosts with commas. To enter a range, use a dash without spaces. For example, `172.16.1.5-172.16.1.15`, or enter a subnet.
Port(s)	Enter one or more ports to capture on the selected interface. Separate multiple ports with commas. To enter a range, use a dash without spaces, for example `88-90`.
VLAN(s)	Enter one or more VLANs (if any). Separate multiple VLANs with commas.
Protocol	Enter one or more protocols. Separate multiple protocols with commas. To enter a range, use a dash without spaces. For example, `1-6`, `17`, `21-25`.

Include IPv6 Packets	Select this option if you are troubleshooting IPv6 networking, or if your network uses IPv6. Otherwise, leave it disabled.
Include Non-IP Packets	The protocols in the list are all IP based except for ICMP (ping). Use this feature to capture non-IP based packets. Examples of non-IP packets include IPsec, IGMP, ARP, and ICMP.

Managing filters

If you select a filter, you have the option to start and stop packet capture in the edit window, or download the captured packets. You can also see the filter status and the number of packets captured.

You can select the filter and start capturing packets. When the filter is running, the number of captured packets increases until it reaches the *Max Packet Count* or you stop it. You cannot download the output file while the filter is running.

Packet capture controls

To start, stop, or resume packet capture, use the symbols on the screen. These symbols are the same as those used for audio or video playback. Hover over the symbol to reveal explanatory text. Similarly, to download the *.pcap file, use the download symbol on the screen.

Downloading the file

You can download the *.pcap file when the packet capture is complete. You must use a third party application, such as Wireshark, to read *,pcap files. This tool provides you with extensive analytics and the full contents of the packets that were captured.

Debugging the packet flow

Debug the packet flow when network traffic is not entering and leaving the FortiGate as expected. Debugging the packet flow can only be done in the CLI. Each command configures a part of the debug action. The final commands starts the debug.

To trace the packet flow in the CLI:

```
diagnose debug flow trace start
```

To follow packet flow by setting a flow filter:

```
diagnose debug flow {filter | filter6} <option>
```

- Enter `filter` if your network uses IPv4.
- Enter `filter6` if your network uses IPv6.

Replace `<option>` with one of the following variables:

Variable	Description
`addr`	IPv4 or IPv6 address
`clear`	clear filter

Variable	Description
daddr	destination IPv4 or IPv6 address
dport	destination port
negate	inverse IPv4 or IPv6 filter
port	port
proto	protocol number
saddr	source address
sport	source port
vd	index of virtual domain; -1 matches all



If FortiGate is connected to FortiAnalyzer or FortiCloud, the diagnose debug flow output will be recorded as event log messages and then sent to the devices. Do not run this command longer than necessary, as it generates a significant amount of data.



FortiASIC NP4 or NP6 interface pairs that offload traffic will change the packet flow. Before debugging any NP4 or NP6 interfaces, disable offloading on those interfaces.

To do this, enter `diagnose npu <interface pair> fastpath disable`, where `interface pair` is `np4`, `np6`, `np4lite`, or `np6lite`.

To start flow monitoring with a specific number of packets:

```
diagnose debug flow trace start <N>
```

To stop flow tracing at any time:

```
diagnose debug flow trace stop
```

The following example shows the flow trace for a device with an IP address of `203.160.224.97`:

```
diagnose debug enable
diagnose debug flow filter addr 203.160.224.97
diagnose debug flow show function-name enable
diagnose debug flow trace start 100
```

Sample output: HTTP

To observe the debug flow trace, connect to the website at the following address:

```
https://www.fortinet.com
```

Comment: SYN packet received:

```
id=20085 trace_id=209 func=resolve_ip_tuple_fast
line=2700 msg="vd-root received a packet(proto=6,
192.168.3.221:1487->203.160.224.97:80) from port5."
```

SYN sent and a new session is allocated:

```
id=20085 trace_id=209 func=resolve_ip_tuple line=2799
msg="allocate a new session-00000e90"
```

Lookup for next-hop gateway address:

```
id=20085 trace_id=209 func=vf_ip4_route_input line=1543
msg="find a route: gw-192.168.11.254 via port6"
```

Source NAT, lookup next available port:

```
id=20085 trace_id=209 func=get_new_addr line=1219
msg="find SNAT: IP-192.168.11.59, port-31925"
direction"
```

Matched security policy. Check to see which policy this session matches:

```
id=20085 trace_id=209 func=fw_forward_handler line=317
msg="Allowed by Policy-3: SNAT"
```

Apply source NAT:

```
id=20085 trace_id=209 func=__ip_session_run_tuple
line=1502 msg="SNAT 192.168.3.221->192.168.11.59:31925"
```

SYN ACK received:

```
id=20085 trace_id=210 func=resolve_ip_tuple_fast line=2700
msg="vd-root received a packet(proto=6, 203.160.224.97:80-
>192.168.11.59:31925) from port6."
```

Found existing session ID. Identified as the reply direction:

```
id=20085 trace_id=210 func=resolve_ip_tuple_fast line=2727
msg="Find an existing session, id-00000e90, reply direction"
```

Apply destination NAT to inverse source NAT action:

```
id=20085 trace_id=210 func=__ip_session_run_tuple
line=1516 msg="DNAT 192.168.11.59:31925-
>192.168.3.221:1487"
```

Lookup for next-hop gateway address for reply traffic:

```
id=20085 trace_id=210 func=vf_ip4_route_input line=1543
msg="find a route: gw-192.168.3.221 via port5"
```

ACK received:

```
id=20085 trace_id=211 func=resolve_ip_tuple_fast line=2700
msg="vd-root received a packet(proto=6,
192.168.3.221:1487->203.160.224.97:80) from port5."
```

Match existing session in the original direction:

```
id=20085 trace_id=211 func=resolve_ip_tuple_fast line=2727
msg="Find an existing session, id-00000e90, original
direction"
```

Apply source NAT:

```
id=20085 trace_id=211 func=__ip_session_run_tuple
line=1502 msg="SNAT 192.168.3.221->192.168.11.59:31925"
```

Receive data from client:

```
id=20085 trace_id=212 func=resolve_ip_tuple_fast
```

```
line=2700 msg="vd-root received a packet(proto=6,
192.168.3.221:1487->203.160.224.97:80) from port5."
```

Match existing session in the original direction:

```
id=20085 trace_id=212 func=resolve_ip_tuple_fast
line=2727 msg="Find an existing session, id-00000e90,
original direction"
```

Apply source NAT:

```
id=20085 trace_id=212 func=__ip_session_run_tuple
line=1502 msg="SNAT 192.168.3.221->192.168.11.59:31925"
```

Receive data from server:

```
id=20085 trace_id=213 func=resolve_ip_tuple_fast
line=2700 msg="vd-root received a packet(proto=6,
203.160.224.97:80->192.168.11.59:31925) from port6."
```

Match existing session in reply direction:

```
id=20085 trace_id=213 func=resolve_ip_tuple_fast
line=2727 msg="Find an existing session, id-00000e90,
reply direction"
```

Apply destination NAT to inverse source NAT action:

```
id=20085 trace_id=213 func=__ip_session_run_tuple
line=1516 msg="DNAT 192.168.11.59:31925-
>192.168.3.221:1487"
```

Sample output: IPsec (policy-based)

```
id=20085 trace_id=1 msg="vd-root received a packet(proto=1, 10.72.55.240:1->10.71.55.10:8)
     from internal."
id=20085 trace_id=1 msg="allocate a new session-00001cd3"
id=20085 trace_id=1 msg="find a route: gw-66.236.56.230 via wan1"
id=20085 trace_id=1 msg="Allowed by Policy-2: encrypt"
id=20085 trace_id=1 msg="enter IPsec tunnel-RemotePhase1"
id=20085 trace_id=1 msg="encrypted, and send to 15.215.225.22 with source 66.236.56.226"
id=20085 trace_id=1 msg="send to 66.236.56.230 via intf-wan1"
id=20085 trace_id=2 msg="vd-root received a packet (proto=1, 10.72.55.240:1-1071.55.10:8)
     from internal."
id=20085 trace_id=2 msg="Find an existing session, id-00001cd3, original direction"
id=20085 trace_id=2 msg="enter IPsec ="encrypted, and send to 15.215.225.22 with source
     66.236.56.226" tunnel-RemotePhase1"
id=20085 trace_id=2 msgid=20085 trace_id=2 msg="send to 66.236.56.230 via intf-wan1"
```

Testing a proxy operation

To monitor proxy operations in the CLI:

```
diagnose test application <application> <option>
```

To display a list of available application values:

```
diagnose test application ?
```

To display a list of available option values:

```
diagnose test application <application> ?
```

The `<option>` value will depend on the application value used in the command.

For example, if the application is `http`, the CLI command that displays the `<option>` values is:

```
diagnose test application http ?
```

Displaying detail Hardware NIC information

Monitoring the hardware NIC is important because interface errors indicate data link or physical layer issues which may impact the performance of the FortiGate.

To monitor hardware network operations in the CLI:

```
diagnose hardware deviceinfo nic <interface>
```

Sample output:

The following is sample output when the `<interface>` is set to `lan`:

```
System_Device_Name lan
Current_HWaddr 00:09:0f:68:35:60
Permanent_HWaddr 00:09:0f:68:35:60
State up
Link up
Speed 100
Duplex full
[……]
Rx_Packets=5685708
Tx_Packets=4107073
Rx_Bytes=617908014
Tx_Bytes=1269751248
Rx_Errors=0
Tx_Errors=0
Rx_Dropped=0
Tx_Dropped=0
[……]
```

Error descriptions

The `diagnose hardware deviceinfo nic` command displays a list of error names and values that are related to hardware.

The following table describes possible hardware errors:

Field	Description
Rx_Errors = rx error count	Bad frame was marked as error by PHY
Rx_CRC_Errors + Rx_Length_Errors -	This error is only valid in 10/100M mode

Field	Description
Rx_Align_Errors	
Rx_Dropped or Rx_No_Buffer_ Count	Running out of buffer space
Rx_Missed_Errors	Equals Rx_FIFO_Errors + CEXTERR (Carrier Extension Error Count); only valid in 1000M mode, which is marked by PHY
Tx_Errors = Tx_ Aborted_Errors	ECOL (Excessive Collisions Count); only valid in half-duplex mode
Tx_Window_Errors	Late Collisions (LATECOL) Count Late collisions are collisions that occur after 64-byte time into the transmission of the packet while working in 10 to 100 Mb/s data rate and 512-byte time into the transmission of the packet while working in the 1,000 Mb/s data rate. This register only increments if transmits are enabled and the device is in half-duplex mode.
Rx_Dropped	See Rx_Errors
Tx_Dropped	Not defined
Collisions	Total number of collisions experienced by the transmitter; valid in half-duplex mode
Rx_Length_Errors	Transmission length error
Rx_Over_Errors	Not defined
Rx_CRC_Errors	Frame CRC error
Rx_Frame_Errors	Same as Rx_Align_Errors This error is only valid in 10/100M mode.
Rx_FIFO_Errors	Same as Rx_Missed_Errors - a missed packet count
Tx_Aborted_Errors	See Tx_Errors
Tx_Carrier_Errors	The PHY should assert the internal carrier sense signal during every transmission. Failure to do so may indicate that the link has failed or the PHY has an incorrect link configuration. This register only increments if transmits are enabled. This register isn't valid in internal SerDes 1 mode (TBI mode for the 82544GC/EI) and is valid only when the Ethernet controller is operating at full duplex.
Tx_FIFO_Errors	Not defined
Tx_Heartbeat_Errors	Not defined
Tx_Window_Errors	See LATECOL
Tx_Single_Collision_ Frames	Counts the number of times that a successfully transmitted packet encountered a single collision The value increments only if transmits are enabled and the Ethernet controller is in half-duplex mode.

Field	Description
Tx_Multiple_ Collision_Frames	A Multiple Collision Count which indicates the number of times that a transmit encountered more than one collision, but less than 16. The value increments only if transmits are enabled and the Ethernet controller is in half-duplex mode.
Tx_Deferred	Counts defer events. A deferred event occurs when the transmitter cannot immediately send a packet due to: • The medium being busy because another device is transmitting • The IPG timer hasn't expired • Half-duplex deferral events are occurring • XOFF frames are being received • he link is not up. This register only increments if transmits are enabled. This counter does not increment for streaming transmits that are deferred due to TX IPG.
Rx_Frame_Too_ Longs	The Rx frame is oversized
Rx_Frame_Too_ Shorts	The Rx frame is too short
Rx_Align_Errors	This error is only valid in 10/100M mode
Symbol Error Count	Counts the number of symbol errors between reads - SYMERRS. The count increases for every bad symbol that's received, whether or not a packet is currently being received and whether or not the link is up. This register increments only in internal SerDes mode.

Performing a traffic trace

Traffic tracing allows you to follow a specific packet stream. This is useful when you want to confirm that packets are using the route you expect them to take on your network.

To view traffic sessions:

Use this command to view the characteristics of a traffic session though specific security policies.

```
diagnose sys session
```

To trace per-packet operations for flow tracing:

```
diagnose debug flow
```

To trace per-Ethernet frame:

```
diagnose sniffer packet
```

To trace a route from a FortiGate to a destination IP address:

```
# execute traceroute www.fortinet.com
traceroute to www.fortinet.com (66.171.121.34), 32 hops max, 84 byte packets
```

```
1 172.20.120.2 0.637 ms 0.653 ms 0.279 ms
2 209.87.254.221 <static-209-87-254-221.storm.ca> 2.448 ms 2.519 ms 2.458 ms
3 209.87.239.129 <core-2-g0-2.storm.ca> 2.917 ms 2.828 ms 9.324 ms
4 209.87.239.199 <core-3-bdi1739.storm.ca> 13.248 ms 12.401 ms 13.009 ms
5 216.66.41.113 <v502.core1.tor1.he.net> 17.181 ms 12.422 ms 12.268 ms
6 184.105.80.9 <100ge1-2.core1.nyc4.he.net> 21.355 ms 21.518 ms 21.597 ms
7 198.32.118.41 <ny-paix-gni.twgate.net> 83.297 ms 84.416 ms 83.782 ms
8 203.160.228.217 <217-228-160-203.TWGATE-IP.twgate.net> 82.579 ms 82.187 ms 82.066 ms
9 203.160.228.229 <229-228-160-203.TWGATE-IP.twgate.net> 82.055 ms 82.455 ms 81.808 ms
10 203.78.181.2 82.262 ms 81.572 ms 82.015 ms
11 203.78.186.70 83.283 ms 83.243 ms 83.293 ms
12 66.171.127.177 84.030 ms 84.229 ms 83.550 ms
13 66.171.121.34 <www.fortinet.com> 84.023 ms 83.903 ms 84.032 ms
14 66.171.121.34 <www.fortinet.com> 83.874 ms 84.084 ms 83.810 ms
```

Using a session table

A session is a communication channel between two devices or applications across the network. Sessions allow FortiOS to inspect and act on a sequential group of packets in a session all at once instead of inspecting each packet individually. Each session has an entry in the session table that includes important information about the session.

You can view FortiGate session tables from the FortiGate GUI or CLI. The most useful troubleshooting data comes from the CLI. The session table in the GUI also provides useful summary information, particularly the current policy number that the session is using.

When to use a session table

Session tables are useful when verifying open connections. For example, if you have a web browser open to browse the Fortinet website, you would expect a session entry from your computer on port 80 to the IP address for the Fortinet website.

You can also use a session table to investigate why there are too many sessions for FortiOS to process.

GUI

To view session information, go to the *FortiView* page.

For information about FortiView consoles, see FortiView on page 277.

Finding the security policy for a specific connection

Every program and device on your network must have an open communication channel or session to pass information. FortiGate manages these sessions with features such as traffic shaping, antivirus scanning, and blocking known bad websites. Each session will have an entry in the session table.

If a secure web browser session is not working properly, you can check the session table to ensure the session is still active and going to the proper address. The session table can also tell you the security policy number it matches, so you can check what is happening in that policy.

1. Get the connection information.

You need to be able to identify the session you want. To do this, you will need:

- The source IP address (usually your computer)
- The destination IP address (if you have it)
- The port number which is determined by the program you are using. Common ports are:
  - Port 80 (HTTP for web browsing)
  - Port 443 (HTTPS for SSL encrypted web browsing)
  - Port 22 (SSH for Secure Shell)
  - Port 25 (SMTP for Mail Transfer)

2. Find the session and policy ID

Go to *FortiView* > *All Sessions*.

To find your session, search for your source IP address, destination IP address (if you have it), and port number. The policy ID is listed after the destination information.

3. Use filters to find a session

If there are multiple pages of sessions, you can use a filter to hide the sessions you do not need. To filter the sessions in the table, click *Add Filter*, and select an option from the list. You can filter the table by *Destination IP*, *Source IP*, or *Source Port*.

CLI

The session table output in the CLI is very large. The CLI command supports filters to show only the data you need.

To view session data in the CLI:

```
diagnose sys session list
```

An entry is placed in the session table for each traffic session passing through a security policy

To filter session data:

```
diagnose sys session filter <option>
```

The values for `<option>` include the following:

Value	Definition
`clear`	Clear session filter
`dintf`	Destination interface
`dport`	Destination port
`dst`	Destination IP address
`duration`	Duration of the session
`expire`	Expire
`negate`	Inverse filter
`nport`	NAT'd source port

Value	Definition
`nsrc`	NAT'd source ip address
`policy`	Policy ID
`proto`	Protocol number
`proto-state`	Protocol state
`session-state1`	Session state1
`session-state2`	Session state2
`sintf`	Source interface
`sport`	Source port
`src`	Source IP address
`vd`	Index of virtual domain, `-1` matches all

Even though UDP is a sessionless protocol, FortiGate keeps track of the following states:

- When UDP reply does not have a value of 0
- When UDP reply has a value of 1

The following table displays firewall session states from the session table:

State	Description
log	Session is being logged
local	Session is originated from or destined for local stack
ext	Session is created by a firewall session helper
may_dirty	Session is created by a policy For example, the session for `ftp control channel` will have this state but `ftp data channel` won't. This is also seen when NAT is enabled.
ndr	Session will be checked by IPS signature
nds	Session will be checked by IPS anomaly
br	Session is being bridged (TP) mode

Examining the firewall session list

The firewall session list displays all open sessions in FortiGate. Examine the list for strange patterns, such as no sessions apart from the internal network, or all sessions are only to one IP address.

When you examine the firewall session list in the CLI, you can use filters to reduce the output. In the GUI, the filters are part of the interface.

To examine the firewall session list in the GUI:

Go to *FortiView* > *All Sessions*.

To examine the firewall session list in the CLI:

You can use a filter to limit the sessions displayed by source, destination address, port, or NAT'd address. To use more than one filter, enter a separate line for each value.

The following example filters the session list based on a source address of 10.11.101.112:

```
FGT# diagnose sys session filter src 10.11.101.112
FGT# diagnose sys session list
```

The following example filters the session list based on a destination address of 172.20.120.222.

```
FGT# diagnose sys session filter dst 172.20.120.222
FGT# diagnose sys session list
```

To clear all sessions corresponding to a filter:

```
FGT# diagnose sys session filter dst 172.20.120.222
FGT# diagnose sys session clear
```

Checking source NAT information

Checking source NAT is important when you are troubleshooting from the remote end of the connection outside the firewall.

To check the source NAT information in the GUI:

1. Go to *FortiView* > *All Sessions*.
2. Check the values in the *Source Nat Address* and *Source Nat Port* columns. These columns display the IP and port values after NAT has been applied.

Checking the NAT values can help you confirm they are the values you expect, and to ensure the remote end of the sessions can see the expected IP address and port number.

To check the source NAT information in the CLI:

When you display the session list in the CLI, you can match the NAT'd source address (`nsrc`) and port (`nport`). This is useful when multiple internal IP addresses are NAT'd to a common external-facing source IP address.

```
FGT# diagnose sys session filter nsrc 172.20.120.122
FGT# diagnose sys session filter nport 8888
FGT# diagnose sys session list
```

Finding object dependencies

You may be prevented from deleting a configuration object when other configuration objects depend on it. You can use the GUI or CLI to identify objects which depend on, or make reference to the configuration you are trying to delete. Additionally, if you have a virtual interface with dependent objects, you will need to find and remove those dependencies before deleting the interface.

To remove interface object dependencies in the GUI:

1. Go to *Network* > *Interfaces*. The *Ref.* column displays the number of objects that reference this interface.
2. Select the number in the *Ref* . column for the interface. A window listing the dependencies appears.

3. Use these detailed entries to locate and remove object references to this interface. The trash can icon is enabled after all the object dependencies are removed.
4. Remove the interface by selecting the check box for the interface, and select *Delete*.

To find object dependencies in the CLI:

When running multiple VDOMs, use the following command in the global configuration only.

```
diagnose sys cmdb refcnt show <path.object.mkey>
```

The command searches for the named object in both the most recently used global and VDOM configurations.

Examples

To verify which objects a security policy with an ID of 1 refers to:

```
diagnose sys cmdb refcnt show firewall.policy.policyid 1
```

To check what is referred to by interface `port1`:

```
diagnose sys cmdb refcnt show system.interface.name port1
```

To show all dependencies for an interface:

```
diagnose sys cmdb refcnt show system.interface.name <interface name>
```

Sample output:

In this example , the interface has dependent objects, including four address objects, one VIP, and three security policies.

```
entry used by table firewall.address:name '10.98.23.23_host'
entry used by table firewall.address:name 'NAS'
entry used by table firewall.address:name 'all'
entry used by table firewall.address:name 'fortinet.com'
entry used by table firewall.vip:name 'TORRENT_10.0.0.70:6883'
entry used by table firewall.policy:policyid '21'
entry used by table firewall.policy:policyid '14'
entry used by table firewall.policy:policyid '19'
```

Diagnosing NPU-based interfaces

Some Fortinet products contain network processors, such as NP1, NP2, NP4, and NP6. Offloading requirements will vary depending on the model.

To view the initial session setup for NPU-based interfaces:

```
diagnose debug flow
```

- If the session is programmed into the ASIC (fastpath) correctly, the command will not detect the packets that arrive at the CPU.
- If the NPU functionality is disabled, the CPU detects all the packets. However, you should only disable the NPU functionality for troubleshooting purposes.

To diagnose NPU-based interfaces:

1. Get the NP4 or NPU ID and port numbers.
   ```
   diagnose npu {np4|npu6}list
   ```
   The output will look like this:
   ```
   ID Model Slot Interface
   0 On-board port1 fabric1 fabric3 fabric5
   1 On-board fabric2 port2 base2 fabric4
   ```
2. Disable the NPU functionality.
   ```
   diagnose npu {np4|npu6}fastpath disable <dev_id>
   ```
   The `dev_id` is the NP4 or NP6 number.
3. Analyze the packets.
   ```
   diagnose npu {np4|npu6}fastpath-sniffer enable port1
   ```



These commands only apply to the newer NP4 and NP6 interfaces.

The output will look like this:
```
NP4 Fast Path Sniffer on port1 enabled
```
This causes traffic on `port1` of the network processor to be sent to the CPU. This means you can perform a standard sniffer trace and use other diagnostic commands, if it is a standard CPU-driven port.

Running the TAC report

The Technical Assistance Center (TAC) report runs an exhaustive series of diagnostic commands. Some of the commands are only needed if you are using features, such as HA, VPN tunnels, or a modem. Fortinet support my ask you to use the report output to provide information about the current state of your FortiGate.

Due the amount of output generated, the report may take a few minutes to run. If you are logging CLI output to a file, you can run this command to familiarize yourself with the diagnostic commands.

To run the TAC report in the CLI:

```
exec tac report
```

Other commands

You may be asked to provide the following information when you contact Fortinet support.

- ARP table on page 1665
- IP address on page 1668

ARP table

The ARP table is used to determine the destination MAC addresses of the network nodes, as well as the VLANs and ports from where the nodes are reached.

To view the ARP table:

```
# get system arp

Address           Age(min)    Hardware Addr      Interface
10.10.1.3         1           50:b7:c3:75:ea:dd internal7
192.168.0.190     0           28:f1:0e:03:2a:97 wan1
192.168.0.97      0           f4:f2:6d:37:b0:99 wan1
```

To view the ARP cache in the system:

```
# diagnose ip arp list

index=14 ifname=internal7 10.10.1.3 50:b7:c3:75:ea:dd state=00000004 use=2494 confirm=1995
update=374 ref=3
index=5 ifname=wan1 192.168.0.190 28:f1:0e:03:2a:97 state=00000002 use=88 confirm=86
update=977639 ref=2
index=22 ifname=internal 192.168.1.111 00:0c:29:c6:79:3d state=00000004 use=3724
confirm=9724 update=3724 ref=0
index=5 ifname=wan1 224.0.1.140 01:00:5e:00:01:8c state=00000040 use=924202 confirm=930202
update=924202 ref=1
index=5 ifname=wan1 192.168.0.97 f4:f2:6d:37:b0:99 state=00000002 use=78 confirm=486
update=614 ref=26
index=14 ifname=internal7 10.10.1.11 state=00000020 use=172 confirm=1037790 update=78 ref=2
```

ARP request and cache

The FortiGate must make an ARP request when it tries to reach a new destination. The base ARP reachable value determines how often an ARP request it sent; the default is 30 seconds. The actual ARP reachable time is a random number between half and three halves of the base reachable time, or 15 to 45 seconds. The random number is updated every five minutes.

ARP entries in the ARP cache are updated based on the state of the ARP entry and the objects that are using it, as highlighted in the following output sample:

```
index=5 ifname=wan1 224.0.1.140 01:00:5e:00:01:8c state=00000040 use=924202
confirm=930202 update=924202 ref=1
```

There are multiple possible states for an ARP entry, and the state-transition mechanism can be complex. Common states include the following:

State	Meaning	Description
000000002 or 0x02	REACHABLE	An ARP response was received
000000004 or 0x04	STALE	No ARP response within the expected time
000000008 or 0x08	DELAY	A transition state between STALE and REACHABLE before Probes are sent out
000000020 or 0x20	FAILED	Did not manage to resolve within the maximum configured number of probes
000000040 or 0x40	NOARP	Device does not support ARP, e.g. IPsec interface
000000080 or 0x80	PERMANENT	A statically defined ARP entry

An entry that is in the STALE (0x04) or FAILED (0x20) states with no references to it (ref=0) can be deleted. Many factors affect the state-transmit mechanism and if an entry is used by other subsystems. For example, ARP creation, ARP request/reply, neighbor lookup, routing, and others can cause an ARP entry to be in use or referenced.

The garbage collection mechanism runs every 30 seconds, and checks and removes stale and unreferenced entries if they have been stale for longer than 60 seconds. Garbage collection will also be triggered when the number of ARP entries exceeds the configured threshold. If the threshold is exceeded, no entries can be added to the ARP table.

To set the maximum number of ARP entries threshold:

```
config system global
    set arp-max-entry <integer>
end
```

arp-max-entry <integer>	The maximum number of dynamically learned MAC addresses that can be added to the ARP table (131072 to 2147483647, default = 131072).

To clear all of the entries in the ARP table:

```
execute clear system arp table
```

To delete a single ARP entry from the ARP table:

```
diagnose ip arp delete <interface name> <IP address>
```

To add static ARP entries:

```
config system arp-table
    edit 1
        set interface "internal"
        set ip 192.168.50.8
        set mac bc:14:01:e9:77:02
    next
end
```

To view a summary of the ARP table:

```
# diagnose sys device list root

list virtual firewall root info:
ip4 route_cache: table_size=65536 max_depth=2 used=31 total=34
arp: table_size=16 max_depth=2 used=5 total=6
proxy_arp: table_size=256 max_depth=0 used=0 total=0
arp6: table_size=32 max_depth=1 used=3 total=3
proxy_arp6: table_size=256 max_depth=0 used=0 total=0
local table version=00000000 main table version=0000002b
vf=root dev=root vrf=0
vf=root dev=ssl.root vrf=0
...
vf=root dev=internal5 vrf=0
ses=0/0 ses6=0/0 rt=0/0 rt6=0/0
```

IP address

You may want to verify the IP addresses assigned to the FortiGate interfaces are what you expect them to be.

To verify IP addresses:

```
diagnose ip address list
```

The output lists the:

- IP address and mask (if available)
- `index` of the interface (a type of ID number)
- `devname` (the interface name)

While physical interface names are set, virtual interface names can vary. A good way to use this command is to list all of the virtual interface names. For `vsys_ha` and `vsys_fgfm`, the IP addresses are the local host, which are virtual interfaces that are used internally.

Sample output:

```
# diagnose ip address list
IP=10.31.101.100->10.31.101.100/255.255.255.0 index=3 devname=internal
IP=172.20.120.122->172.20.120.122/255.255.255.0 index=5 devname=wan1
IP=127.0.0.1->127.0.0.1/255.0.0.0 index=8 devname=root
IP=127.0.0.1->127.0.0.1/255.0.0.0 index=11 devname=vsys_ha
IP=127.0.0.1->127.0.0.1/255.0.0.0 index=13 devname=vsys_fgfm
```

FortiGuard troubleshooting

The FortiGuard service provides updates to AntiVirus (AV), Antispam (AS), Intrusion Protection Services (IPS), Webfiltering (WF), and more. The FortiGuard Distribution System (FDS) consists of a number of servers across the world that provide updates to your FortiGate unit. Problems can occur with the connection to FDS and its configuration on your local FortiGate unit.

Some of the more common troubleshooting methods are listed here, including:

- Troubleshooting process for FortiGuard updates on page 1669
- FortiGuard server settings on page 1670
- FortiGuard server settings on page 1670

Verifying connectivity to FortiGuard

You can verify FortiGuard connectivity in the GUI and CLI.

To verify FortiGuard connectivity in the GUI:

1. Got to *Dashboard* > *Status*.
2. Check the *Licenses* widget. When FortiGate is connected to FortiGuard, a green check mark appears next to the available FortiGuard services.

To verify FortiGuard connectivity in the CLI:

```
execute ping service.fortiguard.net

execute ping update.fortiguard.net
```

Sample output:

```
FG100D# execute ping service.fortiguard.net
PING guard.fortinet.net (208.91.112.196): 56 data bytes
64 bytes from 208.91.112.196: icmp_seq=0 ttl=51 time=61.0 ms
64 bytes from 208.91.112.196: icmp_seq=1 ttl=51 time=60.0 ms
64 bytes from 208.91.112.196: icmp_seq=2 ttl=51 time=59.6 ms
64 bytes from 208.91.112.196: icmp_seq=3 ttl=51 time=58.9 ms
64 bytes from 208.91.112.196: icmp_seq=4 ttl=51 time=59.2 ms

--- guard.fortinet.net ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max = 58.9/59.7/61.0 ms

FG100D# execute ping update.fortiguard.net
PING fds1.fortinet.com (208.91.112.68): 56 data bytes
64 bytes from 208.91.112.68: icmp_seq=0 ttl=53 time=62.0 ms
64 bytes from 208.91.112.68: icmp_seq=1 ttl=53 time=61.8 ms
64 bytes from 208.91.112.68: icmp_seq=2 ttl=53 time=61.3 ms
64 bytes from 208.91.112.68: icmp_seq=3 ttl=53 time=61.9 ms
64 bytes from 208.91.112.68: icmp_seq=4 ttl=53 time=61.8 ms
```

Troubleshooting process for FortiGuard updates

The following process shows the logical steps you should take when troubleshooting problems with FortiGuard updates:

1. **Does the device have a valid license that includes these services?**
   Each device requires a valid FortiGuard license to access updates for some or all of these services. You can verify the status of the support contract for your devices at the Fortinet Support website.
2. **If the device is part of a high availability (HA) cluster, do all members of the cluster have the same level of support?**
   You can verify the status of the support contract for all of the devices in your HA cluster at the Fortinet Support website.
3. **Are services enabled on the device?**
   To see the FortiGuard information and status for a device in the GUI, go to *System* > *FortiGuard*.
   Use this page to verify the status of each component, and enable each service.
4. **Can the device communicate with FortiGuard servers?**
   Go to *System* > *FortiGuard* in the GUI, and try to update AntiVirus and IPS, or test the availability of Web Filtering and AS default and alternate ports.
5. **Is there proper routing to reach the FortiGuard servers?**
   Ensure there is a static or dynamic route that allows your FortiGate to reach the FortiGuard servers. Usually a generic default route to the internet is enough, but you may need to verify this if your network is complex.
6. **Are there issues with DNS?**
   An easy way to test this is to attempt a traceroute from behind the FortiGate to an external network using the Fully Qualified Domain Name (FQDN) for a location. If the traceroute FQDN name doesn't resolve, you have general DNS problems.

7. **Is there anything upstream that might be blocking FortiGuard traffic, either on the network or ISP side?**
   Many firewalls block all ports, by default, and ISPs often block ports that are low. There may be a firewall between the FortiGate and the FortiGuard servers that's blocking the traffic. By default, FortiGuard uses port 53. If that port is blocked you need to either open a hole for it or change the port it is using.
8. **Is there an issue with source ports?**
   It is possible that ports that FortiGate uses to contact FortiGuard are being changed before they reach FortiGuard or on the return trip before they reach FortiGate. A possible solution for this is to use a fixed-port at NAT'd firewalls to ensure the port remains the same. You can use packet sniffing to find more information about what's happening with ports.
9. **Are there security policies that include antivirus?**
   If none of the security policies include antivirus, the antivirus database will not be updated. If antivirus is included, only the database type that's used will be updated.

FortiGuard server settings

Your local FortiGate connects to remote FortiGuard servers to get updates to FortiGuard information, such as new viruses that may have been found or other new threats.

This section provides methods to display FortiGuard server information on your FortiGate, and how to use that information and update it to fix potential problems.

Displaying the server list

To get a list of FDS servers FortiGate uses to send web filtering requests:

```
get webfilter status
```

or

```
diagnose debug rating
```

Rating requests are only sent to the server at the top of the list in normal operation. Each server is probed for Round Trip Time (RTT) every two minutes.

Optionally, you can add a refresh rate to the end of the command to determine how often the server list is refreshed.

Rating may not be enabled on your FortiGate.

Sample output:

```
Locale : english
License : Contract
Expiration : Thu Oct 9 02:00:00 2011
-=- Server List (Mon Feb 18 12:55:48 2008) -=-
```

IP	Weight	RTT	Flags	TZ	Packets	CurrLost	TotalLost
a.b.c.d	0	1	DI	2	1926879	0	11176
10.1.101.1	10	329		1	10263	0	633
10.2.102.2	20	169		0	16105	0	80

10.3.103.3	20	182	0	6741	0	776
10.4.104.4	20	184	0	5249	0	987
10.5.105.5	25	181	0	12072	0	178

Output details

The server list includes the IP addresses of alternate servers if the first entry cannot be reached. In this example, the IP addresses are not public addresses.

The following flags in `get webfilter status` indicate the server status:

Flag	Description
D	The server was found through the DNS lookup of the hostname. If the hostname returns more than one IP address, all of them are flagged with D and are used first for INIT requests before falling back to the other servers.
I	The server to which the last INIT request was sent
F	The server hasn't responded to requests and is considered to have failed
T	The server is currently being timed
S	Rating requests can be sent to the server. The flag is set for a server only in two cases: • The server exists in the servers list received from the (Undefined variable: FortinetVariables.ProductName1) or any other INIT server. • The server list received from the (Undefined variable: FortinetVariables.ProductName1) is empty so the (Undefined variable: FortinetVariables.ProductName1) is the only server that the (Undefined variable: FortinetVariables.ProductName6) knows and it should be used as the rating server.

Sorting the server list

The server list is sorted first by weight. The server with the smallest RTT appears at the top of the list, regardless of weight. When a packet is lost (there has been no response in 2 seconds), it is re-sent to the next server in the list. Therefore, the top position in the list is selected based on RTT, while the other positions are based on weight.

Calculating weight

The weight for each server increases with failed packets and decreases with successful packets. To lower the possibility of using a remote server, the weight isn't allowed to dip below a base weight. The base weight is calculated as the difference in hours between the FortiGate and the server multiplied by 10. The farther away the server is, the higher its base weight is and the lower it appears in the list.

Additional resources

To learn more about FortiGate and FortiOS, as well information about technical issues, please refer to the following resources:

Technical documentation

Installation, Administration, and Quick Start Guides, as well as other technical documents, are available online at the Fortinet Document Library

Fortinet video library

The Fortinet Video Library hosts a collection of video which provide valuable information about Fortinet products.

Release notes

Issues that arise after the technical documentation has been published will often be listed in the Release Notes. To find these, go to the Fortinet Document Library.

Knowledge base

The Fortinet Knowledge Base provides access to a variety of articles, white papers, and other documentation that provides technical insight into a range of Fortinet products. The Knowledge Base is available online at: https://kb.fortinet.com

Fortinet technical discussion forums

An online technical forum allows administrators to contribute to discussions about issues that relate to their Fortinet products. Searching the forum can help an administrator identify if an issue has been experienced by another user. You can access the support forums at: https://forum.fortinet.com/

Fortinet training services online campus

The Fortinet Training Services Online Campus hosts a collection of tutorials and training materials which you can use to increase your knowledge of Fortinet products. https://www.fortinet.com/training.html

Fortinet Support

You defined your problem, researched a solution, put together a plan to find the solution, and executed that plan. At this point, if the problem hasn't been solved, it's time to contact Fortinet Support for assistance.





Copyright© 2022 Fortinet, Inc. All rights reserved. Fortinet®, FortiGate®, FortiCare® and FortiGuard®, and certain other marks are registered trademarks of Fortinet, Inc., in the U.S. and other jurisdictions, and other Fortinet names herein may also be registered and/or common law trademarks of Fortinet. All other product or company names may be trademarks of their respective owners. Performance and other metrics contained herein were attained in internal lab tests under ideal conditions, and actual performance and other results may vary. Network variables, different network environments and other conditions may affect performance results. Nothing herein represents any binding commitment by Fortinet, and Fortinet disclaims all warranties, whether express or implied, except to the extent Fortinet enters a binding written contract, signed by Fortinet's General Counsel, with a purchaser that expressly warrants that the identified product will perform according to certain expressly-identified performance metrics and, in such event, only the specific performance metrics expressly identified in such binding written contract shall be binding on Fortinet. For absolute clarity, any such warranty will be limited to performance in the same ideal conditions as in Fortinet's internal lab tests. In no event does Fortinet make any commitment related to future deliverables, features or development, and circumstances may change such that any forward-looking statements herein are not accurate. Fortinet disclaims in full any covenants, representations, and guarantees pursuant hereto, whether express or implied. Fortinet reserves the right to change, modify, transfer, or otherwise revise this publication without notice, and the most current version of the publication shall be applicable.