Quick installation guide
Model: U19

1.Panel Layout

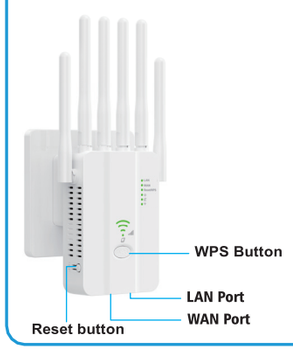

LED Explanation

Name	Status	Indication
	Red	Power indicator
	On	The 2.4GHz wireless band is enabled.
	Off	The 2.4GHz wireless band is disabled.
WPS	Blinking Blue	WPS connection is in process. This may take up to 2 minutes.
	Blinking Green	The extender is connected to the Internet.
	Solid orange	The U8 router is connected to the Host router, but is too far away from the Host router.
	Solid green	The U8 router is connected to the router, and is in a good location.
	Blinking green	One powered-on device is connected to the router s LAN / WAN port.
	Off	No powered-on device is connected to the router s LAN / WAN port.

Button and port Explanation

Item	Description
Reset Button	Pressand hold this button for more than 5 seconds to reset the router to its factory default settings.
WPS Button	Pressthis button to enable the WPS function
LAN / WAN port	For connecting to a DSL/Cable modem, or an Ethernet jack.

WiFi Repeater mode

In this mode, the router boosts the existing wireless coverage in your home.

1 Connect Your Router

Plug the extender into an electrical outlet near your host router, and then wait until the LED is on and then off.

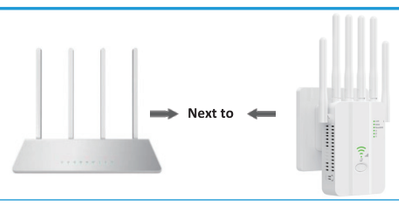

2 Configure repeater mode

Method ONE Using WPS (Wi-Fi Protected Setup)

Using WPS is an easier way to extend your host network.You are recommended to use this method if your hostrouter has the WPS button. The button might look like one of these: , If not, please refer to **Method Two**

Connect

1.Press the WPS button on your router

2.Within 2 minutes, press the wps buttonon the extender for 1 second.

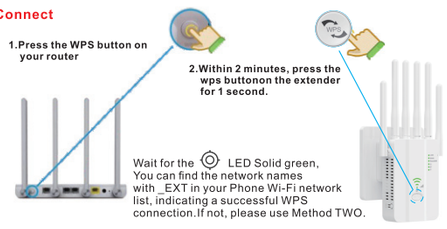

Wait for the LED Solid green, You can find the network names with _EXT in your Phone Wi-Fi network list, indicating a successful WPS connection.If not, please use Method TWO.

Relocate

1.Plug the extender into an electrical outlet between your router (Host Network) and the Wi-Fi "dead" zone.
The location you choose must be within the range of your existing host network.

2. Wait until the LED is lit and solid Green. If not, relocate it closer to the router to achieve a good (or better) signal quality.

Enjoy! Extended Network Names: Host Router's network name with _EXT at the end
Extended networks Password:Share the same passwords as those of your host networks

Method TWO Using a Web Browser

For Mobile phone users
Connect to the U19 router
1.Find the SSID(Network Name) printed on the lable of the U19 router.
2.Connect your Mobile phone to the U19 router's network

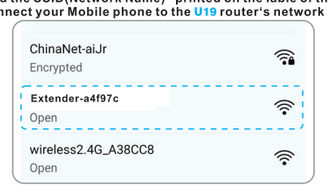

Connect to the extender'network: Extender-a4f97c
(The SSID on the lable of the U19 router)

3 Mode selection

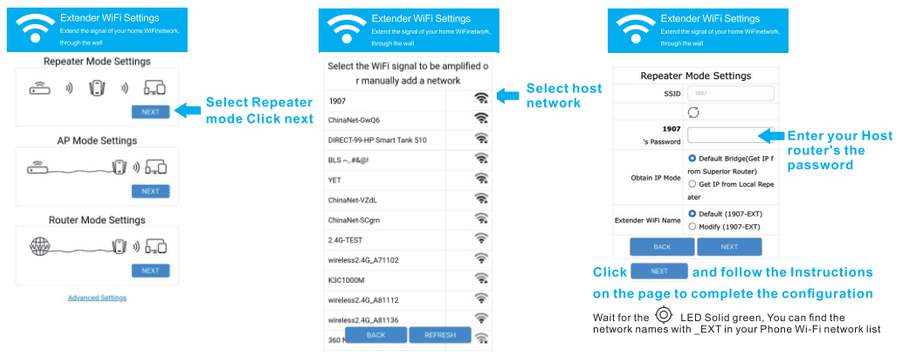

Click NEXT and follow the Instructions on the page to complete the configuration

Wait for the LED Solid green, You can find the network names with _EXT in your Phone Wi-Fi network list

Relocate

1.Plug the extender into an electrical outlet between your router (Host Network) and the Wi-Fi "dead" zone.
The location you choose must be within the range of your existing host network.

2. Wait until the LED is lit and solid Green. If not, relocate it closer to the router to achieve a good (or better) signal quality.

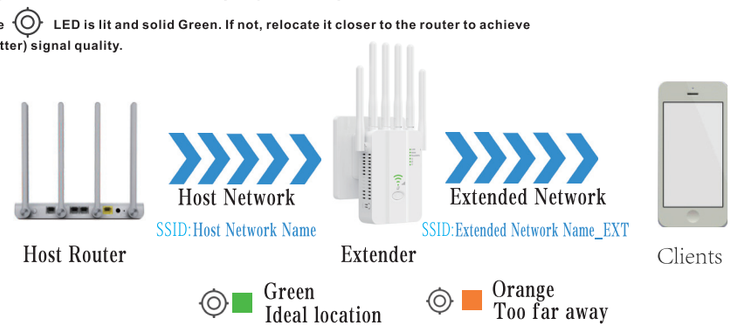

Enjoy! Extended Network Names: Host Router's network name with _EXT at the end, but may have different SSIDs (network names) if you have customized them during the configuration.
Extended networks Password:Share the same passwords as those of your host networks.

Frequently Asked Questions(FAQ)

Q1. What can I do if the login window does not appear?
- If the computer is set to a static or fixed IP address, change the setting to obtain an IP address automatically.
- Verify if http://192.168.11.1 is correctly entered I in the web browser.
- Make sure your computer is connected to the Mini Router's network.
- Use another web browser and try again.
- Reboot your router and try again.
- Disable the network adapter used currently and then enable it again.

Q2. What can I do if I cannot access the Internet?
- Check if the internet is working properly by connecting a computer directly to the modem via Ethernet cable. If not, connect your internet provider.
- Reboot your router and try again.

Q3. How do I restore the router to its factory default setting?
- While the router is powered on, press and hold the reset button on the rear panel of the router for approximately 5 seconds.

Q4. Why set the repeater mode is unsuccessfully?
- You may have typed in the router's wireless password incorrectly, please log in and check the wireless password.
- The Mini router may be out of range, please move it closer to the router.
- Please reset the Mini Router and go through the configuration again.

A.If you need reset the extender. You need press and hold the reset button inside the tiny hole for 10 seconds.

AP mode

In this mode, the router transforms your existing wired network to a wireless .

1.Connect Your Router

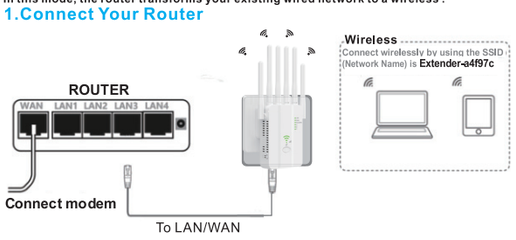

2.Connect to the U19 router

For Mobile phone users
1.Find the SSID(Network Name) printed on the lable of the U19 router.
2.Connect your Mobile phone to the U19 router's network

Connect to the extender'network: Extender-a4f97c
(The SSID on the lable of the U19 router)

3. Mode selection

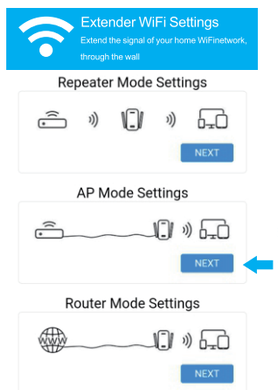

4.Set wifi password

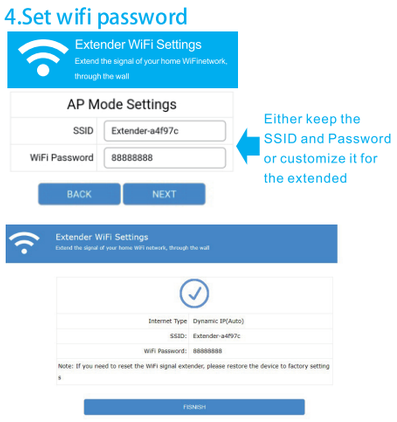

5.Device restart



Frequently Asked Questions(FAQ)

Q1. What can I do if the login window does not appear?
- If the computer is set to a static or fixed IP address, change the setting to obtain an IP address automatically.
- Verify if http://192.168.11.1 is correctly entered I in the web browser.
- Make sure your computer is connected to the Mini Router's network.
- Use another web browser and try again.
- Reboot your router and try again.
- Disable the network adapter used currently and then enable it again.

Q2. What can I do if I cannot access the Internet?
- Check if the internet is working properly by connecting a computer directly to the modem via Ethernet cable. If not, connect your internet provider.
- Reboot your router and try again.

Q3. How do I restore the router to its factory default setting?
- While the router is powered on, press and hold the reset button on the rear panel of the router for approximately 5 seconds.

Q4. Why set the repeater mode is unsuccessfully?
- You may have typed in the router's wireless password incorrectly, please log in and check the wireless password.
- The Mini router may be out of range, please move it closer to the router.
- Please reset the Mini Router and go through the configuration again.

A.If you need reset the extender. You need press and hold the reset button inside the tiny hole for 10 seconds.

Router mode

1.Connect Your Router

If your Internet connection is through a DSL/Cable modem,follow steps 1,2 and 4 to complete the hardware connections.
If your Internet connection is through an Ethernet cable form the wall,follow steps 3 and 4 to complete the hardware connections.

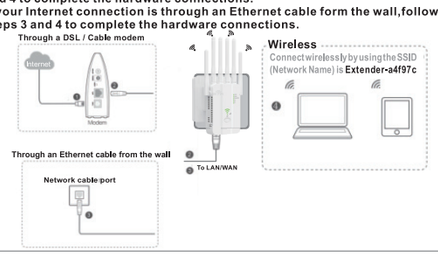

2.Connect to the U19 router

For Mobile phone users
1.Find the SSID(Network Name) printed on the lable of the U19 router.
2.Connect your Mobile phone to the U19 router's network

Connect to the extender'network: Extender-a4f97c
(The SSID on the lable of the U19 router)

3. Mode selection

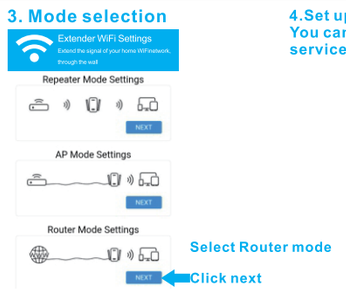

4.Set up Your Internet Connection

You can modify the settings according to the service information provided by your ISP.

5.Click Finish to restart the device

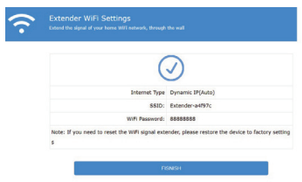

1.Set up Your Internet Connection

You can modify the settings according to the service information provided by your ISP.

② If you choose Static IP,enter the information provided by your ISP in the corresponding fields.

Click NEXT and follow the prompts on the page to complete the Router mode configuration

1.Set up Your Internet Connection

You can modify the settings according to the service information provided by your ISP.

② If you choose PPPoE,enter the username and password provided by your ISP.
PPPoE users usually have DSL cable modems.

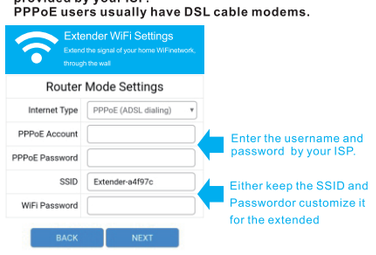

Click NEXT and follow the prompts on the page to complete the Router mode configuration

Enjoy! Connect to the Extended networks (default SSID and passwork) and enjoy internet.but may have different network name and passwordd, if you have customized them during the configuration.

FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.