Test Graphs

Freq. Stability NVNT ac20 5260MHz Ant1

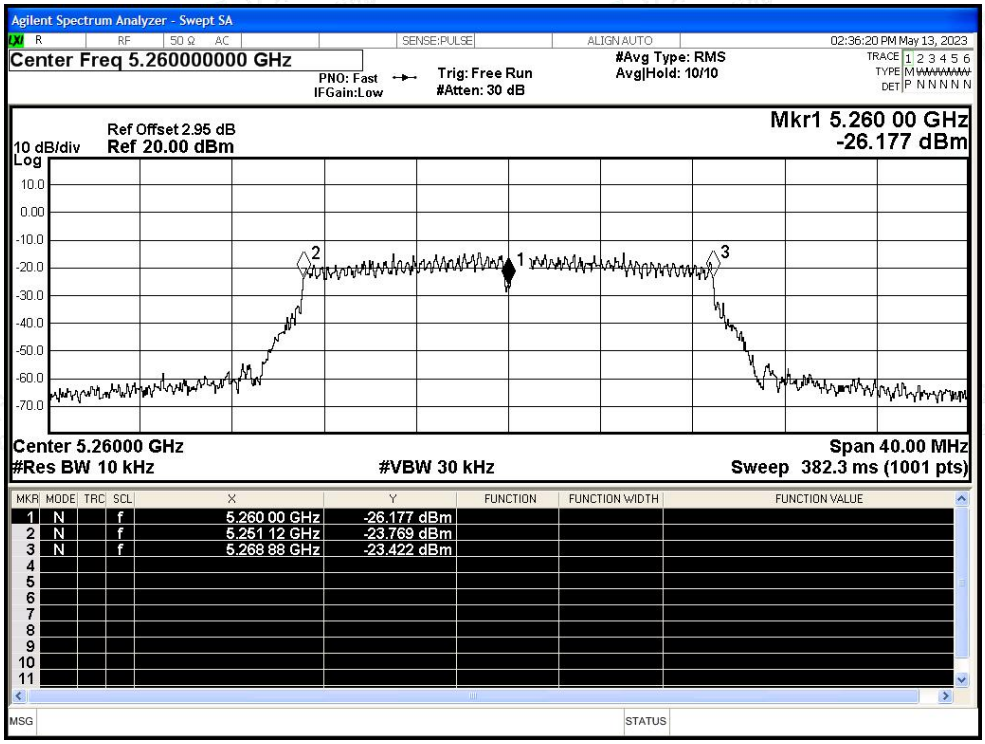

Freq. Stability NVNT ac20 5300MHz Ant1

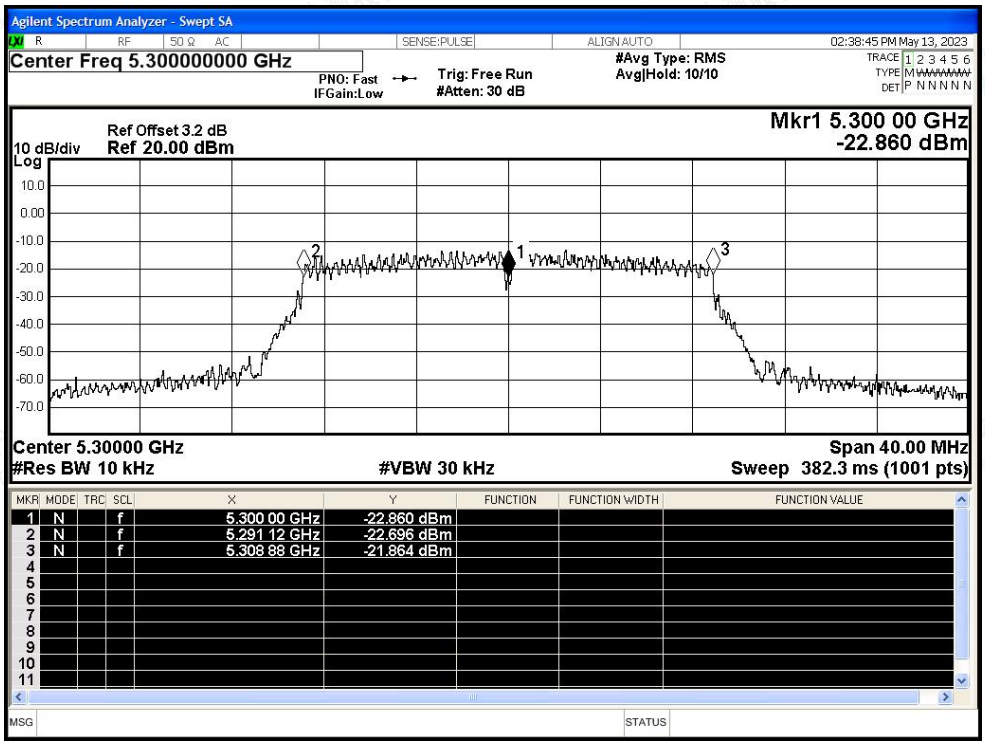

Freq. Stability NVNT ac20 5320MHz Ant1

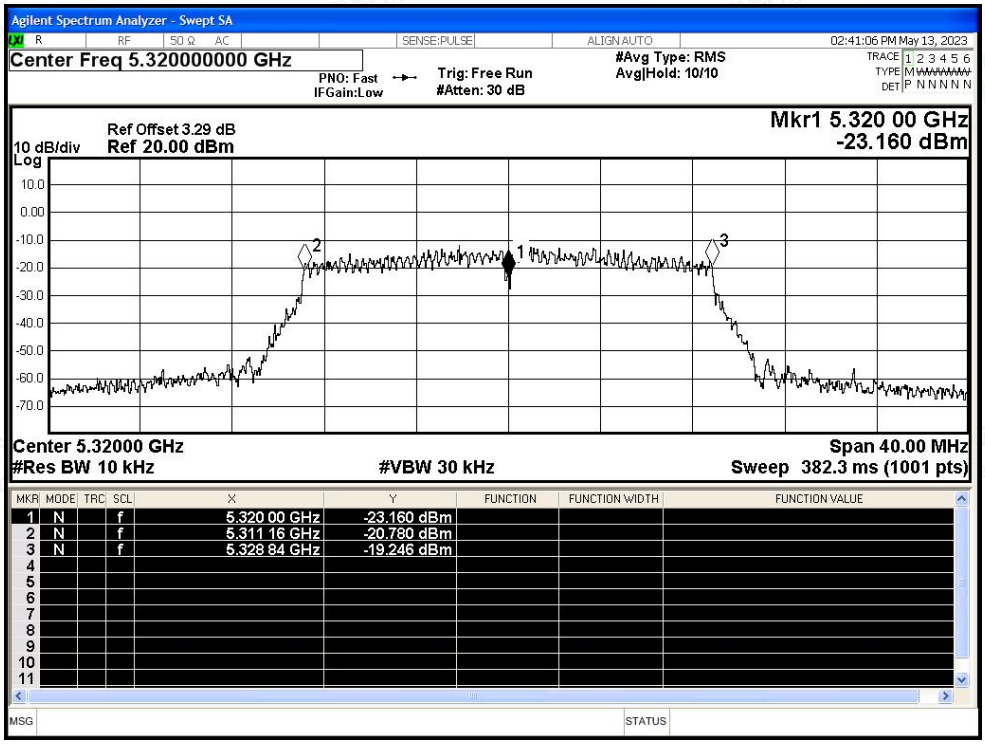

Freq. Stability NVNT ac40 5270MHz Ant1

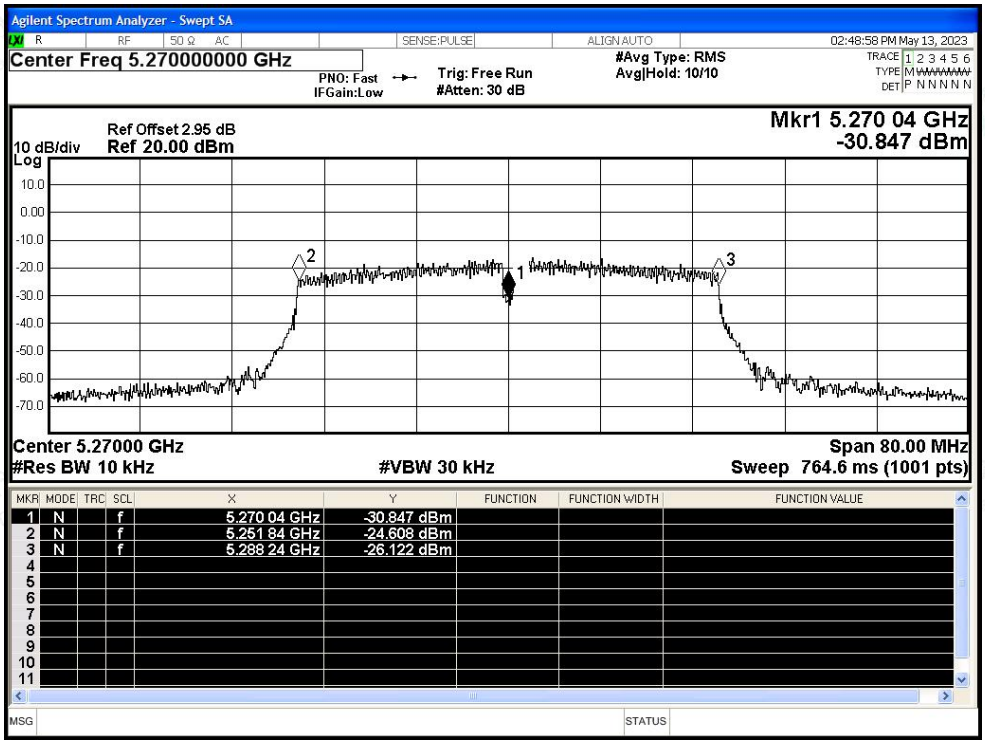

Freq. Stability NVNT ac40 5310MHz Ant1

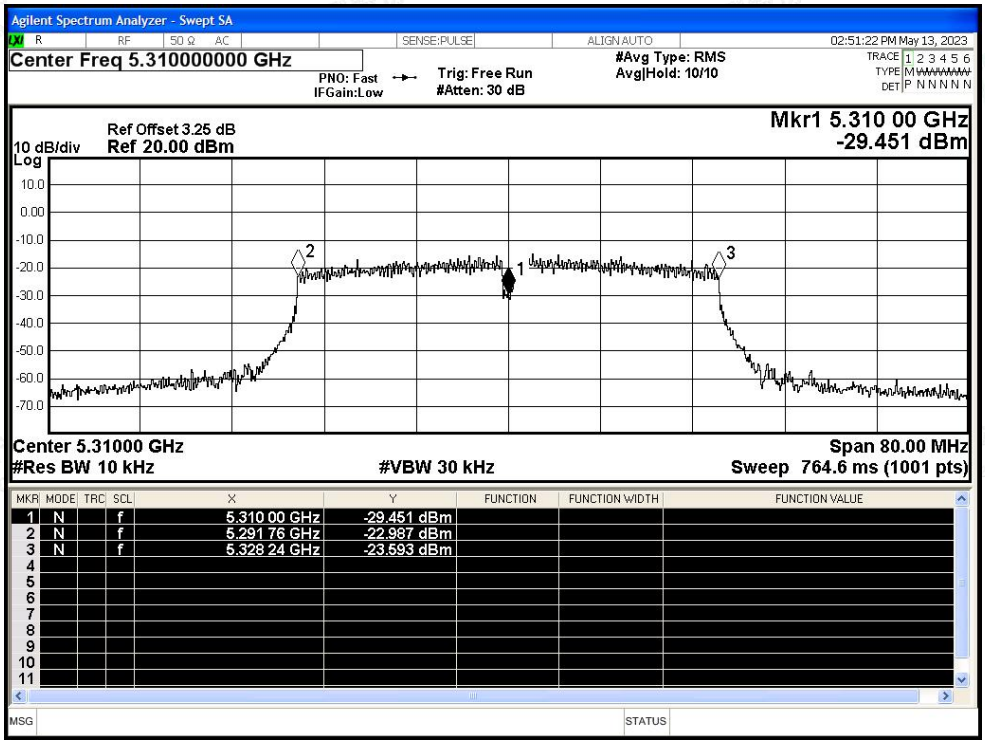

Freq. Stability NVNT ac80 5290MHz Ant1

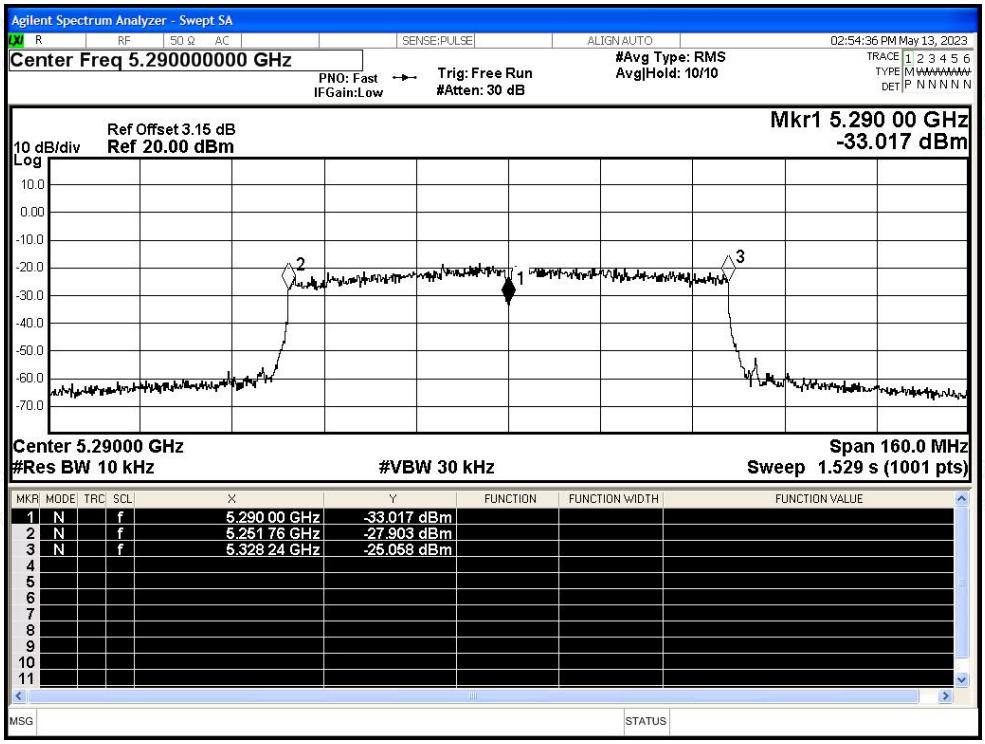

E.6 Duty Cycle

Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5260	Ant0	96.87	0.14	0.72
NVNT	a	5300	Ant0	96.94	0.13	0.72
NVNT	a	5320	Ant0	96.87	0.14	0.72
NVNT	n20	5260	Ant0	96.73	0.14	0.77
NVNT	n20	5300	Ant0	96.73	0.14	0.77
NVNT	n20	5320	Ant0	96.73	0.14	0.77
NVNT	n40	5270	Ant0	93.93	0.27	1.54
NVNT	n40	5310	Ant0	93.64	0.29	1.54
NVNT	ac20	5260	Ant0	96.76	0.14	0.76
NVNT	ac20	5300	Ant0	96.76	0.14	0.76
NVNT	ac20	5320	Ant0	96.76	0.14	0.76
NVNT	ac40	5270	Ant0	93.82	0.28	1.53
NVNT	ac40	5310	Ant0	93.68	0.28	1.53
NVNT	ac80	5290	Ant0	88.04	0.55	3.09

Test Graphs

Duty Cycle NVNT a 5260MHz Ant0

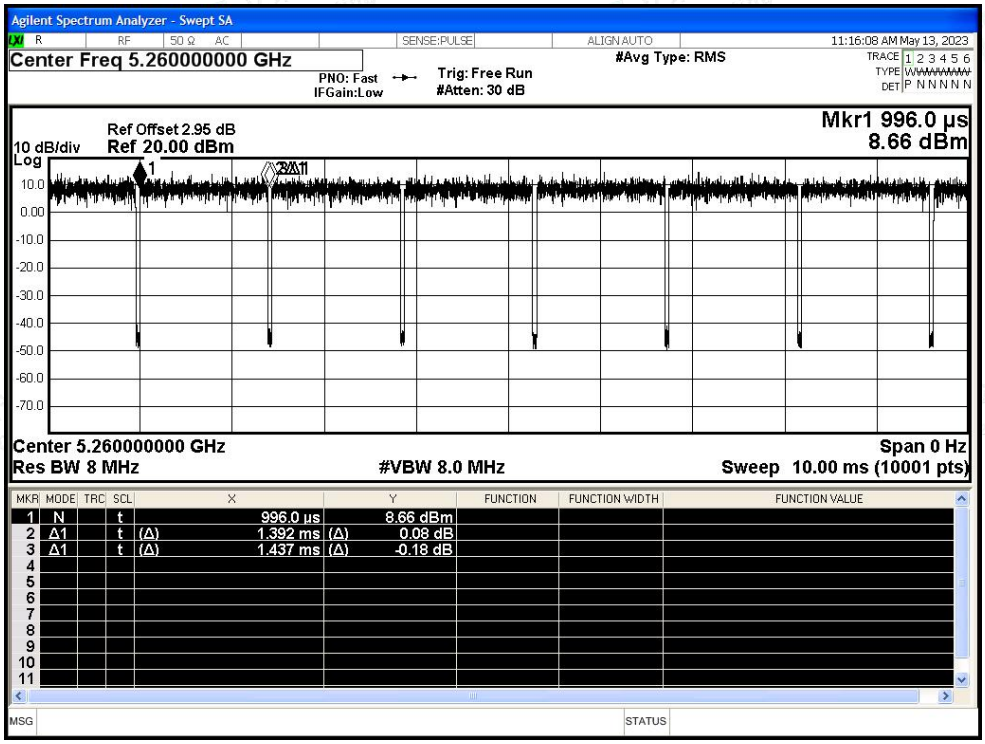

Duty Cycle NVNT a 5300MHz Ant0

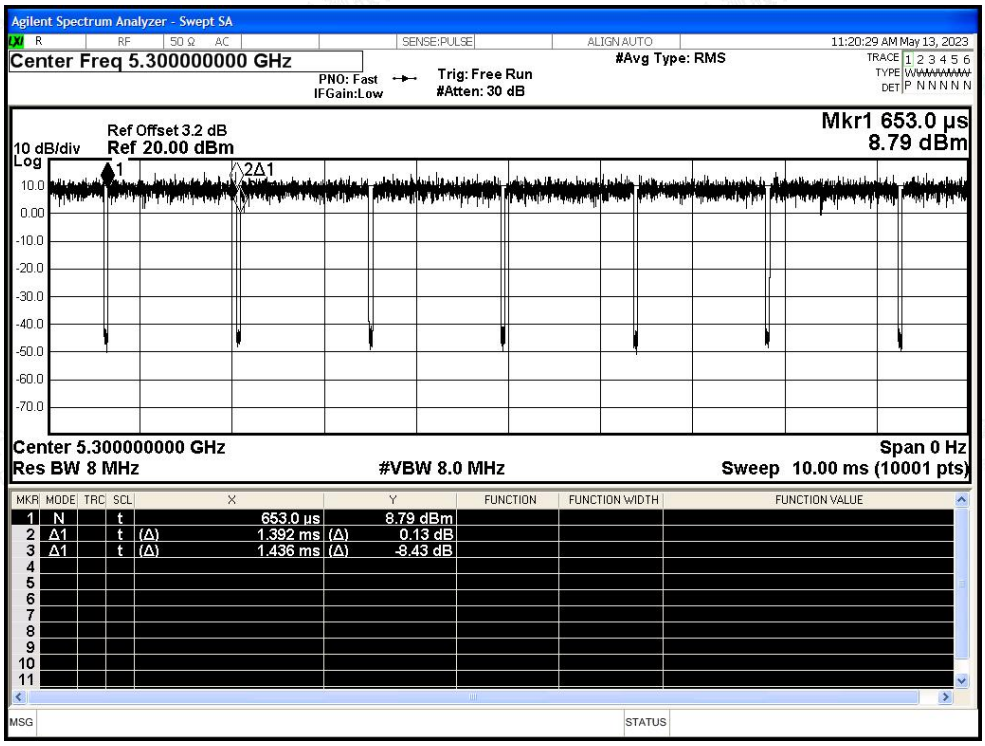

Duty Cycle NVNT a 5320MHz Ant0

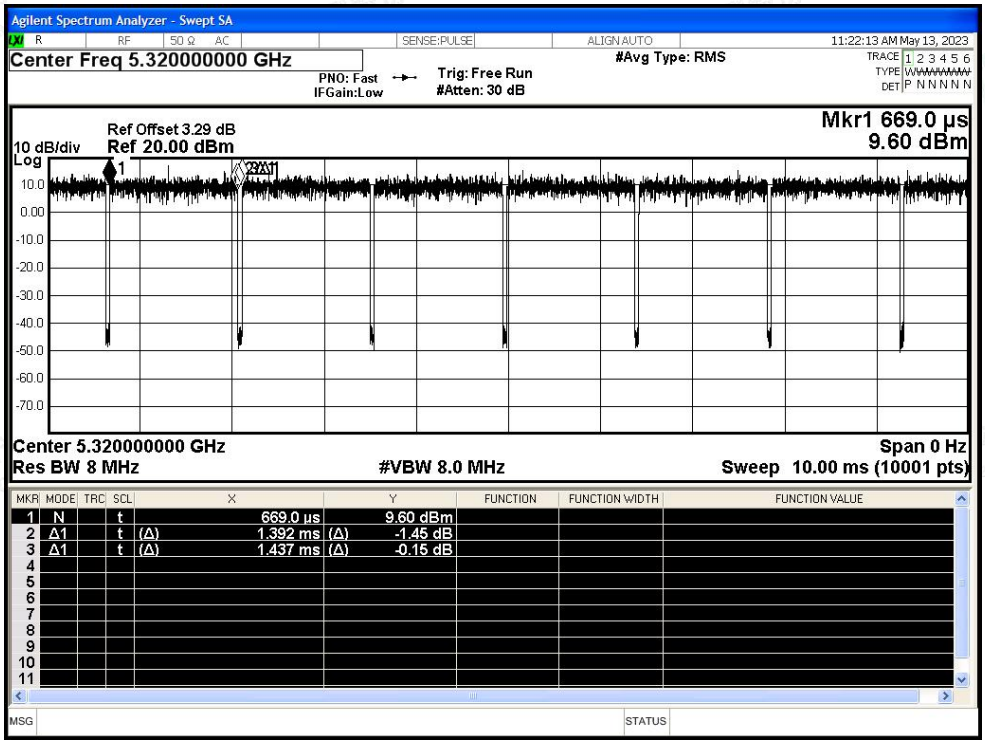

Duty Cycle NVNT n20 5260MHz Ant0

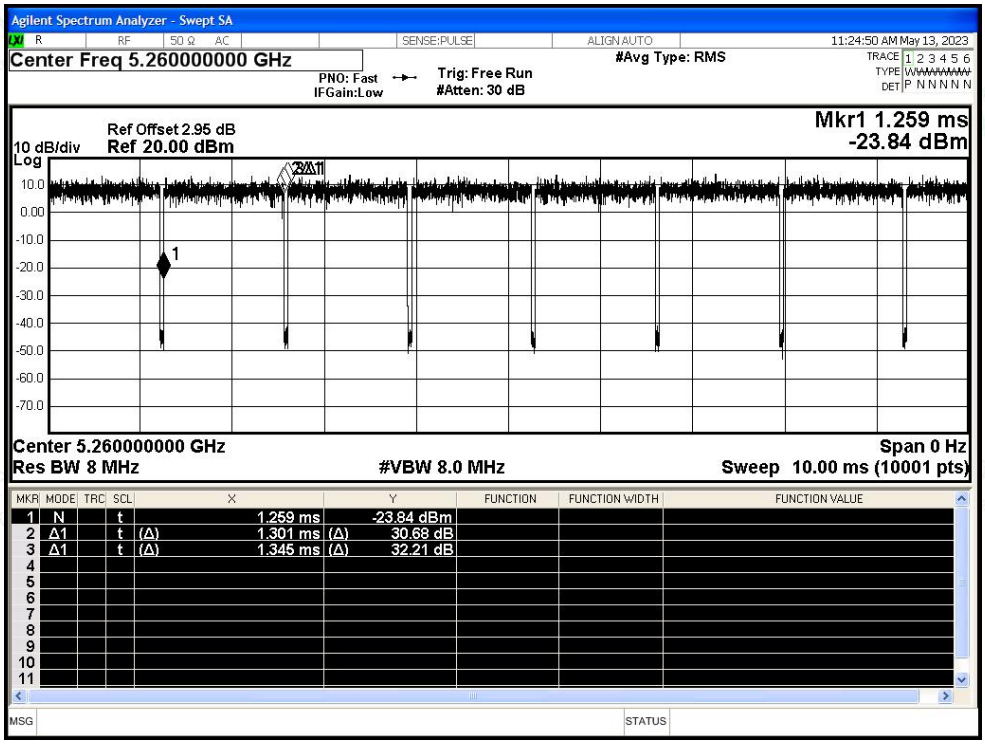

Duty Cycle NVNT n20 5300MHz Ant0

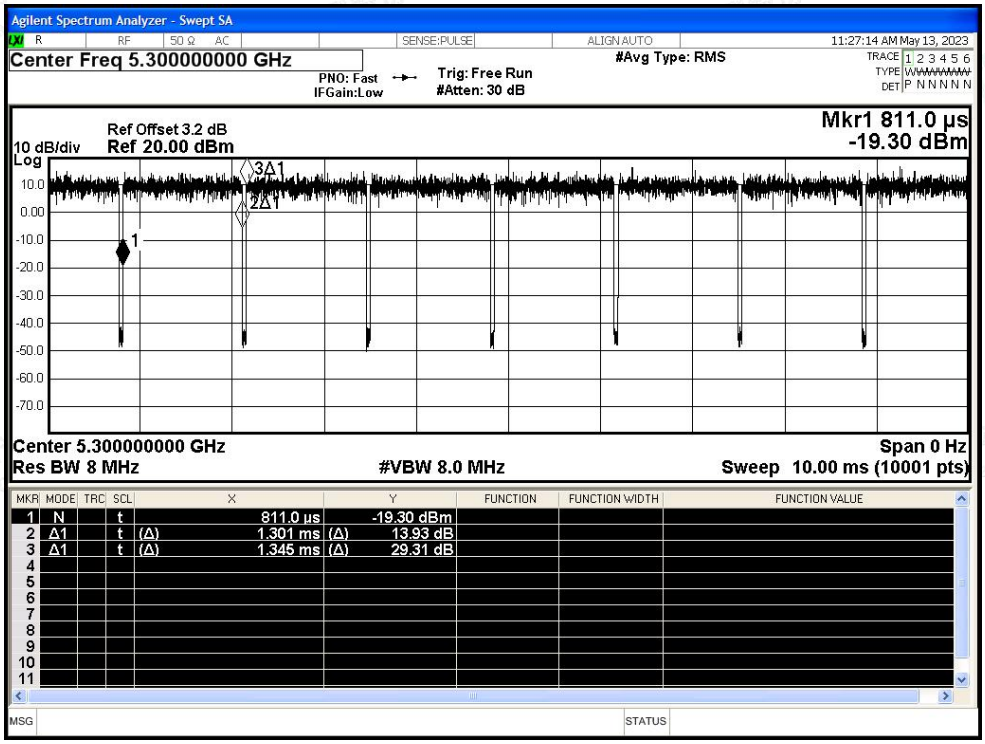

Duty Cycle NVNT n20 5320MHz Ant0

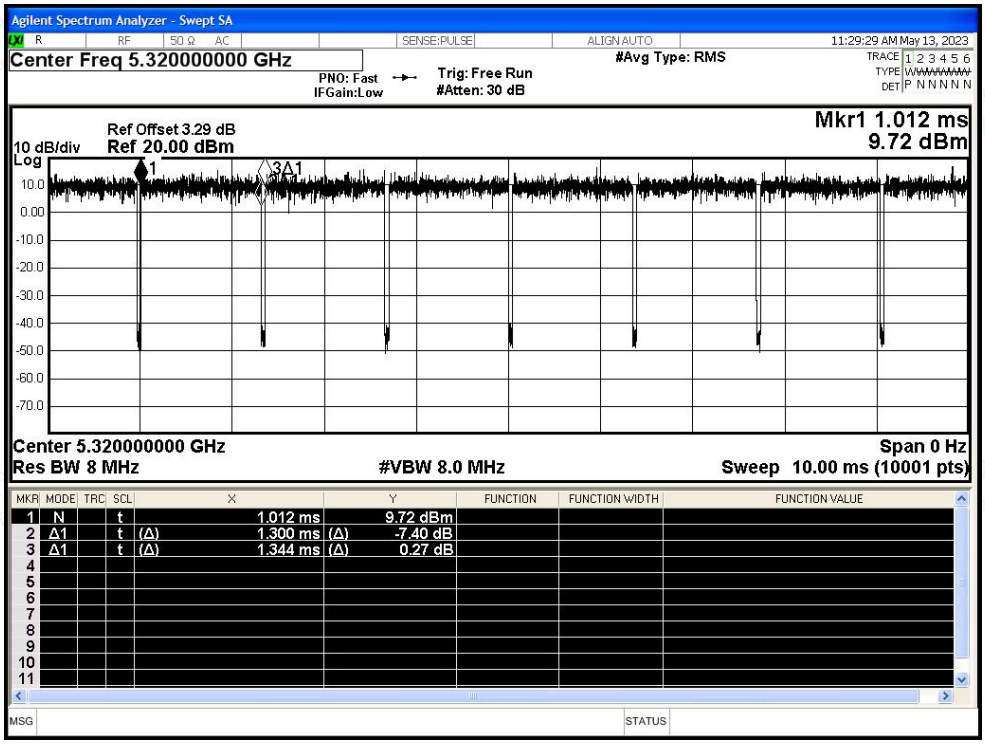

Duty Cycle NVNT n40 5270MHz Ant0

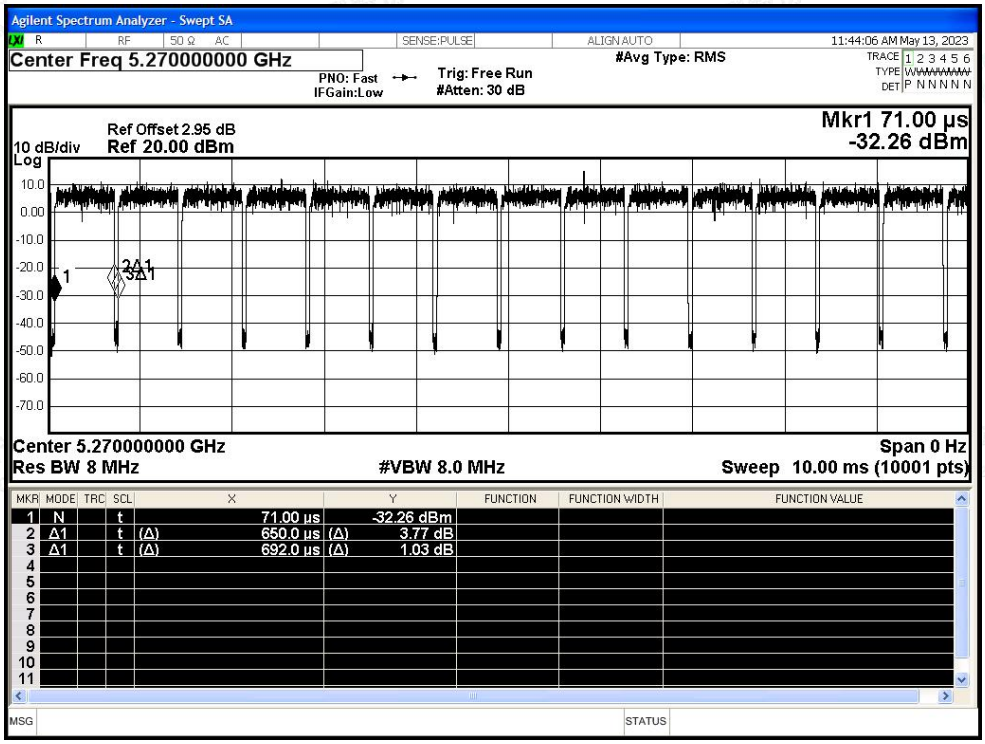

Duty Cycle NVNT n40 5310MHz Ant0

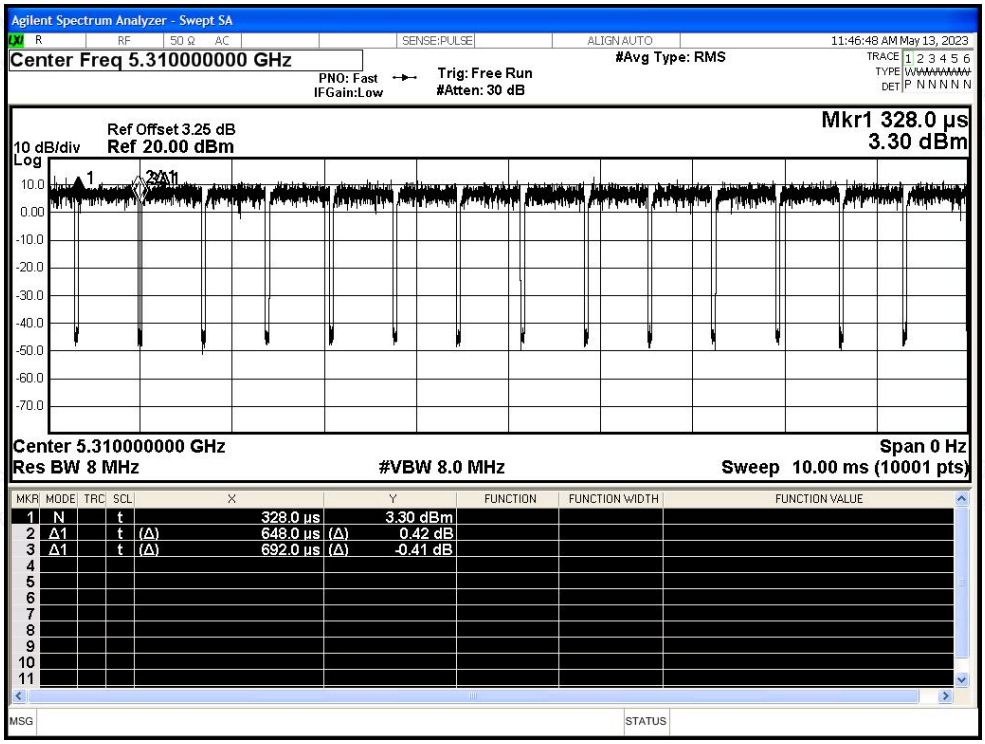

Duty Cycle NVNT ac20 5260MHz Ant0

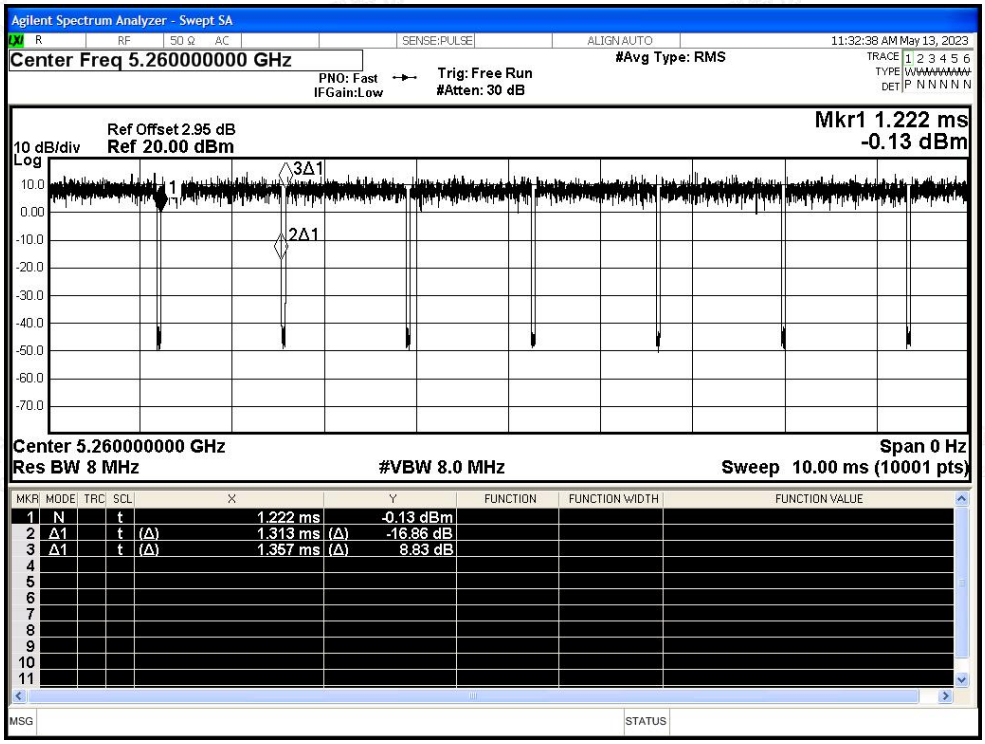

Duty Cycle NVNT ac20 5300MHz Ant0

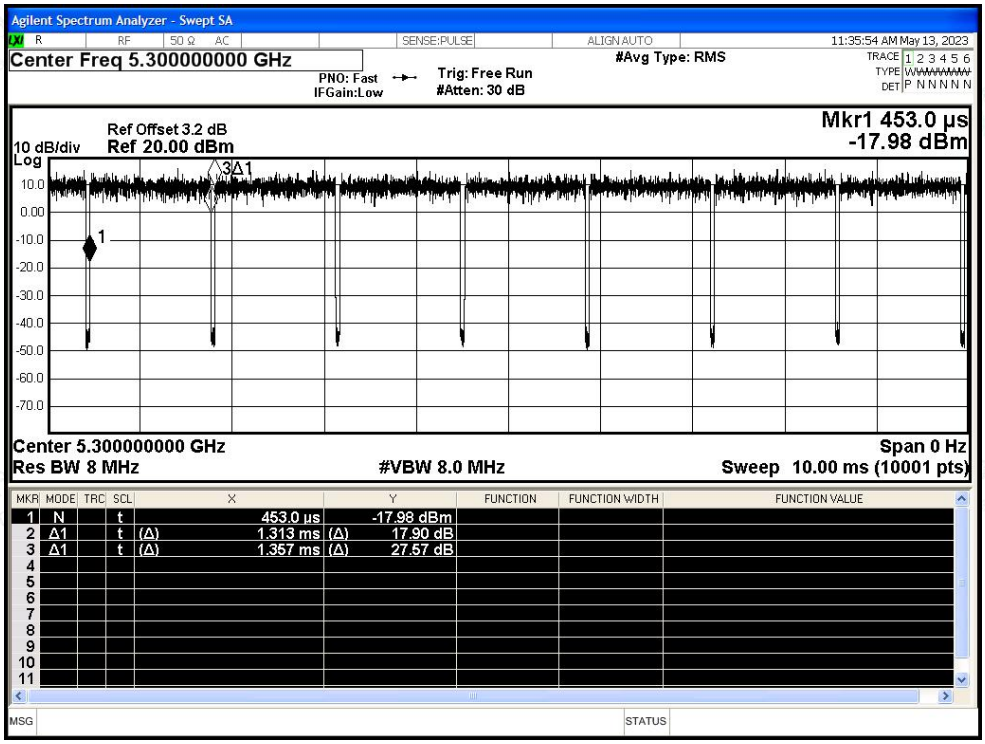

Duty Cycle NVNT ac20 5320MHz Ant0

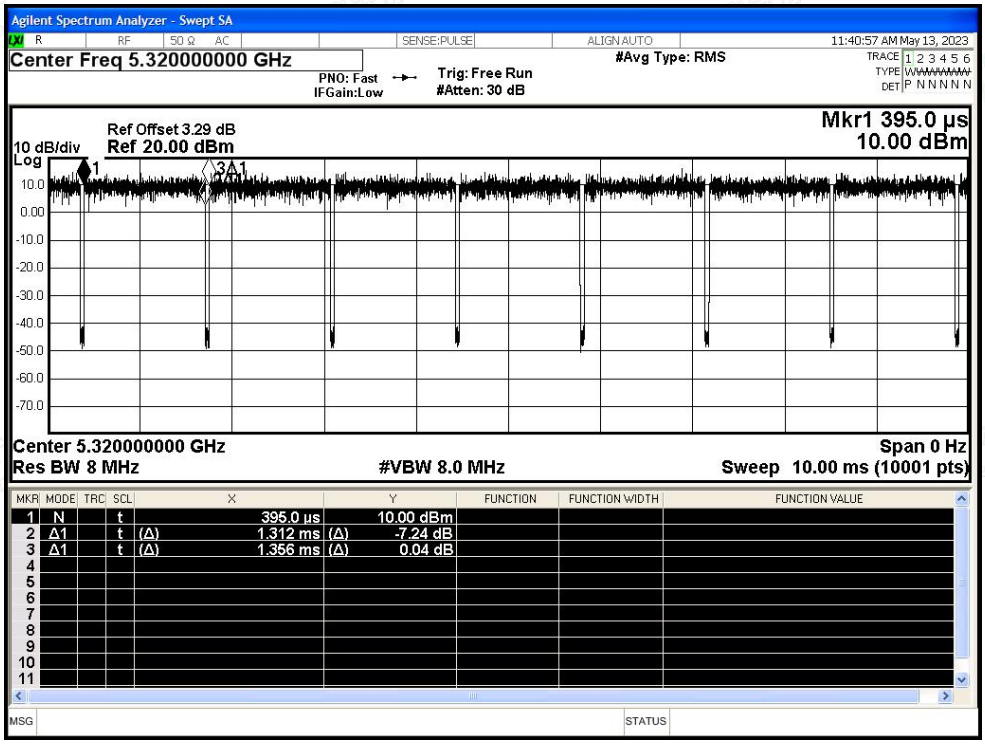

Duty Cycle NVNT ac40 5270MHz Ant0

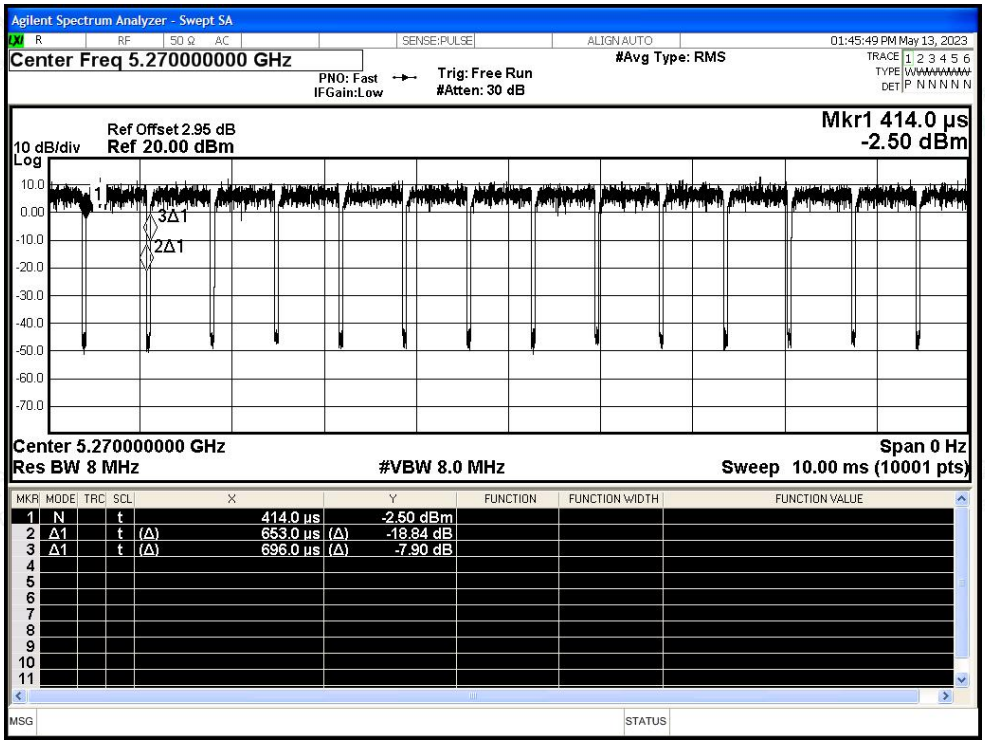

Duty Cycle NVNT ac40 5310MHz Ant0

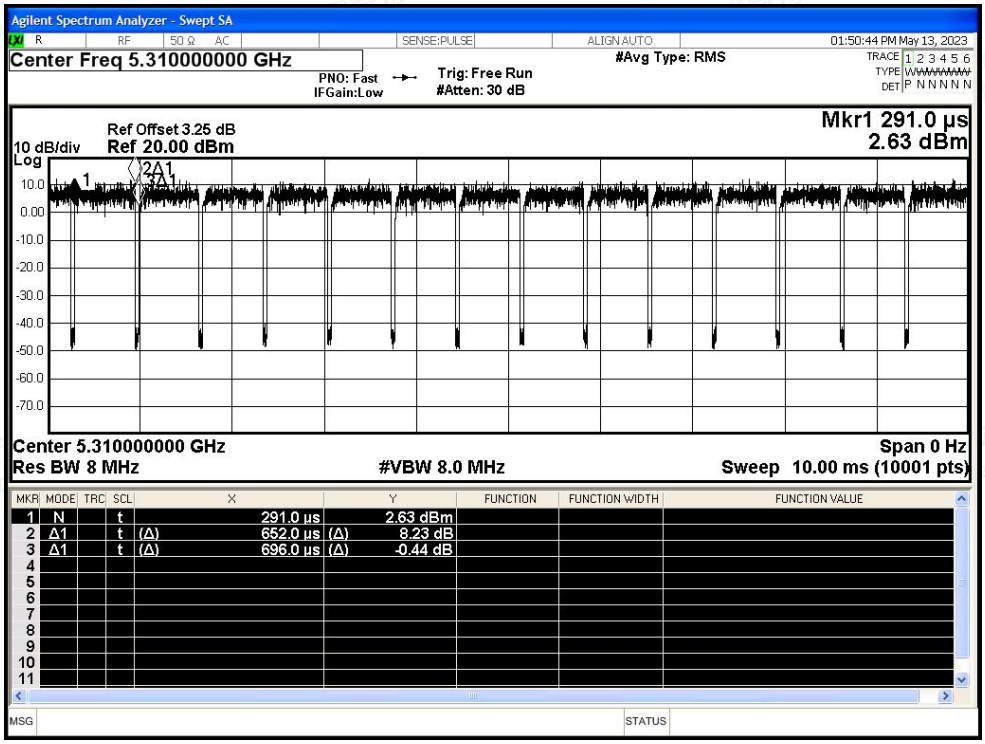

Duty Cycle NVNT ac80 5290MHz Ant0

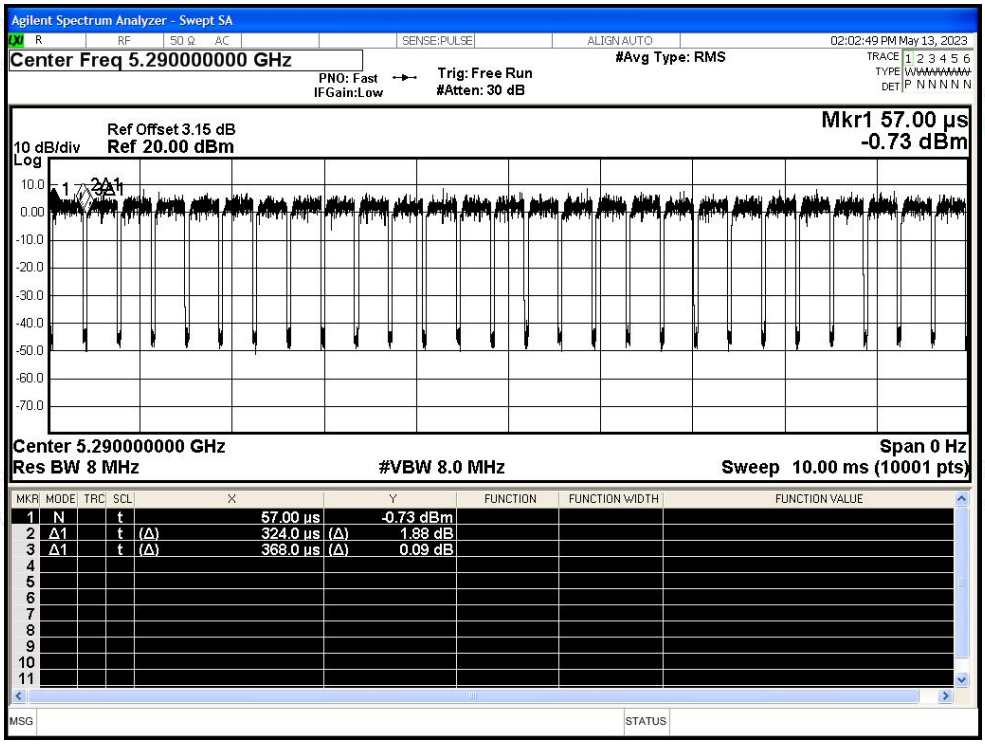

Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5260	Ant1	96.94	0.13	0.72
NVNT	a	5300	Ant1	96.87	0.14	0.72
NVNT	a	5320	Ant1	96.94	0.13	0.72
NVNT	n20	5260	Ant1	96.65	0.15	0.77
NVNT	n20	5300	Ant1	96.65	0.15	0.77
NVNT	n20	5320	Ant1	96.73	0.14	0.77
NVNT	n40	5270	Ant1	93.79	0.28	1.54
NVNT	n40	5310	Ant1	93.79	0.28	1.54
NVNT	ac20	5260	Ant1	96.76	0.14	0.76
NVNT	ac20	5300	Ant1	96.76	0.14	0.76
NVNT	ac20	5320	Ant1	96.76	0.14	0.76
NVNT	ac40	5270	Ant1	93.68	0.28	1.53
NVNT	ac40	5310	Ant1	93.68	0.28	1.53
NVNT	ac80	5290	Ant1	88.04	0.55	3.09

Test Graphs

Duty Cycle NVNT a 5260MHz Ant1

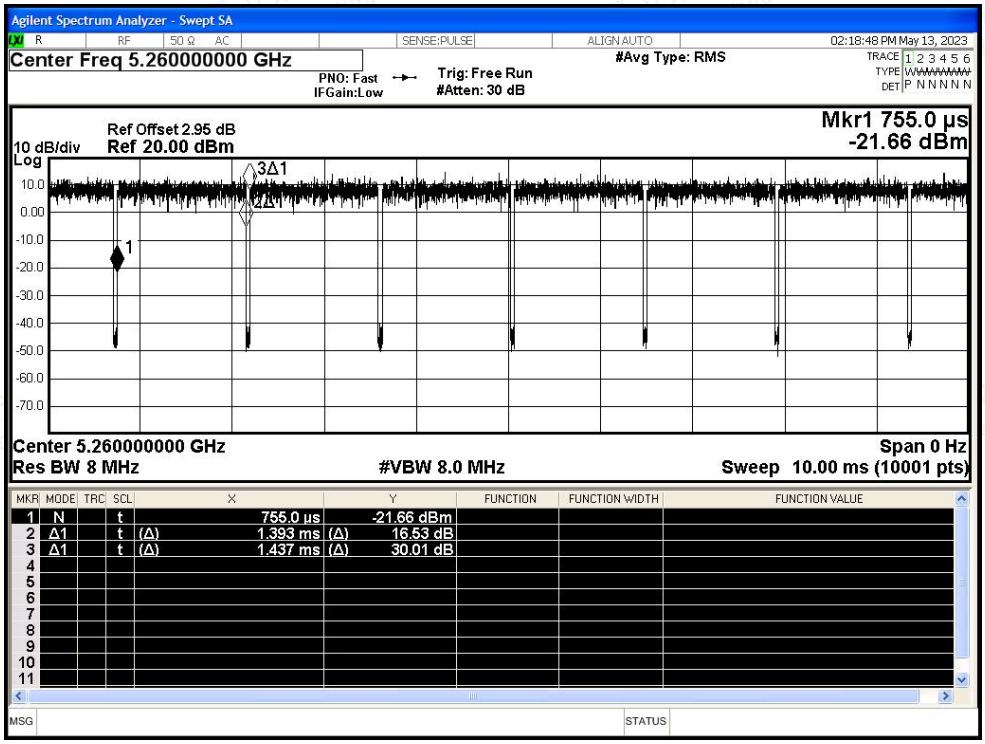

Duty Cycle NVNT a 5300MHz Ant1

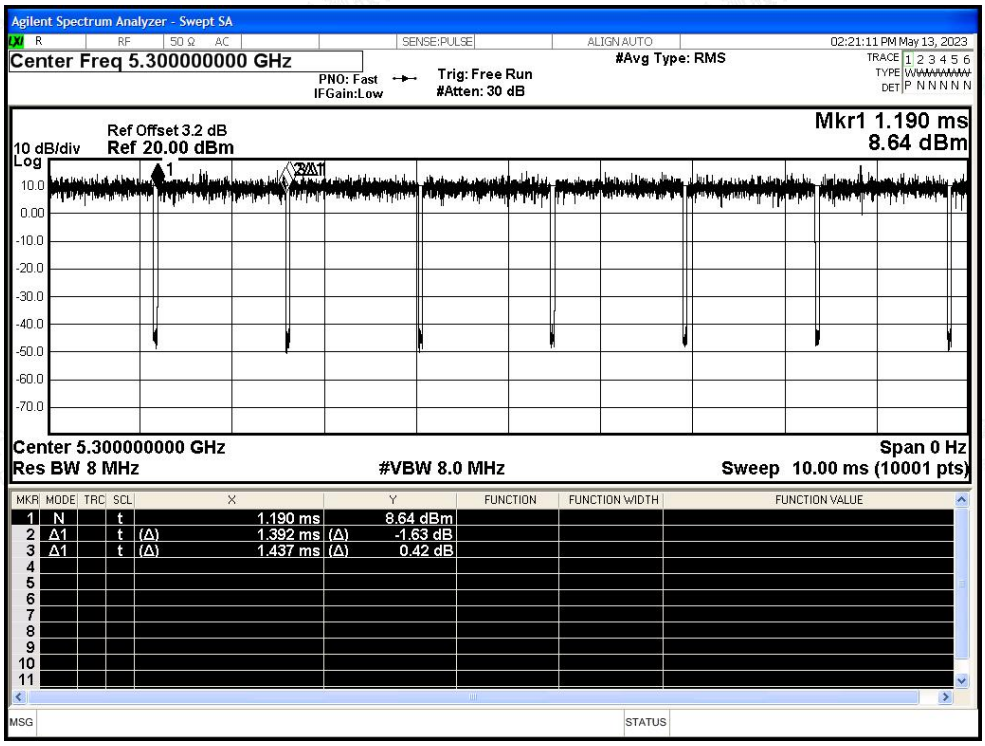

Duty Cycle NVNT a 5320MHz Ant1

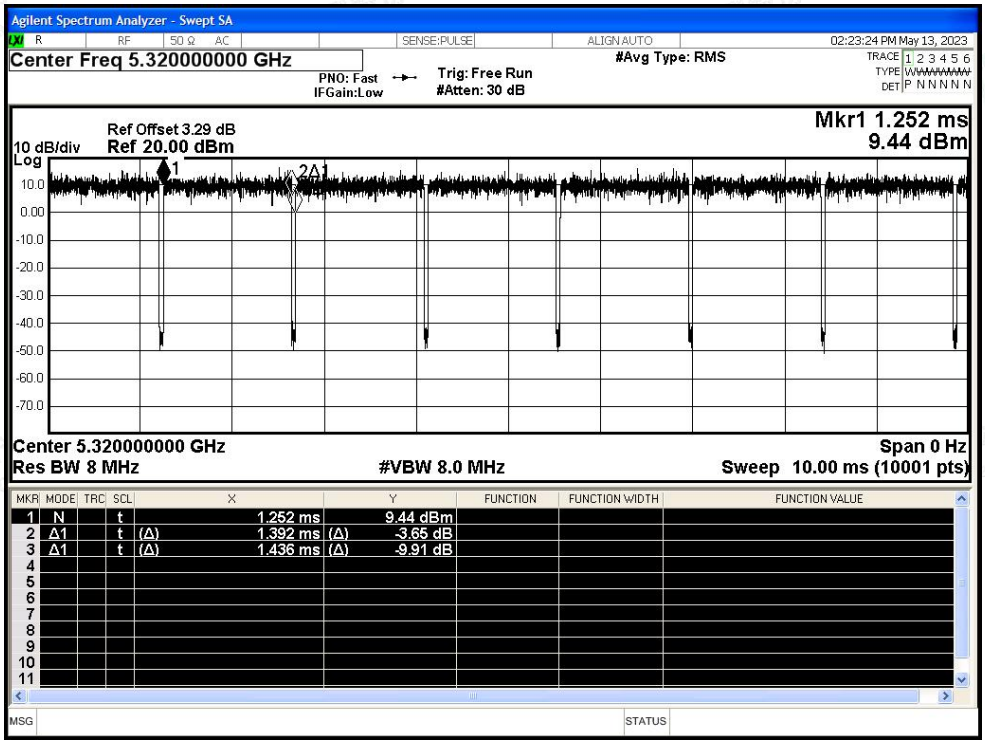

Duty Cycle NVNT n20 5260MHz Ant1

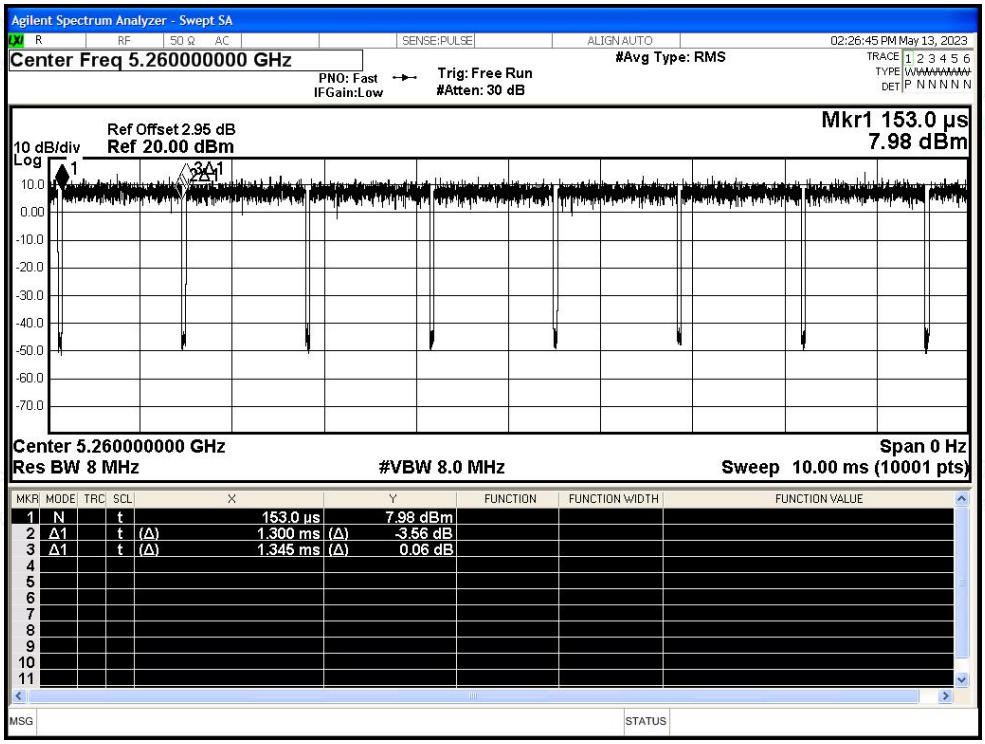

Duty Cycle NVNT n20 5300MHz Ant1

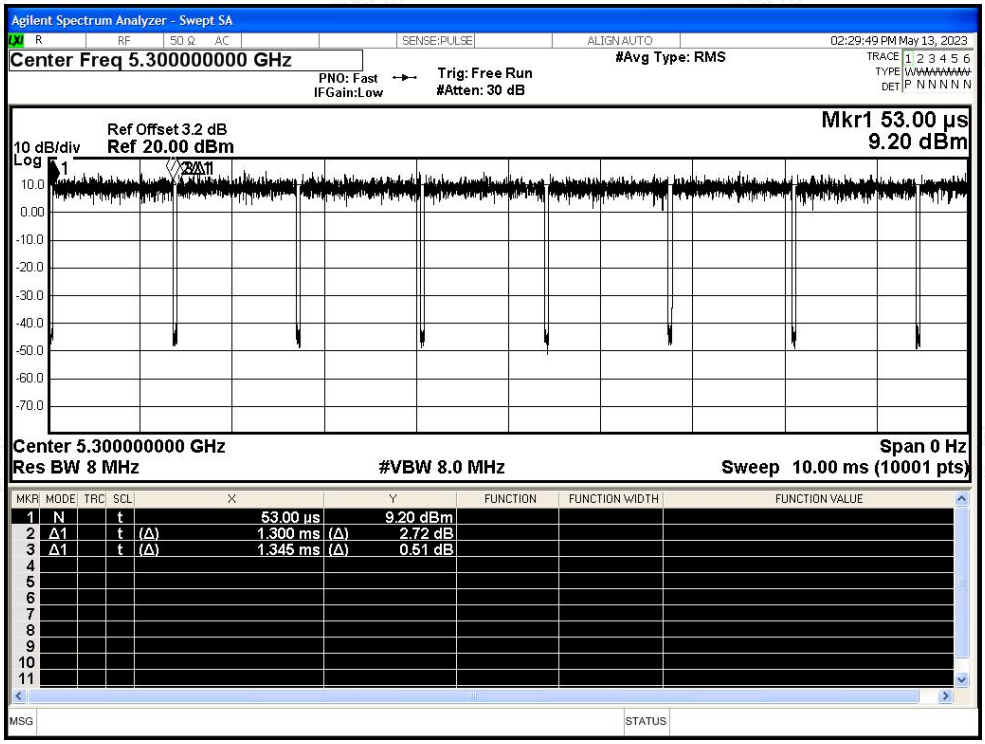

Duty Cycle NVNT n20 5320MHz Ant1

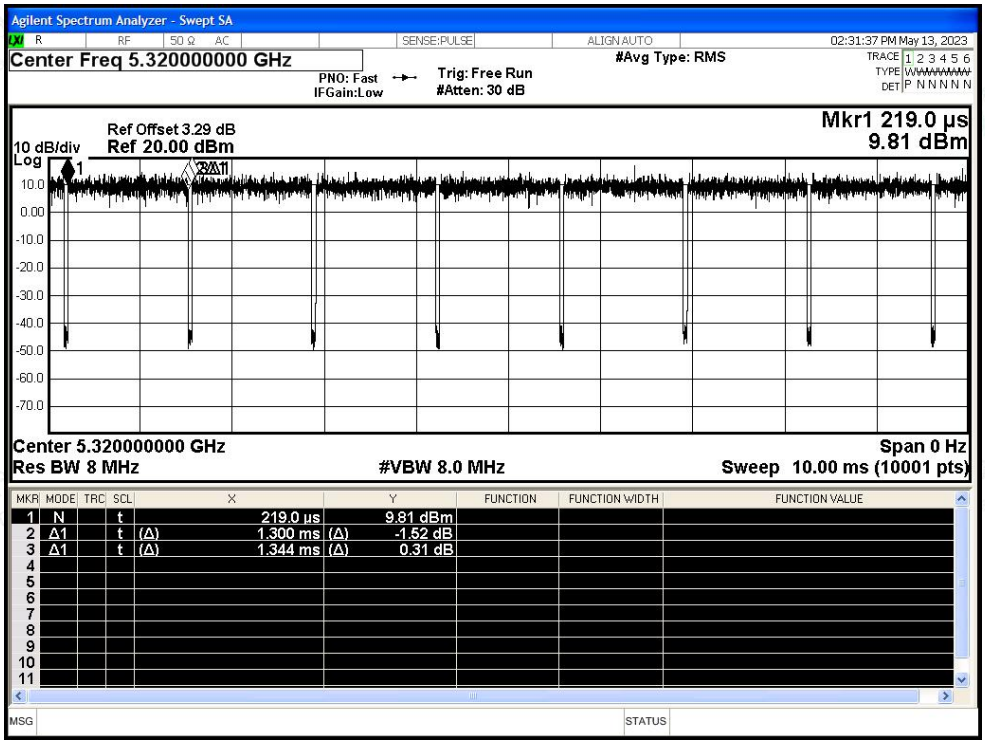

Duty Cycle NVNT n40 5270MHz Ant1

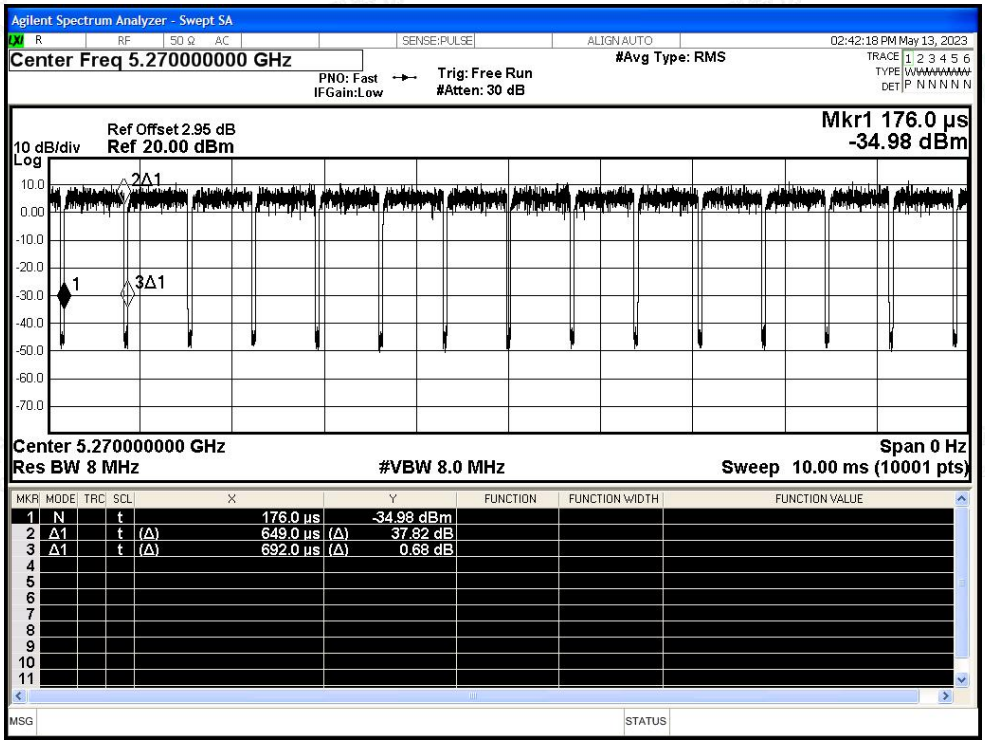

Duty Cycle NVNT n40 5310MHz Ant1

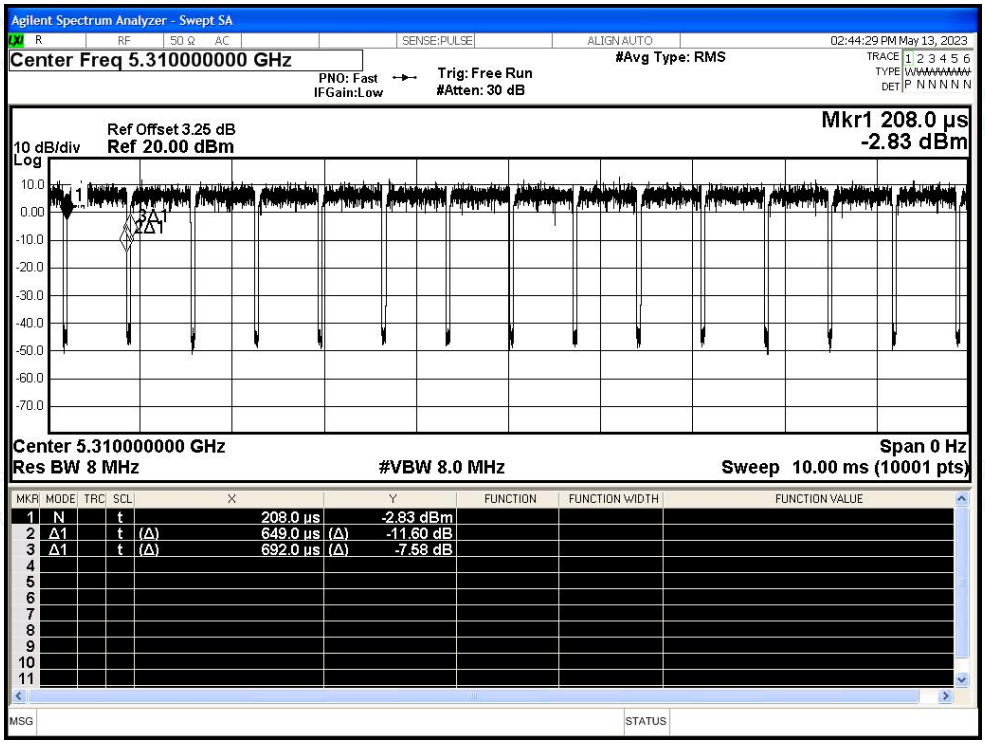

Duty Cycle NVNT ac20 5260MHz Ant1

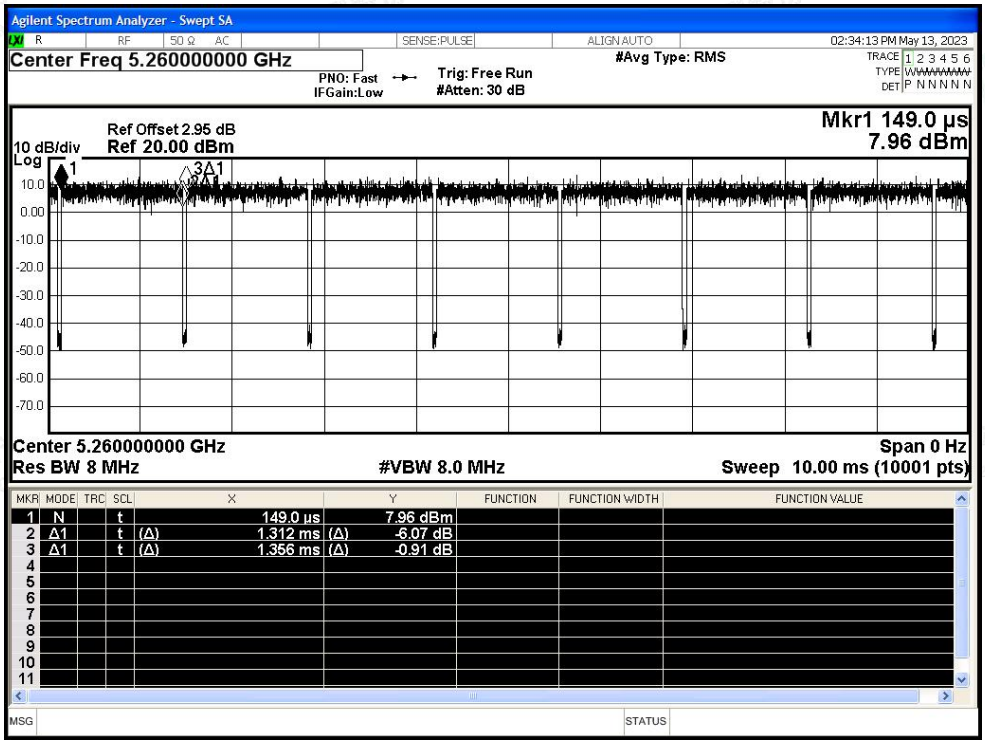

Duty Cycle NVNT ac20 5300MHz Ant1

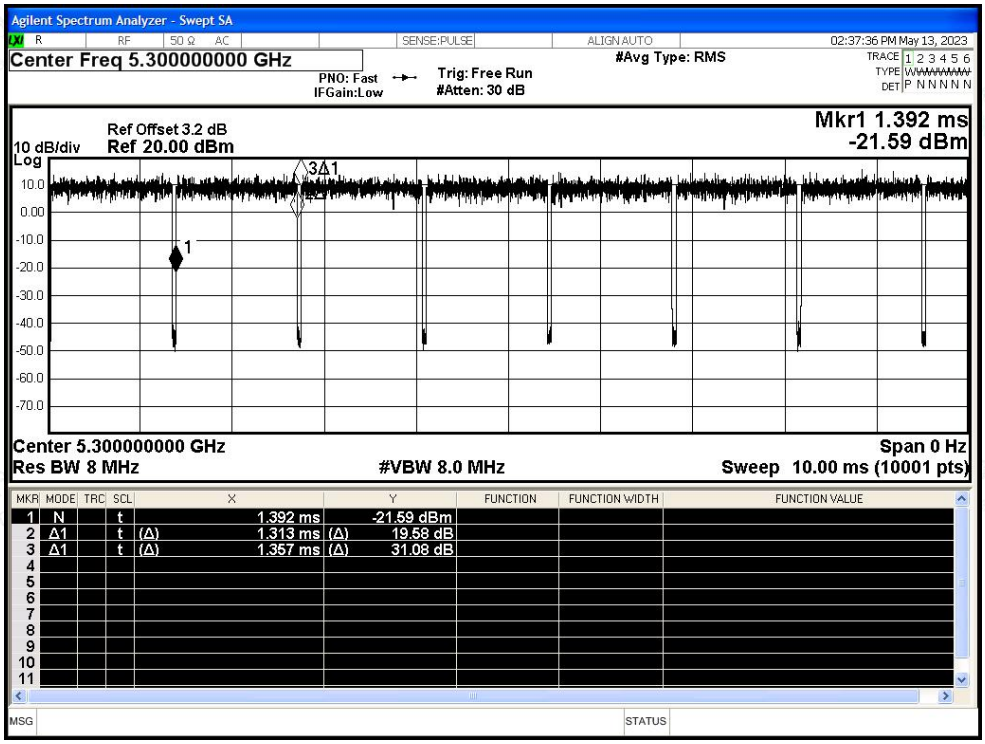

Duty Cycle NVNT ac20 5320MHz Ant1

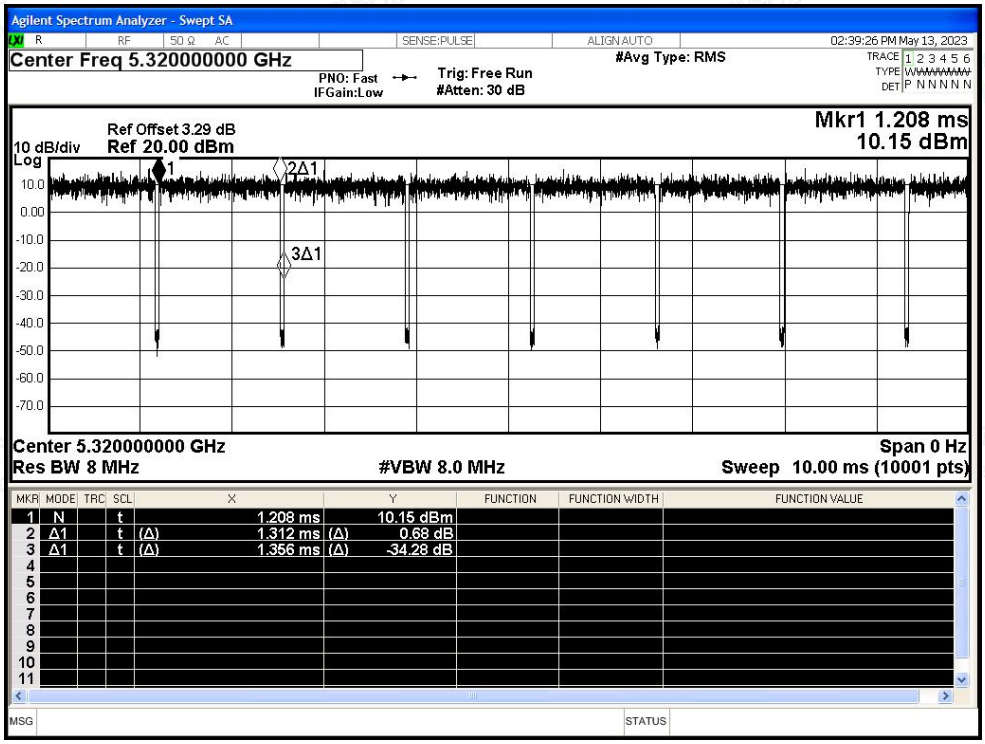

Duty Cycle NVNT ac40 5270MHz Ant1

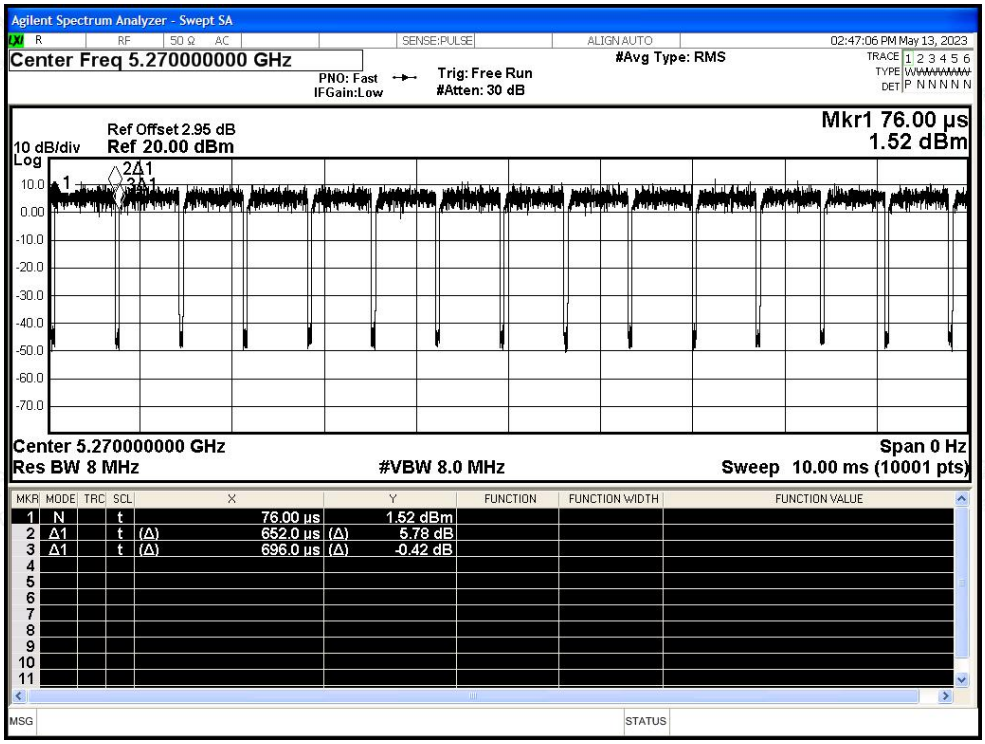

Duty Cycle NVNT ac40 5310MHz Ant1

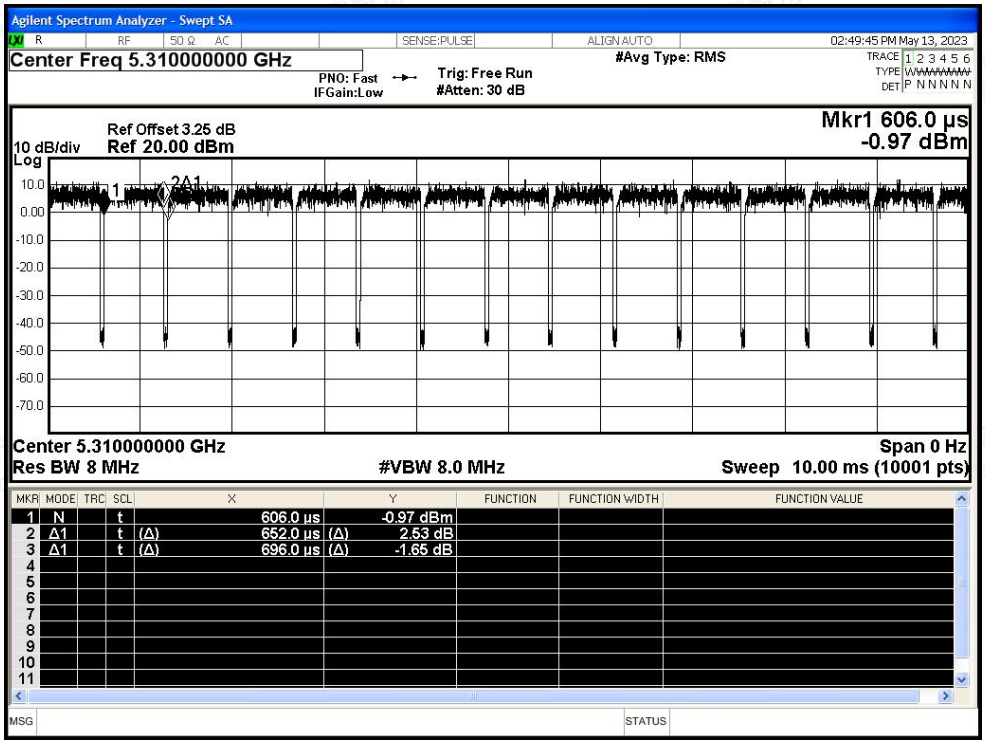
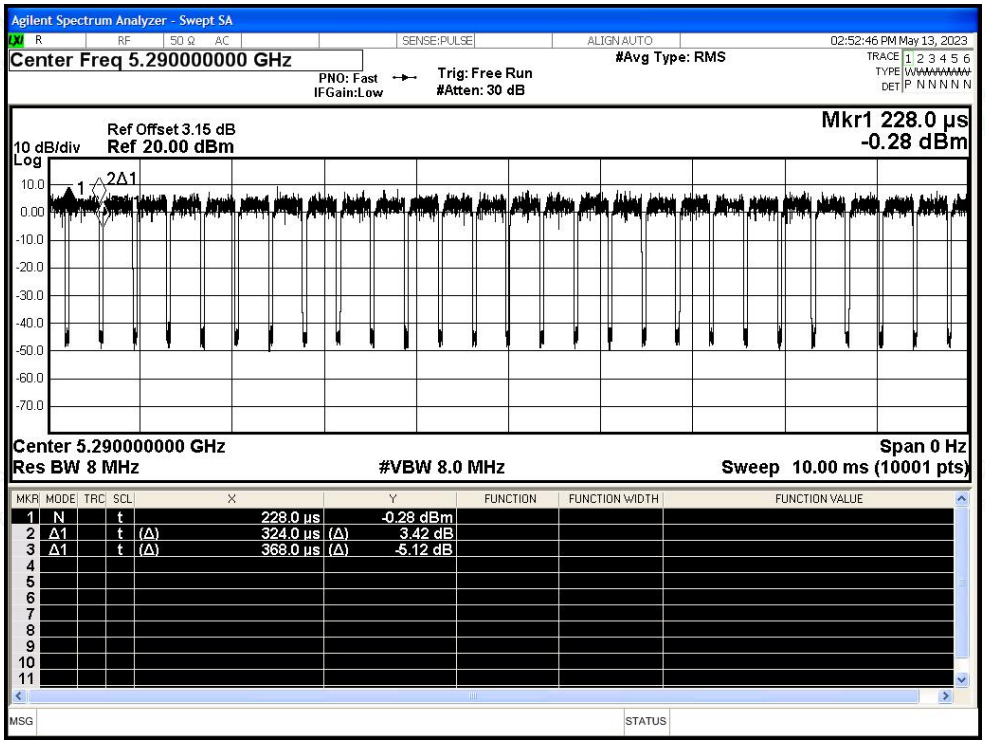
Duty Cycle NVNT ac80 5290MHz Ant1