androidtv

Ok Google

User Manual

Safety Instructions

Warnings

- Presence of small parts inside the device (Cover screw, Sim card removal)
- No parts are to be repaired by users.
- Place the device on a flat firm and stable surface. Do not put it on sensitive surfaces.
- Keep the device in a well-ventilated place to prevent the accumulation of internal heat.
- Protect the device from high temperature, humidity, water and dust.
- Do not place any objects near your device that may damage it such as flammable objects or candles.
- Do not use the device buttons and Do not use sharp, standard battery, or damaged batteries.
- Do not expose the device to strong vibrations.

Accessory List

- Remove the package and check the following accessories

Hardware Structure

Please refer to the illustration



Remote Control

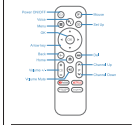

Note: Press the Google Assistant button to start voice searching for what you want.

Installation Steps

1. Connect the TV BOX to your TV with a HD cable.
2. Connect the TV BOX with power supply.
3. For wired connection, plug in Ethernet cable from the TV BOX to your modem or router. For wireless, choose your WiFi network and input the password.

Bluetooth Pairing Method

1. Put the first pairing device and the remote control beside the TV Box and hold the [LEFT] and [RIGHT] buttons on the remote control for about 10 seconds, when the indicator light is on, release the [LEFT] and [RIGHT] buttons simultaneously. Starting then release the remote control, wait for pairing to finish.
2. Second pairing: Bluetooth remote control pairing only applies to the remote control's recovery.

Remote Indicator Status

1. Pairing status: When otherwise enabled, the LED flashes (Yellow continuously) when the key is pressed the LED goes out when the key is released.
2. Bluetooth status: When connected Bluetooth, the LED will be on when the button is pressed the LED will be off when the button is released.

FCC Requirements:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Features

OS: Android 14.0

CPU: Quad Core ARM Cortex-A55

GPU: Mali-G52 MP2

WiFi: 6/5G

HD: Support 8K video decoding

USB Port: USB3.0

BT: 5.0

Ethernet: 100M

AV: Support

DC: 5V/2A

Troubleshooting

- **No display after power on?**
  - Confirm your device is connected to the TV and select the correct HD input source on TV configuration.
- **Forgot Google Net Account?**
  - Make sure your TV is not in standby mode.
- **Wifi is connect to the network?**
  - Make sure the Ethernet cable is properly connected. Make sure that no blocked and protected sites are connected. Check your WiFi.
- **Remote control failure?**
  - Make sure the battery of the remote control is in a new one, and make sure it is placed in the correct polarity.
  - Make sure the remote control is within the range of the TV box.
  - Go to the Setting menu to re-pair and reset the remote control.
- **Please ensure not unmountable to avoid any data.**

Troubleshooting

- **No display after power on?**
  - Confirm your device is connected to the TV and select the correct HD input source on TV configuration.
- **Forgot Google Net Account?**
  - Make sure your TV is not in standby mode.
- **Wifi is connect to the network?**
  - Make sure the Ethernet cable is properly connected. Make sure that no blocked and protected sites are connected. Check your WiFi.
- **Remote control failure?**
  - Make sure the battery of the remote control is in a new one, and make sure it is placed in the correct polarity.
  - Make sure the remote control is within the range of the TV box.
  - Go to the Setting menu to re-pair and reset the remote control.
- **Please ensure not unmountable to avoid any data.**

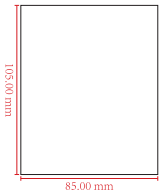

折页效果