LAXRE

Install instructions

Installation Video

❶ Prepare The Door

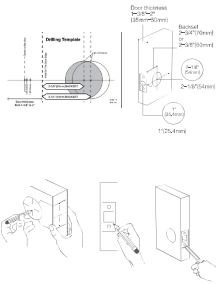

1

❷ Install Latch & Strike Plate

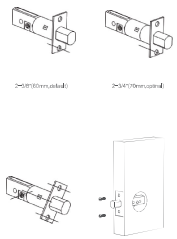

2

❸ Install Exterior Lock Part

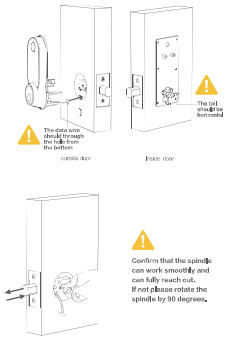

Confirm that the spindle can work smoothly and can fully reach out. If not please rotate the spindle by 90 degrees.

3

❹ Install Interior Mounting Plate

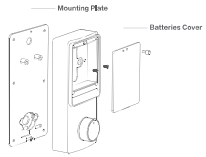

Remove batteries cover | Remove Mounting Plate



Install mounting plate

4

❺ Insall Interior Lock Part

adjust the toggle switch to L(Left handle door) or R(Right handle door), otherwise the lock will unlock/lock oppositely.

Connecting the datawire Put the datawire into the hole

5

❻ Set the direction of turnpiece and Test Operation

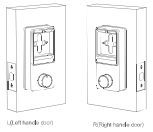

Setting the direction of turnpiece when lock is unlocked, otherwise the lock will stuck.



Confirm that the turnpiece can work smoothly and latch can fully reach out.If not ,rotate the turnpiece by 90 degrees.

6

❼ Install Batteries&Cover

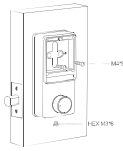

7

Programming instructions

❶ MUST KNOW

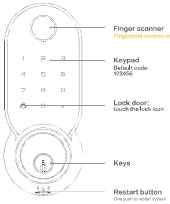

Make sure your finger is placed flat in the center of the sensor for better identification.
2. Avoid:Fingers are too dry, wet, oily or dirty(strongly recommend:add 2~3 fingerprinters)

8



Set button
Can be used when the power, factory reset, Programming and 5 seconds.

Adjust the toggle switch to L(Left handle door) Or R(Right handle door)

Unlock Ways: Code/Fingerprint/Key

Lock: Touch the lock icon or of the keypad/key/turnpiece

Error freeze: Lock will be in error control if unauthorized information exceeds 5 attempts. The system will unfreeze in 2 minutes.

Restore factory defaults: Long press the reset button for more than 5 seconds. The system will hear two notifications consecutively, indicating a "successful" operation.

Storage capacity: You can register up to 296: fingerprintes ,100 cards and 200 codes.

Vague Code: The lock supports up to a 16-bit vague code, just enter any 16-bit code, as long as a correct code is included in what you entered, you can open the door.
1. 1 2 3 4 5 6 7 8 X X X X X X X X
2. X X X X X X 1 2 3 4 5 6 7
3. X X X X 1 2 3 4 5 6 7 8 X X X

9

Hardware(installation) Troubleshooting

Symptom	Troubleshooting
Not closed/ unlocked or refused smoothly	1.Check if the door is deformed or not (compare the Door pictures) Do not be too smaller or deformed 2.Add one hinge if door is sagging 3.Check the backset of door is correct 4.The latch is too long and need to cut a section 5.Pin data wire should go through the hole in the bottom of the lock see installation instructions section 3
The lock works smoothly when door is opened but can't locks when door is closed	1.Check the depth of pocket for the latch is deep enough. 2.Pin on latch and strike is aligned

Program Troubleshooting

Symptom	Troubleshooting
The lock not lit/ lit but when verify code or fingerprinter successfully and lits when touch the screen. Works Generally.	Battery relation problem, see on TTLock APP
It doesn't fit my door	Check install instructions→ part 1 prepare The Door
Fingerprint will not unlock/lock/lock/unlock smoothly	Avoid Fingers are too dry, wet, oily or dirty
Error code	Check digits entered were correct and complete, followed by #
There is no power when connecting the data cable (only with new batteries installed)	Check the connection of data wire
After external system, if the battery voltage is lower than 4.2V, then connect a source power. Then battery shows replace battery.	Check batteries are inserted correctly.
Warm and/or will not lock/ unlock	Low voltage alarm: Change batteries.
	Set around mode: see on TTLock APP

10

RECORDS

Admin code (default)	Admin Name	Admin Fingerprint Name	Record Code
123456	Factory	Name(Admin add fingerprint ID→Set fingerprint Name)	

User Name	User ID	User/Vague code	User/Fingerprint Name	Record Code

11

❷ LOCK USER MANUAL

App Store Google Play

TTLock APP

The software(iOS version) can be downloaded from the app store, and the Android version can be downloaded from the application store of Google play.

Registration and Login By App

TT Lock users can use their phone number and email to register their account. Currently, TT Lock App has supported the phone number registration in 159 countries and regions. When users are registering their account, the verification code will be sent to the mobile phone or the email address. After the verification is passed, the registration is successful, and then the page will jump directly to

No lock bound with App / lock bound with App

There is a lock or key data in the user's account, when TTLock App is used for the first time. The user can add a lock in the front page. If A lock is already added in the account, the lock information will be displayed.

Add Lock By App

Add a lock Select "Door Lock" Light up touch screen Select lock Input lock name Operation Successfully

Send Key By App

After adding the lock successfully, the user has the highest authority of the lock, which is the administrator of the lock. The user can send the lock/unlock key to others with setting the time limit, and has the right to select the limited time, permanent or one-time lock/unlock key. The key is sent to recipient's mobile phone or email and the recipient will get the key and authority of the lock in the TTLock App.
Administrators can manage all the keys they send out, including deleting keys, resetting keys, sending keys, adjusting the time limit of the keys, and viewing the access records.

Add Users By App

In the main interface of the TTLock App, select Passcode or IC Cards, and click on the upper right to add and passcodes and IC cards. You can set users for limited time or permanent access. The access records can be queried in the main interface. For example, add passcodes

Passage Mode

In the main interface of the app, select the passage mode in the settings, and the date of the passage mode can be set, and the start time and end time of the passage mode can also be set. After the passage mode is activated, everyone can directly unlock the door without any access permission. The passagemode can be turned off by

Program ON Lock(Not suggested,we suggest to program by Smart APP)

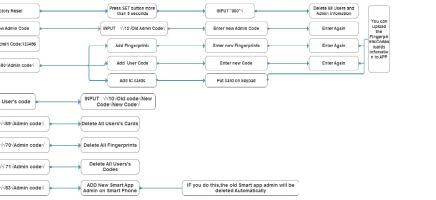

TEL: 1-833-413-0655 | MAIL: laxre-tech@outlook.com

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.