名称：ZD3说明书
材质：铜版纸
尺寸：120*80mm
装订：骑缝钉
注：成品没有黑色边框

Fosi Audio

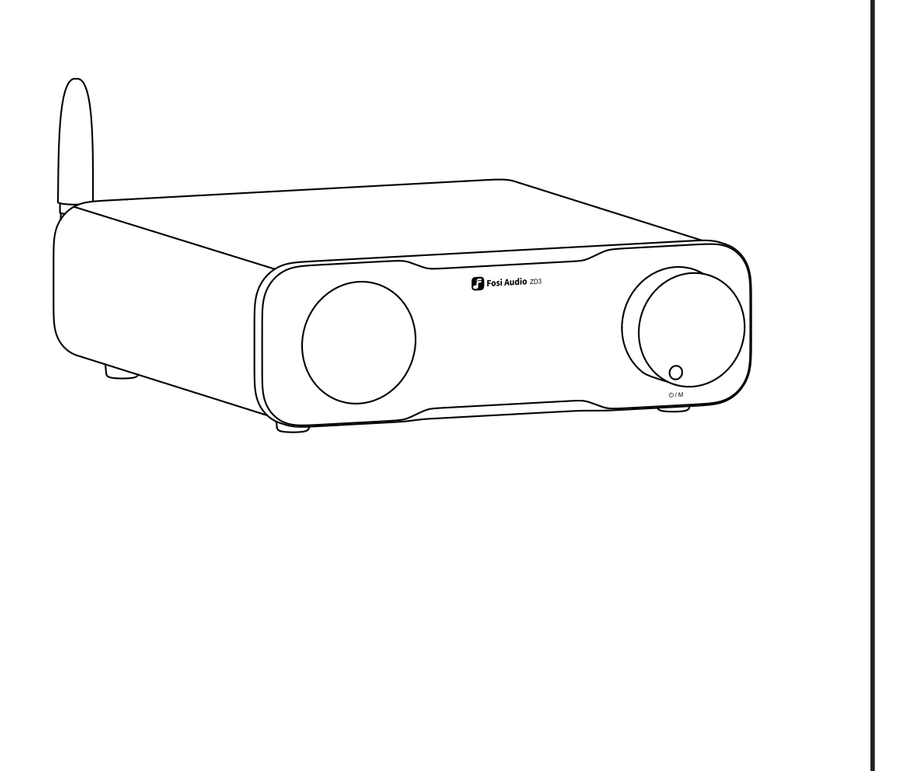

ZD3 User Manual

Introduction

Thank you for purchasing the ZD3 Balanced Stereo DAC.

The ZD3 is a HiFi-grade balanced stereo DAC meticulously developed by Fosi Audio after thoroughly understanding user needs. It features an ESS flagship high-precision audio DAC chip, delivering clear and immersive sound quality. Our proprietary I/V conversion circuit and fully balanced circuitry reduce noise and crosstalk, while integrated high-precision wafer resistors and low drift capacitors ensure minimal signal processing errors and better channel balance. Coupled with its sleek design and multiple connectivity options, we are confident it will take you on a superb journey into HiFi music. Thank you again for your support. Fosi Audio is committed to providing high-quality audio solutions, ensuring every user enjoys supreme sound quality.

Display Instructions

① Input Mode
② Current Sampling Rate
③ PCM/DSD/Bluetooth Audio Encoding Format Indicator
④ Volume Level/Mute

Introduction

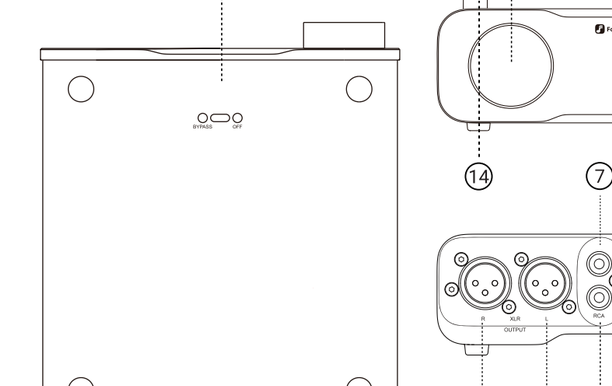

① Bypass Switch
② OLED Display
③ Main Volume Knob/Power Switch/Input Mode Selector
④ XLR Right Channel Output (US standard)
⑤ XLR Left Channel Output (US standard)
⑥ RCA Right Channel Output
⑦ RCA Left Channel Output
⑧ 12V Trigger In (3.5mm Port)
⑨ 12V Trigger Out (3.5mm Port)
⑩ Coaxial Input
⑪ HDMI (ARC) Input
⑫ Optical Input
⑬ USB-B Input
⑭ Bluetooth Antenna
⑮ 12V DC Power Connectio

Specifications

Chipset	XMOS XU316+ESS 9039Q2M+ QCC3031+LME49720
Maximum Sampling Rate	USB: PCM 32bit/768kHz; DSD512 OPT/COAX: PCM 24bit/192kHz HDMI: PCM 24bit/192kHz Bluetooth: PCM 24bit/48kHz
Output Level	XLR: 5Vrms RCA: 2.5Vrms
Input	USB, HDMI (ARC), Coaxial, Optical, Bluetooth,
Output	XLR, RCA
SNR	126dB
THD+N	<0.00008%
Dynamic Range	126dB
Noise Floor	≤2μV
Frequency Response	20Hz-20kHz (±0.1dB)
Bluetooth Version	5.0
Bluetooth Connection Distance	≥13m
Bluetooth Transmission Audio Format	SBC, AAC, APTX, APTX HD
Input Voltage and Current	DC 12V 1.5A
USB Compatible Devices	Windows 7, 8, 8.1, 10, 11 (Some require drivers; please refer to subsequent instructions for details) Mac OS X, Linux (No driver required)

Package Contents

ZD3
USB-A to USB-B Cable
Bluetooth Antenna
12V Power Adapter
12V Trigger Cable
Infrared Remote
User Manual

Operation Guide

Important note:

- Do not power on the device until all connections have been completed;
- Before playing music, ensure the volume is set to a low level to avoid potentially damaging the speakers or impacting your hearing with sudden loud sounds.

Power On/Off Operations

1. Short press the main volume knob of the ZD3 to power it on. The screen will display "Fosi Audio" for 2 seconds, then enter the main menu;
2. When the ZD3 is on, press and hold the main volume knob for 2 seconds to turn it off. The screen will display "OFF" for 2 seconds, then go dark.

Volume Settings

1. Mute/Unmute: Press the " 🔇 " button on the remote control to mute the ZD3. When muted, a mute icon will appear on the center of the screen. Press again to unmute;

2. Volume Adjustment: Use the main volume knob or the "+" and "-" buttons on the remote control to adjust the volume of the ZD3;

Note: When using the Bypass mode, the ZD3 functions solely as a DAC with the volume fixed at 0 dB, and the volume cannot be adjusted.

Bypass Mode

1. When Bypass mode is activated, the ZD3 enters a pure DAC mode where the output voltage is fixed, and volume adjustments cannot be made. Volume control must be done through connected downstream devices (such as preamplifiers or active speakers);

Toggle the switch at the bottom to enter Bypass mode

2. When Bypass mode is deactivated, the ZD3 switches to DAC + preamp mode, allowing you to adjust the volume using the volume knob.

Toggle the switch at the bottom to enter OFF mode

Connecting Input/Output Sources

1. Connect to a power amplifier or a pair of active speakers;
2. Use RCA or XLR cables to connect to the power amplifier or active speakers. Ensure that the amplifier or active speakers are turned off before connecting to prevent damage to the equipment;

3. There are five input interfaces available for selection, including USB, optical, coaxial, HDMI, and Bluetooth.

Bluetooth Input Mode

1. Press the main volume knob short to switch to Bluetooth input mode, or press the "BT" button on the remote control. The screen will display "PAIRING";

2. On your phone, computer, or other devices, open the Bluetooth settings page and connect to the device named "Fosi Audio ZD3". Once paired successfully, the screen will display "CONNECTED";

3. Double-click the main volume knob to clear the Bluetooth pairing history and enter pairing mode.

Optical Input Mode

1. Connect one end of the optical cable to the ZD3 and the other end to the output device;
2. Short press the main volume knob to switch to optical input mode, or press the "OPT" button on the remote control. The name of the mode will then appear in the top right corner of the screen.

Coaxial Input Mode

1. Connect one end of the coaxial cable to the ZD3 and the other end to the output device;
2. Short press the main volume knob to switch to coaxial input mode, or press the "COAX" button on the remote control. The name of the mode will then appear in the top right corner of the screen.

HDMI (ARC) Input Mode

1. Connect one end of the HDMI cable to the ZD3 and the other end to the output device;
2. Short press the main volume knob to switch to HDMI input mode, or press the "HDMI" button on the remote control. The name of the mode will then appear in the top right corner of the screen;

3. The ZD3 features HDMI CEC functionality, which allows for synchronized power and volume control when both the output device and the ZD3 are in HDMI mode.

Note: Synchronized power control can only be initiated by the device sending the signal; the ZD3 cannot control the power of the output device synchronously.

USB Input Mode

1. Connect one end of the included USB cable to the ZD3 and the other end to the output device;
2. Short press the main volume knob to switch to USB input mode, or press the "USB" button on the remote control. The name of this mode will appear in the top right corner of the screen.

Important Notes

1. How to Use ZD3 as a USB DAC for Your Computer?
[Windows]
① ZD3 supports plug-and-play on Windows 8/10/11 systems without the need for installing any drivers;
② Use the included USB-A to USB-B cable to connect the ZD3 to your computer;
③ Select "Fosi Audio ZD3" as the audio output on your computer.

[Macbook]
The Macbook also supports plug-and-play and does not require any driver installation. Simply connect it as described above and select the Fosi Audio ZD3 as the output device.

2. When using the ZD3 under the Windows system, drivers are required in the following situations:
① The computer's operating system is Windows 7 or older versions.
② Playing DSD music files.
(Note: If you are using foobar2000 with the installed Wasapi plugin to play DSD music, you do not need to install additional drivers.)
③ Playing PCM 768kHz music files.

3. Some devices may not support volume control in exclusive USB audio access mode.

12V TRIGGER

The ZD3 is equipped with bi-directional 12V TRIGGER input/output interfaces, allowing it to power on/off in conjunction with other devices, eliminating the need to manually turn each device on or off individually.

Merak → ZD3 → Active Speaker
Trigger In

The upstream device connected to Trigger In, such as Merak, can control the power on/standby mode of the ZD3.

Merak → ZD3 → ZA3 → Passive Speaker
Trigger Out

The ZD3 can control the power on/standby mode of the downstream device connected to Trigger Out.

Turning Off the Display

You can turn off the display by lightly pressing the "Display" button on the included remote control. Press it again to reactivate the display.

Note: The remote control requires two AAA batteries, which are not included in the package.

Frequently Asked Questions

1. The system is set up, but there is no sound?
A. No power – check if the display on the ZD3 front panel is lit.
B. Volume too low – rotate the volume knob clockwise to increase the volume to an appropriate level.
C. Source not playing or muted – check your audio source device.
D. Audio cable not properly connected or faulty – recheck the connections.

2. USB not recognized?
A. Improper USB connection or faulty contact – replace the USB cable.
B. Computer malfunction – check the computer or connect using a different computer.
C. Faulty USB port on the computer – try another USB port.
D. ZD3 not switched to USB input mode.

3. Unable to play after connecting a turntable?
A. Check if your turntable has a built-in preamp; the ZD3 does not have a built-in turntable preamp, so you will need to connect a turntable preamp between your turntable and ZD3, such as Fosi Audio Box X1, X2, X4, etc.
B. Incorrect output mode on the turntable – turntables with built-in preamps typically have two output options: phono output and line output. Please select the line output.

If you have any further questions, please contact our support team at **support@fosiaudio.com.**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following
measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

Warranty and Maintenanc

Fosi Audio pledges to give a 24-month limited warranty and support from the date of purchase. If you encounter any problem when using our product, please contact our support team at **support@fosiaudio.com.**

About Us

Fosi Audio designs and builds innovative audio products with all your music in mind. Great sound, simple but elegant designs, high-quality components, and truly useful features are what Fosi Audio pursues. We sincerely hope you can get as much enjoyment from our products as we've had to create them!

Official Website: www.fosiaudio.com
Amazon Store: www.amazon.com/fosiaudio
Facebook Page: www.facebook.com/fosiaudioglobal
Youtube Channel: www.youtube.com/@fosiaudio
Official Forum: community.fosiaudio.com
Whatsapp: +86 13716612254
After-Sales Service and Technical Support Email:
support@fosiaudio.com

Get Online Support

产品简介

感谢您购买ZD3平衡立体声解码器。

ZD3是Fosi Audio在深刻理解用户需求后精心研发的一款HiFi级平衡立体声解码器。它搭载了ESS旗舰级高精度音频解码芯片，能够带来清晰、具临场感的音质体验。我们自主研发的I/V转换电路和全平衡电路可减少噪音和串扰，同时集成众多高精度晶圆电阻和低温漂电容，确保音频信号处理误差更小，左右声道更平衡。结合精致的外观设计和多种连接方式，我们坚信它将带您进入HiFi音乐的绝妙之旅。再次感谢您的支持，Fosi Audio始终致力于提供高品质的音频解决方案，让每一位用户都能享受到极致的音质。

屏幕显示说明

① 输入模式
② 当前采样率
③ PCM/DSD/蓝牙 音频编码格式指示
④ 音量等级/静音

产品简介

① Bypass开关
② OLED显示屏
③ 主音量旋钮/开关机/输入模式切换
④ XLR 右声道输出（美规）
⑤ XLR 左声道输出（美规）
⑥ RCA右声道输出
⑦ RCA左声道输出
⑧ 12V Trigger In（3.5mm接口）
⑨ 12V Trigger Out（3.5mm接口）
⑩ COAX同轴输入
⑪ HDMI（ARC）输入
⑫ OPT光纤输入
⑬ USB-B输入
⑭ 蓝牙天线
⑮ 12V DC电源输入

规格参数

芯片组	XMOS XU316+ESS 9039Q2M+ QCC3031+LME49720
最高采样率	USB: PCM 32bit/768kHz; DSD512 OPT/COAX: PCM 24bit/192kHz HDMI: PCM 24bit/192kHz 蓝牙: PCM 24bit/48kHz
输出电平	XLR：5Vrms RCA: 2.5Vrms
输入方式	USB, HDMI（ARC）, COAX, OPT, 蓝牙
输出方式	XLR, RCA
信噪比	126dB
失真度	<0.00008%
动态范围	126dB
底噪	≤2μV
频率响应	20Hz-20kHz（±0.1dB）
蓝牙版本	5.0
蓝牙连接距离	≤15m
蓝牙传输音频格式	SBC, AAC, APTX, APTX HD
输入电压电流	DC 12V/1.5A
USB兼容设备	Windows 7, 8, 8.1, 10, 11 (部分需要驱动，详情见后续使用说明) Mac OS X、Linux(无需驱动)

包装清单

ZD3
USB-A转USB-B线
蓝牙天线
12V电源适配器
12V Trigger线
红外遥控器
用户手册

使用说明

注意:

1. 在所有连接完成之前请勿开机；
2. 在播放音乐前，请确认音量处于较低水平，否则瞬间过大的声音可能会导致喇叭烧毁或冲击您的听觉。

开关机操作

1. 短按一下ZD3主音量旋钮即可开机，此时屏幕会显示“Fosi Audio”2秒，随后进入主菜单；
2. ZD3在开启状态时，长按主音量旋钮2秒即关机，此时屏幕会显示“OFF”2秒，随后熄屏。

音量设置

1. 静音/取消静音：按压遥控器上的“ 🔇 ”按键，ZD3会进入静音状态，此时，屏幕中央会出现静音图标；重新按压即可退出静音状态；

2. 音量调节：使用主音量旋钮或遥控器上的“+”和“-”按键均可调节ZD3的音量大小。

注意：使用Bypass模式时，ZD3则充当纯解码使用，音量固定为 0 dB，此时无法调节音量。

Bypass模式

1. 当您开启Bypass模式时，ZD3 进入纯解码模式，输出电压固定，无法进行音量调节；此时需要通过连接的后端设备（如前级放大器、有源音箱等）来调节音量；

拨动机身底部开关切换至Bypass模式

2. 当您关闭Bypass模式时，ZD3将切换到解码+前级模式，您可以通过音量旋钮来调节音量；

拨动机身底部开关切换至切换至OFF模式

连接输入/输出源

1. 连接功率放大器或有源音箱；
2. 使用RCA或XLR线缆连接至功率放大器或有源音箱，连接前请确认放大器或有源音箱处于关机状态，以免损坏设备；

3. 共有五种输入接口可供选择，包括USB、光纤、同轴、HDMI和蓝牙。

蓝牙输入模式

1. 短按主音量旋钮，切换至蓝牙输入模式，或者使用遥控器按下“BT”键，此时屏幕上会显示“PAIRING”；

2. 在您的手机、电脑等设备上打开蓝牙设置界面，连接到名称为“Fosi Audio ZD3”的蓝牙设备，配对成功后，屏幕上会显示“CONNECTED”；

3. 双击主音量旋钮即可清除蓝牙配对历史并进入蓝牙配对状态。

光纤输入模式

1. 使用光纤线一端连接ZD3，另一端连接输出设备；

2. 短按主音量旋钮，切换至光纤输入模式，或者使用遥控器按下“OPT”键，此时屏幕右上角会出现该模式名称。

同轴输入模式

1. 使用同轴线一端连接 ZD3，另一端连接输出设备；
2. 短按主音量旋钮，切换至同轴输入模式，或者使用遥控器按下“COAX”键，此时屏幕右上角会出现该模式名称。

HDMI（ARC）输入模式

1. 使用HDMI线一端连接 ZD3，另一端连接输出设备；
2. 短按主音量旋钮，切换至HDMI输入模式，或者使用遥控器按下“HDMI”键，此时屏幕右上角会出现该模式名称；

3. ZD3具有HDMI CEC功能，当输出设备和ZD3都处于HDMI模式时，支持同步开关机和音量调节。

注意：同步开关机只能由信号输出的设备发起；ZD3 无法同步控制输出设备开关机。

USB输入模式

1. 使用包装附带的USB线一端连接ZD3，另一端连接输出设备；
2. 短按主音量旋钮，切换至USB输入模式，或者使用遥控器按下“USB”键，此时屏幕右上角会出现该模式名称。

注意事项

1.如何将ZD3用作电脑的USB解码?
[Windows]
① ZD3可以在windows 8/10/11系统上即插即用，无需安装驱动程序；
② 使用包装附带的USB-A 转 USB-B线将 ZD3 连接到您的计算机；
③ 选择Fosi Audio ZD3作为计算机上的音频输出。
[Macbook]
Macbook同样即插即用，不需要安装驱动程序，直接按照上述方式将Fosi Audio ZD3作为输出设备。

2.在window系统下使用ZD3，什么情况下需要下载驱动程序?
①电脑操作系统是Windows 7以及更旧的版本；
②播放DSD歌曲；
（注：如果您使用的是foobar并且安装了自带的 Waspi插件来播放DSD歌曲则不需要安装驱动）
③播放PCM 768kHz歌曲。
当您遇到上述问题/需求时，请联系Fosi Audio售后服务或访问官网获取ZD3的解码驱动程序，按照说明安装即可启用USB解码功能。

3.某些设备在独占USB音频访问模式下可能无法使用音量控制。

12V TRIGGER

ZD3配备了12V TRIGGER双向输入/输出触发接口，可以与其他设备联动开关机，免去逐一开启和逐一关闭的繁琐操作。

Merak → ZD3 → 有源音箱
Trigger In
Trigger In所连接的上游设备Merak可控制ZD3开机/待机

Merak → ZD3 → ZA3 → 无源音箱
Trigger Out
ZD3可控制Trigger Out所连接的下游设备开机/待机

关闭显示屏

可通过随附的遥控器，轻按一下“ ◐ ”键即可关闭显示屏，再次按下即恢复显示。

注意：遥控器请使用2节7号(AAA)电池，包装内无附赠。

常见问题

1.系统搭建起来了，但是没有声音?
A. 没有通电，请检查ZD3前面板上的显示屏是否亮起；
B. 音量太小，请顺时针旋转音量旋钮，调至合适的音量大小；
C. 音源未播放或静音，请检查音源设备；
D. 音频线连接不正常或接触不良，请重新检查连接。

2.USB无法识别?
A. USB连接不当或接触不良，请更换USB线；
B. 电脑出现故障，检查或重新换一台电脑连接；
C. 电脑的USB口出现故障，换另一个USB接口；
D. ZD3没有切换到USB输入模式。

3.连接唱机后无法正常播放?
A. 请检查您的唱机是否内置前级，因为ZD3无内置唱机前级，因此您需要在唱机和ZD3之间再连接一台唱机前级来使用，比如Fosi Audio Box X1、X2、X4等；
B. 唱机输出模式不对，内置前级的唱机一般有唱机输出和线路输出两种，请选择线路输出。

温馨提示：如果您依然不能解决问题，请扫码了解更多或者联系我们 的支持团队。
support@fosiaudio.com

产品保修

产品自售出7日内，在正常使用情况下出现故障，客户可以无条件退换货。正常使用两年内出现故障，可以免费保修。购买日期以发票或收据日期为准，网上购买按订单日期为准。

无法享受“三包”服务的情况：

1. 一切人为因素损坏，包括但不限于非正常工作环境下使用或者不按照说明书使用的；
2. 用户私自拆机、改装以及维修的；
3. 使用非指定或许可的配件造成损坏的；
4. 不能出示有效购机凭证的；
5. 不属于本公司产品的。

保修方式：

保修方式为送修，此条款只适用于官方销售渠道售出的产品，其他渠道请参考销售代理商的规定和当地国家法规关于质保的规定。

关于我们

深圳远虑科技是一家专注于音频产品的设计，研发和销售为一体的科技型公 司。我们深耕用户需求，深入研发设计，通过不断创新，持续打磨产品和 服务，致力于打造全球音频领域的星品牌。我们尤其在意客户的反馈，如 果您有任何问题或者需求，欢迎联系我们。

官网：https://www.fosiaudio.com
天猫旗舰店：FOSI AUDIO旗舰店 fosiaudio.tmall.com
京东店铺：FOSI AUDIO旗舰店 mall.jd.com/index-12512168.html
QQ群：760657010
售后邮箱：support@fosiaudio.com

扫码查看在线帮助

製品について

Fosi Audio ZD3 バランス-ステレオ-デコーダー(DAC)をご購入頂き誠にありがとうございました。

ZD3はFosi Audioがユーザーのご希望を深く理解した上で丹念に開発した、HiFiクラスのバランスステレオデコーダーです。ZD3はESSのフラッグシップ高精度オーディオデコードチップを搭載しており、クリアで臨場感のある音質体験を提供します。Fosi Audioが独自に開発したI/V変換回路とフルバランス回路は、ノイズとクロストークを減少させ、多くの高精度チップ抵抗と低温度ドリフトコンデンサを統合することで、音声信号処理の誤差を最小限に抑え、左右のチャンネルバランスをより一層向上させます。洗練されたデザインと多様な接続方式を兼ね備えたZD3は、HiFi音楽の素晴らしい旅へとお連れすることを確信しております。再度のご支援に感謝いたします。Fosi Audioはいつも高品質なオーディオソリューションを提供し、すべてのユーザーが最高の音質を楽しめるよう努めております。

画面表示ガイド

① 入力モード
② リアルタイム-サンプリングレート
③ PCM/DSD/Bluetooth オーディオエンコード形式
④ 音量レベル/ミュート

製品について

① Bypass スイッチ
② OLED ディスプレイ
③ 総音量ツマミ/電源スイッチ/入力モード選択
④ XLR 右チャンネル出力「米国規格」
⑤ XLR 左チャンネル出力「米国規格」
⑥ RCA 右チャンネル出力
⑦ RCA 左チャンネル出力
⑧ 12V トリガー入力 (3.5mm 端子)
⑨ 12V トリガー出力 (3.5mm 端子)
⑩ 同軸入力
⑪ HDMI (ARC) 入力
⑫ 光入力
⑬ USB-B 入力
⑭ Bluetooth アンテナ
⑮ 12V DC 電源接続

製品仕様

チップセット	XMOS XU316+ESS 9039Q2M+ QCC3031+LME49720
最大 サンプリングレート	USB: PCM 32bit/768kHz; DSD512 OPT/COAX: PCM 24bit/192kHz HDMI: PCM 24bit/192kHz BT: PCM 24bit/48kHz
出力振幅	XLR：5Vrms RCA: 2.5Vrms
入力方式	HDMI（ARC）、COAX、OPT、BT、USB
出力方式	XLR, RCA
SNR	126dB
歪み (THD+N)	<0.00008%
ダイナミックレンジ	126dB
ノイズフロア	≤2μV
周波数応答	20Hz-20kHz（±0.1dB）
Bluetooth バージョン	5.0
Bluetooth 有効距離	≤15m
Bluetooth オーディオ フォーマット	SBC, AAC, APTX, APTX HD
入力電圧電流	DC 12V/1.5A
USB対応 デバイス	Windows 7, 8, 8.1, 10, 11 (ドライブ必要) Mac OS X、Linux(ドライブ不要)

梱包詳細

ZD3
USB-A to USB-Bケーブル
Bluetoothアンテナ
12V電源アダプター
12Vトリガーケーブル
赤外線リモコン
マニュアル

操作ガイド

注意:

- すべての接続が完了するまで電源を入れないでください。
- 音楽を再生する前に、音量が最小にしたかご確認ください。音量が大き過ぎると、聴覚とスピーカーを損傷する恐れがあります。

電源のオンとオフ

1. ZD3の総音量ツマミを押し込むと「オン」になります。この時はディスプレイ画面には「Fosi Audio」が表示されます。
2. ZD3が「オン」の状態では、総音量ツマミを2秒間ぐらい押し続けると「オフ」なります。この時はディスプレイ画面には「OFF」が表示され、2秒後消えます。

音量セット

1. ミュート/ミュート解除：リモコンの「Mute」ボタンを押して、ZD3 をミュートします。ミュートされると、画面の中央にミュート アイコンが表示されます。もう一度押すとミュートが解除されます

2. 音量調整：総音量ツマミかリモコンの「+」と「ー」ボタンでZD3の音量を調整することができます

注: Bypassモードの場合、ZD3 は純粋なデコーダーとして機能し、音量は 0 dB に固定されて音量を調整できません。

Bypassモード

1.Bypassモードを「オン」にすると、ZD3 は純粋なデコード モードになり、出力電圧は固定され、音量は調整できません。この場合、接続されたバックエンドデバイス (プリアンプ、アクティブ スピーカー等) で音量を調整することができます；

下部のスイッチでBypassモードに切り替えます

2. Bypassモードを「オフ」にすると、ZD3 は「デコード + プリアンプ」 モードに切り替わり、総音量ツマミで音量を調整することができます。

下部のスイッチでBypassモードを「オフ」にします

入力と出力の接続

1. パワーアンプかアクティブスピーカーを接続；
2. RCA か XLR ケーブルで、「パワーアンプ」か「アクティブスピーカー」に接続します。
デバイスの損傷をしないように、接続する前に「パワーアンプ」か「アクティブスピーカー」がオフになっていることをご確認ください。

3. USB、光、同軸、HDMI、Bluetooth の 5 つの入力端子から選択できます。

Bluetooth入力モード

1. 総音量ツマミか、リモコンの「BT」ボタンでBluetooth入力モードに切り替えます。この時、ディスプレイ画面には「PAIRING」が表示されます。

2.携帯、PCなどのデバイスで 「Bluetooth 設定」を開き、「Fosi Audio ZD3」という名称の Bluetooth デバイスに接続します。ペアリングが成功すると、画面に「CONNECTED」と表示されます。

3. 総音量ツマミをダブルクリックして Bluetooth ペアリングを解除して、Bluetooth ペアリング状態に入ります。

光入力モード

1. 光ケーブルで音源デバイスとZD3を接続します；
2. 総音量ツマミか、リモコンの「OPT」ボタンで光入力モードに切り替えます。使用中のモードが画面の右上隅に表示されます。

同軸入力モード

1. 同軸ケーブルで音源デバイスとZD3を接続します；
2. 総音量ツマミか、リモコンの「COAX」ボタンで同軸入力モードに切り替えます。使用中のモードが画面の右上隅に表示されます。

HDMI(ARC)入力モード

1. HDMIケーブルで音源デバイスとZD3を接続します；
2. 総音量ツマミか、リモコンの「HDMI」ボタンでHDMI入力モードに切り替えます。使用中のモードが画面の右上隅に表示されます；

3. ZD3 には HDMI CEC 機能があり、音源デバイスと ZD3 の両方が HDMI モードの場合、同期電源オン/オフと音量調整をサポートします。

注: 同期スイッチングの「オン」と「オフ」は、音源デバイスによってのみ制御できます。ZD3 は音源デバイスのスイッチングの「オン」と「オフ」を同期的に制御できません。

USB入力モード

1. 付属したUSBケーブルで音源デバイスとZD3を接続します；
2. 総音量ツマミか、リモコンの「USB」ボタンでUSB入力モードに切り替えます。使用中のモードが画面の右上隅に表示されます；

注意：
1. ZD3 をPCの USB デコーダとして使用するにはどうすれば良いですか?
[Windows]
① ZD3はWindows 8/10/11システムでプラグアンドプレイが可能で、ドライバのインストールは不要です。
② 同梱されているUSB-AからUSB-Bケーブルを使用してZD3をPCに接続します。
③ PCの音声出力としてFosi Audio ZD3を選択します。
[MacBook]
MacBookでもドライバのインストールは不要で、簡単にプラグアンドプレイが可能です。上記の手順に従って、Fosi Audio ZD3を出力デバイスとして設定してください。

2.Windowシステムで ZD3 を使用する場合、どのような状況でドライバーをダウンロードする必要がありますか?
①PCのシステムは Windows 7 以前のバージョンの場合；
②DSD曲を再生する場合；
(注: foobar を使用していて、DSD 曲を再生するために組み込みの Waspi プラグインをインストールしている場合は、ドライバーをインストールする必要はありません。)
③PCM 768kHzの曲を再生する場合；
上記の問題やニーズが発生した場合は、Fosi Audio アフターサービスにお問い合わせいただくか、Fosi Audio公式サイトにアクセスして ZD3 デコード ドライバーをダウンロードしてください。指示に従ってインストールし、USB デコード機能を有効にしてください。

3.一部のデバイスでは、排他的 USB オーディオ アクセス モードでは音量制御を使用できない場合があります。

12V トリガー

ZD3は12V TRIGGER双方向入出力トリガー端子を搭載しており、他のデバイスと連動して「オン/オフ」を行うことができ、一々オン/オフする煩わしい操作が不要になります。

Merak → ZD3 → アクティブスピーカー
トリガー入力

Merak などの 「Trigger In 端子」に接続された上流デバイスは、ZD3 の「オン/スタンバイ モード」を制御できます。

Merak → ZD3 → ZA3 → パッシブスピーカー
トリガー出力

ZD3 は、「Trigger Out 端子」に接続されたダウンストリーム デバイスの「オン/スタンバイ モード」を制御できます。

ディスプレイの「オン」と「オフ」

付属したリモコンの「ディスプレイ」ボタンで、ディスプレイを消すことができます。もう一度押すとディスプレイが「オン」になります。

注意：リモコンには2本のAAA電池（7号電池）を使用してください。電池はパッケージに含まれていません。

よくある質問

1.オーディオシステムができましたが、音が出ません。
A. 電源が入っておりません。ZD3 の正面パネルのディスプレイが「オン」になっているかご確認ください。
B. 音量が低すぎ、総音量ツマミを時計回りに回して適切な音量に調整してください。
C. 音源デバイスが再生されていないか、ミュートされています。音源デバイスを確認してください。
D. オーディオケーブルの接続が異常か接触不良であるため、接続を再確認してください。

2.USBが認識されません。
A. USB 接続が不適切か接触不良の場合は、USB ケーブルを交換してください。
B. PCに障害が発生した場合は、別のPCを確認するか接続を試してください。
C. PCの「USB 端子」に障害があるため、他の「USB 端子」に交換してください。
D. ZD3はUSB入力モードに切り替えていません。

3. レコードプレーヤーに接続して正常に再生できません。
A. ターンテーブルにプリアンプが内蔵されているかご確認ください。ZD3にはプリアンプが内蔵されていないため、使用するにはターンテーブルとZD3 の間に別のフォノプリアンプを接続する必要があります。
B. フォノ出力モードが間違っております。プリアンプ内蔵のフォノプレーヤーには通常、フォノ出力とライン出力の 2 種類があります。

まだ何かご不明な点がございましたら、弊社のサポートチームまでご連絡ください。
「support@fosiaudio.com」

製品保証

Fosi Audio は、購入日から 24 ヶ月の限定保証とサポートを提供することを約束します。製品の使用中に問題が発生した場合は、サポート担当 (support@fosiaudio.com) までご連絡ください。

当社について

Fosi Audio は、あらゆる音楽へのニーズを念頭に置いて革新的なオーディオ製品を設計、構築しております。素晴らしいサウンド、シンプルかつエレガントなデザイン、高品質のコンポーネント、そして本当に便利な機能こそが Fosi Audio の追求するものです。当社が作成したのと同じくらい当社の製品を楽しんでいただけることを心から願っています。

公式サイト：www.fosiaudio.com
Amazonストア: https://www.amazon.co.jp/fosiaudio
Facebook ページ: www.facebook.com/fosiaudioglobal
YouTube チャンネル: www.youtube.com/@fosiaudio
公式フォーラム：community.fosiaudio.com
ツイート（twitter）：https://twitter.com/FosiAudio_JP
アフターサービス電子メール:support@fosiaudio.com

オンラインサポートを受ける