成品尺寸：70-100mm
展开尺寸：280*100mm

正面

Smart gamepad

Introduction Manuel

■ **Productintroductions:**

This is a smart gaming console with Classic appearance design. It uses2.4Ghz wireless transmission technology. It is a best game-pad controller for Android smart phone/ Tablet/ TV Box SmartTV.

- Exclusive game Store.
- Fit for Android smart phone/ TabletTV Box/ Smart TV.
- Use 2.4Ghz RF wireless transmission technology. distance ≥ 8M.
- Support android standard menu key including MODE.
- Use 2 x AA batteries (Not included).
- Service life of buttons: 500000 times.
- Service life ofrocker. 500000 times.
- Surface finishes: anti sweat and oil.
- Low power consumption.
- 1x Wireless Gamepad
- 1x Nano Receiver.
- Git Box Packed Safely in blister

Faststart

1. The receiver received intelligence android TV or TV box of a USB interface;
2. The game pad is equipped with batteries, open the power switch to "ON" position, the handles and receiving head automatic connection, the connection is successful after he red LED normally ON, without success, please press MODE button twice quickly and receiver forced the attachment.
3. Product Overview

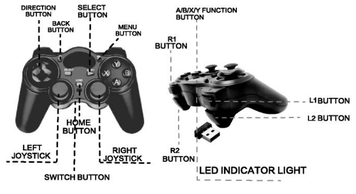

Game pad operation in detail

Power On/Off

1. Open the power switch to "ON" positing, the handle will be automatically connected to the receiver, indicates a red LED normally ON after the connection is successful, if is not successful, please switch game pad power orinsert the receiver again.
2. the power switch in the "off position place, the game pad is in completely turned off, power consumption is 0mA

The Game pad according to the prompt after the connection is successful, the game please keep proper distance with the television;.

Game pad sleep Model

1. (Boot attachment) when there is no connect receiver, after 10 seconds into sleep mode;
2. if there is no any operation of shaft and buttons, 5 minutes after go into sleep mode;
3. When into Sleep mode need to press the HOME key wake up after a red LED light, can begin to play games,

The game pad code

When the game pad can't operation or to increase a new game pad, we need the game pad with the receiver in the code;

The receiver is powered on for 15 seconds after treatment of code state;

a) The receiver to the Smart TV or TV box USB port, turn on the TV or TVbox power,

b) The game pad is equipped with battery. the power switch to "ON" position (to code the distance of not more than 2 meters), express press HOME button,,LED flashing rapidly, marks the state of the code;

c) When the red LED normally on state, the code is successful, if the horse did not succeed, please turn of the controller power supply wait 3 seconds and then open the power supply or the receiver.

d) If you need two game pad into the game, with the same like before way.

e) The normal default mode of Android, if it for computer operation required need by 5 seconds then open for PC mode;

Frequently asked Questions

1. Why open the game pad switch LED does not lash, also can not conned to the device?

A: please confirm whether the battery is installed or whether the battery is properly installed.

2. Why the LED flashing used in the process?

A: Ifis low battery consumption need to replace the battery

3. Why the red LED is not bright in the process of using?

A: Maybe is broken need to reconnect to the code.

4. Why sometimes appear LED flashing or button delay in the use of the process?

A: Maybe there are too far away from the TV and the receiver is too far ,Can be used to extend USB line for receiver

5. Why the game pad can not be used in the computer game?

A: Please select the OPTION in the game handle device operations, and set a good button mapping relationship, if the game OPTION are not found in the game equipment, the game only supports the keyboard and mouse it does not support the game pad;

6. Why can not be play the game on the phone?

Attentions;

1. When the game pad unexpected disconnection, it is have voltage protection and other conditions, can't be connected making the game pad, and the connection without the function and othercrash loading state, then need to turn off the power switch 3 seconds after re open;
2. If you have any other questions, please contact the vendor!
3. Don't take this product placed in extremely hot and humid place, put it in a dry place;
4. Children should be used under the supervision of adults!
5. Don't use alcohol to wipe any part of the product, please use a soft cloth and a small amount of water to clean the product!
6. Can be compatible with PC\ Ps3

背面

概述

安卓电视无线手柄是外观高雅时尚、流线性外形，人性化设计;采用2.4GHz无线传输技术，设计有智能省电模式为您专心打造一款适配安卓电视游戏，同时也支持电脑游戏的通用游戏手柄，让您玩任何游戏更得心应手。

规格参数

支持平台	支持安卓电视游戏
无线传输	采用2.4Ghz RF无线传输技术;距离≥8米
同时支持	同时支持手柄数:2个(需游戏支持)
环境支持	20个无线通道，最多支持20组手柄同时在一个环境内工作
按键支持	支持安卓标准菜单键Back、Menu、Home键功能
待机电流	小于60uA
工作电流	小于15mA
电量电流	电池2节AA(5号)
表面处理	防汗油
按键寿命	按键寿命:50, 0000次; 摇杆寿命:50,0000次

快速开始

1、将手柄接收器接到智能安卓电视机或机顶盒的一个USB接口

2、手柄装上电池，打开电源开关到”ON”位置，手柄会与接收头自动连接，连接成功后红色LED常亮。若没有成功，请快速按2次HOME键与接收器强制连线。

3、手柄键功能如下图示：

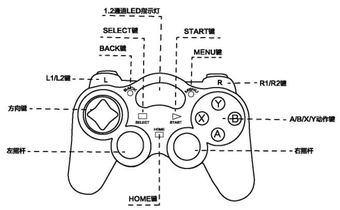

B 电源开关示意图：



C手柄接收器：

手柄详细操作

[开启手柄]

打开电源开关到"ON"位置，手柄会自动与接收器连接，连接成功后指示红色LED常亮。若没有成功，请重新开关手柄电源或拔插接收器。

[手柄使用]

手柄连接成功后即可根据提示进行使用，游戏中请与电视机保持适当的距离.

[手柄关机]

将电源电源开关置于"OFF”位置，手柄就处在完全关机状态，耗电为0mA.

[手柄睡眠]

1、(开机连线时)当没有手柄接收器时，10秒钟之后进入睡眠模式;

2、在连线状态下如果没有任何轴和按键的操作,5分钟之后进入睡眠模式此时LED灭;

3、睡眠模式下需按HOME键唤醒;唤醒后红色LED亮就可以正常玩游戏.

保修条例

根据"新三包"规定整机包修期限为年(自够买日期计算)

- 在保修期内,因产品本身质量引起的故障，请顾客持保修卡正本和购机发票在指定地点享受免费保修服务;
- 不接受由于改装或加装其它功能,及自行拆卸后出现故障的机器;
- 此证不得涂改否则作废;
- 每次维修时，由维修中心人员填写维修记录;
- 此证书请顾客妥善保管，遗失不补.

维修记录

维修日期	维修记录	维修单位签名	备注

FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.