Soundnova

User Manual

HiFi Wireless Speaker K7

Thank you for choosing Soundnova product. Please read this manual to enhance your user experience. We hope you will enjoy it very much!

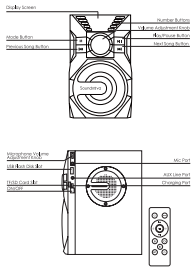

How to Pair with Your Device

★ Our Bluetooth speaker is used the stereo solution, so it can be used only when the mobile phone or Bluetooth adapter supports A2DP function.

1. Turn on the power; the display light is on, and the speaker enters the Bluetooth mode (please keep the Bluetooth speaker with sufficient power).

2. Accompanied by the voice "Bluetooth mode, pairing" the Bluetooth speaker is in a state of waiting for connection, and only in this state the device can be correctly connected. (If the TF card/USB/AUX Line is inserted when the device is turned on, it will automatically switch to the music playback state, please short press "M" button to switch to the Bluetooth mode).

3. When the Bluetooth is connected, You can long press the " ⏯ " key to disconnect the Bluetooth connection, and short press the " ⏯ " key again to reconnect to the Bluetooth within 2 seconds.

Phone:

1.Turn on the speaker--Open the Phone Settings--Bluetooth--On--Searching --Soundnova K9--Paired/Connected--Play music

If you are required to enter a password during the pairing process, please enter "0000" (the Bluetooth version of the mobile phone requires "0000" below 2.1, and no password is required for higher than this version).

Computer:

Turn on the speaker--Open the Laptop Settings--Devices--Bluetooth and other devices--turn on the Bluetooth--Add Bluetooth or other devices --Bluetooth--Searching device--Soundnova K9--Paired/Connected--Play music Notice: If the computer does not have Bluetooth, please insert the Bluetooth adapter and download the Bluetooth driver to use it normally

How to use multifunction

Recording mode:

After inserting the USB flash disk or TF card into the speaker, in any mode, long press the "M" button to enter the recording mode, you will hear a prompt sound, start recording, when the recording is completed, short press the "M" button to start playing Recording content. The recording content is stored in the last track of the USB flash disk or TF card.

Cycle mode:

In the music playback mode, long press the " ▶II " button to enter the song switching mode, Display: ONE means replaying a single song, ALL means repeating the entire playlist.

Light Button:

Long press "L" to turn off the light,long press again to turn on the light.

Remove Vocal :

Long press the"O" button to remove vocal from the song, long press again to unmute vocal.

USB flash disk/TF card to play music:

When the USB flash disk or TF card is inserted correctly, it will enter the voice prompt of the music playing mode, and then play the audio files in the USB flash disk/TF card immediately (Note: USB flash disk and TF card mainly support MP3/WMA/APE/WAV audio files Play) or short press the "M" button to switch to the corresponding audio mode. Adjust the volume knob to adjust the volume of playing music.

Line input mode :

Insert the audio cable into the AUX hole,and insert the universal 3.5mm interface at the other end, press the "M" button to switch to the line input mode, it can play music for computer, iPad, mobile phone and other smart devices. (Note: In the external audio mode of line input, the speaker cannot switch the previous song/next song, short press the " ⏯ " to pause/continue playback).

Number Buttons:

When playing music, you can directly switch songs by pressing the number buttons 0-9. For example, to select the 10th song, you can quickly press the "1" and "0" buttons; select the 11th song, you can quickly double-short press "1" button; to select the 101th song, you can quickly short press the "1" and "0" and "1" buttons; and so on. When the selection is completed, the screen will display the song you have selected, and it will jump directly to the song you selected to play the program.

"M"mode switch button:

This button has the mode conversion function. When inserting USB flash disk, TF card and external audio cable, you can press the "M" button to switch Bluetooth mode/USB flash disk mode/TF card mode/line input mode.

" ▶II "button:

In the Bluetooth mode, short press the " ⏯ " to play/pause the currently playing music, long press to forcefully disconnect the Bluetooth connection, short press again to restore the Bluetooth connection; in the USB flash disk/TF card mode, short press the " ▶II " to play/ pause the currently playing music; in the external audio line input mode, short press the " ⏯ " to mute the current music, short press again to continue playing.

" ⏮ "button:

In Bluetooth/USB flash disk/TF card mode, press " ⏮ " to switch to the previous music. Short press/long press are invalid in the external audio line input mode.

" ⏭ "button:

In Bluetooth/USB flash disk/TF card mode, press " ⏭ " to switch to the next music;short press/long press are invalid in the external audio line input mode.

Remote Control:

When using the remote control for the first time, 2 pcs AAA batteries is required (battery is not included ,need buy separately) then operate the remote control according to your needs.

Charging:

The speaker can be charged no matter it is in the ON or OFF state, the charging indicator light is red when charging, when fully charged the charge indicator light is off .

How to use micorphone

(You need to buy a microphone with 3.5mm plug separately , microphone is not included)

First, please turn on the speaker, then take out the handheld wired microphone and insert the 3.5mm plug into the microphone hole of the speaker(In order to avoide the howling, it is better to adjust the volume of the microphone at a lower position before inserting the plug, the volume of the microphone could be adjusted through the Microphone Volume Adjustment Knob on the speaker.After the plug has been inserted, turn on the microphone , it will works.

Warranty

You can feel confident using our Soundnova brand speaker.We offer a 3-year warranty for quality-related issues,and Lifetime technical support.

Notice:As Amazon separates customer orders and product reviews,we can not find your order ID and email address depend on product reviews.If you have any questions,please contact us directly via the email below,we hope that our after-sales service can make you satisfied.

US: support@soundnovaus.com
US: novaus@soundnovaus.com
EU: novaeu@soundnovaus.com
JP: novajp@soundnovaus.com

www.soundnovaus.com

CE FC UK JP

Please note that unauthorized reselling of Soundnova products is prohibited.

Overview of the Remote Control

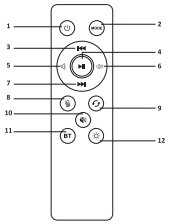

1.On/Off Button:

Turn on the power switch of the machine,short press to enter standby mode,then press again to turn on.

2.MODE Button :

Short press: When a U Disk, a TF card or an external audio cable has been inserted, short press "MODE" button to switch between Bluetooth Mode/Music Mode/Line Input Mode.

Recording mode:
Long press: When the U disk is correctly inserted in the machine and the TF card is inserted correctly in the direction marked on the speaker, long press and hold the "MODE" button in any mode, there will be a beep sound, then you can start recording. When the recording is completed, short press the "MODE" button to start playing the recorded content. The recorded content would be stored in the last track of the U disk or TF card.

3. Previous Song Button:

In the Bluetooth/U Disk/TF Card mode, short press the " ⏮ " to skip to the previous song.
In the External Audio Source Line Input mode, short press/long press is invalid.

4. Pause/Play Button:

In Bluetooth mode, short press the" ⏯ "button to play/pause the currently playing music, long press to forcibly disconnect the Bluetooth connection, short press again to restore the Bluetooth connection. In the U Disk/TF Card mode, short press the" ▶II "button to play/pause the currently playing music;in the External Audio Source Line Input mode,short press the" ⏯ "key to mute the currently playing music or program, short press again to continue playing.

In the amplification state, short press the" ⏯ "button, other functions will stop, and the amplification effect will be better.

5. Volume - Button:

Short press the " ◁) " button to decrease the volume in a single step, and long press this button to decrease the volume continuously.

6. Volume + Button:

Short press the " ▷) " button to increase the volume in a single step, and long press this button to increase the volume continuously.

7. Next Song Button:

In the Bluetooth/U Disk/TF Card mode, short press the" ⏭ " button to skip to the next song.
In the External Audio Source Line Input mode, short press/long press is invalid.

8. Remove Vocal:

Short press the" 🎤 " button to remove vocal from the song, press again to unmute the vocal

9. Cycle Button:

Short press the" ↻ "button to enter the switch selection mode, and select replaying a single song or repeating the entire playlist.
Display: ONE means replaying a single song, ALL means repeating the entire playlist.

10. Mute Mode Button:

Short press the" 🔇 " button to mute the sound; press again to unmute the sound.

11. " BT " Mode Button:

Press to enter Bluetooth mode.

12. " ☼ " Mode Button:

Short press the" ☼ "button to control and switch the flashing light mode: Breathing Flashing-Light-Rhythm/Breathing Flashing-Light-Flashing Light off.

Frequently Asked Question and Solution

Malfunction	Solution
The speaker has obvious howling	A. Hold the microphone correctly and point the position of the flat surface of the microphone to the mouth properly; B. When the space becomes smaller, the volume should be lowered appropriately to reduce howling caused by echo.

Specifications

Name	Description
Version	Bluetooth 5.0
Output Power	10W+7.5W*2
Transmission Distance	2.4G
Transmission power	10M+
Speaker size	78mm+66mm*2
Charging voltage	5V⎓2A
Play music time	10-15 hours
Frequency Range	20Hz-20KHz
Audio frequency range	87.5MHz~108MHz
Operating temperature	-30℃~+80℃
Battery capacity	3.7V 6000mAh
Product Size	135*170*235mm

Precautions for use

1. In order to achieve the best effect of sound amplification, please place the microphone head 1-2 cm in front of the mouth and aim at the microphone head to pronounce the sound. If there is a howling, adjust the volume appropriately, or adjust the speaker and microphone head distance to avoid interference.
2. Try to avoid frequent plugging and unplugging of the microphone jack, so as not to cause the jack to become loose and cause poor contact. Do not insert the microphone and the sound source hole incorrectly.
3. In order to ensure the service life of the battery, it is recommended to recharge it after use. Frequent charging will accelerate the aging of the battery cell. When not in use for a long time, it should be recharged once every 3 months.
4. This product may become slightly hot during charging and normal use, which is normal.
5. All accessories of this product are designed according to the working needs of the machine. If you replace the accessories, try to use the original accessories of our company to achieve the best working condition.
6. Please use an antistatic soft cloth to clean and wipe the product. When cleaning the product, turn off the power switch and disconnect all external connections. Do not wipe with chemical agents (such as alcohol, benzene and other chemical detergents or abrasive cleaning wipes).
7. Do not drop, throw or step on this product, and do not disassemble this product by yourself.

Warning

1. Do not place the product and accessories near fire sources and overheated environments;
2. Do not expose the product and accessories to water, do not use the product near water, and do not immerse the product in any liquid to avoid dripping or splashing of the product and accessories;
3. Do not disassemble or repair the battery and other components by yourself. If the battery is replaced incorrectly, there is a danger of explosion. It is strictly forbidden to throw the battery into water, fire or near any overheated environment;
4. This product is charged by an external power adapter (DC 5V 580-2800mA power supply), please unplug the power cord or power socket in time after charging;
5. When the user is not using the product temporarily, please switch the power switch of the product to the off state to avoid the loss of battery power;
6. When the use of wireless equipment is prohibited or the use of equipment will cause interference and safety hazards to electronic equipment, please turn off this product.
7. When the product malfunctions, please turn off this product and follow the relevant labeling instructions to avoid explosion or fire.
8. When taking an airplane, please abide by the relevant airline regulations and turn off this product before the airplane takes off. To avoid safety hazards.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception,
which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different
from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. The device can be u sed in portable exposure condition without restriction
FCC ID: 2A4ZX-K9