1.字体颜色: 黑色 Pantone Black 3 C
橙色 Pantone 1505C

2.单页尺寸: 140x144mm，（七折页）展开尺寸: 980x144mm

3.材质：128G双铜，双面彩色印刷

折页首页

Automatic Pet Feeder

User Manual WiFi Edition

Please read the instruction manual carefully before using the product

Safety precautions

1. When children use this product, they must be supervised by parents.
2. Do not use the device for pets that cannot reach the food bowl or have physical disabilities.
3. Do not immerse the base in water to avoid damaging electronic components such as the control panel.
4. Do not place any foreign objects in the device.
5. Do not put wet food or spoiled pet food in the device.
6. Do not disassemble the device by yourself.
7. Do not modify the device.
8. If the device malfunctions or has damaged parts, do not attempt to repair it yourself. Contact the dealer or customer service for assistance.
9. Be sure to unplug the power cord when the product is not in use or before cleaning.
10. If the power plug of the device gets wet, turn off the power of the socket and do not attempt to unplug the power plug.

Cautions

1. Do not let pets chew or swallow any accessories. If you are worried that the power cord may be chewed by pets, please purchase a wire conduit (hard plastic protector) at a hardware store to protect the power cord.
2. The device works normally at an ambient temperature of 0℃~40℃. Do not place the device in direct sunlight or environments with inappropriate temperatures.
3. Use alkaline size D batteries. Do not use rechargeable batteries.
4. Please check the batteries regularly. If you are traveling or on a business trip for a long time, be sure to replace with new batteries.
5. Do not lift the device directly from the lid, food tank, or food bowl. Lift and carry it by holding the base with both hands, and keep the device upright.
6. Use dry food with a particle size of 5-12mm. Avoid food jamming or blockage of the food outlet caused by excessively large food particles.
7. Read and follow all important instructions listed on the device and packaging carefully.

Packing list

After opening the product package, check if the device is intact and verify that the accessories are complete against the list.

Main unit

Accessories

❶ Stainless steel bowl x2 ❷ Food Bowl Tray x2 ❸ Power cord x1

❹ Power adapter x1 ❺ User manual x1 ❻ Quick guide x1

*To provide better products, we regularly improve them. If there is a discrepancy between the product image and the actual product, the actual product shall prevail.

Product diagram

Exploded View

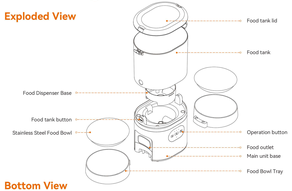

Bottom View



Product assembly

1. Remove the stainless steel food bowl and its holder from the food tank;

2. Assemble the food bowl as shown in the diagram;

3. Place the Machine on a level surface.

Button and Indicators Description



Button	Function
	Record
	Unlock/Feed
	Restore Factory Settings

Note: For specific operations, please refer to the instructions for use.

Indicator light	Status	Function
White	Flashing	Network configuration in progress/failed/device offline
	Constant Brightness	Network configuration successful
	Pulsing	Battery mode
Orange	Flashing	Feeding abnormal
Red	Constant Brightness	Low battery

Note:
1) In case of device malfunction (e.g., low battery, feeding abnormality), the APP will send an abnormal status alert.
2) Abnormal food dispensing: Failure to dispense food caused by reasons such as excessively large pet food particles.

Simple troubleshooting

Solutions to problems

Q：No response when pressing any button?
A：The buttons automatically lock after 30 seconds of inactivity. Press and hold for 3 seconds to unlock the buttons.

Q：What if the device fails to configure the network?
A：1) In the unlocked state, press and hold for 6 seconds until you hear the voice prompt "Restore factory settings", the device enters network configuration mode, then reconfigure the network.
2) Ensure your phone's Bluetooth is enabled;
3) Keep the device and phone within the effective communication range of the router, less than 10 meters without wall obstruction.
4) Software conflicts on the phone may also cause network connection failure. Please restart the phone, turn off non-system software that starts automatically on boot, and try reconnecting.

Q：The device does not dispense food?
A：1) Be sure to put dry food, and the diameter of the pet food should be 5~12mm.
2) When using battery power, check if the batteries are dead or leaking.
3) Check if the power adapter is connected.
4) Check if the food dispensing structure is abnormal. If so, clean the pet food in the food dispensing components and channel, then try to dispense food smoothly.

Q：Is the food dispensing inconsistent between the two bowls?
A：While the internal structure for dispensing food is identical for both sides, variations in pet food kibble shape may lead to inconsistent dispensing each time, which is considered normal.

Q：No response when turned on
A：Check if the power is properly plugged in.

Note: If the fault cannot be resolved according to the guidelines, please contact the dealer or customer service in a timely manner.

折页尾页

Specification

Food Tank Capacity：5L
Power Supply Type: DC5V/1A power adapter; 3 alkaline size D batteries
Rated Input: AC100-240V
Rated Output: 5V ⎓1A
Net weight: 2.17±0.1kg
Product size: 170*340*479mm
BE-081-D

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.
To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

Instructions for Use

01 | Connect to power

1. Insert the 5V/1A power adapter into the socket and connect it to the device. The LED lights up to indicate that the device is powered on.
2. Open the battery compartment at the bottom of the device and install 3 alkaline size D batteries (optional) to prevent power failure.

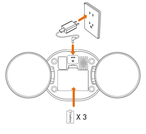

Note:
1) Batteries must be purchased by yourself.
2) Make sure that all components are clean and completely dry before turning on the power.

02 | Filling water and pet food

1. Pour pet food into the food tank;
2. Open the desiccant cover on the food tank lid and place the desiccant inside;
3. The recommended pet food size range is 5-12mm.

Note: Do not pour wet food into the food tank.

03 | Button unlocking/locking

1. **Button unlocking:** Press and hold for 3 seconds; the device unlocks with two beeps.
2. **Button locking:**
a) The device automatically locks with one beep after 30 seconds of inactivity;
b) Press and hold for 3 seconds; the device locks with one beep.
c) No buttons can be operated when locked.

04 | Manual feeding

In the unlocked state, press briefly once to dispense 1 portion of food. If there is a recording, it will play once after food is dispensed.

Note: Manual feeding will not affect the feeding schedule set in the App.

05 | Food dispensing sound recording

1. In the unlocked state, press and hold continuously; start recording after hearing a "beep", and end recording with two beeps when released. Recording lasts no more than 10 seconds.
2. Press briefly once to play the recording once;

06 | Restore factory settings

In the unlocked state, press and hold for 6 seconds; hear the voice prompt "Restore factory settings", all lights stay on for 6 seconds, and network configuration information, feeding schedules, and recording data are all cleared. The device automatically enters network configuration mode (white light flashing).

07 | Description of abnormal conditions

Feeding Abnormality: If the pet food is too large or for other reasons, preventing it from dispensing, the device will issue a feeding abnormality warning. The device will resume normal operation once the issue is resolved.

08 | Battery mode description

When the feeder is powered by batteries, the battery capacity is limited. To ensure long battery life and normal feeding, the feeder enters battery mode after 30 seconds of inactivity. This mode does not support remote operation via the App, but the set feeding schedule will be executed normally. The device can be woken up by pressing any button when the battery has power.

Smart Life APP Download and Operation

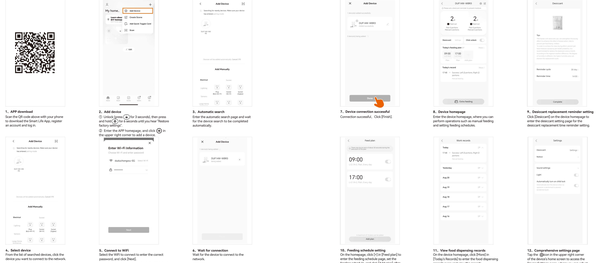

1. APP download
Scan the QR code above with your phone to download the Smart Life App, register an account and log in.

2. Add device
① Unlock (press ⊕ for 3 seconds), then press and hold ⊕ for 3 seconds until you hear "Restore factory settings".
② Enter the APP homepage, and click ⊕ in the upper right corner to add a device.
(Make sure your phone's Bluetooth is enabled)

3. Automatic search
Enter the automatic search page and wait for the device search to be completed automatically.

4. Select device
Find the list of searched devices, click the device you want to connect to the network.

5. Connect to WiFi
Select the WiFi to connect to enter the correct password and click "Next".
Note: 2.4 GHz single-frequency network (2.4G) frequently used by most mobile phones and tablets is supported. Please ensure compatibility of your router and network settings.

6. Wait for connection
Wait for the device to connect to the network.

7. Device connection successful
Connection successful, click [Finish].

8. Device homepage
Enter the device homepage, where you can perform operations such as manual feeding and setting feeding schedules.

9. Desiccant replacement reminder setting
Click [Desiccant] on the device homepage to enter the desiccant setting page for the desiccant replacement time reminder setting.

10. Feeding schedule setting
On the homepage, click [+] in [Feed plan] to enter the feeding schedule page, set feeding schedule, and click [Add plan] after setting.

11. View food dispensing records
On the device homepage, click [Record] to enter the record page, view food dispensing records page and view the records.

12. Comprehensive settings page
Tap the ⊙icon in the upper right corner of the device homepage to enter the Device Settings page, where you can adjust settings for Sound, Indicator Lights, Verification Switches etc.

Routine maintenance instructions

1. For your pet's health, it is recommended to clean the device regularly.
2. You can clean the device when the food tank starts to get dirty and there is a lot of loose food in the feeding trough.

Cleaning instructions:

(1) Press the buttons on both sides of the food tank and take out the food tank when the food tank is empty;



(2) Rinse the components shown in the diagram with clean water or clean them with food-grade detergent, then air-dry;

(3) The main unit base can be wiped with a damp towel; do not rinse with water;

(4) ⚠ Do not put the device in the dishwasher, as this will cause permanent damage!