Long press or click this button,birghtness will increase.

Long press or click this button, brightness will reduce.

Long press this button,the color temperature drops and the lights color turns warm.

Long press this button,the color temperature increases ,and the lights color turn white.

Press this button to switch the color temperature between white light ,warm light, neutral light and night light.

Press this button to switch the lamp between full power and half power ,and the color temperature of the lamp is neutral light.

Auxiliary lighting : unuseless function (Pls ignore)

Press this button ,the lamp will turn off after 60 seconds.

5

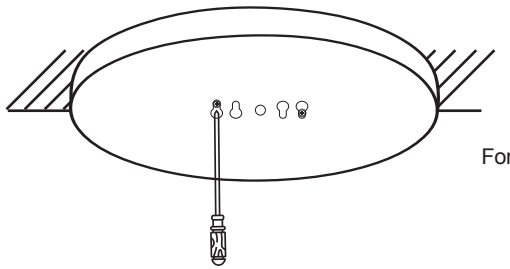

For safety, please fix and tighten the screws again.

6

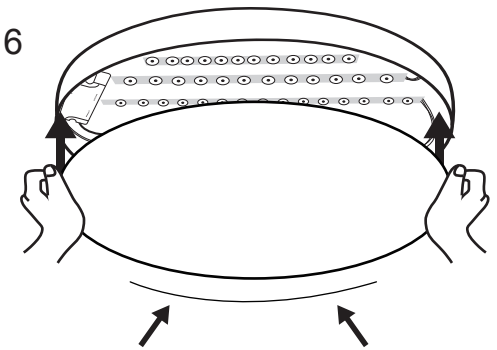

Curved lampshade and placed inside the lamp body.(It is recommended to wear gloves to prevent cutting hands.)

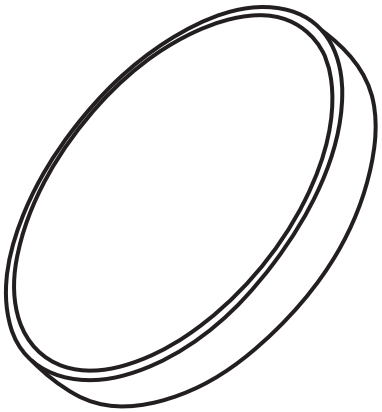

Flush Mount Ceiling Light

CS Email: moonsealight@outlook.com

The usage of remote control

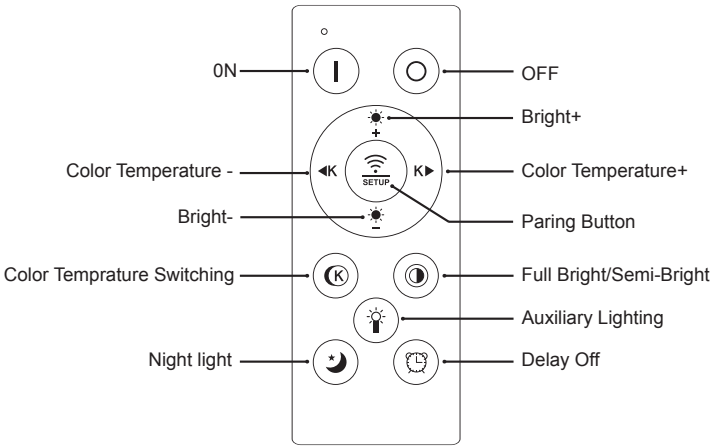

Pairing code description:
Press this button 3 times in a row after the lamp has been powered on in 5 seconds .(Please turn off the power first)

Clear code description:
Press this button for more than 5 seconds, the lamp flashes, clear the code successfully .

Flush Mount Ceiling Light User Manual

CAUTION
• Warning:Cut off electric before installation to avoid electric shock.

Accessory kits1

Expansion screw

Pointed screw

Gasket Screw

Accessory kits2

Screws


Blind nut

Disconnect the power supply before installation

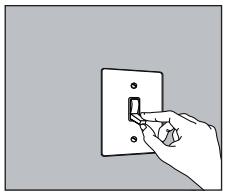

FIG.1.
WALL SWITCH
COMMUTATEUR MURAL
INTERRUPTOR DE PARED

Installation steps

1

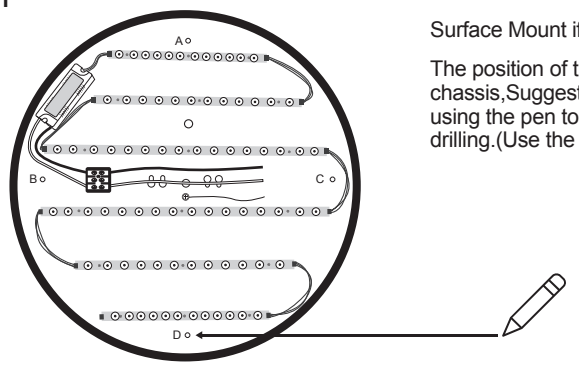

Surface Mount if no J-Box

The position of the hole in the celing determined by the chassis,Suggest
using the pen to draw the hole position and then drilling.(Use the screws of accessory kit 1 for installation)

2

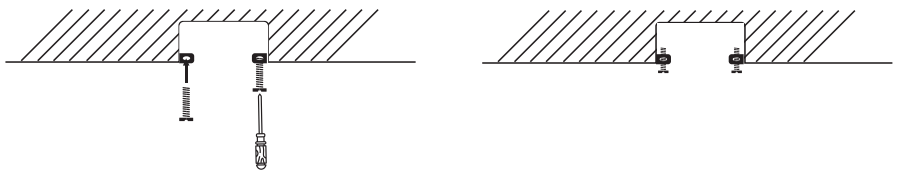

Put the Screws into the hole.(Use the screws of accessory kit 2 for installation)

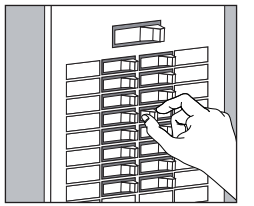

FIG.2.
BREAKER PANEL PANNEAU
DES DISJONCTEURS

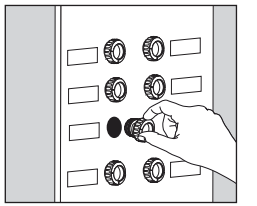

FIG.3.
FUSE BOX BOITTE A
FUSIBLES CAJA DE

FIG. 1.
Place the wall switch to the "OFF" position Depending on which type of fuse box you have in your home.

FIG. 2.
Place either the main (Master) switch to the "OFF" position, cutting off power to your entire home OR turn off the individual switch that provides power to where the fixture will be installed.

OR

FIG. 3.
Place either the main (Master) switch to the "OFF" position, cutting off power to the entire home OR unscrew the fuse that provides power to where the fixture will be installed.

3

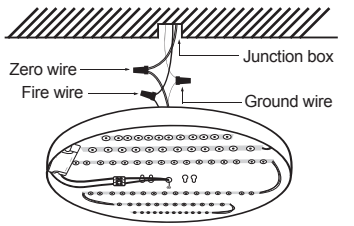

Connect the electric wire.(Pass the wire through the hole as the picture shows,Don't through the wrong hole)

4

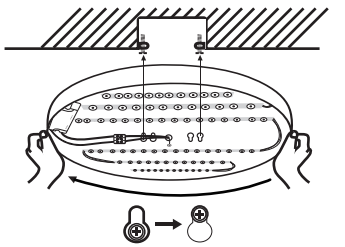

Align the screw with the gourd hole and rotation to lock

§ 15.19 Labelling requirements.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Information to user.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.