purity

TRUE WIRELESS EARBUDS

BLUETOOTH 5.0

UU000075

USER MANUAL

www.purity-world.com

Need Help? Go to: purity-world.com/support

Congratulations! Thank you for choosing the True Wireless Earbuds developed by Purity! For optimal use and performance, please carefully read the User Manual before using the product.

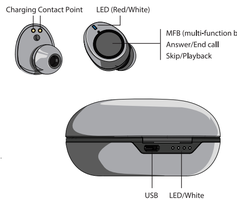

HOW TO CONNECT

POWER ON/POWER OFF

Power On The Earbuds

- Take both Earbuds out of the Charging Case and they will be automatically powered on.
- You will hear a voice prompt stating, "Power on", and "pairing" when you put the Earbuds on. At the same time the Red and White indicators flashing alternately on one of the Earbuds, while the other Earbud will slowly flash White.
- In Power Off state, hold down MFB button for 3-4 seconds to Power On the Earbuds. Both Red and White indicators are on for 1 second. There will be a beep sound upon Power On.

** *In stereo mode, powering off one Earbud, will also Power Off the other.*

Power Off The Earbuds

- Put the Earbuds into the Charging Case. The Earbuds are automatically powered off.
- In Power On state, hold the MFB button for 3-4 seconds. The Red indicator is on for 1 second. There will be a beep sound upon Power Off.
- When not in Charging Case, in Power On state, hold the MFB buttons for 3-4 seconds. The Red indicator is on for 1 second. There will be a beep sound upon Power Off.

PAIRING

Stereo Mode:

- Take the Earbuds out of the Charging Case. Red and White indicators will flash alternately and a synching between the left and right Earbuds starts. The synching will take about 10 seconds. After the synching is completed, the indicator of one of the Earbuds will flash intermittently White, and the Red and White indicator of one of the Earbuds will continue flashing to indicate synching is complete.
- Enable Bluetooth function on your smartphone. Search for the Bluetooth device "Purity One". Select Connect. After the connection is successful, a "Connected" message is displayed.

Single Ear Mode:

- You can use both of the Earbuds in single ear mode. Simply take out one of the earbuds, and search for the Bluetooth device "Purity One". Select Connect. After the connection is successful, a "Connected" message is displayed.
- If you already paired the earbuds in stereo mode, you are good to use either one of the Earbuds directly.

Note:
1. In stereo mode, by putting one earbud back into the case, it will cause both earbuds to turn off.
2. The Earbuds directly enter pairing mode after being taken out from Charging Case.
3. The Earbuds will power off automatically if no pairing device is found. Or, if the pairing device is switched off or Bluetooth is disconnected for 3 minutes.

What if you cannot find the Purity One in your Bluetooth page?

Reason 1: Earbuds have paired to another device.
Solution: Disconnect the Earbuds by turning OFF the Bluetooth on the mistaken connected devices, then pair the Earbuds to your preferred device.

Reason 2: The Earbuds have reached 0% battery life.
Solution: Place both Earbuds back into the Charging Case. Allow the Earbuds to recharge for around 5 mins. If the Charging Case has run out of battery, plug it into a USB power source with the Earbuds still inside. (USB Cable provided).

Reason 3: Earbuds are completely OFF.
Solution: You may have accidentally manually turned off the Earbuds. Please press and hold the MFB buttons for 3-4 seconds to turn on the Earbuds.

FACTORY RESET

If you encounter the following issues, please try the Factory Reset.

- Sound only emits from one Earbud.
- Other improper synching issues.

Follow these steps:

- Please find and tap "Purity One" in your smartphone Bluetooth list first. Then, tap "Forget This Device".
- Take out both Earbuds and turn them off by pressing and holding the MFB buttons for 5 seconds.
- Now, please press and hold the MFB buttons for 15 seconds. During this time, the Earbuds will Power On and then Power Off once more. After this process, the Factory Reset is complete.

	Step	Action	Result
1	Turn Off	Hold MFB buttons for 3-4 seconds	LED Lights will blink signalling the Earbuds are OFF.
2	Reset	Hold MFB buttons for 10-15 seconds.	The LED will turn on, continue to blink repeatedly and eventually stop. The Earbuds is Reset and enter OFF state.

HOW TO USE

Play/Pause

Press MFB on the left or right Earbud.

Previous/Next

Press MFB twice on the left for previous and press right Earbuds for next track.

Answer/Hang Up Call

Press MFB on left or right Earbud.

Reject A Call

Hold the MFB on the left or right Earbud.

Clear Pairing Info

In pairing mode, (Red and White indicators will be flashing quickly), press the MFB three times. Pairing info is cleared, and the Earbuds are automatically in Power Off mode.

Secure Pairing

If the Bluetooth device connected to the Earbuds runs a version lower than 3.0, a password is required. Enter the default security code 0000 to pair the Earbuds with your phone.

Automatic Power Off

If the left Earbud is not connected to a phone, it will be automatically powered off in 3 minutes to save power. If the right Earbud is not connected to the left Earbud, the right Earbud will be automatically powered off in 3 minutes.

Activate Voice Assistant (Siri, Google Assistant)

Tap the MFB 3 times.

AUTO SHUT DOWN

1. The Earbuds directly enter synching mode after being taken out from Charging Case when you have never paired with your phone before or phone is not in range.

2. Earbuds will stay in pairing mode for 3 minutes at the most. After, it will power off automatically if no pairing device is found. If pairing device is switched off or Bluetooth is disconnected for 3 minutes, the Earbuds will power off automatically.

HOW TO CHARGE

Charging The Charging Case

Use the USB cable to charge the Charging Case. The White LED indicators will flash during charging. The number of flashing indicators varies with the battery level. All flashing indicators will turn a solid White color when the Charging Case is fully charged. (A full charge takes around 2 hours).

Charging The Earbuds

Fit left and right Earbuds into the Charging Case. The Red indicator on both Earbuds will be on. When the Earbuds are fully charged, the indicator will be off. A full charge takes about 1.5 hours. A fully charged Charging Case provides about 3 charge cycles for the Earbuds.

Low Battery Level Indication

If the battery level of the Charging Case is low, the low-battery indicator on the Charging Case will show only one grid (25% left), reminding you to charge the Charging Case. When the battery level of the Earbuds is low, the Bluetooth indicator will turn Red and a low-battery beeping sound will be heard.

WARNINGS & SAFETY INFORMATION

WARNING: If you do not intend to use the Earbuds for a long time, charge the Earbuds and Charging Case once every 20-30 days to ensure its expected service life.

WARNING: Do not remove or replace the battery, including sensitive electronic components, because the battery can be damaged or cause serious injury if dropped, burned, punctured, crushed, disassembled, or if exposed to excessive heat or liquid. Do not use damaged batteries and electronic components.

- Disposal & Recycling Info: Do not place the product and battery into household waste or into a fire. When you decide to dispose of the product and it's battery, please follow the local environmental laws to handle the battery to avoid an explosion.

- Medical Device Interference: This product contains components and radios that emit electromagnetic fields and also contain magnets. These may interfere with pacemakers, defibrillators, or other medical devices. Maintain a safe distance of separation between your medical device and product. Please consult your physician and medical device manufacturer for specific information regarding your medical device. Stop using the product if you suspect it is interfering with your pacemakers, defibrillators, or other medical devices.

WARNING: Keep product out of the reach of children.

WARNING: Remember to charge the Charging Case very often. It is possible when the Charging Case is fully depleted, at 0%, the Earbuds that are placed inside will automatically connect and pair to your phone. This may cause confusion when playing music or answering calls. To avoid this entirely, please remember to ALWAYS charge your Charging Case and DO NOT let it have a fully drained battery.

FAQ

Q: How often should I place my Earbuds into the Charging Case? What is the duration of the battery within the Charging Case?

A: Please place your Earbuds into your Charging Case often. After one week, you will need to charge the Charging Case in order to provide power to your Earbuds. Once there is only one white LED light illuminating, it means that you must charge the Charging Case.

Q: I'm having problems with the sound. It is not clear and the caller cannot hear my voice clearly.

A: Please try adjusting the volume on your phone. Make sure there is no source of interference. Stay relatively close to your phone.

Q: Why don't I have a stable connection? Why does it cut out intermittently?

A: The Bluetooth is different than normal Wi-Fi connections and other wireless signal transmissions. Bluetooth distance is less than normal Wi-Fi. Please make sure there are no external objects between your Earbuds and your Bluetooth device. Also check if there are any radio or Wi-Fi signals nearby.

Q: What is the range of the Bluetooth Earbuds?

A: The Bluetooth Earbuds have a maximum range of 33 feet (10 m, without any obstacles). But, the actual range depends on usage and the environment around you. The connection is good within 15-25 feet with no major obstacles in between.

Q: Can I use only one Earbud at a time? How do I use single ear mode?

A: Yes. You can use a single Earbud, Right or Left, at a time. Place either Earbud back into the Charging Case while keeping the other Earbud in your ear. While doing this, your Earbud may Power Off. In order to fix this, please press and hold the MFB for a 1-2 seconds to turn the Earbud back on. After this process, you will be able to use single ear mode correctly.

TECHNICAL SPECS:

Bluetooth Version	Bluetooth 5.0
Bluetooth Profile	ACRCP/A2DP/HFP/HSP
Frequency Response	20Hz ~ 20000Hz
Earbuds Battery	4 hour Playback Time
Charging Time	2 Hours (Include Charging Case)
Battery Life with Charging Case	14 Hours (Stereo Mode) 28 Hours (Single Ear Mode)
Input	DC 5V⎓250mA
Maximum Distance	10m / 33 feet
Water Resistant / Dustproof Level	IPX5

FCC STATEMENT

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one ormore of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WARRANTY

To ensure the best quality possible, we proudly offer a One-Year Warranty on our True Wireless Earbuds. If the earbuds become damaged or you are not satisfied with it, please contact us at *www.purity-world.com/support*

FOR MORE INFORMATION ABOUT THIS PRODUCT, GO TO
purity-world.com/purity-one

www.purity-world.com

Need Help? Go to: purity-world.com/support