Diese Gebrauchsanleitung gilt f ü r den Gebrauch eines Handschreibstifts. Bitte lesen Sie alle Details vor der Verwendung sorgf⊠ltig durch.

215(mm)

4-43(mm)

100(mm)

1

Gebrauchsanweisung

(ZP027A)

Diese Gebrauchsanleitung gilt für den Gebrauch eines Handschreibstifts. Bitte lesen Sie alle Details vor der Verwendung sorgfältig durch.

Betrieb und Funktionen

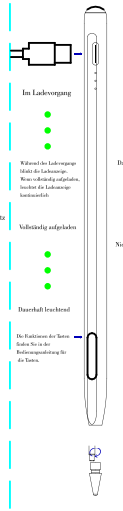

Halten Sie den Stift mit den Fingern fest und drehen Sie den Stiftkopf gegen den Uhrzeigersinn, bis er sich aus dem Stiftgehäuse dreht

Produktinformationen

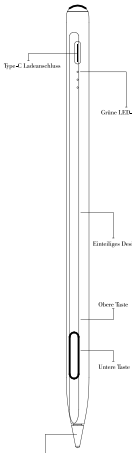

Produktspezifikationen

Produktabmessungen: 9,0 x 8,5 x 166 mm
Gewicht: 15 g
Stiftspitzenmaße: 5 mm
Batterietyp: Lithium-Polymer-Batterie
Batteriekapazität: 130 mAh
Betriebsdauer: Über 9 Stunden
Ladezeit: 15 Minuten
Betriebstemperatur: -10 bis +45°C
Ladetemperatur: -10 bis +65°C
Lagerungstemperatur: -10 bis +65°C

Die tatsächliche Nutzungsdauer kann je nach Verwendungsszenario und anderen Faktoren variieren

Kompatibilität

Dieses Produkt unterstützt Apple Tablets ab den Jahren 2018, 2019, und 2020 oder neuer (nach Aktualisierung auf das neueste iOS-Betriebssystem), einschließlich:

iPad Pro 11 Zoll 2018 (1. Generation)
iPad Pro 11 Zoll 2020 (2. Generation)
iPad Pro 11 Zoll 2021 (3. Generation)
iPad Pro 12.9 Zoll 2018 (3. Generation)
iPad Pro 12.9 Zoll 2020 (4. Generation)
iPad Pro 12.9 Zoll 2021 (5. Generation)
iPad Air 10.5 Zoll 2019 (3. Generation)
iPad mini 7.9 Zoll 2019 (5. Generation)
iPad mini 8.3 Zoll 2021 (6. Generation)
iPad 9.7 Zoll 2018 (6. Generation)
iPad 10.2 Zoll 2019 (7. Generation)

Anleitung zur Tastenbedienung

- Einzelklick auf die obere oder untere Taste zum Einschalten, langes Drücken der oberen oder unteren Taste für etwa 2 Sekunden zum Ausschalten.Das Gerät schaltet sich nach 5 Minuten Inaktivität automatisch aus.

- Wenn mit dem iPad über Bluetooth verbunden, Einzelklick auf die obere Taste zum Umschalten zwischen Schreibfunktion und Radiergummi, einmaler Einzelklick auf die obere Taste zum Umschalten auf Schreibfunktion, Doppelklick auf die obere Taste zum Öffnen der Mehrfachaufgabenansicht; Einzelklick auf die untere Taste zum Zurückkehren, Doppelklick auf die untere Taste zum Screenshoten.

- Die Rückgängig-Taste kann verwendet werden für: iPad Notizen, Painter, NotesWriter, Notability, GoodNotes, Procreate; das Umschalten des Radiergummis ist möglich in: GoodNotes, Procreate.

Umweltschutz

Bitte entsorgen Sie dieses Gerät und seine Zubehörteile nicht als normalen Hausmüll.

Bitte beachten Sie die örtlichen Vorschriften für die Entsorgung dieses Geräts und seiner Zubehörteile und unterstützen Sie Recyclinginitiativen.

Die Batterie entspricht den Umweltanforderungen der EU-RoHS-Richtlinie.

Sicherheitsinformationen

Vermeiden Sie es, das Gerät und Zubehörteile dem Regen oder Feuchtigkeit auszusetzen, da dies zu Brandgefahr oder Stromschlägen führen kann.

Platzieren Sie das Gerät und Zubehörteile nicht in Bereichen mit extrem hohen oder niedrigen Temperaturen, da dies zu Geräteausfällen, Bränden oder Explosionen führen kann. Wenn die Umgebungstemperatur zu hoch oder zu niedrig ist, kann dies zu Geräteausfällen führen.

Zerlegen, stoßen, quetschen oder modifizieren Sie die Batterie nicht. Es ist verboten, Fremdkörper einzuführen oder die Batterie zu durchstechen. Tauchen Sie die Batterie nicht in Wasser oder andere Flüssigkeiten ein, um Kurzschlüsse, Überhitzung, Auslaufen, Brände oder Explosionen zu vermeiden.

Demontieren oder modifizieren Sie das Gerät (einschließlich des Austauschs des internen Akkus) und Zubehörteile nicht eigenmächtig, da dies dazu führen kann, dass das Gerät und Zubehörteile nicht mehr von unserer Garantie abgedeckt sind. Im Falle eines Geräteausfalls wenden Sie sich bitte an das Kundendienstzentrum.

Lassen Sie Kinder oder Haustiere die Batterie nicht verschlucken, um Verletzungen oder eine Batterieexplosion zu vermeiden.

Reinigen Sie das Gerät oder Zubehörteile nicht mit aggressiven chemischen Produkten, Reinigungsmitteln oder starken Reinigungsmitteln. Verwenden Sie zum Reinigen und Trocknen des Geräts oder Zubehörs ein sauberes, trockenes Tuch.

Verwenden Sie keine nicht zugelassenen oder nicht kompatiblen Stromquellen, Ladegeräte oder Stromversorgungen, da dies zu Bränden, Explosionen oder anderen Gefahren führen kann.

Über Mehr

Dieser Leitfaden dient nur als Referenz und stellt k verbindliche Zusage dat. Bitte beachten Sie, dass Produkte (einschließlich, aber nicht beschränkt auf eine Farbe, Größe, Bildschirmanzeige usw.) von den tatsächlichen Gegebenheiten abweichen können. Im Falle von Unstimmigkeiten zwischen diesem Leitfad und den Angaben auf der offiziellen Website gelten Informationen auf der Website als maßgeblich, ohne die dass eine gesamdete Benachrichtigung erfolgt.

Wir freuen uns, unseren Kunden einen zweijährigen Qualitätsservice anzubieten. Bitte kontaktieren Sie uns, um Ihre Produktgarantie zu verlängern und unseren kostenlosen Austauschservice in Anspruch zu nehmen.

Kontakt: falkeley@geekroom.vip

Verpackungsanweisungen

Intelligenter Touchscreen-Stift ×1
Type-C-Ladekabel ×1
Bedienungsanleitung ×1
Ersatz-Stiftspitzen ×4

CE RoHS

5-1

Stylus Pencil - Quick Start

(ZP027A)



*This instruction manualuse for Stylus Pencil please kindly read all the details before use

4-1

Functional operation



Pinch the pen tip with your fingers, and then rotate the pen tip counterclockwise until it unscrews the pen tube

3-1

Product information

2-1

Specifications

hysical size(L X D)	9.048.5*166mm
Weight	15g
Nib size(D)	5mm
Battery type	Li-polymer battery
Battery capacity	130mAh
Continuous operation time	9hours or more
Duration of charging	15min
Operating Temperature	-10 to +45 degree C
Charging Temperature	-10 to +65 degree C
Storage Temperature	-10 to +65 degree C

*The actual operating time may vary depending on the usage scenarios and other factors.

Compatible with

Supports iPad
iPad Pro 11-inch 2018 (1st generation)
iPad Pro 11-inch 2020 (2nd generation)
iPad Pro 11-inch 2021 (3rd generation)
iPad Pro 12.9-inch 2018 (3rd generation)
iPad Pro 12.9-inch 2020 (4th generation)
iPad Pro 12.9-inch 2021 (5th generation)
iPad Air 10.5-inch 2019 (3rd generation)
iPad mini 7.9-inch 2019 (5th generation)
iPad mini 8.3-inch 2021 (6th generation)
iPad 9.7-inch 2018 (6th generation)
iPad 10.2-inch 2019 (7th generation)

Button operation Instructions

- Click the up or down button to turn on the power, press and hold the up or down button for about 2 seconds to turn off power Automatically shut down after 5 minutes of idle time
- When connected to the Ipad Bluetooth, click the up button writing function to switch to the eraser tool, click the up button eraser tool to switch to writing function, and double click the up button to open the multitask page.Click the down button to return, and double click the down button to take a screenshot.
- The undo button can be used for:iPad Memorandum, Painter, NotesWriter, Notability, GoodNotes, Procreate;Eraser tool switch is available for:GoodNotes, Procreate.

Environmental protection

- Do not dispose of this device and its accessories as household garbage.
- Please comply with the local laws and regulations for the disposal of this equipment and its accessories, and support the recycling operations
- The battery complies with the environmental protection requirements of the EU RoHS directive.

1-1

Safety information

- Please avoid rain or damp equipment and accessories, otherwise it may cause fire or electric shock hazard
- Do not place equipment and accessories in areas that are too high or too low in temperature, otherwise it may cause equipment failure, fire or explosion. When the ambient temperature is too high or too low, it may cause equipment failure.
- Do not disassemble, impact, squeeze or modify the battery. It is forbidden to insert foreign objects and puncture the battery. It is forbidden to immerse the battery in water or other liquids to avoid short circuit and overheating, leakage, fire or explosion inside the battery.
- Do not disassemble or modify the device (including replacement of the built-in battery) and accessories without authorization, otherwise the device and accessories will not be covered by the company's warranty. Please contact the customer service center if the device fails.
- Do not allow children or pets to swallow the battery to avoid injury or explosion of the battery.
- Do not use harsh chemicals, cleaning agents, or strong detergents to clean the equipment or accessories. Please use a clean, dry soft cloth to wipe the device or its accessories.
- Using unapproved or incompatible power supplies, chargers, or power supplies may cause fire, explosion, or other hazards.

More about

This guide is for reference only and does not constitute any form of commitment, products (including but not limited to color, size, screen display,etc.)Please refer to the actual product. If there is any inconsistency between this guide and the description on the official website, please refer to the description on the official website. Without notice.

We are pleased to offer our customers a two-year quality service. Please contact us to extend your product warranty and for our free replacement service.
Contact: falkeley@geekroom.vip

package instruction

- Smart stylus*1
- Type-C Cable*1
- Product Manual*1
- Replaceable nib*4

CE RoHS

2

技术要求

1. 带圈序号为正反面标记；材料必须符合ROHS标准；
2. 零件表面要求光洁、平整无印墨、划伤和折皱等；
3. 实线为切割边，虚线为折叠边；
4. 同列正反面：正面（1） 反面（1-1）/正面（2） 反面（2-1）/正面（3） 反面（3-1）/正面（4） 反面（4-1）/正面（5） 反面（5-1）；
5. 两边内折方式，折合后1为正面/5为反面。

序号	代号	名称	数量	材料	单重	总重	备注
2			1				
1			1				

标记	处数	更改文件号	签名	日期	180*215（铜版纸/157g）
设计	杨仁和	单位	mm		wenku 东莞市温酷数码有限公司 Dongguan Wenku Digital Co., Ltd.
工艺		版本	1.0		说明书
审核		视图			WKZP027A
批准		日期	2024/5/9		图样标记 S 重量 比例 1.5:1 共 1 张 第 1 页

Federal Communications Commission (FCC) Statement.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide Reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

•Reorient or relocate the receiving antenna.

•Increase the separation between the equipment and receiver.

•Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

•Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by **DONGGUAN WENKU DIGITAL CO., LTD** may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF exposure statement:

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The device is installed and operated without restriction.